

Edition

01/2024

OPERATING INSTRUCTIONS

# SINAMICS

## SINAMICS G115D Motor Mounted

Distributed drive for conveyor applications



# SIEMENS

## SINAMICS

### SINAMICS G115D SINAMICS G115D distributed drive

#### Operating Instructions

Edition 01/2024, Firmware V4.7 SP14

**01/2024, FW V4.7 SP14**  
A5E53461498A/RS-AA

#### Preface

---

Changes in the manual

1

Fundamental safety  
instructions

2

Overview of the SINAMICS  
G115D drive

3

Mounting

4

Wiring

5

Commissioning

6

Advanced commissioning

7

Data backup and series  
commissioning

8

Alarms, faults and system  
messages

9

Corrective maintenance

10

Technical data

11

Additional information on  
the SIMOGEAR geared  
motor

12

Appendix

A

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.

 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.

 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.

<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.

If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Innomotics products

Note the following:

 <b>WARNING</b>
Innomotics products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Innomotics. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Innomotics GmbH. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## About the Manual

### Who requires the operating instructions and what for?

These operating instructions primarily address fitters, commissioning engineers and machine operators. The operating instructions describe the devices and device components and enable the target groups being addressed to install, connect-up, set, and commission the converters safely and in the correct manner.

### What is described in the operating instructions?

These operating instructions provide a summary of all the information required to operate the drive under normal, safe conditions.

The information provided in the operating instructions has been compiled in such a way that it is sufficient for all standard applications and enables drives to be commissioned as efficiently as possible. Where it appears useful, additional information for entry level personnel has been added.

The operating instructions also contain information about special applications. Since it is assumed that readers already have a sound technical knowledge of how to configure and parameterize these applications, the relevant information is summarized accordingly. This relates, e.g. to operation with fieldbus systems and safety-related applications.

### What is the meaning of the symbols in the manual?



Reference to further information in the manual



Download from the Internet



Example of converter function symbols



End of a handling instruction

## About the device

### Use for the intended purpose

The device has been approved for industrial and commercial use on industrial networks. Additional measures have to be taken when connected to public grids.

The technical specifications and information about connection conditions are indicated on the rating plate and in the operating instructions.

### Use of third-party products

This document contains recommendations relating to third-party products. Siemens accepts the fundamental suitability of these third-party products.

You can use equivalent products from other manufacturers.

Siemens does not accept any warranty for the properties of third-party products.

### **Use of OpenSSL**

This product contains software developed in the OpenSSL project for use within the OpenSSL toolkit.

This product contains cryptographic software created by Eric Young.

This product contains software developed by Eric Young.

Further information is provided on the Internet:

 OpenSSL (<https://www.openssl.org/>)

 Cryptsoft (<mailto:eay@cryptsoft.com>)

# Table of contents

	<b>Preface .....</b>	<b>3</b>
<b>1</b>	<b>Changes in the manual .....</b>	<b>15</b>
<b>2</b>	<b>Fundamental safety instructions .....</b>	<b>17</b>
2.1	General safety instructions .....	17
2.2	Equipment damage due to electric fields or electrostatic discharge .....	23
2.3	Warranty and liability for application examples .....	23
2.4	Cybersecurity information .....	24
2.5	Residual risks of power drive systems .....	26
<b>3</b>	<b>Overview of the SINAMICS G115D drive .....</b>	<b>29</b>
3.1	System overview .....	29
3.2	Scope of delivery .....	30
3.2.1	SINAMICS G115D Motor Mounted .....	30
3.2.2	SINAMICS G115D Wall Mounted .....	32
3.3	Directives and standards .....	37
3.4	Optional components .....	38
3.4.1	External braking resistor .....	38
3.4.2	Connectors .....	39
3.4.3	Glanded installation kit .....	40
3.4.4	Connector cover kit .....	41
3.4.5	SINAMICS G120 Smart Access .....	41
3.4.6	SAM interface kit .....	42
<b>4</b>	<b>Mounting .....</b>	<b>43</b>
4.1	Mounting the G115D Motor Mounted drive .....	43
4.2	Mounting the G115D Wall Mounted drive .....	45
4.3	Mounting the optional components .....	48
4.3.1	Mounting the external braking resistor .....	48
4.3.2	Mounting the SINAMICS G120 Smart Access .....	50
<b>5</b>	<b>Wiring .....</b>	<b>55</b>
5.1	EMC installation guidelines .....	55
5.1.1	Connections and interference suppression .....	55
5.1.2	Basic EMC rules .....	55
5.1.3	Equipotential bonding .....	56
5.2	Permissible line supplies .....	58
5.2.1	TN line system .....	59
5.2.2	TT line system .....	59
5.2.3	IT line system .....	60

5.3	Requirements for the protective conductor .....	63
5.4	Requirements for branch circuit protection .....	64
5.5	Operation with residual current protective device (RCD).....	64
5.6	Forming DC link capacitors .....	65
5.7	Overview of the converter interfaces .....	66
5.8	Cables and connectors .....	73
5.8.1	Maximum permissible cable length .....	74
5.8.2	Cable cross-sections and cable lugs .....	75
5.9	Connecting the line supply.....	78
5.9.1	Interface description - X1/X3 .....	78
5.9.2	Connecting to the line supply using daisy chain .....	80
5.10	Connecting the motor .....	82
5.10.1	Interface description - X2 .....	83
5.10.2	Connecting the motor in a star or delta connection .....	84
5.10.2.1	Overview .....	84
5.10.2.2	Configuring the star/delta connection of the wall-mounted converter .....	86
5.11	Connecting the 24 V power supply.....	86
5.11.1	Interface description - X01/X02 .....	86
5.11.2	Connecting to the 24 V power supply using daisy chain .....	88
5.12	Connecting the digital inputs and outputs .....	90
5.12.1	Interface description - X07/X08/X05 .....	90
5.12.2	Factory interface setting .....	91
5.12.3	Fail-safe digital input.....	97
5.13	Connecting to PROFINET and Ethernet.....	98
5.13.1	Interface description - X150 P1/P2.....	98
5.13.2	Communication via PROFINET IO and Ethernet .....	98
5.13.3	Protocols used .....	99
5.13.4	Connecting the converter to PROFINET .....	101
5.13.5	What do you have to set for communication via PROFINET .....	101
5.13.6	Installing GSDML .....	102
5.13.7	Connecting the converter to Ethernet/IP .....	103
5.13.8	What do you need for communication via Ethernet/IP?.....	103
5.14	Connecting to AS-i .....	104
5.14.1	General information.....	104
5.14.2	Interface description - X03 .....	105
5.14.3	Setting the address .....	105
5.14.4	Using the AS-i Programmer .....	107
5.15	Connecting to SINAMICS G115D I/O variant .....	109
5.16	Grounding the converter housing.....	109
5.17	Connecting the external braking resistor .....	110
5.18	Connection examples.....	112
<b>6</b>	<b>Commissioning .....</b>	<b>115</b>
6.1	Commissioning guidelines .....	115

6.2	Commissioning tools.....	116
6.3	Preparing for commissioning.....	117
6.3.1	Factory settings .....	117
6.3.2	Collecting motor data .....	119
6.3.3	Selecting U/f control or speed control .....	121
6.3.4	Calculating maximum speed for permanent magnet synchronous motors .....	122
6.4	Quick commissioning.....	123
6.4.1	Quick commissioning with DIP switches .....	123
6.4.2	Quick commissioning with a PC (Startdrive).....	126
6.4.2.1	Creating a project .....	127
6.4.2.2	Integrating the converter into the project .....	127
6.4.2.3	Starting the Commissioning Wizard .....	129
6.4.2.4	Carrying out quick commissioning .....	129
6.4.2.5	Identifying motor data .....	131
6.4.3	Quick commissioning with the SINAMICS G120 Smart Access .....	133
6.4.4	Self-optimization of the speed control .....	134
6.5	Saving the settings in the converter (RAM → EEPROM) .....	134
6.6	Restoring the factory settings.....	135
6.6.1	Restoring the factory settings/delivery condition (without safety functions) .....	136
6.6.2	Resetting the safety functions to the factory settings .....	137
<b>7</b>	<b>Advanced commissioning.....</b>	<b>139</b>
7.1	Overview of converter functions .....	139
7.2	Sequence control when switching the motor on and off.....	141
7.3	Adapt the default settings of the inputs and outputs.....	143
7.3.1	Overview .....	143
7.3.2	Digital Inputs .....	144
7.3.3	Digital outputs.....	145
7.4	Controlling clockwise and counter-clockwise rotation via digital inputs .....	146
7.4.1	Two-wire control, method 1 .....	147
7.4.2	Two-wire control, method 2 .....	148
7.4.3	Two-wire control, method 3 .....	149
7.4.4	Three-wire control, method 1 .....	150
7.4.5	Three-wire control, method 2.....	151
7.5	Drive control via PROFINET .....	152
7.5.1	Receive data and send data.....	152
7.5.2	Telegrams.....	153
7.5.3	Control and status word 1 .....	155
7.5.4	Control and status word 3 .....	157
7.5.5	Control and status word G115D .....	158
7.5.6	NAMUR message word.....	160
7.5.7	Parameter channel.....	160
7.5.8	Expanding or freely interconnecting telegrams.....	164
7.5.9	Acyclically reading and writing converter parameters .....	166
7.6	Drive control via Ethernet/IP .....	167
7.6.1	Configuring communication via Ethernet/IP .....	167
7.6.2	Supported objects.....	170

7.6.3	Supported ODVA AC/DC assemblies .....	181
7.6.4	Creating generic I/O module.....	182
7.6.5	The converter as Ethernet node.....	183
7.7	Drive control via AS-i .....	183
7.7.1	Single Slave mode .....	183
7.7.2	Dual Slave mode .....	185
7.7.3	Assignment tables .....	188
7.7.4	Cyclic and acyclic communication via CTT2.....	190
7.7.4.1	Cyclic communication .....	191
7.7.4.2	Acyclic communication - standard .....	192
7.7.4.3	Acyclic communication - manufacturer-specific .....	192
7.8	Jogging .....	194
7.9	Conveyor technology control functions (for G115D PROFINET and AS-i variants only) .....	195
7.9.1	Conveyors.....	196
7.9.1.1	Conveyor, one direction and one speed (p3393 = 1) .....	196
7.9.1.2	Conveyor, one direction and two speeds (p3393 = 2).....	198
7.9.1.3	Conveyor, two directions and one speed (p3393 = 3).....	200
7.9.1.4	Conveyor, two directions and two speeds (p3393 = 4) .....	202
7.9.2	Turntables .....	204
7.9.2.1	Turntable, two positions and one speed (p3393 = 5) .....	205
7.9.2.2	Turntable, two positions and two speeds (p3393 = 6).....	208
7.9.2.3	Turntable, three positions and one speed (p3393 = 7) .....	212
7.9.2.4	Turntable, three positions and two speeds (p3393 = 8).....	215
7.9.3	Corner turntable lifts.....	218
7.9.3.1	Corner turntable lift, two positions and one speed (p3393 = 9).....	219
7.9.3.2	Corner turntable lift, two positions and two speeds (p3393 = 10) .....	222
7.9.4	Travelling trolleys.....	224
7.9.4.1	Travelling trolley, one speed (p3393 = 11) .....	225
7.9.4.2	Travelling trolley, two speeds (p3393 = 12) .....	227
7.9.5	Conveyor technology control parameters.....	230
7.10	Switching over the drive control (command data set) .....	232
7.11	Motor holding brake .....	234
7.12	Encoder Interface .....	239
7.13	Free function block .....	240
7.14	Selecting physical units .....	240
7.14.1	Motor standard .....	240
7.14.2	System of units .....	241
7.14.3	Technological unit of the technology controller .....	242
7.14.4	Setting the system of units and technology unit .....	243
7.15	Safe Torque Off (STO) safety function .....	243
7.15.1	Function description .....	244
7.15.2	Commissioning STO .....	246
7.15.2.1	Commissioning tool .....	246
7.15.2.2	Safety function password .....	246
7.15.2.3	Configuring a safety function .....	247
7.15.2.4	Interconnecting the "STO active" signal.....	248
7.15.2.5	Setting the filter for fail-safe digital inputs .....	249
7.15.2.6	Setting the forced checking procedure (test stop) .....	252

7.15.2.7	Finalizing online commissioning.....	253
7.15.2.8	Checking the interconnection of digital inputs.....	255
7.15.2.9	Acceptance - completion of commissioning.....	256
7.16	Safely Limited Speed (SLS) .....	257
7.17	Setpoints .....	265
7.17.1	Overview .....	265
7.17.2	Specifying the setpoint via the fieldbus.....	266
7.17.3	Electromechanical potentiometer .....	267
7.17.4	Motorized potentiometer as setpoint source .....	268
7.17.5	Fixed speed setpoint as setpoint source .....	271
7.18	Setpoint processing.....	274
7.18.1	Overview .....	274
7.18.2	Invert setpoint .....	275
7.18.3	Inhibit direction of rotation .....	276
7.18.4	Skip frequency bands and minimum speed.....	277
7.18.5	Speed limitation .....	278
7.18.6	Ramp-function generator .....	279
7.19	PID technology controller .....	284
7.20	Motor control.....	291
7.20.1	Setting the saturation characteristic of the permanent magnet synchronous motor (third-party motor) .....	291
7.20.2	U/f control .....	293
7.20.2.1	Characteristics of U/f control .....	294
7.20.2.2	Selecting the U/f characteristic .....	295
7.20.2.3	Optimizing motor starting.....	296
7.20.3	Sensorless vector control with speed controller.....	298
7.20.3.1	Structure of vector control without encoder (sensorless).....	298
7.20.3.2	Optimizing the closed-loop speed controller .....	300
7.20.3.3	Advanced settings.....	302
7.20.3.4	Optimizing the operation of the permanent magnet synchronous motor.....	304
7.20.3.5	Friction characteristic.....	306
7.20.3.6	Moment of inertia estimator .....	308
7.20.3.7	Pole position identification .....	315
7.20.4	Torque control .....	317
7.21	Electrically braking the motor.....	318
7.21.1	DC braking.....	319
7.21.2	Dynamic braking.....	322
7.22	Overcurrent protection.....	324
7.23	Converter protection using temperature monitoring .....	325
7.24	Motor temperature monitoring using a temperature sensor .....	329
7.25	Motor protection by calculating the temperature .....	332
7.26	Motor and converter protection by limiting the voltage.....	334
7.27	Monitoring the driven load.....	336
7.27.1	No-load monitoring .....	336
7.27.2	Rotation monitoring.....	337
7.27.3	Torque monitoring .....	338

7.27.4	Blocking protection, leakage protection and dry-running protection.....	340
7.28	Efficiency optimization .....	343
7.29	Calculating the energy saving for fluid flow machines.....	346
7.30	Switchover between different settings.....	349
7.31	Activating licensed functions.....	351
7.31.1	Licensing .....	351
7.31.2	Creating or displaying the license key .....	352
7.31.3	Writing the license key to the card .....	354
7.31.4	Recommended memory cards.....	356
<b>8</b>	<b>Data backup and series commissioning .....</b>	<b>359</b>
8.1	Transferring settings using a memory card .....	360
8.1.1	Memory cards.....	360
8.1.2	Converter → Memory card .....	361
8.1.3	Memory card → converter.....	363
8.1.4	Activating message for a memory card that is not inserted .....	365
8.2	Transferring settings using a PG/PC.....	366
8.2.1	Converter → PG/PC.....	366
8.2.2	PG/PC → converter .....	367
8.3	Other ways to back up settings.....	369
8.4	Write protection .....	369
8.5	Know-how protection .....	370
8.5.1	Extending the exception list for know-how protection .....	372
8.5.2	Activating and deactivating know-how protection .....	374
<b>9</b>	<b>Alarms, faults and system messages.....</b>	<b>377</b>
9.1	Status LED overview.....	377
9.2	System runtime .....	381
9.3	Identification & maintenance data (I&M) .....	381
9.4	Alarms, alarm buffer, and alarm history .....	382
9.5	Faults, fault buffer and fault history.....	386
9.6	List of alarms and faults .....	389
<b>10</b>	<b>Corrective maintenance .....</b>	<b>395</b>
10.1	Spare parts compatibility .....	395
10.2	Replacing the converter .....	396
10.2.1	Replacing the converter hardware .....	396
10.2.2	Replacing a converter with active know-how protection.....	398
10.2.2.1	Replacing a converter with know-how protection without copy protection .....	398
10.2.2.2	Replacing a converter with know-how protection with copy protection .....	398
10.3	Replacing the spare parts .....	400
10.3.1	Spare parts overview.....	401
10.3.2	Replacing the Electronic Module.....	402
10.3.3	Replacing the fan unit.....	404

10.4	Repair switch .....	406
10.5	Local/Remote control panel .....	407
10.6	Firmware upgrade and downgrade .....	409
10.6.1	Preparing the memory card .....	411
10.6.2	Upgrading the firmware .....	411
10.6.3	Downgrading the firmware .....	414
10.6.4	Correcting an unsuccessful firmware upgrade or downgrade .....	416
10.7	Reduced acceptance test after component replacement and firmware change .....	417
<b>11</b>	<b>Technical data .....</b>	<b>419</b>
11.1	Technical data of the G115D converter with SIMOGEAR geared motor .....	419
11.1.1	General technical data .....	419
11.1.2	Technical data of inputs and outputs .....	421
11.1.3	Technical data dependent upon the power .....	423
11.1.4	Technical data of braking resistors .....	424
11.1.5	Load cycles and overload capabilities .....	425
11.1.6	Derating data .....	427
11.1.6.1	Torque derating as a function of the installation altitude .....	427
11.1.6.2	Torque derating as a function of the surrounding temperature .....	428
11.1.6.3	Torque derating as a function of the line voltage .....	428
11.1.6.4	Torque derating as a function of the pulse frequency .....	429
11.1.6.5	Torque derating as a function of the motor speed .....	431
11.2	Technical data of the G115D wall-mounted converter .....	432
11.2.1	General converter technical data .....	432
11.2.2	Technical data of inputs and outputs .....	434
11.2.3	Technical data dependent upon the power .....	435
11.2.4	Technical data of braking resistors .....	437
11.2.5	Load cycles and overload capabilities .....	439
11.2.6	Derating data .....	440
11.2.6.1	Torque derating as a function of the installation altitude .....	440
11.2.6.2	Current derating as a function of the surrounding temperature .....	441
11.2.6.3	Torque derating as a function of the line voltage .....	441
11.2.6.4	Current derating as a function of the pulse frequency .....	442
11.2.6.5	Derating of motor cable length based on pulse frequency and surrounding temperature .....	443
11.3	Low frequency operation .....	443
11.4	Data regarding the power loss in partial load operation .....	444
11.5	Electromagnetic compatibility of the converter .....	444
11.6	Protecting persons from electromagnetic fields .....	446
<b>12</b>	<b>Additional information on the SIMOGEAR geared motor .....</b>	<b>449</b>
12.1	General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted .....	449
12.1.1	Specific hazard types and fundamental obligations .....	449
12.1.2	Rating plate .....	450
12.1.3	Surface treatment .....	450
12.1.3.1	General information on surface treatment .....	450
12.1.3.2	Painted version .....	451
12.1.3.3	Primed version .....	453
12.1.4	Incoming goods .....	453

12.1.5	General information on transport.....	454
12.1.6	Unpacking .....	455
12.1.7	General information concerning the installation .....	455
12.1.8	Installation notes .....	457
12.1.9	Thread sizes and tightening torques for fastening bolts.....	458
12.1.10	Operation .....	459
12.1.11	Cleaning the geared motor.....	459
12.1.12	Inspecting the geared motor .....	460
12.1.13	Disposal.....	460
12.1.14	Technical data.....	461
12.1.14.1	Type designation motor and converter .....	461
12.1.14.2	Gearbox type designation .....	462
12.1.14.3	General technical data .....	463
12.1.14.4	Rating plate for geared motors with SINAMICS G115D Motor Mounted .....	464
12.1.14.5	Rating plate for geared motors with SINAMICS G115D Wall Mounted .....	465
12.1.14.6	Weight.....	466
12.1.14.7	Sound energy level .....	466
12.1.15	Spare parts .....	467
12.1.15.1	Stocking of spare parts.....	467
12.1.15.2	Spares on Web .....	468
12.2	Specific data motor .....	469
12.2.1	General motor information .....	469
12.2.2	Use as prescribed .....	469
12.2.3	General technical description .....	470
12.2.4	Cooling.....	471
12.2.5	Terminal box and application box .....	471
12.2.6	Fastening for suspended transport .....	472
12.2.7	Storage.....	472
12.2.8	Installation conditions for the motor .....	473
12.2.9	Condensation drain hole (optional) .....	474
12.2.10	Connecting the motor in the terminal box .....	474
12.2.10.1	General notes for motor connection (Wall Mounted).....	475
12.2.10.2	Terminal box.....	476
12.2.10.3	Terminal marking.....	477
12.2.10.4	Direction of rotation.....	477
12.2.10.5	Connecting the cables in the terminal box .....	478
12.2.10.6	External grounding .....	479
12.2.10.7	Mounting and installation (Wall Mounted) .....	479
12.2.11	Converter operation.....	481
12.2.12	Checking the insulation resistance (Wall Mounted) .....	482
12.2.13	Commissioning the motor.....	483
12.2.14	Faults, causes and remedies .....	485
12.2.15	General notes about maintenance.....	486
12.2.16	Locking the manual release of the brake (optional).....	487
12.2.17	Lubrication .....	487
12.2.18	Checking the tightness of fastening bolts .....	489
12.2.19	Inspection of the motor.....	489
12.2.20	Servicing the brake .....	489
12.2.20.1	Wear of the spring-operated brake .....	489
12.2.20.2	Maintenance intervals for the brake .....	490
12.2.20.3	Adjusting the air gap.....	491
12.2.20.4	Replacing the friction lining.....	493

12.2.21	Circuit diagrams.....	494
12.2.22	Spare parts list, motor.....	496
12.2.22.1	Motor frame sizes 71 - 132.....	496
12.2.22.2	Brake.....	500
12.3	Specific data gearbox.....	501
12.3.1	General information gearbox.....	501
12.3.2	Use for the intended purpose.....	502
12.3.3	General technical description.....	502
12.3.4	Shaft seals.....	503
12.3.5	Cooling.....	504
12.3.6	Fastening for suspended transport.....	505
12.3.7	Storage.....	506
12.3.7.1	General information for storage.....	506
12.3.7.2	General notes for storage up to 36 months.....	507
12.3.7.3	Gearbox filled with operating oil and anti-corrosive agent.....	507
12.3.7.4	Gearbox completely filled with oil.....	507
12.3.8	Gearbox with foot mounting.....	508
12.3.9	Gearbox with flange mounting.....	508
12.3.10	Gearboxes in foot or flange version.....	509
12.3.11	Mounting an input or output element on the gearbox shaft.....	510
12.3.12	Removing and installing the protection cover.....	512
12.3.13	General information on installing the shaft-mounted gearbox.....	513
12.3.14	Hollow shaft with feather key.....	514
12.3.14.1	Mounting the hollow shaft with parallel key.....	514
12.3.14.2	Removing the hollow shaft with parallel key.....	515
12.3.15	Hollow shaft with shrink disk.....	517
12.3.15.1	Mounting the hollow shaft with shrink disk.....	517
12.3.15.2	Mounting the shrink disk.....	518
12.3.15.3	Pulling off the shrink disk.....	520
12.3.15.4	Cleaning and lubricating shrink disks.....	520
12.3.16	SIMOLOC assembly system.....	521
12.3.16.1	General notes for the SIMOLOC assembly system.....	521
12.3.16.2	Installing SIMOLOC.....	523
12.3.16.3	Removing SIMOLOC.....	525
12.3.17	Hollow shaft with splines.....	526
12.3.18	Torque arms with slip-on gearboxes.....	527
12.3.18.1	General information regarding torque arms.....	527
12.3.18.2	Mounting torque arms on parallel shaft gearboxes.....	527
12.3.18.3	Mounting torque arms on bevel gearboxes and helical worm gearboxes.....	528
12.3.19	General information about commissioning.....	529
12.3.20	Checking the oil level prior to commissioning.....	530
12.3.21	Mounting the oil expansion tank.....	530
12.3.22	Faults, causes and remedies.....	532
12.3.23	General notes about maintenance work.....	534
12.3.24	Checking and changing lubricants.....	536
12.3.24.1	General safety instructions.....	536
12.3.24.2	Checking the oil level.....	537
12.3.24.3	Checking the oil level using the oil sight glass (optional).....	538
12.3.24.4	Checking the oil level using the oil dipstick (optional).....	538
12.3.24.5	Checking the oil quality.....	539
12.3.24.6	General safety notes for changing the oil.....	540
12.3.24.7	Draining the oil.....	540

12.3.24.8	Flushing the gearbox when changing between incompatible oils .....	541
12.3.24.9	Filling in oil .....	542
12.3.24.10	Topping up with oil .....	542
12.3.24.11	Change the roller bearing grease.....	543
12.3.24.12	Service life of the lubricants .....	543
12.3.24.13	Recommended lubricants.....	545
12.3.25	Replace bearings.....	546
12.3.26	Checking the gearbox for leaks.....	547
12.3.27	Replacing the vent valve .....	547
12.3.28	Checking the oil level sensor (optional) .....	547
12.3.29	Checking the tightness of fastening bolts .....	548
12.3.30	Replacing the hose of the oil expansion unit.....	548
12.3.31	Mounting positions.....	549
12.3.31.1	General notes on mounting positions.....	549
12.3.31.2	Single-stage helical gearboxes.....	550
12.3.31.3	Two- and three-stage helical gearbox .....	552
12.3.31.4	Parallel shaft gearbox.....	559
12.3.31.5	Bevel gearbox .....	565
12.3.31.6	Helical worm gearbox .....	574
12.3.32	Oil quantities .....	583
12.3.32.1	Helical gearbox .....	583
12.3.32.2	Parallel shaft gearbox.....	584
12.3.32.3	Bevel gearbox .....	585
12.3.32.4	Helical worm gearbox .....	586
12.3.33	Replacement part lists gearbox.....	587
12.3.33.1	Helical gearbox E, sizes 39 - 89.....	587
12.3.33.2	Helical gearbox D / Z, sizes 19 - 89.....	588
12.3.33.3	Parallel shaft gearbox F, sizes 29 - 89.....	590
12.3.33.4	Bevel gearbox B, sizes 19 - 49.....	592
12.3.33.5	Bevel gearbox K, frame sizes 39 - 109.....	595
12.3.33.6	Helical worm gearbox C, sizes 29 - 89.....	597
12.3.33.7	SIMOLOC assembly system, sizes 29 - 89 .....	600
<b>A</b>	<b>Appendix.....</b>	<b>603</b>
A.1	Interconnecting signals in the converter .....	603
A.1.1	Fundamentals.....	603
A.1.2	Application example .....	605
A.2	Acceptance tests for the safety functions.....	606
A.2.1	Recommended acceptance test.....	606
A.2.2	Acceptance test STO (basic functions) .....	607
A.2.3	Machine documentation .....	608
A.3	Manuals and technical support.....	610
A.3.1	Overview of the manuals .....	610
A.3.2	Configuring support.....	611
A.3.3	Product support .....	612
	<b>Index.....</b>	<b>615</b>

# Changes in the manual

## Changes in the manual – Edition 01/2024

The following information has been added and/or updated in Edition 01/2024 of this manual:

- Address changed from Siemens AG to Innomatics GmbH
- Front covers U1 and U4 adapted



## Fundamental safety instructions

### 2.1 General safety instructions



#### WARNING

##### Electric shock and danger to life due to other energy sources

Touching live components can result in death or severe injury.

- Only work on electrical devices when you are qualified for this job.
- Always observe the country-specific safety rules.

Generally, the following steps apply when establishing safety:

1. Prepare for disconnection. Notify all those who will be affected by the procedure.
2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
3. Wait until the discharge time specified on the warning labels has elapsed.
4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
5. Check whether the existing auxiliary supply circuits are de-energized.
6. Ensure that the motors cannot move.
7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness in the inverse sequence.



#### WARNING

##### Risk of electric shock and fire from supply networks with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and thus causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the converter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT supply systems.



**! WARNING**

**Risk of electric shock and fire from supply networks with an excessively low impedance**

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and thus causing electric shock or a fire.

- Ensure that the prospective short-circuit current at the line terminal of the converter does not exceed the breaking capacity (SCCR or Icc) of the protective device used.



**! WARNING**

**Electric shock if there is no ground connection**

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



**! WARNING**

**Electric shock due to connection to an unsuitable power supply**

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage. Contact with hazardous voltage can result in severe injury or death.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



**! WARNING**

**Electric shock due to damaged motors or devices**

Improper handling of motors or devices can damage them.

Hazardous voltages can be present at the enclosure or at exposed components on damaged motors or devices.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged motors or devices.



**! WARNING**

**Electric shock due to unconnected cable shield**

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- Attach the cable shields at least on one side to the grounded housing potential.

**⚠ WARNING****Arcing when a plug connection is opened during operation**

Opening a plug connection when a system is in operation can result in arcing that may cause serious injury or death.

- Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.

**⚠ WARNING****Electric shock due to residual charges in power components**

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

- Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

**NOTICE****Damage to equipment due to unsuitable tightening tools.**

Unsuitable tightening tools or fastening methods can damage the screws of the equipment.

- Only use screw inserts that exactly match the screw head.
- Tighten the screws with the torque specified in the technical documentation.
- Use a torque wrench or a mechanical precision nut runner with a dynamic torque sensor and speed limitation system.
- Adjust the tools used regularly.

**⚠ WARNING****Active implant malfunctions due to electromagnetic fields**

Converters generate electromagnetic fields (EMF) in operation. Electromagnetic fields may interfere with active implants, e.g. pacemakers. People with active implants in the immediate vicinity of an converter are at risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants.
- Observe the data on EMF emission provided in the product documentation.

 **WARNING**

**Unexpected machine movement caused by radio devices or mobile phones**

Using radio devices, cellphones, or mobile WLAN devices in the immediate vicinity of the components can result in equipment malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- Therefore, if you move closer than 20 cm to the components, be sure to switch off radio devices, cellphones or WLAN devices.
- Use the "SIEMENS Industry Online Support App" or a QR code scanner only on equipment that has already been switched off.

 **CAUTION**

**Radio frequency interference in residential areas**

When you operate EMC category C2 devices in residential areas, the devices can cause radio frequency interference.

When you operate EMC category C3 or C4 devices in residential areas, it is to be expected that the devices will cause radio frequency interference.

- Do not operate EMC category C2 devices in residential areas.
- Do not operate EMC category C3 or C4 devices in public low-voltage networks supplying residential buildings.

**NOTICE**

**Damage to motor insulation due to excessive voltages**

When operated on systems with grounded line conductors or in the event of a ground fault in the IT system, the motor insulation can be damaged by the higher voltage against ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.



 **WARNING**

**Electric shock due to unsuitable motor temperature evaluation system**

Voltage flashovers to the electronics of the converter can occur in motors without safe electrical separation of the temperature sensors in accordance with IEC 61800-5-1 when the motor develops a fault.

- Install a temperature monitoring relay 3RS1... or 3RS2...
- Evaluate the temperature monitoring relay output using a digital input of the converter, e.g. using the "External fault" function.

 **WARNING****Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

**NOTICE****Overheating due to inadmissible mounting position**

The device may overheat and therefore be damaged if mounted in an inadmissible position.

- Only operate the device in admissible mounting positions.

**NOTICE****Device damage caused by incorrect voltage/insulation tests**

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.

 **WARNING****Unexpected movement of machines caused by inactive safety functions**

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

---

**Note**

**Important Safety instructions for Safety Integrated**

If you want to use Safety Integrated functions, you must observe the Safety instructions in the Safety Integrated documentation.

---

 **WARNING**

**Malfunctions of the machine as a result of incorrect or changed parameter settings**

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization against unauthorized access.
- Handle possible malfunctions by taking suitable measures, e.g. emergency stop or emergency off.

 **WARNING**

**Injury caused by moving or ejected parts**

Contact with moving motor parts or drive output elements and the ejection of loose motor parts (e.g. feather keys) out of the motor enclosure can result in severe injury or death.

- Remove any loose parts or secure them so that they cannot be flung out.
- Do not touch any moving parts.
- Safeguard all moving parts using the appropriate safety guards.

 **WARNING**

**Fire due to incorrect operation of the motor**

When incorrectly operated and in the case of a fault, the motor can overheat resulting in fire and smoke. This can result in severe injury or death. Further, excessively high temperatures destroy motor components and result in increased failures as well as shorter service lives of motors.

- Operate the motor according to the relevant specifications.
- Only operate the motors in conjunction with effective temperature monitoring.
- Immediately switch off the motor if excessively high temperatures occur.

**CAUTION****Burns and thermal damage caused by hot surfaces**

Temperatures above 100 °C may occur on the surfaces of motors, converters, and other drive components.

Touching hot surfaces may result in burns. Hot surfaces may damage or destroy temperature sensitive parts.

- Ensure that temperature-sensitive parts do not come into contact with hot surfaces.
- Mount drive components so that they are not accessible during operation.

Measures when maintenance is required:

- Allow drive components to cool off before starting any work.
- Use appropriate personnel protection equipment, e.g. gloves.

**2.2****Equipment damage due to electric fields or electrostatic discharge**

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.

**NOTICE****Equipment damage due to electric fields or electrostatic discharge**

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
  - Wearing an ESD wrist strap
  - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

**2.3****Warranty and liability for application examples**

Application examples are not binding and do not claim to be complete regarding configuration, equipment or any eventuality which may arise. Application examples do not represent specific customer solutions, but are only intended to provide support for typical tasks.

## 2.4 Cybersecurity information

As the user you yourself are responsible for ensuring that the products described are operated correctly. Application examples do not relieve you of your responsibility for safe handling when using, installing, operating and maintaining the equipment.

### 2.4 Cybersecurity information

Siemens provides products and solutions with industrial cybersecurity functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial cybersecurity concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial cybersecurity measures that may be implemented, please visit  
<https://www.siemens.com/cybersecurity-industry>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Cybersecurity RSS Feed under  
<https://new.siemens.com/cert>.

Further information is provided on the Internet:

Industrial Security Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/108862708>)

**WARNING****Unsafe operating states resulting from software manipulation**

Software manipulations, e.g. viruses, Trojans, or worms, can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a state-of-the-art, integrated industrial cybersecurity concept for the installation or machine.
- Make sure that you include all installed products in the integrated industrial cybersecurity concept.
- Protect files stored on exchangeable storage media from malicious software by with suitable protection measures, e.g. virus scanners.
- Carefully check all cybersecurity-related settings once commissioning has been completed.

## 2.5 Residual risks of power drive systems

When assessing the machine or system-related risk in accordance with the respective local regulations (e.g. EC Machinery Directive), the machine manufacturer or system integrator must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
  - Hardware faults and/or software errors in the sensors, control system, actuators, and connections
  - Response times of the control system and of the drive
  - Operation and/or environmental conditions outside the specification
  - Condensation/conductive contamination
  - Parameterization, programming, cabling, and installation errors
  - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
  - External influences/damage
  - X-ray, ionizing radiation and cosmic radiation
2. Unusually high temperatures inside and outside the components, including open flames, as well as emissions of light, noise, particles, gases, etc. due to fault conditions, e.g.:
  - Component failure
  - Software errors
  - Operation and/or environmental conditions outside the specification
  - External influences/damage
  - Short circuits or ground faults in the intermediate DC circuit of the converter
3. Hazardous shock voltages caused by, for example:
  - Component failure
  - Influence during electrostatic charging
  - Induction of voltages in moving motors
  - Operation and/or environmental conditions outside the specification
  - Condensation/conductive contamination
  - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly

6. Influence of network-connected and wireless communications systems, e.g. ripple-control transmitters or data communication via the network or mobile radio, WLAN or Bluetooth.
7. Motors for use in potentially explosive areas:  
When moving components such as bearings become worn, this can cause enclosure components to exhibit unexpectedly high temperatures during operation, creating a hazard in areas with a potentially explosive atmosphere.

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.



## Overview of the SINAMICS G115D drive


### 3.1 System overview

The SINAMICS G115D distributed drive is a compact drive designed to provide an adaptable solution to conveyor technology applications.

The drive is a combination of a SINAMICS G115D converter and a SIMOGEAR geared motor and is available in the following two different variants:


- SINAMICS G115D Motor Mounted (Page 30)
  - Drive with the converter mounted on the SIMOGEAR geared motor
- SINAMICS G115D Wall Mounted (Page 32)
  - Drive with the converter mounted close to the SIMOGEAR geared motor

**SINAMICS G115D Motor Mounted**

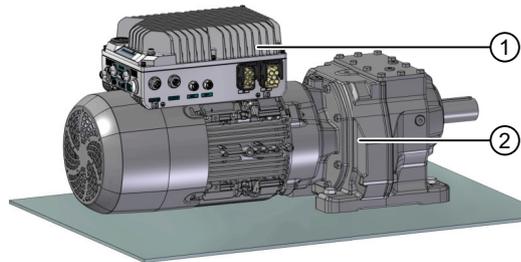

- ① SINAMICS G115D converter
- ② SIMOGEAR geared motor

**SINAMICS G115D Wall Mounted**

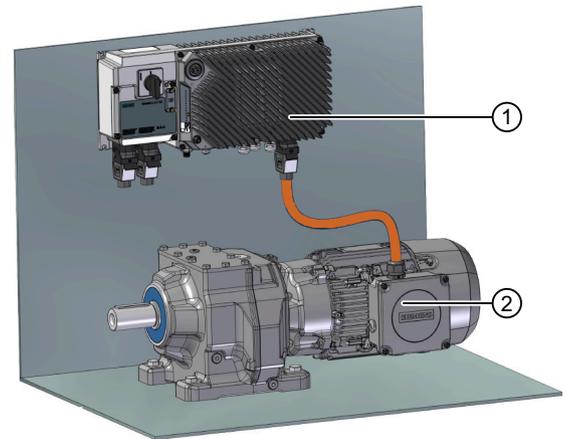

- ① SINAMICS G115D converter
- ② SIMOGEAR geared motor for SINAMICS G115D

---

#### Note

The SINAMICS G115D Wall Mounted drive refers only to the combination of a G115D wall-mounted converter and a SIMOGEAR 2KJ8 geared motor for SINAMICS G115D; however, the SINAMICS G115D wall-mounted converter also supports other SIMOGEAR geared motors, SIMOTICS motors, or third-party motors.

---

## 3.2 Scope of delivery

### 3.2.1 SINAMICS G115D Motor Mounted

The SINAMICS G115D converter with the SIMOGEAR geared motor constitutes the SINAMICS G115D Motor Mounted drive. The delivery comprises at least the following:

- A ready-to-run drive with loaded firmware. The drive is delivered with the converter assembled with the geared motor.  
Options for upgrading and downgrading the firmware can be found on the Internet:  
 Firmware (<https://support.industry.siemens.com/cs/ww/en/view/67364620>)
- Compact Operating Instructions in German, English, and Chinese
- Open-source software (OSS) with license terms saved in the converter

### Assignment of motor and converter

The converter is compatible with motors from frame size 71 to frame size 112.

Motor frame size		Motor rated power (kW)	Converter rated power (kW)							
			FSA				FSB			
IE2/IE3	IE4		0.37	0.55	0.75	1.1	1.5	2.2	3.0	4.0
71	-	0.37	Y	Δ	Δ					
80	80	0.55		Y	Δ	Δ				
		0.75			Y	Δ	Δ			
90	90	1.1				Y	Δ	Δ		
		1.5					Y	Δ	Δ	
100	112	2.2						Y	Δ	Δ
		3.0							Y	Δ
112		4.0								Y

- Motor speed range:


-  300 rpm ... 1500 rpm (2KJ8...-.....-3...-)
-  300 rpm ... 3000 rpm (2KJ8...-.....-4...-)
-  300 rpm ... 2610 rpm (2KJ8...-.....-5...-)

- Motor connection type:

- Y: star connection
- Δ: delta connection

**Explanation on drive article number (example)**

**2 K J 8 1 0 3 - 2 E A 1 1 - 3 G A 1 - Z**

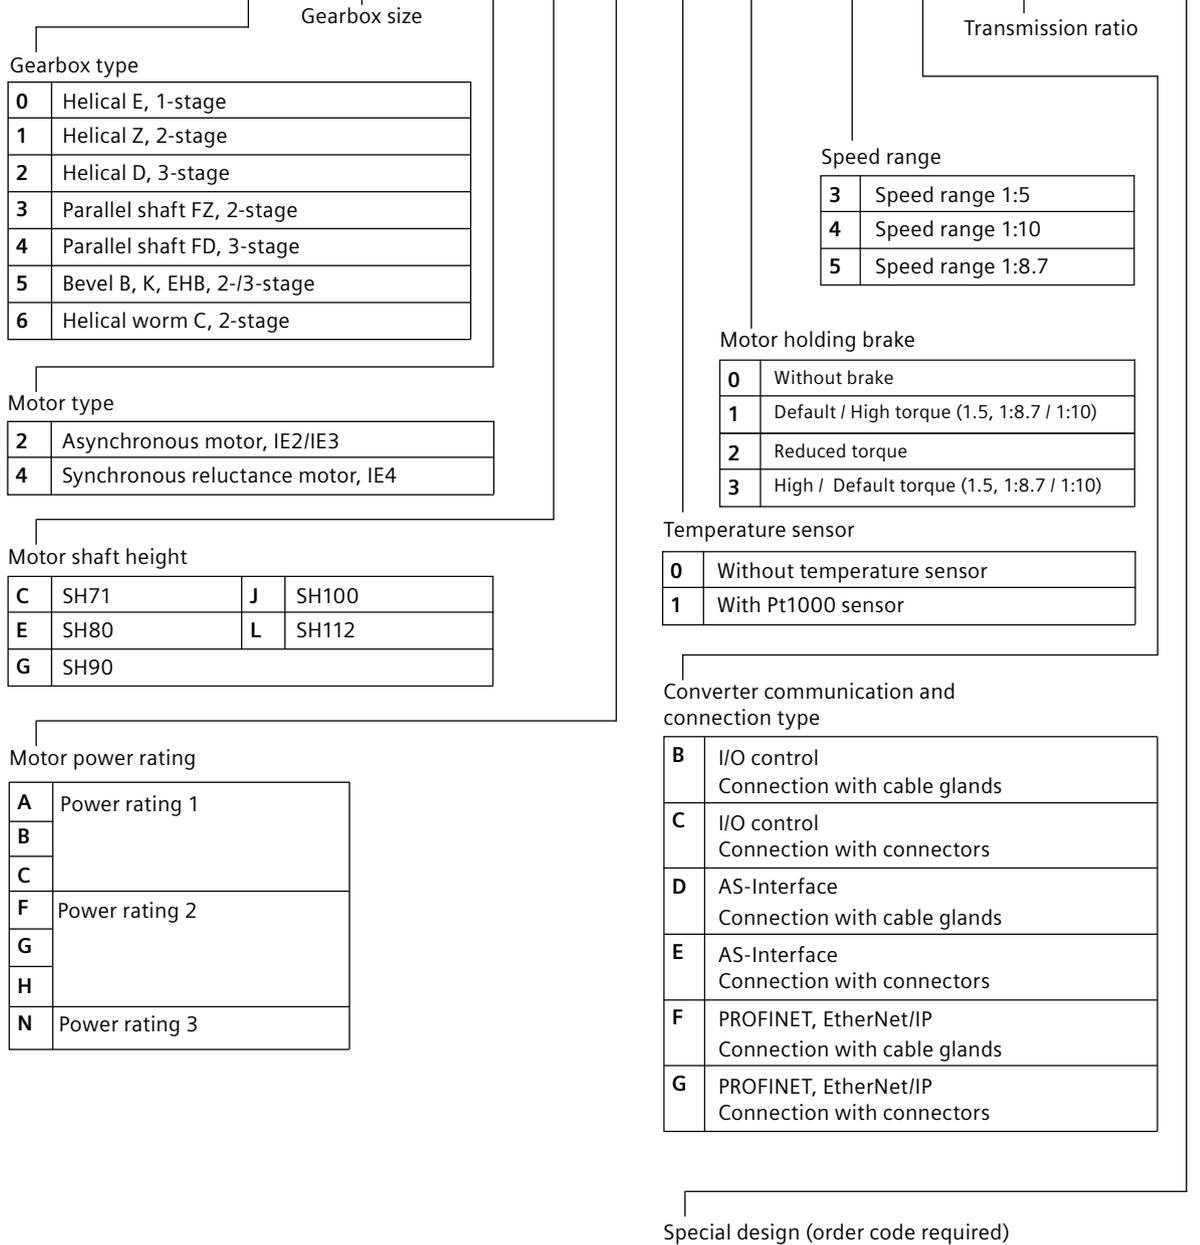

**Rating plate**

For more information about the drive rating plate, see Section "Rating plate for geared motors with SINAMICS G115D Motor Mounted (Page 464)".

3.2 Scope of delivery

**Further information**

For more information about the SIMOGEAR geared motors, refer to the following chapter:

 Additional information on the SIMOGEAR geared motor (Page 449)

**3.2.2 SINAMICS G115D Wall Mounted**

The SINAMICS G115D Wall Mounted drive is a combination of a G115D wall-mounted converter and a SIMOGEAR geared motor for G115D. The G115D wall-mounted converter and the 2KJ8 geared motor can only be ordered and delivered individually as drive system components.

You can also operate a SIMOGEAR 2KJ3 geared motor, a SIMOTICS motor, or a third-party motor with the G115D wall-mounted converter.

The delivery of G115D wall-mounted converter comprises at least the following:

- A ready-to-run converter with loaded firmware  
Options for upgrading and downgrading the firmware can be found on the Internet:  
 Firmware (<https://support.industry.siemens.com/cs/ww/en/view/67364620>)
- Compact Operating Instructions in German, English, and Chinese
- Open-source software (OSS) with license terms saved in the converter

**Converter technical data**

Converter frame size	Rated output power	Rated output current	Article number
	Based on High Overload (HO)		
FSA	0.37 kW	1.3 A	6SL352.-.X..0-3A.0
	0.55 kW	1.7 A	6SL352.-.X..0-5A.0
	0.75 kW	2.2 A	6SL352.-.X..0-7A.0
	1.1 kW	3.1 A	6SL352.-.X..1-1A.0
	1.5 kW	4.1 A	6SL352.-.X..1-5A.0
FSB	2.2 kW	5.9 A	6SL352.-.X..2-2A.0
	3 kW	7.7 A	6SL352.-.X..3-0A.0
	4 kW	10.2 A	6SL352.-.X..4-0A.0
FSC	5.5 kW	13.2 A	6SL352.-.X..5-5A.0
	7.5 kW	19 A	6SL352.-.X..7-5A.0

Explanation on article numbers (examples)

Article number of SIMOGEAR geared motor for G115D (2KJ8...)

**2 K J 8 1 0 3 - 2 E A 1 1 - 0 A A 1 - Z**

Gearbox size

Gearbox type

0	Helical E, 1-stage
1	Helical Z, 2-stage
2	Helical D, 3-stage
3	Parallel shaft FZ, 2-stage
4	Parallel shaft FD, 3-stage
5	Bevel B, K, EHB, 2-/3-stage
6	Helical worm C, 2-stage

Motor type

2	Asynchronous motor, IE2/IE3
4	Synchronous reluctance motor, IE4

Motor shaft height

C	SH71	J	SH100
E	SH80	L	SH112
G	SH90	N	SH132

Motor power rating

A	Power rating 1
B	
C	
F	Power rating 2
G	
H	
N	Power rating 3

Gearbox size

Transmission ratio

SIMOGEAR geared motor for G115D

Speed range

0	Speed range 1: 5
1	Speed range 1: 10
2	Speed range 1: 8.7

Motor holding brake

0	Without brake
1	Default / High torque (1.5, 1:8.7 / 1:10)
2	Reduced torque
3	High / Default torque (1.5, 1:8.7 / 1:10)

Temperature sensor

0	Without temperature sensor
1	With Pt1000 sensor

Special design (order code required)

3.2 Scope of delivery

Article number of SINAMICS G115D wall-mounted converter (6SL352...)

**6 S L 3 5 2 0 - 1 X A 2 0 - 3 A F 0**

Motor holding brake

0	180 V DC electromechanical brake
1	400 V AC electromechanical brake

User interface options

0	With blanking cover
1	With repair switch
2	With local/remote control panel
3	With repair switch and local/remote control panel

Rated output power

0-3	0.37 kW
0-5	0.55 kW
0-7	0.75 kW
1-1	1.1 kW
1-5	1.5 kW
2-2	2.2 kW
3-0	3.0 kW
4-0	4.0 kW
5-5	5.5 kW
7-5	7.5 kW

EMC filter type

A	Filter C2
---	-----------

Communication

A	AS-Interface
B	I/O control
F	PROFINET, EtherNet/IP

Interconnection type


A0	Glanded variant, I/O control
A2	Glanded variant, fieldbus communication
A6	Glanded variant, I/O + fieldbus communication on M12 (like G110M)
B0 <sup>1)</sup>	Connector variant without daisy chain (Q4/2 + 7/8")
B4 <sup>1)</sup>	Connector variant without daisy chain (Q4/2 + M12)
C0	Connector variant without daisy chain (QUICKON + M12)
D0	Connector variant without daisy chain (MQ15 + M12)
E0 <sup>1)</sup>	Connector variant with daisy chain (Q4/2 + 7/8")
E4 <sup>1)</sup>	Connector variant with daisy chain (Q4/2 + M12)
H0	Glanded variant, I/O control, 24 V DC power supply unit integrated
H2	Glanded variant, fieldbus communication, 24 V DC power supply unit integrated
H6	Glanded variant, I/O + fieldbus communication on M12 (like G110M), 24 V DC power supply unit integrated
K0	Connector variant without daisy chain (Q4/2), 24 V DC power supply unit integrated
L0	Connector variant without daisy chain (QUICKON), 24 V DC power supply unit integrated
M0	Connector variant without daisy chain (MQ15), 24 V DC power supply unit integrated
N0	Connector variant with daisy chain (Q4/2), 24 V DC power supply unit integrated
R0	Glanded variant, I/O + fieldbus communication on M12 (like G110M), Q8/0 for motor connection
R1	Glanded variant, I/O + fieldbus communication on M12 (like G110M), M12 for 24 V DC power connection <sup>2)</sup>

<sup>1)</sup> For UL-compliant applications, use on industrial machinery only.

<sup>2)</sup> The interconnection type R1 supports daisy-chain connections of the 24 V power supply.

### Rating plate

The figure below shows an example of the rating plate attached to the side of the converter:

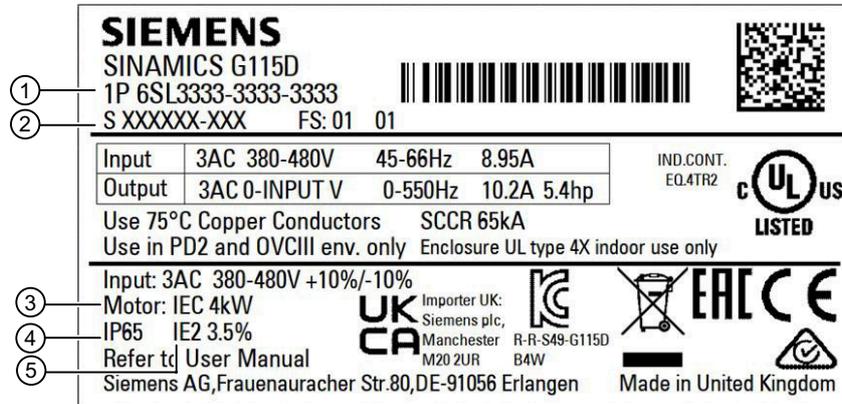

- ① Article number
- ② Product serial number
- ③ Motor data
- ④ Degree of protection
- ⑤ Energy efficiency class, and relative power loss in %

### Compatible motors

#### Siemens motors that can be operated

The SINAMICS G115D wall-mounted converters are compatible with SIMOGEAR 2KJ8 motors from frame size 71 to frame size 132.

Motor frame size		Motor rated power (kW)	Converter rated power (kW)									
			FSA			FSB			FSC			
IE2/IE3	IE4		0.37	0.55	0.75	1.1	1.5	2.2	3.0	4.0	5.5	7.5
71	-	0.37	Y	Δ	Δ							
80	80	0.55		Y	Δ	Δ						
		0.75			Y	Δ	Δ					
90	90	1.1				Y	Δ	Δ				
		1.5					Y	Δ	Δ			
100	112	2.2						Y	Δ	Δ		
		3.0							Y	Δ	Δ	
112		4.0							Y	Δ	Δ	
132	-	5.5									Y	Δ
		7.5										Y

- Motor speed range:

- 300 rpm ... 1500 rpm (2KJ8...-.....-0A..-.)
- 300 rpm ... 3000 rpm (2KJ8...-.....-1A..-.)
- 300 rpm ... 2610 rpm (2KJ8...-.....-2A..-.)

- Motor connection type:

- Y: star connection
- Δ: delta connection

You can also connect SIMOGEAR 2KJ3 geared motors or other Siemens standard asynchronous motors, reluctance motors, or permanent magnet synchronous motor with moderate saturation to the wall-mounted converters.

### 3.2 Scope of delivery

For further information on the possible SIMOGEAR geared motors in combination with the SINAMICS G115D converter, refer to the following:

- The relevant chapter in this manual  
 Additional information on the SIMOGEAR geared motor (Page 449)
- The relevant motor catalog  
 Catalog D 31.2 (<https://support.industry.siemens.com/cs/ww/en/view/109750324>)  
 Catalog D 50.1 (<https://support.industry.siemens.com/cs/ww/en/view/109746934>)
- Drive Technology Configurator (DT Configurator)  
 DT Configurator (<http://www.siemens.com/dt-configurator>)

You can find information on further motors on the Internet:

-  Motors that can be operated (<https://support.industry.siemens.com/cs/ww/en/view/100426622>)

#### Third-party motors that can be operated

You can also operate the following non-Siemens motors with the SINAMICS G115D wall-mounted converter:

- Standard asynchronous (geared) motors
- Most permanent magnet synchronous motors designed for converter operation with moderate saturation:
  - Surface-mounted permanent magnet synchronous motors
  - Integrated permanent magnet synchronous motors

Restrictions for permanent magnet synchronous motors:

- Continuous operation of a permanent magnet synchronous motor at speeds < 15 % of the rated speed is not possible.
- The load moment of inertia should be more than 20 % of the motor moment of inertia.
- Cogging torque < 4 % of the rated torque
- Sinusoidal EMF generator voltage with THD  $\leq$  2 %
- EMF generator voltage  $\leq$  rated voltage of the converter
- Rated motor voltage  $\leq$  0.9 mains voltage

#### Multi-motor operation

Multi-motor operation involves simultaneously operating several motors from one converter. For standard asynchronous motors, multi-motor operation is generally permissible. Additional preconditions and restrictions relating to multi-motor operation are available on the Internet:

-  Multi-motor operation (<https://support.industry.siemens.com/cs/ww/en/view/84049346>)

### 3.3 Directives and standards

The following directives and standards shown in this section are explanatory only and do not confirm compliance of the product with the respective directives and standards. Compliance to a given directive or standard is given only if the certification mark is shown on the product.



#### European Low Voltage Directive

The converters and motors fulfill the requirements stipulated in the Low-Voltage Directive 2014/35/EU, if they are covered by the application area of this directive.

#### European Machinery Directive

The converters and motors fulfill the requirements stipulated in the Machinery Directive 2006/42/EC, if they are covered by the application area of this directive.

However, the use of the converters and motors in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

#### Directive 2011/65/EU

The converter and motors fulfill the requirements of Directive 2011/65/EU relating to the restriction of the use of certain hazardous substances in electrical and electronic devices (RoHS).

#### European Directive on Waste Electrical and Electronic Equipment (WEEE)

The SINAMICS converter series complies with the 2012/19/EU directive on taking back and recycling waste electrical and electronic equipment.

#### European EMC Directive

The compliance of the converters and motors with the regulations of the Directive 2014/30/EU has been demonstrated by full compliance with the IEC/EN 61800-3.

#### UK Declaration of Conformity

The converters and motors comply with the requirements for the market in Great Britain (England, Wales and Scotland).



#### EMC requirements for South Korea

The converters and motors with the KC marking on the rating plate satisfy the EMC requirements for South Korea.



#### Underwriters Laboratories (North American market)

Converters and motors provided with the test symbol displayed fulfill the requirements stipulated for the North American market as a component of drive applications, and are appropriately listed.



#### Eurasian conformity

The converters and motors comply with the requirements of the Russia/Belarus/Kazakhstan customs union (EAC).



### 3.4 Optional components



#### Australia and New Zealand (RCM formerly C-Tick)

The converters and motors showing the test symbols fulfill the EMC requirements for Australia and New Zealand.

#### China RoHS

The converters and motors comply with the requirements of China RoHS. You can find additional information on the Internet:

 China RoHS (<https://support.industry.siemens.com/cs/ww/en/view/109738656>)

#### Quality systems

Siemens AG employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

### Standards that are not relevant



#### China Compulsory Certification

The SINAMICS G115D converters and the SIMOGEAR 2KJ8 geared motors do not fall in the area of validity of the China Compulsory Certification (CCC).

#### China Energy Label and Bureau of Indian Standards (BIS) Certification

The SIMOGEAR 2KJ8 geared motors are designed exclusively for converter operation, and the rated frequency of the 2KJ8 asynchronous motors is not 50 Hz; therefore, they do not fall in the area of validity of the Indian standard IS 12615:2018 and the China national standards GB 18613-2020 and CEL 007-2021.

### Certificates for download

You can find all relevant certificates for download on the Internet:

 Certificates (<https://support.industry.siemens.com/cs/us/en/ps/27867/cert>)

## 3.4 Optional components

### 3.4.1 External braking resistor

The optional external braking resistor can be used to convert the regenerative energy produced by the motor into heat, thus giving greatly improved braking and deceleration capabilities.

### Article number

Article number	Resistance	Continuous braking power	Converter frame Size
6SL3501-1BE32-0AA0	210 Ω	200 W	FSA
6SL3501-1BE32-4AA0	220 Ω	240 W	
6SL3501-1BE34-8AA0	200 Ω	480 W	
6SL3501-1BE32-0BA0	160 Ω	200 W	FSB
6SL3501-1BE32-4BA0	150 Ω	240 W	
6SL3501-1BE36-0BA0	150 Ω	600 W	
6SL3501-1BE36-0CA0	81 Ω	600 W	FSC
6SL3501-1BE41-2CA0	72 Ω	1200 W	

### Further information

For more information about the external braking resistor, refer to the following chapters:

-  Mounting the external braking resistor (Page 48)
-  Connecting the external braking resistor (Page 110)
-  Dynamic braking (Page 322)
-  Technical data of braking resistors (Page 424)

### See also

Technical data of braking resistors (Page 437)

## 3.4.2 Connectors

### QUICKON connector

The QUICKON connector is used for line supply connection to the connector variant (QUICKON) of the G115D converter.

Article number	Illustration	Interface	Quantity	Tightening torque
6SL3566-4MA00-0GA0		Line supply (IN) - X1	1	7 Nm (62.0 lbf.in)

3.4 Optional components

**QUICKON nut**

The QUICKON nut is used for line supply connection to the connector variant (QUICKON) of the G115D converter.

Article number	Illustration	Interface	Quantity	Tightening torque
6SL3566-4NA00-0GA0		Line supply (IN) - X1	1	7 Nm (62.0 lbf.in)

**3.4.3 Glanded installation kit**

**Glanded installation kit for G115D Motor Mounted**

Article number	Illustration	Interface	Cable gland	Quantity	Tightening torque
6SL3566-2GM00-0GA0		Line supply - X1/X3	M25 × 1.5	2	12 Nm (106.2 lbf.in)
		24 V power supply - X01/X02	M20 × 1.5	2	12 Nm (106.2 lbf.in)
		Digital inputs/outputs - X07/X08/X05	M16 × 1.5	3	10 Nm (88.5 lbf.in)

**Glanded installation kit for G115D Wall Mounted**

Article number	Illustration	Interface	Cable gland	Quantity	Tightening torque
6SL3566-2GW00-0GA0		Line supply - X1/X3	M25 × 1.5	2	12 Nm (106.2 lbf.in)
		Motor - X2	M25 × 1.5	1	12 Nm (106.2 lbf.in)
		24 V power supply - X01/X02	M20 × 1.5	2	12 Nm (106.2 lbf.in)
		Digital inputs/outputs - X07/X08/X05	M16 × 1.5	3	10 Nm (88.5 lbf.in)

### 3.4.4 Connector cover kit

#### Connector cover kit for G115D converter with daisy chain


For the connector variant of the G115D converter with daisy chain, if you don't use daisy chain connection, cover the unused connectors with the optional connector cover kit to maintain the IP rating of the system.

Article number	Illustration	Interface	Connector caps	Quantity
6SL3566-2GA00-0GA0		Line supply (OUT) - X3	Q4/2 connector sealing cap	1
		24 V power supply (OUT) - X02	7/8" connector sealing cap	1
			M12 L-code connector sealing cap	1

### 3.4.5 SINAMICS G120 Smart Access

The SINAMICS G120 Smart Access is a Wi-Fi based Web server module and an engineering tool. It has been designed for quick setup, parameterization, and diagnostics of the supported SINAMICS G120 converter or SINAMICS G115D converter.

**Article number:** 6SL3255-0AA00-5AA0

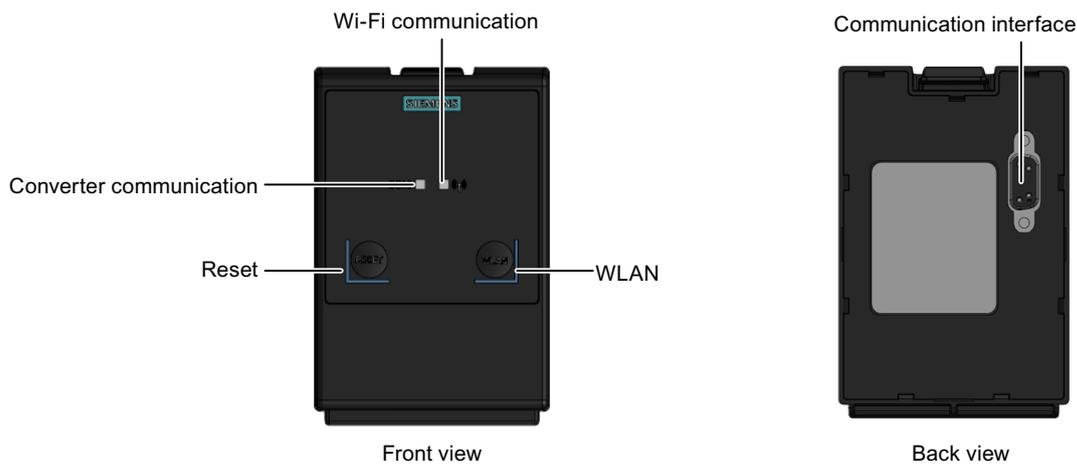

#### Further information

For more information about the SINAMICS G120 Smart Access, see the SINAMICS G120 Smart Access Operating Instructions.

 [Overview of the manuals \(Page 610\)](#)

### 3.4.6 SAM interface kit


#### Functionality

The SAM interface kit is used to connect the SINAMICS G120 Smart Access to the SINAMICS G115D converter, thus realizing Web-based access to the converter from a device connected to the G120 Smart Access.

**Article number:** 6SL3555-0XA00-0AA0



The SAM interface kit is designed with a rubber support and magnets, which allows you to easily mount the SINAMICS G120 Smart Access to the converter or remove it from the converter. The permissible operating temperature range for the SAM interface kit is from -10 °C to +60 °C. Vibration in operation fulfills Class 3M1 according to EN60721-3-3: 1995.

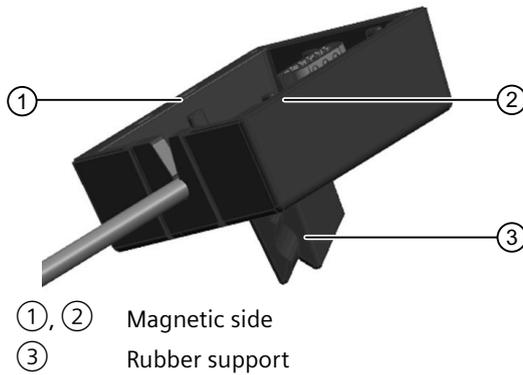

#### Scope of delivery

- SAM interface kit for the SINAMICS G115D converter
- Compact Installation Instructions in English, Chinese, and German

#### Further information

For more information about mounting the G120 Smart Access to the G115D converter via the optional SAM interface kit, see the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

# Mounting



## ⚠ WARNING

### Risk of burns and fire due to high temperatures

During operation and for a short time after switching the converter off, the surfaces reach temperatures that can inflict burns or start fires.

- Before attempting to touch the surfaces of the converter, ensure that enough time is given to allow the converter to cool down to a safe temperature to avoid personal injury.
- Remove any flammable materials from around the converter to reduce the risk of fire.

## NOTICE

### Converter damage due to misuse as a step or ledge

The converter is not designed to support a substantial weight. Substantial weight placed on the system could cause severe damage to the converter.

- Don't use the converter as a step or ledge.

## 4.1 Mounting the G115D Motor Mounted drive

### General instructions for installation

Observe the mounting instructions and maximum permissible vibration severity stated in the following chapter:



Installation notes (Page 457)


Note that the drive is delivered with the converter mounted on the geared motor.

### Mounting positions

The SINAMICS G115D Motor Mounted drive supports mounting positions M1 to M6. You mount the drive based on the desired mounting configuration for the geared motor.


The figure below shows the SINAMICS G115D converter with SIMOGEAR geared motor in mounting positions M1 to M6.

4.1 Mounting the G115D Motor Mounted drive

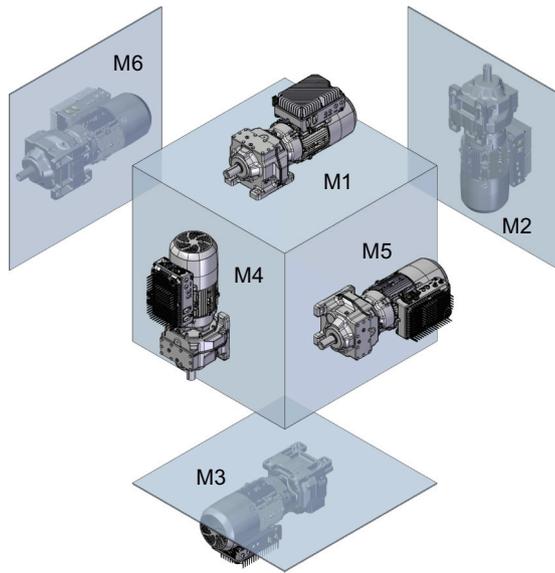

Mounting dimensions

All dimensions are specified in millimeters (inches).

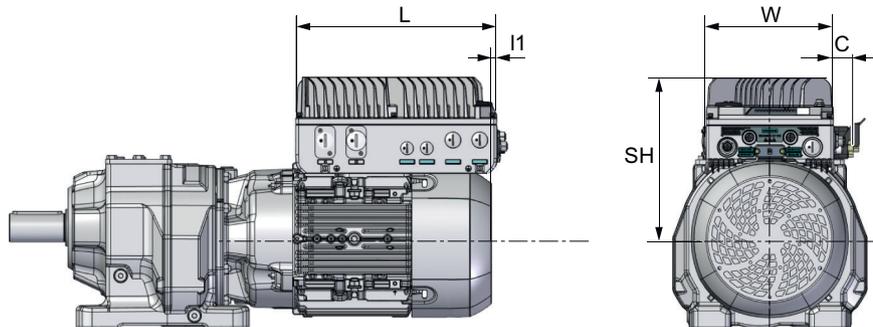


Converter frame size	Motor frame size	Length	Length	Width	Height	Additional width <sup>1)</sup>
		L	l1	W	SH	C
FSA	71	240 (9.4)	53.5 (2.11)	146 (5.7)	177.5 (7.0)	Connector variant: +30 (1.18)
	80		25 (0.98)		196 (7.7)	
	90		0.5 (0.02)		201 (7.9)	
FSB	90	285 (11.2)	27 (1.06)	180 (7.1)	206 (8.1)	Glanded variant and Q8/0 variant: +30 (1.18)
	100		5 (0.2)		217.5 (8.6)	
	112		-3 (-0.12)		228.5 (9.0)	
						Converter with 24 V PSU: +60 (2.36)

<sup>1)</sup> The glanded variant of the converter provides no cable gland when delivered. The dimension data of glanded variant applies to the drive installed with the optional glanded installation kit.

## Mounting clearance

Maintain a minimum clearance distance of 150 mm (5.9 in) from the converter to the wall.

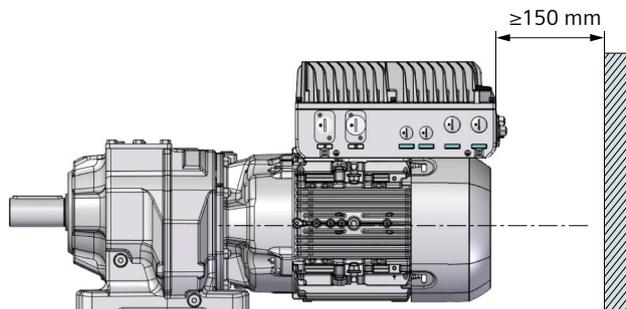

For mounting clearance distance around the motor, refer to the following chapter:

 Installation conditions for the motor (Page 473)

## Dimensions of the geared motor

For further information on the dimensions of the geared motors, refer to the following documentation:

- The relevant chapter in this manual  
 Additional information on the SIMOGEAR geared motor (Page 449)
- The relevant catalog  
 Catalog D 31.2 (<https://support.industry.siemens.com/cs/ww/en/view/109750324>)
- Drive Technology Configurator (DT Configurator)  
 DT Configurator (<http://www.siemens.com/dt-configurator>)  
 You can generate and download data sheets, 2D dimension drawings and 3D CAD models of the geared motors.

## 4.2 Mounting the G115D Wall Mounted drive


### Mounting the converter

You must mount the converter on a metal backplane or on a frame.

#### Mounting orientations

The converter supports the following mounting orientations: correct (✓); permissible with restrictions (!)

4.2 Mounting the G115D Wall Mounted drive

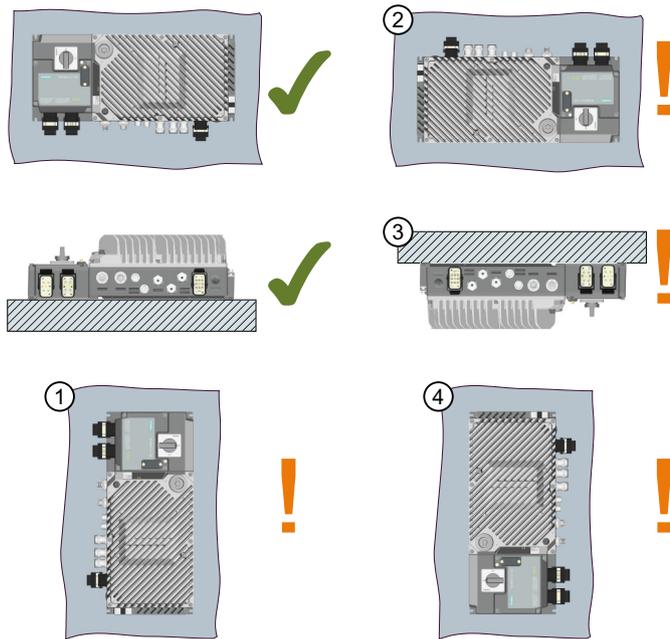

**Restrictions:**


For wall-mounted converter FSA and FSB ( $\leq 3$  kW), the permissible output current is reduced for mounting orientations ① to ④.

- ① Derating the output current to 80% of the rated converter current is necessary.
- ②③④ Derating the output current to 70% of the rated converter current is necessary.


**Mounting clearance**

To guarantee full performance under all conditions, the minimum clearance distances are as follows:

- Wiring side of the converter: 200 mm (7.9 in)  
Non-wiring side of the converter: 150 mm (5.9 in)

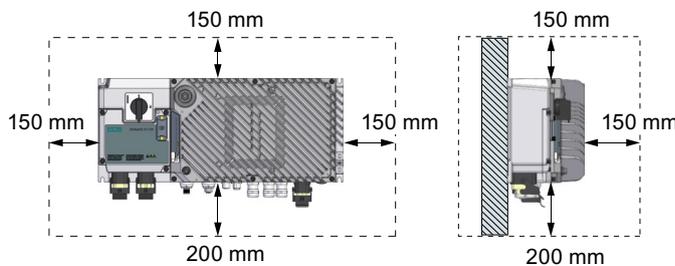


- Side-by-side: no clearance distance is required between the converters.

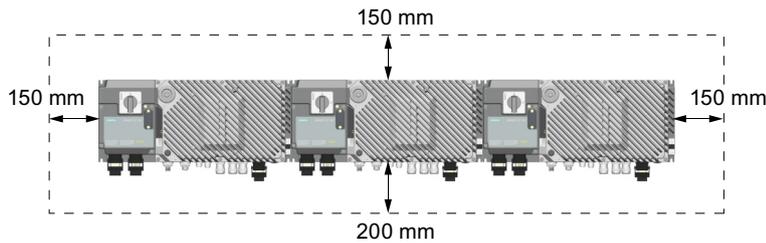

Performance and operation with reduced clearance distances require verification in the individual application.

**Mounting dimensions**

All dimensions are specified in millimeters (inches).

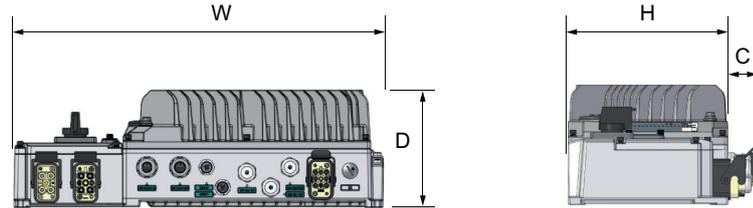


Frame size	Rated power	Width	Height	Depth	Additional height <sup>1)</sup>
		W	H	D	C
FSA	0.37 kW to 1.5 kW	380 (15.0)	156 (6.1)	129 (5.1)	Connector variant: +30 (1.18) Glanded variant and Q8/0 variant: +30 (1.18) Converter with 24 V PSU: +60 (2.36)
FSB	2.2 kW to 3 kW	425 (16.7)	180 (7.1)	134 (5.3)	
	4 kW	425 (16.7)	180 (7.1)	169 (6.7) <sup>2)</sup>	
FSC	5.5 kW to 7.5 kW	425 (16.7)	180 (7.1)	169 (6.7) <sup>2)</sup>	

<sup>1)</sup> The glanded variant of the converter provides no cable gland when delivered. The dimension data of glanded variant applies to the converter installed with the optional glanded installation kit.

<sup>2)</sup> For FSB (4 kW) and FSC, the depth D includes the depth of the integrated fan.

**Drill patterns**

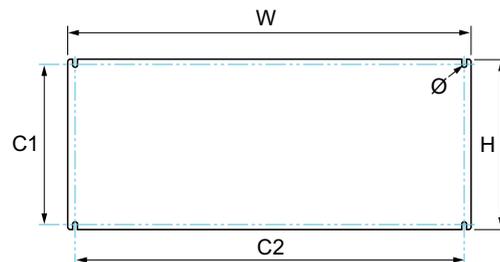

Frame size	Drilling dimensions - mm (in)			Fixings	Tightening torque
	C1	C2	Ø		
FSA	145 (5.7)	364.5 (14.4)	5.5 (0.2)	4 × M5 bolts, washers, nuts	2.5 Nm (22.1 lbf.in)
FSB/FSC	168 (6.6)	410 (16.1)	5.5 (0.2)		

**Mounting the motor**

The SINAMICS G115D wall-mounted converter supports SIMOGEAR geared motors, SIMOTICS motors, or third-party motors.

For detailed information on installation of a SIMOGEAR geared motor, refer to the following documentation:

- The relevant chapter in this manual
  -  Additional information on the SIMOGEAR geared motor (Page 449)
- The relevant catalog
  -  Catalog D 31.2 (<https://support.industry.siemens.com/cs/ww/en/view/109750324>)
  -  Catalog D 50.1 (<https://support.industry.siemens.com/cs/ww/en/view/109746934>)

## 4.3 Mounting the optional components

### 4.3.1 Mounting the external braking resistor

	<b>WARNING</b>
<b>Risk of fire due to improper installation</b>	
Resistor surfaces reach high temperature during operation. A braking resistor which is not properly mounted can cause components overheat with associated risk of fire.	
<ul style="list-style-type: none"> <li>• Mount the resistor on non-flammable and heat-resistant surfaces only.</li> <li>• Ensure that there are no flammable or combustible objects or materials close to the resistor.</li> </ul>	



	<b>CAUTION</b>
<b>Risk of burn due to high surface temperature</b>	
The braking resistor can reach a temperature of 300 °C in normal operation. Ratings given are absolute maximum and must not be exceeded. In the event of operation beyond specification or a fault, the resistor can reach a temperature of up to 600 °C. You can get burnt when touching the hot surface.	
<ul style="list-style-type: none"> <li>• Mount the resistor in such a way that it is not accessible and cannot be touched during operation.</li> <li>• Allow sufficient distance from nearby materials to keep them at an acceptable temperature.</li> <li>• Ensure that ventilation is provided.</li> </ul>	

## Mounting orientations

Mounting orientations: correct (✓); incorrect (✗)

- 6SL3501-1BE32-0AA0; 6SL3501-1BE32-4AA0;  
6SL3501-1BE32-0BA0; 6SL3501-1BE32-4BA0

Mount the braking resistor on a flat surface which has a minimum thickness of 2 mm and a minimum size of the braking resistor outline dimensions.

Wall mounting




Desktop mounting




- 6SL3501-1BE34-8AA0; 6SL3501-1BE36-0BA0;  
6SL3501-1BE36-0CA0; 6SL3501-1BE41-2CA0


Wall mounting

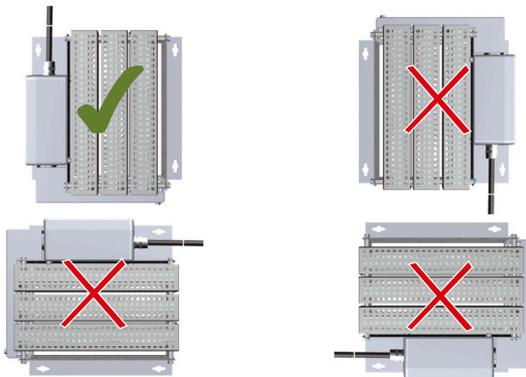

Desktop mounting

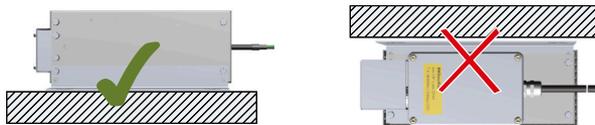

### Outline dimensions and drill pattern

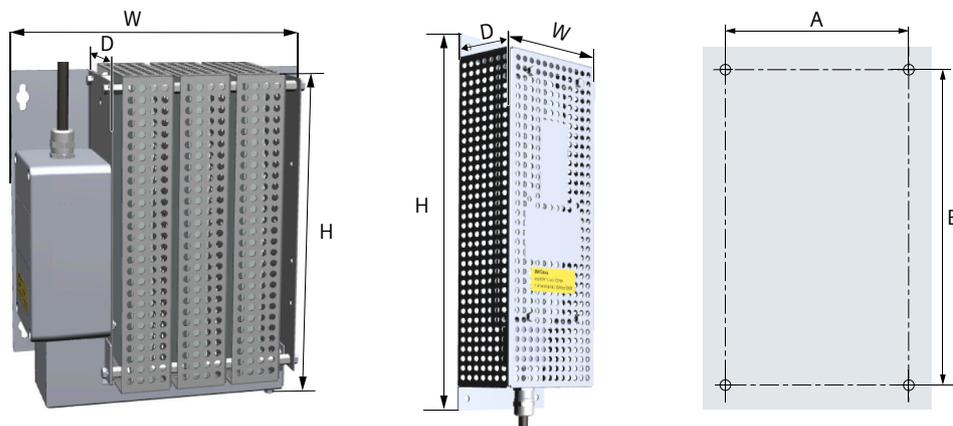

Article number	Dimensions (mm/inch)					Weight (kg/lb.)
	H	W	D	A	B	
6SL3501-1BE32-0AA0	320 (12.6)	106 (4.2)	64 (2.5)	86 (3.4)	300 (11.8)	1.56 (3.43)
6SL3501-1BE32-4AA0						2.10 (4.62)
6SL3501-1BE34-8AA0	245 (9.6)	216 (8.5)	96.5 (3.8)	197 (7.8)	176 (6.9)	3.89 (8.56)
6SL3501-1BE32-0BA0	320 (12.6)	106 (4.2)	64 (2.5)	86 (3.4)	300 (11.8)	1.56 (3.43)
6SL3501-1BE32-4BA0						2.10 (4.62)
6SL3501-1BE36-0BA0	245 (9.6)	227 (8.9)	96.5 (3.8)	208 (8.2)	176 (6.9)	3.42 (7.52)
6SL3501-1BE36-0CA0						
6SL3501-1BE41-2CA0	245 (9.6)	349 (13.7)	96.5 (3.8)	330 (13.0)	176 (6.9)	5.47 (12.03)

	Fastening	Tightening torque
Fixing to the mounting surface	4 x M4 screws, nuts, washers	2.5 Nm (22.1 lbf.in)

#### 4.3.2 Mounting the SINAMICS G120 Smart Access

To mount the SINAMICS G120 Smart Access to the G115D converter, you must use the optional SAM interface kit (Page 42).




## Mounting

1. Mount the SAM interface kit to the SINAMICS G120 Smart Access and fix the two tightening screws to the prescribed torque (0.8 Nm, 0.6 lbf.in) by using a flat-bit screwdriver or a cross-tip screwdriver.



2. Remove the commissioning cover (③) from the G115D converter by using an S12 hex nut driver.

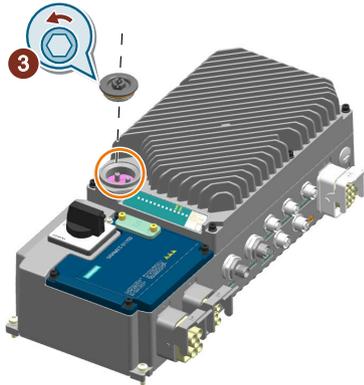

---


### Note

Reattach the commissioning cover with a tightening torque of 2.5 Nm (22.1 lbf.in).


---

3. Choose one of the following three methods according to the applicable converter mounting position to connect the G120 Smart Access fitted with the SAM interface kit to the converter:


- Method 1 (applicable to all permissible mounting positions)  
Attach the G120 Smart Access to a metallic plate via one magnetic side of the SAM interface kit and then connect the SAM interface kit cable to the USB interface on the converter.

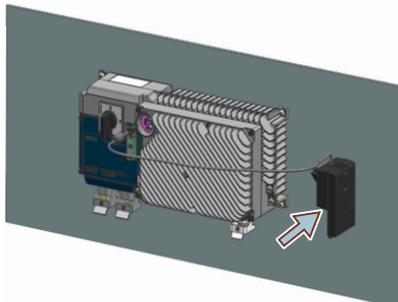

- Method 2 (applicable only to the mounting position with the heatsink facing upwards)  
Snap the rubber support of the SAM interface kit onto the converter heatsink and then connect the SAM interface kit cable to the USB interface on the converter.

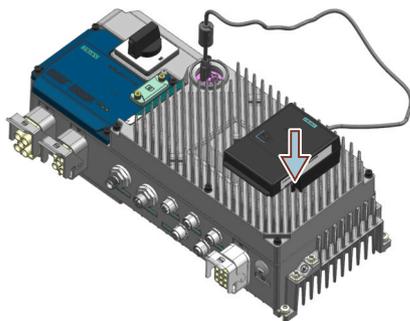

- Method 3 (applicable only to the mounting position with the cable outlets facing downwards)  
Snap the rubber support of the SAM interface kit onto the PROFINET cable or the I/O cable connected to the converter and then connect the SAM interface kit cable to the USB interface on the converter.

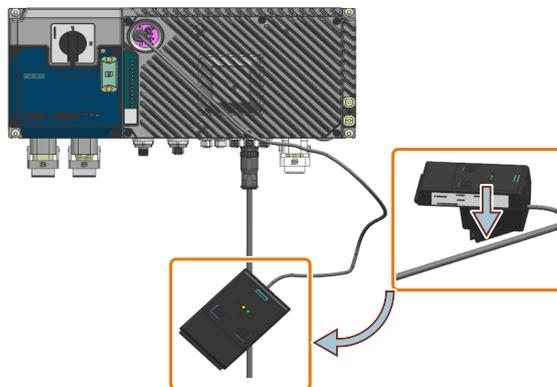

## Further information

For more information about the SINAMICS G120 Smart Access and the SAM interface kit, see SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

## Wiring

### 5.1 EMC installation guidelines

#### 5.1.1 Connections and interference suppression

Set up reliable connections and make sure that all connections cannot be interrupted. Screwed connections on painted or anodized metal components must be made either by means of special contact washers, which penetrate the isolating surface and establish a metallically conductive contact, or by removing the isolating surface on the contact points.

Contactors coils, relays and solenoid valves must have interference suppressors to reduce high-frequency radiation when the contacts are opened (RC elements or varistors for AC current operated coils, and freewheeling diodes for DC current-operated coils). The interference suppressors must be connected directly on each coil.

#### 5.1.2 Basic EMC rules

##### Measures to limit Electromagnetic Interference (EMI)

In the following list are the necessary measures that must be taken to ensure the correct installation of the converter within a system, which should minimize the effects of EMI.

##### Cables

- Keep all cable lengths to the minimum possible length; avoid excessive cable lengths.
- Route always signal and data cables, as well as their associated equipotential bonding cables, in parallel and with as short a distance as possible.
- Do not route signal and data cables parallel to the line supply and motor cables.
- Signal and data cables should not cross the line supply and motor cables; if crossing is necessary, they should cross at an angle of 90 °.
- Shield signal and data cables.
- Route particularly sensitive signal cables, such as setpoint and actual value cables, with optimum shield bonding at both ends and without any interruptions of the shield.
- Ground spare wires for signal and data cables at both ends.

## 5.1 EMC installation guidelines

- Route all power cables (line supply and motor cables) separately from signal and data cables. The minimum distance should be approximately 25 cm.  
Exception: hybrid motor cables with integrated shielded temperature sensor and brake control wires are allowed.
- For the wall-mounted converters, shield the motor cable between converter and motor. We recommend shielded cables with symmetrical three-phase conductors (L1, L2, and L3) and an integrated, 3-wire, and symmetrically arranged PE conductor.

### Cable shields

- Use shielded cables with finely stranded braided shields. Foil shields are not suitable since they are much less effective.
- Connect shields to the grounded housings at both ends with excellent electrical conductivity and a large contact area.
- Bond the cable shields to the plug connectors of the converter.
- Do not interrupt cable shields by intermediate terminals.
- For power cables as well as signal and data cables, the cable shields should be connected by means of suitable EMC glands. The cable shields must be connected to the shield bonding options for cables and the unit housing respectively with excellent electrical conductivity and a large contact area.
- Use only metallic or metallized connector housings for shielded data cables.


### 5.1.3 Equipotential bonding

Equipotential bonding within the drive system has to be established by connecting all electrical and mechanical drive components (transformer, motor and driven machine) to the grounding system. These connections are established by means of standard heavy-power PE cables, which do not need to have any special high-frequency properties.

In addition to these connections, the converter (as the source of the high-frequency interference) and all other components in each drive system (motor and driven machine) must be interconnected with respect to a high-frequency point of view. For this purpose cables with good high-frequency properties must be used.

## Grounding and high-frequency equipotential bonding measures

The following figure illustrates all grounding and high-frequency equipotential bonding measures using an example of the SINAMICS G115D Motor Mounted drive.

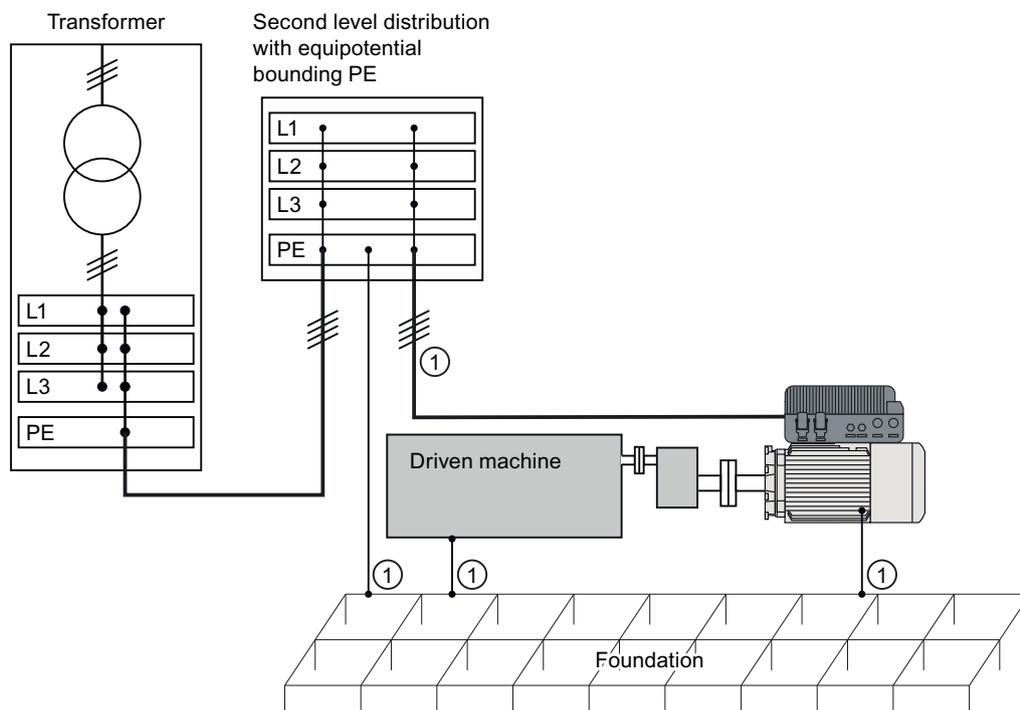

① Conventional grounding system without special high-frequency properties

The ground connections ① represent the conventional grounding system for the drive components. They are made with standard, heavy-power PE conductors without special high-frequency properties and ensure low frequency equipotential bonding as well as protection against injury.

The line supply cable of the converter can be unshielded. The converter has to be grounded by this cable.

The converter enclosure provides high-frequency equipotential bonding between the converter and the motor.


The connection provides solid bonding for high-frequency currents between the metal body of the converter and the unpainted metal mounting frame. This connection should be made with short, finely stranded, braided copper wires.

### Additional measures

Finely stranded, braided copper cables have to be routed in parallel with the cable shields in the following cases:

- Old installations with already existing unshielded cables
- Cables with poor high-frequency properties
- Installations with bad grounding systems

The connections in the following figure provide a solid, high-frequency bonding between the driven machine and the converter.

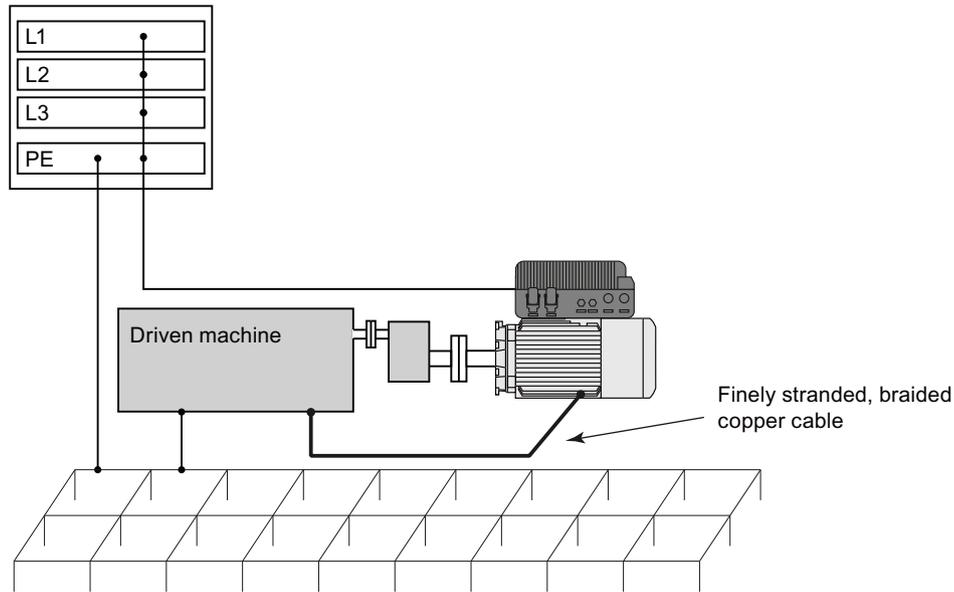

**Further information**

Additional information about EMC-compliant installation is available on the Internet:

 EMC installation guideline (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)

## 5.2 Permissible line supplies

**Note**


**Fault protection in case of insulation failure for the motor circuit**

The electronic overcurrent trip of the converter complies with the requirements laid down in IEC 60364-4-41:2005/AMD1:2017 Section 411 and Appendix D for protection against electric shock.

- Observe the installation specifications provided in this manual.
- Observe the applicable installation standards.
- Ensure the continuity of the protective conductor.

### 5.2.1 TN line system

Example: Separate transfer of N and PE, grounded neutral point

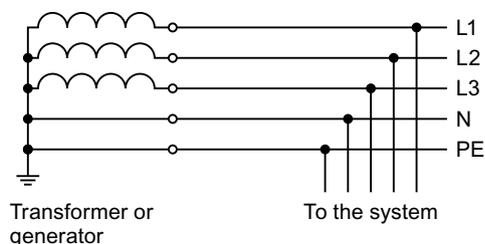

A TN system transfers the PE protective conductor to the installed plant or system using a cable.

The TN system can transfer the neutral conductor N and the PE protective conductor either separately or combined.

Generally, in a TN system the neutral point is grounded. There are versions of a TN system with a grounded line conductor, e.g. with grounded L1.

G115D drives can only be operated in a line system with grounded neutral point and are not suitable for corner-grounded networks.


#### Converter operated on a TN system

Converter	Line supply with grounded neutral		
	A	B	C
Frame size	A	B	C
Integrated line filter C2	✓	✓	✓

✓ Operation permissible

### 5.2.2 TT line system

Example: Transfer of N, grounded neutral point

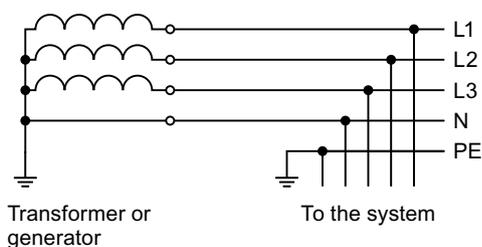

In a TT system, the transformer grounding and the installation grounding are independent of one another.

There are TT supplies where the neutral conductor N is either transferred – or not.


**Converter operated on a TT system**

Converter	Line supply with grounded neutral		
	A	B	C
Frame size	A	B	C
Integrated line filter C2	✓	✓	✓

✓ Operation permissible

**5.2.3 IT line system**

Example: Transfer of N, impedance with respect to PE protective conductor

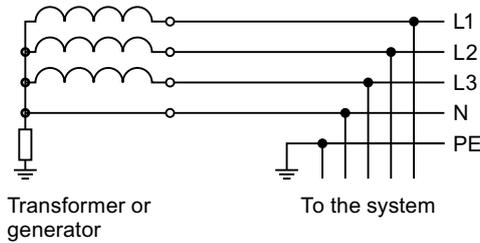

In an IT system, all of the conductors are insulated with respect to the PE protective conductor – or connected to the PE protective conductor through an impedance.

There are IT systems with and without transfer of the neutral conductor N.

**Converter operated on an IT system**

Converter	Line supply with grounded neutral		
	A	B	C
Frame size	A	B	C
Integrated line filter C2	✓ <sup>1)</sup>	✓ <sup>1)</sup>	✓ <sup>2)</sup>

✓<sup>1)</sup> Operation permissible once the functional grounding screw(s) has been removed

✓<sup>2)</sup> Operation permissible once the functional grounding screws and cable have been removed  
 If the functional grounding screw or cable has been removed, the converter no longer fulfills the requirements of class C2.

If you wish to use the converter in an IT line system, you must disconnect the capacitor with earth by removing the functional grounding connections from the converter.

## Removing functional grounding connections from the converter

### Precondition

Switch off the converter power supply before removing the functional grounding.



### ⚠ WARNING


#### Electric shock as a result of a residual charge in power components

After the power supply has been switched off, it takes up to five minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Therefore, touching the converter immediately after powering off can result in electric shock due to residual charge in the power components.


- Check the voltage at the converter connections before you remove the functional grounding.

### Procedure


1. Release the retaining screws (6 x M4) for the Electronic Module by using a 3 mm allen key, and then remove the module.

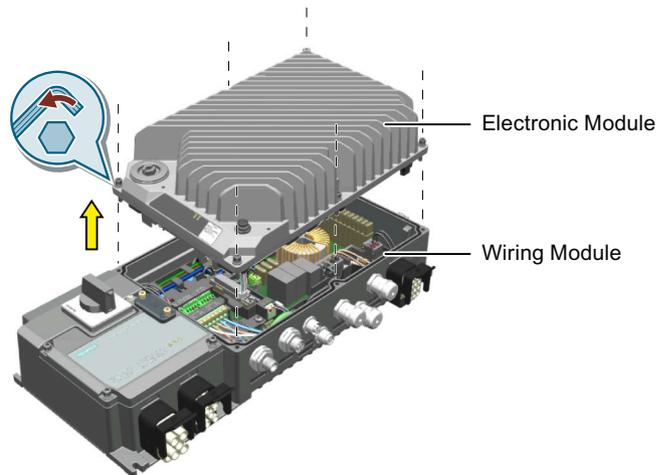


2. Remove the functional grounding screw marked with the  symbol from the back side of the Electronic Module.

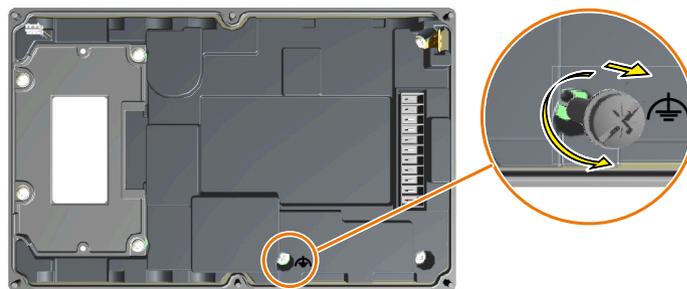

3. If you are using a wall-mounted converter, in addition to removing the screw from the Electronic Module as above, remove the grounding screw and the grounding cable from the Wiring Module.
  - For the wall-mounted converter FSA/FSB, first release the four retaining screws to remove the blanking cover or the local/remote control (LRC) panel from the Wiring Module (①). Then remove the functional grounding screw marked with the  $\perp$  symbol (②). After that, re-attach the blanking cover or the LRC panel with a tightening torque of 2.2 Nm (19.5 lbf.in) (③④) to make sure that the converter and the motor can work properly.

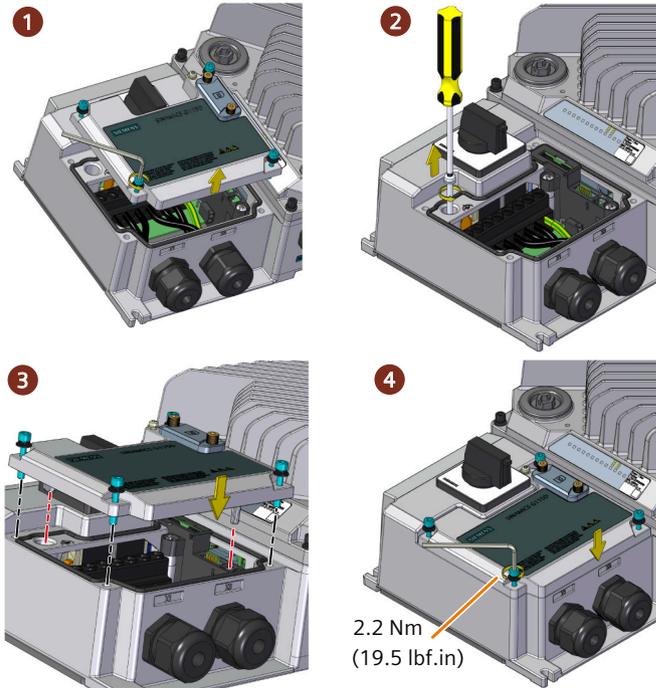

- For the wall-mounted converter FSC, in addition to removing the screw from the Wiring Module, also remove the functional grounding cable from the Wiring Module (⑤⑥).

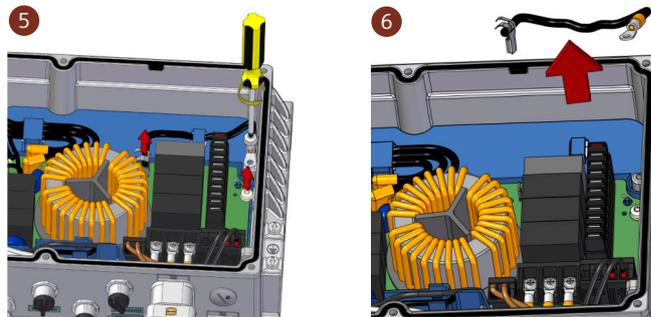

4. Re-attach the Electronic Module with a tightening torque of 2.5 Nm (22.1 lbf.in).

You have removed the functional grounding from the converter.



## 5.3 Requirements for the protective conductor

A high leakage current flows through the protective conductor in converter operation. The protective conductor of the converter must not be interrupted for safe touch protection in converter operation.

This primarily results in requirements for the minimum conductor cross-section of the protective conductor.

No restriction applies to the length of the protective conductor for touch protection. However, short protective conductors are advantageous for EMC-compliant installation.



### ⚠ WARNING


#### Electric shock due to interrupted protective conductor

The drive components conduct a high leakage current via the protective conductor. Touching conductive parts when the protective conductor is interrupted can result in death or serious injury.

- Comply with the requirements for the protective conductor.

### Dimensioning the protective conductor

The figure below takes the SINAMICS G115D Wall Mounted drive as an example.

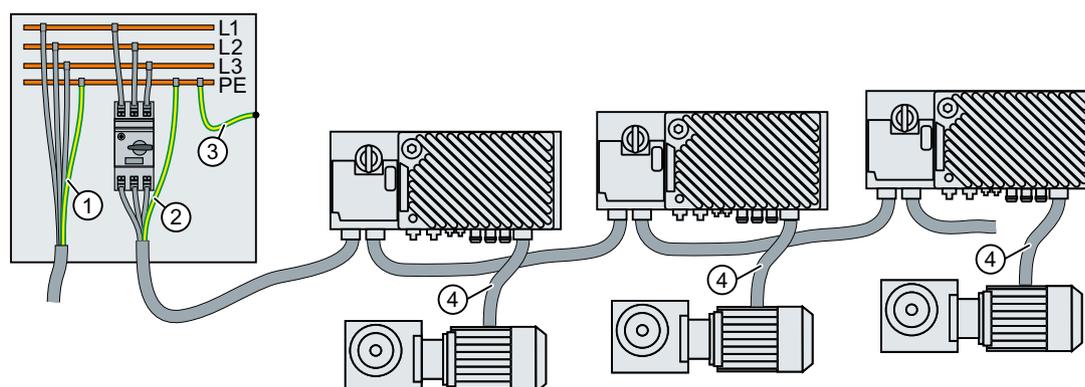

- ① Protective conductor for mains supply cables
- ② Protective conductor for converter line supply cables
- ③ Protective conductor between PE and the control cabinet
- ④ Protective conductor for motor cables

The minimum cross-section of the protective conductor ① ... ③ depends on the cross-section of the mains supply cable and the minimum cross-section of the protective conductor ④ depends on the cross-section of the motor cable:

- Mains supply or motor cable  $\leq 16 \text{ mm}^2$   
 $\Rightarrow$  Minimum cross-section of the protective conductor = cross-section of the mains supply or motor cable

5.5 Operation with residual current protective device (RCD)

Additional requirements placed on the protective conductor ①:

- For permanent connection, the protective conductor must fulfill at least one of the following conditions:
  - The protective conductor is routed so that it is protected against damage along its complete length.  
(Cables routed inside control cabinets or enclosed machine housings are considered to be adequately protected against mechanical damage.)
  - As a conductor of a multi-conductor cable, the protective conductor has a cross-section  $\geq 2.5 \text{ mm}^2 \text{ Cu}$ .
  - For an individual conductor, the protective conductor has a cross-section  $\geq 10 \text{ mm}^2 \text{ Cu}$ .
  - The protective conductor consists of two individual conductors with the same cross-section.
- When connecting a multi-conductor cable using an industrial plug connector according to EN 60309, the protective conductor must have a cross-section of  $\geq 2.5 \text{ mm}^2 \text{ Cu}$ .

## 5.4 Requirements for branch circuit protection

### Requirements for UL-compliant installation

The integral solid-state short-circuit protection does not provide branch circuit protection. Branch circuit protection must be provided in accordance with the National Electrical Code and any additional local codes.

## 5.5 Operation with residual current protective device (RCD)



 <b>WARNING</b>
<b>Fire or electric shock due to unsuitable residual-current protective devices</b>
The converter may create a current through the protective conductor. The current through the protective conductor can cause the residual current device (RCD) or residual current monitor (RCM) to incorrectly trip (nuisance trip). In the case of a ground fault, the fault current can contain a DC component, which prevents the RCD or RCM from tripping, with the risk of subsequent fire or electric shock.
<ul style="list-style-type: none"><li>• Use the protection and monitoring devices recommended in the documentation.</li></ul>

### Protection and monitoring equipment

To provide protection against short-circuit, use the recommended overcurrent protective devices (fuses, circuit breakers etc.).

 Branch protection and short-circuit strength according to UL and IEC (<https://support.industry.siemens.com/cs/ww/en/ps/27867>)

If the earth fault loop impedance of the line supply at the infeed point is too high to ensure that the overcurrent protective device disconnects within the stipulated time in the case of insulation failure (ground fault, fault to frame), then you must use additional residual current protective devices RCD, type B.

In order that an RCD does not unnecessarily trip as a result of operational leakage currents, the following preconditions must be fulfilled:

- The neutral point of the line supply is grounded.
- A dedicated RCD is used for each converter.
- Use a universal current-sensitive residual current protective device (RCD, RCM, ELCB or RCCB), type B, for example, Siemens SIQUENCE RCCB. Connect the RCCB in series with the overcurrent protective devices.
- Rated residual current is 300 mA.
- The motor cables are maximum 15 m (49 ft) and are shielded. Additional information about motor cables:

 Maximum permissible cable length (Page 74)

## 5.6 Forming DC link capacitors


### Introduction

You have to reform the DC link capacitors if the converter/Electronic Module has been stored for more than one year. Non-formed DC link capacitors can damage the converter in operation.

### Precondition

The converter/Electronic Module has not yet been used, and according to the production date it was made over a year ago.

The production date is coded in the 3rd and 4th digit of the serial number. You may find the serial number easily on the service information label at the front of the Electronic Module.

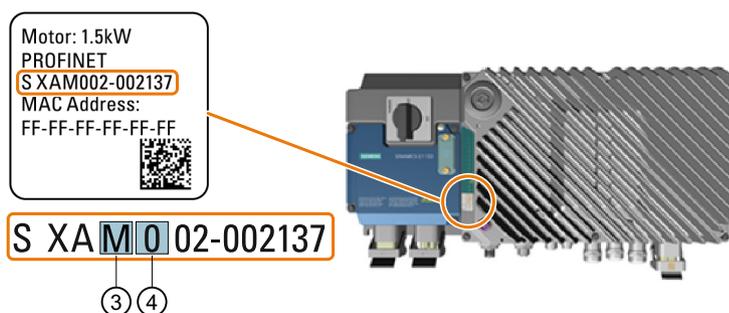

### Production year and month


- Example: Serial number S XAM002-002137 → Production date October 2020

Digit ③	Production year	Digit ④	Production month
M	2020	1 ... 9	January ... September
N	2021	0	October
P	2022	N	November
R	2023	D	December
...	...		

**Function description**


**Procedure**

You form the DC link capacitors by supplying the converter with a line voltage of  $\leq 100\%$  of the rated voltage for a defined time.

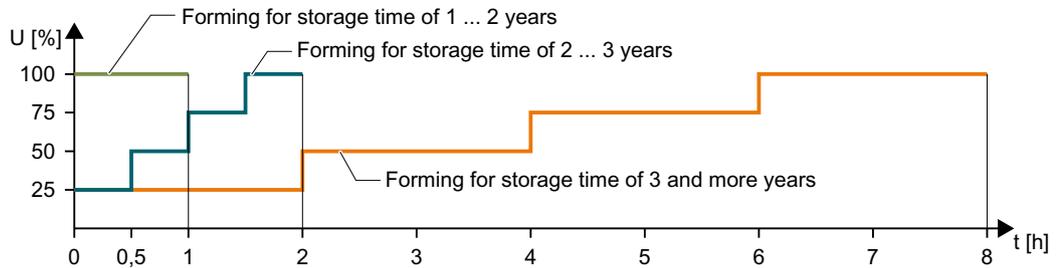

**5.7 Overview of the converter interfaces**


A G115D converter consists of an Electronic Module and a Wiring Module.

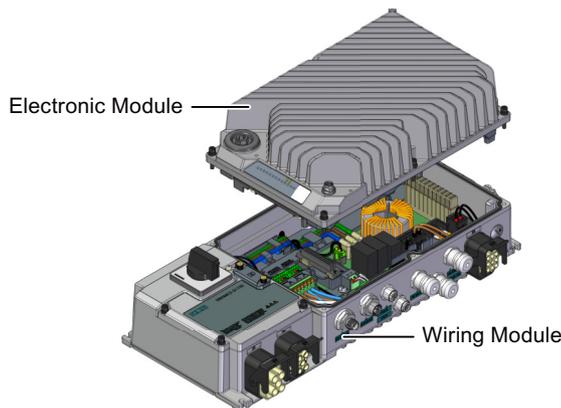

The Electronic Module is available in PROFINET variant, AS-i variant, and I/O Control (without fieldbus communication) variant. The Wiring Module is available in glanded variant and connector variant.

Depending on the variant ordered, the converter is equipped with plug-in sockets and/or blanking caps (for wiring with cable glands).

For the connector variant, the converter is all wired up internally when delivered and all that is required is the external wiring of the system. For the glanded variant, make sure you wire the terminals and route the cables inside the Wiring Module and fix with the cable glands.

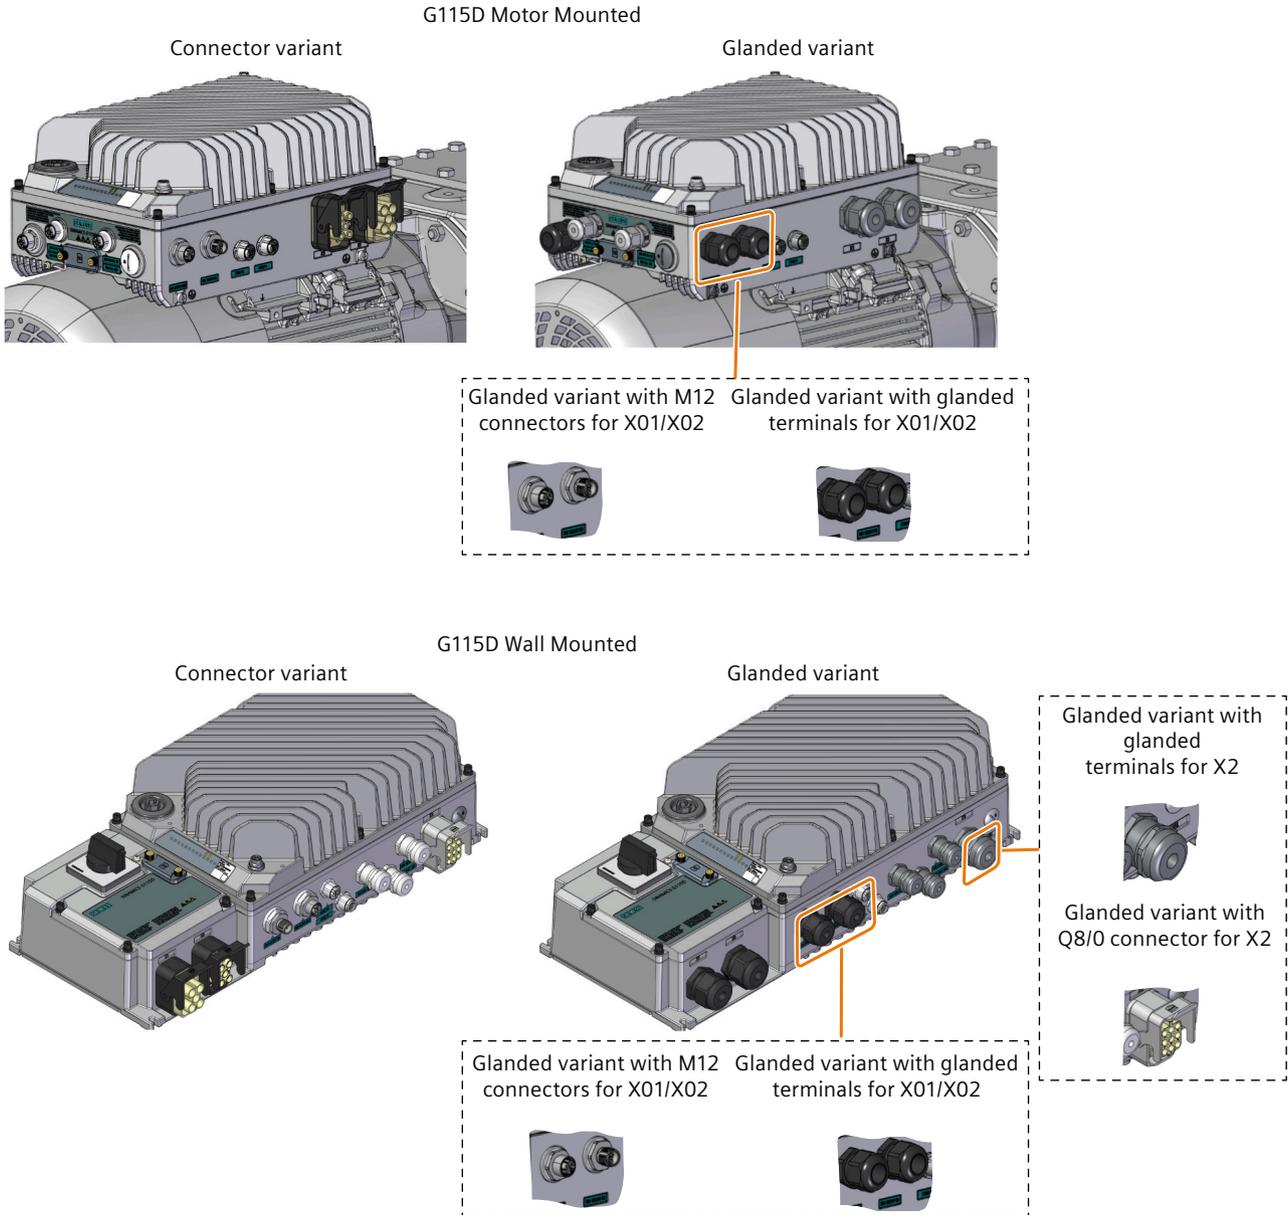



Note that the converters of glanded variant provide no cable glands but blanking caps at delivery for all glanded interfaces.

### Connection interface overview

The locations of the converter interfaces may vary depending on the variant ordered.

**Motor-mounted converter**

The figure below shows an example of PROFINET variant of the motor-mounted converter with plug-in sockets:

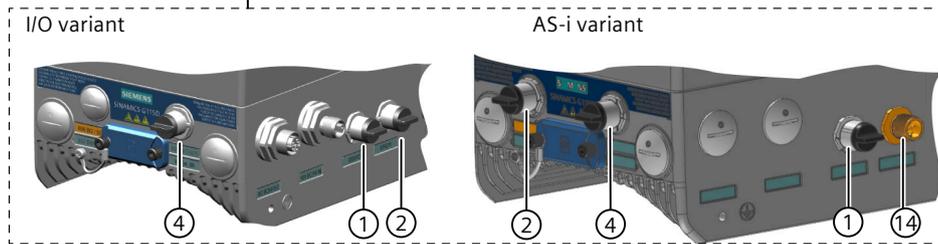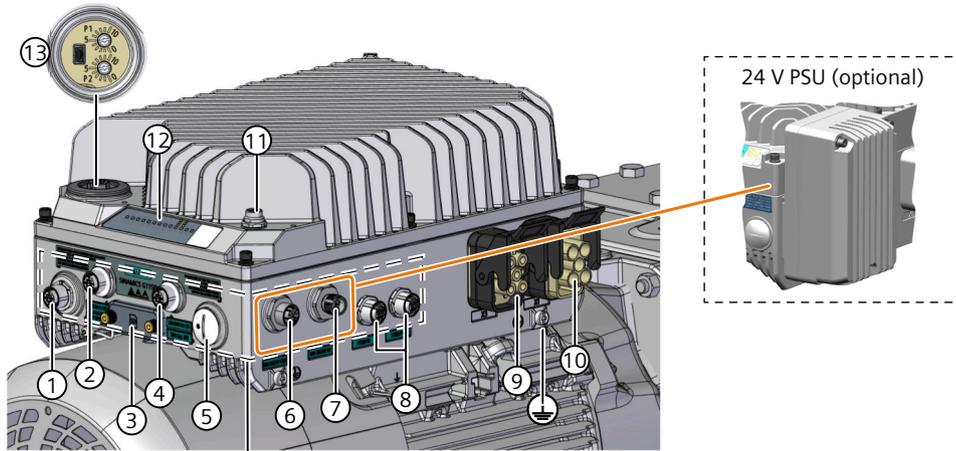


- ① Digital inputs DI 0 and DI 1 - X07
- ② Digital inputs DI 2 and DI 3 - X08
- ③ Memory card interface
- ④ Bidirectional digital inputs/outputs DIO 24 and DIO 25 - X05
- ⑤ External braking resistor interface - X4
- ⑥ 24 V DC power supply interface (OUT) - X02 <sup>1)</sup>
- ⑦ 24 V DC power supply interface (IN) - X01 <sup>1)</sup>
- ⊕ Protective earth on the converter housing
- ⑧ PROFINET communication - X150 P1 and P2 (for PROFINET variant only)
- ⑨ Line supply interface (OUT) - X3
- ⑩ Line supply interface (IN) - X1
- ⑪ Fan unit connector (reserved)
- ⑫ Status LED
- ⑬ Commissioning interface, including a mini-USB interface and two electromechanical potentiometers P1/P2
- ⑭ AS-i communication and auxiliary power - X03 (for AS-i variant only)

<sup>1)</sup> Not available on the AS-I variant

**Wall-mounted converter**

The figure below shows an example of PROFINET variant of the wall-mounted converter with plug-in sockets:

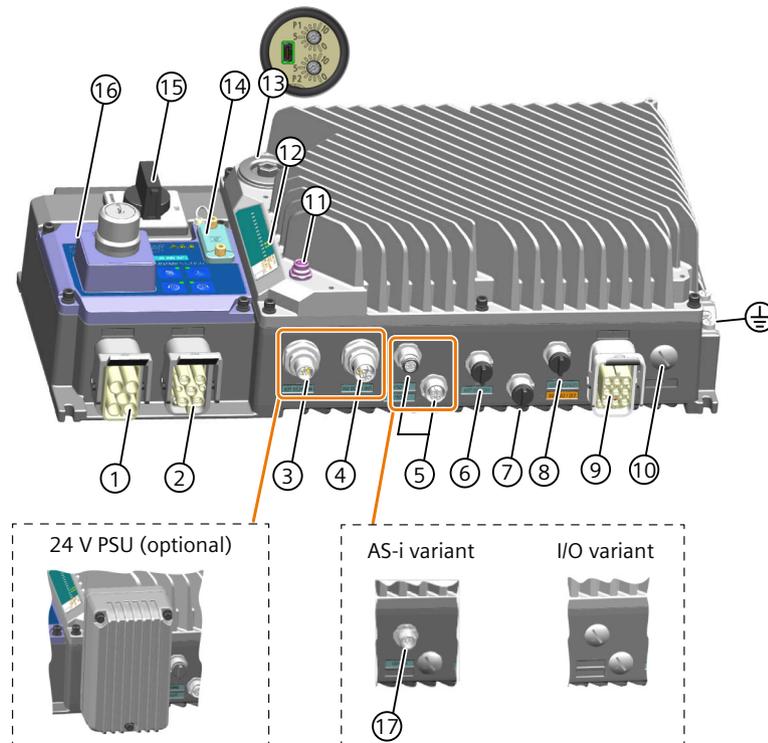

- |   |  |
|---|--|
| ① Line supply interface (IN) - X1                                     | ⑩ External braking resistor interface - X4   |
| ② Line supply interface (OUT) - X3                                    | ⑪ Fan unit connector <sup>2)</sup>   |
| ③ 24 V DC power supply interface (IN) - X01 <sup>4)</sup>             | ⑫ Status LED   |
| ④ 24 V DC power supply interface (OUT) - X02 <sup>4)</sup>            | ⑬ Commissioning interface, including a mini-USB interface and two electromechanical potentiometers P1/P2 |
| ⑤ PROFINET communication - X150 P1 and P2 (for PROFINET variant only) | ⑭ Memory card interface  |
| ⑥ Digital inputs DI 0 and DI 1 - X07                                  | ⑮ Repair switch <sup>1)3)</sup>  |
| ⑦ Digital inputs DI 2 and DI 3 - X08                                  | ⑯ Local/remote control panel <sup>1)3)</sup>   |
| ⑧ Bidirectional digital inputs/outputs DIO 24 and DIO 25 - X05        | ⑰ AS-i communication and auxiliary power - X03 (for AS-i variant only)                                   |
| ⑨ Motor power interface - X2 <sup>1)</sup>                            | ⊥ Protective earth on the converter housing  |

<sup>1)</sup> Available on the wall-mounted converter only.

<sup>2)</sup> The fan connector is designed for use in the wall-mounted converter FSB (4 kW)/FSC.

<sup>3)</sup> Optionally available on the wall-mounted converter only.

<sup>4)</sup> Not available on the AS-i variant.

### Note

The electromechanical potentiometers, the repair switch, and the local/remote control panel on the converter do not provide protection against unauthorized access. You must take appropriate measures to protect the converter against unauthorized operation or changes to the settings.

## Terminal layout of the Wiring Module

If you use the glanded variant of the converter, you must wire all the necessary terminals inside the Wiring Module.

<b>NOTICE</b>
<b>Device damage due to alteration to the factory connections</b>
For the motor-mounted converter, the motor terminals inside the Wiring Module are already wired up in the factory. Any alteration to the factory connections can result in device malfunctions or damage.
<ul style="list-style-type: none"><li>Do not alter the motor connections of the motor-mounted converter unless otherwise explicitly instructed.</li></ul>




The figures below give an overview of the terminals on the motor-mounted converter and the wall-mounted converter respectively.

Note that the converters of glanded variant provide no cable glands but blanking caps at delivery for all glanded interfaces.

Applicable glanded installation kits are available as optional components and can be ordered with article numbers. For more information, refer to the following chapter:


 Glanded installation kit (Page 40)

## Motor-mounted converter

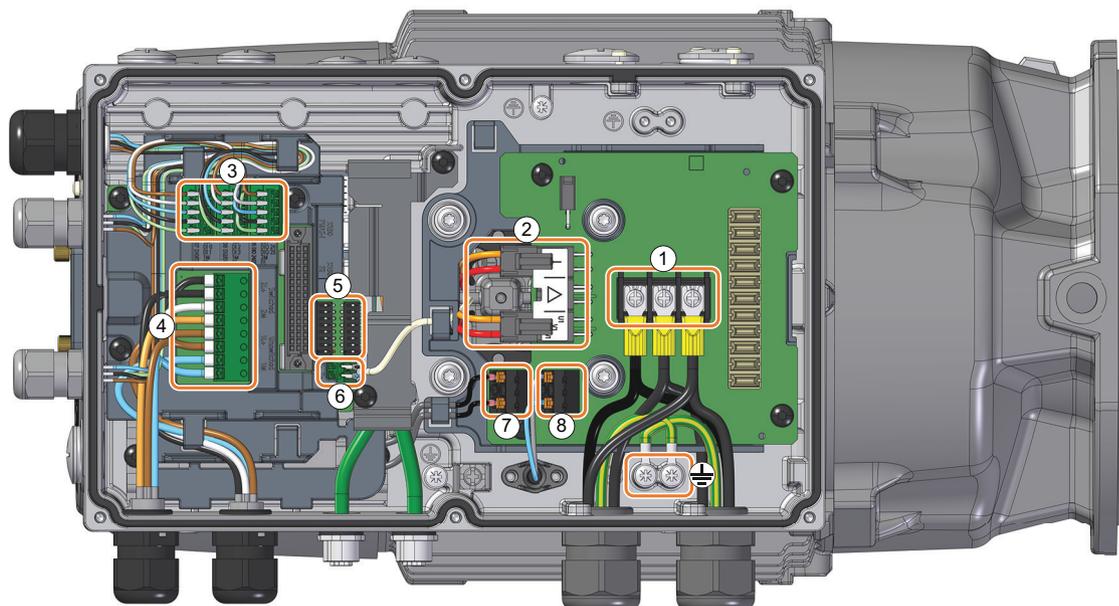

- |   |   |   |   |
|---|---|---|---|
| ① | Line supply terminals - L1, L2, L3                                  | ⑤ | DIP switches - DIP1, DIP2                   |
| ② | Motor power terminals - U, V, W                                     | ⑥ | Motor temperature sensor terminals - T+, T- |
| ③ | Digital inputs/outputs terminals - DIO~D13, DIO24, DIO25            | ⑦ | Braking resistor terminals - DCP, PB        |
| ④ | Switched/unswitched 24 V power supply terminals - 2L+, 2M / 1L+, 1M | ⑧ | 180 V DC EM brake terminals - EM+, EM-      |
| ⊕ | Protective earth  |   |   |

Wall-mounted converter

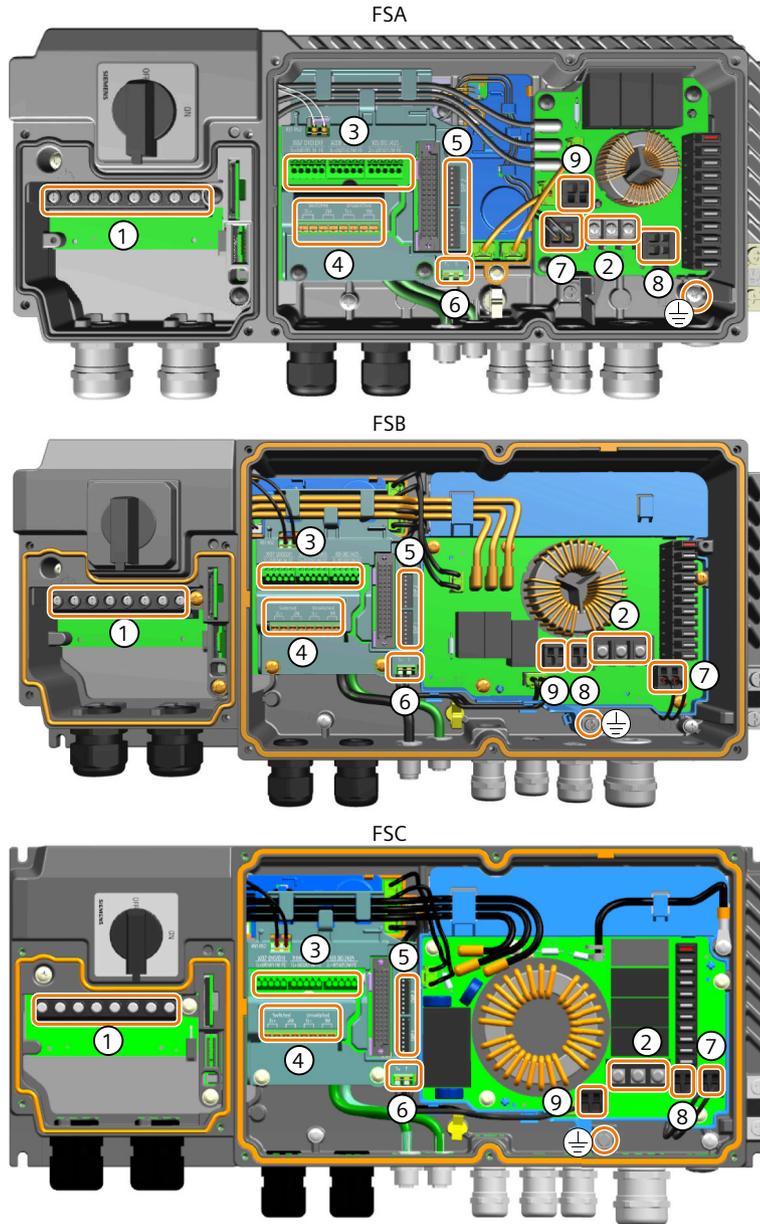

- |   |   |
|---|---|
| ① Line supply terminals - L1, L2, L3, PE                              | ⑥ Motor temperature sensor terminals - T+, T-                                   |
| ② Motor power terminals - U, V, W                                     | ⑦ Braking resistor terminals - DCP, PB  |
| ③ Digital inputs/outputs terminals - DIO~DI3, DIO24, DIO25            | ⑧ 180 V DC EM brake terminals - EM+, EM-  |
| ④ Switched/unswitched 24 V power supply terminals - 2L+, 2M / 1L+, 1M | ⑨ Optional 400 V AC EM brake terminals - EM1, EM2 (for G115D Wall Mounted only) |
| ⑤ DIP switches - DIP1, DIP2   | ⊥ Protective earth  |

## 5.8 Cables and connectors

### Note

#### NFPA compatibility

These devices are intended only for installation on industrial machines in accordance with the "Electrical Standard for Industrial Machinery" (NFPA79). Due to the nature of these devices they may not be suitable for installation in accordance with the "National Electrical Code" (NFPA70).

### Note

#### Mains supply impedance

To ensure trouble free operation we recommend the mains supply impedance is less than 4% ( $RSC > 25$ ).

### Cable, connectors and tools specifications

The detailed specifications for the cables, connectors and tools required to manufacture the necessary cables for the SINAMICS G115D are listed in the following documents and can be accessed using the relevant link:

 Supplementary products (cables, connectors and accessories) (<https://support.industry.siemens.com/cs/ww/en/view/65355810>)

The connections that are detailed in this section relate to the physical connections that exist on the converter. Information for the preparation and construction of the individual connectors have separate detailed instructions delivered with the ordered parts, directly from the manufacturers.

For IEC-compliant applications, use the cable with the temperature rating specified in the following table.

For UL and cUL-compliant applications, use only the copper wires with the permissible temperature of 75 °C.

Cable	Converter variant	Cable temperature rating			
		IEC-compliant		UL-compliant	
		No daisy chain	Daisy chain	No daisy chain	Daisy chain
Line cable	Glanded variant	75 °C	105 °C	75 °C	
	Connector variant		75 °C		
24 V cable	Glanded variant	75 °C	105 °C	75 °C	
	Connector variant		75 °C <sup>1)</sup>		

<sup>1)</sup> When the surrounding temperature exceeds 40 °C, cables with the temperature rating of 90 °C are required.

### Further information

For information about the QUICKON connectors required for the corresponding G115D converter variant, see Section "Connectors (Page 39)".

### 5.8.1 Maximum permissible cable length

#### Maximum length for motor cables

The permissible length of the motor cable depends on the quality of the motor power cable and the converter pulse frequency. The values specified below are applicable for high quality cables, such as CY100 or similar, and for the pulse frequencies set in the factory.

If you set other pulse frequencies, then you must ensure that the EMC category is complied with on the plant or system side.

Cable type	Shield	Max. length (for converter with integrated line filter)	
<b>Second environment, C2</b>			
Motor cable	Shielded, coverage $\geq 85\%$ , rated voltage 1000 V	Wall-mounted variant	15 m (49 ft.)

#### Maximum length for control cables

Cable type	Shield	Max. length
Digital input/output	Unshielded/shielded	30 m (98 ft.)
Encoder	Shielded, coverage $\geq 85\%$	30 m (98 ft.)

#### Maximum length for communication cables

Communications protocol	Transfer rate or cable type	Max. length
PROFINET	CAT5e network cable	100 m (328 ft.)
AS-i	Maximum length per segment	100 m (328 ft.)

The maximum length of any one segment on the AS-i network is normally 100 m; however, there are a number of devices that allow the overall length of AS-i network to be extended. For more information, see the FAQ at the following link:

AUTOHOTSPOT

#### See also

Current derating as a function of the pulse frequency (Page 442)

Derating of motor cable length based on pulse frequency and surrounding temperature (Page 443)

AS-i FAQ (<https://support.industry.siemens.com/cs/ww/en/view/21189154>)

## 5.8.2 Cable cross-sections and cable lugs

### Line supply terminals (L1/L2/L3/PE)

#### Connector variant

Frame size	Terminal	Cross-section for stranded conductor
<b>Motor-mounted converter</b>		
FSA	L1/L2/L3/PE	4 × 1.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 14 to AWG 12)
FSB		4 × 2.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 13 to AWG 12)
<b>Wall-mounted converter</b>		
FSA	L1/L2/L3/PE	4 × 1.5 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 14 to AWG 10)
FSB		4 × 2.5 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 13 to AWG 10)
FSC		4 × 4 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 11 to AWG 10)

#### Glanded variant

Frame size	Terminal	Cable lug	Cross-section for stranded conductor	Screw tightening torque	
<b>Motor-mounted converter</b>					
FSA	L1/L2/L3	Screw-type	Fork-type	4 × 1.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 14 to AWG 12)	1.75 Nm (15.5 lbf.in)
	PE		Ring-type		
FSB	L1/L2/L3		Fork-type	4 × 2.5 mm <sup>2</sup> to 4 mm <sup>2</sup>	
	PE		Ring-type	(AWG 13 to AWG 12)	
<b>Wall-mounted converter</b>					
FSA	L1/L2/L3/PE	Screw-type	Pin-type	4 × 1.5 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 14 to AWG 9)	Black terminals: 1.3 Nm (10.5 lbf.in) Green terminals: 1.7 Nm (15.0 lbf.in)
FSB				4 × 2.5 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 13 to AWG 9)	
FSC				4 × 4 mm <sup>2</sup> to 6 mm <sup>2</sup> (AWG 11 to AWG 9)	

### Motor power (U/V/W/PE), EM brake (EM+/EM-, EM1/EM2), and motor temperature sensor (T+/T-) terminals

#### Connector variant

Frame size	Terminal	Cross-section for stranded conductor
<b>Wall-mounted converter</b>		
FSA	U/V/W/PE	4 × 1.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 14 to AWG 12)
	EM+/EM-, EM1/EM2	2 × 0.75 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 18 to AWG 12)
	T+/T-	2 × 0.75 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (AWG 18 to AWG 16)
FSB	U/V/W/PE	4 × 2.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 13 to AWG 12)
	EM+/EM-	2 × 0.75 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 18 to AWG 12)
	T+/T-	2 × 0.75 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (AWG 18 to AWG 16)

Frame size	Terminal	Cross-section for stranded conductor
FSC	U/V/W/PE	4 × 4 mm <sup>2</sup> (AWG 12)
	EM+/EM-, EM1/EM2	2 × 0.75 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 18 to AWG 12)
	T+/T-	2 × 0.75 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (AWG 18 to AWG 16)

**Glanded variant**

Frame size	Terminal	Cable lug	Cross-section for stranded conductor	Screw tightening torque	
<b>Wall-mounted converter</b>					
FSA	U/V/W	Screw-type	Fork-type	4 × 2.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 13 to AWG 12)	1.0 Nm (8.9 lbf.in)
	PE		Ring-type		2.2 Nm (19.5 lbf.in)
FSB	U/V/W	Screw-type	Fork-type	4 × 2.5 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 13 to AWG 12)	1.0 Nm (8.9 lbf.in)
	PE		Ring-type		2.2 Nm (19.5 lbf.in)
FSC	U/V/W	Screw-type	Fork-type	4 × 4 mm <sup>2</sup> (AWG 12)	1.0 Nm (8.9 lbf.in)
	PE		Ring-type		2.2 Nm (19.5 lbf.in)

Frame size	Terminal	Cable lug	Cross-section for stranded conductor	Crimping length	
<b>Wall-mounted converter</b>					
FSA/FSB/FSC	EM+/EM-, EM1/EM2	Spring-type	Pin-type	2 × 0.75 mm <sup>2</sup> to 4 mm <sup>2</sup> (AWG 18 to AWG 12)	12 mm
	T+/T-			2 × 0.75 mm <sup>2</sup> to 1.5 mm <sup>2</sup> (AWG 18 to AWG 16)	10 mm

**24 V DC power supply terminals (2L+/2M/1L+/1M)**

**Connector variant**

Frame size	Cross-section for stranded conductor
FSA/FSB/FSC	4 × 0.75 mm <sup>2</sup> to 2.5 mm <sup>2</sup> (AWG 19 to AWG 13)

**Glanded variant**

Frame size	Terminal type	Cable lug	Cross-section for stranded conductor	Crimping length
FSA/FSB/FSC	Spring-type	Pin type	4 × 0.75 mm <sup>2</sup> to 2.5 mm <sup>2</sup> (AWG 19 to AWG 13)	10 mm

## Digital input and output terminals

Frame size	Terminal type	Cable lug	Cross-section for stranded conductor	Crimping length
FSA/FSB/FSC	Spring-type	Pin type	5 × 0.25 mm <sup>2</sup> to 0.34 mm <sup>2</sup> (AWG 24 to AWG 22)	8 mm

## See also


Connecting to the line supply using daisy chain (Page 80)

Connecting to the 24 V power supply using daisy chain (Page 88)

## Cable lugs


Use cable lugs with insulated end sleeves for cable connections. The maximum dimensions of the cable lugs are listed in the table below. These cable lugs are not to exceed these dimensions; otherwise, the mechanical fastening and adherence to the voltage distances are not guaranteed.

### Ring type cable lug

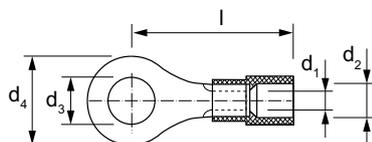

Screw/bolt	Cable cross-section (mm <sup>2</sup> )	d <sub>1</sub> (mm)	d <sub>2</sub> (mm)	d <sub>3</sub> (mm)	d <sub>4</sub> (mm)	l (mm)
M4	0.5 to 1.5	1.7	4.1	4.3	8	17.0
M4	1.5 to 2.5	2.3	4.5	4.3	8.5	17.8
M4	4 to 6	3.4	6.5	4.3	9.5	20.8


### Fork type cable lug

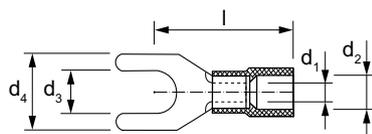

Screw/bolt	Cable cross-section (mm <sup>2</sup> )	d <sub>1</sub> (mm)	d <sub>2</sub> (mm)	d <sub>3</sub> (mm)	d <sub>4</sub> (mm)	l (mm)
M3.5	1.5 to 2.5	2.3	4.5	3.7	5.8	16.3
M3.5	4 to 6	3.4	6.5	3.7	7.2	20
M4	4 to 6	3.4	6.5	4.3	8.5	20

5.9 Connecting the line supply

Pin type cable lug

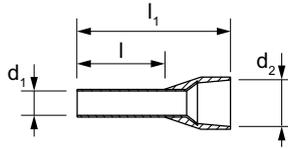

Cable cross-section (mm <sup>2</sup> )	d <sub>1</sub> (mm)	d <sub>2</sub> (mm)	l <sub>1</sub> (mm)	Crimping length l (mm)
0.75	1.3	2.8	16	10
			18	12
1	1.5	3	16.5	10
			18.5	12
1.5	1.8	3.4	18.5	12
2.5	2.3	4.2	17	10
			19	12
4	2.9	4.7	19.5	12

## 5.9 Connecting the line supply

### 5.9.1 Interface description - X1/X3

#### Connector variant

One of the three types of connectors (Q4/2, QUICKON, or MQ15) is provided depending on the variant that has been ordered. The QUICKON and MQ15 connectors are for FSA and FSB only. For the line connection in a daisy chain, only Q4/2 connectors are provided in pair when delivered.

#### Q4/2 connectors (daisy-chain connections supported)

X1 - line supply (IN), 4-pin, male	X3 - line supply (OUT), 4-pin, female	Signal	Description
		L1	Line phase L1
		L2	Line phase L2
		L3	Line phase L3
		PE	Protective earth

**QUICKON/MQ15 connector\* (daisy-chain connections not supported)**


X1 - line supply (IN), 4-pin, male		Signal	Description
<p>QUICKON</p>	<p>MQ15</p>	L1	Line phase L1
		L2	Line phase L2
		L3	Line phase L3
		⊕	Protective earth

\* Not suitable for UL applications; not available for FSC

**Glanded variant**

X1/X3 - line supply terminals (screw-type)		Signal	Description
<p>Motor-mounted converter</p>	<p>Wall-mounted converter</p>	L1	Line phase L1
		L2	Line phase L2
		L3	Line phase L3
		PE	Protective earth
		Cable gland size: M25 * 1.5	
<p>Screw tightening torque: 1.75 Nm/ 15.5 lbf.in</p>		<p>Screw tightening torque:                      1.7 Nm/15.0 lbf.in (for terminals in green)                      1.3 Nm/10.5 lbf.in (for terminals in black)</p>	

For wall-mounted converter, you must remove the local/remote control (LRC) panel or the blanking cover to get access to the line supply terminals.

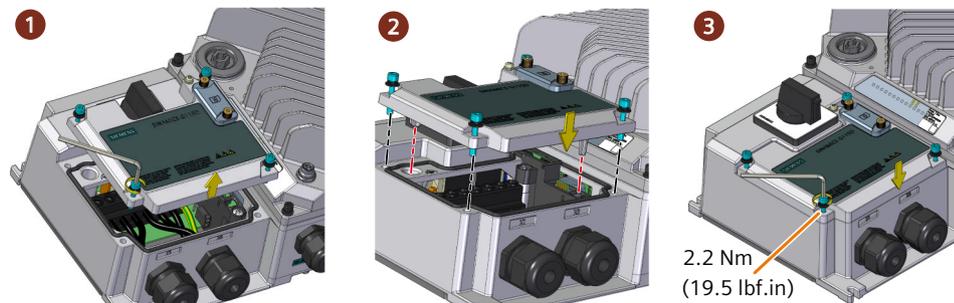


**Further information**

- Cables and connectors (Page 73)
- Glanded installation kit (Page 40)

### 5.9.2 Connecting to the line supply using daisy chain


The SINAMICS G115D system has been designed to allow a converter to provide the mains power for a number of converters in a daisy chain.

The figure below exemplifies the methodology for daisy-chaining multiple converters:

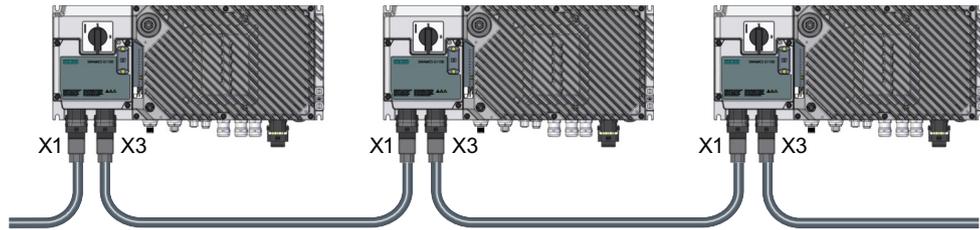


#### Wiring the line supply terminals for the glanded variant

The figures below show examples of wiring the line supply terminals for the daisy-chain connection for a glanded variant of converter:

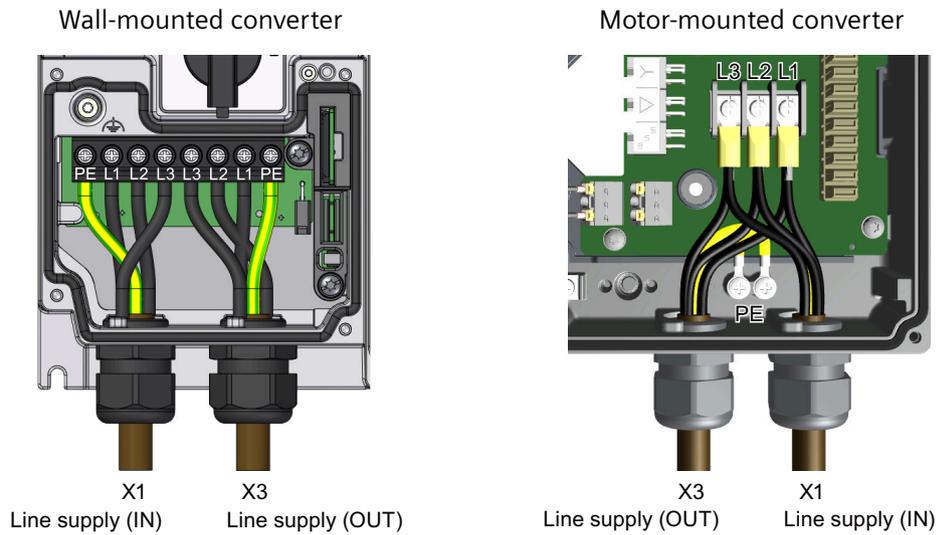

For the daisy-chain line supply connection of the motor-mounted converters, make sure that you connect two cable lugs per terminal as recommended below to ensure reliable electrical connectivity:

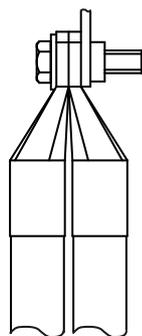

### Maximum current limit for daisy-chain connection

The maximum permissible number of daisy-chained converters depends on the maximum current limit for daisy-chain connection. The table below gives the maximum current limits dependent upon the cable cross-sections and surrounding air temperature:

Converter	IEC-compliant cable	UL-compliant cable	
		Connector variant	Glanded variant
Motor-mounted converter	23 A @ 4 mm <sup>2</sup> , 40 °C	16 A @ 12 AWG, 40 °C	16 A @ 12 AWG, 40 °C
	16 A @ 4 mm <sup>2</sup> , 55 °C	11 A @ 12 AWG, 55 °C	13 A @ 12 AWG, 45 °C 12 A @ 12 AWG, 48 °C
Wall-mounted converter	25 A @ 6 mm <sup>2</sup> , 40 °C	24 A @ 10 AWG, 40 °C	16 A @ 9 AWG, 40 °C
	21 A @ 6 mm <sup>2</sup> , 55 °C	16 A @ 10 AWG, 55 °C	13 A @ 9 AWG, 45 °C 12 A @ 9 AWG, 48 °C

### Further information on protective devices

For both connector and glanded variants, the input for the daisy chained converters can be protected by group fusing.

For more information about the permissible types of the group fusing, see the SINAMICS G115D Product Information of Protective Devices:

 Protective devices (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)

### Further information

If you don't use daisy chain connection, cover the unused connectors with the optional connector cover kit to maintain the IP rating of the system.

 Connector cover kit (Page 41)

## 5.10 Connecting the motor



**⚠ WARNING**

**Electric shock by live parts in the motor terminal box**

Hazardous voltage can be present on the pins for temperature sensor and motor holding brake. Touching live parts on the motor cable and in the motor terminal box can lead to death due electrical shock.

- Keep the motor terminal box closed whenever the mains is applied to the converter.
- Insulate the cables that are not used.
- Use appropriate insulation on the cables.

**NOTICE**

**Damage of the converter by disconnecting the motor cable during operation**

The disconnection of the motor cable by a switch or contactor during operation may damage the converter.

- Disconnect converter and motor during operation only if it is necessary in terms of personal security or machine protection.



**⚠ WARNING**

**Electric shock due to rotating permanent magnet synchronous motor**

As soon as a permanent magnet synchronous motor rotates, the motor terminals may be subject to dangerous voltage. Touching live motor terminals can result in death or serious injury.

- Ensure that the motor is at a standstill before working on the motor terminals or the converter.
- Block the motor mechanically, e.g. using a holding brake.
- Disconnect the motor cable between the converter and the motor when performing electrical work on the converter.

 <b>WARNING</b>
<b>Fire after short-circuit in the motor current circuit caused by rotating permanent magnet synchronous motor</b>
In the event of a short circuit in the converter or in the motor cable, a permanent magnet synchronous motor supplies energy to the short-circuit as long as the motor is rotating. This can cause smoke and a fire, endangering people.
<ul style="list-style-type: none"> <li>• Install a contactor between the motor and the converter and as close to the motor as possible.</li> <li>• Use a contactor with overvoltage protection to prevent damage to the motor when separating the motor from the converter.</li> <li>• Use converter signal r0863.1 and a free digital output of the converter to open the contactor between motor and converter in the event of a fault.</li> </ul>

### 5.10.1 Interface description - X2




The motor power interface located on the Wiring Module is available only for the G115D wall-mounted converter. For a G115D converter with SIMOGEAR geared motor, the wiring between the converter and the motor is completed when delivered.

#### Connector variant

##### Q8/0 connector

X2 - motor power, 8-pin, female	Pin	Signal	Description
	1	U	Phase U
	2	-	Not connected
	3	W	Phase W
	4	EM-/EM2	EM brake negative (180 V DC) / EM brake 2 (400 V AC)
	5	T+	Motor temperature sensor positive
	6	EM+/EM1	EM brake positive (180 V DC) / EM brake 1 (400 V AC)
	7	V	Phase V
	8	T-	Motor temperature sensor negative
	9	PE	Protective earth

Glanded variant

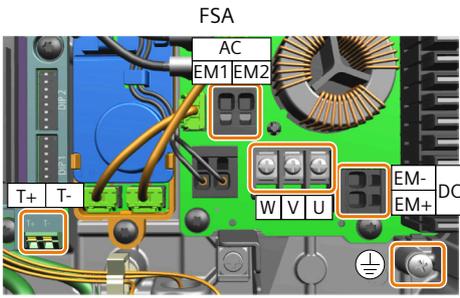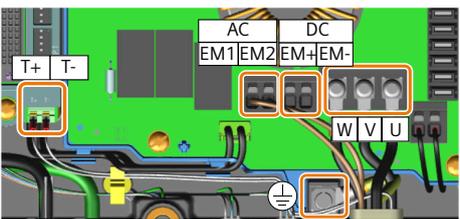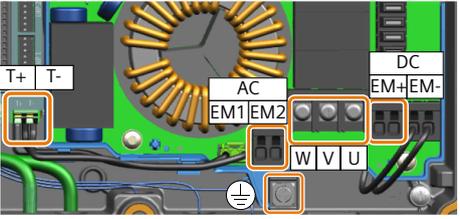X2 - motor power terminals	Signal	Description	
	U	Phase U	
	V	Phase V	
	W	Phase W	
	EM+	EM brake positive (180 V DC)	
	EM-	EM brake negative (180 V DC)	
	EM1	EM brake 1 (400 V AC)	
	EM2	EM brake 2 (400 V AC)	
	T+	Motor temperature sensor positive	
	T-	Motor temperature sensor negative	
	⊕	Protective earth	
	Screw tightening torque:		
	• U/V/W: 1.0 Nm/8.9 lbf.in;		
	• ⊕: 2.2 Nm/19.5 lbf.in		
	Cable gland size: M25 * 1.5		
			

Further information

-  Glanded installation kit (Page 40)
-  Cables and connectors (Page 73)


5.10.2 Connecting the motor in a star or delta connection

5.10.2.1 Overview

Standard asynchronous motors up to a rated power of approximately 3 kW are normally connected in a star/delta connection (Y/Δ) at 400 V/230 V. For a 400 V line supply, you can connect the motor to the converter either in a star or in a delta connection.

## Function description

### Operating the motor in a star connection

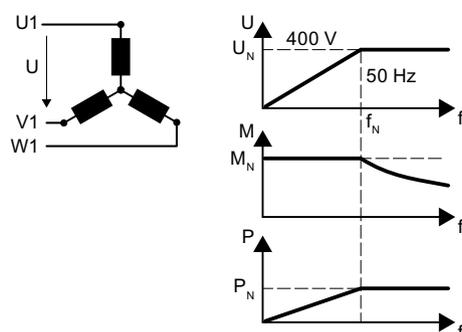


In a star connection, the motor can provide its rated torque  $M_N$  in the range 0 ... rated frequency  $f_N$ .

Rated voltage  $U_N = 400$  V is available at a rated frequency  $f_N = 50$  Hz.

The motor goes into field weakening above the rated frequency. In field weakening, the available motor torque decreases linearly with  $1/f$ . In field weakening, the available power remains constant.

### Operating the motor in a delta connection with 87 Hz characteristic

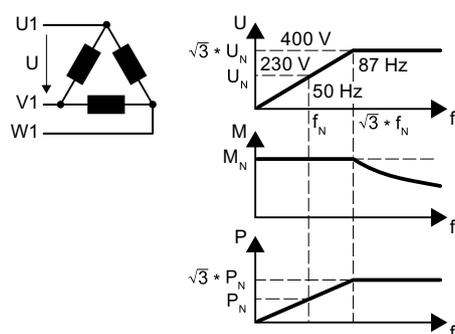

In a delta connection, the motor is operated with a voltage and frequency above its rated values. As a consequence, the motor power is increased by a factor  $\sqrt{3} \approx 1.73$ .

In the range  $f = 0 \dots 87$  Hz, the motor can output its rated torque  $M_N$ .

The maximum voltage  $U = 400$  V is available at a frequency of  $f = \sqrt{3} \times 50$  Hz  $\approx 87$  Hz.

The motor only goes into field weakening above 87 Hz.


The higher motor power when operated with an 87 Hz characteristic has the following disadvantages:

- The converter must supply approximately 1.73x current. Select a converter based on its rated current - and not its rated power.
- The motor temperature increases more significantly than when operated with  $f \leq 50$  Hz.
- The motor must have windings that are approved for a voltage  $>$  rated voltage  $U_N$ .
- As the fan impeller rotates faster, the motor has a higher noise level than operation with  $f \leq 50$  Hz.


### 5.10.2.2 Configuring the star/delta connection of the wall-mounted converter

The star/delta connection is implemented inside the terminal box of the motor. You can configure the connection according to the circuit diagram of the motor.

**Star connection**

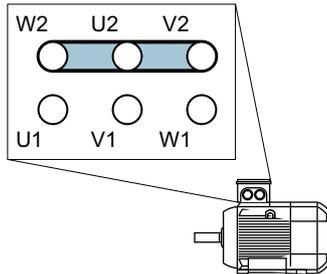

**Delta connection**

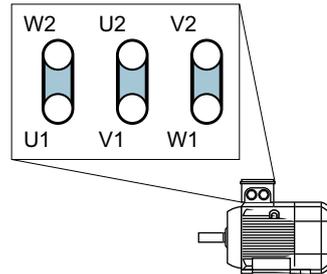

## 5.11 Connecting the 24 V power supply



<b>⚠ WARNING</b>
<p><b>Electric shock due to unsuitable power supply</b></p> <p>When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage that might result in serious injury or death.</p> <ul style="list-style-type: none"> <li>Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages (maximum 60 V DC briefly) for all connections and terminals of the electronics modules.</li> </ul>

<b>NOTICE</b>
<p><b>24 V power supply connection not available on AS-I variant</b></p> <p>The AS-I variant is supplied with DC 24 V directly from the AS-I bus connection and therefore does not have DC24V connections. All other variants have the DC24V power supply connections.</p>

### 5.11.1 Interface description - X01/X02



#### Connector variant

One of the two types of connectors (7/8" and M12 L-coding) is provided depending on the variant that has been ordered.



**7/8" connector**

X01 - 24 V power supply (IN), 5-pin, male	X02 - 24 V power supply (OUT), 5-pin, female	Pin	Signal	Description
		1	2M	Switched 0 V
		2	1M	Unswitched 0 V
		3	FE	Not connected
		4	1L+	Unswitched 24 V
		5	2L+	Switched 24 V

**M12 L-coding connector**

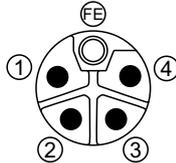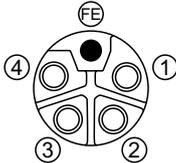X01 - 24 V power supply (IN), 5-pin, male	X02 - 24 V power supply (OUT), 5-pin, female	Pin	Signal	Description
		1	1L+	Unswitched 24 V
		2	2M	Switched 0 V
		3	1M	Unswitched 0 V
		4	2L+	Switched 24 V
		-	FE	Not connected

**Glanded variant**

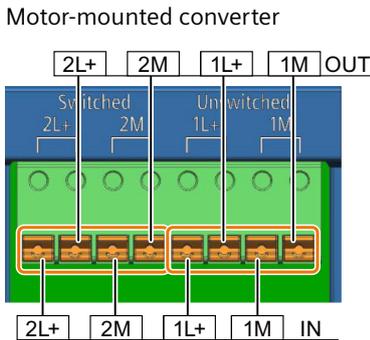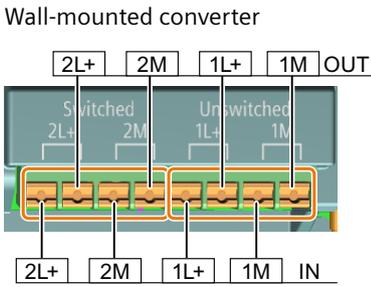X01/X02 - 24 V power supply terminals		Signal	Description
		2L+	Switched 24 V
		2M	Switched 0 V
		1L+	Unswitched 24 V
		1M	Unswitched 0 V
		Cable gland size: M20 * 1.5	

**Switched/unswitched 24 V power supply**

The unswitched (also known as "non-switched") 24 V power supply (1L+) is required for the drive to function.

- Use a power supply with PELV (Protective Extra Low Voltage).
- The 0 V of the power supply must be connected with low resistance to the PE of the system.

The switched 24 V (2L+) supplies the two bidirectional digital inputs/outputs DIO 24 and DIO 25. Switching off the 24 V power supply voltage brings all of the actuators connected to the digital outputs into the no-voltage state.

If you don't need the switching of 2L+ power supply, you can connect the conductors 2M (switched 0 V) to 1M (unswitched 0 V) and 2L+ (switched 24 V) to 1L+ (unswitched 24 V)

5.11 Connecting the 24 V power supply

at interface X01, so that both the switched and the unswitched 24 V come from the same supply.

24 V DC power supply unit

The integrated 24 V DC power supply unit (PSU) is optionally available to generate 24 V DC power supply from the line supply. It supplies 24 V DC power to one converter only and does not support daisy-chain connections.

For converters integrated with both the repair switch and the 24 V PSU, the 24 V DC power supply to the converter is maintained when you switch off the 400 V AC supply via the repair switch.

Requirements for applications in USA and Canada

Use a NEC Class 2 or a limited voltage/limited current power supply for variants with 7/8" connector; use a limited voltage power supply for all other variants.

Integrated AS-i 24 V DC supply

For converters with the AS-i interface and the integrated 24 V DC power supply should note that the integrated 24 V DC power supply powers the auxiliary 24 V DC. Therefore, the black AS-i cable is not needed in these circumstances.


Further information

-  Cables and connectors (Page 73)
-  Glanded installation kit (Page 40)

5.11.2 Connecting to the 24 V power supply using daisy chain


The SINAMICS G115D system has been designed to allow a converter to provide the 24 V DC power for a number of converters in a daisy chain.

The figure below exemplifies the methodology for daisy-chaining multiple converters:

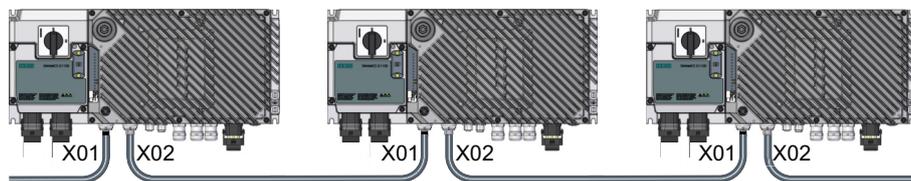

## Wiring the 24 V power supply terminals for the glanded variant

The figure shows an example of wiring the 24 V power supply terminals for the daisy-chain connection for the glanded variant of the converter:

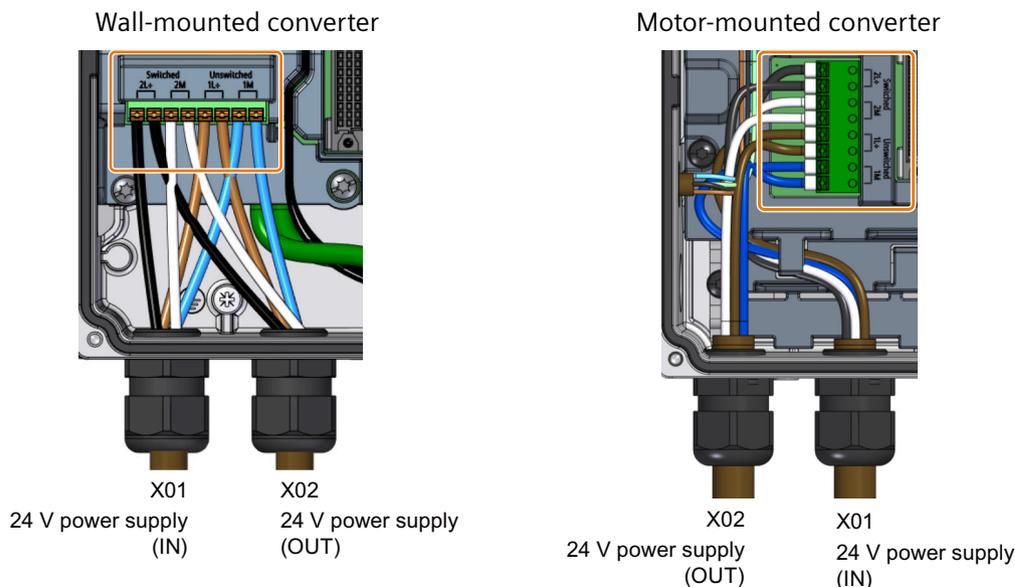

## Maximum current limit for daisy-chain connection

The maximum permissible number of daisy-chained converters depends on the maximum current limit for daisy-chain connection. The table below gives the maximum current limits dependent upon the cable cross-sections and surrounding air temperature:

IEC-compliant cable		UL-compliant cable	
Connector variant <sup>1)</sup>	Glanded variant	Connector variant <sup>1)</sup>	Glanded variant
12 A + 12 A @ 2.5 mm <sup>2</sup> , 40 °C		12 A + 12 A @ 13 AWG, 40 °C	8 A + 8 A @ 13 AWG, 40 °C
12 A + 12 A @ 2.5 mm <sup>2</sup> , 55 °C		8 A + 8 A @ 13 AWG, 55 °C	8 A + 8 A @ 13 AWG, 45 °C
			6 A + 6 A @ 13 AWG, 48 °C

<sup>1)</sup> The values in the table above are valid when connecting with M12 L-coding connectors. If 7/8" connectors are used, the maximum current limit is 8 A + 8 A at 40 °C and 6 A + 6 A at 55 °C.

## Further information

If you don't use daisy chain connection, cover the unused connectors with the optional connector cover kit to maintain the IP rating of the system.

 Connector cover kit (Page 41)

## 5.12 Connecting the digital inputs and outputs

### 5.12.1 Interface description - X07/X08/X05


The G115D converter has four digital inputs (DI 0 to DI 3) and two bidirectional digital inputs/ outputs (DIO 24 and DIO 25). Digital inputs DI 0 and DI 1 can be used to connect an HTL encoder (track A/B). Digital inputs DI 2 and DI 3 can be used for the safety functions. The bidirectional DI/DO can be parameterized as digital inputs or digital outputs with parameter p0728.

#### Connector variant

M12 A-coding connector, 5-pin, female

Digital inputs (X07, X08) and bidirectional digital inputs/outputs (X05)			
<b>X07</b>	<b>Pin</b>	<b>Signal</b>	<b>Description</b>
	1	1L+	Unswitched 24 V
	2	DI1	Digital input 1
	3	1M	Unswitched 0 V
	4	DIO	Digital input 0
	5	FE	Functional earth
<b>X08</b>	<b>Pin</b>	<b>Signal</b>	<b>Description</b>
	1	1L+	Unswitched 24 V
	2	DI3	Digital input 3
	3	1M	Unswitched 0 V
	4	DI2	Digital input 2
	5	FE	Functional earth
<b>X05</b>	<b>Pin</b>	<b>Signal</b>	<b>Description</b>
	1	2L+	Switched 24 V
	2	DIO25	Bidirectional digital output/input 25
	3	2M	Switched 0 V
	4	DIO24	Bidirectional digital output/input 24
	5	FE	Functional earth

## Glanded variant

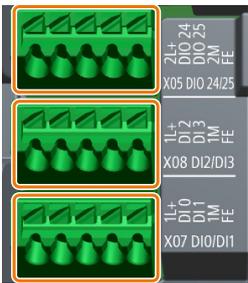Digital inputs (X07, X08) and bidirectional digital inputs/outputs (X05)	Signal	Description	
<p>Motor-mounted converter</p>  <p>Wall-mounted converter</p> 	<b>X07</b>	1L+	Unswitched 24 V
		DIO	Digital input 0
		DI1	Digital input 1
		1M	Unswitched 0 V
		FE	Functional earth
	<b>X08</b>	1L+	Unswitched 24 V
		DI2	Digital input 2
		DI3	Digital input 3
		1M	Unswitched 0 V
		FE	Functional earth
	<b>X05</b>	2L+	Switched 24 V
		DIO24	Bidirectional digital output/input 24
		DIO25	Bidirectional digital output/input 25
		2M	Switched 0 V
		FE	Functional earth
Cable gland size: M16 * 1.5; Tightening torque: 10 Nm/88.5 lbf.in			

**Note****Malfunction caused by incorrect switching states as the result of diagnostic flows in off state (logical state "0")**

In contrast to mechanical switching contacts, e.g. emergency stop switches, diagnostic flows can also flow with semiconductor switches in the off state. If interconnection with digital inputs is faulty, the diagnostic flows can lead to incorrect switching states and thus to a malfunction of the drive.

- Observe the conditions for digital inputs and digital outputs specified in the relevant manufacturers documentation.
- Check the conditions of the digital inputs and digital outputs in regard to the flows in off state. If applicable, connect the digital inputs with suitably dimensioned, external resistors to protect against the reference potential of the digital inputs.

**Further information**

 Cables and connectors (Page 73)

**5.12.2 Factory interface setting**


To ensure that the factory setting of the interfaces can be used, you must wire your drive as shown in the following examples.

See below for default macros for different communication variants of the G115D:

G115D communication variant	Default macro
PROFINET	Macro 67
AS-i	Macro 30
I/O	Macro 65

**Macros for SINAMICS G115D PROFINET variant**

**Macro 67 - 4-DI decentral conveyor with fieldbus (default for the PROFINET variant)**

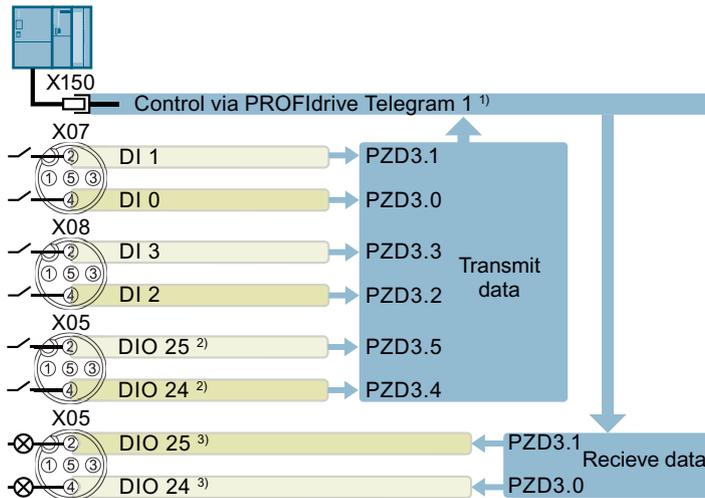


1) Telegram 1 is extended to provide extra PZD bits (PZD3.x) for signal interconnections in the converter. For more information about the extended telegram 1, refer to Section "Drive control via PROFINET (Page 152)".

2) Parameterized as digital inputs via p0728.


3) Parameterized as digital outputs via p0728.

Macros for SINAMICS G115D AS-i variant

Macro 30 - AS-i Single Slave with fixed setpoint (default for the AS-i variant)

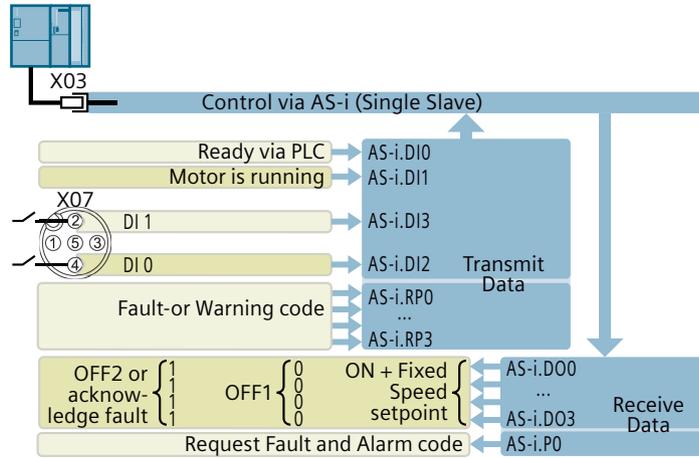


Macro 31 - AS-i Dual Slave with fixed setpoint

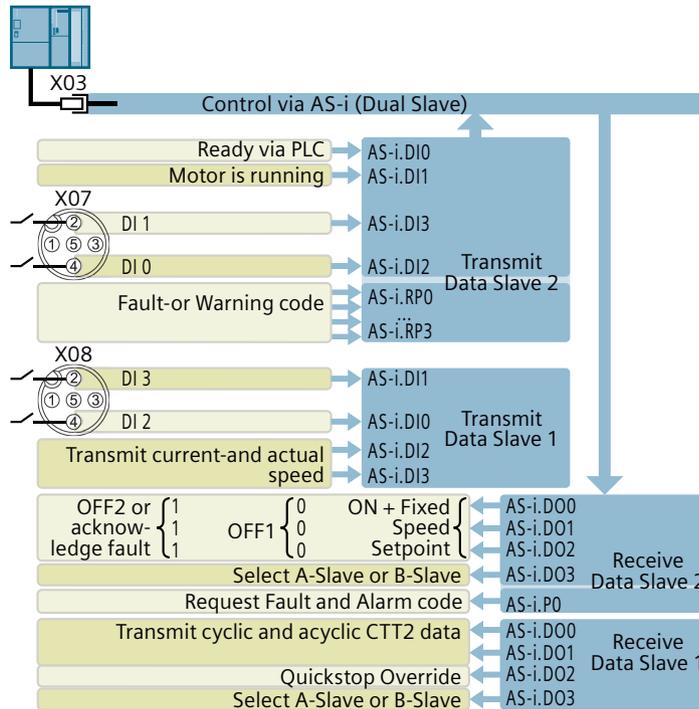


Macro 34 - AS-i Dual Slave with fieldbus setpoint

5.12 Connecting the digital inputs and outputs

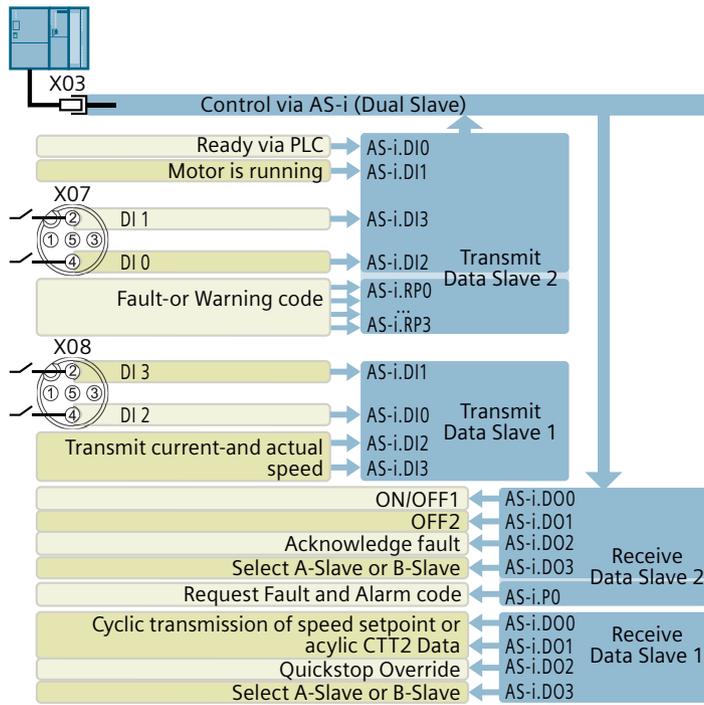


**Macro 66 - AS-i Single Slave with setpoint from Potentiometer 1 or Potentiometer 2**

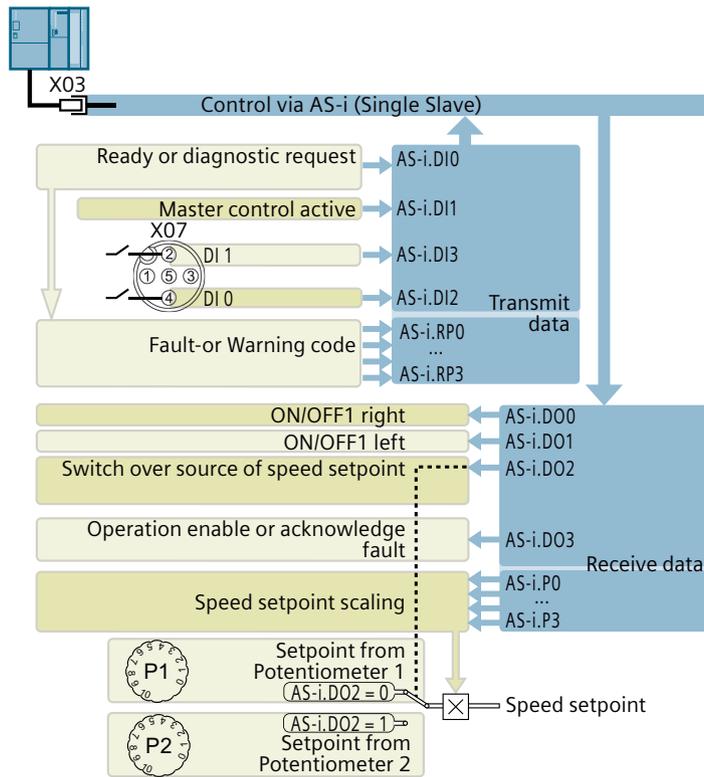


Macros for SINAMICS G115D I/O variant


**Macro 65 - Conveyor with setpoint from Potentiometer 1 or Potentiometer 2 (default for the I/O variant)**

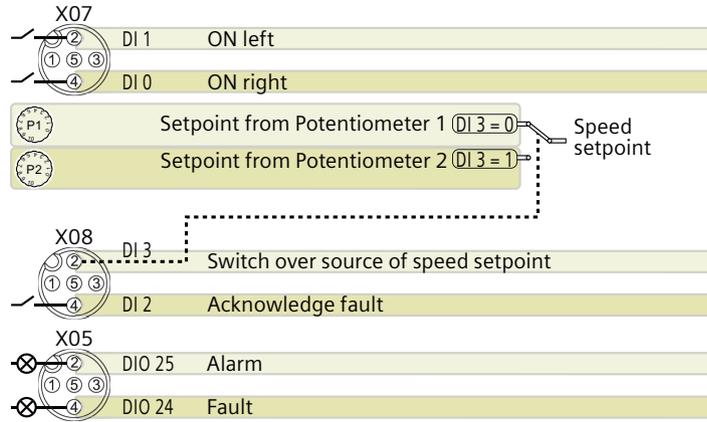

**Macro 9 - Motorized potentiometer (MOP)**

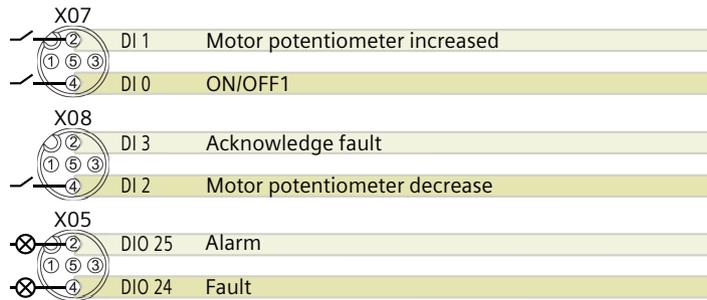


**Macro 60 - Two-wire control with method 1**

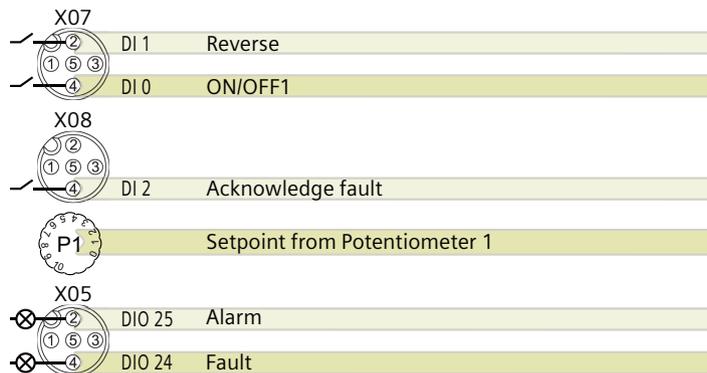


**Macro 61 - Two-wire control with method 2**


5.12 Connecting the digital inputs and outputs

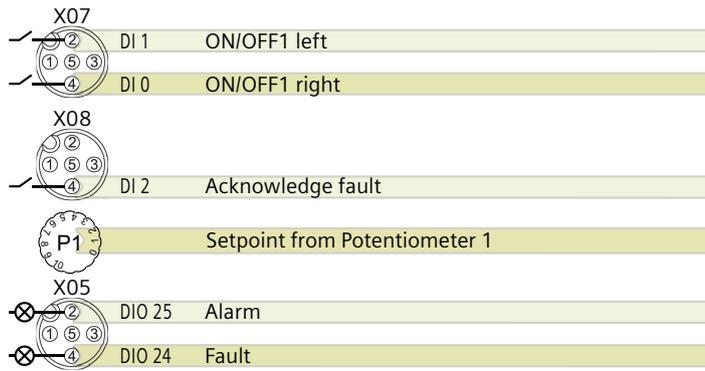


**Macro 62 - Two-wire control with method 3**

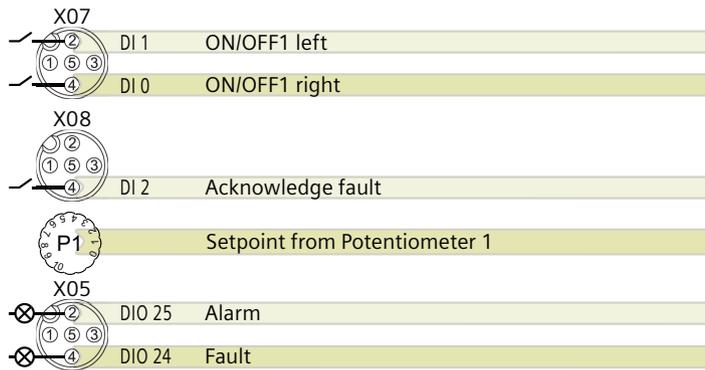

**Macro 63 - Three-wire control with method 1**

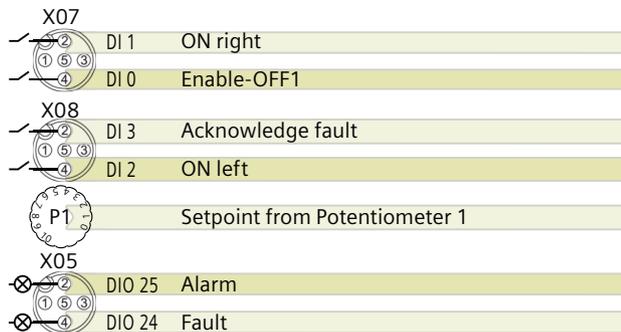

**Macro 64 - Three-wire control with method 2**

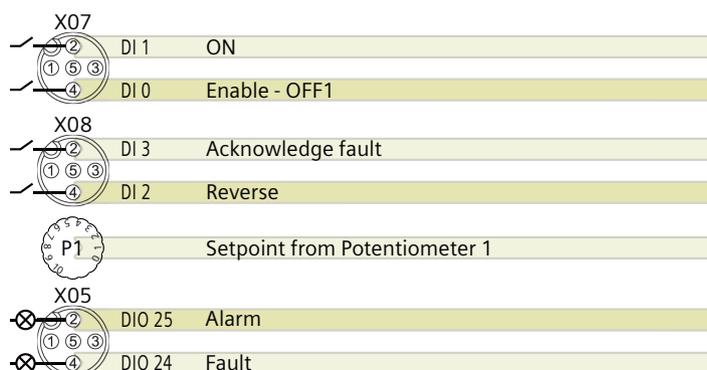

### Further information

You can adjust the default interface settings to suit your requirements.

 Adapt the default settings of the inputs and outputs (Page 143)


### 5.12.3 Fail-safe digital input

To enable a safety function via the terminal strip of the converter, you need a fail-safe digital input. The digital inputs DI 2 and DI 3 can be used for the safety functions.

In the factory setting of the converter, the fail-safe digital input is not assigned to the integrated safety functions. Only when commissioning do you define as to whether, for example, you use digital inputs for the standard functions, or you create a fail-safe digital input by combining them.

### Wiring examples

An example for wiring the fail-safe digital input corresponding to PL d according to EN 13849-1 and SIL 2 according to IEC 61508 is given below:

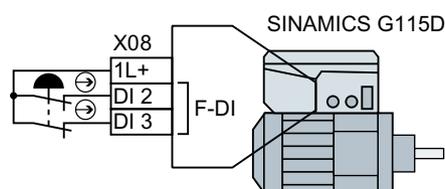

### Further information

 Safe Torque Off (STO) safety function (Page 243)

Additional configurations of the safety functions are described in the "Safety Integrated" Function Manual.

 Overview of the manuals (Page 610)

## 5.13 Connecting to PROFINET and Ethernet

### 5.13.1 Interface description - X150 P1/P2

M12 D-coding connector

X150 P1/P2 - PROFINET, 4-pin, female			
	Pin	Signal	Description
	1	TXP	Transmit data +
	2	RXP	Receive data +
	3	TXN	Transmit data -
	4	RXN	Receive data -


#### Further information

 Cables and connectors (Page 73)

### 5.13.2 Communication via PROFINET IO and Ethernet

You can either integrate the converter in a PROFINET network or communicate with the converter via Ethernet.

#### The converter in PROFINET IO operation

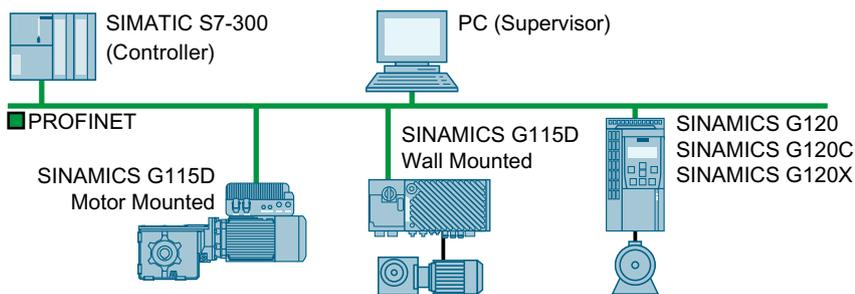


The converter supports the following functions:

- RT
- IRT: The converter forwards the clock synchronism, but does not support clock synchronism
- MRP: Media redundancy, impulsed with 200 ms. Requirement: Ring topology
- MRPD: Media redundancy, bumpless. Requirement: IRT and the ring topology created in the control
- Diagnostic alarms in accordance with the error classes specified in the PROFIdrive profile

- Device replacement without removable data storage medium: the replaced converter obtains the device name from the IO controller – not from its memory card or programming device
- Shared Device for converters that support PROFI-safe

### The converter as Ethernet node

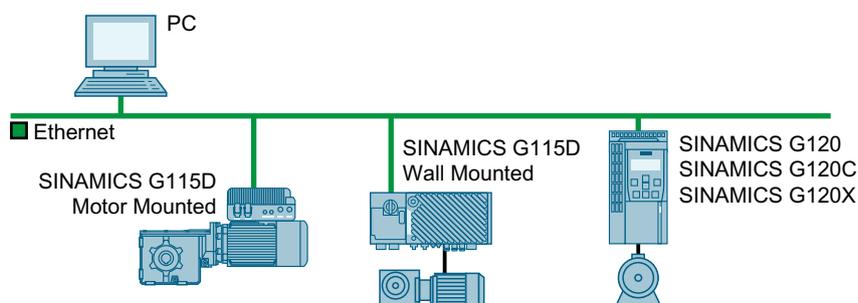

### Further information on PROFINET

Further information on PROFINET can be found on the Internet:

- PROFINET system description (<https://support.industry.siemens.com/cs/ww/en/view/19292127>)
- PROFINET - the Ethernet standard for automation (<http://w3.siemens.com/mcms/automation/en/industrial-communications/profinet/Pages/Default.aspx>)

Further information on the operation as Ethernet nodes can be found in the Function Manual "Fieldbuses".

Overview of the manuals (Page 610)

### 5.13.3 Protocols used

The converter supports the protocols listed in the following tables. The address parameters, the relevant communication layer as well as the communication role and the communication direction are specified for each protocol.

You require this information to set the appropriate safety measures to protect the automation system, e.g. in the firewall.

5.13 Connecting to PROFINET and Ethernet

As the security measures are limited to Ethernet and PROFINET networks, no PROFIBUS protocols are listed in the table.

Table 5-1 PROFINET protocols

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Function/description
DCP: Discovery and configuration protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>Accessible stations, PROFINET Discovery and configuration</b> DCP is used by PROFINET to determine PROFINET devices and to make basic settings. DCP uses the special multicast MAC address: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identifier
LLDP: Link Layer Discovery Protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88CC (PROFINET)	<b>PROFINET Link Layer Discovery protocol</b> LLDP is used by PROFINET to determine and manage neighborhood relationships between PROFINET devices. LLDP uses the special multicast MAC address: 01-80-C2-00-00-0E
MRP: Media Redundancy Protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x88E3 (PROFINET)	<b>PROFINET medium redundancy</b> MRP enables the control of redundant routes through a ring topology. MRP uses the special multicast MAC address: xx-xx-xx-01-15-4E, xx-xx-xx = Organizationally Unique Identifier
PTCP Precision Transparent Clock Protocol	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>PROFINET send clock and time synchronization, based on IEEE 1588</b> PTC is used to implement send clock synchronization and time synchronization between RJ45 ports, which are required for IRT operation. PTCP uses the special multicast MAC address: xx-xx-xx-01-0E-CF, xx-xx-xx = Organizationally Unique Identifier
PROFINET IO data	Not relevant	(2) Ethernet II and IEEE 802.1Q and Ethertype 0x8892 (PROFINET)	<b>PROFINET Cyclic IO data transfer</b> The PROFINET IO telegrams are used to transfer IO data cyclically between the PROFINET IO controller and IO devices via Ethernet.
PROFINET Context Manager	34964	(4) UDP	<b>PROFINET connection less RPC</b> The PROFINET context manager provides an endpoint mapper in order to establish an application relationship (PROFINET AR).

Table 5-2 EtherNet/IP protocols

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Function/description
Implicit messaging	2222	(4) UDP	Used for exchanging I/O data. This is inactive when delivered. Is activated when selecting EtherNet/IP.
Explicit messaging	44818	(4) TCP (4) UDP	Used for parameter access (writing, reading). This is inactive when delivered. Is activated when selecting EtherNet/IP.

Table 5-3 Connection-oriented communication protocols

Protocol	Port number	Layer (2) Link layer (4) Transport layer	Function/description
ISO on TCP (according to RFC 1006)	102	(4) TCP	<b>ISO-on-TCP protocol</b> ISO on TCP (according to RFC 1006) is used for the message-oriented data exchange to a remote CPU, WinAC or devices of other suppliers. Communication with ES, HMI, etc. is activated in the factory setting, and is always required.
SNMP Simple Network Management Protocol	161	(4) UDP	<b>Simple network management protocol</b> SNMP enables network management data to be read out and set (SNMP managed objects) by the SNMP manager. It is activated in the factory setting, and is always required
Reserved	49152 ... 65535	(4) TCP (4) UDP	Dynamic port area that is used for the active connection endpoint if the application does not specify the local port.

### 5.13.4 Connecting the converter to PROFINET

#### Procedure

1. Integrate the converter in the bus system (e.g. ring topology) of the control using PROFINET cables and PROFINET sockets X150 P1/P2.  
 Cables and connectors (Page 73)  
 The maximum permitted cable length from the previous station and to the next one is 100 m.
2. Externally supply the converter with 24 V DC.

You have now connected the converter to the control system via PROFINET.



### 5.13.5 What do you have to set for communication via PROFINET

#### Configuring PROFINET communication in the I/O controller

You require the appropriate engineering system for the IO controller to configure PROFINET communication in the IO controller.

If required, load the GSDML file of the converter into the engineering system.

 Installing GSDML (Page 102)

#### Device name

In addition to the MAC address and IP address, PROFINET also uses the device name to identify PROFINET devices (Device name). The device name must be unique across the PROFINET network.

To assign the device name, you need an engineering software, e.g. Startdrive.

The converter saves the device name in its EEPROM. If an optional memory card is inserted, the converter saves the device name additionally on the memory card.

## IP address

In addition to the device name, PROFINET also uses an IP address.

You have the following options to specify the IP address of the converter:

- You specify the IP address via an engineering software tool, e.g. Startdrive.
- The IO Controller assigns an IP address to the converter.

The converter saves the IP address in its EEPROM. If an optional memory card is inserted, the converter saves the IP address additionally on the memory card.

## Telegram

Set the same telegram in the converter as in the IO Controller. Interconnect the telegrams in the control program of the IO Controller with the signals of your choosing.

 Drive control via PROFINET (Page 152)

## Application examples

You can find application examples for PROFINET communication on the Internet:

 Controlling the speed of a SINAMICS G110M/G120/G120C/G120D with S7-300/400F via PROFINET or PROFIBUS, with Safety Integrated (via terminal) and HMI (<https://support.industry.siemens.com/cs/ww/en/view/60441457>)

 Controlling the speed of a SINAMICS G110M/G120 (Startdrive) with S7-1500 (TO) via PROFINET or PROFIBUS, with Safety Integrated (via terminal) and HMI (<https://support.industry.siemens.com/cs/ww/en/view/78788716>)

### 5.13.6 Installing GSDML

#### Procedure

1. Save the GSDML to your PC.
  - With Internet access:  
 GSDML (<https://support.industry.siemens.com/cs/ww/en/view/26641490>)
  - Without Internet access:  
Insert a memory card into the converter.  
Set p0804 = 12.  
The converter writes the GSDML as zipped file (\*.zip) into directory /SIEMENS/SINAMICS/DATA/CFG on the memory card.
2. Unzip the GSDML file on your computer.
3. Import the GSDML into the engineering system of the controller.

You have now installed the GSDML in the engineering system of the controller.

## 5.13.7 Connecting the converter to Ethernet/IP

### Overview

To connect the converter to a control system via Ethernet, proceed as follows:

#### Procedure

1. Connect the converter to the control system via an Ethernet cable.
2. Create an object for data exchange.  
You have the following options:
  - Load the EDS file into your controller if you want to use the ODVA profile.  
You can find the EDS file on the Internet:  
 EDS (<https://support.industry.siemens.com/cs/ww/en/view/78026217>)
  - If your controller does not accept the EDS file, or if you wish to use the SINAMICS profile, you must create a generic module in your controller:  
 Creating generic I/O module (Page 182)

You have connected the converter to the control system via Ethernet/IP.

### Example

You can find an example showing how to connect a converter to the control system via Ethernet/IP on the Internet:

 Application example (<https://support.industry.siemens.com/cs/ww/en/view/82843076>)

### Further information

You can find information on routing and shielding Ethernet cables on the Internet:

 Ethernet/IP ([https://www.odva.org/wp-content/uploads/2020/05/PUB00035R0\\_Infrastructure\\_Guide.pdf](https://www.odva.org/wp-content/uploads/2020/05/PUB00035R0_Infrastructure_Guide.pdf))

## 5.13.8 What do you need for communication via Ethernet/IP?

Check the communication settings using the following questions. If you answer "Yes" to the questions, you have correctly set the communication settings and can control the converter via the fieldbus.

- Is the converter correctly connected to the Ethernet/IP?
- Is the EDS file installed in your control system?

- Have the bus interface and IP address been correctly set?
- Have the signals that the converter and the control system exchange been correctly interconnected?

## 5.14 Connecting to AS-i

### 5.14.1 General information

#### General information

The converter operates based on the extended AS-i specification V3.0.

The signaling is made as Manchester-coded current pulses superimposed on the 28 V supply. Since the power supply is used for communications, it must be decoupled with inductors in order for the receiver to be able to decode the transmitted messages.

The yellow cable is the communication cable and provides the power to the converter and its digital inputs. The black cable is the auxiliary power supply cable and provides power to the digital outputs and the low voltage components of the converter including the fan.

The converter supports Single Slave and Dual Slave modes.

In Single Slave mode, the converter has an address in the AS-i network over which four bits are transferred. In Dual Slave mode, each converter has two AS-i addresses over each of which four bits are transferred.

In Single Slave mode, communication is realized in accordance with profile 7.F.E. In Dual Slave mode, communication is realized in accordance with profiles 7.A.5 and 7.A.E.

#### Interface settings for commissioning

To configure the communication of the converter via AS-i, the following possibilities are available for commissioning the converter:

p0015=	Designation	Meaning
30	Macro 30 - AS-i Single Slave with fixed setpoint	Single Slave mode with specification of a fixed frequency via the control
31	Macro 31 - AS-i Dual Slave with fixed setpoint	Dual Slave mode with specification of a fixed frequency via the control
66	Macro 66 - AS-i Single Slave with setpoint from Potentiometer 1 or Potentiometer 2	Single Slave mode with setpoint from Potentiometer 1 or Potentiometer 2
34	Macro 34 - AS-i Dual Slave with fieldbus setpoint	Dual Slave mode with "ON/OFF1", "OFF2", speed setpoint via control

For details about the interface settings, refer to the following chapter:

 Factory interface setting (Page 91)

## 5.14.2 Interface description - X03

### M12 A-coding connector

X03 - AS-i, 5-pin, male			
	Pin	Signal	Description
	1	AS-i +	AS-i positive
	2	AUX -	Auxiliary 0 V
	3	AS-i -	AS-i negative
	4	AUX +	Auxiliary 24 V
	5	FE	Not connected

### Requirements for applications in USA and Canada

Use a NEC Class 2 or a limited voltage/limited current power supply as an external 24 V DC voltage source.

### Further information

A number of converters can be connected via the same AS-i cable to the 24 V power supply with a total current of up to 8 A. Further connection information can be found in the AS-Interface system manual.

 [Overview of the manuals \(Page 610\)](#)

## 5.14.3 Setting the address

As factory setting, all AS-i slaves have address 0. Slaves with address 0 are not included in the communication.

The addresses must be unique, although they can be mixed as required.

You have the following options when making the address assignment:

- Automatic addressing via the AS-i master
- Addressing via the addressing device
- Addressing via parameters

Before you set the address, you must specify whether the converter is integrated as Single Slave or Dual Slave in the AS-i network.

- p2013 = 0: Single Slave (factory setting)
- p2013 = 2: Dual Slave

If you select the Single Slave macro (Macro 30 or 66) or the Dual Slave macro (Macro 31 or 34) during the commissioning, the AS-i mode p2013 is automatically assigned to the appropriate value.

---

**Note**

**Changes made to p2012 and p2013**

Changes made to the p2012 and p2013 parameters take effect immediately after the change.

If you work with a commissioning tool, you must back up the changes so they are not lost when the system is switched off and on again.

---

## Automatic addressing via the AS-i master

### Single Slave

For automatic addressing, the address is specified by the AS-i master. For a Single Slave, the master checks which slave has address 0 and assigns it the next free address. This address is also written to parameter p2012. If more than one slave has address 0, an automatic addressing is not possible.

### Dual Slave

For automatic addressing, the address is specified by the AS-i master. If both slaves have address 0, the second slave is hidden and the control assigns a valid address for slave 1.

Slave 2 then becomes visible with address 0 and can be addressed.

Automatic addressing is not always possible for older AS-i masters. In this case, use the manual addressing and set the address from an addressing device, via Startdrive.

Further information is contained in the AS-Interface system manual, Section "Setting the AS-i address"

 [Overview of the manuals \(Page 610\)](#)

## Addressing via the addressing device (e.g. 3RK1904-2AB02)

Addressing via the addressing device is made offline.

Further information is contained in the AS-Interface system manual, Section "Setting the AS-i address"

 [Overview of the manuals \(Page 610\)](#)

## Addressing via parameters

The address assignment is made with the p2012[0] and p2012[1] parameters.

If you assign the address via a commissioning tool, you must back up the settings so that they are not lost if the power fails.

- Address range for Single Slave converter, profile 7.F.E
    - p2012[1]: 0 ... 31, range for the A address, 0A ... 31A
  - Address range for Dual Slave converter, profile 7.A.5 or 7.A.E
    - p2012[0]: 0 ... 31, 33 ... 63 for slave 1:
    - p2012[1]: 0 ... 31, 33 ... 63 for slave 2:
- with
- 0 ... 31 range for the A address, 0A ... 31A
  - 33 ... 63 range for B address, 1B ... 31B

## 5.14.4 Using the AS-i Programmer


### Setting the slave address with the AS-i Address Programmer

The converter contains two logical AS-i slaves. Either slave can be assigned an address in the range 1A...31A or 1B...31B. The addresses can be allocated to the slaves sequentially, for example, 3A and 4A, 10B and 11B or they can occupy the same number using extended addressing, for example, 20A and 20B. If necessary they can have completely different unassociated addresses, for example, 14A and 16B.

The decision on how to allocate these addresses must also take into account the addressing used in the PLC program by either adherence to the memory map of the AS-i master or the way in which the inputs and outputs can be allocated by the PLC hardware configuration.


The default address of both slaves is 0.

### Setting the AS-i address of slave 1

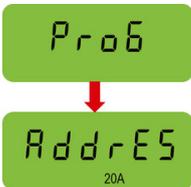1. Plug the AS-i Programmer into the addressing socket (interface X03) of the converter.
2. Turn the dial on the Programmer to the **ADDR** position. The display will indicate that this mode has been selected. 
3. Press the  button; the screen will display the text, **SEt 0** with a small flashing **0** to the left of the display. 
4. Press the  button until you reach the required number. By pressing both the  and  simultaneously, you can toggle between A and B identifiers of the address.
5. Press the  button to confirm the selected address. **ProG** is momentarily displayed, followed by **AddrES**.   
The number allocated to slave 1 is now shown at the bottom of the display.

### Setting the AS-i address of slave 2

1. Press the  button; the display shows the text **SEArCH** followed by **uSE 0**.  
A small **0** is displayed to the left of the display and the number of the first slave that has already been allocated to slave 1 is shown at the bottom of the display.
2. Press the  button to select this number.  
**SEt 0** appears and the small **0** in the left of the display starts flashing.
3. Press the  button until you reach the required number.  
By pressing both the  and  simultaneously, you can toggle between A and B identifiers of the address.
4. Press the  button to accept this number.  
**ProG** is displayed briefly.  
Both of the numbers allocated to the slaves are now displayed in the lower part of the screen.

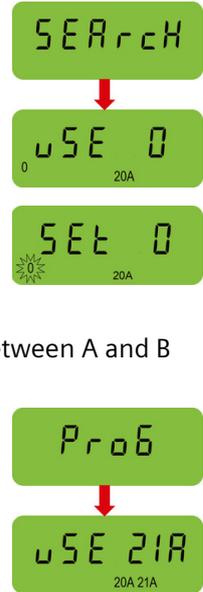

### Changing existing addresses of the AS-i slaves


If the allocated addresses used two different numbers, for example, 10A and 11A, then if one of the slave addresses is reset to 0 the other slave is not affected.

If the allocated addresses use the same number, for example, 20A and 20B, then if one slave address is reset to 0, then both slave numbers will be reset to 0.

Modifying an existing address of a single slave within the converter will not affect the address of the other slave.

To change an existing address of a slave, the following procedure should be performed:

1. Plug the AS-i Programmer into the addressing socket (interface X03) of the converter.
2. Turn the dial on the Programmer to the **ADDR** position. The display will indicate that this mode has been selected.
3. Press the  button; the screen will display **uSE** and the number of the lower addressed slave.  
The existing slave addresses are shown at the bottom of the display.
4. Press the  and  buttons to select the slave address number to be changed.
5. Press the  button; the display now shows **SEt**.  
The selected number will begin to flash.

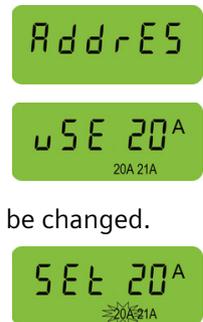

6. Press the  and  buttons to select the new slave address number.
7. Press the  button to confirm the new address.  
**ProG** is displayed briefly followed by confirmation of the address change.



Further information on the operation as Ethernet nodes can be found in the Function Manual "Fieldbuses".

 Overview of the manuals (Page 610)

## 5.15 Connecting to SINAMICS G115D I/O variant

The SINAMICS G115D I/O variant uses I/O terminals to realize converter control functions. For more information on connecting the I/O terminals, refer to Section "Connecting the digital inputs and outputs".


 Connecting the digital inputs and outputs (Page 90)

## 5.16 Grounding the converter housing

To ensure that the converter is properly grounded and protected, you **MUST** connect an earthing cable to the converter housing.

- Connect the PE terminal on the converter housing to an appropriate grounding point of the installation.
- Use a short wire connection.
- Clean the connection to the steel construction from paint or dirt.
- Use a UL-approved ring-type cable lug to terminate the earthing cable to ensure a good physical connection which is resistant to accidental disconnection.

Wiring example of motor-mounted converter

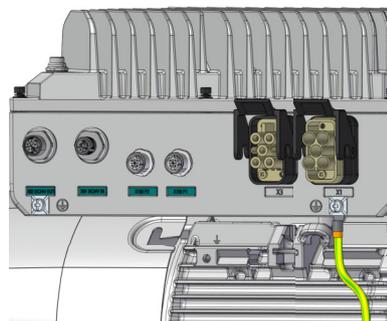

Wiring example of wall-mounted converter



5.17 Connecting the external braking resistor

**Note:** For the G115D Motor Mounted, use the PE terminal which is close to the motor drive end (DE) to ground the converter housing.

Minimum cable cross-section: 4 mm<sup>2</sup> (AWG 10)


PE terminal tightening torque: 1.5 Nm (13.3 lbf.in)

## 5.17 Connecting the external braking resistor



<b>⚠ WARNING</b>
<b>Electric shock as a result of a residual charge in power components</b>
After the power supply has been switched off, it takes up to 5 minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Therefore, touching the converter immediately after powering off can result in electric shock due to residual charge in the power components.
<ul style="list-style-type: none"><li>• Check the voltage at the converter connections before you connect the external braking resistor.</li></ul>


### Connection overview

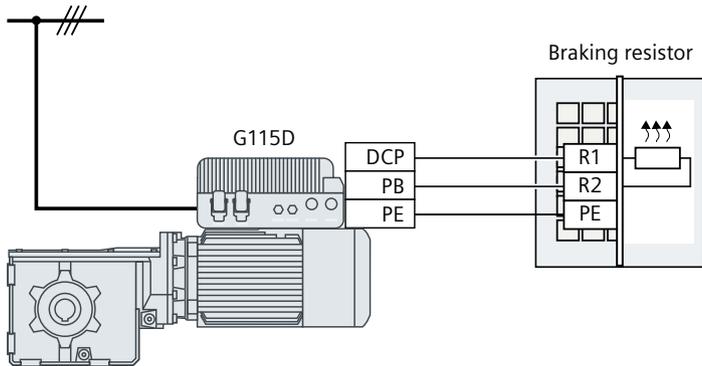

### Procedure

1. Switch off all power supplies (line supply and external 24 V power supply) to the converter.
2. Wait 5 minutes to allow the converter to discharge and check that no voltage is present at the converter connections.
3. Release the retaining screws (6 x M4) on the Electronic Module by using a 3 mm allen key, and remove the module.



4. Remove the internal braking resistor connection from the terminal block DCP/PB in the Wiring Module, and insulate the cable conductors with the heat-shrinkable tube.

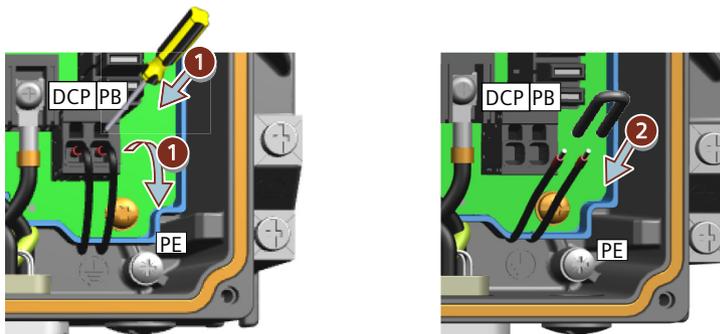

5. Remove the blanking cap at interface X4 and install the M16 cable gland.
  - For the G115D wall-mounted converter, directly install the M16 cable gland (1) at interface X4. If you do not use the provided cable gland, make sure that the thread length of the cable gland you use is no more than 9 mm.
  - For the G115D motor-mounted converter, firstly install the M16 reducer (2) at interface X4, and then install the M16 cable gland (1) on the M16 reducer.

G115D Wall Mounted

G115D Motor Mounted

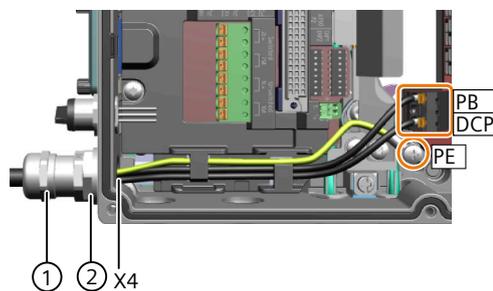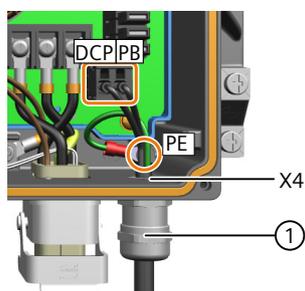


6. Remove the insulation from the end of the braking resistor cable to expose the braided cable shield. Turn up the cable shield. Pass the cable through the cable gland and make the exposed braided cable shield in close contact with the inner surface of the cable gland. Make sure that the cable shield is connected to the shield bonding options for cables and the unit housing respectively with excellent electrical conductivity and a large contact area.
7. Connect the external braking resistor cable to the terminal block DCP/PB and the PE terminal.
8. Re-attach the Electronic Module with a tightening torque of 2.5 Nm (22.1 lbf.in).




## 5.18 Connection examples

### Connection example for G115D Motor Mounted

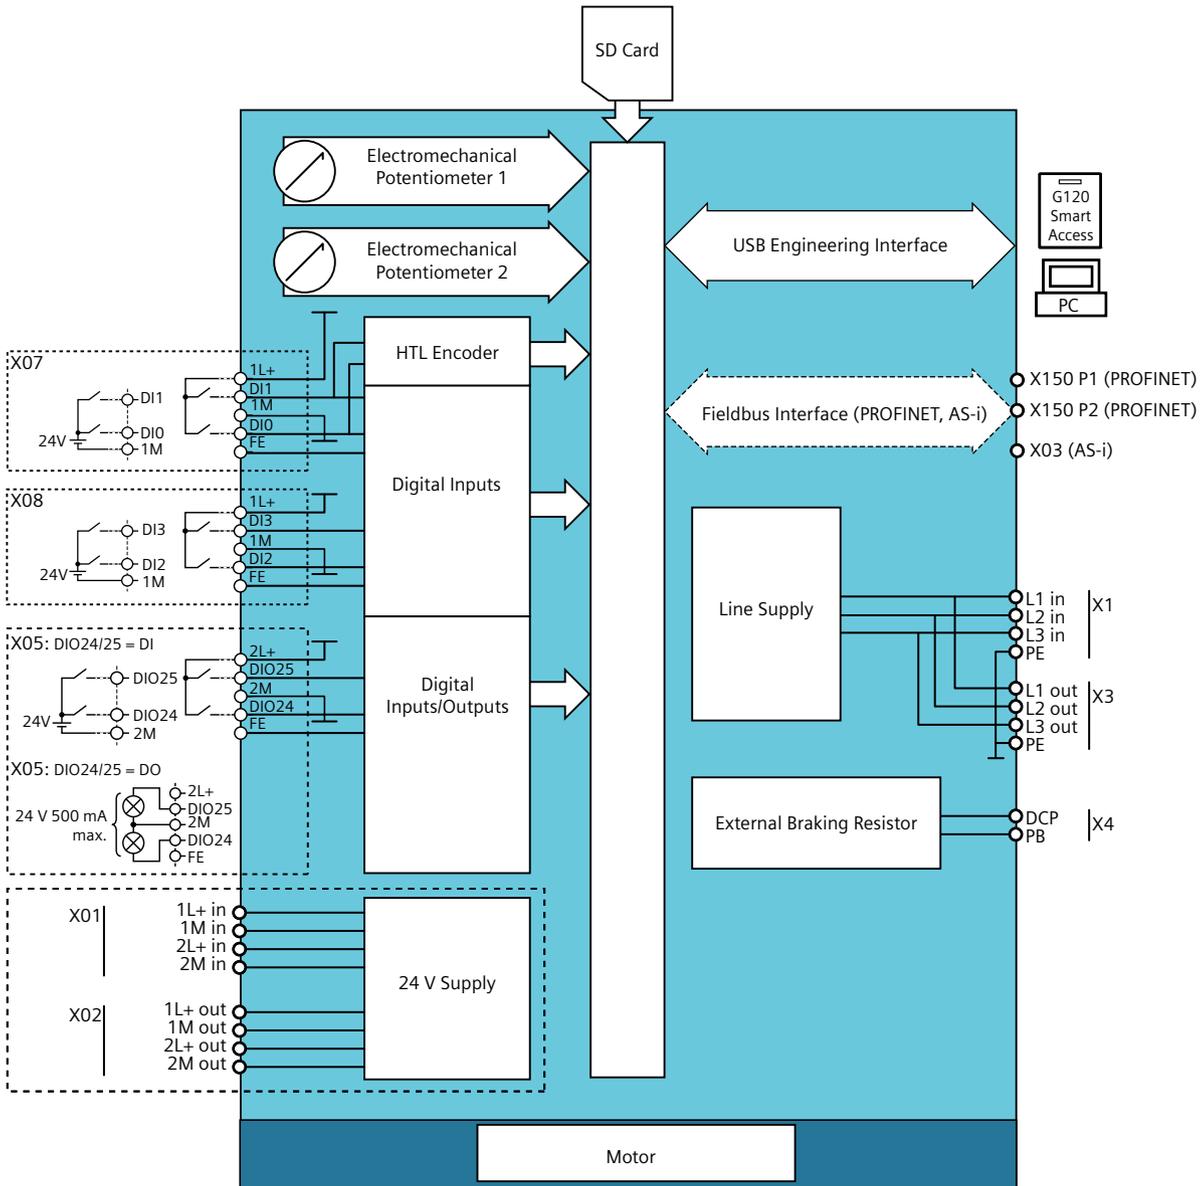

Connection example for G115D Wall Mounted

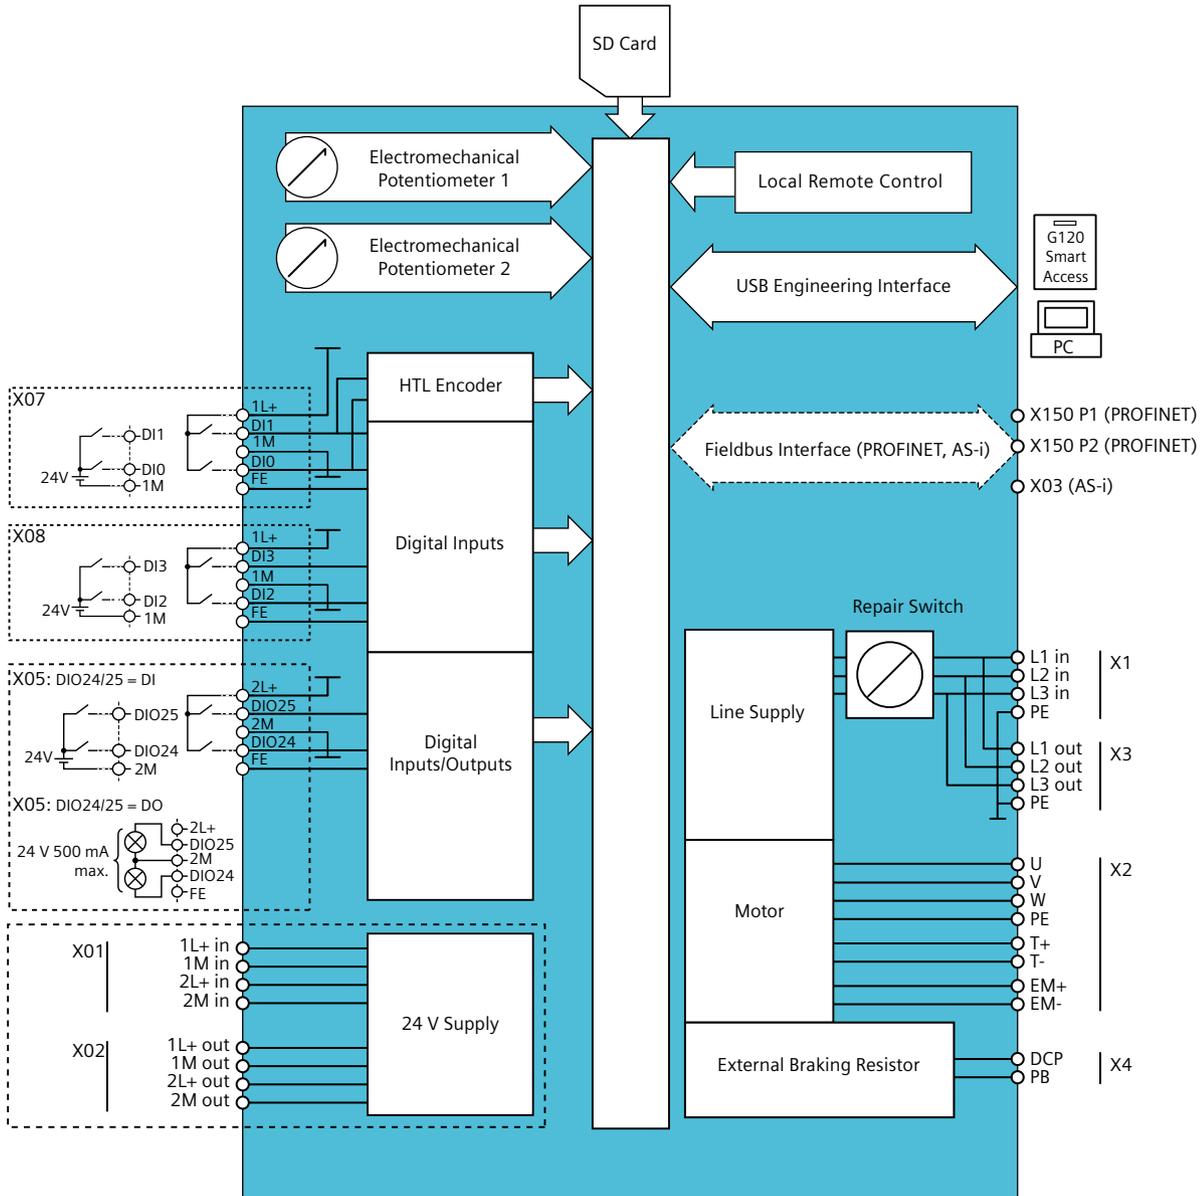




## Commissioning

### 6.1 Commissioning guidelines

#### Overview

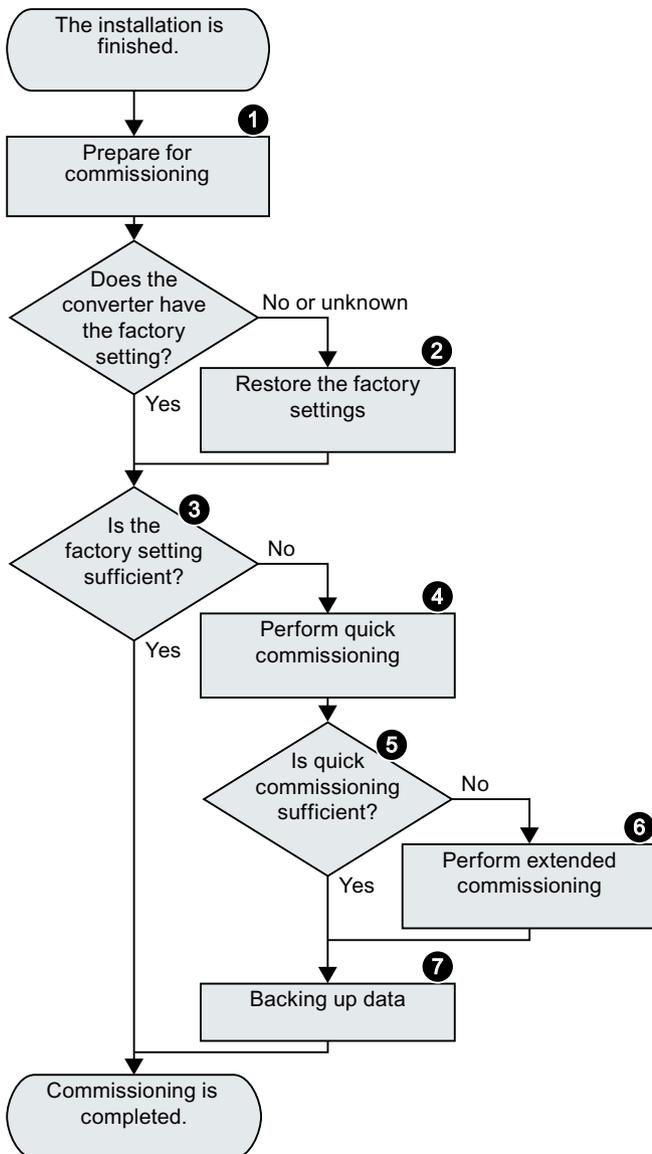

1. Define the requirements to be met by the drive for your application.
  - ➡ Preparing for commissioning (Page 117)
2. Restore the factory settings of the converter if necessary.
  - ➡ Restoring the factory settings (Page 135)
3. Check if the factory setting of the converter is sufficient for your application.
  - ➡ Factory settings (Page 117)
4. Perform quick commissioning of the drive in one of the following ways:
  - ➡ Quick commissioning with DIP switches (Page 123)
  - ➡ Quick commissioning with a PC (Start-drive) (Page 126)
  - ➡ Quick commissioning with the SINAMICS G120 Smart Access (Page 133)
5. Check if additional converter functions are required for the application.
  - ➡ Advanced commissioning (Page 139)
6. If necessary, adapt the drive.
  - ➡ Advanced commissioning (Page 139)
7. Save your settings and perform data backup.
  - ➡ Saving the settings in the converter (RAM → EEPROM) (Page 134)
  - ➡ Data backup and series commissioning (Page 359)

## 6.2 Commissioning tools

### PC tool - Startdrive

Startdrive is a PC tool that is used to commission, troubleshoot and control the drive, as well as to back up and transfer the drive settings. You can connect the PC with the converter via a USB cable or via the PROFINET fieldbus. The maximum permissible length of the USB cable is 3 m.

For the PROFINET variant, the supported Startdrive version is 16.4 or later.

For the AS-i and I/O variants, the supported Startdrive version is 16.5 or later.

#### System requirements and download

 Internet: Startdrive download (<https://support.industry.siemens.com/cs/ww/en/view/109771710>)

---

#### Note

##### Commissioning and/or diagnostic failure resulting from unsafe mobile device or PC

Using unsafe mobile devices or PC to commission and/or diagnose the converter through commissioning tools can cause system failure or unsafe operating status in your system.

- Maintain the mobile device or PC for commissioning and diagnostics according to the security guidelines, for example, by deploying the patches for the operating system, activating firewalls, or using a virus scanner.
- 

### SINAMICS G120 Smart Access



The SINAMICS G120 Smart Access is a Web server module and an engineering tool that provides wireless connection to a PC, a tablet, or a smartphone. It has been designed for quick setup, parameterization and diagnostics of the supported SINAMICS G120 converter or SINAMICS G115D converter. The SINAMICS G120 Smart Access is only for commissioning and thus cannot be used with the converter permanently.

Operating instructions of the SINAMICS G120 Smart Access:

 [Overview of the manuals \(Page 610\)](#)

### Compliance with the General Data Protection Regulation

Siemens respects the principles of data protection, in particular the data minimization rules (privacy by design).

For this product, it has the following meaning:

The product neither processes nor stores any person-related data. The product only processes or stores technical function data (e.g. time stamps). If you link these data with other data (e.g. shift plans) or store person-related data on the same data medium (e.g. hard disk), i.e., personalizing the data, you must ensure full compliance with the applicable data protection stipulations.

## 6.3 Preparing for commissioning

### 6.3.1 Factory settings

#### Motor

For the SINAMICS G115D Wall Mounted drive, the converter is pre-configured for an asynchronous motor that matches the rated power of the converter.

For the SINAMICS G115D Motor Mounted drive, the following converter settings have been set in the factory to the delivery condition to match the provided 2KJ8 geared motor.

Parameter	Description	Delivery condition
p1300[0...n]	Open-loop/closed-loop control operating mode	20: Speed control (encoderless)
p0300[0...n]	Motor type selection	The value is automatically preassigned to "181" or "602" dependent upon the selected SINAMICS G115D Motor Mounted drive. 181: 2KJ8 asynchronous motor 602: 2KJ8 synchronous reluctance motor
p0301[0...n]	Motor code number selection	The value is automatically preassigned dependent upon the selected SINAMICS G115D Motor Mounted drive.
p0541[0...n]	Load gearbox code number	
p0551[0...n]	Brake code number	
p0601[0...n]	Motor temperature sensor type	
p1215	Motor holding brake configuration	The value is automatically preassigned to "0" or "1" dependent upon the selected SINAMICS G115D Motor Mounted drive. 0: No motor holding brake available 1: Motor holding brake according to sequence control

For more information about restoring settings to the delivery condition on the SINAMICS G115D Motor Mounted drive, refer to the following section:

 Restoring the factory settings/delivery condition (without safety functions) (Page 136)

#### Converter interfaces


The inputs and outputs and the fieldbus interface of the converter have specific functions when set to the factory settings.

 Factory interface setting (Page 91)

### Switching the motor on and off

The converter is set in the factory as follows:

- For a converter with PROFINET or AS-i communication, the motor is switched on and off via the fieldbus.
- After the ON command, the motor accelerates with a ramp-up time of 1 s (referred to the maximum speed) to its speed setpoint.
- After the OFF1 command, the motor brakes down to standstill with 1 s ramp-down time.
- The motor direction of rotation reverses with the reversing command.

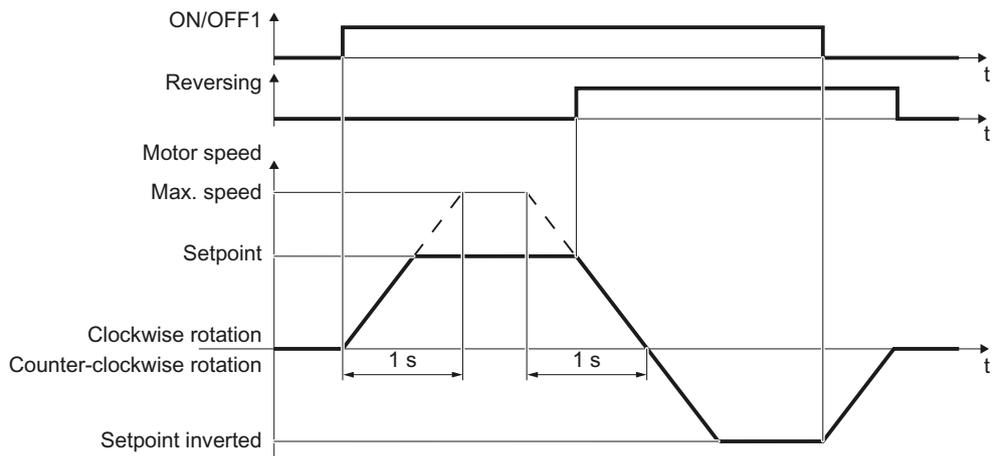


The ramp-up and ramp-down times define the maximum motor acceleration when the speed setpoint changes. The ramp-up and ramp-down times are derived from the time between motor standstill and the maximum speed, or between the maximum speed and motor standstill.

### Traversing the motor in JOG mode

You can use a commissioning tool (e.g., Startdrive or SINAMICS G120 Smart Access) or the local/remote control (LRC) panel to operate the motor in JOG mode.

When a control command is received, the motor rotates at  $\pm 150$  rpm. The same ramp-up and ramp-down times as described above apply.

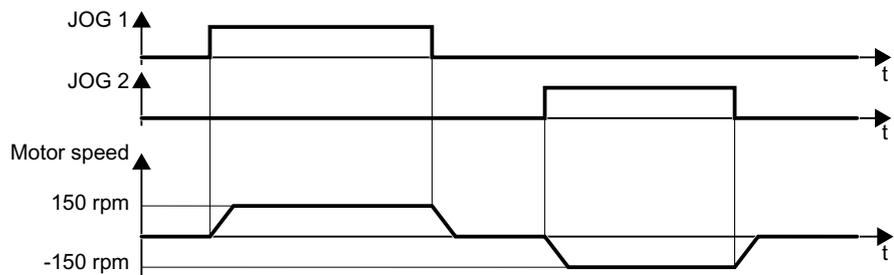

## 6.3.2 Collecting motor data

### G115D converter with SIMOGEAR geared motor

If you use a G115D converter with SIMOGEAR geared motor, you do not need to input specific motor data since all necessary motor data is pre-configured in the factory.

For more information about the detailed motor data, refer to the following section:

 Rating plate for geared motors with SINAMICS G115D Motor Mounted (Page 464)

### G115D wall-mounted converter

For a G115D wall-mounted converter, if you use a SIMOGEAR geared motor for SINAMICS G115D, you only need to specify the article number of the motor in the commissioning tool (Startdrive or SINAMICS G120 Smart Access); otherwise, you must enter the data shown on the motor rating plate.

#### Data for a SIMOGEAR geared motor

 Rating plate for geared motors with SINAMICS G115D Wall Mounted (Page 465)


Pay attention to the connection of the motor (star connection [Y] or delta connection [ $\Delta$ ]). Note the appropriate motor data for connecting.

6.3 Preparing for commissioning

**Data for a standard asynchronous motor**

Before starting commissioning, you must know the following data:

- **Which motor is connected to the converter?**  
 Note down the article number of the motor on the motor rating plate.  
 If available, note down the motor code on the motor rating plate.  
 See below for an example of the rating plate for a standard asynchronous motor:

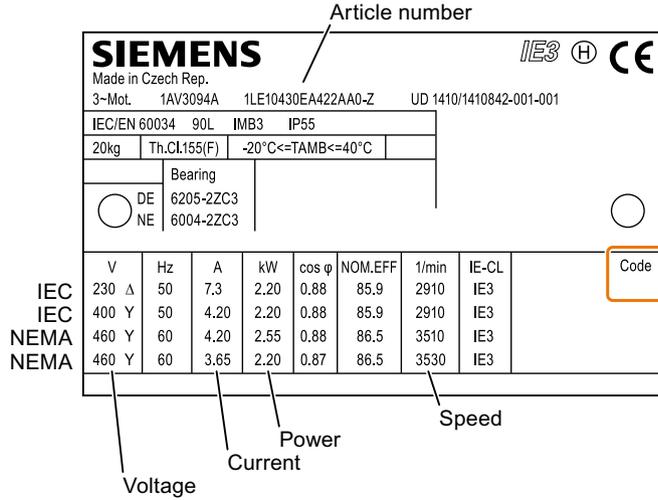

- **In which region of the world is the motor to be used?**  
 - Europe IEC: 50 Hz [kW]  
 - North America NEMA: 60 Hz [hp] or 60 Hz [kW]
- **How is the motor connected?**  
 Pay attention to the connection of the motor (star connection [Y] or delta connection [Δ]).  
 Note the appropriate motor data for connecting.

### Data for a synchronous reluctance motor

Before starting commissioning, you must know the following data:

- **Which motor is connected to the converter?**

Note down the motor code on the rating plate of the motor.

See below for an example of the rating plate for a reluctance motor:

SIEMENS										(H)	CE			
Made in Germany														
3-Mot. 1RV4205B 1FP10042AB521AF4 E XXX/XXXXXXXX XX 001														
IEC/EN 60034		200L		IMB3		IP55								
167 kg		Th.Cl. 155(F)		-20°C<=TAMB<=40°C										
Bearing														
DE 6212-ZC3														
NE 6212-ZC3														
INVERTER DUTY ONLY										VPWM	SINAMICS	NMAX	4500 1/min	Code
V	Hz	A	kW	cos φ	Nm	1/min	EFF							
380 Y	50	68	30.0	0.71	191	1500	94.9							
220 Δ	50	117	30.0	0.71	191	1500	94.9							
440 Y	60	66	34.5	0.72	183	1800	95.9							
380 Δ	87	118	52.0	0.71	191	2610	94.4							
							60007							

- **In which region of the world is the motor to be used?**

- Europe IEC: 50 Hz [kW]

- North America NEMA: 60 Hz [hp] or 60 Hz [kW]

- **How is the motor connected?**

Pay attention to the connection of the motor (star connection [Y] or delta connection [Δ]).

Note the appropriate motor data for connecting.

### 6.3.3 Selecting U/f control or speed control

For reluctance motors and permanent magnet synchronous motors, sensorless vector control (SLVC) is mandatory (p1300 = 20).

For asynchronous motors (2KJ8 asynchronous motors excluded), there are two different open-loop control or closed-loop control techniques:

- U/f control (calculation of the motor voltage using a characteristic curve)
- Closed-loop speed control (i.e. field-oriented control or vector control)

For 2KJ8 asynchronous motors, sensorless vector control (SLVC) is recommended (p1300 = 20).

### Criteria for selecting either U/f control or speed control

In many applications, U/f control suffices to change the speed of asynchronous motors. Examples of typical applications for U/f control include:

- Horizontal conveyors
- Pumps
- Fans
- Compressors

6.3 Preparing for commissioning

When compared to U/f control, vector control offers the following advantages:

- The speed is more stable for motor load changes.
- Shorter accelerating times when the setpoint changes.
- Acceleration and braking are possible with an adjustable maximum torque.
- Improved protection of the motor and the driven machine as a result of the adjustable torque limiting.
- Torque control is only possible with vector control.

Examples of typical applications in which speed control is used:

- Hoisting gear and vertical conveyors
- Winders
- Extruders

It is not permissible to use speed control in the following cases:

- If the motor is too small in comparison to the converter (the rated motor power must not be less than one quarter of the rated converter power).
- When you operate several motors on one converter.
- When the maximum motor (4-pole) speed exceeds the following values:

	Converter pulse frequency	
	4 kHz	4 kHz and higher
Maximum motor speed	4980 rpm	7200 rpm

6.3.4 Calculating maximum speed for permanent magnet synchronous motors

<p> <b>CAUTION</b></p> <p><b>Damage to the converter due to generator-driven motor</b></p> <p>If the load machine drives the permanent magnet synchronous motor unintentionally, the permanent magnet synchronous motor charges the DC link of the converter. An impermissibly high DC link voltage can destroy the DC link capacitors of the converter.</p> <ul style="list-style-type: none"> <li>• Ensure that the motor speed always remains below the calculated maximum speed even when the converter is disconnected from the power supply, e.g. via the brake on the load machine.</li> </ul>
--

Calculate the maximum speed:

$$n_{\max} = n_{\text{rated}} \cdot \sqrt{\frac{3}{2}} \cdot \frac{U_{\text{DC max}} \cdot I_{\text{rated}}}{P_{\text{rated}}}$$

$n_{\text{rated}}$  Rated motor speed

$U_{\text{DC max}}$  Maximum permissible DC link voltage in converter:

$V_{\text{DC max}} = 820 \text{ V}$  for mains voltage 380 V ... 480 V 3 AC

$I_{\text{rated}}$  Rated motor current

$P_{\text{rated}}$  Rated motor power

## 6.4 Quick commissioning

### 6.4.1 Quick commissioning with DIP switches

#### Overview

The G115D converters have been designed to allow quick commissioning to be performed using two sets of DIP switches. The DIP switches are located on the Wiring Module. To access the DIP switches, you must first remove the Electronic Module.

#### Accessing the DIP switches



#### WARNING


#### Electric shock caused by dangerous voltages and currents in the active converter

When power is applied to the converter, even when it is not active, dangerous levels of voltage and current are present in the system.

Before attempting the removal of any components of the system, the following steps should be taken to ensure that the system is completely safe:

1. Disconnect all mains power supplies (line supply and external 24 V power supply) to the system.
2. Wait five minutes to allow all the residual current and voltages to dissipate fully.
3. Check the voltage at the converter connections before removing any component.

Release the retaining screws (6 x M4) for the Electronic Module by using a 3 mm allen key, and then remove the module, as shown in the figure below:

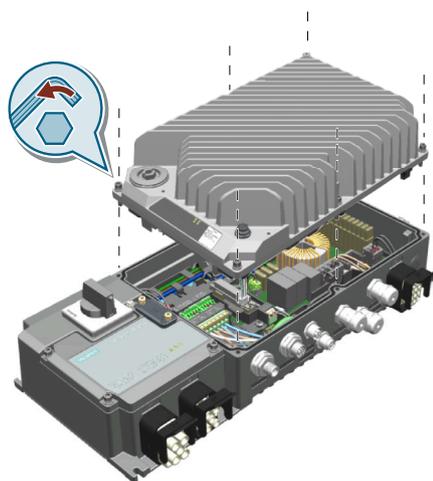

---

**Note**


Reattach the screws with a tightening torque of 2.5 Nm (22.1 lbf.in).

---



## Function description

You can use the DIP switches to perform basic commissioning and functional settings without using additional commissioning tools.

G115D wall-mounted converter

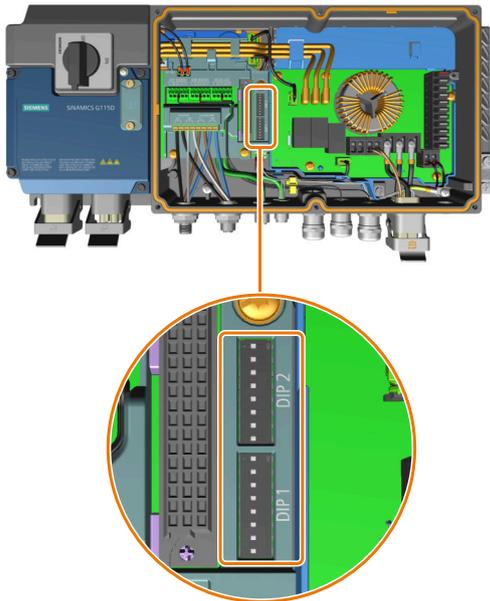

G115D motor-mounted converter

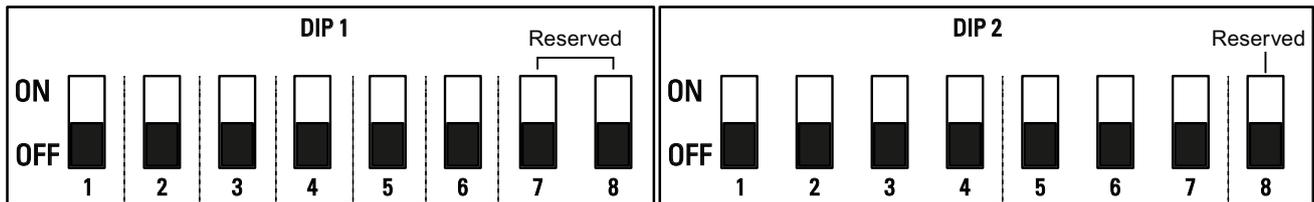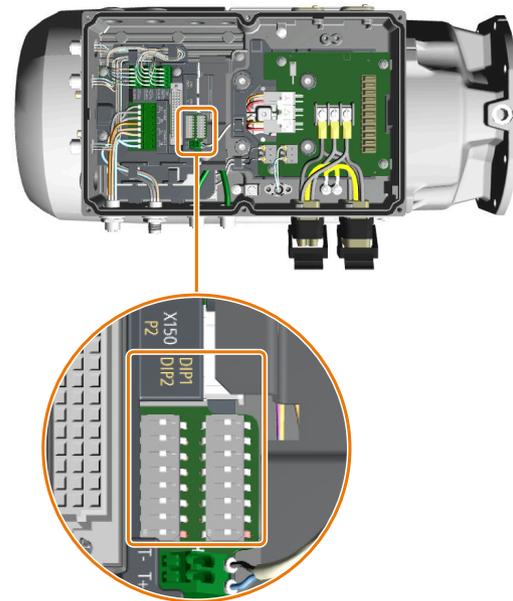

When the DIP switches are in the OFF position (by default), the value of the function is defined by the value of the according parameter(s) (see tables below). If the DIP switch is activated for a specific function, then the parameter(s) for that function cannot be modified by manually editing the parameter value.

### Commissioning DIP switches 1.1 ... 1.6

DIP switch	Function	Value	
		ON position	OFF position
DIP 1.1	Motor temperature sensor type	Pt1000	p0601
DIP 1.2	Motor direction reversal	reversed	p1820
DIP 1.3	EM brake configuration	Brake according to sequence control	p1215
DIP 1.4	Pulse frequency	16 kHz	p1800
DIP 1.5	Motor type selection	Reluctance motor	p0300
DIP 1.6	87 Hz operation	87 Hz operation possible in a delta connection	p0133

## Commissioning DIP switches 2.1 ... 2.4: ramp-up and ramp-down times

DIP switch				Value
DIP 2.1	DIP 2.2	DIP 2.3	DIP 2.4	
OFF	OFF	OFF	OFF	p1120, p1121, p1138, p1139
ON	OFF	OFF	OFF	0.1 s
OFF	ON	OFF	OFF	0.2 s
ON	ON	OFF	OFF	0.3 s
OFF	OFF	ON	OFF	0.5 s
ON	OFF	ON	OFF	0.7 s
OFF	ON	ON	OFF	1 s
ON	ON	ON	OFF	2 s
OFF	OFF	OFF	ON	3 s
ON	OFF	OFF	ON	5 s
OFF	ON	OFF	ON	7 s
ON	ON	OFF	ON	10 s
OFF	OFF	ON	ON	20 s
ON	OFF	ON	ON	30 s
OFF	ON	ON	ON	50 s
ON	ON	ON	ON	70 s

## Commissioning DIP switches 2.5 ... 2.7: macro selection

DIP switch			Value for PROFI-NET variant	Value for AS-i variant	Value for I/O variant
DIP 2.5	DIP 2.6	DIP 2.7			
OFF	OFF	OFF	p0015 *	p0015 *	p0015 *
ON	OFF	OFF	-	Macro 31	Macro 9
OFF	ON	OFF	-	Macro 34	Macro 60
ON	ON	OFF	-	Macro 66	Macro 61
OFF	OFF	ON	-	-	Macro 62
ON	OFF	ON	-	-	Macro 63
OFF	ON	ON	-	-	Macro 64

\* You must carry out quick commissioning in order to set parameter p0015.

For more information about the p0015 macros, see Section "Factory interface setting (Page 91)".

## 6.4.2 Quick commissioning with a PC (Startdrive)

### Overview

You can use a PC installed with Startdrive to perform quick commissioning via a USB or PROFINET interface. This chapter describes the commissioning via a USB interface.

The screen forms that are shown in this manual show generally valid examples. The number of setting options available in screen forms depends on the particular converter type.


### 6.4.2.1 Creating a project

#### Procedure

1. Start the Startdrive commissioning software.
2. Switch to project view by clicking on the link at the bottom left of the window, as shown below:



3. In the menu, select the following command:

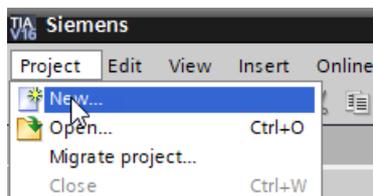

4. Specify a name of your choice for the project.


You have created a new project.



### 6.4.2.2 Integrating the converter into the project

#### Procedure


1. Switch on the converter power supply.
2. Remove the commissioning cover (1) from the G115D converter by using an S12 hex nut driver and insert a USB cable to establish the connection between your PC and the converter.

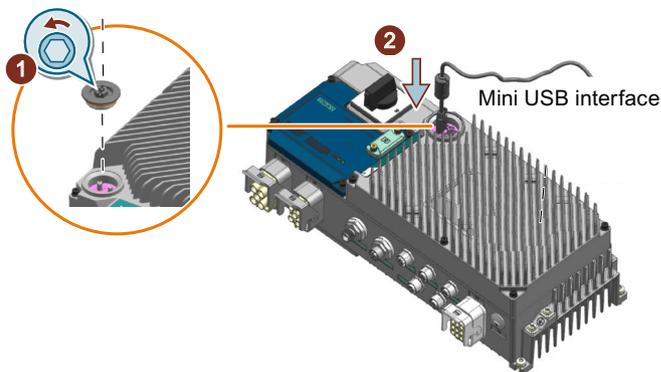



#### Note

Reattach the commissioning cover with a tightening torque of 2.5 Nm (22.1 lbf.in).

3. The PC operating system installs the USB driver when you are connecting the converter and PC together for the first time.
4. Click on the  button in the toolbar to open the window of accessible devices.
5. When the USB interface is appropriately set, then the screen form shows the devices that can be accessed.

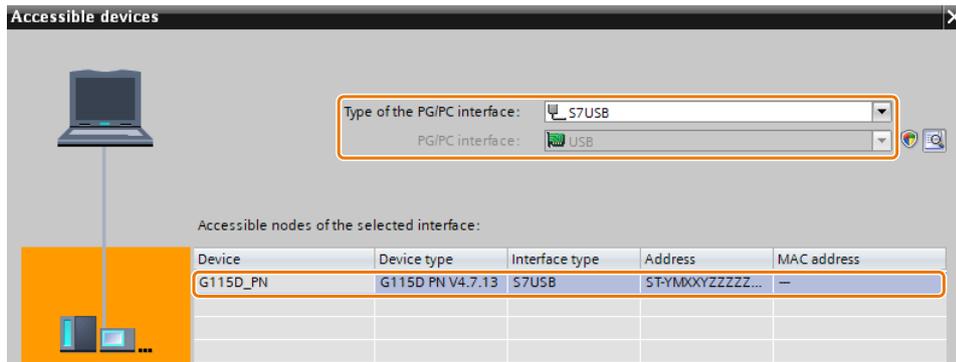

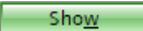
6. Select the desired device and click on the  button.
7. Transfer the converter into the project using the following menu:

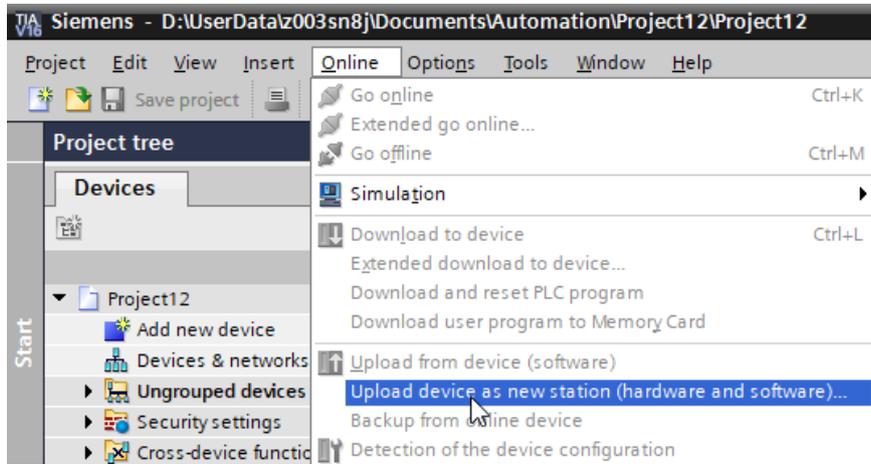


You have integrated a converter accessible via the USB interface into your project. 


### 6.4.2.3 Starting the Commissioning Wizard

#### Procedure

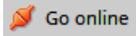1. Select your project and click on the  button to establish the online connection.
2. In the following screen form, select the converter with which you wish to go online.

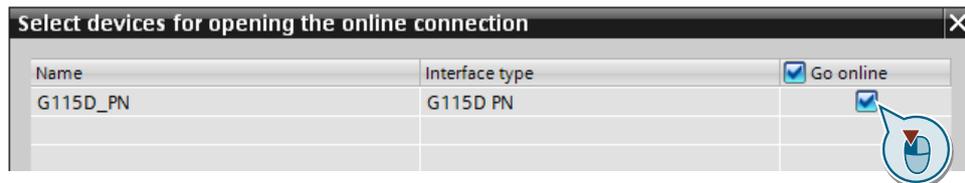

3. Once you are online, select the following command from the project tree:

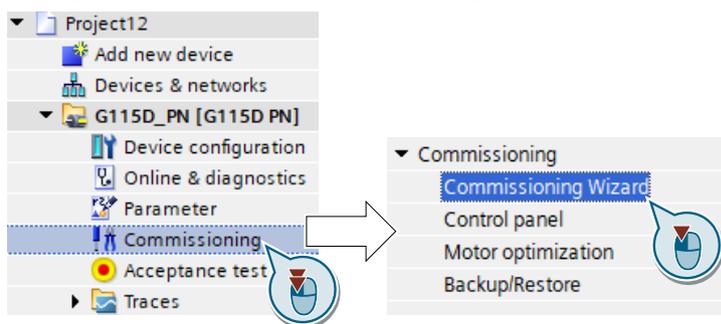

You have started the Commissioning Wizard of the converter.



### 6.4.2.4 Carrying out quick commissioning

#### Procedure



Select motor control mode.



Motor control (Page 291)



Select the I/O configuration to pre-assign the converter interfaces.



Factory interface setting (Page 91)



- Set the applicable motor standard and the converter supply voltage.
- Select the application for the drive:
  - [0] Load cycle with high overload: for applications requiring a high dynamic performance, e.g. conveyor systems.
  - [1] Load cycle with low overload: for applications that do not require a high dynamic performance, e.g. pumps or fans.
- Set the pulse frequency for the converter.



If an external braking resistor is installed, you must set the maximum permissible braking power of the braking resistor.

6.4 Quick commissioning

Motor

The geared motor of the G115D Motor Mounted drive has been parameterized before factory delivery.

- Configure your motor in either of the following ways:
  - Enter the motor data according to the rating plate of your motor.
  - If you use a Siemens motor, select a motor based on its article number. In this case, the values of the selected motor are taken as default motor data.
- Set the motor connection (star/delta) and the 87 Hz characteristic.
- Select the temperature sensor for monitoring of the motor temperature.
- Select to reverse the output phase sequence or not.

Motor holding brake

Define whether the converter actuates a motor holding brake.

Important parameters

Set the most important parameters to suit your application.

Drive functions


- Select the technological application:
  - [0]: In all applications that do not fall under [3]
  - [3]: Applications involving pumps and fans with optimized efficiency. The setting only makes sense for steady-state operation with slow speed changes.
- Set the motor data identification:
  - [1]: Recommended setting for "speed control" control type. Measure the motor data at standstill and with the motor rotating. The converter switches off the motor after the motor data identification has been completed.
  - [2]: Measure the motor data at standstill. The converter switches off the motor after the motor data identification has been completed.  
Recommended setting for the following cases:
    - ⇒ You have selected "Speed control" as control mode, however the motor cannot freely rotate, e.g. for mechanically limited traversing sections.
    - ⇒ You have set "U/f control" as control mode.
  - [3]: Measure the motor data while the motor is rotating. The converter switches off the motor after the motor data identification has been completed.
- Calculate the motor parameters.

Encoders

Enter the encoder data if you use an HTL encoder for the positioning function via PLC.

Summary

Set the check mark as follows to save your data in the converter and the memory card (if inserted) so that it is not lost if the power fails. Click on the **Finish** button.

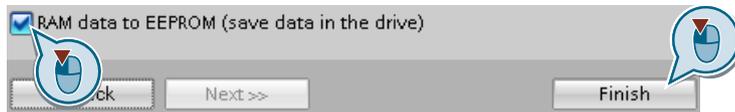

You have entered all of the data that is necessary for the quick commissioning of the converter.

□

### 6.4.2.5 Identifying motor data

#### Overview

Using the motor data identification, the converter measures the data of the stationary motor. In addition, based on the response of the rotating motor, the converter can determine a suitable setting for the vector control.

To start the motor data identification routine, you must switch on the motor.

#### Identifying the motor data and optimizing the closed-loop control

##### Preconditions

- You have selected a method of motor data identification during quick commissioning, e.g. measurement of the motor data while the motor is stationary.  
When quick commissioning is complete, the converter issues alarm A07991.
- The motor has cooled down to the ambient temperature.  
An excessively high motor temperature falsifies the motor data identification results.
- The PC and converter are connected to each other online.




##### **WARNING**

##### **Unexpected machine motion while the motor data identification is in progress**

For the stationary measurement, the motor can make several rotations. The rotating measurement accelerates the motor up to the rated speed. Secure dangerous machine parts before starting motor data identification:

- Before switching on, ensure that nobody is working on the machine or located within its working area.
- Secure the machine's work area against unintended access.
- Lower suspended loads to the floor.

Procedure

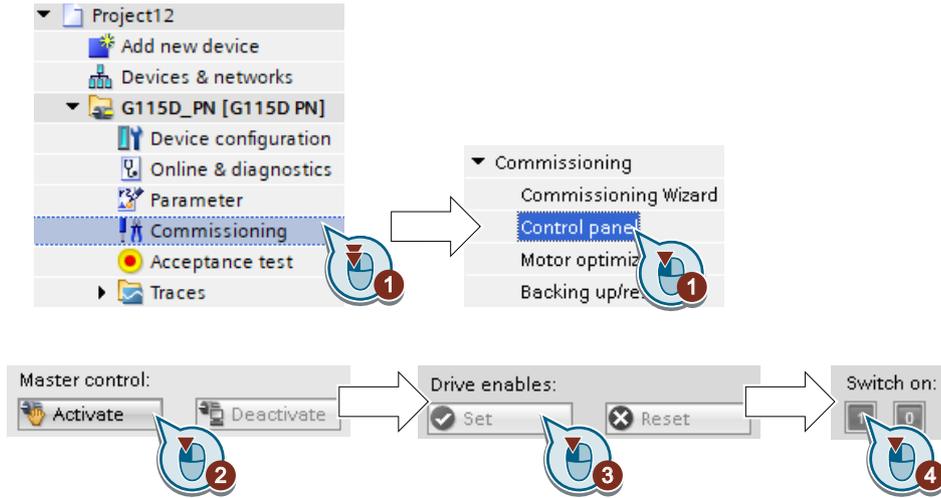

1. Open the control panel.
  2. Assume master control for the converter.
  3. Set the drive to enable state.
  4. Switch on the motor.  
The converter starts the motor data identification. This measurement can take several minutes.  
Depending on the setting, after motor data identification has been completed, the converter switches off the motor - or it accelerates it to the currently set setpoint.
  5. If required, switch off the motor.
  6. Relinquish the master control after the motor data identification.
  7. Save the settings in the converter (RAM → EEPROM) (Page 134).
- You have completed the motor data identification.
- ☐

Self-optimization of the speed control

<b>! WARNING</b>
<b>Unexpected machine motion while the motor data identification is in progress</b>
For the stationary measurement, the motor can make several rotations. The rotating measurement accelerates the motor up to the rated speed. Secure dangerous machine parts before starting motor data identification:
<ul style="list-style-type: none"><li>• Before switching on, ensure that nobody is working on the machine or located within its working area.</li><li>• Secure the machine's work area against unintended access.</li><li>• Lower suspended loads to the floor.</li></ul>


If you have not only selected motor data identification with the motor stationary, but also rotating measurement with self-optimization of the speed control, you must switch on the motor again as described above and wait for the optimization run to finish.

Quick commissioning has been completed once the motor data identification has been successfully completed.

### 6.4.3 Quick commissioning with the SINAMICS G120 Smart Access

You can access the SINAMICS G120 Web pages from a PC or a mobile device that connects to the SINAMICS G120 Smart Access. The Web pages allow you to configure a comprehensive range of settings to meet the specific requirements of the G115D converters. You can perform the following three setups:

- Quick setup
- Application setup
- Safety setup

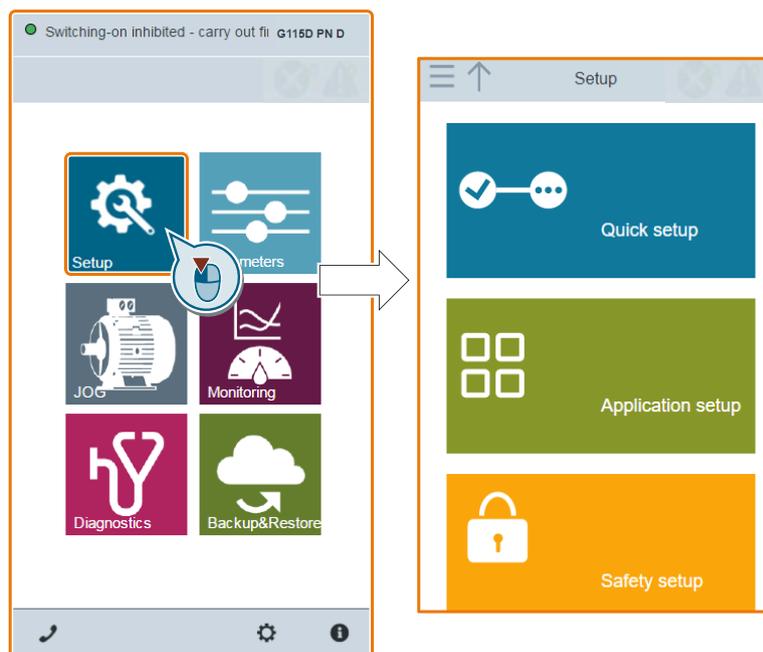

#### Further information

For more information on accessing the SINAMICS G120 Web pages and carrying out quick commissioning, see the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

#### 6.4.4 Self-optimization of the speed control

##### Self-optimization of the speed control

If you have not only selected motor data identification with the motor stationary, but also rotating measurement with self-optimization of the speed control, you must switch on the motor again as described above and wait for the optimization run to finish.

Quick commissioning has been completed once the motor data identification has been successfully completed.

##### Recommendations


- Induction motors  
When commissioning induction machines, you are advised to proceed as follows:
  - Before connecting the load, a complete "rotating measurement" (p1900 = 3 or without encoder: p1960 = 1; with encoder: p1960 = 2) should be carried out. Since the induction machine is idling, you can expect highly accurate results for the saturation characteristic and the rated magnetizing current.
  - When the load is connected, speed controller tuning should be repeated because the total moment of inertia has changed. This is realized by selecting parameter p1960 (without encoder: p1960 = 3; with encoder: p1960 = 4). During the speed optimization, the saturation characteristic recording is automatically deactivated in parameter p1959.
- Permanent-magnet synchronous motors  
When permanent-magnet synchronous motors are commissioned, the speed controller should be tuned (p1900 = 3 or p1960 > 0) when the load is connected.

#### 6.5 Saving the settings in the converter (RAM → EEPROM)


The parameter values are normally saved as volatile data in the RAM of the converter. After you finish the commissioning, you must save your settings to the converter's non-volatile memory (EEPROM) to prevent unexpected data loss. If an optional memory card is present, performing the save operations (RAM → EEPROM) automatically copies all settings to the memory card.

### Procedure with Startdrive

1. Go online with the converter.
2. Select the command as follows from the project tree:

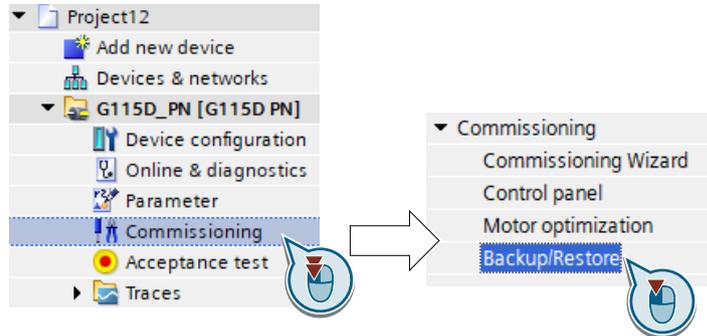

3. Click on the button in the dialog box as shown below:

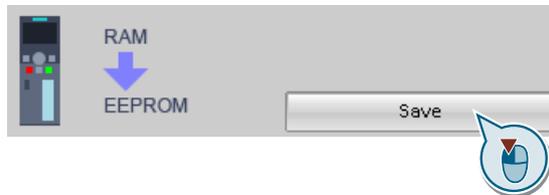

You have saved your settings retentively in the EEPROM.



### Further information

For more information on saving the settings (RAM → EEPROM) on the SINAMICS G120 Smart Access, see Section "Parameters" in the SINAMICS G120 Smart Access Operating Instructions.

 [Overview of the manuals \(Page 610\)](#)

## 6.6 Restoring the factory settings

### When must you restore the factory settings?

Restore the converter to the factory settings in the following cases:

- You do not know the converter settings.
- The line voltage was interrupted during commissioning and you were not able to complete commissioning.

### Restoring the factory settings when the safety functions are enabled

If you are using the integrated safety functions of the converter, e.g. "Safe Torque Off", you must reset the safety functions separately from the remaining converter settings.

6.6 Restoring the factory settings

The settings of the safety functions are protected by a password.


Settings that are not changed when restoring the factory setting

The communication settings and the settings of the motor standard (IEC/NEMA) are kept when restoring the factory setting.


6.6.1 Restoring the factory settings/delivery condition (without safety functions)

Procedure with Startdrive


- 1. Go online with the converter.
- 2. Select the command as follows from the project tree:

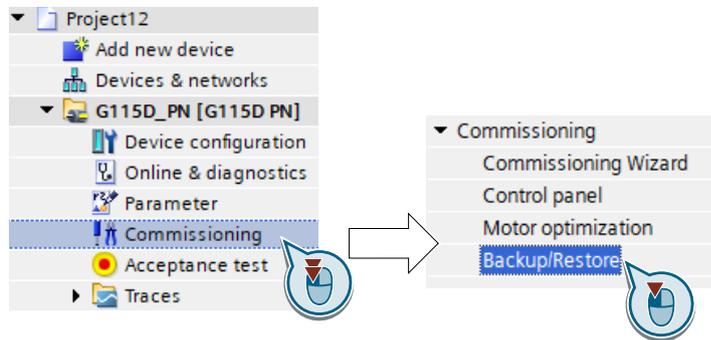

- 3. For the G115D wall-mounted converter, select the menu option as follows to restore to the factory settings:

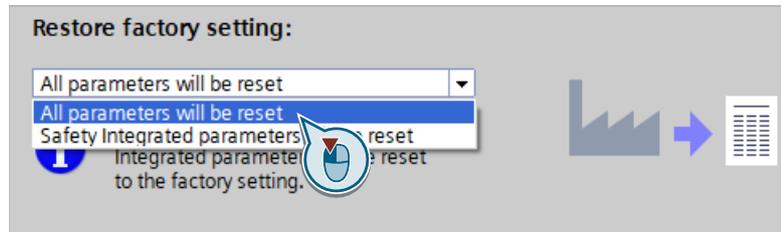

- For the G115D motor-mounted converter, select the menu option as follows to restore to the delivery condition:

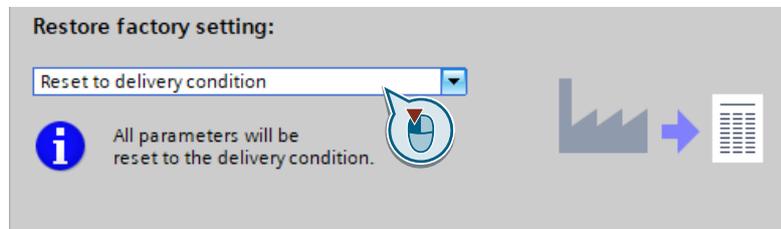

- 4. Click on the **Start** button.
- 5. Wait until the converter has been reset to the factory settings/delivery condition.

You have reset the converter to the factory settings/delivery condition.



## Further information

For more information on restoring on the SINAMICS G120 Smart Access, see Section "Backup and restore" in the SINAMICS G120 Smart Access Operating Instructions.




Overview of the manuals (Page 610)


## 6.6.2 Resetting the safety functions to the factory settings

### Procedure with Startdrive

1. Go online with the converter.
2. Select the command as follows from the project tree:

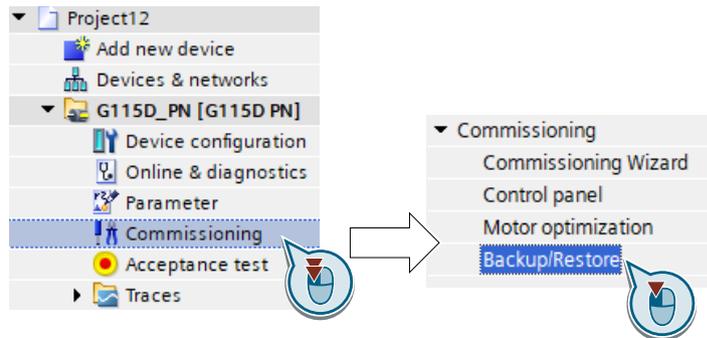

3. Select the menu option as follows:

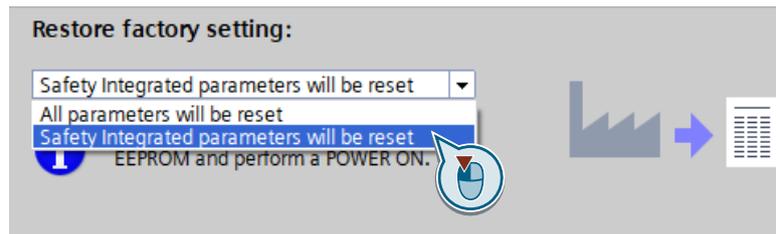

4. Click on the **Start** button.
5. Select the reset options as desired by setting the check marks in the following dialog box:



## 6.6 Restoring the factory settings


6. Enter the password for the safety functions and the resetting process starts.
7. Go offline with the converter after the reset finishes.
8. Switch off the converter power supply and wait until all LEDs on the converter are dark.
9. Switch on the converter power supply again.

You have restored the safety functions in the converter to the factory settings.



# Advanced commissioning

## 7.1 Overview of converter functions

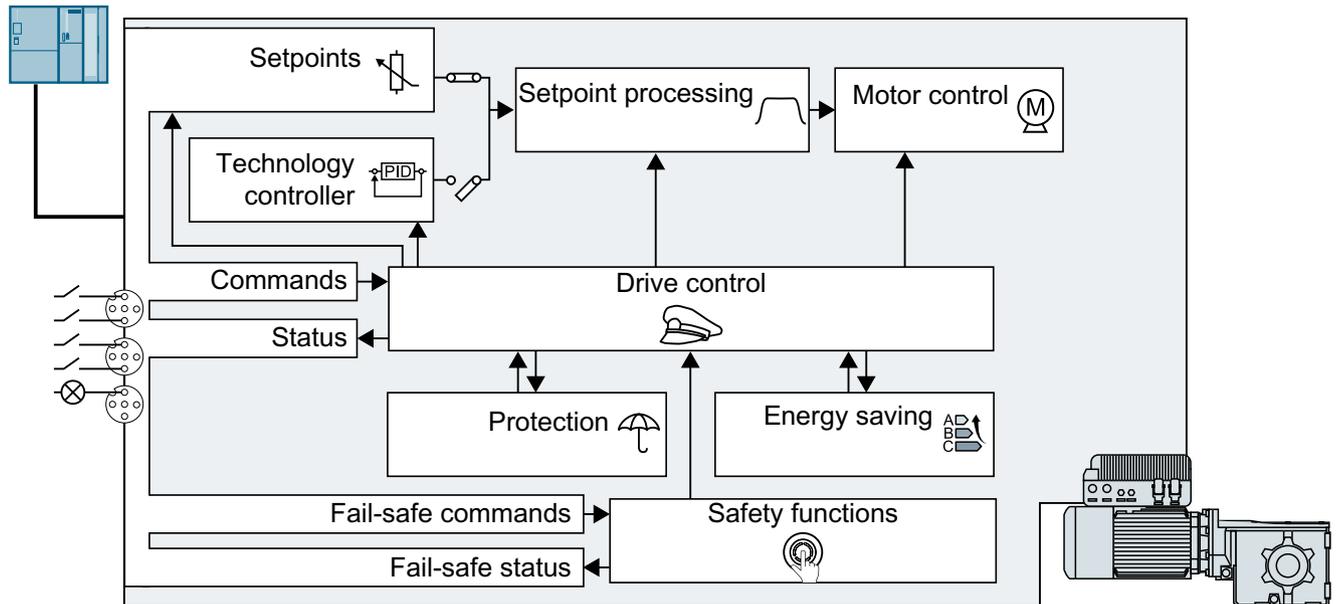

### Drive control



The converter receives its commands from the higher-level control via the terminal strip or the fieldbus interface of the converter. The drive control defines how the converter responds to the commands.

- Sequence control when switching the motor on and off (Page 141)
- Adapt the default settings of the inputs and outputs (Page 143)
- Controlling clockwise and counter-clockwise rotation via digital inputs (Page 146)
- Drive control via PROFINET (Page 152)
- Drive control via Ethernet/IP (Page 167)
- Drive control via AS-i (Page 183)
- Drive control via I/O terminals (Page 90)
- Jogging (Page 194)
- Conveyor technology control functions (for G115D PROFINET and AS-i variants only) (Page 195)

The converter can switch between different settings of the drive control.

- Switching over the drive control (command data set) (Page 232)

The converter can control a motor holding brake. The motor holding brake holds the motor in position when it is switched off.

 Motor holding brake (Page 234)

The free function blocks permit configurable signal processing within the converter.

 Free function block (Page 240)

You can select in which physical units the converter represents its associated values.

 Selecting physical units (Page 240)

## Safety functions



The safety functions fulfill increased requirements regarding the functional safety of the drive.

 Safe Torque Off (STO) safety function (Page 243)

## Setpoints and setpoint processing



The setpoint normally defines the motor speed.

 Setpoints (Page 265)



The setpoint processing uses a ramp-function generator to prevent speed steps occurring and to limit the speed to a permissible maximum value.

 Setpoint processing (Page 274)

## Technology controller



The technology controller controls process variables, e.g. pressure, temperature, level or flow. The motor control receives the setpoint either from the higher-level control or from the technology controller.

 PID technology controller (Page 284)

## Motor control



The motor control ensures that the motor follows the speed setpoint. You can choose between various control modes.

 Motor control (Page 291)

The converter provides several methods to brake the motor electrically. During electrical braking, the motor develops a torque that reduces the speed to standstill.

 Electrically braking the motor (Page 318)

## Protection of the drive and the driven load



The protection functions prevent damage to the motor, converter and driven load.

 Overcurrent protection (Page 324)

 Converter protection using temperature monitoring (Page 325)

 Motor temperature monitoring using a temperature sensor (Page 329)

 Motor protection by calculating the temperature (Page 332)

 Motor and converter protection by limiting the voltage (Page 334)

The monitoring of the driven load prevents impermissible operating modes, e.g. dry-running of a pump.

 Monitoring the driven load (Page 336)

## Energy saving



The converter can optimize the efficiency of the motor.

 Efficiency optimization (Page 343)

The converter calculates how much energy controlled converter operation saves when compared to mechanical flow control (e.g. throttle).


 Calculating the energy saving for fluid flow machines (Page 346)

## 7.2 Sequence control when switching the motor on and off

### Overview



The sequence control defines the rules for switching the motor on and off.

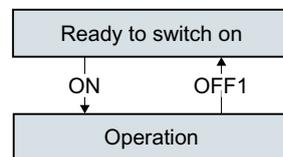

After switching the supply voltage on, the converter normally goes into the "ready to start" state. In this state, the converter waits for the command to switch on the motor.

The converter switches on the motor with the ON command. The converter changes to the "Operation" state.

After the OFF1 command, the converter brakes the motor down to standstill. The converter switches off the motor once standstill has been reached. The converter is again "ready to start".

### Requirement

#### Functions

In order to be able to respond to external commands, you must set the command interface so that it fits your specific application.

#### Tools

To change the function settings, you can use a commissioning tool.



### Commands for switching the motor on and off

ON JOG 1 JOG 2 Enable operation	The converter switches the motor on.
OFF1, OFF3	The converter brakes the motor. The converter switches off the motor once it comes to a standstill. The motor is considered to be stationary if the speed is less than a defined minimum speed.
OFF2 Inhibit operation	The converter switches off the motor immediately without first braking it.

### Further information

You will find additional information in function diagram 2610 of the List Manual.

## 7.3 Adapt the default settings of the inputs and outputs


### 7.3.1 Overview



In the converter, the input and output signals are interconnected with specific converter functions using special parameters. The following parameters are available to interconnect signals:

- Binectors BI and BO are parameters to interconnect binary signals.
- Connectors CI and CO are parameters to interconnect analog signals.

This chapter describes how you adapt the function of individual converter inputs and outputs using binectors and connectors.

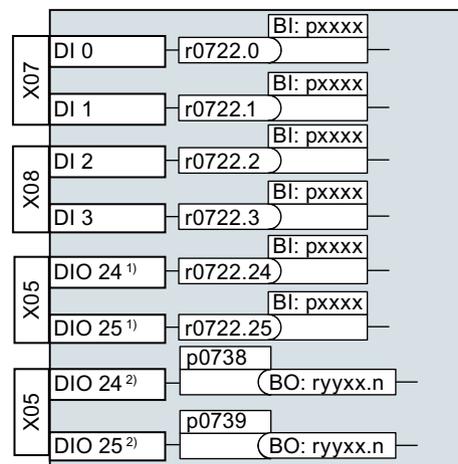


<sup>1)</sup> If parameterized as digital inputs via p0728

<sup>2)</sup> If parameterized as digital outputs via p0728

### 7.3.2 Digital Inputs

#### Changing the function of the digital inputs

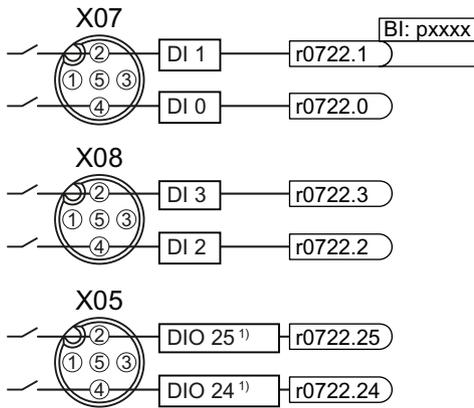

Interconnect the status parameter of the digital input with a binector input of your choice.

Interconnecting signals in the converter (Page 603)

Binector inputs are marked with "BI" in the parameter list of the List Manual.


<sup>1)</sup>Parameterized as digital inputs

#### Binector inputs (BI) of the converter

BI	Significance	BI	Significance
p0810	Command data set selection CDS bit 0	p1036	Motorized potentiometer, setpoint, lower
p0840	ON/OFF1	p1055	Jog bit 0
p0844	OFF2	p1056	Jog bit 1
p0848	OFF3	p1113	Setpoint inversion
p0852	Enable operation	p1201	Flying restart enable signal source
p0855	Unconditionally release holding brake	p2103	1st acknowledge faults
p0856	Enable speed controller	p2106	External fault 1
p0858	Unconditionally close holding brake	p2112	External alarm 1
p1020	Fixed speed setpoint selection bit 0	p2200	Technology controller enable
p1021	Fixed speed setpoint selection bit 1	p3330	Two-wire/three-wire control, control command 1
p1022	Fixed speed setpoint selection bit 2	p3331	Two-wire/three-wire control, control command 2
p1023	Fixed speed setpoint selection bit 3	p3332	Two-wire/three-wire control, control command 3
p1035	Motorized potentiometer, setpoint, raise		

A complete list of the binector inputs is provided in the List Manual.

#### Example

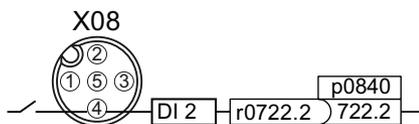


In order to switch on the motor with digital input DI 2, you have to connect the status parameter of DI 2 to p0840: Set p0840 = 722.2.

**Advanced settings**

You can debounce the digital input signal using parameter p0724.

For more information, see the parameter list and the function block diagram 2220 of the List Manual.

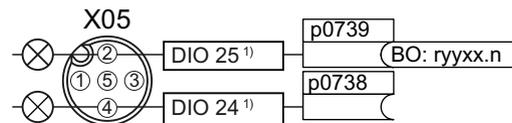**7.3.3 Digital outputs****Changing the function of the digital outputs**

<sup>1)</sup> Parameterized as digital outputs

Interconnect the digital output with a binector output of your choice.


 Interconnecting signals in the converter (Page 603)

Binector outputs are marked with "BO" in the parameter list of the List Manual.

**Binector outputs of the converter**

0	Deactivating digital output	r0052.9	Process data control
r0052.0	Drive ready	r0052.10	$f\_actual \geq p1082 (f\_max)$
r0052.1	Drive ready for operation	r0052.11	Alarm: Motor current/torque limit
r0052.2	Drive running	r0052.12	Brake active
r0052.3	Drive fault active	r0052.13	Motor overload
r0052.4	OFF2 active	r0052.14	Motor CW rotation
r0052.5	OFF3 active	r0052.15	Converter overload
r0052.6	Switching on inhibited active	r0053.0	DC braking active
r0052.7	Drive alarm active	r0053.2	$f\_actual > p1080 (f\_min)$
r0052.8	Setpoint/actual value discrepancy	r0053.6	$f\_actual \geq \text{setpoint} (f\_setpoint)$

A complete list of the binector outputs is provided in the List Manual.

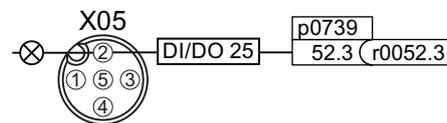**Example**

In order to output the fault message over the digital output DI/DO 25, you have to connect the DI/DO 25 with the fault message: Set p0739 = 52.3.

**Advanced settings**

You can invert the signal of the digital output using parameter p0748.

For more information, see the parameter list and the function block diagram 2230 of the List Manual.

## 7.4 Controlling clockwise and counter-clockwise rotation via digital inputs



The converter offers different methods for controlling the motor using two or three commands.

### Overview


#### Two-wire control, method 1

ON/OFF1:

Switches the motor on or off

Reversing:

Reverses the motor direction of rotation

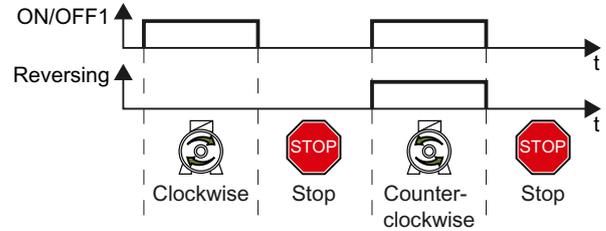


#### Two-wire control, method 2 - and two-wire control, method 3

ON/OFF1 clockwise rotation:

Switches the motor on or off, clockwise rotation

ON/OFF1 counter-clockwise rotation:

Switches the motor on or off, counter-clockwise rotation

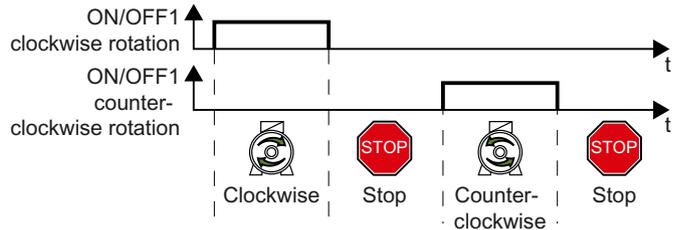

#### Three-wire control, method 1

Enable/OFF1:


Enables the motor to be switched on or switched off

ON clockwise rotation:

Switches on the motor, clockwise rotation

ON counter-clockwise rotation:

Switches on the motor, counter-clockwise rotation

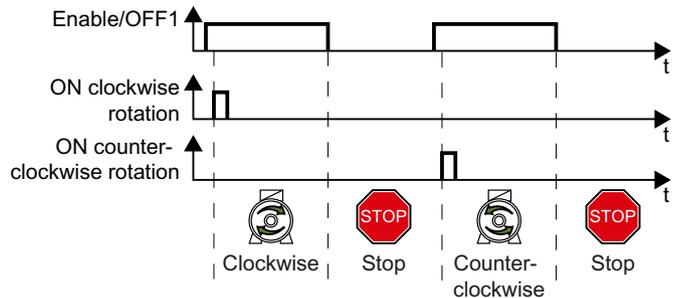

7.4 Controlling clockwise and counter-clockwise rotation via digital inputs

**Three-wire control, method 2**

Enable/OFF1:


Enables the motor to be switched on or switched off

ON:


Switches on the motor

Reversing:

Reverses the motor direction of rotation

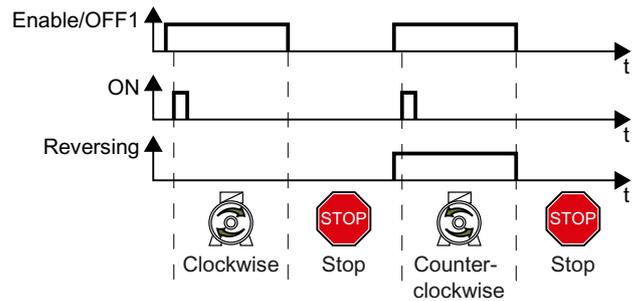

**7.4.1 Two-wire control, method 1**

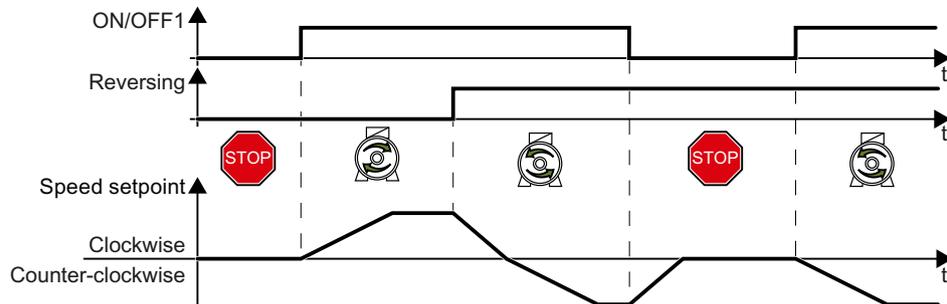

Command "ON/OFF1" switches the motor on and off. The "Reversing" command inverts the motor direction of rotation.

ON/OFF1	Reversing	Function
0	0	OFF1: The motor stops
0	1	
1	0	ON: Clockwise motor rotation
1	1	ON: Counter-clockwise motor rotation

**Parameters**


**Select two-wire control, method 1**

Parameter	Description
p0015 = 60	<p><b>Macro drive unit</b></p> <p>You must carry out quick commissioning in order to set parameter p0015.</p> <p>Assigning digital inputs DI to the commands:</p> <p>DI 0: ON/OFF1</p> <p>DI 1: Reversing</p>

### Changing the assignment of the digital inputs

Parameter	Description
p0840[0...n] = 722.x	<b>BI: ON/OFF1 (ON/OFF1)</b> Example: p0840 = 722.3 ⇒ DI 3: ON/OFF1
p1113[0...n] = 722.x	<b>BI: Setpoint inversion (reversing)</b>

### 7.4.2 Two-wire control, method 2

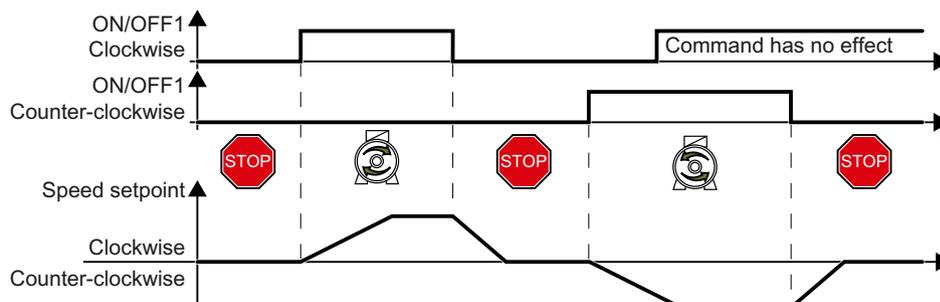

Commands "ON/OFF1 clockwise rotation" and "ON/OFF1 counter-clockwise rotation" switch on the motor - and simultaneously select a direction of rotation. The converter only accepts a new command when the motor is at a standstill.

ON/OFF1 clockwise rotation	ON/OFF1 counter-clockwise rotation	Function
0	0	OFF1: The motor stops.
1	0	ON: Clockwise motor rotation.
0	1	ON: Counter-clockwise motor rotation.
1	1	ON: The motor direction of rotation is defined by the command that first reaches state "1".

### Parameters


#### Select two-wire control, method 2

Parameter	Description
p0015 = 61	<b>Macro drive unit</b> You must carry out quick commissioning in order to set parameter p0015. Assigning digital inputs DI to the commands: DI 0: ON/OFF1 clockwise rotation DI 1: ON/OFF1 counter-clockwise rotation

### Changing the assignment of the digital inputs

Parameter	Description
p3330[0 ... n] = 722.x	<b>BI: 2/3 wire control command 1</b> (ON/OFF1 clockwise rotation)
p3331[0 ... n] = 722.x	<b>BI: 2/3 wire control command 2</b> (ON/OFF1 counter-clockwise rotation) Example: p3331 = 722.0 ⇒ DI 0: ON/OFF1 counter-clockwise rotation

### 7.4.3 Two-wire control, method 3

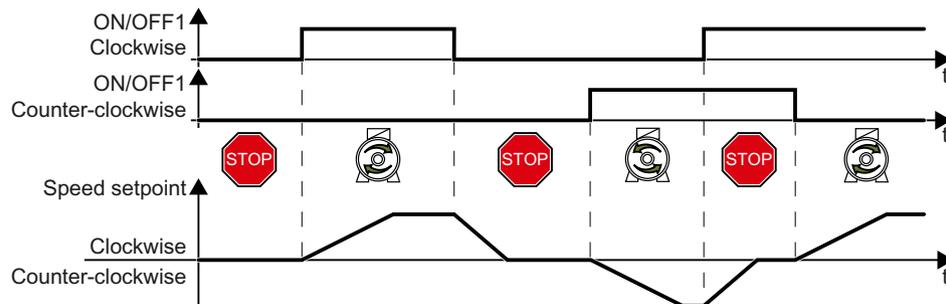

Commands "ON/OFF1 clockwise rotation" and "ON/OFF1 counter-clockwise rotation" switch on the motor - and simultaneously select a direction of rotation. The converter accepts a new command at any time, independent of the motor speed.

ON/OFF1 clockwise rotation	ON/OFF1 counter-clockwise rotation	Function
0	0	OFF1: The motor stops.
1	0	ON: Clockwise motor rotation.
0	1	ON: Counter-clockwise motor rotation.
1	1	OFF1: The motor stops.

### Parameters


#### Select two-wire control, method 3

Parameter	Description
p0015 = 62	<b>Macro drive unit</b> You must carry out quick commissioning in order to set parameter p0015. Assigning digital inputs DI to the commands: DI 0: ON/OFF1 clockwise rotation DI 1: ON/OFF1 counter-clockwise rotation

### Changing the assignment of the digital inputs

Parameter	Description
p3330[0 ... n] = 722.x	<b>BI: 2/3 wire control command 1</b> (ON/OFF1 clockwise rotation)
p3331[0 ... n] = 722.x	<b>BI: 2/3 wire control command 2</b> (ON/OFF1 counter-clockwise rotation) Example: p3331 = 722.0 ⇒ DI 0: ON/OFF1 counter-clockwise rotation

#### 7.4.4 Three-wire control, method 1

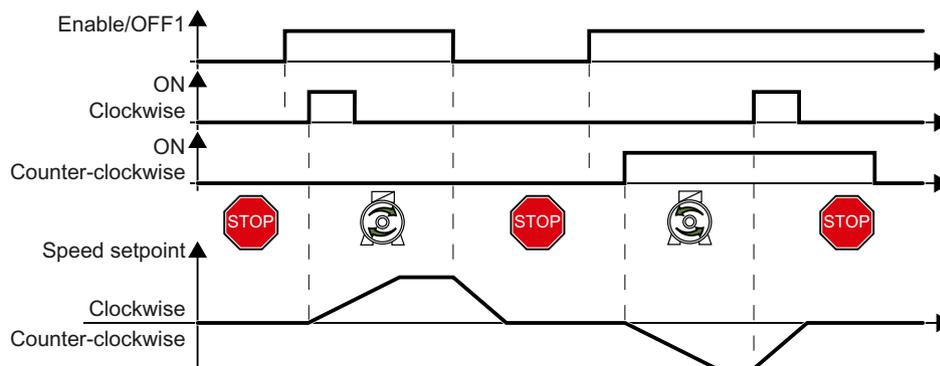

The "Enable" command is a precondition for switching on the motor. Commands "ON clockwise rotation" and "ON counter-clockwise rotation" switch on the motor - and simultaneously select a direction of rotation. Removing the enable switches the motor off (OFF1).

Enable / OFF1	ON clockwise rotation	ON counter-clockwise rotation	Function
0	0 or 1	0 or 1	OFF1: The motor stops.
1	0→1	0	ON: Clockwise motor rotation.
1	0	0→1	ON: Counter-clockwise motor rotation.
1	1	1	OFF1: The motor stops.

### Parameters


#### Select three-wire control, method 1

Parameter	Description
p0015 = 63	<b>Macro drive unit</b> You must carry out quick commissioning in order to set parameter p0015. Assigning digital inputs DI to the commands: DI 0: Enable/OFF1 DI 1: ON counter-clockwise rotation DI 2: ON clockwise rotation

## Changing the assignment of the digital inputs

Parameter	Description
p3330[0 ... n] = 722.x	<b>BI: 2/3 wire control command 1</b> (enable/OFF1)
p3331[0 ... n] = 722.x	<b>BI: 2/3 wire control command 2</b> (ON clockwise rotation)
p3332[0 ... n] = 722.x	<b>BI: 2/3 wire control command 3</b> (ON counter-clockwise rotation) Example: p3332 = 722.0 ⇒ DI 0: ON counter-clockwise rotation

## 7.4.5 Three-wire control, method 2

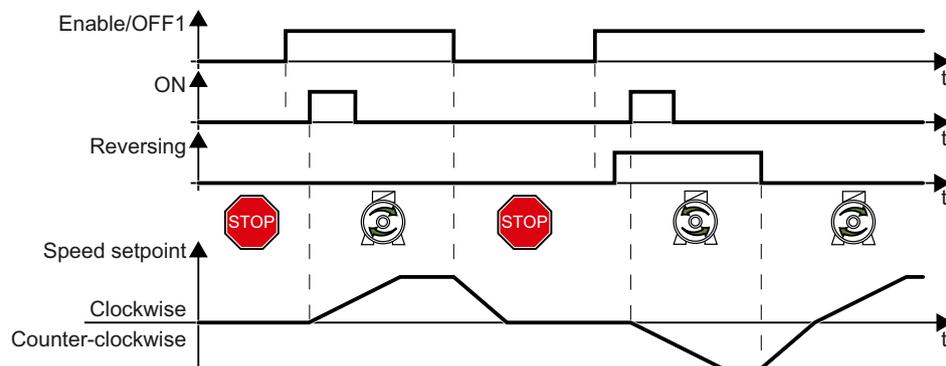

The "Enable" command is a precondition for switching on the motor. The "ON" command switches the motor on. The "Reversing" command inverts the motor direction of rotation. Removing the enable switches the motor off (OFF1).

Enable/OFF1	ON	Reversing	Function
0	0 or 1	0 or 1	OFF1: The motor stops.
1	0→1	0	ON: Clockwise motor rotation.
1	0→1	1	ON: Counter-clockwise motor rotation.

## Parameters

## Select three-wire control, method 2

Parameter	Description
p0015 = 64	<b>Macro drive unit</b> You must carry out quick commissioning in order to set parameter p0015. Assigning digital inputs DI to the commands: DI 0: Enable/OFF1 DI 1: ON DI 2: Reversing

### Changing the assignment of the digital inputs

Parameter	Description
p3330[0 ... n] = 722.x	<b>BI: 2/3 wire control command 1</b> (enable/OFF1)
p3331[0 ... n] = 722.x	<b>BI: 2/3 wire control command 2</b> (ON) Example: p3331 = 722.0 ⇒ DI 0: ON command
p3332[0 ... n] = 722.x	<b>BI: 2/3 wire control command 3</b> (reversing)


## 7.5 Drive control via PROFINET

### 7.5.1 Receive data and send data

#### Cyclic data exchange




The converter receives cyclic data from the higher-level control and returns cyclic data to the control.

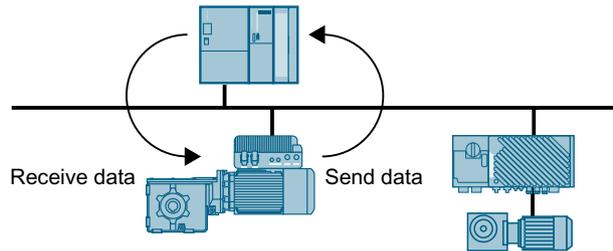

Converter and control system pack their data in telegrams.

Every telegram for cyclic data exchange has the following basic structure:

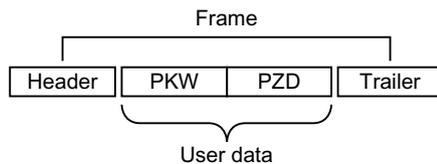

- Header and trailer form the protocol frame.
- User data is located within the frame:
  - PKW: The control can read or change every parameter in the converter via "PKW data". Not every telegram has a "PKW range".
  - PZD: The converter receives control commands and setpoints from the higher-level control - and sends status messages and actual values via "PZD data".

## PROFIdrive and telegram numbers

For typical applications, certain telegrams are defined in the PROFIdrive profile and are assigned a fixed PROFIdrive telegram number. As a consequence, behind a PROFIdrive telegram number, there is a defined signal composition. As a consequence, a telegram number uniquely describes cyclic data exchange.

### 7.5.2 Telegrams

#### Telegrams that are available

The user data of the telegrams that are available are described in the following.

Telegram 1

PZD01	PZD02	
STW1	NSOLL_A	
ZSW1	NIST_A	

16-bit speed setpoint

Telegram 3

PZD01	PZD02	PZD03	PZD04	PZD05	PZD06	PZD07	PZD08	PZD09
STW1	NSOLL_B		STW2	G1_STW				
ZSW1	NIST_B		ZSW2	G1_ZSW	G1_XIST1	G1_XIST2		

32-bit speed setpoint with 1 position encoder

Telegram 20

PZD01	PZD02	PZD03	PZD04	PZD05	PZD06
STW1	NSOLL_A				
ZSW1	NIST_A GLATT	IAIST_ GLATT	MIST_ GLATT	PIST_ GLATT	MELD_ NAMUR

16-bit speed setpoint for VIK-Namur

Telegram 350

PZD01	PZD02	PZD03	PZD04
STW1	NSOLL_A	M_LIM	STW3
ZSW1	NIST_A GLATT	IAIST_ GLATT	ZSW3

16-bit speed setpoint with torque limiting

Telegram 352

PZD01	PZD02	PZD03	PZD04	PZD05	PZD06
STW1	NSOLL_A	Freely assignable			
ZSW1	NIST_A GLATT	IAIST_ GLATT	MIST_ GLATT	WARN_ CODE	FAULT_ CODE

16-bit speed setpoint for PCS7

Telegram 353

		PZD01	PZD02
PKW	STW1	NSOLL_A	
	ZSW1	NIST_A GLATT	

16-bit speed setpoint with reading and writing to parameters

Telegram 354

		PZD01	PZD02	PZD03	PZD04	PZD05	PZD06
PKW	STW1	NSOLL_A	Freely assignable				
	ZSW1	NIST_A GLATT	IAIST_ GLATT	MIST_ GLATT	WARN_ CODE	FAULT_ CODE	

16-bit speed setpoint for PCS7 with reading and writing to parameters

Telegram 999

	PZD01	PZD02	PZD03	PZD04	PZD05	PZD06	PZD07	PZD08	PZD09	PZD10	PZD11	PZD12
	STW1	Telegram length for the receive data										
	ZSW1	Telegram length for the transmit data										

Unassigned interconnection and length

### Explanation of the abbreviations

Abbreviation	Explanation	Abbreviation	Explanation
PZD	Process data	PKW	Parameter channel
STW	Control word	PIST_GLATT	Actual active power value, smoothed
ZSW	Status word	M_LIM	Torque limit
NSOLL_A	Speed setpoint 16 bit	FAULT_CODE	Fault code
NSOLL_B	Speed setpoint 32 bit	WARN_CODE	Alarm code
NIST_A	Speed actual value 16 bit	MELD_NAMUR	Message according to the VIK-NAMUR definition
NIST_B	Speed actual value 32 bit	G1_STW / G2_STW	Control word for encoder 1 or encoder 2
IAIST	Current actual value	G1_ZSW / G2_ZSW	Status word for encoder 1 or encoder 2
IAIST_GLATT	Current actual value, smoothed	G1_XIST1 / G2_XIST1	Position actual value 1 from encoder 1 or encoder 2
MIST_GLATT	Torque actual value, smoothed	G1_XIST2 / G2_XIST2	Position actual value 2 from encoder 1 or encoder 2

### 7.5.3 Control and status word 1

#### Control word 1 (STW1)

Bit	Significance		Explanation	Signal inter-connection in the converter
	Telegram 20	All other telegrams		
0	0 = OFF1		The motor brakes with the ramp-down time p1121 of the ramp-function generator. The converter switches off the motor at standstill.	p0840[0] = r2090.0
	0 → 1 = ON		The converter goes into the "ready" state. If, in addition bit 3 = 1, then the converter switches on the motor.	
1	0 = OFF2		Switch off the motor immediately, the motor then coasts down to a standstill.	p0844[0] = r2090.1
	1 = No OFF2		The motor can be switched on (ON command).	
2	0 = Quick stop (OFF3)		Quick stop: The motor brakes with the OFF3 ramp-down time p1135 down to standstill.	p0848[0] = r2090.2
	1 = No quick stop (OFF3)		The motor can be switched on (ON command).	
3	0 = Inhibit operation		Immediately switch-off motor (cancel pulses).	p0852[0] = r2090.3
	1 = Enable operation		Switch-on motor (pulses can be enabled).	
4	0 = Disable RFG		The converter immediately sets its ramp-function generator output to 0.	p1140[0] = r2090.4
	1 = Do not disable RFG		The ramp-function generator can be enabled.	
5	0 = Stop RFG		The output of the ramp-function generator stops at the actual value.	p1141[0] = r2090.5
	1 = Enable RFG		The output of the ramp-function generator follows the setpoint.	
6	0 = Inhibit setpoint		The converter brakes the motor with the ramp-down time p1121 of the ramp-function generator.	p1142[0] = r2090.6
	1 = Enable setpoint		Motor accelerates with the ramp-up time p1120 to the setpoint.	
7	0 → 1 = Acknowledge faults		Acknowledge fault. If the ON command is still active, the converter switches to the "switching on inhibited" state.	p2103[0] = r2090.7
8, 9	Reserved			
10	0 = No control via PLC		Converter ignores the process data from the fieldbus.	p0854[0] = r2090.10
	1 = Control via PLC		Control via fieldbus, converter accepts the process data from the fieldbus.	
11	1 = Direction reversal		Invert setpoint in the converter.	p1113[0] = r2090.11
12	Not used			
13	--- <sup>1)</sup>	1 = MOP up	Increase the setpoint saved in the motorized potentiometer.	p1035[0] = r2090.13

Bit	Significance		Explanation	Signal inter-connection in the converter
	Telegram 20	All other telegrams		
14	--- <sup>1)</sup>	1 = MOP down	Reduce the setpoint saved in the motorized potentiometer.	p1036[0] = r2090.14
15	CDS bit 0	Reserved	Changes over between settings for different operation interfaces (command data sets).	p0810 = r2090.15

<sup>1)</sup> If you change over from another telegram to telegram 20, then the assignment of the previous telegram is kept.

### Status word 1 (ZSW1)

Bit	Significance		Remarks	Signal inter-connection in the converter
	Telegram 20	All other telegrams		
0	1 = Ready for switching on		Power supply switched on; electronics initialized; pulses locked.	p2080[0] = r0899.0
1	1 = Ready		Motor is switched on (ON/OFF1 = 1), no fault is active. With the command "Enable operation" (STW1.3), the converter switches on the motor.	p2080[1] = r0899.1
2	1 = Operation enabled		Motor follows setpoint. See control word 1, bit 3.	p2080[2] = r0899.2
3	1 = Fault active		The converter has a fault. Acknowledge fault using STW1.7.	p2080[3] = r2139.3
4	1 = OFF2 inactive		Coast down to standstill is not active.	p2080[4] = r0899.4
5	1 = OFF3 inactive		Quick stop is not active.	p2080[5] = r0899.5
6	1 = Switching on inhibited active		It is only possible to switch on the motor after an OFF1 followed by ON.	p2080[6] = r0899.6
7	1 = Alarm active		Motor remains switched on; no acknowledgement is necessary.	p2080[7] = r2139.7
8	1 = Speed deviation within the tolerance range		Setpoint / actual value deviation within the tolerance range.	p2080[8] = r2197.7
9	1 = Master control requested		The automation system is requested to accept the converter control.	p2080[9] = r0899.9
10	1 = Comparison speed reached or exceeded		Speed is greater than or equal to the corresponding maximum speed.	p2080[10] = r2199.1
11	1 = current or torque limit reached	1 = torque limit reached	Comparison value for current or torque has been reached or exceeded.	p2080[11] = r0056.13 / r1407.7
12	--- <sup>1)</sup>	1 = Holding brake open	Signal to open and close a motor holding brake.	p2080[12] = r0899.12
13	0 = Alarm, motor overtemperature		--	p2080[13] = r2135.14

Bit	Significance		Remarks	Signal interconnection in the converter
	Telegram 20	All other telegrams		
14	1 = Motor rotates clockwise		Internal converter actual value > 0	p2080[14] = r2197.3
	0 = Motor rotates counter-clockwise		Internal converter actual value < 0	
15	1 = CDS display	0 = Alarm, converter thermal overload		p2080[15] = r0836.0 / r2135.15

<sup>1)</sup> If you change over from another telegram to telegram 20, then the assignment of the previous telegram is kept.

## 7.5.4 Control and status word 3

### Control word 3 (STW3)

Bit	Meaning	Explanation	Signal interconnection in the converter <sup>1)</sup>
	Telegram 350		
0	1 = fixed setpoint bit 0	Selects up to 16 different fixed setpoints.	p1020[0] = r2093.0
1	1 = fixed setpoint bit 1		p1021[0] = r2093.1
2	1 = fixed setpoint bit 2		p1022[0] = r2093.2
3	1 = fixed setpoint bit 3		p1023[0] = r2093.3
4	1 = DDS selection bit 0	Changes over between settings for different motors (drive data sets).	p0820 = r2093.4
5	1 = DDS selection bit 1		p0821 = r2093.5
6	Not used		
7	Not used		
8	1 = technology controller enable	--	p2200[0] = r2093.8
9	1 = enable DC braking	--	p1230[0] = r2093.9
10	Not used		
11	1 = Enable droop	Enable or inhibit speed controller droop.	p1492[0] = r2093.11
12	1 = torque control active 0 = speed control active	Changes over the control mode for vector control.	p1501[0] = r2093.12
13	1 = no external fault 0 = external fault is active (F07860)	--	p2106[0] = r2093.13
14	Not used		
15	1 = CDS bit 1	Changes over between settings for different operation interfaces (command data sets).	p0811[0] = r2093.15

<sup>1)</sup> If you switch from telegram 350 to a different one, then the converter sets all interconnections p1020, ... to "0". Exception: p2106 = 1.

**Status word 3 (ZSW3)**

Bit	Meaning	Description	Signal interconnection in the converter
0	1 = DC braking active	--	p2051[3] = r0053
1	1 = $ n_{act}  > p1226$	Absolute current speed > stationary state detection	
2	1 = $ n_{act}  > p1080$	Absolute actual speed > minimum speed	
3	1 = $i_{act} \geq p2170$	Actual current $\geq$ current threshold value	
4	1 = $ n_{act}  > p2155$	Absolute actual speed > speed threshold value 2	
5	1 = $ n_{act}  \leq p2155$	Absolute actual speed < speed threshold value 2	
6	1 = $ n_{act}  \geq r1119$	Speed setpoint reached	
7	1 = DC link voltage $\leq p2172$	Actual DC link voltage $\leq$ threshold value	
8	1 = DC link voltage > p2172	Actual DC link voltage > threshold value	
9	1 = ramp-up or ramp-down completed	Ramp-function generator is not active.	
10	1 = technology controller output at the lower limit	Technology controller output $\leq p2292$	
11	1 = technology controller output at the upper limit	Technology controller output > p2291	
12	Not used		
13	Not used		
14	Not used		
15	Not used		

**7.5.5 Control and status word G115D****Control word G115D (STW\_G115D)**

Bit	Meaning	Description	Signal interconnection in the converter
0	1 = DO 24	Control via bidirectional DIO 24	p0738 = r2094.0
1	1 = DO 25	Control via bidirectional DIO 25	p0739 = r2094.1
2	1 = Stop/low speed sensor bypass	Activate or deactivate the stop/low speed sensor bypass for conveyor control	p3390 = r2094.2
6 .. · 15	Not used		

### Status word G115D (ZSW\_G115D)

Bit	Meaning	Description	Signal interconnection in the converter
0	1 = DI 0	Status of the digital input 0	p2084[0] = r0722.0
1	1 = DI 1	Status of the digital input 1	p2084[1] = r0722.1
2	1 = DI 2	Status of the digital input 2	p2084[2] = r0722.2
3	1 = DI 3	Status of the digital input 3	p2084[3] = r0722.3
4	1 = DI 24	Status of the digital input 24	p2084[4] = r0722.24
5	1 = DI 25	Status of the digital input 25	p2084[5] = r0722.25
6	Not used		
7	Not used		
8	1 = Repair switch OFF	Repair switch is set to OFF and all power to the motor is terminated.	p2084[8] = r8559.12
9	1 = Remote control active	Remote control mode is activated via the LRC panel.	p2084[9] = r8559.2
10	1 = Manual mode active	Local control mode is activated via the LRC panel.	p2084[10] = r8559.3
11	1 = Sensor bypass activated	Stop/low speed sensor bypass is activated for the conveyor control.	p2084[11] = r8559.4
12	1 = Continuous motion activated	Continuous motion is activated via the LRC panel.	p2084[12] = r8559.5
13	1 = Jog left active	Motor Jogs to the left.	p2084[13] = r8559.6
14	1 = Jog right active	Motor Jogs to the right.	p2084[14] = r8559.7
15	Not used		

## 7.5.6 NAMUR message word

### Fault word according to the VIK-NAMUR definition (MELD\_NAMUR)

Bit	Significance	P no.
0	1 = converter signals a fault	p2051[5] = r3113
1	1 = line fault: phase failure or inadmissible voltage	
2	1 = DC link overvoltage	
3	1 = power unit fault, e.g. overcurrent or overtemperature	
4	1 = converter overtemperature	
5	1 = ground fault/phase fault in the motor cable or in the motor	
6	1 = motor overload	
7	1 = communication error to the higher-level control system	
8	1 = fault in a safety-relevant monitoring channel	
10	1 = fault in the internal converter communication	
11	1 = line fault	
15	1 = other fault	

## 7.5.7 Parameter channel

### Structure of the parameter channel

The parameter channel consists of four words. The 1st and 2nd words transfer the parameter number, index and the type of task (read or write). The 3rd and 4th words contain the parameter content. The parameter contents can be 16-bit values (such as baud rate) or 32-bit values (e.g. CO parameters).

Bit 11 in the 1st word is reserved and is always assigned 0.

Parameter channel					
PKE (1st word)		IND (2nd word)		PWE (3rd and 4th words)	
15...12;11	10...0	15...8	7...0	15...0	15...0
AK	S P M	Subindex	Page index	PWE 1	PWE 2
	PNU				

You can find application examples relating to the parameter channel at the end of this section.

### AK: Request and response IDs

Bits 12 ... 15 of the 1st parameter channel word contain the request and response identifier AK.

### Request ID, control → converter

AK	Description	Response ID	
		positive	negative
0	No request	0	7 / 8
1	Request parameter value	1 / 2	7 / 8
2	Change parameter value (word)	1	7 / 8
3	Change parameter value (double word)	2	7 / 8
4	Request descriptive element <sup>1)</sup>	3	7 / 8
6 <sup>2)</sup>	Request parameter value (field) <sup>1)</sup>	4 / 5	7 / 8
7 <sup>2)</sup>	Change parameter value (field, word) <sup>1)</sup>	4	7 / 8
8 <sup>2)</sup>	Change parameter value (field, double word) <sup>1)</sup>	5	7 / 8
9	Request number of field elements	6	7 / 8

<sup>1)</sup> The required element of the parameter is specified in IND (2nd word).

<sup>2)</sup> The following request IDs are identical: 1 ≡ 6, 2 ≡ 7 3 ≡ 8.  
We recommend that you use identifiers 6, 7, and 8.

### Response ID, converter → control

AK	Description
0	No response
1	Transfer parameter value (word)
2	Transfer parameter value (double word)
3	Transfer descriptive element <sup>1)</sup>
4	Transfer parameter value (field, word) <sup>2)</sup>
5	Transfer parameter value (field, double word) <sup>2)</sup>
6	Transfer number of field elements
7	Converter cannot process the request. In the most significant word of the parameter channel, the converter sends an error number to the control, refer to the following table.
8	No master controller status / no authorization to change parameters of the parameter channel interface

<sup>1)</sup> The required element of the parameter is specified in IND (2nd word).

<sup>2)</sup> The required element of the indexed parameter is specified in IND (2nd word).

### Error numbers for response ID 7

No.	Description
00 hex	<b>Illegal parameter number</b> (access to a parameter that does not exist)
01 hex	<b>Parameter value cannot be changed</b> (change request for a parameter value that cannot be changed)
02 hex	<b>Lower or upper value limit exceeded</b> (change request with a value outside the value limits)
03 hex	<b>Incorrect subindex</b> (access to a subindex that does not exist)
04 hex	<b>No array</b> (access with a subindex to non-indexed parameters)
05 hex	<b>Incorrect data type</b> (change request with a value that does not match the data type of the parameter)

No.	Description
06 hex	<b>Setting not permitted, only resetting</b> (change request with a value not equal to 0 without permission)
07 hex	<b>Descriptive element cannot be changed</b> (change request to a descriptive element error value that cannot be changed)
0B hex	<b>No master control</b> (change request but with no master control, see also p0927.)
0C hex	<b>Keyword missing</b>
11 hex	<b>Request cannot be executed due to the operating state</b> (access is not possible for temporary reasons that are not specified)
14 hex	<b>Inadmissible value</b> (change request with a value that is within the limits but which is illegal for other permanent reasons, i.e. a parameter with defined individual values)
65 hex	<b>Parameter number is currently deactivated</b> (depending on the mode of the converter)
66 hex	<b>Channel width is insufficient</b> (communication channel is too small for response)
68 hex	<b>Illegal parameter value</b> (parameter can only assume certain values)
6A hex	<b>Request not included / task is not supported</b> (the valid request identifications can be found in table "Request identifications controller → converter")
6B hex	<b>No change access for a controller that is enabled.</b> (The operating state of the converter prevents a parameter change)
86 hex	<b>Write access only for commissioning (p0010 = 15)</b> (operating state of the converter prevents a parameter change)
87 hex	<b>Know-how protection active, access locked</b>
C8 hex	<b>Change request below the currently valid limit</b> (change request to a value that lies within the "absolute" limits, but is however below the currently valid lower limit)
C9 hex	<b>Change request above the currently valid limit</b> (example: a parameter value is too large for the converter power)
CC hex	<b>Change request not permitted</b> (change is not permitted as the access code is not available)

### PNU (parameter number) and page index

The parameter number is located in value PNU in the 1st word of the parameter channel (PKE).

The page index is located in the 2nd word of the parameter channel (IND bit 7 ... 0).

Parameter number	PNU	Page index
0000 ... 1999	0000 ... 1999	0 hex
2000 ... 3999	0000 ... 1999	80 hex
6000 ... 7999	0000 ... 1999	90 hex
8000 ... 9999	0000 ... 1999	20 hex
10000 ... 11999	0000 ... 1999	A0 hex
20000 ... 21999	0000 ... 1999	50 hex
30000 ... 31999	0000 ... 1999	F0 hex
60000 ... 61999	0000 ... 1999	74 hex

### Subindex


For indexed parameters, the parameter index is located in subindex (IND Bit 15 ... 8) as hexadecimal value.





## Function description


### Interconnection of the send data

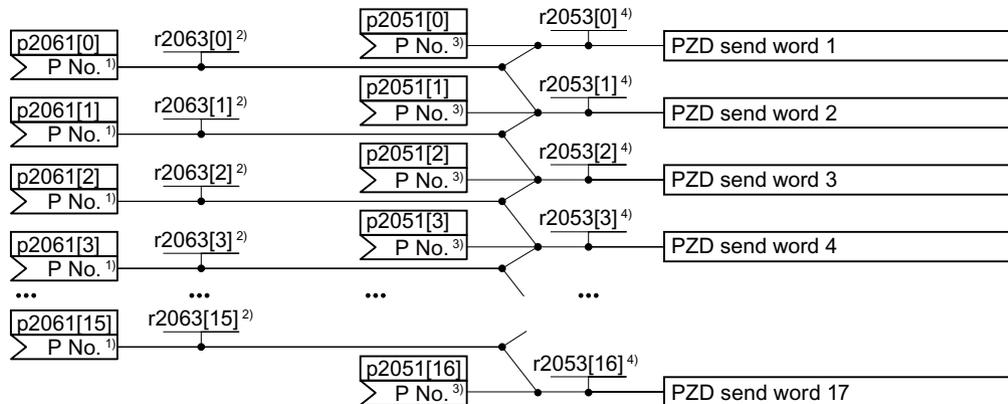

- 1) Send word parameter number, doubleword
- 2) Send word value, doubleword
- 3) Send word parameter number, word
- 4) Send word value, word

In the converter, the send data are available in the "Word" format (p2051) - and in the "Double word" format (p2061). If you set a specific telegram, or you change the telegram, then the converter automatically interconnects parameters p2051 and p2061 with the appropriate signals.

### Interconnection of the receive data

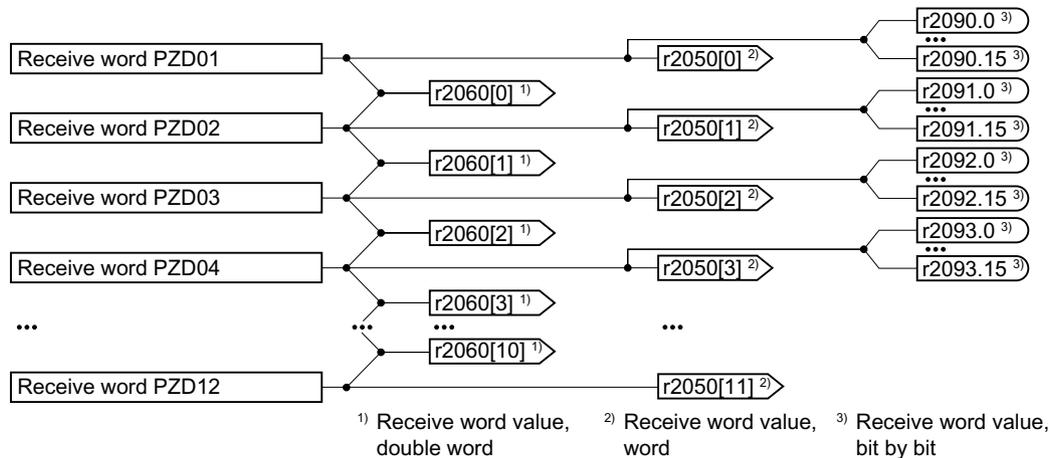

- 1) Receive word value, double word
- 2) Receive word value, word
- 3) Receive word value, bit by bit

The converter saves the receive data as follows:

- "Word" format in r2050
- "Double word" format in r2060
- Bit-by-bit in r2090 ...r2093)

### Expanding the telegram

1. Set p0922 = 999.
2. Set parameter p2079 to the value of the corresponding telegram.
3. Interconnect additional PZD send words and PZD receive words with signals of your choice via parameters r2050 and p2051.

You have extended the telegram.



### Freely interconnecting signals in the telegram

1. Set p0922 = 999.
2. Set p2079 = 999.
3. Interconnect additional PZD send words and PZD receive words with signals of your choice via parameters r2050 and p2051.

You have freely interconnected the signals transferred in the telegram.



## Example

Expand telegram 1 to 6 send words and 6 receive words.

### Procedure

1. p0922 = 999
2. p2079 = 1
3. p2051[2] = r2050[2]
4. ...
5. p2051[5] = r2050[5]
6. Check the telegram length for the received and sent words:
  - r2067[0] = 6
  - r2067[1] = 6

You have expanded telegram 1 to 6 send words and 6 receive words.



## 7.5.9 Acyclically reading and writing converter parameters

### Overview

The converter supports the writing and reading of parameters via acyclic communication:

- For PROFINET: Write or read requests via B02E hex and B02F hex

Further information about acyclic communication is provided in the Fieldbus Function Manual.

 Overview of the manuals (Page 610)

## Application example, "Read and write to parameters"

Further information is provided on the Internet:

 Application examples (<https://support.industry.siemens.com/cs/ww/en/view/29157692>)

## 7.6 Drive control via Ethernet/IP

### 7.6.1 Configuring communication via Ethernet/IP

#### Overview

Ethernet/IP is real-time Ethernet, and is mainly used in automation technology.

#### Function description

To configure the converter's communication via Ethernet/IP, you must set the following parameters:

##### Procedure

1. p2030 = 10
2. The following parameters must match your Ethernet configuration:
  - p8921 = IP address
  - p8922 = default gateway
  - p8923 = subnet mask
  - p8920 = station name
3. p8925 = 2
4. Select the Ethernet/IP profile:

SINAMICS profile	ODVA AC/DC drive profile
p8980 = 0	p8980 = 1
Use p0922 to select the appropriate telegram.  Telegrams (Page 153)	p0922 = 1: The converter communicates via telegram 1. Other telegrams are not possible. If necessary, however, you can extend the telegram 1.  Expanding or freely interconnecting telegrams (Page 164)
	If necessary, set the following parameters: <ul style="list-style-type: none"> <li>• p8981</li> <li>• p8982</li> <li>• p8983</li> </ul>

5. Switch off the converter power supply.
6. Wait until all LEDs on the converter are dark.
7. Switch on the converter power supply again.

You have now configured the converter for communication via Ethernet/IP.



## Parameters

Parameter	Description	Setting
p2030	Fieldbus interface protocol selection	0: No protocol 7: PROFINET 10: Ethernet/IP The default setting is dependent upon the converter.
p8920	PN Name of Station	Sets the station name for the onboard PROFINET interface.
p8921	PN IP Address	Sets the IP address for the onboard PROFINET interface. Factory setting: 0
p8922	PN Default Gateway	Sets the default gateway for the onboard PROFINET interface. Factory setting: 0
p8923	PN Subnet Mask	Sets the subnet mask for the onboard PROFINET interface. Factory setting: 0
p8925	Activate PN interface configuration	Setting to activate the interface configuration 0: No function (factory setting) 2: Activate and save configuration 3: Delete configuration
r8931	PN IP Address actual	Displays the actual IP address.
r8932	PN Default Gateway actual	Displays the actual default gateway.
r8933	PN Subnet Mask actual	Displays the actual subnet mask.
p8980	Ethernet/IP profile	Sets the profile for Ethernet/IP. 0: SINAMICS 1: ODVA AC/DC
p8981	Ethernet/IP ODVA STOP mode	Sets the STOP mode for the Ethernet/IP ODVA profile (p8980 = 1). 0: OFF1 (factory setting) 1: OFF2

Parameter	Description	Setting
p8982	Ethernet/IP ODVA speed scaling	Sets the scaling for the speed for Ethernet/IP ODVA profile (p8980 = 1). 123: Scaling = 32 124: Scaling = 16 125: Scaling = 8 126: Scaling = 4 127: Scaling = 2 128: Scaling = 1 (factory setting) 129: Scaling = 0.5 130: Scaling = 0.25 131: Scaling = 0.125 132: Scaling = 0.0625 133: Scaling = 0.03125
p8983	Ethernet/IP ODVA torque scaling	Sets the scaling for the torque for Ethernet/IP ODVA profile (p8980 = 1). 123: Scaling = 32 124: Scaling = 16 125: Scaling = 8 126: Scaling = 4 127: Scaling = 2 128: Scaling = 1 (factory setting) 129: Scaling = 0.5 130: Scaling = 0.25 131: Scaling = 0.125 132: Scaling = 0.0625 133: Scaling = 0.03125

For more information about the parameters, refer to the List Manual.

 Overview of the manuals (Page 610)

## Further information

Ethernet/IP objects and assemblies of the converter:

 Supported objects (Page 170)

## 7.6.2 Supported objects

### Overview

Object class		Object name	Objects re-quired	ODVA objects	SINAMICS ob-jects
hex	dec				
1 hex	1	Identity object	x		
4 hex	4	Assembly Object	x		
6 hex	6	Connection Manager Object	x		
28 hex	40	Motor Data Object		x	
29 hex	41	Supervisor Object		x	
2A hex	42	Drive Object		x	
32C hex	812	Siemens Drive Object			x
32D hex	813	Siemens Motor Data Object			x
F5 hex	245	TCP/IP Interface Object <sup>1)</sup>	x		
F6 hex	246	Ethernet Link Object <sup>1)</sup>	x		
300 hex	768	Stack Diagnostic Object		x	x
302 hex	770	Adapter Diagnostic Object		x	x
303 hex	771	Explicit Messages Diagnostic Object		x	x
304 hex	772	Explicit Message Diagnostic List Object		x	x
401 hex	1025	Parameter object		x	x

<sup>1)</sup> These objects are part of the Ethernet/IP system management.

### Identity Object, Instance Number: 1 hex

#### Supported services

Class	<ul style="list-style-type: none"> <li>Get Attribute all</li> <li>Get Attribute single</li> </ul>	Instance	<ul style="list-style-type: none"> <li>Get Attribute all</li> <li>Get Attribute single</li> <li>Reset</li> </ul>
-------	---	----------	--

#### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

#### Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UINT16	Vendor ID	1251
2	get	UINT16	Device Type - ODVA AC Drive - Siemens Drive	02 hex 12 hex
3	get	UINT16	Product code	r0964[1]

No.	Service	Type	Name	Value/explanation
4	get	UINT16	Revision	The versions should match the EDS file
5	get	UINT16	Status	See the following table
6	get	UINT32	Serial number	bits 0 ... 19: consecutive number; bits 20 ... 23: Production identifier bits 24 ... 27: Month of manufacture (0 = Jan, B = Dec) Bits 28 ... 31: Year of manufacture (0 = 2002)
7	get	Short String	Product name	Max. length 32 bytes

#### Explanation of No. 5 of the previous table

Byte	Bit	Name	Description
1	0	Owned	0: Converter is not assigned to any master 1: Converter is assigned to a master
	1		Reserved
	2	Configured	0: Ethernet/IP basic settings 1: Modified Ethernet/IP settings For G120, always = 1
	3		Reserved
	4 ... 7	Extended Device Status	0: Self-test or status not known 1: Firmware update active 2: At least one I/O connection with error 3: No I/O connections 4: Incorrect configuration in the ROM 5: Fatal fault 6: At least one I/O connection is active 7: All I/O connections in the quiescent state 8 ... 15: Reserved
2	8 ... 11		Not used
	12 ... 15		Reserved

#### Assembly Object, Instance Number: 4 hex

##### Supported services

- |       |                        |          |  |
|-------|------------------------|----------|--|
| Class | • Get Attribute single | Instance | • Get Attribute single<br>• Set Attribute single |
|-------|------------------------|----------|--|

##### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Service	Type	Name	Value/explanation
3	set	Array of UINT8	Assembly	1 byte array  Supported ODVA AC/DC assemblies (Page 181)

**Connection Manager Object, Instance Number: 6 hex**

**Supported services**

- |   |  |
|---|--|
| Class <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | Instance <ul style="list-style-type: none"> <li>• Forward open</li> <li>• Forward close</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|---|--|

**Class Attribute**

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Service	Type	Name	Value/explanation
1	get	UINT16	OpenReqs	Counters
2	get	UINT16	OpenFormat Rejects	Counters
3	get	UINT16	OpenResource Rejects	Counters
4	get	UINT16	OpenOther Rejects	Counters
5	get	UINT16	CloseReqs	Counters
6	get	UINT16	CloseFormat Rejects	Counters
7	get	UINT16	CloseOther Rejects	Counters
8	get	UINT16	ConnTimeouts	Counters Number of bus errors

**Motor Data Object, Instance Number 28 hex**

**Supported services**

- |  |   |
|--|---|
| Class <ul style="list-style-type: none"> <li>• Get Attribute single</li> </ul> | Instance <ul style="list-style-type: none"> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|--|---|

### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

### Instance Attribute

No.	Service	Type	Name	Value/explanation
3	get, set	USINT	Motor Type	p0300 motor type, see the following table
6	get, set	UINT16	Rated Current	p0305 rated motor current
7	get, set	UINT16	Rated Voltage	p0304 rated motor voltage
8	get, set	UINT32	Rated Power	p0307 rated motor power
9	get, set	UINT16	Rated Frequency	p0310 rated motor frequency
10	get, set	UINT16	Rated Temperature	p0605 motor temperature threshold
11	get, set	UINT16	Max Speed	p0322 maximum motor speed
12	get, set	UINT16	Pole Count	p0314 value of p0314*2
13	get	UINT32	Torque Constant	p0316 motor torque constant
14	get, set	UINT32	Inertia	p0341 motor moment of inertia
15	get, set	UINT16	Base Speed	p0311 motor rated speed

Value in p0300		Ethernet/IP motor data object,	
0	No motor	0	Non-standard motor
1	Asynchronous motor	7	Squirrel cage asynchronous motor
6	Reluctance motor	0	Non-standard motor
10	1LE1 asynchronous motor	7	Squirrel cage asynchronous motor
13	1LG6 asynchronous motor	7	Squirrel cage asynchronous motor
17	1LA7 asynchronous motor	7	Squirrel cage asynchronous motor
19	1LA9 asynchronous motor	7	Squirrel cage asynchronous motor
100	1LE1 asynchronous motor	7	Squirrel cage asynchronous motor
101	1PC1 asynchronous motor	0	Non-standard motor
181	2KJ8 asynchronous motor	0	Non-standard motor
600	1FP1 synchronous reluctance motor	0	Non-standard motor
602	2KJ8 synchronous reluctance motor	0	Non-standard motor
603	1FP3 synchronous reluctance motor OEM	0	Non-standard motor

### Supervisor Object, Instance Number: 29 hex

#### Supported services

- |       |  |          |  |
|-------|--|----------|--|
| Class | <ul style="list-style-type: none"> <li>Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>Get Attribute single</li> <li>Set Attribute single</li> </ul> |
|-------|--|----------|--|

**Class Attribute**

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Service	Type	Name	Value/explanation
3	get, set	Bool	Run1	STW.0 operation, clockwise rotation
5	get, set	Bool	Net Control	Internal 0: Local 1: Network
6	get	UINT8	State	0: Vendor Specific 1: Startup 2: Not_Ready 3: Ready 4: Enabled 5: Stopping 6: Fault_Stop 7: Faulted
7	get	Bool	Running1	ZSW1:2 1: - (Enabled and Run1) or - (Stopping and Running1) or - (Fault_Stop and Running1) 0 = Other state
9	get	Bool	Ready	ZSW1:0 1: - Ready or - Enabled or - Stopping 0 = Other state
10	get	Bool	Fault	ZSW1:3 drive fault
11	get	Bool	Warning	ZSW1:7 alarm active
12	get, set	Bool	Fault reset	STW.7 acknowledge fault
13	get	UINT16	Fault Code	r945[0] error code
14	get	UINT16	Warning Code	r2122[0] alarm code
15	get	Bool	CtlFromNet	Display from Net Control 1: Control from network 0: Local control

**Drive Object, Instance Number: 2A hex****Supported services**

- |       |                        |          |  |
|-------|------------------------|----------|--|
| Class | • Get Attribute single | Instance | • Get Attribute single<br>• Set Attribute single |
|-------|------------------------|----------|--|

### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

### Instance Attribute

No.	Service	Type	Name	Value/explanation
3	get	Bool	At reference	r2197.7 1: Speed setpoint - actual value deviation in tolerance t_off 0: Otherwise
4	get	Bool	Net_reference	Internal 0: Local 1: Network
6	get	UINT8	Drive_Mode	p1300 manufacturer-specific, see following table
7	get	INT	Speed Actual	Main actual value, see speed units
8	get, set	INT	Speed Ref	Main setpoint, see speed units
9	get	INT	Current Actual	r0027 absolute current actual value, smoothed
10	get	INT	Current limit	p0323 maximum motor current
15	get	INT	Power Actual	r0032 actual active power smoothed
16	get	INT	Output voltage	r0025 output voltage smoothed
17	get	INT	Output voltage	r0072 output voltage
18	get, set	UINT16	AccelTime	p1120 ramp-function generator ramp-up time
19	get, set	UINT16	DecelTime	p1121 ramp-function generator, ramp-down time
20	get, set	UINT16	Low Speed Lim	p1080 minimum speed
21	get, set	UINT16	High Speed Lim	p1082 maximum speed
22	get, set	SINT	Speed Scale	p8982 Ethernet/IP ODVA speed scaling
29	get	Bool	Ref From Net	Internal - display of Net_Reference 0: Local 1: Network

Value in p1300		Ethernet/IP motor data object	
0	U/f with linear characteristic	1	Open loop speed (frequency)
1	U/f with linear characteristic and FCC	0	Vendor-specific mode
2	U/f with parabolic characteristic		
4	U/f with linear characteristic and ECO		
7	U/f for parabolic characteristic and ECO		
20	Speed control (without encoder)	2	Closed-loop speed control

**Siemens Drive Object, Instance Number: 32C hex****Supported services**

- |       |                        |          |  |
|-------|------------------------|----------|--|
| Class | • Get Attribute single | Instance | • Get Attribute single<br>• Set Attribute single |
|-------|------------------------|----------|--|

**Class Attribute**

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Type	Service	Name	Value/explanation
2	INT16	get, set	Commissioning state	p0010 commissioning parameter filter
3 ... 1 8	WORD	get	STW1	STW1 bit-by-bit access: Attr.3 = STW1.0 Attr.18 = STW1.15
19	WORD	get	Main setpoint	Main setpoint
20 ... 35	WORD	get	ZSW1	ZSW1 bit-by-bit access: Attr.20 = ZSW1.0 Attr.35 = ZSW1.15
36	WORD	get	Actual Frequency	Main actual value (actual frequency)
37	REAL	get, set	Ramp Up Time	p1120[0] ramp-function generator ramp-up time
38	REAL	get, set	Ramp Down Time	p1121[0] ramp-function generator ramp-down time
39	REAL	get, set	Current Limit	p0640[0] current limit
40	REAL	get, set	Frequency MAX Limit	p1082[0] maximum speed
41	REAL	get, set	Frequency MIN Limit	p1080[0] minimum speed
42	REAL	get, set	OFF3 Ramp Down Time	p1135[0] OFF3 ramp-down time
43	UINT32 / BOOL	get, set	PID Enable	p2200[0] technology controller enable
44	REAL	get, set	PID Filter Time Constant	p2265 technology controller actual value filter time constant
45	REAL	get, set	PID D Gain	p2274 technology controller differentiation time constant
46	REAL	get, set	PID P Gain	p2280 technology controller proportional gain
47	REAL	get, set	PID I Gain	p2285 technology controller integral time
48	REAL	get, set	PID Up Limit	p2291 technology controller maximum limiting
49	REAL	get, set	PID Down Limit	p2292 technology controller minimum limiting
50	REAL	get	Speed setpoint	r0020 speed setpoint
51	REAL	get	Output Frequency	r0024 output frequency
52	REAL	get	Output Voltage	r0025 output voltage
53	REAL	get	DC Link Voltage	r0026[0] DC link voltage

No.	Type	Service	Name	Value/explanation
54	REAL	get	Actual Current	r0027 current actual value
55	REAL	get	Actual Torque	r0031 torque actual value
56	REAL	get	Output power	r0032 actual active power value
57	REAL	get	Motor Temperature	r0035[0] motor temperature
58	REAL	get	Power Unit Temperature	r0037[0] power unit temperature
59	REAL	get	Energy kWh	r0039 energy display
60	UINT8	get	CDS Eff (Local Mode)	r0050 active command data set
61	WORD	get	Status Word 2	r0053 status word 2
62	WORD	get	Control Word 1	r0054 control word 1
63	REAL	get	Motor Speed (Encoder)	r0061 speed actual value
64	UINT32	get	Digital Inputs	r0722 digital inputs status
65	UINT32	get	Digital Outputs	r0747 digital outputs status
66	REAL	get	Analog Input 1	r0752[0] analog input 1
67	REAL	get	Analog Input 2	r0752[1] analog input 2
68	REAL	get	Analog Output 1	r0774[0] analog output 1
69	REAL	get	Analog Output 2	r0774[1] analog output 2
70	UINT16	get	Fault Code 1	r0947[0] fault number 1
71	UINT16	get	Fault Code 2	r0947[1] fault number 2
72	UINT16	get	Fault Code 3	r0947[2] fault number 3
73	UINT16	get	Fault Code 4	r0947[3] fault number 4
74	UINT16	get	Fault Code 5	r0947[4] fault number 5
75	UINT16	get	Fault Code 6	r0947[5] fault number 6
76	UINT16	get	Fault Code 7	r0947[6] fault number 7
77	UINT16	get	Fault Code 8	r0947[7] fault number 8
78	REAL	get	Pulse Frequency	r1801 pulse frequency
79	UINT16	get	Alarm Code 1	r2110[0] alarm number 1
80	UINT16	get	Alarm Code 2	r2110[1] alarm number 2
81	UINT16	get	Alarm Code 3	r2110[2] alarm number 3
82	UINT16	get	Alarm Code 4	r2110[3] alarm number 4
83	REAL	get	PID setpoint Output	r2260 technology controller setpoint after the ramp-function generator
84	REAL	get	PID Feedback	r2266 technology controller actual value after the filter
85	REAL	get	PID Output	r2294 technology controller output signal

### Siemens Motor Data Object, Instance Number: 32D hex

#### Supported services

Class	<ul style="list-style-type: none"> <li>Get Attribute single</li> </ul>	Instance	<ul style="list-style-type: none"> <li>Get Attribute single</li> <li>Set Attribute single</li> </ul>
-------	--	----------	--

**Class Attribute**

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Service	Type	Name	Value/explanation
2	get, set	UINT16	Commissioning state	p0010
3	get	INT16	Motor Type	p0300
6	get, set	REAL	Rated Current	p0305
7	get, set	REAL	Rated Voltage	p0304
8	get, set	REAL	Rated Power	p0307
9	get, set	REAL	Rated Frequency	p0310
10	get, set	REAL	Rated Temperature	p0605
11	get, set	REAL	Max Speed	p0322
12	get, set	UINT16	Pole pair number	p0314
13	get	UINT32	Torque Constant	p0316
14	get, set	REAL	Inertia	p0341
15	get, set	REAL	Base Speed	p0311
19	get, set	REAL	Cos Phi	p0308

**TCP/IP Interface Object, Instance Number: F5 hex****Supported services**

- |       |   |          |   |
|-------|---|----------|---|
| Class | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul> | Instance | <ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul> |
|-------|---|----------|---|

**Class Attribute**

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

**Instance Attribute**

No.	Service	Type	Name	Value/explanation
1	get	UNIT32	Status	Fixed value: 1 hex 1: Configuration acknowledged, by DHCP or saved values
2	get	UNIT32	Configura- tion Capabil- ity	Fixed value: 94 hex 4 hex: DHCP supported, 10 hex: Configuration can be adjusted, 80 hex: ACD-capable

No.	Service	Type	Name	Value/explanation
3	get, set	UNIT32	Configura- tion Control	1 hex: Saved values 3 hex: DHCP
4	get	UNIT16	Path Size (in WORDS)	Fixed value: 2 hex
		UNIT8	Path	20 hex, F6 hex, 24 hex, 05 hex, where 5 hex is the number of instances of F6 hex (four physical ports plus one internal port).
5	get, set	STRING	Interface Configura- tion	r61000 Name of Station
		UNIT32		r61001 IP address
6	get, set	UNIT16	Host Name	Host Name Length
		STRING		
10	get, set	UNIT8	Select ACD	local OM flash: 0: Disabled, 1: Enabled
11	get, set	UNIT8	Last Conflict Detected	local OM flash ACD Activity
		UNIT8		local OM flash Remote MAC
		UNIT8		local OM flash ARP PDU

### Link Object, Instance Number: F6 hex

#### Supported services

Class	<ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> </ul>	Instance	<ul style="list-style-type: none"> <li>• Get Attribute all</li> <li>• Get Attribute single</li> <li>• Set Attribute single</li> </ul>
-------	---	----------	---

#### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

#### Instance Attribute

No.	Service	Type	Name	Value/explanation
1	get	UINT32	Interface Speed	0: link down, 10: 10 Mbps, 100: 100 Mbps
2	get		Interface Flags	Bit 1: Link-Status Bit 2: Duplex Mode (0: halb duplex, 1 duplex Bit 3 ... 5: Automatic state identification Bit 6: Reset required Bit 7: Local hardware fault (0 = ok)
3	get	ARRAY	Physical Address	r8935 Ethernet MAC address

No.	Service	Type	Name	Value/explanation
4	get_and_clear	Struct of	Interface Counters	Optional, required if the "Media Counters Attribute" is implemented.
		UINT32	In Octets	Received octets
		UINT32	In Ucast Packets	Received Unicast packets
		UINT32	In NUCast Packets	Received non-Unicast packets
		UINT32	In Discards	Incoming packets, not processed
		UINT32	In Errors	Incoming packets with errors
		UINT32	In Unknown Protos	Incoming packets with unknown protocol
		UINT32	Out Octets	Sent octets
		UINT32	Out Ucast Packets	Sent Unicast packets
		UINT32	Out NUCast packets	Sent non-Unicast packets
		UINT32	Out Discards	Outgoing packets, not processed
		UINT32	Out Errors	Outgoing packets, with errors
5	get_and_clear	Struct of	Media Counters	Media-specific counters
		UINT32	Alignment Errors	Structure received, which does not match the number of octets
		UINT32	FCS Errors	Structure received, which does not pass the FCS check
		UINT32	Single Collisions	Structure successfully transmitted, precisely one collision
		UINT32	Multiple Collisions	Structure successfully transmitted, several collisions
		UINT32	SQE Test Errors	Number of SQE errors
		UINT32	Deferred Transmissions	First transmission attempt delayed
		UINT32	Late Collisions	Number of collisions that occurred delayed by 512 bit timers to the request
		UINT32	Excessive Collisions	Transmission unsuccessful as a result of intensive collisions
		UINT32	MAC Transmit Errors	Transmission unsuccessful as a result of an internal MAC sublayer transmission error.
		UINT32	Carrier Sense Errors	Times that the carrier sense condition was lost or never asserted when attempting to transmit a frame
		UINT32	Frame Too Long	Structure too large
6	get, set	Struct of	Interface Control	
		UINT16	Control Bits	
		UINT16	Forced Interface Speed	
10	get	String	Interface_Label	Interface-Label

### Parameter Object, Instance Number: 401 hex

#### Supported services

- |       |                     |          |                        |
|-------|---------------------|----------|------------------------|
| Class | • Get Attribute all | Instance | • Get Attribute all    |
|       |                     |          | • Set Attribute single |

### Class Attribute

No.	Service	Type	Name
1	get	UINT16	Revision
2	get	UINT16	Max Instance
3	get	UINT16	Num of Instances

Cyclic communication is established via parameter object 401.

#### Example: Read parameter 2050[10] (connector output to interconnect the PZD received from the fieldbus controller)

Get Attribute single function with the following values:

- Class = 401 hex
- Instance = 2050 = 802 hex corresponds to the parameter number
- Attribute = 10 = A hex corresponds to index 10

#### Example: Parameter 1520[0] writing (upper torque limit)

Set Attribute single function with the following values:

- Class = 401 hex
- Instance = 1520 = 5F0 hex corresponds to the parameter number
- Attribute = 0 = 0 hex corresponds to index 0
- Data = 500.0 (value)

## 7.6.3 Supported ODVA AC/DC assemblies

### Overview

Number		required/ optional	Type	Name
hex	dec			
14 hex	20	Required	Sending	Basic Speed Control Output
46 hex	70	Required	Receiving	Basic Speed Control Input

### Assembly Basic Speed Control, Instance Number: 20, type: Output

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0						Fault Reset		RUN Forward
1								
2	Speed Reference (Low Byte)							
3	Speed Reference (High Byte)							

**Assembly Basic Speed Control, Instance Number: 70, type: Input**

Byte	Bit 7	Bit 6	Bit 5	Bit 4	Bit 3	Bit 2	Bit 1	Bit 0
0						Running Forward		Faulted
1								
2	Speed Actual (Low Byte)							
3	Speed Actual (High Byte)							

**7.6.4 Creating generic I/O module****Overview**

For certain controllers, or if you wish to use the SINAMICS profile, you cannot use the EDS file provided by Siemens. In these cases, you must create a generic I/O module in the control system for the cyclic communication.

**Function description****Procedure**

1. In your control, create a generic device with Ethernet/IP functionality.
2. In the control, enter the lengths for the process data for cyclic communication in the new device which you set in the converter, r2067[0] (input), r2067[1] (output), for example: Standard telegram 2/2 .  
4 ms is supported as the minimum value for RPI (Requested Packet Interval).
3. In the converter, set the same values for IP address, subnet mask, default gateway and name of the station as in the control.

 [Configuring communication via Ethernet/IP \(Page 167\)](#)

You have created a generic I/O module for cyclic communication with the converter.

**Further information**

You can find a detailed description of how to create a generic I/O module on the Internet:

 Application example (<https://support.industry.siemens.com/cs/ww/en/view/82843076>)

## 7.6.5 The converter as Ethernet node

### Integrating a converter into an Ethernet network (assigning an IP address)

#### Procedure

1. Set p8924 (PN DHCP mode) = 2 or 3
  - p8924 = 2: The DHCP server assigns the IP address based on the MAC address of the converter.
  - p8924 = 3: The DHCP server assigns the IP address based on the device name of the converter.
2. Save the settings with p8925 = 2. The next time that the converter switches on, it retrieves the IP address, and you can address the converter as Ethernet node.

---

#### Note

##### Immediate switchover without restart

The switchover to DHCP is performed immediately and without a restart if the change is carried out with the Ethernet/IP command "Set Attribute Single" (class F5 hex, attribute 3). The following options are available:

- via an Ethernet/IP controller
  - via an Ethernet/IP commissioning tool
- 

You have now integrated the converter into Ethernet.

#### Displays

r8930: Device name of the converter

r8934: Operating mode, PN or DHCP

r8935: MAC address

#### Additional information

You can find information about parameters and messages (A08565) in the List Manual.

You can also integrate the converter into an Ethernet network by using Proneta or STEP 7.

## 7.7 Drive control via AS-i

### 7.7.1 Single Slave mode

In Single Slave mode, four bits are available for the communication between the AS-i master and the converter. The four bits are used to transfer process data. In parallel, the control can start a diagnostic request via AS-i.PO.

The following default interface settings are available; both work with profile 7.F.E.

- Macro 30: AS-i Single Slave with fixed setpoint
- Macro 66: AS-i Single Slave with setpoint from Potentiometer 1 or Potentiometer 2

### Macro 30: AS-i Single Slave with fixed setpoint

In standard addressing, the control specifies the speed setpoint via the motor control bits (AS-i.DO0 ... AS-i.DO3).

#### Control → Converter

- AS-i.DO0 → p1020 = 2093.0 Fixed speed bit 0
- AS-i.DO1 → p1021 = 2093.1 Fixed speed bit 1
- AS-i.DO2 → p1022 = 2093.2 Fixed speed bit 2
- AS-i.DO3 → p1023 = 2093.3 Fixed speed bit 3

 Fixed speeds via the motor control bits (Page 188)

#### Converter → control

If the control specifies the speed setpoint, the converter replies:

- p2080[0] = 53.13 → AS-i.DI0 Operational enable for PLC
- p2080[1] = 899.11 → AS-i.DI1 Pulses enabled
- p2080[2] = 722.0 → AS-i.DI2 State DI0
- p2080[3] = 722.1 → AS-i.DI3 State DI1

If the control sends a diagnostic request via AS-i.P0, the converter replies with the currently pending fault or alarm messages.

 Alarm and fault messages via RP0 ... RP3 from the converter to the AS-i master (Page 188)

### Macro 66: AS-i Single Slave with setpoint from Potentiometer 1 or Potentiometer 2

In Single Slave mode with modified addressing the control specifies the following:

#### Control → Converter

- AS-i.DO0 → p3330.0 = 2093.0 ON clockwise / OFF 1
- AS-i.DO1 → p3331.0 = 2093.1 ON counter-clockwise / OFF 1
- AS-i.DO2 → p0810 = 2093.2 Switch speed setpoint between Potentiometer 1 and Potentiometer 2
- AS-i.DO3 → p2104 = 2093.3 Acknowledge errors with a positive edge  
p0852 = 2093.3 Operating enable, if p2093.3 = 1

**Converter → control**

The converter sends as response:

- p2080[0] = 899.0 → AS-i.DI0 Ready to switch on / diagnostic request
- p2080[1] = 807.0 → AS-i.DI1 Control priority
- p2080[2] = 722.0 → AS-i.DI2 State DI0
- p2080[3] = 722.1 → AS-i.DI3 State DI1

If the control sends a diagnostic request via AS-i DI0, the converter replies with the currently pending fault or alarm messages.

- AS-i DI0 = 1, pending alarm messages are replied.
- AS-i DI0 = 0, pending fault messages are replied.

 Alarm and fault messages via RPO ... RP3 from the converter to the AS-i master (Page 188)

**Scaling factors for the speed**

The scaling factor is specified via AS-i.P0 ... AS-i.P3.

This means, if the control specifies a scaling factor, it accepts simultaneously the sent value consisting of AS-i.P0 ... AS-i.P3 as new scaling factor.

- AS-i.P0 Scaling factor bit 0
- AS-i.P1 Scaling factor bit 1
- AS-i.P2 Scaling factor bit 2
- AS-i.P3 Scaling factor bit 3

 Scaling of the speed setpoint via AS-i.P0 ... AS-i.P3 (Page 188)

**Further information**

For more information about the AS-i system, see the AS-Interface - Introduction and Basics Manual.

 Overview of the manuals (Page 610)

**7.7.2 Dual Slave mode**

In Dual Slave mode, eight bits are available for the communication between the AS-i master and the converter. The eight bits are used to transfer process data. In parallel, the control can start a diagnostic request via AS-i.P0.

The following default interface settings are possible:

- Macro 31: AS-i Dual Slave with fixed setpoint
- Macro 34: AS-i Dual Slave with fieldbus setpoint

**Macro 31: AS-i Dual Slave with fixed setpoint**

The control accesses the two slaves of the converter each via four bits.

Via Slave 2, in accordance with profile 7.A.E, the control specifies the speed setpoint via the motor control bits (AS-i.DO0 ... AS-i.DO2).

Via Slave 1, the control sends data in cyclical or acyclical mode, in accordance with profile 7.A.5.

The control requires one bit per slave in order to specify the slave.

**Macro 31, Slave 2 with profile 7.A.E: Control → Converter**

- AS-i.DO0 → p1020.0 = 2093.0 Fixed speed bit 0
- AS-i.DO1 → p1021.0 = 2093.1 Fixed speed bit 1
- AS-i.DO2 → p1022.0 = 2093.2 Fixed speed bit 2
- AS-i.DO3 → Select Slave A or Slave B, interconnected internally

 Fixed speeds via the motor control bits and response in the converter (Page 188)

If the control specifies the speed setpoint, the converter replies:

**Macro 31, Slave 2 with profile 7.A.E: Converter → control**

- p2080[0] = 53.13 PLC ready to switch on → AS-i.DI0
- p2080[1] = 899.11 Pulses enabled → AS-i.DI1
- p2080[2] = 722.0 State DI0 → AS-i.DI2
- p2080[3] = 722.1 State DI1 → AS-i.DI3

If the control sends a diagnostic request via AS-i.P0, the converter replies with the currently pending fault or alarm messages.

 Alarm and fault messages via RP0 ... RP3 from the converter to the AS-i master (Page 188)

**Macro 31, Slave 1 with profile 7.A.5: Control → Converter**

- AS-i.DO0 → Time signal for the CTT2 (Combined Transaction Type 2) transfer from the AS-i master
- AS-i.DO1 → Data bit for the CTT2 transfer, four bytes cyclically or acyclically via PIV (parameter channel). The reading and writing of parameters is possible via the PIV. Because data is transferred bit-by-bit, the read and write process is very slow.
- AS-i.DO2 → p3390 = 2093.4 Override quick stop
- AS-i.DO3 → Select Slave A or Slave B, interconnected internally

**Macro 31, Slave 1 with profile 7.A.5: Converter → control**

- p2080[4] = 722.2 State DI2 → AS-i.DI0
- p2080[5] = 722.3 State DI3 → AS-i.DI1

- Serial data transfer CTT2, four bytes cyclically or acyclically via PIV. The reading and writing of parameters is possible via the PIV. Because data is transferred bit-by-bit, the read and write process is very slow. → AS-i.DI2
- Time signal for the CTT2 transfer to the AS-i master → AS-i.DI3

 Cyclic and acyclic communication via CTT2 (Page 190)

### Macro 34: AS-i Dual Slave with fieldbus setpoint

The control accesses the two slaves of the converter each via four bits.

Via Slave 2, in accordance with profile 7.A.E, the control specifies the commands listed below (AS-i.DO0 ... AS-i.DO2).

Via Slave 1, the control sends the command for quick stop and the data in cyclical or acyclical mode.

The control requires one bit per slave in order to specify the slave.

#### Macro 34, Slave 2 with profile 7.A.E: Control → Converter

- AS-i.DO0 → ON / OFF 1
- AS-i.DO1 → OFF 2
- AS-i.DO2 → Acknowledge fault
- AS-i.DO3 → Select Slave A or Slave B, interconnected internally

If the control specifies the speed setpoint, the converter replies:

#### Macro 34, Slave 2 with profile 7.A.E: Converter → control

- p2080[0] = 53.13 PLC ready to switch on → AS-i.DI0
- p2080[1] = 899.11 Pulses enabled → AS-i.DI1
- p2080[2] = 722.0 State DI0 → AS-i.DI2
- p2080[3] = 722.1 State DI1 → AS-i.DI3

If the control sends a diagnostic request via AS-i.PO, the converter replies with the currently pending fault or alarm messages.

 Alarm and fault messages via RPO ... RP3 from the converter to the AS-i master (Page 188)

#### Macro 34, Slave 1 with profile 7.A.5: Control → Converter

- AS-i.DO0 → Time signal for the CTT2 transfer from the AS-i master
- AS-i.DO1 → Data bit for the CTT2 transfer, four bytes cyclically or acyclically via PIV. The reading and writing of parameters is possible via the PIV. Because data is transferred bit-by-bit, the read and write process is very slow.
- AS-i.DO2 → p3390 = 2093.4 Override quick stop
- AS-i.DO3 → Select Slave A or Slave B, interconnected internally

**Macro 34, Slave 1 with profile 7.A.5: Converter → control**

- p2080[4] = 722.2 State DI2 → AS-i.DI0
- p2080[5] = 722.3 State DI3 → AS-i.DI1
- Serial data transfer CTT2, four bytes cyclically or acyclically via PIV. The reading and writing of parameters is possible via the PIV. Because data is transferred bit-by-bit, the read and write process is very slow. → AS-i.DI2
- Time signal for the CTT2 transfer to the AS-i master → AS-i.DI3

 Cyclic and acyclic communication via CTT2 (Page 190)

**Further information**

For more information about the AS-i system, see the AS-Interface - Introduction and Basics Manual.

 Overview of the manuals (Page 610)

**7.7.3 Assignment tables****Fixed speeds - Single Slave****Fixed speeds via the motor control bits**

AS-i.DO3	AS-i.DO2	AS-i.DO1	AS-i.DO0	Response in the converter
0	0	0	0	OFF1
0	0	0	1	On + fixed speed 1 (factory setting: 1500 rpm)
0	0	1	0	On + fixed speed 2 (factory setting: -1500 rpm)
0	0	1	1	On + fixed speed 3 (factory setting: 300 rpm)
0	1	0	0	On + fixed speed 4 (factory setting: 450 rpm)
0	1	0	1	On + fixed speed 5 (factory setting: 600 rpm)
0	1	1	0	On + fixed speed 6 (factory setting: 750 rpm)
0	1	1	1	On + fixed speed 7 (factory setting: 900 rpm)
1	0	0	0	On + fixed speed 8 (factory setting: 1050 rpm)
1	0	0	1	On + fixed speed 9 (factory setting: 1200 rpm)
1	0	1	0	On + fixed speed 10 (factory setting: 1350 rpm)
1	0	1	1	On + fixed speed 11 (factory setting: 1500 rpm)
1	1	0	0	On + fixed speed 12 (factory setting: 1650 rpm)
1	1	0	1	On + fixed speed 13 (factory setting: 1800 rpm)
1	1	1	0	On + fixed speed 14 (factory setting: 1950 rpm)
1	1	1	1	Acknowledge fault or OFF2

## Modified addressing - scaling factors

### Scaling of the speed setpoint via AS-i.P0 ... AS-i.P3

AS-i.P3	AS-i.P2	AS-i.P1	AS-i.P0	Speed setpoint scaling factor
1	1	1	1	100%
1	1	1	0	90%
1	1	0	1	80%
1	1	0	0	70%
1	0	1	1	60%
1	0	1	0	50%
1	0	0	1	45%
1	0	0	0	40%
0	1	1	1	35%
0	1	1	0	30%
0	1	0	1	25%
0	1	0	0	20%
0	0	1	1	15%
0	0	1	0	10%
0	0	0	1	7%
0	0	0	0	5%

## Fixed speeds - Dual Slave

### Fixed speeds via the motor control bits and response in the converter

AS-i.DO2	AS-i.DO1	AS-i.DO0	Response in the converter
0	0	0	OFF1
0	0	1	On + fixed speed 1 (factory setting: 1500 rpm)
0	1	0	On + fixed speed 2 (factory setting: -1500 rpm)
0	1	1	On + fixed speed 3 (factory setting: 300 rpm)
1	0	0	On + fixed speed 4 (factory setting: 450 rpm)
1	0	1	On + fixed speed 5 (factory setting: 600 rpm)
1	1	0	On + fixed speed 6 (factory setting: 750 rpm)
1	1	1	Acknowledge fault or OFF2

## Alarm and fault messages

### Alarm and fault messages via RP0 ... RP3 from the converter to the AS-i master

RP3	RP2	RP1	RP0	AS-i.P0 = 0 → alarm messages	AS-i.P0 = 1 → faults
0	0	0	0	No alarm	No fault
0	0	0	1	Not used	Overtemperature (F30004, F30012, F30013, F30024, F30025, F30036)
0	0	1	0	Not used	Not used
0	0	1	1	No load (A07929)	Not used

RP3	RP2	RP1	RP0	AS-i.P0 = 0 → alarm messages	AS-i.P0 = 1 → faults
0	1	0	0	Overtemperature (A05000, A05004, A05006, A07012, A07015)	I <sup>2</sup> t overload (F30005, F07936)
0	1	0	1	Overvoltage (A30502, A07400)	Equipment malfunction (F01000 to F01257)
0	1	1	0	Local/Remote keyswitch in "Off" (A03560)	Not used
0	1	1	1	Undervoltage (A30016, A07402)	Motor PTC sensor malfunction (F07011, F07016)
1	0	0	0	I <sup>2</sup> t overload (A07805)	Overvoltage (F30002, F30011)
1	0	0	1	Not used	Not used
1	0	1	0	Local mode active (A03561)	Not used
1	0	1	1	Not used	Undervoltage (F30003, F07802)
1	1	0	0	Not used	Short-circuit at the output (F30001, F30017, F30021, F07801, F07807, F07900)
1	1	0	1	Motor phase loss (A30015 *)	Motor phase loss (F30015, F07902)
1	1	1	0	Not used	Safety fault (F016xx)
1	1	1	1	Other alarms	Other faults

\* A30015 will be generated after the message type of F30015 is changed to "Alarm". For more information on changing the message type, see p2118 and p2119 in the List Manual.

## 7.7.4 Cyclic and acyclic communication via CTT2

Via CTT2 (Combined Transaction Type 2), both cyclical and acyclical communication is performed via AS-i. Because only one channel is available (AS-i.DO1 master → slave or AS-i.DI3 slave → master), a concurrent cyclical and acyclical data exchange is not possible.

The communication type (cyclical or acyclical) is always coded in the first byte in accordance with the following table.

### CTT2 commands

Code (hex)	Explanation/meaning	Followed by
<b>Cyclic communication</b>		
	Access to analog values via DS140 ... DS147. See CP 343–2 / CP 343–2 P AS–Interface master, Chapter 4	4 bytes: PWE1, PWE2
	 CP 343–2 / CP 343–2 P AS–Interface master ( <a href="https://support.industry.siemens.com/cs/ww/en/view/5581657">https://support.industry.siemens.com/cs/ww/en/view/5581657</a> )	4 bytes: PWE1, PWE2
<b>Acyclic communication - standard</b>		
10 hex	Read request: Master → slave	2 bytes: Index, length
50 hex	Read request OK: Slave → master	Index, data
90 hex	Read request failed: Slave → master	1 byte: Standard error code (3 hex)
11 hex	Write request: Master → slave	Index, length, data
51 hex	Write request OK: Slave → master	

Code (hex)	Explanation/meaning	Followed by
91 hex	Write request failed: Slave → master	1 byte: Standard error code (3 hex)
<b>Acyclic communication - manufacturer-specific</b>		
12 hex	Read request: Master → slave	Index, length
52 hex	Read request OK: Slave → master	Data
92 hex	Read request failed: Slave → master	Fault object
13 hex	Write request: Master → slave	Index, length, data
53 hex	Write request OK: Slave → master	
93 hex	Write request failed: Slave → master	Fault object
1D hex	Exchange request: Master → slave	Index, read length, write length, write data
5D hex	Exchange request OK: Slave → master	PKE, index, n-2 data
9D hex	Exchange request faulty: Slave → master	Fault object

If an acyclical request cannot be executed by the converter, it replies with one of the following error messages.

Error message	Meaning
0	No fault
1	Invalid index
2	Incorrect length
3	Request not implemented
4	Busy (the request could not be processed completely within the time window, retry later)
5	Last acyclical request was not confirmed
6	Invalid subindex
7	"Selective read request" command missing

### 7.7.4.1 Cyclic communication

#### Converter → master

The converter cyclically transfers the data from p2051[1] and p2051[2] in four bytes to the master. You can process these four bytes in the control as for analog data. Refer to the documentation for the AS-i master for detailed information about access to analog data.

If you selected Macro 31 or 34 during the commissioning, the two indexes are interconnected as follows:

- p2051[1] = 63: Smoothed actual speed value
- p2051[2] = 27: Absolute smoothed actual current value

The values for transfer are normalized in accordance with the PROFIdrive N2 data type. Using p2051[1] and p2051[2] you can interconnect any other or connector parameters and transfer to the control.

**Master → Converter**

The master transfers the data in the "Combined Transaction Type 2" (CTT2) to the converter and writes it to r2050[1] and r2050[2].

To process these values in the converter, you must appropriately interconnect r2050[1] and r2050[2] in the converter. This means, when the control sends the speed setpoint, you must interconnect parameter p1070 (source for the main setpoint) with r2050 as follows:  
p1070[0] = 2050[1]

**Note****Internal interconnection with Macro 34**

If, when commissioning, you select Macro 34, then the main setpoint is internally interconnected with r2050[1].

Once a setpoint has been transferred completely, the setpoint present in the control will be transferred as next setpoint. Any setpoint changes made during the transfer are not considered.

**7.7.4.2 Acyclic communication - standard**

This type of acyclical communication supports the ID read request and the diagnostic read request. All other requests receive the "request not implemented" message response.

- ID request:
  - Master → slave 

10 hex	00 hex	nn hex
--------	--------	--------
  - Slave → master 

50 hex	00 hex	Manufacturer's ID	Product ID	BB hex
--------	--------	-------------------	------------	--------
- Diagnostic request:
  - Master → slave 

10 hex	01 hex	nn hex
--------	--------	--------
  - Slave → master no error 

50 hex	01 hex	00 hex
--------	--------	--------
  - Slave → master general error 

50 hex	01 hex	99 hex
--------	--------	--------

The following response is issued for all other write or read requests:

- Read requests 

90 hex	03 hex
--------	--------
- Write requests 

91 hex	03 hex
--------	--------

**7.7.4.3 Acyclic communication - manufacturer-specific**

The manufacturer-specific acyclical communication is performed via data record 47 in PIV format. The PIV (parameter channel) format structure is identical with that for the USS parameter channel.

To reduce the transfer volume, there is not only the "normal" "data exchange" PIV mechanism, but also the "Read data" and "Write data" commands.


- Data exchange:
  - Control → converter request
  - Converter → control response
- Read data:
 

The converter sends a read command, and the data of the last exchange request or write request is transferred from the converter to the control.
- Write data
 

Write OK: → 53 hex.


Because the PIV transfer protocol specifies the transfer direction independently, all parameters can be transferred as data exchange request/response. Requests for reading and writing data are included primarily to reduce the transferred data volume for the repeated reading or writing of parameters.

## Data exchange

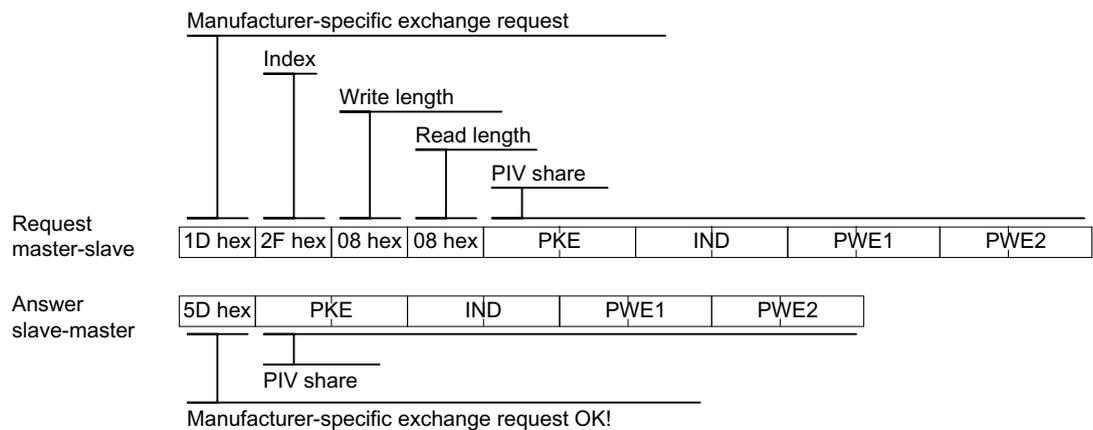


## Reading data


The data for the last write or exchange request is read

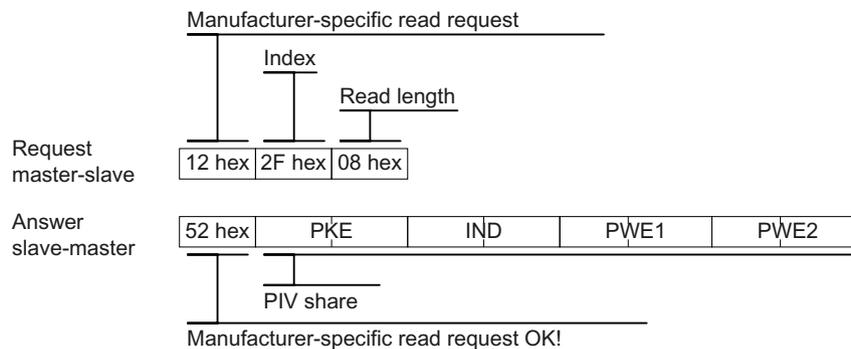

Writing data

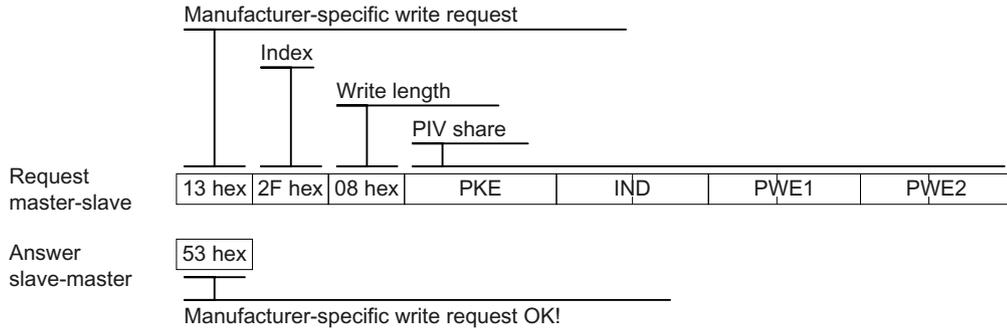

In the event of a fault, the converter sends the following telegram as response to the master:

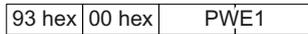


Further information

For more information about the PIV format structure and the value for PWE in the USS parameter channel, see Section 5.3.4 "USS parameter channel" in the Fieldbus Function Manual.

7.8 Jogging




The "JOG" function is typically used to temporarily move a machine part using local control commands, e.g. a transport conveyor belt.

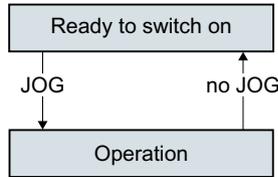

Commands "JOG 1" or "JOG 2" switch the motor on and off.

The commands are only active when the converter is in the "Ready for switching on" state.

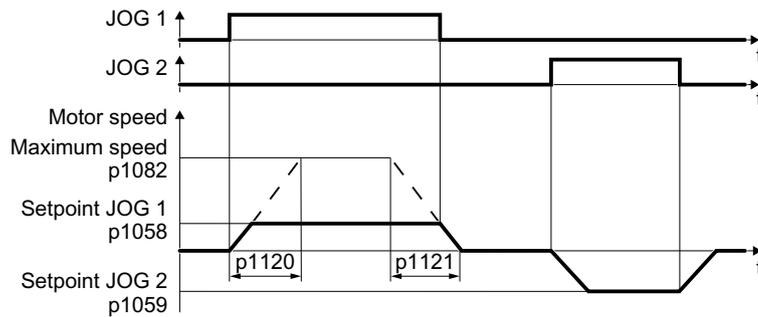

After switching on, the motor accelerates to the setpoint JOG 1 or setpoint JOG 2. The two different setpoints can, for example, be assigned to motor clockwise and counter-clockwise rotation.

## 7.9 Conveyor technology control functions (for G115D PROFINET and AS-i variants only)

In JOG mode, the same ramp-function generator is active as for the ON/OFF1 command.

## Parameters

Parameter	Description	Setting
p1120[0...n]	Ramp-function generator, ramp-up time [s]	Sets the ramp-up time for the ramp-function generator. Factory setting: 1
p1121[0...n]	Ramp-function generator, ramp-down time [s]	Sets the ramp-down time for the ramp-function generator. Factory setting: 1
p1058[0...n]	Jog 1 speed setpoint [rpm]	Sets the speed for JOG 1. Factory setting: 150
p1059[0...n]	Jog 2 speed setpoint [rpm]	Sets the speed for JOG 2. Factory setting: -150
p1082[0...n]	Maximum speed [rpm]	Sets the highest speed. Factory setting: 1500

## 7.9 Conveyor technology control functions (for G115D PROFINET and AS-i variants only)

### Overview

Conveyors are devices used for movement of materials, products and loads throughout a manufacturing or distribution facility. Conventionally, the conveyor technology control is implemented in the PLC controller. By transferring the functionality to the converter, the conveying process starts via the PLC while stops depending on the sensor(s) wired directly to the converter. In this case, the materials conveyed can always come to a standstill at the same point independent of the cycle time of the PLC controller.

The SINAMICS G115D PROFINET and AS-i variants (I/O variants not supported) offer flexible and efficient solutions for the conveyor technology requirements of various horizontal or inclined applications in such industrial sectors as intralogistics, automotive, and airport.


#### Note

To make sure that the conveyor control function works properly on the SINAMICS G115D AS-i variant, you must select Macro 31 or 34. For more information on the wiring arrangement, See Section "Factory interface setting (Page 91)".

#### Applications

- Roller, belt, or chain conveyors
- Turntables

- Corner turntable lifts
- Travelling trolleys

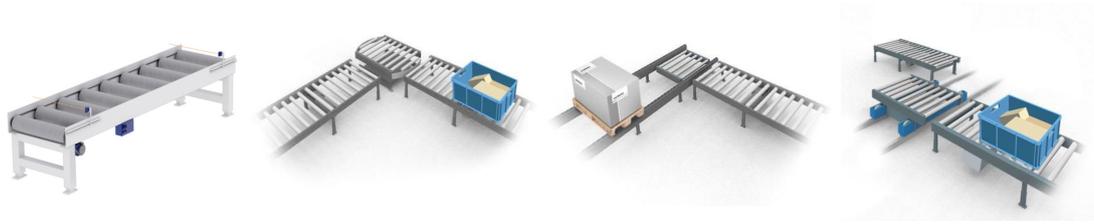

### Commissioning tool

It is recommended that you commission the conveyor control function using the Startdrive PC tool or the SINAMICS G120 Smart Access.

 [Commissioning tools \(Page 116\)](#)

---

### Note

All screenshots in Chapter "Conveyor technology control functions" take the converter with PROFINET interface by using the Startdrive PC tool as examples. You can also commission the functions via the SINAMICS G120 Smart Access. For more information, see Section "Application setup" in the SINAMICS G120 Smart Access Operating Instructions.

 [Overview of the manuals \(Page 610\)](#)

---

## 7.9.1 Conveyors

Conveyors move materials from one location to another. There are different types of conveyors (for example, roller conveyors, chain conveyors, or belt conveyors) available for use according to your particular applications.

### 7.9.1.1 Conveyor, one direction and one speed (p3393 = 1)

#### Overview

With p3393 (conveyor technology application) set to 1, the converter enables the load on a conveyor belt to move in one direction with a fixed speed. A sensor is required to signal the limit position for the motor to stop.




## Precondition

You interconnect the signal of the sensor with the digital input of your choice.

## Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The direction of the movement depends on the setpoint inversion (p1113):
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- The motor stops with OFF1 ramp when the stop sensor positive direction (p3384) is triggered (level/edge triggered depending on p3394).
- Setting the sensor bypass signal (p3390) to 1 overrides the stop sensor signal p3384.

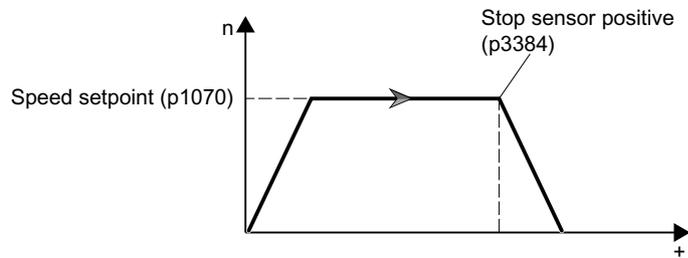

Parameters



Conveyor technology control parameters (Page 230)

7.9.1.2 Conveyor, one direction and two speeds (p3393 = 2)

Overview

With p3393 (conveyor technology application) set to 2, the converter enables the load on a conveyor belt to move in one direction with variable speeds. Two sensors are required to signal the limit positions for the motor to stop or decelerate.




Precondition

You interconnect the signals of the sensors with the digital inputs of your choice.


## Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The direction of the movement depends on the setpoint inversion (p1113):
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when the low speed sensor positive direction (p3387) is triggered (level/edge triggered depending on p3395).
- The motor stops with OFF1 ramp when the stop sensor positive direction (p3384) is triggered (level/edge triggered depending on p3394).
- Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384 and p3387.

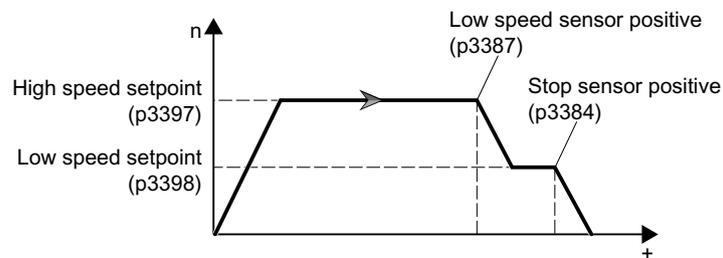

## Parameters

 Conveyor technology control parameters (Page 230)

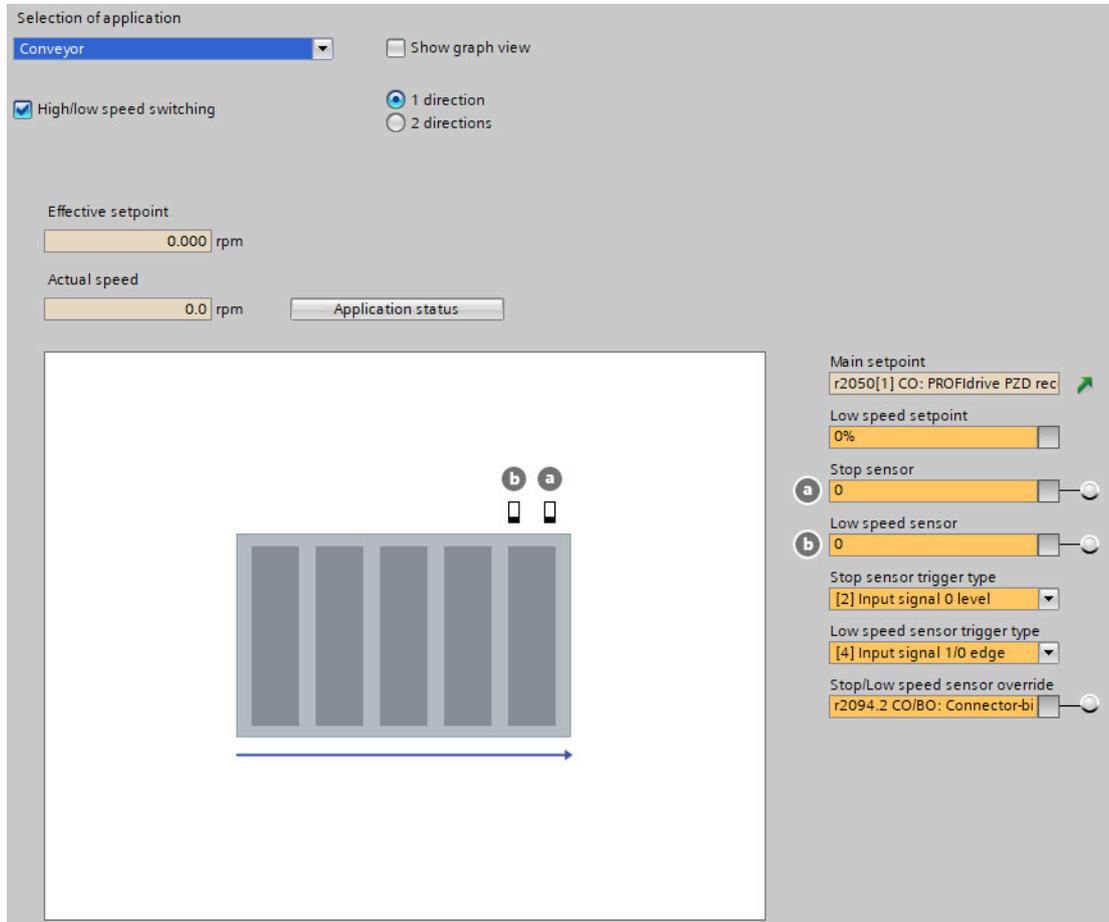

### 7.9.1.3 Conveyor, two directions and one speed (p3393 = 3)

#### Overview

With p3393 (conveyor technology application) set to 3, the converter enables the load on a conveyor belt to move in either positive or negative direction with a fixed speed. Two sensors are required to signal the limit positions for the motor to stop.




#### Precondition

You interconnect the signals of the sensors with the digital inputs of your choice.


## Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The load can move in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the movement in positive direction, the following applies:
  - The motor stops with OFF1 ramp when the stop sensor positive direction (p3384) is triggered (level/edge triggered depending on p3394).
  - No motor reaction is triggered by the stop sensor negative direction signal (p3385).
- With the movement in negative direction, the following applies:
  - The motor stops with OFF1 ramp when the stop sensor negative direction (p3385) is triggered (level/edge triggered depending on p3394).
  - No motor reaction is triggered by the stop sensor positive direction signal (p3384).
- Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384 and p3385.

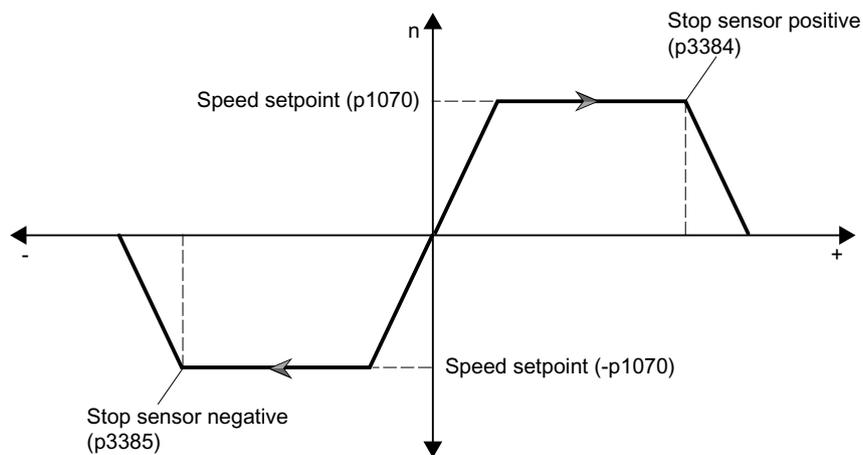

## Parameters

 Conveyor technology control parameters (Page 230)

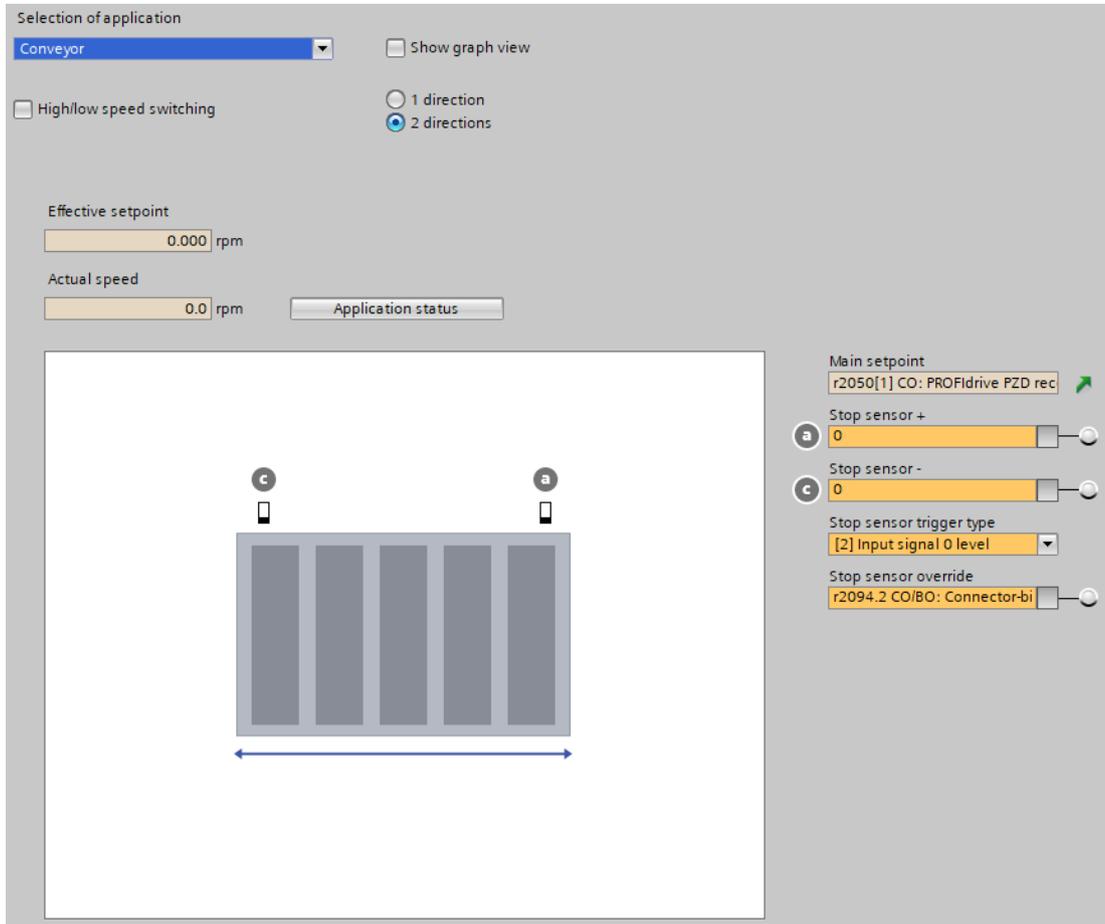

### 7.9.1.4 Conveyor, two directions and two speeds (p3393 = 4)

#### Overview

With p3393 (conveyor technology application) set to 4, the converter enables the load on a conveyor belt to move in either positive or negative direction with variable speeds. Four sensors are required to signal the limit positions for the motor to stop or decelerate.




#### Precondition

You interconnect the signals of the sensors with the digital inputs of your choice.


## Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The load can move in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the movement in positive direction, the following applies:
  - The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when the low speed sensor positive direction (p3387) is triggered (level/edge triggered depending on p3395).
  - The motor stops with OFF1 ramp when the stop sensor positive direction (p3384) is triggered (level/edge triggered depending on p3394).
  - No motor reaction is triggered by the stop sensor negative direction (p3385) and low speed sensor negative direction (p3388) signals.
- With the movement in negative direction, the following applies:
  - The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when the low speed sensor negative direction (p3388) is triggered (level/edge triggered depending on p3395).
  - The motor stops with OFF1 ramp when the stop sensor negative direction (p3385) is triggered (level/edge triggered depending on p3394).
  - No motor reaction is triggered by the stop sensor positive direction (p3384) and low speed sensor positive direction (p3387) signals.
- Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384, p3385, p3387, and p3388.

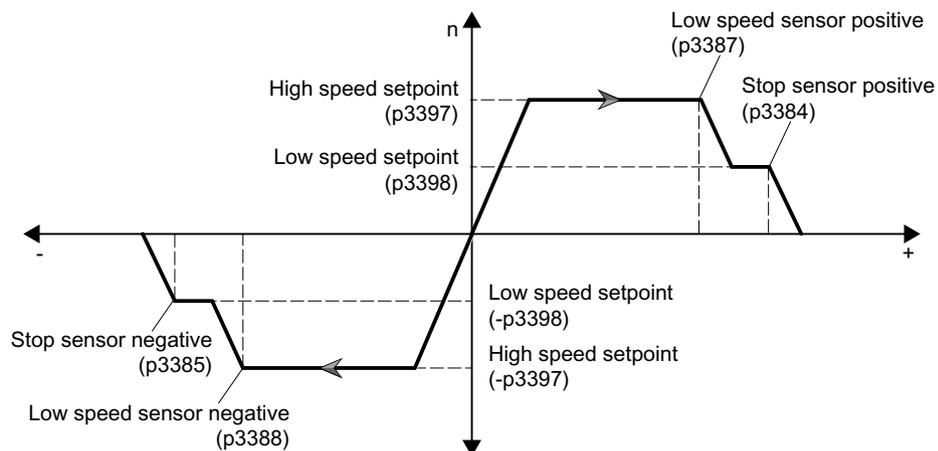

## Parameters

 Conveyor technology control parameters (Page 230)

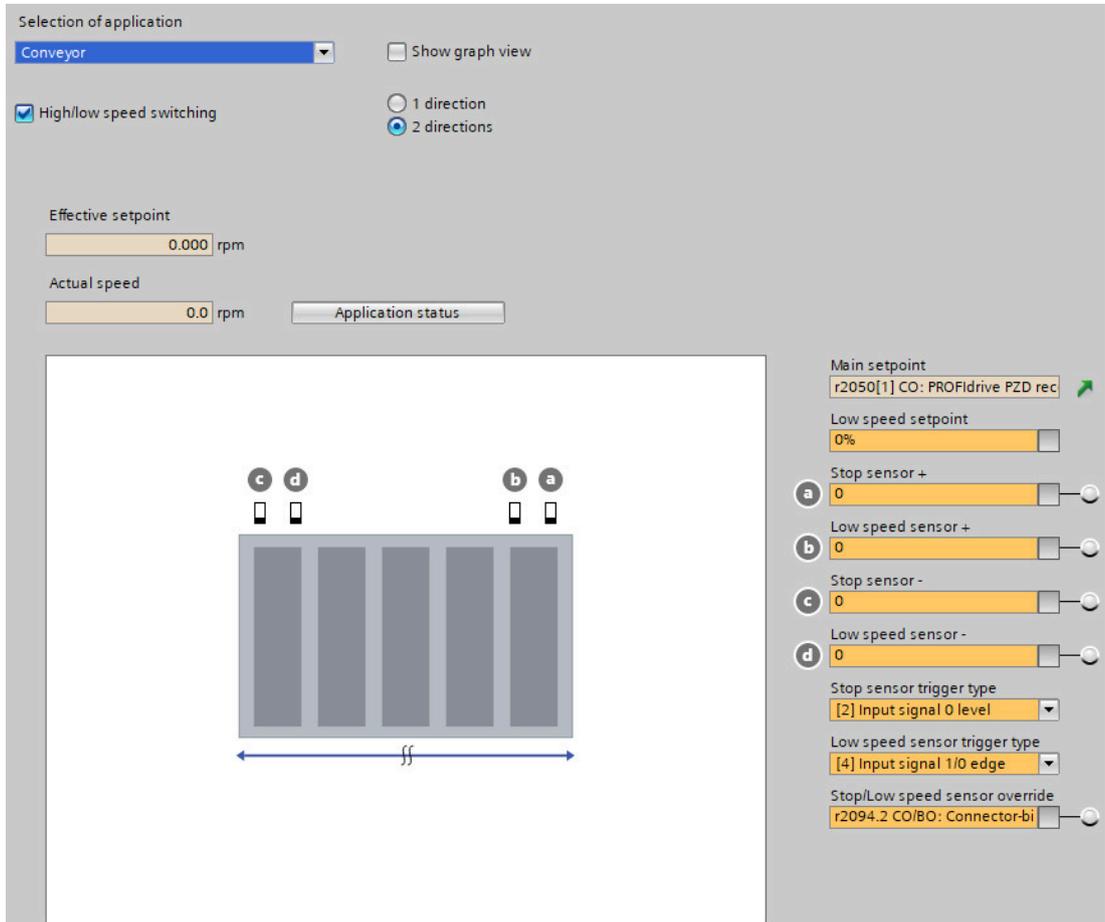

Selection of application  
 Conveyor  Show graph view

High/low speed switching  1 direction  2 directions

Effective setpoint  
 0.000 rpm

Actual speed  
 0.0 rpm

Main setpoint  
 r2050[1] CO: PROFIdrive PZD rec

Low speed setpoint  
 0%

Stop sensor +  
 a 0

Low speed sensor +  
 b 0

Stop sensor -  
 c 0

Low speed sensor -  
 d 0

Stop sensor trigger type  
 [2] Input signal 0 level

Low speed sensor trigger type  
 [4] Input signal 1/0 edge

Stop/Low speed sensor override  
 r2094.2 CO/BO: Connector-bi


### 7.9.2 Turntables

A turntable in a conveyor system redirects the material at the crossing of two conveyor lines. The turntable rotates from one end position to the other in the direction depending on the setting of the end position shutdown (p3392) and the polarity of the speed setpoint.

### 7.9.2.1 Turntable, two positions and one speed (p3393 = 5)

#### Overview

With p3393 (conveyor technology application) set to 5, the converter enables a turntable in a conveyor system to rotate in either positive or negative direction with a fixed speed and stop at two dedicated positions. Two sensors are required to signal the limit positions for the motor to stop.

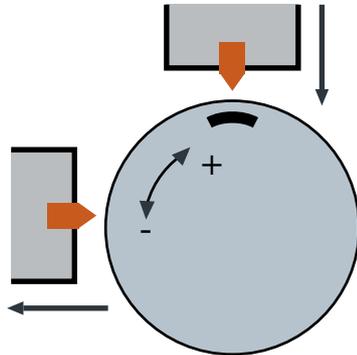


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- Depending on the specific application and mechanical setup, you must set end position shutdown active (p3392) to 1, so as to limit the turntable movement between the dedicated positions.

## Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The turntable can rotate in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor stops with OFF1 ramp when either of the two stop sensors (p3384 and p3385) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384 and p3385.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it stops only when the stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it stops only when the stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again and the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 does not override the stop sensor signals p3384 and p3385.

### End position shutdown activated (p3392 = 1)

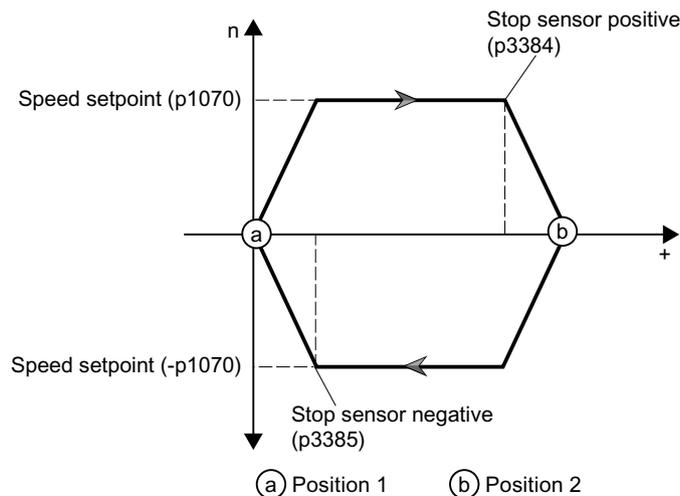


**Note**

With the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = 1 or 2) activated, once a stop sensor is triggered, the motor stops even if the level is canceled.

**Parameters**

 Conveyor technology control parameters (Page 230)

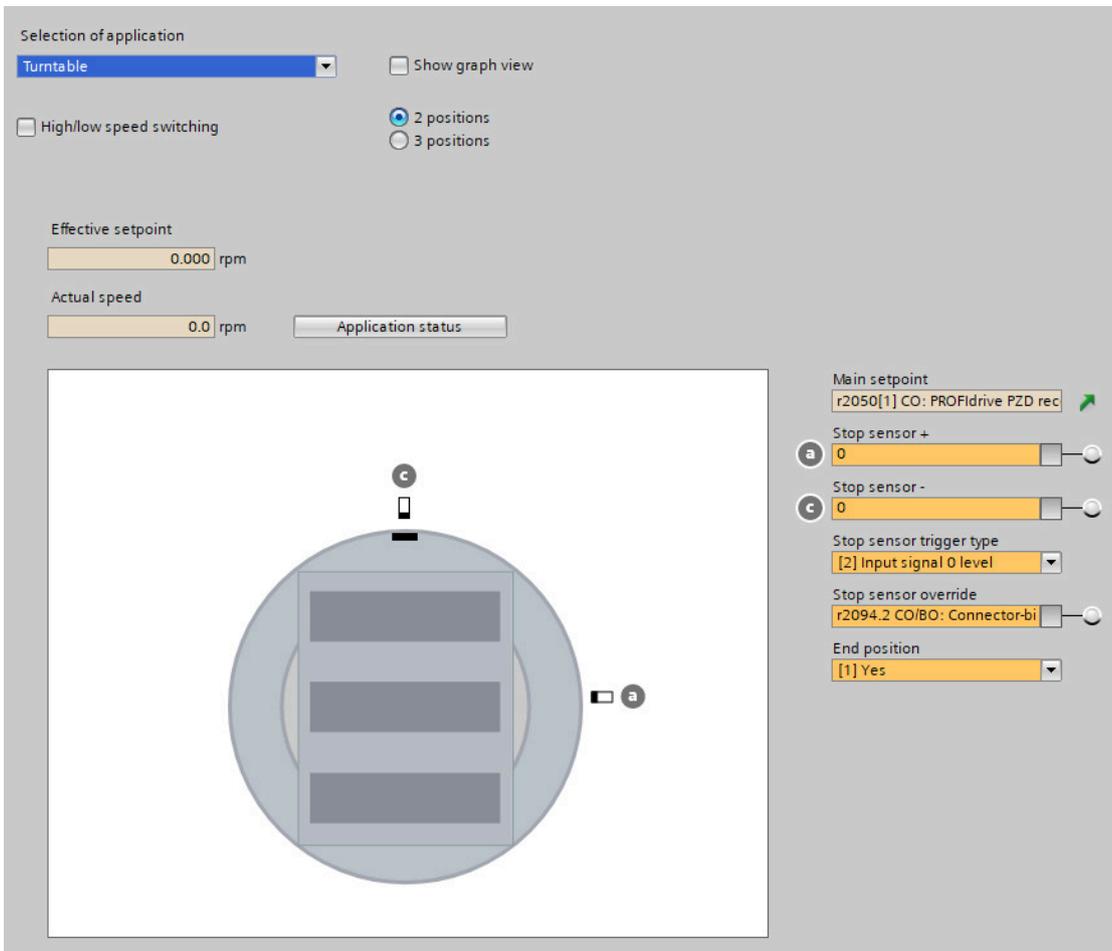

Selection of application  
Turntable

Show graph view

High/low speed switching

2 positions  
 3 positions

Effective setpoint  
0.000 rpm

Actual speed  
0.0 rpm

Application status

Main setpoint  
r2050[1] CO: PROFIdrive PZD rec

Stop sensor +  
a 0

Stop sensor -  
c 0

Stop sensor trigger type  
[2] Input signal 0 level

Stop sensor override  
r2094.2 CO/BO: Connector-bi


End position  
[1] Yes

### 7.9.2.2 Turntable, two positions and two speeds (p3393 = 6)

#### Overview

With p3393 (conveyor technology application) set to 6, the converter enables a turntable in a conveyor system to rotate in either positive or negative direction with variable speeds and stop at two dedicated positions.

Four sensors are required to signal the limit positions for the motor to stop or decelerate. In the mechanical setup of the conveyor system, you must install the stop sensor and low speed sensor in a line. So do the stop and low speed cams. Besides, when setting up the cams, the low speed cam must be longer than the stop cam.

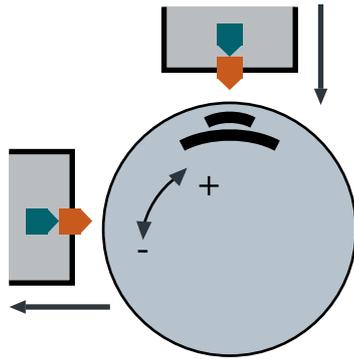


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- Depending on the specific application and mechanical setup, you must set end position shutdown active (p3392) to 1, so as to limit the turntable movement between the dedicated positions.

## Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The turntable can rotate in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when either of the two low speed sensors (p3387 and p3388) is triggered (level/edge triggered depending on p3395).
  - The motor stops with OFF1 ramp when either of the two stop sensors (p3384 and p3385) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384, p3385, p3387, and p3388.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it decelerates/stops only when the low speed sensor positive direction (p3387)/stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it decelerates/stops only when the low speed sensor negative direction (p3388)/stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again and the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 does not override the sensor signals p3384, p3385, p3387, and p3388.

**End position shutdown activated (p3392 = 1)**

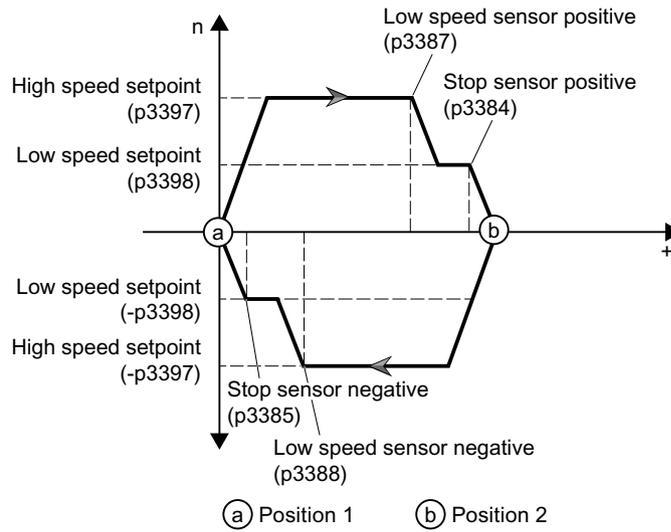

**Note**

With the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = p3395 = 1 or 2) activated, once a stop or low speed sensor is triggered, the motor stops or goes to low speed even if the level is canceled.

Parameters



Conveyor technology control parameters (Page 230)

Selection of application  
 Turntable  Show graph view

High/low speed switching  2 positions  3 positions

Effective setpoint  
 0.000 rpm

Actual speed  
 0.0 rpm

Main setpoint  
 r2050[1] CO: PROFIdrive PZD rec

Low speed setpoint  
 0%

a Stop sensor + 0

b Low speed sensor + 0

c Stop sensor - 0

d Low speed sensor - 0

Stop sensor trigger type  
 [2] Input signal 0 level

Low speed sensor trigger type  
 [4] Input signal 1/0 edge


Stop/Low speed sensor override  
 r2094.2 CO/BO: Connector-bi

End position  
 [1] Yes

### 7.9.2.3 Turntable, three positions and one speed (p3393 = 7)

#### Overview

With p3393 (conveyor technology application) set to 7, the converter enables a turntable in a conveyor system to rotate in either positive or negative direction with a fixed speed and stop at three dedicated positions. Three sensors are required to signal the limit positions for the motor to stop.

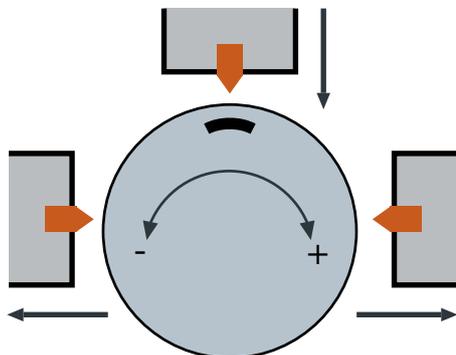


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- Depending on the specific application and mechanical setup, you must set end position shutdown active (p3392) to 1, so as to limit the turntable movement between the dedicated positions.

## Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The turntable can rotate in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor stops with OFF1 ramp when any of the three stop sensors (p3384, p3385, and p3386) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384, p3385, and p3386.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it stops only when the stop sensor center (p3386) or stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it stops only when the stop sensor center (p3386) or stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again. If the motor stops upon triggering the stop sensor positive direction/negative direction, the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the stop sensor center signal p3386. In this case, the turntable can rotate directly from position 1 to position 3 and vice versa.

### End position shutdown activated (p3392 = 1)

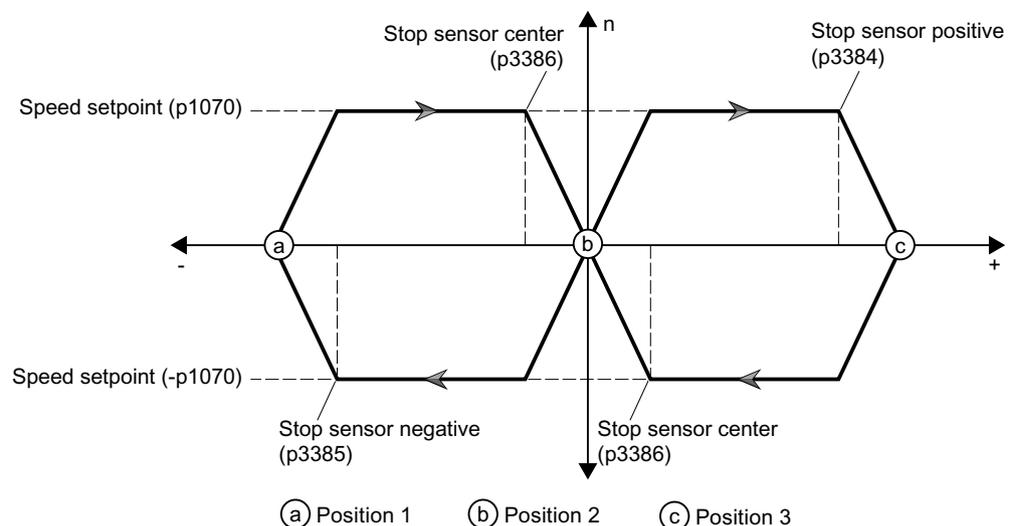


**Note**

The motor will have the following behavior with the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = 1 or 2) activated:

- Once a stop sensor at the positive or negative position is triggered, the motor stops even if the level is canceled.
- Once a stop sensor at the center position is triggered, the motor stops; if the level is cancelled, then the motor runs again.

**Parameters**

 Conveyor technology control parameters (Page 230)

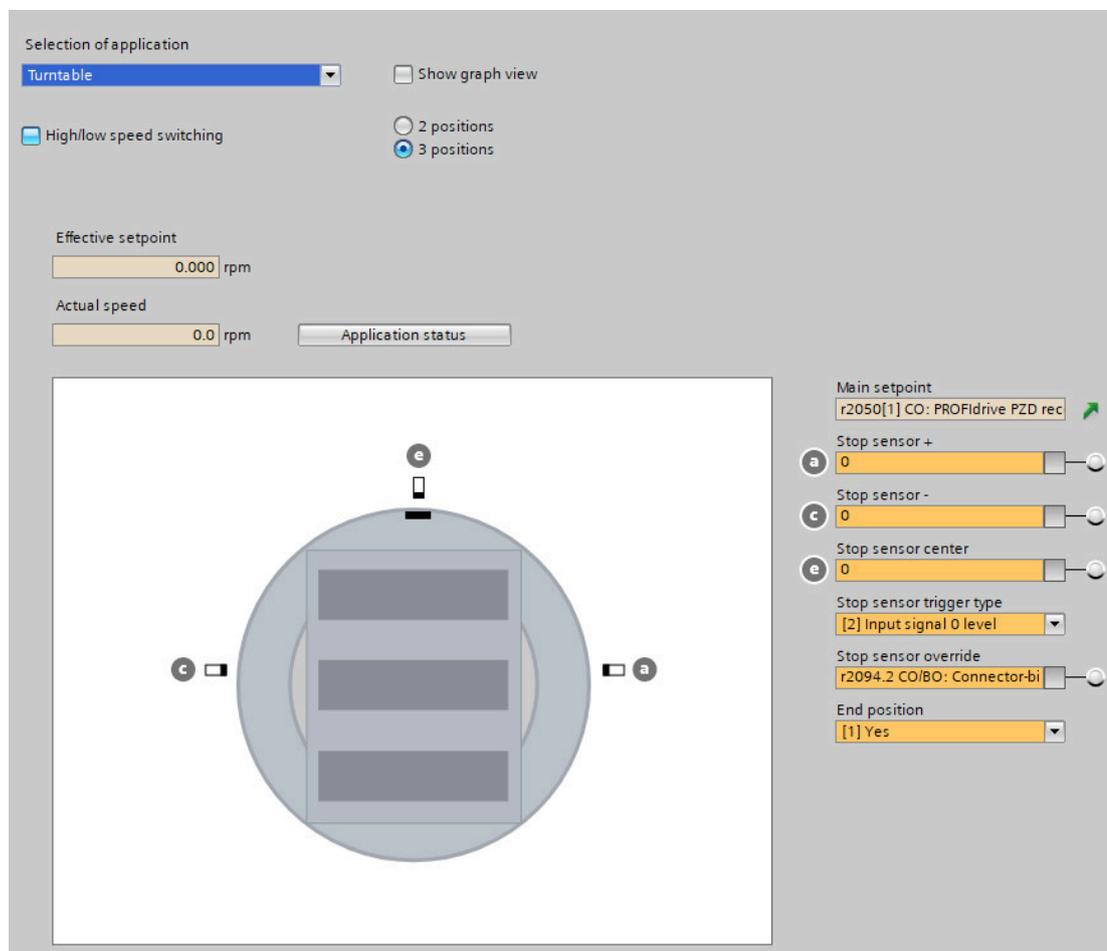

Selection of application: Turntable

High/low speed switching:  2 positions,  3 positions

Effective setpoint: 0.000 rpm

Actual speed: 0.0 rpm

Application status: [button]

Main setpoint: r2050[1] CO: PROFIdrive PZD rec

Stop sensor +: 0

Stop sensor -: 0

Stop sensor center: 0

Stop sensor trigger type: [2] Input signal 0 level

Stop sensor override: r2094.2 CO/BO: Connector-bi


End position: [1] Yes

### 7.9.2.4 Turntable, three positions and two speeds (p3393 = 8)

#### Overview

With p3393 (conveyor technology application) set to 8, the converter enables a turntable in a conveyor system to rotate in either positive or negative direction with variable speeds and stop at three dedicated positions.

Six sensors are required to signal the limit positions for the motor to stop or decelerate. In the mechanical setup of the conveyor system, you must install the stop sensor and low speed sensor in a line. So do the stop and low speed cams. Besides, when setting up the cams, the low speed cam must be longer than the stop cam.

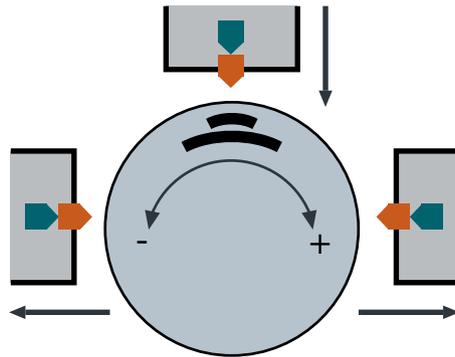


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- Depending on the specific application and mechanical setup, you must set end position shutdown active (p3392) to 1, so as to limit the turntable movement between the dedicated positions.

## Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The turntable can rotate in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when any of the three low speed sensors (p3387, p3388, and p3389) is triggered (level/edge triggered depending on p3395).
  - The motor stops with OFF1 ramp when any of the three stop sensors (p3384, p3385, and p3386) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384, p3385, p3386, p3387, p3388, and p3389.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it decelerates/stops only when the low speed sensor positive direction or low speed sensor center (p3387 or p3389)/stop sensor positive direction or stop sensor center (p3384 or p3386) is triggered.
  - If the motor runs in negative direction, it decelerates/stops only when the low speed sensor negative direction or low speed sensor center (p3388 or p3389)/stop sensor negative direction or stop sensor center (p3385 or p3386) is triggered.
  - A new ON command must be initiated to start the motor again. If the motor stops upon triggering the stop sensor positive direction/negative direction, the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the stop sensor center and low speed sensor center signals p3386 and p3389. In this case, the turntable can rotate directly from position 1 to position 3 and vice versa.

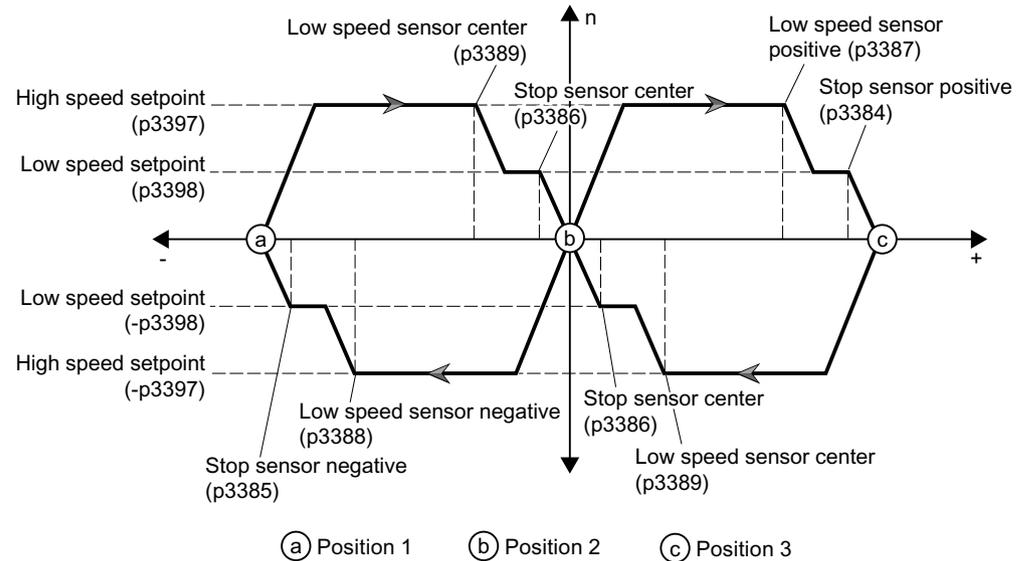**End position shutdown activated (p3392 = 1)****Note**

The motor will have the following behavior with the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = p3395 = 1 or 2) activated:

- Once a stop or low speed sensor at the positive or negative position is triggered, the motor stops and goes to low speed even if the level is canceled.
- Once a stop or low speed sensor at the center position is triggered, the motor stops and goes to low speed; if the level is cancelled, then the motor runs again.

## Parameters



Conveyor technology control parameters (Page 230)

Selection of application: Turntable

Show graph view

High/low speed switching

2 positions

3 positions

Effective setpoint: 0.000 rpm

Actual speed: 0.0 rpm

Application status: [button]

Main setpoint: r2050[1] CO: PROFIdrive PZD rec

Low speed setpoint: 0%

Stop sensor +: a 0

Low speed sensor +: b 0

Stop sensor -: c 0

Low speed sensor -: d 0

Stop sensor center: e 0

Low speed sensor center: f 0

Stop sensor trigger type: [2] Input signal 0 level

Low speed sensor trigger type: [4] Input signal 1/0 edge

Stop/Low speed sensor override: r2094.2 CO/BO: Connector-bi

End position: [1] Yes


### 7.9.3 Corner turntable lifts

For transferring a load from one level to another, a corner turntable lift can be used to raise or lower the load.

### 7.9.3.1 Corner turntable lift, two positions and one speed (p3393 = 9)

#### Overview

With p3393 (conveyor technology application) set to 9, the converter enables a corner turntable lift in a conveyor system to move up and down with a fixed speed and stop at two dedicated positions. Two sensors are required to signal the limit positions for the motor to stop.

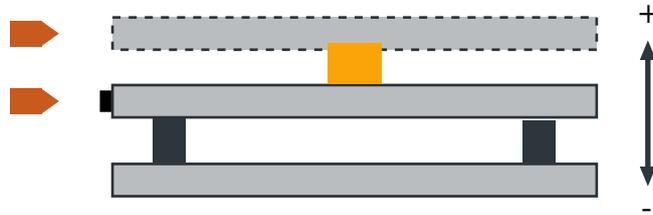


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- To make sure that the corner turntable lift moves between the higher position and the lower position, the end position shutdown must be activated with p3392 set to 1.

## Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The lift moves in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor stops with OFF1 ramp when either of the two stop sensors (p3384 and p3385) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384 and p3385.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it stops only when the stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it stops only when the stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again and the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 does not override the stop sensor signals p3384 and p3385.

### End position shutdown activated (p3392 = 1)

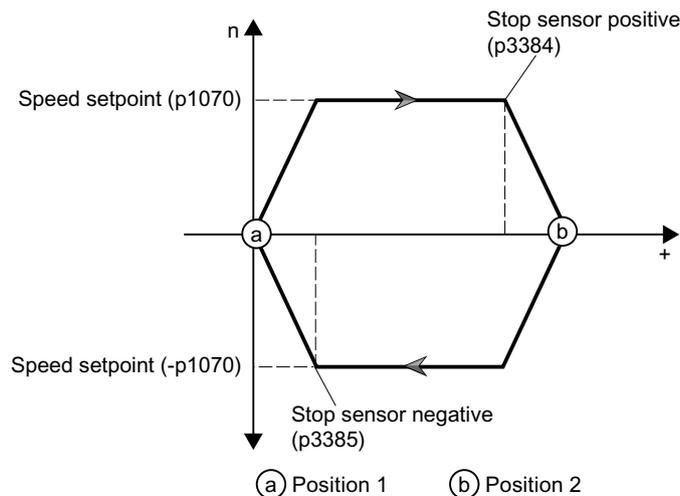


**Note**

With the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = 1 or 2) activated, once a stop sensor is triggered, the motor stops even if the level is canceled.

**Parameters**

 Conveyor technology control parameters (Page 230)

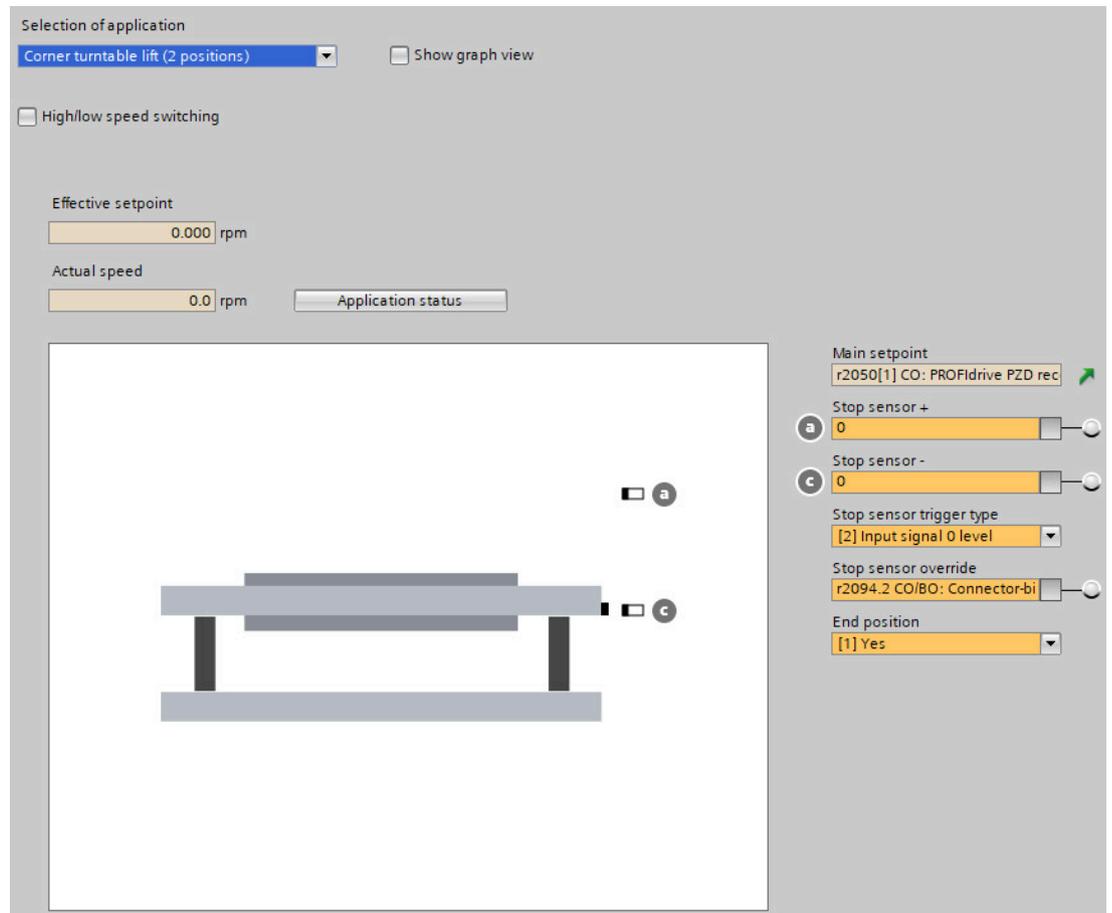

Selection of application  
 Corner turntable lift (2 positions)  Show graph view

High/low speed switching

Effective setpoint  
 0.000 rpm

Actual speed  
 0.0 rpm

Main setpoint  
 r2050[1] CO: PROFIdrive PZD rec

Stop sensor +  
 a 0

Stop sensor -  
 c 0

Stop sensor trigger type  
 [2] Input signal 0 level


Stop sensor override  
 r2094.2 CO/BO: Connector-bl

End position  
 [1] Yes

### 7.9.3.2 Corner turntable lift, two positions and two speeds (p3393 = 10)

#### Overview

With p3393 (conveyor technology application) set to 10, the converter enables a corner turntable lift in a conveyor system to move up and down with variable speeds and stop at two dedicated positions. Four sensors are required to signal the limit positions for the motor to stop or decelerate.

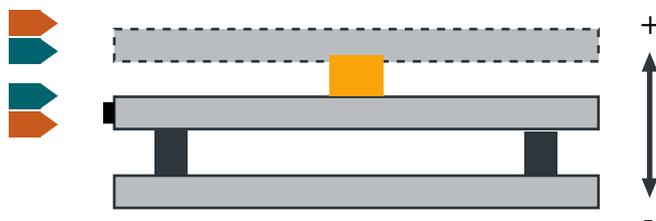


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- To make sure that the corner turntable lift moves between the higher position and the lower position, the end position shutdown must be activated with p3392 set to 1.

## Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The lift moves in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown deactivated (p3392 = 0), the following applies:
  - The motor decelerates with OFF1 ramp to the low speed setpoint (p3398) when either of the two low speed sensors (p3387 and p3388) is triggered (level/edge triggered depending on p3395).
  - The motor stops with OFF1 ramp when either of the two stop sensors (p3384 and p3385) is triggered (level/edge triggered depending on p3394).
  - With the sensor evaluation type (p3394) set to 1 or 2 (level triggering), the motor starts again in either positive or negative direction when the level is canceled; with p3394 set to 3 or 4 (edge triggering), a new ON command must be initiated to start the motor again in either positive or negative direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the sensor signals p3384, p3385, p3387, and p3388.
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it decelerates/stops only when the low speed sensor positive direction (p3387)/stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it decelerates/stops only when the low speed sensor negative direction (p3388)/stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again and the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 does not override the sensor signals p3384, p3385, p3387, and p3388.

### End position shutdown activated (p3392 = 1)

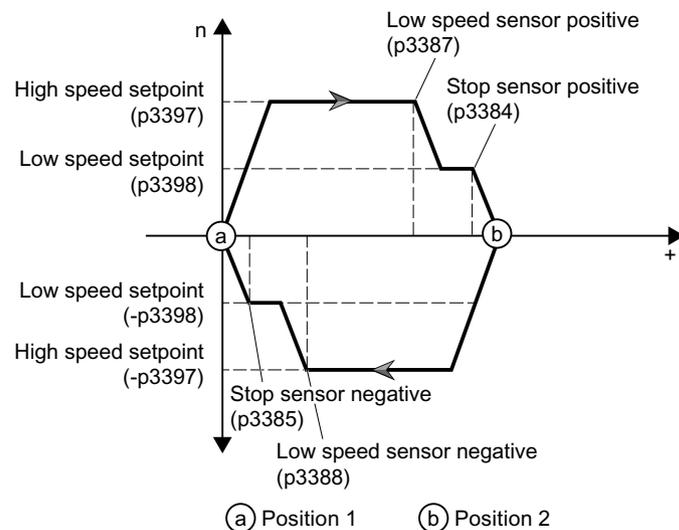


**Note**

With the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = p3395 = 1 or 2) activated, once a stop or low speed sensor is triggered, the motor stops or goes to low speed even if the level is canceled.

**Parameters**

 Conveyor technology control parameters (Page 230)

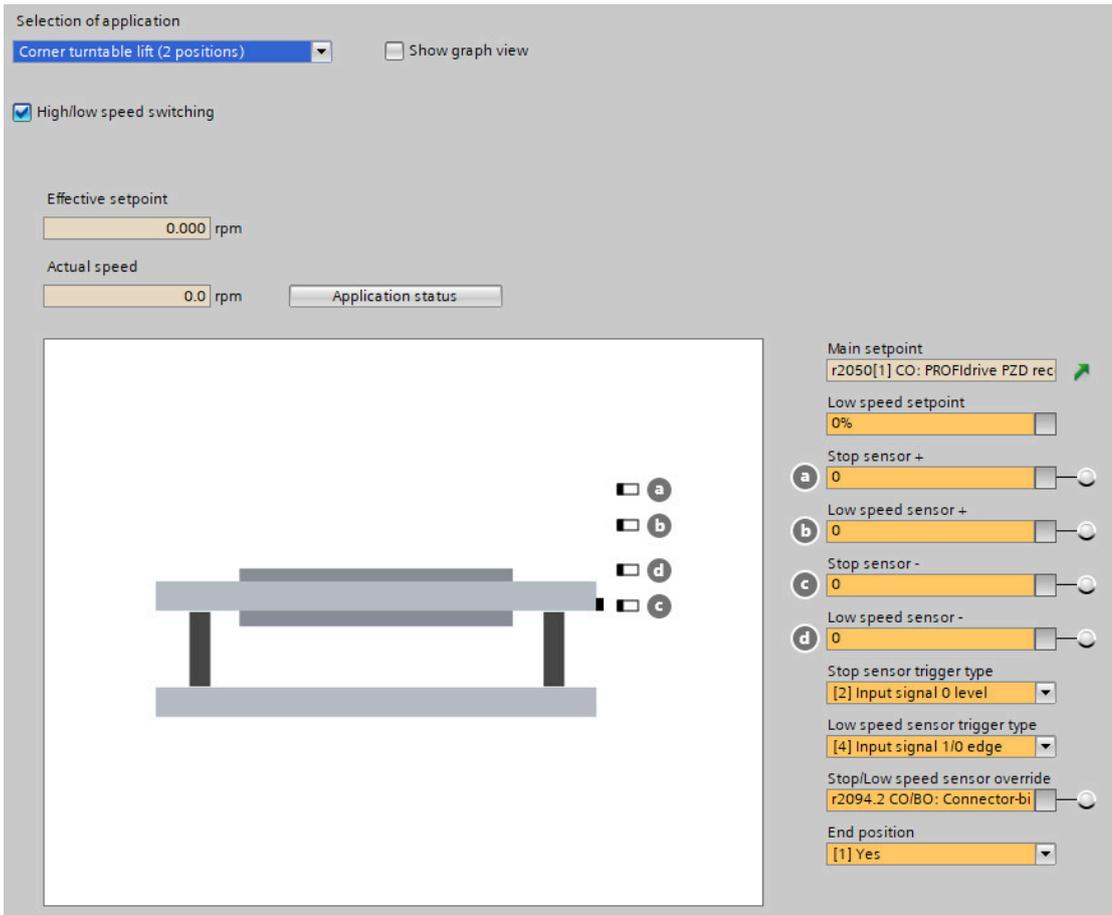


**7.9.4 Travelling trolleys**

Travelling trolleys travel along a fixed path with specific positions for loading and discharge.

### 7.9.4.1 Travelling trolley, one speed (p3393 = 11)

#### Overview

With p3393 (conveyor technology application) set to 11, the converter enables a travelling trolley to move in either positive or negative direction with a fixed speed and stop at dedicated positions. Three sensors are required to signal the limit positions for the motor to stop.

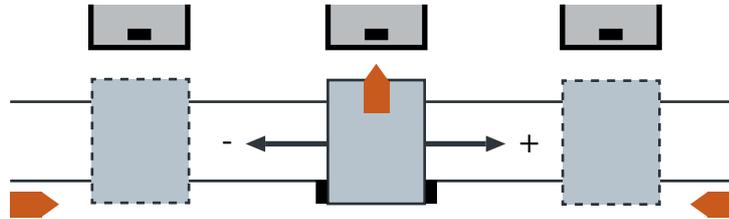


#### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- The end position shutdown must be activated with p3392 set to 1 to avoid damage to the devices.
- The controlling PLC can activate/deactivate the sensor bypass signal (p3390) and define different positions among which the trolley can move.

#### Function description

- With the ON command, the motor accelerates to its speed setpoint (p1070). The trolley moves in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it stops only when the stop sensor center (p3386) or stop sensor positive direction (p3384) is triggered.
  - If the motor runs in negative direction, it stops only when the stop sensor center (p3386) or stop sensor negative direction (p3385) is triggered.
  - A new ON command must be initiated to start the motor again. If the motor stops upon triggering the stop sensor positive direction/negative direction, the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the stop sensor center signal p3386.

**End position shutdown activated (p3392 = 1)**

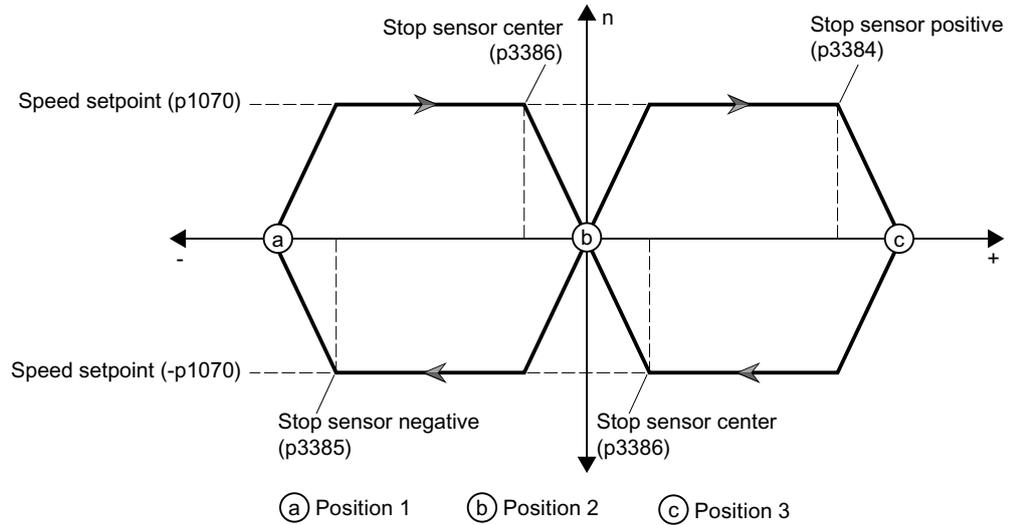


**Note**

The motor will have the following behavior with the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = 1 or 2) activated:

- Once a stop sensor at the positive or negative position is triggered, the motor stops even if the level is canceled.
- Once a stop sensor at the center position is triggered, the motor stops; if the level is cancelled, then the motor runs again.

## Parameters

 Conveyor technology control parameters (Page 230)

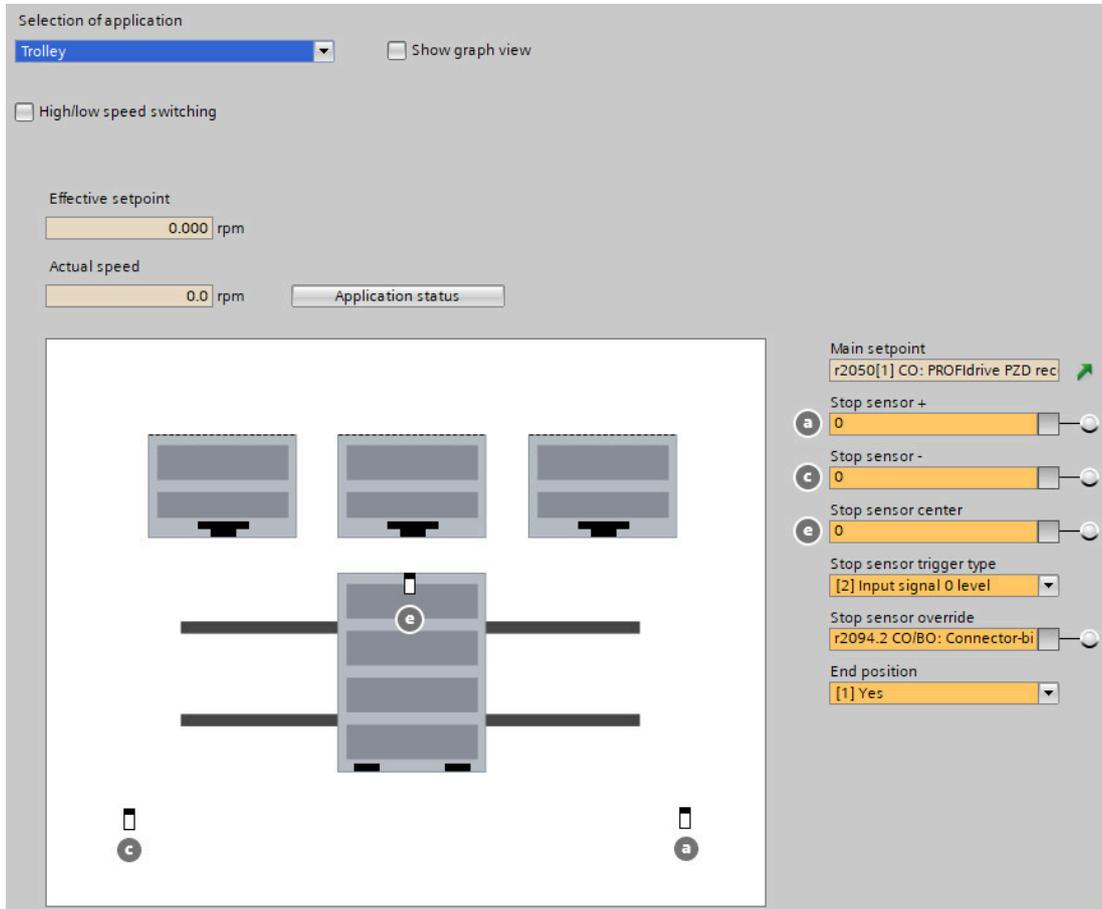

Selection of application: Trolley  Show graph view

High/low speed switching

Effective setpoint: 0.000 rpm

Actual speed: 0.0 rpm

Main setpoint: r2050[1] CO: PROFIdrive PZD rec

Stop sensor +: 0

Stop sensor -: 0

Stop sensor center: 0

Stop sensor trigger type: [2] Input signal 0 level

Stop sensor override: r2094.2 CO/BO: Connector-bi


End position: [1] Yes

### 7.9.4.2 Travelling trolley, two speeds (p3393 = 12)

#### Overview

With p3393 (conveyor technology application) set to 12, the converter enables a travelling trolley to move in either positive or negative direction with variable speeds and stop at dedicated positions.

Six sensors are required to signal the limit positions for the motor to stop or decelerate. In the mechanical setup of the conveyor system, the stop sensor and low speed sensor on the travelling trolley must be installed in a line. So do the stop and low speed cams on the corresponding conveyor lines. Besides, when setting up the cams, the low speed cam must be longer than the stop cam.

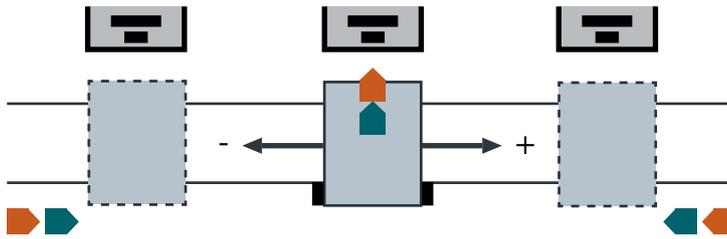


### Precondition

- You interconnect the signals of the sensors with the digital inputs of your choice.
- The end position shutdown must be activated with p3392 set to 1 to avoid damage to the devices.
- The controlling PLC can activate/deactivate the sensor bypass signal (p3390) and define different positions among which the trolley can move.

### Function description

- With the ON command, the motor accelerates to the high speed setpoint (p3397). The trolley moves in either positive or negative direction depending on the setting of p1113:
  - p1113 = 0: positive direction
  - p1113 = 1: negative direction
- With the end position shutdown activated (p3392 = 1), the following applies:
  - If the motor runs in positive direction, it decelerates/stops only when the low speed sensor positive direction or low speed sensor center (p3387 or p3389)/stop sensor positive direction or stop sensor center (p3384 or p3386) is triggered.
  - If the motor runs in negative direction, it decelerates/stops only when the low speed sensor negative direction or low speed sensor center (p3388 or p3389)/stop sensor negative direction or stop sensor center (p3385 or p3386) is triggered.
  - A new ON command must be initiated to start the motor again. If the motor stops upon triggering the stop sensor positive direction/negative direction, the new movement is only possible in the opposite direction.
  - Setting the sensor bypass signal (p3390) to 1 overrides the stop sensor center and low speed sensor center signals p3386 and p3389.

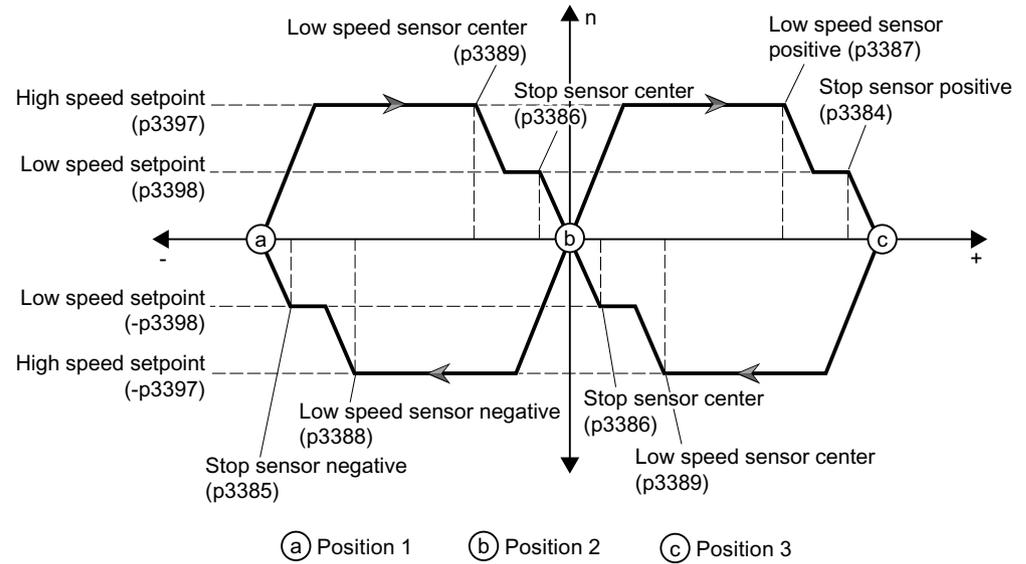
**End position shutdown activated (p3392 = 1)****Note**

The motor will have the following behavior with the end position shutdown (p3392 = 1) and level-triggered sensor signals (p3394 = p3395 = 1 or 2) activated:

- Once a stop or low speed sensor at the positive or negative position is triggered, the motor stops and goes to low speed even if the level is canceled.
- Once a stop or low speed sensor at the center position is triggered, the motor stops and goes to low speed; if the level is cancelled, then the motor runs again.

## Parameters

 Conveyor technology control parameters (Page 230)

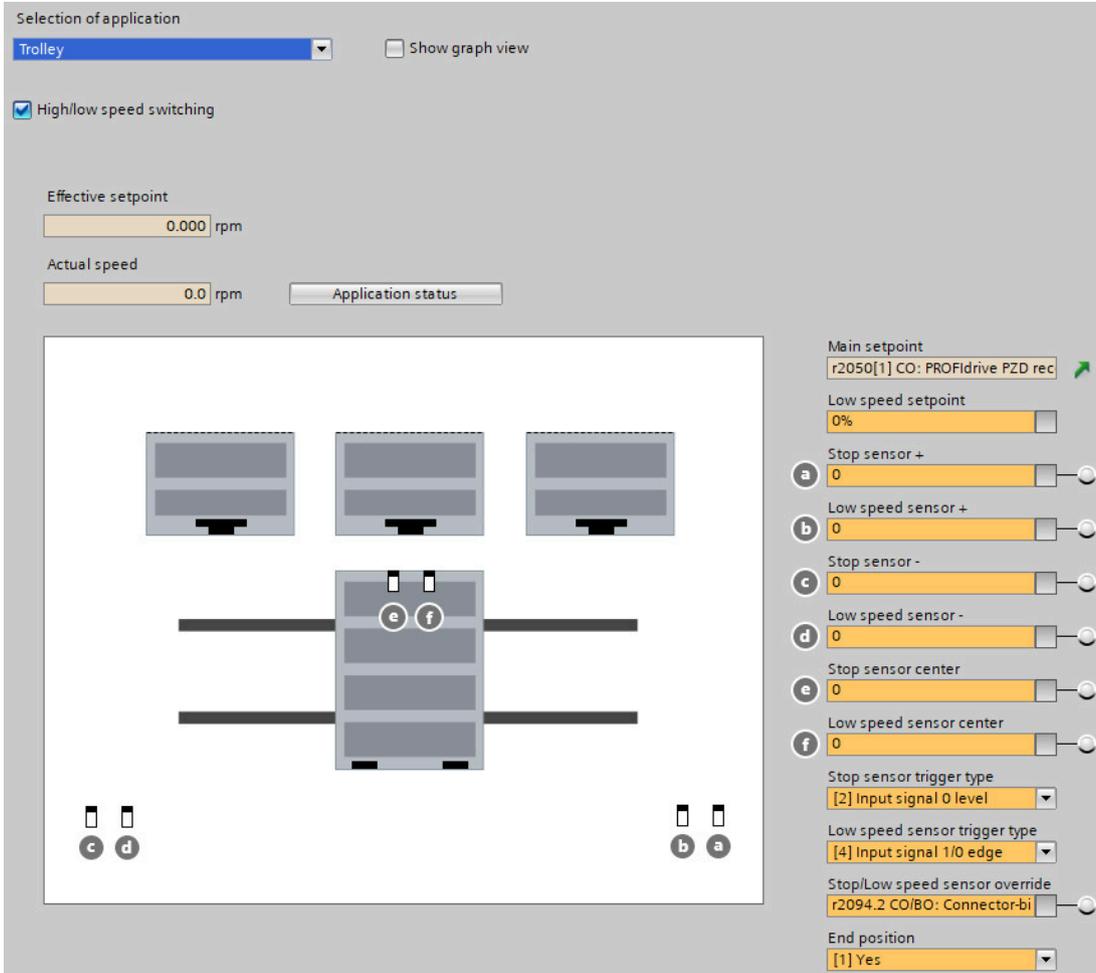

The screenshot displays the configuration interface for conveyor technology control parameters. At the top, the application is set to 'Trolley'. A 'High/low speed switching' checkbox is checked. The 'Effective setpoint' is 0.000 rpm and the 'Actual speed' is 0.0 rpm. A central diagram shows a trolley with sensors labeled 'e' and 'f'. To the right, a list of parameters includes 'Main setpoint' (r2050[1] CO: PROFIdrive PZD rec), 'Low speed setpoint' (0%), and various stop and low speed sensor parameters (a-f) with their respective trigger types and overrides.

### 7.9.5 Conveyor technology control parameters

Parameter	Description	Setting
r0722.0...25	CO/BO: Digital inputs status	Interconnect the signals of the sensors to the digital inputs as desired.
p1070[0...n]	CI: Main setpoint	Sets the signal source for the main setpoint.
p1071[0...n]	CI: Main setpoint scaling	Sets the signal source for scaling the main setpoint. Factory setting: 1
p1075[0...n]	CI: Supplementary setpoint	Sets the signal source for the supplementary setpoint. Note that the supplementary setpoint adds to both p3397 and p3398

## 7.9 Conveyor technology control functions (for G115D PROFINET and AS-i variants only)

Parameter	Description	Setting
p1076[0...n]	CI: Supplementary setpoint scaling	Sets the signal source for scaling the supplementary setpoint. Factory setting: 1
p1113[0...n]	BI: Setpoint inversion	Signal source for inverting the setpoint. 1 signal: Invert setpoint The factory setting depends on the converter field-bus interface.
p3384	BI: Stop sensor positive direction signal source	Sets the signal source of the stop sensor for the positive direction. Factory setting: 0
p3385	BI: Stop sensor negative direction signal source	Sets the signal source of the stop sensor for the negative direction. Factory setting: 0
p3386	BI: Stop sensor center signal source	Sets the signal source of the stop sensor for the middle position. Factory setting: 0
p3387	BI: Low speed sensor positive direction signal source	Sets the signal source of the low speed sensor for the positive direction. Factory setting: 0
p3388	BI: Low speed sensor negative direction signal source	Sets the signal source of the low speed sensor for the negative direction. Factory setting: 0
p3389	BI: Low speed sensor center signal source	Sets the signal source of the low speed sensor for the middle position. Factory setting: 0
p3390	BI: Stop/low speed sensor bypass signal source	Sets the signal source for bypassing the stop and low speed sensors. 1 signal: The stop and low speed sensors are not taken into account. The factory setting depends on the converter field-bus interface.
p3391	BI: Stop/low speed sensor bypass manual operation signal source	Sets the signal source for bypassing the stop and low speed sensors in the "manual operation" mode. Factory setting: 8559.4
p3392	End position shutdown activation	= 0: End position shutdown deactivated. Travel can be continued in both directions. = 1: End position shutdown activated (factory setting). Travel can only be continued in the opposite direction.
p3393	Conveyor technology application selection	Selects the conveyor technology application. Factory setting: 0
p3394	Stop sensor evaluation type	= 1: Input signal high level triggered = 2: Input signal low level triggered (factory setting) = 3: Input signal 0→1 edge triggered = 4: Input signal 1→0 edge triggered

7.10 Switching over the drive control (command data set)

Parameter	Description	Setting
p3395	Low speed sensor evaluation type	See p3394. Factory setting: 4
r3396.0...16	CO/BO: Conveyor technology application status	Displays the status of the conveyor technology application.
p3397	CI: Rapid traverse setpoint signal source	Sets the signal source of the high speed setpoint. The setpoint for the input is interconnected with the main setpoint p1070.
p3398	CI: Low speed setpoint signal source	Sets the signal source of the low speed setpoint. The connector input can be interconnected with a fixed setpoint (p1001 and following) or potentiometer (r0752). Factory setting: 0
r3399	CO: Setpoint active	Displays the active setpoint of the conveyor technology application.

For more information about the conveyor control function, refer to the parameter list and function diagrams 7040 to 7051 in the List Manual.

## 7.10 Switching over the drive control (command data set)

### Overview




Several applications require the option of switching over the control authority to operate the converter.

Example: The motor is to be operable either from a central control via the fieldbus or via the local digital inputs of the converter.

### Function description

#### Command data set (CDS)

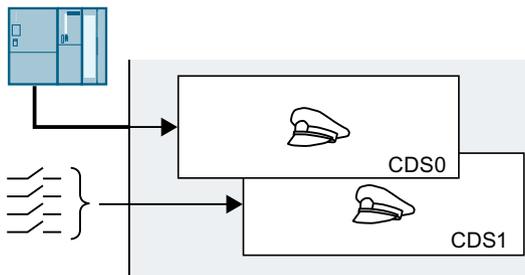

This means that you can set the converter control in various ways and toggle between the settings. For instance, as described above, the converter can either be operated via a fieldbus or via its digital inputs.

The settings in the converter, which are assigned to a specific master control, are termed the command data set.

You select the command data set using parameter p0810. To do this, you must interconnect parameter p0810 with a control command of your choice, e.g. a digital input.

**Changing the number of command data sets**


1. Set p0010 = 15.
2. The number of command data sets is configured with p0170.
3. Set p0010 = 0.

You have changed the number of command data sets.

**Copying command data sets**

1. Set p0809[0] to the number of the command data set whose settings you wish to copy (source).
2. Set p0809[1] to the number of the command data set in which you wish to copy the settings.
3. Set p0809[2] = 1 to start the copying.
4. The converter sets p0809[2] = 0 after the copying finishes.

You have copied the settings of a command data set into another command data set.

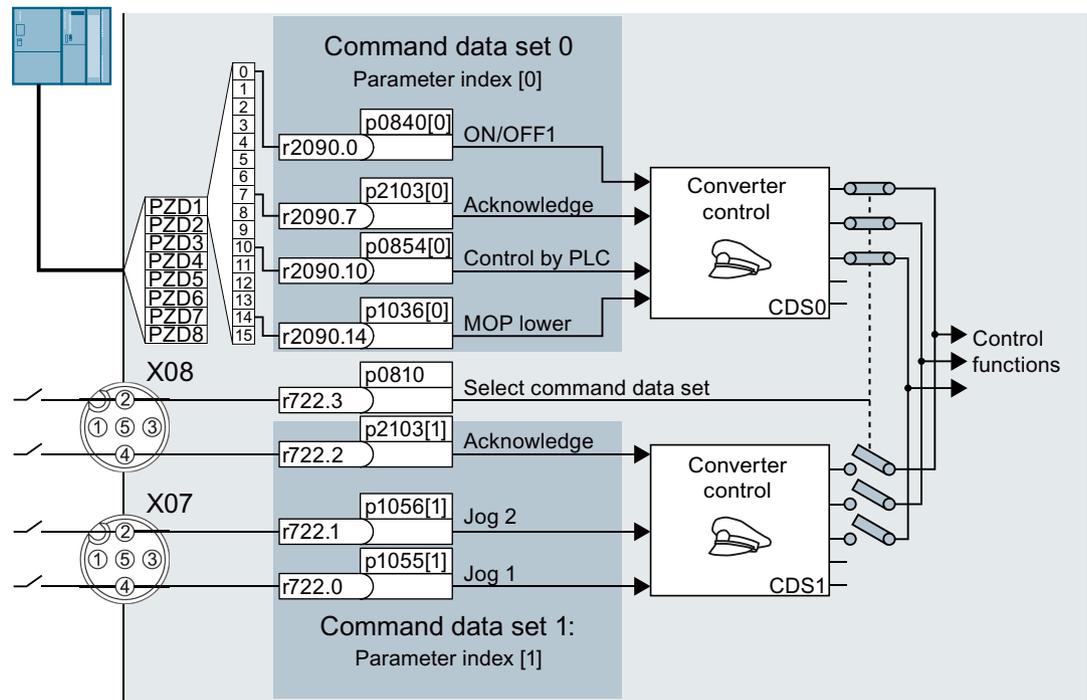**Example**

As in the example above, you obtain the interconnection if you configured the interfaces of the converter accordingly.

An overview of all the parameters that belong to the command data sets is provided in the List Manual.

---

**Note**

The converter requires approximately 4 ms to switch over the command data set.

---

## Parameters

Parameter	Description	Setting
p0010	Drive commissioning parameter filter	Set p0010 = 15 to change the data set. Factory setting: 1
r0050.0...1	CO/BO: Command Data Set CDS effective	Displays the number of the currently active command data set
p0170	Number of command data sets (CDS)	p0170 = 2, 3 or 4 Factory setting: 2
p0809[0...2]	Copy command data set CDS	[0] Source command data set [1] Target command data set [2] 0→1: Starts the copy operation Factory setting: 0
p0810	BI: Command data set selection CDS bit 0	Sets the signal source to select CDS bit 0. Factory setting: dependent upon the converter
p0811	BI: Command data set selection CDS bit 1	Sets the signal source to select CDS bit 1. Factory setting: 0

## 7.11 Motor holding brake


### Overview



The motor holding brake holds the motor in position when it is switched off.

When the "Motor holding brake" function is correctly set, the motor remains switched on as long as the motor holding brake is open. The converter only switches the motor off when the motor holding brake is closed.

## Function description

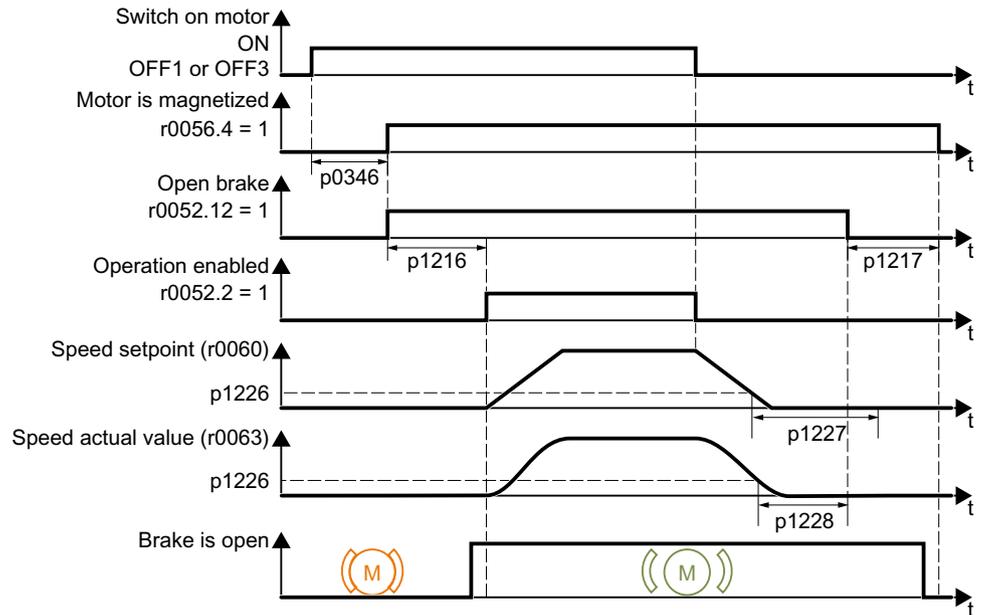

### After the ON command


1. With the ON command, the converter switches the motor on.
2. At the end of the "motor excitation build-up time" (p0346), the converter issues the command to open the brake.
3. The converter keeps the motor at a standstill until the "motor holding brake opening time" p1216 has ended.  
The motor holding brake must be opened within time p1216.
4. The converter accelerates the motor to the speed setpoint.

### After the OFF1 or OFF3 command

1. The converter brakes the motor down to a standstill using the OFF1 or OFF3 command.
2. When braking, the converter compares the speed setpoint and the actual speed with the "standstill detection speed threshold" p1226:
  - Speed setpoint < p1226: the "standstill detection monitoring time" p1227 starts
  - Current speed < p1226: the "pulse cancellation deceleration time" p1228 starts
3. When the first of the two times (p1227 or p1228) has elapsed, the converter issues the command to close the brake.
4. After the "motor holding brake closing time" p1217, the converter switches off the motor.  
The motor holding brake must close within the time p1217.

### After the OFF2 command

After the OFF2 command, the converter issues the signal to immediately close the motor holding brake, irrespective of the motor speed.

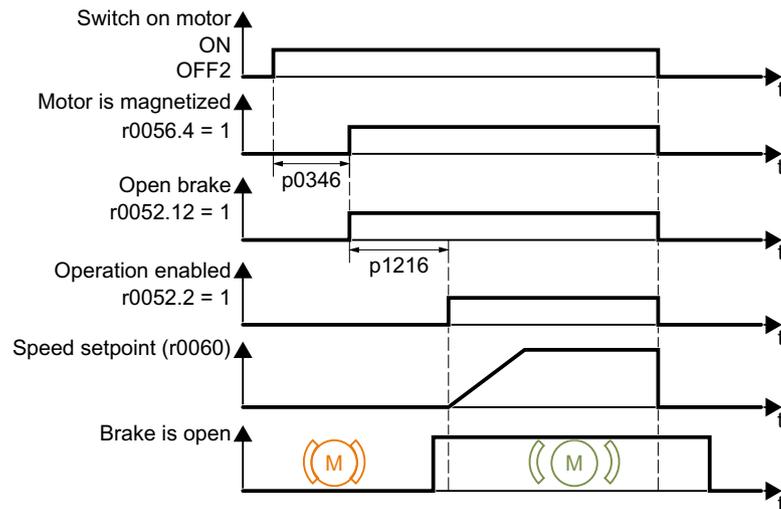

## Commissioning a motor holding brake

### Precondition

The motor holding brake is connected to the converter.



### **! WARNING**

#### **Load can fall if the motor holding brake function is incorrectly set**

For applications with a suspended load, such as cranes and elevators, there is a danger to life if the "Motor holding brake" function is not completely set or is incorrectly set.

- When commissioning the motor holding brake function, secure any suspended loads, e.g. by applying the following measures:
  - Lower the load down to the floor.
  - Secure the dangerous area so that nobody can inadvertently enter it.
- Set the motor holding brake function according to the following description.
- After commissioning, check that the motor holding brake and the motor control function reliably.

### Procedure

1. Set  $p1215 = 1$ .  
The motor holding brake function is enabled.
2. Check the magnetizing time  $p0346$ .  
The magnetizing time must be greater than zero. The converter assigns the magnetizing time when it is being commissioned.
3. Find out the mechanical opening and closing times from the technical data of the motor holding brake.
  - Depending on the brake size, brake opening times lie between 25 ms and 500 ms.
  - Depending on the brake size, brake closing times lie between 15 ms and 300 ms.

4. Set the following parameters in the converter suitably for the mechanical opening and closing times of the motor holding brake:
  - $p1216 \geq$  mechanical opening time of the motor holding brake
  - $p1217 >$  mechanical closing time of the motor holding brake
5. Switch on the motor.
6. Check the acceleration behavior of the drive immediately after the motor has been switched on:
  - If the motor holding brake opens too late, the converter will accelerate the motor suddenly against the closed motor holding brake.  
Set  $p1216$  larger.
  - If the motor waits too long before accelerating after the motor holding brake has opened, reduce  $p1216$ .  
For applications involving a pulling load, e.g. lifting gear/crane, if  $p1216$  is too long, then the load can briefly sag/sink after the motor holding brake is opened. If you reduce  $p1216$ , then the amount that the load sags/sinks is reduced.
7. If the load sags after switching on the motor, then you must increase the motor torque when opening the motor holding brake. Depending on the control mode, you must set different parameters:
  - U/f control ( $p1300 = 0$  to  $3$ ):  
Increase  $p1310$  in small steps.  
Increase  $p1351$  in small steps.
  - Vector control ( $p1300 \geq 20$ ):  
Increase  $p1475$  in small steps.
8. Switch off the motor.
9. Check the behavior of the drive immediately after the motor has been switched off:
  - If the motor holding brake closes too late, the load briefly sags before the motor holding brake closes.  
Set a larger value for  $p1217$ .
  - If the motor waits too long before switching off after the motor holding brake has closed, reduce  $p1217$ .

You have commissioned the motor holding brake function.



## Parameters

## Basic settings

Parameter	Description	Setting
p1215	Enable motor holding brake	0: Motor holding brake locked (factory setting) 1: Motor holding brake just like the sequence control 2: Motor holding brake permanently open 3: Motor holding brake just like the sequential control, connected via BICO
p1216	Motor holding brake opening time [s]	p1216 > braking signal relay runtimes + brake release time Factory setting: 0.1
p1217	Motor holding brake closing time [s]	p1217 > braking signal relay runtimes + brake closing time Factory setting: 0.1
r0052.12	CO/BO: Status word 1: motor holding brake open	-

## Advanced settings

Parameter	Description	Setting
p0346	Motor excitation build-up time [s]	During this time the asynchronous motor is magnetized. The converter calculates this parameter using p0340 = 1 or 3. Factory setting: 0
p0855	BI: Unconditionally release holding brake	Sets the signal source for the command "unconditionally open holding brake". Factory setting: 0
p0858	BI: Unconditionally close holding brake	Sets the signal source for the command "unconditionally close holding brake". Factory setting: 0
p1226	Threshold for zero speed detection [rpm]	When braking with OFF1 or OFF3, if the speed falls below this threshold, standstill is detected and the monitoring time p1227 or p1228 starts. Factory setting: 20
p1227	Zero speed detection monitoring time [s]	Sets the monitoring time for the standstill identification. Factory setting: 300
p1228	Pulse suppression delay time [s]	Sets the delay time for pulse suppression. Factory setting: 0.01
p1351	CO: Motor holding brake starting frequency [%]	Sets the frequency set value at the slip compensation output when starting with motor holding brake. With p1351 > 0, slip compensation is automatically switched on. Factory setting: 0

Parameter	Description	Setting
p1352	CI: Motor holding brake starting frequency signal source	Sets the signal source for the frequency set value at the slip compensation output when starting with motor holding brake. Factory setting: 1351
p1475	CI: Speed controller torque setting value for motor holding brake	Sets the signal source for the torque set value when starting with motor holding brake. Factory setting: 0

## 7.12 Encoder Interface

### Overview

The SINAMICS G115D inverter has a simple HTL encoder interface where the A and B tracks of the HTL encoder are read into the inverter via two digital inputs (DI0 and DI1). The other encoder signals, inverted A and B tracks and zero signals, are not read in or evaluated. As an alternative to the HTL encoder, one sensor can be connected as a pulse encoder or two sensors/signals as pulse/direction encoders.

An encoder or sensor connected to the SINAMICS G115D is not used for motor control. The SINAMICS G115D inverter is only a decentralized encoder interface for a higher-level controller (PLC).

This means that the encoder signal is acquired in the SINAMICS G115D and the counter value can be sent to the control system via Profinet with telegram 3 in order to realize positioning with a technology object.

When using an HTL encoder:

- An HTL encoder can be read in via DI0 and DI1 (A and B track only).
- 2-bit fine resolution
- Pulse multiplication (fourfold)

When using sensors (pulse / direction interface):

- One sensor (pulse) or two sensors / signals (pulse and direction) can be connected
- 2-bit fine resolution
- No pulse multiplication

### Specifications

Maximum resolution: 2048 pulses/rotation

Maximum HTL frequency: 200 KHz

Maximum permitted cable length for the Encoder: 30 m with shielding.

## 7.13 Free function block

### Overview



The free function blocks permit configurable signal processing in the converter.

The following free function blocks are available:

- AND, OR, XOR, and NOT logic
- RSR (RS flip-flop), DSR (D flip-flop) flip-flops
- Timers MFP (pulse generator), PCL (pulse shortening), PDE (ON delay), PDF (OFF delay), and PST (pulse stretching)
- ADD (adder), SUB (subtractor), MUL (multiplier), DIV (divider), AVA (absolute value generated), NCM (comparator), and PLI (polyline) arithmetic functions
- LIM (limiter), PT1 (smoothing), INT (integrator), DIF (differentiator) controllers
- NSW (analog) BSW (binary) switches
- LVM limit value monitoring

The number of free function blocks in the converter is limited. You can only use a function block once. The converter has 3 adders, for instance. If you have already configured three adders, then no other adders are available.

### Further information

Further information about the application description for the free function blocks is provided on the Internet:

 FAQ (<https://support.industry.siemens.com/cs/ww/en/view/85168215>)

## 7.14 Selecting physical units

### 7.14.1 Motor standard

#### Selection options and parameters involved



The converter represents the motor data corresponding to motor standard IEC or NEMA in different system units: SI units or US units.

It is only possible to change the motor standard during quick commissioning.

Parameter	Designation	Motor standard IEC/NEMA, p0100 =		
		0 <sup>1)</sup> IEC motor 50 Hz, SI units	1 NEMA motor 60 Hz, US units	2 NEMA motor 60 Hz, SI units
r0206	Power unit rated power	kW	hp	kW
p0219	Braking resistor braking power	kW	hp	kW
p0307	Rated motor power	kW	hp	kW
p0316	Motor torque constant	Nm/A	lbf ft/A	Nm/A
r0333	Rated motor torque	Nm	lbf ft	Nm
p0341	Motor moment of inertia	kgm <sup>2</sup>	lb ft <sup>2</sup>	kgm <sup>2</sup>
p0344	Motor weight	kg	Lb	kg
r0394	Rated motor power	kW	hp	kW
r1493	Total moment of inertia, scaled	kgm <sup>2</sup>	lb ft <sup>2</sup>	kgm <sup>2</sup>

<sup>1)</sup> Factory setting

## 7.14.2 System of units

Some physical units depend on the system of units selected (SI or US), for example the power [kW or hp] or the torque [Nm or lbf ft]. You can select in which system of units the converter represents its physical values.

### Options when selecting the system of units

The following options apply when selecting the system of units:

- p0505 = 1: System of units SI (factory setting)  
Torque [Nm], power [kW], temperature [°C or K]
- p0505 = 2: Referred system of units/SI  
Represented as [%]
- p0505 = 3: US system of units  
Torque [lbf ft], power [hp], temperature [°F]
- p0505 = 4: System of units, referred/US  
Represented as [%]

### Special features

The values for p0505 = 2 and for p0505 = 4 - represented in the converter - are identical. However, the reference to SI or US units is required for internal calculations and to output physical variables.

For variables, which cannot be represented as [%], then the following applies:  
p0505 = 1  $\hat{=}$  p0505 = 2 and p0505 = 3  $\hat{=}$  p0505 = 4.

In the case of variables whose units are identical in the SI system and US system, and which can be displayed as a percentage, the following applies:  
 $p0505 = 1 \triangleq p0505 = 3$  and  $p0505 = 2 \triangleq p0505 = 4$ .

### Reference variables

There is a reference variable in the converter for most parameters with physical units. When the referred representation [%] is set, then the converter scales the physical variables based on the particular reference variable.

When the reference variable changes, then the significance of the scaled value also changes.  
Example:

- Reference speed = 1500 rpm → fixed speed = 80 %  $\triangleq$  1200 rpm
- Reference speed = 3000 rpm → fixed speed = 80 %  $\triangleq$  2400 rpm

For each parameter you can find the associated reference variable for scaling in the List Manual. Example: r0065 is scaled with reference variable p2000.

If scaling is not specified in the List Manual, then the converter always represents/displays the parameter unscaled (not normalized).

### Groups of units

The parameters associated with the selection of a physical unit, belong to different groups of units.

You can find the associated group of units in the List Manual for each parameter. Example: r0333 belongs to unit group 7\_4.

An overview of the unit groups and the possible physical units can also be found in the List Manual.

## 7.14.3 Technological unit of the technology controller

### Options when selecting the technological unit

p0595 defines in which technological unit the input and output variables of the technology controller are calculated, e.g. [bar], [m<sup>3</sup>/min] or [kg/h].

### Reference variable

p0596 defines the reference variable of the technological unit for the technology controller.

### Unit group

Parameters involved with p0595 belong to unit group 9\_1.

Further information on this topic is provided in the List Manual.

 Overview of the manuals (Page 610)

## Special features

You must optimize the technology controller after changing p0595 or p0596.

### 7.14.4 Setting the system of units and technology unit


#### Setting using Startdrive

##### Precondition

You are offline with Startdrive.

##### Procedure

1. In the project, select "Parameter".
2. Select "Units".

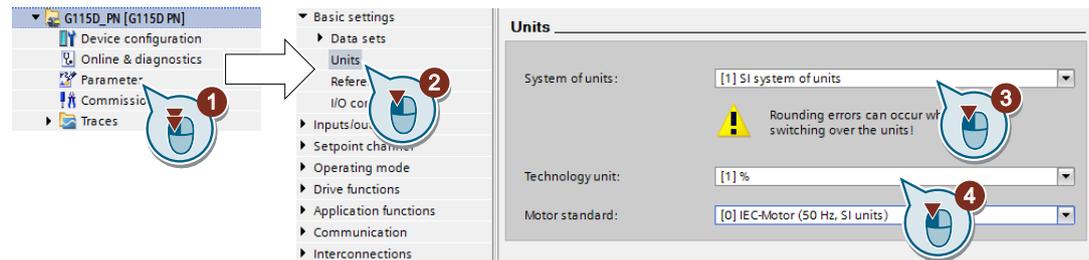

3. Select the system of units.
4. Select the technological unit of the technology controller.
5. Save your settings.
6. Go online.  
The converter signals that offline, other units and process variables are set than in the converter itself.
7. Accept these settings in the converter.

You have selected the motor standard and system of units.



## 7.15 Safe Torque Off (STO) safety function



The Operating Instructions describes how to commission the STO safety function as a basic function for control via a fail-safe digital input.

A description of all the safety function is provided in the "safety Integrated" Function Manual:

- The basic functions and extended functions
- Controlling safety functions via PROFIsafe




Overview of the manuals (Page 610)

### 7.15.1 Function description

A converter with active STO function prevents energy supply to the motor. The motor can no longer generate torque at the motor shaft.

Consequently, the STO function prevents the starting of an electrically-driven machine component.

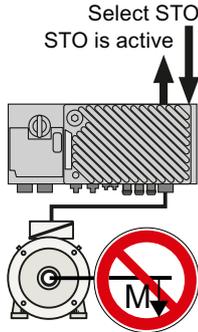


#### Principle of operation of STO

	Safe Torque Off (STO)	Standard converter functions linked with STO
1.	The converter recognizes the selection of STO via a safety-relevant input or via the PROFIsafe safe communication.	---
2.	The converter interrupts the energy supply to the motor.	If you use a motor holding brake, the converter closes the brake.
3.	The converter signals that "STO is active" via a safety-relevant output or via the PROFIsafe safe communication.	---

#### Functionality of STO when the motor is at standstill (A) and rotating (B)

If the motor is still rotating (B) when STO is selected, then it coasts down to standstill.

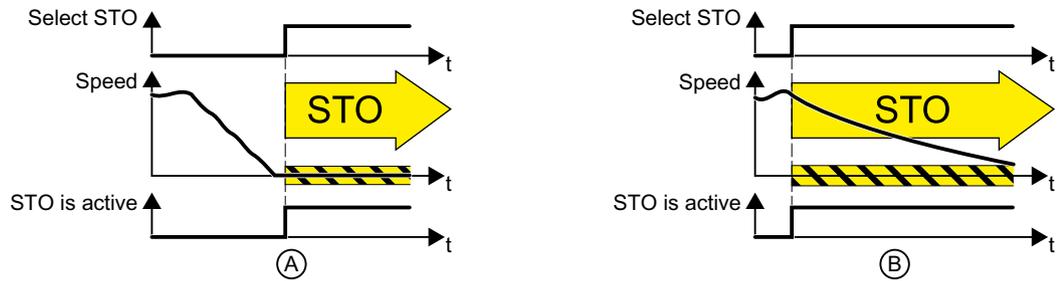

#### The STO safety function is standardized

The STO function is defined in IEC/EN 61800-5-2:






"[...] [The converter] does not supply any energy to the motor which can generate a torque (or for a linear motor, a force)."

⇒ The STO converter function is in conformance to IEC/EN 61800-5-2.

### The distinction between Emergency Off and Emergency Stop

"Emergency Off" and "Emergency Stop" are commands that minimize different risks in the machine or plant.

The STO function is suitable for achieving an emergency stop but not an emergency off.

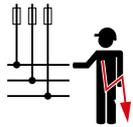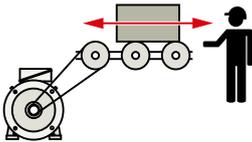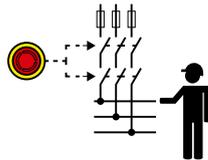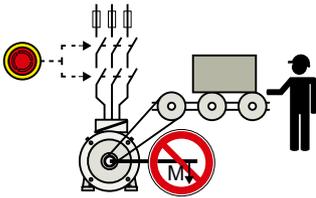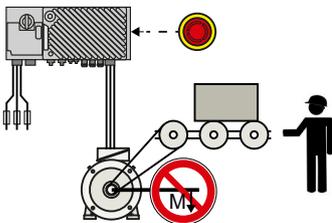Risk:	Risk of electric shock: 	Risk of unexpected motion: 
Measure to minimize risk:	<b>Safe switch off</b> Switching off the electric power supply for the installation, either completely or partially.	<b>Safely stop and safely prevent re-starting</b> Stopping or preventing the dangerous movement
Command:	<b>Emergency Off</b>	<b>Emergency Stop</b>
Classic solution:	Switch off the power supply: 	Switch off the drive power supply: 
Solution with the STO safety function integrated in the drive:	STO is not suitable for safely switching off an electric voltage.	Select STO:  It is permissible that you switch off the converter supply voltage as well. However, switching off the voltage is not required as a risk-reduction measure.

## Application examples for the STO function

The STO function is suitable for applications where the motor is already at a standstill or will come to a standstill in a short, safe period of time through friction. STO does not shorten the run-on of machine components with high inertia.

Examples	Possible solution
When the Emergency Stop button is pressed, a stationary motor should not unintentionally start.	<ul style="list-style-type: none"> <li>• Wire the Emergency Stop button to a fail-safe input of the converter.</li> <li>• Select STO via the fail-safe input.</li> </ul>
A central emergency stop button must prevent the unintentional acceleration of several motors that are at a standstill.	<ul style="list-style-type: none"> <li>• Evaluate the Emergency Stop button in a central control.</li> <li>• Select STO via PROFIsafe.</li> </ul>

## Prerequisite for STO use

In order to use the STO safety function, the machine manufacturer should have already performed a risk assessment, e.g. in compliance with EN ISO 1050, "Safety of machinery - Principles of risk assessment". The risk assessment must confirm that the converter is permitted for use in accordance with SIL 2 or PL d.

## 7.15.2 Commissioning STO

### 7.15.2.1 Commissioning tool

We recommend that you commission the safety functions using a commissioning tool (e.g. Startdrive or SINAMICS G120 Smart Access).

 Commissioning tools (Page 116)

The following sections only introduce the commissioning process of Startdrive as examples. For more information on that of the SINAMICS G120 Smart Access, see the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

### 7.15.2.2 Safety function password

#### Overview

The password protects the settings of the safety function from being changed by unauthorized persons.

#### Function description

##### Do you have to assign a password?

You do not have to assign a password.

The machine manufacturer decides whether or not a password is required.

The probabilities of failure (PFH) and certification of the safety functions also apply without password.

#### What do I do if I lose the password?

You have forgotten the password, however, you would nevertheless like to change the setting of the safety functions.

#### Procedure

1. Create a new project for the converter using Startdrive.  
Leave all the factory setting in the project.
2. Load the project in the converter.  
After loading, the converter has the factory settings.
3. Recommission the converter.

You can obtain more information or learn about alternative procedures from Technical Support.

## Parameters

Parameter	Description	Setting
p9761	SI password input	Enters the Safety Integrated password. 0: No password set (factory setting) 1 ... FFFF FFFF: Password is set
p9762	SI password new	Enters a new Safety Integrated password.
p9763	SI password acknowledgment	Acknowledges the new Safety Integrated password.

### 7.15.2.3 Configuring a safety function

#### Overview

To ensure protection against unauthorized changes, it is recommended that you configure the safety function settings.


## Function description

### Procedure


1. Select "Select safety functionality".



2. Select "Basic Functions".

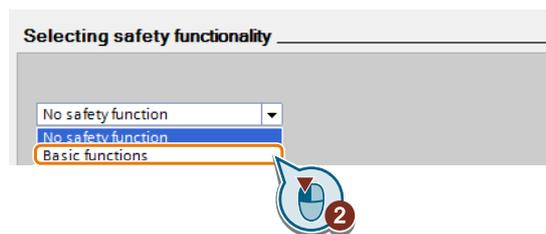

3. Select "Control type/safety functions".

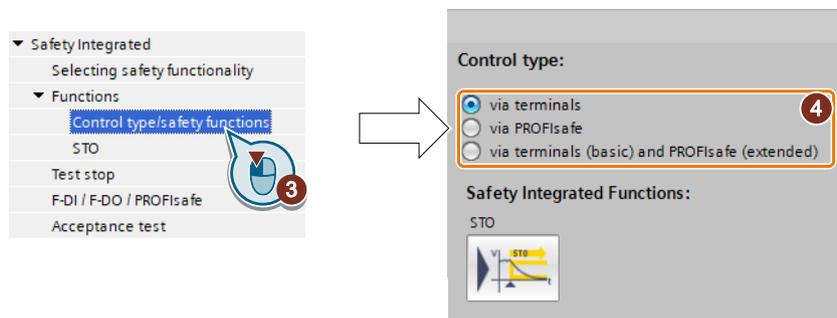

4. Select "Via terminals" as control type for the safety functions.

You have configured the safety functions.



Additional configurations of the safety functions are described in the "Safety Integrated" Function Manual.

 Overview of the manuals (Page 610)

### 7.15.2.4 Interconnecting the "STO active" signal


#### Overview

If you require the feedback signal "STO active" of the converter in your higher-level control system, then you must appropriately interconnect the signal.

## Function description

### Procedure

1. Select the button for the feedback signal.

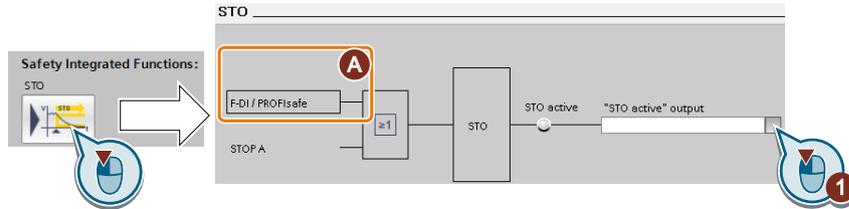

The screen form varies depending on the interface selected.

(A) Control type

2. Select the signal that matches your particular application.

You have interconnected the "STO active" checkback signal.



After STO has been selected, the converter signals "STO active" to the higher-level control.

## Parameters

Parameter	Description	Setting
r9773.0...31	CO/BO: SI status (processor 1 + processor 2)	Display and BICO output for the Safety Integrated status on the drive (processor 1 + processor 2). Bit 0: STO is selected in the drive Bit 1: STO is active in the drive Bit 31: Test stop is required for STO

### 7.15.2.5 Setting the filter for fail-safe digital inputs

#### Overview

The following filters are available for the fail-safe digital inputs:

- A filter for the simultaneity monitoring
- A filter for suppressing short signals, e.g. test pulses.

## Function description

### Discrepancy time for the simultaneity monitoring


The converter checks that the two input signals of the fail-safe digital input always have the same signal state (high or low).

With electromechanical sensors (e.g. emergency stop buttons or door switches), the two sensor contacts never switch at exactly the same time and are therefore temporarily inconsistent (discrepancy). A permanent discrepancy signifies a fault in the fail-safe digital input circuit, e.g. wire breakage.

7.15 Safe Torque Off (STO) safety function

When appropriately set, the converter tolerates brief discrepancies.

The discrepancy time does not extend the converter response time. The converter selects its safety function as soon as one of the two F-DI signals changes its state from high to low.

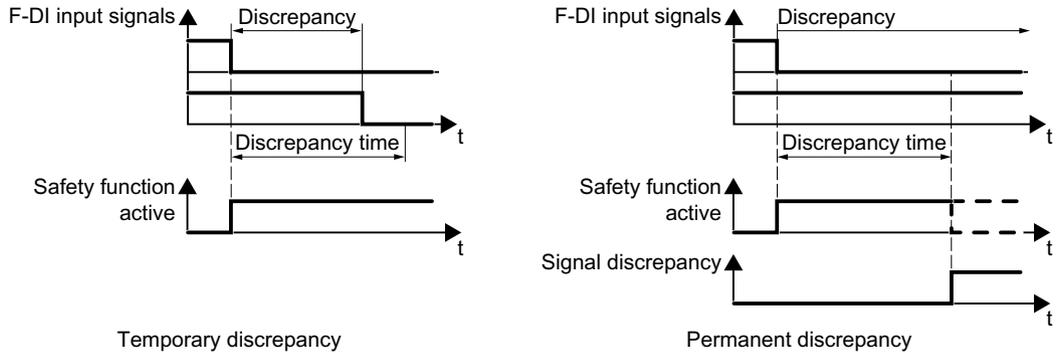

**Filter for suppressing short signals**


In the following cases, an immediate converter response to signal changes of the fail-safe digital inputs is not desirable:

- If a fail-safe digital input of the converter is interconnected with an electromechanical sensor, signal changes can occur due to contact bounce.
- In order to identify faults due to short-circuit or cross faults, several control modules test their fail-safe digital outputs with "bit pattern tests" (bright/dark test). If a fail-safe digital input of the converter is interconnected with a fail-safe digital output of an open-loop control module, then the converter responds with a bit pattern test.


The typical duration of the signal change within a bit pattern test:

- On test: 1 ms
- Off test: 4 ms

If the fail-safe digital input responds to many signal changes within a certain time, then the converter responds with a fault.

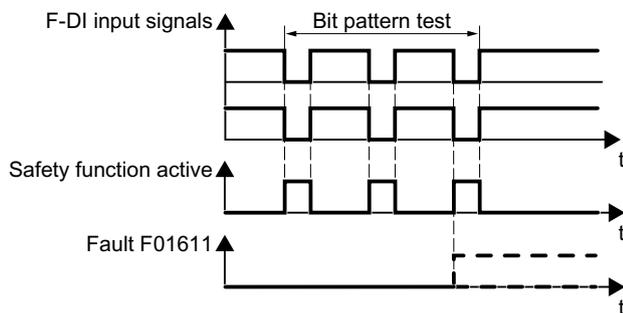

A filter in the converter suppresses brief signals as a result of the bit pattern test or contact bounce.

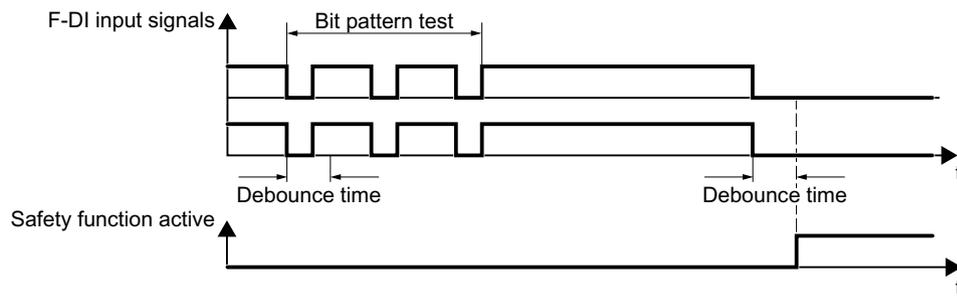


The filter extends the response time of the safety function by the debounce time.

## Setting the filter for fail-safe digital inputs

### Precondition

You are online with Startdrive.

### Procedure

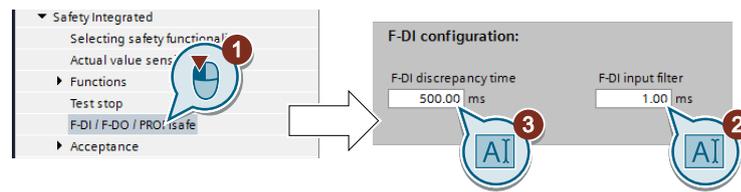

1. Navigate to the filter settings.
2. Set the debounce time for the F-DI input filter.
3. Set the discrepancy time for the simultaneity monitoring.

You have set the input filter and the simultaneity monitoring of the fail-safe digital input.

□

## Parameters

Parameter	Description	Setting
p9650	SI F-DI changeover discrepancy time (processor 1) [ms]	Tolerance time to change over the fail-safe digital input for the basic functions. Factory setting: 500 ms
p9651	SI STO debounce time (processor 1) [ms]	Debounce time of the fail-safe digital input for the basic functions. Factory setting: 1 ms

### Further information

#### Debounce times for standard and safety functions

The debounce time p0724 for "standard" digital inputs has no influence on the fail-safe input signals. Conversely, the same applies: The F-DI debounce time does not affect the signals of the "standard" inputs.

If you use an input as a standard input, set the debounce time using parameter p0724 .

If you use an input as a fail-safe input, set the debounce time as described above.

### 7.15.2.6 Setting the forced checking procedure (test stop)


#### Overview

The forced checking procedure (test stop) of the basic functions is a converter self test. The converter checks its circuits to switch off the torque.

#### Function description

You start the forced checking procedure each time that the STO function is selected.


Using a timer block, the converter monitors as to whether the forced checking procedure is regularly performed.

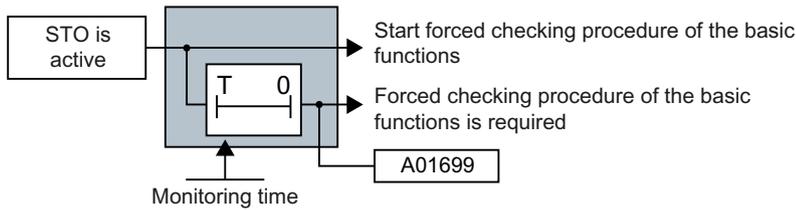

#### Precondition

You are online with Startdrive.

#### Procedure

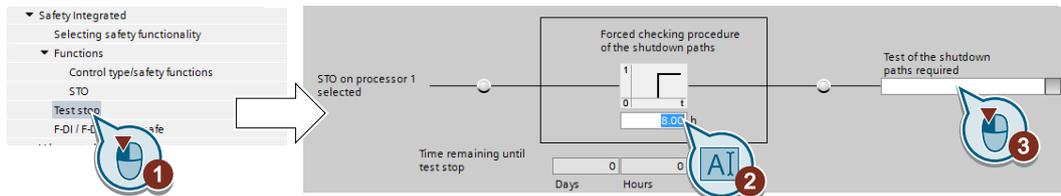

1. Select the screen form for setting the forced checking procedure.
2. Set the monitoring time to a value to match your application.  
**Requirement: Forced checking procedure (test stop) must be performed at least once a year.**
3. Using this signal, the converter signals that a forced checking procedure (test stop) is required.  
Interconnect this signal with a converter signal of your choice.

You have set the forced checking procedure (test stop) for the Basic Functions.



## Parameters

Parameter	Description	Setting
p9659	SI forced checking procedure timer [h]	Monitoring time for the forced dormant error detection. Factory setting: 8 h
r9660	SI forced checking procedure remaining time	Displays the remaining time until the forced dormant error detection and testing the safety switch-off signal paths.
r9773.0...31	CO/BO: SI status (processor 1 + processor 2)	Signals for the higher-level control system. Bit 31: Test stop is required for STO

### 7.15.2.7 Finalizing online commissioning

#### Overview


After you finish the configuration of the safety function, proceed through the following operations to activate the settings.

#### Precondition

You are online with Startdrive.

## Function description

### Procedure

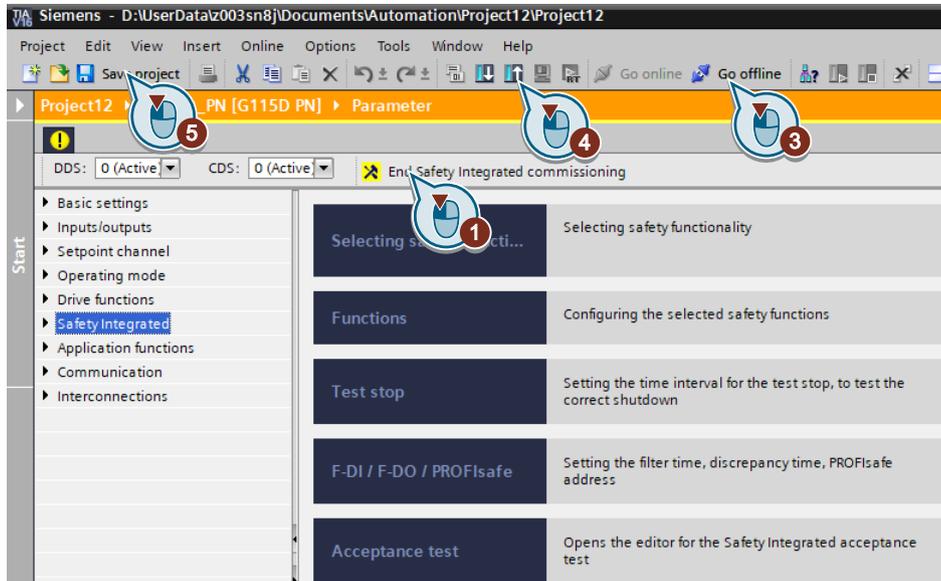

1. Press the  button to end the safety commissioning.
2. Confirm the prompt for saving your settings (copy RAM to ROM).
3. Disconnect the online connection.
4. Select the  button to transfer settings from the converter to the PG/PC.
5. Save the project.
6. Switch off the converter power supply.
7. Wait until all LEDs on the converter go dark (no voltage condition).
8. Switch the converter power supply on again.

Your settings are now active.



### Parameters

Parameter	Description	Setting
p0010	Drive commissioning parameter filter	0: Ready
p0971	Save parameters	1: Save the drive object (copy from RAM to ROM) After the converter has saved the parameters in a non-volatile fashion, then p0971 = 0.
p9700	SI Motion copy function	Start the SI parameter copy function. Factory setting: 0
p9701	Acknowledge SI motion data change	Confirm SI Basic parameter change Factory setting: 0

## 7.15.2.8 Checking the interconnection of digital inputs


### Overview

The simultaneous connection of digital inputs with a safety function and a "standard" function may lead to the drive behaving in unexpected ways.

If you control the safety functions in the converter via fail-safe digital inputs, then you must check as to whether the fail-safe digital inputs are in some instances interconnected with a "standard" function.

### Function description

#### Procedure

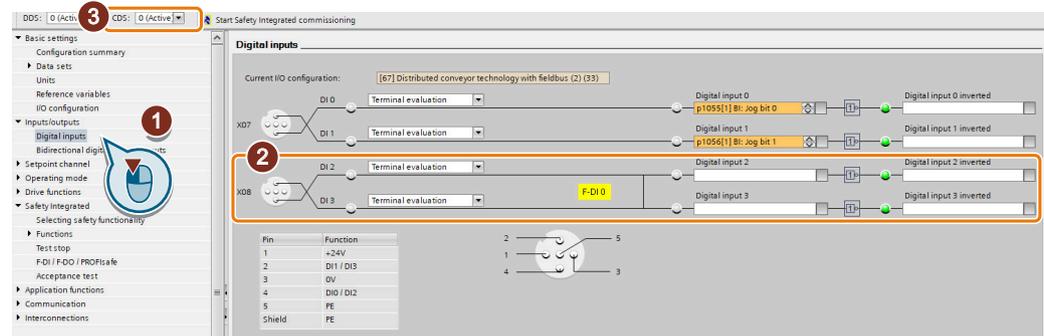

1. Select the screen for the digital inputs.
2. Remove all interconnections of the digital inputs that you use as fail-safe digital input F-DI:
3. You must delete the digital input connections for all CDS if you use the switchover of the command data sets (CDS).  
You can find a description of the CDS switchover in the operating instructions.

You have ensured that the fail-safe digital inputs only control the safety functions in the converter.



## 7.15.2.9 Acceptance - completion of commissioning

### Overview

The machine manufacturer is responsible in ensuring that his plant or machine functions perfectly. As a consequence, after commissioning, the machine manufacturer must check those functions or have them checked by specialist personnel, which represent an increased risk of injury or material damage. This acceptance or validation is, for example, also specified in the European machinery directive and essentially comprises two parts:

- Checking the safety-relevant functions and machine parts.  
→ **Acceptance test.**
- Generate an "Acceptance report" that describes the test results.  
→ **Documentation.**

Supply information for the validation, e.g. the harmonized European standards EN ISO 13849-1 and EN ISO 13849-2.

### Function description

#### Acceptance test of the machine or plant

The acceptance test checks whether the safety-relevant functions in the plant or machine function correctly. The documentation of the components used in the safety functions can also provide information about the necessary tests.

Testing the safety-related functions includes, e.g. the following:

- Are all safety equipment such as protective door monitoring devices, light barriers or emergency-off switches connected and ready for operation?
- Does the higher-level control respond as expected to the safety-relevant feedback signals of the converter?
- Do the converter settings match the configured safety-relevant function in the machine?

#### Acceptance test of the converter

The acceptance test of the converter is a part of the acceptance test of the entire machine or plant.

The acceptance test of the converter checks whether the integrated drive safety functions are set up correctly for the planned safety function of the machine.

 Recommended acceptance test (Page 606)

#### Documentation of the converter

The following must be documented for the converter:

- The results of the acceptance test.
- The settings of the integrated drive safety functions.

The documentation must be signed.

### Who may perform the acceptance test of the converter?

Personnel from the machine manufacturer, who, on account of their technical qualifications and knowledge of the safety functions, are in a position to perform the acceptance test in the correct manner are authorized to perform the acceptance testing of the converter.

### Wizard for the acceptance test

The "Startdrive Advanced" commissioning tool (requires an appropriate license) includes a wizard for the acceptance test of the safety functions integrated in the drive.

"Startdrive Advanced" guides you through the acceptance test, generates the appropriate traces to analyze the machine response – and generates an acceptance report as Excel file.

Further information is provided on the Internet:

 Startdrive, system requirements and download (<https://support.industry.siemens.com/cs/ww/en/view/109771710>) (Startdrive, system requirements and download)


### Reduced acceptance test after function expansions

A full acceptance test is necessary only after first commissioning. A reduced acceptance test is sufficient when safety functions are expanded.

Measure	Acceptance test	
	Acceptance test	Documentation
Functional expansion of the machine (additional drive).	Yes. Only check the safety functions of the new drive.	<ul style="list-style-type: none"> <li>• Supplement machine overview</li> <li>• Supplement converter data</li> <li>• Add function table</li> <li>• Log the new checksums</li> <li>• Countersignature</li> </ul>
Transfer of converter settings to other identical machines by means of series commissioning.	No. Only check the control of all of the safety functions.	<ul style="list-style-type: none"> <li>• Add machine description</li> <li>• Check checksums</li> <li>• Check firmware versions</li> </ul>

## 7.16 Safely Limited Speed (SLS)

### Overview

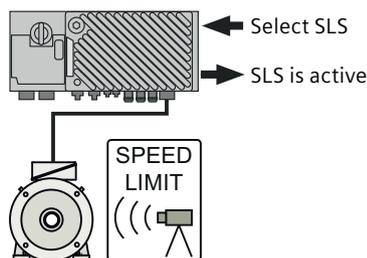

7.16 Safely Limited Speed (SLS)

The converter with active SLS function monitors the motor speed. When the monitoring limit is exceeded, the converter stops the motor as quickly as possible.

As a consequence, the SLS function allows an electrically driven machine component to be operated with a temporarily reduced speed or velocity that is not hazardous.

**Requirement**

The machine manufacturer has already performed a risk assessment, e.g. in compliance with EN ISO 1050, "Safety of machinery - Principles of risk assessment". The risk assessment must confirm that it is permissible to use the SLS safety function.

**Function description**

Table 7-1 An overview of the principle of operation of SLS, selected when the motor is rotating

	Safely Limited Speed (SLS)	Standard converter functions linked with SLS
1.	The converter identifies when SLS is selected via secure PROFIsafe communication.	---
2.	SLS allows a motor to reduce its possibly inadmissibly high speed within a defined time – or to reduce it along a defined braking ramp.	The converter limits the speed setpoint to values below the SLS monitoring. If the motor rotates faster than the SLS monitoring value, then the converter brakes the motor along the OFF3 ramp.
3.	The converter monitors the absolute actual speed against the set SLS monitoring. The converter signals "SLS is active" via PROFIsafe. If the motor speed exceeds the SLS monitoring, the converter responds with a "safe stop" and brakes the motor as quickly as possible.	The converter limits the speed setpoint to values below the SLS monitoring.

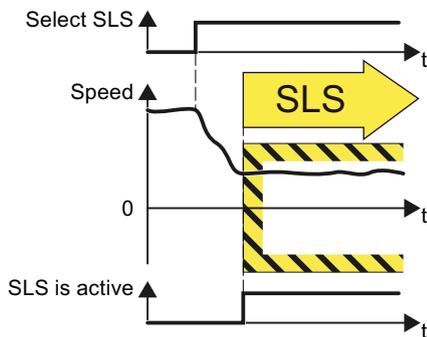


Figure 7-1 Principle of operation of SLS

**The SLS safety function is standardized**

The SLS function is defined in IEC/EN 61800-5-2:

"The SLS function prevents the motor from exceeding the defined speed limit."

⇒ The SLS converter function is in conformance with IEC/EN 61800-5-2.

## Example

Examples	Possible solution
Setup mode: The machine operator must enter the dangerous area of a machine and manually introduce material into a machine part.	<ul style="list-style-type: none"> <li>Select SLS in the converter via PROFIsafe or use it always active.</li> </ul>
The maximum speed of a conveyor below should be safely limited for personnel protection.	<ul style="list-style-type: none"> <li>The converter limits and monitors the speed of the machine part.</li> </ul>

## Further information

Expansion of the SLS function to include several SLS levels:

- The speed monitoring of the SLS function can be extended to include a maximum of 4 different SLS levels.
- The converter requires additional safety-related signals to select an SLS level and to signal back which SLS level is active.

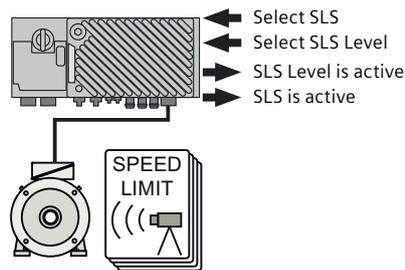


Figure 7-2 SLS Level sign

It is only possible to select SLS levels via PROFIsafe.

The switchover from a higher SLS level 2 to a lower SLS level 1 is described below.

Table 7-2 Switching over from SLS level 2 to SLS level 1

	Safely Limited Speed (SLS)	Standard converter functions linked with SLS
1.	The converter signals "SLS level 2 is active" via the safety-related PROFIsafe communication.	The converter limits the speed setpoint to values below SLS level 2.
2.	The converter recognizes the selection of SLS level 1 via secure PROFIsafe communication.	
3.	SLS allows a motor to reduce its possibly inadmissibly high speed within a defined time – or to reduce it along a defined braking ramp.	The converter limits the speed setpoint to values below SLS level 1. If the motor rotates faster than the SLS monitoring value, then the converter brakes the motor along the OFF3 ramp.
4.	The converter monitors the absolute actual speed against SLS level 1. The converter signals "SLS level 1 is active" via secure PROFIsafe communication.	The converter limits the speed setpoint to values below SLS level 1.

7.16 Safely Limited Speed (SLS)

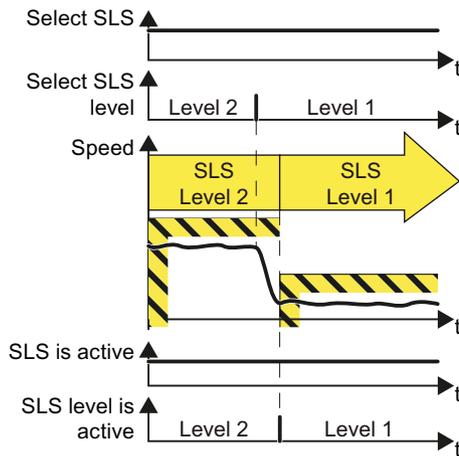


Figure 7-3 Switching over from SLS level 2 to SLS level 1

Table 7-3 Application example for selecting SLS levels

Examples	Possible solution
Depending on the mass of the goods on a conveyor belt, the maximum permissible speed must not be exceeded.	<ul style="list-style-type: none"> <li>Select SLS and the corresponding SLS level in the converter via PROFIsafe.</li> </ul>

**Commissioning**

Before proceeding with the commissioning of the SINAMICS G115D, it is important that you are fully conversant with the all the relevant information regarding Safety Integrated information contained within the Safety Integrated Function Manual. The Safety Integrated Function Manual can be downloaded at the following link:

Safety Integrated Function Manual (<https://support.industry.siemens.com/cs/ww/en/view/109782490>)

**SINAMICS G115D PROFINET**

1. Select "Selecting safety functionality".
  - Select "Extended Functions".
  - The "Actual value sensing" is added.

The safe, encoderless actual value acquisition is used for the motion monitoring of the SLS function. The default settings available here can be used for most applications.
2. Select "Control type / safety functions".
  - Select "via PROFIsafe" as the control type for the safety functions.

3. Parameterization of the SLS function:

The SLS speed limits are set here. A maximum of 4 limits are available.

If you use more than one limit, then the step changeover must be programmed in the F program of the higher-level PLC. The stages are switched via PROFIsafe.

With the setpoint limitation the converter limits the speed setpoint when SLS is selected.

If this function is required, the signal interconnection must be set after upgrading from V4.7 SP13 to V4.7 SP14:

- p9733[0] = p1051[0]
- p9733[1] = p1052[0]

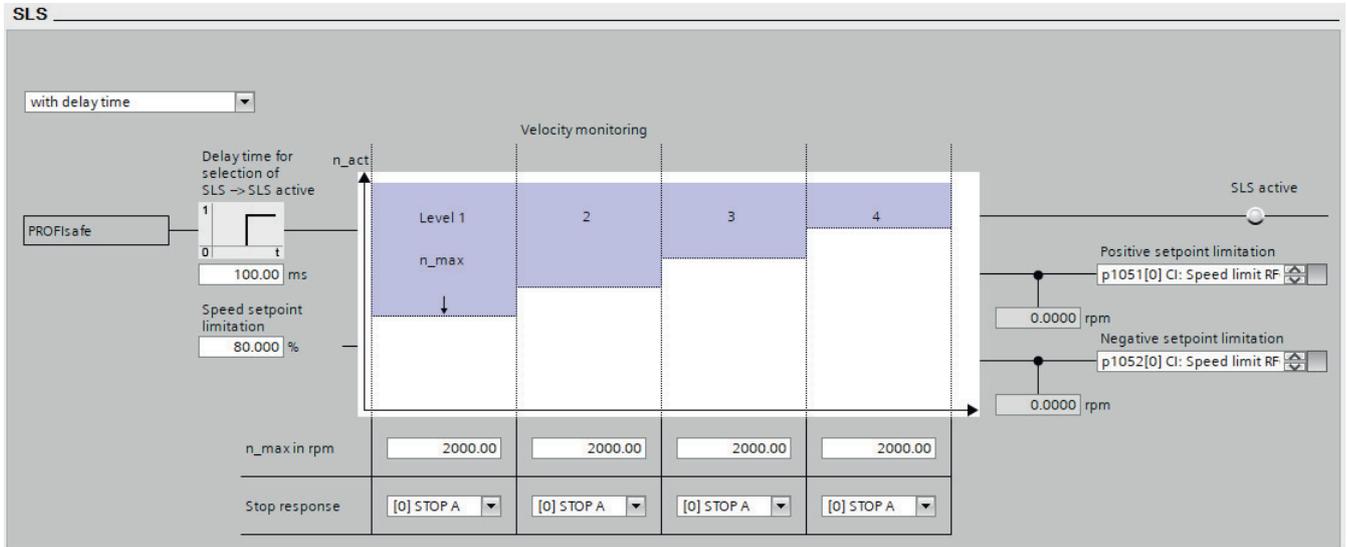


Figure 7-4 Setting the SLS limits

4. Select "Test stop"
  - Set the monitoring time to a value that matches your applications requirements.
5. Select "FDI / F-DO / PROFIsafe"
  - Select the Telegram configuration and set the Send and Receive data.
6. Finalize the commissioning.

### SINAMICS G115D AS-i and SINAMICS G115D I/O control

1. Select "Selecting safety functionality".
  - Select "Extended Functions".
  - The "Actual value sensing" is added.

The safe, encoderless actual value acquisition is used for the motion monitoring of the SLS function. The default settings available can be used for most applications.
2. Select "Control type / safety functions".
  - Select "via terminals" as the control type for the safety functions.
  - The "F-DI assignment".

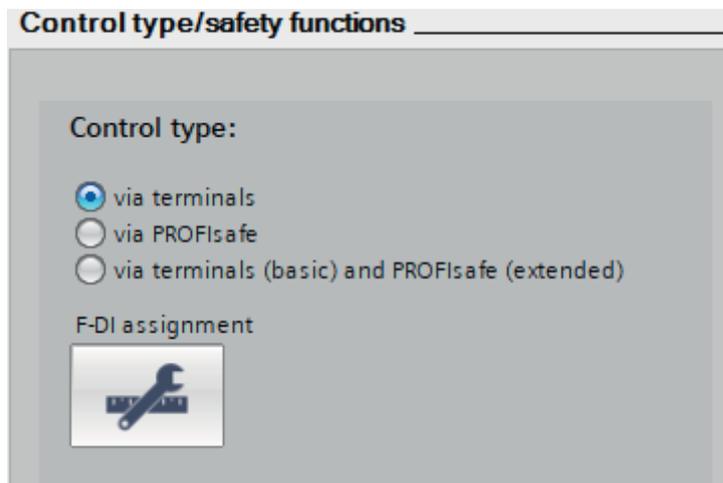


Figure 7-5 Select "via terminals" as the Control type

3. Select "F-DI assignment"

If SLS should always be active, set the associated "Select F-DI" = "[0] statically active". The SLS limit violation must be acknowledged with a failsafe signal. The following options are available:

- Acknowledge by switching the power supply voltage on and off.
- Acknowledge via a failsafe digital input. In the case, please refer to Step 6.

**Note**

**Switch on motor within 5s**

Switch on the motor with the ON command within 5s after deselecting STO.

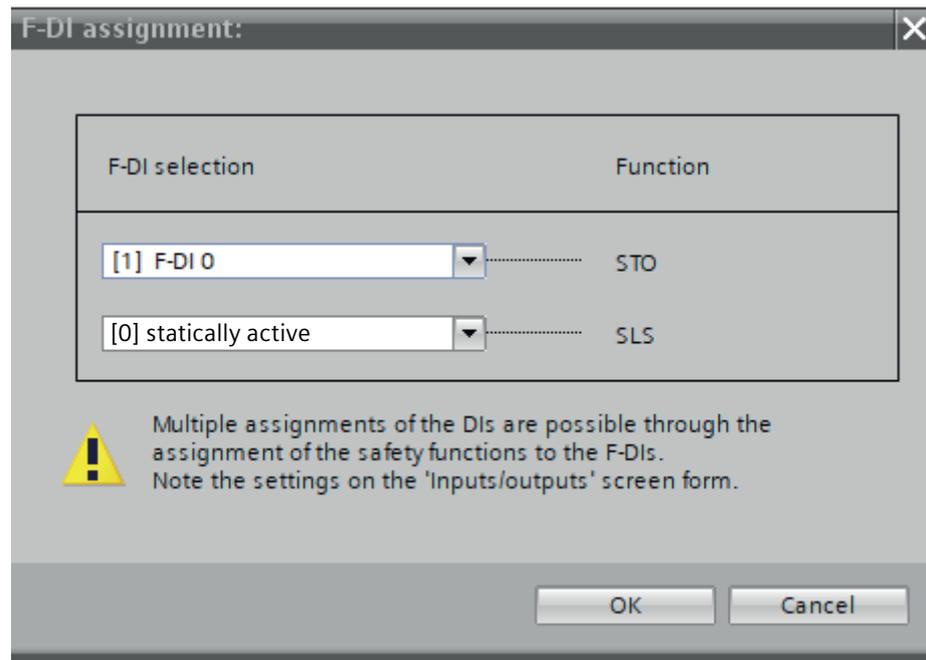


Figure 7-6 Selecting the "F-DI assignment"

- Acknowledge by selecting and deselecting STO. In this case, the failsafe digital input F-DI0 is connected with STO. Thus STO can be used as an emergency stop and in parallel for the acknowledgement of the SLS errors.

4. Paramaterize the SLS function.

7.16 Safely Limited Speed (SLS)

5. Set the SLS speed limit.
 

With the setpoint limitation the converter limits the speed setpoint when SLS is selected. If this function is required, the signal interconnection must be set after upgrading from V4.7 SP13 to V4.7 SP14:

  - p9733[0] = p1051[0]
  - p9733[1] = p1052[0]

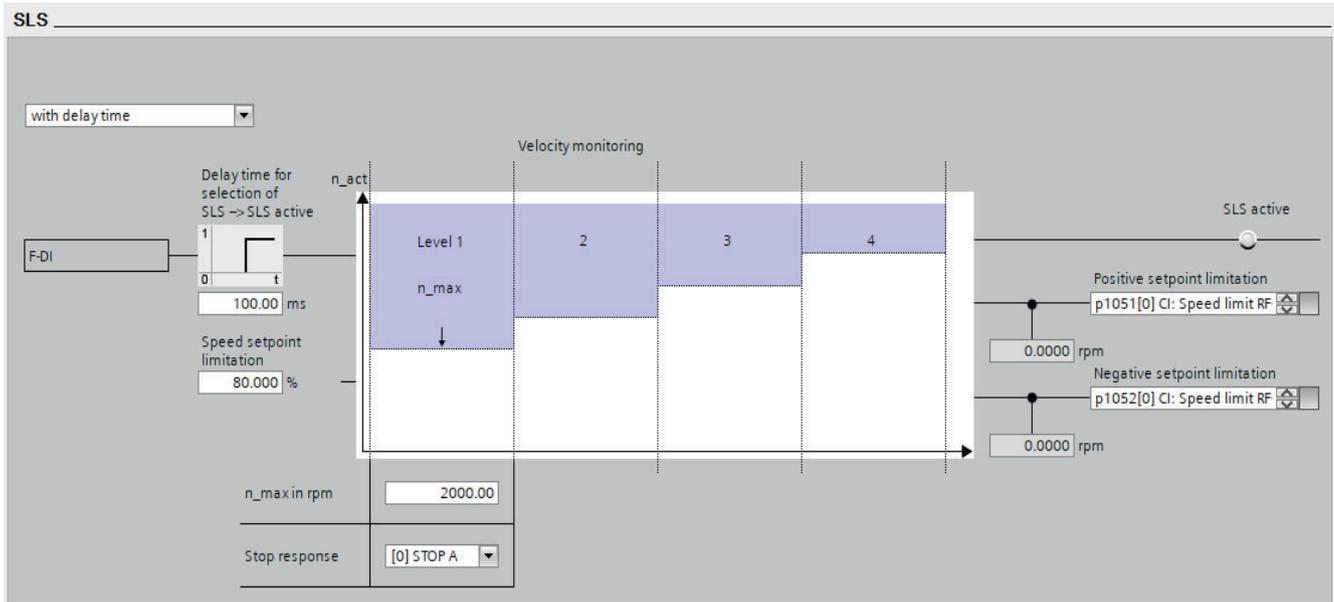


Figure 7-7 Setting the SLS limits

6. Select "Test stop".
  - Set the monitoring time to a value to match the application.
7. Select "F-DI / F-DO/ PROFIsafe"
  - Set the F-DI configuration.
  - Select F-DI if you want to acknowledge the safety alarms without using STO (see Step 3).

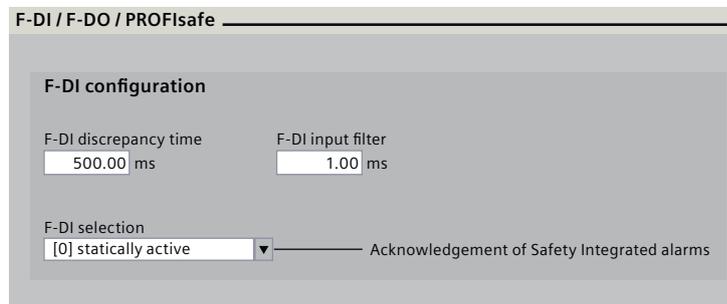


Figure 7-8 F-DI / F-DO/ PROFIsafe configuration

8. Finalize the commissioning.


For further details, please refer to the Safety Integrated Function Manual, available at the following link: Safety Integrated Function Manual (<https://support.industry.siemens.com/cs/ww/en/view/109782490>)

## 7.17 Setpoints

### 7.17.1 Overview



The converter receives its main setpoint from the setpoint source. The main setpoint generally specifies the motor speed.

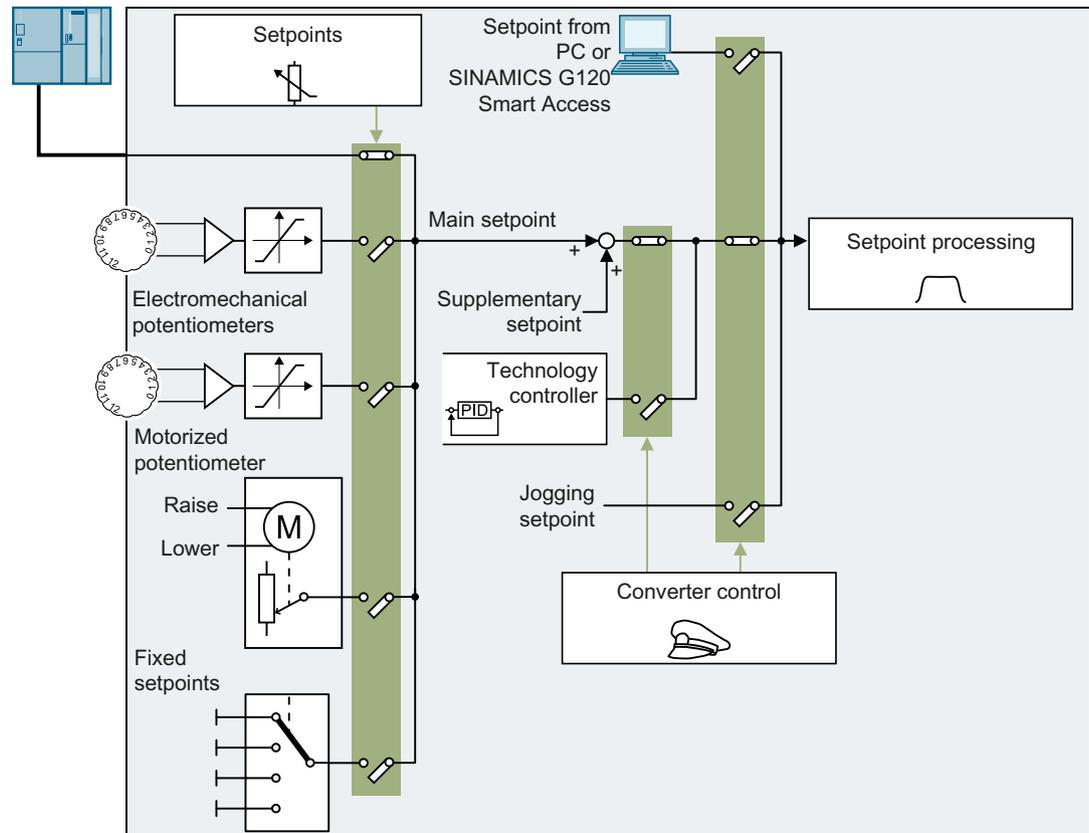

You have the following options when selecting the source of the main setpoint:

- Converter fieldbus interface
- Electromechanical potentiometer
- Motorized potentiometer simulated in the converter
- Fixed setpoints saved in the converter

You have the same selection options when selecting the source of the supplementary setpoint.

7.17 Setpoints


Under the following conditions, the converter switches from the main setpoint to other setpoints:

- When the technology controller is active and appropriately interconnected, its output specifies the motor speed.
- When jogging is active.
- When controlling from a Startdrive PC tool or the SINAMICS G120 Smart Access.

7.17.2 Specifying the setpoint via the fieldbus

Function description

In the quick commissioning, you define the preassignment for the converter interfaces. Depending on what has been preassigned, after quick commissioning, the receive word PZD02 can be interconnected with the main setpoint.

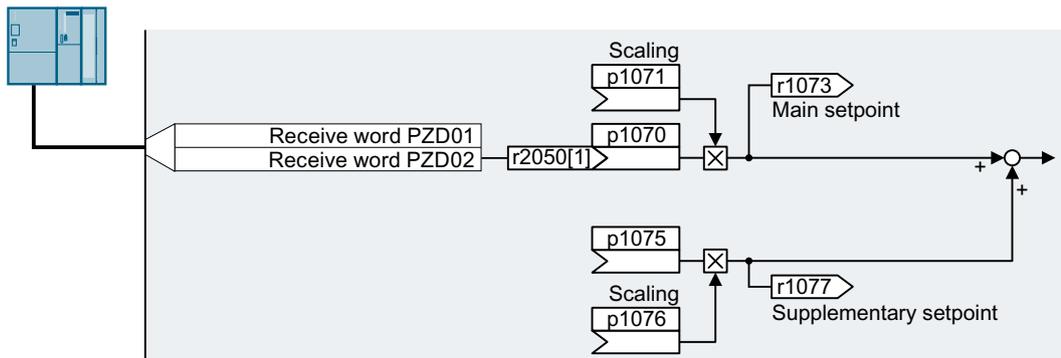

Example

Setting with receive word PZD02 as setpoint source:

Parameter	Description
p1070 = 2050[1]	Interconnects the main setpoint with the receive word PZD02 from the fieldbus.
p1075 = 2050[1]	Interconnects the supplementary setpoint with receive word PZD02 from the fieldbus.

Parameters

Parameter	Description	Setting
p1070[0...n]	CI: Main setpoint	Signal source for the main setpoint. The factory setting depends on the converter. Converter with PROFINET interface: [0] 2050[1] Converter without PROFINET interface: [0] 755[0]
p1071[0...n]	CI: Main setpoint scaling	Signal source for scaling the main setpoint. Factory setting: 1

Parameter	Description	Setting
r1073	CO: Main setpoint active	Displays the active main setpoint.
p1075[0...n]	CI: Supplementary setpoint	Signal source for the supplementary setpoint. Factory setting: 0
p1076[0...n]	CI: Supplementary setpoint scaling	Signal source for scaling the supplementary setpoint. Factory setting: 0
r1077	CO: Supplementary setpoint effective	Displays the effective supplementary setpoint.
r2050[0...11]	CO: PROFIdrive PZD receive word	Connector output to interconnect the PZD received from the fieldbus controller in the word format. [1] Most standard telegrams receive the speed setpoint as receive word PZD02.

### Further information



For further information refer to the function diagrams 2468, 9360 and 3030 of the List Manual.

### 7.17.3 Electromechanical potentiometer

The converter has two electromechanical potentiometers.

The potentiometers are hardwired with the internal analog inputs 0 and 1.

For more information on using a tool to adjust the two electromechanical potentiometers, refer to the replacing procedure in Section "Replacing the Electronic Module (Page 402)".

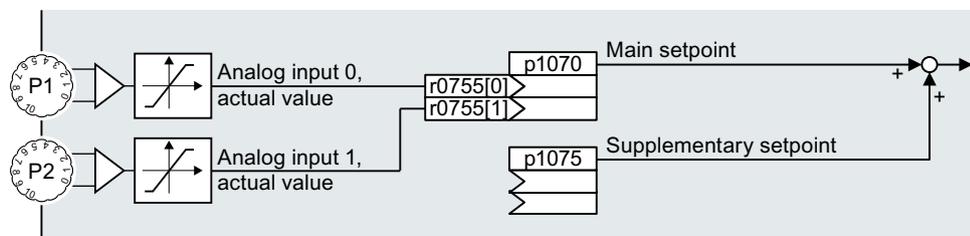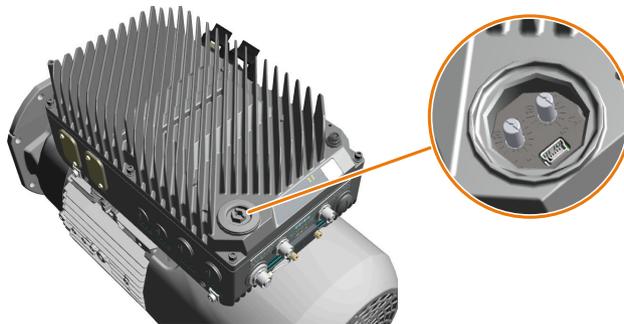


### Setting the potentiometer as setpoint source

Parameter	Description
p1070[0] = 755[0] p1070[1] = 755[1]	<b>Main setpoint</b> Interconnect the main setpoint with the internal analog inputs 0 and 1.
p1075[0] = 755[0] p1075[1] = 755[1]	<b>Additional setpoint</b> Interconnect the additional setpoint with the internal analog inputs 0 and 1.


#### 7.17.4 Motorized potentiometer as setpoint source

##### Overview

The "Motorized potentiometer" function emulates an electromechanical potentiometer. The output value of the motorized potentiometer can be set with the "higher" and "lower" control signals.

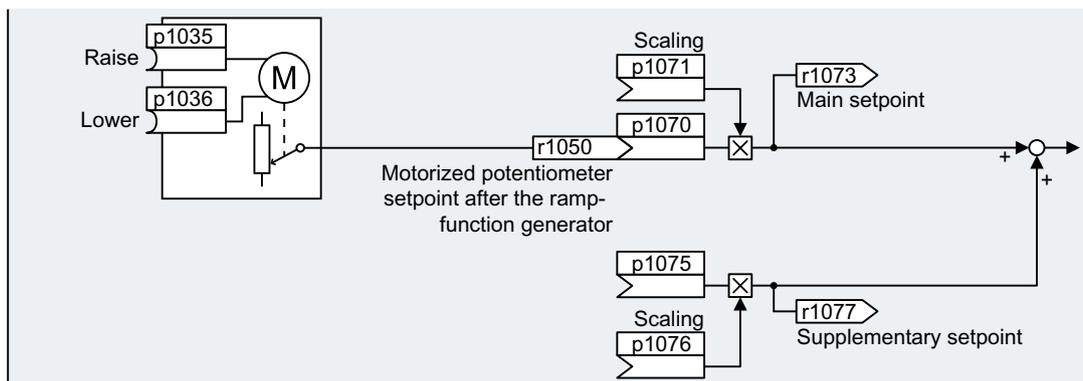

##### Function description

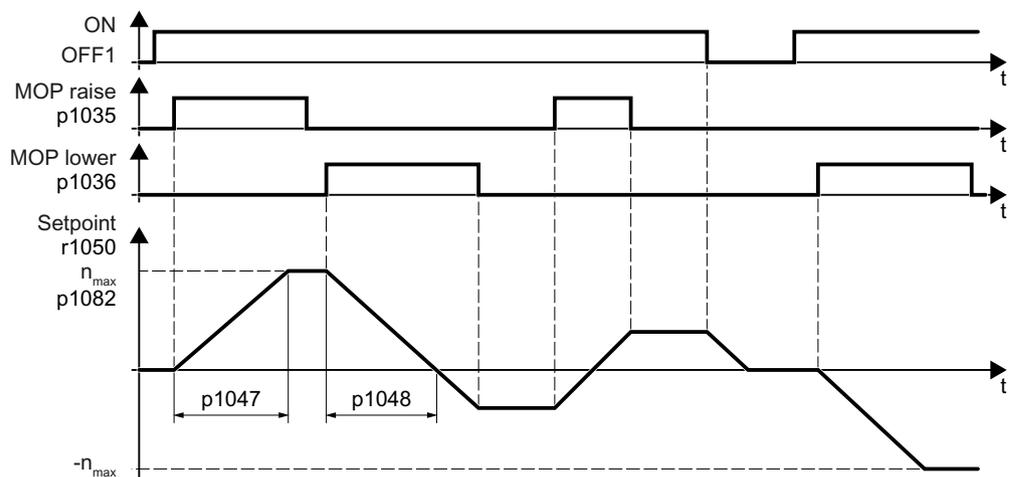

## Example

Setting with the motorized potentiometer as setpoint source:

Parameter	Description
p1070 = 1050	Interconnects the main setpoint with the motorized potentiometer output.

## Parameters

Table 7-4 Basic settings

Parameter	Description	Setting
p1035[0...n]	BI: Motorized potentiometer setpoint higher	Signal source to continuously increase the setpoint The factory setting depends on the converter. <ul style="list-style-type: none"> <li>With PROFINET interface: [0] 2090.13; [1] 0</li> <li>Without PROFINET interface: 0</li> </ul>
p1036[0...n]	BI: Motorized potentiometer setpoint lower	Signal source to continuously decrease the setpoint The factory setting depends on the converter. <ul style="list-style-type: none"> <li>With PROFINET interface: [0] 2090.14; [1] 0</li> <li>Without PROFINET interface: 0</li> </ul>
p1040[0...n]	Motorized potentiometer start value [rpm]	Start value that is effective when the motor is switched on. Factory setting: 0 rpm
p1047	Motorized potentiometer, ramp-up time [s]	MOP ramp-up time Factory setting: 10 s
p1048	Motorized potentiometer, ramp-down time [s]	MOP ramp-down time Factory setting: 10 s
r1050	Motorized potentiometer, setpoint after the ramp-function generator	Motorized potentiometer, setpoint after the ramp-function generator
p1070[0...n]	CI: Main setpoint	Signal source for the main setpoint The factory setting depends on the converter. <ul style="list-style-type: none"> <li>With PROFINET interface: [0] 2050[1]</li> <li>Without PROFINET interface: [0] 755[0]</li> </ul>
p1071[0...n]	CI: Main setpoint scaling	Signal source for scaling the main setpoint Factory setting: 1
r1073	CO: Main setpoint active	Displays the active main setpoint
p1075[0...n]	CI: Supplementary setpoint	Signal source for the supplementary setpoint Factory setting: 0
p1076[0...n]	CI: Supplementary setpoint scaling	Signal source for scaling the supplementary setpoint Factory setting: 0
r1077	CO: Supplementary setpoint effective [rpm]	Displays the effective supplementary setpoint. The value shown is the additional setpoint after scaling.

Table 7-5 Advanced settings

Number	Name	Factory setting
p1030[0...n]	Motorized potentiometer configuration	<p>Configuration for the motorized potentiometer Factory setting: 00110 bin</p> <p>.00 Storage active = 0: After the motor has been switched on, the setpoint = p1040 = 1: After the motor has switched off, the converter saves the setpoint. After the motor has switched on, the setpoint = the stored value.</p> <p>.01 Automatic mode, ramp-function generator active (1-signal via BI: p1041) = 0: Ramp-up/ramp-down time = 0 = 1: With ramp-function generator In manual mode (p1041 = 0), the ramp-function generator is always active.</p> <p>.02 Initial rounding active 1: With initial rounding. Using the initial rounding function it is possible to enter very small setpoint changes.</p> <p>.03 Storage in NVRAM active 1: If bit 00 = 1, the setpoint is retained during a power failure.</p> <p>.04 Ramp-function generator always active 1: The converter also calculates the ramp-function generator when the motor is switched off.</p>
p1037[0...n]	Motorized potentiometer, maximum speed [rpm]	<p>The converter limits the motorized potentiometer output to p1037. Factory setting: 0 rpm After quick commissioning, the converter sets the parameter to the appropriate value.</p>
p1038[0...n]	Motorized potentiometer, minimum speed [rpm]	<p>The converter limits the motorized potentiometer output to p1038. Factory setting: 0 rpm After quick commissioning, the converter sets the parameter to the appropriate value.</p>


Number	Name	Factory setting
p1043[0...n]	BI: Motorized potentiometer, accept setting value	Signal source for accepting the setting value. The motorized potentiometer accepts the setting value p1044 on signal change p1043 = 0 → 1. Factory setting: 0
p1044[0...n]	CI: Motorized potentiometer, setting value	Signal source for the setting value Factory setting: 0

## Further information

For more information about the motorized potentiometer, refer to function diagram 3020 in the List Manual.


## 7.17.5 Fixed speed setpoint as setpoint source

### Function description

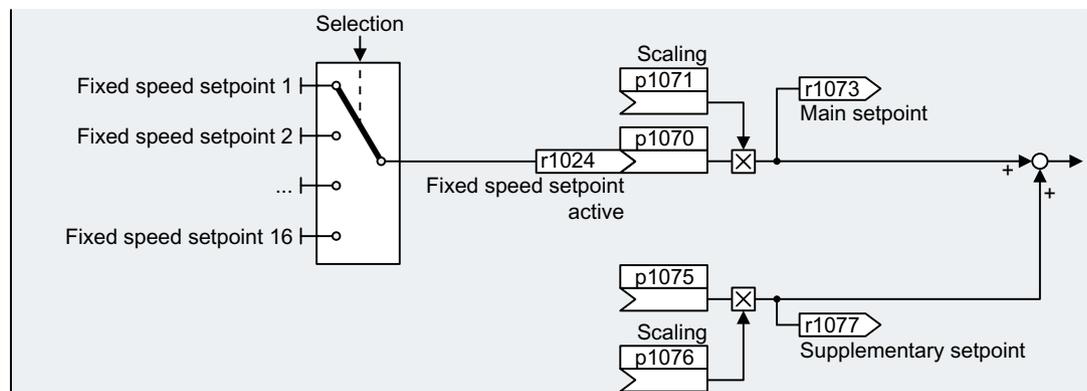


The converter makes a distinction between two methods when selecting the fixed speed setpoints:

### Directly selecting a fixed speed setpoint

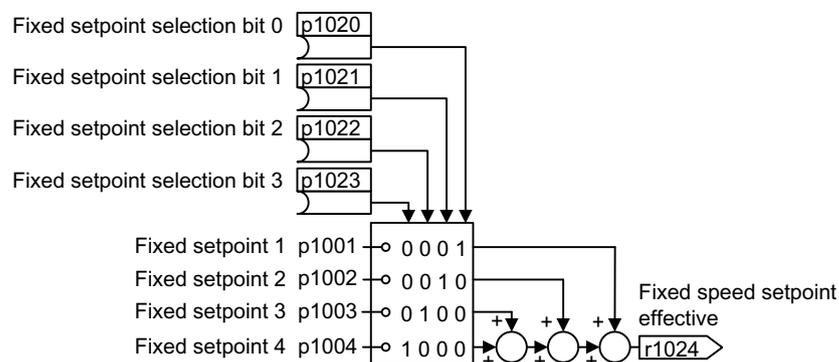

p1020	p1021	p1022	p1023	Resulting setpoint
0	0	0	0	0
1	0	0	0	p1001
0	1	0	0	p1002
1	1	0	0	p1001 + p1002
0	0	1	0	p1003
1	0	1	0	p1001 + p1003
0	1	1	0	p1002 + p1003
1	1	1	0	p1001 + p1002 + p1003
0	0	0	1	p1004
1	0	0	1	p1001 + p1004
0	1	0	1	p1002 + p1004
1	1	0	1	p1001 + p1002 + p1004
0	0	1	1	p1003 + p1004
1	0	1	1	p1001 + p1003 + p1004
0	1	1	1	p1002 + p1003 + p1004
1	1	1	1	p1001 + p1002 + p1003 + p1004

Selecting the fixed speed setpoint, binary

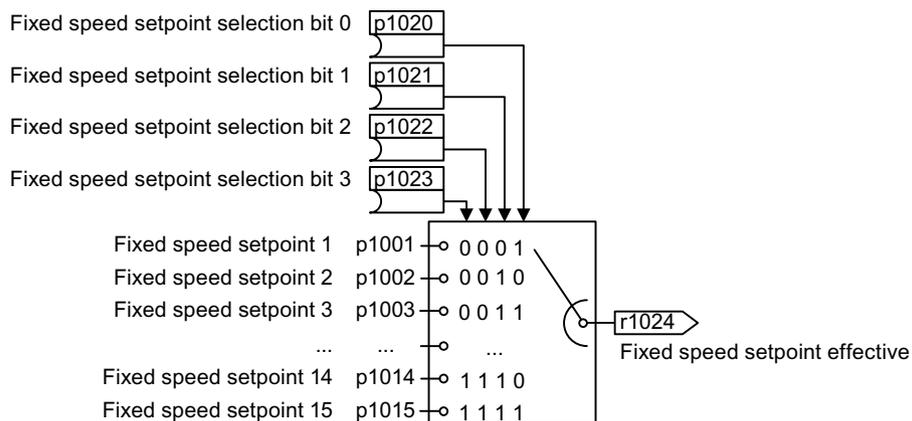

p1020	p1021	p1022	p1023	Resulting setpoint
0	0	0	0	0
1	0	0	0	p1001
0	1	0	0	p1002
1	1	0	0	p1003
0	0	1	0	p1004
1	0	1	0	p1005
0	1	1	0	p1006
1	1	1	0	p1007
0	0	0	1	p1008
1	0	0	1	p1009

p1020	p1021	p1022	p1023	Resulting setpoint
0	1	0	1	p1010
1	1	0	1	p1011
0	0	1	1	p1012
1	0	1	1	p1013
0	1	1	1	p1014
1	1	1	1	p1015

## Example

After it has been switched on, a conveyor belt only runs with two different velocities. The motor should now operate with the following corresponding speeds:

- The signal at digital input 0 switches the motor on and accelerates it up to 300 rpm.
- The signal at digital input 1 accelerates the motor up to 2000 rpm.
- With signals at both digital inputs, the motor accelerates up to 2300 rpm.

### Settings for the application example

Parameter	Description
p1001[0] = 300.000	Fixed speed setpoint 1
p1002[0] = 2000.000	Fixed speed setpoint 2
p0840[0] = 722.0	ON/OFF1: Switches on the motor with digital input 0
p1070[0] = 1024	Main setpoint: Interconnects the main setpoint with a fixed speed setpoint.
p1020[0] = 722.0	Fixed speed setpoint selection, bit 0: Interconnects fixed speed setpoint 1 with digital input 0 (DI 0).
p1021[0] = 722.1	Fixed speed setpoint selection, bit 1: Interconnects fixed speed setpoint 2 with digital input 1 (DI 1).
p1016 = 1	Fixed speed setpoint mode: Directly selects fixed speed setpoints.

### Resulting fixed speed setpoints for the application example

Fixed speed setpoint selected via	Resulting setpoint
DI 0 = 0	Motor stops
DI 0 = 1 and DI 1 = 0	300 rpm
DI 0 = 1 and DI 1 = 1	2300 rpm

## Parameters

Parameter	Description	Setting
p1001[0...n]	CO: Fixed speed setpoint 1 [rpm]	Fixed speed setpoint 1 Factory setting: 0 rpm
p1002[0...n]	CO: Fixed speed setpoint 2 [rpm]	Fixed speed setpoint 2 Factory setting: 0 rpm

Parameter	Description	Setting
...	...	...
p1015[0...n]	CO: Fixed speed setpoint 15 [rpm]	Fixed speed setpoint 15 Factory setting: 0 rpm
p1016	Fixed speed setpoint selection mode	Fixed speed setpoint mode Factory setting: 1 1: Direct 2: Binary
p1020[0...n]	Fixed speed setpoint selection, bit 0	Fixed speed setpoint selection, bit 0 Factory setting: 0
p1021[0...n]	Fixed speed setpoint selection, bit 1	Fixed speed setpoint selection, bit 1 Factory setting: 0
p1022[0...n]	Fixed speed setpoint selection, bit 2	Fixed speed setpoint selection, bit 2 Factory setting: 0
p1023[0...n]	Fixed speed setpoint selection, bit 3	Fixed speed setpoint selection, bit 3 Factory setting: 0
r1024	Fixed speed setpoint active	Fixed speed setpoint is active.
r1025.0	Fixed speed setpoint status	Fixed speed setpoint status 1 signal: Fixed speed setpoint is selected.

### Further information

Additional information about binary and direct selection can be found in function diagrams 3010 and 3011 in the List Manual.

## 7.18 Setpoint processing

### 7.18.1 Overview


#### Overview



Setpoint processing influences the setpoint using the following functions:


- "Invert" inverts the motor direction of rotation.
- The "Inhibit direction of rotation" function prevents the motor from rotating in the incorrect direction; this function can make sense for conveyor belts, extruders, pumps and fans, for example.
- The "Skip frequency bands" prevent the motor from being continuously operated within these skip bands. This function avoids mechanical resonance effects by only permitting the motor to operate briefly at specific speeds.

- The "Speed limitation" function protects the motor and the driven load against excessively high speeds.
- The "Ramp-function generator" function prevents the setpoint from suddenly changing. As a consequence, the motor accelerates and brakes with a reduced torque.

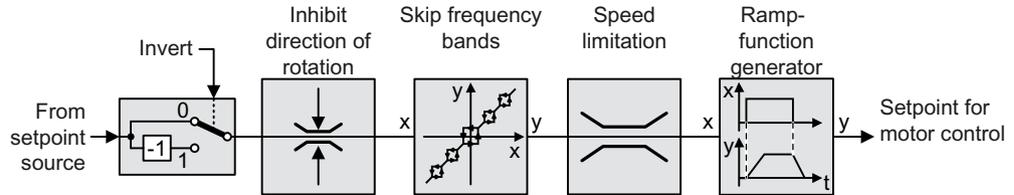

### 7.18.2 Invert setpoint

#### Function description

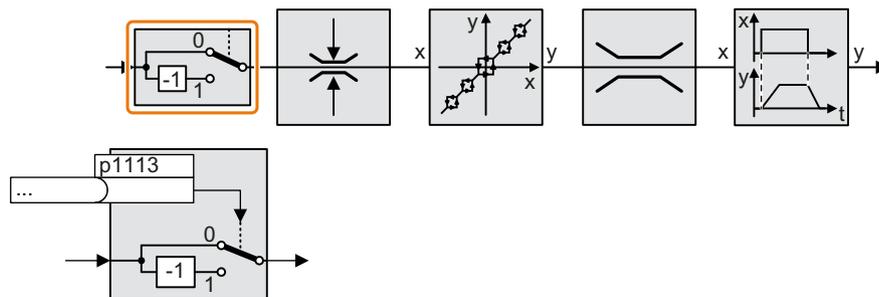

The function inverts the sign of the setpoint using a binary signal.

#### Example

To invert the setpoint via an external signal, interconnect parameter p1113 with a binary signal of your choice.

Table 7-6 Application examples showing how a setpoint is inverted


Parameter	Description
p1113 = 722.1	Digital input 1 = 0: Setpoint remains unchanged. Digital input 1 = 1: Converter inverts the setpoint.
p1113 = 2090.11	Inverts the setpoint via the fieldbus (control word 1, bit 11).

#### Parameters

Parameter	Description	Setting
p1113[0...n]	BI: Setpoint inversion	Sets the signal source to invert the setpoint. Factory setting: dependent upon the converter

### 7.18.3 Inhibit direction of rotation

#### Function description

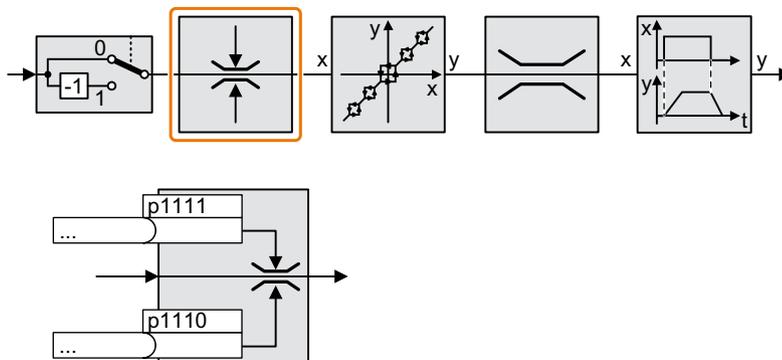

In the factory setting of the converter, both motor directions of rotation are enabled.  
Set the corresponding parameter to a value = 1 to permanently block directions of rotation.

#### Example

Table 7-7 Application examples showing how a setpoint is inverted

Parameter	Description
p1110[0] = 1	Negative direction of rotation is permanently inhibited.
p1110[0] = 722.3	Digital input 3 = 0: Negative direction of rotation is enabled. Digital input 3 = 1: Negative direction of rotation is inhibited.

#### Parameters

Parameter	Description	Setting
p1110[0...n]	BI: Inhibit negative direction	Sets the signal source to disable the negative direction. Factory setting: 0
p1111[0...n]	BI: Inhibit positive direction	Sets the signal source to disable the positive direction. Factory setting: 0

## 7.18.4 Skip frequency bands and minimum speed


### Overview

The converter has a minimum speed and four skip frequency bands:

- The minimum speed prevents continuous motor operation at speeds less than the minimum speed.
- Each skip frequency band prevents continuous motor operation within a specific speed range.

### Function description

#### Minimum speed

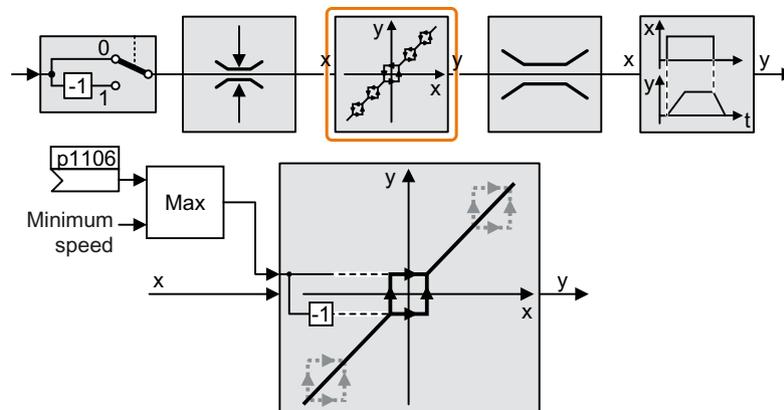

Speeds where the absolute value is less than the minimum speed are only possible when the motor is accelerating or braking.

#### Skip frequency bands

Further information on the skip frequency bands is provided in function diagram 3050 of the List Manual.

### Parameters


Parameter	Description	Setting
p1051[0...n]	CI: Speed limit of ramp-function generator, positive direction of rotation	Sets the signal source for the speed limit of the positive direction on the ramp-function generator input. Factory setting: 1083
p1052[0...n]	CI: Speed limit of ramp-function generator, negative direction of rotation	Sets the signal source for the speed limit of the negative direction on the ramp-function generator input. Factory setting: 1086
p1080[0...n]	Minimum speed [rpm]	Sets the lowest possible motor speed. Factory setting: 0

Parameter	Description	Setting
p1083[0...n]	CO: Speed limit in positive direction of rotation [rpm]	Sets the maximum speed for the positive direction. Factory setting: 210000
r1084	CO: Speed limit positive active [rpm]	Display and connector output for the active positive speed limit.
p1085[0...n]	CI: Speed limit in positive direction of rotation	Sets the signal source for the speed limit of the positive direction. Factory setting: 1083
p1091[0...n] ... p1094[0...n]	Skip speed 1 ... 4 [rpm]	Sets skip speed 1 ... 4. Factory setting: 0
p1098[0...n]	CI: Skip speed scaling	Sets the signal source for scaling the skip speeds. Factory setting: 1
r1099.0	CO/BO: Skip frequency band of status word	Display and BICO output for the skip bands. .00 1 signal: r1170 within the skip band
p1106[0...n]	CI: Minimum speed signal source	Sets the signal source for lowest possible motor speed. Factory setting: 0
r1112	CO: Speed setpoint according to minimum limit [rpm]	Displays the speed setpoint after the minimum limiting.
r1114	CO: Setpoint after direction limiting [rpm]	Displays the speed/velocity setpoint after the changeover and limiting the direction.
r1119	CO: Ramp-function generator setpoint at the input [rpm]	Displays the setpoint at the input of the ramp-function generator.
r1170	CO: Speed controller setpoint sum [rpm]	Display and connector output for the speed setpoint after selecting the ramp-function generator.

Further information is provided in the parameter list of the List Manual.

### 7.18.5 Speed limitation

The maximum speed limits the speed setpoint range for both directions of rotation.

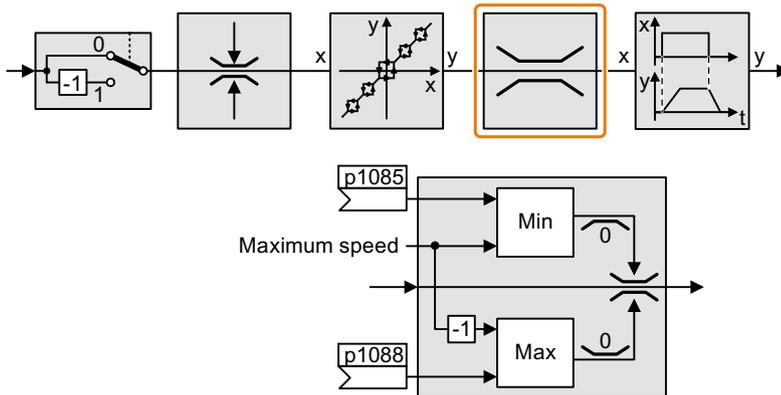

The converter generates a message (fault or alarm) when the maximum speed is exceeded.

If you must limit the speed depending on the direction of rotation, then you can define speed limits for each direction.

## Parameters

Parameter	Description	Setting
p1082[0...n]	Maximum speed [rpm]	Sets the highest possible speed. Factory setting: 1500
p1083[0...n]	CO: Speed limit in positive direction of rotation [rpm]	Sets the maximum speed for the positive direction. Factory setting: 210000
p1085[0...n]	CI: Speed limit in positive direction of rotation	Sets the signal source for the speed limit of the positive direction. Factory setting: 1083
p1086[0...n]	CO: Speed limit in negative direction of rotation [rpm]	Sets the speed limit for the negative direction. Factory setting: -210000
p1088[0...n]	CI: Speed limit in negative direction of rotation	Sets the signal source for the speed/velocity limit of the negative direction. Factory setting: 1086

### 7.18.6 Ramp-function generator

#### Overview


The ramp-function generator in the setpoint channel limits the rate change of the speed setpoint (acceleration). A reduced acceleration reduces the accelerating torque of the motor. In this case, the motor reduces the load on the mechanical system of the driven machine.

You can select between two different ramp-function generator types:

- **Extended ramp-function generator**  
The expanded ramp-function generator limits not only the acceleration but also the change in acceleration (jerk) by rounding the setpoint. In this case, the torque does not rise suddenly in the motor.
- **Basic ramp-function generator**  
The basic ramp-function generator limits the acceleration, however not the rate the acceleration changes (jerk).

### Extended ramp-function generator

The ramp-up and ramp-down times of the extended ramp-function generator can be set independently of each other. The optimal times depend on the application and can lie in the range from a few 100 ms to several minutes.

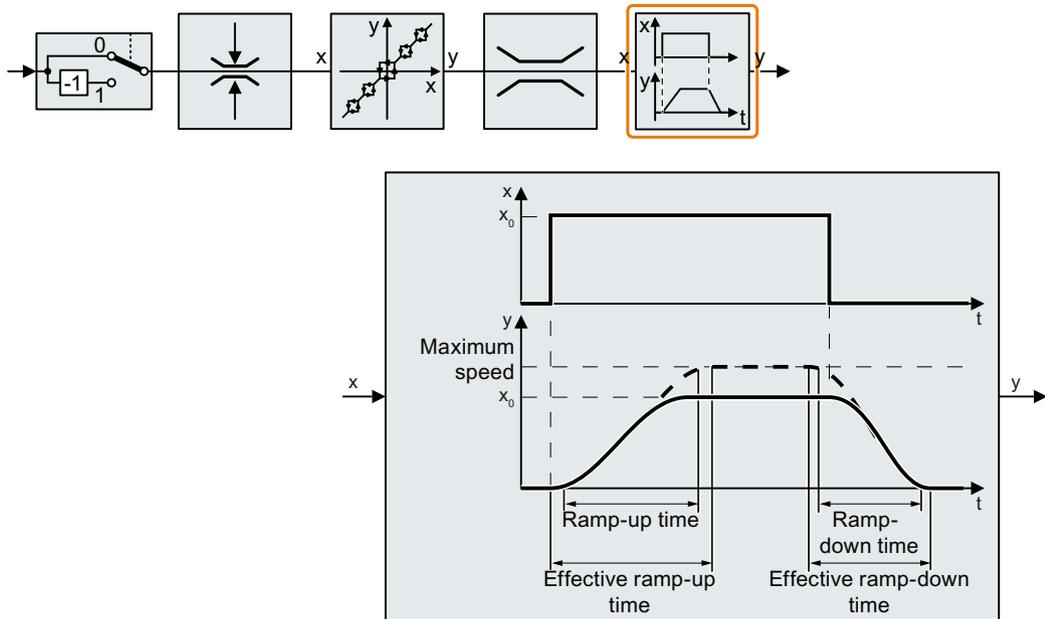


Initial and final rounding permit smooth, jerk-free acceleration and braking.

The ramp-up and ramp-down times of the motor are increased by the rounding times:

- Effective ramp-up time =  $p1120 + 0.5 \times (p1130 + p1131)$ .
- Effective ramp-down time =  $p1121 + 0.5 \times (p1130 + p1131)$ .

#### Parameters for setting the extended ramp-function generator

Parameter	Description	Setting
p1115	Ramp-function generator selection	Sets the ramp-function generator type. 0: Basic ramp-function generator 1: Extended ramp-function generator (factory setting)
p1120[0...n]	Ramp-function generator, ramp-up time [s]	The ramp-function generator ramps-up the speed setpoint from standstill (setpoint = 0) up to the maximum speed (p1082) in this time. Factory setting: 1
p1121[0...n]	Ramp-function generator, ramp-down time [s]	Sets the ramp-down time for the ramp-function generator. Factory setting: 1
p1130[0...n]	Ramp-function generator, initial rounding-off time [s]	Sets the initial rounding-off time for the extended ramp generator. The value applies to ramp-up and ramp-down. Factory setting: 0

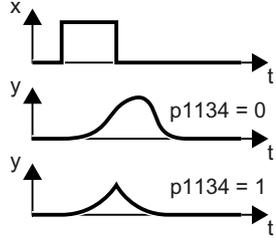Parameter	Description	Setting
p1131[0...n]	Ramp-function generator, final rounding-off time [s]	Sets the final rounding-off time for the extended ramp generator. Factory setting: 0
p1134[0...n]	Ramp-function generator, rounding-off type	Sets the smoothed response to the OFF1 command or the reduced setpoint for the extended ramp-function generator. 0: Continuous smoothing (factory setting) 1: Discontinuous smoothing  
p1135[0...n]	OFF3 ramp-down time [s]	Sets the ramp-down time from the maximum speed down to zero speed for the OFF3 command. Factory setting: 0
p1136[0...n]	OFF3 initial rounding-off time [s]	Sets the initial rounding-off time for OFF3 for the extended ramp generator. Factory setting: 0
p1137[0...n]	OFF3 final rounding-off time [s]	Sets the final rounding-off time for OFF3 for the extended ramp generator. Factory setting: 0

You can find more information in function diagram 3070 and in the parameter list of the List Manual.

## Setting the extended ramp-function generator

### Procedure


1. Enter the highest possible speed setpoint.
2. Switch on the motor.
3. Evaluate your drive response.
  - If the motor accelerates too slowly, then reduce the ramp-up time.  
An excessively short ramp-up time means that the motor will reach its current limiting when accelerating, and will temporarily not be able to follow the speed setpoint. In this case, the drive exceeds the set time.
  - If the motor accelerates too fast, then extend the ramp-up time.
  - Increase the initial rounding if the acceleration is jerky.  
In the case of a permanent magnet synchronous motor, initial rounding can prevent the motor from tilting during startup.
  - In most applications, it is sufficient when the final rounding is set to the same value as the initial rounding.

4. Switch off the motor.
5. Evaluate your drive response.
  - If the motor decelerates too slowly, then reduce the ramp-down time.  
The minimum ramp-down time that makes sense depends on your particular application. For an excessively short ramp-down time, the converter either reaches the motor current, or the DC link voltage in the converter becomes too high.
  - Extend the ramp-down time if the motor is braked too quickly or the converter goes into a fault condition when braking.
6. Repeat steps 1 ... 5 until the drive behavior meets the requirements of the machine or plant.

You have set the extended ramp-function generator.



**Basic ramp-function generator**

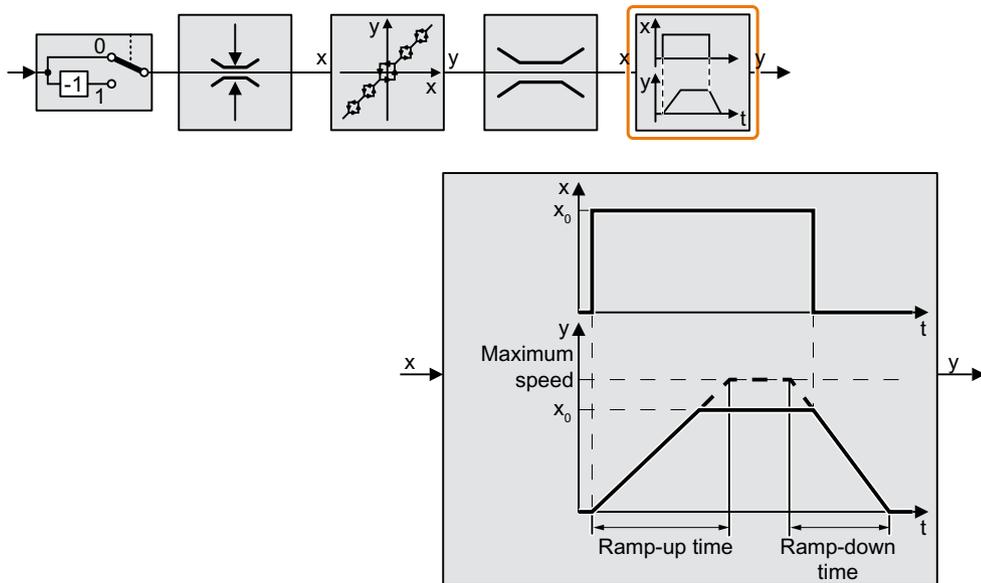

When compared to the extended ramp-function generator, the basic ramp-function generator has no rounding times.

**Parameters for setting the basic ramp-function generator**

Parameter	Description	Setting
p1082[0...n]	Maximum speed [rpm]	Sets the highest possible speed. Factory setting: 1500
p1115	Ramp-function generator selection	Sets the ramp-function generator type. 0: Basic ramp-function generator 1: Extended ramp-function generator (factory setting)

Parameter	Description	Setting
p1120[0...n]	Ramp-function generator, ramp-up time [s]	The ramp-function generator ramps-up the speed setpoint from standstill (setpoint = 0) up to the maximum speed (p1082) in this time. Factory setting: 1
p1121[0...n]	Ramp-function generator, ramp-down time [s]	Sets the ramp-down time for the ramp-function generator. Factory setting: 1
p1135	OFF3 ramp-down time [s]	Sets the ramp-down time from the maximum speed down to zero speed for the OFF3 command. Factory setting: 0

### Changing the ramp-up and ramp-down times in operation

The ramping up and down time of the ramp-function generator can be changed during operation. The scaling value can come, e.g. from the fieldbus.

#### Preconditions

- You have commissioned the communication between the converter and the control system.
- Free telegram 999 has been set in the converter and in your higher-level control system.  
 Expanding or freely interconnecting telegrams (Page 164)
- The control sends the scaling value to the converter in PZD 3.

#### Procedure

- Set p1138 = 2050[2].  
This means that you have interconnected the scaling factor for the ramp-up time with PZD receive word 3.
- Set p1139 = 2050[2].  
This means that you have interconnected the scaling factor for the ramp-down time with PZD receive word 3.

The converter receives the value for scaling the ramp-up and ramp-down times via PZD receive word 3.



#### Parameters for setting the scaling

Parameter	Description	Setting
p1138[0...n]	CI: Ramp-function generator ramp-up time scaling	Sets the signal source for scaling the ramp-up time of the ramp-function generator. Factory setting: 1
p1139[0...n]	CI: Ramp-function generator ramp-down time scaling	Sets the signal source for scaling the ramp-down time of the ramp-function generator. Factory setting: 1
r2050[0...11]	CO: PROFIdrive PZD receive word	Connector output to interconnect PZD (setpoints) with word format received from the fieldbus controller.

## 7.19 PID technology controller

### Overview



The technology controller controls process variables, e.g. pressure, temperature, level or flow.

### Precondition

#### Additional functions

The *U/f* control or the vector control has been set.


#### Tools

To change the function settings, you can use a PC tool, for example.

### Function description

#### Function diagram

The technology controller is implemented as a PID controller (controller with proportional, integral, and differential action).

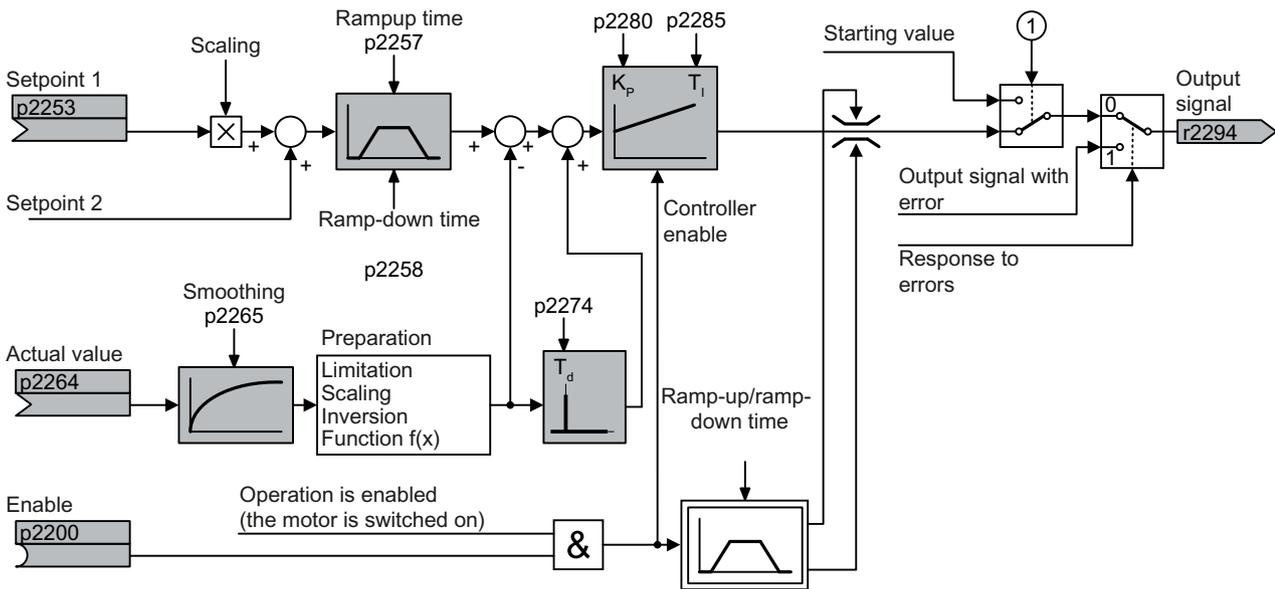

- ① The converter uses the start value when all the following conditions are simultaneously satisfied:
- The technology controller supplies the main setpoint (p2251 = 0).
  - The ramp-function generator output of the technology controller has not yet reached the start value.

#### Basic settings






The settings required as a minimum are marked in gray in the function diagram:

- Interconnect setpoint and actual values with signals of your choice
- Set ramp-function generator and controller parameters  $K_p$ ,  $T_i$  and  $T_d$ .

### Set controller parameters $K_p$ , $T_i$ and $T_d$ .

#### Procedure

1. Temporarily set the ramp-up and ramp-down times of the ramp-function generator (p2257 and p2258) to zero.
2. Enter a setpoint step and monitor the associated actual value.  
The slower the response of the process to be controlled, the longer you must monitor the controller response. Under certain circumstances (e.g. for a temperature control), you need to wait several minutes until you can evaluate the controller response.

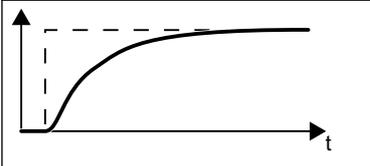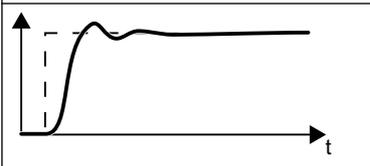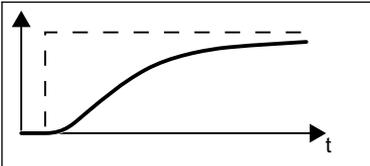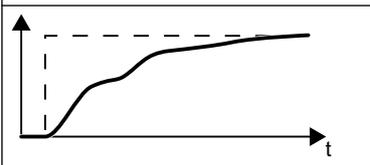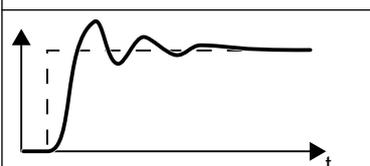	<p>Optimum controller response for applications that do not permit any overshoot. The actual value approaches the setpoint without any significant overshoot.</p>
	<p>Optimum controller behavior for fast correction and quick compensation of disturbance components. The actual value approaches the setpoint and slightly overshoots, maximum 10% of the setpoint step.</p>
	<p>The actual value only slowly approaches the setpoint.</p> <ul style="list-style-type: none"> <li>• Increase the proportional component <math>K_p</math> (p2280) and reduce the integration time <math>T_i</math> (p2285).</li> </ul>
	<p>The actual value only slowly approaches the setpoint with slight oscillation.</p> <ul style="list-style-type: none"> <li>• Increase the proportional component <math>K_p</math> (p2280) and reduce the rate time <math>T_d</math> (p2274)</li> </ul>
	<p>The actual value quickly approaches the setpoint, but overshoots too much.</p> <ul style="list-style-type: none"> <li>• Decrease the proportional component <math>K_p</math> (p2280) and increase the integration time <math>T_i</math> (p2285).</li> </ul>

3. Set the ramp-up and ramp-down times of the ramp-function generator back to their original value.

You have manually set the technology controller.



### Limiting the output of the technology controller

In the factory setting, the output of the technology controller is limited to  $\pm$  maximum speed. You must change this limit, depending on your particular application.

Example: The output of the technology controller supplies the speed setpoint for a pump. The pump should only run in the positive direction.

## Parameters

### Basic settings

Parameter	Description	Setting
r0046.0...31	CO/BO: Missing enable signals	Display and BICO output for missing enable signals that are preventing the closed-loop drive control from being commissioned.
r0052.0...15	CO/BO: Status word 1	Display and connector output for status word 1.
r0056.0...15	CO/BO: Status word, closed-loop control	Display and BICO output for the status word of the closed-loop control.
r1084	CO: Speed limit positive active [rpm]	Display and connector output for the active positive and negative speed limit.
r1087	CO: Speed limit negative active [rpm]	
p2200[0...n]	BI: Technology controller enable	Sets the signal source to switch in/switch out the technology controller. 1 signal: Technology controller is enabled. Factory setting: 0
p2252	Technology controller configuration	Sets the configuration of the technology controller. Factory setting: 0000 0000 bin
p2253[0...n]	CI: Technology controller setpoint 1	Sets the signal source for the setpoint 1 and setpoint 2 of the technology controller. Factory setting: 0
p2254[0...n]	CI: Technology controller setpoint 2	
p2255	Technology controller setpoint 1 scaling [%]	Sets the scaling for the setpoint 1 and setpoint 2 of the technology controller. Factory setting: 100
p2256	Technology controller setpoint 2 scaling [%]	
p2257	Technology controller ramp-up time [s]	Sets the ramp-up and ramp-down time of the technology controller. Factory setting: 1
p2258	Technology controller ramp-down time [s]	
r2260	CO: Technology controller setpoint after ramp-function generator [%]	Displays the setpoint after the ramp-function generator of the technology controller.
p2261	Technology controller setpoint filter time constant [s]	Sets the time constant for the setpoint filter (PT1) of the technology controller. Factory setting: 0
r2262	CO: Technology controller setpoint after filter [%]	Display and connector output for the smoothed setpoint after the setpoint filter (PT1) of the technology controller.
p2263	Technology controller type	Sets the type of technology controller. 0: D component in the actual value signal (factory setting) 1: D component in system deviation

Parameter	Description	Setting
r2273	CO: Technology controller system deviation [%]	Displays the system deviation between the setpoint and actual value of the technology controller.
p2274	Technology controller differentiation time constant [s]	Sets the time constant for the differentiation (D component) of the technology controller. Factory setting: 0
p2280	Technology controller proportional gain	Sets the proportional gain (P component) of the technology controller. Factory setting: 1
p2285	Technology controller integral time [s]	Sets the integral time (I component, integrating time constant) of the technology controller. Factory setting: 30
p2286[0...n]	BI: Hold technology controller integrator	Sets the signal source to hold the integrator for the technology controller. Factory setting: 56.13
p2289[0...n]	CI: Technology controller precontrol signal	Sets the signal source for the precontrol signal of the technology controller. Factory setting: 0
p2306	Technology controller system deviation inversion	Setting to invert the system deviation of the technology controller. 0: No inversion (factory setting) 1: Inversion
p2339	Technology controller threshold value for I proportion stop at skip speed [%]	Sets the threshold value for the system deviation of the technology controller, which controls holding the controller integral component in the range of the skip speeds of the ramp-function generator. Factory setting: 2
r2344	CO: Technology controller last speed setpoint (smoothed) [%]	Displays the smoothed speed setpoint of the technology controller prior to switching to operation with fault response (see p2345).
p2345	Technology controller fault response	Sets the response of the technology controller to the occurrence of fault F07426 (technology controller actual value limited). 0: Function inhibited (factory setting) 1: On fault: Changeover to r2344 (or p2302) 2: On fault: Changeover to p2215
r2349.0...13	CO/BO: Technology controller status word	Display and BICO output for the status word of the technology controller.

**Limiting the output of the technology controller**

Number	Name	Factory setting
p2290[0...n]	BI: Technology controller limitation enable	Sets the signal source to enable the technology controller output. The technology controller output is enabled with a 1 signal. Factory setting: 1
p2291	CO: Technology controller maximum limiting [%]	Sets the maximum limit of the technology controller. Factory setting: 100
p2292	CO: Technology controller minimum limiting [%]	Sets the minimum limit of the technology controller. Factory setting: 0
p2293	Technology controller ramp-up/ ramp-down time [s]	Sets the ramping time for the output signal of the technology controller. Factory setting: 1
r2294	CO: Technology controller output signal [%]	Display and connector output for the output signal of the technology controller.
p2295	CO: Technology controller output scaling [%]	Sets the scaling for the output signal of the technology controller. Factory setting: 100
p2296[0...n]	CI: Technology controller output scaling	Sets the signal source for the scaling value of the technology controller. Factory setting: 2295
p2297[0...n]	CI: Technology controller maximum limiting signal source	Sets the signal source for the maximum limiting of the technology controller. Factory setting: 1084
p2298[0...n]	CI: Technology controller minimum limiting signal source	Sets the signal source for the minimum limiting of the technology controller. Factory setting: 1087
p2299[0...n]	CI: Technology controller limitation offset	Sets the signal source for the offset of the output limiting of the technology controller. Factory setting: 0
p2302	Technology controller output signal start value [%]	Sets the start value for the output of the technology controller. Factory setting: 0

**Adapting the actual value of the technology controller**

Parameter	Description	Setting
p2264[0...n]	CI: Technology controller actual value	Sets the signal source for the actual value of the technology controller. Factory setting: 0
p2265	Technology controller actual value filter time constant [s]	Sets the time constant for the actual value filter (PT1) of the technology controller. Factory setting: 0

Parameter	Description	Setting
p2266	CO: Technology controller actual value after filter [%]	Display and connector output for the smoothed actual value after the filter (PT1) of the technology controller.
p2267	Technology controller upper limit actual value [%]	Sets the upper limit for the actual value signal of the technology controller. Factory setting: 100
p2268	Technology controller lower limit actual value [%]	Sets the lower limit for the actual value signal of the technology controller. Factory setting: -100
p2269	Technology controller gain actual value [%]	Sets the scaling factor for the actual value of the technology controller. Factory setting: 100
p2270	Technology controller actual value function	Setting to use an arithmetic function for the actual value signal of the technology controller. 0: Output (y) = input (x) (factory setting) 1: Root function (root from x) 2: Square function (x * x) 3: Cube function (x * x * x)
p2271	Technology controller actual value inversion	Setting to invert the actual value signal of the technology controller. 0: No inversion (Factory setting) 1: Inversion actual value signal
r2272	CO: Technology controller actual value scaled [%]	Display and connector output for the scaled actual value signal of the technology controller.

#### PID technology controller, fixed values (binary selection)

Parameter	Description	Setting
p2201[0...n] ... p2215[0...n]	CO: Technology controller fixed value 1 ... 15 [%]	Sets the value for fixed value 1 ... 15 of the technology controller. Factory setting: 10, 20, 30 ... 150
p2216[0...n]	Technology controller fixed value selection method	Sets the method to select the fixed setpoints: 1: Direct selection (factory setting) 2: Binary selection
r2224	CO: Technology controller fixed value active [%]	Display and connector output for the selected and active fixed value of the technology controller.
r2225.0	CO/BO: Technology controller fixed value selection status word [%]	Display and BICO output for the status word of the fixed value selection of the technology controller.
r2229	Technology controller number actual	Displays the number of the selected fixed setpoint of the technology controller.

**PID technology controller, fixed values (direct selection)**

Parameter	Description	Setting
p2216[0...n]	Technology controller fixed value selection method	Sets the method to select the fixed setpoints: 1: Direct selection (factory setting) 2: Binary selection
p2220[0...n] ... p2223[0...n]	BI: Technology controller fixed value selection bit 0 ... 3	Sets the signal source to select a fixed value of the technology controller. Factory setting: 0
r2224	CO: Technology controller fixed value active [%]	Display and connector output for the selected and active fixed value of the technology controller.
r2225.0	CO/BO: Technology controller fixed value selection status word [%]	Display and BICO output for the status word of the fixed value selection of the technology controller.
r2229	Technology controller number actual	Displays the number of the selected fixed setpoint of the technology controller.

**PID technology controller, motorized potentiometer**

Parameter	Description	Setting
r2231	Technology controller motorized potentiometer setpoint memory [%]	Displays the setpoint memory for the motorized potentiometer of the technology controller.
p2235[0...n]	BI: Technology controller motorized potentiometer, setpoint, raise	Sets the signal source to continually increase the setpoint for the motorized potentiometer of the technology controller. Factory setting: 0
p2236[0...n]	BI: Technology controller motorized potentiometer, setpoint, lower	Sets the signal source to continually reduce the setpoint for the motorized potentiometer of the technology controller. Factory setting: 0
p2237[0...n]	Technology controller motorized potentiometer maximum value [%]	Sets the maximum value for the motorized potentiometer of the technology controller. Factory setting: 100
p2238[0...n]	Technology controller motorized potentiometer minimum value [%]	Sets the minimum value for the motorized potentiometer of the technology controller. Factory setting: -100
p2240[0...n]	Technology controller motorized potentiometer start value [%]	Sets the starting value for the motorized potentiometer of the technology controller. Factory setting: 0
r2245	CO: Technology controller motorized potentiometer, setpoint before RFG [%]	Displays the effective setpoint in front of the internal motorized potentiometer ramp-function generator of the technology controller.
p2247[0...n]	Technology controller motorized potentiometer ramp-up time [s]	Sets the ramp-up time and ramp-down time for the internal ramp-function generator for the motorized potentiometer of the technology controller. Factory setting: 10
p2248[0...n]	Technology controller motorized potentiometer ramp-down time [s]	
r2250	CO: Technology controller motorized potentiometer, setpoint after RFG [%]	Displays the effective setpoint after the internal ramp-function generator for the motorized potentiometer of the technology controller.

## Further information

For additional information refer to the function diagrams 7950 ... 7958 of the List Manual.

You will find additional information on the following PID controller components in the Internet at:

- Setpoint input: Analog value or fixed setpoint
- Setpoint channel: Scaling, ramp-function generator and filter
- Actual value channel: Filter, limiting and signal processing
- PID controller: Principle of operation of the D component, inhibiting the I component and the control sense
- Enable, limiting the controller output and fault response

 FAQ (<https://support.industry.siemens.com/cs/ww/en/view/92556266>)

## 7.20 Motor control

### Overview



The converter has two alternative methods to ensure the motor speed follows the configured speed setpoint:

- U/f control
- Vector control

### 7.20.1 Setting the saturation characteristic of the permanent magnet synchronous motor (third-party motor)

#### Overview

The motor control of the converter requires the simulation of the saturation characteristic "Quadrature axis flux over quadrature axis current" of the permanent magnet synchronous motor.

The saturation characteristics of Siemens motors are stored in the converter.

For non-Siemens motors, you need to set the saturation characteristic using the motor data sheet, for example.

#### Precondition

Quick commissioning has been completed.

The saturation characteristic for a third-party motor is available.

## Procedure

- Determine the following values using the motor data sheet:
  - Set the current value of the saturation characteristic  $iq[0] \dots iq[4]$ .
  - Determine the flux values  $psiq[0] \dots psiq[4]$  associated with the current values.

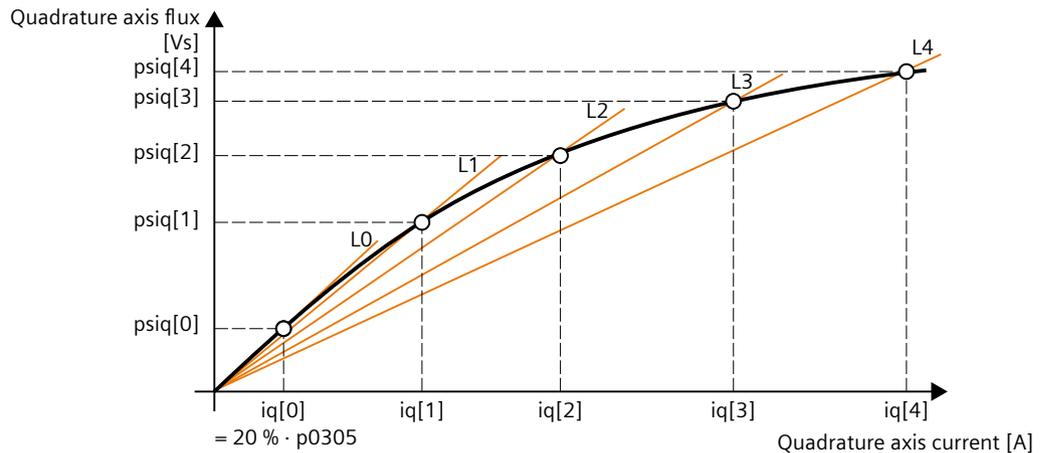


Figure 7-9 Saturation characteristic of the permanent magnet synchronous motor

If the saturation characteristic of the third-party motor is not available, leave parameters p356 and p362 ... p369 in their factory settings.

Commissioning usually leads to a satisfactory control behavior only with a correctly set saturation characteristic.

- Set  $p0356 = psiq[0] / (20\% \cdot p0305)$
- Set the following parameters:
  - $p0362 = psiq[1] / (p0356 \cdot p0305) \cdot 100\%$
  - $p0363 = psiq[2] / (p0356 \cdot p0305) \cdot 100\%$
  - $p0364 = psiq[3] / (p0356 \cdot p0305) \cdot 100\%$
  - $p0365 = psiq[4] / (p0356 \cdot p0305) \cdot 100\%$
  - $p0366 = iq[1] / p0305 \cdot 100\%$
  - $p0367 = iq[2] / p0305 \cdot 100\%$
  - $p0368 = iq[3] / p0305 \cdot 100\%$
  - $p0369 = iq[4] / p0305 \cdot 100\%$

Alternatively, you can calculate parameters p0362 ... p0365 based on inductances L1 ... L4:

- $p0362 = L1 / p0356 \cdot p0366$
- $p0363 = L2 / p0356 \cdot p0367$
- $p0364 = L3 / p0356 \cdot p0368$
- $p0365 = L4 / p0356 \cdot p0369$

## Result


The parameters for emulating the saturation characteristic are defined in the converter in ascending order:

- $20\% < p0362 < p0363 < p0364 < p0365$
- $20\% < p0366 < p0367 < p0368 < p0369$

The converter extrapolates the characteristic curve linearly for currents  $i_q > i_{q[4]}$ .

## 7.20.2 U/f control

### Overview

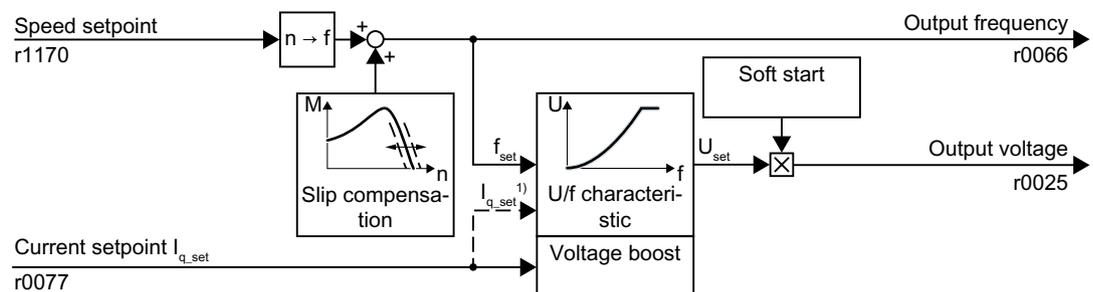

- <sup>1)</sup> In the U/f control variant, "flux current control (FCC)," the converter controls the motor current (starting current) at low speeds

The U/f control is a speed feedforward control with the following properties:


- The converter sets the output voltage on the basis of the U/f characteristic.
- The output frequency is essentially calculated from the speed setpoint and the number of pole pairs of the motor.
- The slip compensation corrects the output frequency depending on the load and thus increases the speed accuracy.
- The omission of a control loop means that the U/f control is stable in all cases.
- In applications with higher speed accuracy requirements, a load-dependent voltage boost can be selected (flux current control, FCC)

For operation of the motor with U/f control, you must set at least the following subfunctions appropriate for your application:

- U/f characteristic
- Voltage boost

### 7.20.2.1 Characteristics of U/f control

The converter has different U/f characteristics.

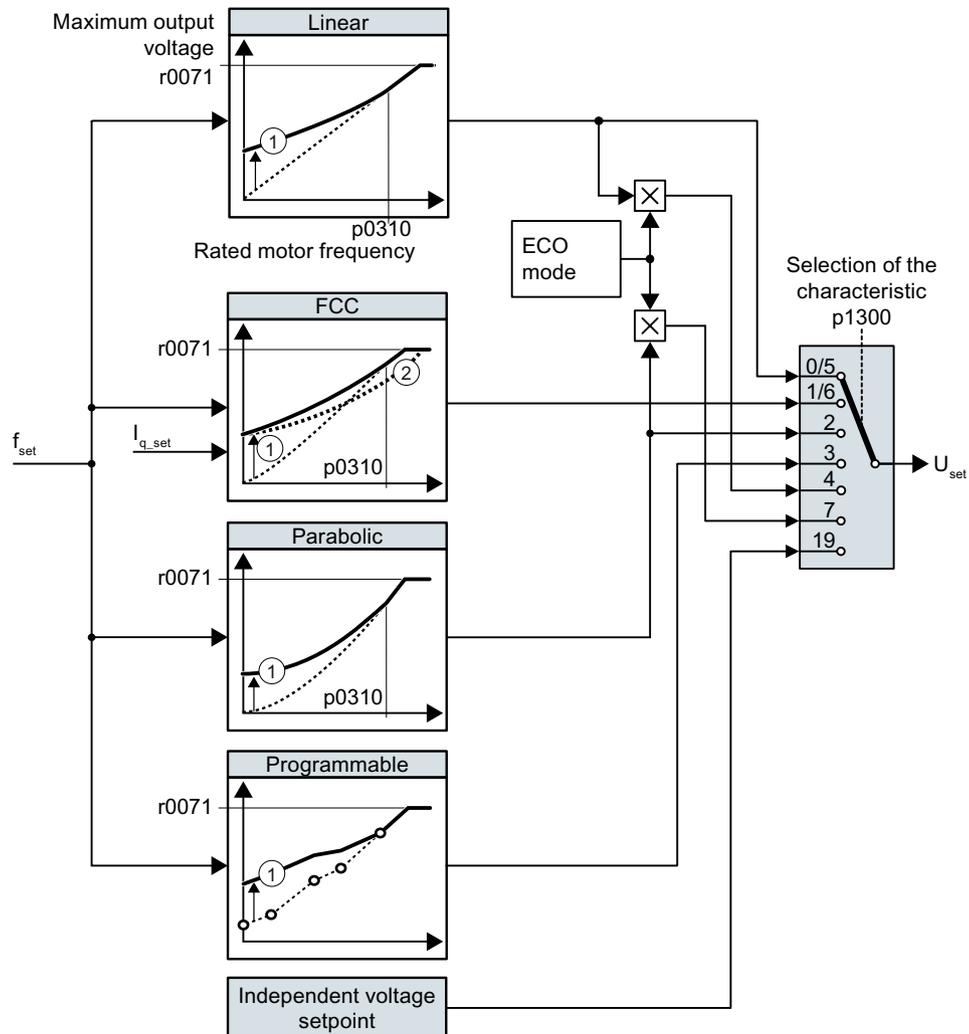

- ① The voltage boost of the characteristic optimizes the speed control at low speeds
- ② With the flux current control (FCC), the converter compensates for the voltage drop in the stator resistor of the motor

The converter increases its output voltage to the maximum possible output voltage. The maximum possible output voltage of the converter depends on the line voltage.

When the maximum output voltage is reached, the converter only increases the output frequency. At this point, the motor enters the field weakening range: At constant torque, the slip decreases quadratically as the speed increases.

The value of the output voltage at the rated motor frequency also depends on the following variables:

- Ratio between the converter size and the motor size
- Line voltage

- Line impedance
- Actual motor torque

The maximum possible output voltage as a function of the input voltage is provided in the technical data.

 Technical data (Page 419)

### 7.20.2.2 Selecting the U/f characteristic

Table 7-8 Linear and parabolic characteristics

Requirement	Application examples	Remark	Characteristic	Parameter
The required torque is independent of the speed	Conveyor belts, roller conveyors, chain conveyors, eccentric worm pumps, compressors, extruders, centrifuges, agitators, mixers	-	Linear	p1300 = 0
		The converter equalizes the voltage drops across the stator resistance. Recommended for motors less than 7.5 kW. Precondition: You have set the motor data according to the rating plate and have performed the motor identification after quick commissioning.	Linear with Flux Current Control (FCC)	p1300 = 1
The required torque increases with the speed	Centrifugal pumps, radial fans, axial fans	Lower losses in the motor and converter than for a linear characteristic.	Parabolic	p1300 = 2

Table 7-9 Characteristics for special applications

Requirement	Application examples	Remark	Characteristic	Parameter
Applications with a low dynamic response and constant speed	Centrifugal pumps, radial fans, axial fans	If the speed setpoint is reached, and remains unchanged for 5 seconds, then the converter reduces its output voltage. As a consequence, the ECO mode saves energy with respect to the parabolic characteristic.	ECO mode	p1300 = 4 or p1300 = 7
The converter must maintain the motor speed constant for the longest possible time.	Drives in the textile sector	When reaching the maximum current limit, the converter only reduces the output voltage, but not the frequency.	Precise frequency characteristic	p1300 = 5 or p1300 = 6
Freely adjustable U/f characteristic	-	-	Adjustable characteristic	p1300 = 3
U/f characteristic with independent voltage setpoint	-	The interrelationship between the frequency and voltage is not calculated in the converter, but is specified by the user.	Independent voltage setpoint	p1300 = 19

Additional information on U/f characteristics can be found in the parameter list and in the function diagrams of the List Manual.

### 7.20.2.3 Optimizing motor starting

#### Overview

After selection of the U/f characteristic, no further settings are required in most applications.

In the following circumstances, the motor cannot accelerate to its speed setpoint after it has been switched on:

- Load moment of inertia too high
- Load torque too large
- Ramp-up time p1120 too short

To improve the starting behavior of the motor, a voltage boost can be set for the U/f characteristic at low speeds.


#### Precondition

The ramp-up time of the ramp-function generator is, depending on the motor rated power, 1 s (< 1 kW) ... 10 s (> 10 kW).

#### Function description

##### Setting the voltage boost for U/f control

The converter boosts the voltage corresponding to the starting currents p1310 ... p1312.

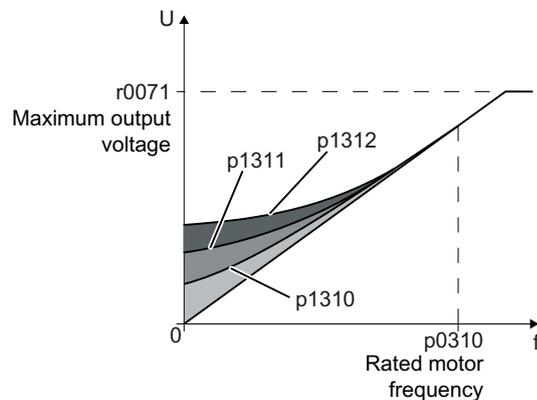

Increase parameter values p1310 ... p1312 in steps of  $\leq 5\%$ . Excessively high values in p1310 ... p1312 can cause the motor to overheat and stop (trip) the converter due to overcurrent.

If message A07409 appears, it is not permissible that you further increase the value of any of the parameters.

#### Procedure

1. Switch on the motor with a setpoint of a few revolutions per minute.
2. Check whether the motor rotates smoothly.

3. If the motor does not rotate smoothly, or even remains stationary, increase the voltage boost p1310 until the motor runs smoothly.
4. Accelerate the motor to the maximum speed with maximum load.
5. Check that the motor follows the setpoint.
6. If necessary, increase the voltage boost p1311 until the motor accelerates without problem.

In applications with a high break loose torque, you must also increase parameter p1312 in order to achieve a satisfactory motor response.

You have set the voltage boost.



## Parameters

Parameter	Description	Setting
r0071	Maximum output voltage [V]	Displays the maximum output voltage.
p0310[0...n]	Rated motor frequency [Hz]	Sets the rated motor frequency. Factory setting: 0
p1310[0...n]	Starting current (voltage boost) permanent [%]	Defines the voltage boost as a [%] referred to the rated motor current (p0305). Factory setting: 50
p1311[0...n]	Starting current (voltage boost) when accelerating [%]	p1311 only results in a voltage boost when accelerating and generates a supplementary torque to accelerate the load. Factory setting: 0
p1312[0...n]	Starting current (voltage boost) when starting [%]	Setting for an additional voltage boost when powering-up, however, only for the first acceleration phase. Factory setting: 0

## Further information


For further information refer to the parameter list and the function diagrams 6301 and 6310 of the List Manual.

### 7.20.3 Sensorless vector control with speed controller

#### 7.20.3.1 Structure of vector control without encoder (sensorless)

##### Overview

The vector control comprises closed-loop current control and a higher-level closed-loop speed control.

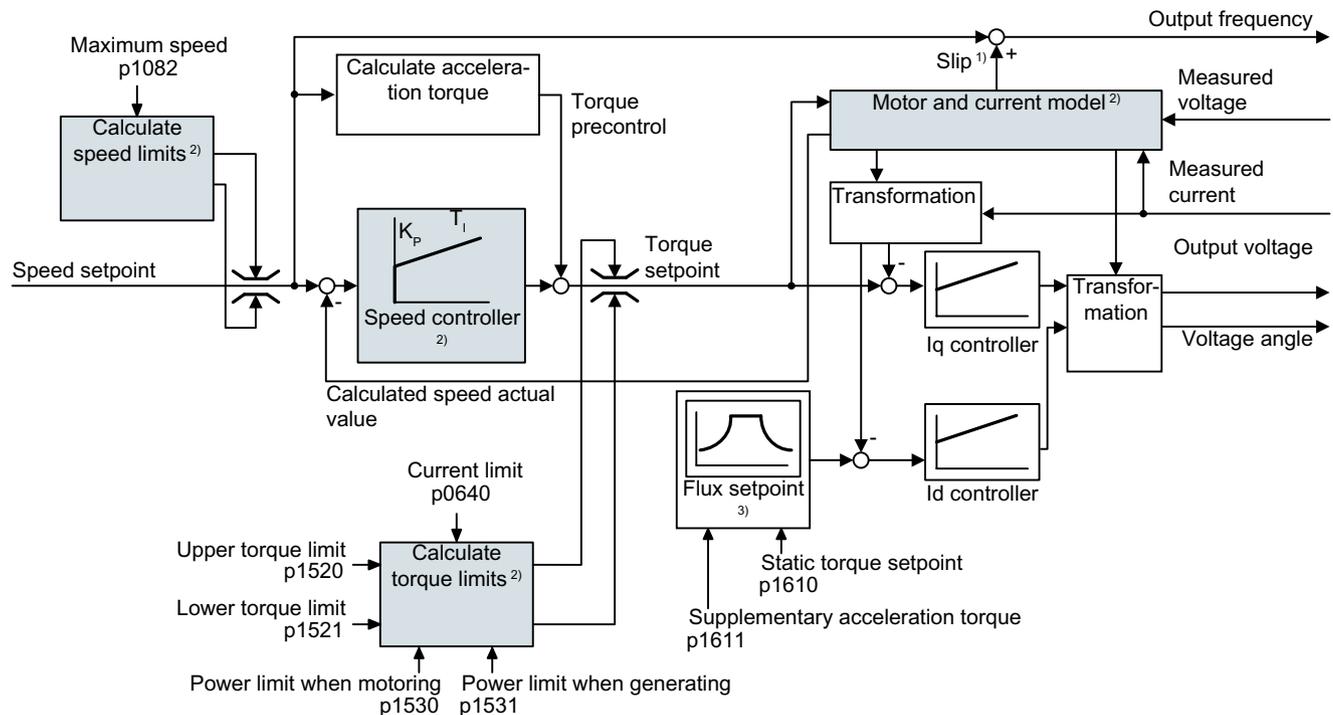

- 1) for asynchronous motors
- 2) Settings that are required

Using the motor model, the converter calculates the following closed-loop control signals from the measured phase currents and the output voltage:

- Current component  $I_q$
- Current component  $I_d$
- Speed actual value

The setpoint of the current component  $I_d$  (flux setpoint) is obtained from the motor data. For speeds above the rated speed, the converter reduces the flux setpoint along the field weakening characteristic.

When the speed setpoint is increased, the speed controller responds with a higher setpoint for current component  $I_q$  (torque setpoint). The closed-loop control responds to a higher torque setpoint by adding a higher slip frequency to the output frequency. The higher output frequency also results in a higher motor slip, which is proportional to the accelerating torque.

$I_q$  and  $I_d$  controllers keep the motor flux constant using the output voltage, and adjust the matching current component  $I_q$  in the motor.

## Settings that are required

Restart quick commissioning and select the vector control in quick commissioning.

 Quick commissioning (Page 123)

In order to achieve a satisfactory control response, as a minimum you must set the partial functions – shown with gray background in the diagram above – to match your particular application:

- **Motor and current model:** In the quick commissioning, correctly set the motor data on the rating plate corresponding to the connection type (Y/ $\Delta$ ), and carry out the motor data identification routine at standstill.
- **Speed limits and torque limits:** In the quick commissioning, set the maximum speed (p1082) and current limit (p0640) to match your particular application. When exiting quick commissioning, the converter calculates the torque and power limits corresponding to the current limit. The actual torque limits are obtained from the converted current and power limits and the set torque limits.
- **Speed controller:** Start the rotating measurement of the motor data identification. You must manually optimize the controller if the rotating measurement is not possible.

### WARNING

#### The load falls due to incorrect closed-loop control settings

For encoderless vector control, the converter calculates the actual speed based on an electric motor model. In applications with pulling loads - e.g. hoisting gear, lifting tables or vertical conveyors - an incorrectly set motor model or other incorrect settings can mean that the load falls. A falling load can result in death or serious injury.

- Correctly set the motor data during the quick commissioning.
- Carry out the motor data identification.
- Correctly set the "Motor holding brake" function.  
 Motor holding brake (Page 234)
- For pulling loads, carefully comply with the recommended settings for vector control.  
 Advanced settings (Page 302)

## Further information

For further information refer to the function diagrams 6040, 6050, and 6060 of the List Manual.


### 7.20.3.2 Optimizing the closed-loop speed controller

#### Optimum control response - post optimization not required

Preconditions for assessing the controller response:

- The moment of inertia of the load is constant and does not depend on the speed.
- The converter does not reach the set torque limits during acceleration.
- You operate the motor in the range 40% ... 60% of its rated speed.

If the motor exhibits the following response, the speed control is well set and you do not have to adapt the speed controller manually:

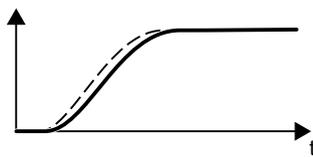


The speed setpoint (broken line) increases with the set ramp-up time and rounding.


The speed actual value follows the setpoint without any overshoot.

#### Control optimization required

In some cases, the self optimization result is not satisfactory, or self optimization is not possible as the motor cannot freely rotate.

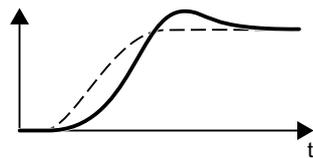

Initially, the speed actual value follows the speed setpoint with some delay, and then overshoots the speed setpoint.

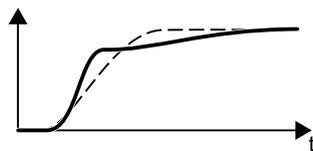

First, the actual speed value increases faster than the speed setpoint. Before the setpoint reaches its final value, it passes the actual value. Finally, the actual value approaches the setpoint without any significant overshoot.

In the two cases describe above, we recommend that you manually optimize the speed control.



#### Optimizing the speed controller

##### Requirements

- Torque precontrol is active: p1496 = 100%.
- The load moment of inertia is constant and independent of the speed.
- The converter requires 10% ... 50% of the rated torque to accelerate.  
When necessary, adapt the ramp-up and ramp-down times of the ramp-function generator (p1120 and p1121).

**Procedure**

1. Switch on the motor.
2. Enter a speed setpoint of approximately 40% of the rated speed.
3. Wait until the actual speed has stabilized.
4. Increase the setpoint up to a maximum of 60% of the rated speed.
5. Monitor the associated characteristic of the setpoint and actual speed.
6. Optimize the controller by adapting the ratio of the moments of inertia of the load and motor (p0342):

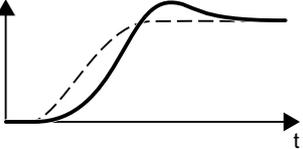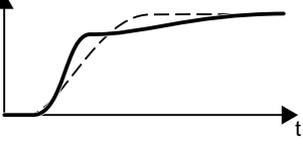 <p>The graph shows speed on the vertical axis and time (t) on the horizontal axis. A dashed line represents the speed setpoint, which rises and then levels off. A solid line represents the actual speed, which starts with a delay, follows the setpoint, and then overshoots it before settling back to the setpoint value.</p>	<p>Initially, the speed actual value follows the speed setpoint with some delay, and then overshoots the speed setpoint.</p> <ul style="list-style-type: none"> <li>• Increase p0342</li> </ul>
 <p>The graph shows speed on the vertical axis and time (t) on the horizontal axis. A dashed line represents the speed setpoint, which rises and then levels off. A solid line represents the actual speed, which rises more steeply than the setpoint, crosses it, and then smoothly approaches the setpoint value without any overshoot.</p>	<p>Initially, the speed actual value increases faster than the speed setpoint. The setpoint passes the actual value before reaching its final value. Finally, the actual value approaches the setpoint without any overshoot.</p> <ul style="list-style-type: none"> <li>• Reduce p0342</li> </ul>

7. Switch off the motor.
8. Set p0340 = 4. The converter again calculates the speed controller parameters.
9. Switch on the motor.
10. Over the complete speed range check as to whether the speed control operates satisfactorily with the optimized settings.

You have optimized the speed controller.



When necessary, set the ramp-up and ramp-down times of the ramp-function generator (p1120 and p1121) back to the value before optimization.

**Mastering critical applications**

The speed control can become unstable for drives with a high load moment of inertia and gearbox backlash or a coupling between the motor and load that can possibly oscillate. In this case, we recommend the following settings:

- Increase p1452 (smoothing the speed actual value).
- Increase p1472 (integral time  $T_i$ ):  $T_i \geq 4 \cdot p1452$
- If, after these measures, the speed controller does not operate with an adequate dynamic performance, then increase p1470 (gain  $K_p$ ) step-by-step.

## Parameters

### Encoderless speed control

Parameter	Description	Setting
p0342[0...n]	Ratio between the total and motor moment of inertia	Sets the ratio of moment of inertia load + motor to moment of inertia of motor without load. Factory setting: 1
p1452[0...n]	Speed controller actual speed value smoothing time (encoderless) [ms]	Sets the smoothing time for the actual speed of the speed controller for encoderless closed-loop speed control. Factory setting: 10
p1470[0...n]	Speed controller encoderless operation P gain	Sets the P gain for encoderless operation for the speed controller. Factory setting: 0.3
p1472[0...n]	Speed controller encoderless operation integral time [ms]	Set the integral time for encoderless operation for the speed controller. Factory setting: 20
p1496[0...n]	Acceleration precontrol scaling [%]	Sets the scaling for the acceleration precontrol of the speed/velocity controller. Factory setting: 0

### 7.20.3.3 Advanced settings

#### $K_p$ and $T_i$ adaptation

$K_p$  and  $T_i$  adaptation suppress speed control oscillations that may occur. The "rotating measurement" of the motor data identification optimizes the speed controller. If you have performed the rotating measurement, then the  $K_p$ - and  $T_n$  adaptation has been set.

You can find additional information in the List Manual:


- Vector control with speed controller: Function diagram 6050

#### Droop

For mechanically coupled drives, there is the risk that the drives oppose one another: Small deviations in the speed setpoint or actual value of the coupled drives can mean that the drives are operated with significantly different torques.

The droop function ensures even torque distribution between several mechanically coupled drives.

The droop function reduces the speed setpoint as a function of the torque setpoint.

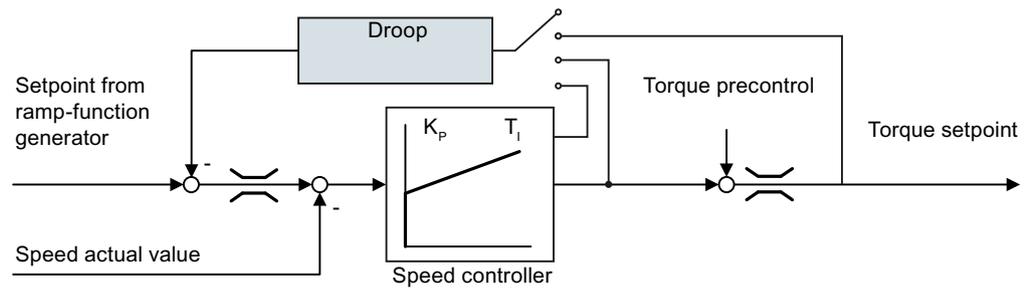

When droop is active, the ramp-function generators of all of the coupled drives must be set to have identical ramp-up and ramp-down times as well as rounding-off.

Parameter	Description	Setting
r1482	CO: Speed controller I torque output [Nm]	Display and connector output for the torque setpoint at the output of the I speed controller.
p1488[0...n]	Droop input source	Sets the source for droop feedback. 0: Droop feedback not connected (factory setting) 1: Droop from the torque setpoint 2: Droop from the speed control output 3: Droop from the integral output, speed controller
p1489[0...n]	Droop feedback scaling	Sets the scaling for the droop feedback A value of 0.05 means: At the rated motor torque, the converter reduces the speed by 5% of the rated motor speed. Factory setting: 0.05
r1490	CO: Droop feedback speed reduction [rpm]	Displays the output signal of the droop calculation.
p1492[0...n]	BI: Droop feedback enable	Enables the droop to be applied to the speed/velocity setpoint. Factory setting: 0

You can find additional information in the List Manual, function block diagram 6030.

### Special settings for a pulling load

For a pulling load, e.g. a hoisting gear, a permanent force is exerted on the motor, even when the motor is stationary.

If you use encoderless vector control with a pulling load, the following settings are required:

- Set the following parameters:

Parameter	Description	Setting
p1750[0...n]	Motor model configuration	Sets the configuration for the motor model. Bit 07 = 1: Use speed switchover limits that are less sensitive to external effects.
p1610[0...n]	Static torque setpoint (encoderless) [%]	Sets the static torque setpoint for sensorless vector control in the low speed range. Set a value which is higher than the maximum load torque that occurs. Factory setting: 50

- When opening the motor holding brake, enter a speed setpoint > 0.  
For speed setpoint = 0, and with the motor holding brake open, the load drops because the asynchronous motor rotates with the slip frequency as a result of the pulling load.
- Set the ramp-up and ramp-down times ≤ 10 s in the ramp-function generator.

#### 7.20.3.4 Optimizing the operation of the permanent magnet synchronous motor

##### Overview

An unfavorable parameter setting can lead to malfunctions or unwanted behavior of the motor during operation of the permanent magnet synchronous motor.

##### Description

Problem	Possible cause	Solution
The converter reports the F07807 fault (fault current, over-current or ground fault) during the standstill measurement of the motor identification or during the pole position identification.	The value of the rated motor voltage is too high.	<ol style="list-style-type: none"> <li>1. Check the motor wiring and insulation resistance.</li> <li>2. Start quick commissioning.</li> <li>3. Reduce the rated motor voltage p0304 by 5 V ... 10 V.</li> <li>4. Restart the standstill measurement of the motor identification or the pole position identification.</li> <li>5. If the converter reports the F07807 fault again, go back to step 2.</li> </ol>
The motor current increases significantly when operating at low speeds continually, despite no mechanical problems being present.	You are operating the motor continuously at a speed < p1755 or < 15 % of the rated speed.	Set p1080 > p1755.

Problem	Possible cause	Solution
The converter signals one of the following faults: <ul style="list-style-type: none"> <li>• F07967</li> <li>• F07969</li> </ul>	The motor has significant pole saliency.	Change the PolID technique: p1980 = 4 or p1980 = 10.
	The current is too high during pole position identification.	Decrease the value of p329 incrementally by 10 %.
The motor stalls or starts with difficulty.	The converter does not generate enough starting torque	Increase the value of p1610 or/and p1611 incrementally by 10 %.  Let the motor cool down before each start attempt.
	Motor is oversaturated.	Decrease p1610 and p1611 incrementally by 10 %.  Increase ramp-up time p1120.  Increase initial rounding time p1130.
The motor speed tends to oscillate.	The transition from open loop to closed loop phase during acceleration is not stable.	Increase p1755 incrementally by approx. 10 % until the motor accelerates smoothly and stably.
	The speed controller gain is too high.	Optimize the speed controller.
Motor overspeed	The speed overshoots after the motor accelerates.	Increase ramp-up time p1120 or final rounding time p1131.  Optimize the speed controller.

## Parameters


Number	Name	Factory setting
p0304[M]	Rated motor voltage	0 V
p0305[M]	Rated motor current	0 A
p0307[M]	Rated motor power	0 kW
p0310[M]	Rated motor frequency	0 Hz
p0311[M]	Rated motor speed	0 rpm
p0314[M]	Motor pole pair number	0
p0316[M]	Motor torque constant	0 Nm/A
p0329[M]	Motor pole position identification current	0 A
p1080[D]	Minimum speed	0 rpm
p1120[C]	Ramp-function generator ramp-up time	Dependent on rated power
p1131[C]	Ramp-function generator final rounding time	0 s
p1610[D]	Torque setpoint static (sensorless)	50 %
p1611[D]	Additional acceleration torque (sensorless)	30 %
p1755[D]	Motor model changeover speed sensorless operation	210000 rpm
p1980	PolID technique	4

### 7.20.3.5 Friction characteristic


#### Function

In many applications, e.g. applications with geared motors or belt conveyors, the friction torque of the load is not negligible.

The converter provides the possibility of precontrolling the torque setpoint, bypassing the speed controller with the friction torque. The precontrol reduces overshooting of the speed after speed changes.

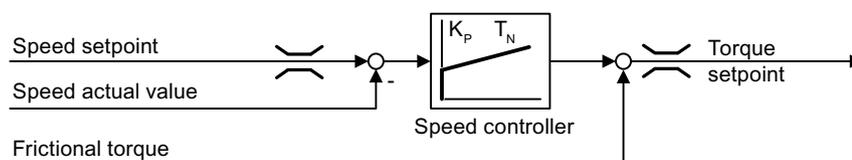

The converter calculates the current friction torque from a friction characteristic with 10 intermediate points.

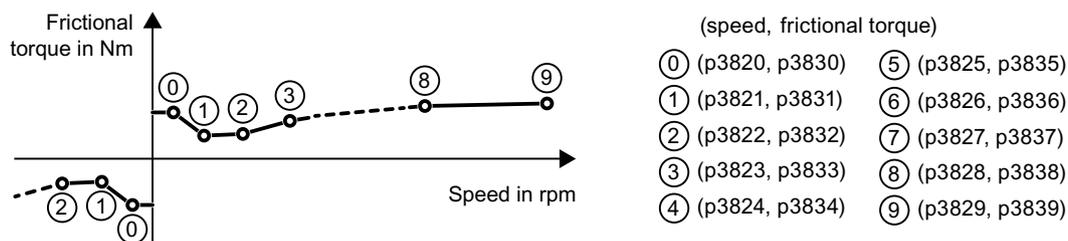

The intermediate points of the friction characteristic are defined for positive speeds. In the negative direction of rotation, the converter uses the intermediate points with a negative sign.

#### Recording a friction characteristic

After quick commissioning, the converter sets the speeds of the intermediate points to values suitable for the rated speed of the motor. The friction torque of all intermediate points is still equal to zero. On request, the converter records the friction characteristic: The converter accelerates the motor step by step up to the rated speed, measures the friction torque and writes the friction torque into the intermediate points of the friction characteristic.

#### Precondition

The motor is permitted to accelerate up to the rated speed without endangering persons or property.

**Procedure**

1. Set p3845 = 1: The converter accelerates the motor successively in both directions of rotation and averages the measurement results of the positive and negative directions.
2. Switch on the motor (ON/OFF1 = 1).
3. The converter accelerates the motor.  
During measurement, the converter signals the alarm A07961.  
When the converter has determined all the intermediate points of the friction characteristic without fault code F07963, the converter stops the motor.

You have recorded the friction characteristic.

**Adding friction characteristic for the torque setpoint**

If you enable the friction characteristic (p3842 = 1), the converter adds the output of the friction characteristic r3841 to the torque setpoint.

**Parameters**

Parameter	Description	Setting
p3820[0...n] ... p3839[0...n]	Intermediate points of the friction characteristic [rpm; Nm]	The friction characteristic is defined by 10 value pairs.
r3840.0...8	CO/BO: Friction characteristic status word	Display and BICO output for the status word of the friction characteristic. .00 1 signal: Friction characteristic OK .01 1 signal: Determination of the friction characteristic is active .02 1 signal: Determination of the friction characteristic is complete .03 1 signal: Determination of the friction characteristic has been aborted .08 1 signal: Friction characteristic positive direction
r3841	CO: Friction characteristic output [Nm]	Display and connector output for the torque of the friction characteristic dependent on the speed.
p3842	Friction characteristic activation	Setting to activate and deactivate the friction characteristic. 0: Friction characteristic deactivated (factory setting) 1: Friction characteristic activated


Parameter	Description	Setting
p3845	Friction characteristic record activation	Setting for the friction characteristic record. 0: Friction characteristic plot deactivated (factory setting) 1: Friction characteristic plot activated, both directions 2: Friction characteristic plot activated, positive direction 3: Friction characteristic plot activated, negative direction
p3846[0...n]	Friction characteristic record ramp-up/ramp-down time [s]	Sets the ramp-up/ramp-down time of the ramp-up/ramp-down function generator to automatically record the friction characteristic. Factory setting: 10
p3847[0...n]	Friction characteristic record warm-up time [s]	Sets the warm-up time. At the start of automatic plotting, the converter accelerates the motor up to the speed = p3829 and keeps the speed constant for this time. Factory setting: 0

Further information on this topic is provided in the List Manual.


### 7.20.3.6 Moment of inertia estimator

#### Background

From the load moment of inertia and the speed setpoint change, the converter calculates the accelerating torque required for the motor. Via the speed controller precontrol, the accelerating torque specifies the main percentage of the torque setpoint. The speed controller corrects inaccuracies in the precontrol (feed-forward control).

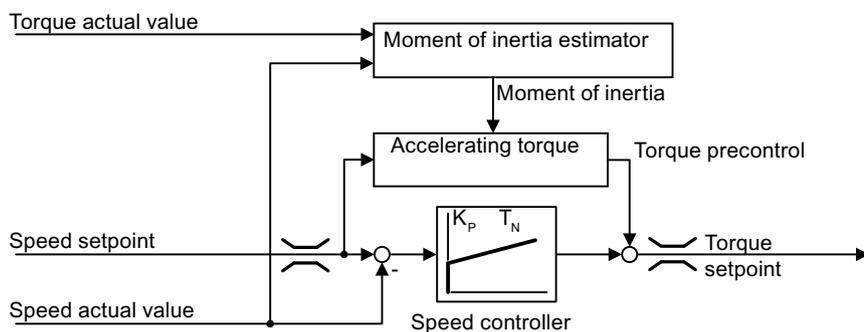


The more precise the value of the moment of inertia in the converter, the lower the overshoot after speed changes.

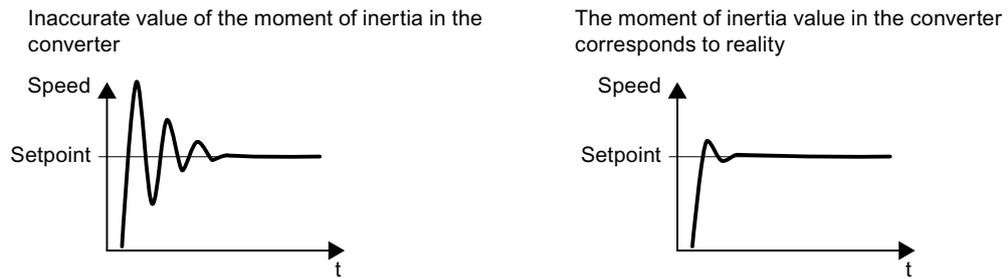

## Function


From the actual speed, the actual motor torque and the frictional torque of the load, the converter calculates the total moment of inertia of the load and motor.

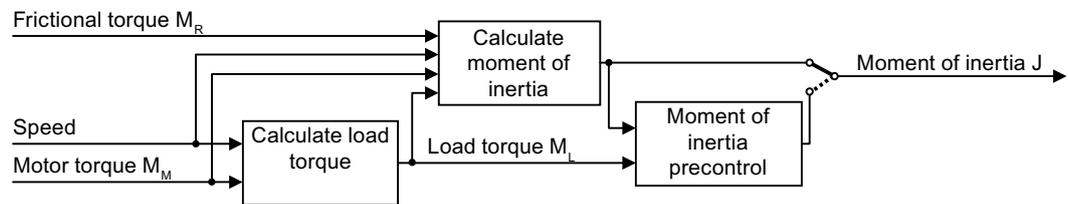

When using the moment of inertia estimator, we recommend that you also activate the friction characteristic.

 Friction characteristic (Page 306)

### How does the converter calculate the load torque?

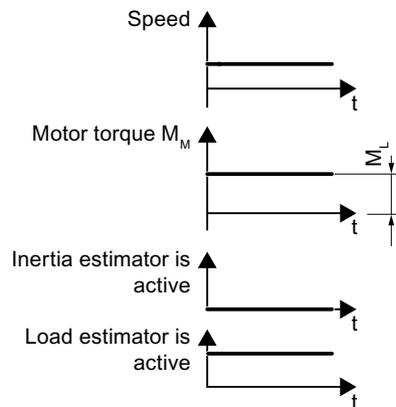


At low speeds, the converter calculates the load torque  $M_L$  from the actual motor torque.

The calculation takes place under the following conditions:

- Speed  $\geq p1226$
- Acceleration setpoint  $< 8 \text{ 1/s}^2$  ( $\Delta$  speed change 480 rpm per s)
- Acceleration  $\times$  moment of inertia (r1493)  $< 0.9 \times p1560$

### How does the converter calculate the moment of inertia?

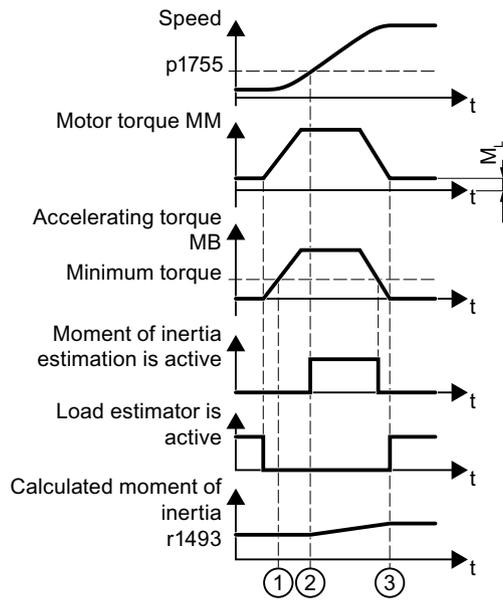

For higher speed changes, the converter initially calculates the accelerating torque  $M_B$  as difference between the motor torque  $M_M$ , load torque  $M_L$  and frictional torque  $M_R$ :

$$M_B = M_M - M_L - M_R$$

Moment of inertia  $J$  of the motor and load is obtained from the accelerating torque  $M_B$  and angular acceleration  $\alpha$  ( $\alpha$  = rate at which the speed changes):

$$J = M_B / \alpha$$


If all of the following conditions are met, the converter calculates the moment of inertia:

- ① The rated accelerating torque  $M_B$  must satisfy the following two conditions:
  - The sign of  $M_B$  is the same as the direction of the actual acceleration
  - $M_B > p1560 \times$  rated motor torque (r0333)
- ② speed  $> p1755$
- The converter has calculated the load torque in at least one direction of rotation.
- Acceleration setpoint  $> 8 \text{ 1/s}^2$  ( $\cong$  speed change 480 rpm per s)
- ③ The converter calculates the load torque again after acceleration.

#### Moment of inertia precontrol

In applications where the motor predominantly operates with a constant speed, the converter can only infrequently calculate the moment of inertia using the function described above. Moment of inertia precontrol is available for situations such as these. The moment of inertia precontrol assumes that there is an approximately linear relationship between the moment of inertia and the load torque.

Example: For a horizontal conveyor, in a first approximation, the moment of inertia depends on the load.

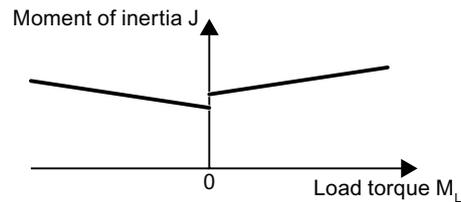

The relationship between load torque and torque is saved in the converter as linear characteristic.

- In a positive direction of rotation:  
Moment of inertia  $J = p5312 \times \text{load torque } M_L + p5313$
- In a negative direction of rotation:  
Moment of inertia  $J = p5314 \times \text{load torque } M_L + p5315$

You have the following options to determine the characteristic:

- You already know the characteristic from other measurements. In this case, you must set the parameters to known values when commissioning the system.
- The converter iteratively determines the characteristic by performing measurements while the motor is operational.

### Activating the moment of inertia estimator

The moment of inertia estimator is deactivated in the factory setting.  $p1400.18 = 0$ ,  $p1400.20 = 0$ ,  $p1400.22 = 0$ .

If you performed the rotating measurement for the motor identification during quick commissioning, we recommend leaving the moment of inertia estimator deactivated.

#### Preconditions

- You have selected encoderless vector control.
- The load torque must be constant whilst the motor accelerates or brakes.  
Typical of a constant load torque are conveyor applications and centrifuges, for example. Fan applications, for example, are not permitted.
- The speed setpoint is free from superimposed unwanted signals.
- The motor and load are connected to each other in a force-locked way.  
Drives with slip between the motor shaft and load are not permitted, e.g. as a result of loose or worn belts.

If the conditions are not met, you must not activate the moment of inertia estimator.

#### Procedure

1. Set  $p1400.18 = 1$
2. Check:  $p1496 \neq 0$
3. Activate the acceleration model of the speed controller pre-control:  $p1400.20 = 1$ .

You have activated the moment of inertia estimator.



## The most important settings

Parameter	Description	Setting
r0333[0...n]	Rated motor torque [Nm]	Displays the rated motor torque.
p0341[0...n]	Motor moment of inertia [kgm <sup>2</sup> ]	Sets the motor moment of inertia (without load). Note: The converter sets the parameter when selecting a listed motor. The parameter is then write-protected. Factory setting: 0
p0342[0...n]	Ratio between the total and motor moment of inertia	Sets the ratio of moment of inertia load + motor to moment of inertia of motor without load. Factory setting: 1
p1400[0...n]	Speed control configuration	Sets the configuration for the closed-loop speed control. .18 1 signal: Moment of inertia estimator active .20 1 signal: Acceleration model on .22 1 signal: Moment of inertia estimator retain value when motor switched off .24 1 signal: Shortened moment of inertia estimation is active. p1400.24 = 1 reduces the duration of the moment of inertia estimation. Disadvantage: If the accelerating torque is not constant while calculating the moment of inertia, the calculation of the moment of inertia using p1400.24 = 1 is less precise.
r1407.0...27	CO/BO: Status word speed controller	Display and BICO output for the status word of the speed controller. .24 1 signal: Moment of inertia estimator is active .25 1 signal: Load estimator is active .26 1 signal: Moment of inertia estimator is engaged .27 1 signal: Shortened moment of inertia estimation is active.
r1493	CO: Moment of inertia total, scaled [kgm <sup>2</sup> ]	Display and connector output for the parameterized total moment of inertia. $r1493 = (p0341 \times p0342) \times p1496$
p1496[0...n]	Acceleration precontrol scaling [%]	Sets the scaling for the acceleration precontrol of the speed/velocity controller. According to rotating measurement of the motor data identification is p1496 = 100%. Factory setting: 0

Parameter	Description	Setting
p1502[0...n]	BI: Freeze moment of inertia estimator	Sets the signal source to freeze the estimated moment of inertia. 0 signal: Moment of inertia estimator is active 1 signal: Determined moment of inertia is frozen If the load torque changes when accelerating the motor, set this signal to 0. Factory setting: 0
p1755[0...n]	Motor model changeover speed encoderless operation [rpm]	Defines the switchover between open-loop and closed-loop controlled operation of the encoderless vector control. When selecting the closed-loop speed control, the converter sets $p1755 = 13.3\% \times \text{rated speed}$ . Factory setting: 210000.00

### Advanced settings

Parameter	Description	Setting	
p1226[0...n]	Threshold for zero speed detection [rpm]	Sets the speed threshold for the standstill identification. The moment of inertia estimator only measures the load torque for speeds $\geq p1226$ . p1226 also defines from which speed the converter switches-off the motor for OFF1 and OFF3. Factory setting: 20	
p1560[0...n]	Moment of inertia estimator accelerating torque threshold value [%]	Sets the threshold for the accelerating torque for the moment of inertia estimator. Factory setting: 10	
p1561[0...n]	Change time for moment of inertia for moment of inertia estimator [ms]	Sets the change time for the moment of inertia for the moment of inertia estimator. Factory setting: 500	The lower that p1561 or p1562 is, the shorter the moment of inertia estimator measurements. The larger p1561 or p1562 is, the more accurate the results provided by the moment of inertia estimator.
p1562[0...n]	Change time for the load torque for moment of inertia estimator [ms]	Sets the change time for the load torque for the moment of inertia estimator. Factory setting: 10	
p1563[0...n]	Moment of inertia estimator load torque positive direction of rotation [Nm]	Display and connector output for the monitored load torque in the positive direction of rotation. Factory setting: 0	
p1564[0...n]	Moment of inertia estimator load torque negative direction of rotation [Nm]	Display and connector output for the monitored load torque in the negative direction of rotation. Factory setting: 0	

Parameter	Description	Setting	
p5310[0...n]	Moment of inertia precontrol configuration	Configuration of the moment of inertia precontrol when the moment of inertia estimator is active. .00 1 signal: Activates calculation of the characteristic (p5312 ... p5315) .01 1 signal: Activates moment of inertia precontrol <ul style="list-style-type: none"> <li>• p5310.00 = 0, p5310.01 = 0 Deactivating moment of inertia precontrol</li> <li>• p5310.00 = 1, p5310.01 = 0 Adapting the moment of inertia precontrol</li> <li>• p5310.00 = 0, p5310.01 = 1 Activating the moment of inertia precontrol. The characteristic of the moment of inertia precontrol remains unchanged.</li> <li>• p5310.00 = 1, p5310.01 = 1 Activating the moment of inertia precontrol. The converter adapts the characteristic in parallel.</li> </ul> Factory setting: 0000 bin	
r5311[0...n]	Moment of inertia precontrol status word	Displays the status word for the moment of inertia precontrol. .00 1 signal: New measuring points for the characteristic of the moment of inertia precontrol are available .01 1 signal: New parameters are been calculated .02 1 signal: Moment of inertia precontrol active .03 1 signal: The characteristic in the positive direction of rotation has been calculated and is ready .04 1 signal: The characteristic in the negative direction of rotation has been calculated and is ready .05 1 signal: The converter writes actual results to the parameter	
p5312[0...n]	Moment of inertia precontrol linear positive [ $1/s^2$ ]	Sets the linear coefficients for moment of inertia precontrol in the positive direction when the moment of inertia estimator is active. Factory setting: 0	In a positive direction of rotation: Moment of inertia = p5312 × load torque + p5313
p5313[0...n]	Moment of inertia precontrol constant positive [ $kgm^2$ ]	Sets of the constant coefficients for moment of inertia precontrol in the positive direction when the moment of inertia estimator is active. Factory setting: 0	

Parameter	Description	Setting	
p5314[0...n]	Moment of inertia precontrol linear negative [ $1/s^2$ ]	Sets the linear coefficients for moment of inertia precontrol in the negative direction when the moment of inertia estimator is active. Factory setting: 0	In a negative direction of rotation: Moment of inertia = p5314 × load torque + p5315
p5315[0...n]	Moment of inertia precontrol constant negative [ $kgm^2$ ]	Sets the constant coefficients for moment of inertia precontrol in the negative direction when the moment of inertia estimator is active. Factory setting: 0	

### 7.20.3.7 Pole position identification

#### Overview

The converter must know the pole position of the rotor in the motor in order to be able to control the torque and speed of a synchronous motor.

For encoderless motors, the converter determines the pole position of the motor via a measurement.


#### Precondition

The motor remains at a standstill.

#### Function description

The pole position of a synchronous motor is the deviation between the magnetic axis in the rotor and the magnetic axis in the stator.

The image below shows you the pole position of a synchronous motor in a simplified cross-section.

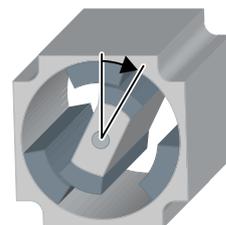

For permanent magnet synchronous motors, the following methods are possible for pole position identification:

- p1980 = 1: The most reliable and fastest, but also the loudest method  
During quick commissioning the converter sets p1980 = 1.
- p1980 = 4: Comparatively quiet method in two steps
- p1980 = 10: Comparatively slow method. This method is only possible if the motor can rotate freely during pole position identification.

If you are using a Siemens motor, then the converter automatically selects the appropriate technique to determine the pole position.

Each time the motor is switched on (ON/OFF1 command), the converter identifies the pole position.

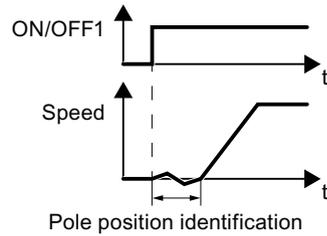


Figure 7-10 Pole position identification after switching on the motor


As a result of the pole position identification, the motor responds to an ON command with a delay of up to 1 second. The motor shaft can rotate slightly during the pole position identification.

## Parameters

Parameters	Description	Factory setting
p1980	<b>PolID technique</b>	4
r1992	CO/BO: PolID diagnostics	-
p1998[D]	PolID circle center point	0.0 [A]

## 7.20.4 Torque control

Torque control is part of the vector control and normally receives its setpoint from the speed controller output. By deactivating the speed controller and directly entering the torque setpoint, the closed-loop speed control becomes closed-loop torque control. The converter then no longer controls the motor speed, but the torque that the motor generates.

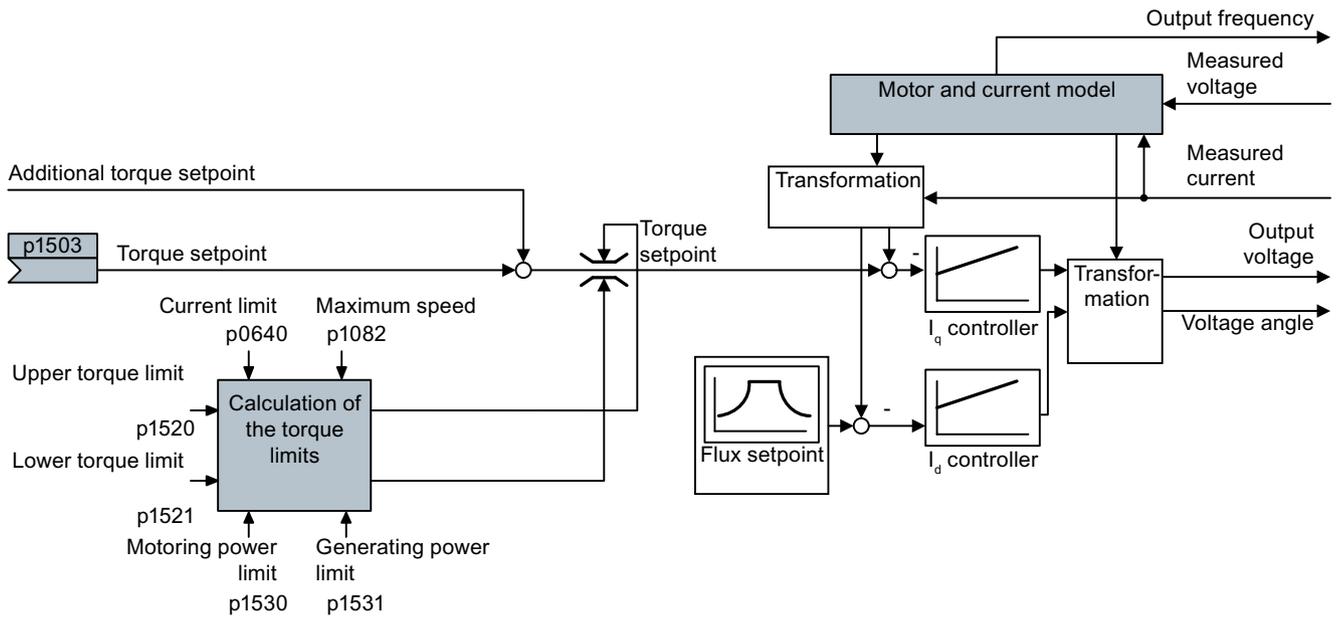

### Typical applications for torque control

The torque control is used in applications where the motor speed is specified by the connected driven load. Examples of such applications include:

- Load distribution between master and slave drives:  
The master drive is speed controlled, the slave drive is torque controlled.
- Winding machines

### The most important settings

Prerequisites for the correct functioning of the torque control:

- You have set the motor data correctly during the quick commissioning  
 Quick commissioning (Page 123)
- You have performed a motor data identification on the cold motor

Parameter	Description	Setting
p1300[0...n]	Open-loop/closed-loop control operating mode	Sets the open and closed-loop control mode of a drive. 0: U/f control with linear characteristic (factory setting) 22: Torque control without speed encoder
p0300[0...n] ... p0360[0...n]	Motor data	Motor data is transferred from the motor rating plate during quick commissioning and calculated with the motor data identification.
p1511[0...n]	Cl: Supplementary torque 1	Sets the signal source for supplementary torque 1. Factory setting: 0
p1520[0...n]	CO: Torque limit upper [Nm]	Sets the fixed upper torque limit. Factory setting: 0
p1521[0...n]	CO: Torque limit lower [Nm]	Sets the fixed lower torque limit. Factory setting: 0
p1530[0...n]	Motoring power limit [kW]	Sets the power limit when motoring. Factory setting: 0
p1531[0...n]	Regenerative power limit [kW]	Sets the regenerative power limit. Factory setting: -0.01

Additional information about this function is provided in the parameter list and in function diagrams 6030 onwards in the List Manual.

## 7.21 Electrically braking the motor

A differentiation is made between mechanically braking and electrically braking a motor:

- Mechanical brakes are generally motor holding brakes that are closed when the motor is at a standstill. Mechanical operating brakes, that are closed while the motor is rotating are subject to a high wear and are therefore often only used as an emergency brake. If your motor is equipped with a motor holding brake, then you should use the converter functions to control this motor holding brake, see Section Motor holding brake (Page 234).
- The motor is electrically braked by the converter. An electrical braking is completely wear-free. Generally, a motor is switched off at standstill in order to save energy and so that the motor temperature is not unnecessarily increased.

### Braking with the motor in generating mode



If the motor brakes the connected load electrically, it will convert the kinetic energy of the motor to electrical energy. The electrical energy  $E$  released on braking the load is proportional to the moment of inertia  $J$  of the motor and load and to the square of the speed  $n$ . The motor attempts to pass the energy on to the converter.

### 7.21.1 DC braking

DC braking is used for applications where the motor must be actively stopped; however, neither converter energy recovery nor a braking resistor is required for this function. DC braking is not possible with a permanent magnet synchronous motor.

Typical applications for DC braking include:

- Centrifuges
- Saws
- Grinding machines
- Conveyor belts

DC braking is not permissible in applications involving suspended loads, e.g. lifting equipment/cranes and vertical conveyors.

#### Function


NOTICE
<p><b>Motor overheating as a result of DC braking</b></p> <p>The motor will overheat if you use DC braking too frequently or use it for too long. This may damage the motor.</p> <ul style="list-style-type: none"> <li>• Monitor the motor temperature.</li> <li>• Allow the motor to adequately cool down between braking operations.</li> <li>• If necessary, select another motor braking method.</li> </ul>

With DC braking, the converter outputs an internal OFF2 command for the time that it takes to de-energize the motor p0347 - and then impresses the braking current for the duration of the DC braking.

The DC-braking function is possible only for asynchronous motors.

4 different events initiate DC braking:

#### DC braking when falling below a starting speed

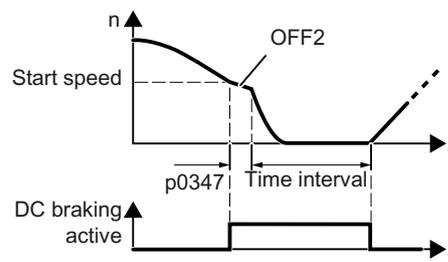


Requirement:

p1230 = 1 and p1231 = 14

Function:

1. The motor speed has fallen below the starting speed.
2. The converter activates the DC braking as soon as the motor speed falls below the starting speed.

**DC braking when a fault occurs**

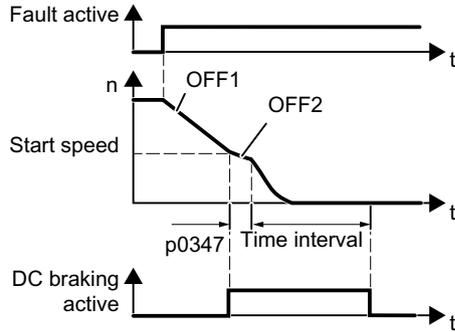


Requirement:

Fault number and fault response are assigned via p2100 and p2101.

Function:

1. A fault occurs, which initiates DC braking as response.
2. The motor brakes along the down ramp to the speed for the start of DC braking.
3. DC braking starts.

**DC braking initiated by a control command**

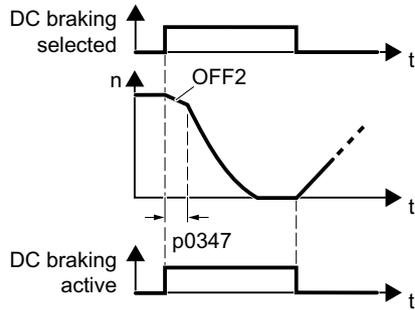

Requirement:


p1231 = 4 and p1230 = control command, e.g. p1230 = 722.3 (control command via DI 3)

Function:

1. The higher-level control issues the command for DC braking, e.g. using DI3: p1230 = 722.3.
2. DC braking starts.

If the higher-level control withdraws the command during DC braking, the converter interrupts DC braking and the motor accelerates to its setpoint.

**DC braking when the motor is switched off**

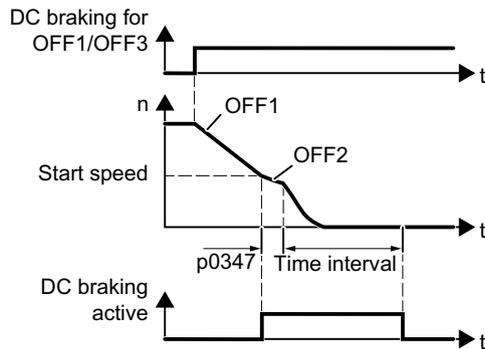

Requirement:

p1231 = 5 or p1230 = 1 and p1231 = 14

Function:

1. The higher-level control switches off the motor (OFF1 or OFF3).
2. The motor brakes along the down ramp to the speed for the start of DC braking.
3. DC braking starts.

## Parameters

## Settings for DC braking

Parameter	Description	Setting
p0347[0...n]	Motor de-excitation time [s]	Sets the de-magnetizing time (for asynchronous motors) after the converter pulses have been canceled (calculated after quick commissioning). The converter can trip due to an overcurrent during DC braking if the de-excitation time is too short. Factory setting: 0
p1230[0...n]	BI: DC braking activation	Sets the signal source to activate DC braking. 1 signal: DC braking activated. 0 signal: DC braking deactivated. Factory setting: 0
p1231[0...n]	Configuring DC braking	Sets to activate DC braking. 0: No DC braking (factory setting) 4: DC braking 5: DC braking for OFF1/OFF3 14: DC braking below starting speed
p1232[0...n]	DC braking, braking current [A]	Sets the braking current for DC braking. Factory setting: 0
p1233[0...n]	DC braking duration [s]	Sets the DC braking time (as fault response). Factory setting: 1
p1234[0...n]	Speed at the start of DC braking [rpm]	Sets the starting speed for DC braking. Factory setting: 210000
r1239[8...13]	CO/BO: DC braking status word	Status word of the DC braking. .08: DC braking active .10: DC braking ready .11: DC braking selected .12: DC braking selection internally locked .13: DC braking for OFF1/OFF3

**Configuring DC braking as a response to faults**

Parameter	Description	Setting
p2100[0...19]	Changing the fault reaction, fault number	Enter the fault number for which DC braking should be activated, e.g. p2100[3] = 7860 (external fault 1). Factory setting: 0
p2101[0...19]	Changing the fault reaction, reaction	Assign the fault response: p2101[3] = 6 (internal armature short-circuit / DC braking). The fault is assigned as an index of p2100. Assign the same index of p2100 or p2101 to the fault and fault response. The converter's List Manual lists in the "Faults and alarms" list the possible fault responses for every fault. Entry "DCBRK" means that you may set DC braking as response for this fault. Factory setting: 0


**7.21.2 Dynamic braking**

Typical applications for dynamic braking require continuous braking and acceleration operations or frequent changes of the motor direction of rotation:


- Horizontal conveyors
- Vertical and inclined conveyors
- Hoisting gear

## Principle of operation

The DC link voltage increases as soon as the motor supplies regenerative power to the converter when braking. Depending on the DC link voltage, the converter outputs the regenerative power to the integrated or optional braking resistor. The braking resistor converts the regenerative power into heat, therefore preventing DC link voltages  $> V_{dc\_max}$ .

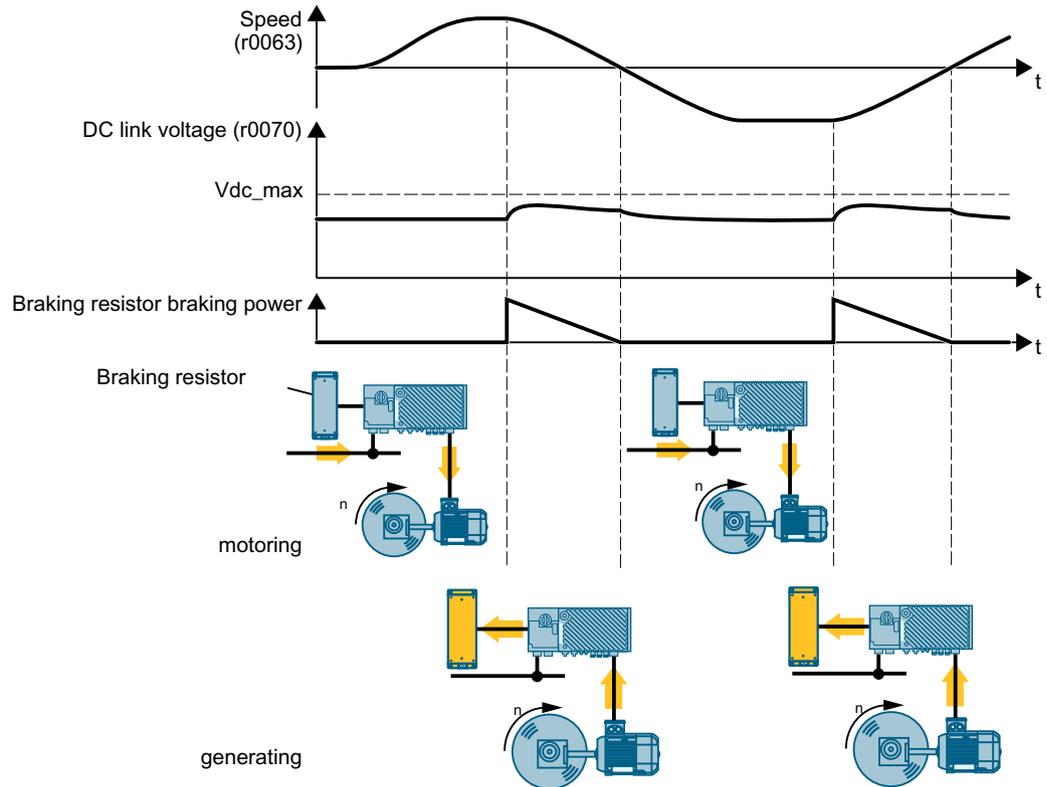

## Setting the dynamic braking

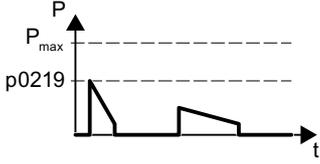Parameter	Description	Setting
p0219	Braking power of the braking resistor [kW]	<p>For p0219 &gt; 0, the converter deactivates the VDC_max controller. For vector control, p0219 defines the regenerative power limit p1531.</p>  <p>Using p0219, you define the maximum braking power that the braking resistor must absorb. For an excessively low braking power, the converter extends the motor ramp-down time. Factory setting: dependent upon the nominal power of the drive</p>
p0212.8	Power unit configuration	If necessary, reduce the activation threshold for the braking resistor.
p0210	Unit supply voltage [V]	Sets the drive supply voltage. Factory setting: 400

An application example for configuring a drive with braking resistor is provided in the Internet:

 Engineering and commissioning series lifting equipment/cranes (<https://support.industry.siemens.com/cs/ww/en/view/103156155>)

## 7.22 Overcurrent protection

### Overview



The U/f control prevents too high a motor current by influencing the output frequency and the motor voltage (I\_max controller).

### Requirement

You have selected U/f control.

The application must allow the motor torque to decrease at a lower speed.

### Function description

The I\_max controller influences the output frequency and the motor voltage.

If the motor current reaches the current limit during acceleration, the I\_max controller extends the acceleration operation.

If the motor load is so high during steady-state operation that the motor current reaches the current limit, then the I\_max controller reduces the speed and the motor voltage until the motor current returns to the permissible range again.

If the motor current reaches the current limit during deceleration, the I\_max controller extends the deceleration operation.

## Parameters

The factory setting for proportional gain and the integral time of the I\_max controller ensures faultless operation in the vast majority of cases.

The factory setting of the I\_max controller must only be changed in the following exceptional cases:

- Speed or torque of the motor tend to cause vibrations upon reaching the current limit.
- The converter goes into the fault state with an overcurrent message.

Parameter	Description	Setting
r0056.0 ... 15	CO/BO: Status word, closed-loop control	Display and BICO output for the status word of the closed-loop control.
p0305[0...n]	Rated motor current [A]	Sets the rated motor current. Factory setting: 0
p0640[0...n]	Current limit [A]	Sets the current limit.
p1340[0...n]	I_max frequency controller proportional gain	Sets the proportional gain of the I_max frequency controller. Factory setting: 0
p1341[D]	I_max frequency controller integral time [s]	Sets the integral time for the I_max frequency controller. Factory setting: 0.3
r1343	CO: I_max controller frequency output [rpm]	Displays the effective frequency limit.

You will find more information about this function in function diagram 6300 and in the parameter list.

## 7.23 Converter protection using temperature monitoring

### Overview



The converter temperature is essentially defined by the following effects:

- The ambient temperature
- The ohmic losses increasing with the output current
- Switching losses increasing with the pulse frequency

### Monitoring types

The converter monitors its temperature using the following monitoring types:

- I<sup>2</sup>t monitoring (alarm A07805, fault F30005)
- Measuring the chip temperature of the converter (alarm A05006, fault F30024)
- Measuring the heat sink temperature of the converter (alarm A05000, fault F30004)

### Function description

#### Overload response for p0290 = 0

The converter responds depending on the control mode that has been set:

- In vector control, the converter reduces the output current.
- In U/f control, the converter reduces the speed.

Once the overload condition has been removed, the converter re-enables the output current or speed.

If the measure cannot prevent a converter thermal overload, then the converter switches off the motor with fault F30024.

#### Overload response for p0290 = 1


The converter immediately switches off the motor with fault F30024.

#### Overload response for p0290 = 2

We recommend this setting for drives with square-law torque characteristic, e.g. fans.

The converter responds in 2 stages:

1. If you operate the converter with increased pulse frequency setpoint p1800, then the converter reduces its pulse frequency starting at p1800. In spite of the temporarily reduced pulse frequency, the base-load output current remains unchanged at the value that is assigned to parameter p1800.

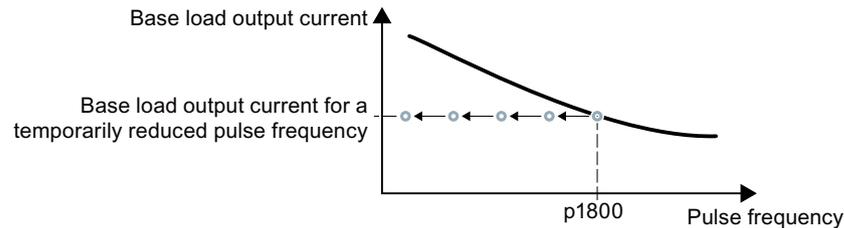

Once the overload condition has been removed, the converter increases the pulse frequency back to the pulse frequency setpoint p1800.

2. If it is not possible to temporarily reduce the pulse frequency, or the risk of thermal overload cannot be prevented, then stage 2 follows:
  - In vector control, the converter reduces its output current.
  - In U/f control, the converter reduces the speed.

Once the overload condition has been removed, the converter re-enables the output current or speed.

If both measures cannot prevent a power unit thermal overload, then the converter switches off the motor with fault F30024.

### Overload response for p0290 = 3

If you operate the converter with increased pulse frequency, then the converter reduces its pulse frequency starting at the pulse frequency setpoint p1800.

In spite of the temporarily reduced pulse frequency, the maximum output current remains unchanged at the value that is assigned to the pulse frequency setpoint. Also see p0290 = 2.

Once the overload condition has been removed, the converter increases the pulse frequency back to the pulse frequency setpoint p1800.

If it is not possible to temporarily reduce the pulse frequency, or the measure cannot prevent a power unit thermal overload, then the converter switches off the motor with fault F30024.

**Overload response for p0290 = 12**

The converter responds in 2 stages:

1. If you operate the converter with increased pulse frequency setpoint p1800, then the converter reduces its pulse frequency starting at p1800.  
There is no current derating as a result of the higher pulse frequency setpoint.  
Once the overload condition has been removed, the converter increases the pulse frequency back to the pulse frequency setpoint p1800.
2. If it is not possible to temporarily reduce the pulse frequency, or the risk of converter thermal overload cannot be prevented, then stage 2 follows:
  - In vector control, the converter reduces the output current.
  - In U/f control, the converter reduces the speed.
 Once the overload condition has been removed, the converter re-enables the output current or speed.

If both measures cannot prevent a power unit thermal overload, then the converter switches off the motor with fault F30024.

**Overload response for p0290 = 13**

We recommend this setting for drives with a high starting torque.

If you operate the converter with increased pulse frequency, then the converter reduces its pulse frequency starting at the pulse frequency setpoint p1800.

There is no current derating as a result of the higher pulse frequency setpoint.

Once the overload condition has been removed, the converter increases the pulse frequency back to the pulse frequency setpoint p1800.

If it is not possible to temporarily reduce the pulse frequency, or the measure cannot prevent a power unit thermal overload, then the converter switches off the motor with fault F30024.

**Parameters**

Parameter	Description	Setting
r0036	CO: Power unit overload I <sup>2</sup> t [%]	Displays the power unit overload determined using the I <sup>2</sup> t calculation. The I <sup>2</sup> t monitoring calculates the converter utilization based on a current reference value defined in the factory. <ul style="list-style-type: none"> <li>• Actual current &gt; reference value: r0036 becomes higher.</li> <li>• Actual current &lt; reference value: r0036 becomes lower or remains = 0.</li> </ul>
r0037[0...19]	Power unit temperatures [°C]	Display and connector output for the temperature in the power unit.
p0290	Power unit overload response	Sets the response to a thermal overload condition of the power unit. The details are described above. Factory setting: 13

Parameter	Description	Setting
p0292[0...1]	Power unit temperature alarm threshold [°C]	Sets the alarm threshold for power unit overtemperature. The value is set as a difference to the tripping (shutdown) temperature. Factory setting: [0] Overtemperature heat sink: 5 [1] Temperature rise power semiconductor (chip): 15
p0294	Power unit alarm for I <sup>2</sup> t overload [%]	Sets the alarm threshold for the I <sup>2</sup> t power unit overload. Factory setting: 95


## 7.24 Motor temperature monitoring using a temperature sensor



You can use one of the following sensors to protect the motor against overtemperature:

- Temperature switch (e. g. bi-metal switch)
- PTC sensor
- KTY 84 sensor
- Pt1000 sensor

Connect the motor's temperature sensor through the motor output cable on the converter. For more information about motor interface, see Interface description - X2 (Page 83).

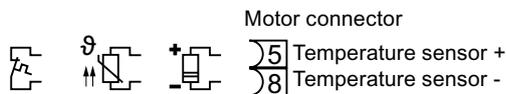

### KTY84 sensor

#### NOTICE

#### Overheating of the motor due to KTY sensor connected with the incorrect polarity

If a KTY sensor is connected with incorrect polarity, the motor can become damaged due to overheating, as the converter cannot detect a motor overtemperature condition.

- Connect the KTY sensor with the correct polarity.



Using a KTY sensor, the converter monitors the motor temperature and the sensor itself for wire-break or short-circuit:

- Temperature monitoring:  
The converter uses a KTY sensor to evaluate the motor temperature in the range from  $-48^{\circ}\text{C}$  ...  $+248^{\circ}\text{C}$ .  
Use the p0604 or p0605 parameter to set the temperature for the alarm and fault threshold.
  - Overtemperature alarm (A07910):  
- motor temperature  $>$  p0604 and p0610 = 0
  - Overtemperature fault (F07011):  
The converter responds with a fault in the following cases:  
- motor temperature  $>$  p0605  
- motor temperature  $>$  p0604 and p0610  $\neq$  0
- Sensor monitoring (A07015 or F07016):
  - Wire-break:  
The converter interprets a resistance  $>$   $2120\ \Omega$  as a wire-break and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.
  - Short-circuit:  
The converter interprets a resistance  $<$   $50\ \Omega$  as a short-circuit and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.

### Temperature switch



The converter interprets a resistance  $\geq 100\ \Omega$  as being an opened temperature switch and responds according to the setting for p0610.

### PTC sensor



The converter interprets a resistance  $>$   $1650\ \Omega$  as being an overtemperature and responds according to the setting for p0610.

The converter interprets a resistance  $<$   $20\ \Omega$  as being a short-circuit and responds with alarm A07015. If the alarm is present for longer than 100 milliseconds, the converter shuts down with fault F07016.

**Pt1000 sensor**

Using a Pt1000 sensor, the converter monitors the motor temperature and the sensor itself for wire breakage and/or short-circuit:

- Temperature monitoring:  
Using a Pt1000 sensor, the converter evaluates the motor temperature in the range from -48 °C ... +248 °C.  
You set the temperature for the alarm and fault thresholds using parameters p0604 and p0605.
  - Overtemperature alarm (A07910):  
- motor temperature > p0604 and p0610 = 0
  - Overtemperature fault (F07011):  
The converter responds with a fault in the following cases:  
- motor temperature > p0605  
- motor temperature > p0604 and p0610 ≠ 0
- Sensor monitoring (A07015 or F07016):
  - Wire-break:  
The converter interprets a resistance > 2120 Ω as a wire-break and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.
  - Short-circuit:  
The converter interprets a resistance < 603 Ω as a short-circuit and outputs the alarm A07015. After 100 milliseconds, the converter changes to the fault state with F07016.

**Setting parameters for the temperature monitoring**

Parameter	Description	Setting
p0335[0...n]	Motor-cooling method	Sets the motor cooling system used. 0: Natural cooling - with fan on the motor shaft (factory setting) 1: Forced ventilation - with a separately driven fan 2: Liquid cooling 128: No fan
p0601[0...n]	Motor temperature sensor type	Sets the sensor type for the motor temperature monitoring. 0: No sensor (factory setting) 1: PTC 2: KTY84 4: Temperature switch 6: Pt1000
p0604[0...n]	Mot_temp_mod 2/KTY alarm threshold [°C]	Sets the alarm threshold for monitoring the motor temperature of motor temperature model 2 or KTY/Pt1000. Factory setting: 130
p0605[0...n]	Mot_temp_mod 1/2/sensor threshold and temperature value [°C]	Sets the threshold and temperature value to monitor the motor temperature. Factory setting: 145

Parameter	Description	Setting
p0610[0...n]	Motor overtemperature response	Sets the system response when the motor temperature reaches the alarm threshold. 0: A07012, not reducing the current limit. 1: A07012 and F07011, reducing the current limit. 2: A07012 and F07011, not reducing the current limit. 12: A07012 and F07011, not reducing the current limit. (factory setting) Note: After setting p0610 = 12 and switching off the supply voltage, the converter saves the most recently calculated difference to the ambient air temperature. After switching the supply voltage on again, the thermal motor model starts with 90 % of the previously saved difference temperature.
p0640[0...n]	Current limit [A]	Sets the current limit. Factory setting: 0

Additional information on the motor temperature monitoring can be found in function diagram 8016 of the List Manual.

## 7.25 Motor protection by calculating the temperature

### Overview



The converter calculates the motor temperature based on a thermal motor model.


The thermal motor model responds far faster to temperature increases than a temperature sensor.

If the thermal motor model is used together with a temperature sensor, e.g. a Pt1000, then the converter corrects the model according to the measured temperature.

### Function description

#### Thermal motor model 2 for asynchronous motors

The thermal motor model 2 for asynchronous motors is a thermal 3-mass model, consisting of stator core, stator winding and rotor. Thermal motor model 2 calculates the temperatures - both in the rotor as well as in the stator winding.

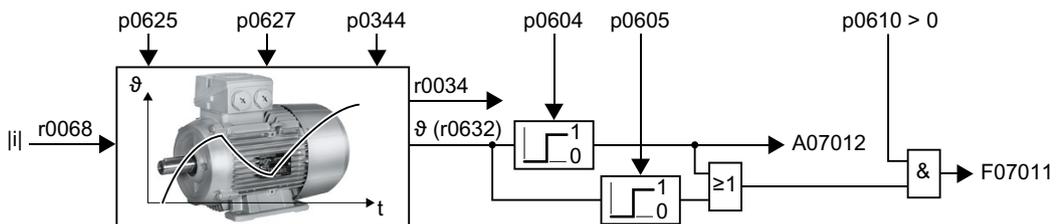

**Note****No thermal motor model for permanent magnet synchronous motor**

Protect the permanent magnet synchronous motor against overtemperature by evaluating a temperature sensor of the motor in the converter.

**Parameters**

Parameter	Description	Setting	
r0034	CO: Thermal motor load [%]	Display and connector output for the motor utilization from motor temperature model 1 ( $I^2t$ ).	
r0068[0...1]	CO: Absolute actual current value [A]	Displays actual absolute current. [0] Unsmoothed [1] Smoothed with p0045	
p0344[0...n]	Motor weight (for thermal motor model) [kg]	Sets the motor weight. Factory setting: 0 kg	After selecting an asynchronous motor (p0300) or a listed asynchronous motor (p0301) during the commissioning, the converter sets the parameters to values appropriate for the motor.  The parameters are write-protected for listed motors (p0301 $\geq$ 0).
p0604[0...n]	Mot_temp_mod 2/KTY alarm threshold [°C]	Sets the alarm threshold for monitoring the motor temperature of motor temperature model 2 or KTY/Pt1000. Factory setting: 130	
p0605[0...n]	Mot_temp_mod 1/2/sensor threshold and temperature value [°C]	Sets the threshold and temperature value to monitor the motor temperature. Factory setting: 145	
p0612[0...n]	Motor temperature model activation	Activates the motor temperature model. .01 1 signal: Activate motor temperature model 2 for asynchronous motors .09 1 signal: Activate motor temperature model 2 expansions	
p0627[0...n]	Motor overtemperature, stator winding [K]	Defines the rated overtemperature of the stator winding referred to the ambient temperature. Factory setting: 80	

Parameter	Description	Setting
p0610[0...n]	Motor overtemperature response	Sets the system response when the motor temperature reaches the alarm threshold. 0: A07012, not reducing the current limit. 1: A07012 and F07011, reducing the current limit. 2: A07012 and F07011, not reducing the current limit. 12: A07012 and F07011, not reducing the current limit. (factory setting) Note: After setting p0610 = 12 and switching off the supply voltage, the converter saves the most recently calculated difference to the ambient air temperature. After switching the supply voltage on again, the thermal motor model starts with 90 % of the previously saved difference temperature.
p0625[0...n]	Motor ambient temperature during commissioning [°C]	Defines the ambient temperature of the motor for calculating the motor temperature model. Factory setting: 20
r0632[0...n]	Mot_temp_mod stator winding temperature [°C]	Displays the stator winding temperature of the motor temperature model.
p0640[0...n]	Current limit [A]	Sets the current limit. Factory setting: 0

## 7.26 Motor and converter protection by limiting the voltage


### What causes an excessively high voltage?



To drive the load, an electric motor converts electrical energy into mechanical energy. If the motor is driven by its load, e.g. due to the load moment of inertia when braking, then the energy flow reverses: The motor temporarily operates as generator, and converts mechanical energy into electrical energy. The electrical energy flows from the motor to the converter. If the converter cannot output the electrical energy supplied by the motor, e.g. to a braking resistor, then the converter stores the energy in its DC link capacitance. As a consequence, the DC link voltage  $V_{dc}$  in the converter is higher.

An excessively high DC link voltage damages the converter and also the motor. As a consequence, the converter monitors its DC link voltage - and when necessary switches off the motor and outputs fault "DC link overvoltage".

## Protecting the motor and converter against overvoltage

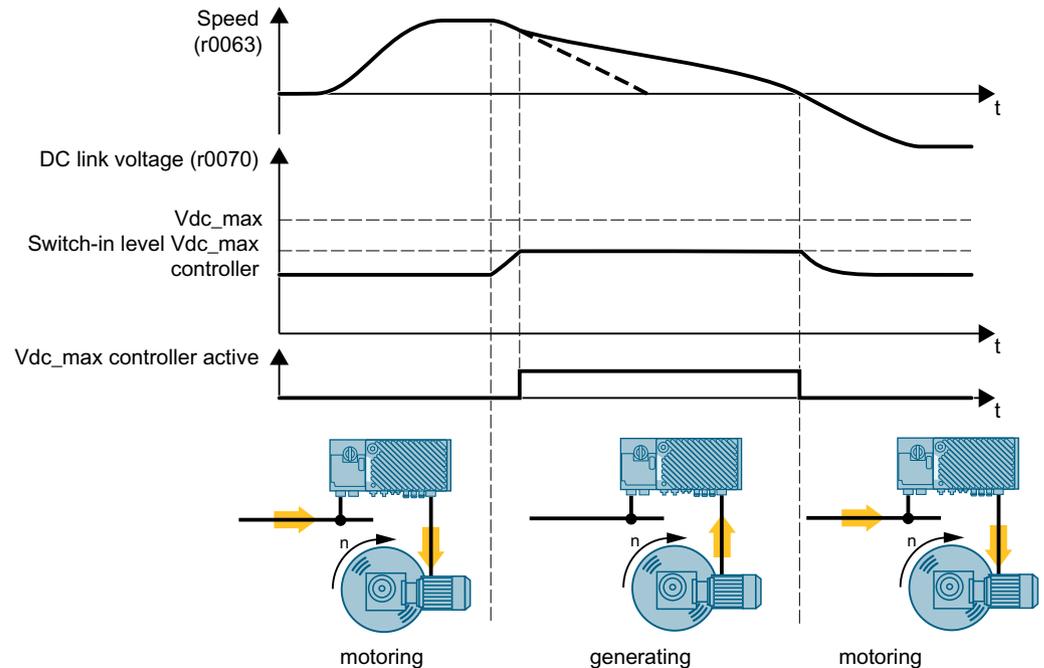

The Vdc\_max control extends the motor ramp-down time when braking. The motor then only feeds so much energy into the converter to cover the losses in the converter. The DC link voltage remains in the permissible range.

The Vdc\_max control is not suitable for applications where the motor is in continuous regenerative operation, e.g. as is the case for cranes and centrifuges.

 Electrically braking the motor (Page 318)

### Parameters for Vdc\_max control

The parameters differ depending on the motor control mode.

Parameter for U/f control	Parameter for vector control	Description	Setting
p1280 = 1	p1240 = 1	VDC controller configuration	0: VDC controller is disabled (factory setting) 1: VDC controller is enabled
r1282	r1242	Vdc_max control switch-on level [V]	DC-link voltage value above which the Vdc_max control is activated.
p1283	p1243	Vdc_max control dynamic factor [%]	Scaling closed-loop control parameters p1290, p1291 and p1292. Factory setting: 100

Parameter for U/f control	Parameter for vector control	Description	Setting
p1294	p1254	Vdc_max control automatic ON level sensing	0: Automatic detection disabled 1: Automatic detection enabled Factory setting: dependent upon the converter
p0210	p0210	Unit supply voltage [V]	If p1254 or p1294 = 0, the converter uses this parameter to calculate the switch-in thresholds of the Vdc_max control. Set this parameter to the actual value of the input voltage.

For more information about this function, see the List Manual (function diagrams 6320 and 6220).

 Overview of the manuals (Page 610)

## 7.27 Monitoring the driven load



In many applications, the speed and the torque of the motor can be used to determine whether the driven load is in an impermissible operating state. The use of an appropriate monitoring function in the converter prevents failures and damage to the machine or plant.

Examples:

- For fans or conveyor belts, an excessively low torque can mean a broken drive belt.
- For pumps, insufficient torque can indicate a leakage or dry-running.
- For extruders and mixers, an excessive torque together with low speed can indicate machine blockage.

### 7.27.1 No-load monitoring



An insufficient motor current indicates that the motor cable is disconnected.

If the motor current for the time p2180 lies below the current level p2179, the converter signals the alarm A07929.

#### Parameters

Parameter	Description	Setting
r0068[0...1]	CO: Absolute actual current value [A]	Displays actual absolute current. [0] Unsmoothed [1] Smoothed with p0045
p2179[0...n]	Output load detection current limit [A]	Sets the current limit for output load identification. Factory setting: 0

Parameter	Description	Setting
p2180[0...n]	Output load detection delay time [ms]	Sets the delay time for the message "output load not available" (r2197.11 = 1). Factory setting: 2000
r2197.11	CO/BO: Status word monitoring functions 1	Display and BICO output for the first status word of the monitoring functions. Bit 11: Output load not available



## 7.27.2 Rotation monitoring



The converter monitors the speed or velocity of a machine component via an electromechanical or electronic encoder, e.g. a proximity switch. Examples of how the function can be used:

- Gearbox monitoring for traction drives and hoisting gear
- Drive belt monitoring for fans and conveyor belts
- Blocking protection for pumps and conveyor belts

The converter checks whether the encoder consistently supplies a 24 V signal during motor operation. If the encoder signal fails for time p2192, the converter signals fault F07936.

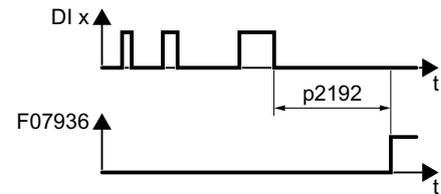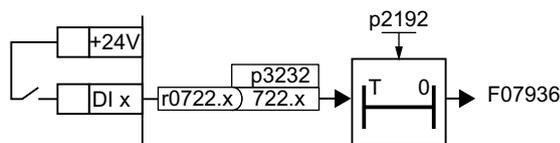


## Parameters

Parameter	Description	Setting
r0722.0...25	CO/BO: CU digital inputs status	Displays the status of the digital inputs.
p2192[0...n]	Load monitoring delay time [s]	Sets the delay time to evaluate the load monitoring. Factory setting: 10
p2193[0...n]	Load monitoring configuration	Sets the load monitoring configuration: 0: Monitoring switched off 1: Monitoring torque and load drop (factory setting) 2: Monitoring speed and load drop 3: Load failure monitoring
p3232[0...n]	BI: Load monitoring, failure detection	Sets the signal source for detecting a failure. Factory setting: 1

For more information, see the List Manual (the parameter list and function diagram 8013).


### 7.27.3 Torque monitoring

#### Function description

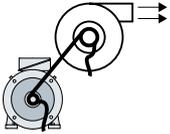

In applications with fans, pumps or compressors with the flow characteristic, the torque follows the speed according to a specific characteristic. An insufficient torque for fans indicates that the power transmission from the motor to the load is interrupted. For pumps, insufficient torque can indicate a leakage or dry-running.

The converter monitors the torque based on the envelope curve depending on the speed against a lower and upper torque.

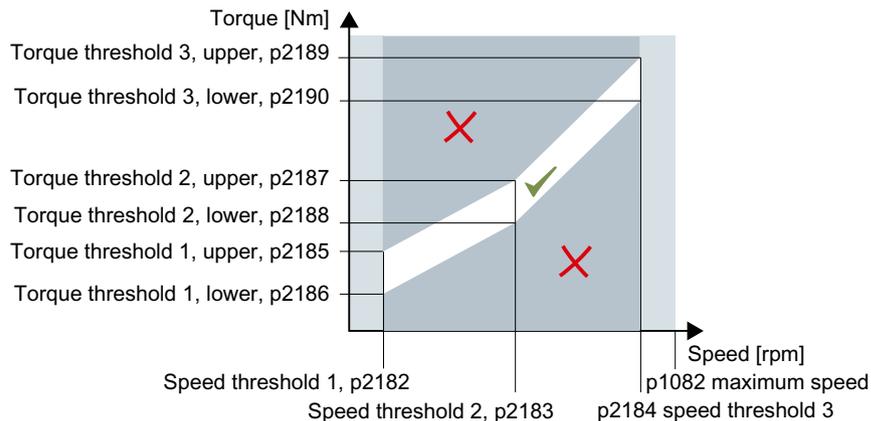

If the torque lies in the impermissible range longer than time p2192, the converter reacts as specified in p2181.

The monitoring is not active below speed threshold 1 and above speed threshold 3.

#### Setting monitoring

1. Operate the drive at three different speeds in succession.
2. Set the speed thresholds p2182 ... p2184 to the respective values.
3. Set the torque thresholds for each speed.  
The converter displays the current torque in r0031.
4. Set p2193 = 1.

You have now set monitoring.




## Parameters

Parameters	Description	Setting	
r0031	Torque actual value, smoothed [Nm]	Displays the smoothed torque actual value.	
p2181[0...n]	Load monitoring response	Sets the response when evaluating the load monitoring. 0: Load monitoring disabled (factory setting) 1: A07920 for torque too low 2: A07921 for torque too high 3: A07922 for torque outside tolerance 4: F07923 for torque too low 5: F07924 for torque too high 6: F07925 for torque outside tolerance	
p2182[0...n]	Load monitoring speed threshold 1 [rpm]	Sets the speed/torque envelope curve for load monitoring.	Factory setting: 150
p2183[0...n]	Load monitoring speed threshold 2 [rpm]		Factory setting: 900
p2184[0...n]	Load monitoring speed threshold 3 [rpm]		Factory setting: 1500
p2185[0...n]	Load monitoring torque threshold 1, upper [Nm]		Factory setting: 10000000
p2186[0...n]	Load monitoring torque threshold 1, lower [Nm]		Factory setting: 0
p2187[0...n]	Load monitoring torque threshold 2, upper [Nm]		Factory setting: 10000000
p2188[0...n]	Load monitoring torque threshold 2, lower [Nm]		Factory setting: 0
p2189[0...n]	Load monitoring torque threshold 3, upper [Nm]		Factory setting: 10000000
p2190[0...n]	Load monitoring torque threshold 3, lower [Nm]		Factory setting: 0
p2191[0...n]	Load monitoring torque threshold, no load [Nm]		Sets the torque threshold to identify dry running operation for pumps or belt breakage for fans. Factory setting: 0
p2192[0...n]	Load monitoring delay time [s]	Sets the delay time to evaluate the load monitoring. Factory setting: 10	
p2193[0...n]	Load monitoring configuration	Sets the load monitoring configuration: 0: Monitoring switched off 1: Monitoring torque and load drop (factory setting) 2: Monitoring speed and load drop 3: Load failure monitoring	


## 7.27.4 Blocking protection, leakage protection and dry-running protection

### Overview

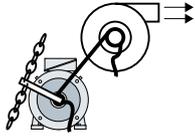

In applications with fans, pumps or compressors with the flow characteristic, the torque follows the speed according to a specific characteristic. An insufficient torque for fans indicates that the power transmission from the motor to the load is interrupted. For pumps, insufficient torque can indicate a leakage or dry-running.

### Function description

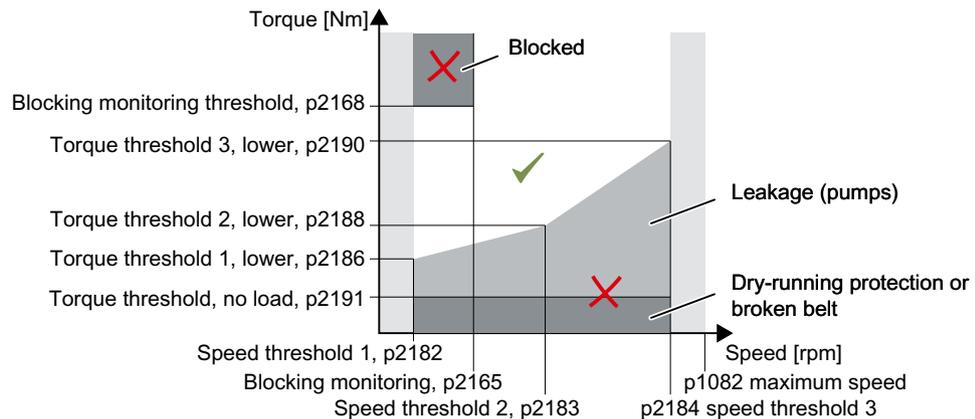

If the torque and speed lie in the impermissible range longer than time p2192, the converter reacts as specified in p2181.

For applications with pumps, the converter detects the following states of the driven load:

- Blocked
- Leakage
- Dry running

For applications with fans or compressors, the converter detects the following states of the driven load:

- Blocked
- Torn belt


The monitoring is not active below speed threshold 1 and above speed threshold 3.

When using the control mode "U/f control" ( $p1300 < 10$ ), the "Blocking protection" function becomes active when the current limit is reached.

 No-load monitoring (Page 336)

### Setting pump monitoring

1. Set p2193 = 4.
2. The converter sets the monitoring as shown.

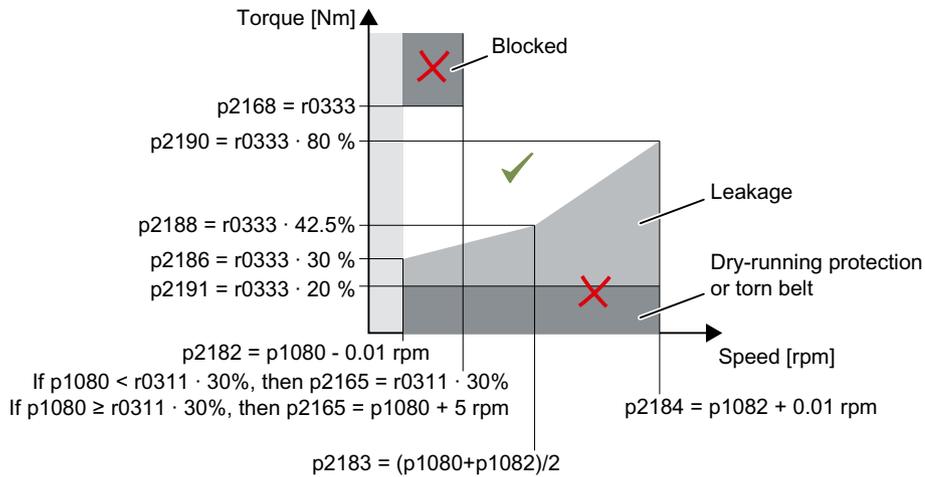


3. The converter sets monitoring response p2181 = 7
4. If necessary, adjust the speed thresholds p2182 ... p2184.
5. If necessary, adjust the torque threshold for each speed.  
The converter displays the current torque in r0031.

You have now set monitoring.



### Setting fan and compressor monitoring

1. Set p2193 = 5.
2. The converter sets the monitoring as shown.

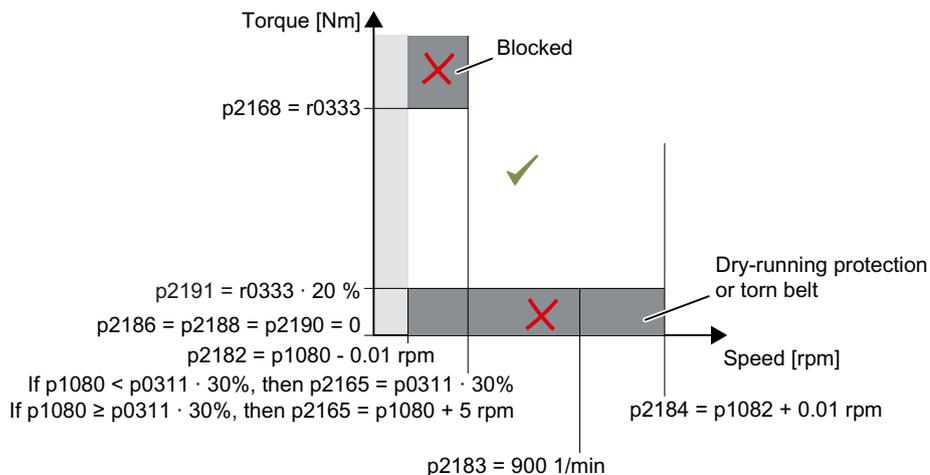

3. The converter sets monitoring response p2181 = 7
4. If necessary, adjust the speed thresholds p2182 ... p2184.
5. Set the torque threshold for each speed.  
The converter displays the current torque in r0031.

You have now set monitoring.



## Parameters

Parameters	Description	Setting
r0031	Torque actual value, smoothed [Nm]	Displays the smoothed torque actual value.
p0311[0...n]	Rated motor speed [rpm]	Sets the rated motor speed. Factory setting: 0
r0333[0...n]	Rated motor torque [Nm]	Displays the rated motor torque.
p1080[0...n]	Minimum speed [rpm]	Sets the lowest possible motor speed. Factory setting: 0
p1082[0...n]	Maximum speed [rpm]	Sets the highest possible speed. Factory setting: 1500
p1300[0...n]	Open-loop/closed-loop control operating mode	Sets the open and closed-loop control mode. 0: U/f control with linear characteristic (factory setting) 1: U/f control with linear characteristic and FCC 2: U/f control with parabolic characteristic 3: U/f control with parameterizable characteristic 4: U/f control with linear characteristic and ECO 5: U/f control for drives requiring a precise frequency (e.g. textiles) 6: U/f control for drives requiring a precise frequency and FCC 7: U/f control for a parabolic characteristic and ECO 19: U/f control with independent voltage setpoint 20: Speed control (encoderless) 22: Torque control (encoderless)
p2165[0...n]	Load monitoring blocking monitoring threshold, upper [rpm]	Sets the upper speed threshold of the stall monitoring of the pump or fan. Factory setting: 0
p2168[0...n]	Load monitoring blocking monitoring torque threshold [Nm]	Sets the torque threshold of the stall monitoring of the pump or fan. Factory setting: 1000000
p2181[0...n]	Load monitoring response	Sets the response when evaluating the load monitoring. 0: Load monitoring disabled (factory setting) 7: Pump/fan load monitoring as alarm (A07891, A07892, A07893) 8: Pump/fan load monitoring as fault (F07894, F07895, F07896)

Parameters	Description	Setting	
p2182[0...n]	Load monitoring speed threshold 1 [rpm]	Sets the speed/torque envelope curve for load monitoring.	<ul style="list-style-type: none"> <li>When using the control mode "U/f control" (p1300 &lt; 10): p2182 &gt; 10% of the rated speed</li> <li>When using the control mode "encoderless vector control" (p1300 = 20): p2182 &gt; p1755 (switchover speed, motor model)</li> </ul>
p2183[0...n]	Load monitoring speed threshold 2 [rpm]		Factory setting: 150
p2184[0...n]	Load monitoring speed threshold 3 [rpm]		Factory setting: 900
p2186[0...n]	Load monitoring torque threshold 1, lower [Nm]		Factory setting: 1500
p2188[0...n]	Load monitoring torque threshold 2, lower [Nm]		Factory setting: 0
p2190[0...n]	Load monitoring torque threshold 3, lower [Nm]		Factory setting: 0
p2191[0...n]	Load monitoring torque threshold, no load [Nm]		Factory setting: 0
p2192[0...n]	Load monitoring delay time [s]	Sets the torque threshold to identify dry running operation for pumps or belt breakage for fans.	Factory setting: 0
p2193[0...n]	Load monitoring configuration	Sets the delay time to evaluate the load monitoring.	Factory setting: 10
		Sets the load monitoring configuration: 1: Monitoring torque and load drop (factory setting) 4: Monitoring pump and load failure 5: Monitoring fan and load failure	

### Further information

If you deselect monitoring with p2193 < 4, the converter then resets the load monitoring parameters to factory settings.

## 7.28 Efficiency optimization

### Overview



The efficiency optimization reduces the motor losses as far as possible.

Active efficiency optimization has the following advantages:

- Lower energy costs
- Lower motor temperature rise
- Lower motor noise levels

Active efficiency optimization has the following disadvantage:

- Longer acceleration times and more significant speed dips during torque surges.


The disadvantage is only relevant when the motor must satisfy high requirements relating to the dynamic performance. Even when efficiency optimization is active, the converter closed-loop motor control prevents the motor from stalling.

### Precondition

Efficiency optimization functions under the following preconditions:

- Operation with an asynchronous motor
- Vector control is set in the converter.

### Function description

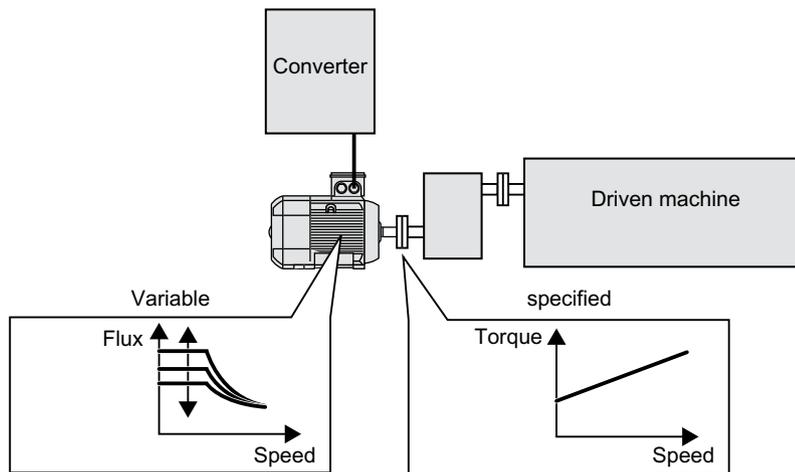

The three variables that the converter can directly set, which define efficiency of an asynchronous motor, are speed, torque and flux.


However, in all applications, speed and torque are specified by the driven machine. As a consequence, the remaining variable for the efficiency optimization is the flux.

The converter has two different methods of optimizing the efficiency.


#### Efficiency optimization, method 2

Generally, energy efficiency optimization method 2 achieves a better efficiency than method 1.

We recommend that you set method 2.

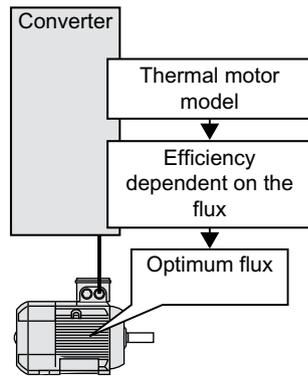


Based on its thermal motor model, the converter continually determines - for the actual operating point of the motor - the interdependency between efficiency and flux. The converter then sets the flux to achieve the optimum efficiency.

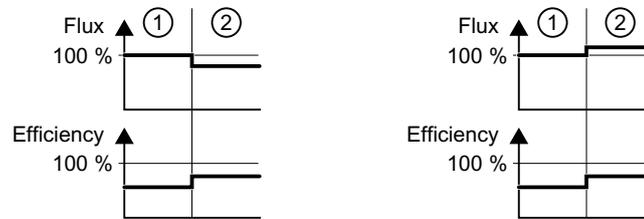


- ① Efficiency optimization is not active
- ② Efficiency optimization is active

Depending on the motor operating point, the converter either decreases or increases the flux in partial load operation of the motor.

### Efficiency optimization, method 1

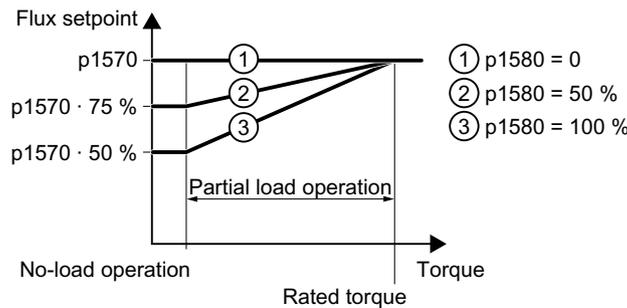

The motor operates in partial load mode between no-load operation and the rated motor torque. Depending on p1580, in the partial load range, the converter reduces the flux setpoint linearly with the torque.

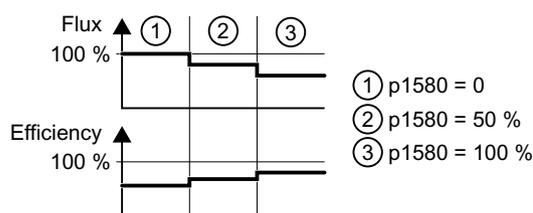

The reduced flux in the motor partial load range results in higher efficiency.

## Parameters

The converter calculates the parameters for the thermal motor model based on the motor data that has been set – and the motor data identification.

### Efficiency optimization, method 2

Parameter	Description	Setting
p1401.14	Flux control configuration	1 signal: Efficiency optimization 2 active Factory setting: 0000 0000 0000 0110 bin
p1570[0...n]	CO: Flux setpoint [%]	Sets the flux setpoint referred to rated motor flux. Factory setting: 100
p3315[0...n]	Efficiency optimization 2 minimum flux limit value [%]	Sets the minimal limit value for the calculated optimum flux. Factory setting: 50
p3316[0...n]	Efficiency optimization 2 maximum flux limit value [%]	Sets the maximum limit value for the calculated optimum flux. Factory setting: 110

### Efficiency optimization, method 1


Parameter	Description	Setting
p1570[0...n]	CO: Flux setpoint [%]	Sets the flux setpoint referred to rated motor flux. Factory setting: 100
p1580[0...n]	Efficiency optimization [%]	0 %: Efficiency optimization is deactivated. 100 %: In no-load operation, the converter reduces the flux setpoint to 50% of the rated motor flux. The factory setting depends on the converter.

## 7.29 Calculating the energy saving for fluid flow machines

### Overview




Fluid flow machines, which mechanically control the flow rate using valves or throttle flaps, operate with a constant speed corresponding to the line frequency.

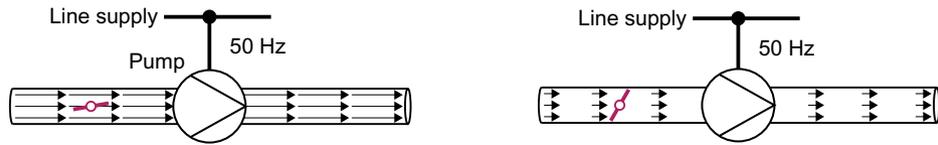


The lower the flow rate, the poorer the efficiency of the fluid flow machine (pump). The fluid flow machine (pump) has the poorest efficiency when the throttle or valve is completely closed. Further, undesirable effects can occur, for example the formation of vapor bubbles in liquids (cavitation) or the temperature of the medium being pumped can increase.

The converter controls the flow rate by appropriately varying the speed of the fluid flow machine. By controlling the flow rate, the fluid flow machine operates at the optimum efficiency for each flow rate. This situation means that in the partial load range less electric power is required than when controlling the flow rate using valves and throttles.

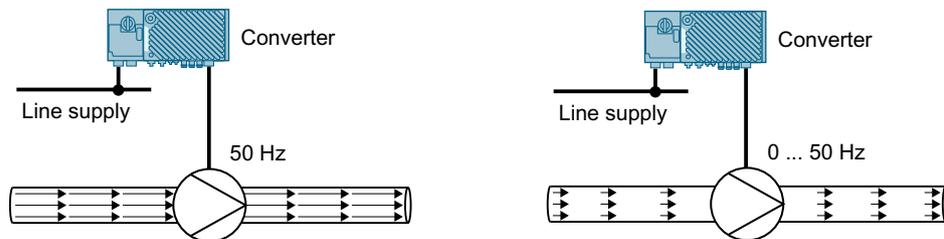


## Function description

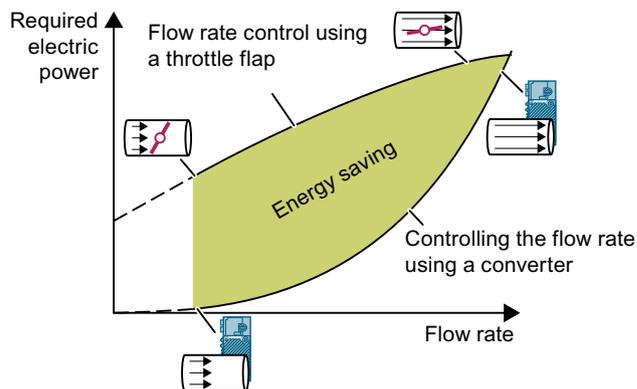

The converter calculates the energy saving from the flow characteristic associated with a mechanical flow control and the measured electric power that is drawn. The calculation is suitable for centrifugal pumps, fans, radial and axial compressors, for instance.

**Flow characteristic**

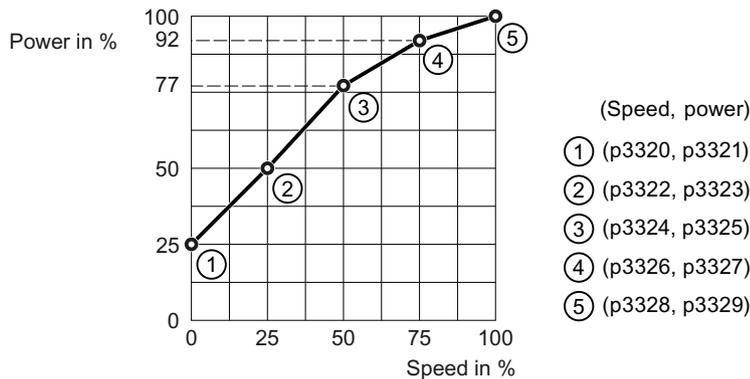

To set the characteristic, you require the following data from the machine manufacturer for each speed interpolation point:

- The flow rate of the fluid-flow machine associated with the 5 selected converter speeds
- At constant speed, the power drawn which is associated with the 5 flow rates corresponds to the line frequency and mechanical throttling of the flow rate.

**Parameters**

Parameter	Description	Setting
r0039[0...2]	CO: Energy display [kWh]	[0] Energy consumption since the last reset. [1] Energy drawn since the last reset. [2] Energy fed back since the last reset. r0039 serves as reference signal of r0042.
p0040	Reset energy consumption display	Setting p0040 = 1 to reset the display in r0039 and r0041. Factory setting: 0
r0041	Energy saved [kWh]	Displays the saved energy referred to 100 operating hours. For an operating time of below 100 hours, the display is interpolated up to 100 hours.
r0042[0...2]	CO: Process energy display [Wh]	[0] Energy consumption since the last reset. [1] Energy drawn since the last reset. [2] Energy fed back since the last reset. For display as process variable. Enable with p0043.
p0043	BI: Energy consumption display enabled	Sets the signal source (BI: p0043 = 1 signal) to enable/reset the process energy display in r0042. Factory setting: 0
p3320[0...n]	Fluid flow machine power, point 1 [%]	Specifies the power (P) of point 1 as a [%]. Factory setting: 25
p3321[0...n]	Fluid flow machine speed, point 1 [%]	Specifies the speed (n) of point 1 as a [%]. Factory setting: 0
p3322[0...n]	Fluid flow machine power, point 2 [%]	Specifies the power (P) of point 2 as a [%]. Factory setting: 50

Parameter	Description	Setting
p3323[0...n]	Fluid flow machine speed, point 2 [%]	Specifies the speed (n) of point 2 as a [%]. Factory setting: 25
p3324[0...n]	Fluid flow machine power, point 3 [%]	Specifies the power (P) of point 3 as a [%]. Factory setting: 77
p3325[0...n]	Fluid flow machine speed, point 3 [%]	Specifies the speed (n) of point 3 as a [%]. Factory setting: 50
p3326[0...n]	Fluid flow machine power, point 4 [%]	Specifies the power (P) of point 4 as a [%]. Factory setting: 92
p3327[0...n]	Fluid flow machine speed, point 4 [%]	Specifies the speed (n) of point 4 as a [%]. Factory setting: 75
p3328[0...n]	Fluid flow machine power, point 5 [%]	Specifies the power (P) of point 5 as a [%]. Factory setting: 100
p3329[0...n]	Fluid flow machine speed, point 5 [%]	Specifies the speed (n) of point 5 as a [%]. Factory setting: 100

## 7.30 Switchover between different settings

### Overview

There are applications that require different converter settings.

#### Example:

Different motors are operated on one converter. The converter must operate with the motor data of the particular motor and the appropriate ramp-function generator.

### Function description

#### Drive data sets (DDS)

Some converter functions can be set differently, and there can be a switch between the different settings.

---

#### Note


You can only switch over the motor data of the drive data sets in the "ready for operation" state with the motor switched off. The switchover time is approx. 50 ms.

If you do not switch over the motor data together with the drive data sets (i.e. same motor number in p0826), then the drive data sets can also be switched over in operation.

---

The associated parameters are indexed (index 0, 1, 2, or 3). One of the four indexes is selected with control commands, and thereby one of the four saved settings.

The settings in the converter with the same index are called the drive data set.

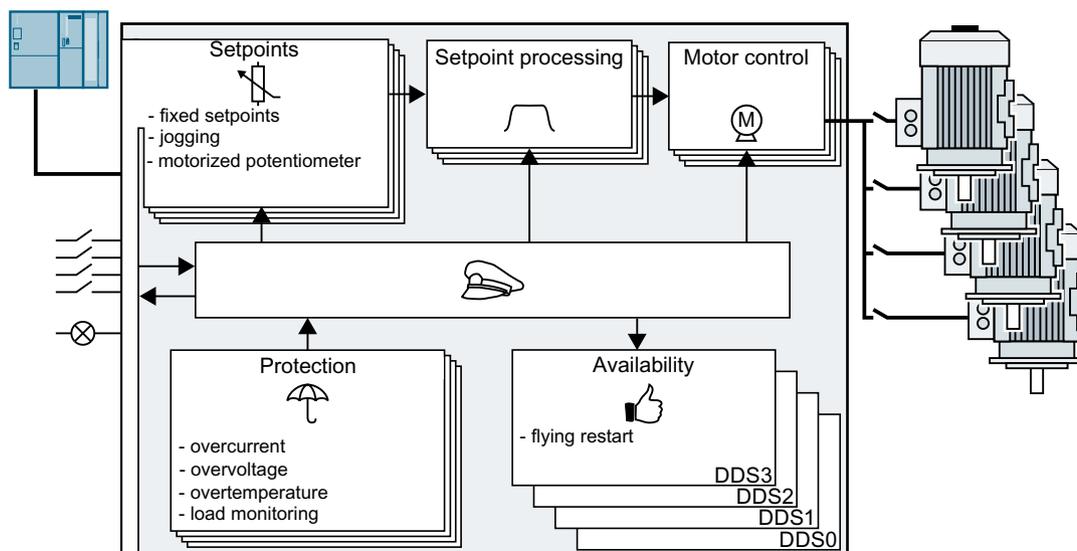

### Selecting the number of drive data sets

Parameter p0180 defines the number of drive data sets (1 ... 4).

Parameter	Description
p0010 = 0	Drive commissioning: Ready
p0010 = 15	Drive commissioning: Data sets
p0180	Drive data set (DDS) number

### Copying the drive data sets

Parameter	Description
p0819[0]	Source drive data set
p0819[1]	Target drive data set
p0819[2] = 1	Starts the copy operation

### Parameters

Parameter	Description	Setting
p0010	Drive commissioning parameter filter	Sets the parameter filter to commission a drive. 0: Ready 1: Quick commissioning (factory setting) 15: Data sets
r0051.0...1	CO/BO: Drive data set DDS effective	Displays the effective Drive Data Set (DDS).
p0180	Number of Drive data set (DDS)	p0180 = 1, 2, 3 or 4 Factory setting: 1
p0819[0...2]	Copy drive data set DDS	[0] Source Drive Data Set [1] Target Drive Data Set [2] 0→1: Starts the copy operation Factory setting: 0

Parameter	Description	Setting
p0820[0...n]	Bl: Drive data set DDS selection, bit 0	Sets the signal source to select DDS, bit 0. Factory setting: 0
p0821[0...n]	Bl: Drive data set DDS selection, bit 1	Sets the signal source to select DDS, bit 1. Factory setting: 0
p0826[0...n]	Motor changeover, motor number	Sets the freely assignable motor number for the drive data set changeover. Factory setting: 0

## 7.31 Activating licensed functions

### 7.31.1 Licensing

#### Purchasing a memory card with license

##### Procedure

1. Order a memory card - with or without firmware – with the license that you require.
2. Switch off the converter power supply.
3. Insert the card into the converter.
4. Switch on the power supply for the converter.

You have activated the licensed function.



#### Purchasing a license and loading to a memory card

##### Requirement

You have a memory card without a license.



Recommended memory cards (Page 356)

##### Procedure

1. Order the license for the function that you require.
2. You receive the "Certificate of License", it contains:
  - the software order number
  - the license number
  - the delivery note number
3. Create the license key using the "WEB License Manager".
  -  License key (Page 352)
4. Insert the card into the converter.

5. Write the license key to the card using STARTER or BOP-2.



6. Switch off the converter power supply.
7. Switch on the converter power supply again.

You have activated the licensed function.



## 7.31.2 Creating or displaying the license key

### Overview

The WEB License Manager has the following functions:

- Generate the license key for a new license
- Display the licenses on a card

WEB License Manager on the Internet:




### Creating the license key using "WEB License Manager"

#### Requirements

- You know the license number and the delivery note number from the Certificate of License.
- You know the serial number of your memory card.

#### Procedure

1. Open the WEB License Manager.
2. Click "Direct access" in the WEB License Manager in the navigation bar.

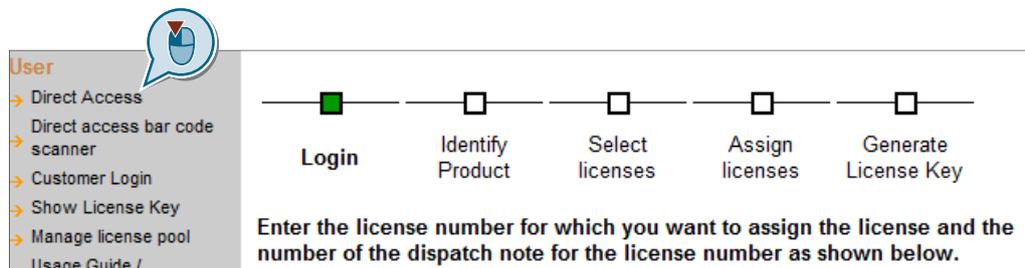

3. Enter the license number and delivery note number from your Certificate of License.
4. Click "Next".
5. Progress display: "Identify product".  
Enter the serial number of the memory card.
6. Select for "Product": SINAMICS G120

7. Click "Next".  
If licenses are already assigned to your software, they are displayed here.
8. Click "Next".
9. Progress display: "Select licenses".  
The WEB License Manager displays the licenses that you can assign. Select the checkbox for assignment.
10. Click "Next".
11. Progress display: "Assign licenses".  
The WEB License Manager displays a summary of the licenses selected for assignment.
12. Click "Assign".
13. Confirm the following confirmation prompt with OK.
14. Progress display: "Generate license key".  
The licenses are permanently assigned to the specified memory card. The license key is displayed.

- [License Key in SIN++SINAMICS G120+N3093102760044+-incl\\_key.Alm abspeichern.](#)
- [License Key in keys.txt abspeichern](#)
- [License Report als PDF abspeichern](#)

15. Save the license key on your PC.

You have created a license key.



## Displaying and requesting the license key using the "WEB License Manager"

With this function, the WEB License Manager displays which converter functions are assigned to which card with which license keys.

### Requirement

One of the following requirements must be satisfied:

- You know the serial number of the memory card
- You know the license number of the converter function

### Procedure

1. Open the WEB License Manager.
2. Select "Show license key"
3. In the drop-down list, make the entry based on the license key you wish to display or request.
4. Complete the fields below appropriately.

- Click the "Display license key" button.

**Show License Key**

Pressing the button will show you the current License Key. At least one license must have been assigned yet.

Current License Key	GRK6-1AKE-KTFB-A
---------------------	------------------

Additionally you can get a License Report by email summarizing all assigned licenses.

Email address

- Enter your e-mail address and click "Request license report".
- You receive the license report as a PDF. In addition to the actual license key, it includes the serial number of the memory card and all of the licenses assigned to this memory card.

You have displayed and requested the license key.



A new license is not required if you upgrade/downgrade to older or newer software versions. For this reason, do not delete the license key from the memory card (..\KEYS\SINAMICS\KEYS.txt), if you want to switch over to another software version.

### 7.31.3 Writing the license key to the card

#### Overview

You write the license key to the memory card by writing the individual positions – in an ascending order – into the bits of parameter p9920, and then subsequently activate the key using p9921.

The procedure for Startdrive and BOP-2, based on the fictitious "E1MQ-4BEA" license key, is described below.

---

#### Note

If you subsequently purchase an additional license, then you will require a new license key. You must overwrite the old license key. The new license key can have more than 9 positions.

You must set p9920[0] = 0 in order to reset the license key.

---

## Activating the license key with Startdrive

### Procedure

1. Go online and switch over to the parameter view.
2. In the parameter view, go to parameter p9920
3. Enter the license key (example: "E1MQ-4BEA") - always use uppercase letters:
  - p9920[0] = E
  - p9920[1] = 1
  - ...
  - p9920[7] = E
  - p9920[8] = A
4. Set p9921 = 1.  
After activation, the converter sets p9921 = 0.

You have activated the license key using Startdrive.



## Activating the license key with BOP-2

### Procedure

1. Convert the license key (example:"E1MQ-4BEA") into decimal numbers based on the table below.
  - E = 69, 1 = 49, M = 77, Q = 81, - = 45, 4 = 52, B = 66, E = 69, A = 65
2. Enter the value in ascending order into p9920
  - p9920[0] = 69
  - p9920[1] = 49
  - ...
  - p9920[7] = 69
  - p9920[8] = 65
3. Set p9921 = 1.  
After activation, the converter sets p9921 = 0.

You have activated the license key using BOP-2.



## Converting the license key for input using the BOP-2

Convert the license code into decimal numbers based on the following ASCII table.

Excerpt of ASCII code

Character	Decimal	Character	Decimal	Character	Decimal
-	45	C	67	P	80
0	48	D	68	Q	81
1	49	E	69	R	82
2	50	F	70	S	83
3	51	G	71	T	84
4	52	H	72	U	85
5	53	I	73	V	86
6	54	J	74	W	87
7	55	K	75	X	88
8	56	L	76	Y	89
9	57	M	77	Z	90
A	65	N	78	Blank	32
B	66	O	79		

### 7.31.4 Recommended memory cards

#### Function description



Table 7-10 Memory cards to back up converter settings

Scope of delivery	Article number
Memory card without firmware	6SL3054-4AG00-2AA0
Memory card with firmware V4.7	6SL3054-7EH00-2BA0
Memory card with firmware V4.7 SP3	6SL3054-7TB00-2BA0
Memory card with firmware V4.7 SP6	6SL3054-7TD00-2BA0
Memory card with firmware V4.7 SP9	6SL3054-7TE00-2BA0
Memory card with firmware V4.7 SP10	6SL3054-7TF00-2BA0
Memory card with firmware V4.7 SP14	6SL3054-7TH00-2BA0

#### Apply for

If you use the "Basic positioner" function or the expanded safety functions, then you must insert a memory card with a valid license in the Control Unit.

There are two ways of ordering a license:

- Without a memory card:  
You order a license and you then transfer it to precisely one memory card.
- With memory card:  
You order the license on a memory card with or without firmware. The license cannot be transferred

The converter also uses the inserted license card as memory card to back up its settings.

Table 7-11 License for basic positioners

Scope of delivery	Article number
License without memory card	6SL3074-7AA04-0AA0
License with memory card without firmware	6SL3054-4AG00-2AA0-Z E01
License with memory card with firmware V4.7	6SL3054-7EH00-2BA0-Z E01
License with memory card with firmware V4.7 SP3	6SL3054-7TB00-2BA0-Z E01
License with memory card with firmware V4.7 SP6	6SL3054-7TD00-2BA0-Z E01
License with memory card with firmware V4.7 SP9	6SL3054-7TE00-2BA0-Z E01
License with memory card with firmware V4.7 SP10	6SL3054-7TF00-2BA0-Z E01
License with memory card with firmware V4.7 SP14	6SL3054-7TH00-2BA0-Z E01

Table 7-12 License for the extended safety functions

Scope of delivery	Article number
License without memory card	6SL3074-0AA10-0AA0
License with memory card without firmware	6SL3054-4AG00-2AA0-Z F01
License with memory card with firmware V4.7	6SL3054-7EH00-2BA0-Z F01
License with memory card with firmware V4.7 SP3	6SL3054-7TB00-2BA0-Z F01
License with memory card with firmware V4.7 SP6	6SL3054-7TD00-2BA0-Z F01
License with memory card with firmware V4.7 SP9	6SL3054-7TE00-2BA0-Z F01
License with memory card with firmware V4.7 SP10	6SL3054-7TF00-2BA0-Z F01
License with memory card with firmware V4.7 SP14	6SL3054-7TH00-2BA0-Z F01

Table 7-13 Basic positioner license + license for the extended safety functions

Scope of delivery	Article number
License without memory card	6SL3074-0AA10-0AA0
License with memory card without firmware	6SL3054-4AG00-2AA0-Z E01 + F01
License with memory card with firmware V4.7 SP3	6SL3054-7TB00-2BA0-Z E01 + F01
License with memory card with firmware V4.7 SP6	6SL3054-7TD00-2BA0-Z E01 + F01
License with memory card with firmware V4.7 SP9	6SL3054-7TE00-2BA0-Z E01 + F01
License with memory card with firmware V4.7 SP10	6SL3054-7TF00-2BA0-Z E01 + F01
License with memory card with firmware V4.7 SP14	6SL3054-7TH00-2BA0-Z E01 + F01

## Further information

### Using memory cards from other manufacturers

The converter only supports memory cards up to 2 GB. SDHC cards (SD High Capacity) and SDXC cards (SD Extended Capacity) are not permitted.

If you use other SD or MMC memory cards, then you must format the memory card as follows:

- MMC: Format FAT 16
  - Insert the card into your PC's card reader.
  - Command to format the card:  
format x: /fs:fat (x: Drive code of the memory card on your PC)
- SD: Format FAT 16 or FAT 32
  - Insert the card into your PC's card reader.
  - Command to format the card:  
format x: /fs:fat or format x: /fs:fat32 (x: Drive code of the memory card on your PC.)

#### **Functional restrictions with memory cards from other manufacturers**

The following functions are either not possible – or only with some restrictions – when using memory cards from other manufacturers:

- Licensing functions is only possible using the recommended memory cards.
- Know-how protection is only possible with one of the recommended memory cards.
- In certain circumstances, memory cards from other manufacturers do not support writing or reading data from/to the converter.

# Data backup and series commissioning

## Saving settings outside the converter

After commissioning, your settings are saved in the converter so that they are protected against power failure.

We recommend that you additionally back up the settings on a storage medium outside the converter. Without backup, your settings could be lost if the converter develops a defect.

The following storage media are available for your settings:

- Memory card
- PG/PC
- SINAMICS G120 Smart Access

## Carrying out series commissioning

Series commissioning is the commissioning of several identical converters.

### Precondition

The converter to which the settings are transferred has the same article number and the same or a later firmware version as the source converter.

### Overview of the procedure

1. Commission the first converter.
2. Back up the settings of the first converter to an external storage medium.
3. Transfer the settings from the first converter to an additional converter via the data storage medium.

## 8.1 Transferring settings using a memory card

### 8.1.1 Memory cards

#### Recommended memory cards




Scope of delivery	Article number
Memory card without firmware	6SL3054-4AG00-2AA0
Memory card with firmware V4.7 SP13	6SL3054-7TG00-2BA0

#### Inserting a memory card


You may find the memory card slot on the G115D Wiring Module. See the following images for the detailed location:

##### SINAMICS G115D converter with SIMOGEAR geared motor

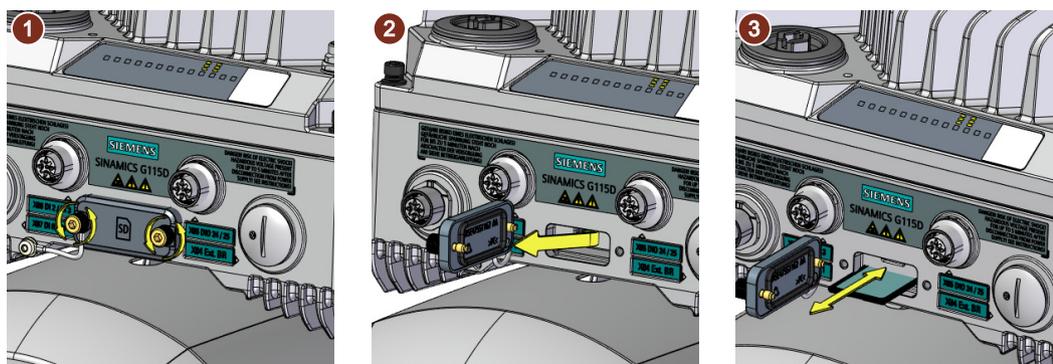

Fixings: 2 × M3 screws  
Tightening torque: 0.8 Nm (7.1 lbf.in)

##### SINAMICS G115D wall-mounted converter

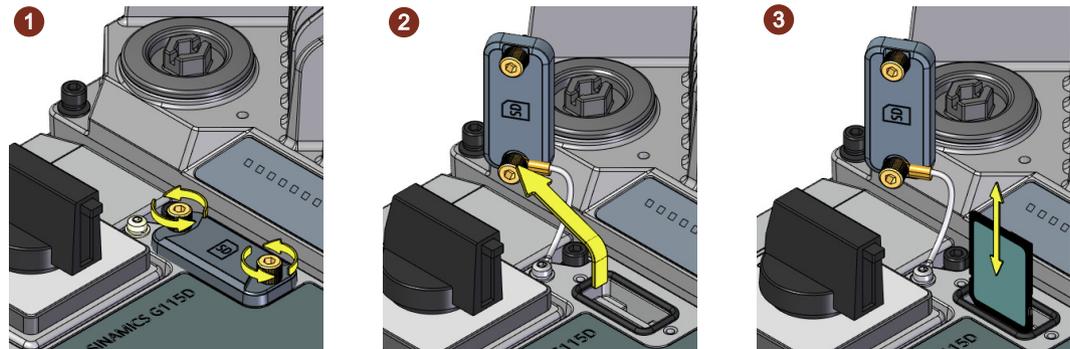

Fixings: 2 × M3 screws  
Tightening torque: 0.8 Nm (7.1 lbf.in)

### Note

For more information about performing a converter firmware upgrade and downgrade by using a memory card, see the following chapter:

 [Firmware upgrade and downgrade \(Page 409\)](#)

## Further information

### Using memory cards from other manufacturers

If you do not use a recommended SD memory card, you must format it as follows:

- Insert the card into your PC's card reader.
- Command to format the card:  
format x: /fs:fat or format x: /fs:fat32 (x: Drive code of the memory card on your PC.)

### Functional restrictions with memory cards from other manufacturers

The following functions are either not possible – or only with some restrictions – when using memory cards from other manufacturers:

- Know-how protection is only possible with one of the recommended Siemens memory cards.
- Under certain circumstances, memory cards from other manufacturers do not support writing or reading data from/to the converter.

## 8.1.2 Converter → Memory card

We recommend that you insert a memory card before switching on the converter power supply for the first time. The converter then automatically ensures that the actual parameter settings are saved both in the converter as well as on the card.

## 8.1 Transferring settings using a memory card

You can transfer parameter settings from the converter to the memory card by the following methods:

- Automatic transfer
- Transfer with Startdrive
- Transfer with SINAMICS G120 Smart Access

### Automatic transfer

#### Precondition

The converter power supply has been switched off.

#### Procedure

1. Insert an empty memory card into the memory card slot.

---

#### Note

##### Accidental firmware update

If the memory card contains a converter firmware, the converter may perform a firmware update after the supply voltage has been switched on.



Firmware upgrade and downgrade (Page 409)

---

#### Note

##### Accidental overwrite of the converter settings

When the supply voltage is switched on, the converter automatically accepts the settings already backed up on the memory card. If you use a memory card on which settings are already backed up, you will overwrite the settings of the converter.

- Use an empty memory card for the first automatic back-up of your settings.
- 

2. Switch on the converter power supply.

After the converter power supply has been switched on, it copies all modified parameters to the memory card.




### Transferring using Startdrive

#### Precondition

- A memory card is inserted in the converter.
- Connection between the PG/PC and converter has been properly established via a USB cable or the fieldbus.
- You have installed the Startdrive commissioning tool on your PG/PC.

### Procedure

1. Go online.
2. Proceed as follows to transfer converter settings to the memory card.

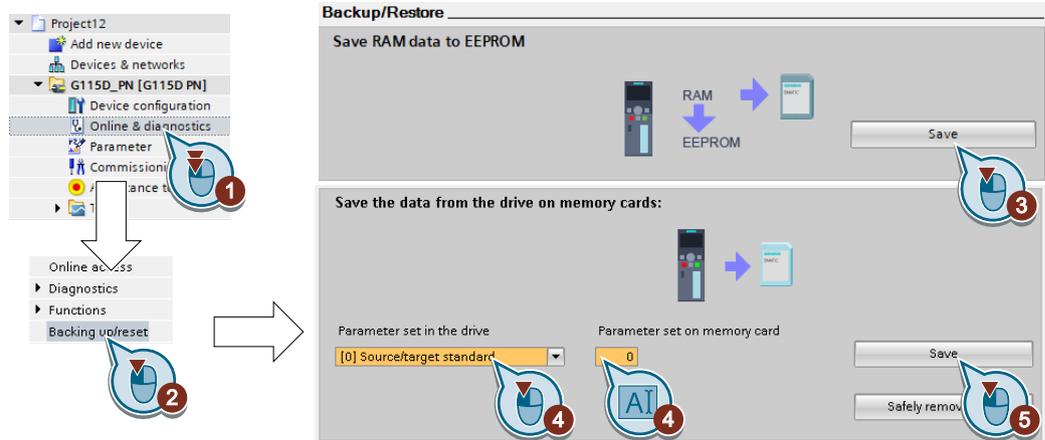

3. Wait until Startdrive reports that data backup has been completed.

You have backed up the converter settings to the memory card.



## Transferring using SINAMICS G120 Smart Access

You can use the SINAMICS G120 Smart Access to transfer settings. For more information on the transferring process, see Section "Backup and restore" in the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

### 8.1.3 Memory card → converter

You can transfer parameter settings from a memory card to the converter by the following methods:

- Automatic transfer
- Transfer with Startdrive
- Transfer with SINAMICS G120 Smart Access

#### Automatic transfer

##### Precondition

The converter power supply has been switched off.

##### Procedure

1. Insert the memory card into the memory card slot.
2. Switch on the converter power supply.

### 8.1 Transferring settings using a memory card

If there is valid parameter data on the memory card, the converter accepts the data from the memory card.




#### Transferring using Startdrive

##### Precondition

- A memory card is inserted in the converter.
- Connection between the PG/PC and converter has been properly established via a USB cable or the fieldbus.
- You have installed the Startdrive commissioning tool on your PG/PC.

##### Procedure

1. Go online.
2. Proceed as follows to transfer parameter settings from the memory card to the converter.

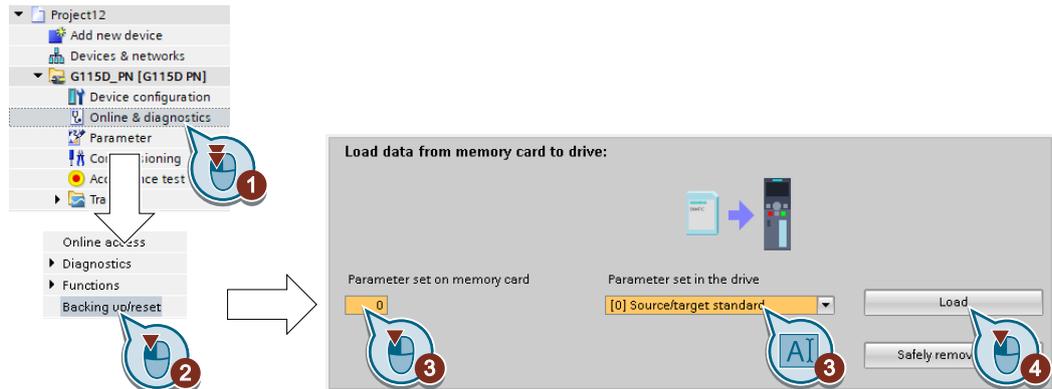

3. Wait until Startdrive has signaled that the data transfer has been completed.

##### Note

After the transferring process has completed, safely remove the memory card.

You have transferred your settings from a memory card to the converter.



Your settings on the converter become effective after the next time you switch on its power supply.

#### Transferring using SINAMICS G120 Smart Access

You can use the SINAMICS G120 Smart Access to transfer settings. For more information on the transferring process, see Section "Backup and restore" in the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

## 8.1.4 Activating message for a memory card that is not inserted

### Function

The converter identifies whether a memory card is not inserted, and signals this state. The message is deactivated in the converter factory setting.

### Activate message

#### Procedure

1. Set  $p2118[x] = 1101$ ,  $x = 0, 1, \dots, 19$
2. Set  $p2119[x] = 2$

Message A01101 for a memory card that is not inserted is activated.



To cyclically signal to a higher-level control that a memory card is not inserted, interconnect parameter r9401 to the send data of a PROFIdrive telegram of your choice.

### Deactivate message

#### Procedure

1. Set  $p2118[x] = 1101$ ,  $x = 0, 1, \dots, 19$
2. Set  $p2119[x] = 3$

Message A01101 for a memory card that is not inserted is deactivated.



### Parameters

Parameter	Description	Setting
p2118[0 ... 19]	Change message type, message number	Selects faults or alarms for which the message type should be changed. Factory setting: 0
p2119[0 ... 19]	Change message type	Sets the message type for the selected fault or alarm. 1: Fault (factory setting) 2: Alarm 3: No message
r9401	Safely remove memory card status	Displays the status of the memory card. Bit 00: Memory card inserted Bit 01: Memory card activated Bit 02: Siemens memory card Bit 03: Memory card used as USB data storage medium from the PC

## 8.2 Transferring settings using a PG/PC

### 8.2.1 Converter → PG/PC

You can transfer parameter settings from the converter to a PG/PC by the following method:

- Transfer with Startdrive
- Transfer with SINAMICS G120 Smart Access


#### Transferring using Startdrive

##### Precondition

- Connection between the PG/PC and converter has been properly established via a USB cable or the fieldbus.
- You have installed the Startdrive commissioning tool on your PG/PC.

##### Converter → PC/PG

1. Make sure that the converter is offline with Startdrive.
2. Proceed as follows to transfer settings from the converter to the PG/PC:

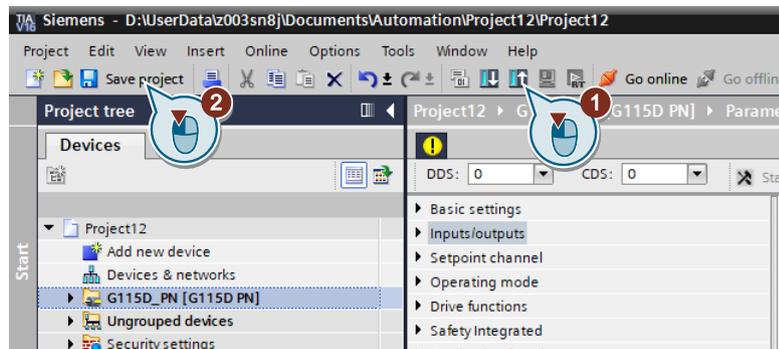

3. Wait until Startdrive prompts that the transfer procedure is complete.

You have transferred the settings from the converter to the PG/PC with Startdrive.



#### Transferring using SINAMICS G120 Smart Access

You can use the SINAMICS G120 Smart Access to transfer settings. For more information on the transferring process, see Section "Backup and restore" in the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

## 8.2.2 PG/PC → converter

You can transfer parameter settings from a PG/PC to the converter by the following method:

- Transfer with Startdrive
- Transfer with SINAMICS G120 Smart Access

### Transferring using Startdrive


#### Precondition

- Connection between the PG/PC and converter has been properly established via a USB cable or the fieldbus.
- You have installed the Startdrive commissioning tool on your PG/PC.

The procedure depends on whether you also transfer settings of safety functions or not.

#### Procedure with Startdrive without enabled safety functions

1. Go online.
2. Proceed as follows to transfer settings from the PG/PC to the converter:

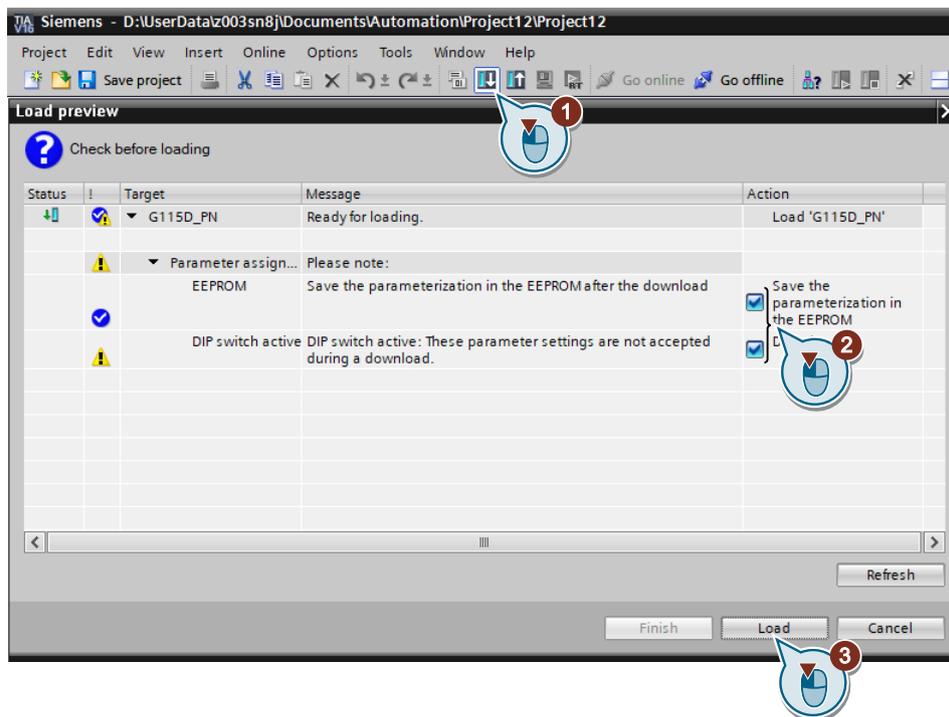


3. Wait until Startdrive prompts that the transfer procedure is complete.
4. Go offline.

You have transferred the settings from the PG/PC to the converter with Startdrive.



#### Procedure with Startdrive when the safety functions are enabled

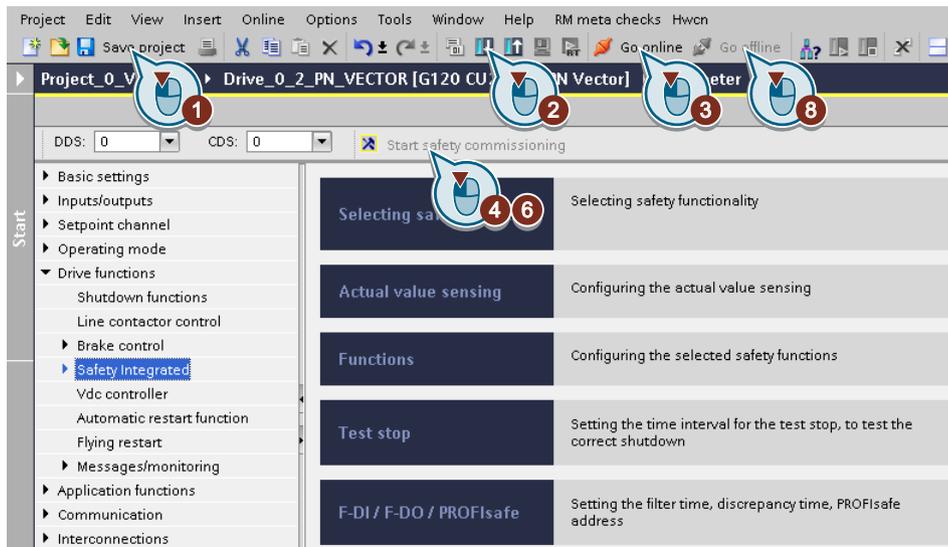

1. Save the project.
2. Select the  button to transfer settings from the PG/PC to the converter.
3. Connect Startdrive online with the drive.
4. Press the  button to start the safety commissioning.
5. Enter the password for the safety functions.  
If the password is the factory default, you are prompted to change the password.  
If you try to set a password that is not permissible, the old password will not be changed.
6. Press the  button to end the safety commissioning.
7. Confirm the prompt for saving your settings (copy RAM to ROM).
8. Disconnect the online connection.
9. Switch off the converter power supply.
10. Wait until all LEDs on the converter go dark (no voltage condition).
11. Switch on the converter power supply again.

You have transferred the settings from the PG/PC to the converter with Startdrive and have activated the safety functions.



### Transferring using SINAMICS G120 Smart Access

You can use the SINAMICS G120 Smart Access to transfer settings. For more information on the transferring process, see Section "Backup and restore" in the SINAMICS G120 Smart Access Operating Instructions.

 Overview of the manuals (Page 610)

## 8.3 Other ways to back up settings

In addition to the default setting, the converter has an internal memory for backing up three other settings.

On the memory card, you can back up 99 other settings in addition to the default setting.

 Additional information is available on the Internet: Memory options (<http://support.automation.siemens.com/WW/view/en/43512514>)

## 8.4 Write protection

The write protection prevents unauthorized changing of the converter settings. If you are working with Startdrive, write protection is only effective online. The offline project is not write-protected.

Write protection is applicable for all user interfaces:

- Startdrive PC tool
- Parameter changes via fieldbus
- SINAMICS G120 Smart Access

No password is required for write protection.

### Function description

#### Activate and deactivate write protection

Parameter	Description	Setting
r7760	Write protection/know-how protection status	Displays the status for the write protection and know-how protection. Bit 00: Write protection active
p7761	Write protection	Setting for activating/deactivating the write protection for adjustable parameters. 0: Deactivate write protection 1: Activate write protection Factory setting: 0

### Exceptions to write protection

#### Parameters that can be changed with active write protection

Parameter	Description	Setting
p0003	Access level	Sets the access level to read and write parameters.
p0010	Drive commissioning parameter filter	Sets the parameter filter to commission a drive.
p0124[0...n]	CU detection using LED	Identification of the Control Unit using an LED.

Parameter	Description	Setting
p0970	Reset drive parameters	The parameter is used to initiate the reset of the drive parameters.
p0971	Save parameters	Setting to save parameters in the non-volatile memory.
p0972	Drive unit reset	Sets the required procedure to execute a hardware reset for the drive unit.
p2111	Alarm counter	Number of alarms that have occurred after the last reset.
p3950	Service parameter	For service personnel only.
p3981	Acknowledge drive object faults	Setting to acknowledge all active faults of a drive object.
p3985	Master control mode selection	Sets the mode to change over the master control / LOCAL mode.
p7761	Write protection	Setting for activating/deactivating the write protection for adjustable parameters.
p8805	Identification and Maintenance 4 Configuration	Sets the configuration for the content of identification and maintenance 4 (I&M 4, p8809).
p8806[0...53]	Identification and Maintenance 1	Parameters for the PROFINET data set "Identification and Maintenance 1" (I&M 1).
p8807[0...15]	Identification and Maintenance 2	Parameters for the PROFINET data set "Identification and Maintenance 2" (I&M 2).
p8808[0...53]	Identification and Maintenance 3	Parameters for the PROFINET data set "Identification and Maintenance 3" (I&M 3).
p8809[0...53]	Identification and Maintenance 4	Parameters for the PROFINET data set "Identification and Maintenance 4" (I&M 4).
p9400	Safely remove memory card	Setting and display when memory card is "removed safely".
p9484	BICO interconnections search signal source	Sets the signal source (BO/CO parameter, BICO coded) to search in the signal sinks.

For more information about those parameters, see the List Manual.

## 8.5 Know-how protection

### Overview

Know-how protection prevents unauthorized reading of the converter settings.

To protect your converter settings against unauthorized copying, in addition to know-how protection, you can also activate copy protection.

### Precondition

Know-how protection is applicable for the following user interfaces:

- Startdrive PC tool
- Parameter changes via fieldbus

Know-how protection requires a password.

Combination of know-how protection and copy protection	Is a memory card necessary?
Know-how protection without copy protection	The converter can be operated with or without memory card.
Know-how protection with basic copy protection	 The converter can only be operated with a Siemens memory card.  Memory cards (Page 360)
Know-how protection with extended copy protection	

## Function description

The active know-how protection provides the following:

- With just a few exceptions, the values of all adjustable parameters p ... are invisible.
  - Several adjustable parameters can be read and changed when know-how protection is active. You can find a list of the adjustable parameters that can be read and changed in the List Manual under "KHP\_WRITE\_NO\_LOCK".  
In addition, you can define an exception list of adjustable parameters, which end users may change.
  - Several adjustable parameters can be read but not changed when know-how protection is active. You can find a list of the adjustable parameters that can be read in the List Manual under "KHP\_ACTIVE\_READ".
- The values of monitoring parameters r ... remain visible.
- Adjustable parameters cannot be changed using Startdrive.
- Locked functions:
  - Downloading converter settings using Startdrive
  - Automatic controller optimization
  - Stationary or rotating measurement of the motor data identification
  - Deleting the alarm history and the fault history
  - Generating acceptance documents for safety functions
- Executable functions:
  - Restoring factory settings
  - Acknowledging faults
  - Displaying faults, alarms, fault history, and alarm history
  - Reading out the diagnostic buffer
  - Controlling the converter via Startdrive
  - Uploading adjustable parameters that can be changed or read when know-how protection is active.
  - Displaying acceptance documents for safety functions

When know-how protection is active, support can only be provided (from Technical Support) after prior agreement from the machine manufacturer (OEM).

#### **Know-how protection without copy protection**

You can transfer converter settings to other converters using a memory card or Startdrive.

#### **Know-how protection with basic copy protection**

After replacing a converter, to be able to operate the new converter with the settings of the replaced converter without knowing the password, the memory card must be inserted in the new converter.

#### **Know-how protection with extended copy protection**

It is not possible to insert and use the memory card in another converter without knowing the password.

#### **Commissioning know-how protection**

1. Check as to whether you must extend the exception list.

 List of exceptions (Page 372)

2. Activate the know-how protection.

 Know-how protection (Page 374)

### **8.5.1 Extending the exception list for know-how protection**

In the factory setting, the exception list p7764[0...n] only includes the password for know-how protection.

Before activating know-how protection, you can additionally enter the adjustable parameters in the exception list, which must still be able to be read and changed by end users – even if know-how protection has been activated.

You do not need to change the exception list, if, with exception of the password, you do not require additional adjustable parameters in the exception list.

#### **Absolute know-how protection**

If you remove password p7766[0...29] from the exception list, it is no longer possible to enter or change the password for know-how protection.

You must reset the converter to the factory settings in order to be able to gain access to the converter adjustable parameters. When restoring the factory settings, you lose what you have configured in the converter, and you must recommission the converter.

**Parameters**

Parameter	Description	Setting
p7763	KHP OEM exception list number of indices for p7764	Sets the number of parameters for the OEM exception list (p7764[0...n]). Factory setting: 1
p7764[0...n]	KHP OEM exception list	Sets parameters that should be excluded from know-how protection. Factory setting [0] 7766, [1 ...499 ] 0
p7766[0...29 ]	KHP password input	Sets the password for know-how protection.

## 8.5.2 Activating and deactivating know-how protection

### Activating know-how protection

#### Preconditions

- The converter has now been commissioned.
- You have generated the exception list for know-how protection.
- To guarantee know-how protection, you must ensure that the project does not remain at the end user as a file.

### Function description

#### Activating know-how protection

1. Enter a password of your choice in p7767.  
Each index of p7767 corresponds with a character in the ASCII format.
2. Complete entry of the password with p7767[29] = 0.
3. Enter the same password in p7768 as that for p7767.
4. Complete entry of the password with p7768[29] = 0.

The know-how protection for the converter is activated.



#### Deactivating know-how protection

1. Enter the password for the know-how protection in p7766.  
Each index of p7766 corresponds with a character in the ASCII format.
2. Complete entry of the password with p7766[29] = 0.

The know-how protection for the converter is deactivated.



### Parameters

Parameter	Description	Setting
r7758[0...19]	KHP Control Unit serial number	Displays the actual serial number of the Control Unit.
p7759[0...19]	KHP Control Unit reference serial number	Sets the reference serial number for the Control Unit.
r7760	Write protection/know-how protection status	Bit 01: Know-how protection active Bit 02: Know-how protection temporarily unlocked Bit 03: Know-how protection cannot be deactivated Bit 04: Extended copy protection active Bit 05: Basic copy protection active Bit 06: Trace and measurement functions for diagnostic purposes active

Parameter	Description	Setting
p7765	KHP configuration	Configures whether the parameters and DCC data encrypted on the memory card should be protected before using on other memory cards or Control Units. Bit 00: Extended copy protection - linked to the memory card and CU Bit 01: Basic copy protection - linked to the memory card Bit 02: Permit trace and measuring functions for diagnostic purposes
p7766[0...29]	KHP password input	Sets the password for know-how protection.
p7767[0...29]	KHP password new	Sets the new password for know-how protection.
p7768[0...29]	KHP password confirmation	Confirms the new password for know-how protection.
p7769[0...20]	KHP memory card reference serial number	Sets the reference serial number for the memory card.
r7843[0...20]	Memory card serial number	Displays the actual serial number of the memory card.

## Further information

### Preventing data reconstruction from the memory card

As soon as know-how protection has been activated, the converter only backs up encrypted data to the memory card.

In order to guarantee know-how protection, after activating know-how protection, we recommend that you insert a new, empty memory card. For memory cards that have already been written to, previously backed up data that was not encrypted can be reconstructed.



# Alarms, faults and system messages

The converter has the following diagnostic types:

- LED  
The LEDs of the converter immediately inform you about the most important converter states.
- Alarms and faults  
Every alarm and every fault has a unique number.  
The converter signals alarms and faults via the following interfaces:
  - Fieldbus
  - Terminal strip with the appropriate setting
  - SINAMICS G120 Smart Access
  - Startdrive
- Identification & maintenance data (I&M)  
If requested, the converter sends data to the higher-level control via PROFINET:
  - Converter-specific data
  - Plant-specific data

## 9.1 Status LED overview



### LED status indicators

A G115D converter has a number of LEDs which are designed to indicate the operational state of the converter. The LEDs are used to indicate the following states:

- General fault conditions
- Communication status
- Safety-Integrated status
- Input and output status

For different communication variants, the number of LEDs may vary. The following figure illustrates the location of the various LEDs on the converter:

9.1 Status LED overview

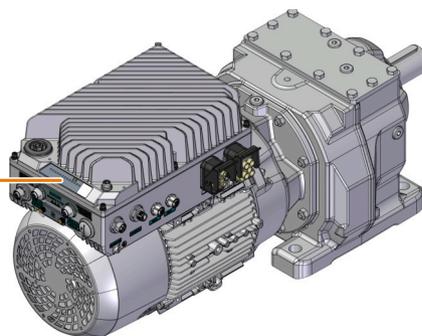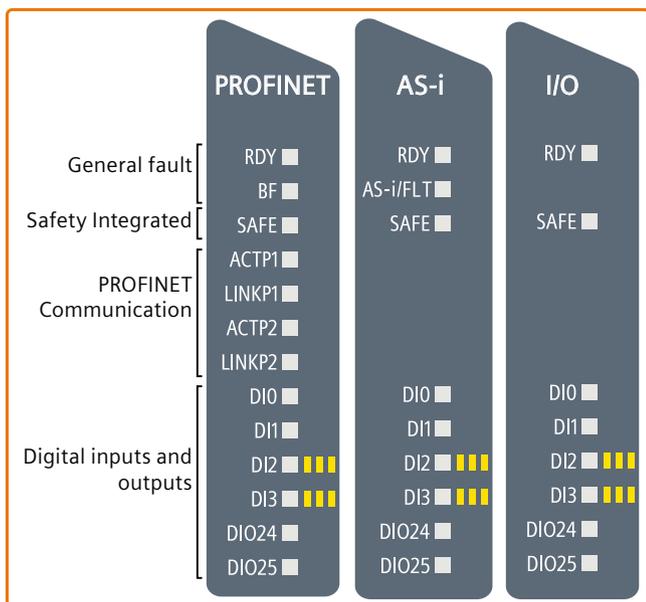

Explanation of symbols for the following tables

	LED is ON
<input type="checkbox"/>	LED is OFF
	LED flashes slowly
	LED flashes quickly
	LED flashes with variable frequency

Please contact Technical Support for LED states that are not described in the following.

Basic states

RDY	Explanation
	Temporary state after the supply voltage is switched on
	The converter is free of faults
	Commissioning or reset to factory settings

RDY	Explanation
	A fault is active or firmware update failed
	Firmware update is active
	Converter waits until the power supply is switched off and switched on again after a firmware update

### PROFINET fieldbus

BF	Explanation
	Data exchange between the converter and control system is active
	The fieldbus is improperly configured
	<b>RDY</b> In conjunction with a synchronously flashing LED RDY: Converter waits until the power supply is switched off and switched on again after a firmware update
	No communication with higher-level controller
	<b>RDY</b> In conjunction with an asynchronously flashing LED RDY: Incorrect memory card
	Firmware update failed
	Firmware update is active

### Integrated safety functions

SAFE	Explanation
	One or more safety functions are enabled, but not active
	One or more safety functions are active and error-free
	The converter has detected a safety function fault and initiated a stop response

**PROFINET fieldbus**

ACT	LNK	Explanation
		Communication via PROFINET is error-free. Converter and open-loop control exchange actual data
		The converter is establishing communication with a higher-level control or a PG/PC with Startdrive installed
		A physical connection has been set up
		Communication via PROFINET is not active

**Digital inputs and digital inputs/outputs**

DI & DI/O	Explanation
	The associated digital input or digital input/output has the "high" state
	The associated digital input or digital input/output has the "low" state

**AS-i fieldbus**

AS-i / FLT	Explanation		
	System OK		
	AS-i master not connected or firmware update failed		
	The fieldbus is improperly configured <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: center;"><b>RDY</b></td> <td>In conjunction with a synchronously flashing LED RDY: Converter waits until the power supply is switched off and switched on again after a firmware update</td> </tr> </table>	<b>RDY</b>	In conjunction with a synchronously flashing LED RDY: Converter waits until the power supply is switched off and switched on again after a firmware update
<b>RDY</b>	In conjunction with a synchronously flashing LED RDY: Converter waits until the power supply is switched off and switched on again after a firmware update		
	No communications between processors within the converter <table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%; text-align: center;"><b>RDY</b></td> <td>In conjunction with an asynchronously flashing LED RDY: Incorrect memory card</td> </tr> </table>	<b>RDY</b>	In conjunction with an asynchronously flashing LED RDY: Incorrect memory card
<b>RDY</b>	In conjunction with an asynchronously flashing LED RDY: Incorrect memory card		
	Slave address 0		
	Converter trip		
	Firmware update is active		

## 9.2 System runtime

By evaluating the system runtime of the converter, you can decide whether you must replace components subject to wear such as fans, motors and gear units.

### Principle of operation

The converter starts the system runtime as soon as the converter is supplied with power. The system runtime stops when the converter is switched off.

The system runtime comprises r2114[0] (milliseconds) and r2114[1] (days):

System runtime = r2114[1] × days + r2114[0] × milliseconds

If r2114[0] has reached a value of 86,400,000 ms (24 hours), the converter sets the value of r2114[0] to 0 and increases the value of r2114[1] by 1.

Using system runtime, you can track the chronological sequence of faults and alarms over time. When a corresponding message is triggered, the converter transfers the parameter values r2114 to the corresponding parameters of the alarm or fault buffer.

Parameter	Description	Setting
r2114[0...1]	Total system runtime	Displays the total system runtime for the drive unit. <b>Index:</b> [0]: Milliseconds [1]: Days

You cannot reset the system runtime.

## 9.3 Identification & maintenance data (I&M)

### I&M data

The converter supports the following identification and maintenance (I&M) data.

I&M data	Format	Explanation	Associated parameters	Example for the content
I&M0	u8[54] PROFINET	Converter-specific data, read only	-	See below
I&M1	Visible String [32]	Plant/system identifier	p8806[0 ... 31]	"ak12-ne.bo2=fu1"
	Visible String [22]	Location code	p8806[32 ... 53]	"sc2+or45"
I&M2	Visible String [16]	Date	p8807[0 ... 15]	"2013-01-21 16:15"

I&M data	Format	Explanation	Associated parameters	Example for the content
I&M3	Visible String [54]	Any comment	p8808[0 ... 53]	-
I&M4	Octet String[54]	Check signature to track changes for Safety Integrated. This value can be changed by the user. The test signature is reset to the value generated by the machine is p8805 = 0 is used.	p8809[0 ... 53]	Values of r9781[0] and r9782[0]

When requested, the converter transfers its I&M data to a higher-level control or to a PC/PG with installed Startdrive.

## I&M0

Designation	Format	Example for the content	Valid for PROFINET
Manufacturer-specific	u8[10]	00 ... 00 hex	---
MANUFACTURER_ID	u16	42d hex (=Siemens)	✓
ORDER_ID	Visible String [20]	„6SL3246-0BA22-1FA0“	✓
SERIAL_NUMBER	Visible String [16]	„T-R32015957“	✓
HARDWARE_REVISION	u16	0001 hex	✓
SOFTWARE_REVISION	char, u8[3]	„V“ 04.70.19	✓
REVISION_COUNTER	u16	0000 hex	✓
PROFILE_ID	u16	3A00 hex	✓
PROFILE_SPECIFIC_TYPE	u16	0000 hex	✓
IM_VERSION	u8[2]	01.02	✓
IM_SUPPORTED	bit[16]	001E hex	✓

## 9.4 Alarms, alarm buffer, and alarm history

### Overview

An alarm generally indicates that the converter may no longer be able to maintain the operation of the motor in future.

The extended diagnostics have an alarm buffer and an alarm history, in which the converter stores the most recent alarms.

## Function description

Alarms have the following properties:

- Incoming alarms have no direct influence on the converter.
- Alarms disappear when the cause is eliminated.
- Alarms do not have to be acknowledged.
- Alarms are displayed as follows:
  - Display via bit 7 in status word 1 (r0052)
  - Display in Startdrive
  - Display in the SINAMICS G120 Smart Access

The alarm code or alarm value describes the cause of the alarm.

### Alarm buffer

Alarm code	Alarm value		Alarm time received			Alarm time removed	
	I32	float	Days	ms		Days	ms
r2122[0]	r2124[0]	r2134[0]	r2145[0]	r2123[0]	old	r2146[0]	r2125[0]
[1]	[1]	[1]	[1]	[1]	↓ new	[1]	[1]
[2]	[2]	[2]	[2]	[2]		[2]	[2]
[3]	[3]	[3]	[3]	[3]		[3]	[3]
[4]	[4]	[4]	[4]	[4]		[4]	[4]
[5]	[5]	[5]	[5]	[5]		[5]	[5]
[6]	[6]	[6]	[6]	[6]		[6]	[6]
[7]	[7]	[7]	[7]	[7]		[7]	[7]

The converter saves incoming alarms in the alarm buffer. An alarm includes an alarm code, an alarm value, and two alarm times:

- Alarm code: r2122
- Alarm value: r2124 in fixed-point format "I32", r2134 in floating-point format "Float"
- Alarm time received = r2145 + r2123
- Alarm time removed = r2146 + r2125


The converter takes its internal time calculation to save the alarm times.

 System runtime (Page 381)

Up to 8 alarms can be saved in the alarm buffer.

In the alarm buffer, the warnings are sorted according to "Warning time received". If the alarm buffer is completely filled and an additional alarm occurs, then the converter overwrites the values with Index [7].

### Alarm history

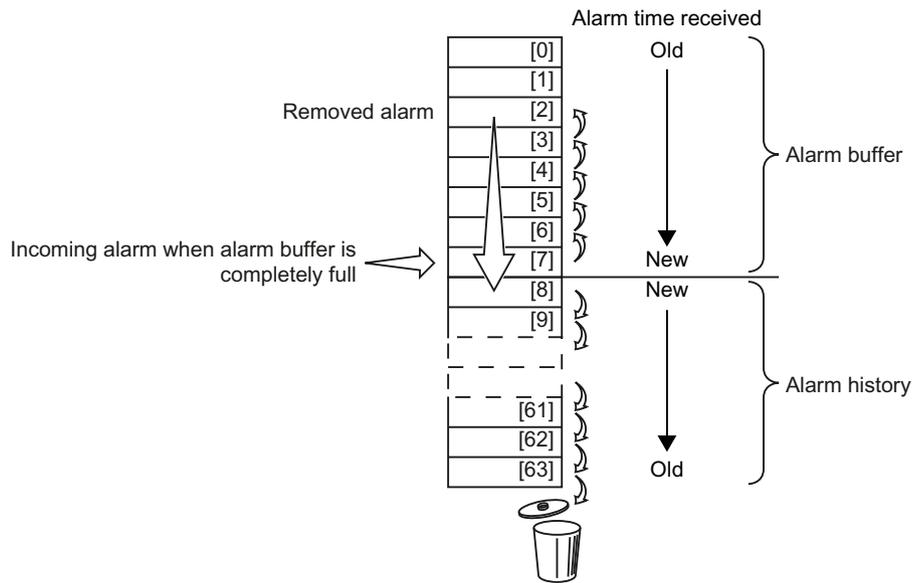

If the alarm buffer is completely filled and an additional alarm occurs, the converter shifts all removed alarms into the alarm history. The following occurs in detail:

1. To create space after position [8] in the alarm history, the converter shifts the alarms already stored in the alarm history "down" by one or more positions.  
If the alarm history is completely full, the converter will delete the oldest alarms.
2. The converter moves the removed alarms from the alarm buffer to the now freed up positions of the alarm history.  
Alarms that have not been removed remain in the alarm buffer.
3. The converter closes gaps in the alarm buffer that occurred when the removed alarms were shifted in the alarm history by shifting the alarms that have not been removed "up".
4. The converter saves the received alarm as the latest alarm in the alarm buffer.

The alarm history saves up to 56 alarms.

In the alarm history, alarms are sorted according to the "alarm time received". The latest alarm has Index [8].

## Parameters

### Parameters of the alarm buffer and the alarm history

Parameter	Description	Setting
p2111	Alarm counter	Number of alarms that have occurred after the last reset. When setting p2111 = 0, the following is initiated: <ul style="list-style-type: none"> <li>All of the alarms that have been removed from the alarm buffer [0...7] are transferred into the alarm history [8...63].</li> <li>The alarm buffer [0...7] is deleted.</li> </ul> Factory setting: 0
r2122[0 ... 63]	Alarm code	Displays the numbers of the alarms that have occurred.
r2123[0 ... 63]	Alarm time received in milliseconds	Displays the time in milliseconds when the alarm occurred.
r2124[0 ... 63]	Alarm value	Displays additional information about the alarm.
r2125[0 ... 63]	Alarm time removed in milliseconds	Displays the time in milliseconds when the alarm was removed.
r2132	CO: Actual alarm code	Displays the code of the alarm that last occurred.
r2134[0 ... 63]	Alarm value for float values	Displays additional information about the alarm that occurred for float values.
r2145[0 ... 63]	Alarm time received in days	Displays the time in days when the alarm occurred.
r2146[0 ... 63]	Alarm time removed in days	Displays the time in days when the alarm was removed.

### Extended settings for alarms

Parameter	Description	Setting
You can change up to 20 different alarms into faults or suppress alarms:		
p2118[0 ... 19]	Changing message type, message number	Selects faults or alarms for which the message type should be changed. Factory setting: 0
p2119[0 ... 19]	Changing message type, type	Sets the message type for the selected fault or alarm. 1: Fault 2: Alarm 3: No message Factory setting: 1

For more information about this function, see function diagram 8075 and parameter description in the List Manual.

## 9.5 Faults, fault buffer and fault history

### Overview

A fault generally indicates that the converter can no longer maintain the operation of the motor. The extended diagnostics have a fault buffer and a fault history, in which the converter stores the most recent faults.

### Function description

Faults have the following properties:

- In general, a fault leads to the motor being switched off.
- A fault must be acknowledged.
- Faults are displayed as follows:
  - Display in bit 3 of status word 1 (r0052)
  - Display on the converter via the LED RDY
  - Display in Startdrive
  - Display in the SINAMICS G120 Smart Access

The fault code and fault value describe the cause of the fault.

#### Fault buffer

Fault code	Fault value		Fault time received		Old ↓ New	Fault time removed	
	I32	float	Days	ms		Days	ms
r0945[0]	r0949[0]	r2133[0]	r2130[0]	r0948[0]		r2136[0]	r2109[0]
[1]	[1]	[1]	[1]	[1]		[1]	[1]
[2]	[2]	[2]	[2]	[2]		[2]	[2]
[3]	[3]	[3]	[3]	[3]		[3]	[3]
[4]	[4]	[4]	[4]	[4]		[4]	[4]
[5]	[5]	[5]	[5]	[5]		[5]	[5]
[6]	[6]	[6]	[6]	[6]		[6]	[6]
[7]	[7]	[7]	[7]	[7]		[7]	[7]

The converter saves incoming faults in the fault buffer. A fault includes a fault code, a fault value, and two fault times:

- Fault code: r0945
- Fault value: r0949 in fixed-point format "I32", r2133 in floating-point format "Float"
- Fault time received = r2130 + r0948
- Fault time removed = r2136 + r2109

The converter takes its internal time calculation to save the fault times.

 System runtime (Page 381)

Up to 8 faults can be saved in the fault buffer.

In the fault buffer, the faults are sorted according to "Fault time received". If the fault buffer is completely filled and an additional fault occurs, then the converter overwrites the values with Index [7].


### Acknowledging a fault

To acknowledge a fault, you have the following options:

- PROFIdrive control word 1, bit 7 (r2090.7)
- Acknowledging via a digital input
- Acknowledging via a commissioning tool
- Switch off the converter power supply and switch on again

Faults detected during the converter-internal monitoring of hardware and firmware can be acknowledged only by switching the supply voltage off and on again. The list of fault codes and alarm codes includes the note on the limitations on the acknowledgment for the corresponding fault codes in the List manual.

### Fault history

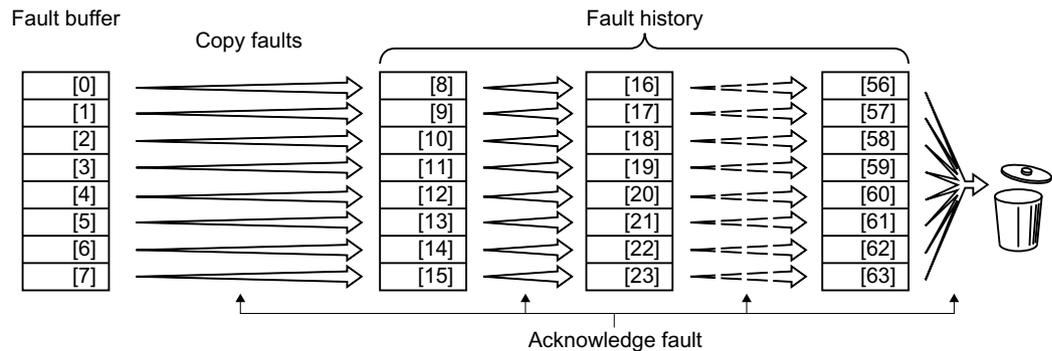

If at least one of the fault causes in the fault buffer has been removed and you acknowledge the faults, the following takes place:

1. The converter shifts the values previously saved in the fault history by eight indexes. The converter deletes the faults that were saved in the indexes [56 ... 63] before the acknowledgment.
2. The converter copies the contents of the fault buffer to the memory locations [8 ... 15] in the fault history.
3. The converter deletes the faults that have been removed from the fault buffer. The faults that have not been removed are now saved both in the fault buffer and in the fault history.
4. The converter writes the time of acknowledgment of the removed faults to "Fault time removed". The "Fault time removed" of the faults that have not been removed retains the value = 0.

The fault history can contain up to 56 faults.

### Deleting the fault history

To delete all faults from the fault history, set parameter p0952 = 0.

## Parameters

## Parameters of the fault buffer and the fault history

Parameter	Description	Setting
r0945[0 ... 63]	Fault code	Displays the numbers of the faults that have occurred.
r0948[0 ... 63]	Fault time received in milliseconds	Displays the system runtime in milliseconds when the fault occurred.
r0949[0 ... 63]	Fault value	Displays additional information about the fault that occurred (as integer number).
p0952	Fault cases counter	Number of fault cases that have occurred since the last acknowledgment. With p0952 = 0, you delete the fault buffer and the fault history. Factory setting: 0
r2109[0 ... 63]	Fault time removed in milliseconds	Displays the system runtime in milliseconds when the fault was removed.
r2130[0 ... 63]	Fault time received in days	Displays the system runtime in days when the fault occurred.
r2131	Actual fault code	Displays the code of the oldest active fault.
r2133[0 ... 63]	Fault value for float values	Displays additional information about the fault that occurred for float values.
r2136[0 ... 63]	Fault time removed in days	Displays the system runtime in days when the fault was removed.

## Extended settings for faults

Parameter	Description	Setting
You can change up to 20 different faults into alarms, suppress faults, modify the fault response, or modify the acknowledgment mode:		
p2100[0 ... 19]	Changing fault response, fault number	Selects the faults for which the fault response should be changed. Factory setting: 0
p2101[0 ... 19]	Changing the fault reaction, reaction	Sets the fault reaction for the selected fault. 0: NONE 1: OFF1 2: OFF2 3: OFF3 5: STOP2 6: Internal armature short-circuit / DC braking Factory setting: 0
p2118[0 ... 19]	Changing message type, message number	Selects faults or alarms for which the message type should be changed. Factory setting: 0

Parameter	Description	Setting
p2119[0 ... 19]	Changing message type, type	Sets the message type for the selected fault or alarm. 1: Fault 2: Alarm 3: No message Factory setting: 1
p2126[0 ... 19]	Changing the acknowledgment mode, fault number	Selects the faults for which the acknowledge mode is to be changed. Factory setting: 0
p2127[0 ... 19]	Changing the acknowledgment mode	Sets the acknowledgment type for the selected fault: 1: Acknowledgment only using POWER ON 2: Immediate acknowledgment after removing the fault cause Factory setting: 1

For more information about this function, see function diagram 8075 and parameter description in the List Manual.

## 9.6 List of alarms and faults

### Overview

A message comprises a letter followed by the relevant number.

The letters have the following meaning:

**A . . . .** Alarm code . . . .  
**F . . . .** Fault code . . . .

The expressions have the following meaning:

**CU/Power Module/power unit** All refer to an Electronic Module.

For example, replacing a CU, Power Module, or power unit means replacing an Electronic Module.

### Important alarms and faults

Number	Cause	Remedy
F01000	Software fault in CU	Replace CU.
F01001	Floating Point Exception	Switch CU off and on again.
F01015	Software fault in CU	Upgrade firmware or contact technical support.

## 9.6 List of alarms and faults

Number	Cause	Remedy
F01018	Power-up aborted more than once	<ol style="list-style-type: none"> <li>1. Switch the module off and on again.</li> <li>2. After this fault has been output, the module is booted with the factory settings.</li> <li>3. Recommission the converter.</li> </ol>
A01028	Configuration error	<p>Explanation: Parameterization on the memory card has been created with a different type of module (article number, MLFB)</p> <p>Check the module parameters and recommission if necessary.</p>
F01033	Unit switchover: Reference parameter value invalid	Set the value of the reference parameter not equal to 0.0 (p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004).
F01034	Unit switchover: Calculation of the parameter values after reference value change unsuccessful	Select the value of the reference parameter so that the parameters involved can be calculated in the per unit notation (p0304, p0305, p0310, p0596, p2000, p2001, p2002, p2003, r2004).
F01040	Parameters must be saved	Save parameters (p0971). Switch CU off and on again.
F01044	Loading of memory data card defective	Replace memory card or CU.
A01101	Memory card not available	Insert a memory card or disable the warning A01101.  Activating message for a memory card that is not inserted (Page 365)
F01105	CU: Insufficient memory	Reduce number of data records.
F01122	Frequency at the probe input too high	Reduce the frequency of the pulses at the probe input.
F01205	CU: Time slice overflow	Contact technical support.
F01250	CU hardware fault	Replace CU.
F01512	An attempt has been made to establish a conversion factor for scaling which is not present	Create scaling or check transfer value.
A01590	Motor maintenance interval lapsed	Carry out maintenance and reset the maintenance interval (p0651).
F01662	CU hardware fault	Switch CU off and on again, upgrade firmware, or contact technical support.
A01910 F01910	Setpoint timeout	<p>The alarm is generated when p2040 ≠ 0 ms and one of the following causes is present:</p> <ul style="list-style-type: none"> <li>• The bus connection is interrupted</li> <li>• Communications error (CRC, parity bit, logical error)</li> <li>• An excessively low value for the fieldbus monitoring time (p2040)</li> </ul>
F03505	Analog input, wire break	<p>Check the connection to the signal source for interrupts.</p> <p>Check the level of the signal supplied.</p> <p>The input current measured by the analog input can be read out in r0752.</p>
A03560	Local/Remote keyswitch in the "Off" position	<p>Set the keyswitch to another position (e.g. "Local" or "Remote").</p> <p>Note: Active faults are acknowledged if the keyswitch is turned from the "Off" position to "Local" or "Remote".</p>
A03561	A03561(0): Local drive control	The Local/Remote keyswitch is set to "Local" and the drive is controlled locally. If required, set the keyswitch to "Remote" and control it remotely.
	A03561(1): Remote drive control (e.g. via Startdrive) failed because the Local/Remote keyswitch is set to "Local"	<ul style="list-style-type: none"> <li>• Set the keyswitch to "Remote" position for remote control</li> <li>• Deactivate remote control for local control</li> </ul> <p>Note: Active faults are acknowledged if the keyswitch is turned from the "Off" position to "Local" or "Remote".</p>

Number	Cause	Remedy
A05000 A05001 A05002 A05004 A05006	Power Module overtemperature	Check the following: - Is the ambient temperature within the defined limit values? - Are the load conditions and duty cycle configured accordingly? - Has the cooling failed?
F06310	Supply voltage (p0210) incorrectly parameterized	Check the parameterized supply voltage and if required change (p0210). Check the line voltage.
F07011	Motor overtemperature	Reduce the motor load. Check ambient temperature. Check the wiring and connection of the sensor.
A07012	I2t Motor Module overtemperature	Check and if necessary reduce the motor load. Check the motor's ambient temperature. Check thermal time constant p0611. Check overtemperature fault threshold p0605.
A07015	Motor temperature sensor alarm	Check that the sensor is connected correctly. Check the parameter assignment (p0601).
F07016	Motor temperature sensor fault	Make sure that the sensor is connected correctly. Check the parameterization (p0601). Deactivate the temperature sensor fault (p0607 = 0).
F07086 F07088	Unit switchover: Parameter limit violation	Check the adapted parameter values and if required correct.
F07320	Automatic restart aborted	Increase the number of restart attempts (p1211). The actual number of start attempts is shown in r1214. Increase the wait time in p1212 and/or monitoring time in p1213. Connect an ON command (p0840). Increase the monitoring time of the power unit or switch off (p0857). Reduce the wait time for resetting the fault counter p1213[1] so that fewer faults are registered in the time interval.
A07321	Automatic restart active	Explanation: The automatic restart (AR) is active. During voltage recovery and/or when remedying the causes of pending faults, the drive is automatically switched back on.
F07330	Search current measured too low	Increase search current (p1202), check motor connection.
A07352	Stop sensor not plausible	<ul style="list-style-type: none"> <li>Check the BICO interconnections for the stop sensors.</li> <li>Check the sensors.</li> </ul>
A07353	DC quantity control deactivated	Optimize the DC quantity controller (Kp, Tn, bandwidth, PT2 filter).
A07400	V <sub>DC_max</sub> controller active	If it is not desirable that the controller intervenes: <ul style="list-style-type: none"> <li>Increase the ramp-down times.</li> <li>Deactivate the V<sub>DC_max</sub> controller (p1240 = 0 for vector control, p1280 = 0 for U/f control).</li> </ul>
A07409	U/f control, current limiting controller active	The alarm automatically disappears after one of the following measures: <ul style="list-style-type: none"> <li>Increase the current limit (p0640).</li> <li>Reduce the load.</li> <li>Slow down the up ramp for the setpoint speed.</li> </ul>
F07426	Technology controller actual value limited	<ul style="list-style-type: none"> <li>Adapt the limits to the signal level (p2267, p2268).</li> <li>Check the actual value scaling (p2264).</li> </ul>

## 9.6 List of alarms and faults

Number	Cause	Remedy
F07801	Motor overcurrent	Check current limits (p0640). Vector control: Check current controller (p1715, p1717). U/f control: Check the current limiting controller (p1340 ... p1346). Increase acceleration ramp (p1120) or reduce load. Check motor and motor cables for short circuit and ground fault. Check motor for star-delta connection and rating plate parameterization. Check power unit / motor combination. Select flying restart function (p1200) if switched to rotating motor.
A07805	Power unit overload I2t	<ul style="list-style-type: none"> <li>Reduce the continuous load.</li> <li>Adapt the load cycle.</li> <li>Check the assignment of rated currents of the motor and power unit.</li> </ul>
F07807	Short circuit detected	<ul style="list-style-type: none"> <li>Check the converter connection on the motor side for any phase-phase short-circuit.</li> <li>Rule out that line and motor cables have been interchanged.</li> </ul>
A07850 A07851 A07852	External alarm 1 ... 3	The signal for "external alarm 1" has been triggered. Parameters p2112, p2116 and p2117 determine the signal sources for the external alarm 1... 3. Remedy: Remove the causes of these alarms.
F07860 F07861 F07862	External fault 1 ... 3	Remove the external causes for this fault.
F07900	Motor blocked	Check that the motor can run freely. Check the torque limits (r1538 and r1539). Check the parameters of the "Motor blocked" message (p2175, p2177).
F07901	Motor overspeed	Activate precontrol of the speed limiting controller (p1401 bit 7 = 1). Increase hysteresis for overspeed signal p2162.
F07902	Motor stalled	Check whether the motor data has been parameterized correctly and perform motor identification. Check the current limits (p0640, r0067, r0289). If the current limits are too low, the drive cannot be magnetized. Check whether motor cables are disconnected during operation.
A07903	Motor speed deviation	Increase p2163 and/or p2166. Increase the torque, current and power limits.
A07910	Motor overtemperature	Check the motor load. Check the motor's ambient temperature. Check the KTY84 or Pt1000 sensor. Check the overtemperatures of the thermal model (p0626 ... p0628).
A07920	Torque/speed too low	The torque deviates from the torque/speed envelope curve.
A07921	Torque/speed too high	<ul style="list-style-type: none"> <li>Check the connection between the motor and the load.</li> </ul>
A07922	Torque/speed out of tolerance	<ul style="list-style-type: none"> <li>Adapt the parameterization corresponding to the load.</li> </ul>
F07923	Torque/speed too low	<ul style="list-style-type: none"> <li>Check the connection between the motor and the load.</li> </ul>
F07924	Torque/speed too high	<ul style="list-style-type: none"> <li>Adapt the parameterization corresponding to the load.</li> </ul>
A07927	DC braking active	Not required
A07980	Rotary measurement activated	Not required

Number	Cause	Remedy
A07981	No enabling for rotary measurement	Acknowledge pending faults. Establish missing enables (see r00002, r0046).
A07991	Motor data identification activated	Switch on the motor and identify the motor data.
F08501	Setpoint timeout	<ul style="list-style-type: none"> <li>• Check the PROFINET connection.</li> <li>• Set the controller to RUN mode.</li> <li>• If the error occurs repeatedly, check the set monitoring time p2044.</li> </ul>
F08502	Monitoring time sign-of-life expired	<ul style="list-style-type: none"> <li>• Check the PROFINET connection.</li> </ul>
A08511	Receive configuration data not valid	<ul style="list-style-type: none"> <li>• Check the PROFINET configuration</li> </ul>
A08526	No cyclic connection	<ul style="list-style-type: none"> <li>• Activate the controller with cyclic operation.</li> <li>• Check the parameters "Name of Station" and "IP of Station" (r61000, r61001).</li> </ul>
A08565	Consistency error affecting adjustable parameters	Check the following: <ul style="list-style-type: none"> <li>• IP address, subnet mask or default gateway is not correct.</li> <li>• IP address or station name used twice in the network.</li> <li>• Station name contains invalid characters.</li> </ul>
F13100	Know-how protection: Copy protection error	The know-how protection and the copy protection for the memory card are active. An error occurred during checking of the memory card. <ul style="list-style-type: none"> <li>• Insert a suitable memory card and switch the converter supply voltage temporarily off and then on again (POWER ON).</li> <li>• Deactivate the copy protection (p7765).</li> </ul>
F13101	Know-how protection: Copy protection cannot be activated	Insert a valid memory card.
F30001	Overcurrent	Check the following: <ul style="list-style-type: none"> <li>• Motor data, if required, carry out commissioning</li> <li>• Motor connection method (Y / <math>\Delta</math>)</li> <li>• U/f operation: Assignment of rated currents of motor and Power Module</li> <li>• Line quality</li> <li>• Power cable connections</li> <li>• Power cables for short-circuit or ground fault</li> <li>• Power cable length</li> <li>• Line phases</li> </ul> If this doesn't help: <ul style="list-style-type: none"> <li>• U/f operation: Increase the acceleration ramp</li> <li>• Reduce the load</li> <li>• Replace the power unit</li> </ul>
F30002	DC-link voltage overvoltage	Increase the ramp-down time (p1121). Set the rounding times (p1130, p1136). Activate the DC link voltage controller (p1240, p1280). Check the line voltage (p0210). Check the line phases.
F30003	DC-link voltage undervoltage	Check the line voltage (p0210).

## 9.6 List of alarms and faults

Number	Cause	Remedy
F30004	Converter overtemperature	Check whether the converter fan is running. Check whether the ambient temperature is in the permissible range. Check whether the motor is overloaded. Reduce the pulse frequency.
F30005	I2t converter overload	Check the rated currents of the motor and Power Module. Reduce current limit p0640. When operating with U/f characteristic: Reduce p1341.
F30011	Line phase failure	Check the converter's input fuses. Check the line cables.
F30015	Motor cable phase failure	Check the motor cables. Increase the ramp-up or ramp-down time (p1120).
F30021	Ground fault	<ul style="list-style-type: none"> <li>• Check the power cable connections.</li> <li>• Check the motor.</li> <li>• Check the current transformer.</li> <li>• Check the cables and contacts of the brake connection (a wire might be broken).</li> </ul>
F30022	Power Module: Monitoring $U_{CE}$	Check or replace the Power Module.
F30027	Time monitoring for DC link pre-charging	Check the supply voltage at the input terminals. Check the line voltage setting (p0210).
F30035	Overtemperature, intake air	<ul style="list-style-type: none"> <li>• Check whether the fan is running.</li> </ul>
F30036	Overtemperature, inside area	<ul style="list-style-type: none"> <li>• Check the fan filter elements.</li> <li>• Check whether the ambient temperature is in the permissible range.</li> </ul>
F30037	Rectifier overtemperature	See F30035 and, in addition: <ul style="list-style-type: none"> <li>• Check the motor load.</li> <li>• Check the line phases</li> </ul>
F30052	Incorrect Power Module data	Replace Power Module or upgrade CU firmware.
A30502	DC link overvoltage	Check the unit supply voltage (p0210).
F30662	CU hardware fault	Switch CU off and on again, upgrade firmware, or contact technical support.
F30664	CU power up aborted	Switch CU off and on again, upgrade firmware, or contact technical support.
F30850	Software fault in Power Module	Replace Power Module or contact technical support.
A30920	Temperature sensor fault	Check that the sensor is connected correctly.

For details, please refer to the List Manual.

## Corrective maintenance

### 10.1 Spare parts compatibility

#### Continuous development within the scope of product maintenance

Drive components are being continuously developed within the scope of product maintenance. Product maintenance includes, for example, measures to increase the ruggedness or hardware changes which become necessary as components are discontinued.

These further developments are "spare parts-compatible" and do not change the article number.

In the scope of such spare parts-compatible ongoing development, plug connector or connection positions are sometimes slightly modified. This does not cause any problems when the components are properly used. Take this fact into consideration in special installation situations (e.g. allow sufficient reserve regarding the cable length).



#### **WARNING**

##### **Fire or electric shock due to defective components**

If an overcurrent protection device is triggered, the converter may be defective. A defective converter can cause a fire or electric shock.

- Have the converter and the overcurrent protection device checked and replaced (if damaged) by a specialist.

#### Repair



#### **WARNING**

##### **Fire or electric shock due to improper repair**

Improper repair of the converter may cause malfunctions or result in consequential damage such as fire or electric shock.

- Only commission the following persons to repair the converter:
  - Siemens customer service
  - A repair center that has been authorized by Siemens
  - Specialist personnel who are thoroughly acquainted with all the warnings and operating procedures contained in this manual.
- Only use original spare parts when carrying out repairs.

### Recycling and disposal



For environmentally-friendly recycling and disposal of your old device, please contact a company certified for the disposal of waste electrical and electronic equipment, and dispose of the old device as prescribed in the respective country of use.

## 10.2 Replacing the converter

For the G115D motor-mounted converter, you can replace either the Electronic Module or the complete drive (geared motor + G115D motor-mounted converter).

For the G115D wall-mounted converter, you can replace either the Electronic Module or the complete converter.

In most cases, you only need to replace the Electronic Module instead of the complete converter. For more information, see Chapter "Replacing the Electronic Module (Page 402)".

### 10.2.1 Replacing the converter hardware

You may only replace a converter with a new one under the preconditions given later in this chapter. After the replacement, you must transfer the settings of the replaced converter to the new converter.

#### Precondition

The following two prerequisites apply for replacing the converter:

- The new converter's firmware version is equal to or later than the replaced converter.
- The new converter must have the same frame size and the same or higher power rating as those of the replaced converter.

 <b>WARNING</b>
<b>Unexpected machine motion caused by incorrect converter type</b>
Replacing converters of different types can result in incomplete or incorrect/inappropriate converter settings. As a consequence, unexpected machine motion, e.g. speed oscillation, overspeed or incorrect direction of rotation. Unexpected machine motion can result in death, injury or material damage.
<ul style="list-style-type: none"><li>• In all cases not permitted according to the above requirement, you must recommission the drive after replacing the converter.</li></ul>

 **WARNING**

**Unexpected machine motion caused by inappropriate/incorrect converter settings**

Missing or incorrect converter settings can lead to unexpected operating states or machine movements, e.g. a non-functioning EMERGENCY STOP or an incorrect direction of rotation. As a consequence, machine components or devices can become damaged or death or injury may result.

- If possible, back up the settings of the converter to be replaced by uploading them to an external storage medium, e.g. a memory card.
- Transfer the settings of the converter to be replaced by downloading them to the new converter.
- If you do not have a backup of the converter settings, commission the new converter as completely new converter.
- Check that the new converter works properly.

**Procedure**



1. Switch off all power supplies (line supply and external 24 V power supply) to the converter.

 **WARNING**

**Electric shock as a result of a residual charge in power components**

After the power supply has been switched off, it takes up to 5 min. until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level.

- Check the voltage at the converter connections, before removing the connection cables.

2. Remove the connecting cables of the converter.
3. Remove the defective converter and install the new converter.
4. Adjust the electromechanical potentiometers to make sure the scaling is set as same as the replaced converter.  
 Electromechanical potentiometer (Page 267)
5. Connect all of the cables to the converter.

**NOTICE**

**Damage caused by interchanging the motor cables**

The direction in which the motor rotates switches if you exchange the two phases of the motor line. An incorrect direction of rotation can lead to damage in the machine or system.

- Connect the three phases of the motor lines in the right order.

## 10.2 Replacing the converter

6. Switch on all power supplies (line supply and external 24 V power supply) to the converter. Set the new converter to suit the application:
  - If the settings of the replaced converter are backed up on an external storage medium, transfer the settings to the new converter.
    -  Memory card → converter (Page 363)
    -  PG/PC → converter (Page 367)
  - If there is no data backup of the replaced converter, recommission the converter.
    -  Commissioning (Page 115)
7. For converters with safety functions enabled, perform a reduced acceptance test.
  -  Reduced acceptance test after component replacement and firmware change (Page 417)

You have successfully replaced the converter.



## 10.2.2 Replacing a converter with active know-how protection

### 10.2.2.1 Replacing a converter with know-how protection without copy protection

In the case of know-how protection without copy protection, the converter settings can be transferred to another converter using a memory card.

 Converter → Memory card (Page 361)

 Memory card → converter (Page 363)

### 10.2.2.2 Replacing a converter with know-how protection with copy protection

The know-how protection with copy protection prevents the duplication of the converter settings.

If the converter settings can neither be copied nor forwarded, a recommissioning is required after converter replacement.

To avoid the recommissioning, there are two options for replacing the converter.

#### Precondition

- The end customer must use a Siemens memory card
- The machine manufacturer must have an identical prototype machine that it uses as sample

## Procedure

### Option 1: The machine manufacturer only knows the serial number of the new converter

1. The end customer provides the machine manufacturer with the following information:
  - For which machine must the converter be replaced?
  - What is the serial number (r7758) of the new converter?
2. The machine manufacturer performs the following steps online on the prototype machine:
  - Deactivating know-how protection  
 Activating and deactivating know-how protection (Page 374)
  - Enter the serial number of the new converter in p7759.
  - Enter the serial number of the inserted memory card as reference serial number in p7769.
  - Activate know-how protection with copy protection. "Copy RAM to ROM" must be activated.  
 Activating and deactivating know-how protection (Page 374)
  - Write the configuration with p0971 = 1 to the memory card.
  - Send the memory card to the end customer.
3. The end customer inserts the memory card and switches on the power supply of the converter.
4. When powering up, the converter checks the serial numbers of the card and when there is a match, the converter goes into the "ready to start" state.  
If the numbers do not match, then the converter signals fault F13100 (no valid memory card).

You have transferred the converter settings to the new converter.



**Option 2: The machine manufacturer knows the serial number of the new converter and the serial number of the memory card**

1. The end customer provides the machine manufacturer with the following information:
  - For which machine must the converter be replaced?
  - What is the serial number (r7758) of the new converter?
  - What is the serial number of the memory card?
2. The machine manufacturer performs the following steps online on the prototype machine:
  - Deactivating know-how protection  
 Activating and deactivating know-how protection (Page 374)
  - Enter the serial number of the new converter in p7759.
  - Enter the serial number of the customer's memory card as reference serial number in p7769.
  - Activate know-how protection with copy protection. "Copy RAM to ROM" must be activated.  
 Activating and deactivating know-how protection (Page 374)
  - Write the configuration with p0971 = 1 to the memory card.
  - Copy the encrypted project from the card to the associated PC.
  - Send the encrypted project to the end customer, e.g. via e-mail.
3. The end customer copies the project to the Siemens memory card that belongs to the machine, inserts it in the converter and switches on the power supply of the converter.
4. When powering up, the converter checks the serial numbers of the card and when there is a match, the converter goes into the "ready to start" state.  
If the numbers do not match, then the converter signals fault F13100 (no valid memory card).

You have transferred the converter settings to the new converter.





## 10.3 Replacing the spare parts

For more information on the spare parts of the geared motors, refer to the following chapter:

 Spare parts list, motor (Page 496)

 Replacement part lists gearbox (Page 587)

### 10.3.1 Spare parts overview

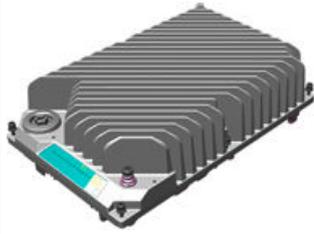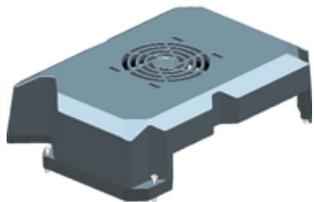Spare parts		Motor Mounted	Wall Mounted	Frame size	Article number
Electronic Module (without fan)		✓ n.a.	✓	FSA/FSB FSC	6SL3500-0XE5.-..A0
Replacement fan with cover caps and screws		n.a.	✓	FSB (4 kW)/FSC	6SL3500-0XF51-0AA0
Spare part kit for G115D Motor Mounted, consisting of 1 set of SD card cover, 1 set of commissioning cover, 1 set of main gaskets <sup>1)</sup> , 1 set of blanking caps and head screws		✓	n.a.	FSA/FSB	6SL3500-0XK50-0AA0
Spare part kit for G115D Wall Mounted, consisting of 1 set of blanking cover, 1 set of SD card cover, 1 set of commissioning cover, 1 set of main gaskets <sup>1)</sup> , 1 set of blanking caps and head screws, 1 set of LRC gasket		n.a.	✓	FSA/FSB /FSC	6SL3500-0XK51-0AA0

<sup>1)</sup> The two main gaskets are for the Wiring Modules of FSA and FSB/FSC respectively.

## Electronic Module


### Ordering data

Frame size	Rated power	Article number					
FSA	0.37 kW	6SL3500-0XE5	0	-	3	<input type="checkbox"/>	A0
	0.55 kW	6SL3500-0XE5	0	-	5	<input type="checkbox"/>	A0
	0.75 kW	6SL3500-0XE5	0	-	7	<input type="checkbox"/>	A0
	1.1 kW	6SL3500-0XE5	1	-	1	<input type="checkbox"/>	A0
	1.5 kW	6SL3500-0XE5	1	-	5	<input type="checkbox"/>	A0
FSB	2.2 kW	6SL3500-0XE5	2	-	2	<input type="checkbox"/>	A0
	3 kW	6SL3500-0XE5	3	-	0	<input type="checkbox"/>	A0
	4 kW	6SL3500-0XE5	4	-	0	<input type="checkbox"/>	A0

10.3 Replacing the spare parts

Frame size	Rated power	Article number						
FSC	5.5 kW	6SL3500-0XE5	5	-	5	☐	A0	
	7.5 kW	6SL3500-0XE5	7	-	5	☐	A0	
AS-Interface							A	A0
I/O Control							B	A0
PROFINET, EtherNet/IP							F	A0

You can find the article number from the label on the back side of the Electronic Module.

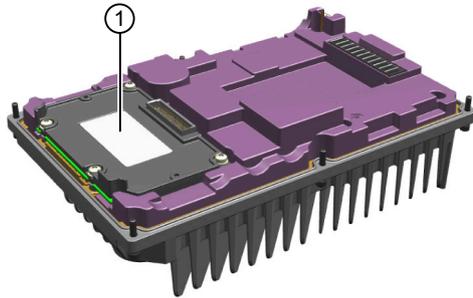

① Article number

### 10.3.2 Replacing the Electronic Module



**⚠ WARNING**

**Electric shock as a result of a residual charge in power components**

After the power supply has been switched off, it takes up to 5 minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level. Therefore, touching the converter immediately after powering off can result in electric shock due to residual charge in the power components.

- Check the voltage at the converter connections before you replace the Electronic Module.

#### Precondition


- You have backed up the settings of the converter on an external storage medium.
  - ☞ Converter → Memory card (Page 361)
  - ☞ Converter → PG/PC (Page 366)
- The new Electronic Module must have the same frame size and the same or higher power rating as those of the Electronic Module that is necessary for replacement.

#### Procedure

1. Switch off all power supplies (line supply and external 24 V power supply) to the converter.
2. Wait 5 minutes to allow the converter to discharge and check that no voltage is present at the converter connections.

- Release the retaining screws (6 x M4) for the Electronic Module by using a 3 mm allen key, and then remove the module.

Note: If you cannot easily remove the Electronic Module, use a flat-bit screwdriver to lift one corner and remove the module.

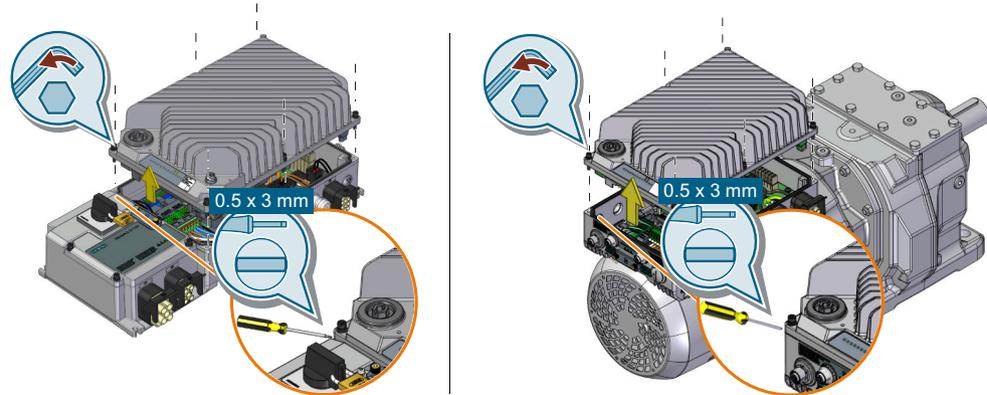


- Install the new Electronic Module and tighten it with a tightening torque of 2.5 Nm (22.1 lbf.in).

Note: For G115D wall-mounted converter FSB (4 kW)/FSC, you need to remove the fan unit from the old Electronic Module, and then to reinstall the fan unit on the new Electronic Module.

 Replacing the fan unit (Page 404)

- Remove the commissioning cover by using an S12 hex nut driver ①. Use a flat-bit screwdriver ② to adjust the value settings on the two electromechanical potentiometers to be identical with the settings for the Electronic Module that was replaced. Reattach the commissioning cover with a tightening torque of 2.5 Nm (22.1 lbf.in)

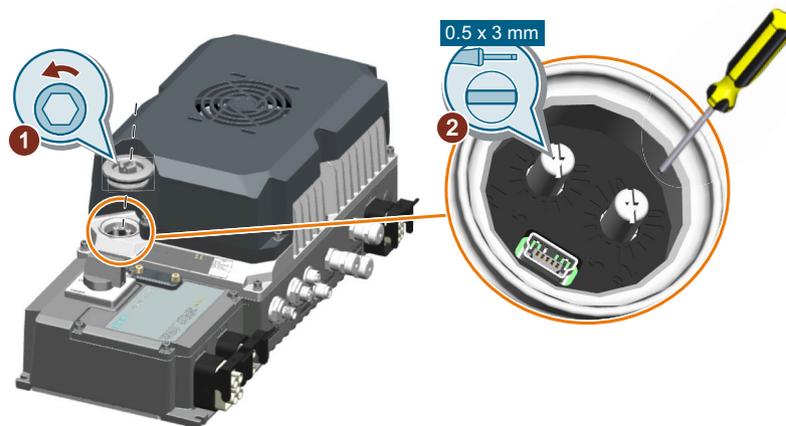

6. Switch on all power supplies (line supply and external 24 V power supply) to the converter.
7. Transfer the backed-up converter settings from the external storage medium to the converter with the new Electronic Module installed.



Memory card → converter (Page 363)

PG/PC → converter (Page 367)

---

#### Note

If you had not done data backup on an external storage medium before, recommission the converter. For more information, see the following chapter:



Commissioning (Page 115)

---

You have replaced the Electronic Module.



#### Further information

If the new Electronic Module has been stored for more than one year, you have to reform the DC link capacitors. Non-formed DC link capacitors can damage the converter in operation. For more information about how to form the DC link capacitors, see the following chapter:



Forming DC link capacitors (Page 65)

### 10.3.3 Replacing the fan unit

The G115D wall-mounted converter FSB (4 kW)/FSC is integrated with a fan unit.


The average service life of the fan is 40,000 hours. In practice, however, the service life may deviate from this value. The dusty environment, in particular, can block up the fan. Make sure that you replace the defective fan in time to ensure the proper operation of the converter

#### Precondition


- You have switched off the converter power supply before replacing the fan unit.

## Procedure

1. Switch off all power supplies (line supply and external 24 V power supply) to the converter.
2. Release the 4 retaining screws on the fan cover.

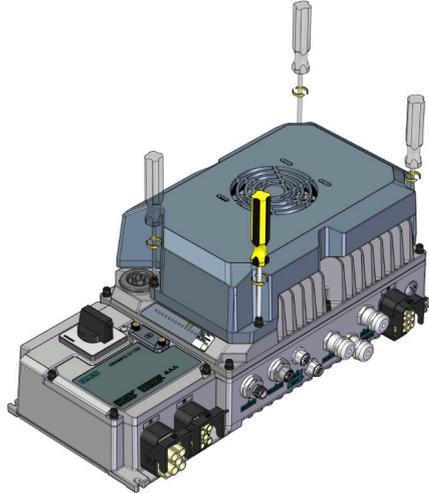


3. Release the M8 connector on the Electronic Module.

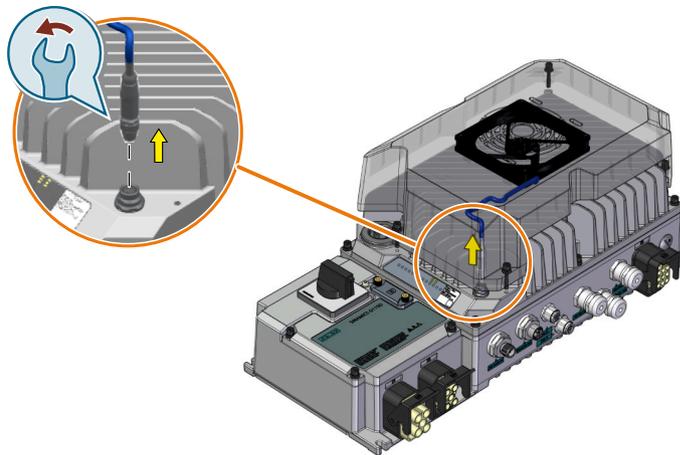

10.4 Repair switch

4. Remove the fan unit from the converter.

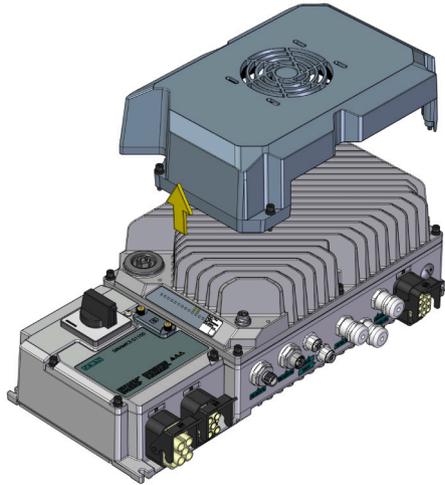

5. Install the new fan unit and fix it with a tightening torque of 2.5 Nm (22.1 lbf.in).

You have replaced the fan unit.



## 10.4 Repair switch

### Overview

The G115D wall-mounted converter is optionally available with an integrated repair switch. The repair switch allows the converter to be totally isolated from the mains. This means that the mains power to the converter is terminated and the converter cannot start or stop the motor; however, the 400 V AC and/or 24 V DC power supplies to the daisy chained converters are still maintained.



**! WARNING**

**Electric shock as a result of a residual charge in power components**

After the power supply has been switched off, it takes up to five minutes until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level.

- Wait at least five minutes to allow the converter to discharge after switching the repair switch off before carrying out any maintenance work.

**Note**


The integrated repair switch in the G115D is listed as a manual motor controller suitable as motor disconnect.

Although the activation of the switch while the motor is running is allowed, in order to provide maximum protection to the converter, Siemens recommends that you stop the motor by other means and wait until the motor reaches a full stop before activating the switch.

**Note**

For converters integrated with both the repair switch and the 24 V PSU, the 24 V DC power supply to the converter is maintained when you switch off the 400 V AC supply via the repair switch.

The location of the repair switch on the wall-mounted converter is shown in the figure below.

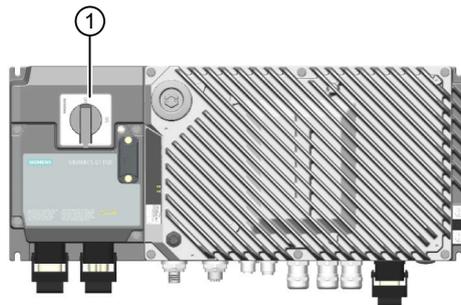

① Repair switch

**Function description**

When the repair switch is set to OFF, the mains power to the converter is terminated. The converter pulses are disabled and the motor cannot be started or react in anyway to commands from the converter or the controlling PLC. In this case, F07802 will be generated with ON command.

With parameter r8559.12, you can read the feedback signal of the repair switch:

- r8559.12 = 1, repair switch is switched to OFF
- r8559.12 = 0, repair switch is switched to ON (mains on or no repair switch installed)

The repair switch can be padlocked into position so that once it has been switched off, it cannot be accidentally switched on.

The motor can be repaired or replaced as required. Once the repair has been completed the repair switch can be unlocked and switched on - the motor is then directly under the command of the converter or the controlling PLC.

It should be noted that although the motor is isolated, communications and commands can be passed between the controlling PLC and the converter, for example, parameters can be changed.


## 10.5 Local/Remote control panel

**Overview**

The G115D wall-mounted converter is optionally available with an integrated Local/Remote control (LRC) panel. The LRC panel has been designed to enable the user to take control of the converter and motor from the automated system. In the local control mode, the user can precisely control the movement of the motor, for example, starting, stopping and inching the motor when fitting a new belt to a conveyor section.

10.5 Local/Remote control panel

The layout of the local/remote control panel is shown in the figure below.

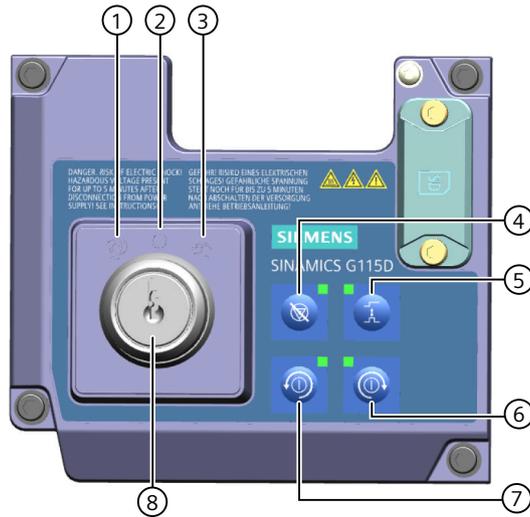

- ① Remote control mode
- ② Off/fault reset
- ③ Local control mode
- ④ Quick stop override <sup>1)</sup>
- ⑤ Inching/continuous <sup>1)</sup>
- ⑥ Jog right <sup>1)</sup>
- ⑦ Jog left <sup>1)</sup>
- ⑧ Keyswitch <sup>2)</sup>

<sup>1)</sup> Only effective in local control mode. When the buttons are pressed, the corresponding LEDs light up.

<sup>2)</sup> Key number: SB30

Function description

The functions of the various buttons and keyswitch positions are given in the table below.

Key/button	Description
Remote	If the converter is controlled via macro settings, Startdrive or G120 Smart Access, the key must be switched to the remote position.
Off/fault reset	When the key is switched to the off position, the converter will be in standby with pulses disabled and will ignore any command source inputs. As the keyswitch is moved from this position a fault reset will occur.
Local	When the key is switched to the local position, the converter ignores the command source and setpoint source from macro settings, Startdrive or G120 Smart Access. The converter only reacts to the local buttons on the LRC panel.
Quick stop override	The quick stop function enables the converter to react to sensors on a conveyor segment when items move past the sensor. The quick stop override button disables the converters reaction to the sensor signals.
Inching/continuous	This button toggles between inching and continuous movement of the motor. The movement of the motor is determined by the values set in parameters p1058 and p1059. <b>Inching:</b> Press and hold the Jog button to run the motor, and release the button to stop the motor. <b>Continuous:</b> Press the Jog button to run the motor, and press the Jog button again to stop the motor.

Key/button	Description
Jog left	Pressing the Jog left button will move the conveyor belt to the left.
Jog right	Pressing the Jog right button will move the conveyor belt to the right.

## Parameters

With parameter r8559, you can read the feedback signal of the LRC panel status:

Parameter	Description
r8559[0...12]	<p>Display and BICO output for the status of local/remote control panel.</p> <ul style="list-style-type: none"> <li>• Bit 0: 1 = LRC is available. The LRC panel is connected or the blanking cover is fitted.</li> <li>• Bit 1: 1 = LRC is switched to OFF.</li> <li>• Bit 2: 1 = Remote control is active.</li> <li>• Bit 3: 1 = Local control is active.</li> <li>• Bit 4: 1 = Quick stop override is active.</li> <li>• Bit 5: 1 = Inching/continuous motion is active.</li> <li>• Bit 6: 1 = Jog left is active</li> <li>• Bit 7: 1 = Jog right is active</li> <li>• Bit 8: 1 = LRC is not available. The LRC panel or the blanking cover is removed.</li> <li>• Bit 9: Reserved</li> <li>• Bit 10: 1 = LRC not detected. Unknown status is detected.</li> <li>• Bit 11: 1 = Drive is inhibited. The drive is inhibited with bit 8=1 or bit10=1.</li> <li>• Bit 12: 0 = repair switch is switched to ON; 1 = repair switch is switched to OFF (mains on or no repair switch installed)</li> </ul>

## Further information

For more information on the "JOG" function, refer to the following chapter:

 Jogging (Page 194)

For more information on LRC functions, refer to function diagram 2507 of List Manual:

 Overview of the manuals (Page 610)

## 10.6 Firmware upgrade and downgrade


### NOTICE

#### Damage to converter due to interruption of firmware upgrade or downgrade

The converter can be damaged if the power supply is interrupted during firmware upgrade or downgrade.

- Ensure that the power supply is stable before starting the firmware upgrade or downgrade.

Overview

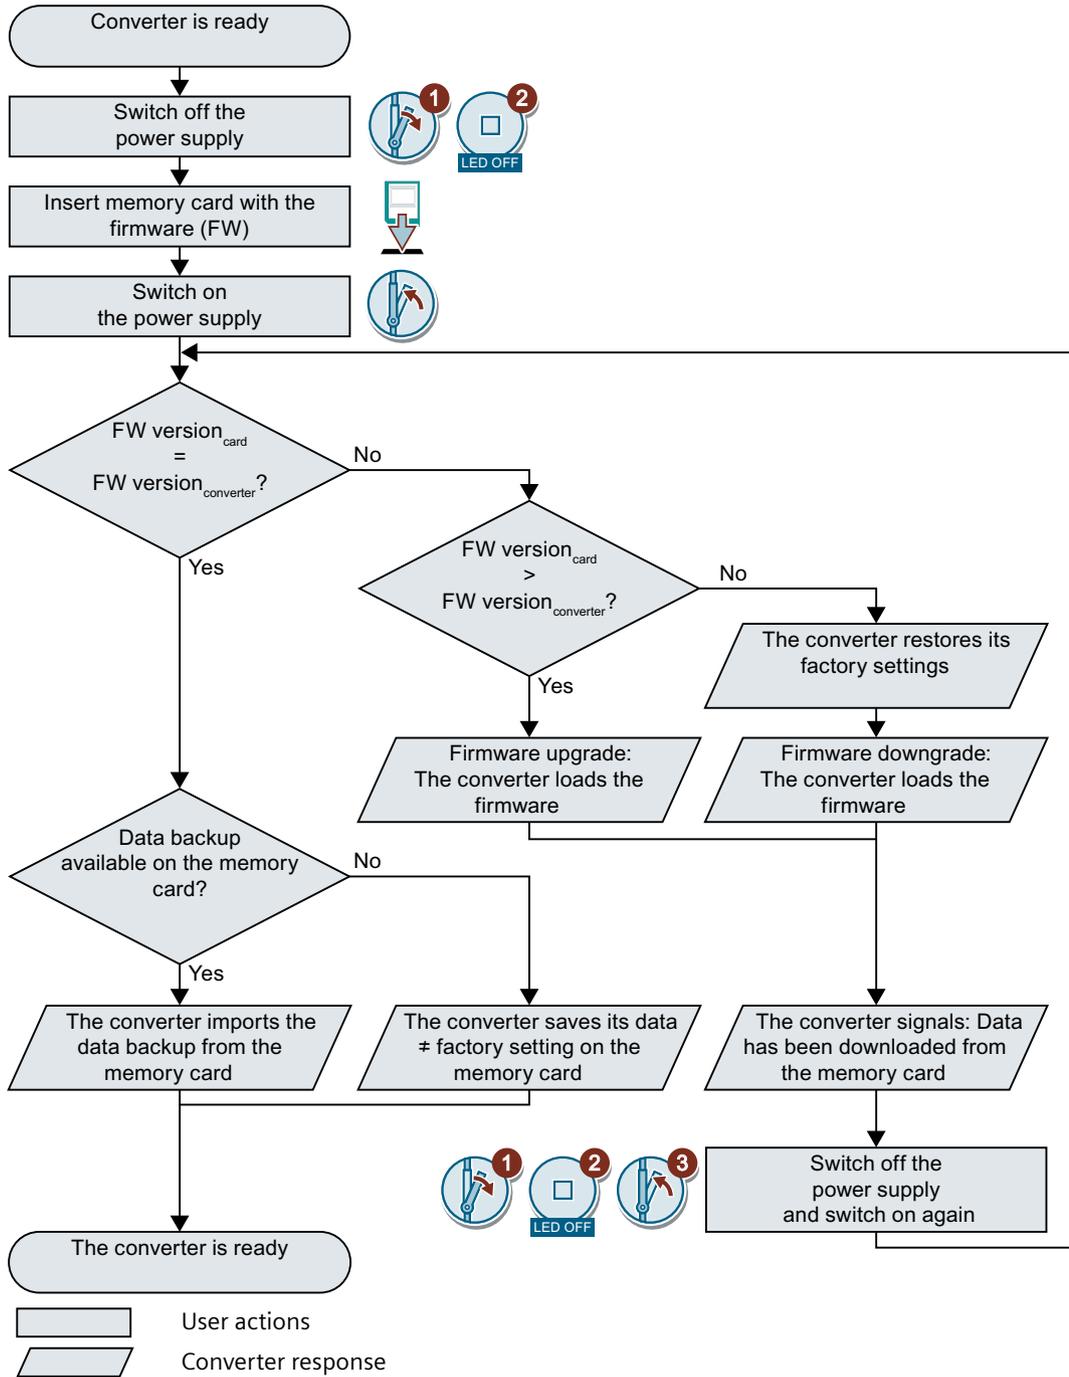

## 10.6.1 Preparing the memory card

### Overview

You can load the converter firmware from the Internet to a memory card.

### Precondition

You have the appropriate memory card.

 Memory cards (Page 360)

### Procedure

1. Download the required firmware to your PC from the Internet.  
 Download (<https://support.industry.siemens.com/cs/ww/en/view/67364620>)
2. Extract the files to a directory of your choice on your PC.
3. Transfer the unzipped files into the root directory of the memory card.



Depending on the firmware, the filenames and the number of files may differ from the display above.

The "USER" directory does not exist on unused memory cards. After the memory card is plugged in for the first time, the converter creates a new "USER" directory.

You have prepared the memory card for the firmware upgrade or downgrade.



## 10.6.2 Upgrading the firmware

### Overview

When upgrading the firmware, you replace the converter firmware with a newer version.

### Precondition


- Converter and memory card have different firmware versions.
- You have the memory card with the firmware for that particular converter.

### Function description


The following procedure applies to both the G115D motor-mounted converter and the G115D wall-mounted converter.

#### Procedure


1. Switch off the line voltage to the converter and (if installed) the external 24 V power supply or the voltage for the digital outputs of the converter.
2. Wait until all LEDs on the converter are dark.

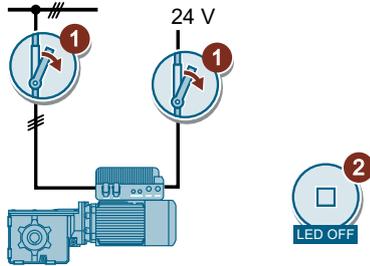


3. Insert the memory card with the matching firmware into the converter slot until it latches into place.

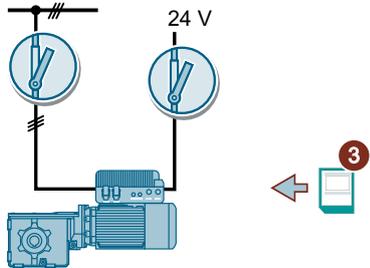

4. Switch on the power supply of the converter again.
5. The converter transfers the firmware from the memory card into its memory. The transfer takes approximately 5 to 10 minutes. While data is being transferred, the LED RDY on the converter stays red. The LED BF or AS-i/FLT flashes orange with a variable frequency.

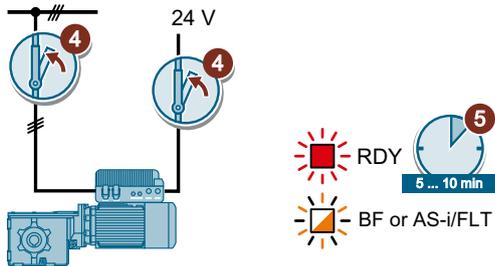

6. At the end of the transfer, the LED RDY and BF (or AS-i/FLT) slowly flash red (0.5 Hz).

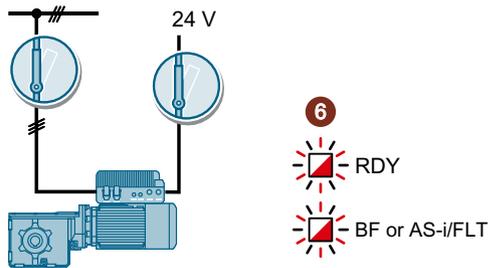


#### Power supply failure during transfer

The converter firmware will be incomplete if the power supply fails during the transfer.

- Start again with step 1 of the instructions.

7. Switch off the power supply of the converter.  
8. Wait until all LEDs on the converter are dark.

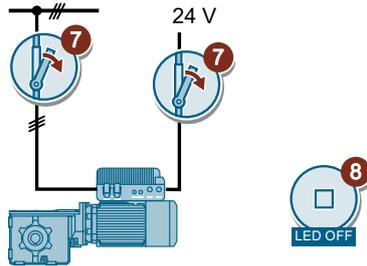


9. Remove the memory card from the converter.

**Note:** You can also leave the memory card in the converter. The converter will behave differently depending on whether the memory card contains a data backup:

- If the memory card contains a data backup of the converter settings:  
⇒ The converter will take the settings from the memory card in step 10.
- If the memory card does not have a data backup of the converter settings:  
⇒ The converter will write its settings to the memory card in step 10.

10. Switch on the power supply of the converter again.

If the firmware upgrade was successful, after several seconds the converter LED RDY turns green.

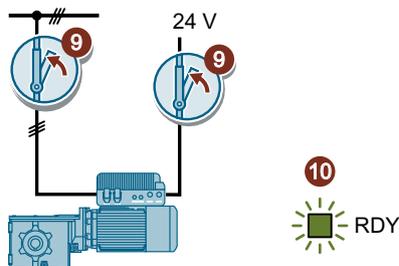

You have upgraded the converter firmware to a newer version.



### 10.6.3 Downgrading the firmware

#### Introduction

When downgrading the firmware, you replace the converter firmware with an older version. Only update the firmware to an older level if, after replacing a converter, you require the same firmware in all converters.

#### Precondition


- Converter and memory card have different firmware versions.
- You have the memory card with the firmware for that particular converter.
- You have backed up the converter settings on the memory card or in a PC, or on the SINAMICS G120 Smart Access.  
 Data backup and series commissioning (Page 359)

#### Function description


The following procedure applies to both the G115D motor-mounted converter and the G115D wall-mounted converter.

#### Procedure

1. Switch off the line voltage to the converter and (if installed) the external 24 V power supply or the voltage for the digital outputs of the converter.
2. Wait until all LEDs on the converter are dark.

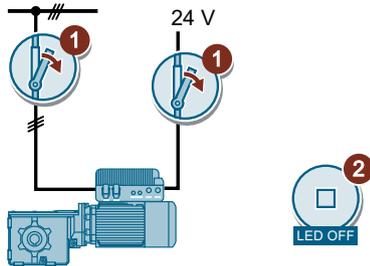


3. Insert the memory card with the matching firmware into the converter slot until it latches into place.

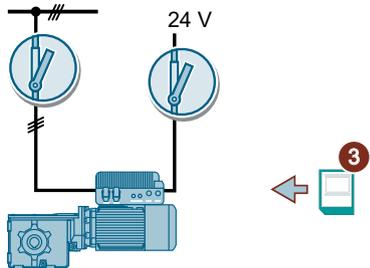


4. Switch on the power supply of the converter again.

5. The converter transfers the firmware from the memory card into its memory. The transfer takes approximately 5 to 10 minutes. While data is being transferred, the LED RDY on the converter stays red. The BF or AS-i/FLT LED flashes orange with a variable frequency.

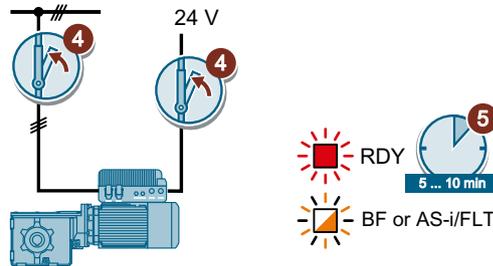

6. At the end of the transfer, the LED RDY and BF (or AS-i/FLT) slowly flash red (0.5 Hz).

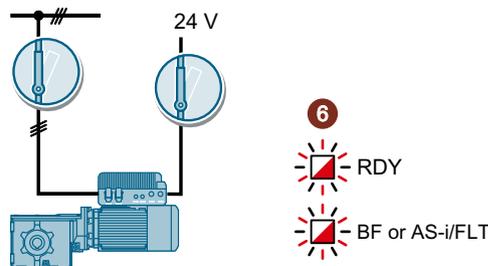


#### Power supply failure during transfer

The converter firmware will be incomplete if the power supply fails during the transfer.

- Start again with step 1 of the instructions.


7. Switch off the power supply of the converter.  
8. Wait until all LEDs on the converter are dark.

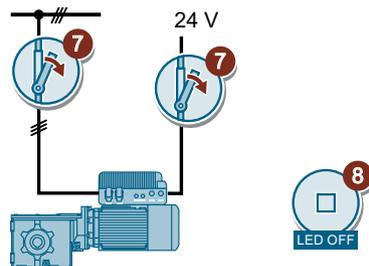

9. Remove the memory card from the converter.  
**Note:** You can also leave the memory card in the converter. The converter will behave differently depending on whether the memory card contains a data backup:
- If the memory card contains a data backup of the converter settings:  
⇒ The converter will take the settings from the memory card in step 10.
  - If the memory card does not have a data backup of the converter settings:  
⇒ The converter will reset to factory settings and write the settings to the memory card in step 10.

10.6 Firmware upgrade and downgrade

- 10. Switch on the converter power supply again.  
If the firmware downgrade was successful, after several seconds the converter LED RDY turns green.  
The converter is reset to factory settings after firmware downgrade.

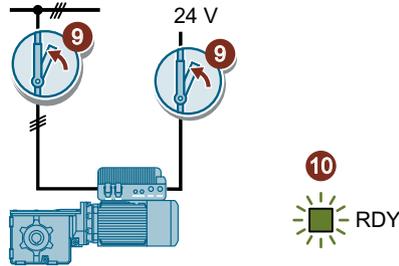

- 11. Transfer the settings from your data backup to the converter.  
Memory card → converter (Page 363)  
PG/PC → converter (Page 367)


You have downgraded the converter firmware to an older version and transferred the settings to the converter.

□

10.6.4 Correcting an unsuccessful firmware upgrade or downgrade

Precondition

The converter signals an unsuccessful firmware upgrade or downgrade with a quickly flashing LED RDY and a lit-up LED BF (or AS-i FLT).

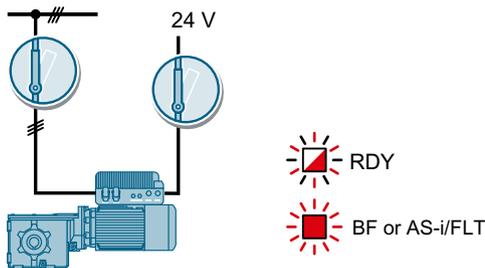

Correcting a failed upgrade or downgrade

You can check the following to correct an unsuccessful firmware upgrade or downgrade:

- Have you inserted the card properly?
- Does the card contain the correct firmware?

Repeat the firmware upgrade or downgrade procedure.

## 10.7 Reduced acceptance test after component replacement and firmware change

After a component has been replaced or the firmware updated, a reduced acceptance test of the safety functions must be performed.

Measure	Reduced acceptance test	
	Acceptance test	Documentation
Replacing the converter with an identical type	Not required. Only check the direction of rotation of the motor.	<ul style="list-style-type: none"> <li>• Supplement the converter data</li> <li>• Log the new checksums</li> <li>• Countersignature</li> <li>• Supplement the hardware version in the converter data.</li> </ul>
Replacing the motor with an identical pole pair number		No change.
Replace the gearbox with an identical ratio		
Replacing safety-related I/O devices (e.g. Emergency Stop switch).	Not required. Only check the control of the safety functions affected by the components that have been replaced.	No change.
Converter firmware upgrade.	Not required.	<ul style="list-style-type: none"> <li>• Supplement firmware version in the converter data</li> <li>• Log the new checksums</li> <li>• Countersignature.</li> </ul>



## Technical data

### 11.1 Technical data of the G115D converter with SIMOGEAR geared motor

For more information on the technical data of the geared motors, refer to the following chapter:

 Additional information on the SIMOGEAR geared motor (Page 449)

#### 11.1.1 General technical data

##### Electrical data

Property	Explanation
Line voltage	<ul style="list-style-type: none"> <li>For systems according to IEC:               <ul style="list-style-type: none"> <li>– 3 AC 380 V (-10 %) ... 480 V (+10 %)</li> </ul> </li> <li>For systems according to UL:               <ul style="list-style-type: none"> <li>– 3 AC 380Y/220 V ... 480Y/277 V</li> </ul> </li> </ul> <p>The actual permissible line voltage depends upon the installation altitude.</p>
Line supply configurations	TN, TT, IT <sup>1)</sup> Not for corner-grounded network.  Permissible line supplies (Page 58)
Line frequency	50 Hz/60 Hz ( $\pm 10\%$ )
Output frequency	0 Hz ... 550 Hz in U/f 0 Hz ... 240 Hz in SLVC (default)
Converter efficiency	96% ... 98%
Power factor $\lambda$	0.73 ... 0.90
$\cos \varphi$	0.98 ... 0.99
Line impedance	$U_k < 4\%$ (RSC > 25)
Inrush current	Less than 2 × rated input current. The converter can withstand 100000 power cycles with an interval of 120 s.
Overvoltage category	III, according to IEC 61800-5-1
Maximum short-circuit current (SCCR or I <sub>cc</sub> )	When using fuses: 65 kA rms You can find the data for further overcurrent protection devices on the Internet:  Branch protection and short-circuit strength according to UL and IEC ( <a href="https://support.industry.siemens.com/cs/ww/en/ps/27867">https://support.industry.siemens.com/cs/ww/en/ps/27867</a> )
Minimum short-circuit current	5 kA rms

## Technical data

### 11.1 Technical data of the G115D converter with SIMOGEAR geared motor

Property	Explanation
Earth fault current	The converter can be operated with a type B 300 mA RCD.
Electromechanical (EM) brake	<ul style="list-style-type: none"><li>180 V DC<ul style="list-style-type: none"><li>Rated current: 0.8 A</li><li>Disconnection on the DC side permits "fast" braking</li></ul></li></ul>

<sup>1)</sup> For IT system, only permissible when the functional grounding in the converter has been removed.

## Safety Integrated

Property	Explanation
Safety function	<p>STO and SLS</p> <p>STO and SLS fulfil the requirements of the following standards:</p> <ul style="list-style-type: none"><li>SIL 2 according to IEC61508, part 1 to 3 (2010)</li><li>PL d according to IEC61800-5-2 (2016)</li><li>Category 3 according to ISO13849 part 1 (2015)</li></ul> <p>The function STO corresponds to stop category 0 according to IEC60204 (2005). STO is always prioritized higher than SLS.</p> <p><b>Response Time</b></p> <p>The response times for the Safety Integrated functions can be found under: Safety Integrated response times (<a href="https://support.industry.siemens.com/cs/gb/en/view/109782490">https://support.industry.siemens.com/cs/gb/en/view/109782490</a>)</p> <p><b>Probability of failures</b></p> <p>The PFH values can be found under: PFH values (<a href="https://support.industry.siemens.com/cs/ww/en/view/76254308">https://support.industry.siemens.com/cs/ww/en/view/76254308</a>)</p>

## Environmental conditions

Property	Explanation
Surrounding temperature	Storage & transport -25 °C to +50 °C
	Operation -30 °C to +55 °C <sup>1)</sup>  Torque derating as a function of the surrounding temperature (Page 428)
Vibration during operation	Duty class 3M3 according to EN 60721-3-3
Shock during operation	Duty class 3M3 according to EN 60721-3-3  Mounting the G115D Motor Mounted drive (Page 43)
Pollution degree	Suitable for pollution degree 2 environment according to EN 61800-5-1
Relative humidity	< 95% (non-condensation, no icing, no salt spray)
Installation altitude	Up to 1000 m above sea level without derating Above 1000 m (up to 4000 m) with derating  Torque derating as a function of the installation altitude (Page 427)
Cooling method	Active cooling with the motor fan
Cooling air	Clean and dry air

11.1 Technical data of the G115D converter with SIMOGEAR geared motor

Property	Explanation
Degree of protection <sup>2)</sup>	<p>IP65/IP66, indoor and outdoor use, has to be protected from direct weather conditions according to EN IEC 60721-3-3</p> <p>Indoor use only according to UL type 4X</p> <p>Siemens recommends that you use the cables and connectors given in the linked chapter below to satisfy the suitable rating of the UL enclosed type.</p> <p> Cables and connectors (Page 73)</p>
Weight	The weight is stated on the rating plate.

<sup>1)</sup> For UL-compliant applications, the maximum surrounding temperature for a glanded variant with daisy chain is 48 °C.

<sup>2)</sup> For the specific degree of protection of your converter, refer to the rating plate on your component.

### 11.1.2 Technical data of inputs and outputs

Property	Explanation
Fieldbus interface	<p>PROFINET</p> <p>AS-i</p>
Operating voltage	<ul style="list-style-type: none"> <li>PROFINET variant: 24 V DC ± 15%</li> <li>I/O Control variant: 24 V DC ± 15%</li> <li>AS-i variant <sup>1)</sup>: 26.5 V to 31.6 V, 24 V DC ± 15%</li> </ul>
24 V power supply	<p>There are three options regarding the 24 V supply:</p> <ul style="list-style-type: none"> <li>The converter (I/O Control variant or PROFINET variant) obtains its 24 V power supply via terminals or via the M12 L-coding connector or 7/8" connector with 24 V DC ± 15%</li> <li>The converter (AS-i variant) obtains its 24 V power supply via X03 (M12 A-coding, two poles with AS-i power supply, two poles with 24 V DC ± 15%)</li> <li>The converter generates its 24 V power supply from the line voltage via the optional 24 V power supply unit.</li> </ul>
Setpoint resolution	0.01 Hz
Digital inputs	<p>4 (DI 0 to DI 3)</p> <ul style="list-style-type: none"> <li>Programmable digital inputs</li> <li>PNP, SIMATIC-compatible</li> <li>Unswitched logic supply</li> <li>Input voltage: High &gt; 11 V, Low &lt; 5 V</li> <li>Maximum input voltage: 30 V</li> <li>Maximum input current: 15 mA</li> </ul>

11.1 Technical data of the G115D converter with SIMOGEAR geared motor

Property	Explanation	
Configurable DI/DO	2 (DIO 24 & DIO 25)	<ul style="list-style-type: none"> <li>• Can be configured as digital inputs or outputs</li> <li>• When used as digital inputs:                             <ul style="list-style-type: none"> <li>– Switched logic supply</li> <li>– Same specification as DI 0 to DI 3</li> </ul> </li> <li>• When used as digital output:                             <ul style="list-style-type: none"> <li>– PNP</li> <li>– Switched logic supply</li> <li>– 24 V DC/0 A to 0.5A (resistive load)</li> <li>– Continuous current rating: max. 500 mA for two DOs in total</li> <li>– Updating time of all digital outputs: 2 ms</li> </ul> </li> </ul>
Motor temperature sensor	PTC	<ul style="list-style-type: none"> <li>• Short-circuit monitoring &lt; 20 Ω</li> <li>• Overtemperature 1650 Ω</li> </ul>
	Pt1000	<ul style="list-style-type: none"> <li>• Measurement range: -48 °C to 248 °C</li> <li>• Short-circuit monitoring &lt; 603 Ω</li> <li>• Wire-break &gt; 2120 Ω</li> </ul>
	KTY84	<ul style="list-style-type: none"> <li>• Measurement range: -48 °C to 248 °C</li> <li>• Short-circuit monitoring &lt; 50 Ω</li> <li>• Wire-break &gt; 2120 Ω</li> </ul>
	Temperature switch	<ul style="list-style-type: none"> <li>• Opened temperature switch ≥ 100 Ω</li> </ul>
Fail-safe digital input	1 (DI 2 and DI 3)	<ul style="list-style-type: none"> <li>• If you enable a safety function, then the fail-safe digital input comprises the two digital inputs DI 2 and DI 3.</li> <li>• The fail-safe digital inputs are in accordance with EN 61131-2:                             <ul style="list-style-type: none"> <li>– Input voltage: High &gt; 11 V, Low &lt; 5 V</li> <li>– Maximum input current: 15 mA</li> <li>– Maximum input voltage: 30 V</li> </ul> </li> <li>• Response time:                             <ul style="list-style-type: none"> <li>– When the debounce time p9651 &gt; 0: Typical 5 ms + p9651, worst case 15 ms + p9651</li> <li>– When debounce time = 0: Typical 6 ms, worst case 16 ms</li> </ul> </li> </ul>
PROFIsafe		Yes (for PROFINET version only)
USB interface	Mini-USB	
Memory card (optional)	Slot for SD memory cards	
	 Memory cards (Page 360)	

<sup>1)</sup> For the AS-i variant, the converter is on the one hand powered by the specific AS-i power supply through the yellow cable; the supply voltage range is DC 26.5V to DC 31.6V. The auxiliary 24V power supply (DC 24V +/- 15%) provided via the black cable must also be used for the correct operation of the converter..

### 11.1.3 Technical data dependent upon the power

Frame size	Rated power (kW)	Input current (A)	Power loss (W)
FSA	0.37	1.08	20.22
	0.55	1.47	24.43
	0.75	1.79	28.52
	1.1	2.43	37.47
	1.5	3.18	49.02
FSB	2.2	4.65	64.35
	3	6.23	85.89
	4	8.16	114.53

#### Typical current consumption on 24 V DC power supply

G115D motor-mounted converter	Typical current consumption from the 24 V power supply, unswitched <sup>1) 3)</sup>		Typical current consumption from the AS-i cable <sup>2) 3)</sup>	
	PROFINET variant	I/O variant	AS-i variant	
			Yellow cable	Black cable
FSA/FSB	290 mA	250 mA	90 mA	200 mA

- 1) The typical current consumption does not include the consumption of connected sensors at DI 0 to DI 3 from the unswitched 24 V power supply and the consumption of connected sensors/actors at DIO 24/DIO 25 from the switched 24 V power supply.
- 2) The typical current consumption does not include the consumption of connected sensors at DI 0 to DI 3 from the yellow cable and the consumption of connected sensors/actors at DIO 24/DIO 25 from the black cable.
- 3) The current consumption for digital inputs DI 0 ~ DI 3 is max. 200 mA in total. The current consumption for digital inputs DI 24 and DI 25 (when DIO 24/DIO 25 is configured as DI) is max. 200 mA in total, and the current consumption for digital outputs DO 24 and DO 25 (when DIO 24/DIO 25 is configured as DO) is max. 500 mA in total.

#### Standby currents

G115D motor-mounted converter		Standby current (mA)					
		Mains power supply without optional 24 V DC power supply					
Frame size	Rated power	380 V, 50 Hz	380 V, 60 Hz	400 V, 50 Hz	400 V, 60 Hz	480 V, 50 Hz	480 V, 60 Hz
FSA	0.37 kW to 1.5 kW	32	39	34	41	41	49
FSB	2.2 kW to 4 kW	69	83	73	87	87	104

G115D motor-mounted converter		Standby current (mA)					
		Mains power supply with optional 24 V DC power supply					
Frame size	Rated power	380 V, 50 Hz	380 V, 60 Hz	400 V, 50 Hz	400 V, 60 Hz	480 V, 50 Hz	480 V, 60 Hz
FSA	0.37 kW to 1.5 kW	64	71	62	69	59	67
FSB	2.2 kW to 4 kW	101	115	101	115	105	122

### 11.1.4 Technical data of braking resistors

#### Requirements for the minimum resistance of braking resistors


For each frame size, the minimum resistance of braking resistors is required as follows:

Frame size	Rated power	Minimum resistance of braking resistors
FSA	0.37 kW to 1.5 kW	200 Ω
FSB	2.2 kW to 4 kW	80 Ω

#### Technical data of integrated braking resistor

G115D motor-mounted converter		Integrated braking resistor		
Frame size	Rated power	Resistance	Continuous braking power	Peak braking power <sup>1)</sup>
FSA	0.37 kW to 1.5 kW	350 Ω	10 W	100 W
FSB	2.2 kW to 4 kW	175 Ω	10 W	100 W

<sup>1)</sup> Peak braking power at 10% cycle time of a 120s cycle. For the peak braking power at different duty cycles, refer to the following diagram.

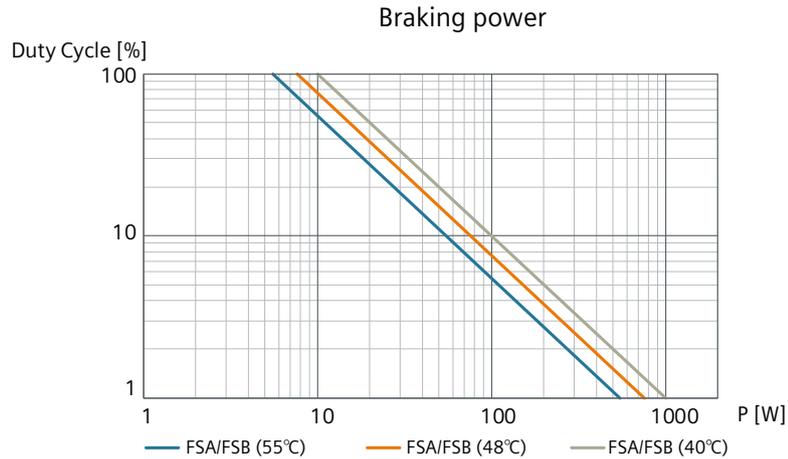


11.1 Technical data of the G115D converter with SIMOGEAR geared motor

**Technical data of external braking resistor**

The external braking resistors are not included in the scope of delivery of the G115D converter. The following optional external braking resistors are available.

G115D motor-mounted converter		External braking resistor					
Frame size	Rated power	Resistance (+/-10%)	Continuous braking power	Peak braking power <sup>1)</sup>	Article number	Vibration and shock during operation	Surrounding temperature
FSA	0.37 kW to 1.5 kW	210 Ω	200 W	1200 W	6SL3501-1BE32-0AA0	Class 3M2, test according to EN 60721-3-3	-30 °C to +55 °C
		240 Ω	240 W	1440 W	6SL3501-1BE32-4AA0		
		480 Ω	480 W	2880 W	6SL3501-1BE34-8AA0		
FSB	2.2 kW to 4 kW	160 Ω	200 W	1200 W	6SL3501-1BE32-0BA0		
		150 Ω	240 W	1440 W	6SL3501-1BE32-4BA0		
		150 Ω	600 W	3600 W	6SL3501-1BE36-0BA0		

<sup>1)</sup> Peak braking power at 10% cycle time of a 120s cycle. For the peak braking power at different duty cycles, refer to the following diagram.

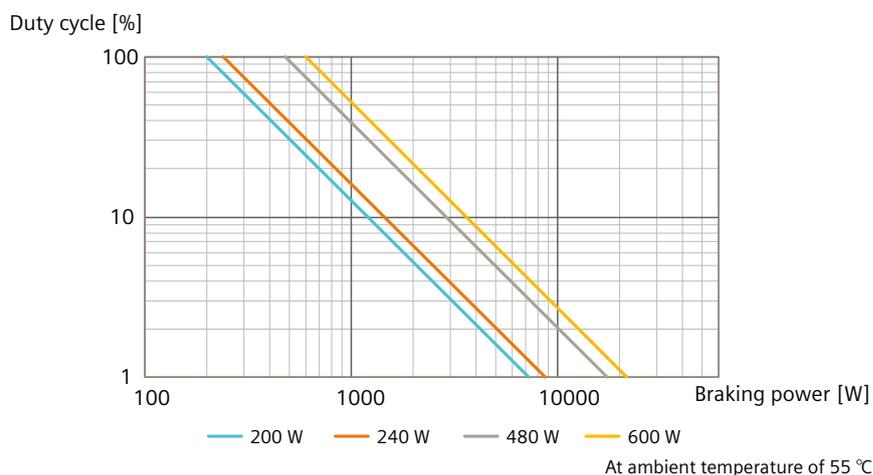

**11.1.5 Load cycles and overload capabilities**

Overload capability is the property of the converter to temporarily supply a current that is higher than the rated current to accelerate a load.

**Definitions**

**Base load**

Constant load between the accelerating phases of the converter

**HO base load input current**

Permissible input current for a "High Overload" load cycle

**HO base load output current**


Permissible output current for a "High Overload" load cycle

**HO base load power**

Rated power based on the HO base load output current

If not specified otherwise, the power and current data in the technical data always refer to a load cycle according to High Overload.


**Permissible converter overload**

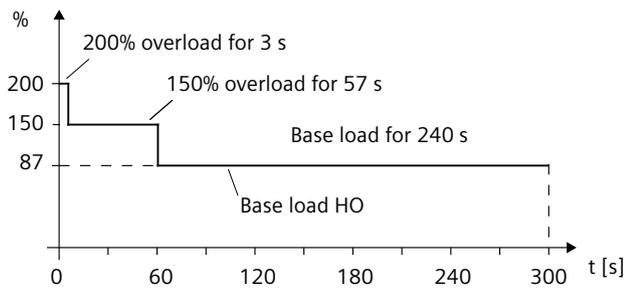

**Note**


- The rated ambient temperature for the above load cycles is 40 °C.
- You can set the parameter p0292[0] to a range of 5 °C to 25 °C based on the application.

**Permissible converter output current**

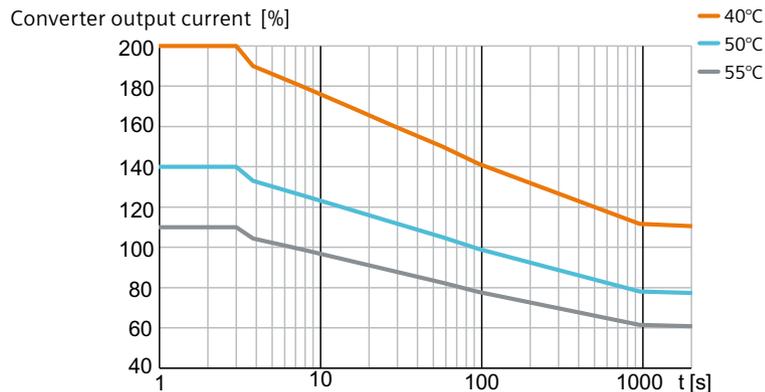


11.1 Technical data of the G115D converter with SIMOGEAR geared motor

**Permissible motor output torque (2KJ8 asynchronous motor)**

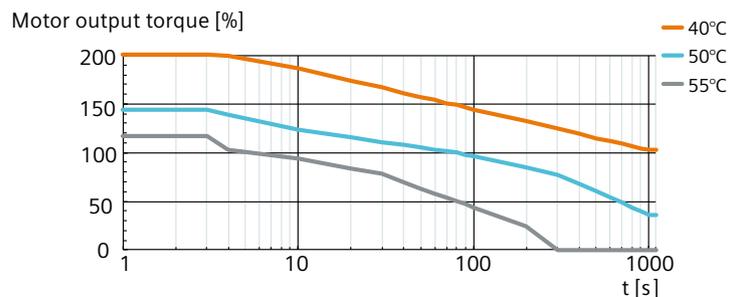

**Permissible motor output torque (2KJ8 synchronous reluctance motor)**

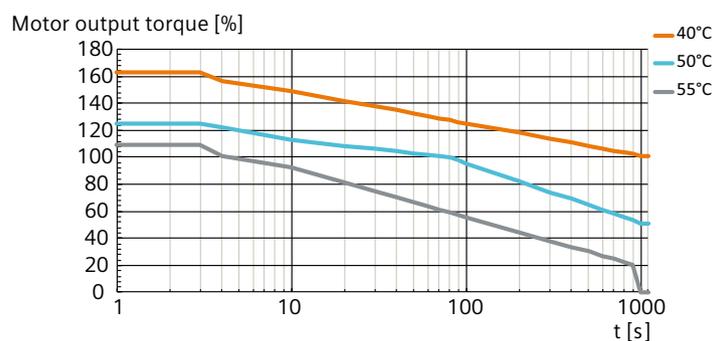


**11.1.6 Derating data**

**11.1.6.1 Torque derating as a function of the installation altitude**


The permissible motor output torque is reduced above an installation altitude of 1000 m.

**Torque derating of 2KJ8 asynchronous motor**

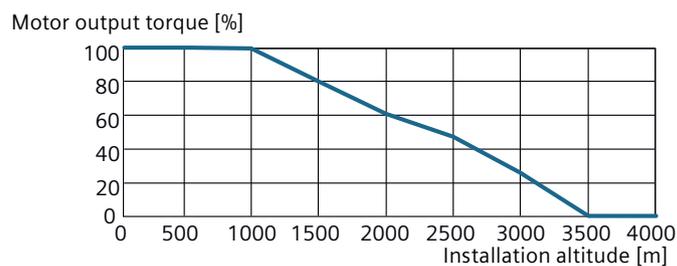

11.1 Technical data of the G115D converter with SIMOGEAR geared motor


**Torque derating of 2KJ8 synchronous reluctance motor**

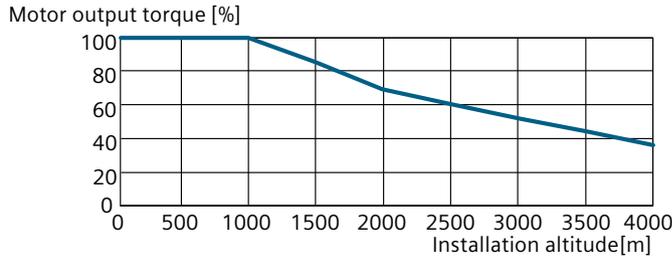


**11.1.6.2 Torque derating as a function of the surrounding temperature**

The permissible motor output torque is reduced when the surrounding air temperature is above 40 °C.

**Torque derating of 2KJ8 asynchronous motor**

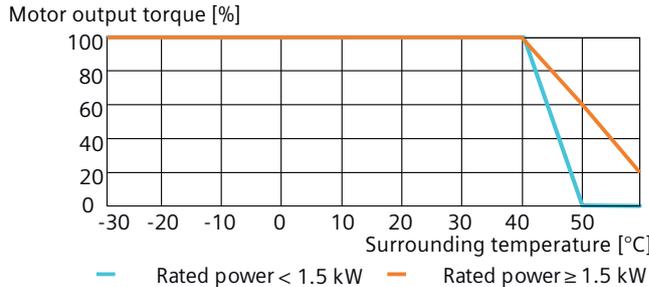

**Torque derating of 2KJ8 synchronous reluctance motor**

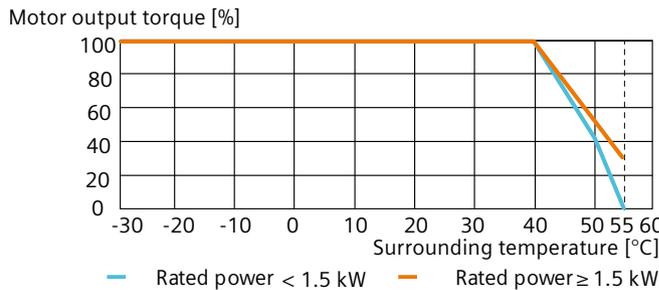


**11.1.6.3 Torque derating as a function of the line voltage**


The 2KJ8 asynchronous motor (across all speed ranges) and the 2KJ8 synchronous reluctance motor (with speed range 1:5 or 1:8.7) operate at 100% rated output torque at a line voltage from 380 V to 480 V. The 2KJ8 synchronous reluctance motor with speed range 1:10 operates at 100% rated output torque at a line voltage from 420 V to 480 V. The output torque should be reduced when the line voltage falls outside the range.

**Torque derating of 2KJ8 asynchronous motor**

11.1 Technical data of the G115D converter with SIMOGEAR geared motor

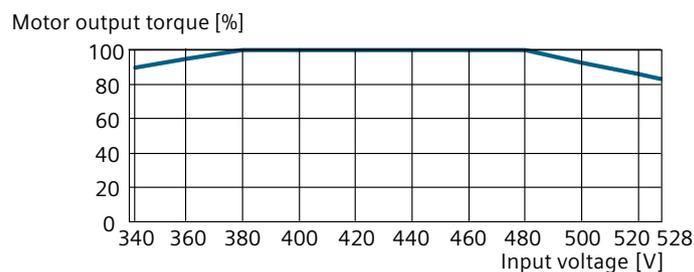

**Torque derating of 2KJ8 synchronous reluctance motor**

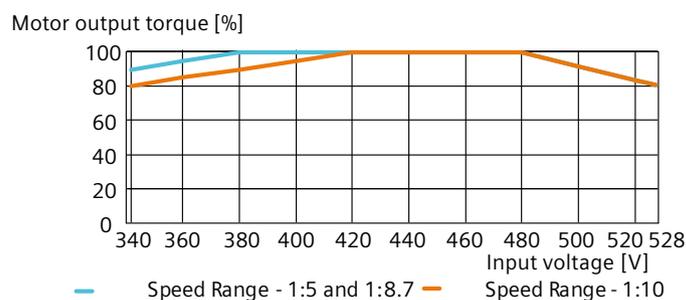


**11.1.6.4 Torque derating as a function of the pulse frequency**


The permissible motor output torque is reduced when the converter is operated at a pulse frequency above 4 kHz and/or at an ambient temperature above 40°C.

The pulse frequency reduces automatically based on the heatsink temperature.

**Torque derating of 2KJ8 asynchronous motor (motor rated power < 1.5 kW)**

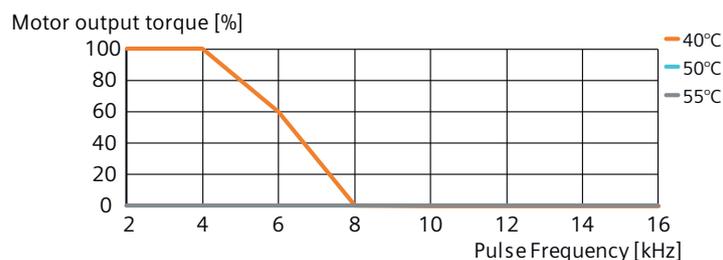


**Torque derating of 2KJ8 asynchronous motor (motor rated power ≥ 1.5 kW)**

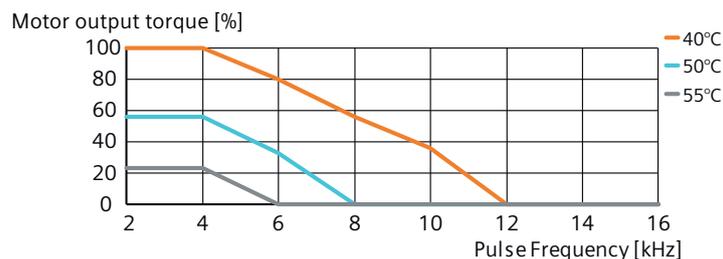


11.1 Technical data of the G115D converter with SIMOGEAR geared motor

**Torque derating of 2KJ8 synchronous reluctance motor (motor rated power < 1.5 kW)**

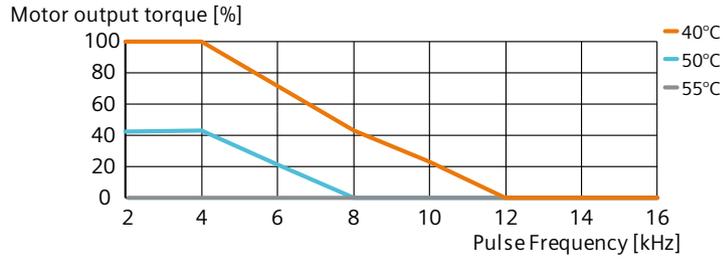

**Torque derating of 2KJ8 synchronous reluctance motor (motor rated power ≥ 1.5 kW)**

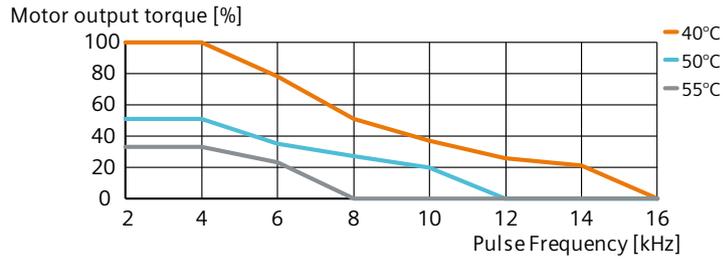


### 11.1.6.5 Torque derating as a function of the motor speed


#### Derating of motor output torque as a function of motor speed (with daisy chain)

With daisy chain connection, the motor output torque should be reduced when the motor speed is below 1500 rpm.

##### Torque derating of 2KJ8 asynchronous motor

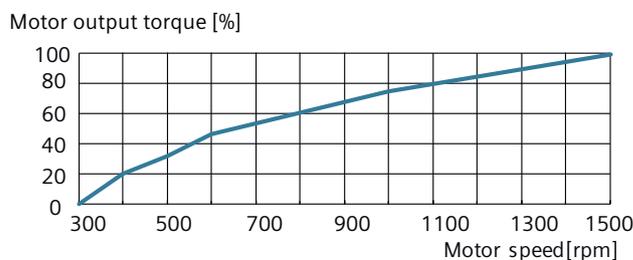


##### Torque derating of 2KJ8 synchronous reluctance motor

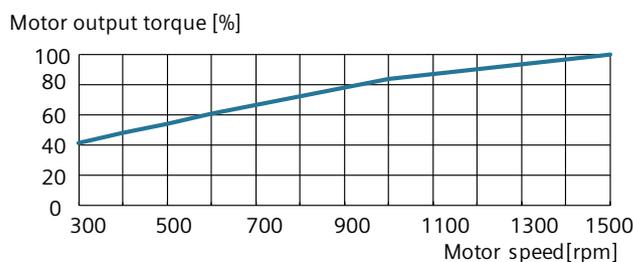

#### Derating of motor output torque as a function of motor speed (without daisy chain)


For motors with speed range 1:5 or 1:8.7, if the converter is not connected via daisy chain, the motor torque should be reduced when the motor speed is below 600 rpm. For motors with speed range 1:10 and without daisy chain connection, the motor can be operated at its rated torque until 300 rpm.

##### Torque derating of 2KJ8 asynchronous motor

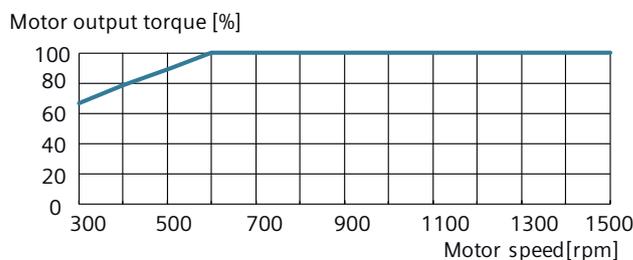

11.2 Technical data of the G115D wall-mounted converter

**Torque derating of 2KJ8 synchronous reluctance motor**

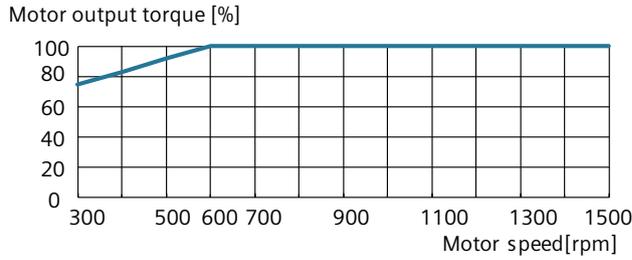

**Note**

For a 4 kW G115D motor-mounted converter without daisy chain, the derating curve is the same as that with daisy chain.

## 11.2 Technical data of the G115D wall-mounted converter

### 11.2.1 General converter technical data

#### Electrical data

Property	Explanation
Line voltage	<ul style="list-style-type: none"> <li>For systems according to IEC:                             <ul style="list-style-type: none"> <li>– 3 AC 380 V (-10 %) ... 480 V (+10 %)</li> </ul> </li> <li>For systems according to UL:                             <ul style="list-style-type: none"> <li>– 3 AC 380Y/220 V ... 480Y/277 V</li> </ul> </li> </ul> <p>The actual permissible line voltage depends upon the installation altitude.</p>
Line supply configurations	TN, TT, IT <sup>1)</sup> Not for corner-grounded network.  Permissible line supplies (Page 58)
Output voltage	3 AC 0 V ... line voltage
Line frequency	50 Hz/60 Hz (±10%)
Output frequency	0 Hz ... 550 Hz in U/f 0 Hz ... 240 Hz in SLVC
Converter efficiency	96% ... 98%
Power factor λ	0.80 ... 0.91
cos φ	0.98 ... 0.99
Line impedance	U <sub>k</sub> <4% (RSC>25)
Inrush current	Less than 2 × rated input current. The converter can withstand 100000 power cycles with an interval of 120 s.

11.2 Technical data of the G115D wall-mounted converter

Property	Explanation
Overvoltage category	III, according to IEC 61800-5-1
Pulse frequency	4 kHz (default); 4 kHz...16 kHz (in steps of 2 kHz)  Current derating as a function of the pulse frequency (Page 442)
Maximum short-circuit current (SCCR or Icc)	When using fuses: 65 kA rms You can find the data for further overcurrent protection devices on the Internet:  Branch protection and short-circuit strength according to UL and IEC ( <a href="https://support.industry.siemens.com/cs/ww/en/ps/27867">https://support.industry.siemens.com/cs/ww/en/ps/27867</a> )
Minimum short-circuit current	5 kA rms
Earth fault current	The converter can be operated with a type B 300 mA RCD.
Electromechanical (EM) brake	<ul style="list-style-type: none"> <li>• 180 V DC               <ul style="list-style-type: none"> <li>– Rated current: 0.8 A</li> <li>– Disconnection on the DC side permits "fast" braking</li> </ul> </li> <li>• 400 V AC (optional, for wall-mounted converter only)               <ul style="list-style-type: none"> <li>– Rated current: 1 A</li> </ul> </li> </ul>

<sup>1)</sup> For IT system, only permissible when the functional grounding in the converter has been removed.

### Safety Integrated

Property	Explanation
Safety function	STO and SLS STO and SLS fulfil the requirements of the following standards: <ul style="list-style-type: none"> <li>• SIL 2 according to IEC61508, part 1 to 3 (2010)</li> <li>• PL d according to IEC61800-5-2 (2016)</li> <li>• Category 3 according to ISO13849 part 1 (2015)</li> </ul> The function STO corresponds to stop category 0 according to IEC60204 (2005). STO is always prioritized higher than SLS.
	<b>Response Time</b> The response times for the Safety Integrated functions can be found under: Safety Integrated response times ( <a href="https://support.industry.siemens.com/cs/gb/en/view/109782490">https://support.industry.siemens.com/cs/gb/en/view/109782490</a> )
	<b>Probability of failures</b> The PFH values can be found under: PFH values ( <a href="https://support.industry.siemens.com/cs/ww/en/view/76254308">https://support.industry.siemens.com/cs/ww/en/view/76254308</a> )

### Environmental conditions

Property	Explanation
Surrounding temperature	Storage -40 °C to +70 °C, Class 1K4 according to IEC 60721-3-1, in product packaging
	Transport -40 °C to +70 °C, Class 2K4 according to IEC 60721-3-2, in transport packaging
	Operation -30 °C to +55 °C <sup>1)</sup> , Class 3K3 according to IEC 60721-3-3 Power derated by 3%/K when > 40 °C  Current derating as a function of the surrounding temperature (Page 441)

11.2 Technical data of the G115D wall-mounted converter

Property	Explanation	
Vibration and shock	Transport	Class 2M3, test according to EN 60721-3-2
	Operation	Class 3M2, test according to EN 60721-3-3
Resistance to biologically active substances	Class 3B1 according to EN 60721-3-3	
Pollution degree	Suitable for pollution degree 2 environment according to IEC 61800-5-1	
Relative humidity	< 95% (non-condensing, no icing, no salt spray)	
Installation altitude	Up to 1000 m above sea level without derating	
	Above 1000 m (up to 4000 m) with derating  Torque derating as a function of the installation altitude (Page 440)	
Cooling method	<ul style="list-style-type: none"> <li>FSA/FSB (2.2 kW to 3 kW): Natural convection cooling</li> <li>FSB (4 kW)/FSC: Air cooling with integrated fan</li> </ul>	
Cooling air	Clean and dry air	
Degree of protection <sup>2)</sup>	Glanded variant:	<ul style="list-style-type: none"> <li>IP66, indoor and outdoor use, has to be protected from direct weather conditions according to EN IEC 60721-3-3</li> <li>Indoor use only according to UL Type 4X (IP65/UL Type 4X indoor use only if the converter has Q8/0 connector at interface X2 or the optional integrated repair switch)</li> </ul>
	Connector variant:	<ul style="list-style-type: none"> <li>IP65, indoor and outdoor use, has to be protected from direct weather conditions according to EN IEC 60721-3-3</li> <li>Indoor use only according to UL Type 4X (IP65/No UL Type if the converter has MQ 15X or QUICKON connector at interface X1)</li> </ul>
	Siemens recommends that you use the cables and connectors given in the linked chapter below to satisfy the suitable rating of the UL enclosed type.  Cables and connectors (Page 73)	

<sup>1)</sup> For UL-compliant applications, the maximum surrounding temperature for a glanded variant with daisy chain is 48 °C.

<sup>2)</sup> For the specific degree of protection of your converter, refer to the rating plate on your component.

### 11.2.2 Technical data of inputs and outputs

The technical data of inputs and outputs for G115D wall-mounted converter are the same with that of G115D converter with geared motors. For details, see Chapter "Technical data of inputs and outputs (Page 421)".

### 11.2.3 Technical data dependent upon the power

Frame size	Rated power (kW)	Output current (A)	Input current (A)	Power loss (W)
FSA	0.37	1.3	1.23	33.73
	0.55	1.7	1.58	37.61
	0.75	2.2	1.99	43.10
	1.1	3.1	2.69	53.58
	1.5	4.1	3.48	66.99
FSB	2.2	5.9	5.18	95.96
	3	7.7	6.76	125.82
	4	10.2	8.95	172.89
FSC	5.5	13.2	11.88	170.85
	7.5	19	17.11	245.54

Frame size	Rated power (kW)	Net weight (kg/lb.)			Additional weight
		Glanded variant	Glanded variant with Q8/0 or M12	Connector variant	
FSA	0.37 to 1.5	5.54 (12.19)	5.66 (12.44)	5.77 (12.70)	<ul style="list-style-type: none"> <li>Integrated repair switch: +0.18 (0.4)</li> </ul>
FSB	2.2 to 3	7.12 (15.67)	7.24 (15.92)	7.35 (16.18)	
	4	7.52 (16.55)	7.64 (16.80)	7.74 (17.03)	<ul style="list-style-type: none"> <li>Integrated LRC panel: +0.15 (0.33)</li> </ul>
FSC	5.5 to 7.5	7.85 (17.27)	7.97 (17.52)	8.08 (17.78)	<ul style="list-style-type: none"> <li>Integrated 24 V PSU: +0.55 (1.21)</li> </ul>

**Typical current consumption on 24 V DC power supply**

G115D wall-mounted converter	Rated power	Typical current consumption from the 24 V power supply, unswitched <sup>1) 3)</sup>		Typical current consumption from the AS-i cable <sup>2) 3)</sup>	
		PROFINET variant	I/O variant	AS-i variant	
				Yellow cable	Black cable
FSA	0.37 kW to 1.5 kW	290 mA	250 mA	90 mA	200 mA
FSB	2.2 kW to 3 kW	290 mA	250 mA	90 mA	200 mA
	4 kW	550 mA	510 mA	90 mA	460 mA
FSC	5.5 kW to 7.5 kW	580 mA	540 mA	90 mA	490 mA

- 1) The typical current consumption does not include the consumption of connected sensors at DI 0 to DI 3 from the unswitched 24 V power supply and the consumption of connected sensors/actors at DIO 24/ DIO 25 from the switched 24 V power supply.
- 2) The typical current consumption does not include the consumption of connected sensors at DI 0 to DI 3 from the yellow cable and the consumption of connected sensors/actors at DIO 24/DIO 25 from the black cable.
- 3) The current consumption for digital inputs DI 0 ~ DI 3 is max. 200 mA in total. The current consumption for digital inputs DI 24 and DI 25 (when DIO 24/DIO 25 is configured as DI) is max. 200 mA in total, and the current consumption for digital outputs DO 24 and DO 25 (when DIO 24/DIO 25 is configured as DO) is max. 500 mA in total.

**Standby currents**

G115D wall-mounted converter		Standby current (mA) Mains power supply without 24 V DC power supply					
Frame size	Rated power	380 V, 50 Hz	380 V, 60 Hz	400 V, 50 Hz	400 V, 60 Hz	480 V, 50 Hz	480 V, 60 Hz
FSA	0.37 kW to 1.5 kW	136	163	143	171	171	206
FSB	2.2 kW to 4 kW	172	207	181	217	217	261
FSC	5.5 kW to 7.5 kW	255	306	268	322	321	386

G115D wall-mounted converter		Standby current (mA) Mains power supply with 24 V DC power supply					
Frame size	Rated power	380 V, 50 Hz	380 V, 60 Hz	400 V, 50 Hz	400 V, 60 Hz	480 V, 50 Hz	480 V, 60 Hz
FSA	0.37 kW to 1.5 kW	168	195	171	199	189	224
FSB	2.2 kW to 4 kW	204	239	209	246	235	279
FSC	5.5 kW to 7.5 kW	287	338	296	350	339	404

### 11.2.4 Technical data of braking resistors

#### Requirements for the minimum resistance of braking resistors


For each frame size, the minimum resistance of braking resistors is required as follows:

Frame size	Rated power	Minimum resistance of braking resistors
FSA	0.37 kW to 1.5 kW	200 Ω
FSB	2.2 kW to 4 kW	80 Ω
FSC	5.5 kW to 7.5 kW	40 Ω

#### Technical data of integrated braking resistor

G115D wall-mounted converter		Integrated braking resistor		
Frame size	Rated power	Resistance	Continuous braking power	Peak braking power <sup>1)</sup>
FSA	0.37 kW to 1.5 kW	350 Ω	10 W	100 W
FSB	2.2 kW to 4 kW	175 Ω	10 W	100 W
FSC	5.5 kW to 7.5 kW	88 Ω	20 W	200 W

<sup>1)</sup> Peak braking power at 10% cycle time of a 120s cycle. For the peak braking power at different duty cycles, refer to the following diagram.

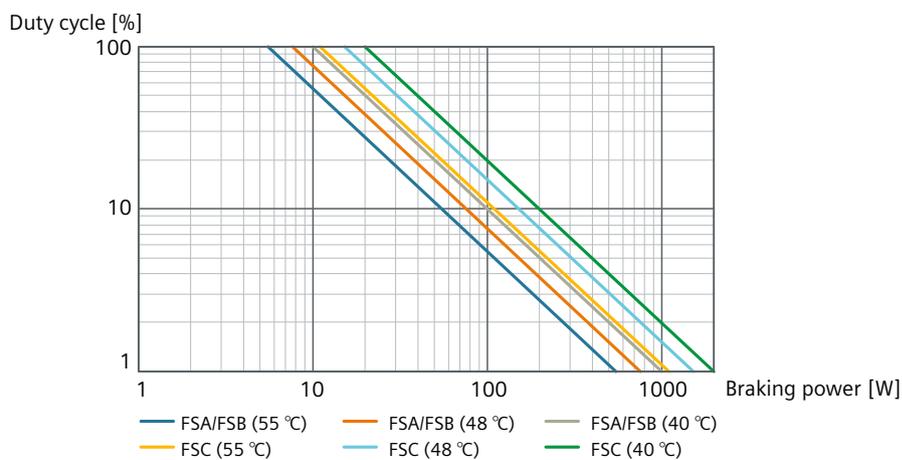


**Technical data of external braking resistor**

The external braking resistors are not included in the scope of delivery of the G115D converter. The following optional external braking resistors are available.

G115D wall-mounted converter		External braking resistor					
Frame Size	Rated power	Resistance (+/-10%)	Continuous braking power	Peak braking power <sup>1)</sup>	Article number	Vibration and shock during operation	Surrounding temperature
FSA	0.37 kW to 1.5 kW	210 Ω	200 W	1200 W	6SL3501-1BE32-0AA0	Class 3M2, test according to EN 60721-3-3	-30 °C to +55 °C
		220 Ω	240 W	1440 W	6SL3501-1BE32-4AA0		
		200 Ω	480 W	2880 W	6SL3501-1BE34-8AA0		
FSB	2.2 kW to 4 kW	160 Ω	200 W	1200 W	6SL3501-1BE32-0BA0		
		150 Ω	240 W	1440 W	6SL3501-1BE32-4BA0		
		150 Ω	600 W	3600 W	6SL3501-1BE36-0BA0		
FSC	5.5 kW to 7.5 kW	81 Ω	600 W	3600 W	6SL3501-1BE36-0CA0		
		72 Ω	1200 W	7200 W	6SL3501-1BE41-2CA0		

<sup>1)</sup> Peak braking power at 10% cycle time of a 120s cycle. For the peak braking power at different duty cycles, refer to the following diagram.

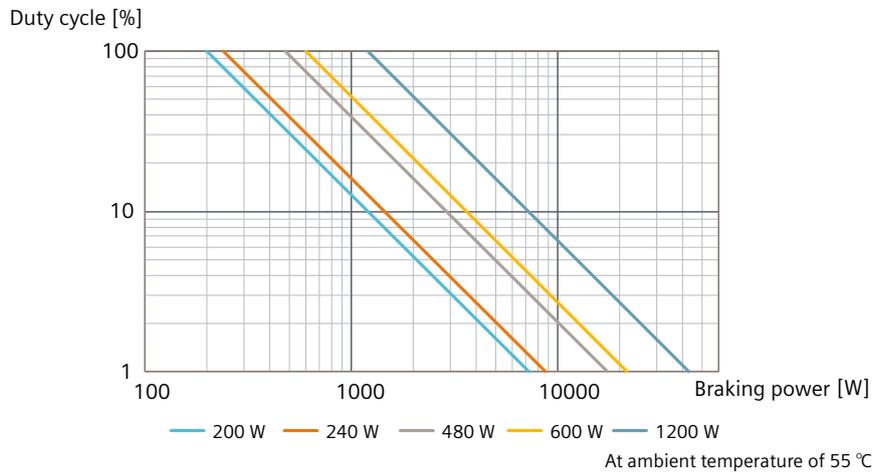

### 11.2.5 Load cycles and overload capabilities

Overload capability is the property of the converter to temporarily supply a current that is higher than the rated current to accelerate a load.

#### Definitions

**Base load**

Constant load between the accelerating phases of the converter

**HO base load input current**

Permissible input current for a "High Overload" load cycle

**HO base load output current**


Permissible output current for a "High Overload" load cycle

**HO base load power**

Rated power based on the HO base load output current

If not specified otherwise, the power and current data in the technical data always refer to a load cycle according to High Overload.

#### Permissible converter overload

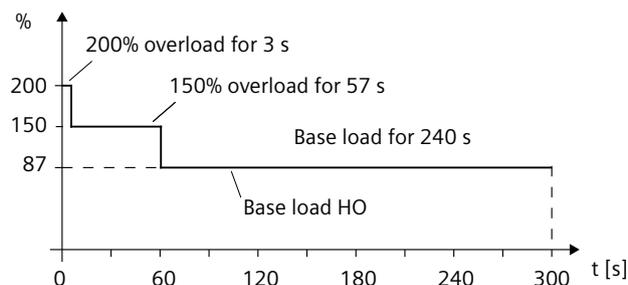


**Note**

- The rated ambient temperature for the above load cycles is 40 °C.
- You can set the parameter p0292[0] to a range of 5 °C to 25 °C based on the application.

#### I<sup>2</sup>t curve for overload capacity

11.2 Technical data of the G115D wall-mounted converter

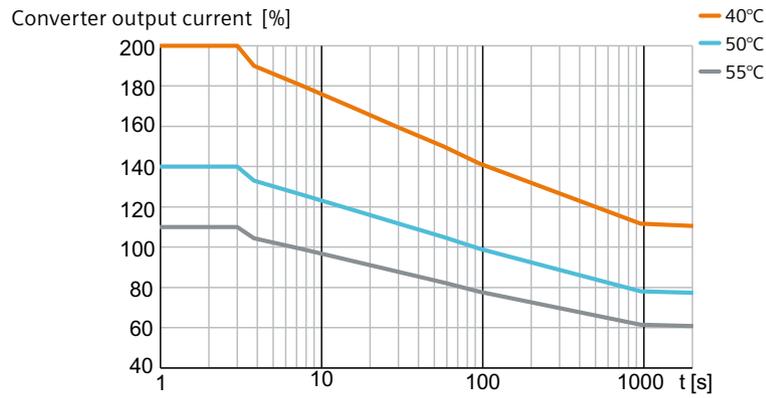


11.2.6 Derating data


11.2.6.1 Torque derating as a function of the installation altitude

The permissible motor output torque is reduced above an installation altitude of 1000 m.

Torque derating of 2KJ8 asynchronous motor

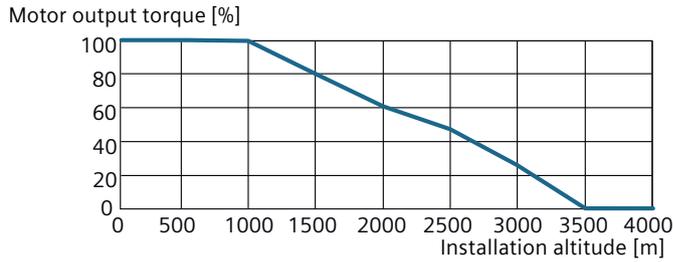


Torque derating of 2KJ8 synchronous reluctance motor

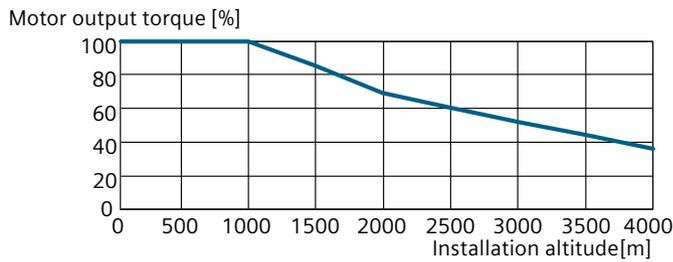

### 11.2.6.2 Current derating as a function of the surrounding temperature


The permissible converter output current is reduced when the surrounding air temperature is above 40 °C.

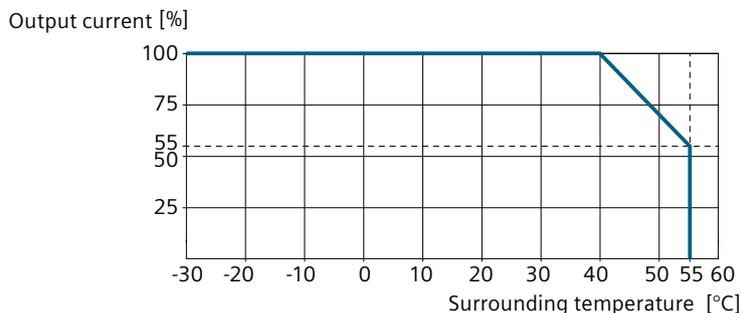


### 11.2.6.3 Torque derating as a function of the line voltage

The 2KJ8 asynchronous motor (across all speed ranges) and the 2KJ8 synchronous reluctance motor (with speed range 1:5 or 1:8.7) operate at 100% rated output torque at a line voltage from 380 V to 480 V. The 2KJ8 synchronous reluctance motor with speed range 1:10 operates at 100% rated output torque at a line voltage from 420 V to 480 V. The output torque should be reduced when the line voltage falls outside the range.

#### Torque derating of 2KJ8 asynchronous motor

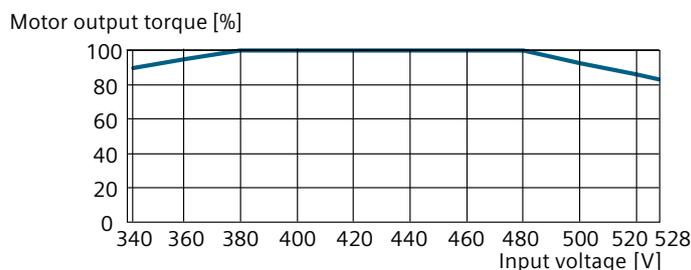

#### Torque derating of 2KJ8 synchronous reluctance motor

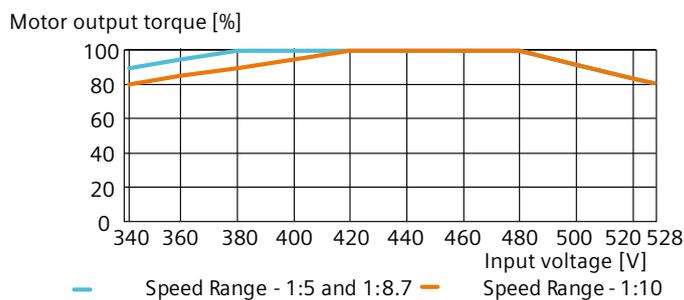

11.2 Technical data of the G115D wall-mounted converter

**11.2.6.4 Current derating as a function of the pulse frequency**

The permissible converter output current is reduced when the converter is operated at a pulse frequency above 4 kHz.

The pulse frequency reduces automatically based on the heatsink temperature.

Frame size		FSA					FSB			FSC		
Rated power based on HO (kW)		0.37	0.55	0.75	1.1	1.5	2.2	3	4	5.5	7.5	
Rated current (A)		1.3	1.7	2.2	3.1	4.1	5.9	7.7	10.2	13.2	19	
Output current (A) for the PWM frequency of 4 kHz to 16 kHz	≤4 kHz *	40 °C	1.30	1.70	2.20	3.10	4.10	5.90	7.70	10.20	13.20	19.00
		50 °C	0.91	1.19	1.54	2.17	2.87	4.13	5.39	7.14	9.24	13.30
		55 °C	0.72	0.94	1.21	1.71	2.26	3.25	4.24	5.61	7.26	10.45
	6 kHz	40 °C	1.11	1.45	1.87	2.64	3.49	5.02	6.55	8.67	11.22	16.15
		50 °C	0.77	1.01	1.31	1.84	2.44	3.51	4.58	6.07	7.85	11.31
		55 °C	0.61	0.79	1.03	1.45	1.92	2.76	3.60	4.77	6.17	8.88
	8 kHz	40 °C	0.91	1.19	1.54	2.17	2.87	4.13	5.39	7.14	9.24	13.30
		50 °C	0.64	0.83	1.08	1.52	2.01	2.89	3.77	5.00	6.47	9.31
		55 °C	0.50	0.65	0.85	1.19	1.58	2.27	2.96	3.93	5.08	7.32
	10 kHz	40 °C	0.78	1.02	1.32	1.86	2.46	3.54	4.62	6.12	7.92	11.40
		50 °C	0.55	0.71	0.92	1.30	1.72	2.48	3.23	4.28	5.54	7.98
		55 °C	0.43	0.56	0.73	1.02	1.35	1.95	2.54	3.37	4.36	6.27
	12 kHz	40 °C	0.65	0.85	1.10	1.55	2.05	2.95	3.85	5.10	6.60	9.50
		50 °C	0.46	0.60	0.77	1.09	1.44	2.07	2.70	3.57	4.62	6.65
		55 °C	0.36	0.47	0.61	0.85	1.13	1.62	2.12	2.81	3.63	5.23
	14 kHz	40 °C	0.59	0.77	0.99	1.40	1.85	2.66	3.47	4.59	5.94	8.55
		50 °C	0.41	0.54	0.69	0.98	1.29	1.86	2.43	3.21	4.16	5.99
		55 °C	0.32	0.42	0.54	0.77	1.01	1.46	1.91	2.52	3.27	4.70
	16 kHz	40 °C	0.52	0.68	0.88	1.24	1.64	2.36	3.08	4.08	5.28	7.60
		50 °C	0.36	0.48	0.62	0.87	1.15	1.65	2.16	2.86	3.70	5.32
		55 °C	0.29	0.37	0.48	0.68	0.90	1.30	1.69	2.24	2.90	4.18

\* Factory setting: 4 kHz

### 11.2.6.5 Derating of motor cable length based on pulse frequency and surrounding temperature

The permissible motor cable length are dependent upon the particular cable type, the pulse frequency that has been selected and the surrounding temperature.


G115D wall-mounted converter		Maximum length of motor cable - m (ft)				
Frame size	Rated power	≤4 kHz	6 kHz to 16 kHz			
		40 °C to 55 °C	40 °C	45 °C	48 °C	55 °C
<b>Mains supply voltage @ 3 AC 400 V, 50 Hz</b>						
FSA	0.37 kW to 1.5 kW	15 (49.2)	5 (16.4)		3 (9.8)	
FSB	2.2 kW to 4 kW	15 (49.2)				
FSC	5.5 kW to 7.5 kW					
<b>Mains supply voltage @ 3 AC 480 V, 50 Hz</b>						
FSA	0.37 kW to 1.5 kW	15 (49.2)	7 (23.0)	5 (16.4)	3 (9.8)	
FSB	2.2 kW to 4 kW	15 (49.2)				
FSC	5.5 kW to 7.5 kW					

## 11.3 Low frequency operation

The converter can only be operated with reduced output current at low output frequencies.

<b>NOTICE</b>
<b>Reduced converter service life as a result of overheating</b>
<p>Loading the converter with a high output current and at the same time with a low output frequency can cause the current-conducting components in the converter to overheat. Excessively high temperatures can damage the converter or reduce the converter service life.</p> <ul style="list-style-type: none"> <li>• Never operate the converter continuously with an output frequency = 0 Hz.</li> <li>• Only operate the converter in the permissible operating range.</li> </ul>

11.5 Electromagnetic compatibility of the converter

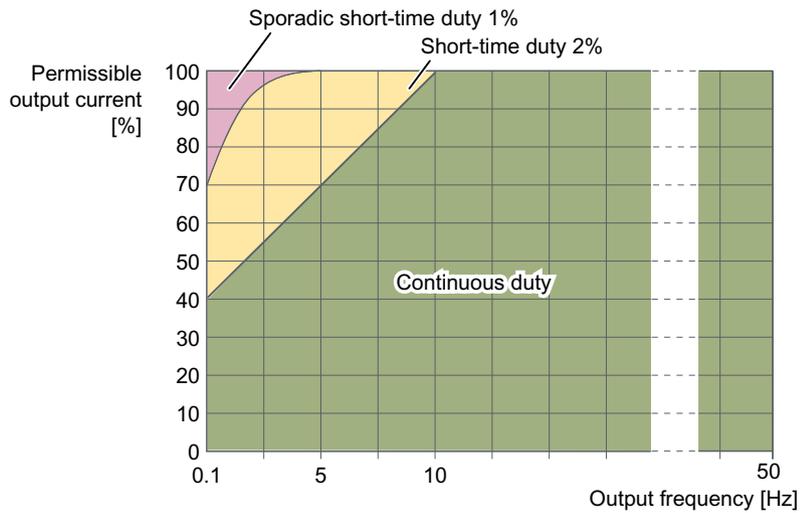

- Continuous operation (green area in the figure)  
Operating state that is permissible for the complete operating time.
- Short-time operation (yellow area in the figure)  
Operating state that is permissible for less than 2% of the total operating time.
- Sporadic short-time operation (red area in the figure)  
Operating state that is permissible in very short and seldom operating conditions for less than 1% of the total operating time.

11.4 Data regarding the power loss in partial load operation

Note

This product is covered by the regulation (EU) 2019/1781; however, according to Article 2, (3) a), the SINAMICS G115D Motor Mounted drive is a motor-integrated drive and therefore no efficiency requirements apply. According to Article 2, (2) b), the geared motor for the SINAMICS G115D Motor Mounted drive is a motor with an integrated variable speed drive and therefore no efficiency requirements apply.

You can find data regarding power loss in partial load operation in the Internet:

 Partial load operation (<https://support.industry.siemens.com/cs/ww/en/view/94059311>)

11.5 Electromagnetic compatibility of the converter

EMC (electromagnetic compatibility) means that the devices function satisfactorily without interfering with other devices and without being disrupted by other devices. EMC applies when the emitted interference (emission level) and the interference immunity are matched with each other.

The product standard IEC/EN 61800-3 describes the EMC requirements placed on "Variable-speed drive systems".

A variable-speed drive system (or Power Drive System PDS) consists of the converter as well as the associated electric motors and encoders including the connecting cables.

The driven machine is not part of the drive system.

---

**Note****PDS as component of machines or systems**

When you install PDS into machines or systems, additional measures may be required so that the product standards of these machines or systems is complied with. The machine or system builder is responsible for taking these measures.

---

## Overview of environments and categories

### Environments

IEC/EN 61800-3 makes a distinction between the "first environment" and "second environment" - and defines different requirements for these environments.

- **First environment**  
Residential buildings or locations at which the PDS is directly connected to a public low-voltage supply without intermediate transformer.
- **Second environment**  
An environment that includes all other establishments which are not connected directly to a public low-voltage line supply.

### Categories

- **Category C1**  
Power Drive System (PDS) of rated voltage less than 1000 V intended for use in the first (residential) environment.
- **Category C2**  
Power Drive System (PDS) of rated voltage less than 1000 V, which is neither a plug-in device nor a movable device, and when used in the first environment, is only intended to be installed and commissioned by a professional.
- **Category C3**  
Power Drive System (PDS) of rated voltage less than 1000 V intended for use in the second (industrial) environment and not intended for use within the first (residential) environment.

## Second environment - category C2

### Conducted and radiated interference emissions

The converters meet the limit values of IEC 61800-3 Category C2 with regard to conducted and radiated interference emissions under the following conditions:

- EMC compliant installation and configuration by qualified technician
- Operation on TN or TT line supply with grounded neutral point
- Permissible motor cable length

 Maximum permissible cable length (Page 74)

11.6 Protecting persons from electromagnetic fields

- Shielded motor cable with low capacitance
- Shielded external braking resistor cable with low capacitance
- Pulse frequency  $\leq$  factory setting
- Converters with integrated C2 line filter

**Note**

The SINAMICS G115D converter is designed for operation in the second environment (industrial area) and may not be used in the first environment (residential area) unless the appropriate noise suppression measures have been adopted.

**Note**

A power drive system consisting of multiple units connected together in daisy-chain may require further measures to meet EMC requirements.

**Harmonic currents**

Frame size	Typical Harmonic current (% of rated input current) at U <sub>K</sub> 1 %							
	5th	7th	11th	13th	17th	19th	23rd	25th
FSA	15.65	11.65	7.18	6.19	4.50	4.30	3.12	3.53
FSB	16.79	12.36	7.52	6.75	4.79	4.56	3.30	3.65
FSC	18.45	13.30	8.20	7.29	5.23	5.07	3.85	3.93

**Note**

Units installed within the category C2 (domestic) environment require supply authority acceptance for connection to the public low-voltage power supply network. Please contact your local supply network provider.

Units installed within the category C3 (industrial) environment do not require connection approval.

**11.6 Protecting persons from electromagnetic fields**

**Overview**

Protection of workers from electromagnetic fields is specified in the European EMF Directive 2013/35/EU. This directive is implemented in national law in the European Economic Area (EEA). Employers are obligated to design workplaces in such a way that workers are protected from impermissibly strong electromagnetic fields.

To this end, assessments and/or measurements must be performed for workplaces.

## Precondition

1. The laws for protection from electromagnetic fields in force in individual EU member states can go beyond the minimum requirements of the EMF Directive 2013/35/EU and always take precedence.
2. The ICNIRP 2010 limits for the workplace are the basis for the assessment.
3. The 26th BImSchV (German Federal Emission Protection Regulation) defines 100  $\mu\text{T}$  (RMS) for the assessment of active implants. According to Directive 2013/35/EU, 500  $\mu\text{T}$  (RMS) at 50 Hz is applicable here.
4. Compliance with the limit values was assessed for the following frequencies:
  - Line frequency 47 Hz to 63 Hz
  - Pulse frequency, for example 4/8/16 kHz and multiples thereof, assessed up to a maximum of 100 kHz
5. The routing of power cables has a significant impact on the electromagnetic fields that occur. Install and operate the components inside metallic cabinets in compliance with the documentation and use shielded motor cables.  
 EMC installation guidelines (Page 55)

## Description

The following information regarding electromagnetic fields relates solely to converters supplied by Siemens.

The converters are normally used in machines. The assessment and testing is based on DIN EN 12198.

The indicated minimum distances apply to the head and complete torso of the human body. Shorter distances are possible for extremities.

	Individuals without active implants	Individuals with active implants
<b>Minimum distances to the converter</b>	Forearm length (approx. 35 cm)	Must be separately assessed depending on the active implant.



# Additional information on the SIMOGEAR geared motor

# 12

## 12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

### 12.1.1 Specific hazard types and fundamental obligations

 <b>WARNING</b>
<b>Hot, escaping oil</b> Before starting any work wait until the oil has cooled down to below +30 °C.

 <b>WARNING</b>
<b>Poisonous vapors when working with solvents</b> Avoid breathing vapors when working with solvents. Ensure adequate ventilation.

 <b>WARNING</b>
<b>Risk of explosion when working with solvents</b> Ensure adequate ventilation. Do not smoke.

#### Comply with the following safety instructions:

In addition to the specified personal protection gear, also wear suitable protective gloves and safety glasses.

Comply with the notes on the rating plates attached to the geared motor. The rating plates must be kept free from paint and dirt at all times. Replace any missing rating plates.

Collect and dispose of used oil in accordance with regulations. Immediately remove any oil spills with an oil-binding agent.

Do not use high-pressure cleaning equipment or sharp-edged tools to clean the geared motor.

The machine OEM who installs the geared motors in a plant must include the regulations contained in the operating instructions in its own operating instructions.

During operation, comply with the vibration levels according to ISO 20816-1. Maximum permissible vibration values can be found in Installation notes (Page 457).

### 12.1.2 Rating plate

The rating plate of the gearbox or geared motor is printed on a labeled polyester film or optionally on a stainless steel rating plate. The rating plate is glued using a special masking film. The film ensures permanent resistance to UV radiation and media of all kinds, such as oils, greases, salt water and cleaning agents.

The adhesive and material ensure firm adhesion and long-term readability throughout the operating temperature range of the gearbox and geared motor.

The edges of the rating plate are paint-finished to match the color of the gearbox or motor to which it is affixed.

### 12.1.3 Surface treatment

#### 12.1.3.1 General information on surface treatment

All paint finishes are sprayed on.

 <b>WARNING</b>
--

<b>Danger due to electrostatic discharge</b>
--

For paint finishes in explosion group III, the paint can be electrostatically charged as a result of intensive dust turbulence or processes with high levels of electrostatic charging.
---

Risk of explosion as a result of processes with high levels of electrostatic charging
---

Minimize the risk of electrostatic charging by applying effective measures according to IEC 60079-32-1.
---

<b>NOTICE</b>
---------------

<b>Failure of the external protection</b>
---

If the paint finish is damaged, the geared motor may corrode.
---

Do not damage the paint finish.
---------------------------------

---

**Note**

Information about the ability to be repainted does not guarantee the quality of the paint product supplied by your supplier.

Only the paint manufacturer is liable for the quality and compatibility.

---

**Note**

C1 paints are not suitable for ambient air temperatures below -20 °C.

---

### 12.1.3.2 Painted version

The corrosion protection system is classified according to the corrosiveness categories in DIN EN ISO 12944-2.

#### Paint according to corrosiveness categories

Paint system	Description
Corrosiveness category C1, unpainted for gearbox and motor housings made of aluminum	
-	<ul style="list-style-type: none"> <li>Indoor installation</li> <li>Heated buildings with neutral atmospheres</li> <li>Resistance to greases and some resistance to mineral oils, aliphatic solvents</li> <li>Standard</li> </ul>

Paint system	Description
Corrosiveness category C1 for normal environmental stress	
1-component hydro paint, top coat	<ul style="list-style-type: none"> <li>Indoor installation</li> <li>Heated buildings with neutral atmospheres</li> <li>Resistance to greases and some resistance to mineral oils, aliphatic solvents</li> <li>Standard paint for gearbox housings made of cast iron</li> </ul>

Paint system	Description
Corrosiveness category C2 for low environmental stress	
2-component - polyurethane top coat	<ul style="list-style-type: none"> <li>Indoor and outdoor installation</li> <li>Unheated buildings with condensation, production areas with low humidity, e.g. warehouses and sports facilities</li> <li>Atmospheres with low levels of pollution, frequently rural areas</li> <li>Resistance to greases, mineral oils and sulfuric acid (10 %), caustic soda (10 %) and is conditionally resistant to aliphatic solvents</li> </ul>

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

Paint system	Description
Corrosiveness category C3 for medium environmental stress	
2-component epoxy zinc phosphate base coat, 2-component polyurethane top coat	<ul style="list-style-type: none"> <li>Indoor and outdoor installation</li> <li>Production areas with high humidity and some air contamination, e.g. food production areas, dairies, breweries and laundries</li> <li>Urban and industrial atmospheres, moderate contamination from sulfur dioxide, coastal areas with low salt levels</li> <li>Resistance to greases, mineral oils, aliphatic solvents, sulfuric acid (10 %), caustic soda (10 %)</li> </ul>

Paint system	Description
Corrosiveness category C4 for high environmental stress	
2-component epoxy zinc phosphate base coat, 2-component polyurethane top coat	<ul style="list-style-type: none"> <li>Indoor and outdoor installation</li> <li>Chemical plants, swimming pools, wastewater treatment plants, electroplating shops, and bathhouses above seawater</li> <li>Industrial areas and coastal areas with moderate salt levels</li> <li>Resistance to greases, mineral oils, aliphatic solvents, sulfuric acid (10 %), caustic soda (10 %)</li> </ul>

Paint system	Description
Corrosiveness category C5 for very high environmental stress	
2-component epoxy zinc phosphate base coat, 2-component polyurethane intermediate coat, 2-component polyurethane top coat	<ul style="list-style-type: none"> <li>Indoor and outdoor installation</li> <li>Buildings and areas with almost constant condensation and high levels are contamination, e.g. malt factories and aseptic areas</li> <li>Industrial areas with high humidity and aggressive atmosphere, coastal areas and offshore environments with high salt levels</li> <li>Resistance to greases, mineral oils, aliphatic solvents, sulfuric acid (10 %), caustic soda (20 %)</li> </ul>

In case of corrosiveness category C1, overpainting with a 1-component hydrosystem after prior rubbing down is possible.

In case of corrosiveness categories C2 to C5, overpainting with 2-component polyurethane paint, 2-component epoxide paint and 2-component acrylic paint after prior rubbing down is possible.

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

12.1.3.3 Primed version

Primer according to corrosiveness category

Paint system	Can be overpainted with
Unpainted corrosiveness category C1	
Cast iron parts immersion primed, steel parts primed or zinc-plated, aluminum and plastic parts untreated	<ul style="list-style-type: none"> <li>• Synthetic paint, synthetic resin paint, oil paint</li> <li>• 2-component polyurethane paint</li> <li>• 2-component epoxy paint</li> </ul>

Paint system	Can be overpainted with
Primer according to corrosiveness category C2 G	
2-component epoxy zinc phosphate, specified coat thickness 60 µm	<ul style="list-style-type: none"> <li>• 2-component - polyurethane paint</li> <li>• 2-component - epoxy paint</li> <li>• 2-component - acrylic paint</li> <li>• Acid-hardening paint</li> </ul>

Paint system	Can be overpainted with
Primer according to corrosiveness category C4 G	
2-component epoxy zinc phosphate, desired coat thickness 90 µm	<ul style="list-style-type: none"> <li>• 2-component - polyurethane paint</li> <li>• 2-component - epoxy paint</li> <li>• 2-component - acrylic paint</li> <li>• Acid-hardening paint</li> </ul>

12.1.4 Incoming goods

<b>NOTICE</b>
<b>Transport damage impairs correct functioning</b>
Do not commission faulty gearboxes or geared motors.

**Note**

Do not open or damage parts of the packaging that preserve the product.

**Note**

Check that the technical specifications are in accordance with the purchase order.

Inspect the delivery immediately on arrival for completeness and any transport damage.

Notify the freight company of any damage caused during transport immediately (this is the only way to have damage rectified free of charge). Siemens will not accept any claims for missing or incorrect items submitted at a later date.

The gearbox or geared motor is delivered in a fully assembled condition. Additional items are shipped in separate packaging if applicable.




The products supplied are listed in the dispatch papers.

### 12.1.5 General information on transport

NOTICE
<p><b>The use of force will damage the gearbox or geared motor</b></p> <p>Transport the gearbox or geared motor carefully. Avoid knocks.</p> <p>Before putting the drive into operation, remove any transport fixtures and keep them safe or render them ineffective. You can then use them again for transporting further items or you can apply them again.</p>

Different forms of packaging may be used, depending on the size of the gearbox or geared motor and the method of transport. Unless contractually agreed otherwise, the seaworthy packaging complies with HPE Packaging Guidelines (Bundesverband Holzpackmittel Paletten Exportverpackungen e.V., the German Federal Association for wooden packaging, pallets, and export packaging).

Note the symbols which appear on the packaging. These have the following meanings:

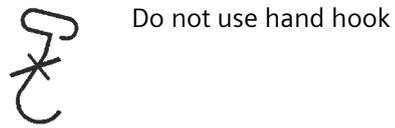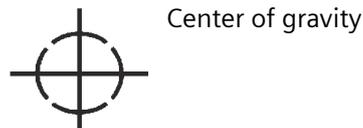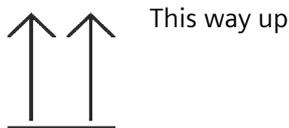

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted



Keep dry



Attach here



Keep cool

### 12.1.6 Unpacking

<b>NOTICE</b>
<b>Transport damage impairs the correct function of the geared motor</b>
Never commission faulty or defective geared motors.

Check the geared motor for completeness and for damage. Report any missing parts or damage immediately.

Remove and dispose of the packaging material and transport equipment in compliance with regulations.

### 12.1.7 General information concerning the installation

 <b>WARNING</b>
<b>Assembly work with the system under load</b>
Under load, the system can start or reverse in an uncontrolled fashion.
The entire system must be load-free so that there is no danger during this work.

<b>NOTICE</b>
<b>Destruction caused by welding</b>
Welding destroys the geared parts and bearings.
Do not weld on the gearbox. The gearbox must not be used as a grounding point for welding operations.

**NOTICE**

**Overheating caused by solar radiation**

Overheating of the geared motor due to exposure to direct sunlight.

Provide suitable protective equipment such as covers or roofs. Prevent heat accumulation.

**NOTICE**

**Malfunction resulting from foreign objects**

The operator must ensure that no foreign objects impair the function of the gearbox.

**NOTICE**

**Damaged components impair the correct function of the gearbox**

If any components are damaged, the correct function of the gearbox will no longer be ensured.

Do not install any damaged gearbox components.

**NOTICE**

**Violation of the maximum permissible oil sump temperature**

The oil sump temperature will be exceeded if the temperature monitoring equipment is incorrectly set.

An alarm must be output when the maximum permissible oil sump temperature is reached. The geared motor must be switched off when the maximum permissible temperature is exceeded. The machine will come to a standstill if the geared motor is shut down.

**Note**

Use headless screws with property class 8.8 or higher to fasten the motor.

Exercise particular care during mounting and installation. The manufacturer cannot be held liable for damage caused by incorrect mounting and installation.

Make sure that there is sufficient space around the gearbox or geared motor for mounting, maintenance and repair.

On geared motors with a fan, leave sufficient free space for air to enter. Observe the installation conditions for the geared motor.

Provide adequate lifting gear at the start of mounting and installation work.

Observe the mounting position specified on the rating plate. This ensures that it will be provided with the correct quantity of lubricant.

Use all the fastening means that have been assigned to the particular mounting position and mounting type.

Cap bolts cannot be used in some cases due to a lack of space. In such cases, please contact Technical Support, specifying the type of gearbox.

## 12.1.8 Installation notes

### NOTICE

#### Impermissible housing loadings when unevenness present

Ensure that the housing feet and flanges are screwed together without distortion.

The foundation structure must be low-vibration, level and torsionally rigid. The evenness of the mounting surface for gearboxes in foot and flange design must be according to DIN ISO 2768-2. Max. deviations are to be taken from the tolerance class K.

Thoroughly remove any dirt from the foundation and the screw mounting surface of the gearbox.

### NOTICE

#### Impermissible external forces

No additional external forces resulting from customer-specific attachments, support of other components on the gearbox or geared motor are permitted.

The installation of original attachments (oil expansion unit, cover hoods, etc.) and the resulting forces are permitted.

#### Prerequisites for smooth, vibration-free running

- Stable foundation design
- Precise alignment of the machine
- Correct balancing of the parts to be mounted on the shaft extension
- Compliance with vibration severity values according to ISO 20816-1

#### Vibration severity

Due to the influencing variables listed below, the vibration response of the system at the location of use can lead to increased vibration severity on the drive unit:

- Transmission elements
- Installation conditions
- Alignment and installation
- Effects of external and internal oscillation

The vibration severity values specified in accordance with ISO 20816-1 must not be exceeded at any point on the surface of the drive. This ensures problem-free operation and a long service life.

#### Maximum permissible vibration severity

Observe the values for the maximum permissible radial and axial oscillation vibration severity in the following table. Radial/axial refers to the motor axes.

### Maximum permissible radial vibration levels

Vibration frequency	Vibration value
< 6.3 Hz	Vibration displacement $s \leq 0.16$ mm
6.3 Hz to 250 Hz	Vibration velocity $v_{rms} \leq 4.5$ mm/s
> 250 Hz	Vibration acceleration $a_{peak} \leq 10$ m/s <sup>2</sup>

### Maximum permissible axial vibration severity

Vibration velocity	Vibration acceleration
Vibration velocity $v_{rms} \leq 4.5$ mm/s	Vibration acceleration $a_{peak} \leq 10$ m/s <sup>2</sup>

### Resonant frequencies

Resonance can occur in the speed range of the geared motor depending on the machine to be driven.

Operation in resonance causes increased noise and vibration levels.

Adherence to the maximum permissible vibration severity is always required.

Operation in the resonant frequency leads to a reduced service life of the geared motor, irrespective of adherence to the maximum vibration severity.

Continuous operation in the resonant frequency must be avoided.

## 12.1.9 Thread sizes and tightening torques for fastening bolts

The general tolerance for the tightening torque is 10%. The tightening torque is based on a friction coefficient of  $\mu = 0.14$ .

Table 12-1 Tightening torques for fixing screws

Thread size	Tightening torque for property class		
	8.8	10.9	12.9
	Nm	Nm	Nm
M4	3	4	5
M5	6	9	10
M6	10	15	18
M8	25	35	41
M10	50	70	85
M12	90	120	145
M16	210	295	355
M20	450	580	690
M24	750	1 000	1 200
M30	1 500	2 000	2 400
M36	2 500	3 600	4 200

### 12.1.10 Operation

 <b>CAUTION</b>
--

<b>Malfunctions and disturbances can cause injuries or damage to the geared motor</b>
---

In the event of changes in operation, the drive unit must be switched off immediately.
--

Determine the cause of the fault using the fault table. Remedy faults or have faults remedied.
--

Check the geared motor during operation for:

- Excessive operating temperature
- Changes in gear noise
- Possible oil leakage at the housing and shaft seals

### 12.1.11 Cleaning the geared motor

 <b>WARNING</b>
--

<b>Explosion hazard caused by overheating of the machine due to a layer of dust</b>
---

Deposits of dust have a thermally insulating effect, causing the machine to overheat. The maximum surface temperature of the machine is not adhered to. The dust is ignited as a result, causing an explosion. Death, serious injury and material damage will result.
---

- |   |
|---|
| <ul style="list-style-type: none"> <li>• Clean dust from the machine regularly.</li> <li>• Do not allow dust layers thicker than 5 mm to build up on the machine surface.</li> <li>• Switch the machine on when the dust has been removed.</li> </ul> |
|---|

<b>NOTICE</b>
---------------

<b>Dust deposits cause higher housing temperatures</b>
--

Dust deposits prevent heat radiation.
---------------------------------------

Keep the geared motor free from dirt and dust.
--

<b>NOTICE</b>
---------------

<b>Cleaning with a high-pressure cleaning appliance</b>
---

Water can penetrate into the geared motor. Seals can become damaged.
--

Do not use a high-pressure cleaning appliance to clean the geared motor.
--

Do not use tools with sharp edges.
------------------------------------

Switch off the power supply to the drive unit before cleaning it.

### 12.1.12 Inspecting the geared motor

Perform a scheduled inspection of the gearbox once a year in accordance with the possible criteria listed in General notes about maintenance work (Page 534).

Check the geared motor in accordance with the criteria specified in General motor information (Page 469) and General information gearbox (Page 501).

Touch up damaged paintwork carefully and professionally.

### 12.1.13 Disposal

 <b>WARNING</b>
<b>Incorrect disposal of used oil</b>
Incorrect disposal of used oil is a threat to the environment and health.
After use, oil must be taken to a used oil collection point. The addition of foreign substances such as solvents, brake and cooling fluid is prohibited.
Avoid prolonged contact with the skin.

Empty the used oil from the gearbox. The used oil must be collected, stored, transported and disposed of in accordance with regulations. Do not mix polyglycols with mineral oil. Dispose of polyglycols separately.

Please observe country-specific laws. Under German law, to allow optimal treatment of the oil (§ 4 VI Used Oil), oils with different disposal codes must not be mixed with one another.

Collect and dispose of used oil in accordance with regulations.

Remove oil spillages immediately with an oil-binding agent in compliance with environmental requirements.

Dispose of the housing parts, gears, shafts, and rolling bearings of the geared motor as scrap metal.

Dispose of packaging material in accordance with regulations.

Table 12-2 Disposal codes for gear oils

Type of oil	Designation	Disposal code
Mineral oil	CLP ISO VG220	13 02 05
Polyglycols	CLP ISO PG VG220, CLP ISO PG VG460, CLP ISO H1 VG100, CLP ISO H1 VG460	13 02 08
Poly-Alpha-Olefines	CLP ISO PAO VG68, CLP ISO PAO VG220, CLP ISO PAO VG460	13 02 06
Biologically degradable oils	CLP ISO E VG220	13 02 07

## 12.1.14 Technical data

### 12.1.14.1 Type designation motor and converter

Table 12-3 Example of the article number structure

Motor	Article number position				
	1	2	3	4	8
Asynchronous motor	2	K	J	8	2
Synchronous reluctance motor					4

Table 12-4 Example of the type designation structure

Example:	LE	100	L	A	4	P-	G	022	M-	PN-	L16
Motor type	LE										
Motor size		100									
Motor length			L								
Performance code letter				A							
Number of poles					4						
Efficiency						P					
Prefix G115D							G				
Converter power								022			
Motor Mounted / Wall Mounted									M		
Communication										PN	
Option											L16

Table 12-5 Type designation code

Motor designation	
Motor type	
LE	Three-phase induction motor, integrated
Size of the motor	
100	Motor shaft height
S, M, L	Motor length
A, B, C	Performance code letters
4	Number of poles
Special features	
E	High efficiency (IE2)
P	Premium efficiency (IE3)
S	Super premium efficiency (IE4)
converter	

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

G	Prefix G115D
022	Converter power
M	Motor Mounted
W	Wall Mounted
Communication	
IO	I/O variant
ASi	ASi version
PN	Profinet version
-	Always "-" for Wall Mounted
Options	
L	Standard brake, world brake
G	Enclosed brake
H, HA	Manual brake release, lockable manual brake release

12.1.14.2 Gearbox type designation

Table 12-6 Example of the article number structure

SIMOGEAR gearbox	Article number position				
	1	2	3	4	5
Helical gearbox E	2	K	J	8	0
Helical gearbox D	2	K	J	8	2
Helical gearbox Z	2	K	J	8	1
Parallel shaft gearbox FD	2	K	J	8	4
Parallel shaft gearbox FZ	2	K	J	8	3
Bevel gearbox B, K	2	K	J	8	5
Helical worm gearbox C	2	K	J	8	6

Table 12-7 Example of the type designation structure

	Main gearbox			
	F	D	F	89
<b>Example:</b>				
Gearbox type	F			
Stage		D		
Type			F	
Size				89

Table 12-8 Type designation code

Gearbox type	
(-)	Helical gearbox
F	Parallel shaft gearbox

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

B	Bevel gearbox, two-stage
K	Bevel gearbox, three-stage
C	Helical worm gearbox
Stage	
(-)	
E	Single-stage
Z	Two-stage
D	Three-stage
Type	
Shaft	
(-)	Solid shaft
A	Hollow shaft
Mounting type gearbox	
(-)	Foot-mounted design
B	Foot / flange-mounted design
F	Flange-mounted design (A type)
Z	Housing flange (C type)
D	Torque arm
G	Flange (A type) opposite output shaft
Connection	
(-)	Parallel key
S	Shrink disk
T	Hollow shaft with splines
R.	SIMOLOC assembly system
Special features	
W	Reduced-backlash version

12.1.14.3 General technical data

 <b>WARNING</b>
<p><b>Exceeding the power limits</b></p> <p>Exceeding the power limits (max. speeds, max. torque etc.) of the gearbox or motor can damage the geared motor.</p> <p>Maintain the permissible operating ranges and power limits of the motor and gearbox.</p> <p>The max. speeds and torque shown indicate the mechanical limits of the geared motor. Depending on the application, also take into account thermal limits. In applications with long max. speed components, high pressure build-up may occur in the gearbox, which can cause damage to the gearbox (e.g. leakage).</p>

The most important technical data appears on the rating plate of the gearboxes and geared motors.



12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

- 19 Degree of protection acc. to IEC 60034-5
- 20 EAC approval logo
- 21 UKCA approval logo
- 22 UK importer address
- 23 CE approval logo
- 24 KC approval logo
- 25 KC registration number
- 26 Input phase count and input voltage range of the converter
- 27 Input frequency range of the converter f in Hz
- 28 Operating mode
- 29 Specification of rated conditions
- 30 Rated input current of the converter in A
- 31 Rated speed range of the motor in rpm
- 32 Pollution degree and overvoltage category
- 33 Rated motor output in kW
- 34 Rated motor torque in Nm
- 35 Converter standstill current I<sub>0</sub>
- 36 Temperature class Th. Cl.
- 37 Ventilation type
- 38 cURus approval logo
- 39 Manufacturer's address and country of origin

12.1.14.5 Rating plate for geared motors with SINAMICS G115D Wall Mounted

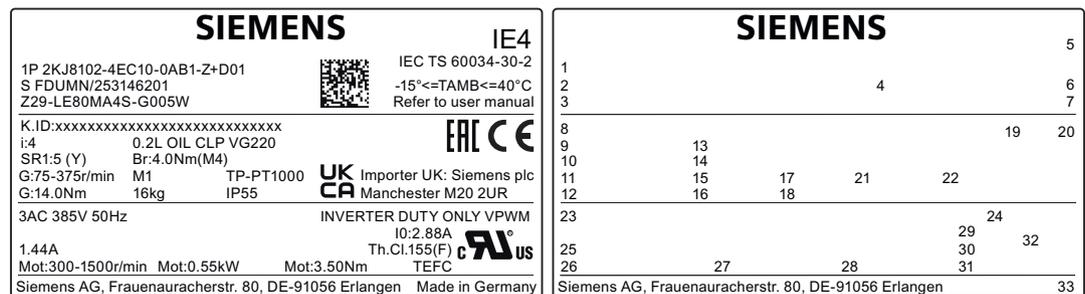


Figure 12-2 Example of a rating plate for geared motors with SINAMICS G115D Wall Mounted

- 1 Article number, MLFB  
Dxx - MLFB option of the mounting position
- 2 Factory identification number (FID)
- 3 Type designation
- 4 Data matrix code
- 5 IE class (according to IEC TS 60034-30-2)
- 6 Ambient temperature
- 7 Reference to operating instructions
- 8 Customer ID

- 9 Transmission ratio  $i$
- 10 Speed range SR
- 11 Gearbox output speed range in rpm
- 12 Geared motor rated output torque in Nm
- 13 Oil quantity in l, oil type, oil viscosity ISO VG class according to DIN 51519 / ISO 3448
- 14 M4 braking torque in Nm, cyclic duration factor
- 15 Mounting position
- 16 Weight in kg
- 17 Thermal motor protection
- 18 Degree of protection acc. to IEC 60034-5
- 19 EAC approval logo
- 20 CE approval logo
- 21 UKCA approval logo
- 22 UK importer address
- 23 Input phase number and rated voltage of the motor
- 24 Operating mode
- 25 Rated motor current in A
- 26 Rated motor speed range in rpm
- 27 Rated motor output in kW
- 28 Rated motor torque in Nm
- 29 Motor standstill (stall) current  $I_0$
- 30 Temperature class Th. Cl.
- 31 Ventilation type
- 32 cURus approval logo
- 33 Manufacturer's address and country of origin

#### 12.1.14.6 Weight

The weight of the entire geared motor is given in the shipping papers.

The weight is stated on the rating plate of the motor, gearbox or geared motor.

The weight specification refers only to the product in the delivery state.

#### 12.1.14.7 Sound energy level

SIMOGEAR geared motors have noise levels below the permissible noise levels defined for gearboxes in VDI guideline 2159 and for motors in IEC 60034-9. Interaction with gearboxes causes the motor noise values  $L_{pFA}$  or  $L_{WA}$  to increase on average by 3 to 5 dB (A).

The circumferential velocity of the motor pinion has a significant influence on the additional gearbox noise level. As a consequence, higher speeds or lower ratios result in higher noise.

## 12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

SIMOGEAR geared motors provide a decisive advantage here, since the motor plug-on pinion allows transmission ratios of up to 12 in the input stage.

Code	Description	Unit
L <sub>pfA</sub>	A-weighted enveloping surface sound pressure level	dB (A)
L <sub>WA</sub>	Sound power level	dB (A)

**External noise**

Noise not generated by the gearbox but emitted from it are not taken into consideration.

Noise emitted by the drive and driven machines or the base are also not taken into consideration. Even when the noise from the gearbox have been transferred there.

**12.1.15 Spare parts****12.1.15.1 Stocking of spare parts**

By stocking the most important spare and wearing parts on site, you can ensure that the gearbox or geared motor is ready for use at any time.

NOTICE
<p><b>Safety impairment caused by inferior products</b></p> <p>The installation and/or use of inferior products can have a negative impact on the design characteristics of the geared motor and may consequently impair the active and/or passive safety features of the machine.</p> <p>Siemens AG states explicitly that only spare parts and accessories supplied by Siemens have been tested and approved by Siemens.</p> <p>If you do not use original spare parts and original accessories, Siemens AG excludes every liability and warranty.</p> <p>Siemens AG accepts the warranty only for original spare parts.</p>

Note that special manufacturing and delivery specifications often apply to individual components. All spare parts offered by Siemens AG are state-of-the-art and conform to the latest legal regulations.

Please state the following data when ordering spare parts:

- Serial number shown on the rating plate ②
- Type designation shown on the rating plate ③

12.1 General information geared motor with SINAMICS G115D Motor Mounted / Wall Mounted

- Item number and designation from spare parts list
- Quantity

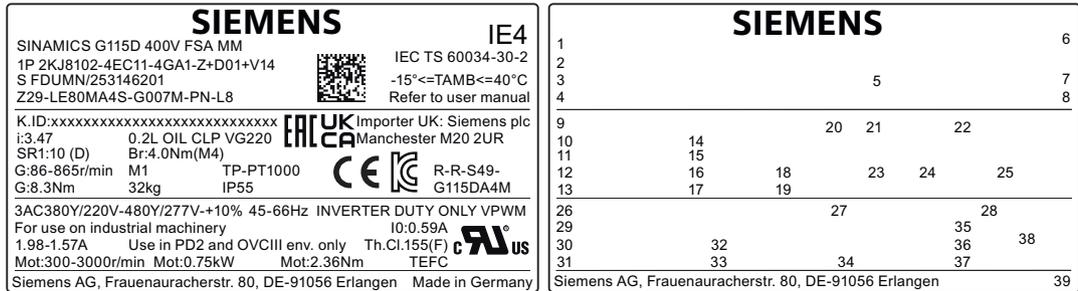


Figure 12-3 Example of a rating plate for geared motors with SINAMICS G115D Motor Mounted

For motors with their own rating plate, the spare parts documentation in the original operating instructions applies.

12.1.15.2 Spares on Web

Rapid support around the clock – our SIMOGEAR service

Our service is your partner for comprehensive support and innovative services for increasing your productivity. The original parts and manufacturing expertise we offer help you achieve maximum machine availability and productivity. Our proven services therefore contribute to reducing the total cost of ownership for you, as well as to creating sustainable values and solutions.

The technical product lists are provided in Spares on Web (<https://www.sow.siemens.com/?lang=en>).



- ① Article number
- ② Serial number

Figure 12-4 Entry of the article and serial number in Spares on Web

Procedure

1. Open the stated link.
2. In the field ① "Article No.", enter the article number stated on the rating plate.  
Example: 2KJ8103-2GF01-3FA1-Z+D01+V02
3. In the field ② "Serial number", enter the serial number stated on the rating plate.  
Example: FDUE6/8315041301

4. You can directly access the operating instructions via "Industry Online Support (SIOS)".
  5. Use the "Search" function to display the spare parts list.
  6. The installation positions of the listed spare parts can be determined based on the position numbers specified in column "BKZ" (equipment marking) and the spare part drawings in Chapters Spare parts list, motor (Page 496) and Replacement part lists gearbox (Page 587).
- You have opened the spare parts list through Spares on Web.

## 12.2 Specific data motor

### 12.2.1 General motor information

---

#### Note

Siemens does not accept any liability for damage and operational disturbances that result from the non-observance of these operating instructions.

---

These operating instructions are included with the geared motor when delivered, or you can find them in SIOS (<https://support.industry.siemens.com/cs/de/en/ps/13424/man>). Read the operating instructions before handling the motor. Carefully follow the instructions. This is how you ensure safe and disturbance-free operation.

The described motors correspond to the state-of-the-art at the time these operating instructions were printed.

Siemens reserves the right to change individual components and accessories in the interest of ongoing development. The changes are designed to improve performance and safety. The significant features are retained. The operating instructions are updated regularly with new contents.

The latest versions of the operating instructions, the declaration of incorporation and the declarations of conformity are available in electronic form in the Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/13424/man>).

### 12.2.2 Use as prescribed

The motors described in these operating instructions have been designed for stationary use in general engineering applications.

They comply with the harmonized standards of the series EN 60034 (VDE 0530). They are not approved for operation in hazardous zones and areas.

Unless otherwise agreed, the motors have been designed for use in plants and equipment in industrial environments.

12.2 Specific data motor

The motors have been built using state-of-the-art technology and are shipped in an operationally reliable condition. Changes made by users could affect this operational reliability and are forbidden.

**Note**

The data on the rating plate assumes an installation altitude of up to 1 000 m above sea level. The permissible ambient temperature is stamped on the rating plate. In the case of other ambient temperatures and installation altitudes, contact Technical Support.

The motors have been designed for the application described in Section Technical data (Page 461). Do not operate the motor outside the specified power limit. Other operating conditions must be contractually agreed.

Never use degrees of protection  $\leq$  IP54 outdoors. Air-cooled versions are designed for ambient temperatures of -15 °C to +40 °C as standard and for an installation altitude of up to 1 000 m above sea level. Please note any deviations to the data on the rating plate. Conditions at the location of use must comply with all specifications on the rating plate.

Do not climb on the motor. Do not place any objects on the motor.

**12.2.3 General technical description**

The following directives and standards are relevant for the motor:

Table 12-9 Overview of the standards

Feature	Standard
Dimensioning and operational behavior	IEC 60034-1
Procedure for determining the losses and the efficiency of rotating electrical machines and tests	IEC 60034-2-1 IEC 60034-2-2
Measuring the energy efficiency for converter operation	IEC 60034-2-3
Degree of protection	IEC 60034-5
Cooling	IEC 60034-6
Terminal marking and direction of rotation	IEC 60034-8
Noise emission	IEC 60034-9
Thermal protection	IEC 60034-11
Starting characteristics, rotating electric motors	IEC 60034-12
Efficiency classification of three-phase squirrel-cage induction motors	IEC 60034-30-1
Energy efficiency class for converter motors (IE code)	IEC TS 60034-30-2
IEC standard voltages	IEC 60038
Safety of machinery	IEC 60204-1

The motor is equipped with grease-lubricated roller bearings. The bearings are permanently lubricated.

The stator winding is designed for temperature class 155 (F).

In the standard version, the rotor has vibration severity grade A. Finely balanced rotors are used in the standard version.

The technical data for the optional monitoring equipment can be viewed in the circuit diagrams, on the rating plate or in the special order documents.

The stator housing and bearing shields are made of die-cast aluminum or cast iron.

The surface of the stator housing is equipped with cooling ribs and a mounted terminal box or motor connector.

## 12.2.4 Cooling

<b>NOTICE</b>
<b>Dust deposits prevent heat radiation.</b>
Dust deposits prevent heat radiation and cause a high housing temperature.
Keep the geared motor free from dirt, dust, etc.

The gearbox does not normally require additional cooling. The generously dimensioned housing surface is sufficient for dissipating heat losses where there is free convection. If the housing temperature exceeds a value of +80° C, please contact Technical Support.

The motor is designed to be cooled by means of fins. An external fan draws in the cooling air through the aperture in the fan cover and blows the air over the surface of the stator housing.

## 12.2.5 Terminal box and application box


The following are contained in the motor terminal box:

- Terminals for the motor (terminal board)
- Terminals for checking equipment
- Connection for brake

The number of available terminals is shown in the circuit diagrams. The circuit diagrams are located in the terminal box.

## 12.2.6 Fastening for suspended transport

<b>⚠ WARNING</b>
<b>Motors may come loose during transport if not adequately secured</b>
Do not use the integrally cast lifting eyes ① on the motor to transport the geared motors due to the risk of breaking. Only use the integrally cast eyebolts ① to transport the motor prior to mounting or following removal.
If necessary, use additional, suitable lifting accessories for transport or during installation.
When attaching by a number of chains and ropes just two strands must be sufficient to bear the entire load. Secure lifting equipment so that it cannot slip.

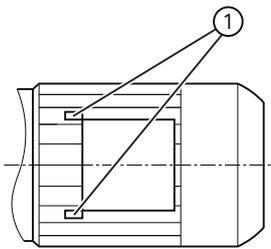

① Integrally cast eye on the motor

Figure 12-5 Motor attached for suspended transport

## 12.2.7 Storage

<b>⚠ WARNING</b>
<b>Injuries caused by falling objects</b>
Danger of serious injuries caused by falling objects.

<b>NOTICE</b>
<b>Failure of the exterior protection</b>
Mechanical damage, chemical damage and thermal damage, such as scratches, acids, alkalis, sparks, welding beads and heat cause corrosion.
Do not damage the paint finish.

### Note

#### Danger of damage to the motor when stacked

Do not stack gearboxes or geared motors on top of each other.

Unless contractually agreed otherwise, the warranty period for the standard preservative lasts 6 months from the date of delivery.

In the case of storage in transit over 6 months, special arrangements must be made for preservation. Contact the Technical Support.

Store the gearbox or geared motor in dry, dust-free rooms that are maintained at a constant temperature.

The storage location must be vibration- and shock-free.

The free shaft ends, sealing elements and flange surfaces must have a protective coating.

Do not store the geared motor on the fan cover.

#### Storage up to 36 months (optional)

Store the gearbox or geared motor in dry, dust-free rooms that are maintained at a constant temperature. Special packing is then not necessary.

If such premises are not available, pack the gearbox or the geared motor in plastic film or air-tight sealed film and materials. The films and materials must be able to absorb moisture. Cover them to provide protection against heat, direct sunlight and rain.


The permissible ambient temperature is  $-25\text{ °C}$  to  $+50\text{ °C}$ .

The life of the corrosion protection is 36 months from delivery.

### 12.2.8 Installation conditions for the motor

<b>NOTICE</b>
<b>Risk of overheating due to insufficient cooling</b>
Protect intake and discharge openings against blockages and coarse dust.
The cooling air must flow unimpeded into the air intakes and flow out through the air outlets. Exhaust air should not be drawn back in again.

Motor Mounted

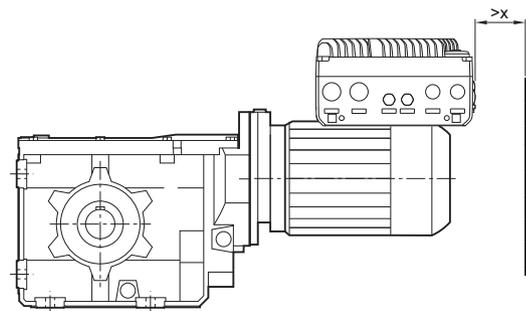

Wall Mounted

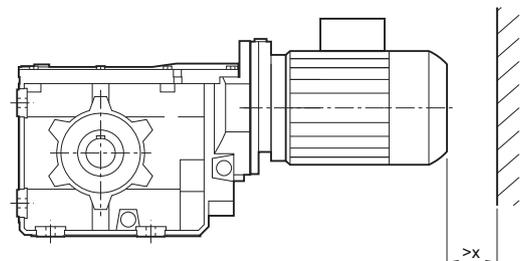


Figure 12-6 Minimum clearance of motor with G115D from wall for air intake

12.2 Specific data motor

Motor	Minimum clearance of motor with G115D from wall for air intake	
	Motor Mounted	Wall Mounted
	x in mm	
71	150	15
80	150	20
90	150	20
100	150	20
112	150	25
132	-	30

**NOTICE**

**Collision of mounted components on the converter**

With a projecting converter on Motor Mounted, care should be taken to avoid potential collisions between the mounted components on the converter (connectors, cable entries etc.) and neighboring components.

See mounting clearance of the converter (150 mm) in section AUTOHOTSPOT.

The permissible coolant temperature (ambient temperature at installation location) is -15 °C to +40 °C as standard for an installation altitude of up to 1 000 m above sea level. Deviating data are specified on the rating plate.

Drives for ambient temperatures from -30 °C to +40 °C and -20 °C to +55 °C are available as options.

When mounting in the vertical position with the fan cover facing upward, provide protection to prevent foreign objects falling in, e.g. using an appropriate cover.

### 12.2.9 Condensation drain hole (optional)

When installing the surface-cooled motor, take care that the condensation drain holes are at the lowest point.

### 12.2.10 Connecting the motor in the terminal box

For the Motor Mounted version, the converter is permanently connected to the motor. For the connection of the converter to the electricity supply network, see previous chapters.

### 12.2.10.1 General notes for motor connection (Wall Mounted)

** DANGER****Unintentional starting of the drive unit**

Any work must be performed with the machine stationary, isolated from the power supply and locked-out so that it cannot be switched back on again. This also applies to auxiliary circuits, e.g. PT 1000.

Check that the unit is in a no-voltage condition.

Deviations in the voltage, frequency, waveform and/or symmetry of the line supply increase the temperature rise.

This also negatively impacts the electromagnetic compatibility.

Before starting work, make sure that a protective conductor is securely connected.

**Note**

Pre-assembled conductors may only be used with fixed routed at temperatures below -30 °C. Alternating bends are not allowed at these temperatures.

Connect the motor in such a way that a permanently safe electrical connection is ensured. Wire ends must not protrude. Use matching cable end pieces.

Connect the line voltage in the terminal box. Arrange the terminal link according to the circuit diagram for star or delta connection in the terminal box.

If the motor has been ordered with a dispatch circuit, the terminal links are already connected to the terminal board as star or delta connection.

Select the connection cables according to DIN VDE 0100. Take into account the rated current and the plant-specific conditions.

The following required information for connection is specified in the technical data:

- Direction of rotation
- Number and arrangement of the connections
- Circuit / connection of the motor winding.

### 12.2.10.2 Terminal box

 <b>DANGER</b>
<b>Dangerous voltages</b> Can result in death, physical injury or material damage. Observe the following safety information before connecting-up the machine: <ul style="list-style-type: none"><li>• Only qualified personnel is permitted to work on the machine.</li><li>• Only perform work when the machine is stationary.</li><li>• Isolate the machine from the power supply and take measures to prevent it being switched back on again. The same applies for auxiliary circuits.</li><li>• Check that the machine really is in a no-voltage condition.</li><li>• If you have loosened terminal blocks, rectifiers and/or similar parts when electrically connecting the motor, then secure these components back in the terminal box. See figure below.</li></ul>

<b>NOTICE</b>
<b>Electrical connections can become loose</b> Please observe the tightening torques for cable glands, nuts and screws. Secure the feather keys when performing a test run without output elements.

<b>NOTICE</b>
<b>Malfunctions</b> It must be ensured that there are no foreign bodies, dirt or moisture in the terminal box. The terminal box must be sealed so that dust and water cannot enter. Seal the terminal box with the original seal. Seal cable entries to the terminal box and other open cable entries with an O-ring or suitable flat gasket. Do not damage the terminal box or other functional parts inside the terminal box.

**Note**  
For a standard terminal board with 6 terminal studs, the terminal box can be turned 4 x 90 degrees on the terminal base of the stator housing.

The temperature sensor is connected in the terminal box.  
Please note that the motor degree of protection is only obtained after correctly connecting up and tightening the cable glands and blanking plugs. Seal the thread of the cable glands and sealing plugs with a sealing compound or O-ring when connecting.

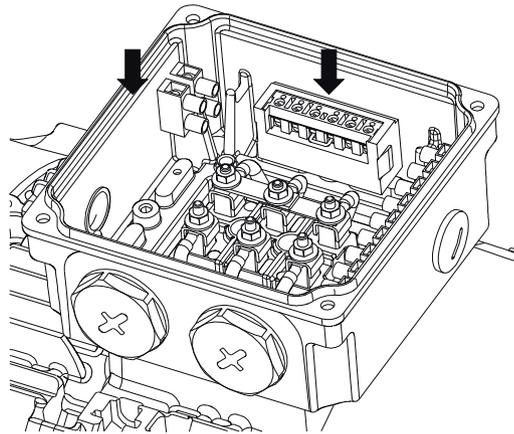


Figure 12-7 Fixing in the terminal box

### 12.2.10.3 Terminal marking

For terminal designations, the following principle definitions apply to three-phase motors:

Table 12-10 Terminal designations using the example 1U1-1


1	U	1	-	1	Designation
x					Index showing the pole assignment for pole-changing three-phase motors (lower number = lower speed) or, in special cases, for a subdivided winding
	x				Phase designation (U, V, W)
		x			Index showing winding start (1) Index showing winding end (2) Additional indexes if there is more than one connection per winding
				x	Additional indices if it is obligatory to connect parallel line feeder cables to several terminals with otherwise identical designations

### 12.2.10.4 Direction of rotation

The motors are suitable for clockwise and counter-clockwise rotation.

When the line feeder cables are connected in the phase sequence L1, L2, L3 to U, V, W, the motor rotates clockwise when looking at the drive end of the shaft extension (DE). If two of the connections are swapped, the resulting direction of rotation is counter-clockwise, e.g. L1, L2, L3 to V, U, W.

12.2 Specific data motor

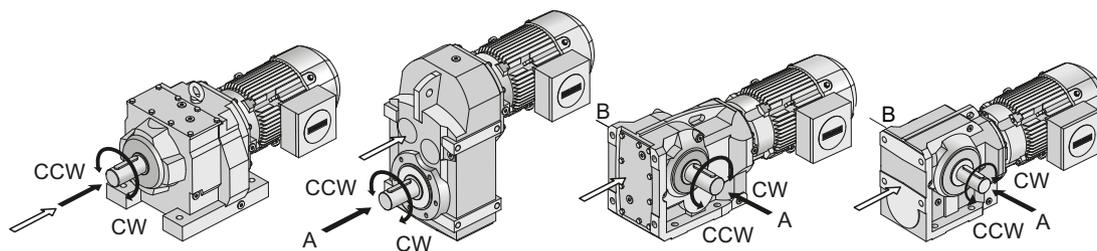

- View of output shaft
- ⇒ View of drive shaft / motor shaft

Figure 12-8 Direction of rotation

Table 12-11 Direction of rotation of the geared motor when viewing the output shaft

Gearbox type	View of	Direction of rotation		
		Output shaft	Input shaft	
Z	Output shaft	Clockwise	Clockwise	
D			Counterclockwise	
FZ			Clockwise	
FD			Counterclockwise	
B	DE of the output shaft	Clockwise	Clockwise	
	NDE of the output shaft		Counterclockwise	
K	DE of the output shaft		Counterclockwise	Counterclockwise
	NDE of the output shaft			Counterclockwise
C	DE of the output shaft	Clockwise		Clockwise
	NDE of the output shaft			Counterclockwise

12.2.10.5 Connecting the cables in the terminal box

**Note**

Direct contact between the cable lug surfaces and the contact nuts ensures that the connection can carry current.

In the case of terminals with terminal clamps, distribute the conductors in such a way that the clamping heights are about the same on both sides of the fillet. This method of connection requires a single conductor to be bent into a U shape or connected with a cable lug. The same applies to the inner and outer terminals of the ground conductor.

Select the cable lug size according to the required cable cross-section and stud size. A sloped / angular arrangement is permitted if the required clearances and creepage distances are maintained.

Remove the insulation from the conductor ends so that the remaining insulation is almost long enough to reach the cable lug.

### 12.2.10.6 External grounding

Ensure the following when making connections:

- The connecting surface must be bare. Protect the surface against corrosion with a suitable substance, e.g. acid-free Vaseline.
- Insert the cable lug between the contact bracket and the grounding bracket. Do not remove the contact bracket which is pressed into the housing.
- Place the spring washer under the screw head.
- Observe the tightening torque for the locking screw, see Mounting and installation (Wall Mounted) (Page 479).

Refer to chapter AUTOHOTSPOT.

Table 12-12 Maximum conductor connection for external grounding

Motor frame size	Thread size
71 ... 90	M4
100 ... 112	M5
132	M6

### 12.2.10.7 Mounting and installation (Wall Mounted)

See previous sections for the motor-mounted converter.

#### Note

Match the gland to the connecting cable used:

- Seal insert
- Armor
- Braiding
- Shielding

Screw the gland into the housing. Or secure the gland using a locknut.

#### Terminal board connection

Table 12-13 Tightening torque for the terminal board connection

Thread size	Tightening torque		Thread size	Tightening torque	
	Min.	Max.		Min.	Max.
	Nm	Nm		Nm	Nm
M4	0.8	1.2	M10	9	13
M5	1.8	2.5	M12	14	20
M6	2.7	4	M16	27	40
M8	5.5	8	-	-	-

12.2 Specific data motor

**Type of conductor connection**

Angle DIN cable lug down for connection. DIN 46234		Conductor cross-section
		... 25 mm <sup>2</sup>
Connection of an individual conductor with the terminal clamp.		
		... 10 mm <sup>2</sup>
Connecting 2 conductors with approximately the same thickness using a terminal clamp.		
		... 25 mm <sup>2</sup>

- ① Link rail
- ② Line connecting cable
- ③ Motor connecting cable
- ④ Cover washer

**Grounding connection type**

Connection of an individual conductor under the external grounding bracket.	Conductor cross-section
	... 10 mm <sup>2</sup>
Connect with the DIN cable lug under the external grounding bracket DIN 46234.	
	... 25 mm <sup>2</sup>

**Cable gland**

<b>NOTICE</b>
<b>Damage to the cable jacket</b>
An excessively high tightening torque with a different cable jacket material will damage the cable jacket.
When different cable jacket materials are used, apply a lower tightening torque.

For metal or plastic cable glands, please use the following tightening torques for direct mounting. The O-ring cross-section is 2 mm.

Table 12-14 Tightening torque for cable glands and blanking plugs

Thread size	Tightening torque $\pm 10\%$		Thread size	Tightening torque $\pm 10\%$	
	Metal	Plastic		Metal	Plastic
	Nm	Nm		Nm	Nm
M12 x 1.5	8	1.5	M32 x 1.5	18	6
M16 x 1.5	10	2	M40 x 1.5	20	
M20 x 1.5	12	4	M50 x 1.5		
M25 x 1.5			M63 x 1.5		

**12.2.11 Converter operation**

Suitably shielded cables and EMC cable glands must be used to connect the motors.

The maximum length of the motor cables is 15 m (49 ft), see section AUTOHOTSPOT.

**Permissible voltage stress**

For drives with G115D and EMC-adequate connection, the motor windings are designed to be converter-suitable (against partial discharge).

**Bearing currents**

Additional bearing currents due to steep voltage edges when switching. Make sure the drive system is installed in accordance with EMC requirements.

**Mechanical stress and grease lifetime**

High speeds that exceed the rated speed and the resulting increased vibrations alter the mechanical running smoothness and the bearings are subjected to increased stress. This reduces the service life of the grease and bearings.

### 12.2.12 Checking the insulation resistance (Wall Mounted)

Only qualified personnel may work on power installations.

 **WARNING**

**Unintentional starting of the drive unit**

Secure the drive unit to prevent it from being started up unintentionally.  
Attach a warning notice to the start switch.

 **WARNING**

**Hazardous voltage and rotating parts**

Before starting commissioning, mount the covers required for the correct air guidance.  
Prevent contact with active, live or rotating parts.

 **WARNING**

**Hazardous voltage at the terminals**

The terminals can be at hazardous voltage levels during the measurement and immediately afterwards. The terminals must not be touched.  
With the power cables connected, check that no voltage is applied.

**Note**

Check the insulation resistance before commissioning and after longer periods of storage or non-operational periods.

Before you begin measuring the insulation resistance, read the operating manual for the insulation resistance meter you are going to use. If a main circuit line is already connected for measuring the insulation resistance, remove it from the terminals.

**Note**

If the critical insulation resistance is less than or equal to this value, then the windings must be dried or, if the rotor is removed, cleaned thoroughly and dried.

After drying cleaned windings remember that the insulation resistance is lower for a warm winding. The insulation resistance can only be properly assessed after conversion to the reference temperature of +25 °C.

If the measured value is close to the critical value, you must check the insulation resistance at suitably frequent intervals.

Measure the minimum insulation resistance of the winding with respect to the motor enclosure at a winding temperature between +20 °C and +30 °C. Different insulation resistance values apply for deviating temperatures. When making the measurement, wait for 1 minute for the final resistance value to be reached.

Measure the critical insulation resistance at the operating temperature of the winding.

**Limit values**

The following limit values are valid for the insulation resistance at a rated voltage of  $U_N < 2$  kV and a winding temperature of +25 °C.

500 V	Measuring circuit voltage
10 MΩ	Minimum insulation resistance for new, cleaned or repaired windings
0.5 MΩ / kV	Critical specific insulation resistance after a long operating time

Comply with the following points:

- If you measure a winding temperature other than +25 °C, convert the measured value to the reference temperature +25 °C. The insulation resistance halves for every 10 K temperature increase. The resistance doubles for every 10 K temperature decrease.
- If the insulation resistance is close to or below the minimum value, the cause could be humidity and dirt accumulation. Dry the windings.
- During operation, the insulation resistance of the windings can fall to the critical insulation resistance due to ambient and operational influences. Calculate the critical value for a winding temperature of +25 °C. Multiply the rated voltage (kV) by the specific critical resistance value (0.5 MΩ/kV). Example: Rated voltage  $U_N$  690 V: 690 V x 0.5 MΩ/kV = 0.345 MΩ.

**12.2.13 Commissioning the motor****Note**

Protect the motor against overload.

Do not exceed the maximum speed.

**Note****With a brake with manual release:**

No braking effect when the manual brake release lever is locked. The brake is then permanently released.

Before commissioning the geared motor, ensure that the brake is not locked.

Unscrew the manual brake release lever and keep it separate from the geared motor.

**Note**

When starting / before switching on, use the appropriate circuit to ensure that the motor brake is released.

## 12.2 Specific data motor

---

### Note

#### With a brake motor:

After maintenance work, check the constancy of the rated air gap of the brake. The brake motor must be current-free. Check the gap between the armature disk and the solenoid at 3 points with a feeler gauge.

---

### Note

Additional tests are also required, depending on the particular plant-specific situation.

---

After checking and ensuring the following items, you can start commissioning the motor:

- Compare the data on the rating plate with the operating conditions.
- Check the direction of rotation.
- For a Y /  $\Delta$  start, a switch is made from star to delta when the starting current of the Y stage has decayed.
- Check that the electrical connections are securely fastened.
- Check all the touch protection measures for both moving and live parts.
- Check that the monitoring instruments are connected and set correctly.
- Check the coolant temperature.
- Check any supplementary equipment being used.
- Check that air intake openings and cooling surfaces are clean.
- Check the clearances from the geared motor to adjacent components, see Installation conditions for the motor (Page 473).
- Establish suitable connections for grounding and equipotential bonding.
- Properly mount and fasten the motor.
- Check that the ventilation is not impeded and that the discharged air – including that from adjacent units – cannot be drawn back in.
- Check the belt tension if a belt drive is being used.
- Close and seal the terminal box cover and seal the cable entries.

## 12.2.14 Faults, causes and remedies

### Note

Faults and malfunctions that occur during the warranty period and requiring repair work on the motor may only be remedied by Technical Support. If faults occur without a clearly identifiable cause, Siemens AG recommends the services of the Technical Support even after the warranty period has elapsed.

If you need the help from the Technical Support, please have the following information ready:

- Rating plate data
- Nature and extent of the fault
- Suspected cause

Table 12-15 Faults, causes and remedies

Faults	Causes	Remedy
Bearing overheated.	Too much grease in the bearing.	Remove excess grease.
	Bearing dirty.	Replace the bearings.
	Belt tension too high.	Reduce belt tension.
	Coupling forces pull or push.	Align the motor precisely, correct the coupling.
	Coolant temperature outside the permissible range.	Adjust the cooling air to the appropriate temperature.
	The bearing grease has a dark color.	Check for bearing currents.
	Not enough grease in the bearing.	Lubricate as specified by the manufacturer.
	Incorrect motor mounting.	Check the motor type of construction.
Bearing noise.	Not enough grease in the bearing.	Lubricate as specified by the manufacturer.
	Incorrect motor mounting.	Check the motor type of construction.
	Brinelling on the inner ring of the bearing, e.g. caused when the motor starts with a locked bearing.	Replace bearing, prevent vibration when motor is stationary.
Motor running unevenly.	Coupling forces pull or push.	Align the motor precisely, correct the coupling.
	Incorrect motor mounting.	Check the motor type of construction.
	Out of balance due to belt pulley or coupling.	Balance precisely.
	Motor mounting too loose.	Check the mounting.
Motor does not accelerate.	Opposing torque too high.	Check the motor torque and the load torque.
	Incorrect circuit.	Observe the circuit diagram and rating plate.

12.2 Specific data motor

Faults	Causes	Remedy
Motor temperature too high.	Incorrect circuit.	Observe the circuit diagram and rating plate.
	Overload.	Compare data on the rating plate.
	Switching frequency too high.	Observe the rated duty.
	Insufficient ventilation.	Check the cooling air ducts, check the direction of rotation
	Cooling air ducts dirty.	Clean cooling air ducts.
	Coolant temperature outside the permissible range.	Adjust the cooling air to the appropriate temperature.
Significant drop in speed.	Opposing torque too high.	Check the motor torque and the load torque.
	Line voltage too low.	Check the line supply.
	Phase interruption.	Check the connection to the line supply.
	Incorrect circuit.	Observe the circuit diagram and rating plate.
	Overload.	Compare data on the rating plate.
Protective equipment trips.	Phase interruption.	Check the connection to the line supply.
	Incorrect circuit.	Observe the circuit diagram and rating plate.
	Overload.	Compare data on the rating plate.
	Switching frequency too high.	Observe the rated duty.
	Winding and terminal short-circuit.	Measure the insulation resistance.
	Starting time is exceeded.	Check the run-up conditions.

12.2.15 General notes about maintenance

 <b>WARNING</b>
<b>Unintentional starting of the drive unit</b>
Secure the drive unit to prevent it from being started up unintentionally.
Attach a warning notice to the start switch.

<b>NOTICE</b>
<b>Improper maintenance</b>
Only authorized qualified personnel may perform the maintenance and servicing. It is only permissible to install original parts supplied by Siemens.

Only qualified personnel may perform the inspection, maintenance and servicing work. Note the information in the general notes and safety information (Page 469).

## 12.2.16 Locking the manual release of the brake (optional)

<p><b>⚠ WARNING</b></p> <p><b>Personal injuries and material damage caused by a locked brake</b></p> <p>No braking effect when the manual brake release lever is locked. The brake is then permanently released.</p> <p>Before commissioning the geared motor, ensure that the brake can be applied.</p> <p>Unscrew the manual brake release lever and keep it separate from the geared motor.</p>
--

Keep the lockable manual release in the released state for maintenance work.

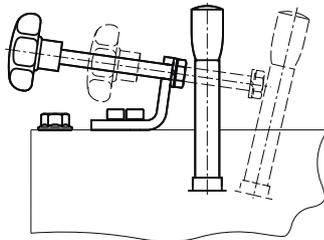


Figure 12-9 Lockable manual release

### Locking the manual brake release lever

1. Screw on the manual brake release lever.
2. Bring the manual brake release lever into the position in which the brake is released.
3. Tighten the locking screw far enough so that the manual brake release lever cannot return to the unreleased position.

You have released the brake.

### Releasing the lock

1. Unscrew the locking screw far enough so that the brake completely returns to the unreleased position. The clearance between the locking screw and the manual brake release lever is 2 to 5 mm.
  2. Unscrew the manual brake release lever. Keep the lever separately from the geared motor.
- You have ensured that the manual brake release is no longer locked.

## 12.2.17 Lubrication

The standard version of the motors bearings are permanently lubricated (2Z bearing) and cannot be relubricated. If this is not the case, this is indicated by a warning notice on the motor.

The specified grease service life values are valid for an ambient temperature of up to a maximum of +40 °C. For every 10°C increase in temperature, the grease service life is reduced by a factor of 0.7 of the value in the table (max. +20 °C = factor 0.5).

12.2 Specific data motor

At an ambient temperature of +25 °C, the grease service life can be expected to be doubled.

For versions with closed bearings (2Z bearings), we recommend that the bearings are replaced after 3 to 4 years. For options with open bearings (1Z bearing: special, food, organic grease), we recommend that the bearing grease is replaced after 3 to 4 years, regardless of the operating hours.

Table 12-16 Rolling-bearing and shaft-sealing-ring lubricant

Field of application	Ambient temperature	Manufacturer	Type
Standard	-40 °C to +80 °C	Fuchs	RENOLIT CX-TOM 15
Foodstuff-compatible for the food industry	-30 °C to +60 °C	Castrol	Optileb GR UF 1 NSF H1
Biologically degradable, for agriculture, forestry and water industries	-35 °C to +60 °C for motor with ISO class F -35 °C to +45 °C for motor with ISO class H	Fuchs	Plantogel 2 S

**Horizontal mounting position (IM B.)**

Table 12-17 Grease service life in operating hours [h] with permanent lubrication

Frame size	Motor speed $n_N$ in rpm						Grease quantity in the bearing	
	3 600	3000	1800	1500	1200	≤ 1 000	D-end	ND-end
	Operating hours in h						g	
71	33000	33000	33000	33000	33000	33000	7	5
80							9	9
90							15	11
100	24000						20	15
112							45	25
132		24000					75	50

**Vertical mounting position (IM V.)**

Table 12-18 Grease service life in operating hours [h] with permanent lubrication

Frame size	Motor speed $n_N$ in rpm						Grease quantity in the bearing	
	3 600	3000	1800	1500	1200	≤ 1 000	D-end	ND-end
	Operating hours in h						g	
71	24000	33000	33000	33000	33000	33000	9	9
80		24000						
90								
100	17000						20	15
112							17000	24000
132	12000			24000			75	50

## 12.2.18 Checking the tightness of fastening bolts

### Note

Replace damaged headless bolts with new bolts of the same type and strength class.

Switch off the power supply to the drive unit. Check all fastening bolts for tightness using a torque wrench.

The general tolerance for the tightening torque in Nm is 10 %. The friction coefficient is 0.14  $\mu$ .

Table 12-19 Tightening torques for fastening bolts

Thread size	Tightening torque for strength class		
	8.8	10.9	12.9
	Nm	Nm	Nm
M4	3	4	5
M5	6	9	10
M6	10	15	18
M8	25	35	41
M10	50	70	85
M12	90	120	145
M16	210	295	355
M20	450	580	690
M24	750	1 000	1200
M30	1500	2 000	2 400
M36	2 500	3 600	4 200

## 12.2.19 Inspection of the motor

Check the motor in accordance with the criteria set out in General motor information (Page 469).

Touch up damaged paintwork carefully.

## 12.2.20 Servicing the brake

### 12.2.20.1 Wear of the spring-operated brake

The friction lining and the mechanical components of the brake are subject to wear due to their inherent function. For safe and fault-free operation, the brake must be regularly checked and adjusted, and if necessary, replaced.

The following table describes the different causes of wear and their effects on the spring-operated brake components. The important influencing factors have to be quantified in order to calculate the service life of the rotor and the brake and determine the stipulated

12.2 Specific data motor

maintenance intervals. Here, the most important factors are the work as a result of the frictional force, the speed at the start of braking and the switching frequency. If several of the listed causes of wear to the friction lining occur at the same time in a single application, the influencing factors should be added together for the wear calculation.

Table 12-20 Causes of wear to the spring-operated brake

Component	Cause	Effect	Influencing factor
Friction lining	Operational braking	Friction lining wear	Work as a result of the frictional force
	Emergency stops		
	Wear caused by overlap when starting and stopping the geared motor		
	Active braking by the motor supported by the brake (quick stop)		
	Low speed and mounting position 'motor at top'		Number of start / stop cycles
Wear when starting for motor a mounting position with vertical shaft, even when the brake is released			
Armature disk and flange	Friction of the brake lining	Run-in of armature disk and flange	Work as a result of the frictional force
Braking rotor gear teeth	Relative movement and impacts between rotor and hub	Wear of the teeth (primarily on the rotor side)	Number of start / stop cycles
Support of the armature disk	Load change and impacts in the backlash between the armature disk, sleeve screws and guide pins	Deflection of armature disk, sleeve screws and pins	Number of start / stop cycles, strength of braking torque
Springs	Axial load cycle and shear stresses in the springs due to radial backlash in the armature disk	Decrease in the spring force or fatigue failure	Number of switching operations of the brake

12.2.20.2 Maintenance intervals for the brake

For safe and trouble-free operation, check and maintain the spring-operated brake at regular intervals.

For operational braking, the maintenance intervals depend on the loading on the brake in the application. Take all causes of wear into account when calculating the maintenance intervals. Siemens recommends a regular inspection at fixed time intervals for brakes that are subject to low loads, e.g. holding brakes with an emergency stop.

Failure to maintain the brake can lead to operating faults, production outage or damage to the plant. Specify a maintenance plan for each application that is appropriate to the

operating conditions and loading of the brake. The maintenance intervals and maintenance work for the pneumatic brake are listed in the table.

Table 12-21 Maintenance interval for the brake

Brake	Maintenance interval
Operational brake	According to service life calculation
	Otherwise every six months
	After 4 000 operating hours at the latest
Holding brake with emergency stop	Minimum every 2 years
	After 1 million cycles at the latest
	Shorter intervals for frequent emergency stops

### 12.2.20.3 Adjusting the air gap

**⚠ WARNING**

**Unintentional starting of the drive unit**

Switch off the power supply to the drive unit.

The brake must be in a torque-free condition.

Secure the drive unit to prevent it from being started up unintentionally.

Attach a warning notice to the start switch.

**⚠ WARNING**

**Decrease of braking effect due to contamination**

Do not allow oil or grease to come into contact with friction surfaces.

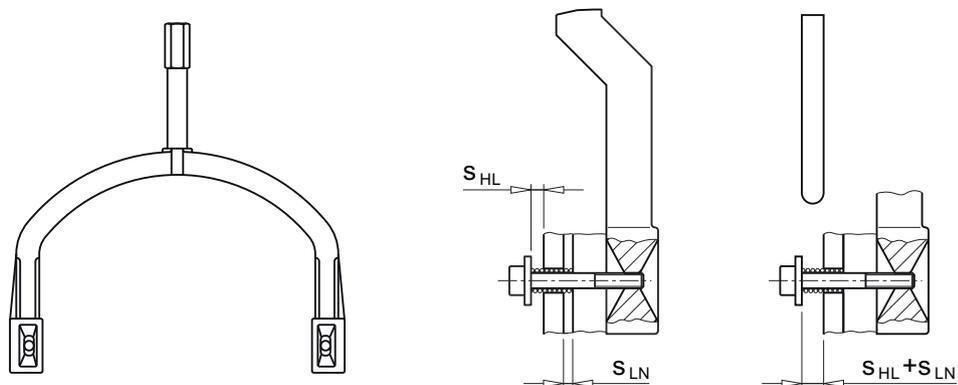


Figure 12-10 Setting dimension for air gap

## Procedure

1. Remove the fan cover.
2. Loosen the fixing screws of the brake.
3. Screw the sleeve screws further into the solenoid using an open-ended spanner.
4. Tighten the fixing screws of the brake.
5. Check the air gap  $s_{LN}$  in the vicinity of the screws using a feeler gauge.
6. If necessary, correct the air gap  $s_{LN}$  and then check it again.
7. When combined with manual brake release:  
Check the setting dimension  $s_{HL}$  and correct  $s_{HL}$  if necessary.
8. Mount the fan cover.

You have now set the air gap.

Table 12-22 Air gap values

Brake type	Nominal air gap	Maximum air gap for	Reference gage $s_{HL}$
	$s_{LN}$ (+0.1 / -0.05)	Standard excitation $s_{Lmax.}$	
	mm	mm	mm
L4/1,4	0.2	0.3	1.0
L4/2			
L4/3			
L4			
L8/4			
L8/5			
L8			
L16/8, L16/10, L16/13, L16			
L16/20			
L32/14, L32/18	0.3	0.45	1.5
L32/23			
L32, L60/50			
L32/40			
L80/25, L80/35, L80/50, L80/63			
L80/100			

Table 12-23 Tightening torque for the brake screw

Brake type		Thread size	Tightening torque
Siemens	Brake supplier		Nm
L4	INTORQ BA BFK458 (06E)	3 x M4	3
L8	INTORQ BA BFK458 (08E)	3 x M5	6
L16	INTORQ BA BFK458 (10E)	3 x M6	10

Brake type		Thread size	Tightening torque
Siemens	Brake supplier		Nm
L32	INTORQ BA BFK458 (12E)	3 x M6	10
L60, L80	INTORQ BA BFK458 (14E), INTORQ BA BFK458 (16E)	3 x M8	25

#### 12.2.20.4 Replacing the friction lining

 <b>WARNING</b>
<p><b>Unintentional starting of the drive unit</b></p> <p>Switch off the power supply to the drive unit.</p> <p>The brake must be in a torque-free condition.</p> <p>Secure the drive unit to prevent it from being started up unintentionally.</p> <p>Attach a warning notice to the start switch.</p>

#### Procedure

1. Remove the fan cover.  
When combined with manual release:  
Unscrew the manual brake release lever.
2. Release the connecting cable.
3. Remove the fan locking ring and pull out the fan.
4. Loosen the brake screws evenly and remove the screws completely. Adjust the solenoid, see .
5. Completely pull the rotor off the hub.
6. Check the hub teeth.
7. Check the friction surface at the bearing shield. If there is severe scoring on the friction plate or flange, replace the friction plate or flange. Rework the friction surfaces if there is severe scoring on the bearing shield.
8. Measure the thickness of the new rotor and the head height of the sleeve screws with a caliper gauge.
9. Calculate the gap between the solenoid and the armature disk as follows:  
 $\text{gap} = \text{rotor thickness} + s_{LN} - \text{head height}$ .
10. Unscrew the sleeve screws evenly until the calculated gap between the solenoid and the armature disk is reached.
11. Mount the new rotor and solenoid. Set the air gap of the brake, see Adjusting the air gap (Page 491).
12. Connect the connection cable.
13. Mount the fan cover.

12.2 Specific data motor



Table 12-24 Brake data

Brake type	Nominal air gap $s_{LN}$ (+0.1 / -0.05)	Minimum rotor thickness	Maximum permissible	
			Operating speed if max. permissible operating energy utilized	No-load speed with emergency stop function
	mm	mm	rpm	rpm
L4	0.2	4.5	4 000	6000
L8	0.2	5.5	4 000	5 000
L16	0.2	7.5	3 600	4 000
L32	0.3	8	3 600	3 600
L60	0.3	7.5	3 600	3 600
L80	0.3	8	3 600	3 600

### 12.2.21 Circuit diagrams

The circuit diagrams include the information about:

- Assembling the connections
- Motor connection
- Use in electric circuit diagrams.

The circuit diagrams are placed in the terminal box, and supplied with the motor.

Table 12-25 Example of the circuit diagram numbering

Example:	A	0	100	000
1st position	A			
2nd position		0		
3rd position			100	
4th position				000

Table 12-26 Explanation

1st position	Identification letter for circuit diagrams.
2nd position	Marking for the connection type: 0: Standard connection at the terminal board (motor), terminal block (auxiliary connections). 1: Standard connection at the connector box.
3rd position	Identification for the circuit diagram content.
4th position	Consecutive number for additional versions.

### Modular structure of the circuit diagrams

The circuit diagrams have a modular structure and have been simplified.

Table 12-27 Structure of the circuit diagrams

Supplementary device	Terminal marking	Supplementary device	Terminal marking	Terminal numbering	Designation	Function
Europe	Europe	Nema	Nema			
1BD	1BD1; 1BD2	B	B1; B2	05; 06	Brake control	DC connection, brake
1BA	1BA1; 1BA2	B	B3; B4	07; 08	Brake control	AC voltage connection, brake rectifier
1S	1S1; 1S2	B	B5; B6	09; 10	Brake control	Jumper, DC circuit, brake rectifier
1R	1R1; 1R2	P	P27; P28	95; 96	Temperature monitor motor winding	Resistance thermometer Pt1000
7R	7R1; 7R2.1; 7R2.2	P	P29; P30.1; P30.2	97; 98.1; 98.2	Temperature monitor gearbox	Resistance thermometer 1 Pt100 oil sensor



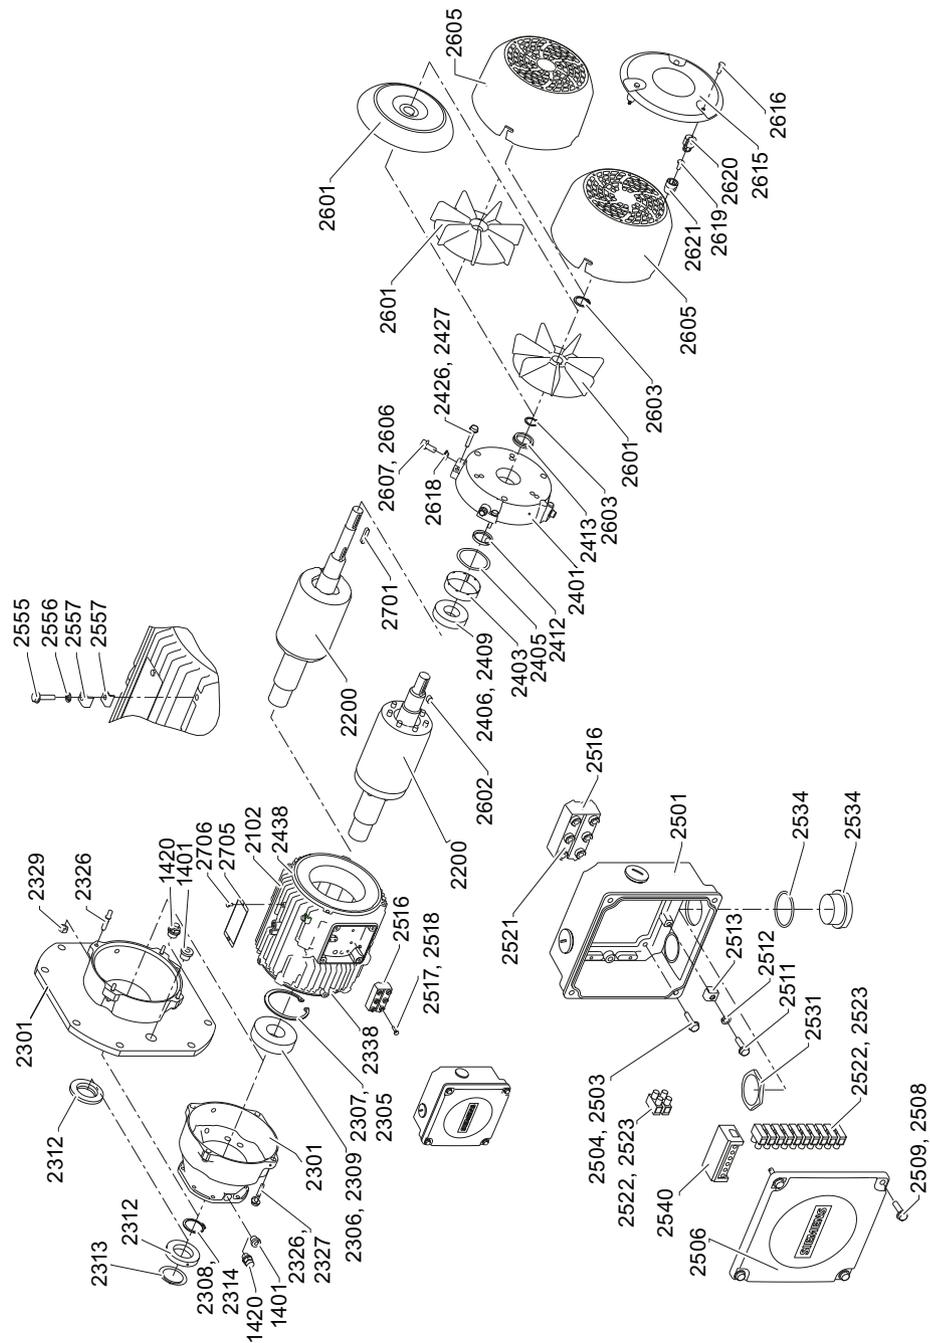


Figure 12-12 Motor frame sizes 100 - 160

12.2 Specific data motor

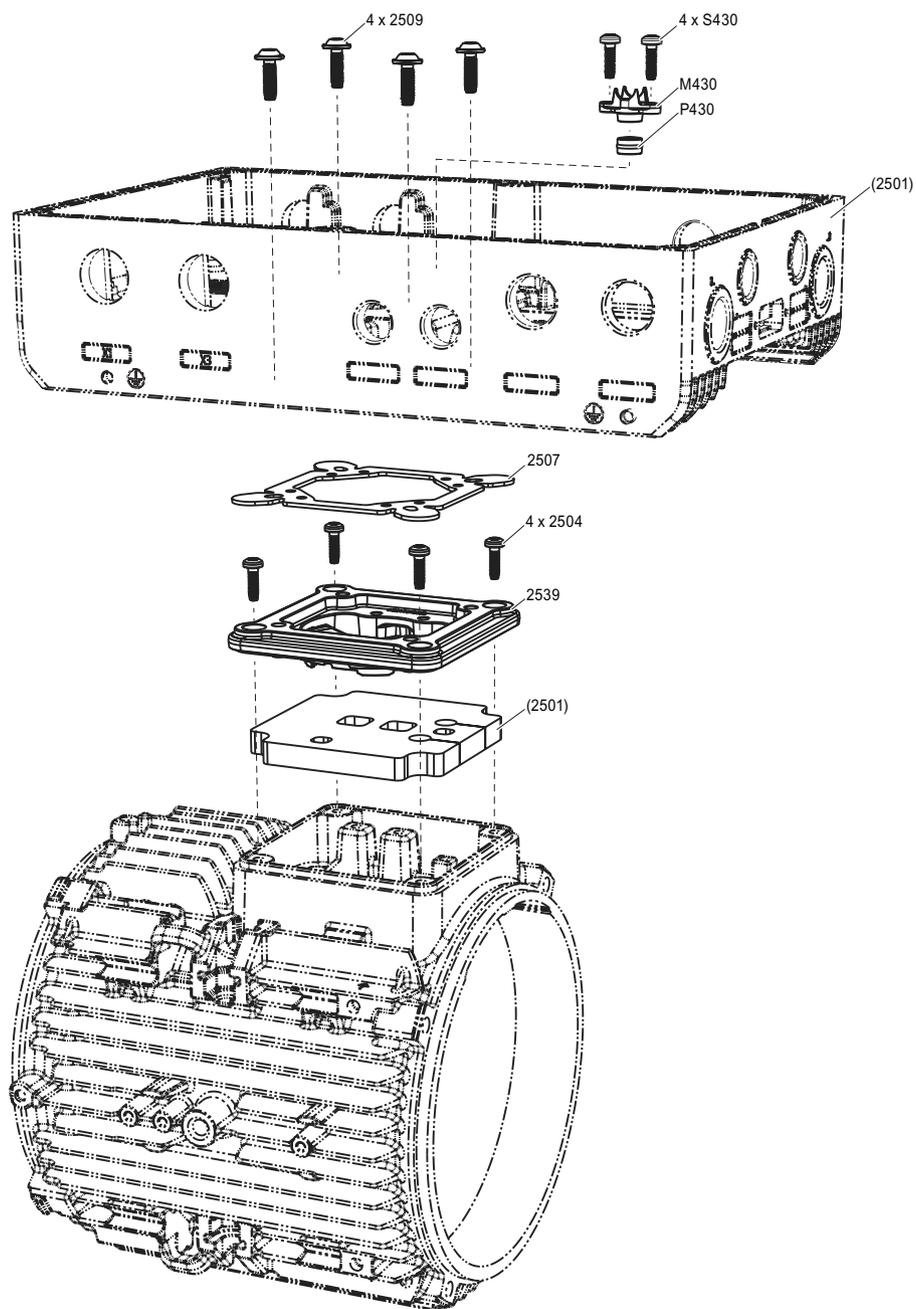


Figure 12-13 G115D motor frame sizes 71 - 112

Spare parts list for motor frame sizes 71 - 132

1401	Screw plug	2516	Complete terminal board
1420	Vent filter	2517	Screw
2102	Stator	2518	Screw retainer
2200	Rotor	2519	Nut
2301	End shield	2521	Terminal connector
2305	Shim	2522	Terminal strip
2306	Bearing	2523	Screw

2307	Locking ring	2526	Mounting plate
2308	Locking ring	2531	Nut
2309	Lubricant	2534	Screw plug with O-ring
2312	Shaft sealing ring	2536	Foam panel
2313	Oil splasher	2539	Adapter plate/intermediate plate
2314	Shim	2540	Rectifier
2326	Screw	2555	Screw
2327	Screw retainer	2556	Screw retainer
2329	Nut	2557	Bracket
2338	Seal	2601	Fan blade
2401	End shield	2602	Tolerance ring
2403	Spring band	2603	Locking ring
2405	Spring washer	2605	Fan cover
2406	Bearing	2606	Screw retainer
2409	Lubricant	2607	Screw
2412	Shaft sealing ring	2615	Protective canopy
2413	V-ring	2616	Screw
2426	Screw	2617	Riveting nut
2427	Screw retainer	2618	Damping disk
2438	Seal	2619	Screw
2501	Lower terminal box section	2620	Barrel / bushing
2502	Seal	2621	Barrel / bushing
2503	Screw retainer	2701	Feather key
2504	Screw	2702	Screw
2506	Terminal box cover	2703	Screw retainer
2507	Seal	2705	Rating plate
2508	Screw retainer	2706	Screw
2509	Screw	2714	Eyebolt
2511	Screw	M430	Brake cable holder
2512	Screw retainer	P430	Ring gasket for brake cable
2513	Bracket	S430	Screw for thrust pad M430

12.2.22.2 Brake

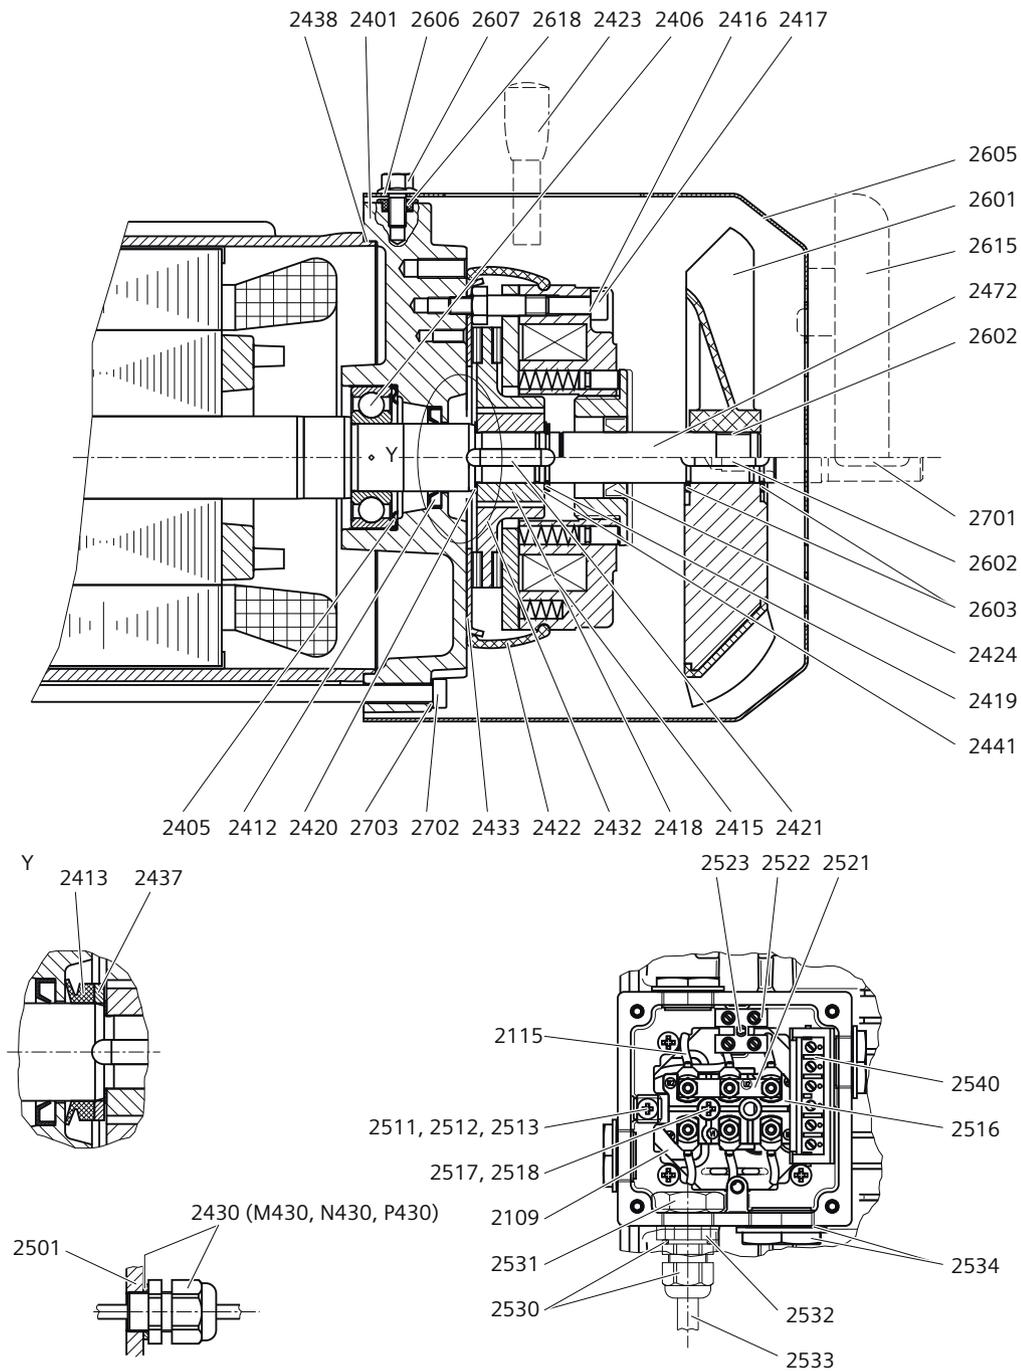


Figure 12-14 L brake

Spare parts list for brakes

2109	Plugs for cable slot	2501	Terminal box base
2115	End sleeve / cable lug	2511	Screw
2401	End shield	2512	Screw retainer

2405	Spring washer	2513	Bracket
2406	Bearing	2516	Complete terminal board
2412	Potting compound	2517	Screw
2413	V-ring	2518	Screw retainer
2415	Brake	2521	Terminal connector
2416	Screw retainer	2522	Terminal strip
2417	Screw	2523	Screw
2418	Coupling driver	2530	Cable gland
2419	Locking ring	2531	Nut
2420	Supporting / adjusting washer	2532	Reduction / expansion
2421	Feather key	2533	Cable
2422	Dust protection ring	2534	Screw plug
2423	Manual release lever	2540	Rectifier
2424	Shaft sealing ring	2601	Fan blade
2430	Complete bushing	2602	Tolerance ring
M430	Cable gland	2603	Locking ring
N430	Seal (O-ring)	2605	Fan cover
P430	Seal insert	2606	Screw retainer
2432	Friction disk	2607	Screw
2433	Friction plate	2615	Protective canopy
2437	Supporting / adjusting washer	2618	Damping disk
2438	Seal	2701	Feather key
2441	Supporting / adjusting washer	2702	Screw
2472	Shaft extension	2703	Screw retainer

## 12.3 Specific data gearbox

### 12.3.1 General information gearbox

---

#### Note

Siemens does not accept any liability for damage and operational disturbances that result from the non-observance of these operating instructions.

---

These operating instructions are included with the geared motor when delivered, or you can find them in SIOS (<https://support.industry.siemens.com/cs/de/en/ps/13424/man>). Read the operating instructions before handling the geared motor. Carefully follow the instructions. This is how you ensure safe and disturbance-free operation.

The geared motors described here correspond to state-of-the-art technology at the time these operating instructions were printed.

### 12.3 Specific data gearbox

Siemens reserves the right to change individual components and accessories in the interest of ongoing development. The changes are designed to improve performance and safety. The significant features are retained. The operating instructions are updated regularly with new contents.

The latest versions of the operating instructions, the declaration of incorporation and the declarations of conformity are available in electronic form in the Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/13424/man>).

#### 12.3.2 Use for the intended purpose

The SIMOGEAR gearboxes described in these operating instructions have been designed for stationary use in general engineering applications.

Unless otherwise agreed, the gearboxes have been designed for use in plants and equipment in industrial environments.

The gearboxes have been built using state-of-the-art technology and are shipped in an operationally reliable condition. Changes made by users could affect this operational reliability and are not permissible.

---

#### Note

The data on the rating plate assumes an installation altitude of up to 1 000 m above sea level.

The permissible ambient temperature is stamped on the rating plate.

For different installation altitudes and ambient temperatures, contact Technical Support.

---

The gearboxes have been designed solely for the application described in the Technical data (Page 461). Do not operate the gearbox outside the specified power limit. Other operating conditions must be contractually agreed.

Do not climb on the gearbox. Do not place any objects on the gearbox.

#### 12.3.3 General technical description

The gearbox is supplied with one, two or three transmission stages.

The gearbox is suitable for various mounting positions. Observe the correct oil level.

#### Gearbox housing

The housings for frame sizes 19 and 29 are made of die-cast aluminum.

Depending on the gearbox type, housings of frame sizes 39 and 49 are made of die-cast aluminum or cast iron.

Table 12-28 Housing material

Gearbox type	Frame size		
	39	39A	49
Helical gearbox E	Cast iron		Cast iron
Helical gearbox D/Z	Aluminum		Cast iron
Parallel shaft gearbox F	Cast iron		Cast iron
Bevel gearbox B	Aluminum		Aluminum
Bevel gearbox K	Cast iron		Cast iron
Helical worm gearbox C		Aluminum	Cast iron

From frame size 59, the gearbox housings are made of cast iron.

### Geared components

The geared components are hardened and ground.

For the helical worm gearbox, the worm is hardened and ground. The gear is manufactured from high-quality bronze.

The bevel gear stage of the bevel gearbox is lapped in pairs.

### Lubrication

The geared components are supplied with adequate lubricant by means of splash lubrication.

### Shaft bearings

All shafts are mounted in rolling bearings. The rolling bearings are lubricated using splash lubrication or oil-spray lubrication. Bearings that are not supplied with lubricant are closed and grease-lubricated.

## 12.3.4 Shaft seals

The shaft sealing rings on the output side prevent lubricant from escaping from the housing at the shaft outlet and prevent pollution from entering the housing.

The optimum use of the seals depends on the ambient conditions and the lubricant being used.

### Radial shaft sealing ring

A high-quality radial shaft sealing ring is used as standard seal. The ring is provided with an additional dust lip to protect against contaminants from outside.

Permitted oil sump temperatures  $-40^{\circ}\text{C}$  to  $+80^{\circ}\text{C}$ .

### Seal for a longer service life (optional)

The radial shaft sealing ring with dust lip has an additional buffer axial seal towards the inside of the gearbox. The sealing system has a high degree of reliability as a result of the insensitivity with respect to contaminations in the oil.

### 12.3 Specific data gearbox

Permitted oil sump temperatures -40° C to +100° C.

#### **Seal to handle increased environmental stress (optional)**

This seal is equipped with an additional fiber disk. The disk so provides increased protection against higher environmental stress caused by dirt and dust.

Permitted oil sump temperatures -20° C to +80° C.

#### **High temperature-resistant seal (optional)**

The deployed radial shaft sealing rings are made of a temperature-resistant material.

Permitted oil sump temperatures -25° C to +110° C.

### 12.3.5 Cooling

<b>NOTICE</b>
<b>Dust deposits prevent heat radiation</b>
Dust deposits prevent heat radiation and cause a high housing temperature. Keep the gearbox free from dirt, dust, etc.

The gearbox does not normally require additional cooling. The generously dimensioned housing surface is sufficient for dissipating heat losses where there is free convection. If the housing temperature exceeds a value of +80 °C, please contact Technical Support.

### 12.3.6 Fastening for suspended transport

#### WARNING

##### **Inadequately fastened gearboxes or geared motors can break loose**

Use only the transport eye or eyebolt of the gearbox to transport the gearbox or geared motor. The eye and the bolt are designed only for the weight of the gearbox or geared motor. It is not permissible to add additional loads to the eye and bolt.


Do not rig eyebolts to the front threads at the shaft ends for transportation purposes.

Existing eyebolts and cast-on lifting eyes on the motor housing are not designed to support the entire unit. If you lift the unit only by the eyebolts or lifting eyes on the motor housing, the eyebolts may be ripped out of the threads or the lifting eyes may break off and cause serious or fatal injury. Use eyebolts or lifting eyes on the motor housing only for position stabilization.

Observe the maximum specified load on the eyebolt. Stress applied transversely to the ring plane is not permissible. Do not use bent or damaged eyebolts.

Use additional, suitable lifting accessories for transport or during installation.

When attaching using several chains and ropes, 2 cable/chain strands must be sufficient to carry the complete load. Secure lifting accessories against slipping.

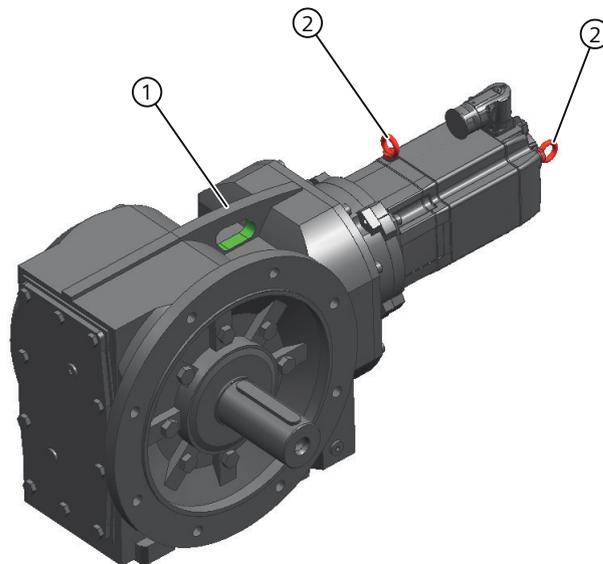

- ① Transport eye gearbox  
Support for the geared motor unit.
- ② ATTENTION!  
Eyebolt motor housing  
Sole support of the entire geared motor unit not permitted!  
Support only for position stabilization.

Figure 12-15 Use of transport eye and eyebolt

12.3 Specific data gearbox

Table 12-29 Maximum load of the eyebolt on the gearbox

Thread size	m	d <sub>3</sub>	Thread size	m	d <sub>3</sub>
	kg	mm		kg	mm
M8	140	36	M20	1200	72
M10	230	45	M24	1800	90
M12	340	54	M30	3 200	108
M16	700	63	-	-	-

The eyebolt corresponds to DIN 580.

**Procedure**

1. Transport the gearbox or geared motor by the lifting eyes or eyebolts on the gearbox housing.
2. The lifting eyes and eyebolts are designed only for the weight of the gearbox or geared motor. It is not permissible to add additional loads such as built-on parts on the gearbox to the lifting eyes and eyebolts.
3. Remove any eyebolts that are no longer required after transport.

You have prepared the gearbox or geared motor for transport.

**12.3.7 Storage**

**12.3.7.1 General information for storage**

 <b>WARNING</b> <b>Danger of serious injuries caused by falling objects</b> <b>Danger of damage to the gearbox when stacked</b> Do not stack gearboxes or geared motors on each other.
--

<b>NOTICE</b> <b>Failure of the external protection</b> Mechanical damage, chemical damage and thermal damage, such as scratches, acids, alkalis, sparks, welding beads and heat cause corrosion. Do not damage the paint finish.
--

Unless contractually agreed otherwise, the guarantee period for the standard preservative lasts 6 months from the date of delivery.

In the case of storage in transit over 6 months, special arrangements must be made for preservation. Contact Technical Support.

Store the gearbox or geared motor in dry, dust-free rooms that are maintained at a constant temperature.

The storage location must be vibration- and shock-free.

The free shaft ends, sealing elements and flange surfaces must have a protective coating.

Do not store the geared motor on the fan cover.

### 12.3.7.2 General notes for storage up to 36 months

Store the gearbox or geared motor in dry, dust-free rooms that are maintained at a constant temperature. Special packing is then not necessary.

If such premises are not available, pack the gearbox or the geared motor in plastic film or air-tight sealed film and materials. The films and materials must be able to accept moisture. Cover them to provide protection against heat, direct sunlight and rain.

The permissible ambient temperature is -25 °C to +50 °C.

The life of the corrosion protection is 36 months from delivery.

### 12.3.7.3 Gearbox filled with operating oil and anti-corrosive agent

#### NOTICE

#### Damage to the gearbox caused by incorrect oil quantities

Check the oil level before commissioning.

Observe the information and procedures for Checking the oil level (Page 530).

The gearbox is filled with oil corresponding to the mounting position so that it is ready for operation, and is sealed airtight using a screw plug or with a pressure breather valve with transport fixture.

For storage up to 36 months, a VCI anti-corrosion agent (Volatile Corrosion Inhibitor) is added.

### 12.3.7.4 Gearbox completely filled with oil

#### NOTICE

#### Damage to the gearbox caused by incorrect oil quantities

Prior to commissioning, remove excessive oil until it has the correct oil level.

Observe the information and procedures for Correcting the oil level (Page 530).

When biodegradable oils or oils for the food-processing sector are used, the gearbox is filled completely with operating oil. The gearbox is closed air-tight with a sealing plug or a pressure venting with transport fixture.

Do not lower the oil level during short-time commissioning for 10 minutes in no-load operation.

### 12.3.8 Gearbox with foot mounting

The foundation should be designed in such a way that no resonance vibrations are created and no vibrations are transmitted from adjacent foundations.

The foundation structure on which the gearbox is to be mounted must be torsionally rigid. It must be dimensioned according to the weight and torque, taking into account the forces acting on the gearbox. If the substructure is too weak, it will cause radial or axial displacement offset during operation that cannot be measured at a standstill.

If the gearbox is fastened to a concrete foundation, use foundation blocks for the appropriate recesses.

Align and grout the slide rails into the foundation.

Align the gearbox carefully with the units on the input and output side. Take into account the elastic deformation due to operating forces.

Prevent displacement from external forces due to lateral impacts.

Use stud bolts or headless screws of property class 8.8 or higher for the mounting foot. Observe the tightening torque.

Table 12-30 Thread size of the fixing screw

Thread size	Helical gearbox		Parallel shaft gearbox F	Bevel gearbox B, K	Helical worm gearbox C
	E	D/Z			
	Size				
M8	-	19, 29, 39	29, 39	B19, B29, B39	29
M10	39	-	49	B49, K39, K49	39, 49
M12	49	49, 59, 69	69, 79	K69, K79	69
M16	69, 89	79, 89	89	K89	89
M20	-	-	-	K109	-

### 12.3.9 Gearbox with flange mounting

#### Note

Siemens recommends an anaerobic adhesive to enhance the friction lock between flange and mounting surface.

Table 12-31 Thread size of the fixing screw

Thread size	Flange	Helical gearbox E, D/Z	Parallel shaft gearbox F	Bevel gearbox B, K	Helical worm gearbox C
		Size			
M6	A120	19, 29, 39	29	B19, B29	29
M8	A140, A160	19, 29, 39, 49, 59	29, 39	B29, B39, K39	29, 39

Thread size	Flange	Helical gearbox E, D/Z	Parallel shaft gearbox F	Bevel gearbox B, K	Helical worm gearbox C
		Size			
M10	A200	39, 49, 59, 69	49	B39, B49, K49	49, 69
M12	A250, A300	49, 59, 69, 79, 89	69, 79, 89	K69, K79, K89	89
M16	A350	79, 89	-	K109	-
M16	A450	89	-	-	-

Use screws / nuts of property class 8.8 for gearboxes with a flange-mounted design.

Note the following exceptions:

Table 12-32 Property class of the fixing screw for FF/FAF and KF/KAF

Gearbox size	Flange	Property class for motor size										
		90	100	112	132	160	180	200	225	250	280	315
39	A160	10.9	10.9	10.9	-	-	-	-	-	-	-	-
49	A200	8.8	10.9	10.9	10.9	-	-	-	-	-	-	-
69	A250	8.8	8.8	8.8	10.9	-	-	-	-	-	-	-
79	A250	8.8	8.8	8.8	10.9	-	-	-	-	-	-	-
89	A300	8.8	10.9	10.9	10.9	-	-	-	-	-	-	-
109	A350	8.8	8.8	8.8	8.8	-	-	-	-	-	-	-

Table 12-33 Property class of the fixing screw / nut for EZ, EF, DZ/ZZ and DF/ZF

Gearbox size		Flange	Property class
E	D/Z		
39	29, 39	A120	10.9 <sup>1)</sup>
-	49	A140	10.9
49	59	A160	
69	69	A200	
89	79	A250	
-	89	A300	

1) Use suitable washers under the nuts / screw heads

### 12.3.10 Gearboxes in foot or flange version

NOTICE
<p><b>Impermissible housing loadings caused by incorrectly installed add-on elements</b></p> <p>Do not subject the gearbox housing to excessive stress by adding add-on elements to the foot or flange.</p> <p>Add-on elements must not transmit forces, torques, and vibrations to the gearbox.</p>

### 12.3 Specific data gearbox

To prevent strains on the housing, fasten the gearbox only on the flange or the foot fastening for force and torque transmission. Refer to Gearbox with foot mounting (Page 508).

The second mounting option (foot or flange) is intended for add-on elements, e.g. protection covers with an intrinsic weight of up to max. 30 % of the weight of the gearbox.

#### 12.3.11 Mounting an input or output element on the gearbox shaft

 **WARNING**

**Risk of burns caused by hot parts**

Do not touch the gearbox without protection.

**NOTICE**

**Damage to shaft sealing rings caused by solvent**

Avoid contact of solvent or benzine with the shaft sealing rings.

**NOTICE**

**Damage to shaft sealing rings caused by heating**

Use thermal shields to protect shaft sealing rings from heating above 100 °C due to radiant heat.

**NOTICE**

**Premature wear or material damage due to misalignment**

Misalignment caused by excessive angular or axial misalignment of the shaft ends to be joined.  
Ensure precise alignment of the individual components.

**NOTICE**

**Damage caused by improper handling**

Bearings, housing, shaft and locking rings are damaged due to improper handling.  
Do not use impact or knocks to mount input and output elements onto the shaft.

**Note**

Deburr the parts of elements to be fitted in the area of the hole or keyways.

Recommendation: 0.2 x 45°

Where couplings are to be fitted in a heated condition, observe the specific operating instructions for the coupling. Unless otherwise specified, apply the heat inductively using a torch or in a furnace.

Use the center holes in the shaft end faces.

Use a fitting device to fit the input or output elements.

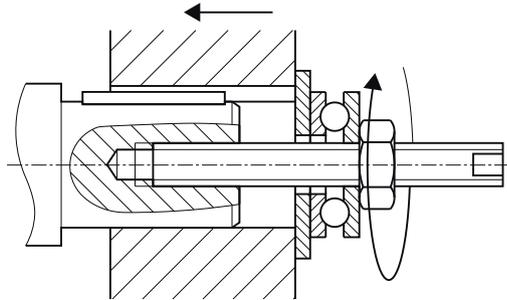


Figure 12-16 Example of a fitting device

Observe the correct mounting arrangement to minimize stress on shafts and bearings due to lateral forces.

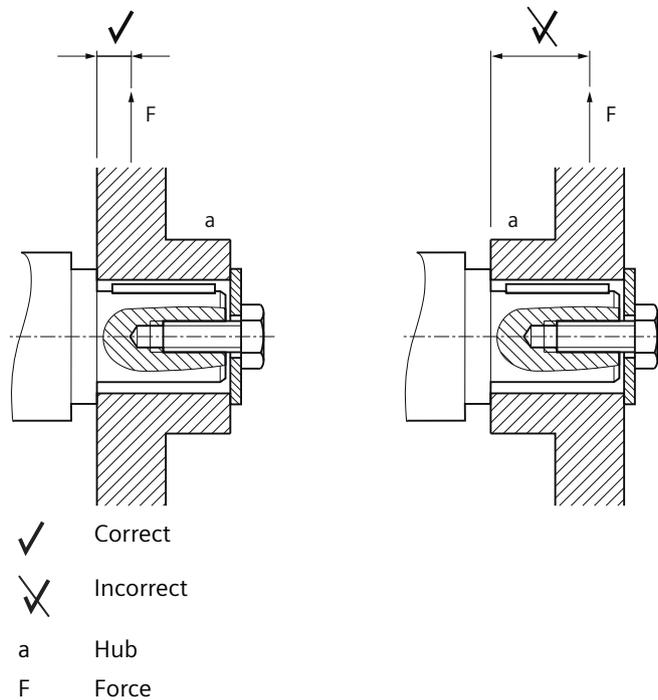


Figure 12-17 Mounting arrangement for low stress on shafts and bearings

## Procedure


1. Use benzine or a solvent to remove the anti-corrosion protection from the shaft ends and flanges. Or remove the existing protective skin.
2. Fit the drive input and output elements to the shafts. Lock the elements.

You have now attached the input or output element.

### 12.3.12 Removing and installing the protection cover

The protection cover of the hollow shaft is delivered ready-fitted to the gearbox flange. Remove the protection cover to install the output shaft.

The plastic protection cover of the hollow shaft is supplied loose as kit.

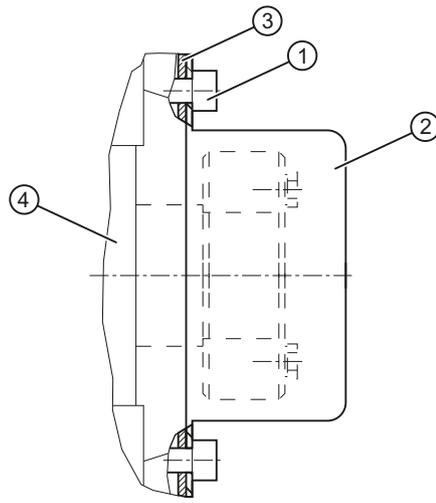

- |                    |                      |
|--------------------|----------------------|
| ① Bolt             | ③ Flat seal / O-ring |
| ② Protection cover | ④ Gearbox housing    |

Figure 12-18 Protection cover for hollow shaft

#### Procedure

##### Premounted protection cover


1. Loosen the screws ①. Remove the protection cover ② together with the flat gasket or O-ring ③.
2. Mount the output shaft.
3. Use a suitable cleaning agent to clean the contact surface of the protection cover ② on the gearbox.
4. Ensure that the flat seal or the O-ring ③ is correctly seated.
5. Wet the screws ① with medium-strength adhesive, e.g. Loctite 243.
6. Screw on the protection cover ②.
7. Protect all remaining bare areas with a suitable permanent anti-corrosive agent.

You have now installed the protection cover for operation.

##### Protection cover (supplied loose)

When using the plastic protection cover for gearbox F49, break the cover into the correct shape first.

When using the plastic protection cover for other gearboxes, it is not necessary to break the cover into the required shape; in this case, start with Point 2.

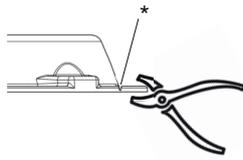

\* Preset breaking point

Figure 12-19 Preset breaking point for F49

1. F49: Break the cover at the preset breaking point as shown in the diagram.
2. Mount the output shaft.
3. Use a suitable cleaning agent to clean the contact surface of the protection cover ② on the gearbox.
4. Ensure that the O-ring or flat seal ③ is correctly seated.
5. Screw on the protective cover ② with a tightening torque of 10-15 Nm.
6. Protect all remaining bare areas with a suitable permanent anti-corrosive agent.

You have now mounted the plastic protection cover for operation.

### 12.3.13 General information on installing the shaft-mounted gearbox

#### NOTICE

##### Damage to shaft sealing rings caused by solvent

Avoid any contact of solvent or benzine with the shaft sealing rings.

#### NOTICE

##### Subjecting stress to the hollow shaft causes bearing failure

Skewing or stressing the hollow shaft increases the loading. This can cause bearing failure.

The hollow shaft must be flush with the machine shaft to avoid misalignment.

Do not subject the hollow shaft to axial and radial stress.

#### NOTICE

##### For shrink disks:

##### Lubricants in the area between the hollow shaft and machine shaft impair torque transmission

Keep the bore in the hollow shaft and the machine shaft completely grease-free.

Do not use impure solvents and soiled cleaning cloths.

12.3 Specific data gearbox

**Note**


Coat the contact surfaces with the mounting paste supplied with the product or any suitable lubricant to prevent frictional corrosion.

**Note**

Observe the permissible concentricity tolerance of the cylindrical shaft extension of the machine shaft to the housing axle according to DIN 42955.

**12.3.14 Hollow shaft with feather key**

**12.3.14.1 Mounting the hollow shaft with parallel key**

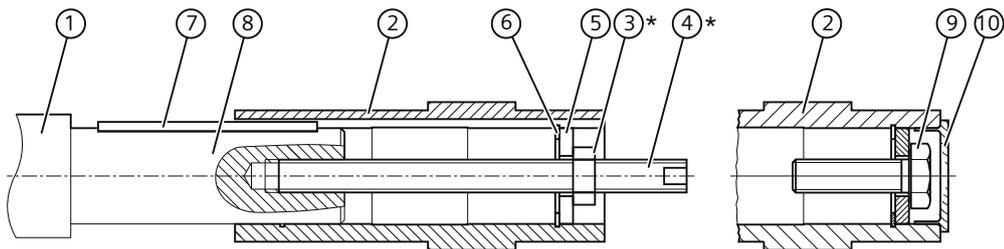

\* Not included in scope of supply

- |                    |                  |
|--------------------|------------------|
| ① Machine shaft    | ⑥ Locking ring   |
| ② Hollow shaft     | ⑦ Parallel key   |
| ③ Hexagon nut      | ⑧ Mounting paste |
| ④ Threaded spindle | ⑨ Screw          |
| ⑤ Disk             | ⑩ Sealing cap    |

Figure 12-20 Mounting the hollow shaft with parallel key

Instead of the nut and threaded spindle shown in the diagram, other types of equipment such as hydraulic lifting equipment may be used.

**Procedure**

1. Using benzine or a solvent, remove the anti-corrosion protection from the shaft ends and flanges.
2. Check the seats or edges of the hollow and machine shafts for any damage. Contact Technical Support if you notice any damage.
3. Apply the mounting paste provided ① to the machine shaft ⑧. Apply the paste uniformly. Carefully wipe away the rest at the shaft sealing ring of the gearbox.
4. Fit the gearbox using the disk ⑤, threaded spindle ④ and nut ③. Use the hollow shaft ② for support.

5. Replace the nut ③ and the threaded spindle ④ with a screw ⑨. Tighten the bolts ⑨ to the specified torque.
6. Close the open hollow shaft end using a sealing cap ⑩.

You have now mounted the hollow shaft with parallel key.

Table 12-34 Tightening torque for the screw

Thread size	M5	M6	M8	M10	M12	M16	M20	M24	M30
Tightening torque in Nm	5	8	8	14	24	60	120	200	400

### 12.3.14.2 Removing the hollow shaft with parallel key

#### WARNING

##### **Inadequately fastened gearboxes or geared motors can break loose**

Before driving out the machine shaft, fasten a suitably dimensioned means of absorbing load to the gearbox.

Slightly pretension the pulling equipment so that the gearbox does not drop onto it when the plug-in shaft is released.

#### NOTICE

##### **Subjecting stress to the hollow shaft causes bearing failure**

Avoid misalignment when removing the unit.

#### NOTICE

##### **Excessive forces during removal**


Excessive forces can occur during removal of the hollow shaft via the housing.

Stresses in the hollow shaft can lead to bearing failure and damage to the gearbox housing.

#### Note

If frictional corrosion has occurred on the seat surfaces, use rust solvent to facilitate the removal of the gearbox. Allow an adequately long time for the rust solvent to take effect.

12.3 Specific data gearbox

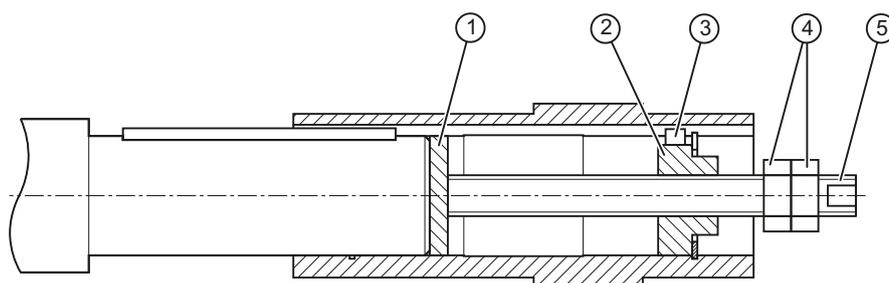

Items ① to ⑤ are not included in the scope of supply.

- ① Disk
- ② Threaded block
- ③ Parallel key
- ④ Hexagon nut
- ⑤ Threaded spindle


Figure 12-21 Removing the hollow shaft with parallel key

**Procedure**

1. Remove the axial locking element from the hollow shaft.
2. Drive out the machine shaft using the disk ①, threaded block ②, parallel key ③, threaded spindle ⑤ and hexagon nuts ④.

You have now removed the hollow shaft with parallel key.

**Design suggestion for threaded block and disk**

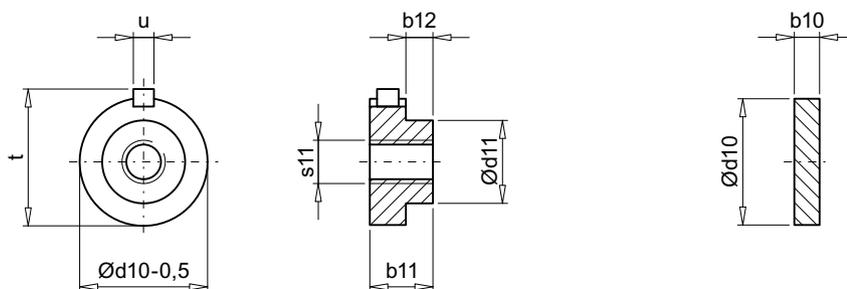


Gearbox	Size	Hollow shaft Ø	b10	b11	b12	d10	d11	s11	t <sub>max</sub>	u
		mm	mm	mm	mm	mm	mm	mm	mm	mm
B	19	20	3	15	10	19.9	10	M6	22.5	6
B, C	29	20	3	15	10	19.9	10	M6	22.5	6
B, F	29	25	3	15	10	24.9	16	M10	28	8
C	39	25	3	15	10	24.9	16	M10	28	8
B, K, F, C		30	6	15	10	29.9	18	M10	33	8
B		35	6	15	10	34.9	24	M12	38	10
B		40	6	15	10	39.9	28	M16	43	12
C	49	30	6	15	10	29.9	18	M10	33	8
K, F, C		35	6	15	10	34.9	24	M12	38	10
B		40	6	15	10	39.9	28	M16	43	12

Gearbox	Size	Hollow shaft $\varnothing$	b10	b11	b12	d10	d11	s11	$t_{max}$	u
		mm	mm	mm	mm	mm	mm	mm	mm	mm
K, F, C	69	40	6	20	9	39.9	28	M16	43	12
C		45	6	20	9	44.9	36	M16	48	14
K, F	79	40	6	20	9	39.9	28	M16	43	12
K, F, C	89	50	7	20	10	49.9	36	M16	53.5	14
C		60	7	20	10	59.9	45	M20	64	18
K	109	60	10	24	14	59.9	45	M20	64	18

## 12.3.15 Hollow shaft with shrink disk

### 12.3.15.1 Mounting the hollow shaft with shrink disk

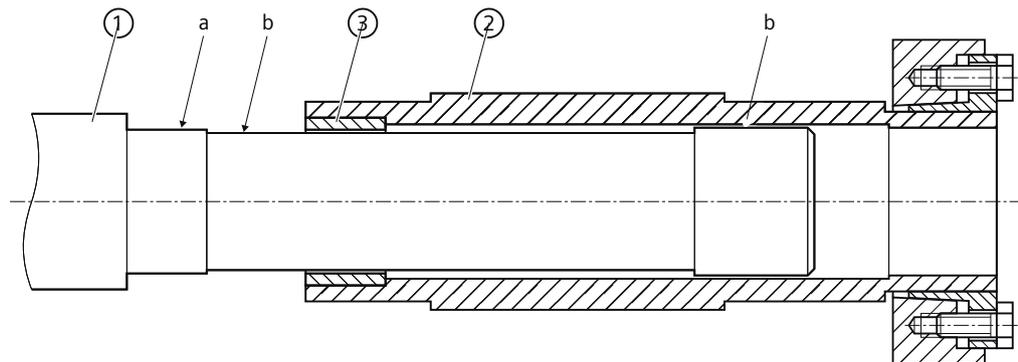

- a Greased
- b Absolutely grease-free
- ① Machine shaft
- ② Hollow shaft
- ③ Bushing

Figure 12-22 Mounting the hollow shaft with shrink disk

### Procedure

1. Using benzine or a solvent, remove the anti-corrosion protection from the shaft ends and flanges.
2. Check the seats or edges of the hollow and machine shafts for any damage. Contact Technical Support if you notice any damage.
3. Mount the gearbox with the shrink disk shaft onto the machine shaft. Carefully ensure the correct position and that the shrink disk seat completely covers the machine shaft.

You have mounted the hollow shaft with shrink disk.

### 12.3.15.2 Mounting the shrink disk

 **WARNING**

**Risk of injury due to freely rotating parts**

Fit a cover cap or protection cover.

**NOTICE**

**Lubricants in the shrink disk seat impair torque transmission**

Keep the bore in the hollow shaft and the machine shaft completely grease-free.

Do not use impure solvents and soiled cleaning cloths.

**NOTICE**

**Plastic deformation of the hollow shaft caused by tightening the clamping bolts**

Plastic deformation of the hollow shaft when tightening the clamping bolts before fitting the machine shaft.

First fit machine shaft. Then tighten the clamping bolts.

**NOTICE**

**Avoid overloading the individual bolts**

Do not exceed the maximum tightening torque for the clamping bolt.

Sizes 19 - 69:  
tighten clamping bolts ⑥

Sizes 79 - 109:

It is important that the face surfaces of the outer ring ④ and the inner ring ⑤ are flush with one another. If they are not flush with one another when fitting, check the tolerance of the plug-in shaft.

**Note**

The shrink disk, item ③, is delivered ready for installation.

Do not dismantle it before the initial fitting.

**Note**

The machine shaft material must comply with the following criteria in order to safely and reliably transfer the forces and torques:

- Yield point  $Re \geq 360 \text{ N/mm}^2$
- Modulus of elasticity: approx.  $206 \text{ kN/mm}^2$
- No face end thread in the machine shaft because it would reduce the transferred torque

**Note**

The shrink-fitted disc connection fastens the hollow shaft axially on the machine shaft.

**Note**


Apply a thin layer of grease to the shrink disk seat on the hollow shaft.

**Note**

Coat with a suitable lubricant to prevent frictional corrosion of the contact surface on the customer's machine shaft in the vicinity of the bushing.

Sizes 19 - 69

Sizes 79 - 109

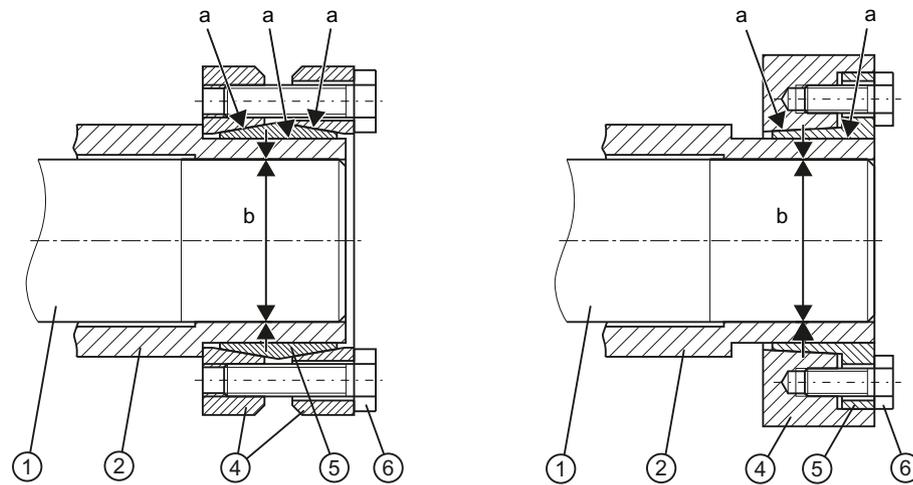

- a Greased
- b Absolutely grease-free
- ① Machine shaft
- ② Hollow shaft
- ③ Shrink disk comprising items ④ - ⑥
- ④ Outer ring
- ⑤ Inner ring
- ⑥ Clamping bolt

Figure 12-23 Mounting the shrink disk

12.3 Specific data gearbox

**Procedure**

1. Push the shrink disk ③ onto the hollow shaft ②.
  - 3-part shrink disk up to the end stop for sizes 19 - 69.
  - 2-part shrink disk flush with the shaft end for sizes 79 - 109.
2. Tighten the clamping bolts ⑥, initially by hand. Align the shrink disk ③ so that the clamping flanges are plane-parallel with one other.
3. Use the torque wrench to turn each of the clamping bolts ⑥ equally by 1/6 revolution (not crosswise); repeat this procedure several times. Observe the tightening torque.
4. Attach the rubber cover or protection cover included in the scope of supply using Removing and installing the protection cover (Page 512).

You have now installed the shrink disk.

Table 12-35 Tightening torque for the clamping bolt

Gearbox size	Thread size	Property class	Tightening torque
			Nm
19, 29	M5	10.9	5
39, 49, 69	M6	10.9	12
79, 89	M8	12.9	35
109	M10	12.9	70

**12.3.15.3 Pulling off the shrink disk**

**Procedure**

1. Successively release the clamping bolts ⑥ one after the other through a ¼ turn each time using a wrench. Do not completely remove the bolts.
2. Withdraw the shrink disk from the hollow shaft.

Frame sizes 79 - 109:

If the outer ring does not come away from the inner ring, remove some of the clamping bolts and insert them into neighboring forcing-off threads.

You have withdrawn the shrink disk from the hollow shaft.

**12.3.15.4 Cleaning and lubricating shrink disks**

Soiled shrink disks must be cleaned and regreased prior to fitting.

Shrink disks that have been released need not be disassembled and regreased before being retensioned.

## Procedure

1. Only grease the inner friction surfaces of the shrink disks. To do this, use a solid lubricant with a friction coefficient of  $\mu = 0.04$ .
2. Use a paste containing  $\text{MoS}_2$  to grease the bolts, applying the paste to the thread and underneath the head.

Clean the shrink disk.

Table 12-36 Lubricants for shrink disks

Lubricant	Sold as	Manufacturer
Molykote 321 R (lubricant paint)	Spray	DOW Corning
Molykote spray (powder spray)		
Molykote G Rapid	Spray or paste	
Molykombin UMFT 1	Spray	Klüber Lubrication
Unimily P5	Powder	
Aemasol MO 19 P	Spray or paste	A. C. Matthes

## 12.3.16 SIMOLOC assembly system

### 12.3.16.1 General notes for the SIMOLOC assembly system

 <b>WARNING</b>
<b>Risk of injury due to freely rotating parts</b>
Fit a cover cap or protection cover.

<b>NOTICE</b>
<b>Damaged components impair the correct function of the gearbox</b>
If any components are damaged, the correct function of the gearbox will no longer be ensured. Do not install any damaged gearbox components.

<b>NOTICE</b>
<b>Lubricant on the machine shaft ① impairs the torque transmission</b>
Keep the bore in the tapered bushing ⑨ and the machine shaft ① completely grease-free. Do not use impure solvents and soiled cleaning cloths.

<b>NOTICE</b>
<b>Avoid overloading the individual bolts</b>
Do not exceed the maximum tightening torque for the tightening bolts ④ und ⑩.

### 12.3 Specific data gearbox

---

---

**Note**

The SIMOLOC assembly system secures the hollow shaft axially on the machine shaft.

---

**Note**

In the hollow shaft ⑥, oil the locating hole for the tapered bushing ⑨ and bronze bushing ② lightly with the provided oil.

Oil type of the provided oil: CLP VG 68 DIN 51517-3

---

**Note**

The thrust collar ⑤ must be placed at the correct position as in the delivered state.

---

**Note**

Before installing the SIMOLOC, mount the torque arms ⑦ on the gearbox.

---

### 12.3.16.2 Installing SIMOLOC

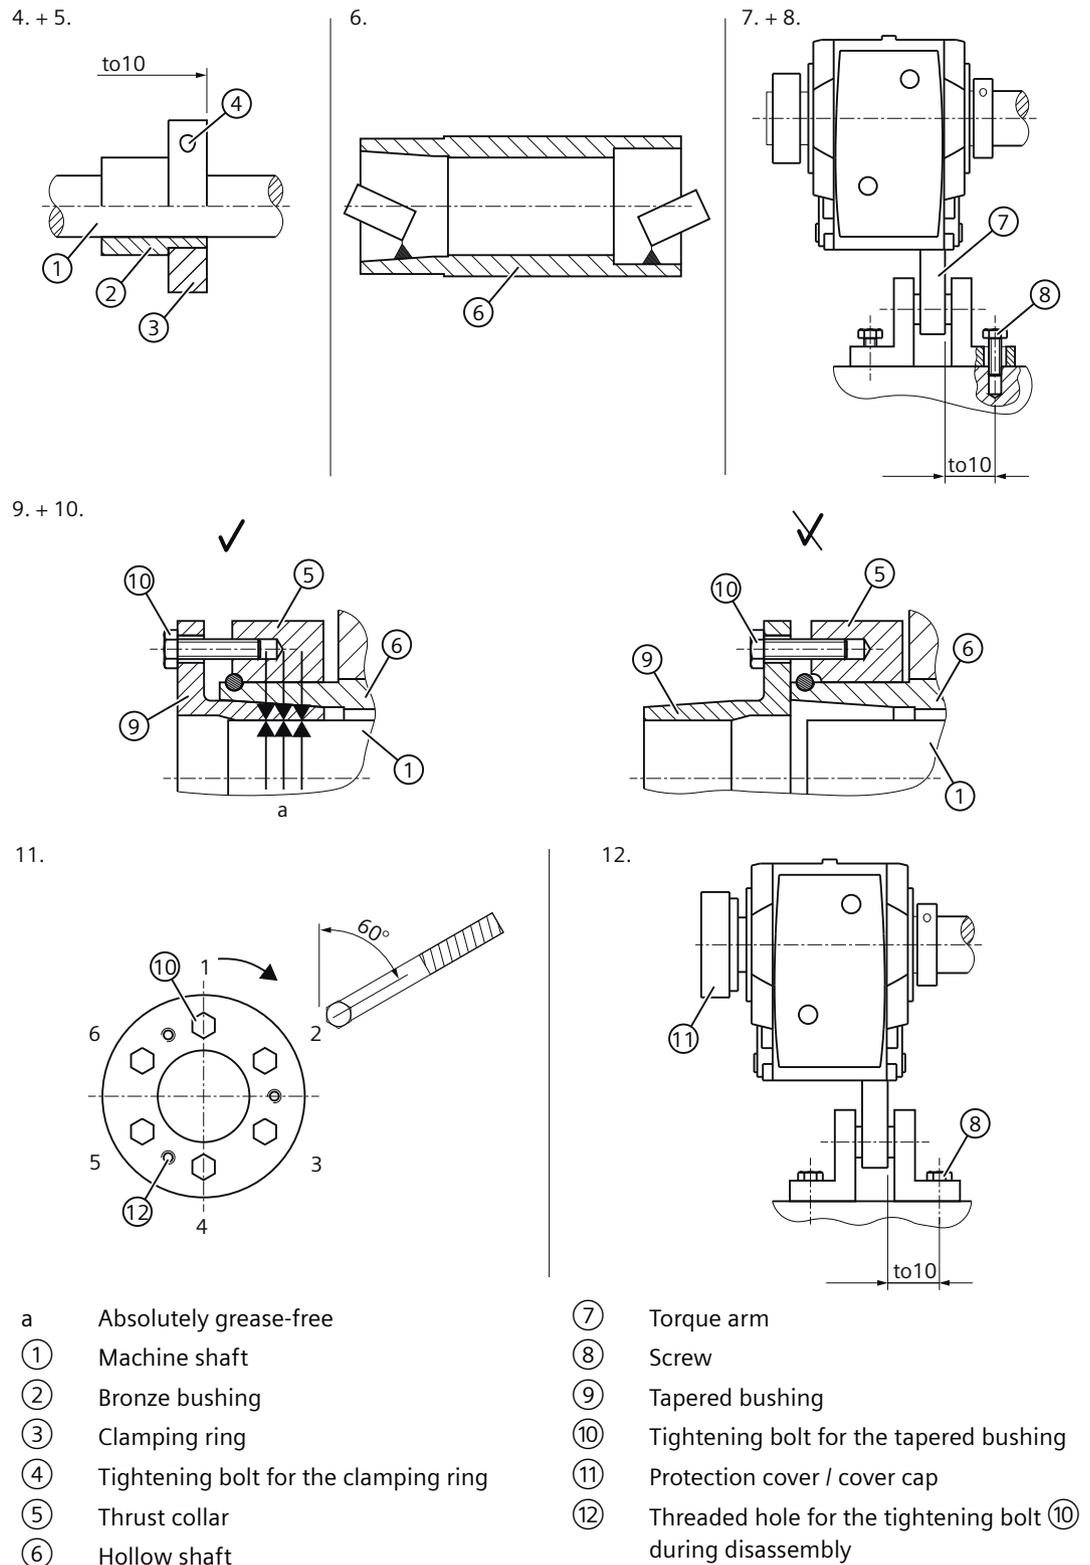


Figure 12-24 Installing SIMOLOC

## Procedure

1. Attach the torque arm (7) to the gearbox, as shown in Torque arms with slip-on gearboxes (Page 527).
2. Remove the corrosion protection coating using white spirit or a solvent on:
  - The shaft ends of the machine shaft (1)
  - The clamping ring (3)
  - The bronze bushing (2).
3. Check the seats or edges of the hollow shaft (6) and the machine shaft (1) for damage. Contact Technical Support if you notice any damage.
4. Place the clamping ring (3) on the bronze bushing (2).
5. Position the bronze bushing (2) with the clamping ring (3) on the machine shaft (1). Observe the tightening torque of the tightening bolt (4) and the tolerance dimension to10.
6. Oil lightly the locating holes in the hollow shaft (6) for the tapered bushing (9) and bronze bushing (2). Remove any excessive oil using a clean cloth.
7. Push the gearbox with the installed torque arm (7) on the machine shaft (1) against the clamping ring (3).
8. Tighten the torque arm (7) with the bolts (8) only gently because the gearbox must have clearance for the subsequent mounting.
9. Ensure that the thrust collar (5) is placed at the correct position.  
If the thrust collar (5) is not placed at the correct position, bring the ring (5) into the correct position by tightening the tightening bolts (10) with turned tapered bushing (9).
10. Place the tapered bushing (9) on the machine shaft (1).
11. Use the torque wrench to turn each of the tightening bolts (10) equally (not crosswise), repeating this procedure several times. Observe the tightening torque of the tightening bolt (10).
12. Tighten the bolts (8) of the torque-arm fastening, as shown in Torque arms with slip-on gearboxes (Page 527).
13. Attach the rubber cover or protection cover (11) included in the scope of delivery, as shown in Removing and installing the protection cover (Page 512).

You have installed the SIMOLOC assembly system.

Table 12-37 Tolerance dimension, tightening bolt (4) tightening torque

Gearbox type	Size	Tolerance dimension to10	Thread size (4)	Tightening torque
		mm	Strength class 10.9	Nm
F, B, C	29	0.6 ... 2.1	M6	15
F, B, K, C	39	0.7 ... 2.2		
F, B, K, C	49	0.8 ... 2.6		
F, K, C	69	0.7 ... 2.5	M8	35
F, K	79	1.4 ... 3.2		
F, K, C	89	1.5 ... 3.4		

Table 12-38 Tightening bolt ⑩ tightening torque

Gearbox type	Size	Thread size ⑩	Tightening torque
		Strength class 12.9	Nm
F, B, C	29	M5	10
F, B, K, C	39		
F, B, K, C	49	M6	16
F, K, C	69		
F, K	79	M8	38
F, K, C	89		


### 12.3.16.3 Removing SIMOLOC

#### Procedure

1. Remove all bolts ⑩ completely.
2. Screw the bolts ⑩ into the threaded holes ⑫.
3. Use the torque wrench to turn each of the bolts ⑩ equally (not crosswise), repeating this procedure several times. Observe the tightening torque of the bolt ⑩. Repeat the task until the tapered bushing ⑨ has been freed.
4. Unscrew the bolts ⑩ and remove the tapered bushing ⑨.
5. Lower the gearbox from the machine shaft ①.

You have removed the SIMOLOC assembly system.

### 12.3.17 Hollow shaft with splines

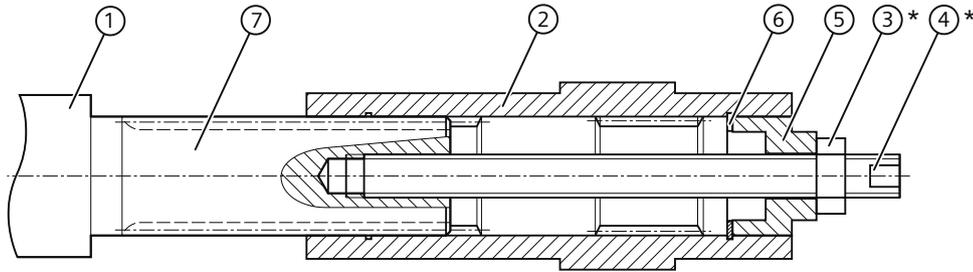

\* Not included in scope of supply

- ① Machine shaft
- ② Hollow shaft
- ③ Hexagon nut
- ④ Threaded spindle
- ⑤ Disk
- ⑥ Locking ring
- ⑦ Mounting paste

Figure 12-25 Mounting the hollow shaft with splines

Instead of the nut and threaded spindle shown in the diagram, other types of equipment such as hydraulic lifting equipment may be used.

#### Procedure

1. Using benzine or a solvent, remove the anti-corrosion protection from the shaft ends and flanges.
2. Check the seats or edges of the hollow and machine shafts for any damage. Contact Technical Support if you notice any damage.
3. Apply the mounting paste ⑦ to the machine shaft ①. Apply the paste uniformly.
4. Fit the gearbox using the disk ⑤, threaded spindle ④ and nut ③. Support is provided by the hollow shaft ②.
5. Replace the nut ③ and the threaded spindle ④ with a screw. Tighten the bolts to the specified torque.

You have mounted the hollow shaft with splined shaft.

Table 12-39 Tightening torque for the screw

Thread size	M5	M6	M8	M10	M12	M16	M20	M24	M30
Tightening torque in Nm	5	8	8	14	24	60	120	200	400

## 12.3.18 Torque arms with slip-on gearboxes

### 12.3.18.1 General information regarding torque arms

Torque arms can absorb the reaction torque and the weight of the gearbox.

#### NOTICE

##### Dangerous transient torques due to excess backlash

Take care to prevent the torque arm from causing excessive constraining forces, e.g. due to the driven shaft running out-of-true.

#### NOTICE

##### Impermissible gearbox loading caused by incorrect mounting

Do not tension torque arms when mounting.

#### NOTICE

##### Damage to the rubber elements caused by solvent

Solvents, oils, greases, and fuels damage rubber elements.

Avoid contact at all times.

### 12.3.18.2 Mounting torque arms on parallel shaft gearboxes

We recommend using pretensioned, damping rubber elements.

Fixing accessories such as brackets, bolts, nuts, etc. are not included in the scope of supply.

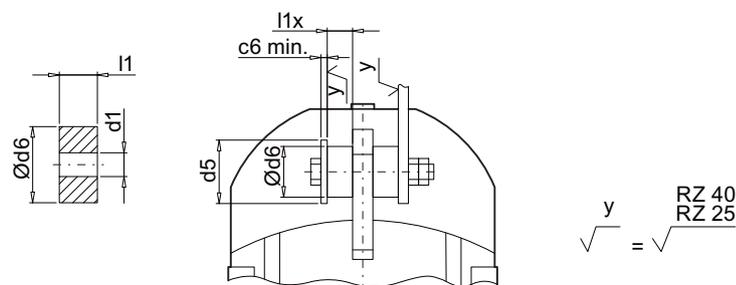


Figure 12-26 Suggestion for mounting torque arms on F.29 - F.89

Size	Rubber buffer				Washer	
	Untensioned	Tensioned				
	l1	l1x	d6	d1	d5	c6 <sub>min</sub>
	mm	mm	mm	mm	mm	mm
29	15	14.0	30	10.5	40	4
39		13.5				

12.3 Specific data gearbox

Size	Rubber buffer				Washer	
	Untensioned	Tensioned				
	l1	l1x	d6	d1	d5	c6 <sub>min</sub>
	mm	mm	mm	mm	mm	mm
49	20	18.5	40	12.5	45	6
69		18.5			50	
79		17.5				
89	30	28	60	21	75	8

**Procedure**

1. Use the washers according to the table above.
  2. Use two nuts to secure the screw connection (lock nuts).
  3. Tighten the screws until the rubber buffers are pretensioned to the dimension l1x.
- You have now mounted the torque arm.

**12.3.18.3 Mounting torque arms on bevel gearboxes and helical worm gearboxes**

**NOTICE**

**Impermissible loading caused by incorrect mounting**

The torque arm bush must be supported by bearings on both sides.

After assembly, the sleeve must have some axial play.

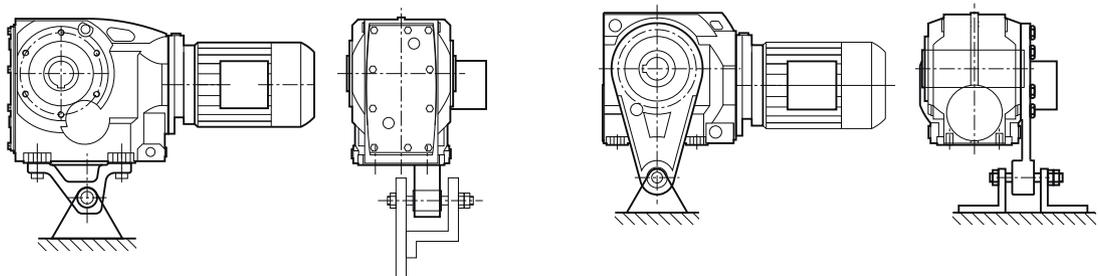


Figure 12-27 Mounting suggestion for torque arm on foot and flange

The torque arm can be fitted in various positions, depending on the hole circle pitch.

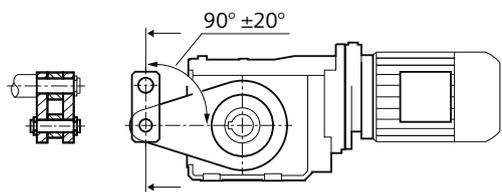


Figure 12-28 Toggle lever design

For a toggle lever design, derive the force in the range of  $90^\circ \pm 20^\circ$ .

## Procedure

1. Clean the contact surfaces between the housing and the torque arm.
2. Tighten the bolts to the specified torque.

You have now mounted the torque arm.

Table 12-40 Tightening torque for screws of strength class 8.8

Thread size	M8	M10	M12	M16	M20	M24	M36
Tightening torque in Nm	25	50	90	210	450	750	2 600

### 12.3.19 General information about commissioning

 <b>WARNING</b>
<b>Unintentional starting of the drive unit</b>
Secure the drive unit to prevent it from being started up unintentionally.
Attach a warning notice to the start switch.

 <b>WARNING</b>
<b>Risk of slipping on oil</b>
Remove any oil spillage immediately with an oil-binding agent in compliance with environmental requirements.

#### Checking the pressure breather valve

Check that the breather valve is activated.

If the breather valve has a transport fixture, it must be removed before commissioning.

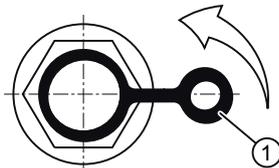


Figure 12-29 Pressure breather valve with securing clip

Remove the transport fixture by pulling the securing clip ① in the direction of the arrow.

### 12.3.20 Checking the oil level prior to commissioning

Check the oil level before commissioning. If necessary, correct the oil level.

Siemens recommends a complete oil change after a storage time longer than 24 months:

- For gearboxes with long-term preservation.
- For gearboxes supplied completely filled with oil.

Follow Checking and changing lubricants (Page 536).

#### **Gearbox in special mounting position**

The gearbox is intended for a specific rotation angle and is delivered with the correct quantity of oil for this purpose.

It is not possible to check the oil level. You will find information regarding oil quantity and type of oil on the rating plate.

### 12.3.21 Mounting the oil expansion tank

An oil expansion unit can be used depending on the power, input speed, mounting position and transmission ratio. The oil expansion unit is used to equalize changes in the oil volume caused by temperature fluctuations in operation.

Before commissioning the gearbox, replace the screw plug with the oil expansion unit.

#### **Oil expansion unit size 39 - 89**

The unit is supplied as a mounting kit, and can be attached to the geared motor vertically or at an angle.

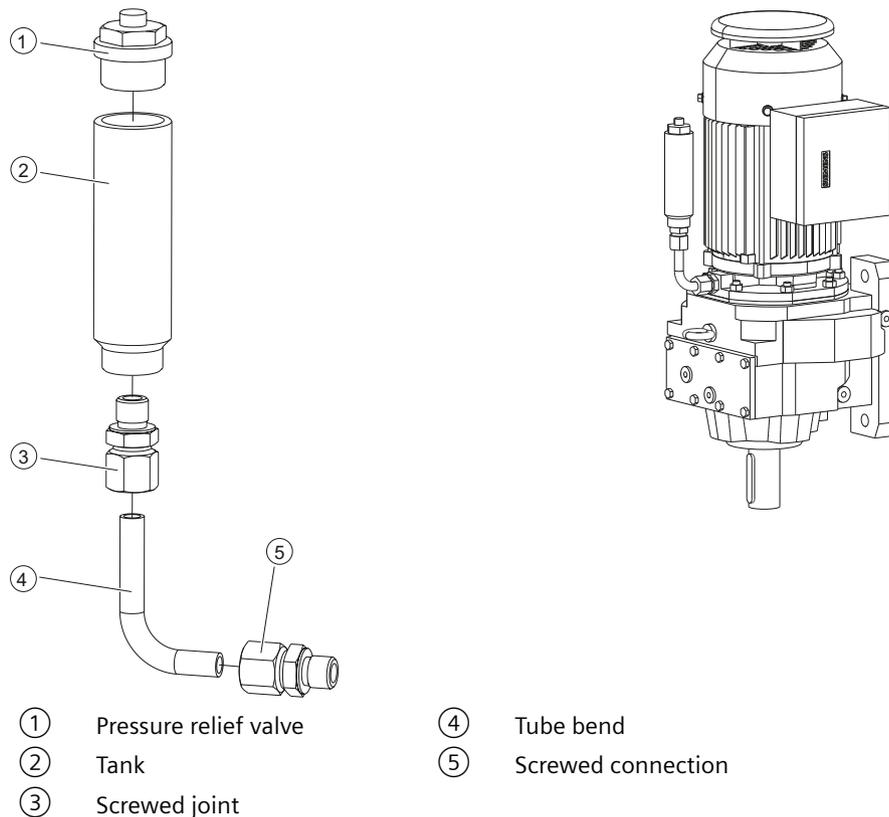


Figure 12-30 Mounting an oil expansion unit size 39 - 89

**Procedure**

1. Assemble the mounting kit ① - ⑤.
2. Screw on the tank with the screwed connection ⑤ at the uppermost hole of the gearbox housing or of the motor bearing shield.
3. Align the oil expansion unit so that it is vertical.

**Oil expansion unit size 109****NOTICE****Leaky hose**

The hose of the oil expansion unit is subject to a natural aging process.

Check the hose for tears or leaks.

Never commission a leaky hose. Replace the hose.

The hose of the oil expansion unit is not suitable for ambient temperatures below -25 °C.

If the ambient temperatures differ, contact Technical Support.

The unit is supplied as a mounting kit.

### 12.3 Specific data gearbox

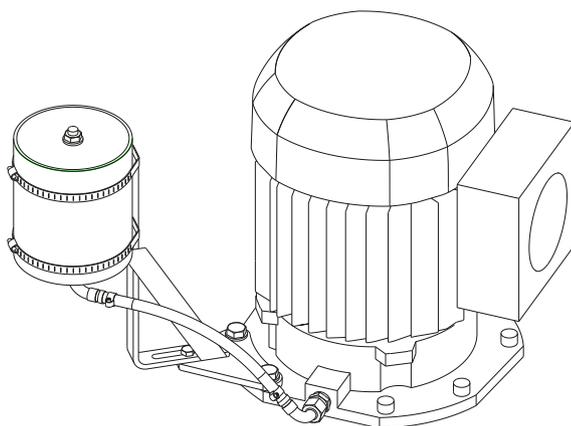


Figure 12-31 Example of an oil expansion unit size 109

#### 12.3.22 Faults, causes and remedies

---

##### **Note**

Faults and malfunctions that occur during the warranty period and requiring repair work on the gearbox must be remedied only by Technical Support. If faults occur without a clearly identifiable cause after the warranty period has elapsed, Siemens AG recommends the services provided by Technical Support.

If you need the help from the Technical Support, please have the following information ready:

- Rating plate data
  - Nature and extent of the fault
  - Suspected cause
-

Table 12-41 Faults, causes and remedies

Faults	Causes	Remedy
Unusual noise on the gearbox.	Oil level too low.	Check the oil level (Page 536).
	Foreign bodies in the oil (irregular noise).	Checking the oil quality (Page 539). Cleaning the geared motor (Page 459). General safety instructions (Page 536).
	Excessive bearing play and / or bearing defective.	Check the bearing and replace if necessary.
	Defective gearing.	Check the gearing and replace if necessary.
	Fastening bolts loose.	Checking the tightness of fastening bolts (Page 548).
	Excessive external load on the drive input and output.	Check the load against rated data (you might need to correct the belt tension, for example).
	Transport damage.	Check the gearbox for damage in transit.
	Damage due to blockage during commissioning.	Call Technical Support.
Unusual noise from the drive unit.	Drive unit bearing not lubricated (motor size 160 and higher).	Regrease the bearing (Page 543).
	Excessive bearing play and / or bearing defective.	Check the bearing and replace if necessary.
	Fastening bolts loose.	Checking the tightness of fastening bolts (Page 548).
Unusual motor noise.	Excessive bearing play and / or bearing defective.	Check the bearing and replace if necessary.
	Motor brake is rubbing.	Check air gap and adjust if necessary.
	Converter parameterization.	Correct the parameterization.
Oil escapes.	Incorrect oil level for the mounting position being used.	Check the mounting position (Page 549) and the oil level (Page 536).
	Gearbox leaks.	Checking the gearbox for leaks (Page 547).
	Overpressure due to lack of venting.	Mount the venting as appropriate for the mounting position (Page 549).
	Overpressure due to soiled venting.	Clean the venting (Page 547).
	Shaft sealing rings defective.	Replace the shaft sealing rings.
	Cover / flange bolts loose.	Checking the tightness of fastening bolts (Page 548). Continue to monitor the gearbox.
	Surface sealing defective (e.g. on cover, flange).	Reseal.
	Damage in transit (e.g. hairline cracks).	Check the gearbox for damage in transit.
Oil leak at the gearbox vent	Incorrect oil level for the mounting position used and / or incorrect venting position.	Check the venting position, mounting position (Page 549) and the oil level (Page 536).
	Frequent cold starts during which the oil foams up.	Call Technical Support.

12.3 Specific data gearbox

Faults	Causes	Remedy
Gearbox overheats.	Motor fan cover and / or gearbox very dirty.	Clean the fan cover and surface of the geared motor (Page 459).
	Incorrect oil level for the mounting position being used.	Check the mounting position (Page 549) and the oil level (Page 536).
	Incorrect oil being used (e.g. incorrect viscosity).	Checking the oil quality (Page 539).
	Oil is too old.	Check the date of last oil change. If required, change the oil (Page 536).
	Excessive bearing play and / or bearing defective.	Check the bearing and replace if necessary.
	Coolant temperature outside the permissible range.	Adjust the cooling air to the appropriate temperature.
Output shaft does not turn when the motor is running.	Force flow interrupted by breakage in gearbox.	Call Technical Support.
Geared motor only starts with difficulty or not at all.	Incorrect oil level for the mounting position being used.	Check the mounting position (Page 549) and the oil level (Page 536).
	Incorrect oil being used (e.g. incorrect viscosity).	Checking the oil quality (Page 539).
	Excessive external load on the drive input and output.	Check the load against rated data (you might need to correct the belt tension, for example).
	Motor brake is not released.	Check the circuitry/connection of the brake. Check brake for wear and readjust if necessary.
Excessive play at drive input and output.	Flexible elements worn (e.g. on couplings).	Replace flexible elements.
	Positive connection disrupted by overload.	Call Technical Support.
Speed and torque drop.	Belt tension too low (for belt drive).	Check the belt tension and replace belt if necessary.

12.3.23 General notes about maintenance work

 <b>WARNING</b>
<p><b>Unintentional starting of the drive unit</b></p> <p>Secure the drive unit to prevent it from being started up unintentionally.</p> <p>Attach a warning notice to the start switch.</p>

<b>NOTICE</b>
<b>Improper maintenance</b>
Only authorized qualified personnel may perform the maintenance and servicing. Only original parts supplied by Siemens may be installed.

Only qualified personnel may perform the inspection, maintenance and service work. Carefully follow the General information gearbox (Page 501).

Table 12-42 Maintenance measures

Remedy	Interval	Description of work
Monitor and check the geared motor for unusual noise, vibrations, and changes.	Daily; if possible, more frequently during operation.	Operation (Page 459)
Check the housing temperature.	After 3 hours, on the first day, thereafter monthly.	
Check the oil level.	After the first day, and then every 3000 operating hours, or at the latest after 6 months.	Checking and changing lubricants (Page 536)
Check the oil level sensor	Regularly and after oil changes.	Checking the oil level sensor (optional) (Page 547)
Check the oil quality.	Every 6 months.	Checking the oil quality (Page 539)
First oil change after commissioning.	After approximately 10000 operating hours or at the latest after 2 years.	Checking and changing lubricants (Page 536)
Subsequent oil changes.	Every 2 years or 10000 operating hours <sup>1)</sup> .	
Visual inspection of the gearbox and shaft sealing ring for leaks.	After the first day, thereafter monthly.	Checking the gearbox for leaks (Page 547)
When required, replace the breather valve.	Once a year.	Replacing the vent valve (Page 547)
Clean the gearbox.	Depending on degree of soiling, at least every 6 months.	Cleaning the geared motor (Page 459)
Carry out a complete inspection of the geared motor.	Every 12 months.	Inspecting the geared motor (Page 460)
Check the friction clutch and adjust if necessary.	After 500 hours, thereafter once a year and after every blockage.	Follow the BA 2039 Operating Instructions.
Check the coupling.	For the first time after 3 months.	Follow the separate operating instructions.
Check that fastening bolts on gearboxes and add-on elements are securely tightened. Check that covers and plugs are securely fastened.	After 3 hours, and then every 2 years.	Checking the tightness of fastening bolts (Page 548)
Change the roller bearing grease.	When the oil is changed.	Change the roller bearing grease (Page 543)
Replace the bearing.	-	Replace bearings (Page 546)

12.3 Specific data gearbox

Remedy	Interval	Description of work
Check the rubber buffer of the torque arms.	Every 6 months.	Torque arms with slip-on gearboxes (Page 527)
Check the hose of the oil expansion tank.	Check regularly; renew every 4 years at the latest.	Replacing the hose of the oil expansion unit (Page 548)

1) When using synthetic oils, the intervals can be doubled. The data specified is valid for an oil temperature of +80 °C. See the figure titled "Guide values for oil change intervals" for the intervals for other temperatures.

## 12.3.24 Checking and changing lubricants

### 12.3.24.1 General safety instructions

 <b>WARNING</b>
<b>Danger of scalding from escaping hot oil</b>
Before starting any work wait until the oil has cooled down to below +30 °C.

 <b>WARNING</b>
<b>Risk of slipping on oil</b>
Remove any oil spillage immediately with an oil-binding agent in compliance with environmental requirements.

<b>NOTICE</b>
<b>Damage to the gearbox caused by incorrect oil quantities</b>
The oil quantity and the position of the sealing elements are determined by the mounting position.
After removing the oil level screw, the oil level may not be below the specified fill level.

<b>NOTICE</b>
<b>Damage to the gearbox due to open oil holes</b>
Dirt and damaging atmosphere can penetrate through open oil holes.
Close the gearbox immediately after checking the oil level or changing the oil.

**Note**

**Oil specifications**

Refer to the rating plate for the type of oil, oil viscosity and quantity of oil required.  
For oil compatibility, see Recommended lubricants (Page 545).

**Note**

**Gearbox sizes 19 and 29**

Gearbox sizes 19 and 29 are lubricated for life. There is no opening to check the oil level. An oil change is not required.

In mounting positions M2 and M4 the gearboxes are equipped with a breather valve.

C29 has a breather valve in all mounting positions.


**12.3.24.2 Checking the oil level**

**NOTICE**

**The gearbox oil volume changes depending on the temperature**

If the temperature rises, the volume increases. Where temperature differences and filling quantities are significant, the volume difference can amount to several liters.

The oil level must therefore be checked while still slightly warm, approximately 30 minutes after switching off the drive unit.

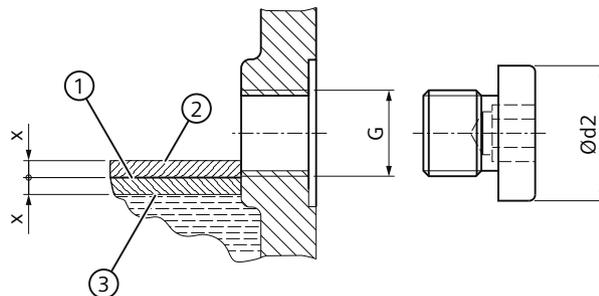

- ① Specified oil level
- ② Maximum oil level
- ③ Minimum oil level

Figure 12-32 Oil level in the gearbox housing

Table 12-43 Minimum and maximum fill levels x

Oil level hole	Ød2	Fill level x	Tightening torque
	mm		
G 1/8"	14	2.5	10
G 1/4"	18	3	10
G 3/8"	22	4	25
G 3/4"	32	7	50

## Procedure

1. Switch off the power supply to the drive unit.
2. Unscrew the oil level screw, see Mounting positions (Page 549). Oil escapes if the maximum fill level is above the plug hole.
3. Check the oil level. Observe the fill level x.
4. Top up the oil level if necessary and check it again.
5. Check the state of the sealing ring on the sealing element. If the sealing ring is damaged, replace the sealing element with a new one.
6. After checking, seal the gearbox immediately using the sealing element.

You have now checked the oil level in the gearbox housing.

### 12.3.24.3 Checking the oil level using the oil sight glass (optional)

If there is an oil sight glass to check the oil level ①, the oil must be visible in the center of the sight glass when the oil is cool. When the oil is hot, the oil level ① is above the center of the sight glass. The oil level ① of cold oil is below the center of the sight glass.

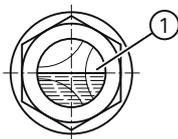


Figure 12-33 Oil level in the oil sight glass

Top up the oil level ① if necessary, and check it again.

### 12.3.24.4 Checking the oil level using the oil dipstick (optional)

In the M4 mounting position for ZF/EF helical gearboxes, the oil level can be checked with an oil dipstick.

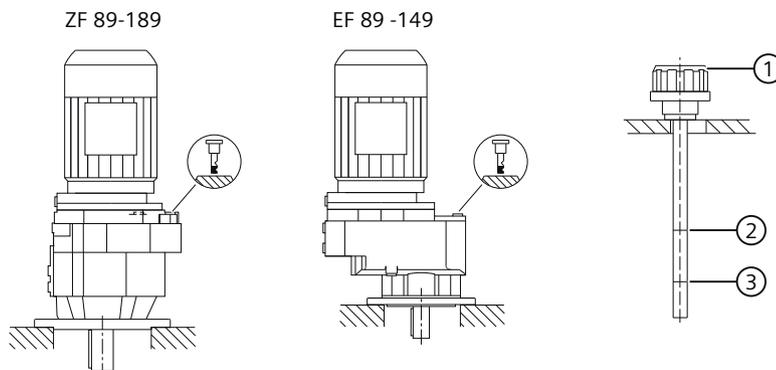


Figure 12-34 Checking the oil level using the oil dipstick

To check the oil level, push the oil dipstick ① into the hole but do not screw it in.

The oil level must be between the lower ② and upper ③ marks on the oil dipstick ①.

After checking, screw the oil dipstick ① in again hand-tight. The oil dipstick ① can remain screwed in during operation.

Correct the oil level and check it again.

### 12.3.24.5 Checking the oil quality

Visible signs show effects on the oil. Fresh oil is clear to the eye, and has a typical smell and a specific product color. Clouding or a flocculent appearance indicates water and / or contamination. A dark or black color indicates residue, serious thermal decomposition or contamination.

Follow the symbols in the diagrams of the Mounting positions (Page 549).



Venting



Oil level

### Procedure

1. Allow the geared motor to run for a short time. Wear and contaminant particles are visible in the oil shortly after shutting down.
2. Switch off the power supply to the drive unit.
3. Unscrew the sealing element at one of the points marked with the symbols listed above.
4. Remove some oil, using a suction pump and a flexible hose, for example.
5. Check the state of the sealing ring on the sealing element. If required, replace the sealing ring.
6. Seal the gearbox with the sealing element.
7. Check the oil for abnormalities. Change the oil immediately if you determine any abnormalities, as described in General safety notes for changing the oil (Page 540).

You have now checked the oil quality.

### 12.3.24.6 General safety notes for changing the oil

<b>NOTICE</b>
<b>Impermissible mixing of oils leads to damage</b> Impermissible mixing of oils leads to: <ul style="list-style-type: none"><li>• Darkening</li><li>• Sediment</li><li>• Foam formation</li><li>• Change of the viscosity or reduced corrosion protection</li><li>• Wear protection.</li></ul> When changing oil of the same type, the residual volume of oil in the gearbox should be kept as low as possible. Generally speaking, a small residual volume will cause no particular problems. Gear oils of different types and by different manufacturers must not be mixed. Have the manufacturer confirm that the new oil is compatible with the remaining volume of used oil. If very different types of oil or oils with very different additives are changed, always flush out the gearbox with the new oil. When changing from mineral oil to polyglycol oil (PG) or vice versa, it is vital to flush the gearbox twice. All traces of old oil must be completely removed from the gearbox.

<b>NOTICE</b>
<b>Contaminations of the oil impair the lubricity</b> Do not mix the gearbox oil with other substances. Do not flush with paraffin or other solvents, as traces of these substances will always remain inside the gearbox.

#### Note

The oil must be warm because insufficient viscosity caused by oil that is too cold impairs correct emptying.

If necessary, run the gearbox for 15 to 30 minutes to become warm.

### 12.3.24.7 Draining the oil

Observe the symbols in the diagrams of the Mounting positions (Page 549):



Venting



Oil level



Oil drain

## Procedure

1. Switch off the power supply to the drive unit.
2. Unscrew the vent plug.
3. Place a suitable and sufficiently large receptacle underneath the oil drain plug.
4. Remove the oil drain plug. Drain all the oil into the receptacle.
5. Check the state of the sealing ring on the sealing element. If the sealing ring is damaged, replace the sealing element with a new one.
6. After draining the oil, seal the gearbox immediately using the sealing element.

You have now drained the oil from the gearbox.

### 12.3.24.8 Flushing the gearbox when changing between incompatible oils

 <b>WARNING</b>
<p><b>Impermissible mixing of oils leads to damage</b></p> <p>Residual quantities of original oil can impair the specific properties of the new oil.</p> <p>A flushing process is required with biodegradable and physiologically safe oils.</p> <p>The residual corrosion protection oil must amount to no more than 1% of the operating oil volume.</p>

#### Note

Polyglycol oil has a higher density than mineral oil. Therefore, it sinks down towards the oil drain and the mineral oil floats on top.

This makes the required complete draining of mineral oil from the gearbox extremely difficult.

#### Note

After the second flush, we recommend that an appropriate analysis institute checks the quality of the flushed fluid.

Observe the symbols in the diagrams of the Mounting positions (Page 549):



Venting



Oil drain

## Procedure

1. After the oil has been drained, wipe the gearbox clean of any remaining mineral oil using a cloth.
2. Unscrew the vent plug.

### 12.3 Specific data gearbox

3. Fill the gearbox with a flushing oil, using a filter (filter mesh max. 25 µm). For the flushing oil, use either the new oil or one that is compatible with the new oil and is less expensive.
4. Operate the gearbox for 15 to 30 minutes under a low load.
5. Place a suitable and sufficiently large receptacle underneath the oil drain plug.
6. Remove the oil drain plug. Drain all the oil into the receptacle.
7. After flushing, immediately seal the gearbox using the sealing element.
8. Repeat this step for the second flushing.

You have now flushed the gearbox twice and can pour in the new oil.

#### 12.3.24.9 Filling in oil

##### NOTICE

##### Mixing of different oils impairs the lubricity

When adding oil, use the same oil type and viscosity. If changing mutually incompatible oils, see Flushing the gearbox (Page 541).

Observe the symbols in the diagrams of the Mounting positions (Page 549):



Venting

#### Procedure

1. Unscrew the vent plug.
2. Fill the gearbox with fresh oil. Use a filler filter with mesh of max. 25 µm.
3. Check the oil level.
4. Correct the oil level if necessary and check it again.
5. Check the state of the sealing ring on the sealing element. If the sealing ring is damaged, replace the sealing element with a new one.
6. After filling with oil, seal the gearbox immediately using the sealing element.

You have now filled up the gearbox with oil.

#### 12.3.24.10 Topping up with oil

If the mounting position of the gearbox is changed or oil lost because of leakage, check the oil level. If you notice oil escaping, locate the leak, and seal the affected area. Top up and check the oil level.

At the time of going to print, the following types of oil are being used when the gearbox is filled for the first time:

CLP ISO VG220: Fuchs Renolin CLP220  
 CLP ISO PG VG220: Fuchs Renolin PG220  
 CLP ISO PG VG460: Fuchs Renolin PG460  
 CLP ISO PAO VG68: Fuchs Renolin Unisyn XT68  
 CLP ISO PAO VG220: Fuchs Renolin Unisyn XT220  
 CLP ISO PAO VG460: Fuchs Renolin Unisyn CLP460  
 CLP ISO E VG220: Fuchs Plantogear S220  
 CLP ISO H1 VG100: Klüber Klübersynth UH1 6 100  
 CLP ISO H1 VG460: Castrol Optileb GT 1800/460

If, following agreement, the gearbox is filled at the factory with special lubricant for the special applications referred to above, the lubricant must be shown on the rating plate.

### 12.3.24.11 Change the roller bearing grease

The roller bearings are lubricated in the factory with the greases listed in the table.

Renew the grease quantify for grease-lubricated bearings with each oil change.

Clean the bearing before filling the bearing with fresh lubricant.

In the case of bearings on the output shaft or intermediate shafts, the grease quantity must fill 2/3, and in the case of bearings on the input side, 1/3 of the space between the rolling elements.

Table 12-44 Roller-bearing and shaft-sealing-ring grease

Fields of application	Ambient temperature	Manufacturer	Type
Standard	-40 °C to +80 °C	Klüber Fuchs	Petamo GHY 133 N Renolit CX-Tom 15 <sup>1)</sup>
Foodstuff-compatible for the food industry	-30 °C to +60 °C	Bremer & Leguil	Cassida Grease GTS 2
Biologically degradable, for agriculture, forestry and water industries	-35 °C to +60 °C	Fuchs	Plantogel 2 S

<sup>1)</sup> Rolling-bearing grease based on a semi-synthetic base oil.

### 12.3.24.12 Service life of the lubricants

#### Note

In case of ambient conditions deviating from normal conditions, e.g. high ambient temperatures, high relative humidity, aggressive ambient media, the intervals between changes should be shorter. In such cases, contact Technical Support for assistance in determining the individual lubricant change interval.


**Note**

Oil sump temperatures above +80 °C can reduce service life. A temperature increase by 10 K halves the service life by the amount as shown in the figure titled "Guide values for oil change intervals".

For a +80 °C oil sump temperature, the following service life can be expected when observing the properties specified by Siemens:

Table 12-45 Service life of the oils

Type of oil	Service life
Mineral oil	10 000 operating hours or 2 years
Biodegradable oil	
Physiologically safe oil according to USDA-H1/-H2	
Synthetic oil	20 000 operating hours or 4 years

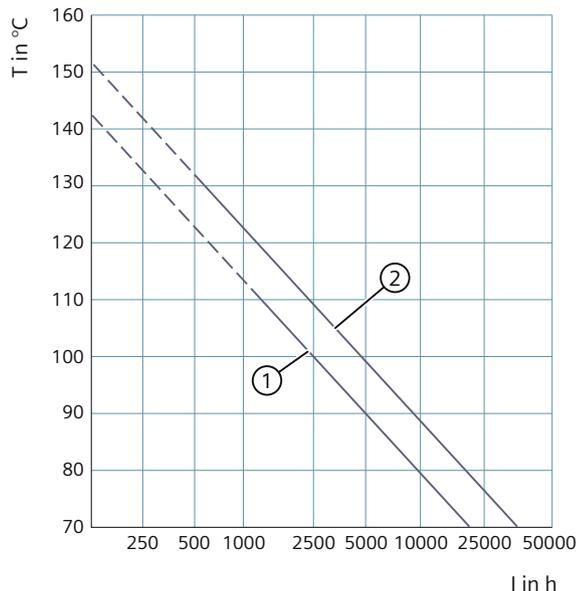

① Mineral oil

② Synthetic oil

T Oil bath steady-state temperature in °C

I Oil change interval in operating hours in h

Figure 12-35 Guide values for oil change intervals

**Grease service life of roller bearing greases**

Roller bearings and the clearance in front are filled with sufficient grease.

Under approved operating conditions and ambient temperatures, no regreasing is required.

We recommend that the grease in the bearings is also renewed when the oil or shaft sealing rings are replaced.

### 12.3.24.13 Recommended lubricants

The released and recommended lubricants are listed in the table NT 7300 (<https://support.industry.siemens.com/cs/ww/en/view/109753864>).

 <b>DANGER</b>
<b>Commonly used lubricants only have conditional approval</b>
Commonly used lubricants are not or only conditionally approved for use in the foodstuff or pharmaceutical industry.
Use only lubricants with USDA (United States Department of Agriculture) H1/H2 approval for deployment in the foodstuff or pharmaceutical industry.

<b>NOTICE</b>
<b>Incorrect operating temperatures impair the lubricity of the gearbox oil</b>
Operating temperatures outside the permitted range impair the lubrication capabilities of the gearbox oil.
Be sure to observe the permissible oil sump temperatures listed in the lubricant table.
The oil used must be approved for use in the ambient temperature range given on the rating plate.
When changing the oil, please observe the operating temperature range of the new oil as specified by the oil manufacturer.

#### Note

As standard, the lubricants and shaft seals are matched with each other corresponding to the prevailing operating conditions.

Contact Technical Support for:

- Change in the operating conditions
- Change in oil grade
- Deployment of new shaft seals.

#### Note

Commonly used lubricants are not at all or only conditionally biodegradable. If biologically degradable lubricants are required, use only gearbox lubricants with the appropriate classification listed in the NT 7300 table.

#### Note

These recommendations are not a guarantee of the lubricant quality provided by your supplier. All lubricant manufacturers are responsible for the quality of their own products.

The oil viscosity (ISO VG class) is decisive for selecting the right oil. The viscosity is specified on the rating plate of the gearbox. The viscosity class indicated applies for the contractually agreed operating conditions.

In the case of different operating conditions, contact Technical Support.

12.3 Specific data gearbox

If, following agreement, the gearbox is filled at the factory with special lubricant for the applications listed above, the lubricant is shown on the rating plate.

The oil quality must meet the gearbox lubricant requirements specified in the NT 7300 table. The Siemens warranty is otherwise null and void. We recommend the use of one of these gearbox lubricants. These gearbox oils are subject to constant testing and meet the specified requirements. It is possible that the recommended oils are deleted or replaced by oils that have been further developed at a later point in time. We recommend that you regularly check as to whether the selected lubricating oil is still recommended by Siemens. Otherwise change the product.

Table 12-46 Lubricant table

Operating range	Oil grade designation according to DIN 51502	Permissible oil sump temperature range during operation °C	Ambient temperature °C		
			-15 ... +40°	-30 ... +40°	-20 ...+55
Helical gearbox E / Z / D, parallel shaft gearbox F and bevel gearbox K			-15 ... +40°	-30 ... +40°	-20 ...+55
Standard	CLP ISO VG220	-15 ... +80°	✓	-	-
	CLP ISO PAO VG220	-30 ... +100°	✓	✓	✓
	CLP ISO PAO VG68	-40 ... +60°	-	✓	-
	CLP ISO PG VG460	-25 ... +110°	✓	-	✓
	CLP ISO PG VG220	-25 ... +110°	✓	-	✓
Food sector (USDA) NSF-H1	CLP ISO H1 VG460	-25 ... +100°	✓	-	✓
	CLP ISO H1 VG100	-30 ... +90°	✓	✓	✓
Biodegradable oil	CLP ISO E VG220	-20 ... +100°	✓	-	✓
Helical worm gearbox C, bevel gearbox B			-20 ... +40°	-30 ... +40°	-20 ...+55
Standard	CLP ISO PG VG220	-25 ... +110°	✓	-	✓
	CLP ISO PAO VG460	-25 ... +110°	✓	-	✓
	CLP ISO PAO VG220	-30 ... +100°	✓	✓	✓
	CLP ISO PAO VG68	-40 ... +60°	-	✓	-
	CLP ISO PG VG460	-25 ... +110°	✓	-	✓
Food sector (USDA) NSF-H1	CLP ISO H1 VG460	-25 ... +100°	✓	-	✓
	CLP ISO H1 VG100	-30 ... +90°	✓	-	✓

CLP = mineral oil

CLP PG = polyglycol oil

E = ester oil, organic oil (bio oil / risk of water pollution, class WGK1)

PAO = poly-alpha-olefin oil

CLP H1 = physiologically safe oil (USDA-H1 approval)

### 12.3.25 Replace bearings

The bearing service life is finite, greatly depends on the operating conditions and therefore cannot be calculated reliably. In the operating conditions specified by the operator, bearing life can be calculated. Changes in vibration and noise pattern are an indication that an immediate bearing replacement is necessary.

### 12.3.26 Checking the gearbox for leaks

---

#### Note

Due to the inherent principle of operation, oil mist can escape from a breather valve or labyrinth seal.

---

Oil or grease escaping in small quantities from the shaft sealing ring should be regarded as normal during the running-in phase of 24 hours operating time.

If the quantities escaping are significant or leaking continues after the running-in phase, the shaft sealing ring must be replaced to prevent consequential damage.

Table 12-47 Description and measures

Status	Description	Measures	Notes
Film of moisture on the shaft sealing ring	Film of moisture as a result of the inherent principle of operation (apparent leakage)	Remove using a clean cloth and continue to observe.	This does not represent a fault; frequently, in the course of operation, the sealing ring dries off.
Leakage at the shaft sealing ring	Identifiable small trickle, formation of drops, also after the running-in phase	Replace the sealing ring, determine the possible cause of the sealing ring failure and rectify.	During the run-in period, the shaft sealing ring beds into the shaft. A visible track can be seen on the shaft. Optimum preconditions for a perfect seal are obtained after the run-in period.

### 12.3.27 Replacing the vent valve

To ensure correct functioning, renew the breather valve yearly.

When replacing, prevent dirt and damaging atmospheres from entering the gearbox.

If too much oil is contained in the gearbox, oil will escape from the breather valve. Correct the oil quantity and replace the breather valve.

### 12.3.28 Checking the oil level sensor (optional)

The oil level sensor indicates the oil level only when the gearbox is shut down.

Lower the oil level and fill it up again until the oil level sensor gives a switching signal.

Please refer to the separate operating instructions for the oil level sensor.

### 12.3.29 Checking the tightness of fastening bolts

**Note**

Replace damaged headless bolts with new bolts of the same type and strength class.

Switch off the power supply to the drive unit. Check all fastening bolts for tightness using a torque wrench.

The general tolerance for the tightening torque in Nm is 10 %. The friction coefficient is 0.14  $\mu$ .

Table 12-48 Tightening torques for fastening bolts

Thread size	Tightening torque for strength class		
	8.8	10.9	12.9
	Nm	Nm	Nm
M4	3	4	5
M5	6	9	10
M6	10	15	18
M8	25	35	41
M10	50	70	85
M12	90	120	145
M16	210	295	355
M20	450	580	690
M24	750	1 000	1200
M30	1500	2 000	2 400
M36	2 500	3 600	4 200

### 12.3.30 Replacing the hose of the oil expansion unit

**NOTICE**

**Hose with leaks**

The hose of the oil expansion unit is subject to natural wear. The service life depends on the operating conditions.

Check the hose regularly for tears or leaks.

Renew the hose every 4 years at the latest.

## 12.3.31 Mounting positions

### 12.3.31.1 General notes on mounting positions

Only operate the gearbox in the mounting position specified on the rating plate. This ensures that the correct quantity of lubricant is provided.

The symbols are shown for the standard mounting position.

---

#### Note

##### Gearbox sizes 19 and 29

Gearbox sizes 19 and 29 are lubricated for life. There is no opening to check the oil level.

In mounting positions M2 and M4 the gearboxes have a breather valve.

C29 has a breather valve in all mounting positions.

---

#### Note

##### Worm gearbox or worm geared motor

Gearboxes are lubricated for life. There are no openings to check the oil level.

---

Description of the symbols:



Venting



Oil level



Oil drain


A, B Position of insert shaft / solid shaft

\* On opposite side


- ① Oil level check not possible for tandem gearbox (main gearbox a)
- ② Two-stage gearbox
- ③ Three-stage gearbox

### 12.3.31.2 Single-stage helical gearboxes


M1

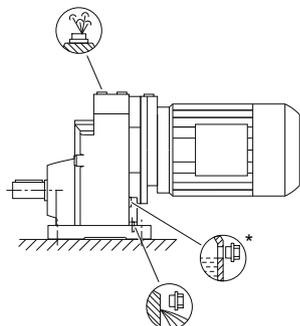


M2

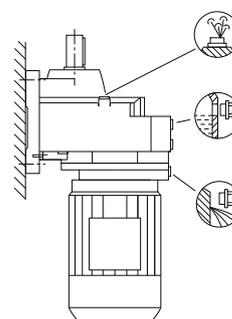


M3

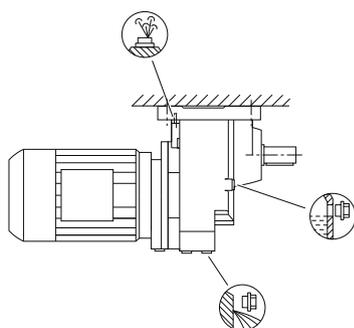

M4

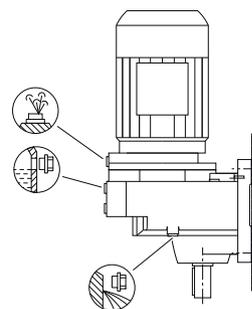

M5

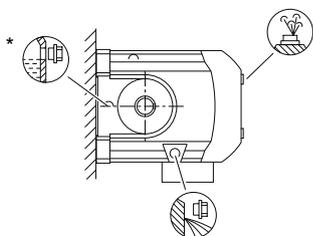

M6



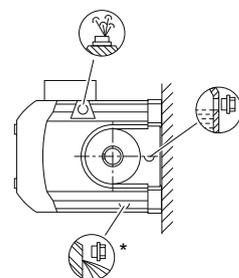


Figure 12-36 Mounting positions for helical gearbox E, foot-mounted design, sizes 39 - 89


M1

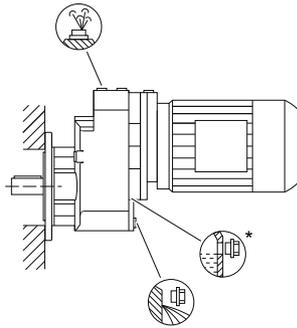


M2

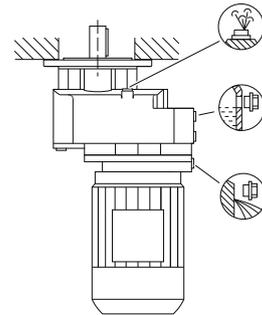


M3

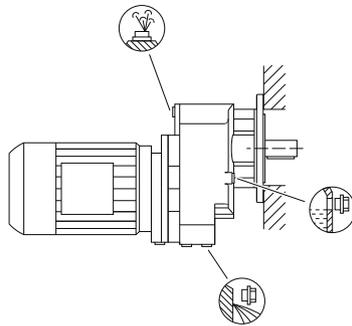

M4

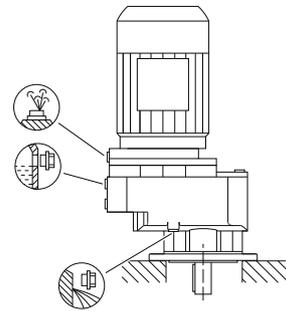

M5

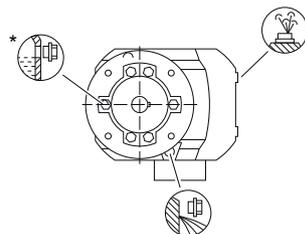

M6


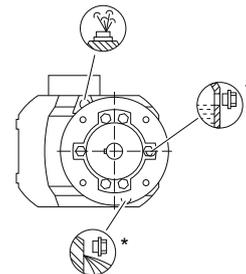



Figure 12-37 Mounting positions for helical gearbox EF/EZ, flange-mounted design, sizes 39 - 89

12.3.31.3 Two- and three-stage helical gearbox


M1

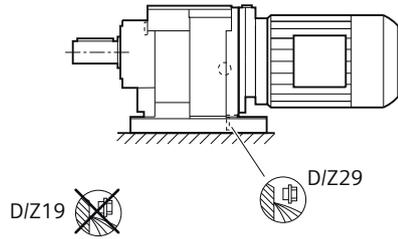


M2

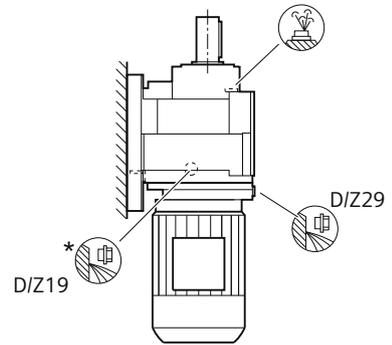


M3

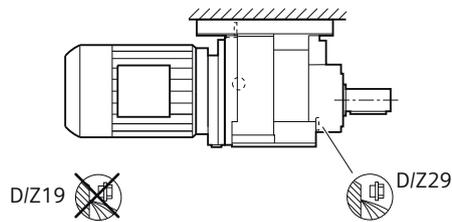

M4

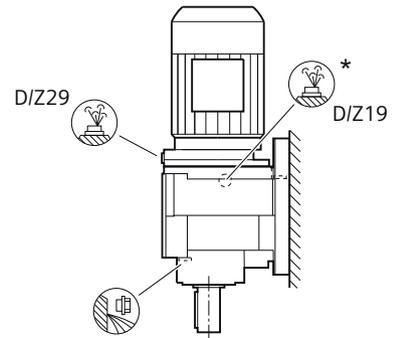

M5

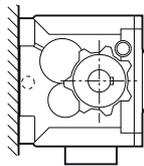

M6



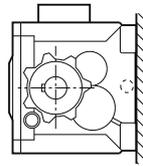


Figure 12-38 Mounting positions for helical gearbox D/Z foot-mounting design, sizes 19 - 29


M1

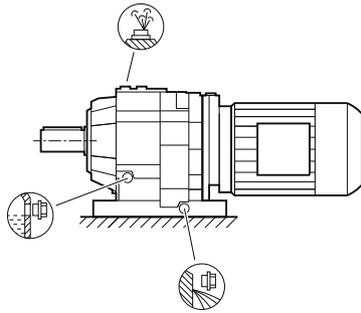


M2

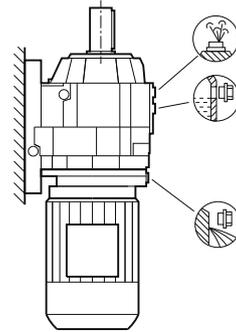


M3

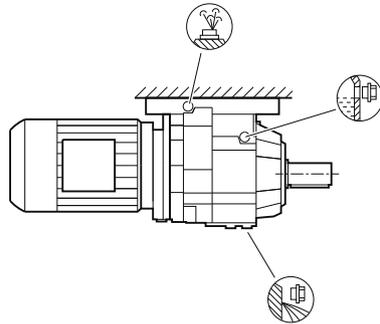

M4

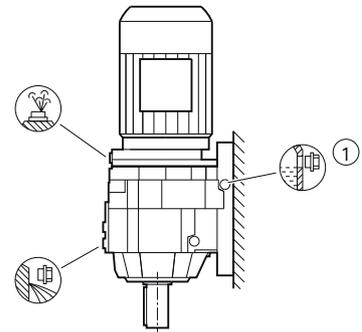

M5

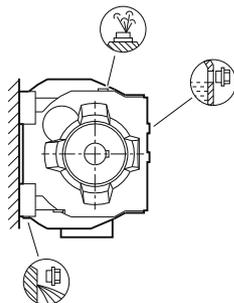

M6


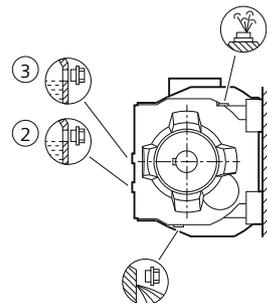



Figure 12-39 Mounting positions for helical gearbox D/Z foot-mounting design, sizes 39 - 89

12.3 Specific data gearbox


M1

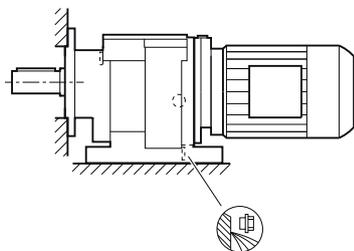


M2

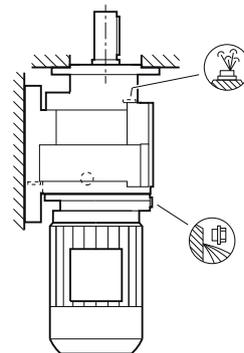


M3

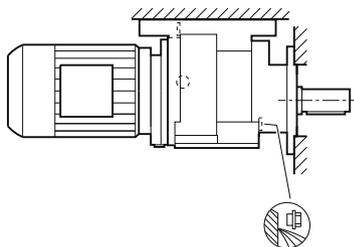

M4

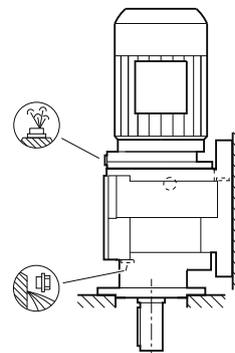

M5

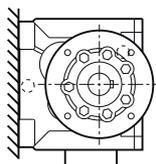

M6



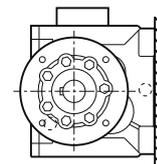


Figure 12-40 Mounting positions for helical gearbox DB/ZB foot / flange-mounted design, size 29


M1

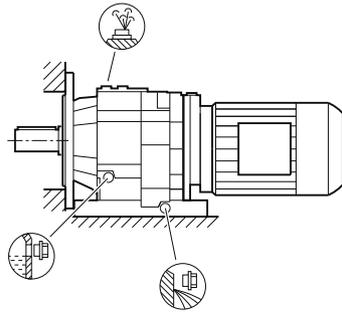


M2

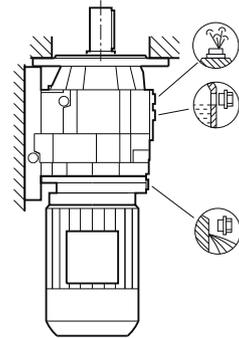


M3

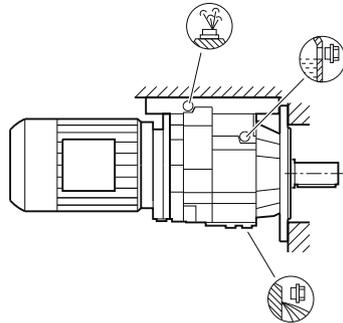

M4

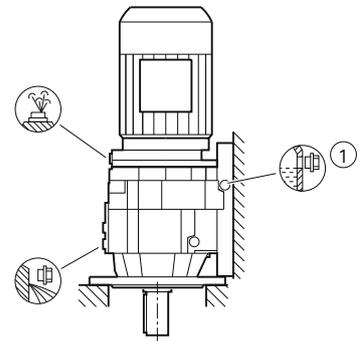

M5

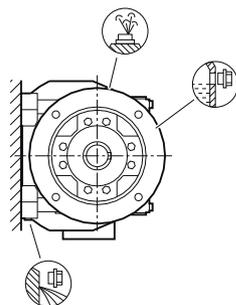

M6


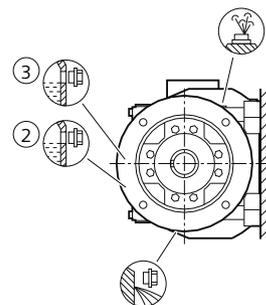



Figure 12-41 Mounting positions for helical gearbox DB/ZB foot / flange-mounted design, sizes 39 - 89

12.3 Specific data gearbox


M1

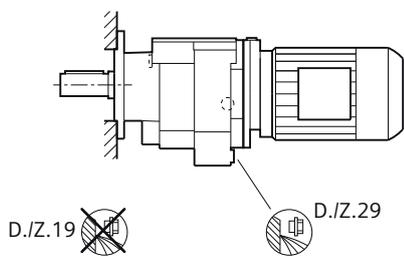


M2

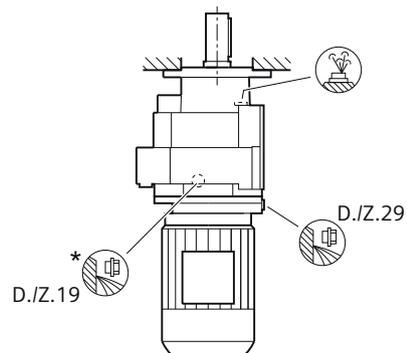


M3

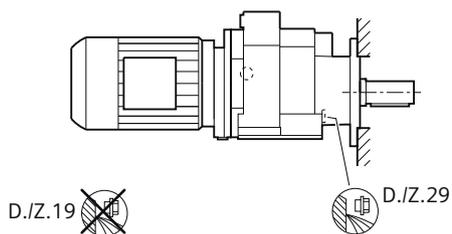

M4

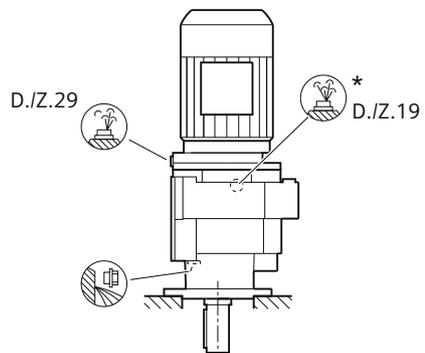

M5

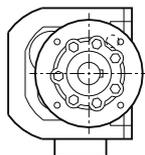

M6



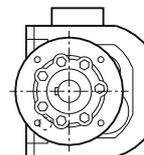


Figure 12-42 Mounting positions for helical gearbox DF/ZF flange-mounted design and DZ/ZZ with housing flange, sizes 19 - 29


M1

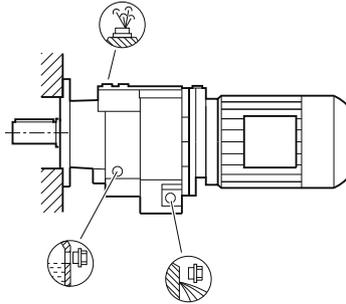


M2

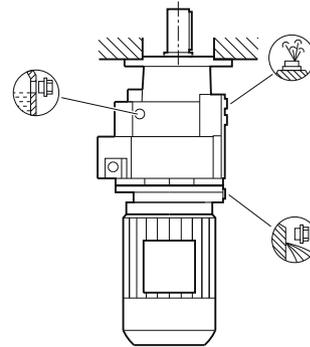


M3

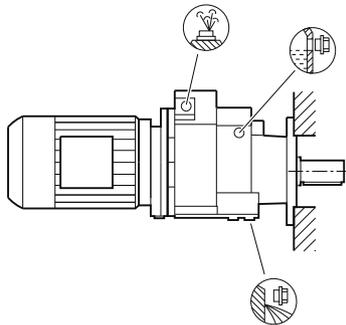

M4

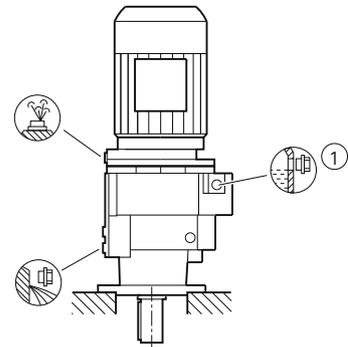

M5

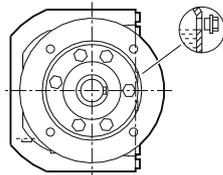

M6


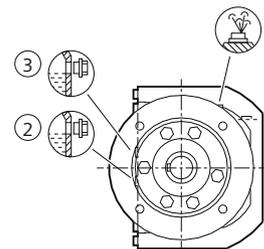



Figure 12-43 Mounting positions for helical gearbox DF/ZF flange-mounted design and DZ/ZZ with housing flange, size 39

12.3 Specific data gearbox


M1

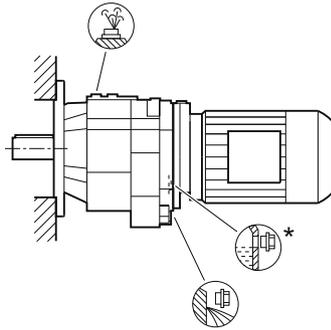


M2

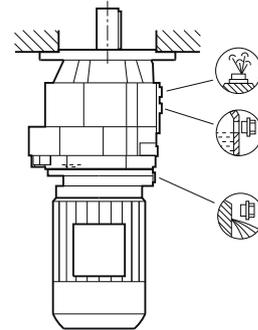


M3

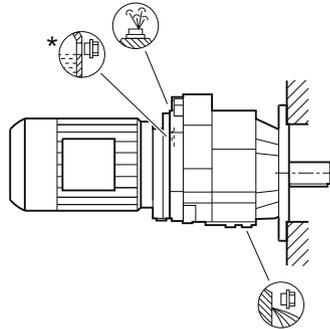

M4

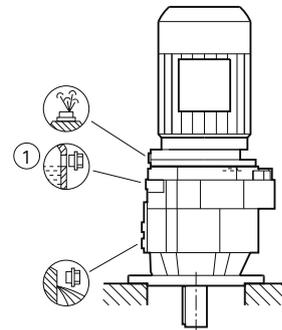

M5

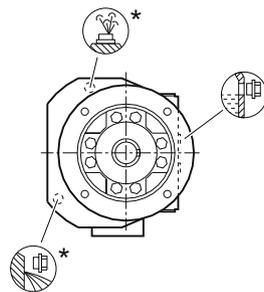

M6


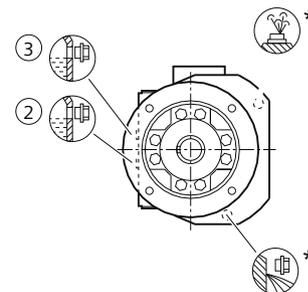



Figure 12-44 Mounting positions for helical gearbox DF/ZF flange-mounting design, sizes 49 - 89 and DZ/ZZ with housing design, sizes 49 - 89

12.3.31.4 Parallel shaft gearbox


M1

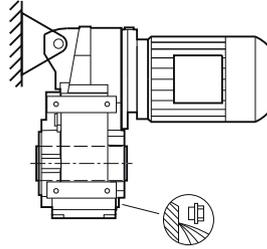


M2

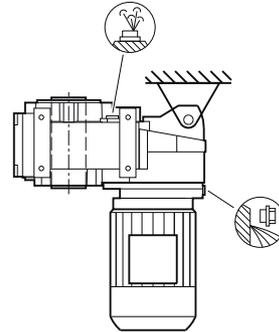


M3

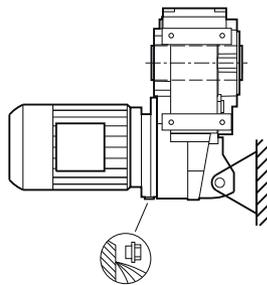

M4

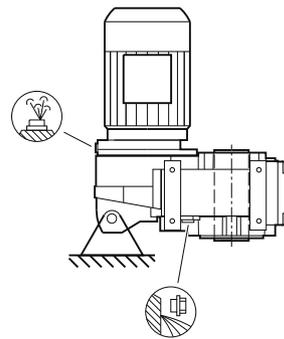

M5

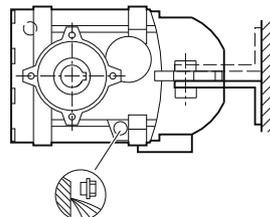

M6


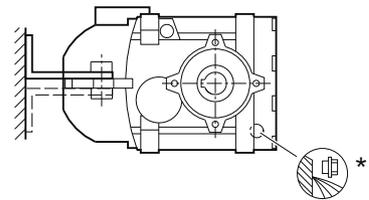



Figure 12-45 Mounting positions for parallel shaft gearbox F.AD shaft-mounted design, size 29

12.3 Specific data gearbox


M1

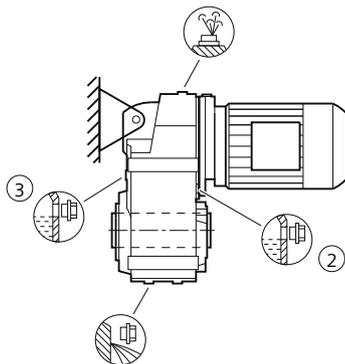


M2

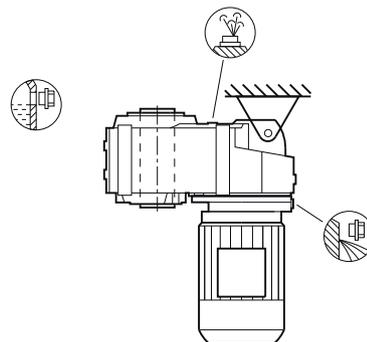


M3

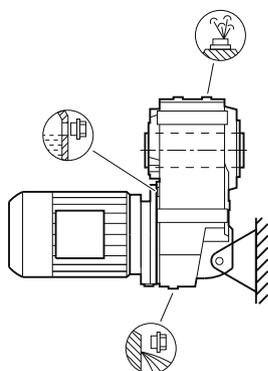

M4

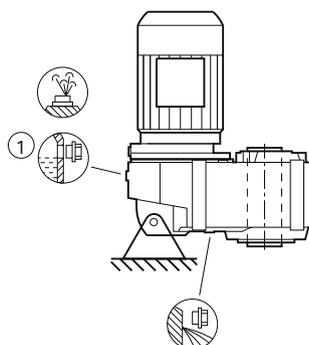

M5

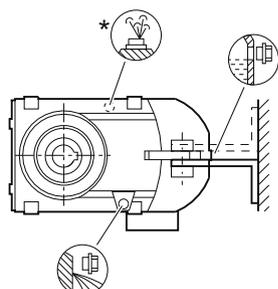

M6



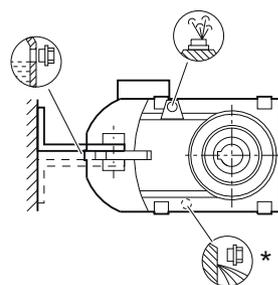


Figure 12-46 Mounting positions for parallel shaft gearbox F.AD shaft-mounted design, sizes 39 - 89


M1

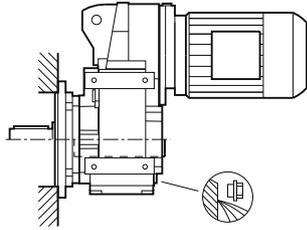


M2

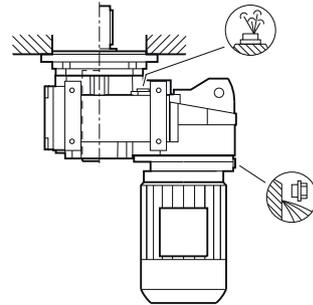


M3

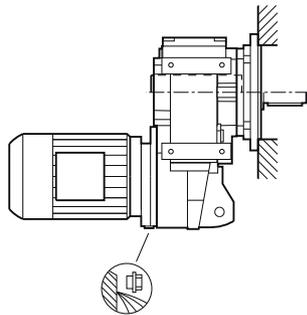

M4

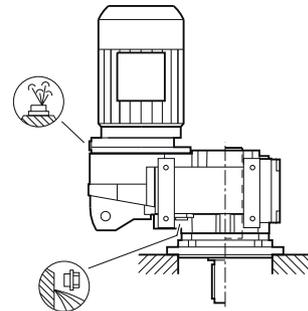

M5

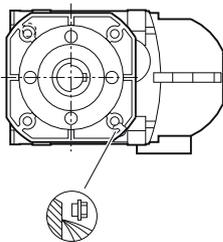

M6


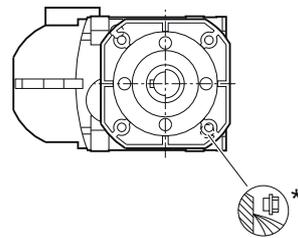



Figure 12-47 Mounting positions for parallel shaft gearbox F.F flange-mounted design and F.Z with housing flange, size 29

12.3 Specific data gearbox


M1

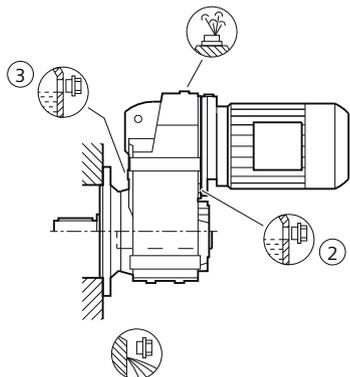


M2

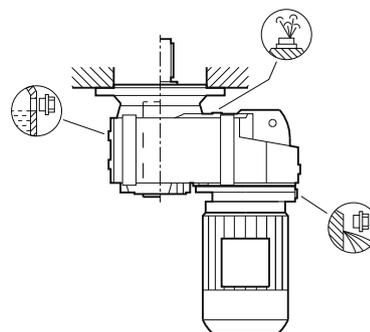


M3

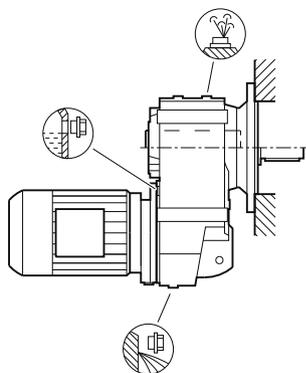

M4

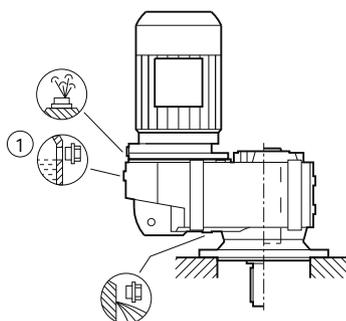

M5

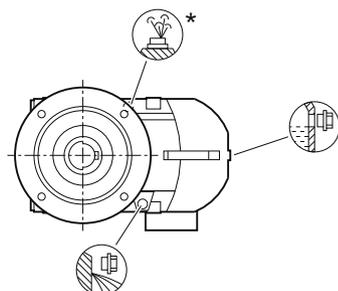

M6



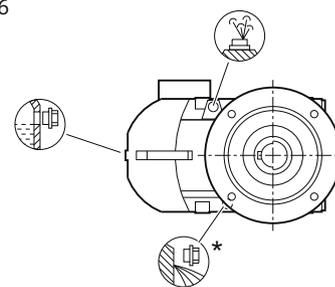


Figure 12-48 Mounting positions for parallel shaft gearbox F.F flange-mounted design and F.Z with housing flange, sizes 39 - 89


M1

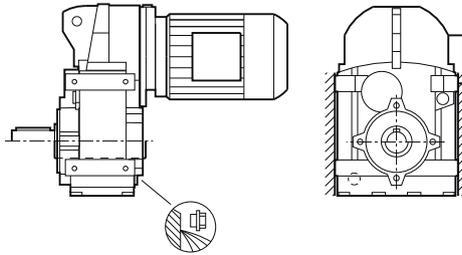


M2

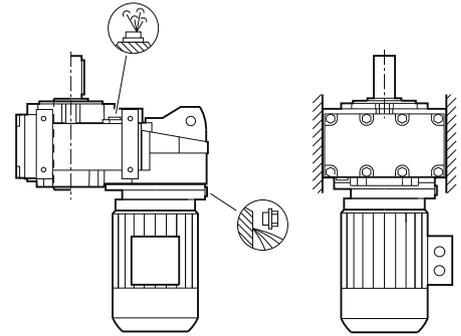


M3

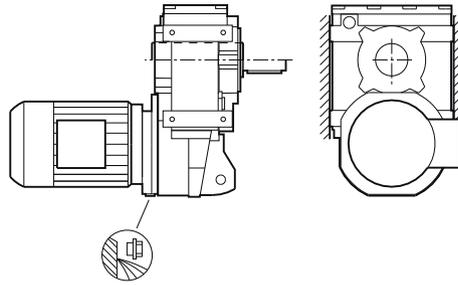

M4

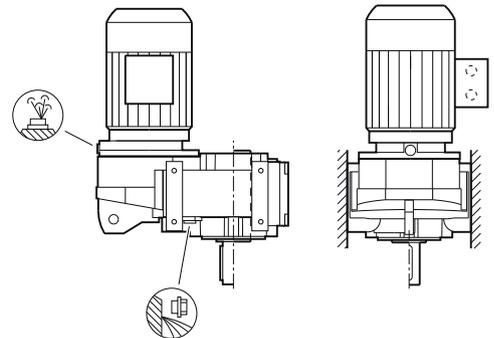

M5

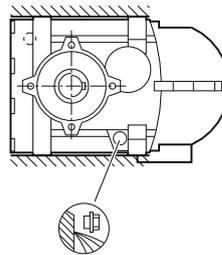

M6

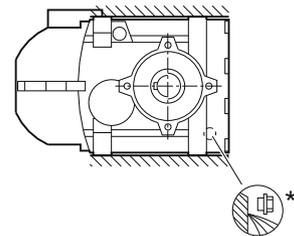


Figure 12-49 Mounting positions for parallel shaft gearbox F. foot-mounted design, size 29

12.3 Specific data gearbox

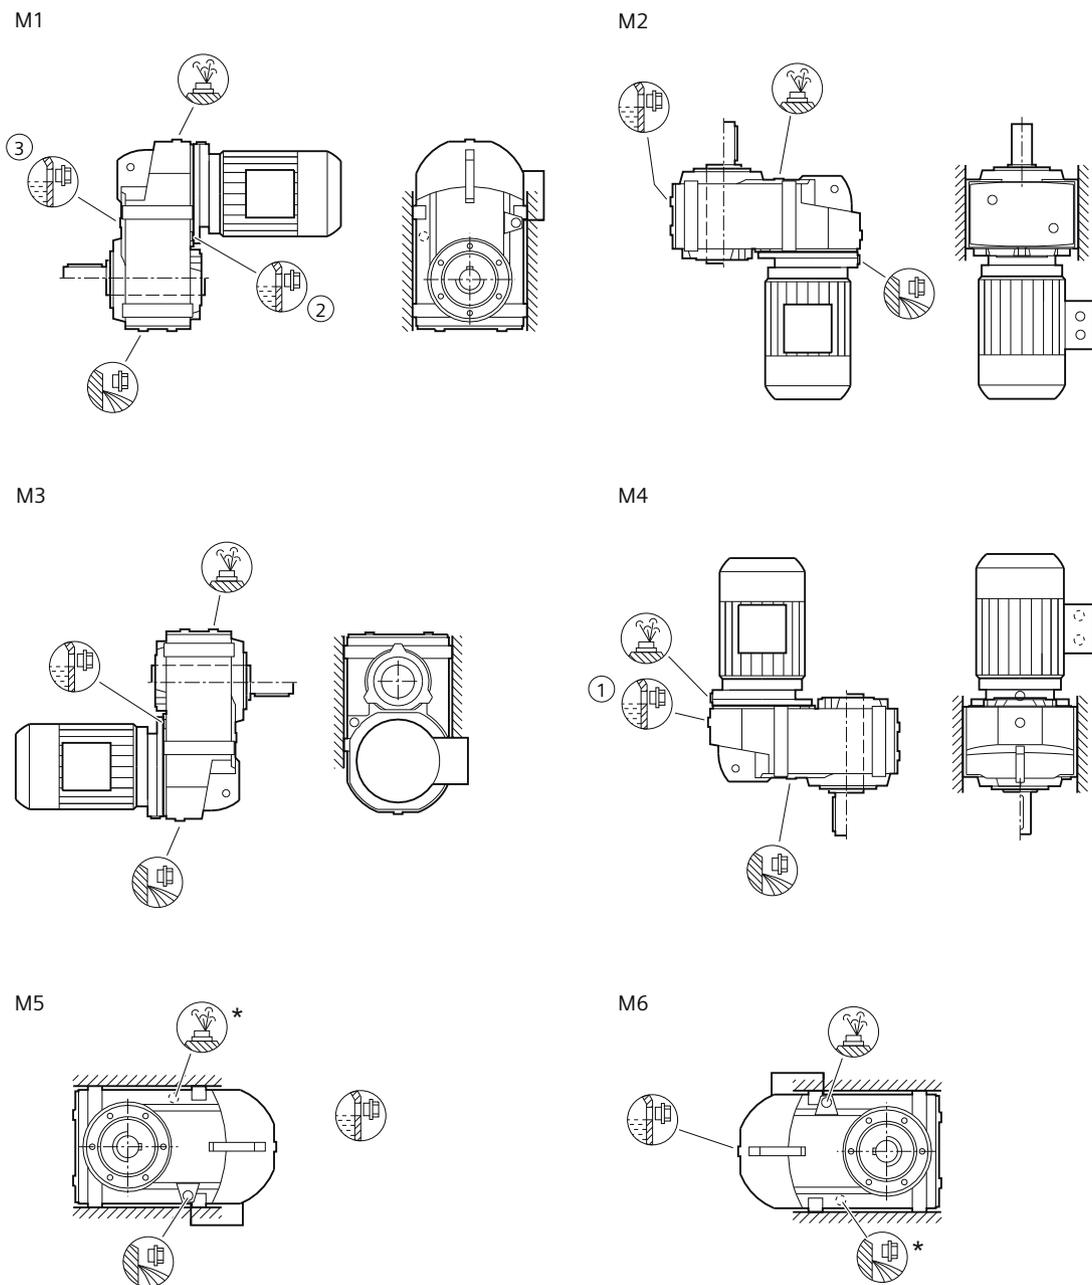


Figure 12-50 Mounting positions for parallel shaft gearbox F. foot-mounted design, sizes 39 - 89

12.3.31.5 Bevel gearbox

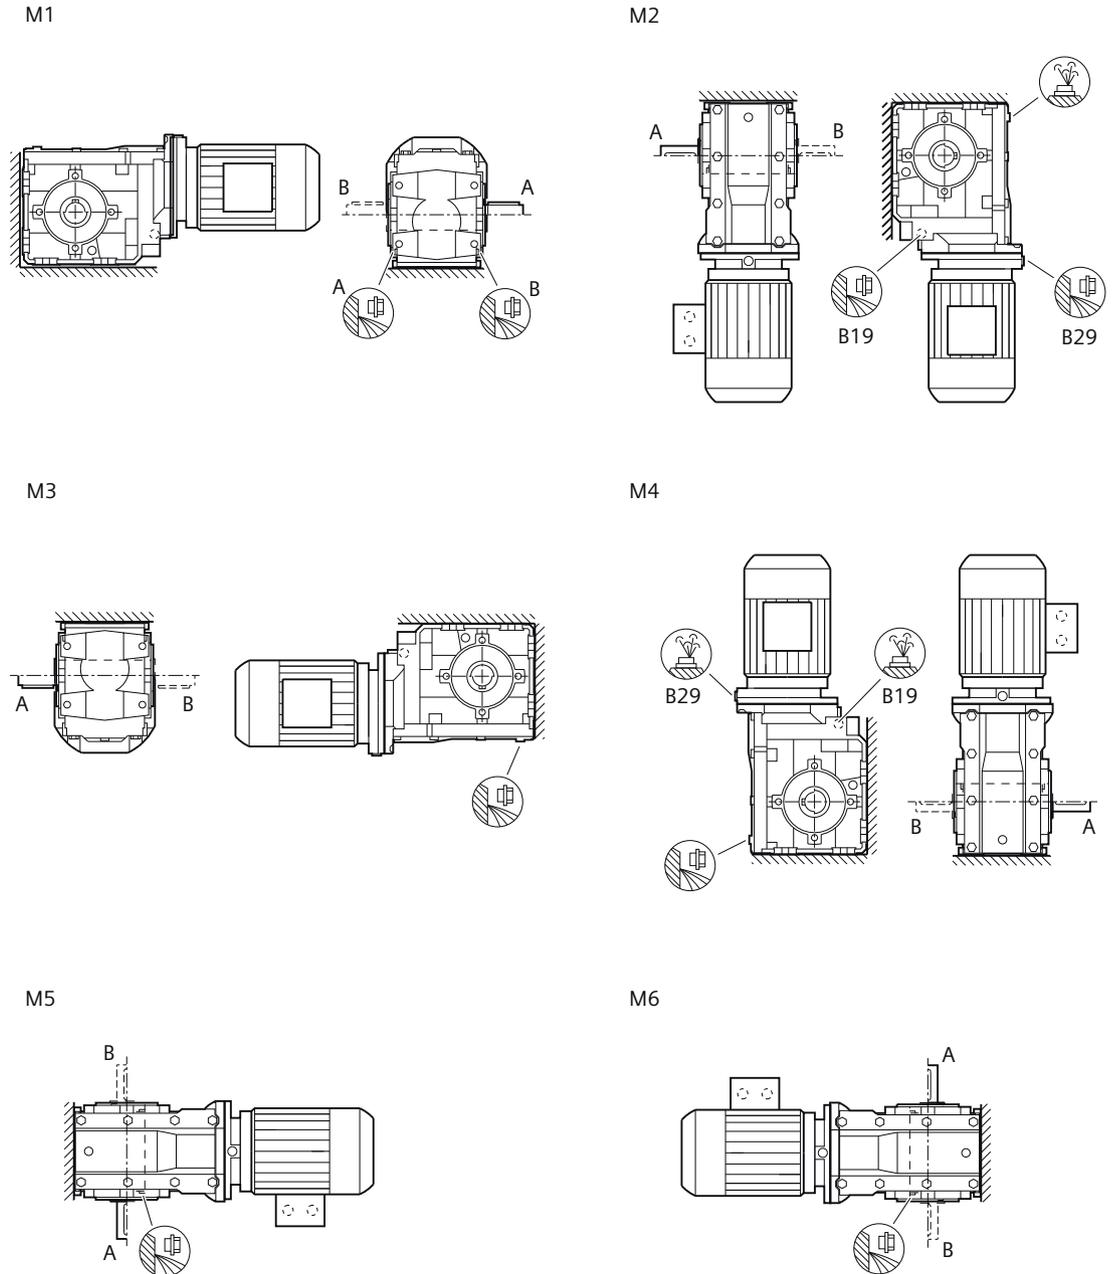


Figure 12-51 Mounting positions for bevel gearbox B. foot-mounted design, frame sizes 19 - 29

12.3 Specific data gearbox

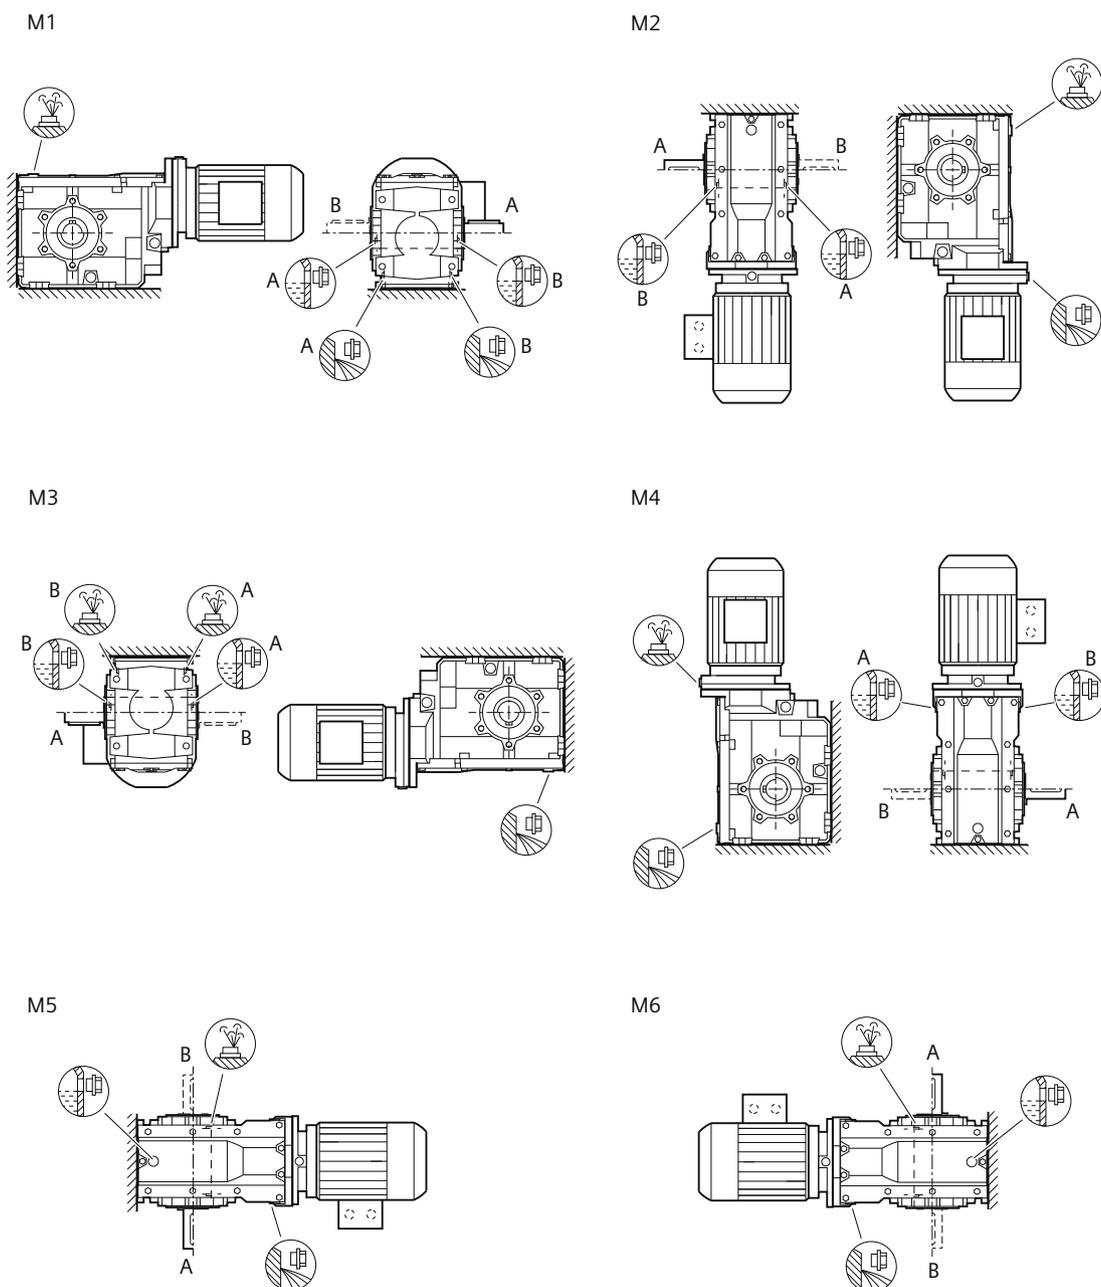


Figure 12-52 Mounting positions for bevel gearbox B. foot-mounted design, frame sizes 39 - 49


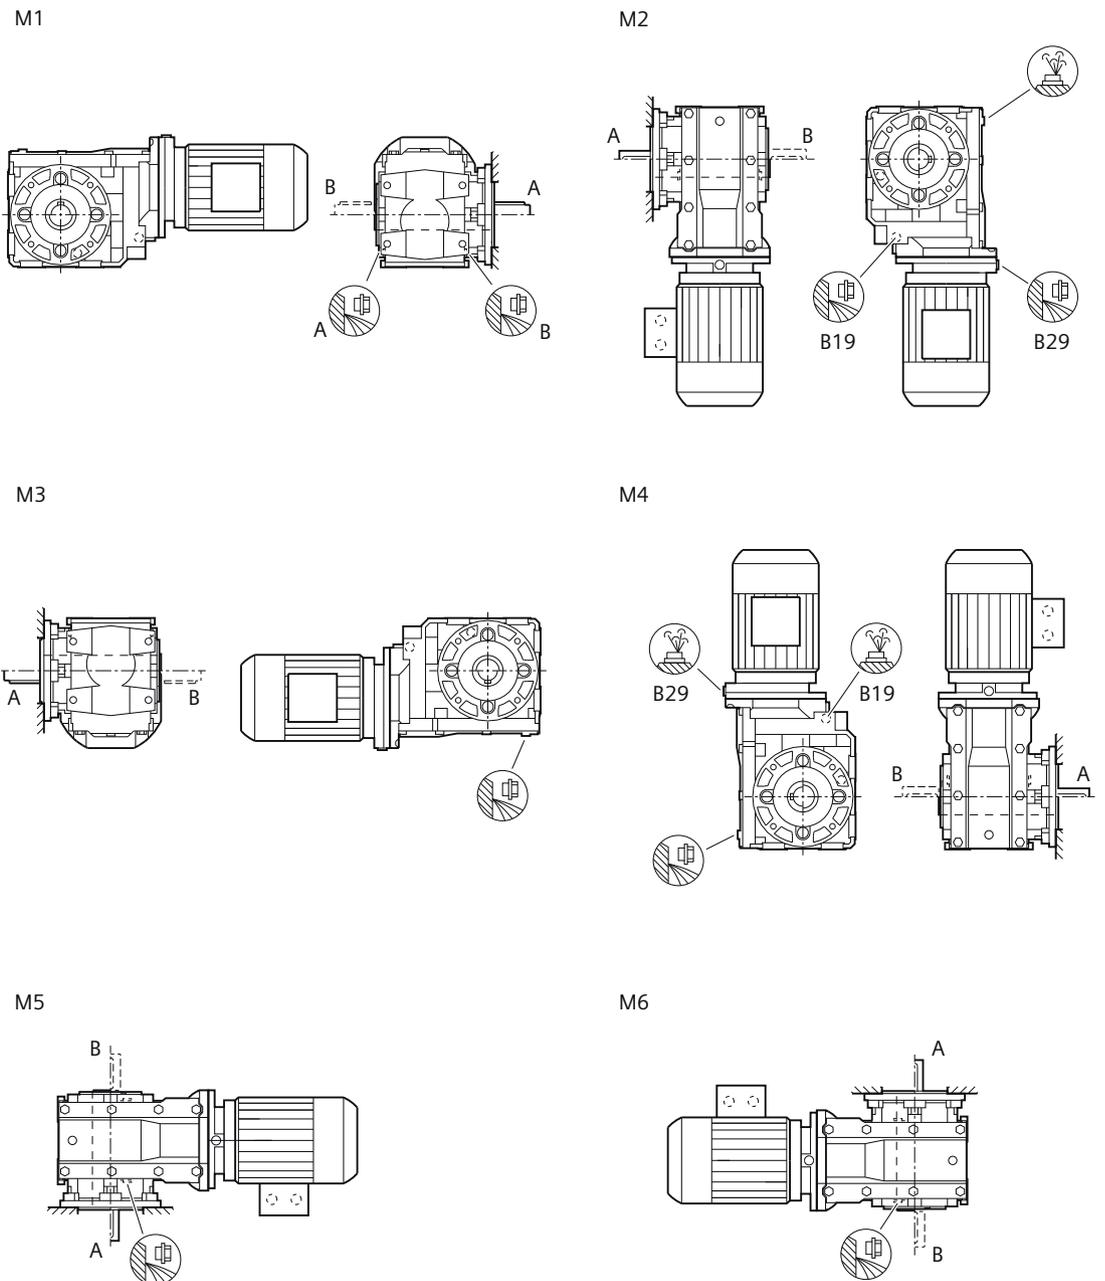



Figure 12-53 Mounting positions for bevel gearbox B.F flange-mounted design and B.Z with housing flange, frame sizes 19 - 29

12.3 Specific data gearbox


M1

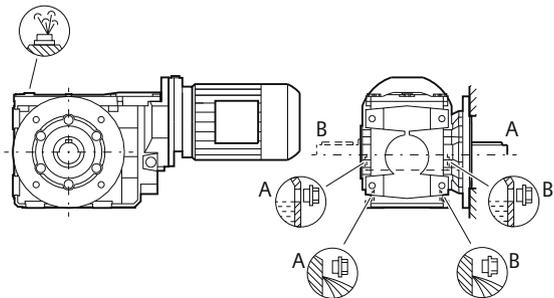


M2

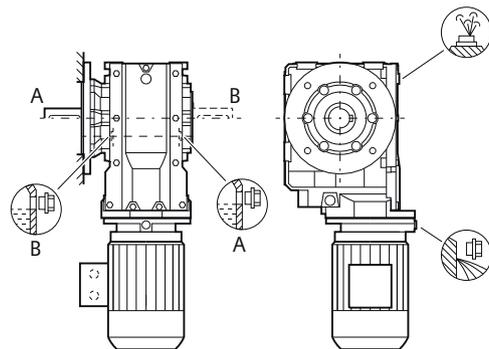


M3

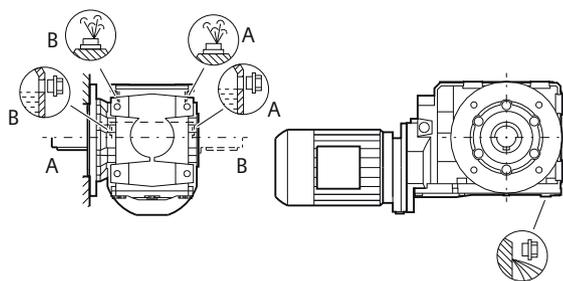

M4

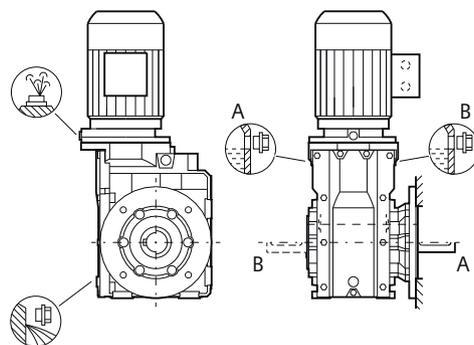

M5

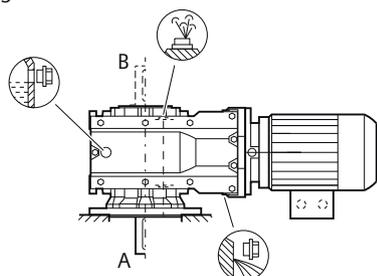

M6

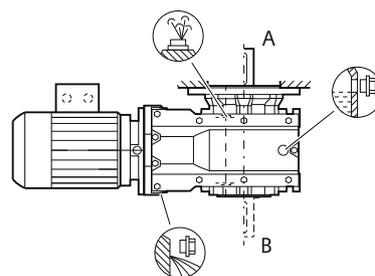


Figure 12-54 Mounting positions for bevel gearbox B.F flange-mounted design and B.Z with housing flange, frame sizes 39 - 49

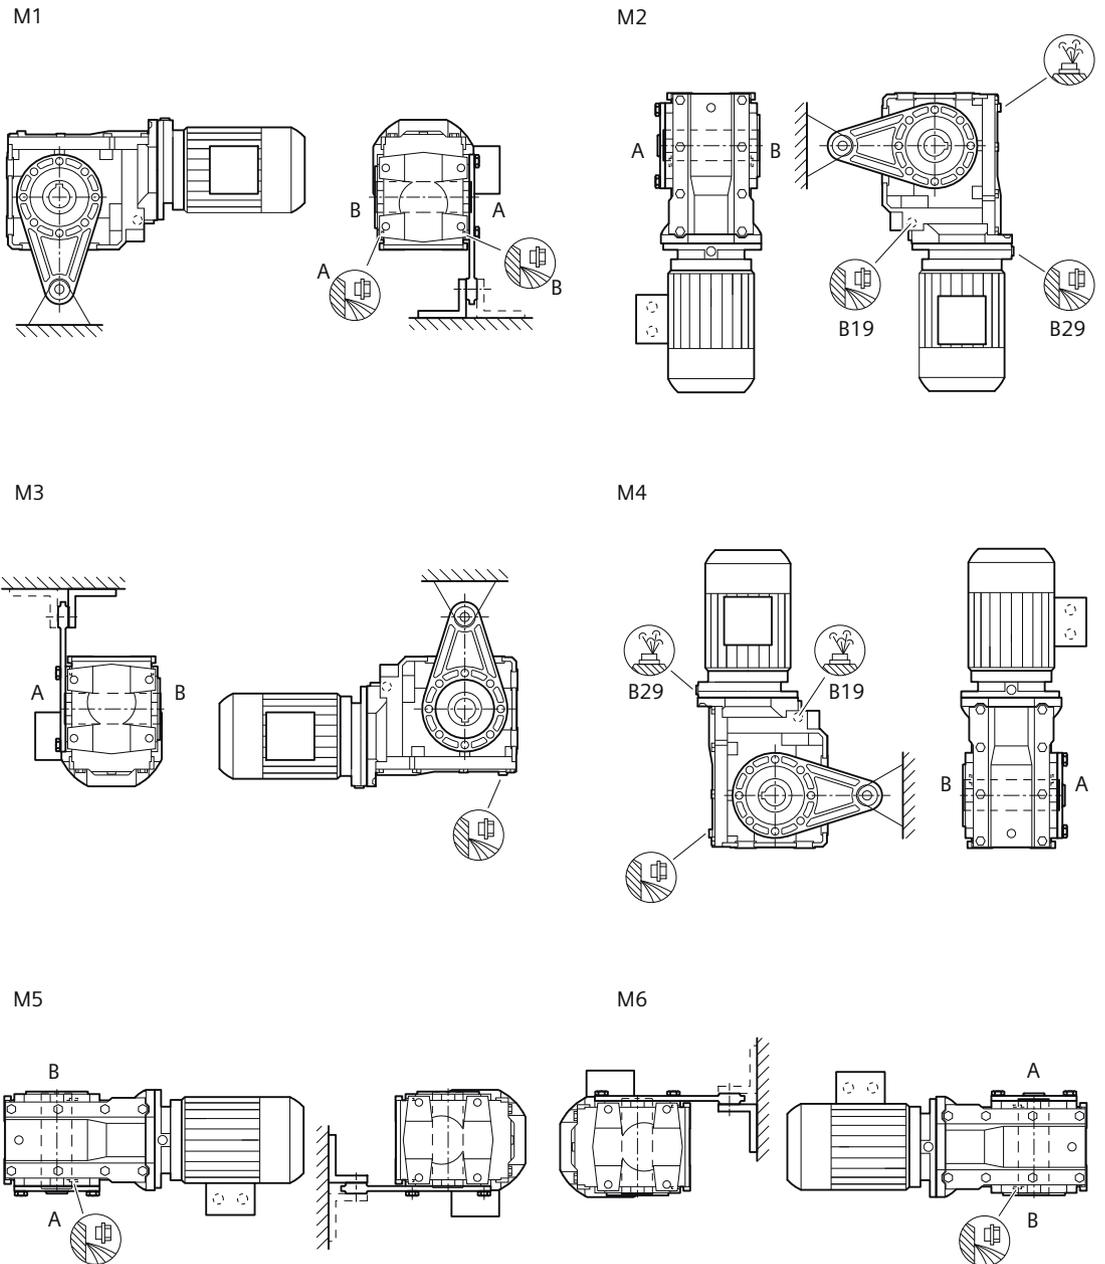


Figure 12-55 Mounting positions for bevel gearboxes BAD shaft-mounted design, frame sizes 19 - 29

12.3 Specific data gearbox

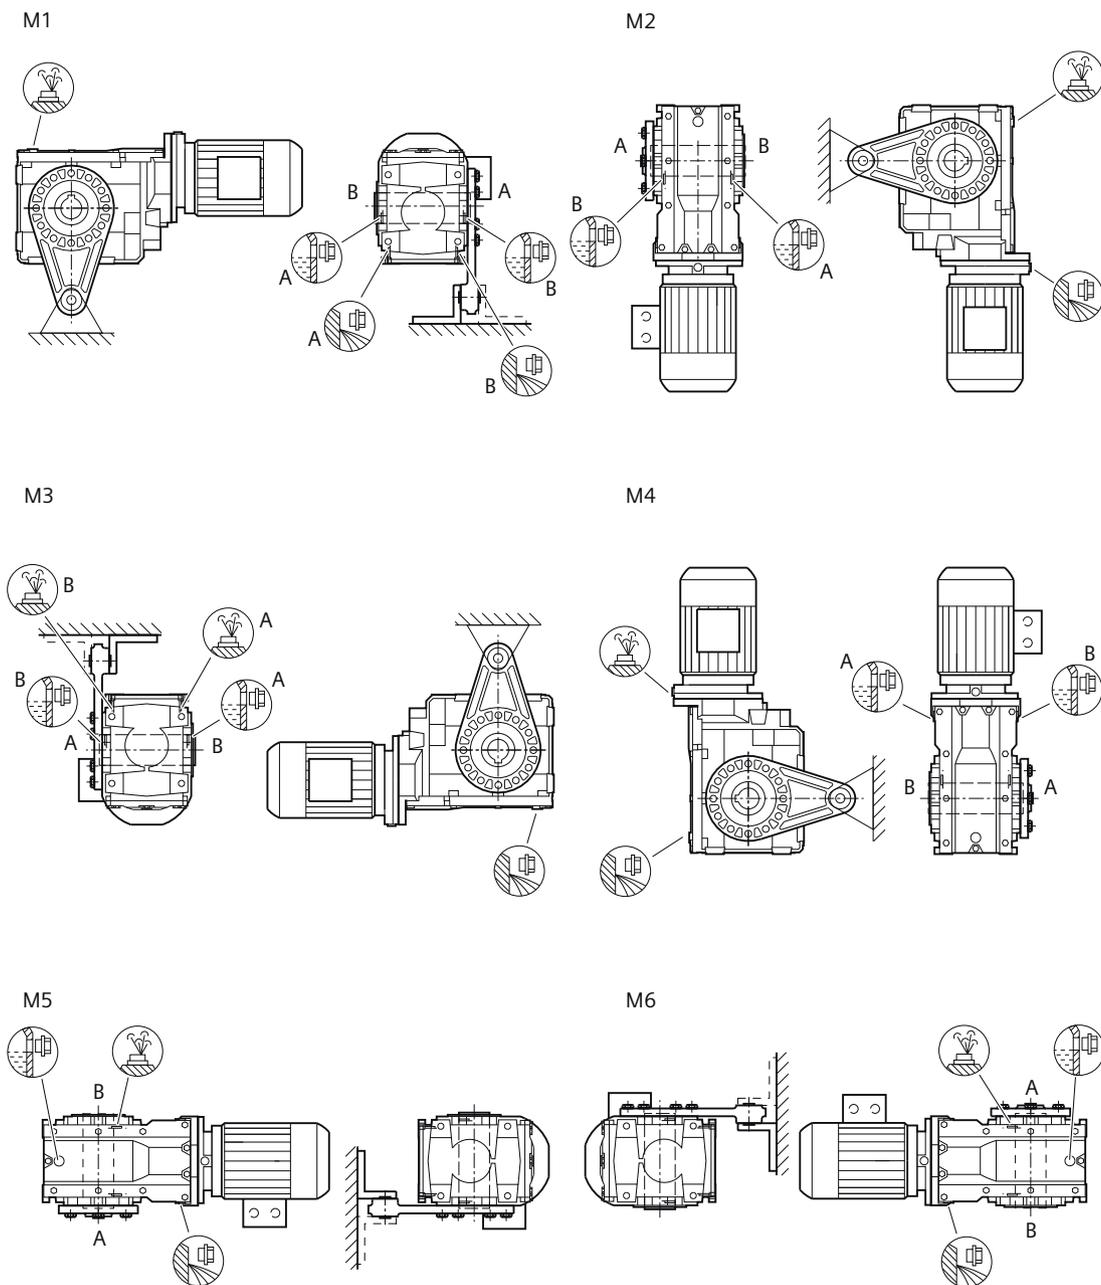


Figure 12-56 Mounting positions for bevel gearboxes BAD shaft-mounted design, frame sizes 39 - 49

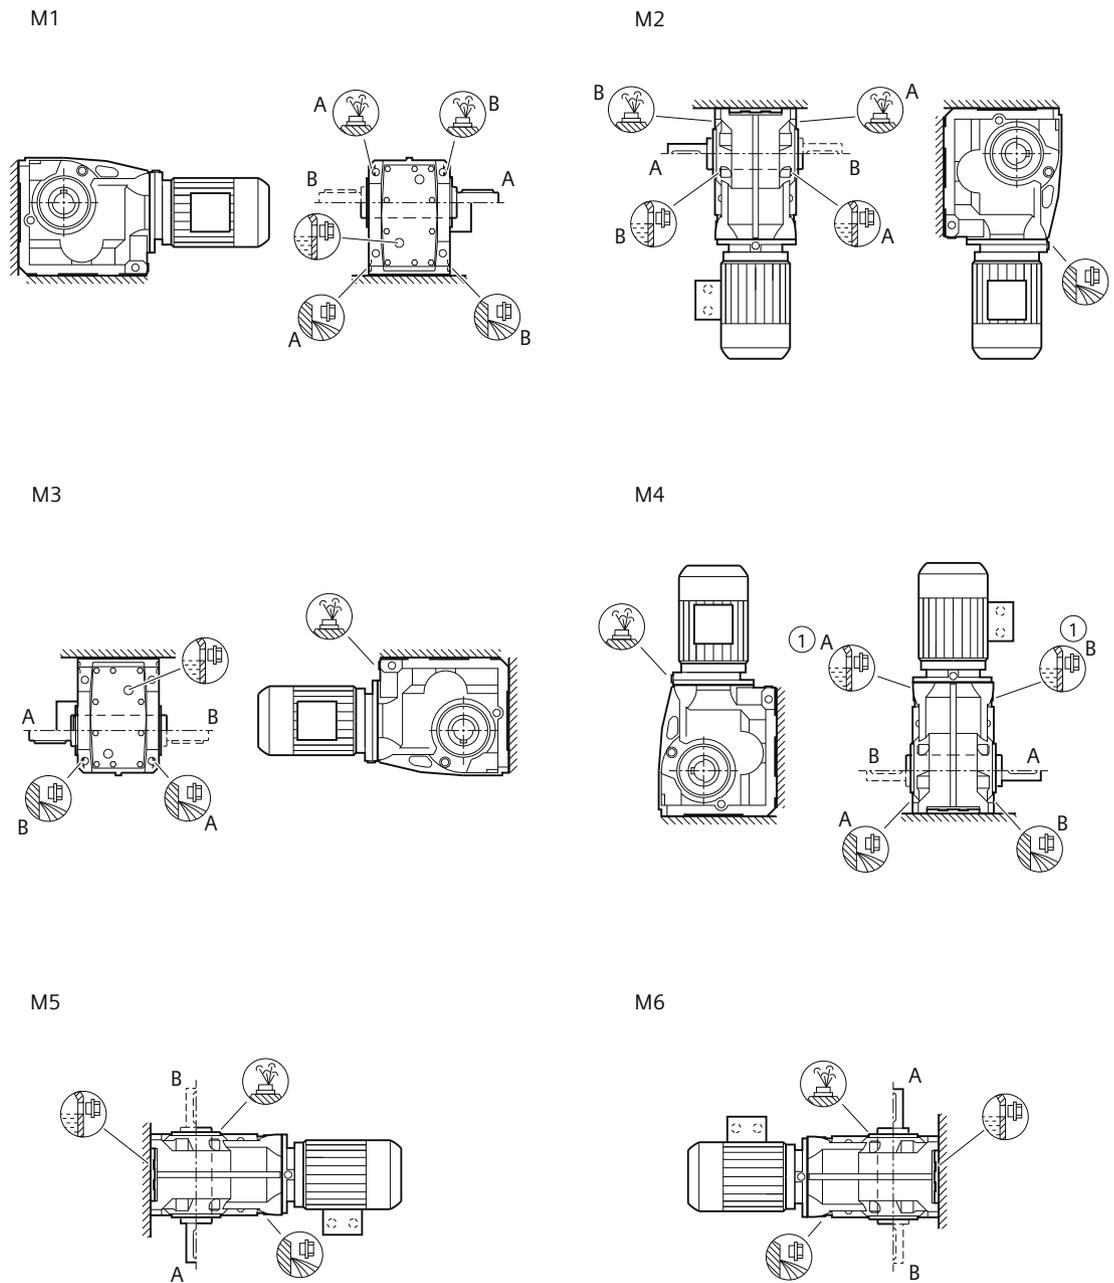


Figure 12-57 Mounting positions for bevel gearbox K. foot-mounted design, frame sizes 39 - 109

12.3 Specific data gearbox

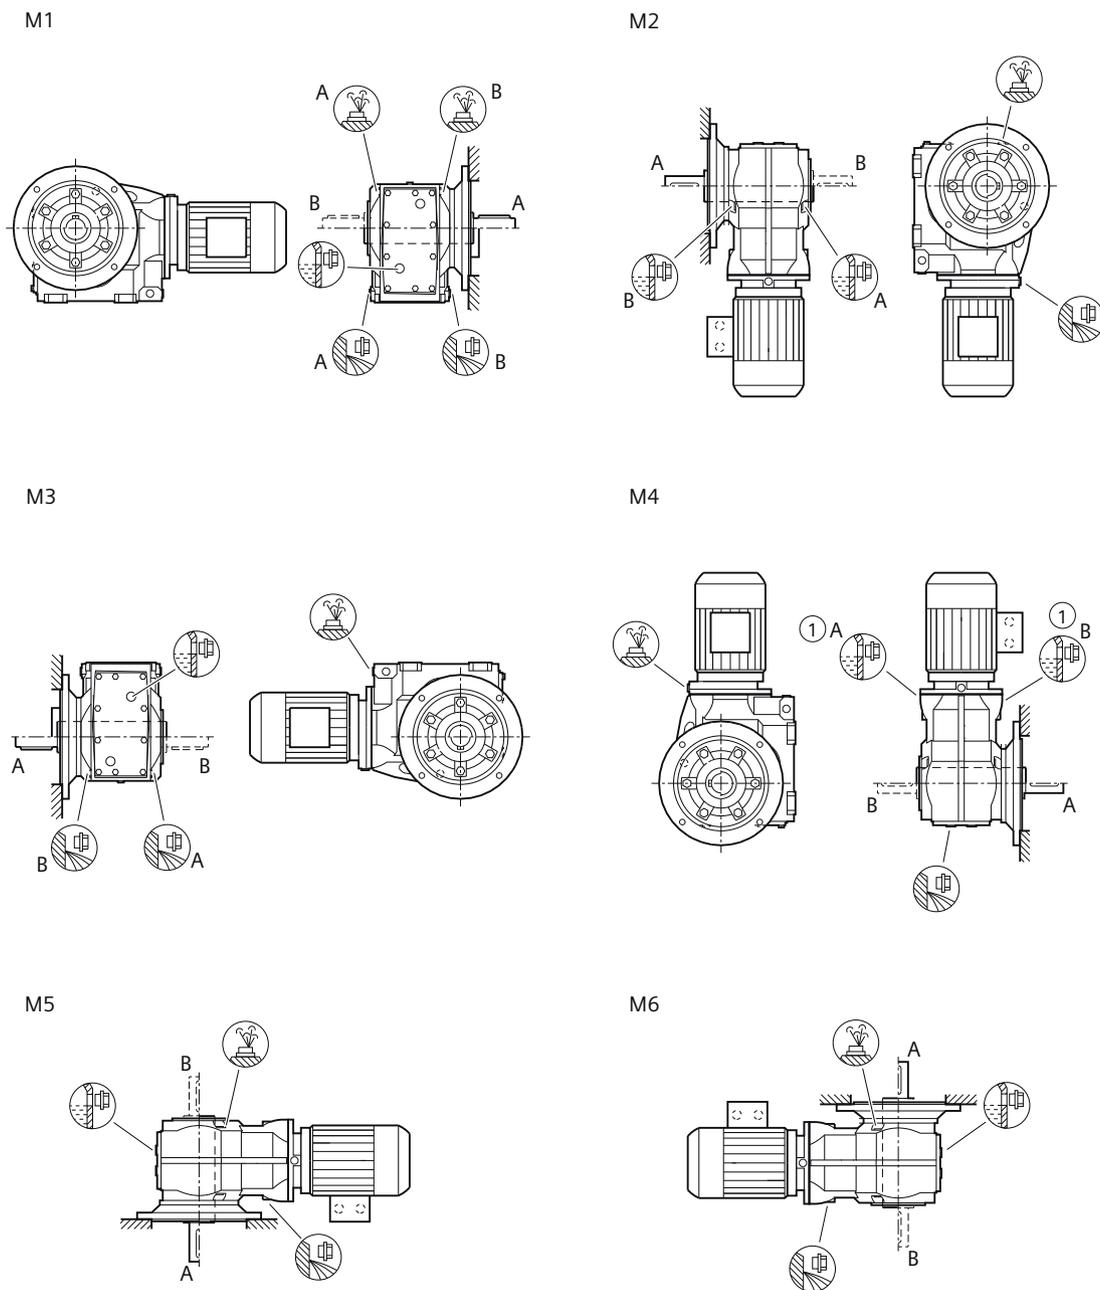


Figure 12-58 Mounting positions for bevel gearboxes K.F flange-mounted design and KAZ with housing flange, frame sizes 39 - 109

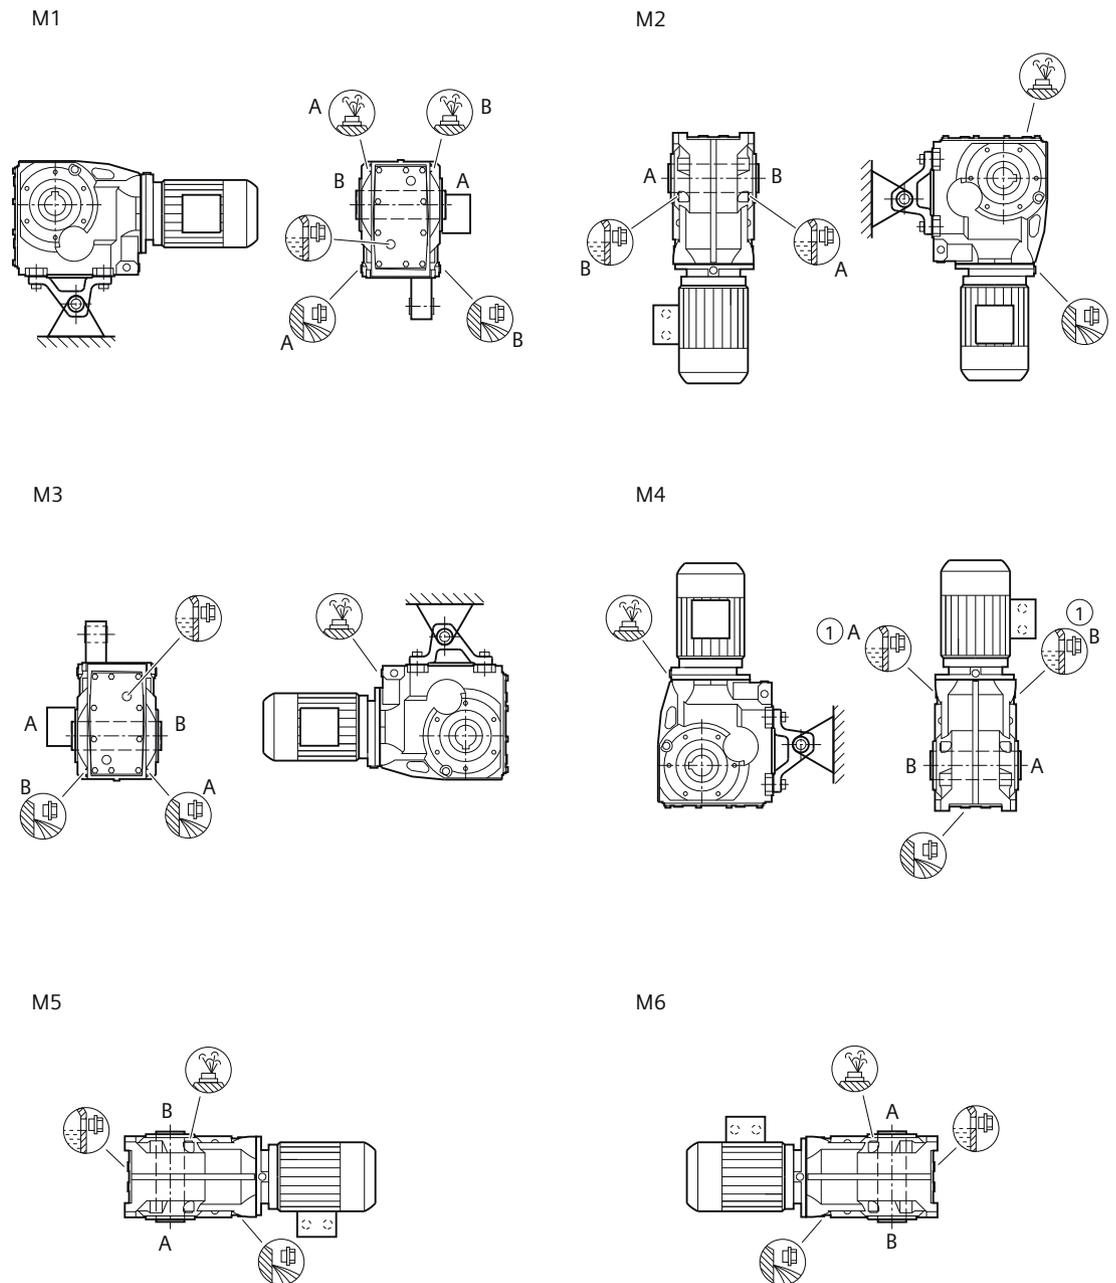


Figure 12-59 Mounting positions for bevel gearboxes KAD shaft-mounted design, frame sizes 39 - 109

12.3.31.6 Helical worm gearbox

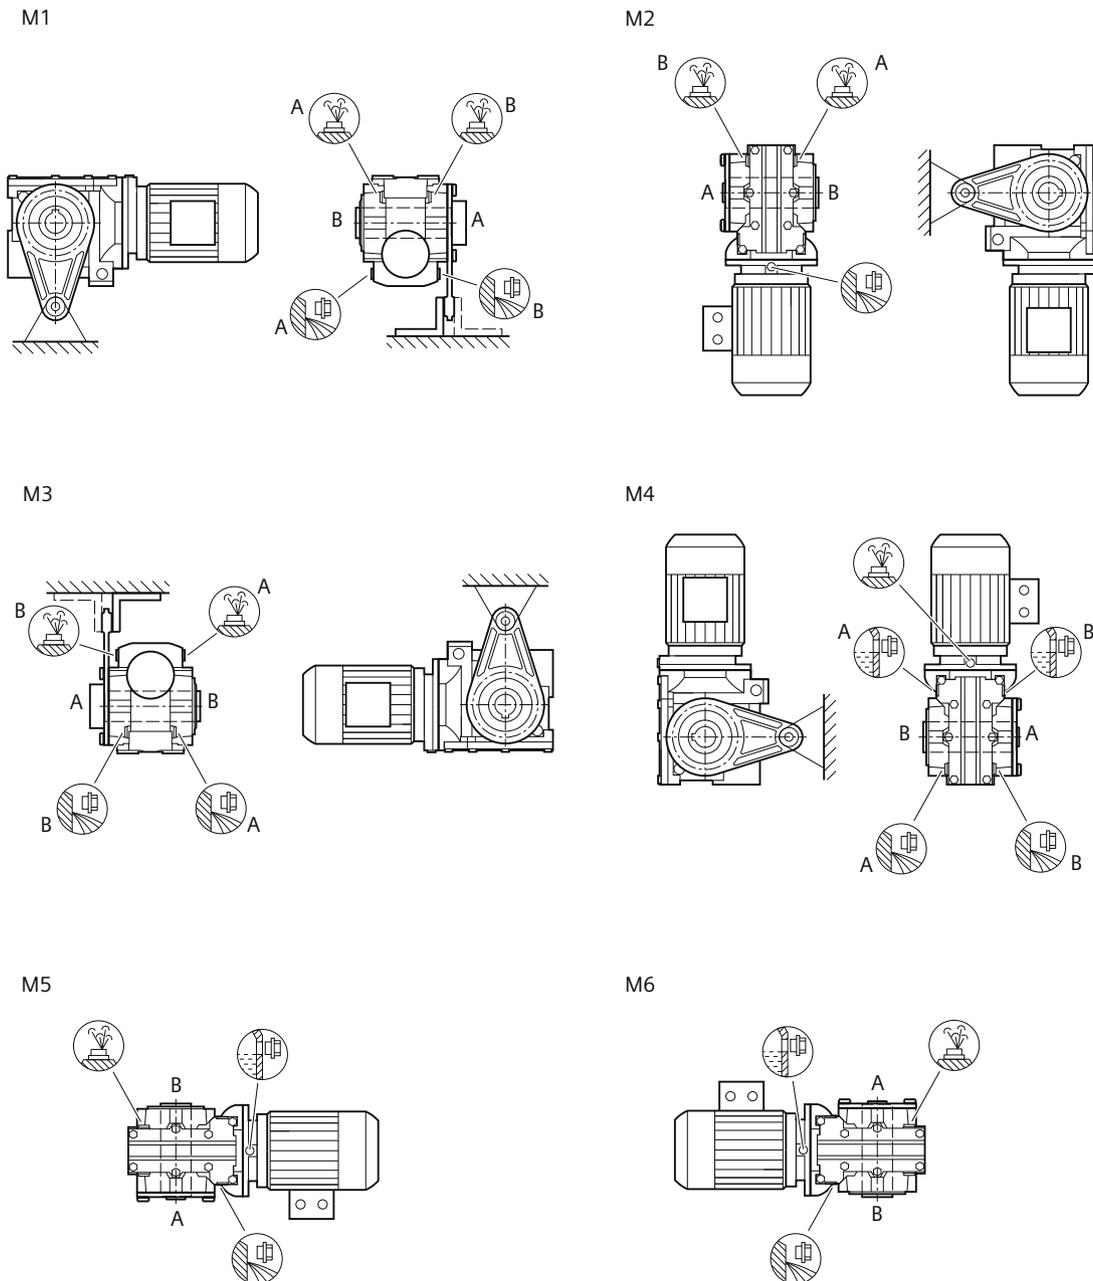


Figure 12-60 Mounting positions for helical worm gearbox CAD shaft-mounted design, size 29

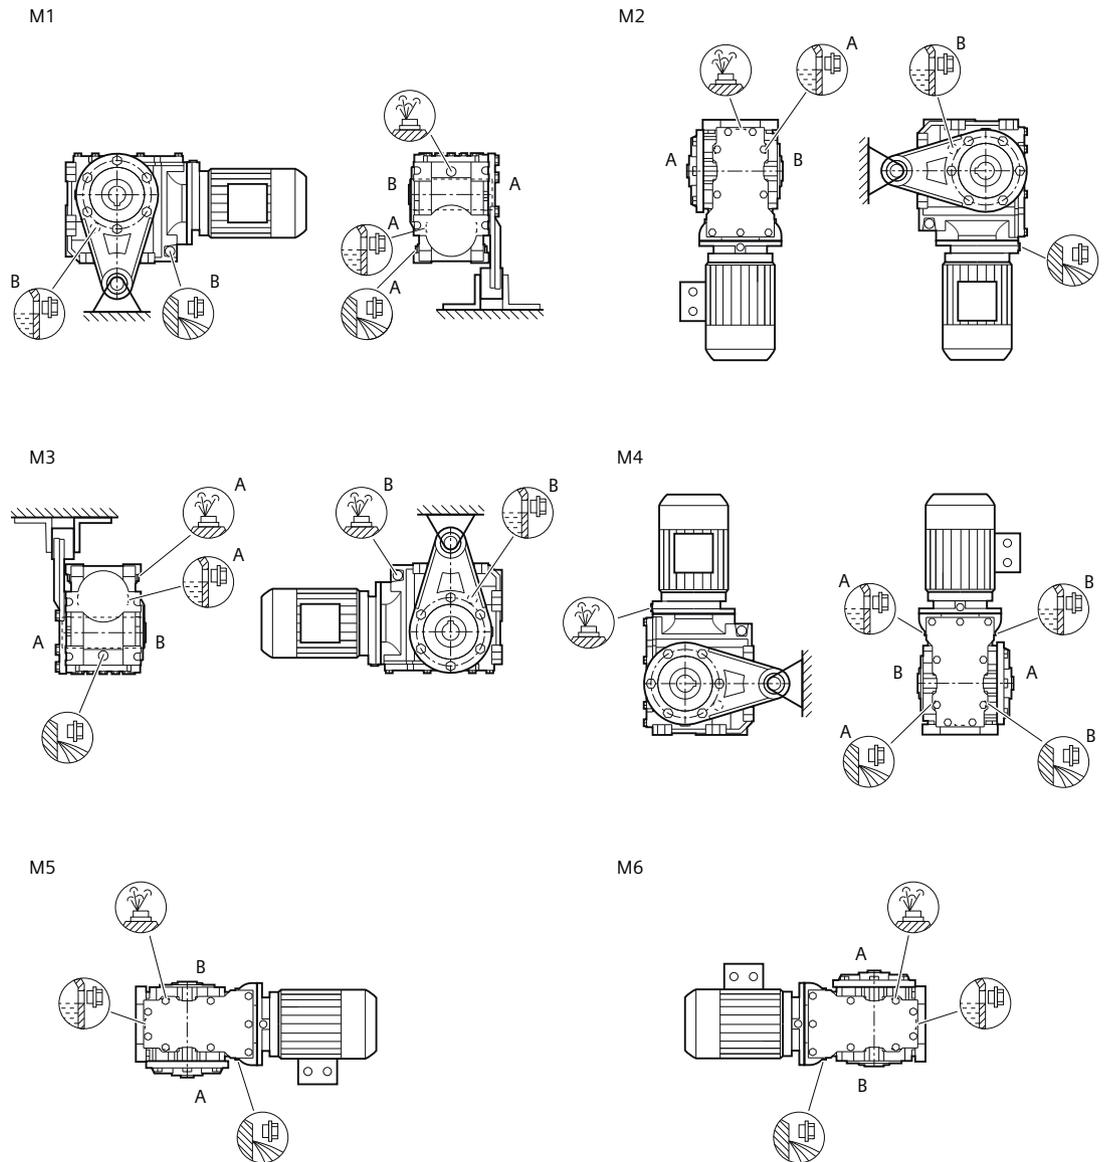


Figure 12-61 Mounting positions for helical worm gearbox CAD shaft-mounted design, size 39A

12.3 Specific data gearbox



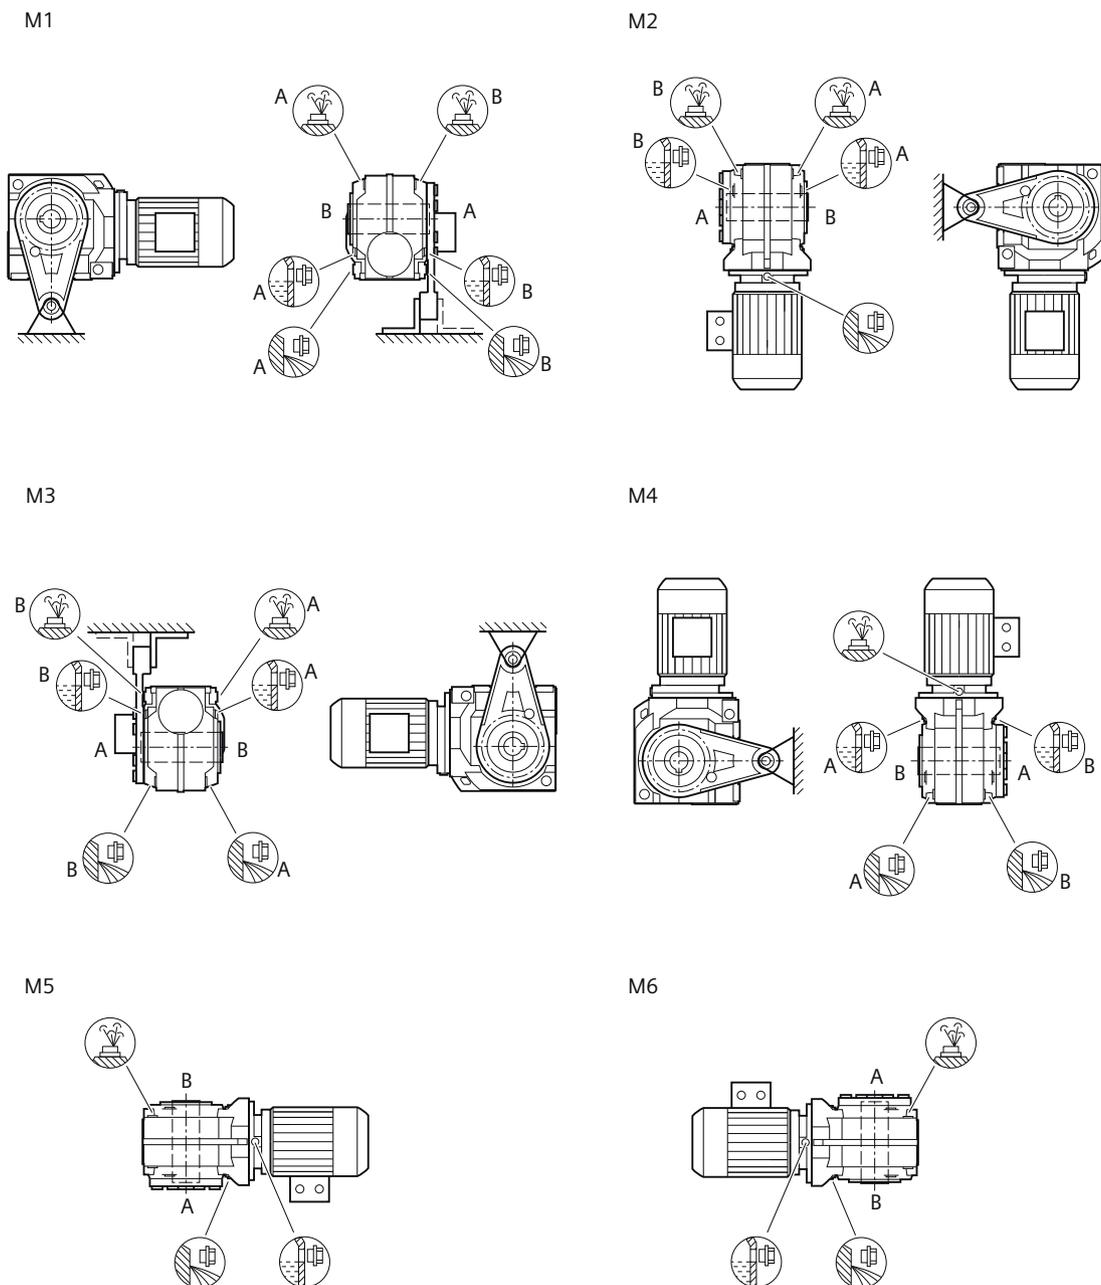


Figure 12-62 Mounting positions for helical worm gearbox CAD shaft-mounted design, sizes 39 - 89


M1

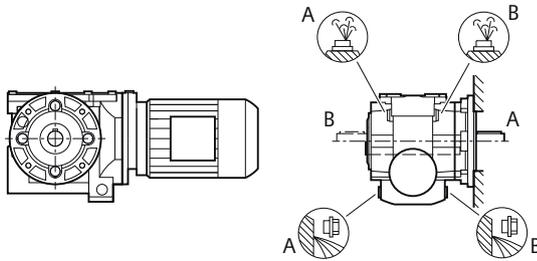


M2

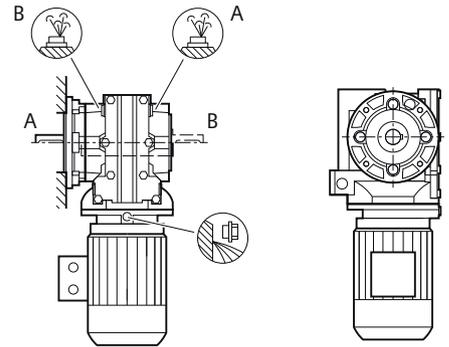


M3

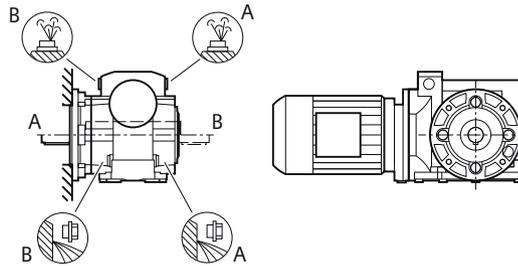

M4

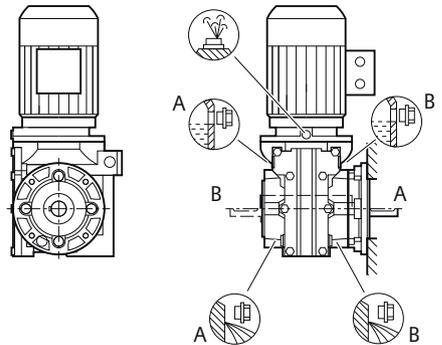

M5

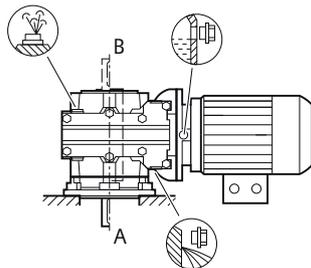

M6

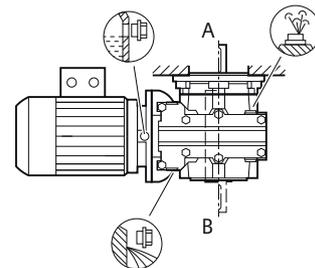


Figure 12-63 Mounting positions for helical worm gearbox CF flange-mounted design and CAZ housing flange, size 29

12.3 Specific data gearbox

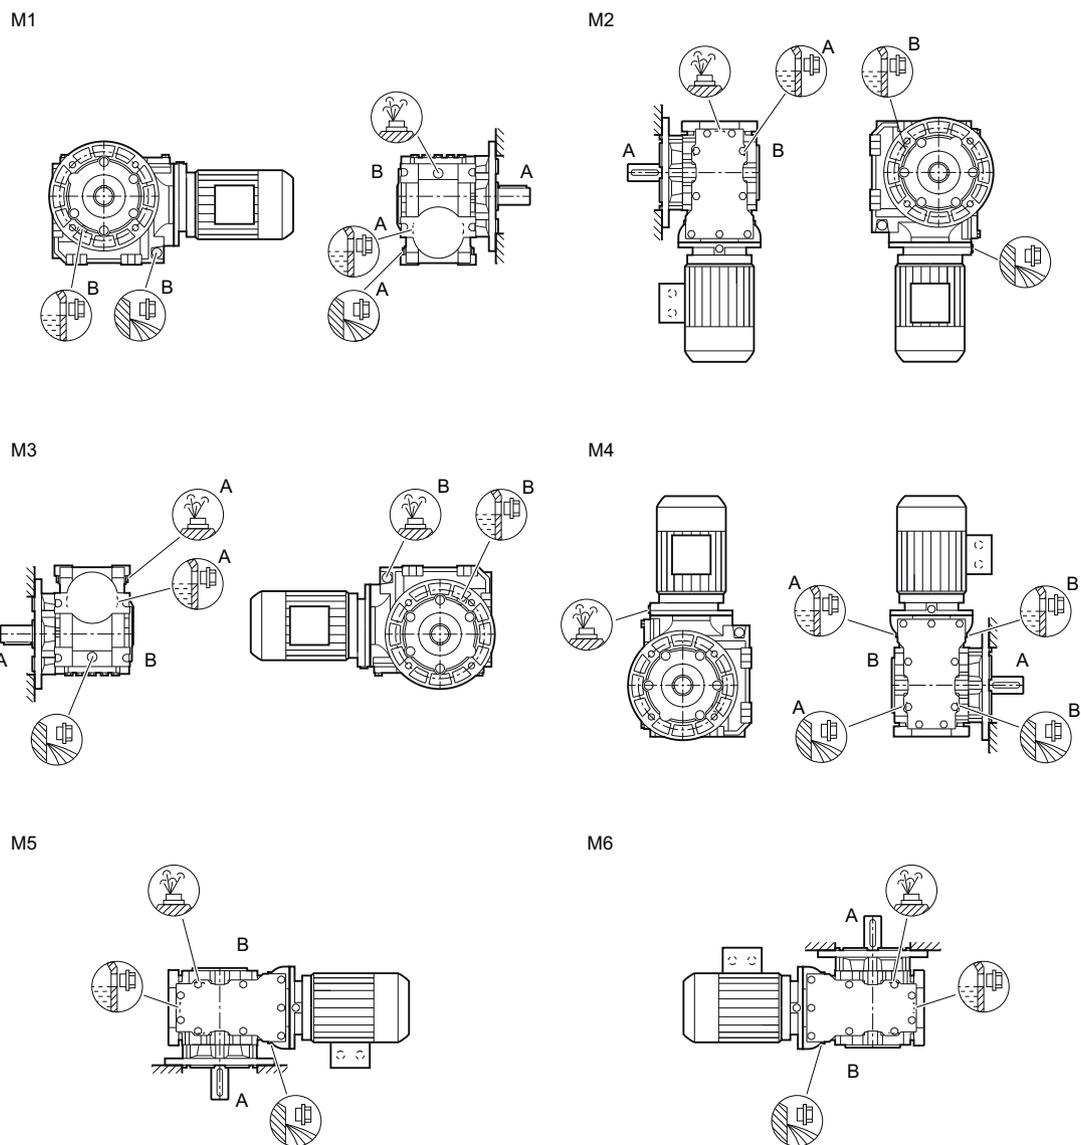


Figure 12-64 Mounting positions for helical worm gearbox CF flange-mounted design and CAZ housing flange, size 39A

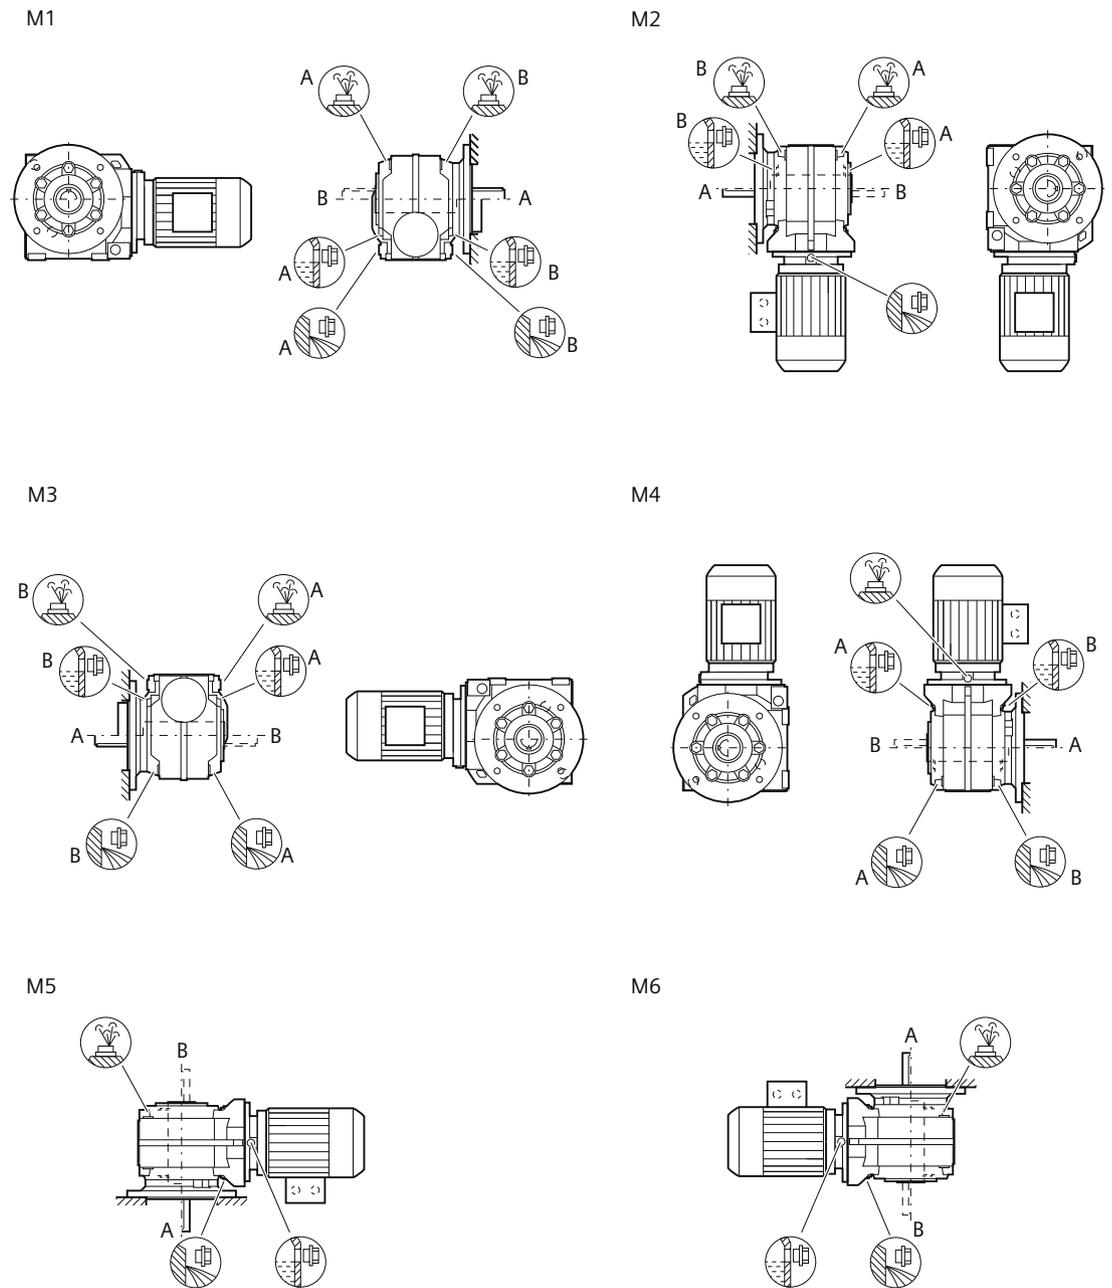


Figure 12-65 Mounting positions for helical worm gearbox CF flange-mounted design and CAZ housing flange, sizes 39 - 89

12.3 Specific data gearbox

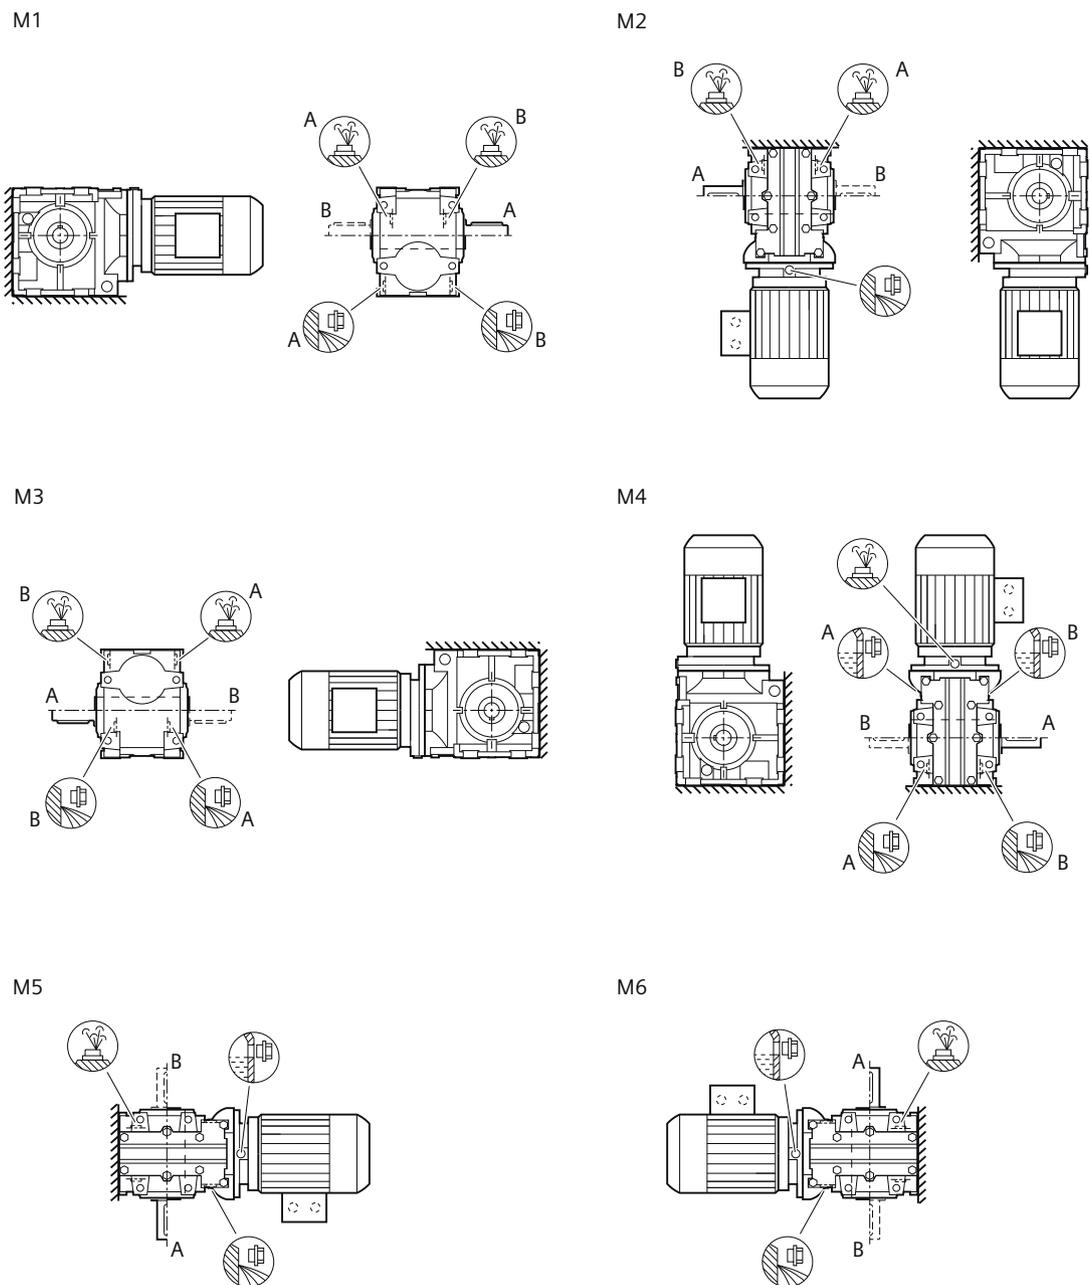


Figure 12-66 Mounting positions for helical worm gearbox C. foot-mounted design, size 29

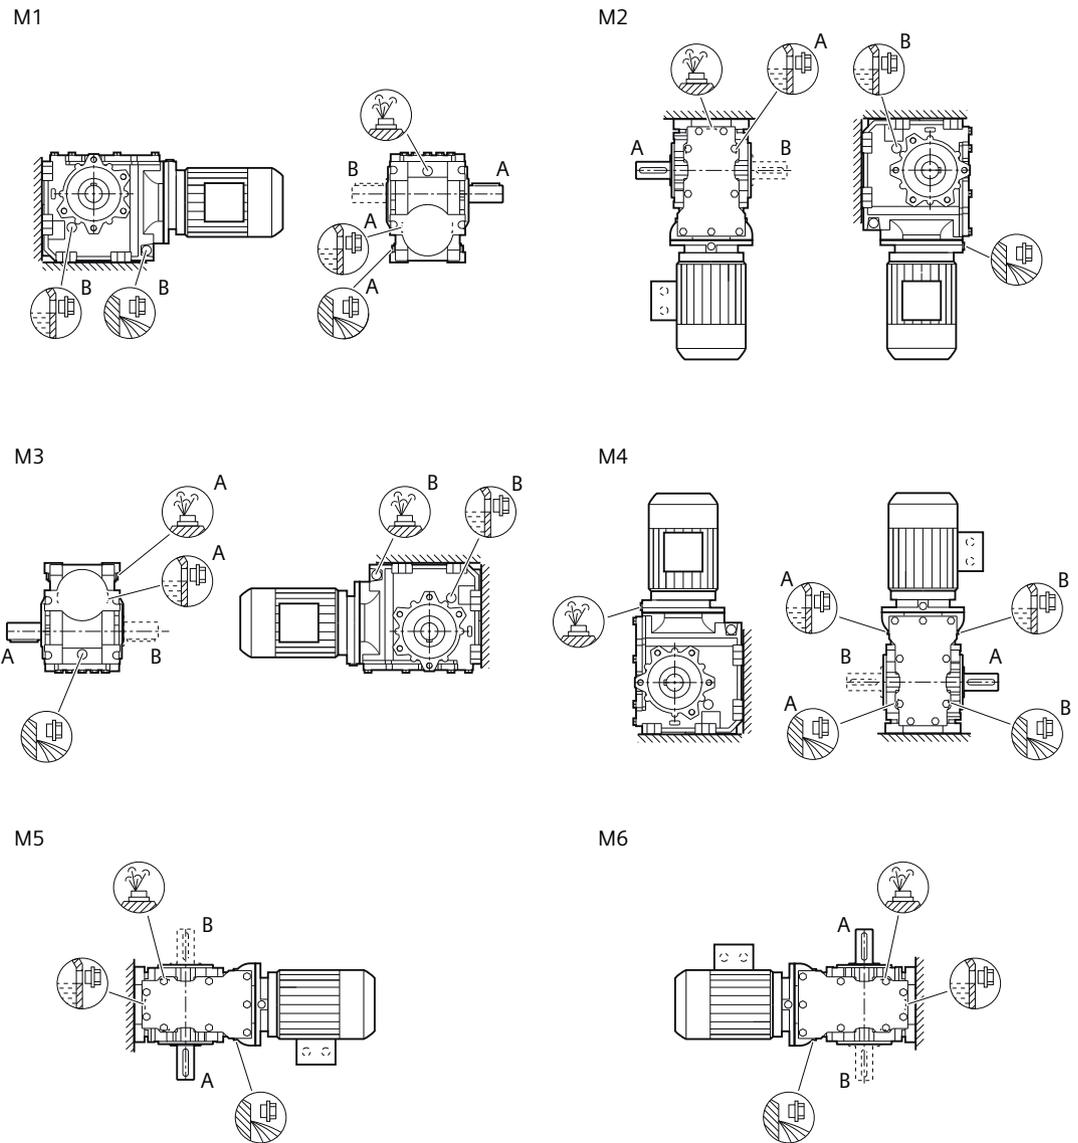


Figure 12-67 Mounting positions for helical worm gearbox C. foot-mounted design, size 39A

12.3 Specific data gearbox

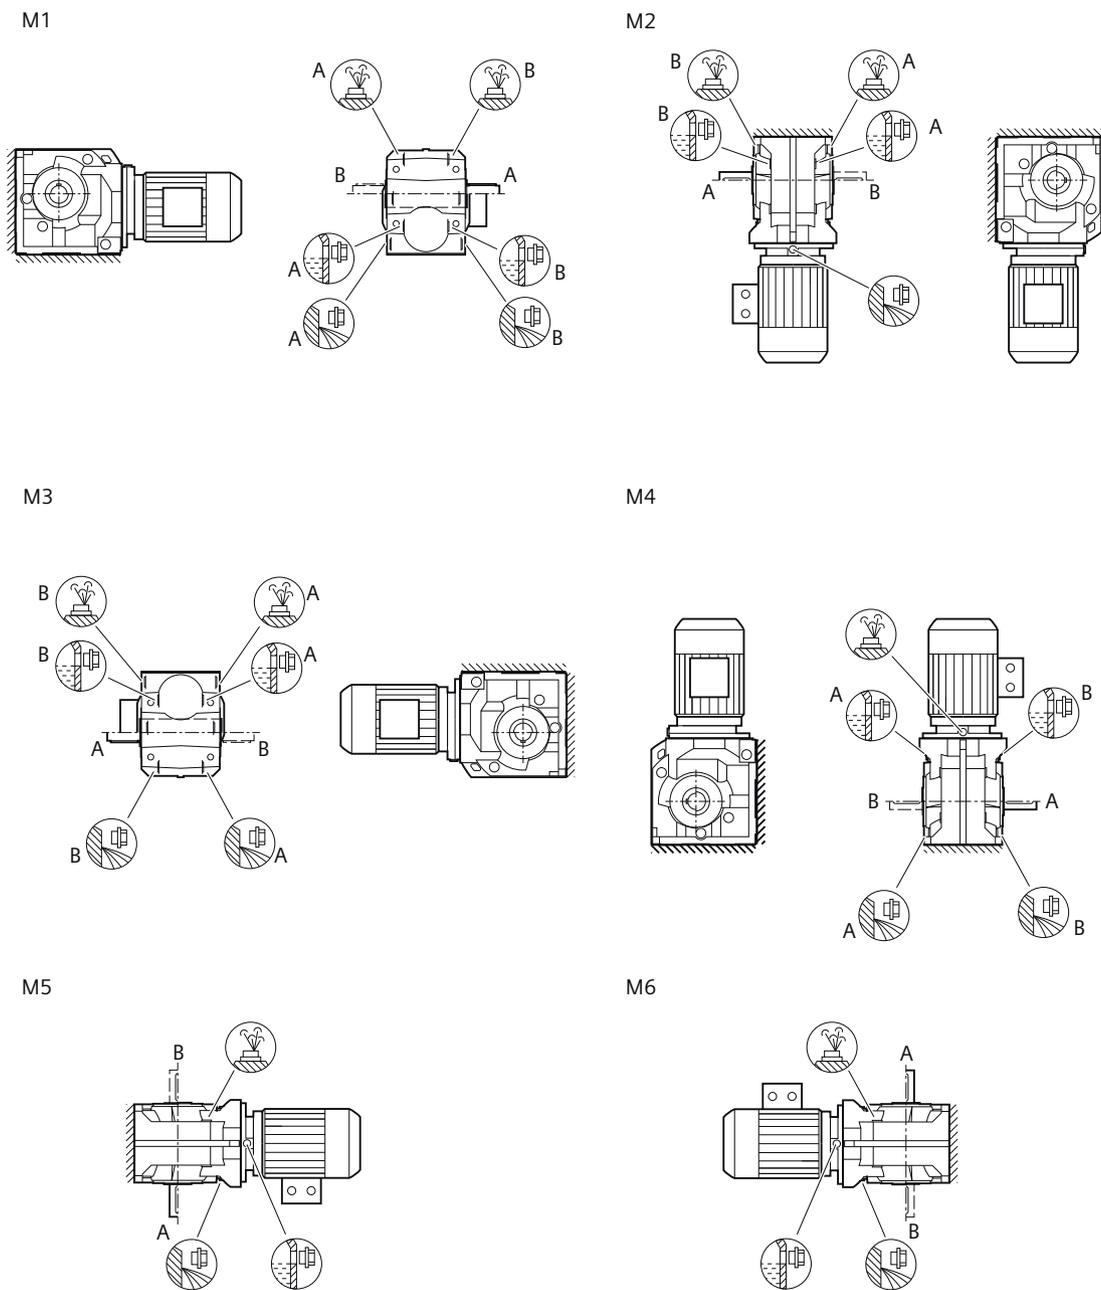


Figure 12-68 Mounting positions for helical worm gearbox C. foot-mounted design, sizes 39 - 89

## 12.3.32 Oil quantities

<b>NOTICE</b>
<b>Damage to the gearbox caused by incorrect oil quantities</b>
The oil quantities listed in the tables are guidance values for changing the oil. They are used, for example, for lubricant storage and procurement.
The precise values depend on the number of stages and transmission ratio of the gearbox.
The specified oil quantities are valid for the standard mounting position.

### Note

#### Gearbox in special mounting position

The gearbox is intended for a specific rotation angle and is delivered with the correct quantity of oil for this purpose.

You will find information regarding oil quantity and type of oil on the rating plate.

### 12.3.32.1 Helical gearbox

Table 12-49 Oil quantities in l for E, EZ, EF, sizes 39 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
E.39	0.2	0.5	0.4	0.7	0.45	0.45
E.49	0.4	1	0.95	1.5	1	0.95
E.69	0.6	1.9	1.6	2.5	1.7	1.7
E.89	0.9	3.7	2.5	4	3	2.9

Table 12-50 Oil quantities in l for D/Z, DB/ZB, DF/ZF, DZ/ZZ, sizes 19 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
D.19	0.15	0.45	0.45	0.45	0.4	0.3
D.29	0.15	0.65	0.45	0.5	0.55	0.4
D.39	0.25	0.9	0.8	0.85	0.8	0.7
D.49	0.55	1.8	1.8	1.7	1.7	1.2
D.59	0.45	1.9	1.9	1.8	1.8	1.2
D.69	0.6	2	2.4	2.3	2.2	1.5
D.79	1	3.5	3.7	3.6	3.4	2.3
D.89	2	6.5	6.2	6	6	4.2
Z.19	0.15	0.5	0.45	0.5	0.4	0.35
Z.29	0.2	0.7	0.45	0.6	0.55	0.3
Z.39	0.3	0.95	0.85	0.95	0.9	0.25

12.3 Specific data gearbox

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
Z.49	0.55	1.9	1.9	1.9	1.8	0.65
Z.59	0.65	2	1.9	1.9	1.9	0.6
Z.69	0.65	2.1	2.6	2.6	2.3	0.85
Z.79	1.1	3.8	3.9	3.9	3.7	1.4
Z.89	2.2	6.9	6.7	6.7	6.6	2.4

12.3.32.2 Parallel shaft gearbox

Table 12-51 Oil quantities in l for FD/Z, FD/ZZ, FD/ZA., FD/ZAF., FD/ZAZ., FD/ZAD., sizes 29 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
FD.29	0.6	0.8	0.35	0.6	0.45	0.45
FD.39	0.95	1.1	0.7	1.2	0.8	0.8
FD.49	2.1	2.3	1.5	2.3	1.5	1.5
FD.69	2.2	2.7	1.6	2.7	1.8	1.8
FD.79	3	3.8	2.7	3.9	2.6	2.7
FD.89	5.6	7.6	5.9	7.8	5.1	5.2
FZ.29	0.6	0.9	0.4	0.7	0.5	0.45
FZ.39	0.95	1.3	0.8	1.4	0.9	0.85
FZ.49	1.6	2.5	1.6	2.5	1.6	1.6
FZ.69	2.2	2.8	1.6	2.9	1.9	1.9
FZ.79	2.8	4.1	2.9	4.2	2.7	2.9
FZ.89	4.9	7.7	5.9	8.4	5.2	5.5

Table 12-52 Oil quantities in l for FD/ZF, sizes 29 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
PDF29	0.6	0.8	0.35	0.6	0.45	0.45
PDF39	1	1.2	0.75	1.3	0.8	0.85
PDF49	2.2	2.3	1.5	2.4	1.6	1.5
PDF69	2.4	2.8	1.6	2.9	1.9	1.9
PDF79	3.1	3.9	2.7	4	2.7	2.6
PDF89	5.8	7.6	5.8	8	5.2	5.2
FZF29	0.6	0.9	0.4	0.7	0.5	0.45
FZF39	1	1.4	0.85	1.6	0.95	0.9
FZF49	1.8	2.4	1.5	2.6	1.6	1.6
FZF69	2.4	2.9	1.6	3.1	2	2
FZF79	2.9	4.2	2.9	4.3	2.9	2.8
FZF89	5.1	7.7	5.8	8.6	5.3	5.4

### 12.3.32.3 Bevel gearbox

Table 12-53 Oil quantities in l for B, sizes 19 - 49

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
B.19	0.15	0.3	0.4	0.45	0.3	0.3
B.29	0.25	0.55	0.7	0.85	0.55	0.5
B.39	0.5	0.95	1.3	1.6	0.95	0.9
B.49	1	1.7	2.4	3.1	1.8	1.5

Table 12-54 Oil quantities in l for K, KA, KAS, KAT, sizes 39 - 109

Type	Mounting position					
	M1	M2	M3	M4	M5-A M6-B	M6-A M5-B
K.39	0.35	0.85	1.1	1.2	0.85	0.9
K.49	0.55	1.4	1.8	1.9	1.5	1.6
K.69	0.75	2	2.5	2.7	2.2	2.2
K.79	1	2.2	2.9	3.4	2.7	2.5
K.89	1.9	4.5	6	6.8	5	5.3
K.109	3	7.2	9.2	10.5	7.1	7.5

Table 12-55 Oil quantities in l for KZ, KAF., KAZ., KAD., sizes 39 - 109

Type	Mounting position					
	M1	M2	M3	M4	M5-A M6-B	M6-A M5-B
K.39	0.4	0.9	1.2	1.3	0.95	0.95
K.49	0.65	1.5	1.9	2.2	1.6	1.6
K.69	0.85	2.1	2.8	3.2	2.4	2.5
K.79	1.1	2.4	3.1	3.7	2.5	2.7
K.89	2.2	4.7	6.2	7.3	5.3	5.6
K.109	3.7	7.4	9	11.7	7.6	8.2

Table 12-56 Oil quantities in l for KF, sizes 39 - 109

Type	Mounting position					
	M1	M2	M3	M4	M5-A M6-B	M6-A M5-B
KF39	0.35	0.9	1.2	1.3	0.95	1
KF49	0.6	1.4	2	2.2	1.6	1.7
KF69	0.85	2	2.8	3.1	2.4	2.4

12.3 Specific data gearbox

Type	Mounting position					
	M1	M2	M3	M4	M5-A M6-B	M6-A M5-B
KF79	1.2	2.3	3.1	3.8	3	2.5
KF89	2.1	4.6	6.5	7.6	5.6	5.5
KF109	3.6	7.4	9.8	11.7	8.1	7.8

12.3.32.4 Helical worm gearbox

Table 12-57 Oil quantities in l for C, CA., CAS, CAT, sizes 29 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
C.29	0.15	0.5	0.6	0.55	0.35	0.4
C.39A	0.15	0.75	0.65	0.65	0.35	0.4
C.49	0.55	1.8	1.7	1.8	1	1.1
C.69	0.75	2.6	2.6	2.9	1.6	1.7
C.89	1.2	4.2	4.8	5	2.8	2.9

Table 12-58 Oil quantities in l for CZ, CAF., CAZ., CAD., sizes 29 - 89


Type	Mounting position					
	M1	M2	M3	M4	M5	M6
C.29	0.15	0.5	0.55	0.5	0.35	0.35
C.39A	0.15	0.75	0.65	0.65	0.35	0.4
C.49	0.6	1.9	1.8	1.9	1.1	1.1
C.69	0.8	2.6	2.6	3	1.6	1.6
C.89	1.4	4.4	5	5.4	3	3

Table 12-59 Oil quantities in l for CF, sizes 29 - 89

Type	Mounting position					
	M1	M2	M3	M4	M5	M6
CF29	0.15	0.5	0.55	0.5	0.35	0.35
CF39A	0.15	0.85	0.75	0.7	0.45	0.4
CF49	0.6	2	1.9	2	1.2	1.2
CF69	0.8	2.6	2.6	3	1.6	1.6
CF89	1.4	4.4	5	5.4	3	3

### 12.3.33 Replacement part lists gearbox

#### 12.3.33.1 Helical gearbox E, sizes 39 - 89

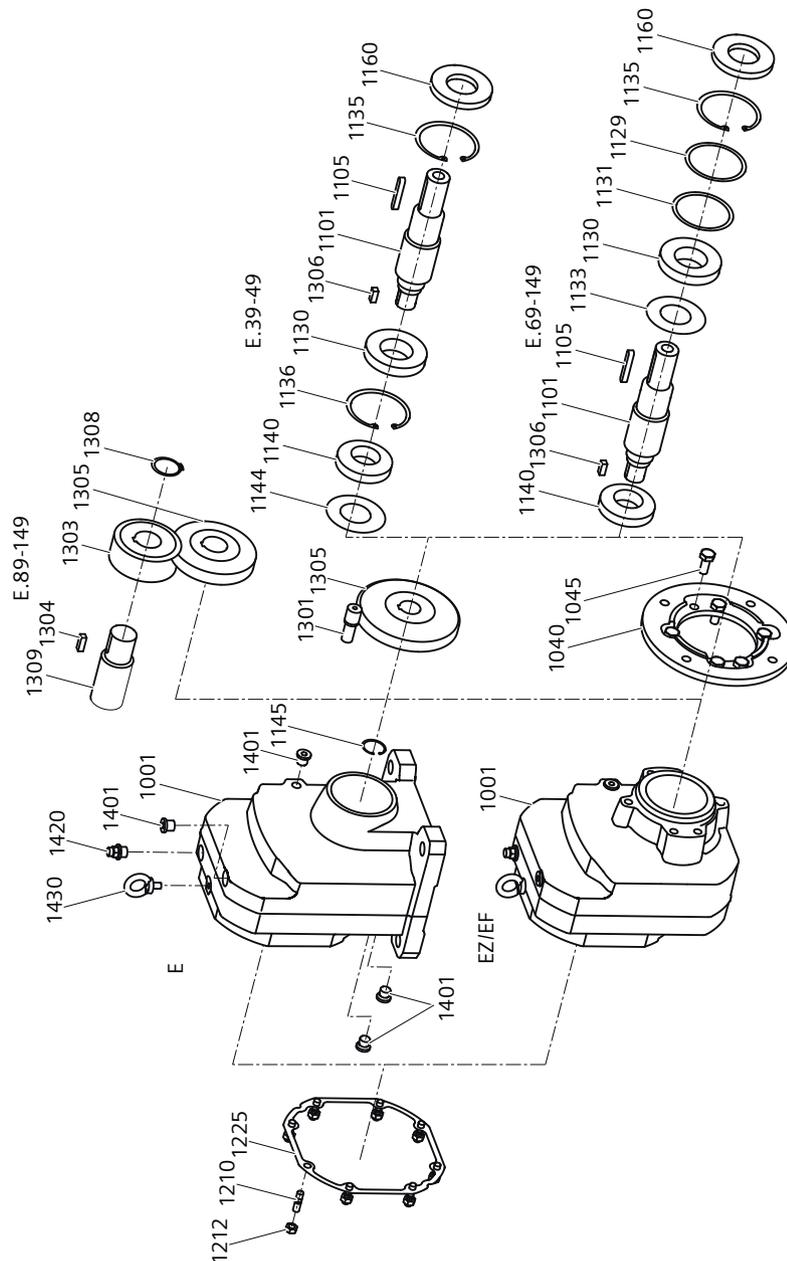

1001	Gearbox housing	1160	Shaft sealing ring
1040	Output flange	1210	Bolt
1045	Bolt	1212	Nut
1101	Output shaft	1225	Seal
1105	Parallel key	1301	Plug-in pinion
1129	Supporting disk	1303	Slip-on pinion

### 12.3 Specific data gearbox

1130	Bearing	1304	Parallel key
1131	Shim	1305	Helical gear
1133	NILOS ring	1306	Parallel key
1135	Locking ring	1308	Locking ring
1136	Locking ring	1309	Seal
1140	Bearing	1401	Screw plug
1144	Supporting disk / shim	1420	Vent filter
1145	Locking ring	1430	Eyebolt

Figure 12-69 Helical gearbox E, sizes 39 - 89

#### 12.3.33.2 Helical gearbox D / Z, sizes 19 - 89


---

##### Note

For gearbox sizes 19 and 29, we recommend that Siemens AG replaces the gearbox if service is required.

Parts subject to wear are available on request.

---

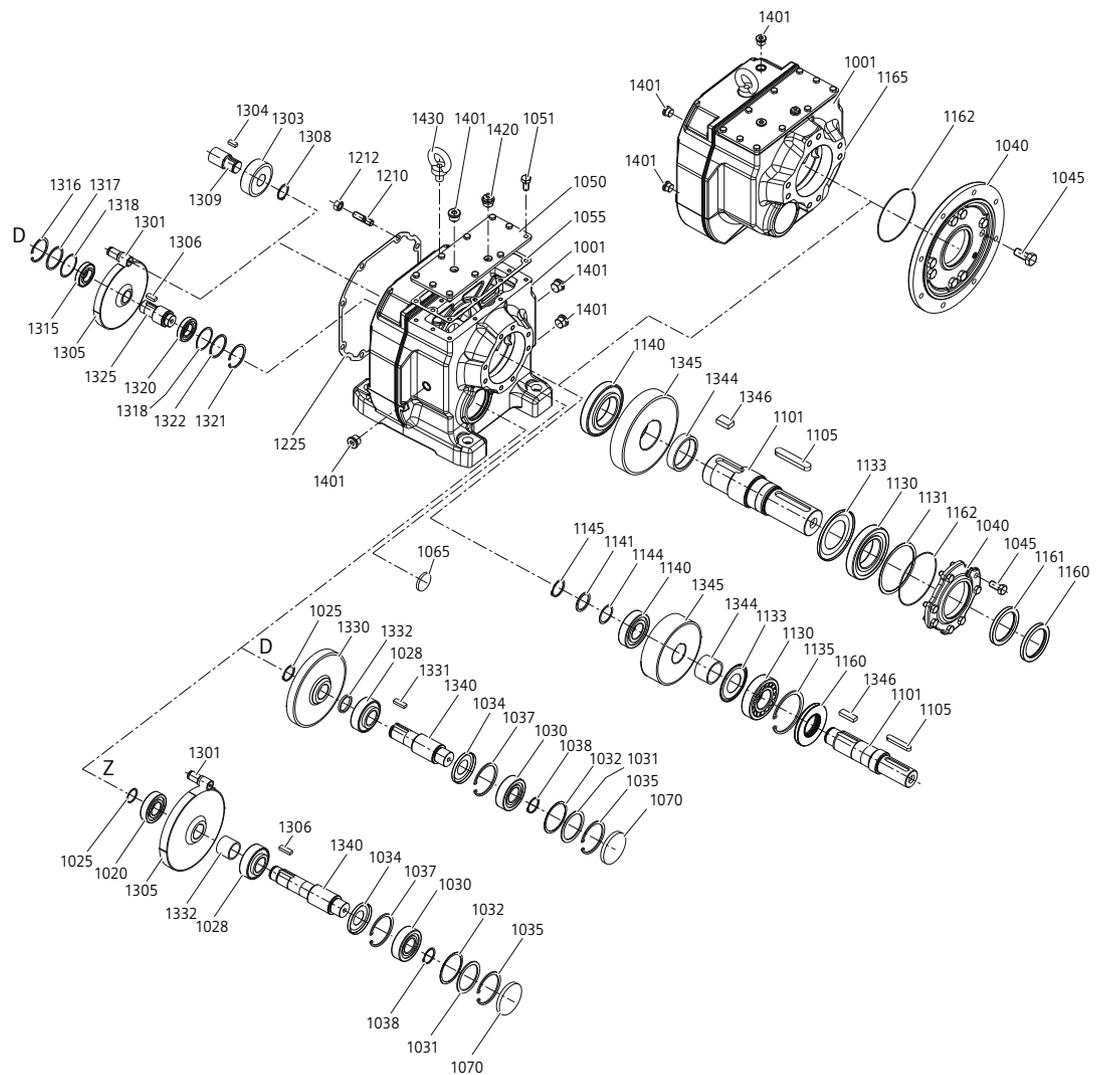

- |      |                 |      |                     |
|------|-----------------|------|---------------------|
| 1001 | Gearbox housing | 1309 | Seal                |
| 1020 | Bearing         | 1315 | Bearing             |
| 1025 | Locking ring    | 1316 | Locking ring        |
| 1028 | Bearing         | 1317 | Supporting disk     |
| 1030 | Bearing         | 1318 | Supporting disk     |
| 1031 | Supporting disk | 1320 | Bearing             |
| 1032 | Shim            | 1321 | Locking ring        |
| 1034 | NILOS ring      | 1322 | Supporting disk     |
| 1035 | Locking ring    | 1325 | Pinion shaft        |
| 1037 | Locking ring    | 1330 | Helical gear        |
| 1038 | Locking ring    | 1331 | Parallel key        |
| 1040 | Output flange   | 1332 | Bush / locking ring |
| 1045 | Bolt            | 1340 | Pinion shaft        |
| 1050 | Housing cover   | 1344 | Spacer / bush       |
| 1051 | Bolt            | 1345 | Helical gear        |

### 12.3 Specific data gearbox

1055	Seal	1346	Parallel key
1065	Sealing cap	1401	Screw plug
1070	Sealing cap	1420	Vent filter
1101	Output shaft	1430	Eyebolt
1105	Parallel key		
1130	Bearing		
1131	Shim		
1133	NILOS ring		
1135	Locking ring		
1140	Bearing		
1141	Supporting disk / shim		
1144	Supporting disk / shim		
1145	Locking ring		
1160	Shaft sealing ring		
1161	Shaft sealing ring		
1162	O ring		
1165	Seal		
1210	Bolt		
1212	Nut		
1225	Seal		
1301	Plug-in pinion		
1303	Slip-on pinion		
1304	Parallel key		
1305	Helical gear		
1306	Parallel key		
1308	Locking ring		

Figure 12-70 Helical gearbox D / Z, sizes 19 - 89


#### 12.3.33.3 Parallel shaft gearbox F, sizes 29 - 89

---

##### Note

For gearbox size 29, we recommend that Siemens AG replaces the gearbox if service is required. Parts subject to wear are available on request.

---

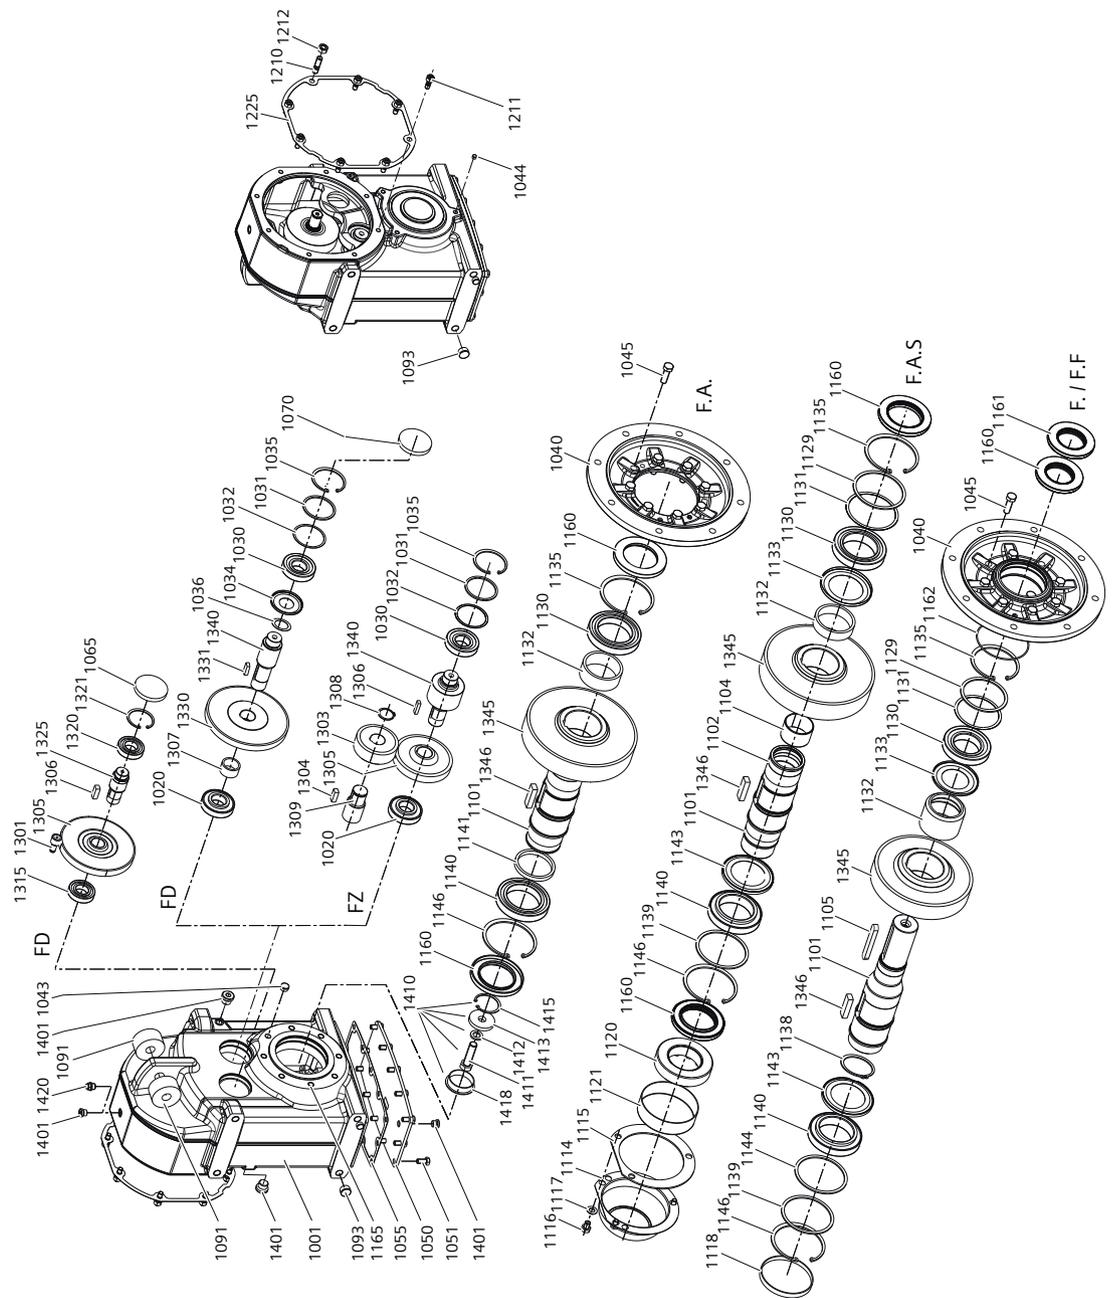

- |      |                 |      |                        |
|------|-----------------|------|------------------------|
| 1001 | Gearbox housing | 1143 | NILOS ring             |
| 1020 | Bearing         | 1144 | Supporting disk / shim |
| 1030 | Bearing         | 1146 | Locking ring           |
| 1031 | Supporting disk | 1160 | Shaft sealing ring     |
| 1032 | Shim            | 1161 | Shaft sealing ring     |
| 1034 | NILOS ring      | 1162 | O ring                 |
| 1035 | Locking ring    | 1165 | Seal                   |
| 1036 | Shim            | 1210 | Bolt                   |
| 1040 | Output flange   | 1211 | Screw lock             |

### 12.3 Specific data gearbox

1043	Plug	1212	Nut
1044	Plug	1225	Seal
1045	Bolt	1301	Plug-in pinion
1050	Housing cover	1303	Slip-on pinion
1051	Bolt	1304	Parallel key
1055	Seal	1305	Helical gear
1065	Sealing cap	1306	Parallel key
1070	Sealing cap	1307	Spacer / bush
1091	Rubber bush	1308	Locking ring
1093	Plug	1309	Seal
1101	Output shaft	1315	Bearing
1102	Bushing	1320	Bearing
1104	Seal	1321	Locking ring
1105	Parallel key	1325	Pinion shaft
1114	Cover NDE	1330	Helical gear
1115	Seal	1331	Parallel key
1116	Bolt	1340	Pinion shaft
1117	Screw lock	1345	Helical gear
1118	Plug / sealing cap	1346	Parallel key
1120	Shrink disk	1401	Screw plug
1121	Protective cap	1410	Mounting accessories
1129	Supporting disk	1411	Bolt
1130	Bearing	1412	Locking ring
1131	Shim	1413	Disk
1132	Bushing	1415	Locking ring
1133	NILOS ring	1418	Sealing cap
1135	Locking ring	1420	Vent filter
1138	Locking ring		
1139	Supporting disk		
1140	Bearing		
1141	Supporting disk / shim		

Figure 12-71 Parallel shaft gearbox F, sizes 29 - 89

#### 12.3.33.4 Bevel gearbox B, sizes 19 - 49


---

##### Note

For gearbox sizes 19 and 29, Siemens recommends replacement of the gearbox if service is required.

Parts subject to wear are available on request.

---

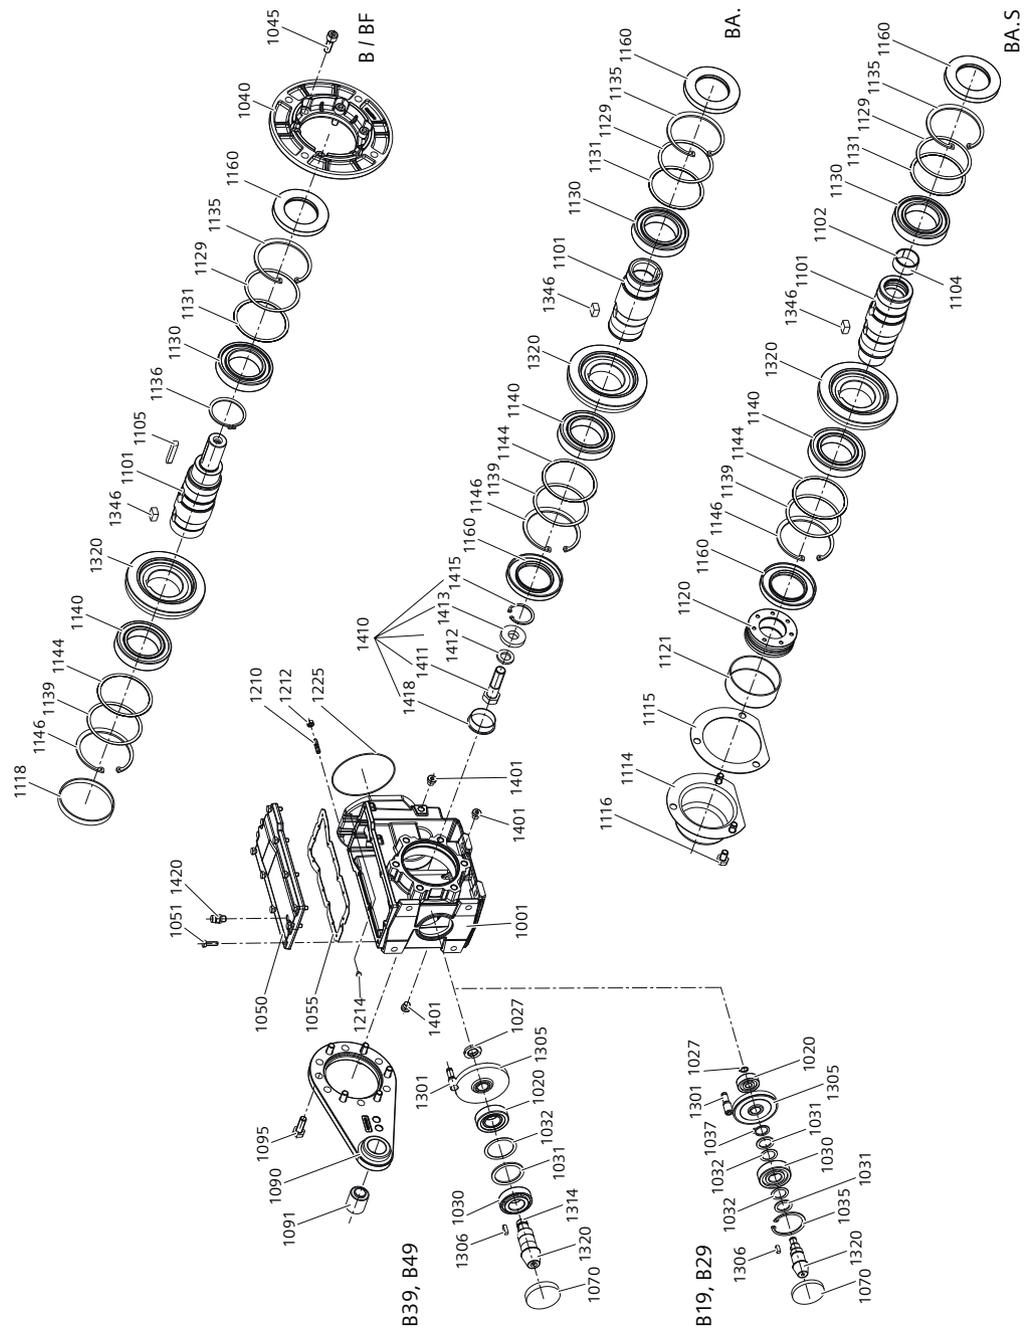


- |      |                    |      |                      |
|------|--------------------|------|----------------------|
| 1001 | Gearbox housing    | 1225 | Seal                 |
| 1020 | Bearing            | 1301 | Plug-in pinion       |
| 1027 | Locking ring / nut | 1305 | Helical              |
| 1030 | Bearing            | 1306 | Parallel key         |
| 1031 | Supporting disk    | 1314 | Screw lock           |
| 1032 | Shim               | 1320 | Bevel gear pair      |
| 1035 | Locking ring       | 1346 | Parallel key         |
| 1037 | Locking ring       | 1401 | Screw plug           |
| 1040 | Output flange      | 1410 | Mounting accessories |

### 12.3 Specific data gearbox

1045	Bolt	1411	Bolt
1050	Housing cover	1412	Locking ring
1051	Bolt	1413	Disk
1055	Seal	1415	Locking ring
1070	Sealing cap	1418	Sealing cap
1090	Torque arm	1420	Vent filter
1091	Rubber bush		
1095	Bolt		
1101	Output shaft		
1102	Bushing		
1104	Seal		
1105	Parallel key		
1114	Cover NDE		
1115	Seal		
1116	Bolt		
1118	Plug / sealing cap		
1120	Shrink disk		
1121	Protective cap		
1129	Supporting disk		
1130	Bearing		
1131	Shim		
1135	Locking ring		
1136	Locking ring		
1139	Supporting disk		
1140	Bearing		
1144	Support ring / shim		
1146	Locking ring		
1160	Shaft sealing ring		
1210	Bolt		
1212	Nut		
1214	Plug		

Figure 12-72 Bevel gearbox B, sizes 19 - 49

12.3.33.5 Bevel gearbox K, frame sizes 39 - 109

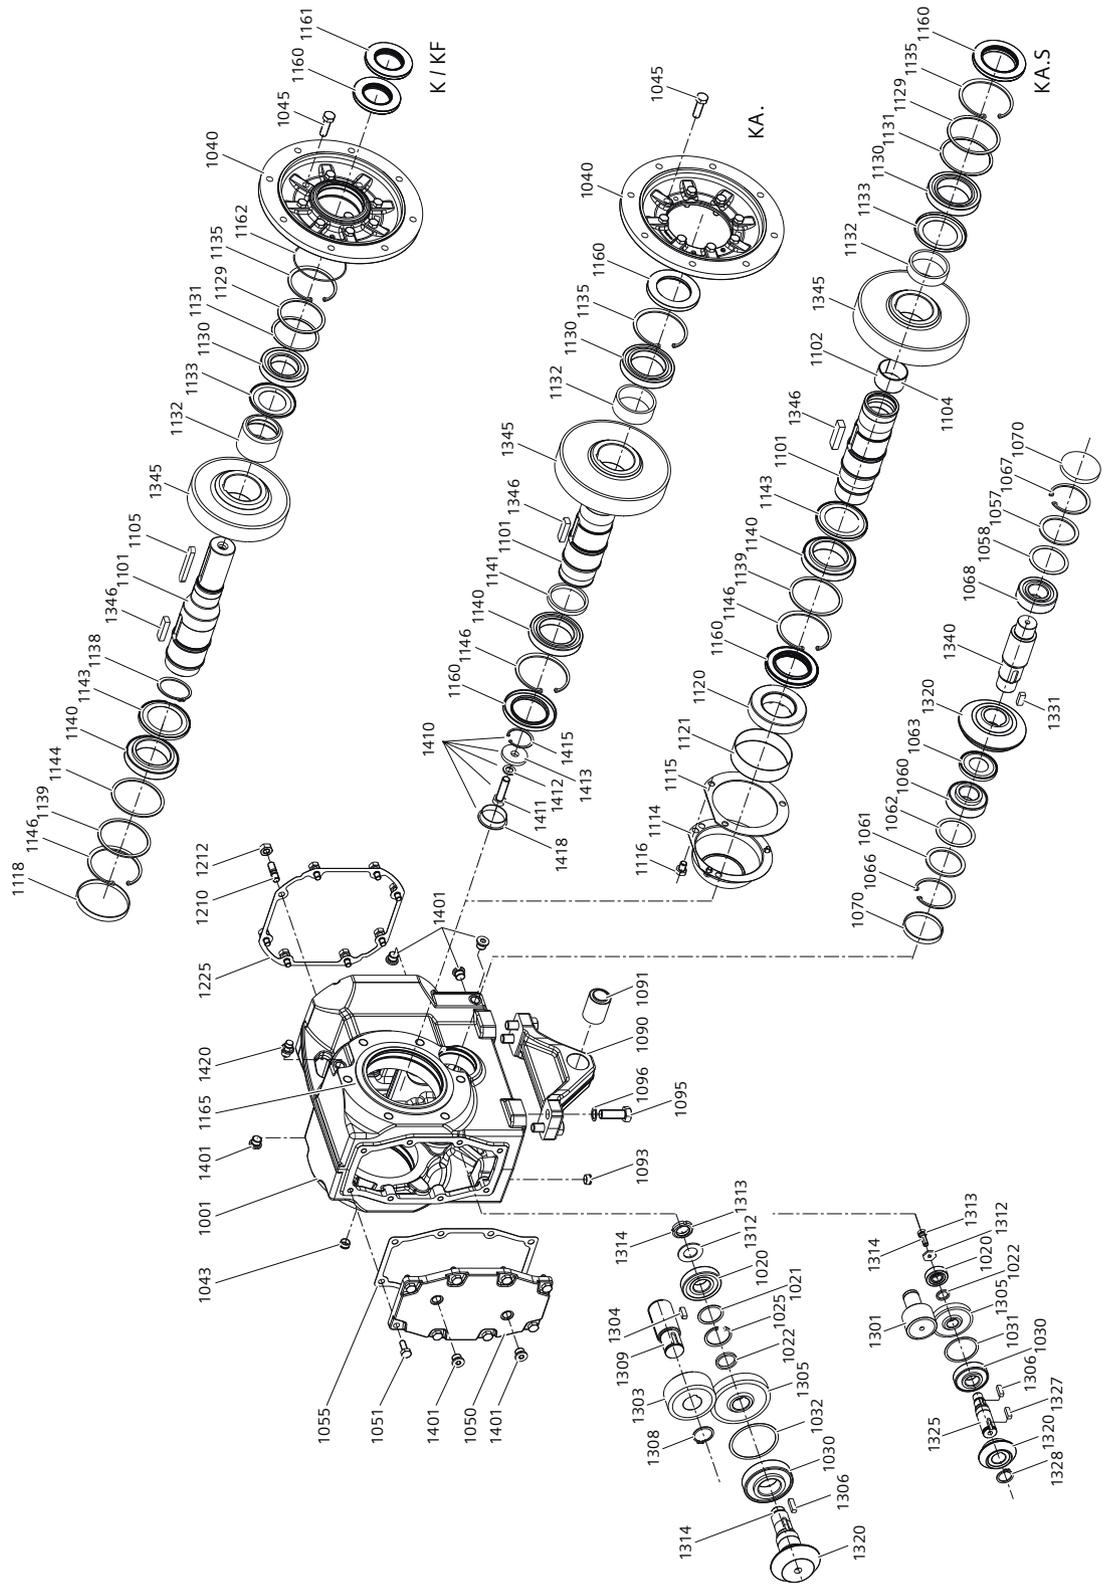

### 12.3 Specific data gearbox

1001	Gearbox housing	1133	NILOS ring
1020	Bearing	1135	Locking ring
1021	Supporting disk / shim	1138	Locking ring
1022	Supporting disk / shim	1139	Supporting disk
1025	Locking ring	1140	Bearing
1030	Bearing	1141	Supporting disk / shim
1031	Supporting disk	1143	NILOS ring
1032	Shim	1144	Supporting disk/shim
1040	Output flange	1146	Locking ring
1043	Plug	1160	Shaft sealing ring
1045	Bolt	1161	Shaft sealing ring
1050	Housing cover	1162	O ring
1051	Bolt	1165	Seal
1055	Seal	1210	Bolt
1057	Supporting disk	1212	Nut
1058	Shim	1225	Seal
1060	Tapered roller bearing	1301	Plug-in pinion
1061	Supporting disk	1303	Slip-on pinion
1062	Shim	1304	Fitted key
1063	NILOS ring	1305	Helical gear
1066	Locking ring	1306	Fitted key
1067	Locking ring	1308	Locking ring
1068	Tapered roller bearing	1309	Seal
1070	Sealing cap	1312	Disk
1090	Torque arm	1313	Bolt/nut
1091	Rubber bush	1314	Screw lock
1093	Plug	1320	Bevel gear pair
1095	Bolt	1325	Pinion shaft
1096	Screw lock	1327	Fitted key
1101	Output shaft	1328	Locking ring
1102	Bushing	1331	Fitted key
1104	Seal	1340	Pinion shaft
1105	Fitted key	1345	Helical gear
1114	Cover NDE	1346	Fitted key
1115	Seal	1401	Screw plug
1116	Bolt	1410	Mounting accessories
1118	Plug / sealing cap	1411	Bolt
1120	Shrink disk	1412	Locking ring
1121	Protective cap	1413	Disk
1129	Supporting disk	1415	Locking ring
1130	Bearing	1418	Sealing cap

1131 Shim  
1132 Supporting disk / shim  
Figure 12-73 Bevel gearbox K, frame sizes 39 - 109  
1420 Vent filter

### 12.3.33.6 Helical worm gearbox C, sizes 29 - 89

---


**Note**

For gearbox size 29, Siemens recommends replacement of the gearbox if service is required.

Parts subject to wear are available on request.

---

12.3 Specific data gearbox

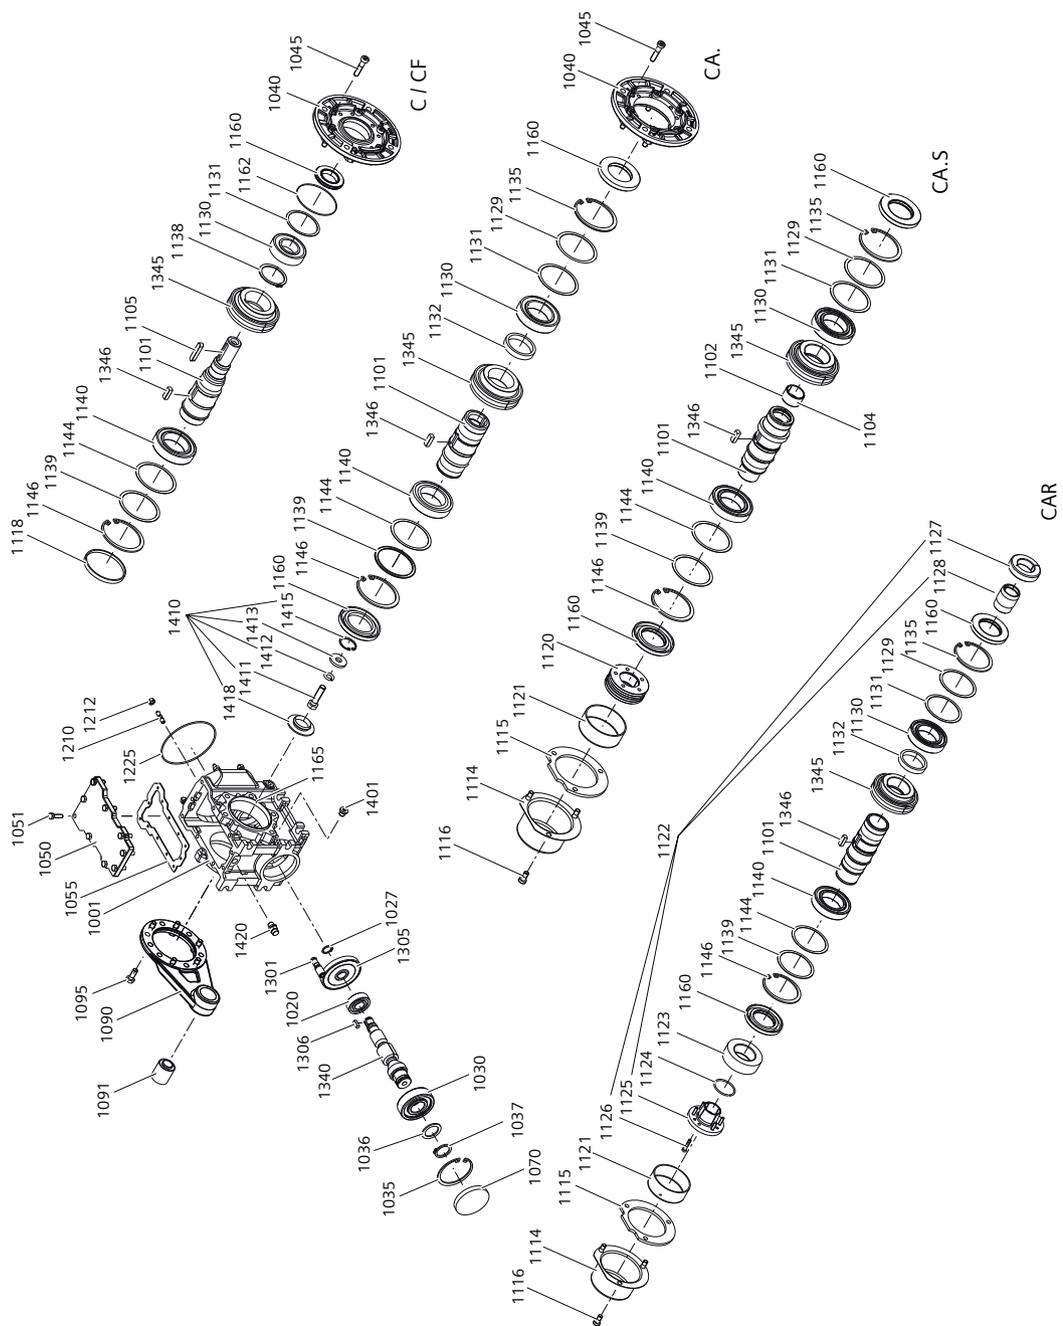


- |      |                     |      |                |
|------|---------------------|------|----------------|
| 1001 | Gearbox housing     | 1210 | Screw          |
| 1020 | Bearing             | 1212 | Nut            |
| 1025 | Locking ring        | 1225 | Seal           |
| 1027 | Locking ring        | 1301 | Plug-in pinion |
| 1030 | Bearing             | 1305 | Helical        |
| 1035 | Locking ring        | 1306 | Parallel key   |
| 1036 | Support ring / shim | 1340 | Pinion shaft   |
| 1037 | Locking ring        | 1345 | Helical        |
| 1040 | Output flange       | 1346 | Parallel key   |

1045	Screw	1401	Screw plug
1050	Housing cover	1410	Mounting accessories
1051	Screw	1411	Screw
1055	Seal	1412	Locking ring
1070	Sealing cap	1413	Disk
1090	Torque arm	1415	Locking ring
1091	Rubber bush	1418	Sealing cap
1095	Screw	1420	Vent filter
1101	Output shaft		
1102	Bushing		
1104	Seal		
1105	Parallel key		
1114	Cover NDE		
1115	Seal		
1116	Screw		
1118	Plug / sealing cap		
1120	Shrink disk		
1121	Protective cap		
1129	Supporting disk		
1130	Bearing		
1131	Shim		
1132	Support ring / shim		
1135	Locking ring		
1138	Locking ring		
1139	Supporting disk		
1140	Bearing		
1144	Shim		
1146	Locking ring		
1160	Shaft sealing ring		
1162	O ring		
1165	Seal		

Figure 12-74 Helical worm gearbox C sizes 29 - 89

12.3.33.7 SIMOLOC assembly system, sizes 29 - 89

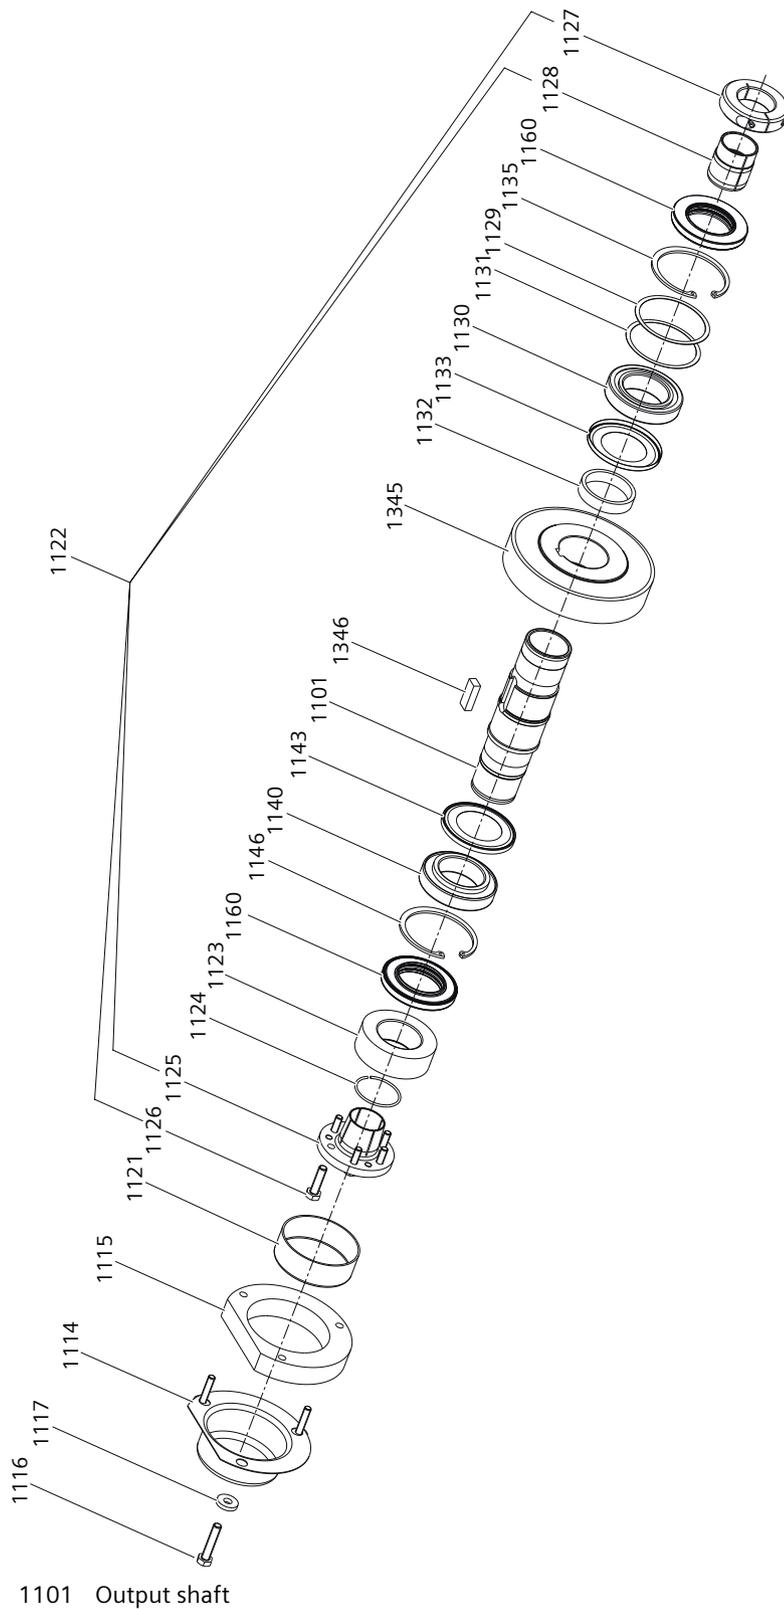

- 1114 Cover NDE
- 1115 Seal
- 1116 Bolt
- 1117 Screw lock
- 1121 Protective cap
- 1122 SIMOLOC mounting kit
- 1123 Thrust collar
- 1124 Snap ring
- 1125 Tapered bushing
- 1126 Bolt
- 1127 Clamping ring
- 1128 Bushing
- 1129 Supporting disk
- 1130 Bearing
- 1131 Shim
- 1132 Bushing
- 1133 NILOS ring
- 1135 Locking ring
- 1140 Bearing
- 1143 NILOS ring
- 1146 Locking ring
- 1160 Shaft sealing ring
- 1345 Helical
- 1346 Parallel key

Figure 12-75 SIMOLOC assembly system, sizes 29 - 89

*12.3 Specific data gearbox*

## Appendix

### A.1 Interconnecting signals in the converter


#### A.1.1 Fundamentals

The following functions are implemented in the converter:

- Open-loop and closed-loop control functions
- Communication functions
- Diagnosis and operating functions

Every function comprises one or several blocks that are interconnected with one another.

#### Example of a block: Motorized potentiometer (MOP)

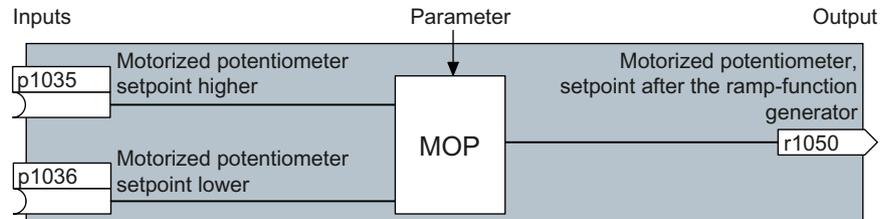


Most of the blocks can be adapted to specific applications using parameters.

You cannot change the signal interconnection within the block. However, the interconnection between blocks can be changed by interconnecting the inputs of a block with the appropriate outputs of another block.

The signal interconnection of the blocks is realized, contrary to electric circuitry, not using cables, but in the software.


#### Example: Signal interconnection of two blocks for digital input 0

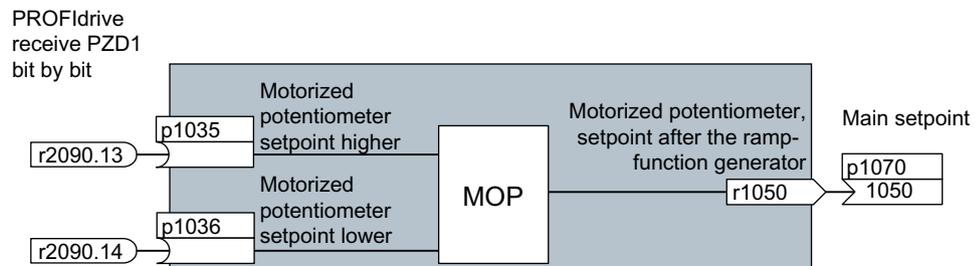

## Binectors and connectors

Connectors and binectors are used to exchange signals between the individual blocks:

- Connectors are used to interconnect "analog" signals (e.g. MOP output speed)
- Binectors are used to interconnect digital signals (e.g. "Enable MOP up" command)

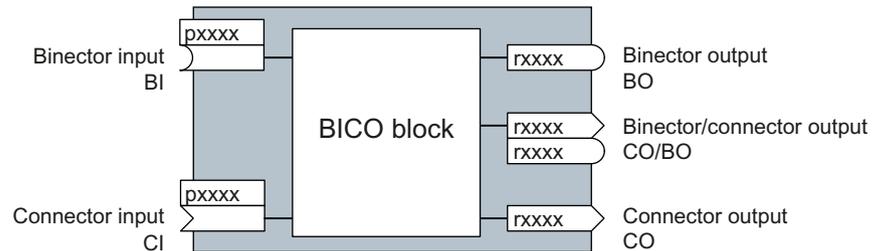

Binector/connector outputs (CO/BO) are parameters that combine more than one binector output in a single word (e.g. r0052 CO/BO: status word 1). Each bit in the word represents a digital (binary) signal. This summary reduces the number of parameters and simplifies parameter assignment.

Binector or connector outputs (CO, BO or CO/BO) can be used more than once.

## Interconnecting signals

### When must you interconnect signals in the converter?

If you change the signal interconnection in the converter, you can adapt the converter to a wide range of requirements. This does not necessarily have to involve highly complex functions.

Example 1: Assign a different function to a digital input.

Example 2: Switch the speed setpoint from the fixed speed to the analog input.

### Principle when connecting BICO blocks using BICO technology

When interconnecting the signal, the following principle applies: **Where does the signal come from?**

An interconnection between two BICO blocks consists of a connector or a binector and a BICO parameter. The input of a block must be assigned the output of a different block: In the BICO parameters, enter the parameter numbers of the connector/binector that should supply its output signal to the BICO parameter.

### How much care is required when you change the signal interconnection?

Note which changes you make. A subsequent analysis of the set signal interconnections is possible only by evaluating the parameter list.

### Where can you find additional information?

- All the binectors and connectors are located in the parameter list in the List Manual.
- The function diagrams in the List Manual provide a complete overview of the factory setting for the signal interconnections and the setting options.


## A.1.2 Application example

### Shift the control logic into the converter

It is only permissible that a conveyor system starts when two signals are present simultaneously. These could be the following signals, for example:

- The oil pump is running (the required pressure level is not reached, however, until after 5 seconds).
- The protective door is closed.

To implement this task, you must insert free function blocks between digital input 0 and the command to switch on the motor (ON/OFF1).

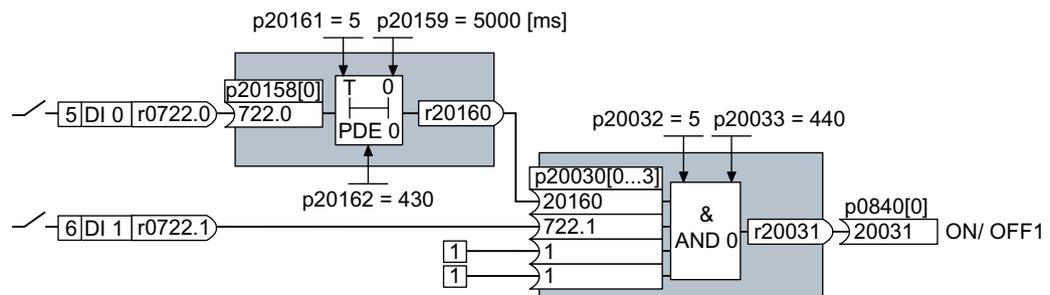


The signal of digital input 0 (DI 0) is fed through a time block (PDE 0) and is interconnected with the input of a logic block (AND 0). The signal of digital input 1 (DI 1) is interconnected to the second input of the logic block. The logic block output issues the ON/OFF1 command to switch on the motor.

### Setting the control logic

Parameter	Description
p20161 = 5	The time block is enabled by assigning to runtime group 5 (time slice of 128 ms)
p20162 = 430	Run sequence of the time block within runtime group 5 (processing before the AND logic block)
p20032 = 5	The AND logic block is enabled by assigning to runtime group 5 (time slice of 128 ms)
p20033 = 440	Run sequence of the AND logic block within runtime group 5 (processing after the time block)
p20159 = 5000.00	Setting the delay time [ms] of the time module: 5 seconds
p20158 = 722.0	Connect the status of DI 0 to the input of the time block r0722.0 = Parameter that displays the status of digital input 0.
p20030[0] = 20160	Interconnecting the time block to the 1st AND input
p20030[1] = 722.1	Interconnecting the status of DI 1 to the 2nd AND input r0722.1 = Parameter that displays the status of digital input 1.
p0840 = 20031	Interconnect the AND output to ON/OFF1

**Explanation of the application example using the ON/OFF1 command**

Parameter p0840[0] is the input of the "ON/OFF1" block of the converter. Parameter r20031 is the output of the AND block. To interconnect ON/OFF1 with the output of the AND block, set p0840 = 20031.

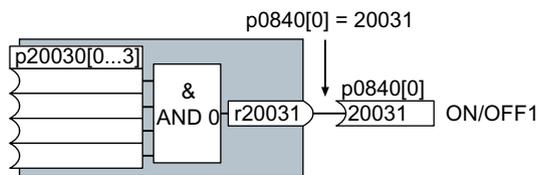**A.2 Acceptance tests for the safety functions****A.2.1 Recommended acceptance test****Note**

The "Startdrive Advanced" commissioning tool (requires an appropriate license) includes a wizard for the acceptance test of the safety functions integrated in the drive. For more information, see Chapter "Acceptance - completion of commissioning (Page 256)".

The following descriptions for the acceptance test are recommendations that illustrate the principle of acceptance. You may deviate from these recommendations if you check the following once you have completed commissioning:

- Correct assignment of the interfaces of each converter with the safety function:
  - Fail-safe inputs
  - PROFIsafe address
- Correct setting of the STO safety function.

**Note**


Perform the acceptance test with the maximum possible velocity and acceleration in order to test the expected maximum braking distances and braking times.

**Note****Non-critical alarms**

The following alarms are issued following each system ramp-up and are not critical for acceptance:

- A01697
- A01796

### A.2.2 Acceptance test STO (basic functions)

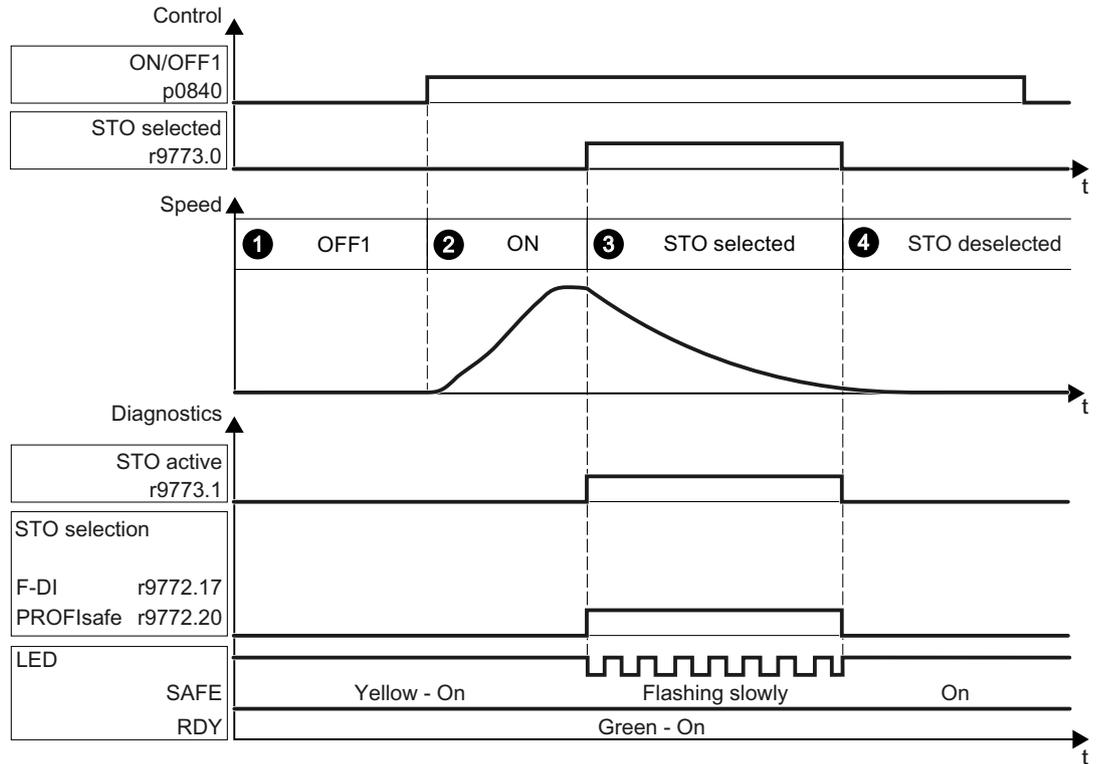

#### Procedure

To perform an acceptance test of the STO function as part of the basic functions, proceed as follows:

		Status
1.	<b>The converter is ready</b>	
	<ul style="list-style-type: none"> <li>The converter signals neither faults nor alarms of the safety functions (r0945[0...7], r2122[0...7]).</li> <li>STO is not active (r9773.1 = 0).</li> </ul>	
2.	<b>Switch on motor</b>	
	2.1. Enter a speed setpoint ≠ 0.	
	2.2. Switch on the motor (ON command).	
	2.3. Check that the correct motor is running.	

		Status
3.	<b>Select STO</b>	
3.1.	Select STO while the motor is running. <i>Test each configured activation, e.g. via digital inputs and PROFIsafe.</i>	
3.2.	Check the following:	
	When controlled via PROFIsafe	When controlled via fail-safe digital inputs (F-DI)
	<ul style="list-style-type: none"> <li>The converter signals the following: "STO selection via PROFIsafe" (r9772.20 = 1)</li> </ul>	<ul style="list-style-type: none"> <li>The converter signals the following: "STO Selection via terminal" (r9772.17 = 1)</li> </ul>
	<ul style="list-style-type: none"> <li>If a mechanical brake is not available, the motor coasts down. A mechanical brake brakes the motor and holds it to ensure that it remains at standstill.</li> </ul>	
	<ul style="list-style-type: none"> <li>The converter signals neither faults nor alarms of the safety functions (r0945[0...7], r2122[0...7]).</li> </ul>	
	<ul style="list-style-type: none"> <li>The converter signals the following: "STO is selected" (r9773.0 = 1). "STO is active" (r9773.1 = 1).</li> </ul>	
4.	<b>Deselect STO</b>	
4.1.	Deselect STO.	
4.2.	Check the following:	
	<ul style="list-style-type: none"> <li>STO is not active (r9773.1 = 0).</li> </ul>	
	<ul style="list-style-type: none"> <li>The converter signals neither faults nor alarms of the safety functions (r0945[0...7], r2122[0...7]).</li> </ul>	

You have performed the acceptance test of the STO function.



### A.2.3 Machine documentation

#### Machine or plant description

Designation	
Type	
Serial number	
Manufacturer	

End customer	
Overview diagram of the machine and/or system:	

### Converter data

The converter data include the hardware version of the safety-relevant converter.

Labeling the drive	Article number and hardware version of the converter

### Function table

The active safety functions depending on the operating mode and safety equipment are shown in the function table.

Operating mode	Safety equipment	Drive	Selected safety function	Checked

Table A-1 Example of a function table

Operating mode	Safety equipment	Drive	Selected safety function	Checked
<i>Automatic</i>	<i>Protective door closed</i>	<i>Conveyor belt</i>	---	---
	<i>Protective door open</i>	<i>Conveyor belt</i>	STO	
	<i>Emergency Stop button pressed</i>	<i>Conveyor belt</i>	STO	

### Acceptance test reports

File name of the acceptance reports	

## Data backup

Data	Storage medium			Holding area
	Archiving type	Designation	Date	
Acceptance test reports				
PLC program				
Circuit diagrams				

## Countersignatures

### Commissioning engineer

The commissioning engineer confirms that the tests and checks listed above have been correctly executed.

Date	Name	Company/dept.	Signature
...	...	...	...

### Machine manufacturer

The machine OEM confirms the correctness of the settings documented above.


Date	Name	Company/dept.	Signature
...	...	...	...

## A.3 Manuals and technical support

### A.3.1 Overview of the manuals

#### Manuals with additional information that can be downloaded:

-  Operating Instructions (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
 Installing, commissioning and maintaining the drive. Advanced commissioning (this manual)  

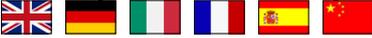-  Compact Operating Instructions for G115D Motor Mounted (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
 Installing and commissioning the drive  

-  Compact Operating Instructions for G115D Wall Mounted (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
 Installing and commissioning the converter  


-  Compact Installation Instructions for G115D Electronic Module (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
Replacing the Electronic Module  

-  Compact Installation Instructions for G115D External Braking Resistor (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
Installing and commissioning the external braking resistor  

-  SINAMICS G120 Smart Access Operating Instructions (<https://support.industry.siemens.com/cs/ww/en/view/109758122>)  
Operating the converter from a PC, tablet or smartphone  

-  Compact Installation Instructions for SAM interface kit (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
Installing the SAM interface kit  

-  "Safety Integrated" Function Manual (<https://support.industry.siemens.com/cs/ww/en/view/109477367>)  
Commissioning and optimizing safety functions  

-  "Fieldbus" Function Manual (<https://support.industry.siemens.com/cs/ww/en/view/109477369>)  
Configuring fieldbuses  

-  List Manual (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
Parameter list, alarms and faults, graphic function diagrams  

-  Protective devices (<https://support.industry.siemens.com/cs/ww/en/ps/27867/man>)  
Overcurrent protection devices of the G115D converter  

-  AS-Interface System Manual (<https://support.industry.siemens.com/cs/ww/en/view/26250840>)  

-  AS-Interface - Introduction and Basics Manual (<https://support.industry.siemens.com/cs/gb/en/view/1171856>)  


## A.3.2 Configuring support

### Catalog

Ordering data and technical information for the converter.



Catalogs for download or online catalog (Industry Mall):

 SINAMICS G115D ([www.siemens.com/sinamics-g115d](http://www.siemens.com/sinamics-g115d))

### EMC (electromagnetic compatibility) technical overview

Standards and guidelines, EMC-compliant control cabinet design



 EMC overview (<https://support.industry.siemens.com/cs/ww/en/view/103704610>)

### EMC Guidelines configuration manual

EMC-compliant control cabinet design, potential equalization and cable routing



 EMC installation guideline (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)

## A.3.3 Product support

### Overview


You can find additional information about the product on the Internet:

 Product support (<https://support.industry.siemens.com/cs/ww/en/>)

This URL provides the following:

- Up-to-date product information (product announcements)
- FAQs
- Downloads
- The Newsletter contains the latest information on the products you use.
- The Knowledge Manager (Intelligent Search) helps you find the documents you need.
- Users and specialists from around the world share their experience and knowledge in the Forum.
- You can find your local representative for Automation & Drives via our contact database under "Contact & Partner".
- Information about local service, repair, spare parts and much more can be found under "Services".

If you have any technical questions, use the online form in the "Support Request" menu:

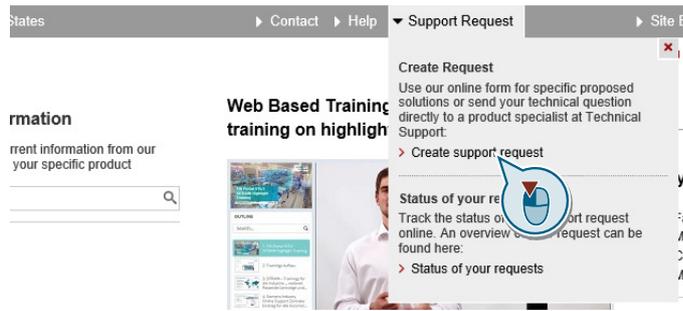



# Index

## 8

87 Hz characteristic, 85

## A

Acceptance test, 256

Acceptance test record, 256

Complete, 256

Reduced acceptance test, 257

Reduced scope, 417

STO (basic functions), 607, 608

Test scope, 417

Acyclic communication, 166

Alarm, 377, 383, 389

Alarm buffer, 383

Alarm code, 383

Alarm history, 383

Alarm time, 383

Alarm value, 383

Ambient temperature, 334

Application example, 102, 167, 273, 275, 276, 324, 605

ASCII code

Licensing, 356

Automatic mode, 232

## B

BICO block, 603

Bi-metal switch, 329

Binectors, 604

Bit pattern test, 250

Braking functions, 318

DC braking, 157, 319

Dynamic braking, 322

Braking method, 318

Braking module, 322

Braking resistor, 322

## C

Catalog, 611

CDS (Command Data Set), 232, 255

Characteristic

Additional, 295

Linear, 295

parabolic, 295

square-law, 295

Clockwise rotation, 146

Closed-loop torque control, 317

Command Data Set, 232

Commissioning guidelines, 115

Commissioning tools

SINAMICS G120 Smart Access, 116

Startdrive, 116

Connection interface

24 V power supply interface X01/X02, 86

AS-i communication interface X03, 105

DI/DO interface X07/X08/X05, 90

External braking resistor, X4, 110

Interface overview, 67

Line supply interface X1/X3, 78

Motor power interface X2, 83

PROFINET communication interface X150 P1/P2, 98

Connectors, 604

Consistent signals, 249

Control word

STW\_G115D (control word G115D), 158

STW1 (control word 1), 155

STW3 (control word 3), 157

Controlling the motor, 146

Converter state

Operation, 142

Ready, 142

Ready for switching on, 142

Switching on inhibited, 142, 155

Converter variants

Connector variant, 66

Glanded variant, 66

Conveyor belt, 259

Counter-clockwise rotation, 146

## D

Daisy chain

24 V power supply, 88

Line supply, 80

Data backup, 359, 366

Data set changeover, 255

Data transfer, 366

DC-link voltage, 334

DDS (Drive Data Set), 349

Delta connection ( $\Delta$ ), 84

## Derating

- Installation altitude, 427, 440
  - Line voltage, 428, 441
  - Motor speed, 431
  - Pulse frequency, 429, 442
  - Surrounding temperature, 428, 441
- Digital inputs, 143, 144, 146, 255
- Digital outputs, 143, 145
- Direction of rotation, 274
- Direction reversal, 146
- Directives and standards
- IEC/EN 61800-5-2, 244
- Discrepancy, 249
- Filter for F-DI, 249
  - Tolerance time, 249
- Drive control, 139
- Droop, 302

## E

- Emergency Stop button, 246
- Energy-saving display, 347
- Ethernet checklist, 103

## F

- Fault, 377, 386, 389
- Fault acknowledge, 387
  - Fault buffer, 386
  - Fault case, 388
  - Fault code, 386
  - Fault history, 387
  - Fault time, 386
  - Fault value, 386
- Fault time, 386
- Field weakening, 85
- Filter for F-DI
- Contact bounce, 250
  - Discrepancy, 249
  - On/off test, 250
- Firmware
- Downgrade, 414
  - Upgrade, 411
- Flux current control (FCC), 293, 295
- Forced checking procedure, 253
- Forced dormant error detection
- setting, 252
- Formatting, 358
- Forming the DC link capacitors, 66
- Free function blocks, 240
- Functional expansions, 257

## H

- Horizontal conveyors, 259

## I

- I<sub>max</sub> controller, 324
- i<sup>2</sup>t monitoring, 328
- Inching/continuous, 408
- Industry Mall, 611

## J

- JOG function, 194

## K

- Know-how protection, 358, 361, 372
- KTY 84 temperature sensor, 329

## L

- LED, 377
- ACT, 380
  - AS-i/FLT, 380
  - BF, 379
  - DI, 380
  - DI/O, 380
  - LNK, 380
  - RDY, 378, 379
  - SAFE, 379
- License, 358, 361
- License key
- Create, 352
  - Display, 352
  - Entering in STARTER, 355
  - Entry using the BOP-2, 356
- Licensing
- ASCII code, 356
- Linear characteristic, 295
- local/remote control (LRC) panel, 407

## M

- Main screen form (Basic Functions), 249
- Manual mode, 232
- Maximum cable length

  - Communication cables, 74

- Control cables, 74
- Motor cables, 74
- Maximum current controller, 324
- Maximum speed, 275
- MELD\_NAMUR (fault word according to the VIK-Namur definition), 160
- Memory card, 356
- Memory card formatting, 361
- Memory cards, 360
- Minimum speed, 274
- MMC (memory card), 358
- Moment of inertia estimator, 309
- Motor code, 119
- Motor control mode, 140
- Motor data, 119
- Motor data identification, 300, 317
- Motor holding brake, 234, 318
- Motor standard, 241
- Motor starting optimization, 296
- Motor temperature sensor, 331

## O

- OFF1 command, 146
- OFF3 ramp-down time, 281
- ON command, 146
- Optimizing the closed-loop speed controller, 300
- Options
  - Connector cover kit, 41
  - External braking resistor, 39
  - Glanded installation kit, 40
  - QUICKON connector, 39
  - QUICKON nut, 40
  - SAM interface kit, 42
  - SINAMICS G120 Smart Access, 41
- Overload, 325

## P

- Page index, 162
- Parabolic characteristic, 295
- Parameter channel, 160
- Partial load operation, 444
- PID controller, 284
- PKW (parameter, ID value), 152
- PLC functionality, 605
- PNU (parameter number), 162
- Pole position, 315
- Pole position identification, 315
- Pre-control, 311
- Protection functions, 140

- Pt1000 sensor, 329
- PTC temperature sensor, 329
- Pulse cancelation, 155
- Pulse enable, 155
- Pulse frequency, 327, 328
- PZD (process data), 152

## Q

- Quick stop override, 408

## R

- Ramp time scaling, 283
- Ramp-down time, 280, 283
- Ramp-function generator, 275, 279
- Ramp-up time, 280, 283
- Reduced acceptance test
  - Converter, 417
  - Electronic module, 417
  - Firmware upgrade, 417
  - Gearbox, 417
  - Motor, 417
  - Safety-related hardware, 417
- Regenerative operation, 318
- Resetting the safety functions, 137
- Restoring the factory settings, 136
- Reversing, 274

## S

- Safety function, 140
- SD (memory card), 358
  - Formatting, 358
  - MMC, 358
- Self-test, 253
- Series commissioning, 257, 359
- Setpoint processing, 140, 275
- Setpoint source, 140
  - Electromechanical potentiometers, 267
  - Fieldbus, 266
  - Fixed speed setpoint, 271
  - Motorized potentiometer (MOP), 268
- Short-circuit monitoring, 330, 331
- Signal interconnection, 603
- Skip frequency band, 274
- Slip compensation, 293
- SLS (Safely-Limited Speed), 258
- Speed control, 298
- Speed limitation, 275
- Square-law characteristic, 295

Star connection (Y), 84  
Status word  
    ZSW\_G115D (status word G115D), 159  
    ZSW1 (status word 1), 156  
    ZSW3 (status word 3), 158  
STO (Safe Torque Off), 243, 244  
    Acceptance test, 607, 608  
    Selecting, 244  
STO commissioning tool, 246  
Storage media, 359  
Subindex, 162  
Switch off  
    OFF1 command, 143  
    OFF2 command, 143  
    OFF3 command, 143  
Switch on  
    ON command, 143  
Switch-off signal paths, 253  
System runtime, 381

## T

Technology controller, 140, 157, 242, 284  
Telegram expanding, 164  
Temperature calculation, 332  
Temperature monitoring, 328, 332  
Temperature switch, 329  
Terminal layout, 70  
Test signals, 250  
Three-wire control, 146  
Two-wire control, 146

## U

U/f characteristic, 293  
Unit system, 241  
Use for the intended purpose, 3

## V

Vector control, 298, 300, 317  
Voltage boost, 293, 296

## W

Wire breakage, 249  
Wire-break monitoring, 330, 331  
Write protection, 369



## More information

SINAMICS:

[www.siemens.com/sinamics](http://www.siemens.com/sinamics)

SIMOGEAR:

[www.innomotics.com/geared-motors](http://www.innomotics.com/geared-motors)

Safety Integrated:

[www.siemens.com/safety-integrated](http://www.siemens.com/safety-integrated)