



- de** Montageanleitung
- en** Mounting instructions
- fr** Instructions de montage
- sv** Monteringsinstruktion
- nl** Montagehandleiding
- it** Istruzioni di montaggio
- fi** Asennusohje
- es** Instrucciones de montaje
- da** Monteringsvejledning
- pl** Instrukcja montażu
- cz** Montážní návod
- hu** Szerelési útmutató
- el** Οδηγίες εγκατάστασης
- ru** Инструкция по установке
- zh** 安装指导
- ko** 설치지침

- Stellantriebe**
- Actuators**
- Servomoteur**
- Ställdon**
- Servomotoren**
- Servocomandi**
- Toimimoottorit**
- Actuadores**
- Motorer**
- Siłowniki**
- Pohony**
- Szelepállító motorok**
- Κινητήρες**
- Приводы**
- 执行器**
- 모터형 구동기**


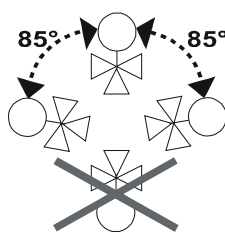


SUA21/1

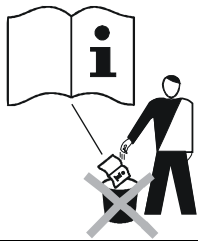


1

VVI46..  
VXI46..

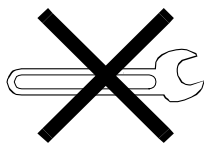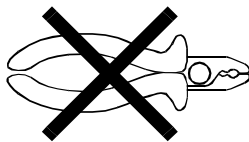


4842Z13

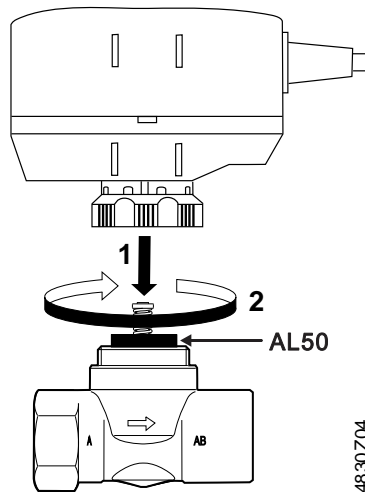


4830Z04



SUA21/1

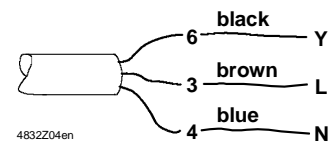

4832Z04en

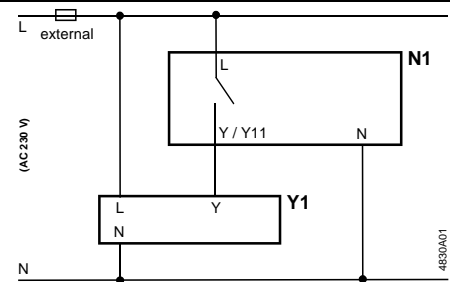

4830A01

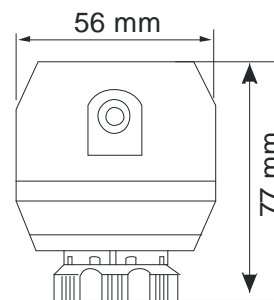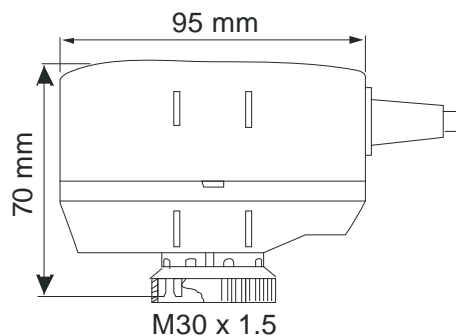

4830M01