



DE	Notwendige Werkzeuge für Montage
EN	Necessary assembly tools
FR	Outils nécessaires pour le montage
ES	Herramientas requeridas para el montaje
IT	Utensili necessari per il montaggio
PT	Ferramentas necessárias para a montagem
TR	Montaj için gerekli aletler
PY	Инструменты, необходимые для монтажа
中文	安装所需工具

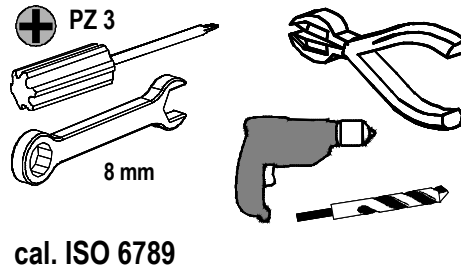


DE	Lieferumfang
EN	Quantity of delivery
FR	Composition de la fourniture
ES	Alcance del suministro
IT	Configurazione di fornitura
PT	Âmbito do fornecimento
TR	Teslimat hacmi
PY	Комплект поставки
中文	供货范围

3VL9500-8SA40

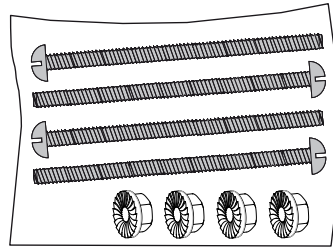



M6 x 1.0 x 100 mm

3VL9600-8SA40





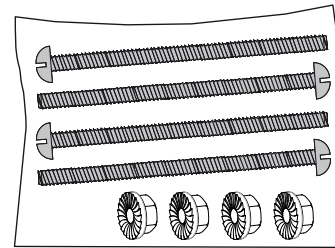


M6 x 1.0 x 110 mm

DE	Montage
EN	Assembly
FR	Montage
ES	Montaje
IT	Montaggio
PT	Montagem
TR	Montaj
PY	Монтаж
中文	组装

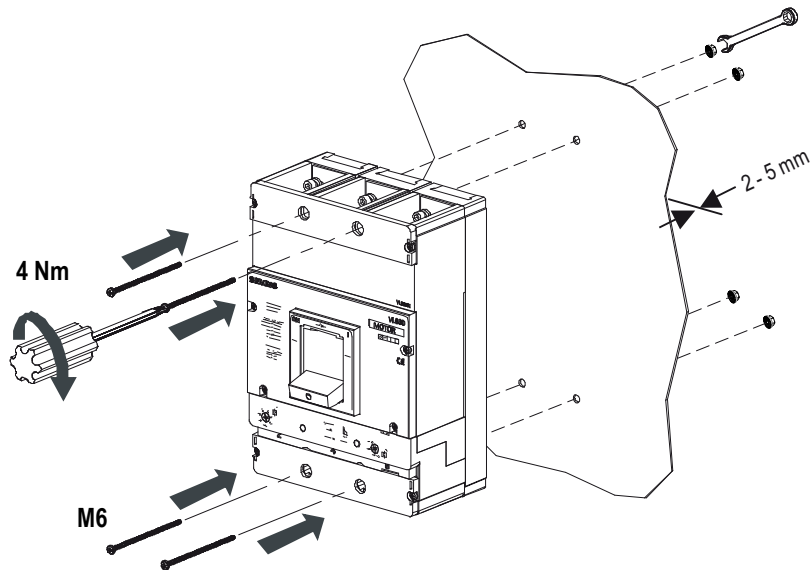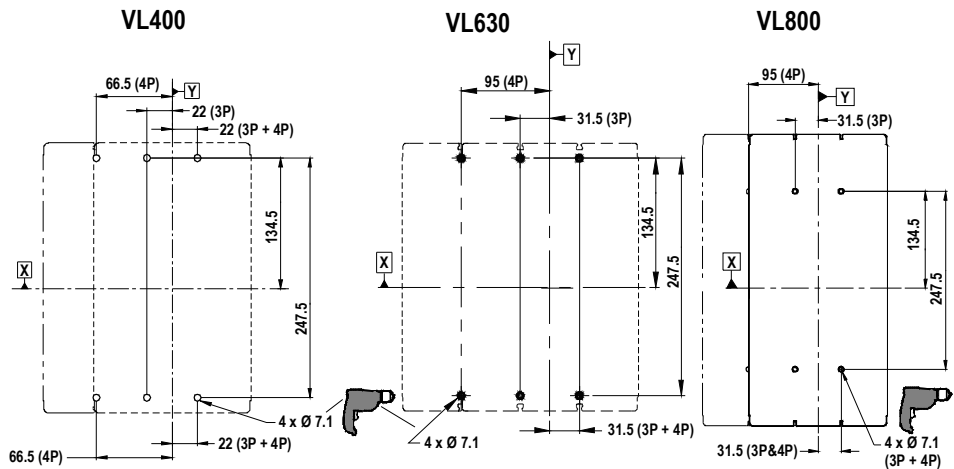

DE	Option
EN	Option
FR	Option
ES	Opción
IT	Opzione
PT	Opção
TR	Opsiyon
РУ	Опция
中文	选项

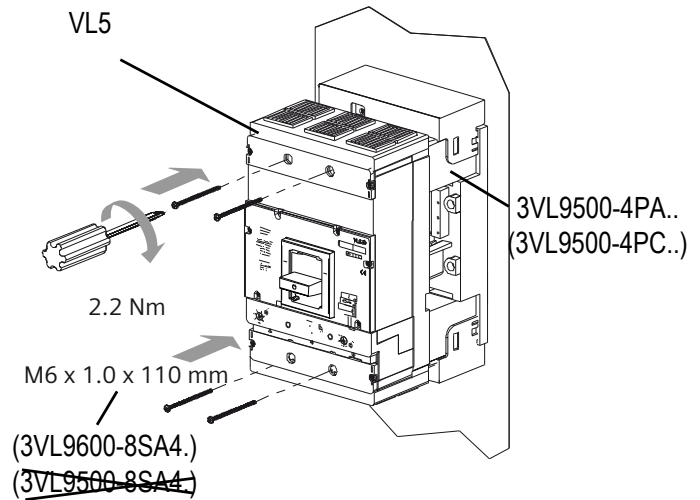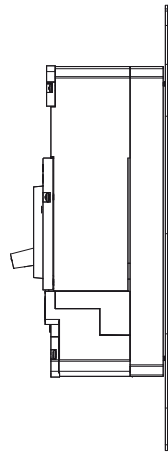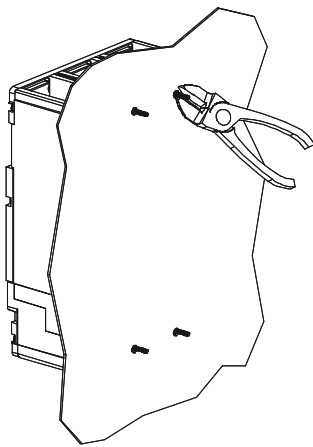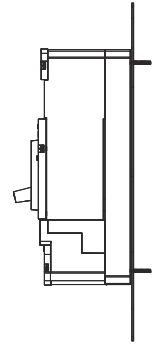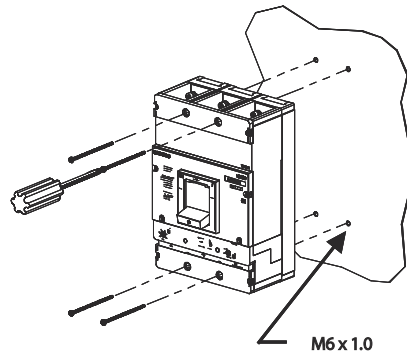

DE	Weitere Informationen finden Sie im 3VL-Handbuch im Internet unter: www.siemens.com/lowvoltage/manuals/3VL (nur in Deutsch und Englisch)
EN	Further information can be found in the 3VL manual on the Internet under www.siemens.com/lowvoltage/manuals/3VL (only in German and English)
FR	Vous trouverez des informations supplémentaires dans le manuel 3VL dans Internet sous www.siemens.com/lowvoltage/manuals/3VL (seulement en allemand et en anglais)
ES	Para más información, consulte el manual 3VL que está disponible en nuestra página web www.siemens.com/lowvoltage/manuals/3VL (sólo en alemán y en inglés)
IT	Ulteriori informazioni sono disponibili in Internet nel manuale 3VL su www.siemens.com/lowvoltage/manuals/3VL (solo in tedesco e in inglese)
PT	Mais informações encontram-se no manual 3VL na Internet, sob www.siemens.com/lowvoltage/manuals/3VL (somente em alemão e em inglês)
TR	Diğer bilgileri internetde 3VL-el kitabında bulabilirsiniz: www.siemens.com/lowvoltage/manuals/3VL (yanliz almanca ve ingilizce)
РУ	Дальнейшую информацию Вы можете найти в инструкции по использованию 3VL в интернете по адресу: www.siemens.com/lowvoltage/manuals/3VL (только по-немецки или по-английски)
中文	其他相关信息参见 3VL-使用手册，请登陆互联网： www.siemens.com/lowvoltage/manuals/3VL （英、德文）