

MITSUBISHI

General-Purpose AC Servo

MELSERVO

HEAT SINK OUTSIDE MOUNTING ATTACHMENT

MR-JACN


Installation Guide

1. INTRODUCTION

Thank you for choosing the heat sink outside mounting attachment designed for Mitsubishi AC servo (MR-JACN□). The heat sink outside mounting attachment is used to install the heat sink of a servo amplifier in the outside of a control box.

For the handling of the heat sink outside mounting attachment, please read the Instruction Manual or Specifications and Installation Guide of the corresponding servo amplifier carefully before using it.

2. PANEL CUT DIMENSIONS

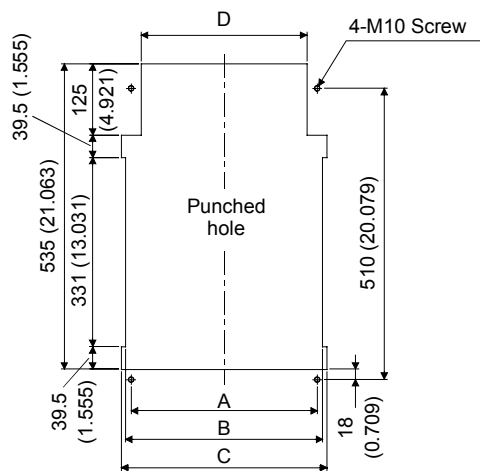



[Unit: mm(in)]

Changeable dimension	A	B	C	D	Servo amplifier
Model					
MR-JACN15K	236 (9.291)	255 (10.039)	270 (10.63)	203 (7.992)	MR-J2S-11K □ MR-J2S-15K □
MR-JACN22K	326 (12.835)	345 (13.583)	360 (14.173)	290 (11.417)	MR-J2S-22K □

3. OUTLINE DIMENSION DRAWING

(a) MR-JACN15K (MR-J2S-11K □, MR-J2S-15K □) (b) MR-JACN22K (MR-J2S-22K □)

[Unit: mm(in)]

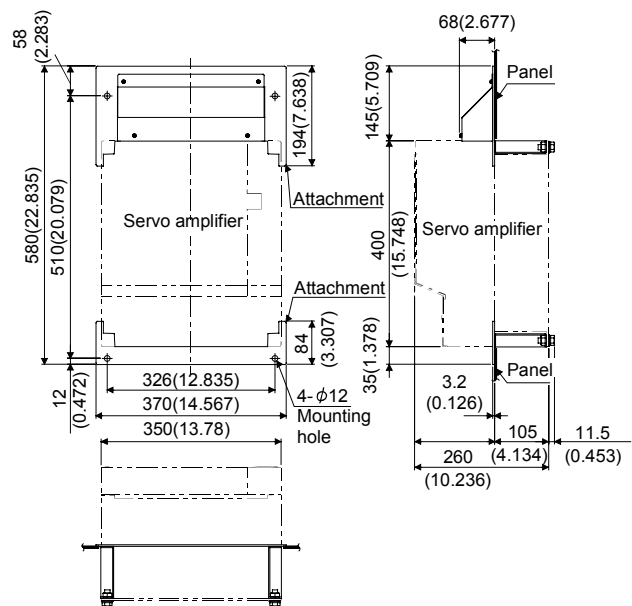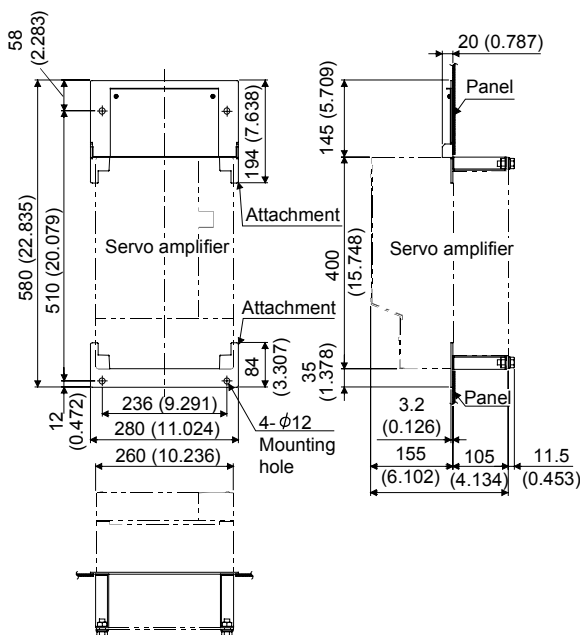

HEAD OFFICE: TOKYO BLDG MARUNOUCHI TOKYO 100-8310

This installation guide uses recycled paper.

Specifications are subject to change without notice.