




Installation Guide – RBC44-IN


SURT3000/5000 VA 3U Battery Replacement

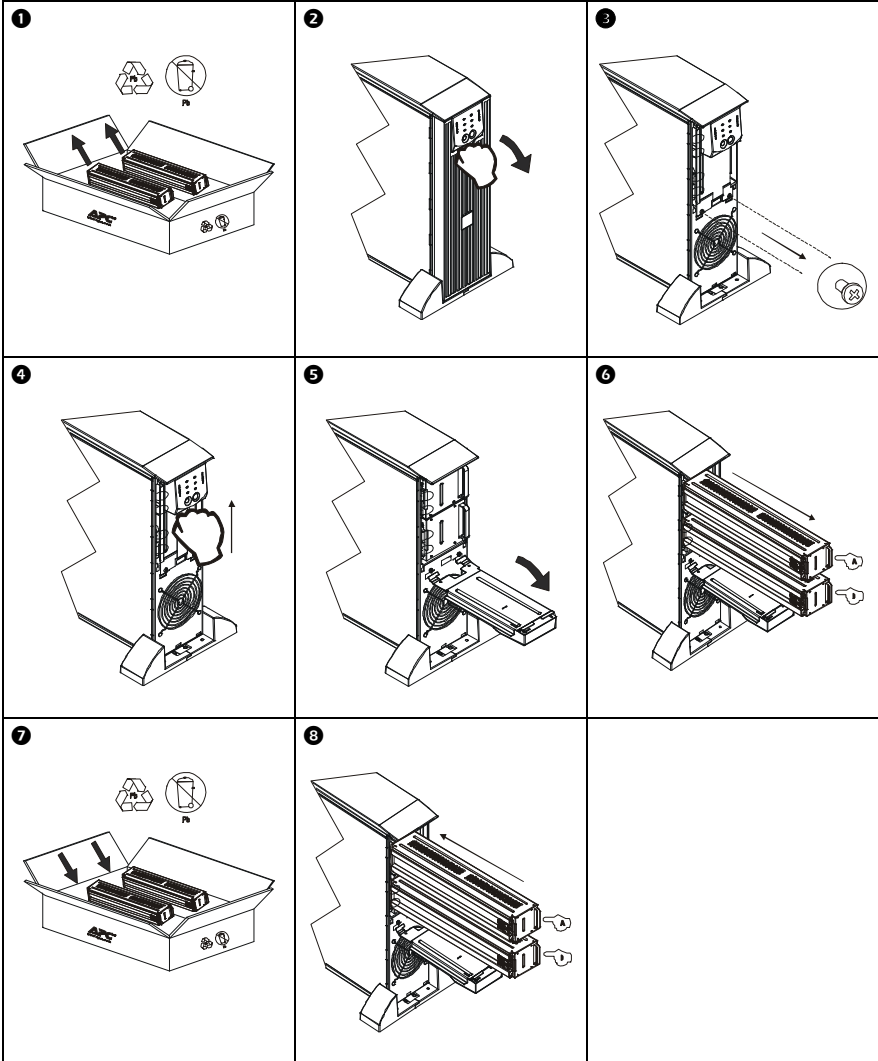

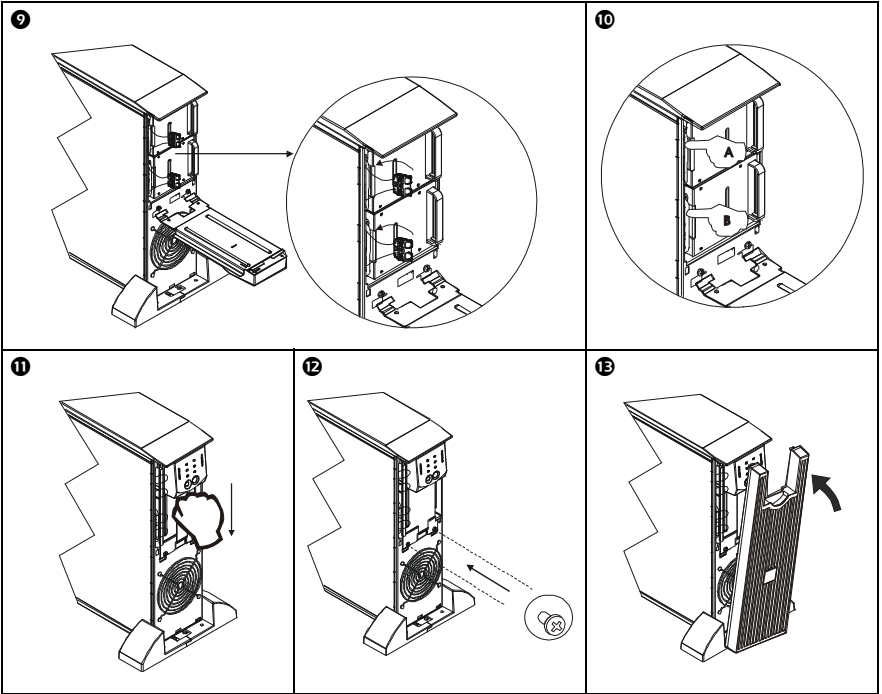

SURT7500/10000 VA 6U Battery Replacement

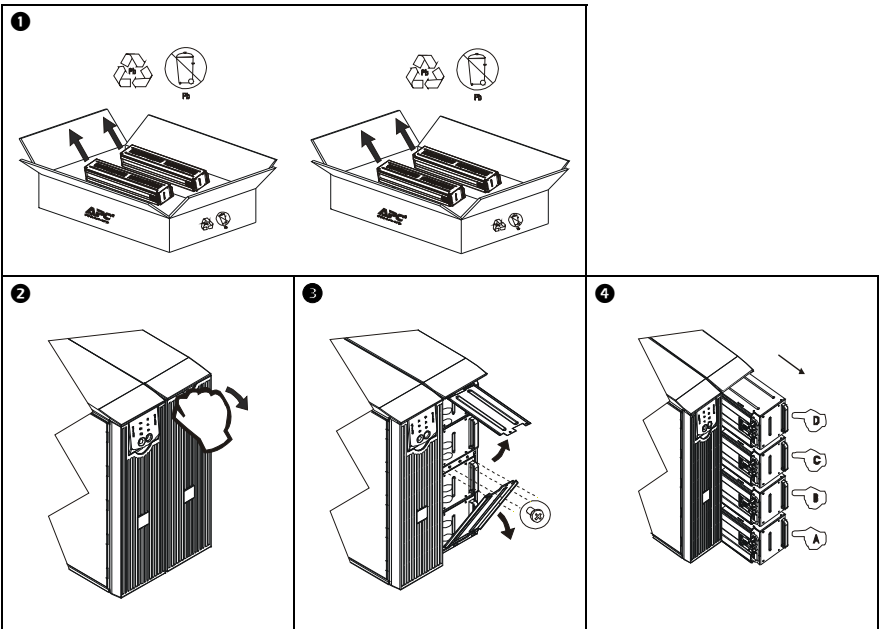

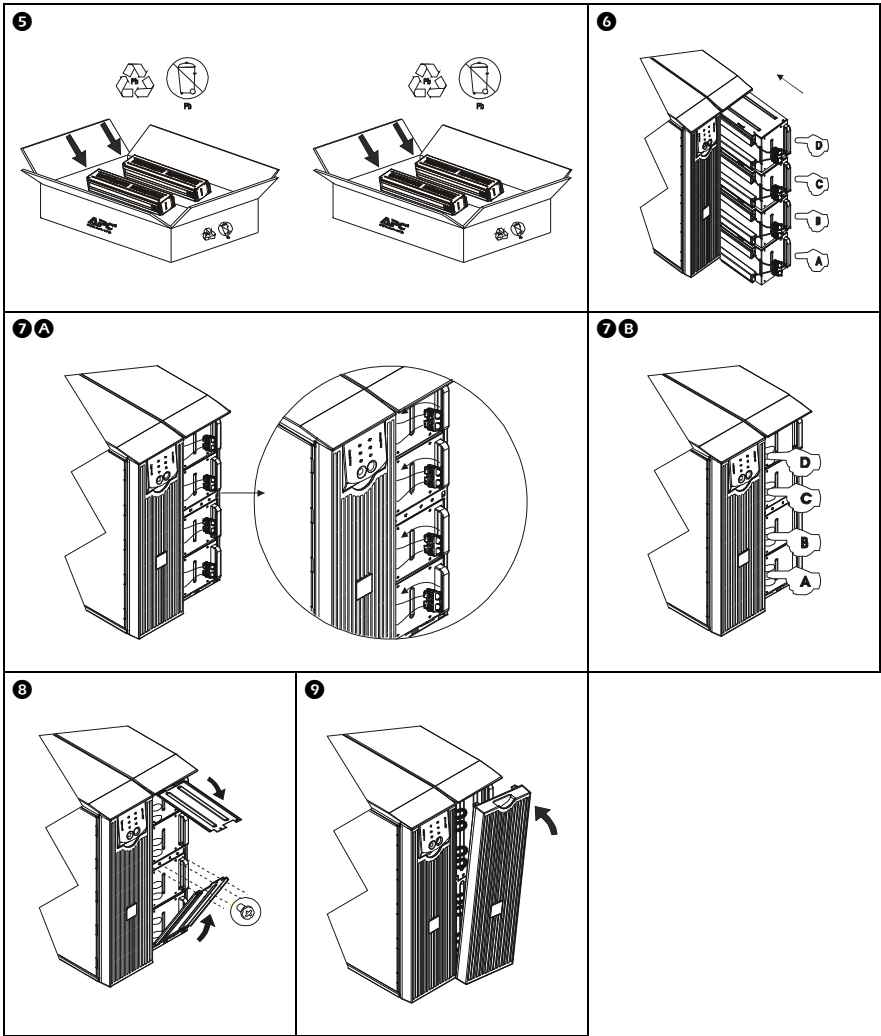

SURT192XLBP Battery Replacement

