

# Separate Controller Ionizer



\* The IZT40 is not compatible with IO-Link.

## Bar Type / Nozzle Type




**Space Saving**

**Bar type**  
IZT40/41/42 Series

Height 37 mm x Width 30 mm

**Nozzle type**  
IZT43 Series

Height 32 mm x Width 16 mm

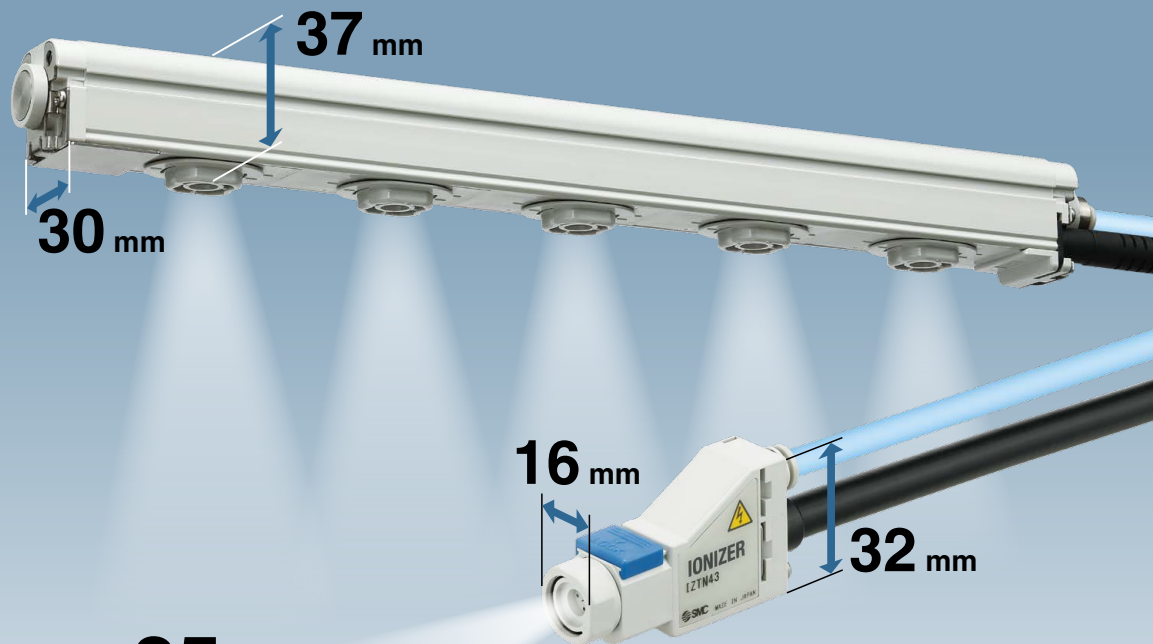

Potential amplitude: **25 V** or less<sup>\*1</sup>

Rapid static neutralization:

Fastest time **0.1 s**<sup>\*2</sup>

Static neutralization is possible even when air is not being supplied.

**New IO-Link Compatible**

- ON/OFF with a single communication line<sup>\*1</sup> (Periodic transmission of set values and status for up to 4 channels)
- Reading of the device information and parameter batch settings are possible.

\*1 Wiring with an auxiliary power line is required separately.

	Series	Type	Application	IO-Link
Bar	IZT42	Dual AC	For reducing the potential amplitude	●
	IZT41	AC	For maintaining a constant offset voltage	●
	IZT40	Standard	Simple operation by just turning the power on	—
Nozzle	IZT43	AC	For maintaining a constant offset voltage	●

\*1 IZT42 installation height: 300 mm

\*2 IZT40, 41

Conditions: Discharge time from 1000 V to 100 V

Object to be neutralized: Charged plate (150 mm x 150 mm, Capacitance 20 pF)

Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten electrode needle with air purge)

Bar length: 1120 mm

## IZT40/41(-L)/42(-L)/43(-L) Series



CAT.ES100-120D



## Dual AC Type IZT42 Series (Potential amplitude reduction specification)

Potential amplitude: **25 V or less**<sup>\*1</sup>

Rapid static neutralization: **0.1 s**<sup>\*2</sup>

\*1 IZT42 installation height: 300 mm

\*2 IZT40, 41

Conditions: Discharge time from 1000 V to 100 V

Object to be neutralized: Charged plate (150 mm x 150 mm, Capacitance 20 pF)


Installation distance: 100 mm (High speed static neutralization cartridge, Tungsten electrode needle with air purge)

Bar length: 1120 mm




### The potential amplitude can be reduced with SMC's original dual AC type sensor.

Static neutralization in consideration of damage to a device which is sensitive to electrostatic discharge (ESD) can be achieved. The potential amplitude applied to the applicable workpiece is reduced even if the workpiece is mounted within close proximity of the ionizer.

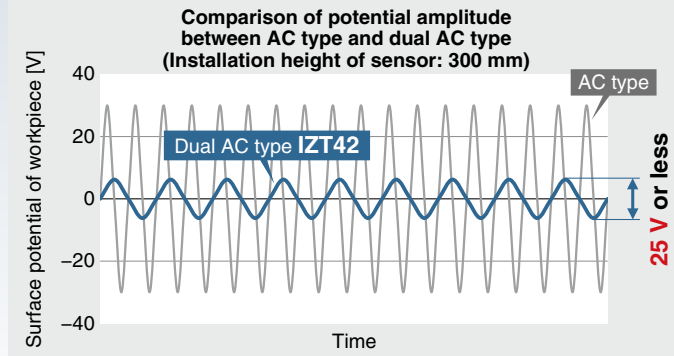


#### Dual AC type IZT42

+ ions and - ions are discharged at the same time to allow the + and - ions to reach the workpiece evenly, thereby reducing the potential amplitude.

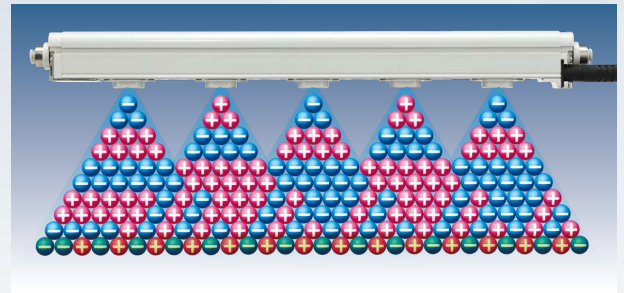


#### AC type IZT40, 41, 43

+ ion and - ion layers reach the workpiece alternately, which increases the potential amplitude.

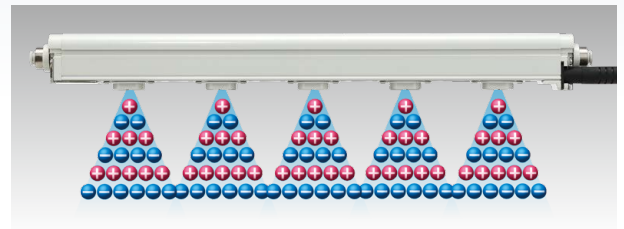


#### Application Examples For the static neutralization of glass substrates

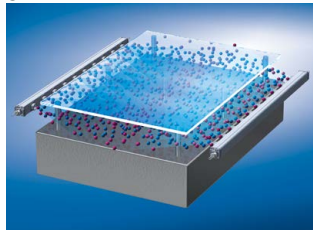

Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate

#### For the static neutralization of electric substrates

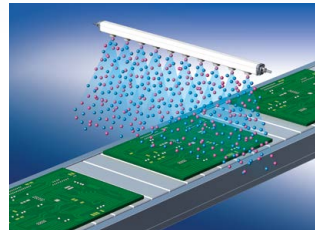

- Prevents element disruption due to discharge
- Prevents the adhesion of dust

## AC Type IZT41, 43 Series



### ● With auto balance function

\* The controller can be used with either type. Use a high voltage power supply module compatible with the selected type.



IZT41

IZT43







- Emitter contamination detection continually displayed and output
- Individual ON/OFF command from an external input signal

### With auto balance function

The sensor is installed within the ionizer body and may be mounted anywhere.

The offset voltage (ion balance) in the static neutralization area is controlled so that the voltage is maintained at a constant value by monitoring the ions emitted from the ionizer using the ground line.

#### Effect of auto balance (Image)

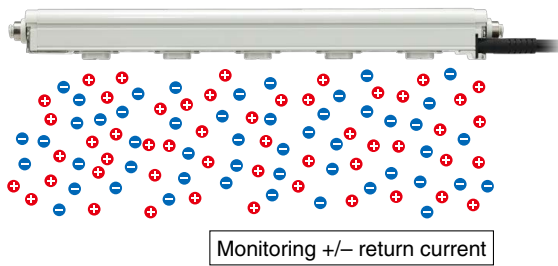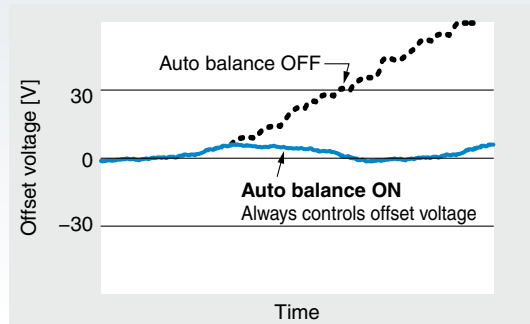

### Standard Type IZT40 Series



- Simple operation: Can be controlled by powering the ionizer ON

An AC adapter is available.

(The AC adapter can only be used for 1 ionizer.)




**The compact body allows for space saving.**



- Reduced height

**57 mm shorter**  
(60%)

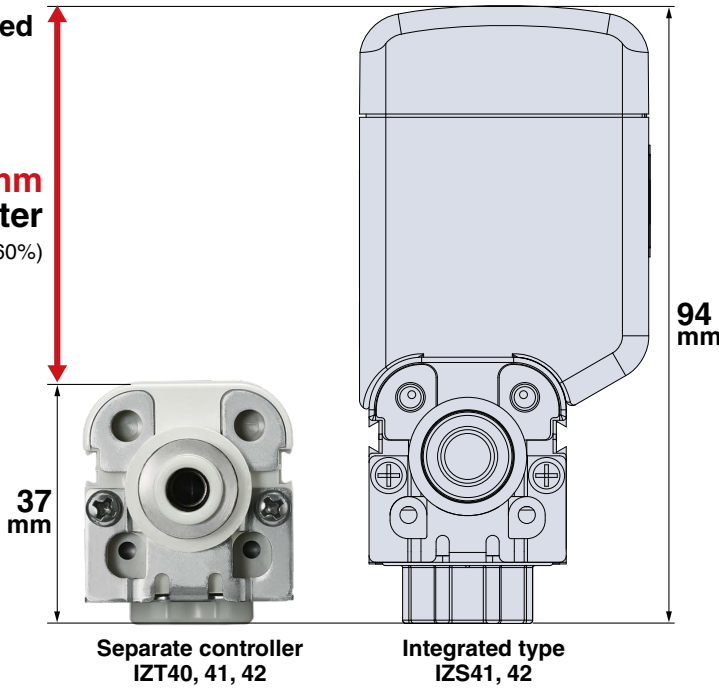


**30 mm**




- Can be mounted in narrow spaces

Static neutralization of a rotary press

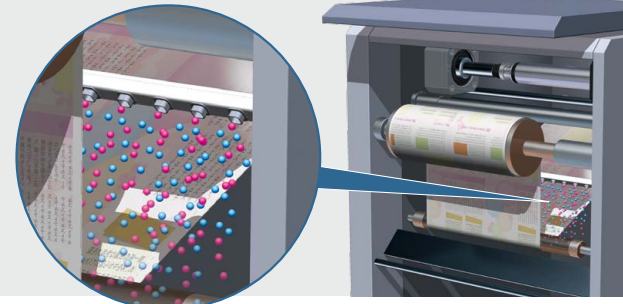

Static neutralization during wafer production

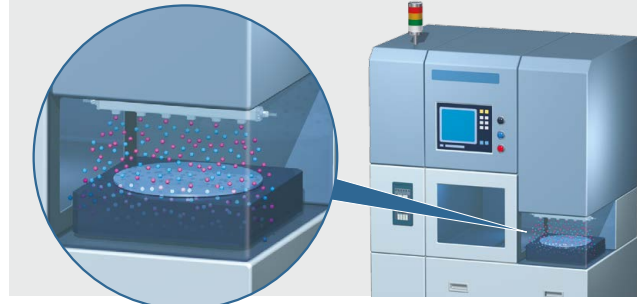


**Space saving**



**Thickness 16 mm x Width 53 mm x Height 32 mm**

- For the removal of dust and static neutralization by air blow

For the static neutralization of plastic bottles and particle elimination

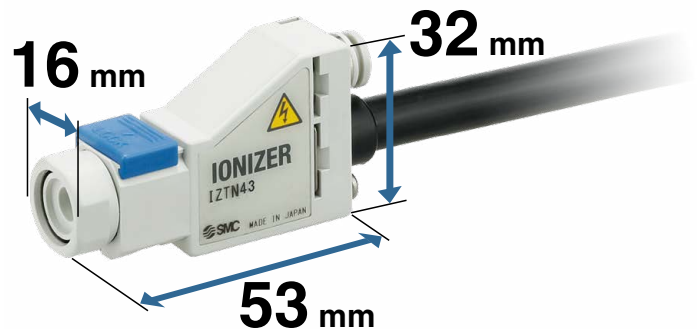




## One controller can control a maximum of 4 ionizers.




- Mixed bar and nozzle connection is possible.

Concentrated control is available.


- Bar and nozzle errors can be detected.
- Contamination of the emitter can be monitored.

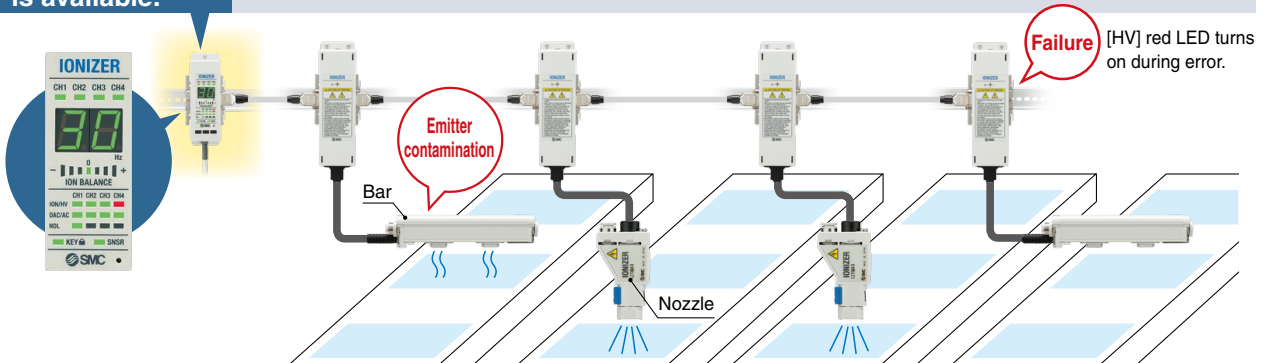

## A flexible layout can be achieved due to the various module connection methods.

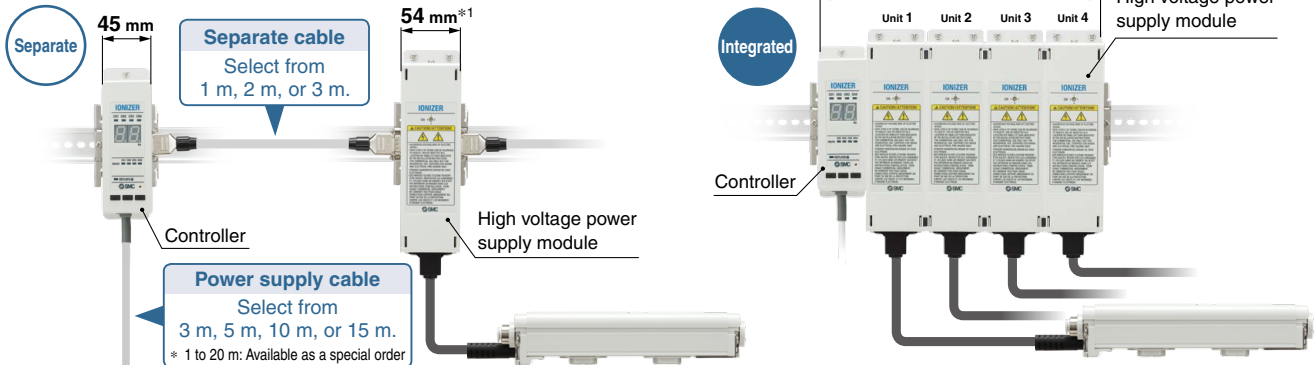


- Max. installation distance between controller and bar/nozzle: 15 m

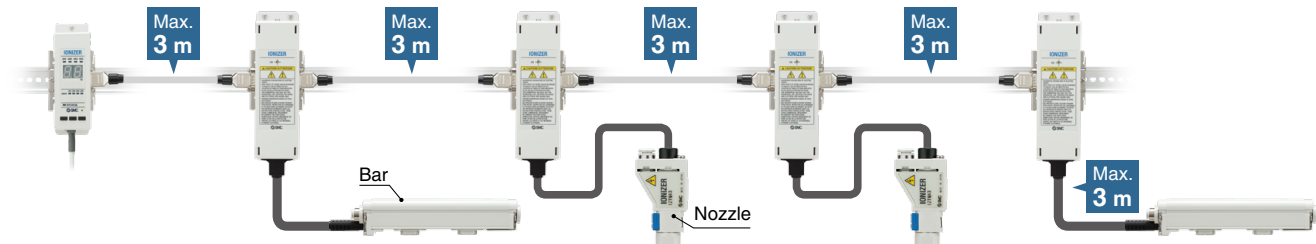


## The simple installation of each module is possible by connector connection.




- The connector connection of cables is possible for each module after installation.

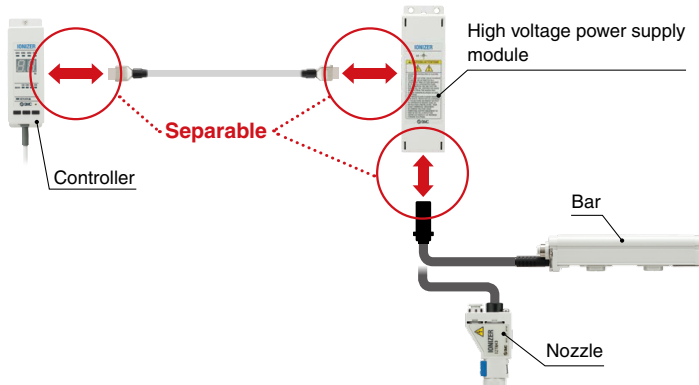

## Easy insertion and removal due to connector connection

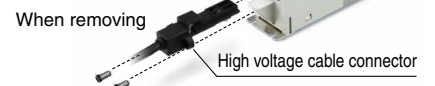



## For the insertion and removal of high voltage cables

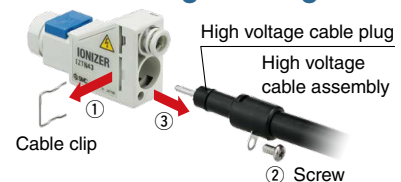



## Various low maintenance cartridges can be selected according to the application.

- Minimizes the contamination of emitters by discharging compressed air at the surface of the emitters

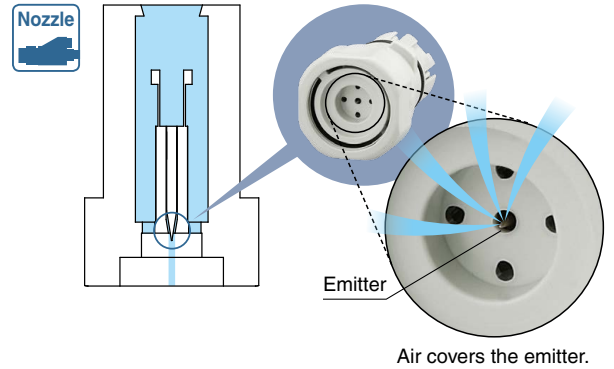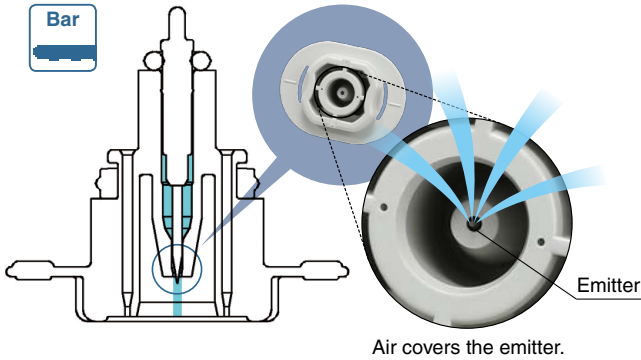


### Emitter cartridge type

#### High speed static neutralization cartridge

##### Long range static neutralization and dust removal




1 cartridge equipped with 2 assist air nozzles allows for high speed static neutralization by transferring ionized air produced in the emitter to the workpiece.

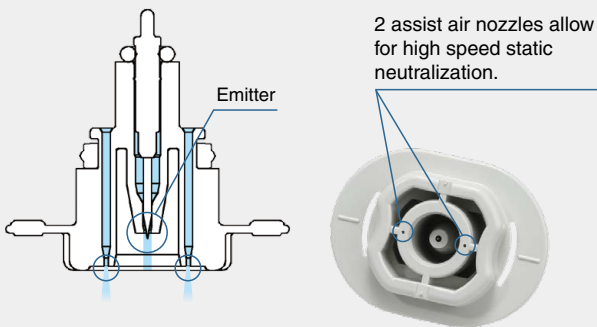

#### Energy saving static neutralization cartridge

##### Short range static neutralization

Reducing the number of assist nozzles by half for static neutralization, which does not require a high volume of assist air due to the close distance to the object to be neutralized, allows for energy savings by reducing air consumption.

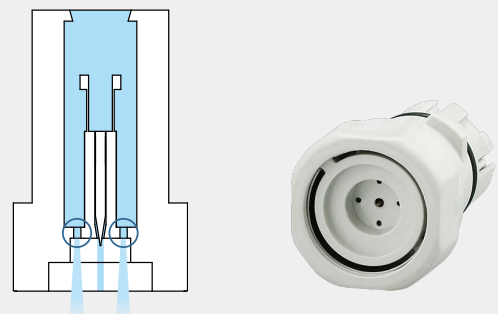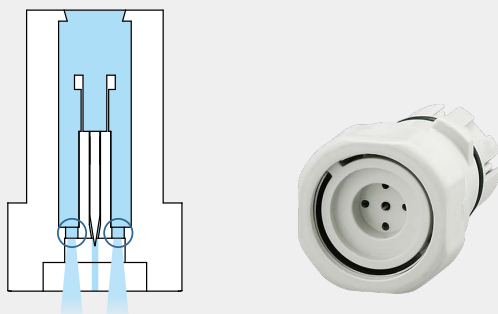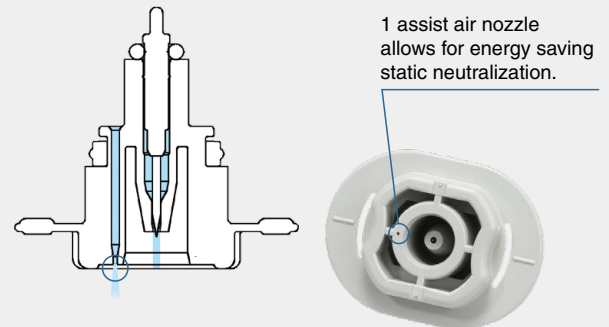

<For Nozzle> The external shape of the high speed static neutralization cartridge and that of the energy saving static neutralization cartridge is the same. However, as shown in the image above, the diameter of the holes differs.

● Emitter material type

Tungsten/Single crystal silicon (for silicon wafers)



Tungsten  
(Emitter cartridge color: White)


Silicon  
(Emitter cartridge color: Gray)



Tungsten  
(Emitter cartridge color: White)


Energy saving high-efficiency cartridge

Assist air amplified by the sucking in of ambient air (the ejector effect) allows for highly efficient static neutralization through the efficient transfer of the produced ionized air.

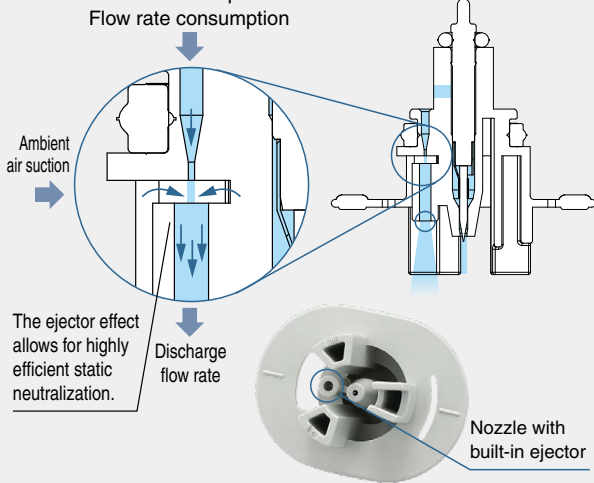


Flow rate for installation distance of each cartridge

Conditions: IZT41-112□ (Number of cartridges: 18 pcs.), Discharge time 1 s

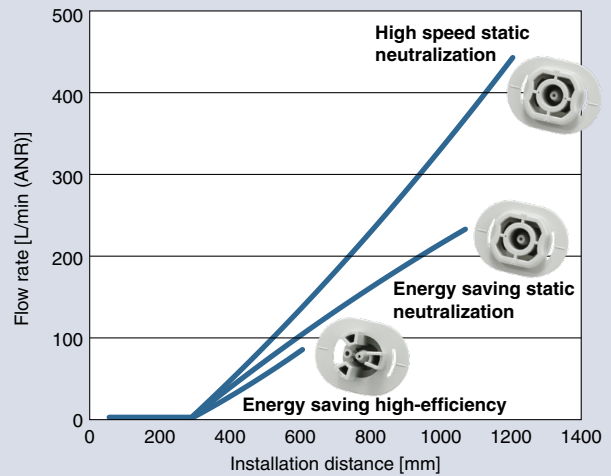

Flow rate for installation distance of each cartridge


Discharge time 1 s

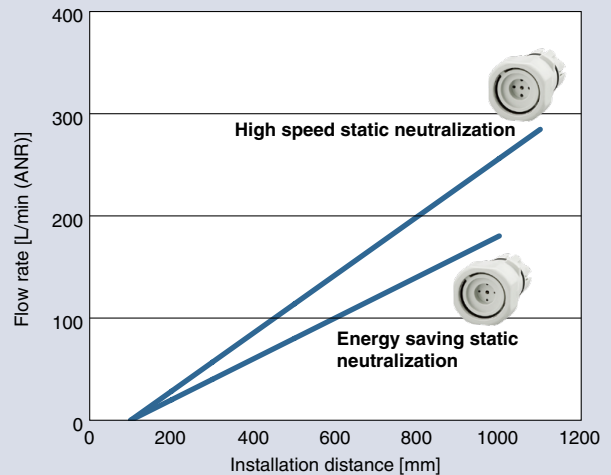

## Air can be supplied by air piping on one side.


- The optimal design of the piping port size allows for sufficient blow performance even with piping only on one side.

- Piping on both sides
- Piping only on one side

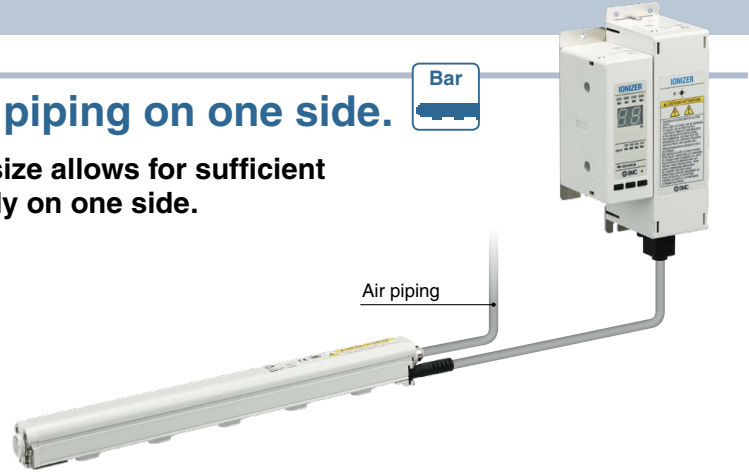


### High speed static neutralization cartridge

2 assist air nozzles allow for high speed static neutralization.

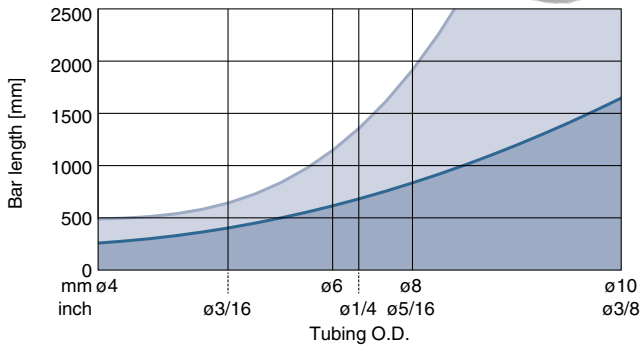


### Energy saving static neutralization cartridge

1 assist air nozzle allows for energy saving static neutralization.

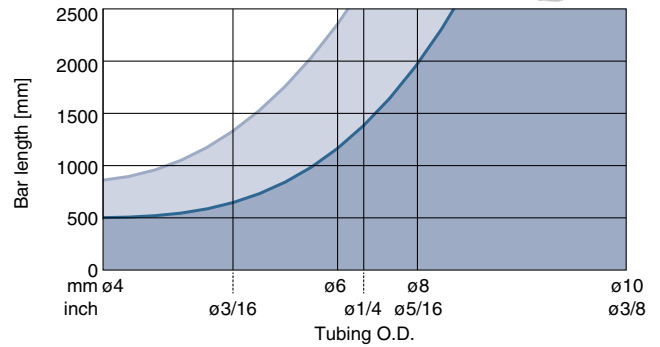


### Energy saving high-efficiency cartridge

Nozzle with built-in ejector

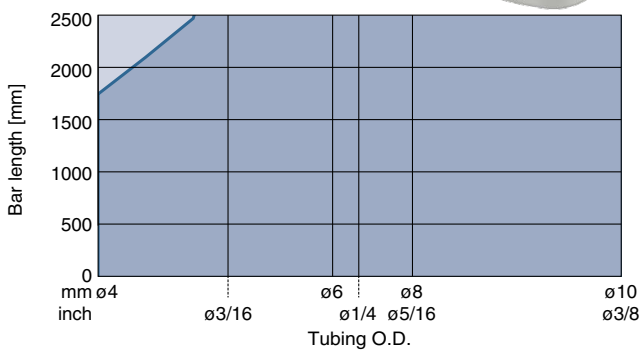


## Air supply port position is selectable: Right side/Left side/Both sides

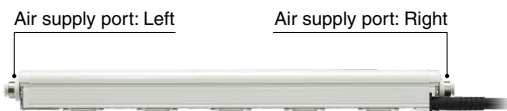

## Bar and high voltage cable lengths are selectable.

pp. 21, 25, 47

Bar length: Select a length in 60 mm increments from 160 to 2500 mm. (Includes made-to-order options)

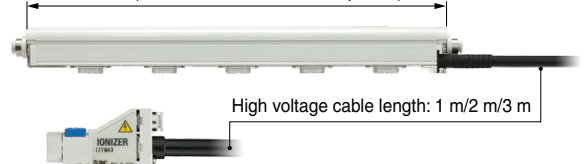




## 2 types of brackets are available.



Bar

### For the bar type

When an adjustable mounting angle is required/Bracket 1

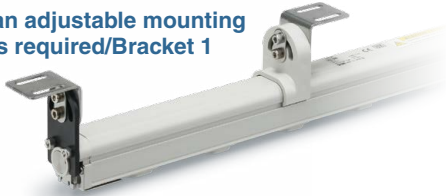



When space reduction is required/Bracket 2

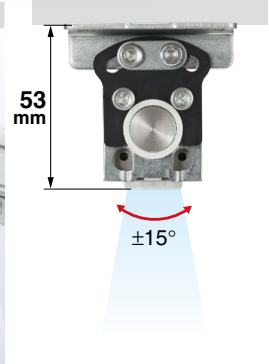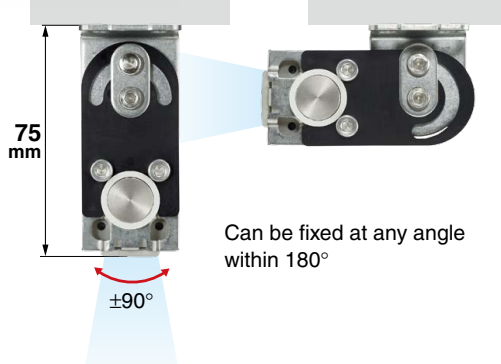


Nozzle

### For the nozzle type

Angle adjustment bracket

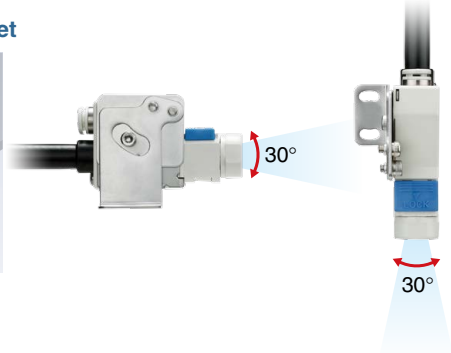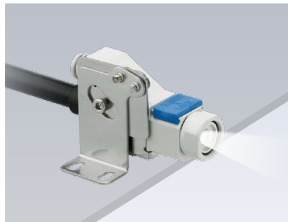

L-bracket

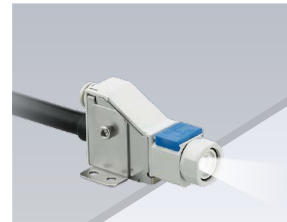

## Emitter cartridge drop prevention


Bar

Nozzle


### Emitter cartridge drop prevention function

Double-action locking

Bar type

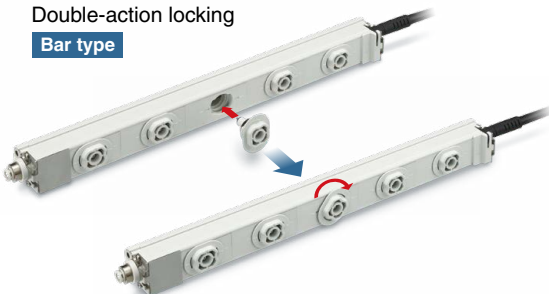


Nozzle type

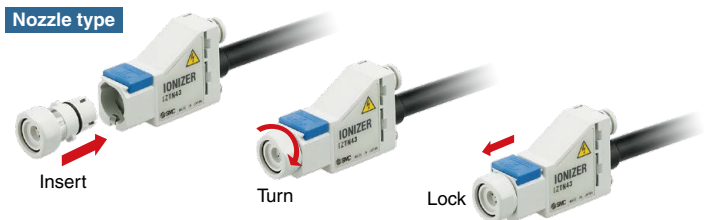

### Drop prevention cover Made to order

For increased cartridge drop prevention


\* Only for the bar type

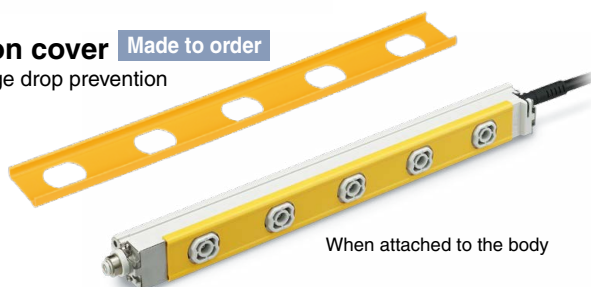



IO-Link is an open communication interface technology between the sensor/ actuator and the I/O terminal that is an international standard: IEC 61131-9.

## Visualization of operation and equipment status/Remote monitoring and control by communication

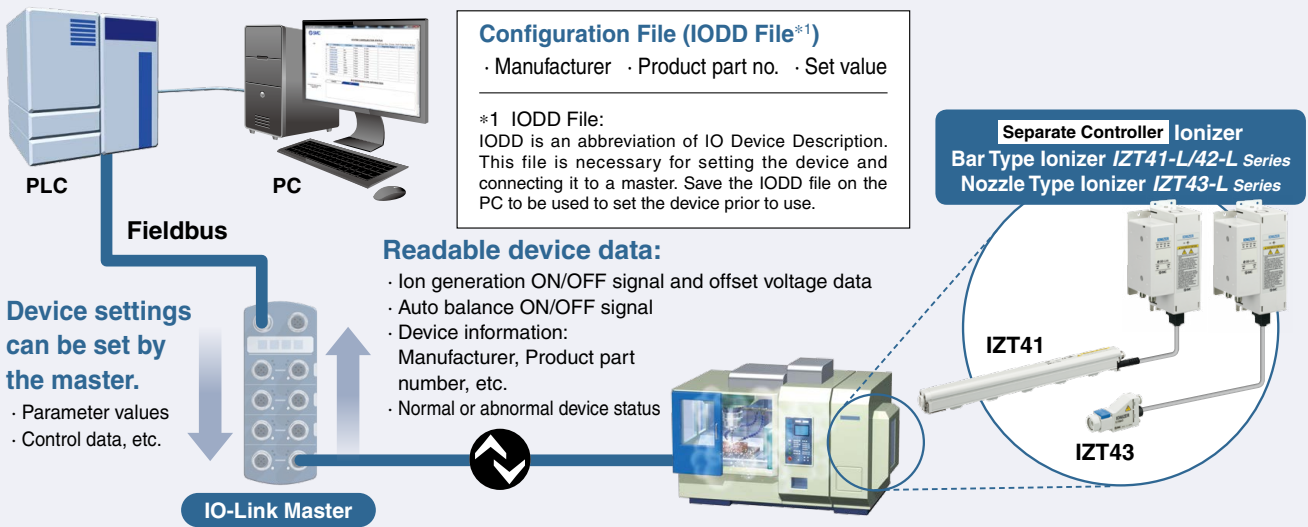

### Automatic setting function [Data storage function]

When replacing the controller with another of the same type (the same device ID), the parameters (set values) stored in the IO-Link master are automatically copied (set) to the new controller.



### Process Data

#### PD\_IN

Bit offset	103	102	101	100	99	98	97	96										
Item	CH1: Initial set status	CH2: Initial set status	CH3: Initial set status	CH4: Initial set status	CH1: Ion generation	CH2: Ion generation	CH3: Ion generation	CH4: Ion generation										
Bit offset	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80		
Item	Reservation						CH1: Ion balance (10-bit signed integer)											
Bit offset	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64		
Item	Reservation						CH2: Ion balance (10-bit signed integer)											
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48		
Item	Reservation						CH3: Ion balance (10-bit signed integer)											
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32		
Item	Reservation						CH4: Ion balance (10-bit signed integer)											
Bit offset	31	30	29	28	27	26	25	24										
Item	Error diagnosis	CPU failure (Controller)	Power supply failure (Controller)	Power supply failure (High voltage power supply)	Non-connection of high voltage power supply module	Reservation												
Bit offset	23	22	21	20	19	18	17	16										
Item	CH1: CPU failure	CH2: CPU failure	CH3: CPU failure	CH4: CPU failure	CH1: High voltage failure	CH2: High voltage failure	CH3: High voltage failure	CH4: High voltage failure										
Bit offset	15	14	13	12	11	10	9	8										
Item	CH1: Internal communication failure	CH2: Internal communication failure	CH3: Internal communication failure	CH4: Internal communication failure	CH1: Fan failure	CH2: Fan failure	CH3: Fan failure	CH4: Fan failure										
Bit offset	7	6	5	4	3	2	1	0										
Item	CH1: CH duplication failure	CH2: CH duplication failure	CH3: CH duplication failure	CH4: CH duplication failure	CH1: Maintenance notification	CH2: Maintenance notification	CH3: Maintenance notification	CH4: Maintenance notification										

It is possible to monitor the offset voltage value for each channel with the cyclic (periodic) data.






 
It is possible to find problems with the equipment in detail for each channel with the cyclic (periodic) data.

It is possible to adjust the offset voltage for each channel with the cyclic (periodic) data.

#### PD\_OUT











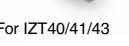



Bit offset	71	70	69	68	67	66	65	64											
Item	PD_OUT Valid/Invalid	Reservation				CH1: Ion generation	CH2: Ion generation	CH3: Ion generation	CH4: Ion generation										
Bit offset	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48			
Item	Reservation						CH1: Offset voltage adjustment (10-bit signed integer)												
Bit offset	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32			
Item	Reservation						CH2: Offset voltage adjustment (10-bit signed integer)												
Bit offset	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16			
Item	Reservation						CH3: Offset voltage adjustment (10-bit signed integer)												
Bit offset	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0			
Item	Reservation						CH4: Offset voltage adjustment (10-bit signed integer)												
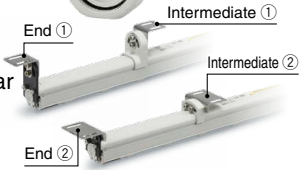
## <Models and Functions>

Series			IZT42(-L)	IZT41(-L)	IZT40	IZT43(-L)
Method of applying voltage			Dual AC	AC, DC*1	AC, DC*1	AC, DC*1
Auto balance			●	●	—	●
I/O			NPN/PNP (IZT42)	NPN/PNP (IZT41)	—	NPN/PNP (IZT43)
			IO-Link (IZT42-L)	IO-Link (IZT41-L)		IO-Link (IZT43-L)
Ion balance display			●	●	—	●
High voltage abnormality detection			●	●	●	●
Maintenance detection			●	●	—	●
Low maintenance emitter			●	●	●	●
Emitter cartridge	High speed static neutralization	For Bar 	●	●	●	—
		For Nozzle 	—	—	—	●
	Energy saving static neutralization	For Bar 	●	●	●	—
		For Nozzle 	—	—	—	●
	Energy saving high-efficiency	For Bar 	●	●	●	—
	One-touch fitting	Metric size		ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10	ø4, ø6, ø8, ø10
Inch size			ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø3/16", ø1/4", ø5/16", ø3/8"	ø1/4"
Bracket mounting			●	●	●	●
<b>Made to order</b>  p. 25 • Non-standard bar length (-X10) • Model with emitter cartridge drop prevention cover (-X14)			●	●	●	—

\*1 Apply cathode or anode to DC.

## <Accessories (for Individual Parts)>



Series		IZT42(-L)	IZT41(-L)	IZT40	IZT43(-L)					
Emitter cartridge	For Bar High speed static neutralization    Energy saving static neutralization    Energy saving high-efficiency 	●	●	●	—					
	<table border="1"> <tr> <th>Cartridge color</th> <th>Emitter material</th> </tr> <tr> <td>White</td> <td>Tungsten</td> </tr> <tr> <td>Gray</td> <td>Silicon</td> </tr> </table>	Cartridge color	Emitter material	White	Tungsten	Gray	Silicon			
Cartridge color	Emitter material									
White	Tungsten									
Gray	Silicon									
pp. 29, 51	For Nozzle  Tungsten (Color: White)	—	—	—	●					
Bracket	For Bar 	●	●	●	—					
	For Nozzle 	—	—	—	●					
pp. 29, 51										
Power supply cable (For transistor input/output)		● (IZT42)	● (IZT41)	●	● (IZT43)					
pp. 29, 51										
Power supply cable (For IO-Link)		● (IZT42-L)	● (IZT41-L)	—	● (IZT43-L)					
pp. 29, 51										
Communication cable (For IO-Link)		● (IZT42-L)	● (IZT41-L)	—	● (IZT43-L)					
pp. 29, 51										
DIN rail mounting bracket for controller and high voltage power supply module	For Controller    For High voltage power supply module 	●	●	●	●					
pp. 29, 51	For IZT40/41/43    For IZT42									
High voltage cable holder	Straight    Elbow 	●	●	●	●					
pp. 29, 51										
Drop prevention cover (Only for the bar type)		●	●	●	—					
p. 30										
AC adapter*1, *2		● (IZT42)	● (IZT41)	● (IZT40)	● (IZT43)					
pp. 30, 52										
Separate cable		●	●	●	●					
pp. 30, 52										
Cleaning kit	For Bar	●	●	●	—					
	For Nozzle	—	—	—	●					
pp. 30, 52										
High voltage cable assembly (For Nozzle)		—	—	—	●					
p. 52										
Body assembly (For Nozzle)		—	—	—	●					
p. 52										

\*1 Only for use with 1 ionizer bar/nozzle \*2 Cannot be used when the input/output specification is IO-Link




## <Application Examples: Bar Type>

For the static neutralization of resin frames

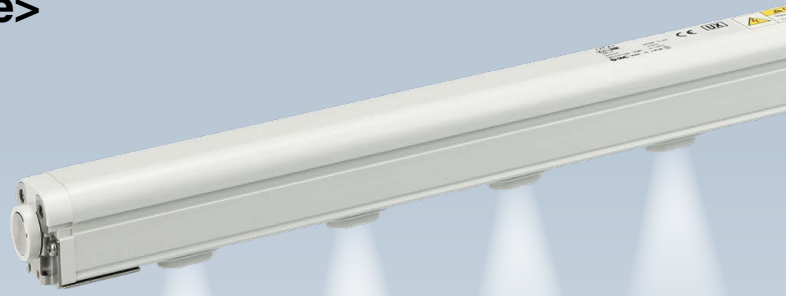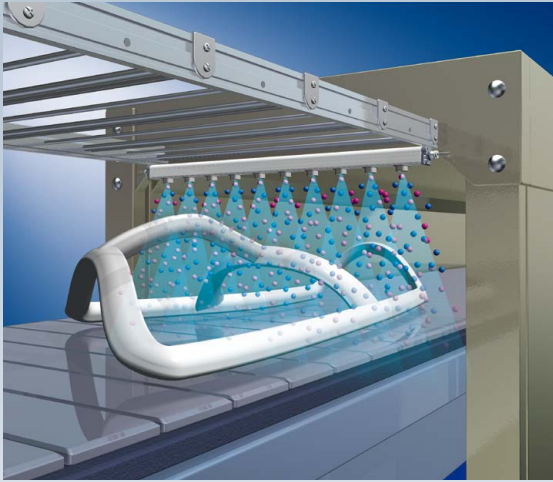


For the static neutralization of film-molded goods

- Prevents goods from adhering to the conveyer
- Prevents the dispersion of finished goods

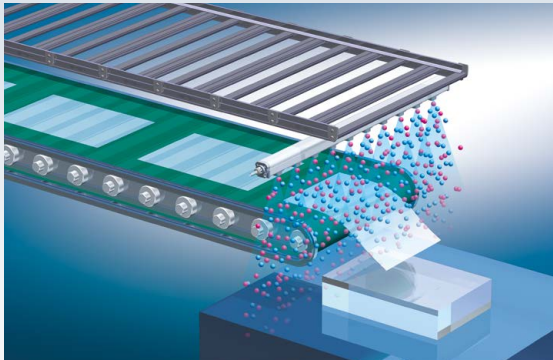


For the static neutralization of substrate cutting machines

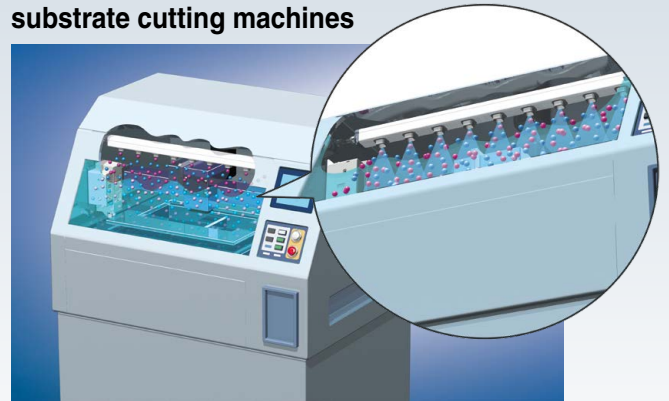


For the static neutralization of packing films

- Prevents the filled substances from adhering to packing films
- Reduces packing mistakes

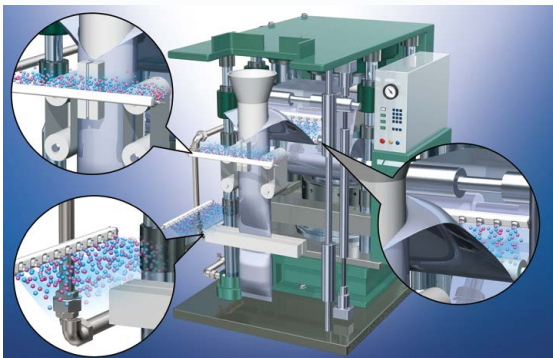


For the static neutralization during wafer transfer

- Prevents breakage due to discharge between wafers and hands

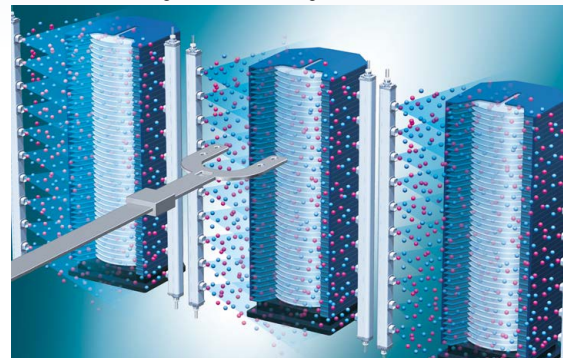


For the static neutralization of glass substrates

- Prevents the breakage of glass substrates by the static electricity generated when the substrate is lifted from the surface plate

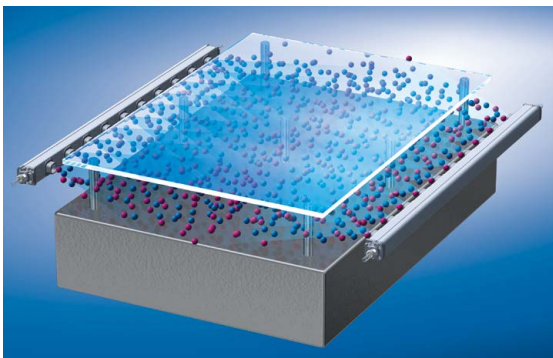

For the static neutralization of lenses


- Removes dust from lenses
- Prevents the adhesion of dust

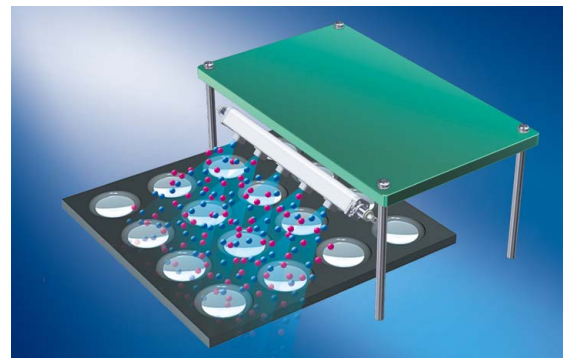

## <Application Examples: Nozzle Type>


### For the static neutralization of caps

- Removes dust from caps and prevents the adhesion of dust

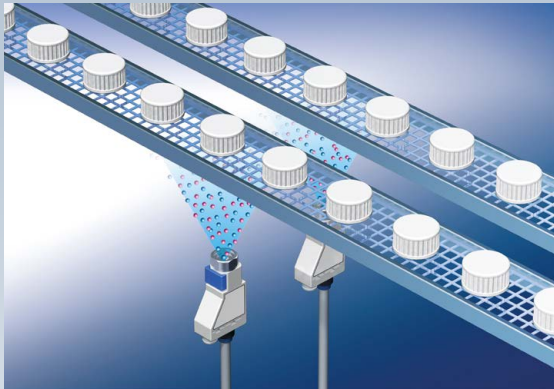


### For the static neutralization of films

- Prevents the adhesion of dust
- Prevents winding failure due to wrinkles, etc.

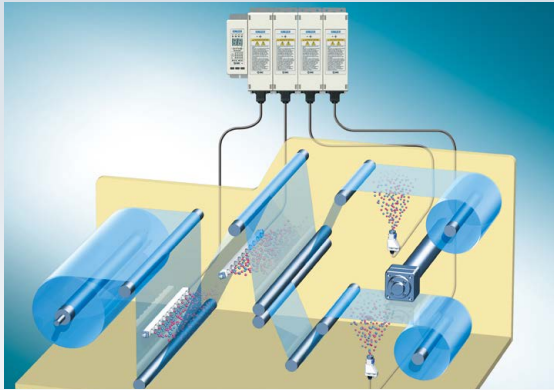


### For the static neutralization of parts feeders

- Prevents the clogging of parts feeders

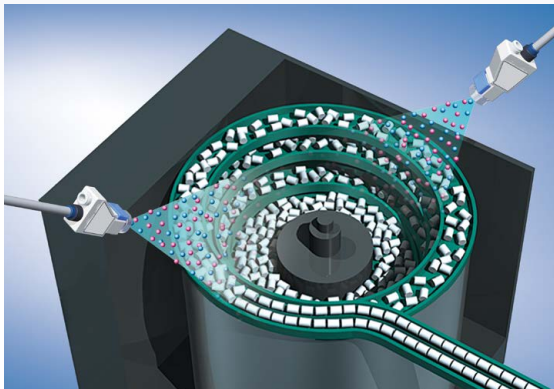


### For the removal of dust when detaching from film

- Removes dust generated by static electricity when detaching from film

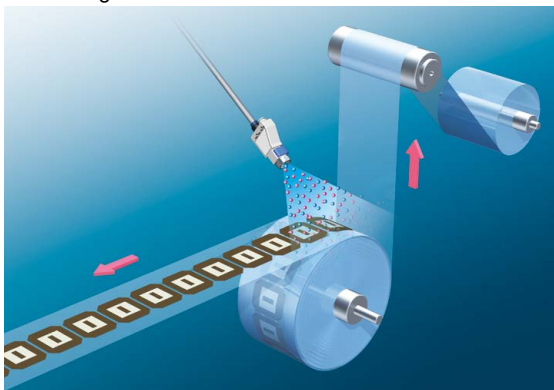


### For spot type static neutralization

- Prevents the electrostatic breakdown of electric parts
- Prevents detachment failure

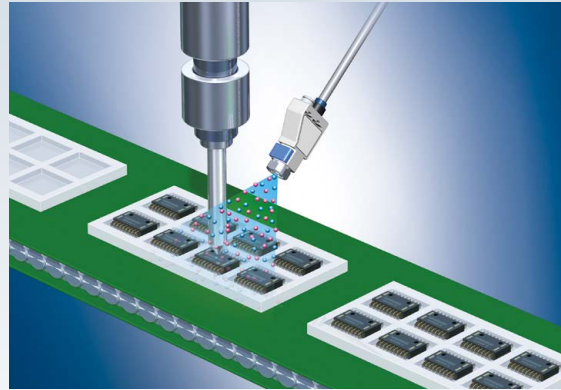


### For the static neutralization of electric substrates

- Prevents the electrostatic breakdown of electric parts

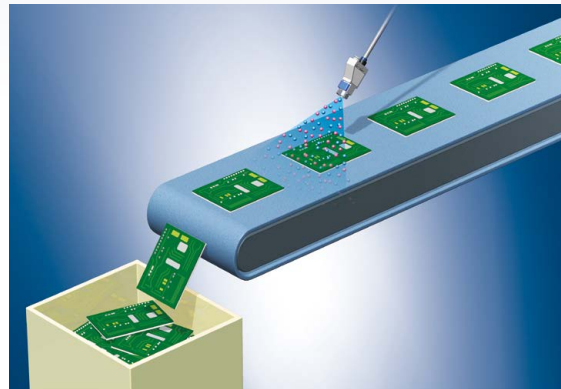

### For the prevention of punching press sticking

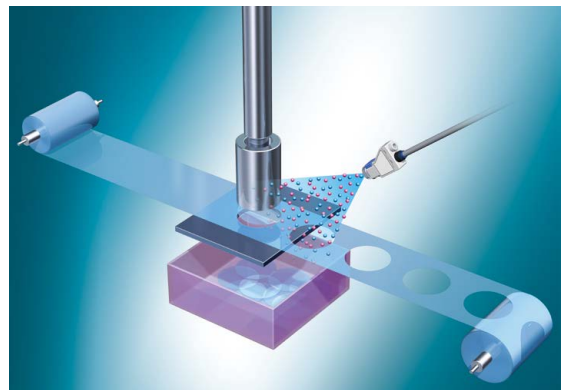





# CONTENTS

## Separate Controller Bar Type/Nozzle Type Ionizer IZT40/41(-L)/42(-L)/43(-L) Series


Dual AC Type  
IZT42(-L) Series

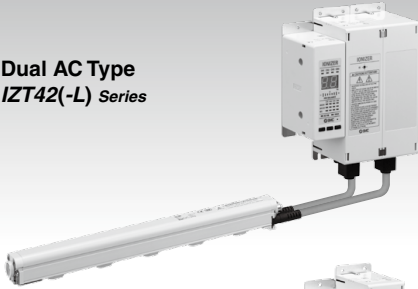

AC Type  
IZT41(-L) Series

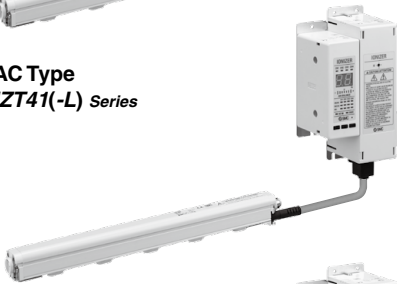

Standard Type  
IZT40 Series

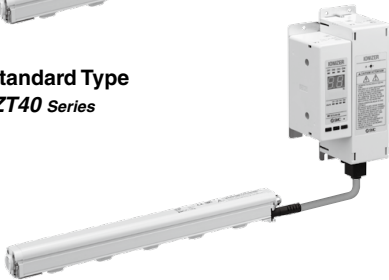

AC Type  
IZT43(-L) Series



### Separate Controller

#### Bar Type Ionizer IZT40/41(-L)/42(-L) Series

##### Technical Data: Static Neutralization Characteristics

① Installation Distance and Discharge Time	p. 15
② Static Neutralization Range	p. 16
③ Potential Amplitude	p. 19
④ Pressure — Flow Rate Characteristics	p. 20

##### How to Order

Bar + High Voltage Power Supply Module + Controller	p. 21
For Individual Parts (Bar/High Voltage Power Supply Module/Controller)	p. 23
Made to Order	p. 25

##### Specifications

Construction	p. 28
--------------	-------

##### Accessories (for Individual Parts)

Accessories Sold Separately	p. 30
-----------------------------	-------

##### Wiring: IZT40, 41(-L), 42(-L)

Wiring Circuit: IZT40	p. 31
-----------------------	-------

##### Wiring Circuit: IZT41, 42

Wiring Circuit: IZT41-L, 42-L	p. 32
-------------------------------	-------

##### Wiring Circuit: IZT41-L, 42-L

Dimensions	p. 33
------------	-------

##### IZT40, 41(-L)

IZT42(-L)	p. 34
-----------	-------

##### Controller

High Voltage Power Supply Module	p. 36
----------------------------------	-------

##### High Voltage Power Supply Module

Cable	p. 37
-------	-------

##### Cable

	p. 39
	p. 41

### Separate Controller

#### Nozzle Type Ionizer IZT43(-L) Series

##### Technical Data: Static Neutralization Characteristics

① Installation Distance and Discharge Time	p. 45
② Static Neutralization Range	p. 45
③ Pressure — Flow Rate Characteristics	p. 46

##### How to Order

Nozzle + High Voltage Power Supply Module + Controller	p. 47
For Individual Parts (Nozzle/High Voltage Power Supply Module/Controller)	p. 48

##### Specifications

Construction	p. 49
--------------	-------

##### Accessories (for Individual Parts)

Accessories Sold Separately	p. 50
-----------------------------	-------

##### Wiring: IZT43(-L)

Wiring Circuit: IZT43-L	p. 51
-------------------------	-------

##### Wiring Circuit: IZT43

Dimensions	p. 52
------------	-------

##### IZT43(-L)

Controller	p. 53
------------	-------

##### High Voltage Power Supply Module

Cable	p. 53
-------	-------

##### Cable

	p. 54
	p. 55
	p. 57
	p. 59
	p. 60

##### Glossary

Specific Product Precautions	p. 63
------------------------------	-------

##### Specific Product Precautions

	p. 64
--	-------

# IZT40/41(-L)/42(-L) Series Technical Data

## Static Neutralization Characteristics



\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ① Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)



#### IZT40, 41 AC Mode

#### IZT42 Dual AC Mode



For cartridges without air purge

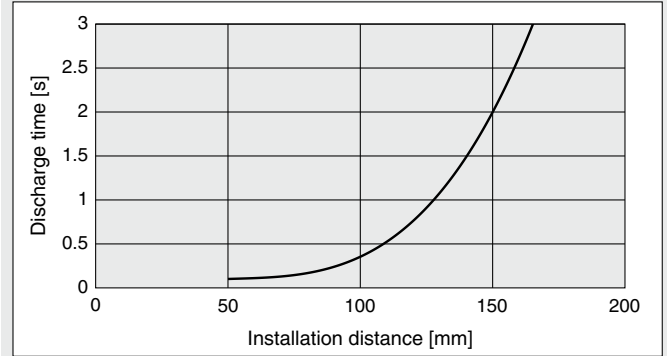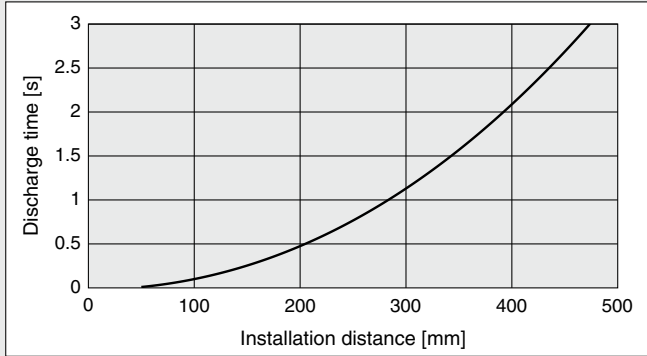



High speed static neutralization cartridge

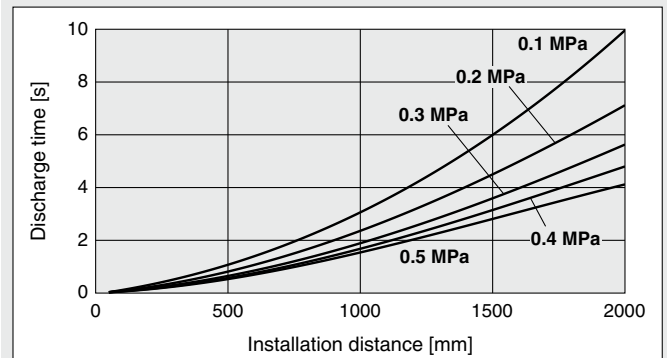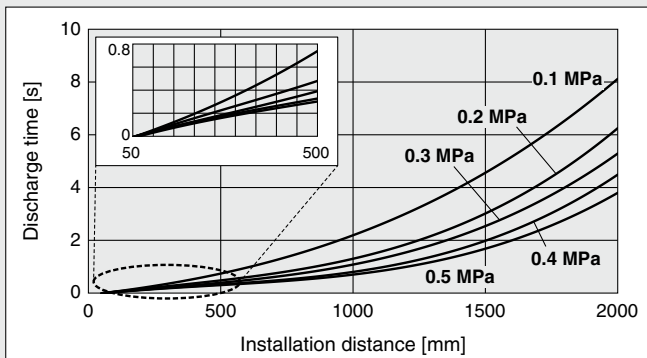

Energy saving static neutralization cartridge

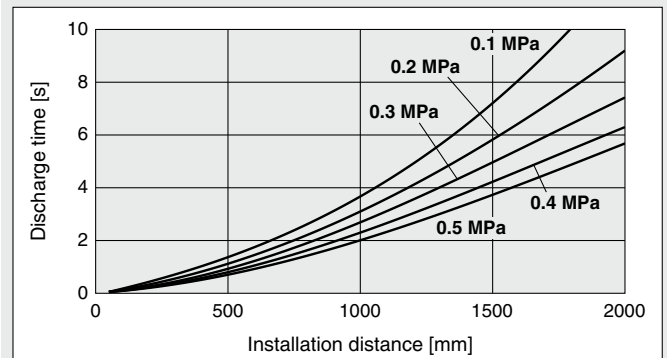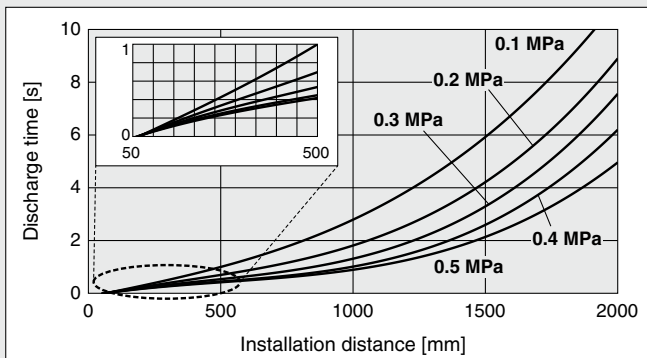

Energy saving high-efficiency cartridge

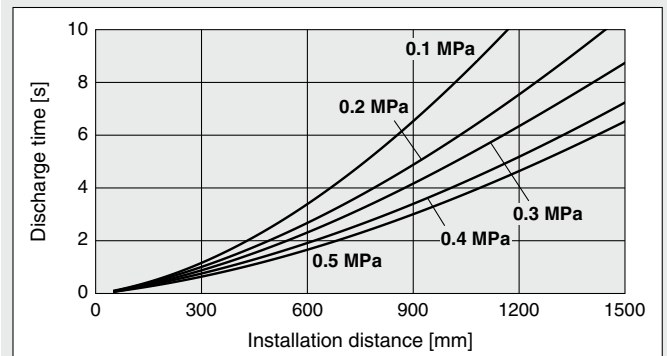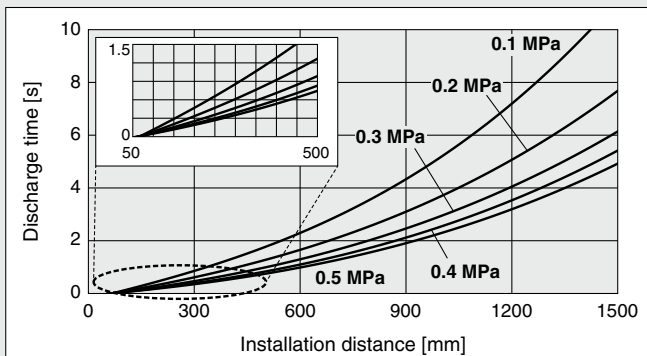



## Static Neutralization Characteristics



\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ② Static Neutralization Range (Discharge Time from 1000 V to 100 V)

#### IZT40, 41 Ion Generation Frequency: 30 Hz



##### 1) For cartridges without air purge

For IZT40-□D, L, V  
For IZT41-□D, L, V

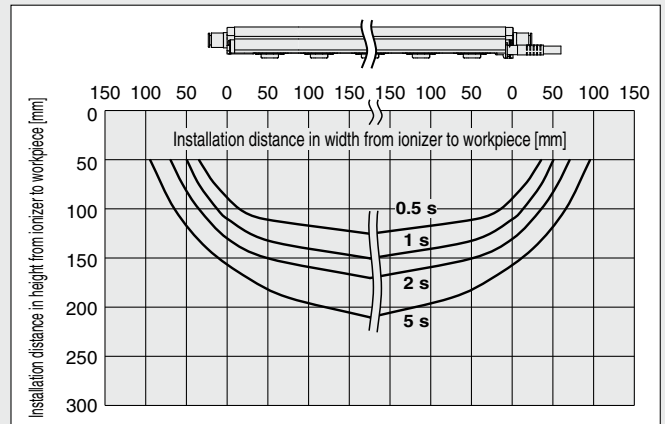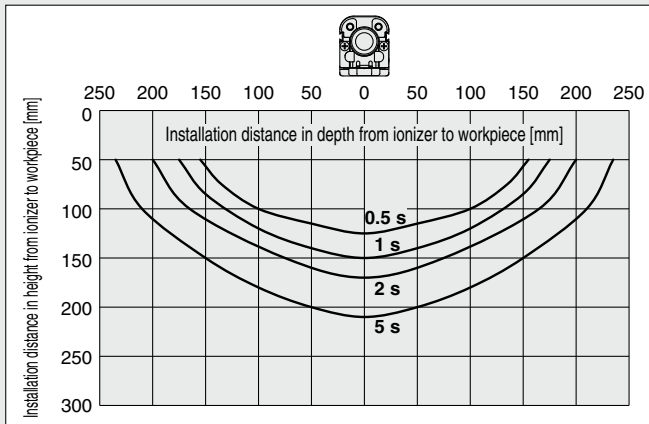



##### 2) High speed static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□D  
For IZT41-□D

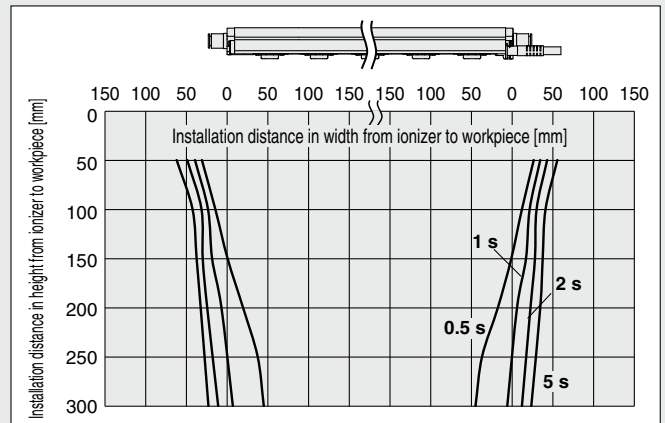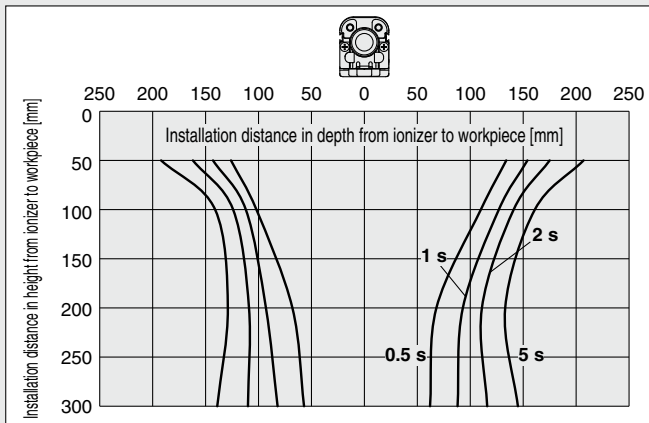

##### 3) Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT40-□L  
For IZT41-□L

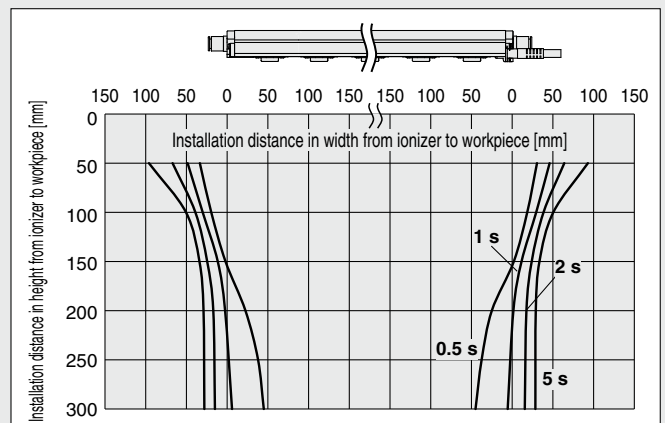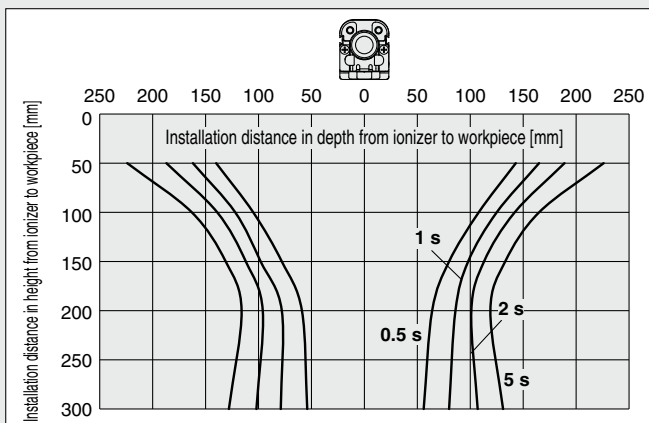

# IZT40/41(-L)/42(-L) Series

## Static Neutralization Characteristics

\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.



### ② Static Neutralization Range (Discharge Time from 1000 V to 100 V)

#### IZT40, 41 Ion Generation Frequency: 30 Hz

##### 4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

For IZT40-□V



For IZT41-□V

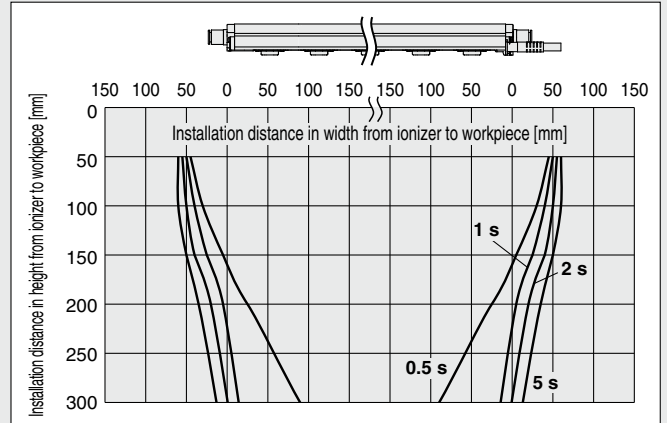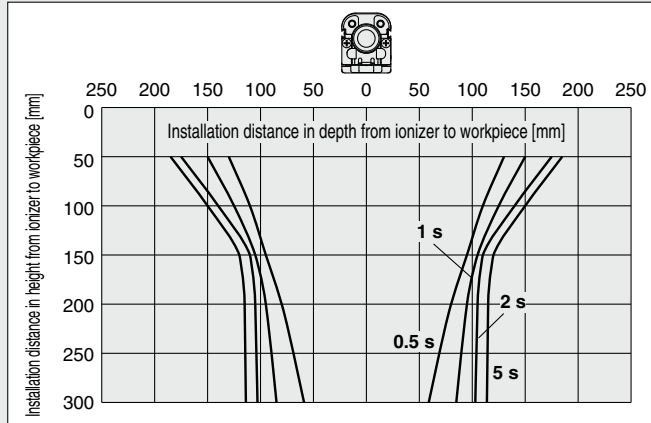

#### IZT42 Ion Generation Frequency: 30 Hz



##### 1) For cartridges without air purge

For IZT42-□D, L, V

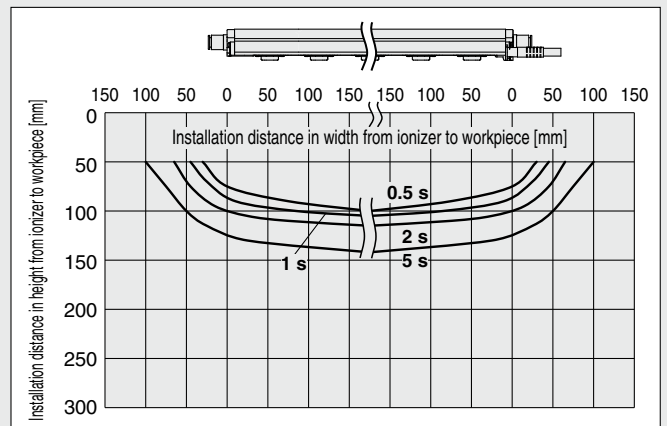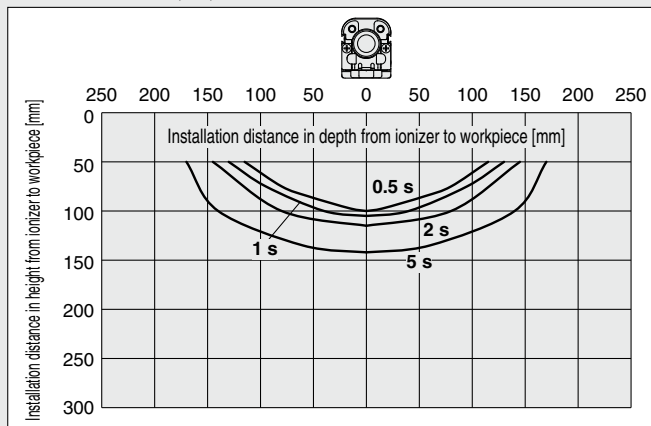

##### 2) High speed static neutralization cartridge, Supply pressure: 0.3 MPa

For IZT42-□D

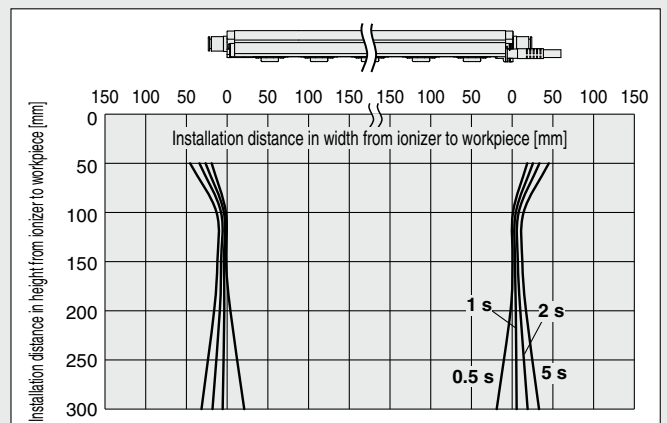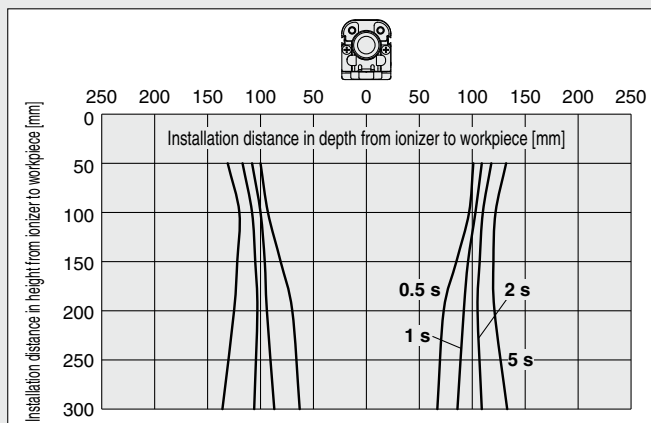

## Static Neutralization Characteristics



\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ② Static Neutralization Range (Discharge Time from 1000 V to 100 V)

#### IZT42 Ion Generation Frequency: 30 Hz



##### 3) Energy saving static neutralization cartridge, Supply pressure: 0.3 MPa

###### For IZT42-□L

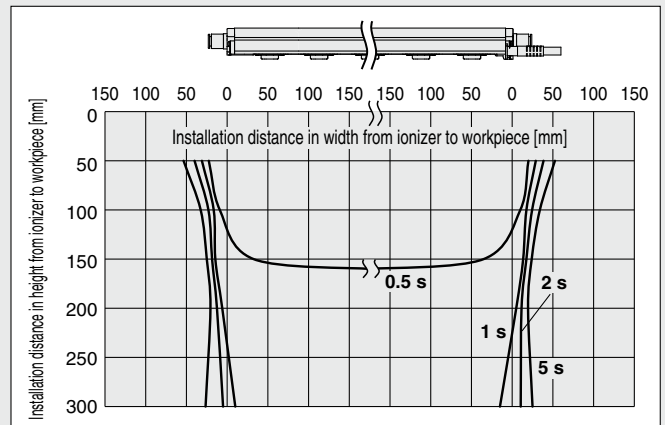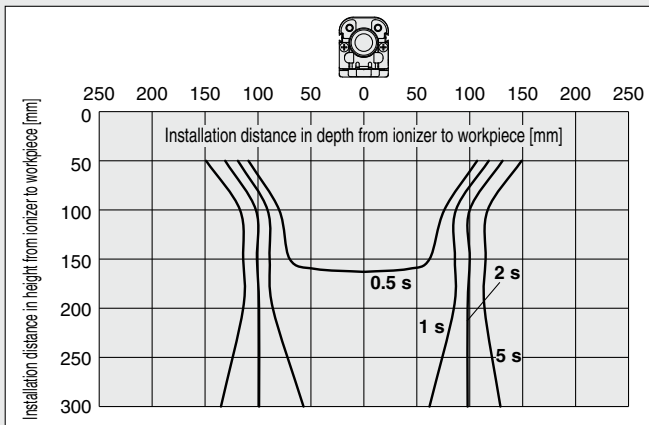

##### 4) Energy saving high-efficiency cartridge, Supply pressure: 0.3 MPa

###### For IZT42-□V

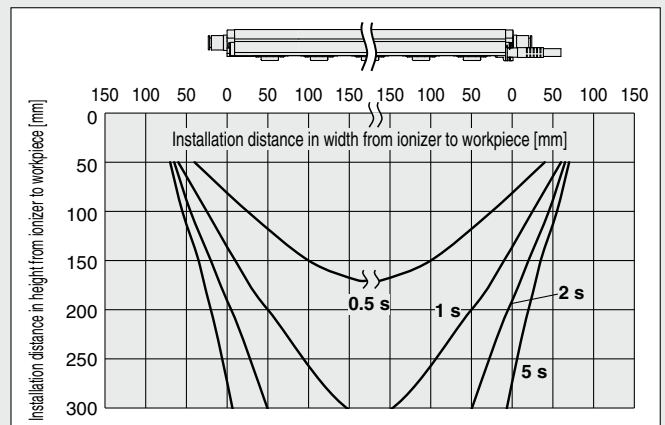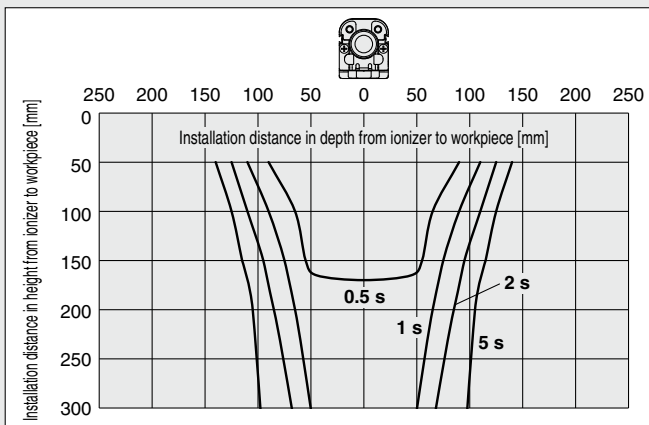

# IZT40/41(-L)/42(-L) Series

## Static Neutralization Characteristics

\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ③ Potential Amplitude



#### IZT40, 41 Supply Pressure: 0.3 MPa

#### IZT42 Supply Pressure: 0.3 MPa

##### High speed static neutralization cartridge

For IZT40-112D  
For IZT41-112D



For IZT42-112D

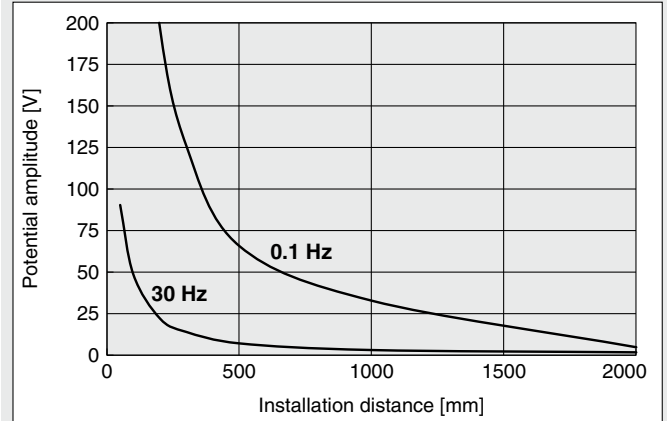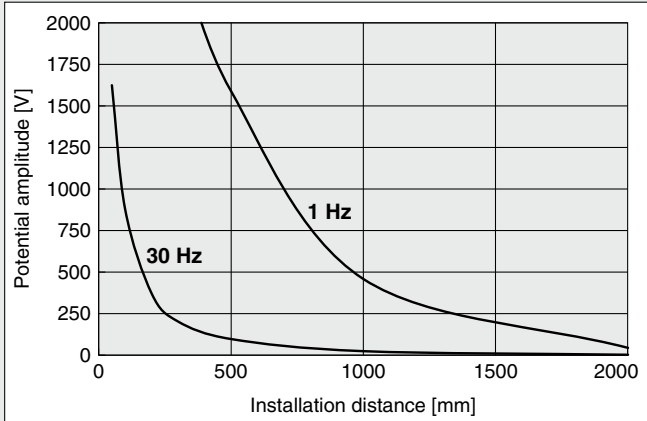

##### Energy saving static neutralization cartridge

For IZT40-112L  
For IZT41-112L



For IZT42-112L

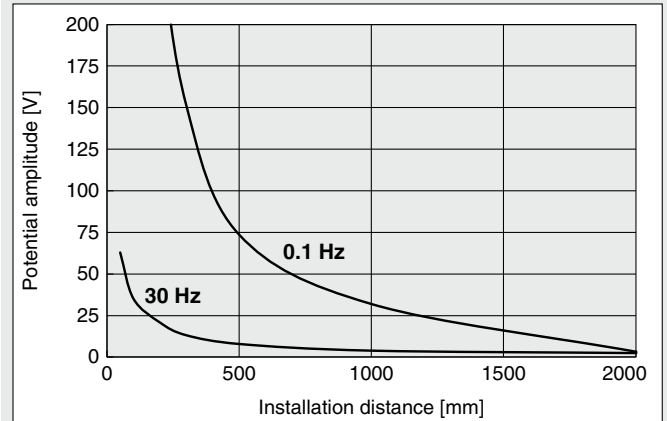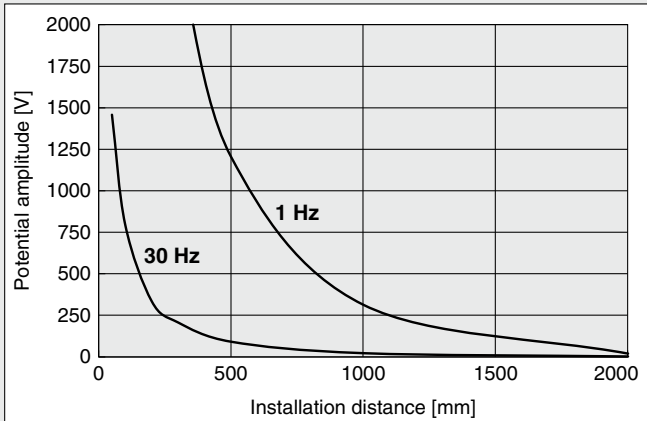

##### Energy saving high-efficiency cartridge

For IZT40-112V  
For IZT41-112V

For IZT42-112V

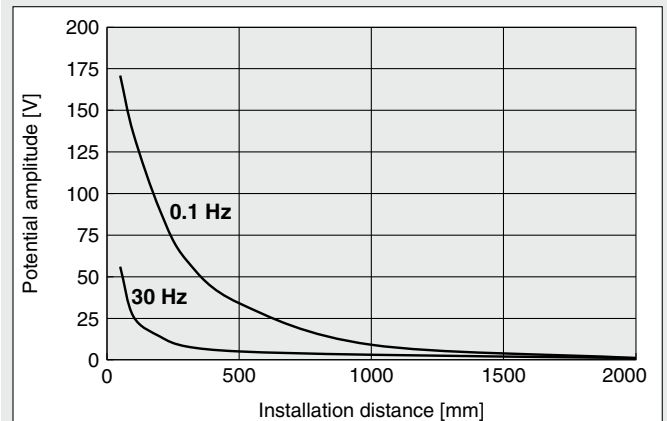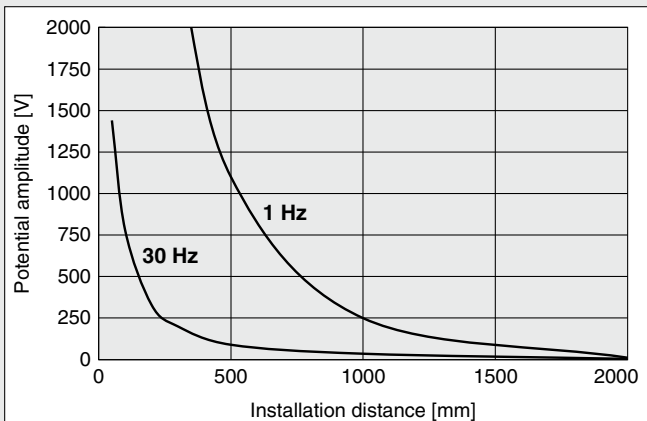




## Static Neutralization Characteristics


\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ④ Pressure — Flow Rate Characteristics


High speed static neutralization cartridge

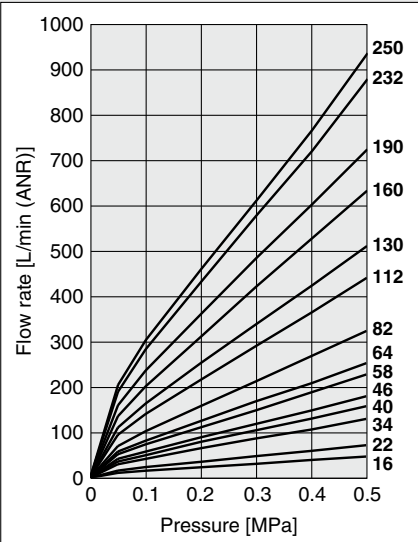

Energy saving static neutralization cartridge

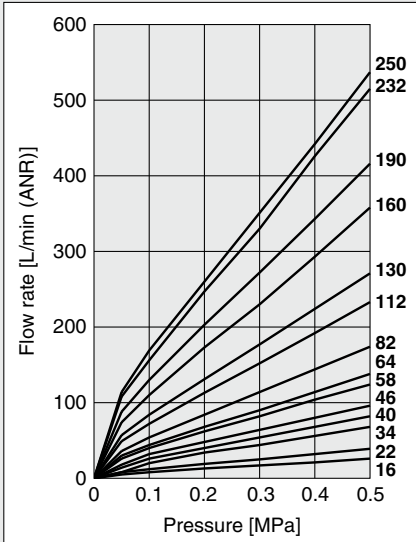


Energy saving high-efficiency cartridge

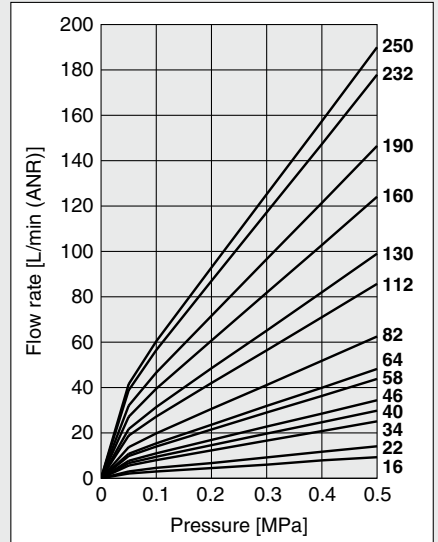

## How to measure

### a) Air supply from one side

IZT40 ]  
 IZT41 ] -16, 22, 34, 40, 46, 58 Connecting tube: O.D.  $\phi 6$  x I.D.  $\phi 4$   
 IZT42 ]

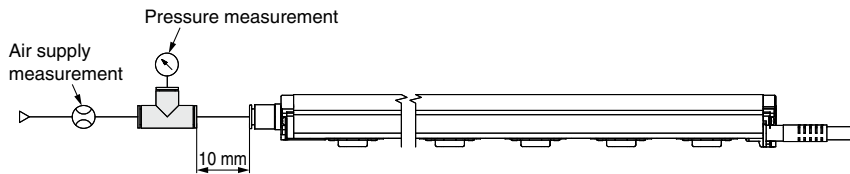


### b) Air supply from both sides

IZT40 ]  
 IZT41 ] -64, 82, 112 Connecting tube: O.D.  $\phi 6$  x I.D.  $\phi 4$   
 IZT42 ]

IZT40 ]  
 IZT41 ] -130, 160, 190 Connecting tube: O.D.  $\phi 8$  x I.D.  $\phi 5$   
 IZT42 ]

IZT40 ]  
 IZT41 ] -232, 250 Connecting tube: O.D.  $\phi 10$  x I.D.  $\phi 6.5$   
 IZT42 ]

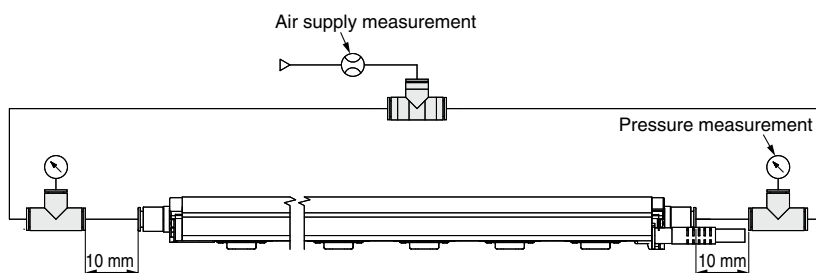


# Separate Controller Bar Type Ionizer

# IZT40/41(-L)/42(-L) Series

## How to Order

Bar + High voltage power supply module + Controller

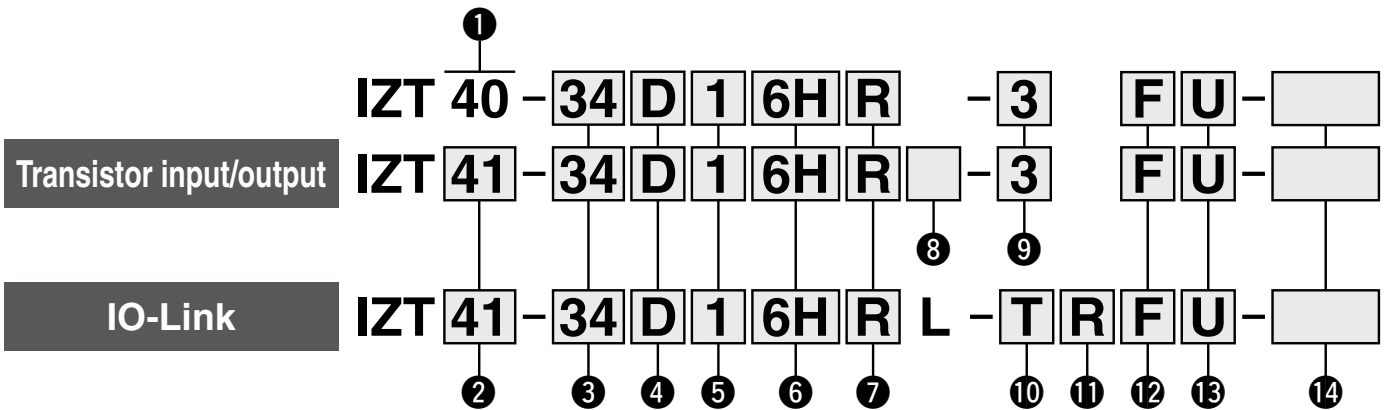

### 1 Model

Symbol	Model
40	Standard type

### 2 Model

Symbol	Model
41	AC type
42	Dual AC type

### 5 High voltage cable length

Symbol	High voltage cable length [m]
1	1
2	2
3	3

\* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

#### Number of included high voltage cable holders

⇒ Refer to page 29.

Symbol	IZT40		IZT41		IZT42	
	Straight	Elbow	Straight	Elbow	Straight	Elbow
1	1	1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

### 3 Bar length

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

### 6 One-touch fitting

Symbol	Metric size
4H	ø4 Straight
6H	ø6 Straight
8H	ø8 Straight
AH	ø10 Straight
4L	ø4 Elbow
6L	ø6 Elbow
8L	ø8 Elbow
AL	ø10 Elbow

Symbol	Inch size
5H	ø3/16" Straight
7H	ø1/4" Straight
9H	ø5/16" Straight
BH	ø3/8" Straight
5L	ø3/16" Elbow
7L	ø1/4" Elbow
9L	ø5/16" Elbow
BL	ø3/8" Elbow

\* Refer to the recommended piping port size on the next page for selecting a One-touch fitting.

### 4 Emitter cartridge type/ Emitter material

Symbol	Type	Material
D	High speed static	Tungsten
E	neutralization cartridge	Silicon
L	Energy saving static	Tungsten
M	neutralization cartridge	Silicon
V	Energy saving	Tungsten
S	high-efficiency cartridge	Silicon


### 7 Plug position

Symbol	Plug position
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

### 8 Input/Output

Symbol	Input/Output
Nil	NPN
P	PNP

\* The input/output function cannot be used when the AC adapter is being used.

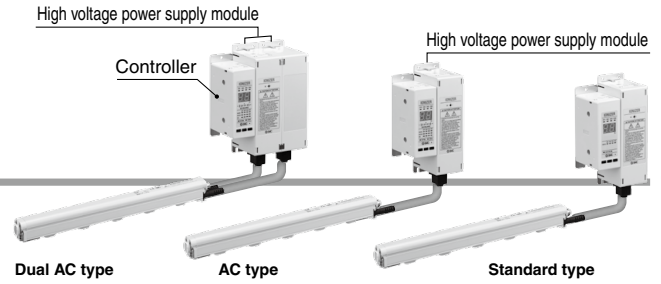

### 9 Power supply cable length

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

\* To use an AC adapter, specify "N", and select the AC adapter sold separately.

### 10 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
J	Straight	3
K		5
M		10
S		3
T	Angled	5
Z		10

### 11 Communication cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
E	Straight	0.5
G		1
H		2
J		3
K		5
M		10
P		0.5
Q		1
R	Angled	2
S		3
T		5
Z		10

### 12 Bar bracket ⇨ Refer to page 29.

Symbol	Type
Nil	Without bracket
B	With bracket 1
F	With bracket 2

\* The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

#### Number of brackets

Bar length [mm]	End bracket	Intermediate bracket
160 to 760	2	None
820 to 1600		1
1660 to 2380		2
2440 to 2500		3

### 13 DIN rail mounting bracket for controller and high voltage power supply module

⇨ Refer to page 29.

Symbol	For controller	For high voltage power supply module
Nil	None	None
U	Included	Included
W	Included	None
Y	None	Included

### 14 Made to order ⇨ Refer to page 25.

Symbol	Description
-X10	Non-standard bar length
-X14	Model with drop prevention cover

### Recommended piping port size for the IZT4□ High speed static neutralization cartridge

One-touch fitting symbol	Applicable tubing O.D. [mm]	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4	○	○	●	●	●	—	—	—	—	—	—	—	—	—
6H/6L	ø6	○	○	○	○	○	○	●	●	●	—	—	—	—	—
8H/8L	ø8	○	○	○	○	○	○	○	○	●	●	●	●	—	—
AH/AL	ø10	○	○	○	○	○	○	○	○	○	○	○	●	●	●
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

### Energy saving static neutralization cartridge

One-touch fitting symbol	Applicable tubing O.D. [mm]	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6H/6L	ø6	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8H/8L	ø8	○	○	○	○	○	○	○	○	○	○	○	○	○	○
AH/AL	ø10	○	○	○	○	○	○	○	○	○	○	○	○	○	○
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

### Energy saving high-efficiency cartridge



One-touch fitting symbol	Applicable tubing O.D. [mm]	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6H/6L	ø6	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8H/8L	ø8	○	○	○	○	○	○	○	○	○	○	○	○	○	○
AH/AL	ø10	○	○	○	○	○	○	○	○	○	○	○	○	○	○
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides

# IZT40/41(-L)/42(-L) Series

## For Individual Parts

## How to Order

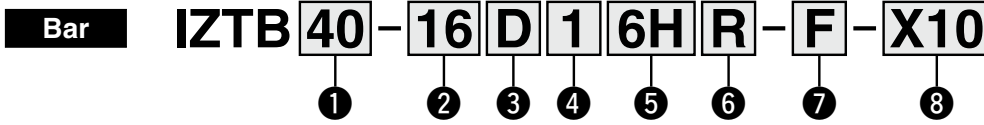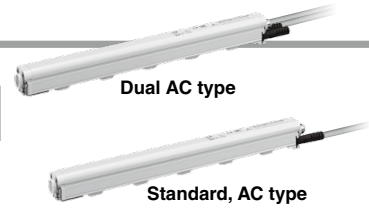

### 1 Model

Symbol	Model
40	Standard type (For IZT40), AC type (For IZT41)
42	Dual AC type (For IZT42)

### 2 Bar length

Symbol	Length [mm]	Symbol	Length [mm]
16	160	82	820
22	220	112	1120
34	340	130	1300
40	400	160	1600
46	460	190	1900
58	580	232	2320
64	640	250	2500

### 6 Plug position

Symbol	Position
Nil	Without plug
Q	High voltage cable side
R	Opposite side of the high voltage cable

### 7 Bar bracket ⇨ Refer to page 29.

Symbol	Type
Nil	Without bracket
B	With bracket 1
F	With bracket 2

\* The number of intermediate brackets differs depending on the bar length. (Refer to the table below.)

#### Number of brackets

Bar length	End bracket	Intermediate bracket
160 to 760	2	None
820 to 1600		1
1660 to 2380		2
2440 to 2500		3

### 8 Made to order ⇨ Refer to page 25.

Symbol	Description
-X10	Non-standard bar length
-X14	Model with drop prevention cover

### 3 Emitter cartridge type

Symbol	Type	Material
D	High speed static neutralization cartridge	Tungsten
E		Silicon
L	Energy saving static neutralization cartridge	Tungsten
M		Silicon
V	Energy saving high-efficiency cartridge	Tungsten
S		Silicon

### 4 High voltage cable length

Symbol	High voltage cable length [m]
1	1
2	2
3	3

\* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

#### Number of included high voltage cable holders

⇨ Refer to page 29.

Symbol	IZT40		IZT41		IZT42	
	Straight	Elbow	Straight	Elbow	Straight	Elbow
1	1	1	1	1	2	2
2	2	1	2	1	4	2
3	3	1	3	1	6	2

### Recommended piping port size for the IZT4□

#### High speed static neutralization cartridge

One-touch fitting symbol	Applicable tubing O.D.	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4 mm	○	○	●	●	●	—	—	—	—	—	—	—	—	—
6H/6L	ø6 mm	○	○	○	○	○	○	●	●	●	—	—	—	—	—
8H/8L	ø8 mm	○	○	○	○	○	○	○	○	●	●	●	●	—	—
AH/AL	ø10 mm	○	○	○	○	○	○	○	○	○	○	○	○	●	●
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

#### Energy saving static neutralization cartridge

One-touch fitting symbol	Applicable tubing O.D.	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6H/6L	ø6 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8H/8L	ø8 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
AH/AL	ø10 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides —: Unrecommended piping

#### Energy saving high-efficiency cartridge

One-touch fitting symbol	Applicable tubing O.D.	Bar length [mm]													
		160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
4H/4L	ø4 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
6H/6L	ø6 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
8H/8L	ø8 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
AH/AL	ø10 mm	○	○	○	○	○	○	○	○	○	○	○	○	○	○
5H/5L	ø3/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
7H/7L	ø1/4"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
9H/9L	ø5/16"	○	○	○	○	○	○	○	○	○	○	○	○	○	○
BH/BL	ø3/8"	○	○	○	○	○	○	○	○	○	○	○	○	○	○

○: With piping only on one side ●: With piping on both sides

## Individual Parts Combinations

	Bar/IZTB		High voltage power supply module/IZTP			Controller/IZTC	
	40	42	40	41	42	40	41
IZT40	●		●			●	
IZT41	●			●			●
IZT42		●			●		●

### ⚠ Caution

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

## Controller

IZTC **40** - **3** - **W**

## Transistor input/output

IZTC **41** - **3** - **W**

## IO-Link

IZTC **41** - **L J G** - **W**

### Transistor input/output



Standard type

### IO-Link



AC, Dual AC type

### 1 Model

Symbol	Model
40	Standard type

### 2 Model

Symbol	Model
41	AC type, Dual AC type

### 3 Input/Output

Symbol	Input/Output
Nil	NPN
P	PNP

### 4 Power supply cable length

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

### 5 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
J	Straight	3
K		5
M		10
S		3
T	Angled	5
Z		10

### 6 Communication cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
E	Straight	0.5
G		1
H		2
J		3
K		5
M		10
P		Angled
Q	1	
R	2	
S	3	
T	5	
Z	10	

### 7 DIN rail mounting bracket

⇨ Refer to page 29.

Symbol	Type
Nil	None
W	Included


## High voltage power supply module

## Transistor input/output

IZTP **41** - **Y**

## IO-Link

IZTP **41** - **L** - **Y**

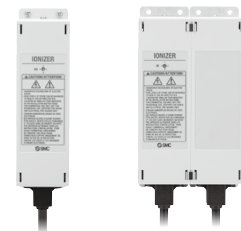

Standard, AC type

Dual AC type

### 1 Model

Symbol	Model
40	Standard type (For Bar)
41	AC type (For Bar)
42	Dual AC type (For Bar)
43	AC type (For Nozzle)

### 2 Model

Symbol	Model
41	AC type (For Bar)
42	Dual AC type (For Bar)
43	AC type (For Nozzle)

### 3 DIN rail mounting bracket

⇨ Refer to page 29.

Symbol	Type
Nil	None
Y	Included




# IZT40/41(-L)/42(-L) Series

## Made to Order

Symbol	Description	Specifications
-X10	Non-standard bar length	Manufacturable bar length (Symbol): 10 + 6 x n (n: Integer from 1 to 39) (For n = 1, 2, 4, 5, 6, 8, 9, 12, 17, 20, 25, 30, and 37, use a standard model.)

### Bar + High voltage power supply module + Controller

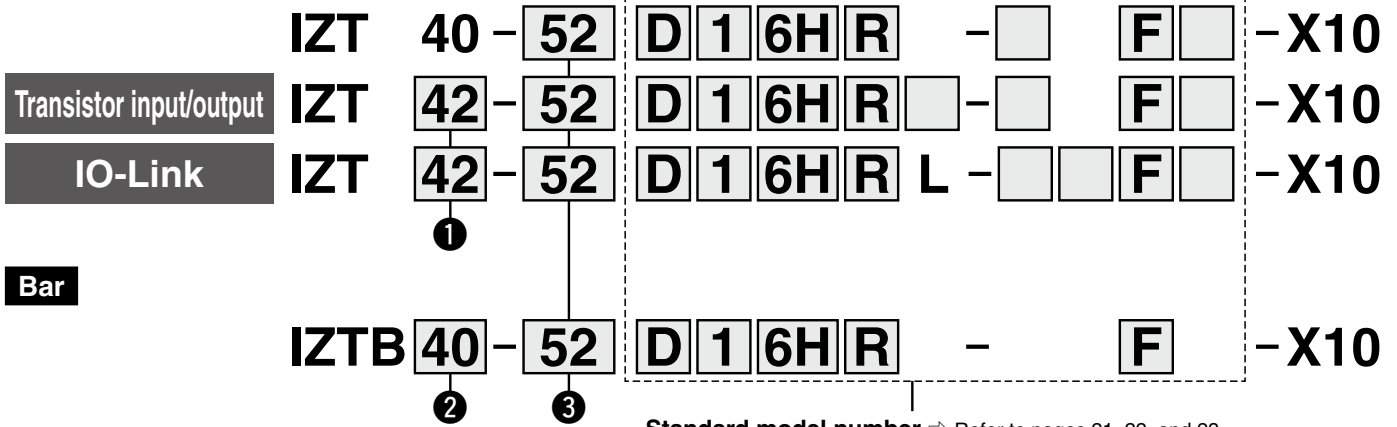

#### ① Type

41
42


#### ② Type

40
42


#### ③ Bar length

Symbol	Bar length [mm]	Symbol	Bar length [mm]	Symbol	Bar length [mm]	Symbol	Bar length [mm]
28	280	106	1060	166	1660	214	2140
52	520	118	1180	172	1720	220	2200
70	700	124	1240	178	1780	226	2260
76	760	136	1360	184	1840	238	2380
88	880	142	1420	196	1960	244	2440
94	940	148	1480	202	2020		
100	1000	154	1540	208	2080		

Symbol	Description	Specifications
-X14	Model with emitter cartridge drop prevention cover	The main unit is shipped fitted with a drop prevention cover available as an optional accessory.

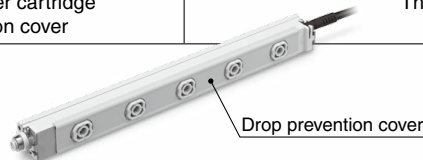

### Bar + High voltage power supply module + Controller

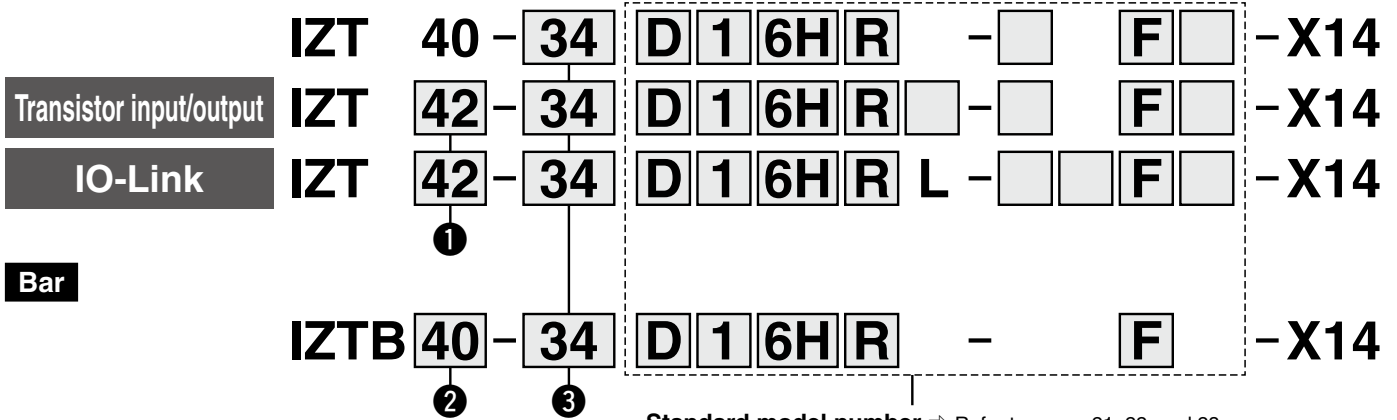

#### ① Type

41
42

#### ② Type

40
42

#### ③ Bar length

Standard	Symbol	16	22	34	40	46	58	64	82	112	130	160	190	232	250
	Bar length [mm]	160	220	340	400	460	580	640	820	1120	1300	1600	1900	2320	2500
Non-standard		The bar of non-standard length is available. Refer to the how to order above.													

## Specifications

### Ionizer Specifications

Ionizer model		IZT40	IZT41(-L)	IZT42(-L)
<b>Ion generation method</b>		Corona discharge type		
<b>Method of applying voltage</b>		AC, DC*1		Dual AC
<b>Applied voltage</b>		±7000 V		±6000 V
<b>Offset voltage*2</b>		Within ±30 V		
<b>Air purge</b>	<b>Fluid</b>	Air (Clean, dry air)		
	<b>Operating pressure</b>	0.5 MPa or less		
	<b>Proof pressure</b>	0.7 MPa		
	<b>Connecting tube size (One side can be plugged.)</b>	Metric size: ø4, ø6, ø8, ø10 Inch size: ø3/16", ø1/4", ø5/16", ø3/8"		
<b>Current consumption</b>		0.7 A or less (+0.6 A or less per ionizer when connected)	0.8 A or less (+0.7 A or less per ionizer when connected)	1.4 A or less (+1.3 A or less per ionizer when connected)
<b>Power supply voltage</b>		24 VDC ±10%		
<b>Input signal*3</b>	<b>NPN specification</b>	—	Connected to DC (-) Voltage range: 5 VDC or less Current consumption: 5 mA or less	
	<b>PNP specification</b>		Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less	
<b>Output signal*3</b>	<b>NPN specification</b>	—	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC	
	<b>PNP specification</b>		Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)	
<b>IO-Link device*4</b>		—	Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table below.	
<b>Function</b>		High voltage abnormality detection (Ion generation stops when an abnormality is detected.)	Auto balance, Maintenance detection, High voltage abnormality detection (Ion generation stops when an abnormality is detected.), and Ion generation stop input	
<b>Effective static neutralization distance</b>		50 to 2000 mm		
<b>Ambient and fluid temperatures</b>	<b>Controller, High voltage power supply module</b>	0 to 40°C		
	<b>Bar</b>	0 to 50°C		
<b>Ambient humidity</b>		35 to 80% Rh (No condensation)		
<b>Material</b>	<b>Controller</b>	Cover: ABS, Aluminum, Switch: Silicone rubber*3		
	<b>High voltage power supply module</b>	ABS, Aluminum		
	<b>Bar</b>	Cover: ABS, Emitter cartridge: PBT, Emitter: Tungsten or Single crystal silicon, High voltage cable: Silicone rubber, PVC		
<b>Standards/Directive</b>		CE marking (EMC Directive)		

\*1 Apply cathode or anode to DC.

\*2 When air purge is performed between a charged object and an ionizer at a distance of 300 mm

\*3 For transistor input/output specification products

\*4 For IO-Link compatible products

### IO-Link Communication Specifications

<b>IO-Link type</b>	Device
<b>IO-Link version</b>	V1.1
<b>Configuration file format</b>	IODD file*1
<b>Communication speed</b>	COM2 (38.4 kbps)
<b>Min. cycle time</b>	8.0 ms
<b>Process data length</b>	Input data: 13 bytes, Output data: 9 bytes
<b>On request data communication</b>	Yes
<b>Data storage function</b>	Yes
<b>Event function</b>	Yes
<b>Vendor ID</b>	131 (0 x 0083)
<b>Device ID</b>	581 (0 x 000245)

\*1 The configuration file can be downloaded from the SMC website: <https://www.smcworld.com>

# IZT40/41(-L)/42(-L) Series

## Specifications

### Weight [g]

	Controller	High voltage power supply module
<b>IZT40</b>	210 (230)	680 (690)
<b>IZT41(-L)</b>	210 (230)	680 (690)
<b>IZT42(-L)</b>	210 (230)	1350 (1360)

\* The values in ( ) are for IO-Link compatible products.

### Number of Emitter Cartridges/Bar Weight


[g]

Bar length symbol		16	22	34	40	46	58	64	82	112	130	160	190	232	250
<b>Number of emitter cartridges (pcs.)</b>		2	3	5	6	7	9	10	13	18	21	26	31	38	41
<b>IZT40</b> <b>IZT41</b> (Common for bars)	High voltage cable (1 m)	360	420	530	590	650	760	820	990	1270	1440	1720	2010	2410	2580
	High voltage cable (2 m)	490	550	660	720	780	890	950	1120	1400	1570	1850	2140	2540	2710
	High voltage cable (3 m)	610	670	780	840	900	1010	1070	1240	1520	1690	1970	2260	2660	2830
<b>IZT42</b>	High voltage cable (1 m)	520	580	690	750	810	920	980	1150	1430	1600	1880	2170	2570	2740
	High voltage cable (2 m)	770	830	940	1000	1060	1170	1230	1400	1680	1850	2130	2420	2820	2990
	High voltage cable (3 m)	1010	1070	1180	1240	1300	1410	1470	1640	1920	2090	2370	2660	3060	3230


### AC Adapter (Sold Separately) ⇨ Refer to page 30.

Model	<b>IZT40-CG1, IZT40-CG2</b>
<b>Input voltage</b>	100 to 240 VAC, 50/60 Hz
<b>Output current</b>	1.9 A
<b>Ambient temperature</b>	0 to 40°C
<b>Ambient humidity</b>	35 to 65% Rh (No condensation)
<b>Weight</b>	375 g
<b>Standards/Directive</b>	CE, cUL

## Construction

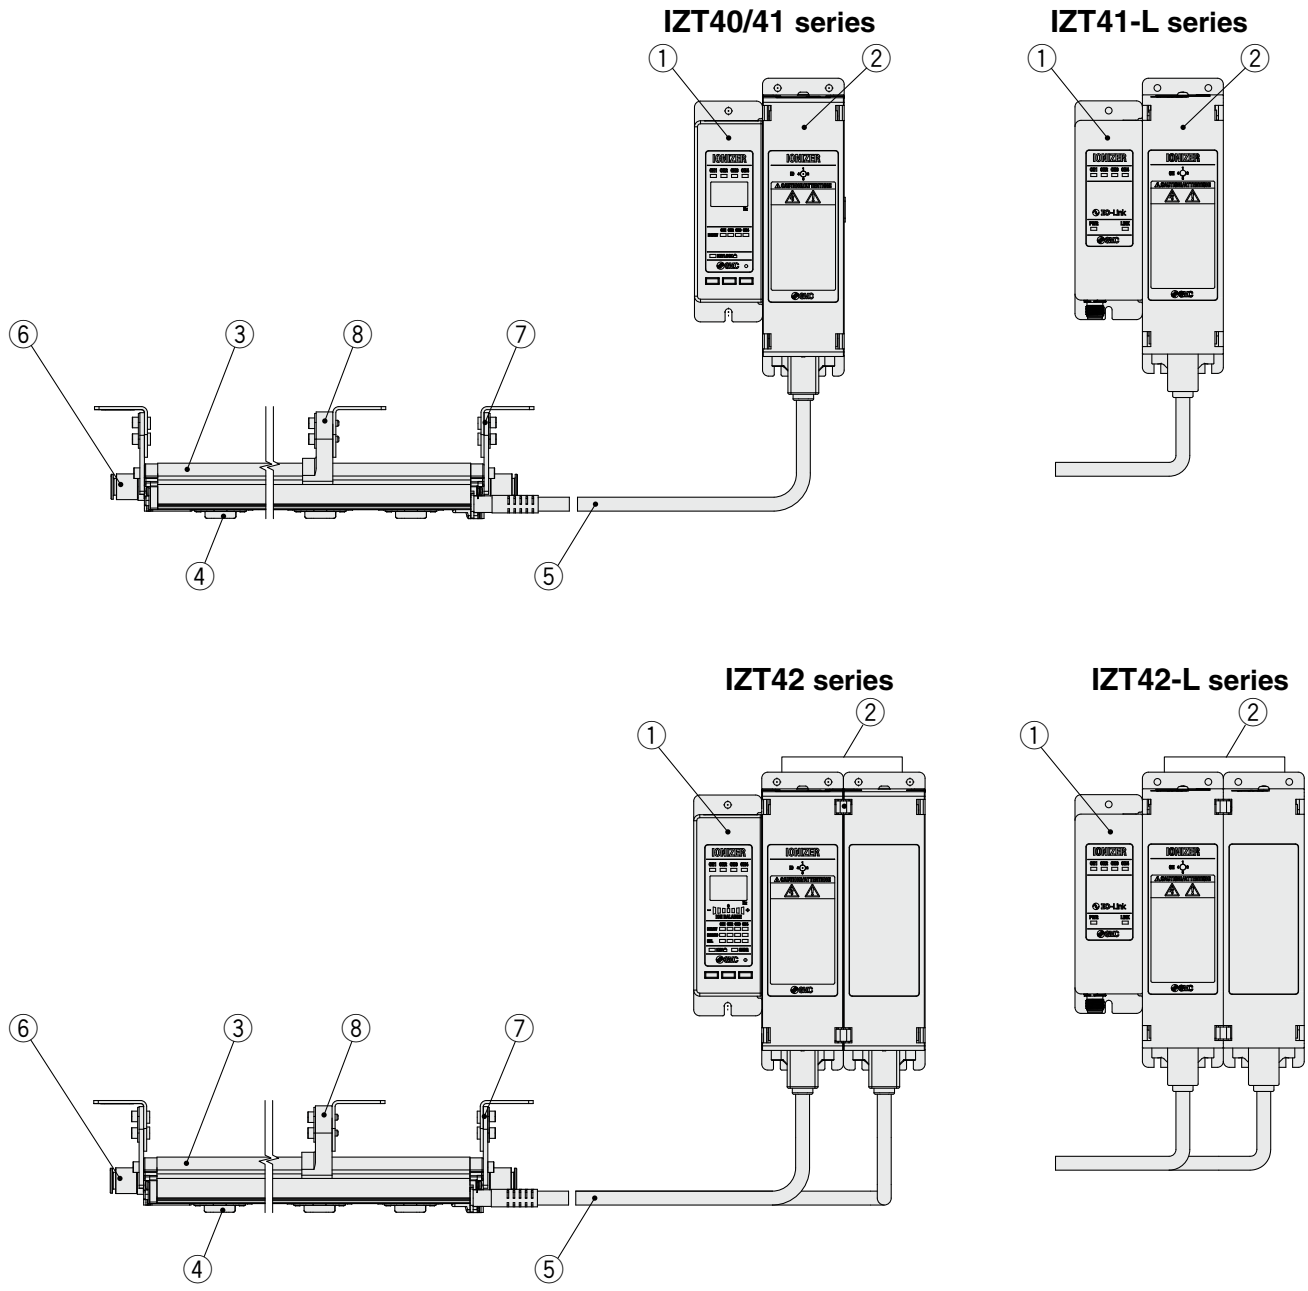

No.	Description
1	Controller
2	High voltage power supply module
3	Bar
4	Emitter cartridge
5	High voltage cable
6	One-touch fitting
7	End bracket
8	Intermediate bracket
9	Power supply cable
10	Communication cable

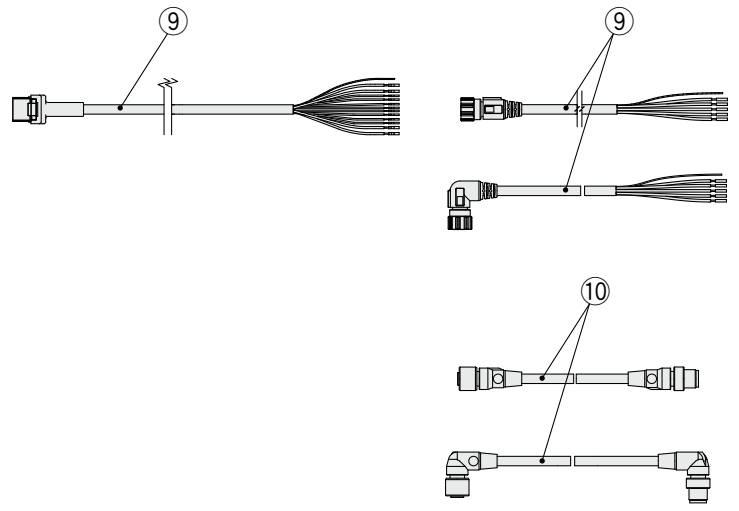

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)

Glossary

Specific Product Precautions

# IZT40/41(-L)/42(-L) Series

## Accessories (for Individual Parts)

### Emitter cartridge (For IZT40, 41(-L), 42(-L))

#### IZT40 - N **D**

High speed static neutralization



Energy saving static neutralization



#### • Emitter cartridge type/Emitter material

Symbol	Type	Material
<b>D</b>	High speed static neutralization cartridge	Tungsten
<b>E</b>	High speed static neutralization cartridge	Silicon
<b>L</b>	Energy saving static neutralization cartridge	Tungsten
<b>M</b>	Energy saving static neutralization cartridge	Silicon

Cartridge color	Emitter material
White	Tungsten
Gray	Silicon

#### IZS40 - N **V**

Energy saving high-efficiency



#### • Emitter cartridge type/Emitter material

Symbol	Type	Material
<b>V</b>	Energy saving high-efficiency cartridge	Tungsten
<b>S</b>	Energy saving high-efficiency cartridge	Silicon

Cartridge color	Emitter material
White	Tungsten
Gray	Silicon

### Bar bracket (For IZT40, 41(-L), 42(-L))

#### IZT40 - B **E1**

#### • Bar bracket

Symbol	Type
<b>E1</b>	End bracket 1
<b>E2</b>	End bracket 2
<b>M1</b>	Intermediate bracket 1
<b>M2</b>	Intermediate bracket 2

\* Refer to the table below for selecting a bracket.

#### Bracket combinations

	Intermediate bracket 1	Intermediate bracket 2
End bracket 1	○ (Adjustment angle $\pm 90^\circ$ )	×
End bracket 2	×	○ (Adjustment angle $\pm 15^\circ$ )

○: Available ×: Not available

\* The number of intermediate brackets required, as listed below, depends on the bar length. Two end brackets are always required regardless of the bar length.

#### Number of brackets

Bar length	End bracket	Intermediate bracket
160 to 760	2	None
820 to 1600		1
1660 to 2380		2
2440 to 2500		3

IZT40-BE1  
End bracket 1



IZT40-BM1  
Intermediate bracket 1

IZT40-BM2  
Intermediate bracket 2

IZT40-BE2  
End bracket 2



### Power supply cable (IZT40, 41, 42)

#### IZT40 - CP **3**

Cable specifications  
⇒ Refer to page 41.



#### • Power supply cable length

Symbol	Length [m]
<b>3</b>	3
<b>5</b>	5
<b>10</b>	10
<b>15</b>	15

### IO-Link power supply cable (IZT41-L, 42-L)

#### IZT41 - CP **J**



#### • Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
<b>J</b>	Straight	3
<b>K</b>		5
<b>M</b>		10
<b>S</b>	Angled	3
<b>T</b>		5
<b>Z</b>		10

### IO-Link communication cable (IZT41-L, 42-L)

#### IZT41 - CE **G**



#### • Communication cable entry direction/length

Symbol	Entry direction	Length [m]
<b>E</b>	Straight	0.5
<b>G</b>		1
<b>H</b>		2
<b>J</b>		3
<b>K</b>		5
<b>M</b>		10
<b>P</b>	Angled	0.5
<b>Q</b>		1
<b>R</b>		2
<b>S</b>		3
<b>T</b>		5
<b>Z</b>		10

### DIN rail mounting bracket for controller and high voltage power supply module

#### IZT40 - B **1**

#### • DIN rail mounting bracket

Symbol	Type
<b>1</b>	For Controller
<b>2</b>	For High voltage power supply module
<b>3</b>	For High voltage power supply module for IZT42

For Controller

For High voltage power supply module


For IZT42



IZT40-B1



IZT40-B2

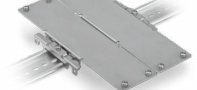

IZT40-B3

### High voltage cable holder

#### IZT40 - E **1**

#### • High voltage cable holder

Symbol	Type
<b>1</b>	Straight
<b>2</b>	Elbow

Straight



IZT40-E1

Elbow



IZT40-E2



**Accessories Sold Separately**

Drop prevention cover (For IZT40, 41(-L), 42(-L))

**IZS40 - E** 2

● Number of fixed emitter cartridges


Symbol	Type
2	2 pcs.
3	3 pcs.
4	4 pcs.
5	5 pcs.

**Standard bar length**


Bar length symbol	Number of required drop prevention covers			
	IZS40-E2	IZS40-E3	IZS40-E4	IZS40-E5
16	1	—	—	—
22	—	1	—	—
34	—	—	—	1
40	—	2	—	—
46	—	1	1	—
58	—	—	1	1
64	—	—	—	2
82	—	1	—	2
112	—	1	—	3
130	—	2	—	3
160	—	2	—	4
190	—	2	—	5
232	—	1	—	7
250	—	2	—	7

\* Please contact SMC for the non-standard bar length.

Mounted part of emitter cartridge

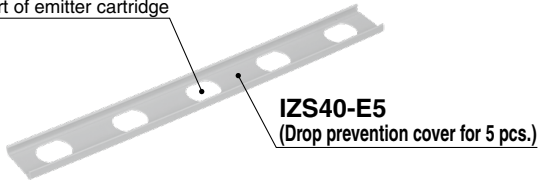

The model number requires the suffix "-X14" to indicate that the body is to be shipped fitted with a drop prevention cover.  
⇒ Refer to page 25.

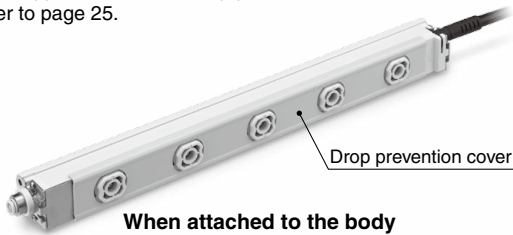

AC adapter (IZT40, 41, 42)

**IZT40 - CG** 1

● AC cord selection

Symbol	Type
1	With AC cord
2	Without AC cord

\* AC cord is only for use in Japan. (Rated voltage 125 V, Plug JIS C 8303, Inlet IEC 60320-C6) External input and output cannot be used when the AC adapter is being used.  
\* Cannot be used for the IO-Link specification



AC adapter

Separate cable (IZT40, 41, 42)

**IZT40 - CF** 1

● Cable length

Symbol	Length [m]
1	1
2	2
3	3



Cleaning kit (For IZT40, 41, 42)

**IZS30 - M2**



Replacement felt pad: IZS30-A0201  
Replacement rubber grindstone: IZS30-A0202

# IZT40/41(-L)/42(-L) Series

## Wiring: IZT40, 41(-L), 42(-L)

### IZT40

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connect the power supply to operate the product.
Blue	DC (-)	IN	
Green	F.G.	—	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	—	—
Gray	Ion generation stop signal CH2	—	—
Yellow	Ion generation stop signal CH3	—	—
Purple	Ion generation stop signal CH4	—	—
White	Maintenance detection signal	—	—
Black	Error signal	—	—
Orange	Unused	—	—

### IZT41, 42

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connect the power supply to operate the product.
Blue	DC (-)	IN	
Green	F.G.	—	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ON/OFF ion generation of each bar (CH1 to 4).
Gray	Ion generation stop signal CH2	IN	NPN specification: Stops generating ions by connecting to 0 V. (Starts generating ions when disconnected.) PNP specification: Stops generating ions by connecting to +24 VDC. (Starts generating ions when disconnected.)
Yellow	Ion generation stop signal CH3	IN	
Purple	Ion generation stop signal CH4	IN	
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning.
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem).
Orange	—	—	—

### IZT41-L, 42-L: IO-Link Power Supply Cable

No.	Cable color	Signal name	Description
1	Brown	DC (+)	Connect the power supply to operate the ionizer.
2			
3	Blue	DC (-)	
4			
5	Green	F.G.	

### IZT41-L, 42-L: IO-Link Communication Cable


No.	Signal name	Description
1	L+	Power supply for IO-Link
2	—	—
3	L-	Power supply for IO-Link
4	C/Q	—
5	—	—

\* Refer to the power supply cable dimensions on page 41 for the cable specifications.



### Frequencies

Series	IZT40	IZT41(-L)	IZT42(-L)
Controller	IZTC40	IZTC41(-L)	
Frequency [Hz]	1	1	0.1
	3	3	0.5
	5	5	1
	8	8	3
	10	10	5
	15	15	8
	20	20	10
	30	30	15
	DC+	DC+	20
	DC-	DC-	30

## Wiring Circuit: IZT40

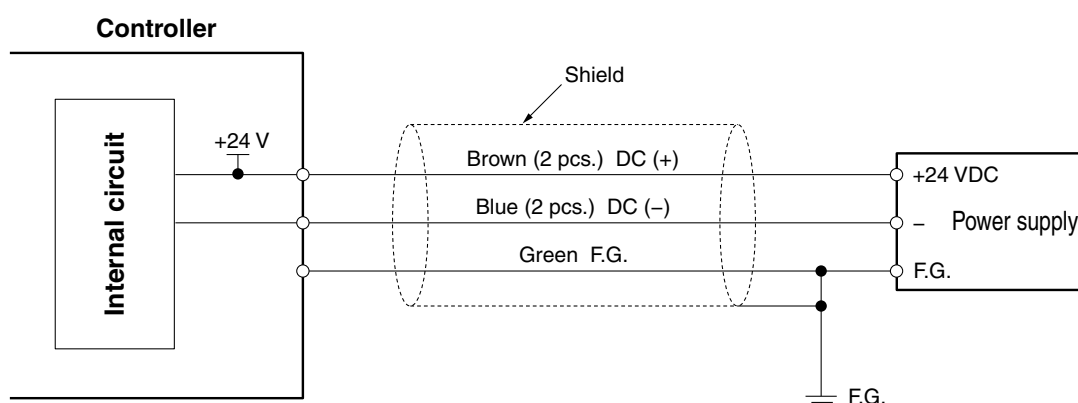


**Wiring Circuit: IZT41, 42**

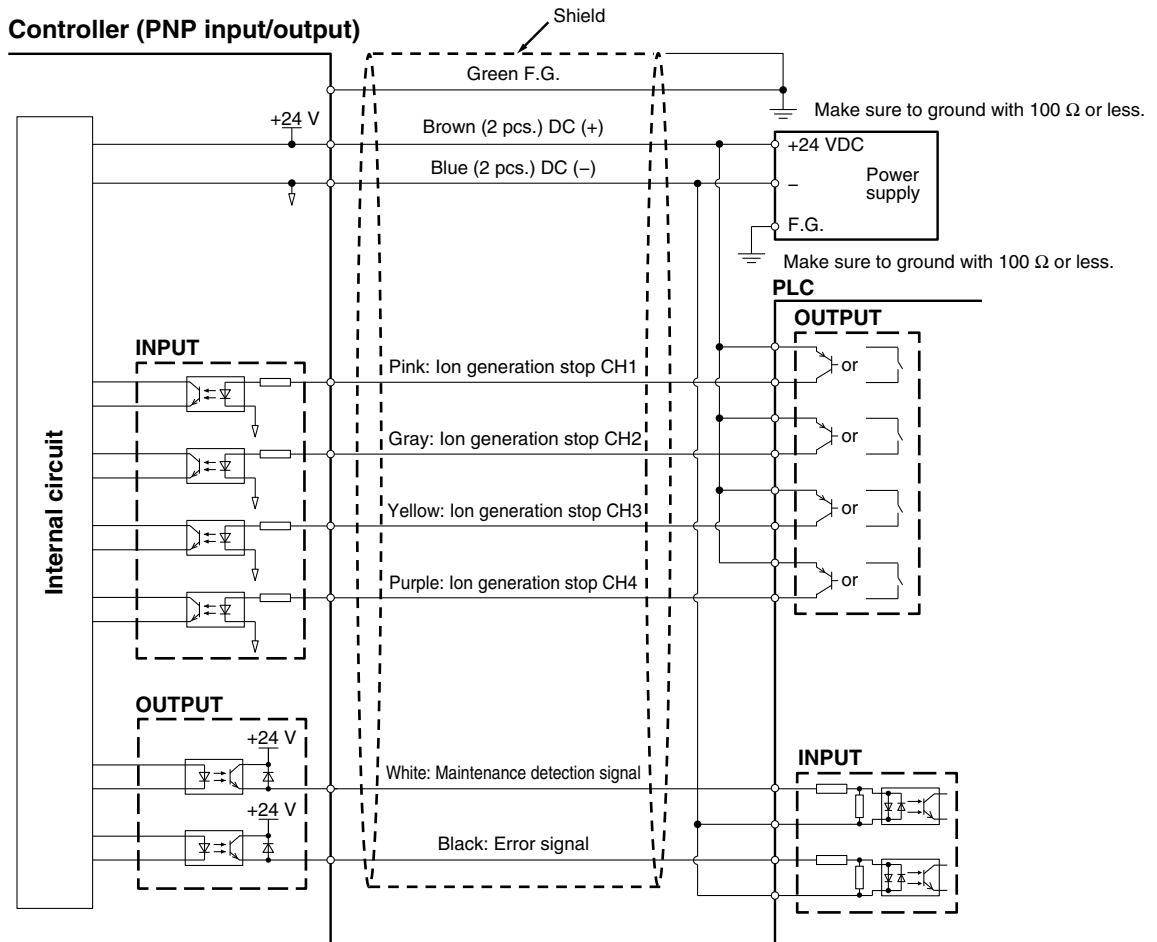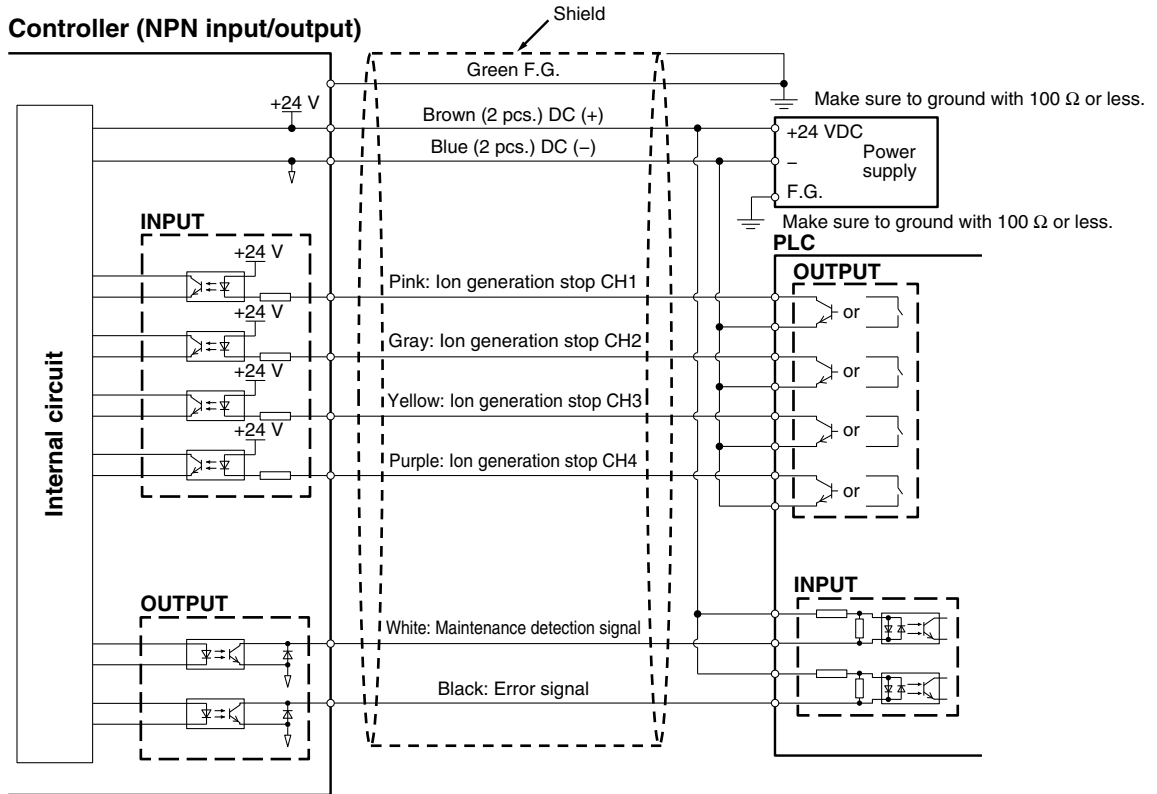


# IZT40/41(-L)/42(-L) Series

## Wiring Circuit: IZT41-L, 42-L

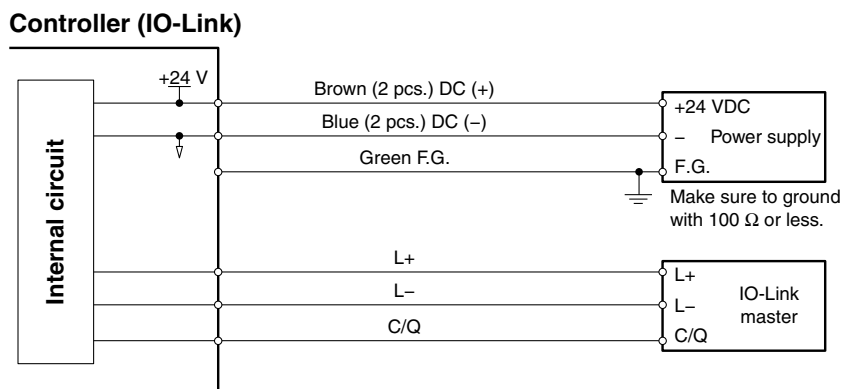

## Dimensions

### Ionizer IZT40, 41(-L)

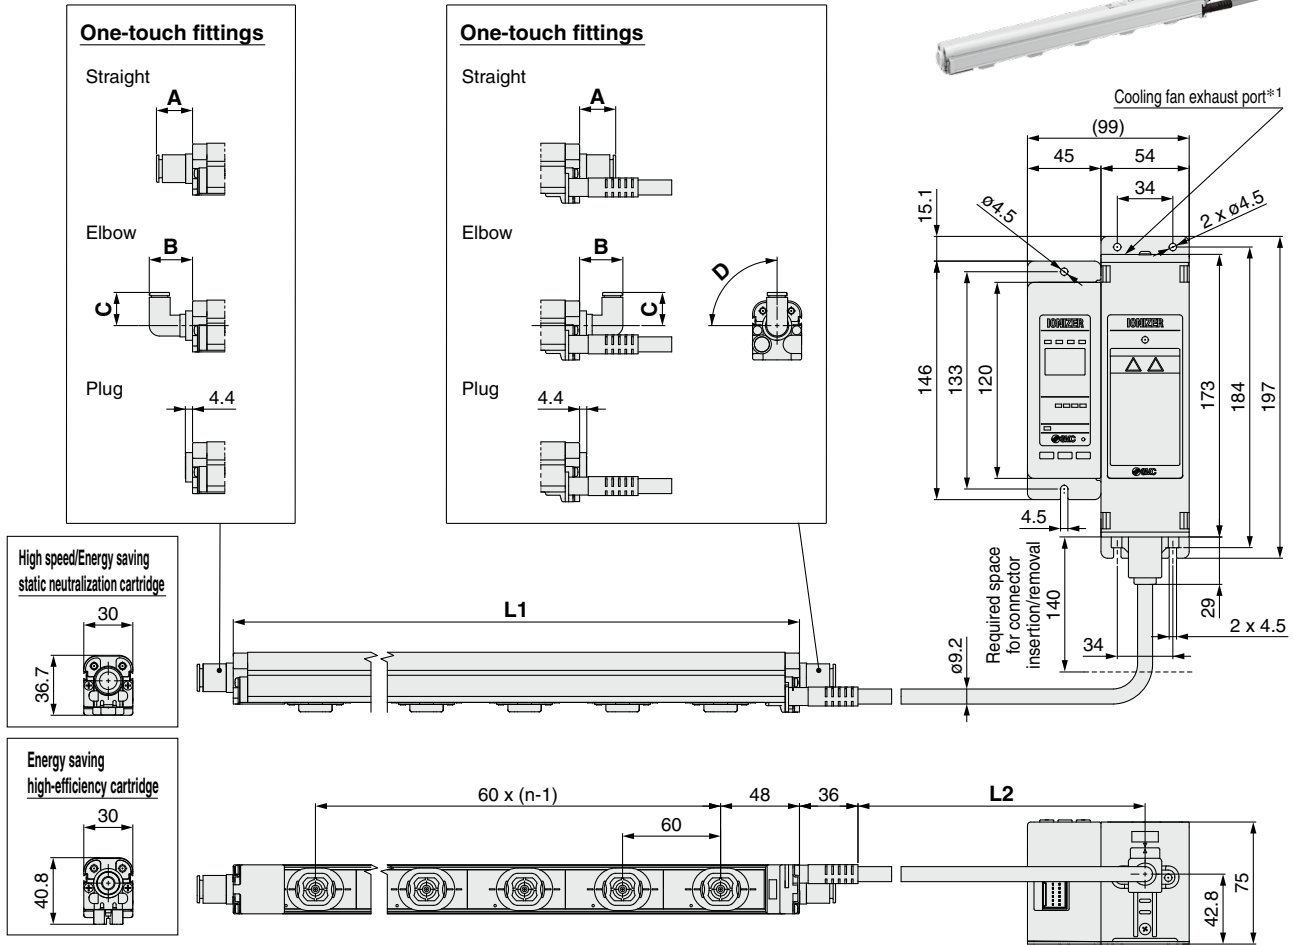

\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

#### No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

#### High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000

#### One-touch Fittings

##### Straight [mm]

	Applicable tubing O.D.	A
Metric	ø4	13
	ø6	13
	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23

##### Elbow [mm]

	Applicable tubing O.D.	B	C	D
Metric	ø4	25	19	90°
	ø6	27	21	75°
	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)

Glossary

Specific Product Precautions









# IZT40/41(-L)/42(-L) Series

## Dimensions








### End bracket IZT40-BE1

### Intermediate bracket IZT40-BM1

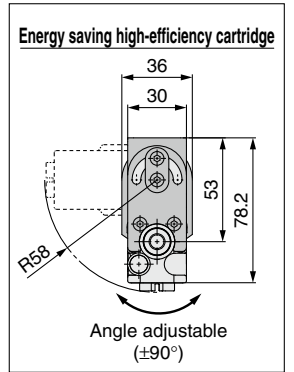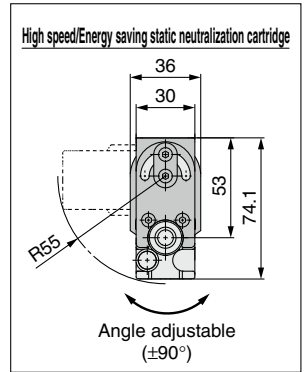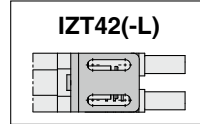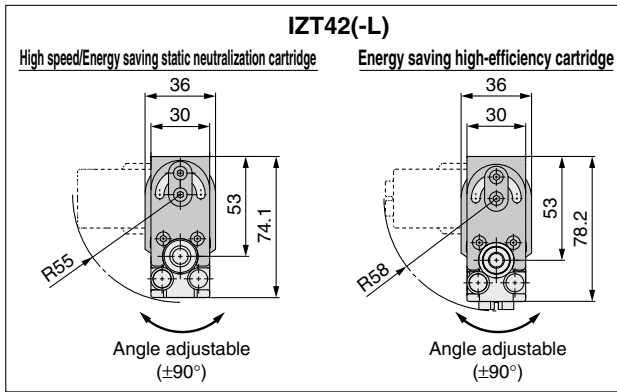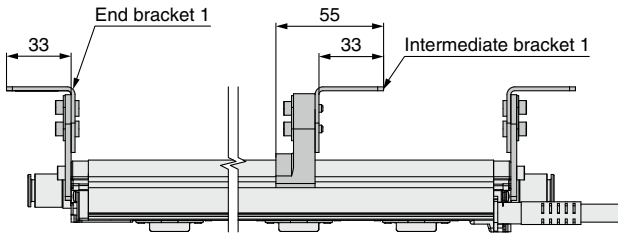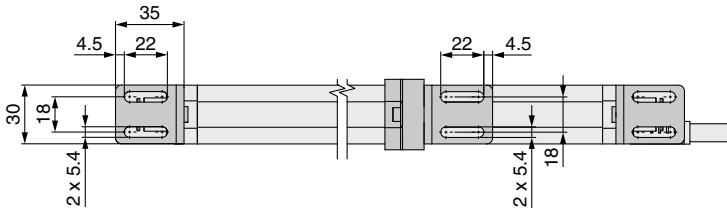


### End bracket IZT40-BE2

### Intermediate bracket IZT40-BM2

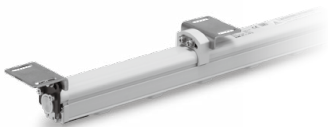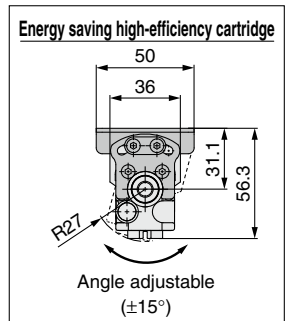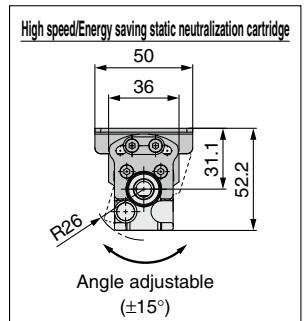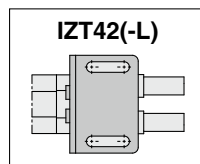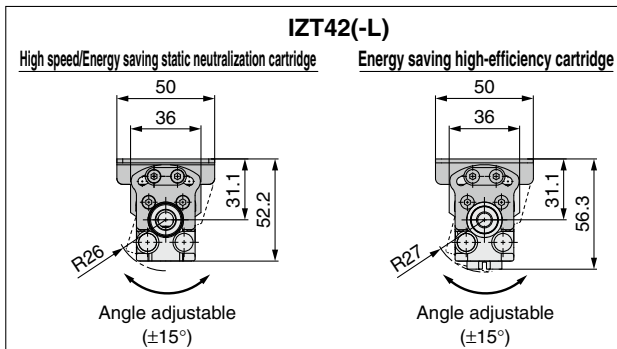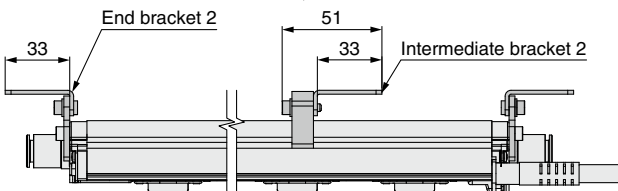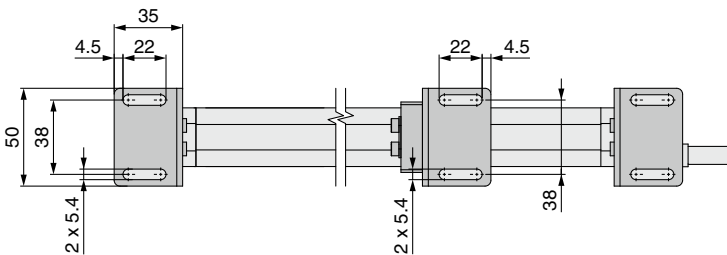

## Dimensions

### Ionizer IZT42(-L)

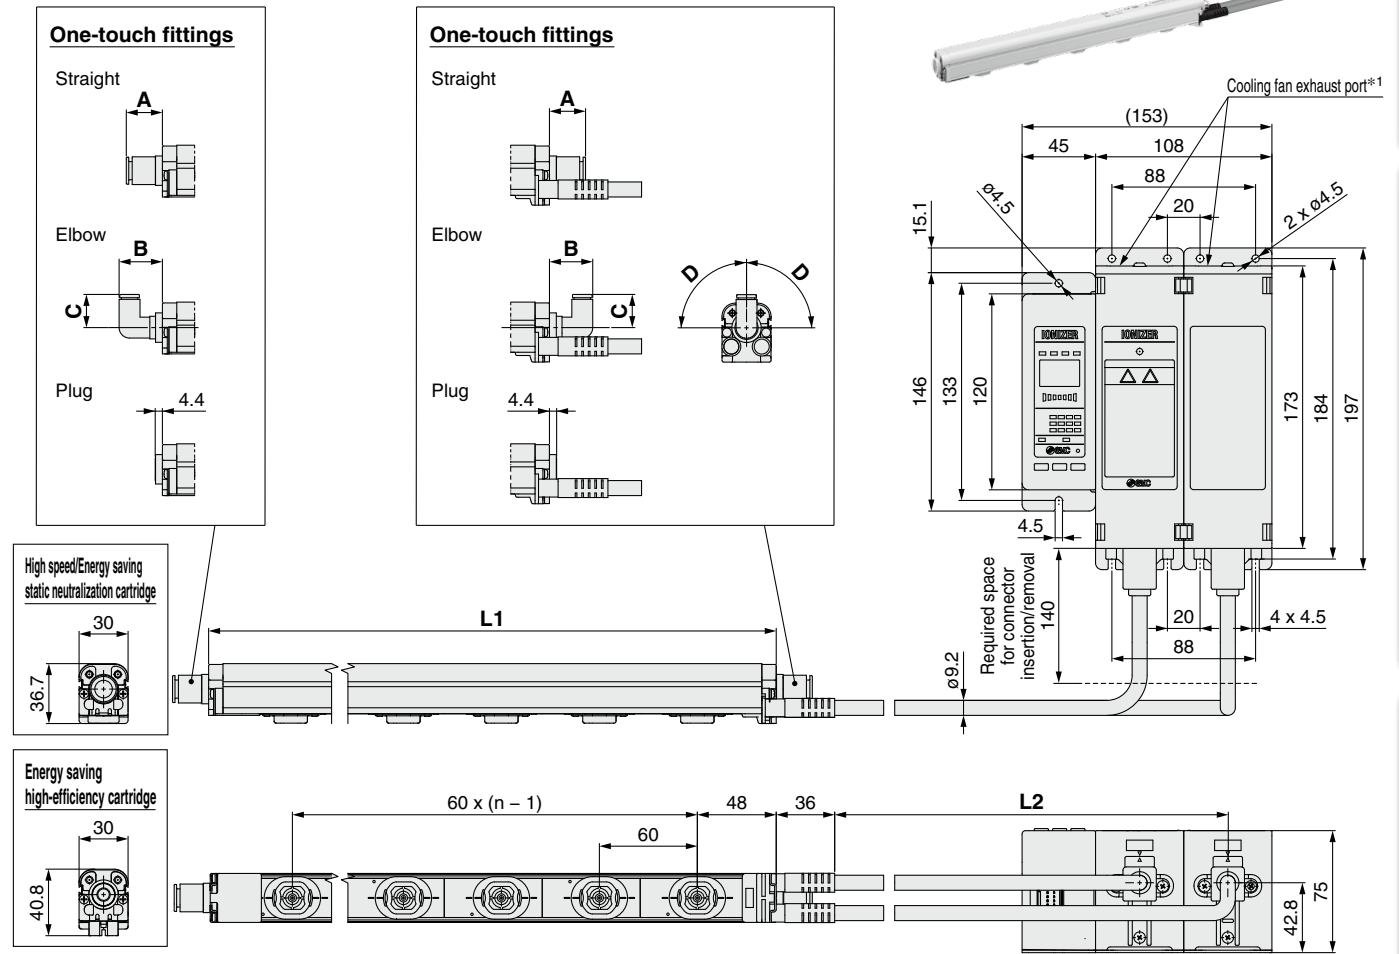

\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

No. of Emitter Cartridges n, Bar Length L1

Part no.	n [pcs.]	L1 [mm]
IZT□-16	2	160
IZT□-22	3	220
IZT□-34	5	340
IZT□-40	6	400
IZT□-46	7	460
IZT□-58	9	580
IZT□-64	10	640
IZT□-82	13	820
IZT□-112	18	1120
IZT□-130	21	1300
IZT□-160	26	1600
IZT□-190	31	1900
IZT□-232	38	2320
IZT□-250	41	2500

High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000

One-touch Fittings

Straight [mm]

	Applicable tubing O.D.	A
Metric	ø4	13
	ø6	13
	ø8	15
	ø10	22
Inch	ø3/16"	15
	ø1/4"	14
	ø5/16"	15
	ø3/8"	23

Elbow [mm]

	Applicable tubing O.D.	B	C	D
Metric	ø4	25	19	90°
	ø6	27	21	75°
	ø8	29	24	73°
	ø10	37	27	71°
Inch	ø3/16"	26	20	90°
	ø1/4"	27	21	75°
	ø5/16"	29	24	73°
	ø3/8"	36	27	71°

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)






Glossary

Specific Product Precautions

# IZT40/41(-L)/42(-L) Series




## Dimensions

### Controller IZT40, 41, 42

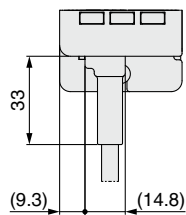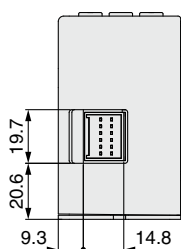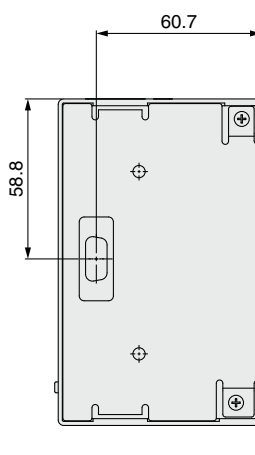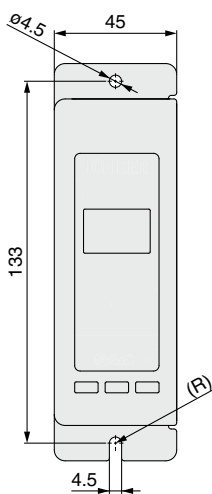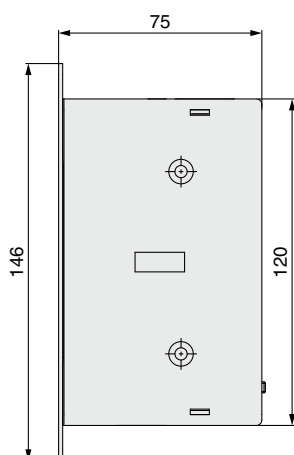






When a power supply cable is inserted

### When a DIN rail mounting bracket (IZT40-B1) is used

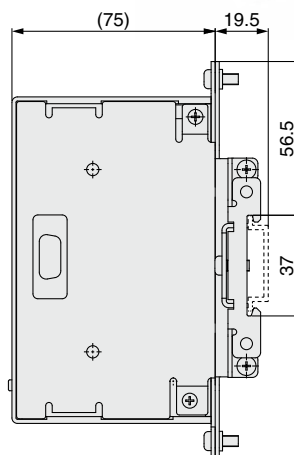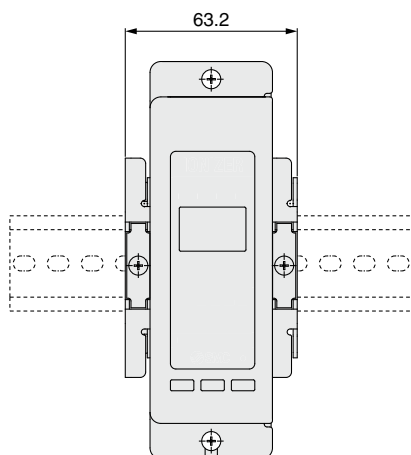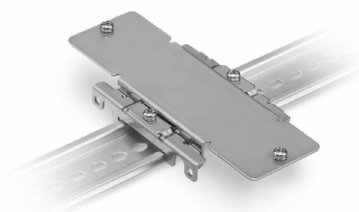


**Dimensions**


**Controller IZT41-L, 42-L**

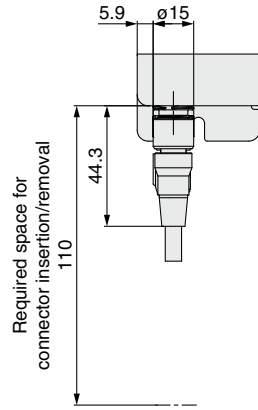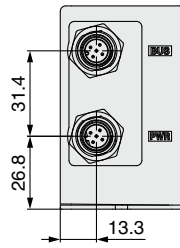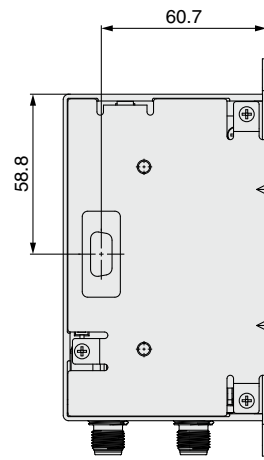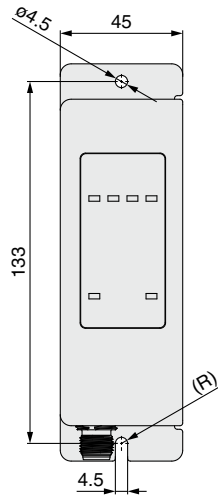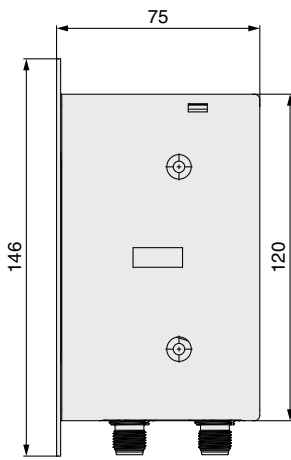



**When a straight cable is inserted**

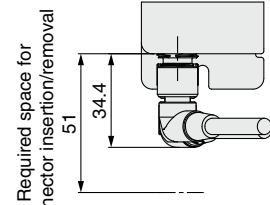

**When angled cables are inserted**

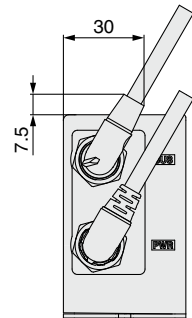



**When a DIN rail mounting bracket (IZT40-B1) is used**

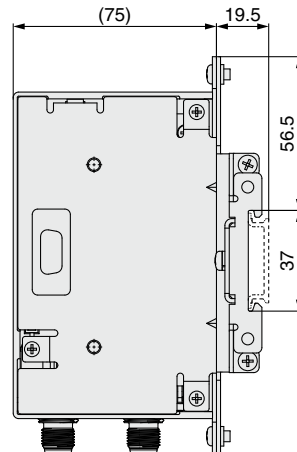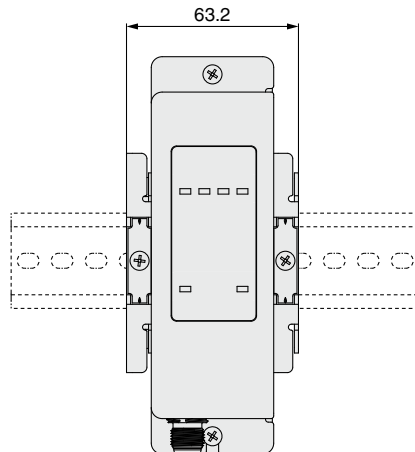

# IZT40/41(-L)/42(-L) Series



## Dimensions

### High voltage power supply module for IZT40, 41(-L)

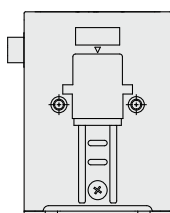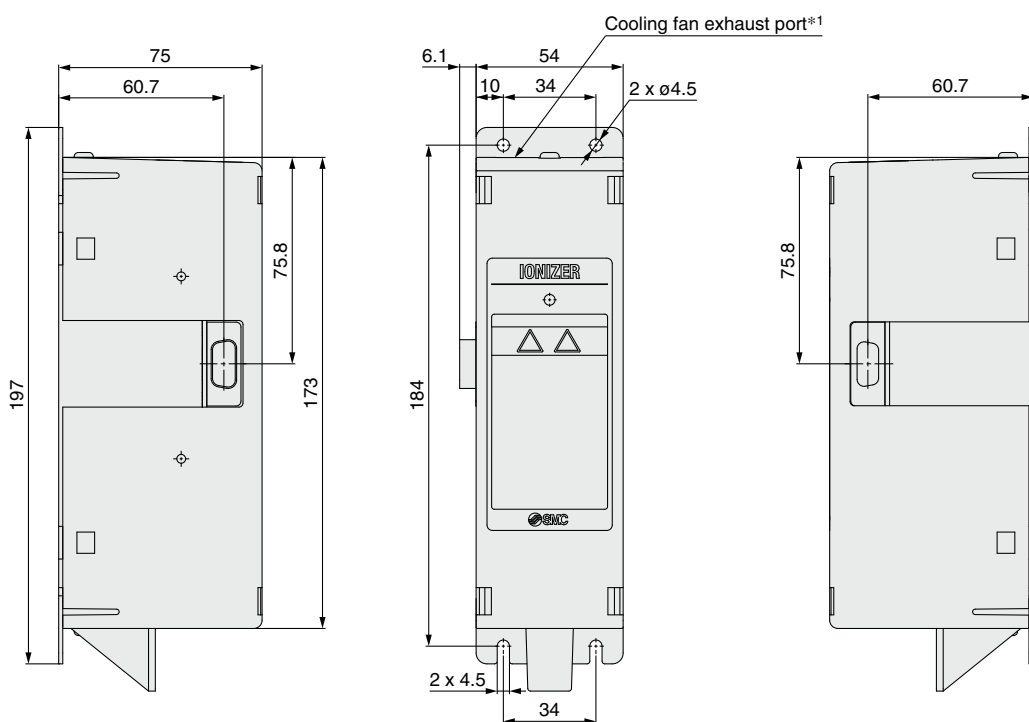

\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).




### When a DIN rail mounting bracket (IZT40-B2) is used

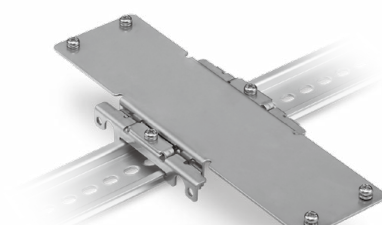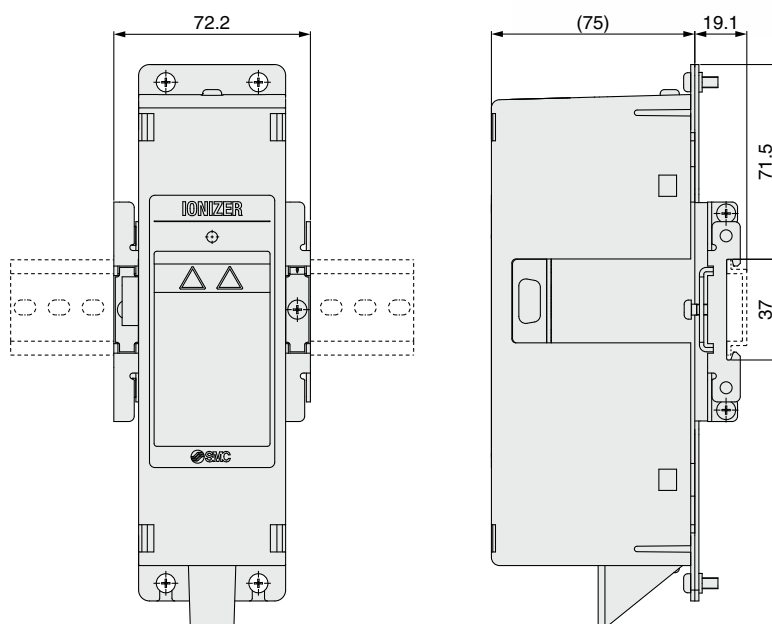




**Dimensions**


**High voltage power supply module for IZT42(-L)**

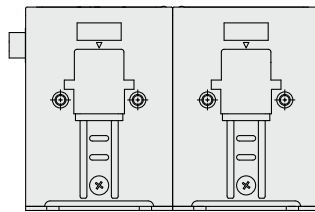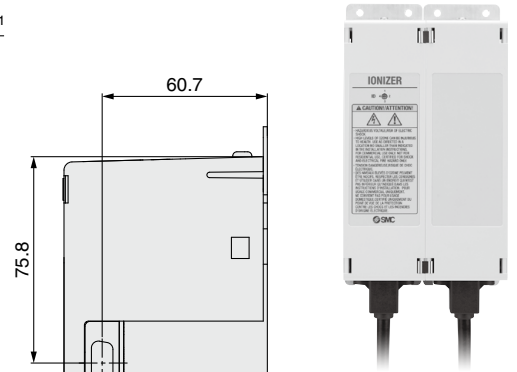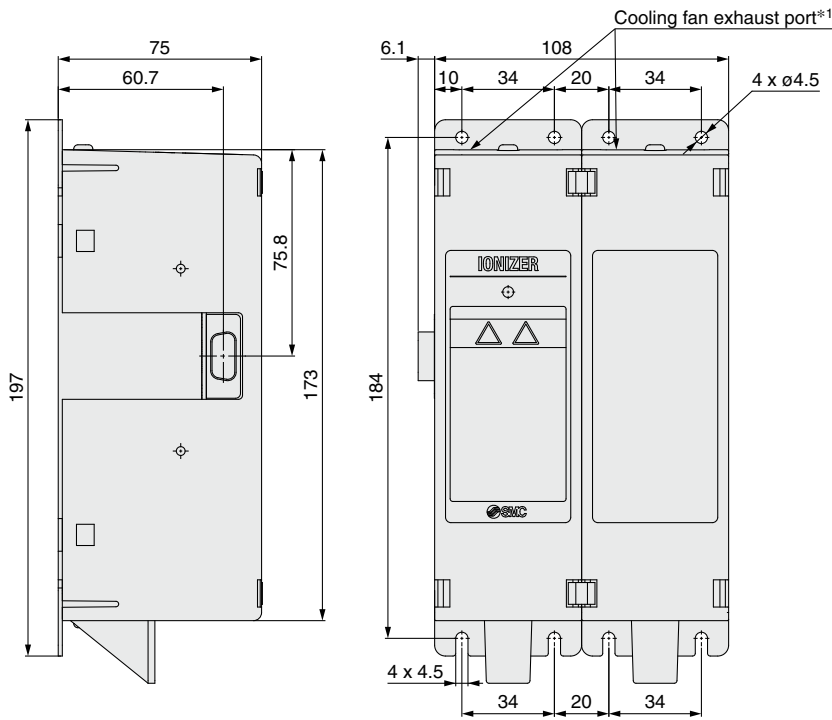

\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

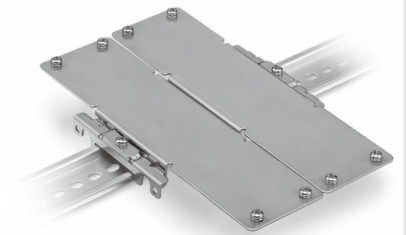


**When a DIN rail mounting bracket (IZT40-B3) is used**

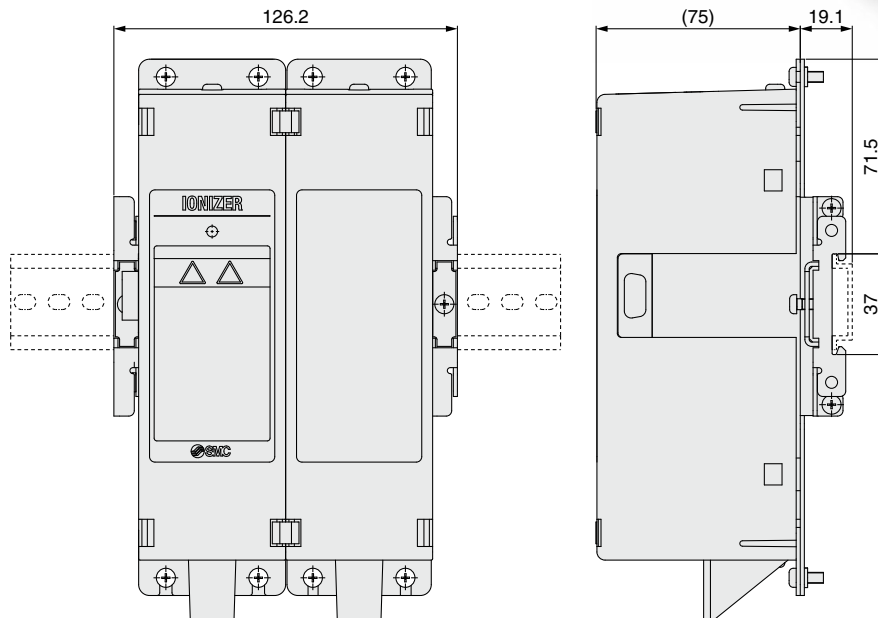

# IZT40/41(-L)/42(-L) Series

## Dimensions

### Power supply cable IZT40, 41, 42

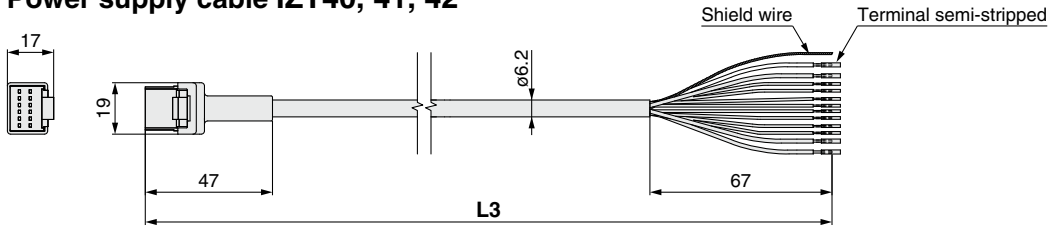

#### Cable Length L3


Part number	L3 [mm]
IZT40-CP3	2950
IZT40-CP5	5000
IZT40-CP10	9800
IZT40-CP15	15000

#### Cable Specifications


No. of cable wires/Size	12 cores/AWG20 (4 cores), AWG28 (8 cores)	
Conductor	Nominal cross section	0.54 mm <sup>2</sup> (4 cores), 0.09 mm <sup>2</sup> (8 cores)
	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)
Insulator	O.D.	1.4 mm Brown, Blue 0.7 mm White, Green, Pink, Purple, Gray, Yellow, Orange, Black
	Material	Lead-free PVC
Sheath	Material	Lead-free PVC
	O.D.	6.2 mm

### IO-Link power supply cable IZT41-L, 42-L

Entry direction: Straight

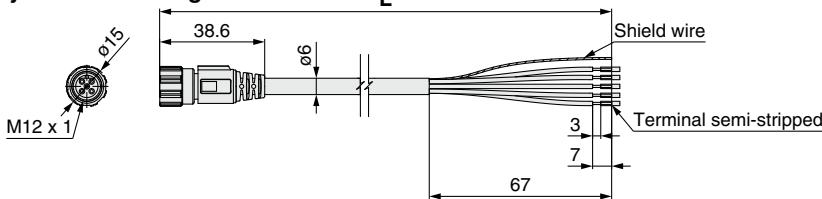


Entry direction: Angled

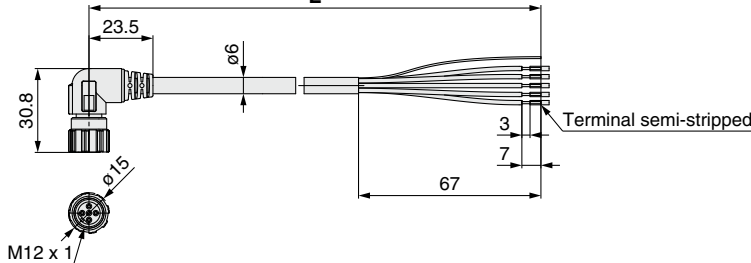


### IO-Link communication cable IZT41-L, 42-L

Entry direction: Straight

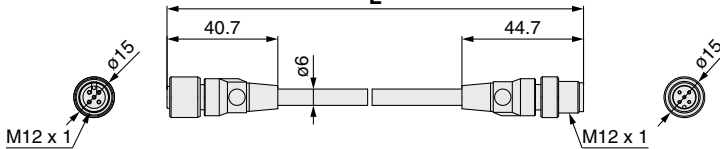

Entry direction: Angled

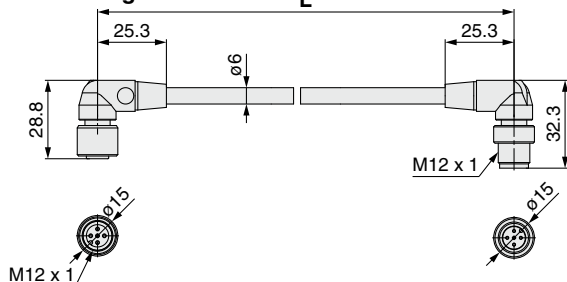

#### Power Supply Cable Length L

Symbol	Entry direction	Length [m]
IZT41-CPJ	Straight	3
IZT41-CPK		5
IZT41-CPM		10
IZT41-CPS	Angled	3
IZT41-CPT		5
IZT41-CPZ		10

#### Power Supply Cable Specifications

No. of cable wires/Size	5 cores/AWG22	
Conductor	Nominal cross section	0.3 mm <sup>2</sup>
	O.D.	0.76 mm
Insulator	O.D.	1.3 mm
Sheath	Material	PVC (Lead-free)
	O.D.	6.0 mm

#### Communication Cable Length L


Symbol	Entry direction	Length [m]
IZT41-CEE	Straight	0.5
IZT41-CEG		1
IZT41-CEH		2
IZT41-CEJ		3
IZT41-CEK		5
IZT41-CEM	10	
IZT41-CEP	Angled	0.5
IZT41-CEQ		1
IZT41-CER		2
IZT41-CES		3
IZT41-CET		5
IZT41-CEZ		10

#### Communication Cable Specifications

No. of cable wires/Size	5 cores/AWG22	
Conductor	Nominal cross section	0.3 mm <sup>2</sup>
	O.D.	0.76 mm
Insulator	O.D.	1.5 mm
Sheath	Material	PVC (Lead-free)
	O.D.	6.0 mm

**Dimensions**


**Separate cable IZT40-CF□**

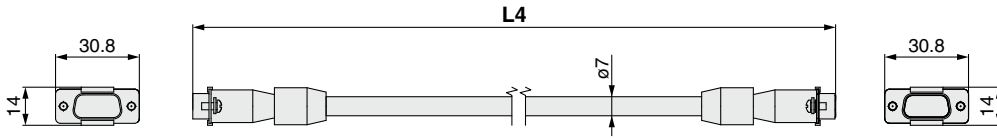

**Cable Length L4**

Part number	L4 [mm]
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000

**When a separate cable is used**

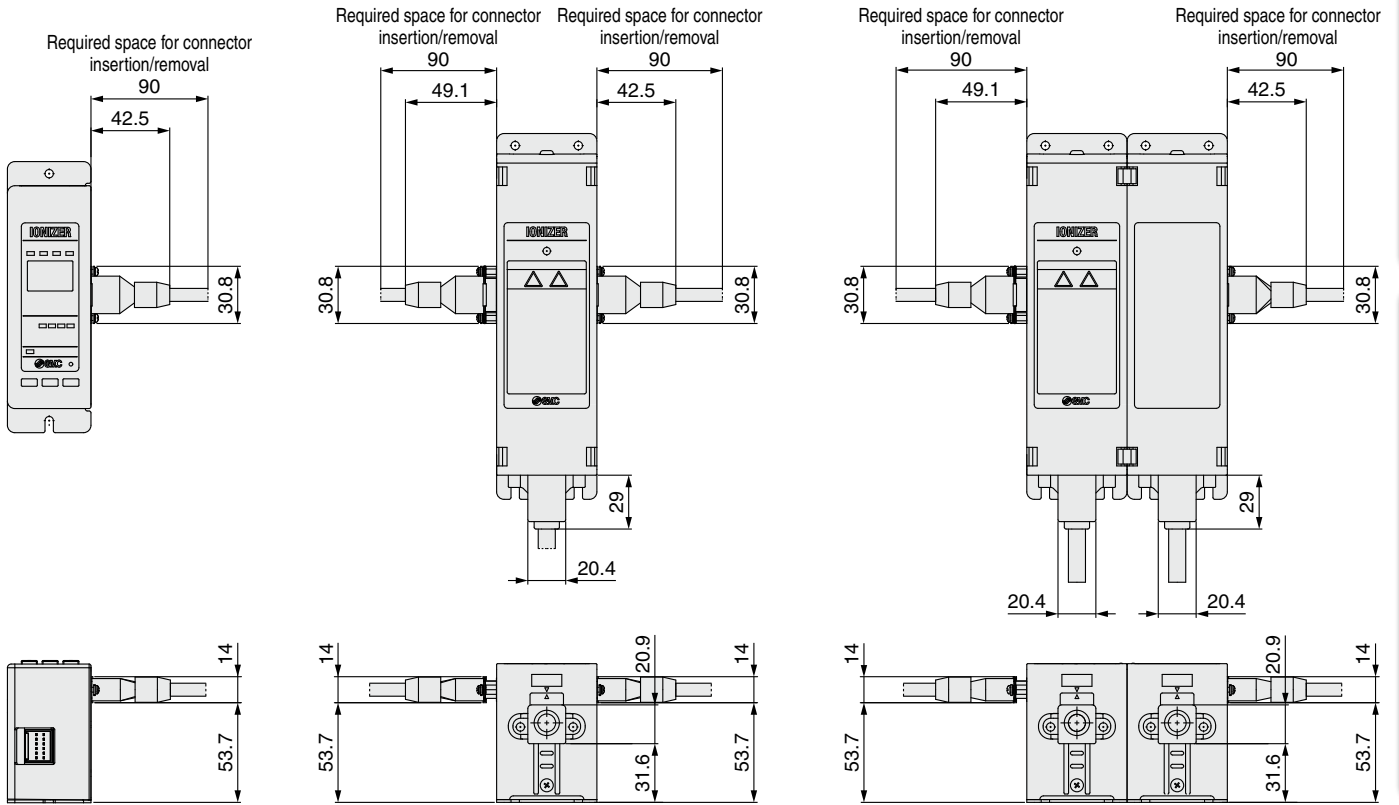


# IZT40/41(-L)/42(-L) Series

## Dimensions


### High voltage cable holder

#### Straight IZT40-E1


##### Cross-sectional view A-A

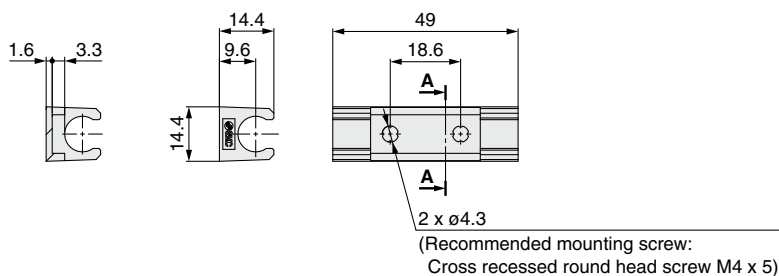

#### Elbow IZT40-E2

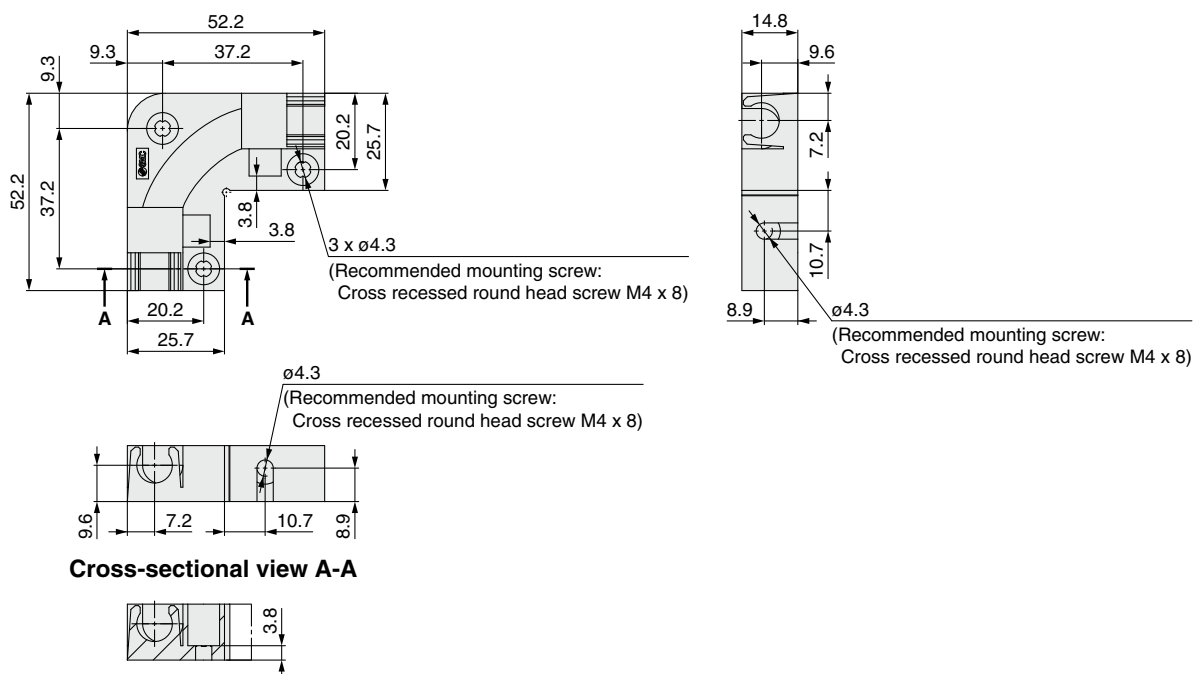

##### Cross-sectional view A-A

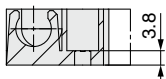

Specific Product  
Precautions

Glossary

IZT43(-L)

IZT40/41(-L)/42(-L)

Technical Data

# IZT43(-L) Series Technical Data


## Static Neutralization Characteristics

\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.


### ① Installation Distance and Discharge Time (Discharge Time from 1000 V to 100 V)

#### IZT43(-L) AC Mode


For cartridges without air purge

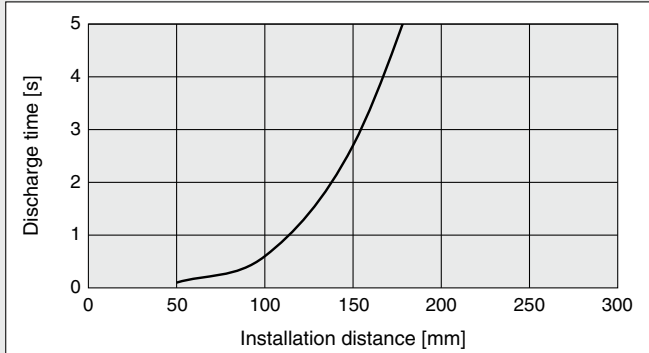

High speed static neutralization cartridge

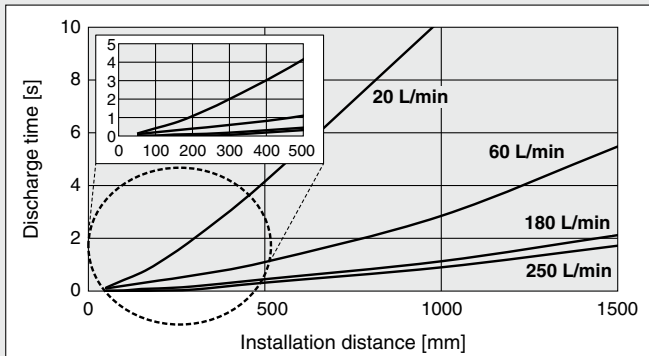

Energy saving static neutralization cartridge

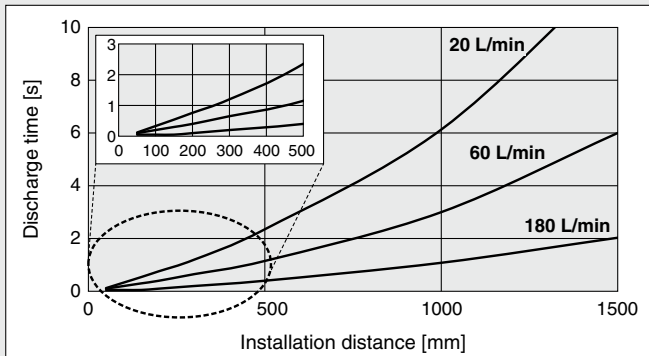


### ② Static Neutralization Range (Discharge Time from 1000 V to 100 V)

#### IZT43(-L) Ion Generation Frequency: 30 Hz


1) For cartridges without air purge

For IZT43(-L)-D, L

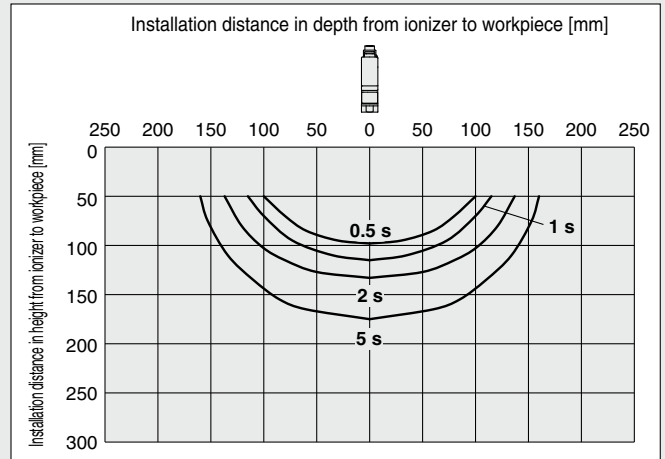


2) High speed static neutralization cartridge, Supply pressure: 0.5 MPa

For IZT43(-L)-D

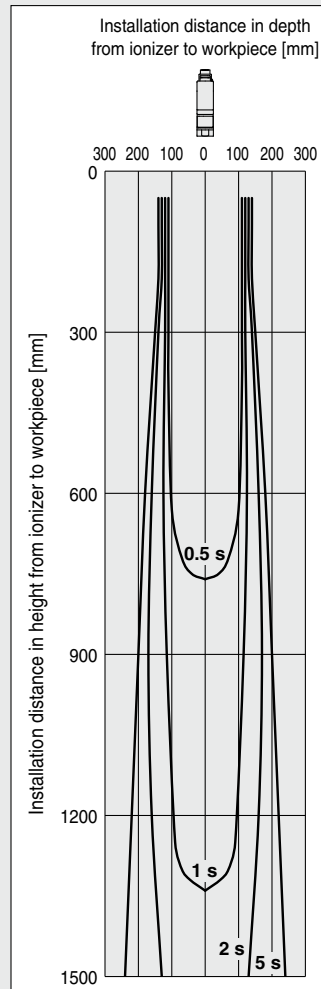

3) Energy saving static neutralization cartridge, Supply pressure: 0.5 MPa

For IZT43(-L)-L

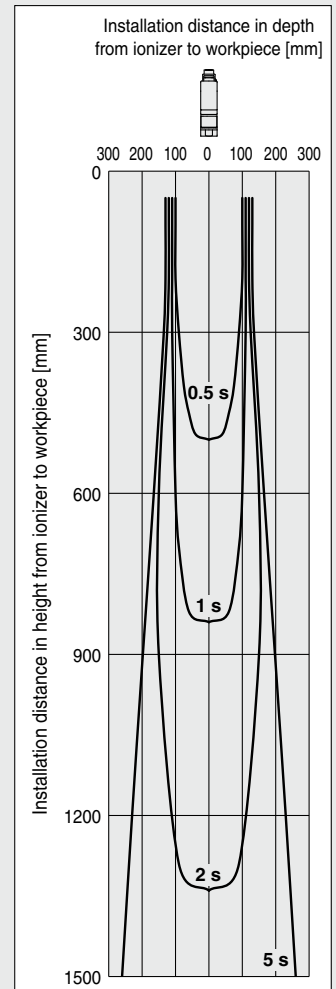




## Static Neutralization Characteristics


\* Static neutralization characteristics are based on data using a charged plate (dimensions: 150 mm x 150 mm, capacitance: 20 pF) as defined in the U.S. ANSI standards (ANSI/ESD STM3.1-2015). Use this data only as a guideline for model selection because the values vary depending on the material and/or size of the subject.

### ③ Pressure — Flow Rate Characteristics

High speed static neutralization cartridge

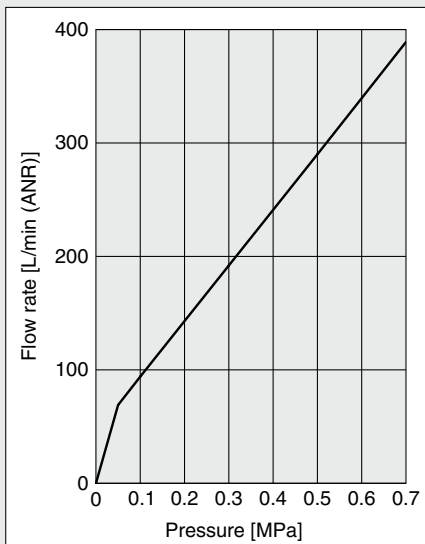


Energy saving static neutralization cartridge

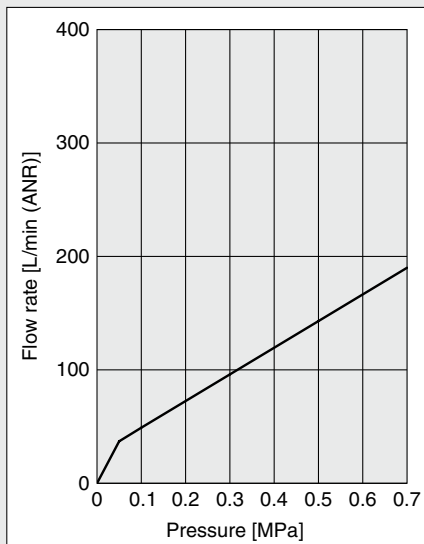

## How to measure

### a) Air supply

IZT43(-L)-D, L Connecting tube: O.D.  $\varnothing 6$  x I.D.  $\varnothing 4$

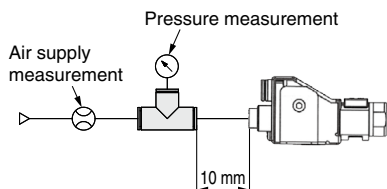

# Separate Controller

## Nozzle Type Ionizer

# IZT43(-L) Series



High voltage power supply module



### How to Order

**Nozzle** + **High voltage power supply module** + **Controller**

**Transistor input/output** IZT 43 - **D** **1** **6H** **□** - **3** **F** **U**

**IO-Link** IZT 43 - **D** **1** **6H** **L** - **T** **R** **F** **U**

#### 1 Model

Symbol	Model
43	AC type

#### 2 Emitter cartridge type

Symbol	Type
D	High speed static neutralization cartridge
L	Energy saving static neutralization cartridge

#### 3 High voltage cable length

Symbol	Length [m]
1	1
2	2
3	3

\* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders  
⇨ Refer to page 51.

Symbol	Straight	Elbow
1	1	1
2	2	1
3	3	1

#### 4 One-touch fitting

Symbol	Metric size
6H	ø6 Straight
6L	ø6 Elbow

Symbol	Inch size
7H	ø1/4" Straight
7L	ø1/4" Elbow

#### 5 Input/Output

Symbol	Input/Output
Nil	NPN
P	PNP

#### 6 Power supply cable length

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

\* To use an AC adapter, specify "N", and select the AC adapter sold separately.

#### 7 Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
J	Straight	3
K		5
M		10
S		3
T	Angled	5
Z		10

#### 8 Communication cable entry direction/length

Symbol	Entry direction	Length [m]
N	None	
E	Straight	0.5
G		1
H		2
J		3
K		5
M		10
P		0.5
Q	Angled	1
R		2
S		3
T		5
Z		10

#### 9 Nozzle bracket ⇨ Refer to page 51.

Symbol	Type
Nil	Without bracket
B	L-bracket
F	Angle adjustment bracket

#### 10 DIN rail mounting bracket for controller and high voltage power supply module

⇨ Refer to page 51.

Symbol	For Controller	For High voltage power supply module
Nil	None	None
U	Included	Included
W	Included	None
Y	None	Included



AC type


**For Individual Parts**

**How to Order**

**Combinations**

	Nozzle/IZTN	High voltage power supply module/IZTP	Controller/IZTC
IZT43	43	43	41

**Nozzle**

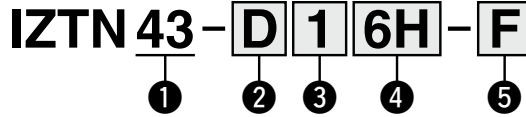

**1 Model**

Symbol	Model
43	AC type

**2 Emitter cartridge type**

Symbol	Type
D	High speed static neutralization cartridge
L	Energy saving static neutralization cartridge

**3 High voltage cable length**

Symbol	High voltage cable length [m]
1	1
2	2
3	3


\* The number of included high voltage cable holders differs depending on the high voltage cable length. (Refer to the table below.)

Number of included high voltage cable holders ⇨ Refer to page 51.


Symbol	IZT43	
	Straight	Elbow
1	1	1
2	2	1
3	3	1

**Controller**

**Transistor input/output**

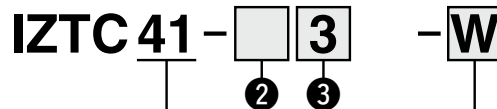

**IO-Link**

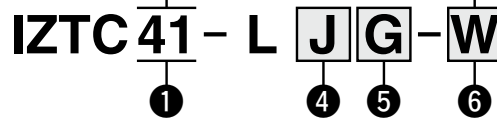

**1 Model**

Symbol	Model
41	AC type, Dual AC type

**4 Power supply cable entry direction/length**

Symbol	Entry direction	Length [m]
N	None	
J	Straight	3
K		5
M		10
S	Angled	3
T		5
Z		10

**2 Input/Output**

Symbol	Input/Output
Nil	NPN
P	PNP

**5 Communication cable entry direction/length**


Symbol	Entry direction	Length [m]
N	None	
E	Straight	0.5
G		1
H		2
J		3
K		5
M	Angled	10
P		0.5
Q		1
R		2
S		3
T		5
Z		10

**High voltage power supply module**

**Transistor input/output**



**IO-Link**

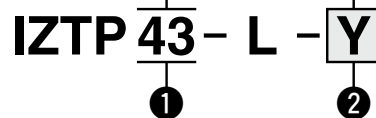

**1 Model**

Symbol	Model
43	AC type (For Nozzle)

**2 DIN rail mounting bracket** ⇨ Refer to page 51.

Symbol	Type
Nil	None
Y	Included

**Caution**

The transistor input/output specification and the IO-Link specification cannot be installed in combination.

**4 One-touch fitting**

Symbol	Metric size
6H	ø6 Straight
6L	ø6 Elbow

Symbol	Inch size
7H	ø1/4" Straight
7L	ø1/4" Elbow

**5 Nozzle bracket** ⇨ Refer to page 51.

Symbol	Type
Nil	Without bracket
B	L-bracket
F	Angle adjustment bracket

Transistor input/output

IO-Link



AC, Dual AC type

**3 Power supply cable length**

Symbol	Length [m]
3	3
5	5
10	10
15	15
N	None

**6 DIN rail mounting bracket**

⇨ Refer to page 51.

Symbol	Type
Nil	None
W	Included



AC type

# IZT43(-L) Series

## Specifications

### Ionizer Specifications

Ion generation method		Corona discharge type
Method of applying voltage		AC, DC*1
Applied voltage		±6000 V
Offset voltage*2		±30 V or less
Air purge	Fluid	Air (Clean, dry air)
	Operating pressure	0.7 MPa or less
	Connecting tube size	Metric size: ø6 Inch size: ø1/4"
Current consumption		0.4 A or less (+0.4 A or less per ionizer when connected)
Power supply voltage		24 VDC ±10%
Input signal*3	NPN specification	Connected to DC (-) Voltage range: 5 VDC or less Current consumption: 5 mA or less
	PNP specification	Connected to DC (+) Voltage range: 19 VDC to power supply voltage Current consumption: 5 mA or less
Output signal*3	NPN specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA) Max. applied voltage: 26.4 VDC
	PNP specification	Max. load current: 100 mA Residual voltage: 1 V or less (Load current at 100 mA)
IO-Link device*4		Voltage range: 18 to 30 VDC Current consumption: 100 mA or less * For details, refer to the "IO-Link Communication Specifications" table below.
Function		Auto balance, Maintenance detection, High voltage abnormality detection (Ion generation stops when an abnormality is detected.), and Ion generation stop input
Effective static neutralization distance		50 to 2000 mm
Ambient and fluid temperatures	Controller High voltage power supply module Nozzle	0 to 40°C
Ambient humidity		35 to 65% Rh (No condensation)
Material	Controller	Cover: ABS, Aluminum, Switch: Silicone rubber*3
	High voltage power supply module	ABS, Aluminum
	Nozzle	Housing: PBT, Stainless steel, Emitter cartridge: PBT, Emitter: Tungsten, High voltage cable: Silicone rubber, PVC, Stainless steel
Standards/Directive		CE marking (EMC Directive)

\*1 Apply cathode or anode to DC.

\*2 When air purge is performed between a charged object and an ionizer at a distance of 300 mm

\*3 Only applicable to transistor input/output specification products

\*4 Only applicable to IO-Link compatible products

### IO-Link Communication Specifications

IO-Link type	Device
IO-Link version	V1.1
Configuration file format	IODD file*1
Communication speed	COM2 (38.4 kbps)
Min. cycle time	8.0 ms
Process data length	Input data: 13 bytes, Output data: 9 bytes
On request data communication	Yes
Data storage function	Yes
Event function	Yes
Vendor ID	131 (0 x 0083)
Device ID	581 (0 x 000245)

\*1 The configuration file can be downloaded from the SMC website: <https://www.smcworld.com>

## Specifications

### Weight [g]

	Controller	High voltage power supply module
<b>IZT43(-L)</b>	210 (230)	680 (690)

\* The values in ( ) are for IO-Link compatible products.

### Nozzle Weight [g]





Nozzle		
<b>IZT43</b>	High voltage cable (1 m)	200
	High voltage cable (2 m)	310
	High voltage cable (3 m)	440

### AC Adapter (Sold Separately) ⇨ Refer to page 52.

Model	<b>IZT40-CG1, IZT40-CG2</b>
<b>Input voltage</b>	100 to 240 VAC, 50/60 Hz
<b>Output current</b>	1.9 A
<b>Ambient temperature</b>	0 to 40°C
<b>Ambient humidity</b>	35 to 65% Rh (No condensation)
<b>Weight</b>	375 g
<b>Standards/Directive</b>	CE, cUL

## Construction

### IZT43(-L) series

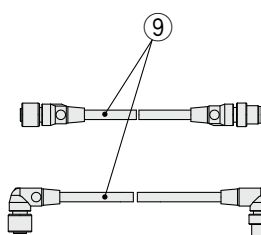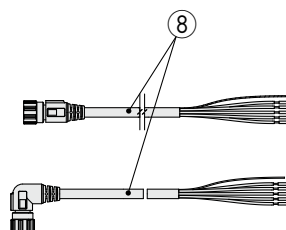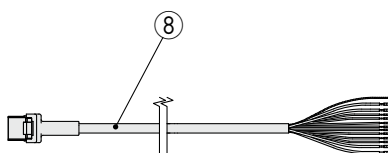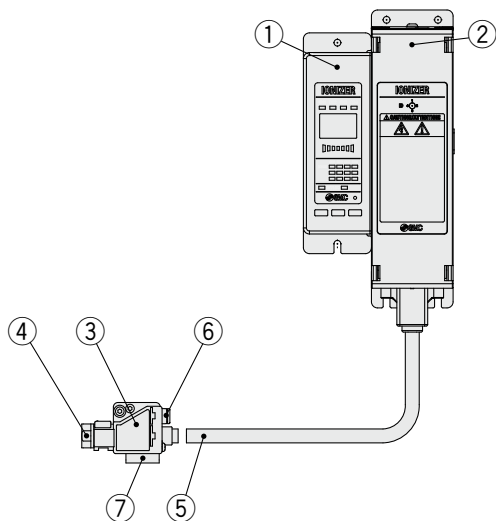

No.	Description
<b>1</b>	<b>Controller</b>
<b>2</b>	<b>High voltage power supply module</b>
<b>3</b>	<b>Nozzle</b>
<b>4</b>	<b>Emitter cartridge</b>
<b>5</b>	<b>High voltage cable</b>
<b>6</b>	<b>One-touch fitting</b>
<b>7</b>	<b>Bracket</b>
<b>8</b>	<b>Power supply cable</b>
<b>9</b>	<b>Communication cable</b>

# IZT43(-L) Series

## Accessories (for Individual Parts)

### Emitter cartridge (For IZT43(-L))

#### IZT43 - N **D**

• Emitter cartridge type/  
Emitter material

Symbol	Type	Material
<b>D</b>	High speed static neutralization cartridge	Tungsten
<b>L</b>	Energy saving static neutralization cartridge	Tungsten



**Tungsten**  
(Color: White)



Cartridge color	Emitter material
White	Tungsten

### Nozzle bracket (For IZT43(-L))

#### IZT43 - B **L1**

• Nozzle bracket

Symbol	Type
<b>L1</b>	L-bracket
<b>L2</b>	Angle adjustment bracket

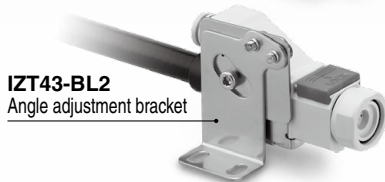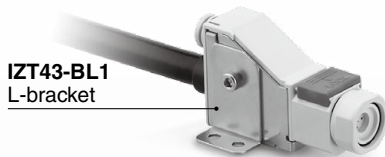

### Power supply cable (IZT43)

#### IZT40 - CP **3**

Cable specifications  
⇒ Refer to page 60.



• Power supply cable length

Symbol	Length [m]
<b>3</b>	3
<b>5</b>	5
<b>10</b>	10
<b>15</b>	15

### IO-Link power supply cable (IZT43-L)

#### IZT41 - CP **J**



• Power supply cable entry direction/length

Symbol	Entry direction	Length [m]
<b>J</b>	Straight	3
<b>K</b>		5
<b>M</b>		10
<b>S</b>	Angled	3
<b>T</b>		5
<b>Z</b>		10

### IO-Link communication cable (IZT43-L)

#### IZT41 - CE **G**



• Communication cable entry direction/length

Symbol	Entry direction	Length [m]
<b>E</b>	Straight	0.5
<b>G</b>		1
<b>H</b>		2
<b>J</b>		3
<b>K</b>		5
<b>M</b>	10	
<b>P</b>	Angled	0.5
<b>Q</b>		1
<b>R</b>		2
<b>S</b>		3
<b>T</b>		5
<b>Z</b>	10	


### DIN rail mounting bracket for controller and high voltage power supply module

#### IZT40 - B **1**

• DIN rail mounting bracket

Symbol	Type
<b>1</b>	For Controller
<b>2</b>	For High voltage power supply module

For Controller

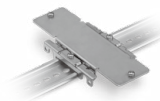

IZT40-B1

For High voltage power supply module



IZT40-B2

### High voltage cable holder

#### IZT40 - E **1**

• High voltage cable holder

Symbol	Type
<b>1</b>	Straight
<b>2</b>	Elbow

Straight



IZT40-E1

Elbow



IZT40-E2



**Accessories Sold Separately**

**Body assembly (For IZT43(-L))**

**IZT43 - A001 - D 6H**


• **Emitter cartridge type**

Symbol	Type
<b>D</b>	High speed static neutralization cartridge
<b>L</b>	Energy saving static neutralization cartridge

• **One-touch fitting**

Symbol	Metric size
<b>6H</b>	ø6 Straight
<b>6L</b>	ø6 Elbow

Symbol	Inch size
<b>7H</b>	ø1/4" Straight
<b>7L</b>	ø1/4" Elbow

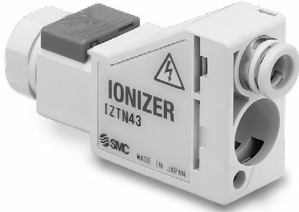

**High voltage cable assembly (For IZT43(-L))**

**IZT43 - A002 - 1**

• **High voltage cable length**

Symbol	Length [m]
<b>1</b>	1
<b>2</b>	2
<b>3</b>	3



**AC adapter (IZT43)**

**IZT40 - CG 1**

• **AC adapter**

Symbol	Type
<b>1</b>	With AC cord
<b>2</b>	Without AC cord

- \* AC cord is only for use in Japan. (Rated voltage 125 V, Plug JIS C 8303, Inlet IEC 60320-C6) External input and output cannot be used when the AC adapter is being used.
- \* Cannot be used for the IO-Link specification



AC adapter

**Separate cable (IZT43)**

**IZT40 - CF 1**

• **Cable length**

Symbol	Length [m]
<b>1</b>	1
<b>2</b>	2
<b>3</b>	3



**Cleaning kit (For IZT43)**

**IZT43 - M2**



Replacement felt pad: IZT43-A003

Replacement rubber grindstone: IZT43-A004

# IZT43(-L) Series

## Wiring: IZT43(-L)

### IZT43

Cable color	Signal name	Signal direction	Description
Brown	DC (+)	IN	Connect the power supply to operate the product.
Blue	DC (-)	IN	
Green	F.G.	—	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.
Pink	Ion generation stop signal CH1	IN	Signal input to turn ON/OFF ion generation of each bar (CH1 to 4). NPN specification: Stops generating ions by connecting to 0 V. (Starts generating ions when disconnected.) PNP specification: Stops generating ions by connecting to 24 VDC. (Starts generating ions when disconnected.)
Gray	Ion generation stop signal CH2	IN	
Yellow	Ion generation stop signal CH3	IN	
Purple	Ion generation stop signal CH4	IN	
White	Maintenance detection signal	OUT (A contact)	Turns ON when emitters need cleaning.
Black	Error signal	OUT (B contact)	Turns OFF in case of power supply failure, high voltage failure, CPU failure, communication failure, cooling fan motor failure, output signal overcurrent, or inconsistent or CH setting duplication or non-connection of high voltage power supply module (ON when there is no problem).
Orange	—	—	—

### IZT43-L: IO-Link Power Supply Cable

No.	Cable color	Signal name	Description
1	Brown	DC (+)	Connect the power supply to operate the product.
2			
3	Blue	DC (-)	
4			
5	Green	F.G.	Frame ground of the product. Make sure to ground with a resistance value of 100 Ω or less to use it as a reference electric potential of offset voltage. If not grounded, performance cannot be acquired, and also causes failure of the equipment.

### IZT43-L: IO-Link Communication Cable


No.	Signal name	Description
1	L+	Power supply for IO-Link
2	—	—
3	L-	Power supply for IO-Link
4	C/Q	—
5	—	—

\* Refer to the power supply cable dimensions on page 60 for the cable specifications.



## Frequencies

Series	IZT43(-L)
Controller	IZTC41(-L)
Frequency [Hz]	1
	3
	5
	8
	10
	15
	20
	30
	DC+
DC-	

## Wiring Circuit: IZT43-L

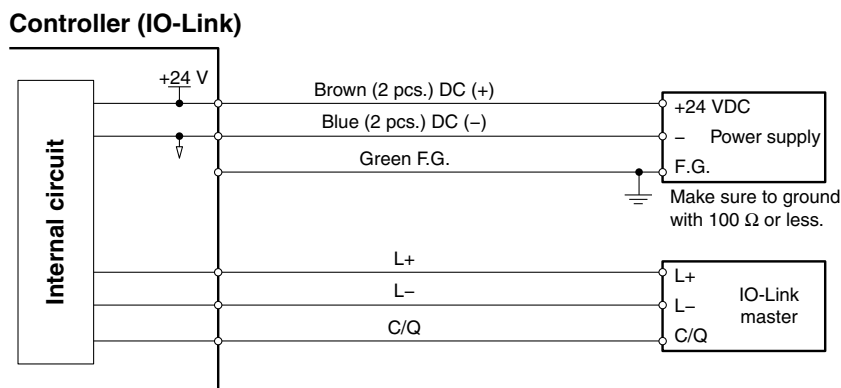

**Wiring Circuit: IZT43**

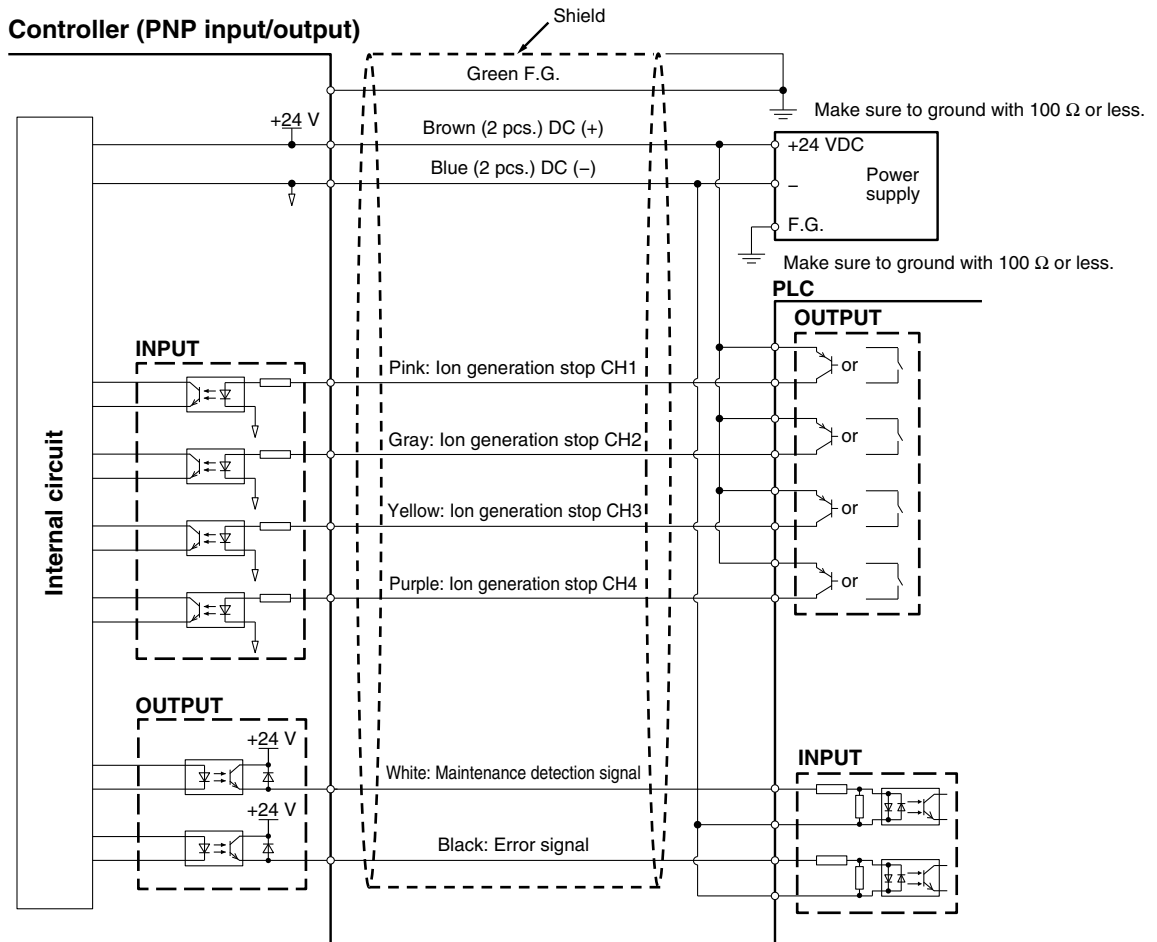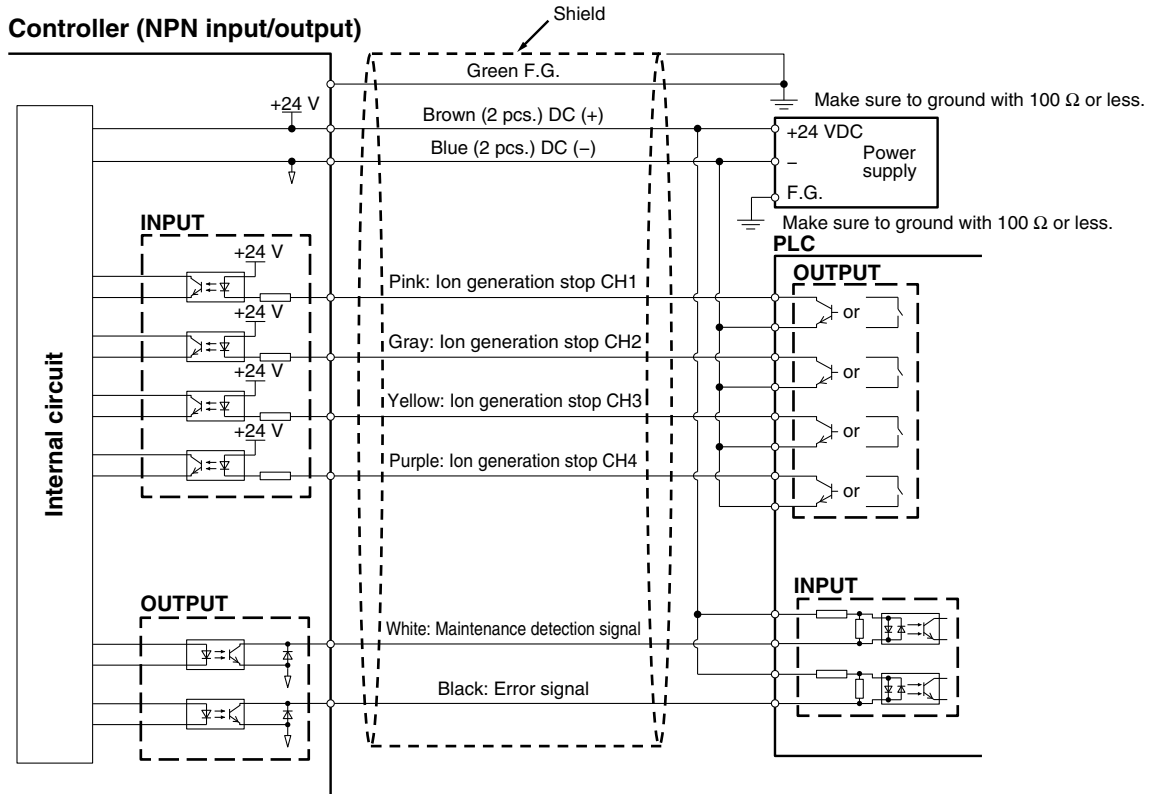

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)


Glossary

Specific Product Precautions

# IZT43(-L) Series

## Dimensions

### Ionizer IZT43(-L)

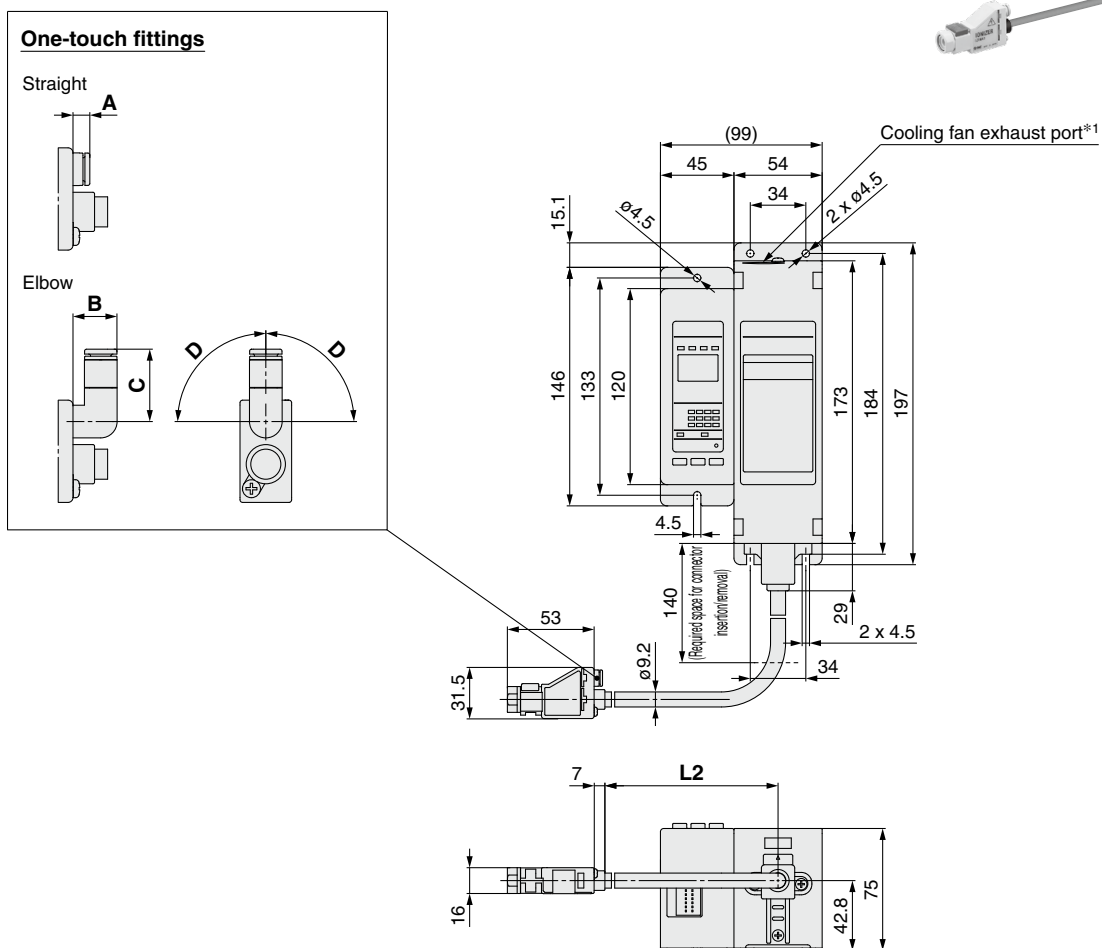

\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

### High Voltage Cable Length L2

Symbol	L2 [mm]
1	1000
2	2000
3	3000

### One-touch Fittings

#### Straight [mm]


	Applicable tubing O.D.	A
Metric	ø6	7
Inch	ø1/4"	10

#### Elbow [mm]


	Applicable tubing O.D.	B	C	D
Metric	ø6	14	23	105°
Inch	ø1/4"	14	26	105°

**Dimensions**


**L-bracket IZT43-BL1**

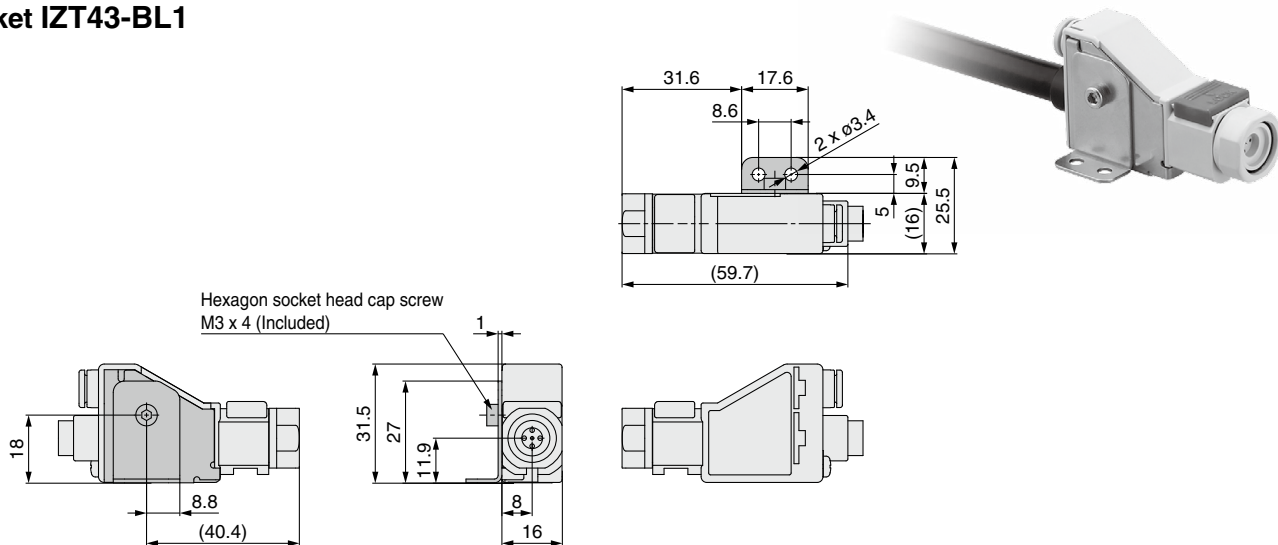

**Angle adjustment bracket IZT43-BL2**

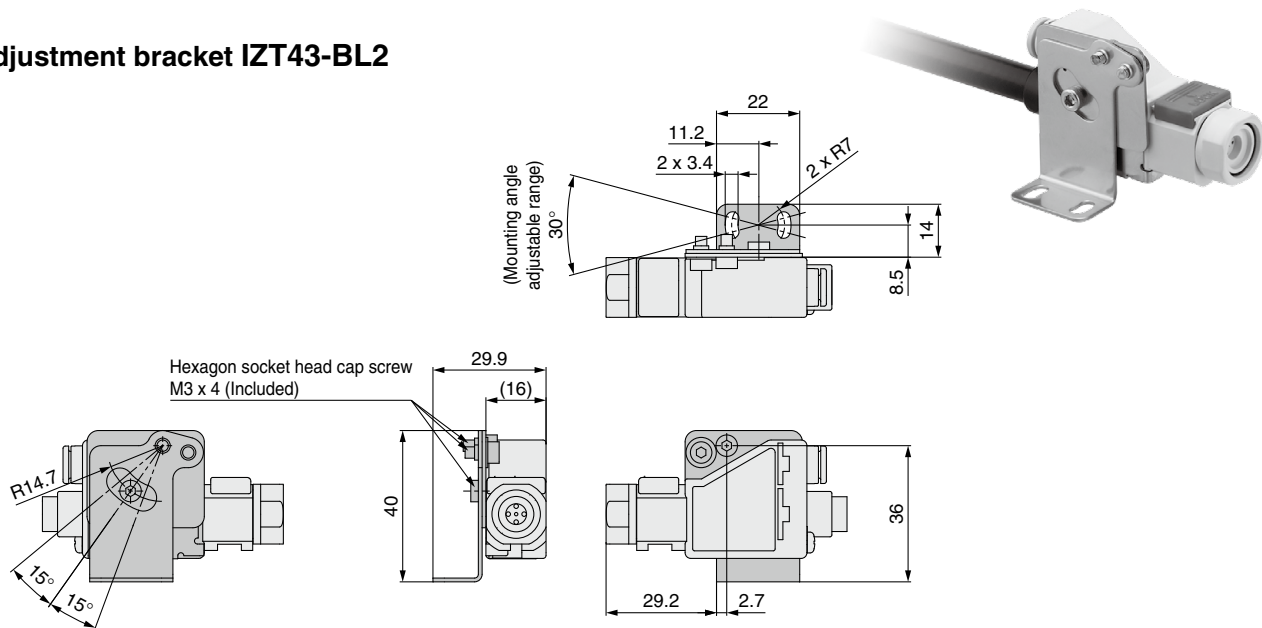

**When adjusting the angle**

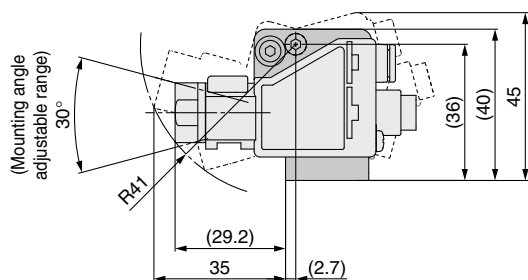

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)






Glossary

Specific Product Precautions

# IZT43(-L) Series




## Dimensions

### Controller IZT43

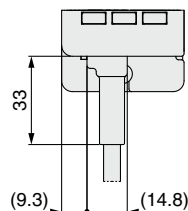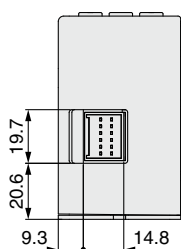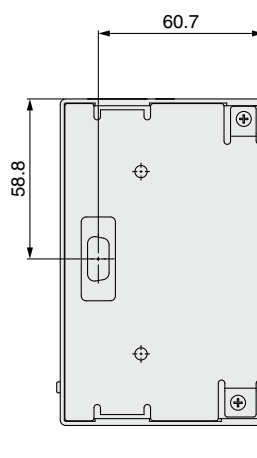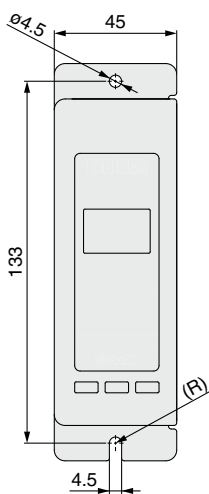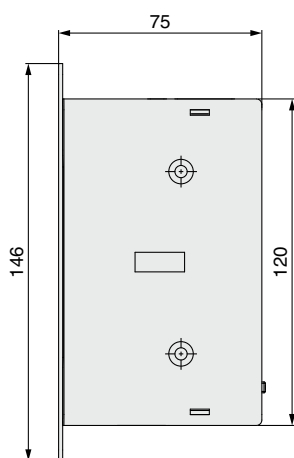

When a power supply cable is inserted






When a DIN rail mounting bracket (IZT40-B1) is used

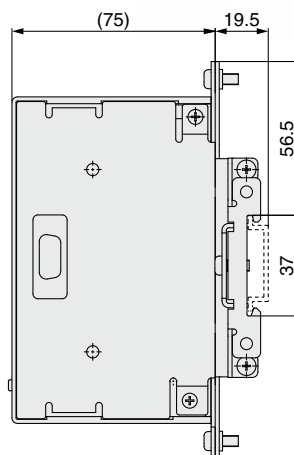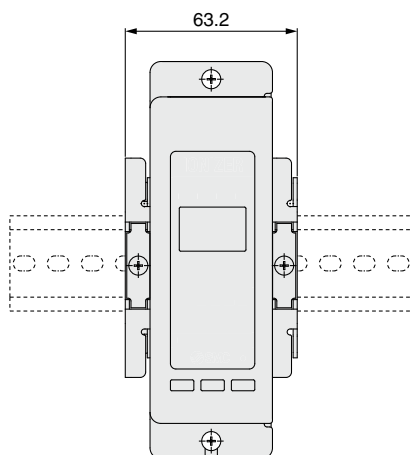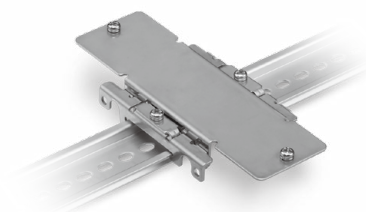




**Dimensions**

**Controller IZT43-L**

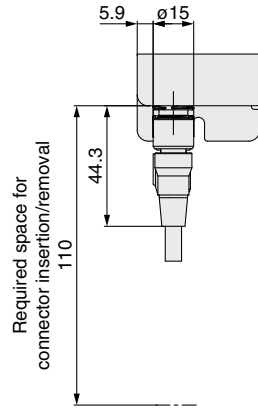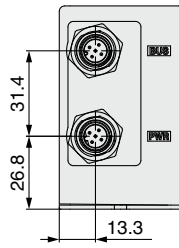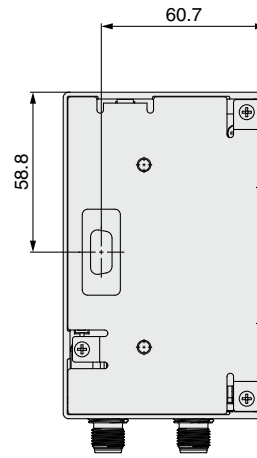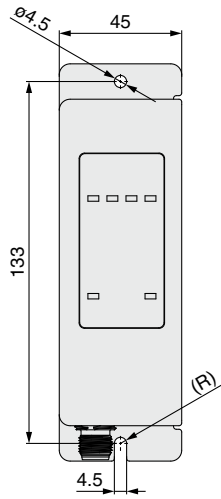
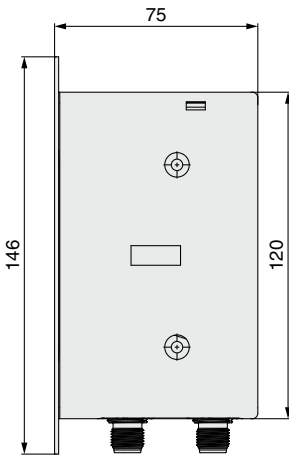


**When a straight cable is inserted**

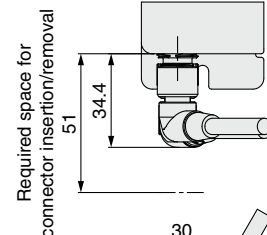

**When angled cables are inserted**



**When a DIN rail mounting bracket (IZT40-B1) is used**

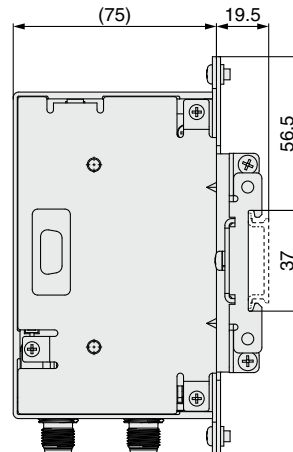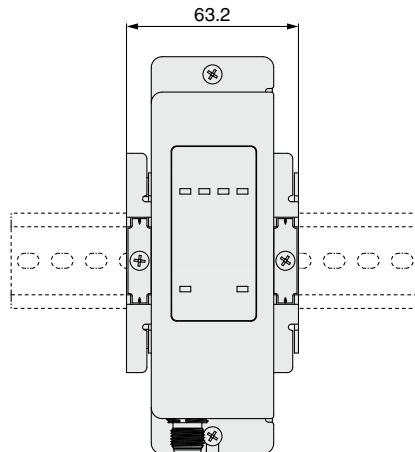

# IZT43(-L) Series



## Dimensions

### High voltage power supply module for IZT43(-L)

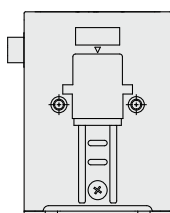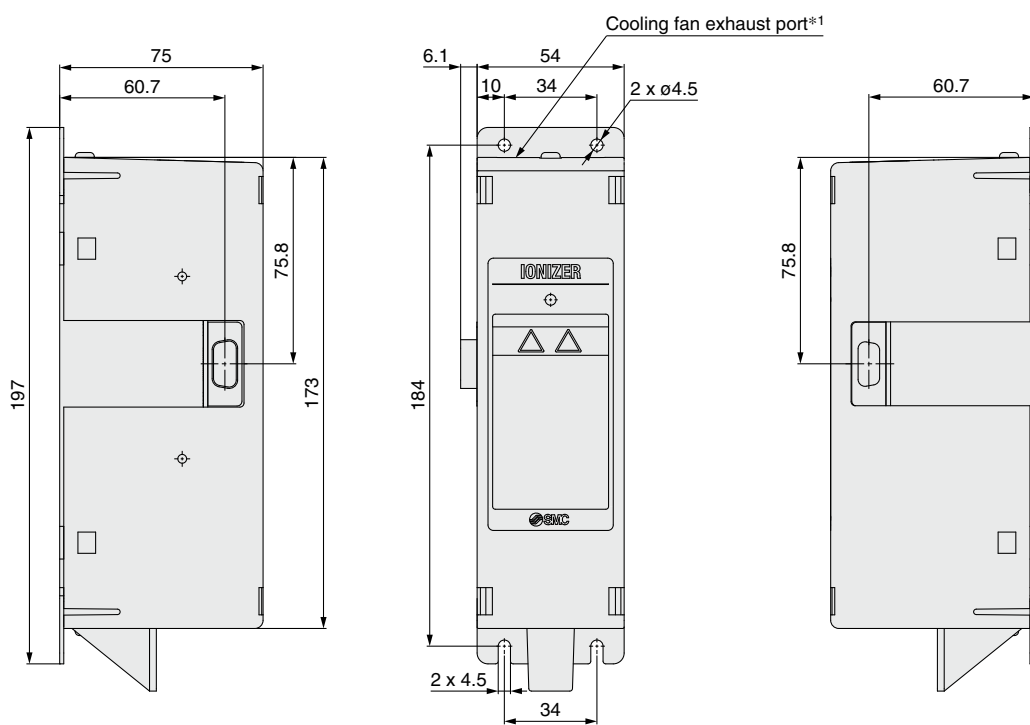


\*1 Refer to Mounting (12) in the Specific Product Precautions (page 66).

### When a DIN rail mounting bracket (IZT40-B2) is used

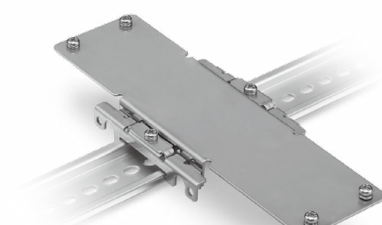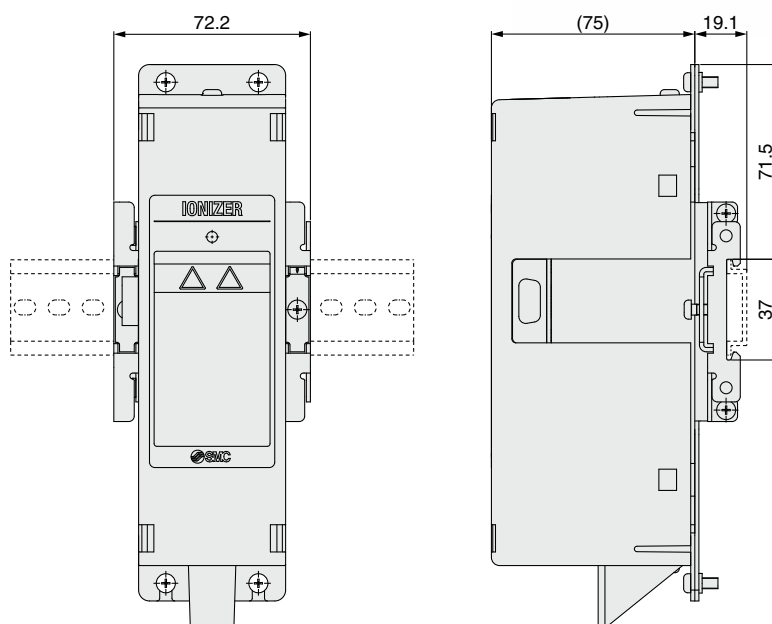

## Dimensions

### Power supply cable IZT43

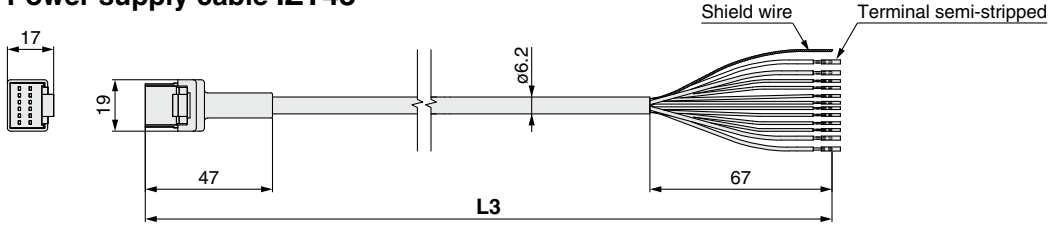

#### Cable Length L3


Part number	L3 [mm]
<b>IZT40-CP3</b>	2950
<b>IZT40-CP5</b>	5000
<b>IZT40-CP10</b>	9800
<b>IZT40-CP15</b>	15000

#### Cable Specifications


No. of cable wires/Size		12 cores/AWG20 (4 cores), AWG28 (8 cores)
Conductor	Nominal cross section	0.54 mm <sup>2</sup> (4 cores), 0.09 mm <sup>2</sup> (8 cores)
	O.D.	0.96 mm (4 cores), 0.38 mm (8 cores)
Insulator	O.D.	1.4 mm Brown, Blue 0.7 mm White, Green, Pink, Purple, Gray, Yellow, Orange, Black
	Material	Lead-free PVC
Sheath	O.D.	6.2 mm

### IO-Link power supply cable IZT43-L

Entry direction: **Straight**

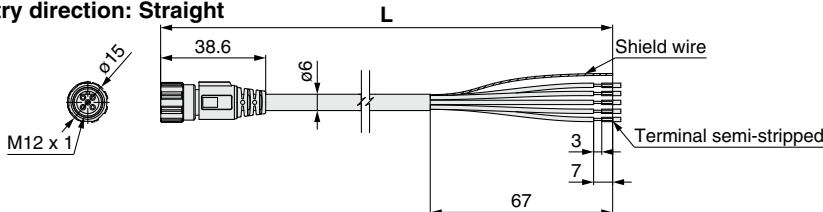


Entry direction: **Angled**

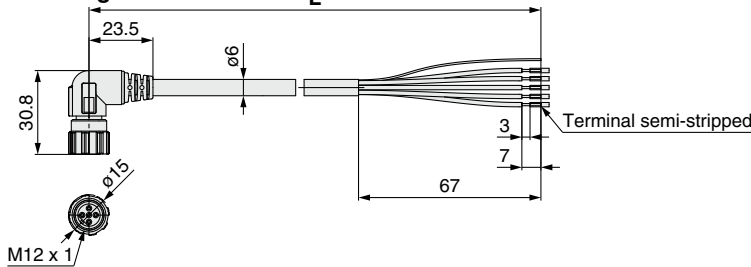


### IO-Link communication cable IZT43-L

Entry direction: **Straight**

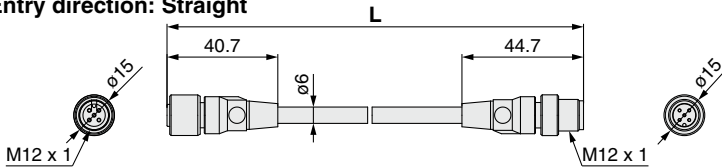

Entry direction: **Angled**

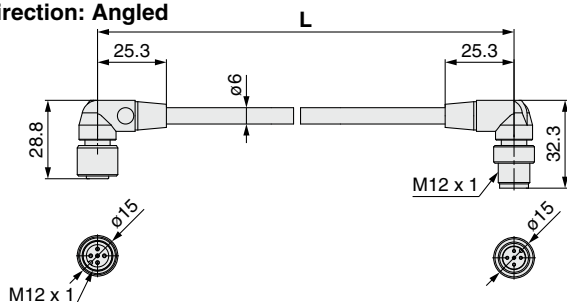

#### Power Supply Cable Length L

Symbol	Entry direction	Length [m]
<b>IZT41-CPJ</b>	Straight	3
<b>IZT41-CPK</b>		5
<b>IZT41-CPM</b>		10
<b>IZT41-CPS</b>	Angled	3
<b>IZT41-CPT</b>		5
<b>IZT41-CPZ</b>		10

#### Power Supply Cable Specifications

No. of cable wires/Size		5 cores/AWG22
Conductor	Nominal cross section	0.3 mm <sup>2</sup>
	O.D.	0.76 mm
Insulator	O.D.	1.3 mm
	Material	PVC (Lead-free)
Sheath	O.D.	6.0 mm

#### Communication Cable Length L

Symbol	Entry direction	Length [m]
<b>IZT41-CEE</b>	Straight	0.5
<b>IZT41-CEG</b>		1
<b>IZT41-CEH</b>		2
<b>IZT41-CEJ</b>		3
<b>IZT41-CEK</b>		5
<b>IZT41-CEM</b>	Angled	10
<b>IZT41-CEP</b>		0.5
<b>IZT41-CEQ</b>		1
<b>IZT41-CER</b>		2
<b>IZT41-CES</b>		3
<b>IZT41-CET</b>		5
<b>IZT41-CEZ</b>		10


#### Communication Cable Specifications

No. of cable wires/Size		5 cores/AWG22
Conductor	Nominal cross section	0.3 mm <sup>2</sup>
	O.D.	0.76 mm
Insulator	O.D.	1.5 mm
	Material	PVC (Lead-free)
Sheath	O.D.	6.0 mm

# IZT43(-L) Series

## Dimensions


### Separate cable IZT40-CF□

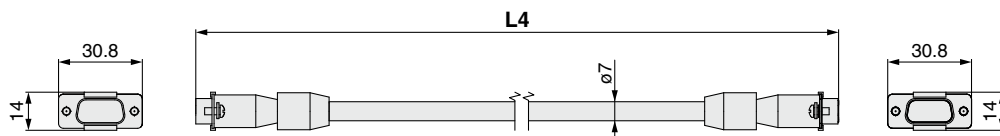

#### Cable Length L4


Part number	L4 [mm]
IZT40-CF1	1000
IZT40-CF2	2000
IZT40-CF3	3000

### When a separate cable is used

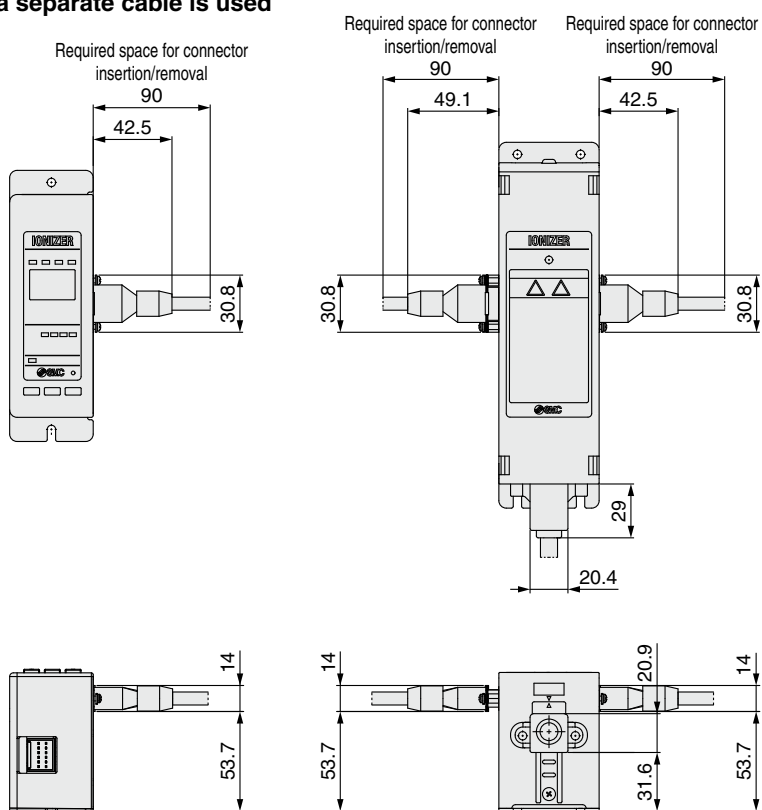

## Dimensions

### High voltage cable assembly IZT43-A002-□

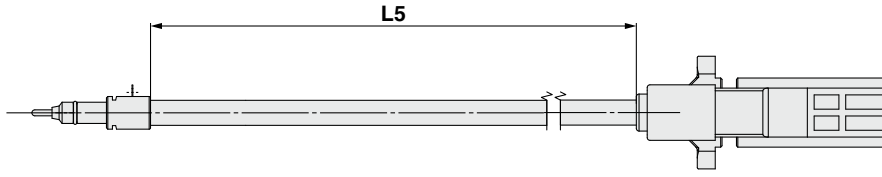


#### Cable Length L5

Part number	L5 [mm]
IZT43-A002-1	1000
IZT43-A002-2	2000
IZT43-A002-3	3000


### High voltage cable holder

#### Straight IZT40-E1

##### Cross-sectional view A-A

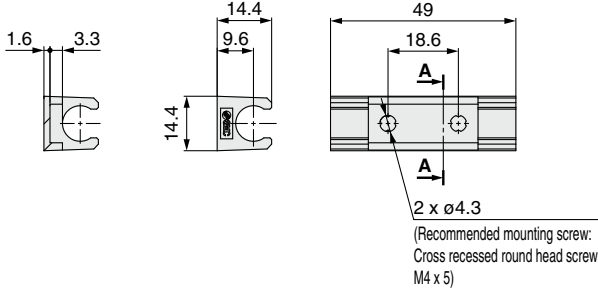

#### Elbow IZT40-E2

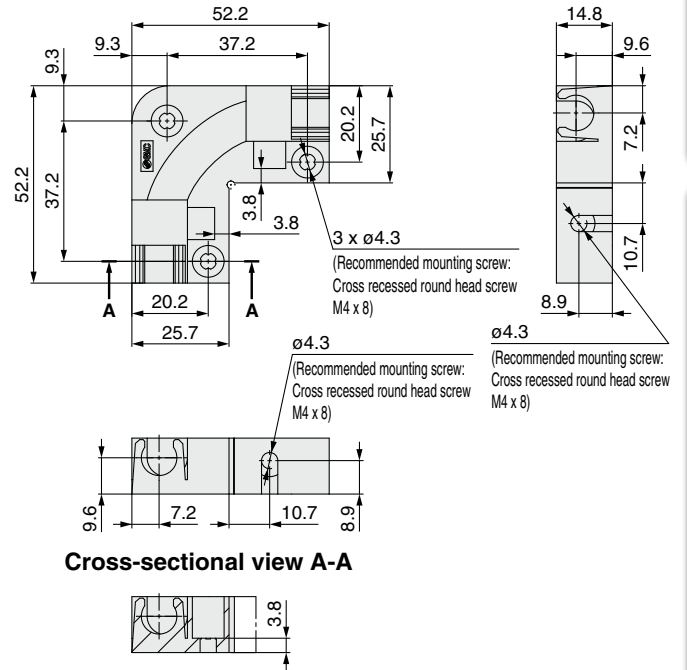

Technical Data

IZT40/41(-L)/42(-L)

IZT43(-L)

Glossary


Specific Product Precautions

# IZT40/41(-L)/42(-L)/43(-L) Series Glossary

## 1 Discharge Time

Time required for the voltage (attributed to static electric charge) attenuating from an initial value to the arbitrarily selected final value [JIS C 61340-4-7]

The graph shows the time required for the charged plate voltage being discharged from 1000 V to 100 V.

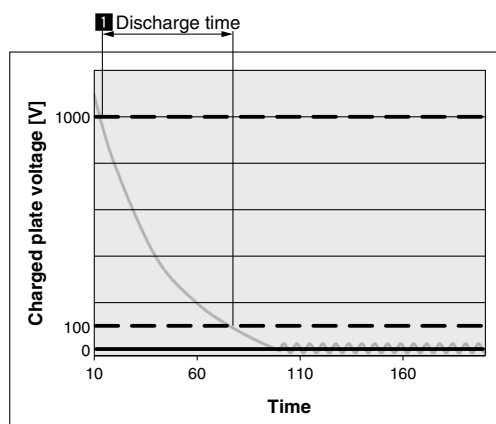

## 2 Offset Voltage

Voltage which can be measured from the insulated conductive charged plate mounted to the charged plate monitor in the ionized atmosphere [JIS C 61340-4-7]

This catalog shows the average offset voltage between 1 and 2 minutes after starting the measurement.


## 3 Peak Offset Voltage

The peak voltage of the pulse voltage type ionizer when considering the offset value of each polarity as an absolute value when the offset voltage fluctuates to the positive and negative side periodically, based on the periodical fluctuation of the ion output from positive to negative [JIS C 61340-4-7]

## 4 Potential Amplitude

The p-p voltage value is measured by the charged plate using the AC method in which positive and negative ion output fluctuates periodically. [SMC technical term]

The voltage is measured between 1 and 2 minutes after starting the measurement, and the difference between the maximum and minimum values is indicated.

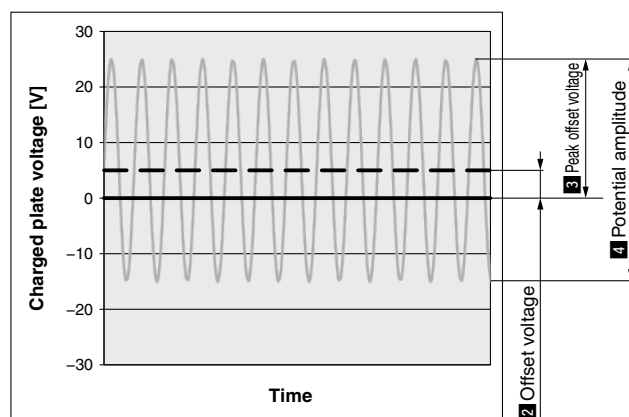





# IZT40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 1

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.

## Selection

### ⚠ Warning

- 1. This product is intended to be used with general factory automation (FA) equipment.**
  - If considering using the product for other applications (especially those indicated in Warning (4) on the back cover), please consult with SMC beforehand.
- 2. Use this product within the specified voltage and temperature range.**
  - Using outside of the specified voltage can cause a malfunction, damage, electrical shock, or fire.
- 3. Use clean compressed air as fluid. (Compressed air quality of Class 2.4.3., 2.5.3., 2.6.3 or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation.)**
  - This product is not explosion proof. Never use a flammable gas or an explosive gas as a fluid and never use this product in the presence of such gases.
  - Please contact us when fluids other than compressed air are used.
- 4. This product is not explosion-protected.**
  - Never use this product in locations where the explosion of dust is likely to occur or flammable or explosive gases are used. This can cause a fire.

### ⚠ Caution

- 1. Clean specification is not available with this product.**
  - A minute amount of particles are generated due to wearing of the emitters while the product is operating.
  - When bringing into a clean room, confirm the required cleanliness before use.

## Mounting

### ⚠ Warning

- 1. Reserve enough space for maintenance, piping, and wiring.**
  - Please take into consideration that the connector connecting part, plug connecting part, and One-touch fittings for supplying air need enough space for the cable and air tubing to be easily attached/detached.
  - To avoid unreasonable stress applied to the connector mounting part, plug connecting part, and One-touch fitting mounting part, bending of the cable or air tubing should be more than the minimum bending radius.
  - If the cable is bent in an acute angle or load is applied to the cable repeatedly, it may cause a malfunction, wire damage or fire.  
[Minimum bending radius] Power supply cable: 40 mm  
Power supply cable: 48 mm (IO-Link)  
Communication cable: 40 mm (IO-Link)  
Separate cable (Option): 40 mm  
High voltage cable: 30 mm

\* Shown above is wiring with the fixed minimum allowable bending radius and at a temperature of 20°C. A bend radius should be larger at a temperature lower than 20°C. Regarding the minimum bending radius of the air tubing, refer to the operation manual or catalog for air tubing.
- 2. Installation of the high voltage cable**
  - Use the specified cable holder (IZT40-E1 or IZT40-E2) for installing high voltage cables.
  - Follow the instructions below when installing high voltage cables. If these are not followed, the insulation performance of the high voltage cable will decrease, causing failure of the ionizer, which may lead to electrical shock or fire.
    - a. Do not cut the cable.
    - b. Keep to the minimum bending radius of the cable.
    - c. Do not tighten the cable too much with cable ties. Do not deform the cable by placing any object on the cable.
    - d. Avoid the problems of cable runaway such as in a cable duct.
    - e. Do not twist or damage the cable. If the cable is damaged, it should be replaced.



# IZT40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 2

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.

## Mounting

### Warning

#### 3. Fix the high voltage cable connector using 2 screws included as an accessory.

- Fix the connector using 2 cross recessed round head screws (M4 x 10 L) with the specified tightening torque. (Refer to the table below.)

#### 4. Be sure to fix the high voltage cable plug with a screw.

#### 5. Mount on a flat surface and do not apply impact load or excessive external force.

- If there are irregularities, cracks or height differences, excessive stress will be applied to the housing or brackets, resulting in damage or other trouble.
- Do not drop or apply a strong shock. Otherwise, damage or an accident can occur.

#### 6. Install the product so that the bar does not have an excessive deflection.

- For a bar length of 820 mm or more, be sure to support the bar at both ends and in the middle by using brackets (IZT40-BM1 or IZT40-BM2). If the bar is held only at the both ends, self-weight of the bar causes deflection, resulting in damage or deformation of the bar.

#### 7. Avoid using in a place where noise (electromagnetic wave surge) is generated.

- If the product is used in an environment where noise is generated, it may lead to a malfunction and deterioration or damage of the internal elements.
- If the presence of noise is suspected, take preventative measures against noise and avoid crossing wires such as power line and high voltage line.

#### 8. Tighten screws with the specified tightening torque.

- If the mounting screws are tightened in excess of the specified torque range, it may damage the screws or mounted areas.
- If the tightening torque is insufficient, the screws may become loose. (Refer to the table below.)


#### 9. Do not touch the emitter directly with fingers or metallic tools.

- Do not touch the emitter with your finger. If the needle sticks to your finger, an electrical shock can cause an instantaneous rapid body motion to escape from the shock, causing injury.
- If the emitter or cartridge is damaged with a tool, the specification will not be met and damage and/or an accident may occur.


### Danger High Voltage

The emitter carries a high voltage. If foreign matter is inserted or there is human contact with the emitter, an electrical shock, or an instantaneous body reaction to escape from the shock, can cause injury.

Bar

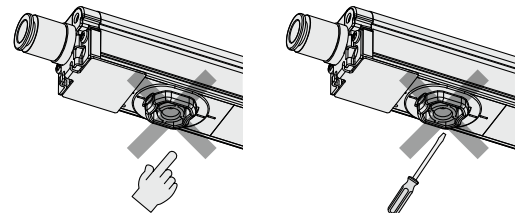

Nozzle

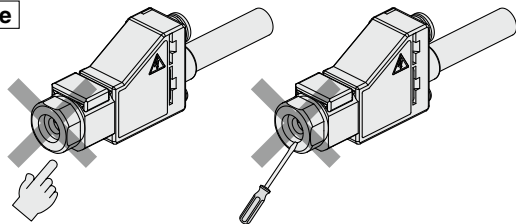

### Tightening Torque for Screws

Description		Part number	Screw	Tightening torque
For Bar	End bracket	IZT40-BE□	For fixed angle M4 x 8 L	0.72 to 0.76 N·m
			For fixed bar M4 x 8 L	0.51 to 0.55 N·m
	Intermediate bracket 1	IZT40-BM1	M4 x 16 L	0.72 to 0.76 N·m
	Intermediate bracket 2	IZT40-BM2	M4 x 16 L	0.47 to 0.49 N·m
	High voltage cable connector	IZTB4□-□□□□□-□-□	M4 x 10 L	0.49 to 0.53 N·m
For Nozzle	L-bracket	IZT43-B1	M3 x 4 L	0.61 to 0.65 N·m
	Angle adjustment bracket	IZT43-B2	For fixed angle M3 x 4 L	0.61 to 0.65 N·m
			For fixed nozzle M3 x 4 L	0.61 to 0.65 N·m
	High voltage cable connector	IZTN43-□□□□-□	M4 x 10 L	0.49 to 0.53 N·m
High voltage cable plug	M3 x 5 L		0.11 to 0.15 N·m	
	Controller	IZTC40 IZTC41(-L)	M4 x 30 L	0.22 to 0.24 N·m
	Separate cable	IZT40-CF□	Spacer	0.40 to 0.60 N·m
			Set screw	0.25 to 0.35 N·m
	DIN rail mounting bracket	IZT40-B□	M4 x 6 L	1.30 to 1.50 N·m
	Cable holder	IZT40-E□	M4 x 8 L (Recommended length)	0.19 to 0.21 N·m



# IZT40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 3

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.

## Mounting

### Warning


**10. Do not affix any tape or seals to the controller, high voltage power supply module, bar, and nozzle.**

- If the tape or label contains a conductive adhesive or reflective paint, a dielectric phenomenon may occur due to ions arising from such substances, resulting in electrostatic charging or electric leakage, causing a malfunction, damage, electric shock or fire.

**11. Installation should be conducted after turning off the power supply and air supply to the controller, high voltage power supply module, bar, and nozzle.**

- If installation or adjustment is performed power or air supplied, electric shock, failure or injury can result.

**12. The high voltage power supply module uses a fan. A space of 20 mm or more is required from the exhaust port for ventilation. Install the product in a ventilated location so peripheral devices are not affected.**

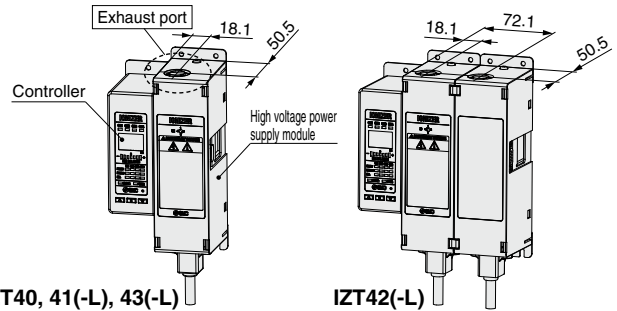

IZT40, 41(-L), 43(-L)

IZT42(-L)

**13. Do not apply any excessive force to cables, such as repeated bending, tensioning, or placing a heavy object on the cables.**

- It may cause an electric shock, fire, or the breaking of a wire.


**14. Do not carry the product by holding its cables.**

- It may cause an injury or damage to the product.

### Caution

**1. When the IZT40, IZT41, IZT42, or IZT43 series is installed, maintain a space from structures or components.**

- If there are electrically conductive objects such as walls or structures close to the bar, generated ions may not reach the target object effectively or product failure or electric shock can result due to dielectric or short-circuit.

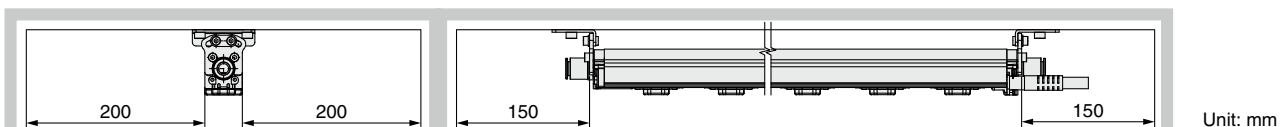


**2. Make sure to confirm the effect of static neutralization after installation.**

- The performance of the product varies depending on the surrounding installation and operating conditions. After installation, verify the effects of static neutralization.


**3. When installing the IZT41, IZT42, or IZT43 in proximity with an ionizer which operates in DC mode (one polarity, positive or negative), they should be positioned at least 2 meters away from each other.**

- When using the AC mode of the IZT41, IZT42, or IZT43 near the ionizer in DC mode, keep clearance of at least the length shown in the figure below between them. The offset voltage (ion balance) may not be adjusted by the built-in sensor due to the ions discharged from the DC mode ionizer.

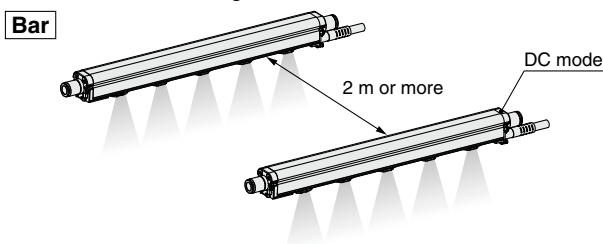

Nozzle

DC mode

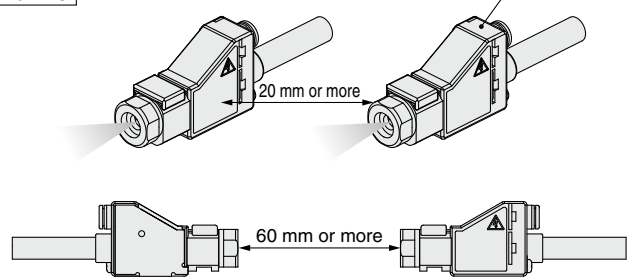

**4. Use the specified bracket.**



# IZT40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 4

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.

## Wiring / Piping

### Warning

1. Before wiring, ensure that the power supply capacity is larger than the specification and that the voltage is within the specification. Product damage or malfunction can result.
2. To maintain product performance, the power supply shall be UL listed Class 2 certified by National Electric Code (NEC) or evaluated as a limited power source provided by UL60950.
3. To maintain the product performance, ground the product with an earth ground cable with a resistance of 100  $\Omega$  or less. If the product is not grounded, it is not possible to secure the performance and may lead to product failure or malfunction.
4. Wiring (including insertion and removal of the connector plug (high voltage cable connector, high voltage cable plug)) should never be carried out with the power supply ON. Otherwise, an electrical shock or accident may occur.
5. Use the specified cable for connecting the ionizer controller, high voltage power supply module, bar, and nozzle. Do not disassemble or retrofit. Modifying the product may cause accidents such as electric shock, failure or fire. The product will not be guaranteed if it is disassembled and/or modified.
6. Ensure the safety of wiring and surrounding conditions before supplying power.
7. Do not connect or disconnect the connector plug (including power source) while the power is supplied. Failure to follow this procedure may cause product malfunction.
8. If the ionizer wiring and high power lines are routed together, this product may malfunction due to noise. Therefore, use a separate wiring route for this product.
9. Confirm that the wiring is correct before operation. Incorrect wiring will lead to product damage or malfunction.
10. Flush the piping before use. Before piping this product, exercise caution to prevent particles, water drops, or oil contents from entering the piping.

## Operating Environment / Storage Environment

### Warning

1. Observe the fluid temperature and ambient temperature range.
  - Fluid temperature and ambient temperature ranges are; 0 to 40°C for controller, 0 to 40°C for high voltage power supply module, 0 to 50°C for bar, 0 to 40°C for nozzle, and 0 to 40°C for AC adapter.
  - Do not use the product in locations where the temperature may change suddenly even if the ambient temperature range is within the specified limits, resulting in condensation.

## Operating Environment / Storage Environment

### Warning

2. Do not use this product in an enclosed space.
  - This product utilizes a corona discharge phenomenon. Avoid using in an enclosed space as ozone and nitrogen oxides exist in such places, even though in marginal quantities.
3. Environments to avoid
  - Never use or store under the following conditions. These may cause a failure, fire, etc.
    - a. Environments where the ambient temperature is outside of the product specification
    - b. Environments where the ambient humidity is outside of the product specification
    - c. Environments where abrupt temperature changes may cause condensation
    - d. Environments where corrosive gas, flammable gas or other volatile flammable substances are stored
    - e. Environments where the product may be exposed to conductive powder such as iron powder or dust, oil mist, salt, organic solvent, machining chips, particles or cutting oil (including water and any liquids), etc.
    - f. Environments where ventilated air from an air conditioner is directly applied to the product
    - g. Enclosed or poorly ventilated environments
    - h. Environments that are exposed to direct sunlight or heat radiation
    - i. Environments where strong electromagnetic noise is generated, such as strong electrical and magnetic fields or supply voltage spikes
    - j. Environments where static electricity is generated
    - k. Environments where a strong high frequency occurs
    - l. Environments that are subject to potential lightning strikes
    - m. Environments where the product may receive direct impact or vibration
    - n. Environments where the product may be subjected to forces or weight that could cause physical deformation
4. Do not use an air containing mist or dust.
  - The air containing mist or dust will cause the performance to decrease and shorten the maintenance cycle.
  - Install an air dryer (IDF series), air filter (AF/AFF series), and/or mist separator (AFM/AM series) to obtain clean compressed air (compressed air quality of Class 2.4.3., 2.5.3., 2.6.3 or higher according to ISO 8573-1:2010 (JIS B 8392-1:2012) is recommended for operation).
5. Controller, high voltage power supply module, bar, nozzle, and AC adapter are not resistant to lightning surge.
6. Effects on implantable medical devices
  - The electromagnetic waves emitted from this product may interfere with implantable medical devices such as cardiac pacemakers and cardioverter defibrillators, resulting in the malfunction of the medical device or other adverse effects.
  - Please use extreme caution when operating equipment which may have an adverse effect on your implantable medical device. Be sure to thoroughly read the precautions stated in the catalog, operation manual, etc., of your implantable medical device, or contact the manufacturer directly for further details on what types of equipment need to be avoided.



# I<sub>Z</sub>T40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 5

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.

## Maintenance

### Warning

#### 1. Periodically inspect the ionizer and clean the emitters.

- Check regularly if the product is operating with undetected failures or not.
- The maintenance must be performed by an operator who has sufficient knowledge and experience.
- If the product is used for an extended period with dust present on the emitters, the product performance will be reduced.
- An emitter dirt detection function is available with the I<sub>Z</sub>T41, I<sub>Z</sub>T42, and I<sub>Z</sub>T43. When emitter contamination is detected, clean the emitter.
- In cases where the emitter dirt detection function is not used on the I<sub>Z</sub>T41, I<sub>Z</sub>T42, or I<sub>Z</sub>T43, or when the I<sub>Z</sub>T40 is used, perform a neutralizing performance test and set a maintenance cycle for periodic cleaning.
- The emitter contamination level is different depending on the installation environment and supply pressure.
- If the performance is not recovered after cleaning, it is possible that emitters are worn. Replace the emitter cartridge.

### Danger High Voltage

This product contains a high voltage generation circuit. When performing maintenance inspection, be sure to confirm that the power supply to the ionizer is turned off. Never disassemble or modify the ionizer, as this may not only impair the product's functionality but could cause an electric shock or electric leakage.

#### 2. When cleaning the emitter or replacing the emitter cartridge, be sure to turn off the power supply or air supply to the controller, high voltage power supply module, bar, and nozzle.

- Never touch the emitters with the power supplied to the controller, high voltage power supply module, bar, and nozzle. Electric shock may cause injury.
- If an attempt to replace the emitter cartridges is performed before removing air supply, the emitter cartridges may eject unexpectedly due to presence of the compressed air. Remove supply air before replacing the cartridges.
- If emitter cartridges are not securely mounted to the bar, they may eject or release when air is supplied to the product.
- Securely mount or remove the emitter cartridges referencing the instructions shown to the right.
- Securely mount or remove the emitter cartridges with hands and do not use tools.

Bar type


Emitter cartridge tightening torque: 0.2 to 0.3 N·m

Nozzle type


Emitter cartridge tightening torque: 0.1 to 0.2 N·m

#### Bar

##### Removal of emitter cartridge

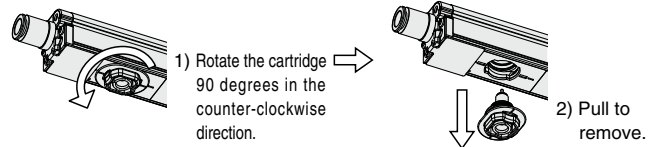


##### Mounting of emitter cartridge

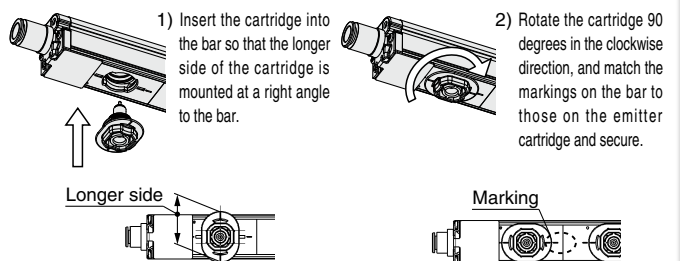


#### Nozzle

##### Removal of emitter cartridge

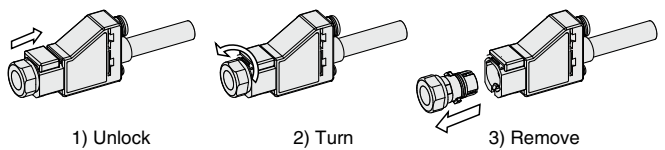

##### Mounting of emitter cartridge

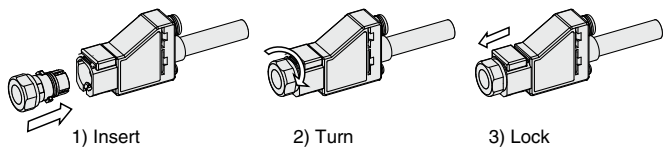


#### 3. Do not disassemble or modify the product.

- Disassembling or modifying the product may cause accidents such as electric shock, failure or fire.
- The product will not be guaranteed if it is disassembled and/or modified.

#### 4. Do not operate the product with wet hands.

- Never operate the product with wet hands. It may cause electric shock or other accidents.

#### 5. When replacing the high voltage cable for the nozzle, be sure to turn off the power supply or air supply to the controller, high voltage power supply module, and nozzle.

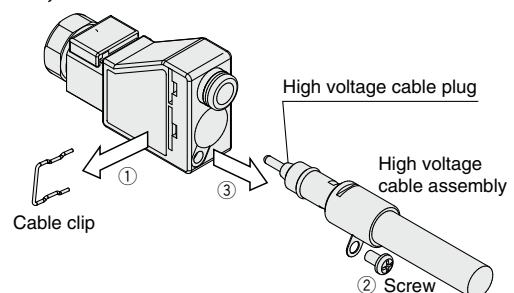






# IZT40/41(-L)/42(-L)/43(-L) Series Specific Product Precautions 6

Be sure to read this before handling the products.  
Refer to the back cover for safety instructions.


## Handling

### ⚠ Caution

- Do not apply excessive external force or impact (100 m/s<sup>2</sup> or more).**
  - Even though the controller, high voltage power supply module, bar, and nozzle do not appear to be damaged, the internal parts may be damaged and cause a malfunction.
- If the bar length exceeds 820 mm, hold both ends and the middle of the bar to avoid a moment load being applied.**
  - Handling the product by holding either end of the bar may cause deformation or damage of the product.
- The power cable must be connected and disconnected by hand.**
  - The use of tools can result in damage to the product.
  - Hold the connector by hand and pull it out straight.
  - If the connector has a lock mechanism, release the lock and then pull out the connector.
- If smoking, fire, or foul smell occurs in the product, immediately shut off the power supply.**
- Do not touch part A of the high voltage connector and part B of the high voltage cable plug by hand. Be careful that moisture or foreign matter does not adhere to the connector and plug.**
  - Do not touch part A of the high voltage connector and part B of the high voltage cable plug while handling.
  - Keep the high voltage connector and high voltage cable plug free from contamination. Adhesion of moisture, oil, or foreign matter on part A and part B may cause high voltage electric leakage.
  - If moisture, oil, or foreign matter adheres to part A or part B, clean it with ethanol.

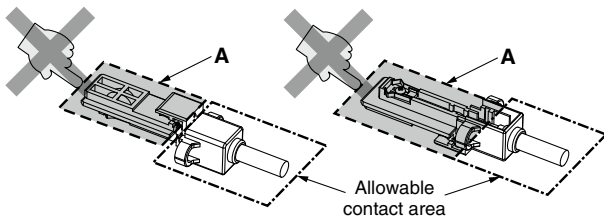

High voltage connector

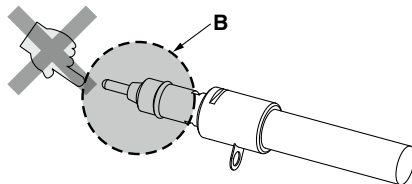

High voltage cable plug

## Handling

### ⚠ Caution

- Tightening of M12 connector screw**
  - The screws may become loose if they are not tightened sufficiently.
  - Check that they are tightened enough at appropriate intervals during operation.
- Connection and disconnection of M12 connector**
  - Do not touch the engagement surface with wet hands.
  - Do not pull the cable out by holding the cable.
  - Note the key direction.
  - When engaging the connectors, insert the connectors until the entire engagement surface is no longer visible and tighten the screws so as not to damage the thread ridges.


## Adjustment / Operation


### ⚠ Caution


- For details on programming and address setting, refer to the manual from the PLC manufacturer. The programming content related to the protocol is designed by the manufacturer of the PLC used.**

## Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of “**Caution**,” “**Warning**” or “**Danger**.” They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)\*1), and other safety regulations.

 **Caution:** **Caution** indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.

 **Warning:** **Warning** indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

 **Danger :** **Danger** indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

\*1) ISO 4414: Pneumatic fluid power – General rules relating to systems.  
ISO 4413: Hydraulic fluid power – General rules relating to systems.  
IEC 60204-1: Safety of machinery – Electrical equipment of machines.  
(Part 1: General requirements)  
ISO 10218-1: Manipulating industrial robots – Safety.  
etc.

### Warning

#### 1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

#### 2. Only personnel with appropriate training should operate machinery and equipment.

The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.

#### 3. Do not service or attempt to remove product and machinery/equipment until safety is confirmed.

1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
3. Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

#### 4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
3. An application which could have negative effects on people, property, or animals requiring special safety analysis.
4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

### Caution

#### 1. The product is provided for use in manufacturing industries.

The product herein described is basically provided for peaceful use in manufacturing industries.  
If considering using the product in other industries, consult SMC beforehand and exchange specifications or a contract if necessary.  
If anything is unclear, contact your nearest sales branch.

### Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following “Limited warranty and Disclaimer” and “Compliance Requirements”.

Read and accept them before using the product.

#### Limited warranty and Disclaimer

1. The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.\*2)  
Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided.  
This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
3. Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.

##### \*2) Vacuum pads are excluded from this 1 year warranty.

A vacuum pad is a consumable part, so it is warranted for a year after it is delivered.  
Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

#### Compliance Requirements

1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

### Caution

#### SMC products are not intended for use as instruments for legal metrology.


Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

#### Revision History

**Edition B** \* The energy saving high-efficiency cartridge has been added.  
\* The contents of the technical data have been revised.  
\* The weight of the high voltage power supply module has been changed.  
\* Information on the effects on implantable medical devices has been added to the specific product precautions.  
\* Number of pages has been increased from 40 to 44. YQ

**Edition C** \* The nozzle type, IZT43 series has been added.  
\* Number of pages has been increased from 44 to 64. YU

**Edition D** \* An IO-Link type has been added to the IZT41/42/43.  
\* Number of pages has been increased from 64 to 72. ZX

 **Safety Instructions** Be sure to read the “Handling Precautions for SMC Products” (M-E03-3) and “Operation Manual” before use.