
Installation Guide

Service thermostats

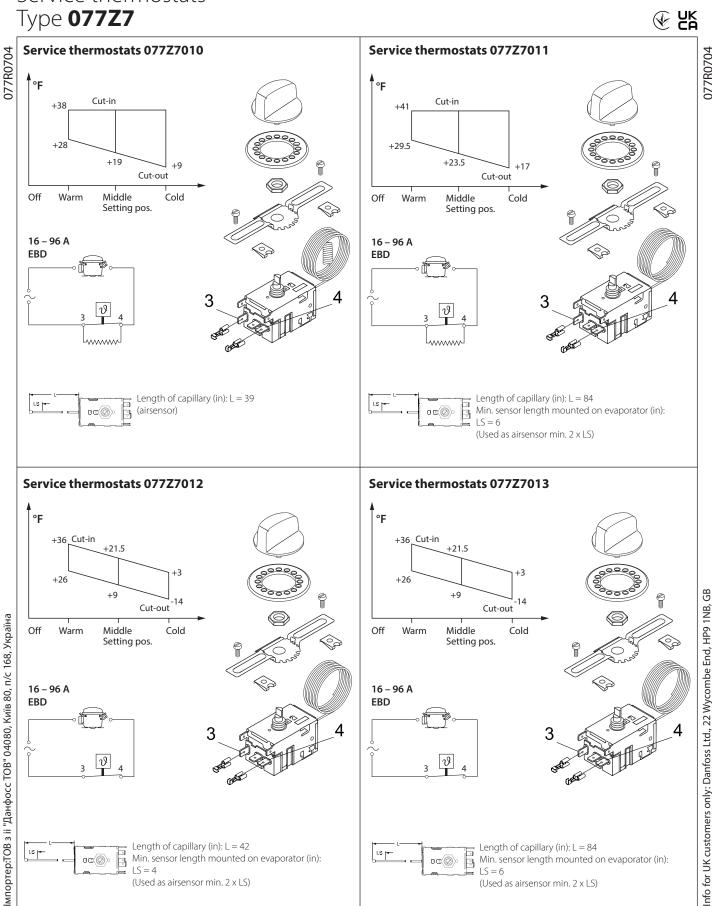

000

Length of capillary (in): L = 42

(Used as airsensor min. 2 x LS)

Min. sensor length mounted on evaporator (in):


Length of capillary (in): L = 84

(Used as airsensor min. 2 x LS)

LS = 6

Min. sensor length mounted on evaporator (in):



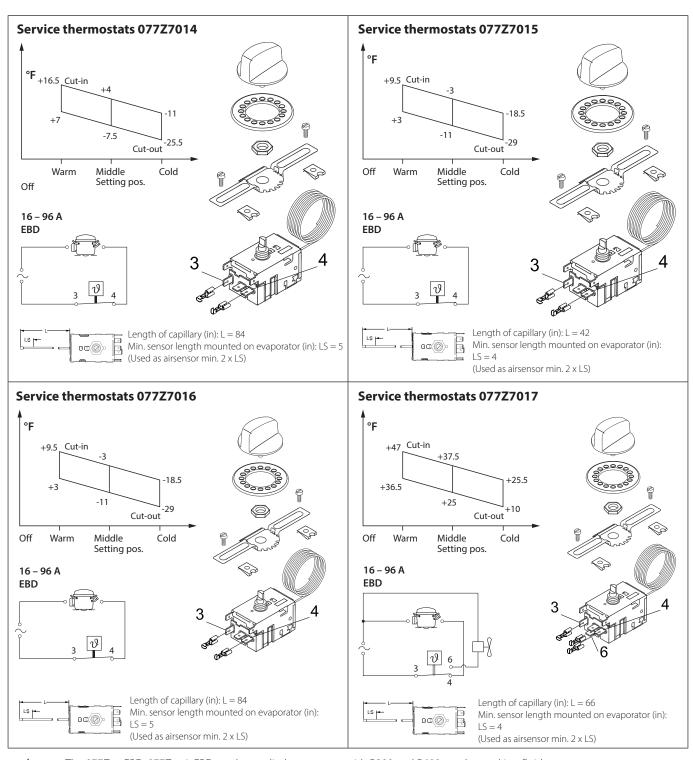



The 077Z....EBD, 077Z....L EBD can be applied on systems with R290 and R600a as the working fluid. Always adhere to local codes and safety guidelines. For countries with no conformity certification (UL, CE, CCC, CSA, EAC, etc.) requirements on new systems, Danfoss recommends third party apporval for systems containing flammable refrigerants.

Note: All temperatures at 760 mm Hg

Danfoss A/S

Climate Solutions • danfoss.com • +45 7488 2222

Any information, including, but not limited to information on selection of product, its application or use, product design, weight, dimensions, capacity or any other technical data in product manuals, catalogues descriptions, advertisements, etc. and whether made available in writing, orally, electronically, online or via download, shall be considered informative, and is only binding if and to the extent, explicit reference is made in a quotation or order confirmation. Danfoss cannot accept any responsibility for possible errors in catalogues, brochures, videos and other material. Danfoss reserves the right to alter its products without notice. This also applies to products ordered but not delivered provided that such alterations can be made without changes to form, fit or function of the product.

All trademarks in this material are property of Danfoss A/S or Danfoss group companies. Danfoss and the Danfoss logo are trademarks of Danfoss A/S. All rights reserved.