

Please make the following alterations to the *Communication Interface User's Manual*, IM 701310-17E(CD-ROM).

**■ Page 6-2 “Writing/Reading from Registers”**

The \*ESE command is used to set the bits in the standard event enable register to 1's or 0's.

The \*ESE? command is used to query whether the bits in the standard event enable register are 1's or 0's. For details regarding these commands, see chapter 5.