


Installation guide – Spare parts and accessories

Overhaul kit | Code number 027F0583
MRV, size 40

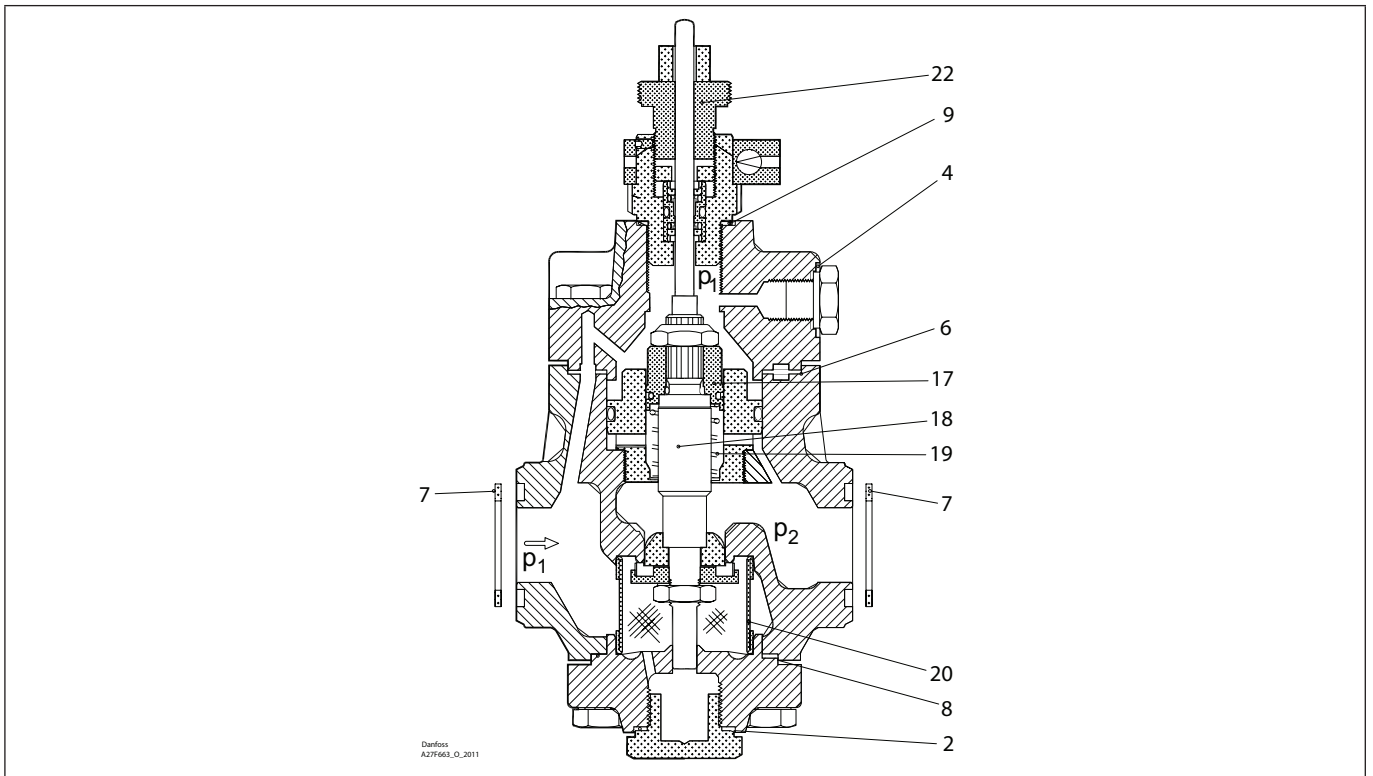

<p>1*</p> <p> = Alu.</p> <p> = Fibre</p> <p>$\varnothing 26 \text{ mm}$ $\varnothing 1.02''$</p> <p>Total no. = 1</p>	<p>2</p> <p> = Alu.</p> <p> = Fibre</p> <p>$\varnothing 33 \text{ mm}$ $\varnothing 1.28''$</p> <p>Total no. = 4</p>	<p>3*</p> <p> = Alu.</p> <p>$\varnothing 9 \text{ mm}$ $\varnothing 0.36''$</p> <p>Total no. = 3</p>	<p>4</p> <p> = Alu.</p> <p>$\varnothing 18 \text{ mm}$ $\varnothing 0.70''$</p> <p>Total no. = 1</p>	<p>5*</p> <p> = Alu.</p> <p>$\varnothing 14 \text{ mm}$ $\varnothing 0.55''$</p> <p>Total no. = 1</p>	<p>6</p> <p> = Fibre</p> <p>$\varnothing 93 \text{ mm}$ $\varnothing 3.66''$</p> <p>Total no. = 1</p>
<p>7</p> <p> = Fibre</p> <p>$\varnothing 65 \text{ mm}$ $\varnothing 2.56''$</p> <p>Total no. = 2</p>	<p>8</p> <p> = Fibre</p> <p>$\varnothing 78 \text{ mm}$ $\varnothing 3.07''$</p> <p>Total no. = 1</p>	<p>9</p> <p> = Alu.</p> <p>$\varnothing 32 \text{ mm}$ $\varnothing 1.26''$</p> <p>Total no. = 1</p>	<p>10*</p> <p> = Alu.</p> <p>$\varnothing 22 \text{ mm}$ $\varnothing 0.87''$</p> <p>Total no. = 1</p>	<p>17</p> <p> = Alu.</p> <p>$\varnothing 40 \pm 0.2$</p> <p>Total no. = 1</p>	<p>18</p> <p> = Fibre</p> <p>$\varnothing 42 \text{ mm}$ $\varnothing 1.65''$</p>
<p>19</p> <p> = Fibre</p> <p>$\varnothing 28 \text{ mm}$ $\varnothing 1.1''$</p> <p>Total no. = 1</p>	<p>20</p> <p> = Fibre</p> <p>$\varnothing 62 \text{ mm}$ $\varnothing 2.44''$</p> <p>Total no. = 1</p>	<p>22</p> <p> = Fibre</p> <p>9mm 0.35''</p> <p>Total no. = 1</p>			

* The spare part is included in the package but is not used for MRV 40.