



Changes for the Better

Automating the World

FACTORY AUTOMATION

Low Voltage Circuit Breakers

⟨General Catalog⟩



World Super
WS-V
Series

Molded Case Circuit Breakers and Earth Leakage Circuit Breakers

Empowering
Industries

23
B



Automating the World



Our Factory Automation business is focused on "Automating the World" to make it a better, more sustainable environment supporting manufacturing and society, celebrating diversity and contributing towards an active and fulfilling role.

Mitsubishi Electric is involved in many areas including the following:

Energy and Electric Systems

A wide range of power and electrical products from generators to large-scale displays.

Electronic Devices

A wide portfolio of cutting-edge semiconductor devices for systems and products.

Home Appliance

Dependable consumer products like air conditioners and home entertainment systems.

Information and Communication Systems

Commercial and consumer-centric equipment, products and systems.

Industrial Automation Systems

Maximizing productivity and efficiency with cutting-edge automation technology.

SUSTAINABLE DEVELOPMENT GOALS

The Mitsubishi Electric Group is actively solving social issues, such as decarbonization and labor shortages, by providing production sites with energy-saving equipment and solutions that utilize automation systems, thereby helping towards a sustainable society.

INDEX

Introduction and Features of WS-V Series	4
1. Outline of Circuit Breakers	10
1) Product Line-up	10
2) Instructions for Application	12
3) Mitsubishi MCCB Manufacturing History	14
4) Mitsubishi ELCB and ELR Manufacturing History	15
2. Detailed Specifications	17
1 Molded Case Circuit Breakers.....	18
1) NF-C (Economy class)	18
2) NF-S (Standard class)	20
3) NF-L/NF-H/NF-R (High-performance class)	24
4) NF-U (Ultra current-limiting class)	27
2 Earth Leakage Circuit Breakers	28
1) NV-C (Economy class)	28
2) NV-S (Standard class)	30
3) NV-H/NV-R (High-performance class)	32
3 Motor Protection Breakers.....	34
1) NF-MB	34
4 UL Certified Circuit Breakers.....	35
1) UL 489 Listed Molded Case Circuit Breakers	35
2) UL 489 Listed Earth Leakage Circuit Breakers	38
3) UL 1077 Recognized Circuit Breakers for Control boards	40
3. Special-purpose Breakers	61
1) Mag Only (Instantaneous Tripping Circuit Breakers).....	62
2) DC MCCBs and DSN Switches.....	63
3) 400Hz MCCBs.....	63
4) MCCB and ELCB for special environment	64
4. Selection	65
1 Construction and Operation.....	66
1) Construction of MCCB	66
2) Construction of ELCB	68
2 Selection of MCCB and ELCB	69
1) Selecting Procedure	69
2) Features and Performance	70
3) Current-carrying Capacity and Operating Temperature	72
4) Application of Circuit Breaker According to Breaking Capacity	74
5) Selection of Circuit Breaker for Electric Lamp or Heater Circuit	75
6) Selection of Circuit Breaker for Motor Branch Circuit	77
7) Selection of Motor Protection Breaker	79
8) Selection of Circuit Breaker for Inverter Circuit	80
9) Selection of Circuit Breaker for Transformer Primary Side	81
10) Combination for Selective Breaking	85
11) Combinations for Cascade Breaking	87
12) International Standard Conformance List	89
3 Selection of ELCB.....	92
1) Electric Shock Protection	92
2) ELCB Grounding Method	93
3) Rated Voltage and Number of Poles	94
4) Earth Fault Protection Coordination and Combination of Devices	95
5. Installation and Connection	97
1) Connection Types	98
2) Connecting Parts	100
3) Standard Tightening Torque	101
4) Crimp Terminal Type	102
5) Busbar	104
6) Insulation Distance on Power Source Side	105
7) Effect of Installation Orientation	106
8) Connection of Line and Load	106
6. Accessories	107
1 Internal Accessories.....	108
1) Internal Accessories	108
2) Terminal Symbols	109
3) Operations and Ratings of Switches	109
4) Maximum Number of Internal Accessories	110
5) Cassette Type Accessories	115
6) Shunt Trip (SHT)	117
7) Undervoltage Trip (UVT)	118
8) Lead Wire Drawing	120
9) Lead Wire Terminal Block	120
10) Test Button Module (TBM)	121
11) Pre-Alarm Module (PAL)	122
2 External Accessories	123
1) F-type Operating Handle (Breaker Mount Type)	123
2) V-type Operating Handle (Door Mount Type)	125
3) C-type Operating Handle	127
4) Terminal Covers	128
5) Insulating Barriers	131
6) Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders	134
7) Mechanical Interlocks (MI)	136
8) Boxes for Circuit Breakers and Boxed Circuit Breakers	137
9) Electrical Operated Circuit Breakers and Electrical Operation Devices	140
10) IEC 35mm Rail Mounting Adapters	143

1

2

3

4

5

6

7

8

9

1	7. Characteristics and Dimensions	145
2	1 Molded Case Circuit Breakers.....	146
	• NF32-SV, NF63-CV/SV/HV	146
	• NF125-CV/SV/HV	148
	• NF125-UV	150
	• NF250-CV/SV/HV	152
	• NF250-UV	154
	• NF125-SGV/LGV/HGV/RGV, NF160-SGV/LGV/HGV, NF250-SGV/LGV/HGV/RGV	156
	• NF125-SEV/HEV, NF250-SEV/HEV	158
	• NF400-CW/SW	160
	• NF400-SEW/HEW/REW	162
	• NF400-UEW	164
	• NF630-CW/SW	166
	• NF630-SEW/HEW/REW	168
	• NF800-CEW/SEW/HEW/REW	170
	• NF800-SDW	172
	• NF800-UEW	174
	• NF1000-SEW, NF1250-SEW	176
	• NF1250-SDW	178
	• NF1600-SEW	180
	• NF1600-SDW	182
3	2 Earth Leakage Circuit Breakers	184
	• NV32-SV, NV-63CV/SV/HV	184
	• NV125-CV/SV/HV	186
	• NV250-CV/SV/HV	188
	• NV125-SEV/HEV, NV250-SEV/HEV	190
	• NV400-CW/SW	192
	• NV400-SEW/HEW	194
	• NV630-CW/SW	196
	• NV630-SEW/HEW	198
	• NV800-SEW/HEW	200
4	8. Handling and Maintenance	247
	1) Storage and Transportation.....	248
	2) Normal Service Conditions.....	248
	3) Mounting and Connections	249
	4) Maintenance and Inspections.....	252
	5) Troubleshooting.....	254
5	9. Appendix	257
	1) Handle Operation Angle Dimensions	258
	2) MCCB Trip Button, Instantaneous Adjustment Dial Drilling and Terminal Cover Mounting Hole Dimensions.....	259
	3) ELCB Button and Switch Dimensions	260
	4) List of Product Weights	261
	5) Switching the Adjustable Items.....	262
	6) Breaker Mounting Screw Dimensions	265
	7) List of Mold Surface Temperature-rise Values.....	266
	8) Ordering Information	267
	9) Index.....	269
	10) MELSELECT™	270
	11) Low-Voltage Products Website.....	271
	12) Service Network	272
6	3 UL Certified Circuit Breakers.....	202
	• NF50-SMU	202
	• NF50-SVFU, NV50-SVFU	204
	• NF100-CVFU, NV100-CVFU	206
	• NF100-SRU/HRU, NV100-SRU/HRU	208
	• NF125-SVU/HVU, NV125-SVU/HVU	210
	• NF250-CVU/SVU/HVU, NV250-CVU/SVU/HVU	212
	• NF400-SWU/HWU	214
	• NF630-SWU/HWU	216
	• NF30-FAU, NF50-FAU, NV30-FAU, NV50-FAU	218
	• NF50-FHU, NF100-FHU, NV50-FHU, NV100-FHU	220
7	4 Measuring Display Unit Breakers.....	222
	• NF250-SEV/HEV with MDU	222
	• NF400-SEW/HEW with MDU	224
	• NF800-SEW/HEW with MDU	226
8	5 DC High-Voltage Circuit Breakers.....	230
	• NF63-HDV	230
	• NF125-HDVA, NF250-HDVA.....	232
	• NF400-HDW, NF800-HDW	234
9	6 Miniature Circuit Breakers, Residual Current Circuit Breakers, Residual Current Circuit Breakers with Overcurrent Protection and Isolating Switches	236
	• BH-D6, BH-D10.....	236
	• BH-DN	237
	• BV-D	238
	• BV-DN, BV-DN6.....	239
	• KB-D	240
10	7 Circuit Protectors	241
	• CP30-BA/HU	241
11	8 Electrical Operated Circuit Breakers.....	242

MEMO

High-Performance


Technologies based on long year experience are brought together to realize more improved performance

- The new circuit breaking technology “Expanded ISTAC” has improved the current-limiting performance and upgraded the overall breaking capacity.
Expansion of the conductor under the stator shortens the contact parting time of the mover as compared to the conventional ISTAC structure.
The current-limiting performance has been improved remarkably. (The maximum peak current value has been reduced by approx. 10%).

Breaking capacity has been improved with this new technology and, in the case of class S, Icu is now equivalent to Ics.


Example of breaking capacity improvement

Previous Model NF250-SW 50kA / 25kA (at 230VAC)	→	New Model NF250-SV 85kA / 85kA (at 230VAC)
-------------------------------------------------------	---	--------------------------------------------------

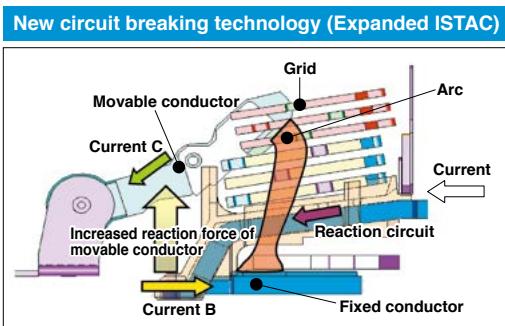

Breaking capacity of 5 models is 20% to 50% higher than the W & WS Series

- Improvement of breaking capacity on 250AF-C/S/H models (Fixed) and 125AF/250AF-R models (Thermal/Adjustable).

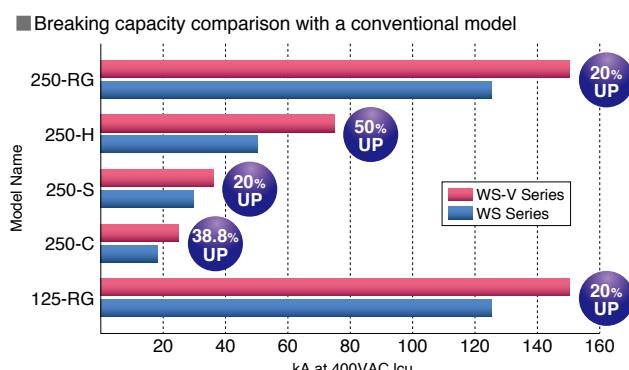



The new electronic circuit breakers (with display) and MDU breakers can display various measurement items

- This will enable energy management through “visualization”, which leads to energy saving.




Electronic Circuit Breaker
(with display)




Measuring Display Unit
Breaker

- The display is on the circuit breaker body and shows circuit information.
- Detailed setting can be done on the display.
- The display turns red during alarms.

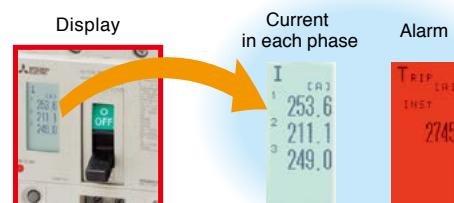

Intelligent Communications through CC-Link

- Measuring data can be transmitted to Personal Computer through CC-Link.

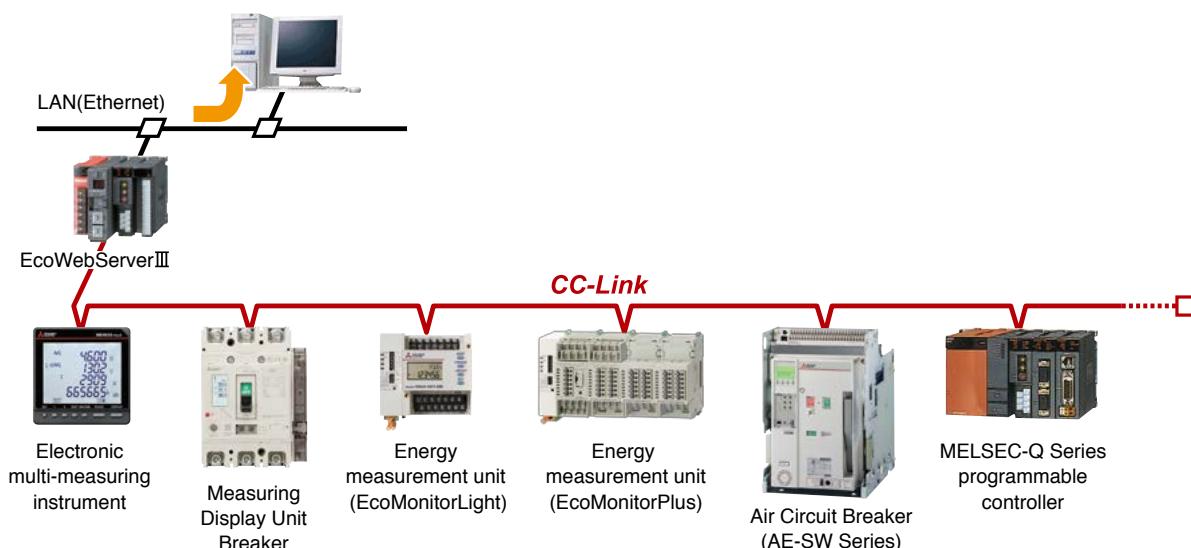

Standardization



Compact design for easy to use


- The thermal adjustable circuit breakers and electronic circuit breakers are smaller.



- 250AF circuit breakers' fixed types (NF250-CV, NF250-SV, NF250-HV, NV250-CV, NV250-SV, NV250-HV), thermal adjustable types (NF250-SGV, NF250-HGV, NF250-RGV), and electronic types (NF250-SEV, NF250-HEV, NV250-SEV, NV250-HEV) are the same size, leading to the reduction and standardization of panel design.


Types of internal accessories are reduced from 3 types to 1 type

- Standardization of internal accessories contributes to the reduction of stock and delivery time.

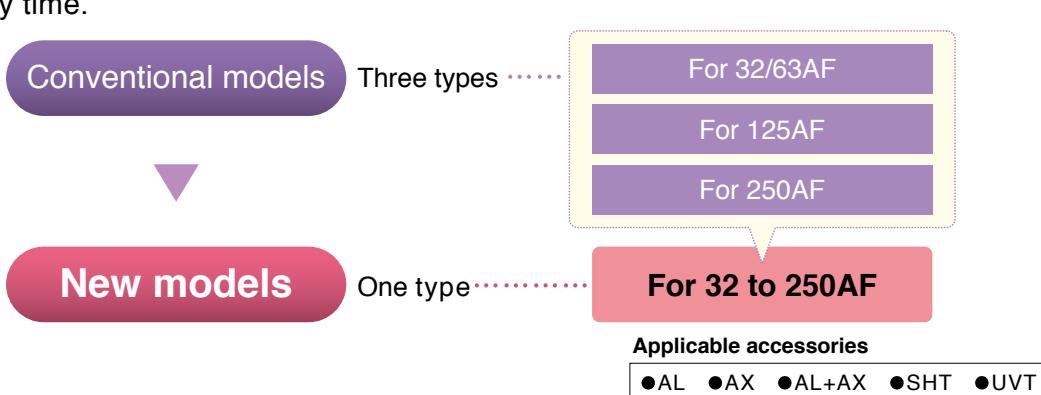

- 32AF and 63AF circuit breakers can now be used in both AC and DC circuits without specifying when ordering. This will lead to prevention of ordering mistakes.
- The earth leakage circuit breakers can now be equipped with a voltage shunt trip device (SHT).

High Quality

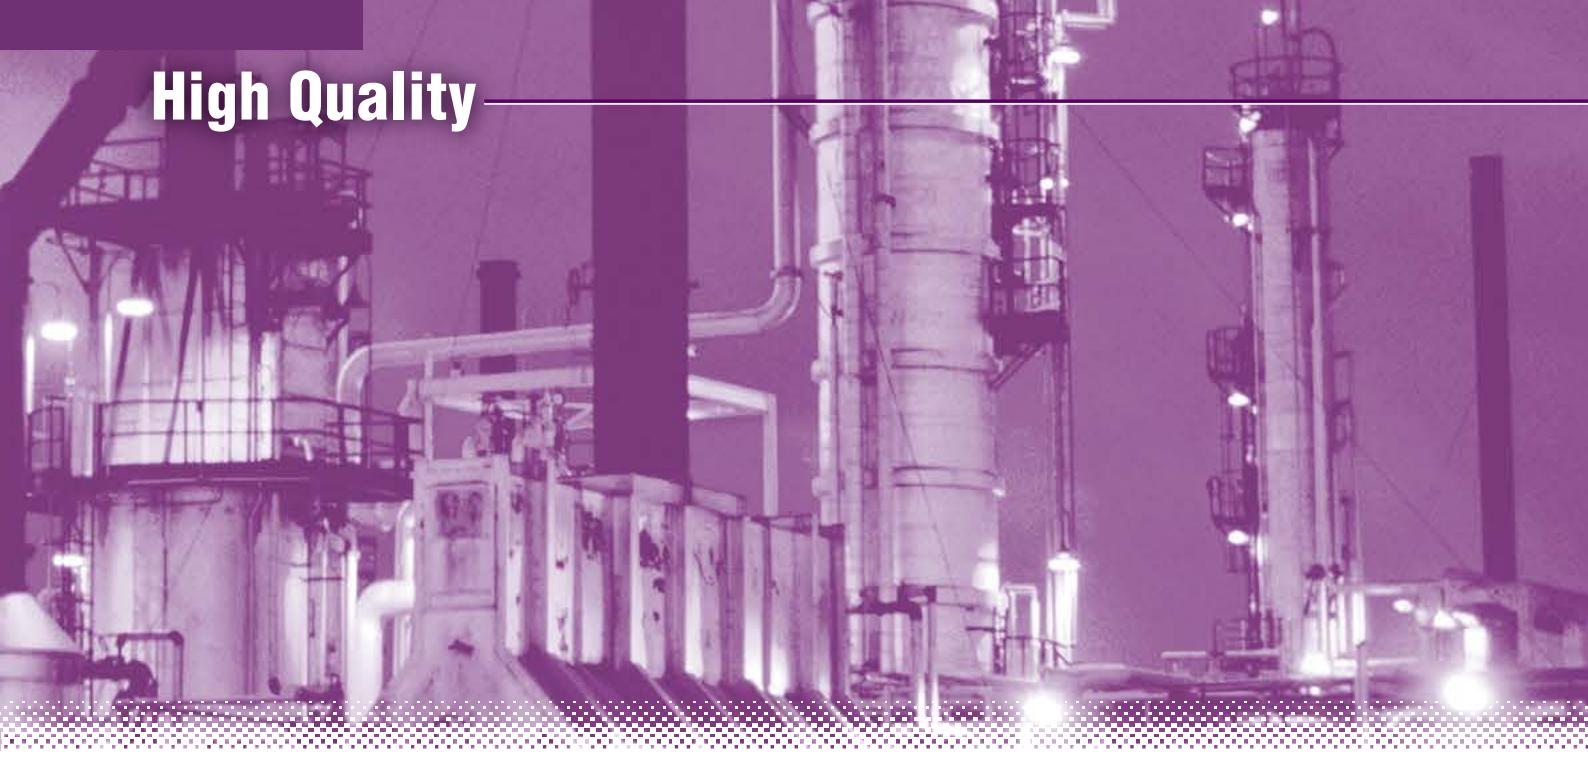

Innovative manufacturing using a robot-cell production line


- This manufacturing innovation takes the pursuit of increased productivity, shortened manufacturing lead-time and improved quality to the upper limits.



Robot-cell Production Line


Individual unit production management system

- A multi-model, single-unit flow production system is utilized the ultimate multi-cycle production method. The production line is controlled using barcodes to manage the model information for each unit. Small-lot, flexible production that's one step ahead!

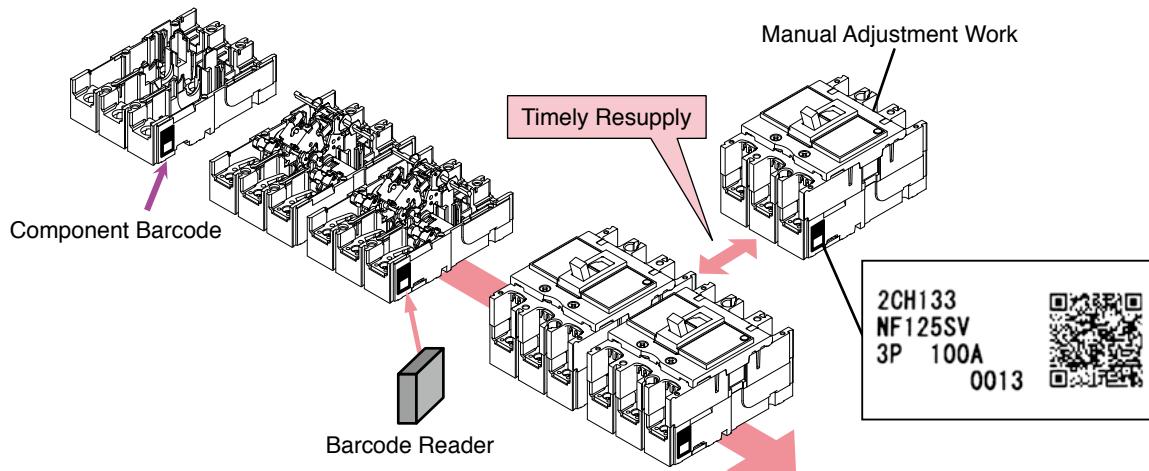

Use of Various Recyclable Materials

- The circuit breakers are made of thermo-plastic materials that are easy to recycle.
(Some models are partially made of thermoset materials.)
The major plastic parts bear material identifications so that they can be recycled.

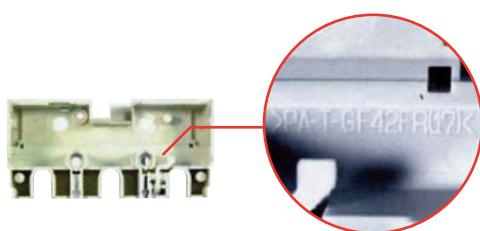

Nonuse of Hazardous Substances

- Eco-friendly design is used for all circuit breakers, and they do not use hazardous substances. The circuit breakers comply with RoHS regulation.

Energy Saving at Mitsubishi Electric Corporation Fukuyama Works


- Mitsubishi Electric Corporation Fukuyama Works uses energy saving support devices such as MDU breakers and EcoServer to save energy through “visualization” of energy. Along with “visualization”, Fukuyama Works also installed high-efficiency equipments to further promote energy saving.

Through energy saving activity, Fukuyama Works has successfully reduced its CO₂ emissions by 38.7%.
(compared with 2013, results for 2020)



Global Networks of Sales Offices and Production Bases

- Our sales networks are designed to comfort customers internationally through the worldwide distributors. Constantly contactable distributors enable us to accommodate customer's needs for smooth supply.

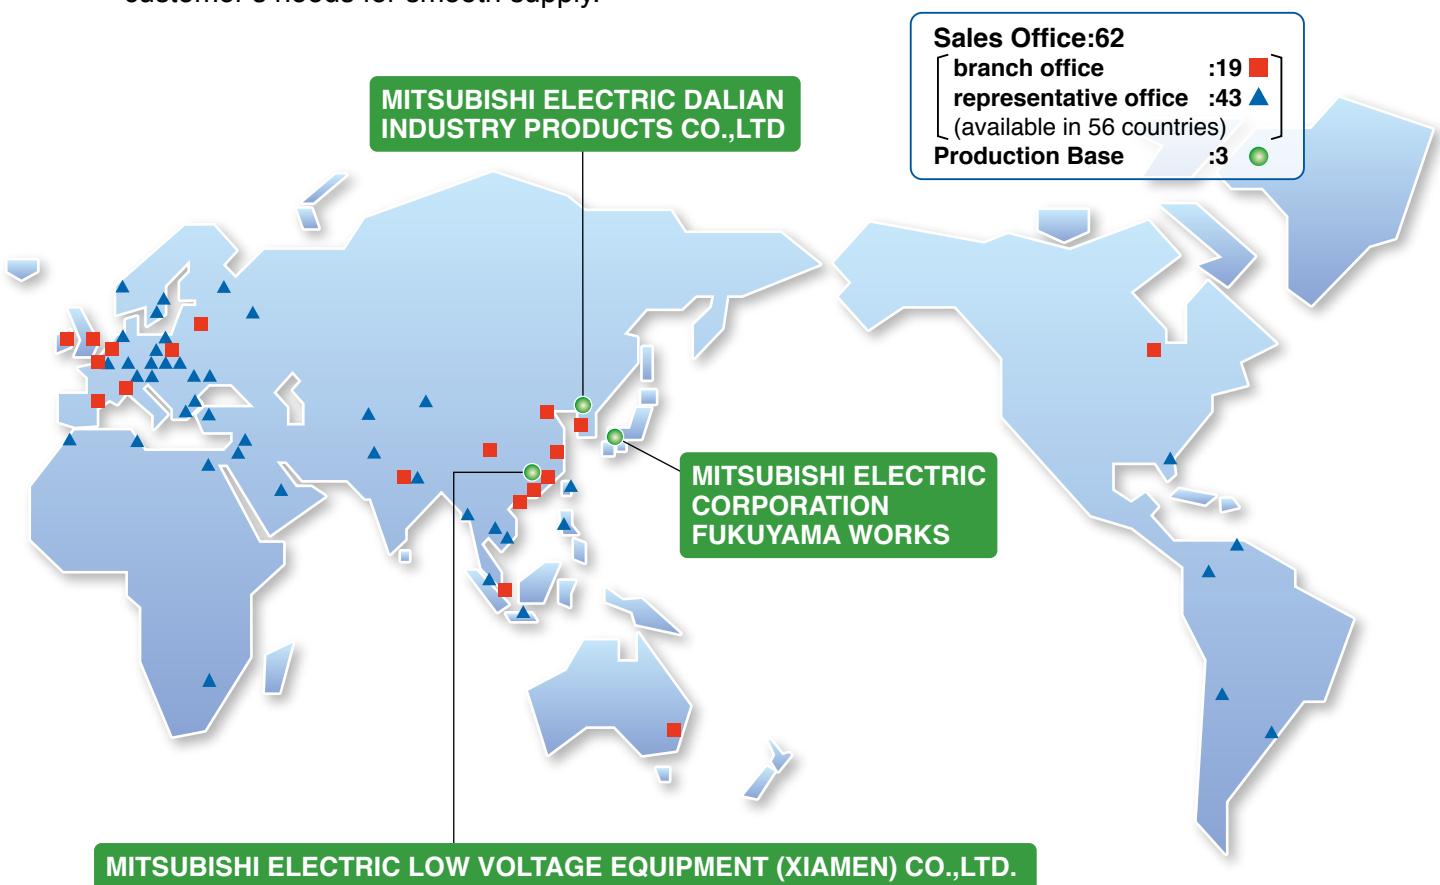

1 Outline of Circuit Breakers

Product Line-up

Classification		Frame (A)	30 32	50 60 63	100 125	160
Molded Case Circuit Breakers	NF-C Economy class			NF63-CV	NF125-CV	
	NF-S Standard class	NF32-SV		NF63-SV	NF125-SV NF125-SEV	NF160-SGV
	NF-H/L High-performance class			NF63-HV	NF125-HV NF125-LGV NF125-HEV NF125-HGV	NF160-LGV NF160-HGV
	NF-R/U Ultra current-limiting class				NF125-RGV NF125-UV	
Earth Leakage Circuit Breakers	NV-C Economy class			NV63-CV	NV125-CV	
	NV-S Standard class	NV32-SV		NV63-SV	NV125-SV NV125-SEV	
	NV-H/R High-performance class			NV63-HV	NV125-HV NV125-HEV	
Motor Protection Breakers	NF-MB	NF32-SV (*1)	NF63-CV (*1) NF63-SV (*1)		NF125-SV (*1)	
UL Certified Circuit Breakers	UL 489 Listed MCCB			NF50-SVFU NF50-SMU	NF100-CVFU NF100-SRU NF125-SVU NF100-HRU NF125-HVU	
	UL 489 Listed ELCB			NV50-SVFU	NV100-CVFU NV100-SRU NV125-SVU NV100-HRU NV125-HVU	
	UL 1077 Recognized Circuit Breakers for Control boards	NF30-FAU		NF50-FAU NF50-FHU	NF100-FHU	
		NV30-FAU		NV50-FAU NV50-FHU	NV100-FHU	
Measuring Display Unit Breakers	MDU Breakers					
DC high voltage	NF-HDV			NF63-HDV		
	NF-HDVA				NF125-HDVA	
	NF-HDW					
Miniature Circuit Breakers		BH-DN	BH-D6 BH-D10			
Residual Current Circuit Breaker			BV-D			
Residual Current Circuit Breaker with Overload Protection			BV-DN BV-DN6			
Isolating Switch			KB-D			
Circuit Protectors		CP30-BA				
Air Circuit Breakers	AE-SW					
Related Components	Earth Leakage Relays	NV-ZBA, NV-ZSA, NV-ZHA, NV-ZLA				

Note *1 When placing an order, specify "MB".

WS-V Series

Molded Case Circuit Breakers

NF-C	NF-S	NF-H	NF-L	NF-R	NF-U
					

Earth Leakage Circuit Breakers

Motor Protection Breakers

NV-C	NV-S	NV-H	NV-R	NF-MB
				

UL Certified Circuit Breakers

Measuring Display Unit Breakers

UL 489 Listed MCCB	UL 489 Listed ELCB	MDU Breakers
		

	250	400	600 630	800	1000	1250	1600	2000	2500	3200	4000	5000	6300
NF250-CV	NF400-CW	NF630-CW	NF800-CEW										
NF250-SV NF250-SEV	NF400-SW NF400-SEW	NF630-SW NF630-SEW	NF800-SDW NF800-SEW	NF1000-SEW	NF1250-SDW NF1250-SEW	NF1600-SDW NF1600-SEW							
NF250-HV NF250-HEV	NF250-LGV NF250-HGV	NF400-HEW	NF630-HEW	NF800-HEW									
NF250-RGV NF250-UV	NF400-REW NF400-UEW	NF630-REW	NF800-REW NF800-UEW										
NV250-CV	NV400-CW	NV630-CW											
NV250-SV NV250-SEV	NV400-SW NV400-SEW	NV630-SW NV630-SEW	NV800-SEW										
NV250-HV NV250-HEV	NV400-HEW	NV630-HEW	NV800-HEW										
NF250-SV (*1)													
NF250-CVU NF250-SVU NF250-HVU	NF400-SWU NF400-HWU	NF630-SWU NF630-HWU											
NV250-CVU NV250-SVU NV250-HVU													
NF250-SEV with MDU NF250-HEV with MDU	NF400-SEW with MDU NF400-HEW with MDU		NF800-SEW with MDU NF800-HEW with MDU										
NF250-HDVA	NF400-HDW	NF800-HDW											
				AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SW AE2000-SWA	AE2500-SW	AE3200-SW	AE4000-SWA AE4000-SW	AE5000-SW	AE6300-SW

Miniature Circuit Breakers		
BH-D6	BH-D10	BH-DN
		

Residual Current Circuit Breaker	Residual Current Circuit Breaker with Overload Protection	Isolating Switch
BV-D	BV-DN, BV-DN6	KB-D
		

Circuit Protectors	Air Circuit Breakers	Related Components
CP30-BA	AE-SW	Earth Leakage Relays
		

Instructions for Application

1. Warranty period and warranty coverage

If any faults or defects (hereinafter "Failure") found to be the responsibility of Mitsubishi Electric occurs during use of the product within the warranty period, the product shall be repaired at no cost via the sales representative or Mitsubishi Electric Sales office. However, if repairs are required on-site at domestic or overseas locations, expenses to send an engineer will be charged.

1. Warranty period

The warranty period of the product shall be for twelve (12) months after the date of purchase or delivery to the designated place.

2. Warranty coverage

- (1) The primary failure diagnosis should be performed by users. However, if required by users, Mitsubishi Electric or Mitsubishi Electric Sales office may be able to perform the diagnosis. In that case, for damages caused by any cause found to be the responsibility of Mitsubishi Electric, the diagnosis will be performed at no cost. For details, contact a distributor.
- (2) The coverage shall be limited to ordinary use within the usage state, usage methods, usage environment, and other conditions which follow the instructions and precautions given in the instruction manual, user's manual, and caution labels on the product.
- (3) Even within the warranty period, repair cost shall be charged for the following cases.
 - ① Failure occurring from inappropriate storage or handling, carelessness or negligence by the user. Failure caused by selection of hardware or software design on the user side.
 - ② Failure caused by modifications, etc. to the product by the user without any approvals from Mitsubishi Electric.
 - ③ In case Mitsubishi Electric product is assembled into a user's device, failure that could have been avoided if functions or structures, judged as necessary in the legal safety measures the user's device is subject to or as necessary by industry standards, had been provided.
 - ④ Failure that could have been avoided if the maintenance described in the user's manual has been performed.
 - ⑤ Failure caused by external irresistible forces such as fires or abnormal voltages, and failure caused by natural disasters such as earthquakes, lightning, wind and water damages.
 - ⑥ Failure caused by reasons unpredictable based on scientific technology standards at the time of shipment from Mitsubishi Electric.
 - ⑦ Any other failure found not to be the responsibility of Mitsubishi Electric or that admitted not to be so by the user.

In addition, the warranty applies only to the product delivered. It does not apply to the damage that is caused by the failure of the product.

3. The period to supply the spare parts after discontinuation of production

Mitsubishi Electric shall supply spare parts for five (5) years after discontinuation of production. After five years, Mitsubishi Electric shall supply spare parts until the spare parts run out of stock.

2.Exclusion of loss in opportunity and secondary loss from warranty liability

Regardless of the warranty period, Mitsubishi Electric shall not be liable for compensation to:

- (1) Damages caused by any cause found not to be the responsibility of Mitsubishi Electric.
- (2) Loss in opportunity, lost profits incurred to the user by failures of Mitsubishi Electric product.
- (3) Damages whether foreseeable or not, secondary damages, compensation for accidents, and compensation for damages to products other than Mitsubishi Electric products, caused by exceptional situations.
- (4) Compensation for cost occurring secondarily from replacement work by the user, maintenance of on-site equipment and start-up test run and other operations.
- (5) Regarding the usage which is out of the scope of handling that is described in the catalogue, we cannot guarantee the performance of our circuit breakers at all.

3.Product applications

- (1) When using the products listed in this catalogue, the following conditions must be confirmed and obeyed. The product must be used so that a failure that occurs to the product does not lead to a serious accident. When a damage or failure occurs, the external backup function or fail-safe function must be executed systematically.
- (2) The products listed in this catalogue are designed and manufactured as general-purpose products for application to the general industry field. Therefore, the warranty does not apply to the following special uses.

- ① The use that has a significant influence on the public facilities such as nuclear power plants and other power plants of power companies.
- ② The use for railway companies, government offices, etc. that require to build the special quality assurance system.
- ③ The use for aerospace equipment, medical equipment, railway equipment, combustion and fuel equipment, passenger vehicles, manned transportation equipment, recreational equipment, safety equipment, and air conditioner for servers and the cooling facilities that are expected to have a significant influence on life, body, and property.

If the products listed in this catalogue are used for the above mentioned special uses, Mitsubishi Electric does not take any responsibility for the quality, performance, and safety of the product, which includes, but is not limited to, default liability, defect liability, quality assurance liability, tort liability, and product liability. However, in case


the special quality (beyond general specifications) is not required and the use is a limited purpose and the backup/fail-safe functions are equipped with the facility, Mitsubishi Electric may determine that the products listed in this catalogue can be guaranteed. For details, consult a distributor or Mitsubishi Electric.

4. Safety precautions

- Carefully read the safety precautions prior to use the circuit breaker correctly.
- Important safety instructions are given below. Strictly observe the instructions.
- Be sure to communicate these safety precautions to the end user.

⚠ DANGER

- Do not touch the terminal area. Doing so can cause an electric shock.
- The earth leakage circuit breakers are designed to operate when the difference between leaving current and returning current exceeds the specified value. In the case shown in this figure, earth leakage is not detected. Therefore, never touch the two bare live parts. The circuit breaker will not operate upon occurrence of an electric shock.

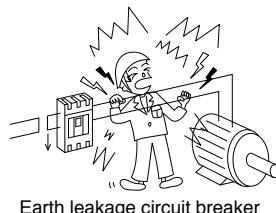

Earth leakage circuit breaker

Instructions for installation

⚠ CAUTION

- The electrical work shall be performed by qualified personnel (electrical workers).
 - Before performing wiring work, turn off the upstream circuit breaker, and ensure that no current is flowing through the circuit breaker to be wired. Failure to do so may expose you to shock hazard.
 - When connecting any wire, tighten the terminal screw to the torque specified in the instruction manual. Failure to do so may cause a fire.
 - When the model comes with insulating barriers as standard accessories, install the insulating barriers without fail.
 - Do not install the circuit breaker in an abnormal environment with high temperature, high moisture, dust, corrosive gas, vibration or shock. Doing so may cause a fire or make the circuit breaker inoperative.
 - Protect the circuit breaker so that foreign particles, such as dust, concrete powder and iron powder, and rain water will not enter the circuit breaker. Failure to do so may make the circuit breaker inoperative.
- [Earth leakage circuit breaker]
- When using an earth leakage circuit breaker for use only in single-phase 3-wire or 3-phase 4-wire systems, connect the neutral wire to the neutral phase without fail. If they are not connected, the circuit breaker may not operate in the case of open phase or overcurrent, thereby resulting in a fire.
 - Connect the circuit breaker to a power supply appropriate to the rating of its body. Failure to do so may make the circuit breaker inoperative or damage it.
 - Tighten securely the lead wire in the open phase to the neutral wire on the load side. If the wires are not connected, the open phase of the neutral wire cannot be detected.
 - When there are two terminal screws for the neutral pole, tighten the screws alternately. Failure to do so may loosen the screws, thereby causing a fire.

[Explanation of warning symbols]

⚠ DANGER	Incorrect handling of the product will result in a hazardous situation, such as death or serious injury.
⚠ CAUTION	Incorrect handling of the product may result in a hazardous situation according to circumstances.
	This means something is prohibited and should never be performed.
	Ignition or fire may occur under certain circumstances.

Instructions for use

⚠ CAUTION

- When the circuit breaker automatically breaks a circuit, turn on the handle after removing the cause. Failure to do so may cause an electric shock or a fire.
- [Earth leakage circuit breaker]
- Ground the earth terminal of electrical equipment. Failure to do so may cause an electric shock or a fire.
 - Press the test button to check the operation once a month or so. If the earth leakage circuit breaker is not turned off, it is out of order. Consult an electrician.

Instructions for maintenance

⚠ CAUTION

- The circuit breakers shall be maintained by persons with specialized knowledge.
- Before maintaining, turn off the upstream circuit breaker, and ensure that no current is flowing through the circuit breaker to be maintained. Failure to do so may expose you to shock hazard.
- Retighten the terminals periodically. Failure to do so may cause a fire.

Instructions for disposal

⚠ CAUTION

- When disposing of the product, treat it as industrial waste.

5. Change in product specifications

The specifications of the product listed in this catalogue, manuals or technical documents are subject to change without prior notice.

1 Outline of Circuit Breakers

Mitsubishi MCCB Manufacturing History

 :Production stopped model
This manufacturing history is based on Japanese domestic market.

Mitsubishi ELCB and ELR Manufacturing History

:Production stopped model
This manufacturing history is based on Japanese domestic market.

MEMO

1

2

Detailed Specifications

1 Molded Case Circuit Breakers	18
1) NF-C (Economy class)	18
2) NF-S (Standard class)	20
3) NF-L/NF-H/NF-R (High-performance class)	24
4) NF-U (Ultra current-limiting class)	27
2 Earth Leakage Circuit Breakers	28
1) NV-C (Economy class)	28
2) NV-S (Standard class)	30
3) NV-H/NV-R (High-performance class)	32
3 Motor Protection Breakers	34
1) NF-MB	34
4 UL Certified Circuit Breakers	35
1) UL 489 Listed Molded Case Circuit Breakers	35
2) UL 489 Listed Earth Leakage Circuit Breakers	38
3) UL 1077 Recognized Circuit Breakers for Control boards	40
5 Measuring Display Unit Breakers	41
1) MDU Breakers	41
6 DC High-Voltage Circuit Breakers	47
7 Miniature Circuit Breakers	49
1) BH	49
2) BV	50
8 Circuit Protectors	53
1) CP	53
9 Low Voltage Air Circuit Breakers	56
1) Low Voltage Air Circuit Breakers (AE-SW Series)	56
10 Earth Leakage Relays	58
1) Earth Leakage Relays	58

2 Detailed Specifications 1 **Molded Case Circuit Breakers**

NF-C (Economy class)

Frame (A)	50	60	63	100	125
Model	NF63-CV			NF125-CV	
Image					
Rated current In (A) Reference ambient temperature 40°C (45°C for marine use)	3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50	(60)	63	50 (60) 63 (75) 80 100	125
Number of poles	2 3	2 3	2 3	2 3	2 3
Rated insulation voltage Ui (V)	600	600	600	600	600
Rated short-circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (lcu/lcs)	690V	—	—	—	—
	500V	2.5/2.5	2.5/2.5	2.5/2.5	7.5/4
	440V	2.5/2.5	2.5/2.5	2.5/2.5	10/5
	415V	2.5/2.5	2.5/2.5	2.5/2.5	10/5
	400V	5/5	5/5	5/5	10/5
	380V	5/5	5/5	5/5	10/5
	230V	7.5/7.5	7.5/7.5	7.5/7.5	30/15
	200V	7.5/7.5	7.5/7.5	7.5/7.5	30/15
	DC 250V	2.5/2.5 (*5)	2.5/2.5 (*5)	2.5/2.5 (*5)	7.5/4 (*3)
Rated impulse withstand voltage Uimp (kV)	8	8	8	8	8
Current (*1)	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible
Suitability for isolation	Yes	Yes	Yes	Yes	Yes
Reverse connection	Available	Available	Available	Available	Available
Number of operating cycles	Without current 10,000 With current (440VAC) 6,000	10,000 6,000	10,000 6,000	10,000 6,000	10,000 6,000
Utilization category	A	A	A	A	A
Pollution degree	3	3	3	3	3
EMC environment condition (environment A or B)	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable
Overall dimensions (mm)	a	50	75	50	75
	b	130		130	130
	c	68		68	68
	ca	90		90	90
Mass of front-face type (kg)	0.45	0.65	0.5	0.7	0.6
Front connection (F)	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal
Solderless (BOX) terminal (SL)	—	—	—	●	●
Rear (B)	98	●Round stud	●Round stud	●Round stud	●Bar stud
Plug-in (PM)	●	●	●	●	●
Alarm switch (AL)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
Auxiliary switch (AX)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
Shunt trip (SHT)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
Undervoltage trip (UVT)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
With lead-wire terminal block (SLT)	120	●	●	●	●
Pre-alarm (PAL)	122	—	—	—	—
Cassette-type accessories	Closed (S)	●	●	●	●
	Dustproof (I)	●	●	●	●
	Waterproof (W)	—	●	—	—
	Electrical operation device (NFM)	140	—	—	—
	Mechanical interlock (MI) (*8)	136	●	●	●
External accessories	Breaker mounting	●	●	●	●
	Lock cover LC	●	●	●	●
	Handle lock device HL	●	●	●	●
External accessories	HL-S	●	●	●	●
	External operating handle (F)	123	●	●	●
	(V)	●	●	●	●
External accessories	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	●	●	●
	Rear stud (B-ST)	100	●	●	●
	Plug-in (PM)	100	●	●	●
External accessories	IEC 35mm rail mounting adapters	143	●	●	—
	CE marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration
	UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration
CCC	Certified	Certified	Certified	Certified	Certified
	Marine use approval (★:Certified) (NK, LR, ABS, DNV)	★	★	★	★
Automatic tripping device		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
Trip button		Equipped	Equipped	Equipped	Equipped
Page of Characteristics and dimensions					
146			148		

Notes: *1 The operating characteristics are different between AC and DC.

*2 For 100A of rated current, NK rating is not shown.

*3 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

*4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed when connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and maximum of 500VDC to 4-pole product.

*4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

*5 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any three terminals.


• For a pure product, current passes through two terminals except N-pole.

* Not available for use with connection as shown on the right.
*6 Place an order with circuit breaker.
*7 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is standard.

7 Solid state relay output is available as an option. Specify if the unit is equipped as standard.

*8 No isolation function except 400A to

8 No isolation function except 400A to 800A frame.

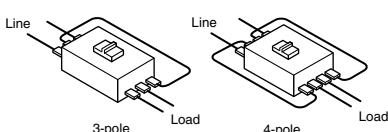

NF-C (Economy class)

225	250	400	600	630	800
NF250-CV		NF400-CW	NF630-CW		NF800-CEW
					
(100) 125 150 175 200 225 (*2)	250	250 300 350 400	500 600	(630)	Adjustable 400 450 500 600 700 800
2 3	2 3	2 3	2 3	2 3	3
600	600	690	690	690	690
—	—	—	—	—	—
10/8	10/8	15/8	18/9	18/9	18/9
15/12	15/12	25/13	36/18	36/18	36/18
25/19	25/19	36/18	36/18	36/18	36/18
25/19	25/19	36/18	36/18	36/18	36/18
25/19	25/19	40/20	40/20	40/20	40/20
36/27	36/27	50/25	50/25	50/25	50/25
36/27	36/27	50/25	50/25	50/25	50/25
15/12 (*3)	15/12 (*3)	20/10 (*3)	20/10 (*3)	20/10 (*3)	—
8	8	8	8	8	8
AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC
Yes	Yes	Yes	Yes	Yes	Yes
Available	Available	Available	Available	Available	Available
8,000	8,000	6,000	6,000	6,000	4,000
4,000	4,000	1,000	1,000	1,000	500
A	A	A	A	A	B
3	3	3	3	3	3
Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	A
105	105	140	140	140	210
165	165	257	257	257	275
68	68	103	103	103	103
92	92	134	155	155	155
1.3 1.5	1.3 1.5	4.4 5.0	5.2 6.0	5.2 6.0	10.9
●Screw terminal	●Screw terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal
●	●	—	—	—	—
●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud
●	●	●	●	●	●
●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)
●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)
●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)
●(*4)	●(*4)	●	●	●	●
●	●	●	●	●	●
—	—	—	—	—	●(*7)
●	●	—	—	—	—
●	●	●	●	●	●
—	●	●	●	●	●
—	—	●	●	●	●
—	—	●	●	●	●
—	—	●	●	●	●
—	—	●	●	●	●
—	—	●	●	●	●
—	—	●	●	●	●
TÜV approval	TÜV approval	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Certified	Certified	Certified	Certified	Certified	Certified
☆(*4)	☆	☆	☆	☆	☆
Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)
Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
152	160	166	166	170	

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

4. NF250-CV (100A) does not have any marine use approvals.

2 Detailed Specifications 1 **Molded Case Circuit Breakers**

NF-S (Standard class)

Frame (A)	30	32	50	60	63	
Model	NF32-SV					NF63-SV
Image						
Rated current In (A) Reference ambient temperature 40°C (45°C for marine use)	3 4 (5) 6 10 (15) 16 20 25 (30)	32	3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50	(60)	63	
Number of poles	2	3	2	3	4	2
Rated insulation voltage Ui (V)	600	600	600	600	600	600
Rated short-circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	690V	—	—	—	—	—
	500V	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5
	440V	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5
	415V	2.5/2.5	2.5/2.5	7.5/7.5	7.5/7.5	7.5/7.5
	400V	5/5	5/5	7.5/7.5	7.5/7.5	7.5/7.5
	380V	5/5	5/5	7.5/7.5	7.5/7.5	7.5/7.5
	230V	7.5/7.5	7.5/7.5	15/15	15/15	15/15
	200V	7.5/7.5	7.5/7.5	15/15	15/15	15/15
	DC	250V	2.5/2.5 (*5)	7.5/7.5 (*5)	7.5/7.5 (*5)	7.5/7.5 (*5)
Rated impulse withstand voltage Uimp (kV)	8	8	8	8	8	8
Current (*1)	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes
Reverse connection	Available	Available	Available	Available	Available	Available
Number of operating cycles	Without current 10,000	With current (440VAC) 6,000	10,000	15,000	15,000	15,000
Utilization category	A	A	A	A	A	A
Pollution degree	3	3	3	3	3	3
EMC environment condition (environment A or B)	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable
Overall dimensions (mm)	a	50	75	50	75	100
	b	130	130	130	130	130
	c	68	68	68	68	68
	ca	90	90	90	90	90
Mass of front-face type (kg)	0.45	0.65	0.45	0.65	0.5	0.7
Installation and connections	Front connection (F)	Page	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal
	Solderless (BOX) terminal (SL)		—	—	—	—
	Rear (B)	98	●Bar stud	●Round stud	●Round stud	●Round stud
	Plug-in (PM)		●	●	●	●
Cassette-type accessories	Alarm switch (AL)	115	● (*4)	● (*4)	● (*4)	● (*4)
	Auxiliary switch (AX)		● (*4)	● (*4)	● (*4)	● (*4)
	Shunt trip (SHT)		● (*4)	● (*4)	● (*4)	● (*4)
	Undervoltage trip (UVT)		● (*4)	● (*4)	● (*4)	● (*4)
	With lead-wire terminal block (SLT)	120	●	●	●	●
	Pre-alarm (PAL)	122	—	—	—	—
External accessories	Closed (S)	137	●	●	●	●
	Dustproof (I)		●	●	●	●
	Waterproof (W)		—	●	—	●
	Electrical operation device (NFM)	140	—	—	—	—
	Mechanical interlock (MI) (*)	136	●	●	●	●
	Breaker mounting		●	●	●	●
	Lock cover	LC	●	●	●	●
	Handle lock device	HL	●	●	●	●
	HL-S		●	●	●	●
	External operating handle (F)	123	●	●	●	●
	(V)		●	●	●	●
	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	●	●	●	●
	Rear stud (B-ST)	100	●	●	●	●
	Plug-in (PM)		●	●	●	●
	IEC 35mm rail mounting adapters	143	●	●	●	●
CE marking	Self-declaration		Self-declaration	Self-declaration	Self-declaration	Self-declaration
UKCA marking	Self-declaration		Self-declaration	Self-declaration	Self-declaration	Self-declaration
CCC	Certified		Certified	Certified	Certified	Certified
Marine use approval (★Certified) (NK, LR, ABS, DNV)	★	★	★	—	★	★
Automatic tripping device	Thermal-magnetic		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
Trip button	Equipped		Equipped	Equipped	Equipped	Equipped
Page of Characteristics and dimensions	146		146		146	

Notes: *1 The operating characteristics are different between AC and DC

*1 The operating characteristics are different between
*2 For 100A of rated current, NK rating is not shown.

When connected as shown on the right, maximum of 400VDC can be applied to 2-pole product and 240VDC to 3-pole product.


When connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and maximum of 500VDC to 4-pole product.
(For NF250-SV model, connected as shown on the right, maximum of 500VDC can be applied to 3-pole product and maximum of 600VDC to 4-pole product.)

*4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed except for those with UVT.

*5 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.
Not available for use with connection as shown on the right.

- * Not available for use with connection as shown on the right.
- *⁶ Place an order with circuit breaker.
- *⁷ No isolation function except 400A to 800A frame.

7 No isolation function except 400A to 800A frame.

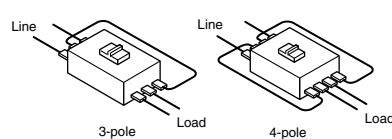


NF-S (Standard class)

100			125			125			125			160			225			250		
NF125-SV			NF125-SGV			NF125-SEV			NF160-SGV				NF250-SV							
																				
(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100	125			16-20 20-25 25-32 32-40 35-50 45-63 53-80 70-100 90-125			Adjustable 16-32 32-63 63-125 (1.6A step) (3.15A step) (6.25A step)			125-160			(100) 125 150 160 175 200 225 (*2)			250				
2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4			
690	690	690	690	690	690	690	690	690	690	690	690	690	690	690	690	690	690			
8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8	8/8			
18/18	18/18	18/18	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30	30/30			
25/25	25/25	25/25	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36			
30/30	30/30	30/30	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36			
30/30	30/30	30/30	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36	36/36			
50/50	50/50	50/50	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85			
50/50	50/50	50/50	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85			
40/40 (*3)	40/40 (*3)	40/40 (*3)	20/20 (300V) (*3)	—	—	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)	20/20 (300V) (*3)			
8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8	8			
AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible	AC/DC compatible			
Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes			
Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available	Available			
25,000	25,000	50,000	50,000	25,000	40,000	25,000	40,000	25,000	40,000	25,000	40,000	25,000	40,000	25,000	40,000	25,000	40,000			
10,000	10,000	30,000	30,000	10,000	15,000	10,000	15,000	10,000	15,000	10,000	15,000	10,000	15,000	10,000	15,000	10,000	15,000			
A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A	A			
3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3	3			
Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable			
60 90 120	60 90 120	60 90 120	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140	105 140			
130	130	130	165	165	165	165	165	165	165	165	165	165	165	165	165	165	165	165		
68	68	68	68	68	68	68	68	68	68	68	68	68	68	68	68	68	68			
90	90	90	92	92	92	92	92	92	92	92	92	92	92	92	92	92	92			
0.7 1.0 1.3	0.7 1.0 1.3	0.7 1.0 1.3	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0	1.4 1.6 2.0			
●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal			
●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud			
● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)			
● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)			
● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)			
● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●			
—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—			
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	TÜV approval	Self-declaration	TÜV approval	Self-declaration	TÜV approval	Self-declaration			
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration			
Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified			
☆ —	☆ —	☆ —	(LR, ABS, DNV) —	☆ —	(LR, ABS, DNV) —	☆ —	(LR, ABS, DNV) —	☆ —	(LR, ABS, DNV) —	☆ —	(LR, ABS, DNV) —	☆ —	☆ —	☆ —	☆ —	☆ —	☆ —			
Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic			
Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped			
148	156	156	158	158	158	158	158	158	158	158	158	158	152	152	152	152	152			

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
 2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
 3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2 Detailed Specifications 1 Molded Case Circuit Breakers

NF-S (Standard class)

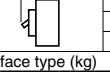Frame (A)		250	250	400	400	600	630	
Model		NF250-SGV	NF250-SEV	NF400-SW	NF400-SEW	NF630-SW		
Image								
Rated current In (A) Reference ambient temperature 40°C (45°C for marine use)		125-160 140-200 175-250	Adjustable 80-160 125-250 (8A step) (12.5A step)	250 300 350 400	Adjustable 200 225 250 300 350 400	500 600	(630)	
Number of poles		2 3 4	3 4	2 3 4	3 4	2 3 4	2 3 4	
Rated insulation voltage Ui (V)		690	690	690	690	690	690	
Rated short-circuit breaking capacities (kA)	IEC 60947-2 EN 60947-2 (Icu/lcs)	690V	8/8	8/8	10/10	10/10	10/10	
		500V	30/30	30/30	30/30	30/30	30/30	
		440V	36/36	36/36	42/42	42/42	42/42	
		400V	36/36	36/36	45/45	50/50	50/50	
		380V	36/36	36/36	50/50	50/50	50/50	
		230V	85/85	85/85	85/85	85/85	85/85	
		200V	85/85	85/85	85/85	85/85	85/85	
		DC 250V	20/20 (300V) (*2)	—	40/40 (*2)	40/40 (*2)	40/40 (*2)	
Rated impulse withstand voltage Uimp (kV)		8	8	8	8	8	8	
Current		AC/DC compatible	AC	AC/DC compatible	AC	AC/DC compatible	AC/DC compatible	
Suitability for isolation		Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection		Available	Available	Available	Available	Available	Available	
Number of operating cycles	Without current	25,000	25,000	6,000	6,000	6,000	6,000	
	With current (440VAC)	10,000	10,000	1,000	1,000	1,000	1,000	
Utilization category		A	A	A	B	A	A	
Rated short time with stand current Icw (kA) at 0.25s		—	—	—	5	—	—	
Pollution degree		3	3	3	3	3	3	
EMC environment condition (environment A or B)		Not Applicable	A	Not Applicable	A	Not Applicable	Not Applicable	
Overall dimensions (mm)			a 105 140	105 140	140 185	140 185	140 185	
	a		105	140	140	185	140 185	
	b		165	165	257	257	257	
	c		68	68	103	103	103	
	ca		92	92	155	155	155	
Mass of front-face type (kg)		1.4 1.6 2.0	1.7 2.2 4.6 5.2 6.8 6.0 7.6	5.4 6.2 8.0	5.4 6.2 8.0	5.4 6.2 8.0	5.4 6.2 8.0	
Installation and connections	Front connection (F)	Page	● Screw terminal	● Screw terminal	● Busbar terminal	● Busbar terminal	● Busbar terminal	
	Solderless (BOX) terminal (SL)	98	● Bar stud	● Bar stud	● Bar stud ● Bar stud	● Bar stud ● Bar stud	● Bar stud ● Bar stud	
	Rear (B)	98	● Bar stud	● Bar stud	● Bar stud ● Bar stud	● Bar stud ● Bar stud	● Bar stud ● Bar stud	
	Plug-in (PM)	115	●	●	●	●	●	
	Alarm switch (AL)	120	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	Auxiliary switch (AX)	120	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	Shunt trip (SHT)	120	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	Undervoltage trip (UVT)	120	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	With lead-wire terminal block (SLT)	122	●	●	●	●	●	
Cassette-type accessories	Pre-alarm (PAL)	122	—	●	—	● (*5)	—	—
	Closed (S)	137	●	—	●	—	—	—
	Dustproof (I)	137	●	—	●	—	●	—
	Waterproof (W)	137	●	—	●	—	●	—
	Electrical operation device (NFM)	140	●	●	● (*6)	● (*6)	● (*6)	● (*6)
	Mechanical interlock (MI) (*)	136	●	●	●	●	●	●
	Breaker mounting	136	●	●	—	●	—	●
	Lock cover (LC)	134	●	●	—	—	—	—
	Handle lock device (HL-S)	134	●	●	●	●	●	●
External accessories	External operating handle (F)	123	●	●	●	●	●	●
	(V)	123	●	●	●	●	●	●
	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	●	●	●	●	●	●
	Rear stud (B-ST)	100	●	●	●	●	●	●
	Plug-in (PM)	100	●	●	●	●	—	—
	IEC 35mm rail mounting adapters	143	—	—	—	—	—	—
CE marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
UKCA marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
CCC		Certified	Certified	Certified	Certified	Certified	Certified	
Marine use approval (☆:Certified) (NK, LR, ABS, DNV)		☆ (LR, ABS, DNV)	— (LR, ABS, DNV)	☆ —	☆ —	☆ —	☆ —	
Automatic tripping device		Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Thermal-magnetic	
Trip button		Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions		156	158	160	162	166		

Notes: *1 The operating characteristics are different between AC and DC.

- *1 The operating characteristics are different between AC and DC.
- *2 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

When connected cables/busbars as shown on the right, maximum of 400VDC can be applied to 3-pole product and

*3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed except for those with IGBT.


*4 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any three terminals.

For a pole product, connect cables/busbars to any two terminals, and for a T-pole product, connect cables/busbars to any two terminals except N-pole.

*5 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is equipped as standard. AS for flush plate type, an outline differs from a standard.

*6 Place an order with circuit breaker

- *⁶ Place an order with circuit breaker.
- *⁷ No isolation function except 400A to 800A frame.

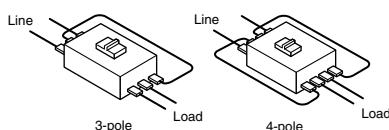

NF-S (Standard class)

630	800	800	1000	1250	1250	1600	1600
NF630-SEW	NF800-SEW	NF800-SDW	NF1000-SEW	NF1250-SEW	NF1250-SDW	NF1600-SEW	NF1600-SDW
							
Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800	(700) 800	Adjustable 500 600 700 800 900 1000	Adjustable 600 700 800 1000 1200 1250	1000 1250	Adjustable 800 1000 1200 1400 1500 1600	1600
3 4	3 4	2	3 4	3 4	2	3 4	2
690	690	690	690	690	690	690	690
10/10	10/10	—	25/13	25/13	—	25/13	—
30/30	30/30	—	65/33	65/33	—	65/33	—
42/42	42/42	—	85/43	85/43	—	85/43	—
50/50	50/50	—	85/43	85/43	—	85/43	—
50/50	50/50	—	85/43	85/43	—	85/43	—
50/50	50/50	—	85/43	85/43	—	85/43	—
85/85	85/85	—	125/63	125/63	—	125/63	—
85/85	85/85	—	125/63	125/63	—	125/63	—
—	—	40/40	—	—	40/20	—	40/20
8	8	8	8	8	8	8	8
AC	AC	DC	AC	AC	DC	AC	DC
Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Available	Available	Available	Available	Available	Available	Available	Available
6,000	4,000	4,000	3,000	3,000	3,000	3,000	3,000
1,000	500	500	500	500	500	500	500
B	B	A	B	B	A	B	A
7.6	9.6	—	20 at 0.1	20 at 0.1	—	20 at 0.1	—
3	3	3	3	3	3	3	3
A	A	Not Applicable	A	A	Not Applicable	A	Not Applicable
140	185	210	280	210	210	280	210
257	275	275	406	406	406	406	406
103	103	103	140	140	140	140	140
155	155	155	190	190	190	190	190
6.5	8.3	10.9	14.2	9.0	23.5	30.7	22.0
● Busbar terminal	● Busbar terminal	● Busbar terminal					
—	—	—	—	—	—	—	—
● Bar stud	● Bar stud	● Bar stud					
●	●	●	●	●	●	●	●
● (*3)	● (*3)	● (*3)	●	●	●	●	●
● (*3)	●	● (*3)	●	●	●	●	●
● (*3)	●	● (*3)	●	●	●	●	●
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
● (*5)	● (*5)	—	● (*5)	● (*5)	—	● (*5)	—
—	—	—	—	—	—	—	—
●	—	●	—	●	—	—	—
●	—	●	—	●	—	—	—
● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)
●	●	●	●	●	●	●	●
—	—	—	—	—	—	—	—
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
—	—	—	—	—	—	—	—
●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●
—	—	—	—	—	—	—	—
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified
☆	—	☆	—	☆	—	—	—
Electronic (effective value detection)	Electronic (effective value detection)	Thermal-magnetic	Electronic (effective value detection)	Electronic (effective value detection)	Thermal-magnetic	Electronic (effective value detection)	magnetic
Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
168	170	172	176	176	178	180	182

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2 Detailed Specifications 1 Molded Case Circuit Breakers

1 Detailed Specifications

2

NF-L / NF-H / NF-R (High-performance class)

Frame (A)	50	60	63	100	125	125	125	125	
Model	NF63-HV			NF125-HV			NF125-LGV	NF125-HGV	NF125-RGV
Image									
Rated current In (A) Reference ambient temperature 40°C (45°C for marine use)	10 (15) 16 20 25 30 32 40 50	(60)	63	(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100	125	16-20 20-25 25-32 32-40 35-50 45-63 53-80 70-100 90-125	16-20 20-25 25-32 32-40 35-50 45-63 53-80 70-100 90-125	16-20 20-25 25-32 32-40 40-50 50-63 63-80 80-100 100-125	
Number of poles	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3	
Rated insulation voltage Ui (V)	690	690	690	690	690	690	690	690	
IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	690V 500V 440V 415V 400V 380V 230V 200V	2.5/2.5 7.5/7.5 10/8 10/8 10/8 10/8 25/19 25/19	2.5/2.5 7.5/7.5 10/8 10/8 10/8 10/8 25/19 25/19	2.5/2.5 7.5/7.5 10/8 10/8 10/8 10/8 100/75 100/75	10/8 30/23 50/38 50/38 50/38 50/38 100/75 100/75	10/8 30/23 50/38 50/38 50/38 50/38 90/90 90/90	8/8 36/36 50/50 50/50 50/50 50/50 90/90 90/90	10/8 50/38 65/65 70/70 75/75 75/75 100/100 100/100
Rated short-circuit breaking capacities (kA)	DC 250V	7.5/7.5 (*5)	7.5/7.5 (*5)	7.5/7.5 (*5)	—	—	20/20 (300V) (*2)	40/40 (300V) (*2)	—
Rated impulse withstand voltage Uimp (kV)	8	8	8	8	8	8	8	8	
Current	AC/DC compatible (*1)	AC/DC compatible (*1)	AC/DC compatible (*1)	AC	AC	AC/DC compatible	AC/DC compatible	AC	
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection	Available	Available	Available	Available	Available	Available	Available	Available	
Number of operating cycles	Without current With current (440VAC)	15,000 8,000	15,000 8,000	15,000 8,000	25,000 10,000	25,000 10,000	50,000 30,000	50,000 30,000	
Utilization category	A	A	A	A	A	A	A	A	
Pollution degree	3	3	3	3	3	3	3	3	
EMC environment condition (environment A or B)	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	
Overall dimensions (mm)		a 50 75 100 b 130 c 68 ca 90	a 50 75 100 b 130 c 68 ca 90	a 50 75 100 b 130 c 68 ca 90	90 120 130 68 90	90 120 130 68 90	105 140 165 68 92	105 140 165 68 92	
Mass of front-face type (kg)	0.5 0.7 0.9 0.55 0.75 1.0 0.55 0.75 1.0	0.55 0.75 1.0 0.8 1.0 1.3 0.8 1.0 1.3	0.55 0.75 1.0 0.8 1.0 1.3 0.8 1.0 1.3	1.4 1.6 2.0 1.4 1.6 2.0	1.4 1.6 2.0 1.4 1.6 2.0	1.5 1.8			
Installation and connections	Front connection (F) Solderless (BOX) terminal (SL) Rear (B) Plug-in (PM)	Page 98	●Screw terminal ●Round stud ●●	●Screw terminal ●Round stud ●●	●Screw terminal ●Bar stud ●●	●Screw terminal ●Bar stud ●●	●Screw terminal ●Bar stud ●●	●Screw terminal ●Bar stud ●●	
Cassette-type accessories	Alarm switch (AL) Auxiliary switch (AX) Shunt trip (SHT) Undervoltage trip (UVT) With lead-wire terminal block (SLT) Pre-alarm (PAL)	115	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	● (*3) ● (*3) ● (*3) ● (*3) ● (*3)	
External accessories	Enclosure (S) Dustproof (I) Waterproof (W) Electrical operation device (NFM)	137	● ● — ●	— ● — ● — ●	— ● — ● — ●	— ● — ● — ●	— ● — ● — ●	— ● — ● — ●	
	Mechanical interlock (MI) (*4) Breaker mounting	136	● ●	● ● — ●	● ● — ●	● ● — ●	● ● — ●	● ● — ●	
	Lock cover LC Handle lock device HL-S	134	●	●	●	●	●	●	
	External operating handle (F) (V)	123	●	●	●	●	●	●	
	Terminal cover (TC-L, TCS, TTC, BTC, PTC)	128	● ● ● ●	● ● ● ●	● ● ● ●	● ● ● ●	● ● ● ●	● ● ● ●	
	Rear stud (B-ST) Plug-in (PM)	100	●	● ● ● ●	● ● ● ●	● ● ● ●	● ● ● ●	— —	
	IEC 35mm rail mounting adapters	143	●	— ●	— ●	— ●	— ●	— ●	
	CE marking UKCA marking CCC	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	Self-declaration Self-declaration Certified	
	Marine use approval (*:Certified) (NK, LR, ABS, DNV)	☆ —	☆ —	☆ —	☆ —	☆ —	☆ —	☆ —	
	Automatic tripping device Trip button	Thermal-magnetic Equipped	Thermal-magnetic Equipped	Thermal-magnetic Equipped	Thermal-magnetic Equipped	Thermal-magnetic Equipped	Thermal-magnetic Equipped	Thermal-magnetic Equipped	
	Page of Characteristics and dimensions	146			148	156	156	156	

Notes: *1 The operating characteristics are different between AC and DC.

*2 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

When connected cables/busbars as shown on the right, maximum of 500VDC can be applied to 3-pole product and maximum of 600VDC to 4-pole product.

*3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.


*4 No isolation function except 400A to 800A frame.

*5 For 3-pole product, connect cables/busbars to any two terminals, and for 4-pole product, connect cables/busbars to any two terminals except N-pole.

Not available for use with connection as shown on the right.

*6 For HEV with PAL, it will be an exclusive item.

When ordering only the terminal cover, specify the model name with MP at the end.

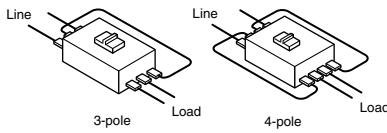

NF-L / NF-H / NF-R (High-performance class)

Remarks: 1. Products with rated current parenthesized are produced when an order is placed

2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2 Detailed Specifications 1 **Molded Case Circuit Breakers**

NF-H / NF-R (High-performance class)

Frame (A)		250	400	630		800			
Model		NF250-HEV	NF400-HEW	NF400-REW	NF630-HEW	NF630-REW	NF800-HEW	NF800-REW	
Image									
Rated current In (A)		Adjustable 80-160 (8A step) 125-250 (12.5A step)	Adjustable 200 225 250 300 350 400	Adjustable 200 225 250 300 350 400	Adjustable 300 350 400 500 600 630	Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800	Adjustable 400 450 500 600 700 800	
Reference ambient temperature 40°C (45°C for marine use)									
Number of poles		3 4	3 4	3	3 4	3	3 4	3	
Rated insulation voltage Ui (V)		690	690	690	690	690	690	690	
Rated short-circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	690V	10/8	35/18	-	35/18	-	15/15	-	
	500V	50/38	50/50	70/35	50/50	70/35	50/50	70/35	
	440V	65/65	65/65	125/63	65/65	125/63	65/65	125/63	
	415V	70/70	70/70	125/63	70/70	125/63	70/70	125/63	
	400V	75/75	70/70	125/63	70/70	125/63	70/70	125/63	
	380V	75/75	70/70	125/63	70/70	125/63	70/70	125/63	
	230V	100/100	100/100	150/75	100/100	150/75	100/100	150/75	
	200V	100/100	100/100	150/75	100/100	150/75	100/100	150/75	
	DC	250V	-	-	-	-	-	-	
Rated impulse withstand voltage Uimp (kV)		8	8	8	8	8	8	8	
Current		AC	AC	AC	AC	AC	AC	AC	
Suitability for isolation		Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection		Available	Available	Available	Available	Available	Available	Available	
Number of operating cycles	Without current	25,000	6,000	6,000	6,000	6,000	4,000	4,000	
	With current (440VAC)	10,000	1,000	1,000	1,000	1,000	500	500	
Utilization category		A	B	B	B	B	B	B	
Rated short time with stand current Icu (kA) at 0.25s		-	5	5	7.6	7.6	9.6	9.6	
Pollution degree		3	3	3	3	3	3	3	
EMC environment condition (environment A or B)		A	A	A	A	A	A	A	
Overall dimensions (mm)	a	105	140	140	185	140	210	280	
	b	165	-	257	257	257	275	275	
	c	68	103	103	103	103	103	103	
	ca	92	155	155	155	155	155	155	
Mass of front-face type (kg)	1.7	2.2	6.0	7.6	6.0	6.5	8.3	6.0	
								10.9	
							14.2		
Installation and connections	Front connection (F) Page	●Screw terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	
	Solderless (BOX) terminal (SL)	●	●	-	-	-	-	-	
	Rear (B) 98	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	
	Plug-in (PM)	●	●	●	●	●	●	●	
	Alarm switch (AL)	● (*1)	●	● (*1)	●	● (*1)	●	● (*1)	
	Auxiliary switch (AX)	● (*1)	●	● (*1)	●	● (*1)	●	● (*1)	
	Shunt trip (SHT)	● (*1)	●	● (*1)	●	● (*1)	●	● (*1)	
	Undervoltage trip (UVT)	● (*1)	●	●	●	●	●	●	
	With lead-wire terminal block (SLT)	●	●	●	●	●	●	●	
Cassette-type accessories	Pre-alarm (PAL)	122	●	● (*2)	● (*2)	● (*2)	● (*2)	● (*2)	
	Enclosure Closed (S)	137	-	-	-	-	-	-	
	Dustproof (I)		●	-	-	-	-	-	
	Waterproof (W)		●	-	-	-	-	-	
	Electrical operation device (NFM)	140	●	● (*3)	● (*3)	● (*3)	● (*3)	● (*3)	
	Mechanical interlock (MI) (*4)	136	●	●	●	●	●	●	
	Breaker mounting		●	-	●	●	●	●	
	Lock cover LC		●	-	-	-	-	-	
	Handle lock device HL	134	●	●	●	●	●	●	
External accessories	HL-S		●	●	●	●	●	●	
	External operating handle (F)	123	●	●	●	●	●	●	
	(V)		●	●	●	●	●	●	
	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	● (*5)	● (*5)	●	●	●	●	
	Rear stud (B-ST)	100	●	●	●	●	●	●	
	Plug-in (PM)		●	●	●	-	-	●	
	IEC 35mm rail mounting adapters	143	-	-	-	-	-	-	
	CE marking	Self-declaration		Self-declaration		Self-declaration		Self-declaration	
	UKCA marking	Self-declaration		Self-declaration		Self-declaration		Self-declaration	
CCC	Certified		Certified		Certified		Certified		
	Marine use approval (*:Certified) (NK, LR, ABS, DNV)		☆	-	☆	-	☆	-	
Automatic tripping device		Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)	
Trip button		Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions		158	162	162	168	168	170	170	

Notes: *1 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed except for those with LVT


*2 Solid state relay output is available as an option. Specify if this contact output is required. Lead-wire terminal block (SLT) is equipped as standard.

*3 Place an order with circuit breaker.

*4 No isolation function except 400A to 800A frame.

*5 For HEV with PAL, it will be an exclusive item.

When ordering only the terminal cover, specify

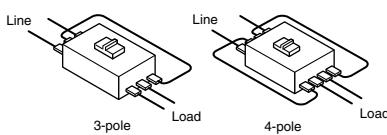

NF-U (Ultra current-limiting class)

125			250			400			800		
NF125-UV			NF250-UV			NF400-UEW			NF800-UEW		
											
15 20 30 40 50 60 75 100 125			125 150 175 200 225 250			Adjustable 200 225 250 300 350 400			Adjustable 400 450 500 600 700 800		
2	3	4	2	3	4	3	4	3	4		
690			690			690			690		
10/10			15/15			—			35/35		
200/200			200/200			170/170			170/170		
200/200			200/200			200/200			200/200		
200/200			200/200			200/200			200/200		
200/200			200/200			200/200			200/200		
200/200			200/200			200/200			200/200		
200/200			200/200			200/200			200/200		
200/200			200/200			200/200			200/200		
—			—			—			—		
8			8			8			8		
AC			AC			AC			AC		
Yes			Yes			Yes			Yes		
Available			Available			Available			Available		
25,000			25,000			6,000			4,000		
10,000			10,000			1,000			500		
A			A			B			B		
—			—			5			9.6		
3			3			3			3		
Not Applicable			Not Applicable			A			A		
90	120		105	140		140	280		210	280	
191			240			297	322			322	
68			68			200			200		
90			92			252			252		
1.35	1.5	1.9	2.5	2.7	3.7	16.2	25.4		27.6	33.7	
●Screw terminal			●Screw terminal			●Busbar terminal			●Busbar terminal		
●Bar stud			●Bar stud			—			—		
●Bar stud			●Bar stud			●Bar stud			●Bar stud		
●	—		●	—		●	—		●	—	
●(*1)	●		●(*1)	●		●(*1)			●(*1)		
●(*1)	●		●(*1)	●		●(*1)			●(*1)		
●(*1)	●		●(*1)	●		●(*1)			●(*1)		
●(*1)	●		●(*1)	●		●			●		
●			●			●			●		
—			—			●(*2)			●(*2)		
—			—			—			—		
—			—			—			—		
●			●			●(*3)			●(*3)		
●			●			●			●		
—			—			—			—		
—			—			—			—		
—			—			—			—		
Self-declaration			Self-declaration			Self-declaration			Self-declaration		
Self-declaration			Self-declaration			Self-declaration			Self-declaration		
—			—			—			—		
☆	—		☆	—		☆	—		—		
Thermal-magnetic			Thermal-magnetic			Electronic (effective value detection)			Electronic (effective value detection)		
Equipped			Equipped			Equipped			Equipped		
150			154			164			174		

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2 Detailed Specifications [2] Earth Leakage Circuit Breakers

2

2 Detailed Specifications

NV-C (Economy class) Harmonic Surge Ready

Frame (A)		50	60	63	100	125	
Model		NV63-CV				NV125-CV	
Image							
Rated current In (A) Reference ambient temperature 40°C		(5) (10) (15) 16 20 25 (30) 32 40 50	(60)		63	(60) 63 (75) 80 100	125
Number of poles		2	3	2	3	3	3
Phase line (*1)		1φ2W	3φ3W, 1φ3W, 1φ2W	1φ2W	3φ3W, 1φ3W, 1φ2W	1φ2W	3φ3W, 1φ3W, 1φ2W
Rated operational voltage Ue (V) (*2) AC		100-240	100-440	100-240	100-440	100-240	100-440
High-speed type Time-delay type	Rated current sensitivity (mA)	30	30,100/200/500 selectable	30	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable
	Max. operating time (s) at $I_{\Delta n}$	0.1		0.1		0.1	0.1
	at $5I_{\Delta n}$	0.04		0.04		0.04	0.04
	Rated current sensitivity (mA)	—	—	—	—	(100/200/500 selectable)	(100/200/500 selectable)
Max. operating time (s) (*3)		—	—	—	—	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)
Internal non-operating (s) (or more)		—	—	—	—	(0.1/0.5/1.0)	(0.1/0.5/1.0)
Earth leakage protection characteristic							
Earth leakage indication system		Type A		Type A		Type A	
Rated short-circuit breaking capacity (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	
	440V	—	2.5/2.5	—	2.5/2.5	—	2.5/2.5
	415V	—	2.5/2.5	—	2.5/2.5	—	2.5/2.5
	400V	—	5/5	—	5/5	—	5/5
	230V	7.5/7.5	7.5/7.5	7.5/7.5	7.5/7.5	30/15	30/15
	200V	7.5/7.5	7.5/7.5	7.5/7.5	7.5/7.5	30/15	30/15
	100V	7.5/7.5	7.5/7.5	7.5/7.5	7.5/7.5	30/15	30/15
Rated impulse withstand voltage Uimp (kV)		6	6	6	6	6	6
Current		AC	AC	AC	AC	AC	AC
Suitability for isolation		Yes	Yes	Yes	Yes	Yes	Yes
Reverse connection (below 230VAC)		Available	Available	Available	Available	Available	Available
Number of operating cycles	Without current	10,000	10,000	10,000	10,000	10,000	10,000
	With current	6,000	6,000	6,000	6,000	6,000	6,000
Utilization category		A	A	A	A	A	A
Pollution degree		2	2	2	2	2	2
EMC environment condition (environment A or B)		A	A	A	A	A	A
Overall dimensions (mm) Installation and connections	a	75	75	75	90	90	
	b	130	130	130	130	130	
	c	68	68	68	68	68	
	ca	90	90	90	90	90	
	Mass of front-face type (kg)	0.7	0.75	0.7	0.75	1.0	1.0
Cassette-type accessories	Front connection (F)	Page	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal
	Solderless (BOX) terminal (SL)	98	—	—	—	—	—
	Rear (B)	●Round stud	●Round stud	●Round stud	●Bar stud	●Bar stud	
	Plug-in (PM)	●	●	●	●	●	
	Alarm switch (AL)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
	Auxiliary switch (AX)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
	Shunt trip (SHT)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
	Undervoltage trip (UVT)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
	With lead-wire terminal block (SLT)	●	●	●	●	●	●
	Test button module (TBM)	121	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
External accessories	Closed (S)	137	—	—	—	—	—
	Dustproof (I)	—	—	—	—	—	—
	Waterproof (W)	—	—	—	—	—	—
	Electrical operation device (NFM)	140	—	—	—	●	●
	Mechanical interlock (MI) (*)	136	●	●	●	●	●
	Breaker mounting	—	●	●	●	●	●
	Lock cover LC	134	●	●	●	●	●
	Handle lock device HL	—	●	●	●	●	●
	HL-S	—	●	●	●	●	●
	External operating handle (F)	123	●	●	●	●	●
	(V)	—	●	●	●	●	●
Terminal cover (TC-L, TC-S, TTC, BTC, PTC)		128	●	●	●	●	●
Rear stud (B-ST)		100	●	●	●	●	●
Plug-in (PM)		—	—	—	—	—	—
IEC 35mm rail mounting adapters		143	●	●	●	—	—
CE marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
UKCA marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
CCC		Certified	Certified	Certified	Certified	Certified	
Marine use approval (*:Certified) (NK, LR, ABS, DNV)		—	—	—	—	—	
Automatic tripping device		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	
Trip button		Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions				184	186		

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.

*2 For time-delay type, the rated voltage is 200-440VAC.

*3 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.

- *4 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.
- *5 Standard type is SIT equipped.

*5 Standard type is SLT equipped.

*6 Place an order with circuit breaker.

*7 No isolation function except 400A to 630A frame.

*8 AC100V does not acquire the CCC certification.

NV-C (Economy class) Harmonic Surge Ready

	225	250	400	600	630	
	NV250-CV		NV400-CW	NV630-CW		
						
125 150 175 200 225	250		250 300 350 400	500 600	(630)	
3	3		3	3	3	
3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W		3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	
100-440	100-440		100-440	200-440	200-440	
30,100/200/500 selectable	30,100/200/500 selectable		(30),100/200/500 selectable	-	-	
0.1	0.1		0.1	-	-	
0.04	0.04		0.04	-	-	
(100/200/500 selectable)	(100/200/500 selectable)		(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	
(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)		(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	
(0.1/0.5/1.0)	(0.1/0.5/1.0)		(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	
Type A	Type AC		Type AC	Type AC		
Mechanical type (button)	Mechanical type (button)		Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	
15/12	15/12		25/13	36/18	36/18	
25/19	25/19		36/18	36/18	36/18	
25/19	25/19		36/18	36/18	36/18	
36/27	36/27		50/25	50/25	50/25	
36/27	36/27		50/25	50/25	50/25	
6	6		8	8	8	
AC	AC		AC	AC	AC	
Yes	Yes		Yes	Yes	Yes	
Available	Available		Available	Available	Available	
8,000	8,000		6,000	6,000	6,000	
4,000	4,000		1,000	1,000	1,000	
A	A		A	A	A	
2	2		3	3	3	
A	A		A	A	A	
105	105		140	140	140	
165	165		257	257	257	
68	68		103	103	103	
92	92		134	155	155	
1.7	1.7		6.1	6.9	6.9	
●Screw terminal	●Screw terminal		●Busbar terminal	●Busbar terminal	●Busbar terminal	
-	-		-	-	-	
●Bar stud	●Bar stud		●Bar stud	●Bar stud	●Bar stud	
●	●		●	●	-	
● (*4)	● (*4)		● (*4)	● (*4)	● (*4)	
● (*4)	● (*4)		● (*4)	● (*4)	● (*4)	
● (*4)	● (*4)		● (*4)	● (*4)	● (*4)	
● (*4)	● (*4)		●	●	●	
●	●		●	●	●	
● (*5)	● (*5)		● (*5)	● (*5)	● (*5)	
-	-		-	-	-	
-	-		-	-	-	
-	-		-	-	-	
●	●		● (*6)	● (*6)	● (*6)	
●	●		●	●	●	
●	●		●	●	●	
●	●		-	-	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
●	●		●	●	●	
TÜV approval	TÜV approval		Self-declaration	Self-declaration	Self-declaration	
Self-declaration	Self-declaration		Self-declaration	Self-declaration	Self-declaration	
Certified	Certified		Certified	Certified	Certified	
-	-		-	-	-	
Thermal-magnetic	Thermal-magnetic		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	
Equipped	Equipped		Equipped	Equipped	Equipped	
188	192				196	

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
 2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
 3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

4. Rated operational voltage	Applicable circuit voltage	Available voltage range
100-240V	100/110/200/220/230/240V	85-264V
100-440V	100/110/200/220/240/254/265/380/400/415/440V	85-484V
200-440V	200/220/240/254/265/380/400/415/440V	170-484V

2 Detailed Specifications [2] Earth Leakage Circuit Breakers

2 Detailed Specifications

NV-S (Standard class) Harmonic Surge Ready

Frame (A)	30	32	50	60	63	100	125	125
Model	NV32-SV		NV63-SV			NV125-SV		NV125-SEV
Image								
Rated current In (A) Reference ambient temperature 40°C	(5) 6 10 (15) 16 20 25 (30)	(32)	(5) (10) (15) 16 20 25 (30) 32 40 50	(60)	63	(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 (*3)	125	Adjustable 63-125 (6.25A step)
Number of poles	3	3	3	3	3	3 4	3	3 4
Phase line (*1)	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W
Rated operational voltage Ue (V) (*2) AC	100-440	100-440	100-440	100-440	100-440	100-440	200-440	100-440
High-speed type	Rated current sensitivity (mA)		30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	(30,100/200/500 selectable)
	at IΔn	0.1	0.1	0.1	0.1	0.1	0.1	0.1
Time-delay type	Max. operating time (s) at 5IΔn	0.04	0.04	0.04	0.04	0.04	0.04	0.04
	Rated current sensitivity (mA)	-	-	-	-	-	(100/200/500 selectable)	(100/200/500 selectable)
Internal non-operating (s) (or more)	Max. operating time (s) (*4)	-	-	-	-	-	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)
	Internal non-operating (s) (or more)	-	-	-	-	-	(0.1/0.5/1.0)	(0.1/0.5/1.0)
Earth leakage protection characteristic	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A
Earth leakage indication system	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
Rated short circuit breaking capacities (kA)	440V	5/5	5/5	7.5/7.5	7.5/7.5	25/25	25/25	36/36
	415V	5/5	5/5	7.5/7.5	7.5/7.5	30/30	30/30	36/36
	400V	5/5	5/5	7.5/7.5	7.5/7.5	30/30	30/30	36/36
	230V	10/10	10/10	15/15	15/15	50/50	50/50	85/85
	200V	10/10	10/10	15/15	15/15	50/50	50/50	85/85
	100V	10/10	10/10	15/15	15/15	50/50	50/50	85/85
Rated impulse withstand voltage Uimp (kV)	6	6	6	6	6	6	6	6
Current	AC	AC	AC	AC	AC	AC	AC	AC
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Reverse connection (below 230VAC)	Available	Available	Available	Available	Available	Available	Available	Available
Number of operating cycles	Without current	10,000	10,000	15,000	15,000	25,000	25,000	25,000
	With current	6,000	6,000	8,000	8,000	10,000	10,000	10,000
Utilization category	A	A	A	A	A	A	A	A
Rated short time withstand current Icu (kA) at 0.25s	-	-	-	-	-	-	-	-
Pollution degree	2	2	2	2	2	2	2	2
EMC environment condition (environment A or B)	A	A	A	A	A	A	A	A
Overall dimensions (mm)	a	75	75	75	75	90	120	90
	b	130	130	130	130	130	130	165
	c	68	68	68	68	68	68	68
	ca	90	90	90	90	90	90	92
Mass of front-face type (kg)	0.75	0.75	0.75	0.8	0.8	1.1	1.4	1.1
Installation and connections	Front connection (F)	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●
	Solderless (BOX) terminal (SL)	-	-	-	-	-	-	-
Rear (B)	98	●Round stud	●Round stud	●Round stud	●Round stud	●Bar stud	●Bar stud	●Bar stud
	Plug-in (PM)	●	●	●	●	●	●	●
Cassette-type accessories	Alarm switch (AL)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
	Auxiliary switch (AX)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
	Shunt trip (SHT)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
	Undervoltage trip (UVT)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
	With lead-wire terminal block (SLT)	●	●	●	●	●	●	●
	Test button module (TBM)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)
	Closed (S)	-	-	-	-	-	-	● -
	Dustproof (I)	137	-	-	-	-	●	-
	Waterproof (W)	-	-	-	-	-	●	-
	Electrical operation device (NFM)	140	-	-	-	-	●	●
External accessories	Mechanical interlock (MI) (*8)	Panel mounting	●	●	●	●	●	●
	Breaker mounting	●	●	●	●	●	●	●
	Lock cover	LC	●	●	●	●	●	●
	Handle lock device	HL	●	●	●	●	●	●
		HL-S	●	●	●	●	●	●
	External operating handle (F)	123	●	●	●	●	●	●
	(V)	123	●	●	●	●	●	●
	Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	128	●	●	●	●	●	●
	Rear stud (B-ST)	100	-	-	-	-	-	-
	Plug-in (PM)	-	-	-	-	-	-	-
IEC 35mm rail mounting adapters	IEC 35mm rail mounting adapters	143	●	●	●	●	●	●
	CE marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
	UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
	CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified
	Marine use approval (NK, LR, ABS, DNV)	-	-	-	-	-	-	-
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)
	Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Page of Characteristics and dimensions	184	184	184	186	186	186	190	

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.

*2 For time-delay type, the rated voltage is 200-440VAC.

*3 In case of time delay type, rated current is produced with 20 amp. or more.

*4 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.

*5 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

*6 Standard type is SLT equipped.

*7 Place an order with circuit breaker.

*8 No isolation function except 400A to 800A frame.

*9 100VAC does not acquire the CCC certification

NV-S (Standard class) Harmonic Surge Ready

225	250	250	400	400	600	630	630	800
NV250-SV	NV250-SEV	NV400-SW	NV400-SEW	NV630-SW	NV630-SEW	NV630-SEW	NV800-SEW	
								
125 150 175 200 225	250	Adjustable 125-250 (12.5A step)	250 300 350 400	Adjustable 200 225 250 300 350 400	500 600	(630)	Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800
3 4	3 4	3	3	3 4	3	3	3 4	3
3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ4W
100-440	200-440	100-440	200-440	100-440	100-440	200-440	200-440	200-440
(30),100/200/500 selectable	(30),100/200/500 selectable	(30),100/200/500 selectable	(30),100/200/500 selectable	(30),100/200/500 selectable	-	-	-	-
0.1	0.1	0.1	0.1	0.1	-	-	-	-
0.04	0.04	0.04	0.04	0.04	-	-	-	-
(100/200/500selectable) (0.45/1.0/2.0selectable)	(100/200/500selectable) (0.45/1.0/2.0selectable)	(100/200/500selectable) (0.45/1.0/2.0selectable)	(100/200/500selectable) (0.45/1.0/2.0selectable)	(100/200/500selectable) (0.45/1.0/2.0selectable)	0.45/1.0/2.0selectable	0.45/1.0/2.0selectable	(0.45/1.0/2.0selectable) (0.45/1.0/2.0selectable)	(0.45/1.0/2.0selectable) (0.45/1.0/2.0selectable)
(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	0.1/0.5/1.0	0.1/0.5/1.0	(0.1/0.5/1.0)
Type A	Type A	Type AC	Type AC	Type AC	Type AC	Type AC	Type AC	Type AC
Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)				
36/36	36/36	36/36	42/42	42/42	42/42	42/42	42/42	42/42
36/36	36/36	36/36	45/45	50/50	50/50	50/50	50/50	50/50
36/36	36/36	36/36	45/45	50/50	50/50	50/50	50/50	50/50
85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85
85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85	85/85
85/85	-	85/85	85/85	85/85	-	-	-	-
6	6	6	8	8	8	8	8	8
AC	AC	AC	AC	AC	AC	AC	AC	AC
Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Available	Available	Available	Available	Available	Available	Available	Available	Available
25,000	25,000	25,000	6,000	6,000	6,000	6,000	6,000	4,000
10,000	10,000	10,000	1,000	1,000	1,000	1,000	1,000	500
A	A	A	A	B	A	A	B	A
-	-	-	-	5	-	-	7.6	9.6
2	2	2	3	3	3	3	3	3
A	A	A	A	A	A	A	A	A
105	140	105	140	105	140	140	140	185
165	165	165	257	257	257	257	257	275
68	68	68	103	103	103	103	103	103
92	92	92	155	155	155	155	155	155
1.9	2.5	1.9	2.5	1.9	6.4	6.9	7.1	8.9
1.9	2.5	1.9	2.5	1.9	6.2	8.2	6.9	15.3
●Screw terminal	●Screw terminal	●	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal	●Busbar terminal
-	-	-	-	-	-	-	-	-
●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud				
●	●	●	●	●	●	●	●	●
● (*5)	●	● (*5)	●	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
● (*5)	●	● (*5)	●	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
● (*5)	●	● (*5)	●	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
● (*5)	●	● (*5)	●	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)
●	●	●	●	●	●	●	●	●
● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)
-	-	-	-	-	-	-	-	-
-	-	-	-	●	-	-	●	-
-	-	-	-	●	-	-	●	-
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
●	●	●	●	●	●	●	●	●
-	-	-	-	-	●	-	●	-
TÜV approval	TÜV approval	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified
-	-	-	-	-	-	-	-	-
Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	Electronic (effective value detection)
Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
188	190	192	194	196	198	200		

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.
2. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
3. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

- an order is placed.
 - Specify "P-LT" when selecting plug-in type with lead-wire terminal block.
 - The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

4.	Rated operational voltage	Applicable circuit voltage	Available voltage range
	100-440V	100/110/200/220/240/254/265/380/400/415/440V	85-484V
	200-440V	200/220/240/254/265/380/400/415/440V	170-484V

2 Detailed Specifications [2] Earth Leakage Circuit Breakers

2 Detailed Specifications

NV-H / NV-R (High-performance class) Harmonic Surge Ready

Frame (A)	50	60	63	100	125	125	225	250	250	
Model	NV63-HV			NV125-HV			NV125-HEV			
Image										
Rated current In (A) Reference ambient temperature 40°C	(15) 16 20 (30) 32 40 50	(60)	63	(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 (*3)	125	Adjustable 63-125 (6.25Astep)	125 150 175 200 225	250	Adjustable 125-250 (12.5A step)	
Number of poles	3	3	3	3 4	3 4	3 4	3 4	3 4	3	
Phase line (*1)	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ4W	
Rated operational voltage Ue (V) (*2)	AC 100-440	AC 100-440	AC 100-440	AC 100-440 200-440	AC 100-440 200-440	AC 100-440	AC 100-440 200-440	AC 100-440 200-440	AC 100-440	
Time-delay type High-speed type	Rated current sensitivity (mA)	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	30,100/200/500 selectable	
	Max. operating time (s) at 5I _{an}	0.1 0.04	0.1 0.04	0.1 0.04	0.1 0.04	0.1 0.04	0.1 0.04	0.1 0.04	0.1 0.04	
Rated current sensitivity (mA)	Max. operating time (s) (*4)	—	—	—	(100/200/500selectable)	(100/200/500selectable)	(100/200/500selectable)	(100/200/500selectable)	(100/200/500selectable)	
	Internal non-operating (s) (or more)	—	—	—	(0.45/1.0/2.0selectable)	(0.45/1.0/2.0selectable)	(0.45/1.0/2.0selectable)	(0.45/1.0/2.0selectable)	(0.45/1.0/2.0selectable)	
Earth leakage protection characteristic	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A	
Earth leakage indication system	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	
Rated short-circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (lcu/lcs)	440V AC	10/8	10/8	10/8	50/38	50/38	65/65	65/65	65/65	
	415V AC	10/8	10/8	10/8	50/38	50/38	70/70	70/70	70/70	
	400V AC	10/8	10/8	10/8	50/38	50/38	75/75	75/75	75/75	
	230V AC	25/19	25/19	25/19	100/75	100/75	100/100	100/100	100/100	
	200V AC	25/19	25/19	25/19	100/75	100/75	100/100	100/100	100/100	
	100V AC	25/19	25/19	25/19	100/75	—	100/100	100/100	100/100	
Rated impulse withstand voltage Uimp (kV)	6	6	6	6	6	6	6	6	6	
Current	AC	AC	AC	AC	AC	AC	AC	AC	AC	
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection (below 230VAC)	—	—	—	—	—	—	—	—	—	
Number of operating cycles	Without current	15,000	15,000	15,000	25,000	25,000	25,000	25,000	25,000	
	With current	8,000	8,000	8,000	10,000	10,000	10,000	10,000	10,000	
Utilization category	A	A	A	A	A	A	A	A	A	
Rated short time withstand current Icu (kA) at 0.25s	—	—	—	—	—	—	—	—	—	
Pollution degree	2	2	2	2	2	2	2	2	2	
EMC environment condition (environment A or B)	A	A	A	A	A	A	A	A	A	
Overall dimensions (mm)	a	75	75	75	90 120	90 120	105 140	105 140	105 140	
	ca	—	—	—	—	—	—	—	—	
	b	130	130	130	130	130	165	165	165	
	ca	68	68	68	68	68	68	68	68	
Mass of front-face type (kg)	0.75	0.8	0.8	1.1 1.4	1.1 1.4	1.9 2.5	1.8 2.5	1.8 2.5	1.9	
Installation and connections	Front connection (F)	Page	●Screw terminal	●Screw terminal	●Screw terminal	●Screw terminal	●	●Screw terminal	●Screw terminal	
	Solderless (BOX) terminal (SL)	—	—	—	—	—	—	—	—	
Rear (B)	98	●Round stud	●Round stud	●Round stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	●Bar stud	
	Plug-in (PM)	●	●	●	●	●	●	●	●	
Cassette-type accessories	Alarm switch (AL)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	
	Auxiliary switch (AX)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	
	Shunt trip (SHT)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	
	Undervoltage trip (UVT)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	
	With lead-wire terminal block (SLT)	120	●	●	●	●	●	●	●	
	Test button module (TBM)	121	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	● (*6)	
	Closed (S)	—	—	—	—	—	—	—	—	
External accessories	Dustproof (I)	137	—	—	—	●	—	—	●	
	Waterproof (W)	—	—	—	—	●	—	—	●	
Electrical operation device (NFM)	140	—	—	—	●	●	●	●	●	
Mechanical interlock (MI) (*)	136	●	●	●	●	●	●	●	●	
Lock cover LC	134	●	●	●	●	●	●	●	●	
Handle lock device HL	123	●	●	●	●	●	●	●	●	
External operating handle (V)	128	●	●	●	●	●	●	●	●	
Terminal cover (TC-L, TC-S, TTC, BTC, PTC)	100	●	—	—	—	—	—	—	—	
Rear stud (B-ST)	143	●	●	●	—	—	—	—	—	
Plug-in (PM)	—	—	—	—	—	—	—	—	—	
IEC 35mm rail mounting adapters	—	—	—	—	—	—	—	—	—	
CE marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	
Marine use approval (NK, LR, ABS, DNV)	—	—	—	—	—	—	—	—	—	
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	Thermal-magnetic	Thermal-magnetic	Electronic (effective value detection)	
Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	
Page of Characteristics and dimensions	184	186	190	192	194	196	198	200	202	

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole. When using 1-phase 3-wire system, connect neutral conductor to center pole of earth leakage circuit breaker.

*2 For time-delay type, the rated voltage is 200-440VAC.

*3 In case of time delay type, rated current is produced with 20 amp. or more.

*4 When the operating time are 0.45, 1.0 and 2.0 seconds, the Earth Leakage circuit breaker operates between 0.15 and 0.45 seconds, between 0.6 and 1.0 seconds and between 1.2 and 2.0 seconds respectively.

*5 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

*6 Standard type is SLT equipped.

*7 No isolation function.

*8 100VAC does not acquire the CCC certification.

*9 For HEV with PAL, it will be an exclusive item.
When ordering only the terminal cover, specify

When ordering only the terminal cover, specify the model name with MP at the end.

NV-H / NV-R (High-performance class) Harmonic Surge Ready

400	630	800
NV400-HEW	NV630-HEW	NV800-HEW
		
Adjustable 200 225 250 300 350 400	Adjustable 300 350 400 500 600 630	Adjustable 400 450 500 600 700 800
3	4	3
3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W
100-440	200-440	200-440
(30), 100/200/500 selectable	-	-
0.1	-	-
0.04	-	-
(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)
(0.45/1.0/2.0)	(0.45/1.0/2.0)	(0.45/1.0/2.0 selectable)
(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)
Type AC	Type AC	Type AC
Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
65/65	65/65	65/65
70/70	70/70	70/70
70/70	70/70	70/70
100/100	100/100	100/100
100/100	100/100	100/100
100/100	-	-
8	8	8
AC	AC	AC
Yes	Yes	Yes
-	-	-
6,000	6,000	4,000
1,000	1,000	500
B	B	B
5	7.6	9.6
3	3	3
A	A	A
140	185	140
257	257	275
103	103	103
155	155	155
6.6	8.2	7.1
● Busbar terminal	● Busbar terminal	● Busbar terminal
-	-	-
● Bar stud	● Bar stud	● Bar stud
●	●	●
● (*5)	● (*5)	● (*5)
● (*5)	● (*5)	● (*5)
● (*5)	● (*5)	● (*5)
●	●	●
●	●	●
● (*6)	● (*6)	● (*6)
-	-	-
●	●	●
●	●	●
● (*7)	● (*7)	● (*7)
●	●	●
●	●	●
●	●	●
●	●	●
●	●	●
-	-	-
-	-	-
Self-declaration	Self-declaration	Self-declaration
Self-declaration	Self-declaration	Self-declaration
Certified	Certified	Certified
-	-	-
Electronic (effective value detection)	Electronic (effective value detection)	Electronic (effective value detection)
Equipped	Equipped	Equipped

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. The setting is set to 500mA and delivered when not specifying the rated current sensitivity and the time of time-delay type of operation to 2.0 seconds.

3. Specify "FP-LT" when using a flush plate product with a lead-wire terminal block.

4. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

5. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells

	Rated operational voltage	Applicable circuit voltage	Available voltage range
6.	100-440V	100/110/200/220/240/254/265/380/400/415/440V	85-484V
	200-440V	200/220/240/254/265/380/400/415/440V	175-484V

2 Detailed Specifications 3 Motor Protection Breakers

NF-MB

Please specify MB

Notes: *1 The operating characteristics are different between AC and DC.
This accessory is cassette type and can be installed by customer.

The frame size up to 250A can be closely installed, except for those with UVT.

*2 No isolation function.

*3 Place an order with circuit breaker.

Remarks: 1. The motor circuit breakers do not have an applicable rated motor capacity. Select a motor circuit breaker based on the total load current of the motor.

2. Products with rating parenthesized are produced when an order is

2. Products placed.

3. Specify "P-LT" when selecting plug-in type with lead-wire terminal block.

4. The circuit

4. The circuit breaker has the rated short circuit breaking capacity specified in the shaded cells.

5. Please refer to "Table 4-17", of Page 79 for details.

UL 489 Listed Molded Case Circuit Breakers

Frame (A)		50			100			125			
Model		NF50-SMU	NF50-SVFU	NF100-CVFU	NF100-SRU	NF100-HRU	NF125-SVU	NF125-HVU			
Image											
Rated current In (A) Reference ambient temperature 40°C		0.5 1 (1.5) 2 3 4 5 (6) 7 (8) 10 13 15 20 (25) 30 (35) (40) 50 13 15 20 25 30 (35) 40 50	(0.5) (1) (1.5) (2) (3) 4 5 (6) (7) (8) 10 13 15 20 25 30 (35) 40 50	(3) 5 10 15 20 30 40 50	60 (70) 75 (80) (90) 100	(1) (2) 3 5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	(1) (2) 3 5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	15 20 30 40 50 60 (70) 75 (80) (90) 100	125	15 20 30 40 50 60 (70) 75 (80) (90) 100	125
Number of poles		1	2	3	2	3	2	3	2	3	
Rated short-circuit breaking capacities (kA) UL 489 CSA C22.2 No.5	Rated voltage	AC (V) DC (V)	240	240	240	240	480	480	480	600Y/347	600Y/347
	60	-	-	-	-	-	-	-	-	-	
	600Y/347V	-	-	-	-	-	-	-	18	18	
	480V	-	-	-	-	18(10) (*10)	30	30	50	50	
	240V	5 10	14	14	35(25) (*10)	50(25) (*10)	50	50	100	100	
	120V	10	-	-	-	-	-	-	-	-	
Rated insulation voltage UI (V) IEC 60947-2 EN 60947-2 (Icu/lcs)	DC	60V	10	-	-	-	-	-	-	-	
	690V	440	440	600	500	500	690	690	690	690	
	500V	-	-	-	-	-	8/4	8/4	10/5	10/5	
	440V	-	7.5/4	10/5	15/8	25/13(15/8) (*10)	18/9	18/9	25/13	25/13	
	415V	-	10/5	10/5	15/8	25/13(15/8) (*10)	30/15	30/15	50/25	50/25	
	400V	-	10/7.5	10/5	15/8	25/13(15/8) (*10)	30/15	30/15	50/25	50/25	
	380V	-	10/5	10/5	-	-	30/15	30/15	50/25	50/25	
	230V	10/7.5	10/7.5	15/8	15/8	35/18(25/13) (*10)	50/25(25/13) (*10)	50/25	100/50	100/50	
	250V	-	-	-	-	-	-	-	-	-	
	60V	10/7.5	-	-	-	-	-	-	-	-	
Rated impulse withstand voltage Uimp (kV)		6	6	8	8	8	8	8	8	8	
Current (*1)	ACDC compatible	AC	AC	AC	AC	AC	AC	AC	AC	AC	
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection	Available	-	Available	Available	Available	Available	Available	Available	Available	Available	
Utilization category	A	A	A	A	A	A	A	A	A	A	
Pollution degree	3	3	3	3	3	3	3	3	3	3	
EMC environment condition (environment A or B)	Not applicable	Not Applicable	Not Applicable	Not applicable	Not applicable	Not applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	
Overall dimensions (mm)	a	18 36 54	36 54	50 75	50 75	50 75	90	90	90	90	
	b	124	120	150	120	120	160	160	160	160	
	c	44 (*7)	68	68	74	68	68	68	68	68	
	ca	70 (*7)	90	90	102	90	90	90	90	90	
Mass of front-face type (kg)	0.15 0.3 0.45	0.3 0.45	0.55 0.8	0.5 0.75	0.55 0.8	1.0 1.1	1.0 1.1	1.0 1.1	1.0 1.1	1.0 1.1	
Installation and connectors (1)	Screw terminal (AMP-N)	Page	● (*8)	●	●	●	●	●	●	●	
	Solderless terminal (SL)		-	-	●	●	●	●	●	●	
	Bar (BAR)		-	-	● (*4)	●	●	●	●	●	
	Power supply solderless load bar (SL/BAR)		-	-	● (*4, 5)	● (*5)	● (*5)	● (*5)	● (*5)	● (*5)	
Cassette-type accessories (*2)	Alarm switch (AL)	● (*8)	● (*6)	● (*6)	●	●	● (*6)	● (*6)	● (*6)	● (*6)	
	Auxiliary switch (AX)	● (*8)	● (*6)	● (*6)	●	●	● (*6)	● (*6)	● (*6)	● (*6)	
	Shunt trip (SHT)	● (*8)	● (*6)	● (*6)	●	●	● (*6)	● (*6)	● (*6)	● (*6)	
	Undervoltage trip (UVT)	-	-	●	● (*6)	●	●	● (*6)	● (*6)	● (*6)	
External accessories (*2)	With lead-wire terminal block (SLT)	120	-	●	●	●	●	●	●	●	
	Mechanical interlock (MI)	136	-	-	-	-	-	-	-	-	
	Handle lock device (HL)	134	●	●	●	●	●	●	●	●	
	(HL-S)		-	●	●	●	●	●	●	●	
External operating handle (F)	(F)	123	-	●	●	●	●	●	●	●	
	(V)		-	●	●	●	●	●	●	●	
	(C)	127	-	-	● (*9)	-	-	● (*9)	● (*9)	● (*9)	
	Terminal cover	Large terminal cover (TC-L) Small terminal cover (TC-S)	128	-	●	●	●	●	●	●	
IEC 35mm rail mounting adapters	IEC 35mm rail mounting adapters	143	Standard accessory	Standard accessory	Standard accessory	Standard accessory	Standard accessory	Standard accessory	Standard accessory	Standard accessory	
	CE marking	Self-declaration	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	
	UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	
	CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified	
Page of Characteristics and dimensions		202	204	206	208	208	210	210	210	210	

Notes: *1 The trip action characteristics differ between AC and DC for products that are compatible with both AC and DC.

*2 These accessories differ from the general and CE/CCC products in specifications. Please consult us for details.

*3 The standard structure conforms to IP20 (finger protection).

*4 The circuit breakers with busbar terminals have insulation barriers.

*5 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a busbar terminal is not provided on the load side.

*6 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NF50-SVFU model.

*7 Dimensions indicated is as below.



*8 Refer to page 203.


*9 No isolation function.

*10 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

2. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

3. The 3-pole circuit breakers can be used on single-phase circuits.

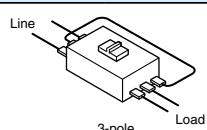

US UL Standard 489
UL File No.E167691 Body
UL File No.E108284 Accessories

Canada CSA Standard
C22.2 No.5

2 Detailed Specifications 4 UL Certified Circuit Breakers

4 Detailed Specifications

UL 489 Listed Molded Case Circuit Breakers

Frame (A)		250					
Model		NF250-CVU		NF250-SVU		NF250-HVU	
Image							
Rated current In (A)	Reference ambient temperature 40°C	125 200	150 225	175 225	250	125 200	150 225
Number of poles		3		3	3	3	3
UL 489 CSA C22.2 No.5	Rated voltage (kV)	AC (V) DC (V)	240 —	240 —	480 —	480 —	600Y/347 —
	600Y/347V	—	—	—	—	18	18
	480V	—	—	35	35	50	50
	240V	35	35	65	65	100	100
	120V	—	—	—	—	—	—
	DC	60V	—	—	—	—	—
	Rated insulation voltage UI (V)	600 690V 500V 440V 415V 400V 380V 230V 250V 60V	600 — 10/8 15/12 25/19 25/19 25/19 36/27 — —	600 — 10/8 15/12 25/19 25/19 25/19 65/33 — —	690 — 25/13 36/18 36/18 36/18 36/18 65/33 — —	690 — 25/13 36/18 50/25 50/25 50/25 100/50 — —	690 — 10/5 36/18 50/25 50/25 50/25 100/50 — —
IEC 60947-2 EN 60947-2 (icu/lcs)	Rated short-circuit breaking capacities (kA)	AC	240 — — — — — —	240 — — — — — —	480 — — — — — —	480 — — — — — —	600Y/347 — — — — — — —
	AC	600V 500V 440V 415V 400V 380V 230V 250V 60V	— 8/4 10/8 15/12 25/19 25/19 25/19 36/27 — —	— 8/4 10/8 15/12 25/19 25/19 25/19 65/33 — —	— 8/4 25/13 36/18 36/18 36/18 36/18 65/33 — —	— 10/5 36/18 50/25 50/25 50/25 100/50 — —	— 10/5 36/18 50/25 50/25 50/25 100/50 — —
	DC	— — — — — — —	— — — — — — —	— — — — — — —	— — — — — — —	— — — — — — —	— — — — — — —
	Rated impulse withstand voltage Uimp (kV)	8	8	8	8	8	8
	Current (*1)	AC	AC	AC	AC	AC	AC
	Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes
	Reverse connection	Available	Available	Available	Available	Available	Available
Utilization category							
Pollution degree							
EMC environment condition (environment A or B)							
Overall dimensions (mm)	a	105	105	105	105	105	105
	b	185	185	185	185	185	185
	c	68	68	68	68	68	68
	ca	92	92	92	92	92	92
Mass of front-face type (kg)							
Installation and connectors	Screw terminal (AMP-N) Page	●	●	●	●	●	●
	Solderless terminal (SL)	●	●	●	●	●	●
	Bar (BAR)	98	●	●	●	●	●
	Power supply solderless load bar (SUBAR)	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)
	Alarm switch (AL)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
	Auxiliary switch (AX)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
	Shunt trip (SHT)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
Cassette-type accessories (*2)	Undervoltage trip (UVT)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)
	With lead-wire terminal block (SLT)	●	●	●	●	●	●
	Mechanical interlock (MI)	136	—	—	—	—	—
	Handle lock device (HL)	134	●	●	●	●	●
	(HL-S)	134	●	●	●	●	●
	External operating handle (F)	123	●	●	●	●	●
	(V)	123	●	●	●	●	●
External accessories (*2)	(C)	127	● (*4)	● (*4)	● (*4)	● (*4)	● (*4)
	Large terminal cover (TC-L)	128	●	●	●	●	●
Terminal cover	Small terminal cover (TC-S)	● (*3)	● (*3)	— (*3)	— (*3)	— (*3)	— (*3)
	IEC 35mm rail mounting adapters	143	—	—	—	—	—
CE marking		TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval
UKCA marking		Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
CCC		Certified	Certified	Certified	Certified	Certified	Certified
Automatic tripping device		Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
Trip button		Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Page of Characteristics and dimensions		212		212		212	


Notes:
 *1 The operating characteristics are different between AC and DC.
 *2 These accessories differ from the general products in specifications.
 Please consult us for details.
 *3 The standard structure conforms to IP20 (finger protection).
 *4 No isolation function.
 *5 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT.
 *6 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a busbar terminal is not provided on the load side.

Remarks:
 1. Products with rated current parenthesized are produced when an order is placed.
 2. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.
 3. The 3-pole circuit breakers can be used on single-phase circuits.

US UL Standard 489
UL File No.E167691 Body
UL File No.E108284 Accessories

Canada CSA Standard
C22.2 No.5

UL 489 Listed Molded Case Circuit Breakers

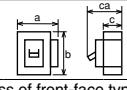Frame (A)		400				630				
Model	NF400-SWU	NF400-HWU		NF630-SWU	NF630-HWU					
Image										
Rated current in (A) Reference ambient temperature 40°C	250 300 350 400	250 300 350 400			500 600 630			500 600 630		
Number of poles	3	3		3	3			3		
Rated short-circuit breaking capacities (kA) UL 489 CSA C22.2 No.5	Rated voltage	AC (V)	600Y/347	600Y/347	600Y/347	600Y/347	600Y/347	600Y/347	600Y/347	
	AC	600Y/347V	20	25	20	25	25	25	25	
	480V	35	65	35	35	35	35	65	65	
	240V	65	100	85	85	85	85	100	100	
	120V	—	—	—	—	—	—	—	—	
	DC	60V	—	—	—	—	—	—	—	
	Rated insulation voltage Ui (V)	690	690	690	690	690	690	690	690	
	AC	690V	10/10(5/5)(*4)	15/10	10/10	10/10	10/10	15/10	15/10	
	400V	30/30(25/25)(*4)	42/42	30/30	42/42	42/42	42/42	65/65	65/65	
	440V	42/42(36/36)(*4)	65/65	42/42	65/65	65/65	65/65	70/70	70/70	
IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	415V	45/45(36/36)(*4)	70/70	45/45	45/45	45/45	70/70	70/70	
	400V	45/45(36/36)(*4)	70/70	45/45	45/45	45/45	45/45	70/70	70/70	
	380V	50/50(42/42)(*4)	70/70	50/50	50/50	50/50	50/50	70/70	70/70	
	230V	85/85(65/65)(*4)	100/100	85/85	85/85	85/85	85/85	100/100	100/100	
	DC	250V	—	—	—	—	—	—	—	
		60V	—	—	—	—	—	—	—	
Rated impulse withstand voltage Uimp (kV)	8	8	8	8	8	8	8	8	8	
Current	AC	AC	AC	AC	AC	AC	AC	AC	AC	
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	
Reverse connection	Available	Available	Available	Available	Available	Available	Available	Available	Available	
Utilization category	A	A	A	A	A	A	A	A	A	
Pollution degree	3	3	3	3	3	3	3	3	3	
EMC environment condition (environment A or B)	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	Not Applicable	
Overall dimensions (mm)			a	140	140	210	210	210	210	
			b	257	257	275	275	275	275	
			c	103	103	103	103	103	103	
			ca	155	155	155	155	155	155	
Mass of front-face type (kg)	5.7	5.7	9.6	9.6	9.6	9.6	9.6	9.6	9.6	
Installation and connectors	Screw terminal (AMP-N)	Page	—	—	—	—	—	—	—	
	Solderless terminal (SL)		●	—	●(*7)	—	—	—	—	
	Bar (BAR)	98	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	●(*5)	
	Power supply solderless load bar (SLBAR)		●(*5)	—	●(*5)	—	—	—	—	
	Alarm switch (AL)	115	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	
	Auxiliary switch (AX)		●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	
	Shunt trip (SHT)		●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	●(*3)	
	Undervoltage trip (UVT)		●	●	●	●	●	●	●	
	With lead-wire terminal block (SLT)	120	●	●	●	●	●	●	●	
	Mechanical interlock (MI)	136	●(*1)(*2)	●(*1)(*2)	●(*1)(*2)	●(*1)(*2)	●(*1)(*2)	●(*1)(*2)	●(*1)(*2)	
Cassette-type accessories	Handle lock device (HL)	134	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)	●(*6)	
	External operating handle	(F)	●	●	●	●	●	●	●	
		(V)	●	●	●	●	●	●	●	
		(C)	127	●(*1)	●(*1)	—	—	—	—	
	Terminal cover	Large terminal cover (TC-L)	●	●	●	●	●	●	●	
External accessories	Small terminal cover (TC-S)	128	—	—	—	—	—	—	—	
	IEC 35mm rail mounting adapters	143	—	—	—	—	—	—	—	
CE marking	TÜV approval		TÜV approval		TÜV approval		TÜV approval		TÜV approval	
UKCA marking	Self-declaration		Self-declaration		Self-declaration		Self-declaration		Self-declaration	
CCC	Certified		Certified		Certified		Certified		Certified	
Automatic tripping device	Thermal-magnetic		Thermal-magnetic		Thermal-magnetic		Thermal-magnetic		Thermal-magnetic	
Trip button	Equipped		Equipped		Equipped		Equipped		Equipped	
Page of Characteristics and dimensions	214		214		214		216		216	

Notes: *1 No isolation function.

*2 Not acquire the TUV certification.

*3 This accessory is cassette type and can be installed by customer. The frame size up to 250A can be closely installed, except for those with UVT.

*4 The values in parentheses apply to the circuit breakers with solderless terminals.

*5 The circuit breakers with busbar terminals have insulation barriers.

*6 Please consult us. (Models which are not UL or TUV certified but can be locked in the ON and OFF positions are available.)

*7 Not available for 630A.

Remarks: 1. The circuit breaker has the rated short-circuit breaking capacity specified in the shaded cells.

2. The 3-pole circuit breakers can be used on single-phase circuits.

US UL Standard 489
UL File No.E167691 Body
UL File No.E108284 Accessories

Canada CSA Standard
C22.2 No.5

2 Detailed Specifications 4 UL Certified Circuit Breakers

4 Detailed Specifications

Frame (A)		50	100				125			
Model	NV50-SVFU	NV100-CVFU	NV100-SRU	NV100-HRU	NV125-SVU	NV125-HVU				
Image										
Rated current In (A)	(5) (10) 15 20 Reference ambient temperature 40°C 30 40 50	60 (70) 75 (80) (90) 100	5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	5 10 15 20 (25) 30 40 50 60 (70) 75 (80) (90) 100	15 20 30 (40) 50 60 75 100	125	15 20 30 (40) 50 60 75 100	125		
Number of poles	2 3	3	2	3	3	3	3	3	3	3
Phase line (*1)	1φ2W 3φ3W, 1φ2W	3φ3W, 1φ2W	1φ2W 3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W
Rated operational voltage AC V	UL 489 IEC 60947-2 EN 60947-2	120-240	120-240	120-240	120-240-480	120-480	120-480	120-480	120-480	120-480
Rated short-circuit breaking capacities (kA)	UL 489 CSA C22.2 No.5	480V 240V 120V	14 14	30 50 100/200/500 selectable	30 50 30 50 100/300/500 selectable	30 50 100/300/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable
Pickup current, UL 1053	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n	75% of I _n
Max. operating time (s) at 5I _n (*4)	0.04	0.04	0.04	0.04	0.04	0.04	0.04	0.04	0.04	0.04
Earth leakage protection characteristic	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A	Type A
Earth leakage indication system	Display window	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
Overall dimensions (mm)		a 36 120 68 90	b 54 150 68 90	c 75 50 75 96	ca 14 35(25) (*10) 35(25) (*10)	18(10) (*10) 50(25) (*10) 50(25) (*10)	30 50 50 50	30 50 50 50	50 100 100 100	50 100 100 100
Mass of front-face type (kg)	0.4	0.5	0.9	0.55	0.85	0.95	1.2	1.2	1.2	1.2
Front (F)	Screw terminal (AMP-N) Solderless terminal (SL) Bar (BAR) Power supply solderless load bar (SLBAR)	Page 98	● — ● ●(*5)	● ● ● ●(*5, *6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)
Installation and connections	Alarm switch (AL) Auxiliary switch (AX) Shunt trip (SHT) Undervoltage trip (UVT) With lead-wire terminal block (SLT) Test button module (TBM)	— — — — — 121	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) ●(*9)	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) —	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) —	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) —	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) ●(*9)	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) ●(*9)	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) ●(*9)	●(*8) ●(*8) ●(*8) ●(*8) ●(*8) ●(*9)
Cassette-type accessories (*2)	Mechanical interlock (MI) Handle lock device (HL-S) External operating handle (F) (V) (C)	136 134 123 127	— ● ● ● —	— ● ● ● ●(*11)	— ● ● ● —	— ● ● ● —	— ● ● ● ●(*11)	— ● ● ● ●(*11)	— ● ● ● ●(*11)	— ● ● ● ●(*11)
External accessories (*2)	Large terminal cover (TC-L) Small terminal cover (TC-S)	128 143	— ●(*3)	— ●(*3)	— ●(*3)	— ●(*3)	— ●(*3)	— ●(*3)	— ●(*3)	— ●(*3)
IEC 35mm rail mounting adapters	CE marking UKCA marking CCC Automatic tripping device Trip button	204	TÜV approval Self-declaration Certified Thermal-magnetic Equipped	TÜV approval Self-declaration Certified Thermal-magnetic Equipped	TÜV approval Self-declaration Certified Hydraulic-magnetic Equipped	TÜV approval Self-declaration Certified Hydraulic-magnetic Equipped	TÜV approval Self-declaration Certified Thermal-magnetic Equipped	TÜV approval Self-declaration Certified Thermal-magnetic Equipped	TÜV approval Self-declaration Certified Thermal-magnetic Equipped	TÜV approval Self-declaration Certified Thermal-magnetic Equipped
Page of Characteristics and dimensions	204	206	208	208	208	208	210	210	210	210

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole.

*2 These are different from general models in specifications. Consult us for the details.

*3 The standard structure conforms to IP20 (finger protection).

*4 The maximum operating time is 0.1 according to UL 1053.

*5 The circuit breakers with busbar terminals have insulation barriers.

*6 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a bar terminal is not provided on the load side.

*7 Circuit breakers for 100VAC do not have obtained CCC certificate.

*8 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NV50-SVFU model.

*9 Standard type is SLT equipped.

*10 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.

*11 No isolation function.

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

Rated operational voltage	Applicable circuit voltage	Available voltage range
120-240V (UL)	120/240V	66-264V
120-240-480V (UL)	120/240/480V	66-528V
240V (UL)	240V	132-264V
100-230V (IEC)	100/110/200/220/230V	85-253V
100-240V (IEC)	100/110/200/220/230/240V	85-264V
100-230-400-440V (IEC)	100/110/200/220/230/240V	85-484V
100-440V (IEC)	380/400/415/440V	
230-400-440V (IEC)	230/240/254/265/380/400/415/440V	195-484V

US UL Standard 489


UL File No.E167691 Body

UL File No.E108284 Accessories

Canada CSA Standard

C22.2 No.5

UL 489 Listed Earth Leakage Circuit Breakers (Harmonic Surge Ready)

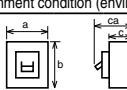Frame (A)		250					
Model		NV250-CVU			NV250-SVU		NV250-HVU
Image							
Rated current In (A) Reference ambient temperature 40°C	125 150 175 200 225	250	125 150 175 200 225	250	125 150 175 200 225	250	250
Number of poles	3	3	3	3	3	3	3
Phase line (*1)	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W	3φ3W, 1φ2W
Rated operational voltage AC V IEC 60947-2 EN 60947-2	UL 489 120-240 100-440	120-240 120-240 100-440	120-480 120-480 100-440	120-480 120-480 100-440	120-480 120-480 100-440	120-480 120-480 100-440	120-480 120-480 100-440
High-speed type	Rated current sensitivity $I_{\Delta n}$ mA Selectable	30 50 100/300/500 Selectable	30 50 100/300/500 Selectable	30 50 100/200/500 Selectable	30 50 100/200/500 Selectable	30 50 100/200/500 Selectable	30 50 100/200/500 Selectable
Pickup current, UL 1053	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$
Max. operating time (s) at 5 $I_{\Delta n}$ (*4)	0.04	0.04	0.04	0.04	0.04	0.04	0.04
Earth leakage protection characteristic	Type A	Type A	Type A	Type A	Type A	Type A	Type A
Earth leakage indication system	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
Rated short-circuit breaking capacities (kA)	UL 489 CSA C22.2 No.5	AC 480V 240V 120V	35 35 35	35 65 65	35 65 65	50 100 100	50 100 100
Rated impulse withstand voltage Uimp (kV)	6	6	6	6	6	6	6
Suitability for isolation	Yes	Yes	Yes	Yes	Yes	Yes	Yes
Reverse connection (below 240VAC)	Available	Available	Available	Available	Available	Available	Available
Utilization category	A	A	A	A	A	A	A
Pollution degree	2	2	2	2	2	2	2
EMC environment condition (environment A or B)	A	A	A	A	A	A	A
Overall dimensions (mm)		a b c ca	105 185 68 92	105 185 68 92	105 185 68 92	105 185 68 92	105 185 68 92
Mass of front-face type (kg)	1.2	1.2	1.8	1.8	1.8	1.8	1.8
Installation and connections (*2)	Screw terminal (AMP-N) Solderless terminal (SL) Bar (BAR) Power supply solderless load bar (SLBAR)	Page 98	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)	● ● ● ●(*6)
Cassette-type accessories (*2)	Alarm switch (AL) Auxiliary switch (AX) Shunt trip (SHT) Undervoltage trip (UVT) With lead-wire terminal block (SLT)	115	●(*8) ●(*8) ●(*8) ●(*8)	●(*8) ●(*8) ●(*8) ●(*8)	●(*8) ●(*8) ●(*8) ●(*8)	●(*8) ●(*8) ●(*8) ●(*8)	●(*8) ●(*8) ●(*8) ●(*8)
External accessories (*2)	Mechanical interlock (MI) Handle lock device (HL-S) External operating handle (F) (V) (C)	136 134 123 127	— ● ● ● ●(*11)	— ● ● ● ●(*11)	— ● ● ● ●(*11)	— ● ● ● ●(*11)	— ● ● ● ●(*11)
Terminal cover	Large terminal cover (TC-L) Small terminal cover (TC-S)	128 143	● ●(*3)	● ●(*3)	— —(*3)	— —(*3)	— —(*3)
IEC 35mm rail mounting adapters	Standard accessory	Standard accessory	Standard accessory	—	—	—	—
CE marking	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval
UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration
CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified
Automatic tripping device	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic	Thermal-magnetic
Trip button	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Page of Characteristics and dimensions	212	212	212	212	212	212	212

Notes: *1 When using 3-pole earth-leakage circuit breakers for 1-phase 2-wire system, connect cables/busbars to left and right poles, not to center pole.

*2 These are different from general models in specifications. Consult us for the details.

*3 The standard structure conforms to IP20 (finger protection).

*4 The maximum operating time is 0.1 according to UL 1053.

*5 The circuit breakers with busbar terminals have insulation barriers.

*6 Circuit breakers for power supply solderless load screw terminal (SL/AMP-N) are available. In this case, a bar terminal is not provided on the load side.

*7 Circuit breakers for 100VAC do not have obtained CCC certificate.

*8 This accessory is cassette type and can be installed by customer. The breakers can be closely installed, except for those with UVT and NV50-SVU model.

*9 Standard type is SLT equipped.

*10 Rated short-circuit breaking capacities parenthesized are applied to below rated current 15A.

*11 No isolation function.

Remarks: 1. Products with rated current parenthesized are produced when an order is placed.

Rated operational voltage	Applicable circuit voltage	Available voltage range
120-240V (UL)	120/240V	66-264V
120-240-480V (UL)	120/240/480V	66-528V
240V (UL)	240V	132-264V
100-230V (IEC)	100/110/200/220/230V	85-253V
100-240V (IEC)	100/110/200/220/230/240V	85-264V
100-230-400-440V (IEC)	100/110/200/220/230/240V	100/110/200/220/230/240V
100-440V (IEC)	230/240/254/265/ 380/400/415/440V	85-484V
230-400-440V (IEC)	230/240/254/265/ 380/400/415/440V	195-484V

US UL Standard 489
UL File No.E167691 Body
UL File No.E108284 Accessories

Canada CSA Standard
C22.2 No.5

2 Detailed Specifications 4 UL Certified Circuit Breakers

UL 1077 Recognized Circuit Breakers for Control boards

Frame (A)	30	50	100	30	50	100								
Model	NF30-FAU	NF50-FAU	NF50-FHU	NF100-FHU	NV30-FAU	NV50-FAU	NV50-FHU	NV100-FHU						
Image														
Phase line (*1)	-	-	-	-	1φ2W	3φ3W 1φ2W	1φ2W	3φ3W 1φ3W 1φ2W						
Number of poles	2	3	2	3	2	3	2	3						
Rated current In (A) Reference ambient temperature 40°C	35 10 15 20 30 40 50	5 10 15 20 30 40 50	60 75 100	5 10 15 20 30 40 50	5 10 15 20 30 40 50	5 10 15 20 30 40 50	60 75 100							
Motor protection rated current (*12)	2 4 6.3 8 16	0.3 0.4 0.6 0.8 1.2 1.4 2 2.5 4 7.1 8 12 16 25 32 45	-	5 10 15 20 30 40 50	5 10 15 20 30 40 50	5 10 15 20 30 40 50	-							
High-speed type	Rated current sensitivity $I_{\Delta n}$ (mA)	-	-	-	30	30	30 50 100	30 50 100						
Pickup current sensitivity UL1053	-	-	-	-	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$						
Max. operating time(s) at $5I_{\Delta n}$ (*9)	-	-	-	-	0.04	0.04	0.04	0.04						
Earth leakage protection characteristic	-	-	-	-	Type AC	Type AC	Type AC	Type AC						
Earth-leakage indication system	-	-	-	-	Mechanical type(button)	Mechanical type(button)	Mechanical type(button)	Mechanical type(button)						
UL 1077 CSA C22.2 No.235	Rated voltage AC(V)	240	240	240	240	240	240	240						
	DC(V)	60	60	-	-	-	-	-						
	AC 240V	2.5(*2)	2.5(*2)	5	5	2.5(*2)	2.5(*2)	5						
	DC 60V	1.5	1.5	-	-	-	-	-						
IEC 60947-2 EN 60947-2 (Icu/lcs)	Rated insulation voltage (V)	250	250	500	500	230	230	230						
	AC 400 V	-	-	1.5/1	-	-	-	-						
	AC 230 V	2.5/1(*3)	2.5/1(*3)	5/2	5/2	2.5/1(*3)	2.5/1(*3)	5/2						
	DC 60 V	1.5/1	1.5/1	-	-	-	-	-						
Rated impulse withstand voltage U_{imp} (kV)	2.5	2.5	4	4	2.5	2.5	4	4						
Current	AC/DC compatible	AC/DC compatible	AC	AC	AC	AC	AC	AC						
Suitability for isolation	-	-	-	-	-	-	-	-						
Reverse connection	-	-	-	-	-	-	-	-						
EMC environment condition (environment A or B)	Not applicable	Not applicable	Not applicable	Not applicable	A	A	A	A						
Utilization category	A	A	A	A	A	A	A	A						
Pollution degree	2	2	2	2	2	2	2	2						
Overall dimensions (mm)		a 40 60 40 60 50 75 75 73.5	b 72 72 96 60 76 73.5	c 57 57 60 57 76 76	97.5 60 57 57 73.5 76	40 60 72 72 73.5 76	40 60 96 60 73.5 76	50 75 96 60 73.5 76						
Mass of front-face type (kg)	0.14	0.2	0.16	0.22	0.25	0.37	0.51	0.16	0.22	0.18	0.24	0.3	0.43	0.57
Installation	Adapter for IEC 35mm rail	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped	Equipped
Mounting screws	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)	●(*4)
Front-plate attachment	●(*5)	●(*5)	-	-	●(*5)	●(*5)	●(*5)	-	-	-	-	-	-	-
Connection	Front type	●	●	●	●	●	●	●	●	●	●	●	●	●
	Page 98													
Internal accessories	Alarm switch (AL)	●	●	●(*7)	●(*8)	●	●	●	●	●	●	●	●	●
	Auxiliary switch (AX)	●	●	●(*7)	●(*8)	●	●	●	●	●	●	●	●	●
	Shunt trip (SHT)	●	●	●(*7)	●(*8)	●	●	●	●	●	●	●	●	●
	With lead-wire terminal block (SLT)	●	●	●	●	●	●	●	●	●	●	●	●	●
External accessories	Lock cover (LC)	●(*10)	●(*10)	●(*11)	●(*11)	●(*10)	●(*10)	●(*10)	●(*11)	●(*11)	●(*11)	●(*11)	●(*11)	●(*11)
	Handle lock device (HL)	●(*10)	●(*10)	●(*11)	●(*11)	●(*10)	●(*10)	●(*10)	●(*11)	●(*11)	●(*11)	●(*11)	●(*11)	●(*11)
	Terminal (TC-L)	-	-	●(*11)	●(*11)	-	-	-	●	●	●	●	●	●
	Small terminal cover (TC-S)	●	●	●	●	●	●	●	●	●	●	●	●	●
	Rear terminal cover (RTC)	●	●	-	-	●	●	●	●	●	-	-	-	-
	CE marking	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval	TÜV approval					
	UKCA marking	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration	Self-declaration					
	CCC	Certified	Certified	Certified	Certified	Certified	Certified	Certified	Certified					
	Automatic tripping device	Thermal	Thermal	Hydraulic-magnetic	Hydraulic-magnetic	Thermal	Thermal	Hydraulic-magnetic	Hydraulic-magnetic					
	Trip button	-(*6)	-(*6)	-(*6)	-(*6)	-	-	-	-					
	Page of Characteristics and dimensions	218	218	220	220	218	218	220	220					

Notes: *1 If using a 3-pole Earth-leakage circuit-breakers as a 1-pole 2-phase device, connect the left and right poles and not the central pole. If using as 1-pole 3-phase, connect the neutral wire to the central pole. (103W cannot be used with UL.)

*2 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.

*3 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.

*4 Mounting screws are not attached.

*5 Front-plate attachment is possible without nut bolting from back.(Mounting screws are not attached.) In this case a terminal screw can be bolted from the back of molded-case circuit breaker.

*6 When alarm switch (AL) is installed, this product has a trip-button. (When Shunt trip device (SHT) + alarm switch (AL) is installed, this product don't have a trip-button.)

*7 Lead wires are normally extended laterally.

Grooves are provided standard on the face of the breaker, allowing the extension of the lead wires along them.

*8 Lead wires are usually extended load side.

*9 In case of UL1053, operating time is 0.1s.

*10 It is recognition of UL (cURus) CSA. It is not recognition of CCC, TÜV, UKCA.

*11 Not acquire UL (cURus), CCC, TÜV, UKCA.

*12 Only sensitivity current 30mA or 50mA can be manufactured at Motor protection rated currents.

MDU Breakers

Frame (A)		250	400	800																												
Model		NF250-SEV with MDU NF250-HEV with MDU	NF400-SEW with MDU NF400-HEW with MDU	NF800-SEW with MDU NF800-HEW with MDU NF800-SEW with MDU NF800-HEW with MDU																												
Image																																
Rated current In (A) Reference ambient temperature 40°C		Adjustable 125-250 (12.5A step)	Adjustable 200 225 250 300 350 400	Adjustable 300 350 400 500 600 630																												
Number of poles		3 4 3 4	3 4 3 4	3 4 3 4																												
Phase line		3-pole type: 3φ3W 4-pole type: 3φ4W (3-pole type can be used as a 1φ2W unit.)																														
Rated insulation voltage Ui (V)		690	690	690																												
Rated short-circuit breaking capacities (kA)	JIS C 8201-2-1 Ann.1 JIS C 8201-2-1 Ann.2 IEC 60947-2 (lcu/lcs)	AC	690V 500V 440V 415V 400V	8/8 18/18 36/36 36/36 36/36																												
			500V 500V 440V 415V 400V	30/23 50/50 42/42 70/70 75/75																												
			380V 380V 230V 200V	50/50 70/70 50/50 85/85																												
			400V 36/36 380V 36/36	100/100 100/100 100/100 100/100																												
			230 V	85/85																												
	GB/T 14048.2 (lcu/lcs)	AC	415 V 400 V 380 V 230 V	70/70 75/75 75/75 100/100																												
			36/36 36/36	50/50 50/50																												
			36/36	70/70																												
			230 V	85/85																												
			85/85	100/100																												
Rated impulse withstand voltage Uimp (kV)		8	8	8																												
Current		AC	AC	AC																												
Suitability for isolation		Yes	Yes	Yes																												
Reverse connection		-	-	-																												
Number of operating cycles		25,000 (Without current With current(440VAC))	6,000 1,000	6,000 1,000																												
Utilization category		A	B	B																												
Rated short-time resistant current Icw kA (0.25s)		-	5	7.6																												
Pollution degree		3	3	3																												
EMC environment condition (environment A or B)		A	A	A																												
Overall dimensions (mm)	a	105	140	105	140	140	185	140	185	210	280	210	280	210	280																	
	b	165			257			275			103			155																		
	c	68			103			103			103			155																		
	ca	92			155			155			155			155																		
	Mass of front-face type (Breaker mounting) (kg)	1.8	2.3	1.8	2.3	6.2	8	6.2	8	10.7	13.8	10.7	13.8	11.1	14.4	11.1	14.4															
MDU mounting method (*)		External mounting, panel mounting, breaker mounting, breaker mounting unit separate installation																														
Cassette-type accessories (*4)	Front	(F)	Page	●	●	●	●	Busbar terminal																								
	Rear (*2)	(B)	98	Bar stud	Bar stud	Bar stud	Bar stud	Bar stud																								
	Alarm switch (AL)	115	●(*3)	●	●(*3)	●	●	●(*3)	●(*3)																							
	Auxiliary switch (AX)		●(*3)	●	●(*3)	●	●	●(*3)	●(*3)																							
	Shunt trip (SHT)		●(*3)	●	●(*3)	●	●	●(*3)	●(*3)																							
	Undervoltage trip (UVT)		●	●	●	●	●	●	●																							
	MDU transmission AL, AX, AL + AX		●(*3)	●	●(*3)	●	●	●(*3)	●(*3)																							
	With lead-wire terminal block (SLT)	120	●	●	●	●	●	●	●																							
	Alarm contact Pre-alarm (PAL) output (*5)	122	● PAL 1a		● PAL 1a		● PAL 1a, OAL 1a		● PAL 1a, OAL 1a																							
	Cause of fault (TI)	—	—																													
External accessories	Electrical operation device (6) (NFM)	140	● Can be installed only in the case of panel mounting.																													
	Mechanical interlock (MI) (*)	136	● Can be installed only in the case of panel mounting.																													
	Breaker mounting	134	● Can be installed only in the case of panel mounting.																													
	Handle lock device		LC	● Can be installed only in the case of panel mounting.																												
	HL		HL-S	● Can be installed only in the case of panel mounting.																												
	External operating handle		(F)	● Can be installed only in the case of panel mounting.																												
	(V)	123	(S) (*)	● Can be installed only in the case of panel mounting.																												
	(C) (*)		—	● Can be installed only in the case of panel mounting.																												
	TC-L		● (*9) (*10)	● (*10) ● (*9)	● (*9) ● (*10)	● (*10) ● (*9)	● (*10) ● (*9)	● Can be installed only in the case of panel mounting, breaker mounting and breaker mounting unit separate installation (except NF400-HEW with MDU)																								
	TC-S		● (*9) (*10)	● (*10) ● (*9)	● (*10) ● (*9)	● (*10) ● (*9)	● (*10) ● (*9)	—																								
	TTC		● (*9) (*10)	● (*11) ● (*10)	● (*9) ● (*10)	● (*9) ● (*10)	● (*11) ● (*10)	● (*10)																								
	BTC		● (*9) (*10)	● (*10) ● (*9)	● (*9) ● (*10)	● (*10) ● (*9)	● (*10) ● (*9)	● Can be installed only on the power supply side in the case of external mounting.																								
	Rear stud (B-ST)	100	●	●	●	●	●	—																								
CE marking		Self-declaration		Self-declaration		Self-declaration		Self-declaration																								
UKCA marking		Self-declaration		Self-declaration		Self-declaration		Self-declaration																								
CCC		Certified		Certified		Certified		Certified																								
Automatic tripping device		Electronic (effective value detection)		Electronic (effective value detection)		Electronic (effective value detection)		Electronic (effective value detection)																								
Trip button		Equipped		Equipped		Equipped		Equipped																								
Page of Characteristics and dimensions		222		224		226		226																								

Notes:

- *1 When the panel mounting is specified, the breaker comes with panel fittings and mounting screws, and the 2m long connecting cable (standard) is supplied. (The connecting cable length, 0.5m, 3m, 5m or 10m, can be specified.) When the breaker mounting separate unit is specified, the 2m long connecting cable (standard) is supplied. (The connecting cable length, 0.5m, 3m, 5m or 10m, can be specified.) Note that the cutout size in the breaker front plate varies depending on the MDU mounting method.
- *2 The 250A frame models come with the studs in the package. In the case of the 400 and 800A frame models, the studs are fitted before shipment. Specify the mounting direction.
- *3 These are cassette-type devices and can be installed by the user.
- *4 When the following devices are installed on the built-in display type, the built-in display unit must be separately mounted.
- 250A frame: Accessories with SLT or module on the right pole side
- 400/800A frame: Accessories on right pole side

- *5 The breaker with alarm contact output is provided with the module on the right side and requires a control power supply (common to 100 to 240VAC/DC, 50/60Hz, 5VA). The PAL output does not operate if the MDU is connected and the control power is not applied to the MDU.
- The output method of PAL of the alarm contact output can be set to "self-holding" or "automatic reset" from the MDU. The default setting is "automatic reset".
- *6 The breaker with alarm contact output (PAL), (TI) is not available.
- *7 It does not have an isolation function except for 400 to 800A frame models.
- *8 It can be manufactured only in the case of panel mounting.
- *9 For a 250A frame model with breaker mounting and PAL, the cover dedicated for the MDU is used. When placing an order only for the terminal cover, add MP to the end of the model name. (Example: TCL-2SV3MP)
- *10 In the case of external mounting, the cover dedicated for the MDU is used. When placing an order only for the terminal cover, add -MDUB to the end of the model name. (Example: TCL-2SV3-MDUB)
- *11 250A frame 4-pole models are not provided with TTC for external mounting.

Measuring Display Unit Breakers (Circuit Breakers with Measuring Display Unit)

● Three major features of Measuring Display Unit Breakers

1. Saving of space and labor for installation
2. Improved and diversified functions
3. Provision of total cost advantages


2 Measuring Display Unit Breakers with built-in VT and CT and Measuring Display Unit realize measurement, display and transmission of electric circuit information in small space with less installation and wiring work and provide total cost advantages.

The Measuring Display Unit Breakers full of functions in small bodies are suitable for monitoring and protection of electric circuits and maintenance of equipment. A wide variety of models applicable to various networks supports the customers' energy saving activities through detailed energy control as energy saving supporting devices.

● Simply realizing measurement and monitoring of electric circuits for supporting various types of energy saving control

The circuit breakers measure and display the load current, line voltage, electric power, electric energy, harmonic current, leak current and power factor to realize detailed energy control. They support customers' energy saving control.

◆ Installation type

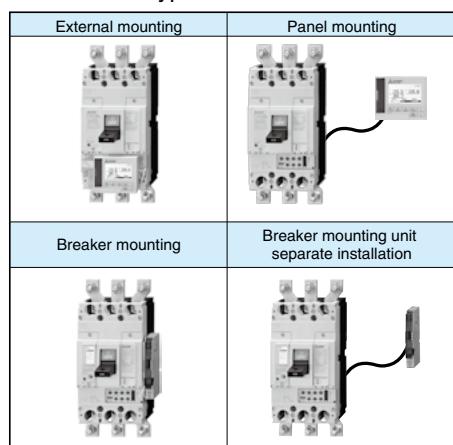

◆ Communication type

	External mounting	Panel mounting	Breaker mounting	Breaker mounting unit separate installation
CC-Link	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
Pulse Output	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>
MODBUS RTU	<input type="radio"/>	<input type="radio"/>	-	-
No Transmission	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>

◆ Measuring Display Unit cable list

Type name	Cable length
MDU-DP-CB-05M	0.5m
MDU-DP-CB-2M	2m
MDU-DP-CB-3M	3m
MDU-DP-CB-5M	5m
MDU-DP-CB-10M	10m

◆ Measuring Display Unit list

Model type	Type name	Remarks
CC-Link communication	MDU-BC ○○○	• The model names do not include ○○○.
MODBUS communication	MDU-BM ○○○	• In the case of external mounting, specify the A frame type in ○○○. For example, when the circuit breaker NF400-SEW with MDU and the Measuring Display Unit with CC-Link communication are combined, the model name is MDU-BC400. If 800A frame is used, specify 800 in ○○○.
Electric energy pulse output	MDU-BP ○○○	• In the case of panel mounting and breaker mounting unit separate installation, specify the cable length (0.5m, 2m, 3m, 5m or 10m) in ○○○. For example, when the Measuring Display Unit with CC-Link communication is installed on the panel with a 3m cable, the model name is MDU-BC-PANEL 3M.
No transmission	MDU-BN ○○○	

◆ Visibility and operability improvement


Improved visibility

When an alarm or fault occurs, the LCD backlight changes from white to red.




Improved operability

The multi-function display screen reduces the number of operations.

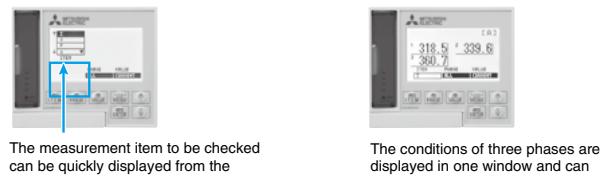

The display direction can be switched.

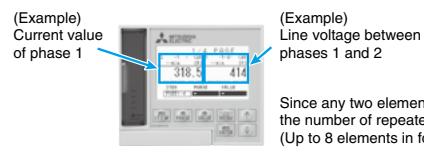

Since any two elements can be constantly set in one window, the number of repeated operations can be reduced.
(Up to 8 elements in four windows can be set.)

● Specifications for Measuring Display Units (MDU)

The measurement and display items vary depending on the model and A frame.

Measurement/stored item (accuracy) (*1)(*2)(*3)		Function	Display	Storage (*4)	With electric energy pulse output (*5)	With CC-Link communication	With MODBUS communication	Remarks
Load current (±1.0%)	Present value	Each phase	○	—	—	○	○	
		Total (average) (*7)	—	—	—	○	○	
		Max. phase	—	—	—	○	○	
	Present demand value (*6)	Each phase	○	—	—	○	○	
		Max. phase	○	—	—	○	○	
		Max. demand value of all phases	○	○	—	○	○	
		Time of occurrence of max. demand value of all phases	○	○	—	○	○	
	Line voltage (±1.0%)	Present value	Between each two lines	○	—	—	○	○
		Total (average) (*7)	○	—	—	○	○	
		Max. value between all lines	○	○	—	○	○	
Harmonic current (±2.5%)	Present value	Fundamental wave of each phase	○	—	—	○	○	
		Individual harmonic current of each phase	○	—	—	○	○	
		Total harmonic current of each phase (*8)	○	—	—	○	○	
		Max. fundamental wave value of all phases	○	○	—	○	○	
		Time of occurrence of max. fundamental wave value of all phases	○	○	—	—	—	
		Max. value of individual harmonic current of all phases	○	○	—	○	○	
		Time of occurrence of max. value of individual harmonic current of all phases	○	○	—	○	○	
	Demand value	Total harmonic current of each phase (*8)	○	—	—	○	○	
		Max. total demand value of all phases	○	○	—	○	○	
		Time of occurrence of max. total demand value of all phases	○	○	—	○	○	
Electric power (±1.5%)		Total distortion rate of each phase	○	—	—	—	—	
		Individual content of each phase	○	—	—	—	—	
	Present value	—	○	—	—	○	○	
	Demand value (*6)	Present value	○	—	—	○	○	
Reactive power (±2.5%)	Present value	—	○	—	—	○	○	
	Demand value (*6)	Present value	○	—	—	○	○	
		Max. value	○	○	—	○	○	
		Time of occurrence of max. value	○	○	—	○	○	
Electric energy (±2.0%) (*9)	Integrated value	—	○	○	○	○	○	Value accumulated to the present after the previous reset
	Amount for last one house	—	○	—	—	○	○	
	Max. value of amount for one hour	—	○	—	—	○	○	
	Time of occurrence of max. value of amount for one hour	—	○	—	—	○	○	
Reactive energy (±3.0%) (*9)	Integrated value	—	○	—	—	○	○	Value accumulated to the present after the previous reset
	Amount for last one house	—	○	—	—	○	○	
	Max. value of amount for one hour	—	○	—	—	○	○	
	Time of occurrence of max. value of amount for one hour	—	○	—	—	○	○	
Cause of fault (*10)	Fault current (accuracy: ±15%)	—	○	—	—	○	○	Information on and causes of faults after the previous reset or the latest fault (Continuous monitoring)
	Cause of fault	—	○	—	—	○	○	
Power factor (±5.0%)	Present value	—	○	—	—	○	○	
	Max. value	—	○	—	—	○	○	
	Time of occurrence of max. value	—	○	—	—	—	—	
	Present value	—	○	—	—	○	○	
Phase sequence	—	—	○	—	—	○	○	Except 250A frame
	Tripping status of breaker (AL)	—	—	—	—	○	○	When the alarm switch for MDU transmission (option) is installed
Status of breaker	ON/OFF status of breaker (AX)	—	—	—	—	○	○	When the auxiliary switch for MDU transmission (option) is installed
	Number of times of tripping of breaker	—	○	—	—	○	○	When the alarm switch for MDU transmission (option) is installed
	Number of times of opening/closing of breaker	—	○	—	—	○	○	When the auxiliary switch for MDU transmission (option) is installed
	PAL, OVER, IDM_AL, ILA_AL, IUB_AL	—	○	—	—	—	○	The LC display, transmission and contact output of the PAL function of 250A frame model are activated when the PAL module (option)
Breaker alarms (*11)	Neutral wire open phase alarm (NLA)	—	○	—	—	—	—	The neutral wire open phase alarm is displayed only. When the phase wire system is set to 1-phase 3-wire system, the function is turned on. Rated operating overvoltage: 135VAC Operating time: 1s
	Time setting	—	○	—	—	○	○	It is necessary to re-set at the initial setting and after power failure (no power failure compensation).
Initial setting	Demand time limit setting (*6)	—	○	—	—	○	○	The default setting is 2min. The time limit can be set in one-minute increments in the range from 0 to 15min.
	IDM_AL (current demand alarm)	—	○	—	—	○	○	The default setting of the function is OFF. Function: ON/OFF Pickup current: 50 to 100% (in 1% steps) Demand time limit: Can be set to 1 to 10min (1min steps), 15, 20, 25 or 30min.
	ILA_AL (current open phase alarm)	—	○	—	—	○	○	The default setting of the function is OFF. Function: Can be set to ON or OFF. Pickup current: Fixed to 10% (no setting) Operating time: 30s (no setting)
	IUB_AL (current unbalance alarm)	—	○	—	—	○	○	The default setting of the function is OFF. Function: Can be set to ON or OFF. Pickup current: Fixed to 30% (no setting) Operating time: 30s (no setting)
	Phase switching setting	—	○	—	—	○	○	The default setting is "no phase switching."
	Alarm retention (self-holding/automatic reset) setting	—	○	—	—	○	○	The default setting is "automatic reset."
	Phase wire system	—	○	—	—	○	○	The default setting is "3-phase 3-wire" for 3-pole breakers or "3-phase 4-wire" for 4-pole breakers.
	Electric energy arbitrary setting	—	○	—	—	○	○	
	Reactive energy arbitrary setting	—	○	—	—	○	○	
	Display direction	—	○	—	—	—	—	The default setting is "horizontal" for mounting on breaker and mounting on panel or "horizontal" for built-in display and separate mounting of built-in display unit.

Notes:

- *1 The term "each phase" for load current and harmonic current refers to the 1st, 2nd, 3rd or N-th phase. However, the N-th phase applies only to 4-pole breakers.
- The term "between each two phases" for line voltage refers to "between 1 and 2," "2 and 3," "3 and 1," "1 and N," "2 and N" or "3 and N." However, "between 1 and N," "between 2 and N" and "between 3 and N" apply only to 4-pole breakers.
- This unit measures data every 0.25s. Therefore, it may not measure the operating current even when a low-order circuit breaker operates.
- *2 The term "each max. value" refers to the largest value during the period from the start of use (the previous reset) to the present.
- *3 Each max. value cannot be individually cleared.
- *4 In the nonvolatile memory, the integrated values of electric energy and reactive energy are stored at power failure and every 30minutes, the fault current and its cause are stored upon occurrence of the fault, each set value is stored when it is set, and others are stored every 30minutes.
- *5 Every time the electric energy is integrated into a pulse unit (the unit can be set to any of 1kWh, 10kWh, 100kWh, 1000kWh and 10000kWh), a pulse is output. The pulse can be counted with a PLC.
- *6 The demand time limit cannot be set individually. The setting is common.
- *7 When the phase wire system is set, the average values of load current and line voltage are calculated as shown below.

Phase wire system	Average present value of current	Average present value of voltage
1-phase 2-wire system	Average present value of current = current of the 3rd phase	Average present value of voltage = voltage between 2 and 3
1-phase 3-wire system	Average present value of current = (current of the 1st phase + current of the 3rd phase)/2	Average present value of voltage = (voltage between 1 and 2 + voltage between 2 and 3)/2
3-phase 3-wire system	Average present value of current = (current of the 1st phase + current of the 2nd phase + current of the 3rd phase)/3	Average present value of voltage = (voltage between 1 and 2 + voltage between 2 and 3 + voltage between 3 and 1)/3
3-phase 4-wire system		

*8 Sum of 3rd to 19th harmonic components excluding fundamental wave components

*9 The reverse power is not measured.

*10 When overload or short circuit fault occurs and the current value exceeds the upper limit of the fault current measurement range (rated current 125 to 250A (adjustable): 4000A, rated current 50, 60, 75, 100 and 125A (fixed): 2000A), some 250A frame models may not display the cause of the fault or measure the fault current.

*11 The display of cause of fault caused by instantaneous tripping and the measurement of the fault current are enabled when the AL for MDU transmission (option) is installed.

*12 The display of alarm on the MDU is automatically reset when the alarm retention setting is "automatic reset." When the alarm retention method is "self-holding," the alarm is self-held. When the setting is "self-holding," the alarm is reset by performing the alarm reset operation (collective reset). "OVER" is automatically reset regardless of the setting.

*13 Depending on the usage environment, because of deteriorations brightness of the backlight could be decreased. If you need to replace the display part, please kindly let us know.

Remarks: (1) We use LCD for the display part of this product. The LCD may have bright spots (spots that are constantly on) and dark spots (spots that do not light) by its nature. The LCD has many display elements, and it is impossible to completely eliminate the occurrence of bright and dark spots. The occurrence of bright and dark spots is not a defect of this product.

(2) For LCD, depending on the characteristics of the material there could be deterioration of brightness (Bleeding and blot of display part, thinning of letters, deterioration of brightness of the backlight).

If you need to replace the display part, please contact the local sales office or sales representative.

2 Detailed Specifications 5 Measuring Display Unit Breakers

● Specifications for Measuring Display Units (MDU)

Item	Specifications
Data update cycle	250ms (harmonic current: 2s)
Measurement rating input	Voltage circuit 440V (3-phase 4-wire system is applicable only to 4-pole models.)
	Current circuit Load current/harmonic current: 250A/400A/630A/800A (Automatically discriminated. Determined according to the A frame of breaker.)
	Electric power $\sqrt{3} \times \text{Measurement rating current} \times 440V$ (power factor 1)
	Reactive power $\sqrt{3} \times \text{Measurement rating current} \times 440V$ (power factor 0)
	Frequency 50Hz/60Hz (Automatic discrimination of frequency)
Tolerances	
Current, Voltage: $\pm 1.0\%$ (of Measurement rating input) Electric power: $\pm 1.5\%$ (of Measurement rating input) Reactive power: $\pm 2.5\%$ (of Measurement rating input) Harmonic current: $\pm 2.5\%$ (of Measurement rating input) Power factor: $\pm 5.0\%$ for an electric angle of 90° Frequency: $\pm 2.5\%$ of actual value Electric energy: $\pm 2.0\%$ of actual value (voltage range from 100V to 440V, range from 5 to 100% of current rating, power factor 1) Reactive energy: $\pm 3.0\%$ of actual value (voltage range from 100V to 440V, range from 10 to 100% of current rating, power factor 0) Fault current: $\pm 15\%$ of actual value (*1)	
Demand time limit setting range	0 to 15min (in 1min steps)
Power failure compensation	(1) Wh (integrated value), varh (integrated value) (2) Max. value (3) Setting data
	Stored in the nonvolatile memory * Wh and varh are stored at power failure and every 30min. The max. value is stored every 30min. The setting data is stored when the data is set.
Clock	No power failure compensation
Clock accuracy	Error: approx. 1min/month
Outside dimensions (unit: mm)	See "Features and outline."
Control power	Common to 100 to 240VAC/DC, 50/60Hz (allowable voltage range: 85% to 110%), 12VA * Rush current flows transiently when the control power supply is turned on. (Rush current max. value 2A, current carrying time 1ms (240VAC))
Conditions for use	(1) Use under the conditions specified in "2. Normal Service conditions" and "3. Mounting and Connections" in "8. Handling and Maintenance." (2) Do not use in places with high temperature, high humidity, direct sunlight, or where static electricity is generated. When connecting electrical wires such as connection cables, transmission lines, and communication lines between the MDU breaker and the MDU, be careful not to generate static electricity. It may lead to malfunction and shortened service life.

Notes: *1 The measurement of fault current caused by instantaneous tripping of the 250A frame breaker is enabled when the alarm switch for MDU transmission (option) is installed on the MDU breaker body.

Electric energy pulse output

Item	Specifications
Output element	Solid state relay (SSR), no-voltage a contact (Ca and Cb terminals: no polarity)
Contact capacity	Common to 24VDC and 100 to 200VAC, 20mA
Output pulse unit	1, 10, 100, 1000 or 10000kWh/pulse (selectable) (*1)
Output pulse width	0.34 to 0.45s
Max. wiring length	100m

Notes: *1 The default setting is 1kWh/pulse.

CC-Link communication

Item	Specifications																	
Communication speed	10M/5M/2.5M/625k/156kbps																	
Communication system	Broadcast polling system																	
Synchronization system	Frame synchronization system																	
Coding system	NRZI																	
Transmission format	Conforming to HDLC																	
Number of occupied stations	Remote device occupying one station																	
Number of connected units	Meet the following conditions. Up to 42 units can be connected when only MDU breakers are used. Condition 1 for number of connected units $[(1 \times a) + (2 \times b) + (3 \times c) + (4 \times d)] \leq 64$ a: Number of units occupying 1 station, b: Number of units occupying 2 stations c: Number of units occupying 3 stations, d: Number of units occupying 4 stations Condition 2 for number of connected units $[(16 \times A) + (54 \times B) + (88 \times C)] \leq 2304$ A: number of units with 1 remote I/O station ≤ 64 , B: number of remote device stations ≤ 42 , C: number of local stations ≤ 26																	
	Set in the range from 1 to 64. (Set the station No. without fail.)																	
Station No.	Set in the range from 1 to 64. (Set the station No. without fail.)																	
CC-Link version	CC-Link Ver.1.10																	
Max. total cable length and cable length between stations																		
	Cable compatible with CC-Link Ver.1.10 (110-ohm termination resistance is used.)																	
	<table border="1"> <tr> <td>Communication speed</td> <td>156kbps</td> <td>625kbps</td> <td>2.5Mbps</td> <td>5Mbps</td> <td>10Mbps</td> </tr> <tr> <td>Cable length between stations</td> <td colspan="5">0.2m or more</td> </tr> <tr> <td>Max. total cable length</td> <td>1200m</td> <td>900m</td> <td>400m</td> <td>160m</td> <td>100m</td> </tr> </table>	Communication speed	156kbps	625kbps	2.5Mbps	5Mbps	10Mbps	Cable length between stations	0.2m or more					Max. total cable length	1200m	900m	400m	160m
Communication speed	156kbps	625kbps	2.5Mbps	5Mbps	10Mbps													
Cable length between stations	0.2m or more																	
Max. total cable length	1200m	900m	400m	160m	100m													
Connecting cable	Cable compatible with CC-Link Ver.1.10 (shielded 3-core twisted pair cable) * Cables made by different manufacturers can be used if the cables are compatible with Ver.1.10.																	

Note: For more information, refer to the website of CC-Link Partner Association (<http://www.cc-Link.org/>).

●Cautions when Using Measuring Display Unit Breakers (common instructions)

Measuring accuracy

(1) Electric current measurement accuracy

The MDU electric current measurement accuracy is $\pm 1.0\%$ of I_{in} of the circuit breaker.

For example, the permissible difference of NF400-SEW with MDU is 4.0A ($400A \times 1.0\%$), so the permissible difference from a current of 0A to 400A would be $\pm 4.0A$.

If the measurement value is less than 1.0%, the display value is cut off to 0A. However, if the current is 0.4% or more of the rated value, the electric power and electric energy are measured.

(2) When the current is cut off, the current is displayed as 0 A. However, if the current is 0.4% or more of the measurement rated current, the electric energy is measured.

(3) The accuracy of power factor is the percentage to electrical angle of 90° . A power factor of 50% or less is displayed as a reference value.

(4) The accuracy of electric energy is $\pm 2.0\%$ of the true value in the case of WS-V Series Measuring Display Unit Breakers in the range of measurement rated voltage (100V to 440V) \times current (measurement rated current of 5 to 100%).

How to use Measuring Display Unit Breaker on single-phase 2-wire circuitry

Connect the breaker as shown in the right figure.

The phase 1 on the load side is charged. Insulate it.

As measurement data, use the current of the phases 2 and 3 and the voltage between the phases 2 and 3.

Although the current of the phase 1 and the voltage between the phases 1 and 2 and the phases 3 and 1 are measured, ignore the measurements. The Measuring Display Unit is designed for 3-phase 3-wire and single-phase and 3-wire circuits.


On W & WS Series Measuring Display Unit Breakers, the average values of load current and line voltage are calculated from the values of the phases 1, 2 and 3 (between the phases).

Ignore these measurement values.

Also when the breaker is used on a single-phase 3-wire circuit, ignore these values.

When using any WS-V Series Measuring Display Unit Breaker, set the phase and wire type.

Connection on single-phase 2-wire circuit

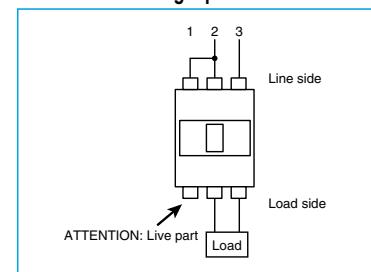

Phase sequence of Measuring Display Unit Breaker

The phase sequence of Measuring Display Unit Breaker can be set by using the phase switching function as shown below.

When the breaker is installed vertically with the power supply side upward (see the right figure), the phase sequence is set as stated below.

No phase switching: 1, 2, 3 and N from the left (default)


With phase switching: 3, 2, 1, and N from the left

Set the phase sequence in accordance with the installation and wiring methods.

Notes (1) The phase N is provided only on 4-pole circuit breakers.

(2) Note that the position of the phase N is unchanged regardless of the phase switching setting.

*Phase N is provided only on 4-pole breakers.

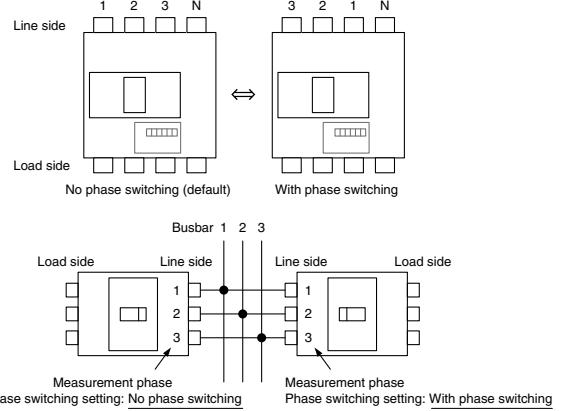

Reverse connection of Measuring Display Unit Breaker

The Measuring Display Unit Breakers cannot be connected with the power supply and load sides set reversely.

Installation of Measuring Display Unit Breaker in close contact

The Measuring Display Unit Breakers must not be installed in close contact.

(1) In the case of external mounting or panel mounting, install the breaker body securing a wiring space of 30mm or more on the right side of the breaker to connect the connecting cables and fitting the connecting cable connectors.

(2) In the case of breaker mounting or breaker mounting unit separate installation, install the breaker body securing a wiring space of 40mm or more on the right side of the breaker to connect the connecting cables.

2 Detailed Specifications [5] Measuring Display Unit Breakers

● Cautions when using Measuring Display Unit Breaker (For Measuring Display Unit)

Transmission method

- (1) One of No transmission, with pulse output, with CC-Link communication and with MODBUS communication should be specified.
- (2) When With transmission is selected, data which can be transmitted depends on the function of the Measuring Display Unit Breaker body. The transmission options cannot be installed or changed later. Specify the options when issuing the initial order.
- (3) For the maximum number of connected units and transmission distance for each transmission type, see the following tables for CC-Link communication and MODBUS communication.

2

Installation of Measuring Display Unit

- (1) When the installation of Measuring Display Unit on panel has been specified, the breaker will come with the panel mounting parts, mounting screws and 2m connecting cable (standard).
(The 0.5, 3, 5 or 10m connecting cable can be specified.)
- (2) If the installation position of the Measuring Display Unit is changed from the panel to the body or vice versa, the Measuring Display Unit and the breaker body must be returned to the manufacturer for modification.


Measuring Display Unit Breaker with CC-Link communication and MODBUS communication (External mounting type)

- (1) In the case of CC-Link and MODBUS, front plate cutout is not possible.

● Change of display direction for breaker mounting

<WS-V Series Measuring Display Unit Breaker>


- (1) When installing the Measuring Display Unit on the breaker body installed in the horizontal direction, the direction of the display can be changed according to the installation direction.
- (2) The display direction is set on the display unit.

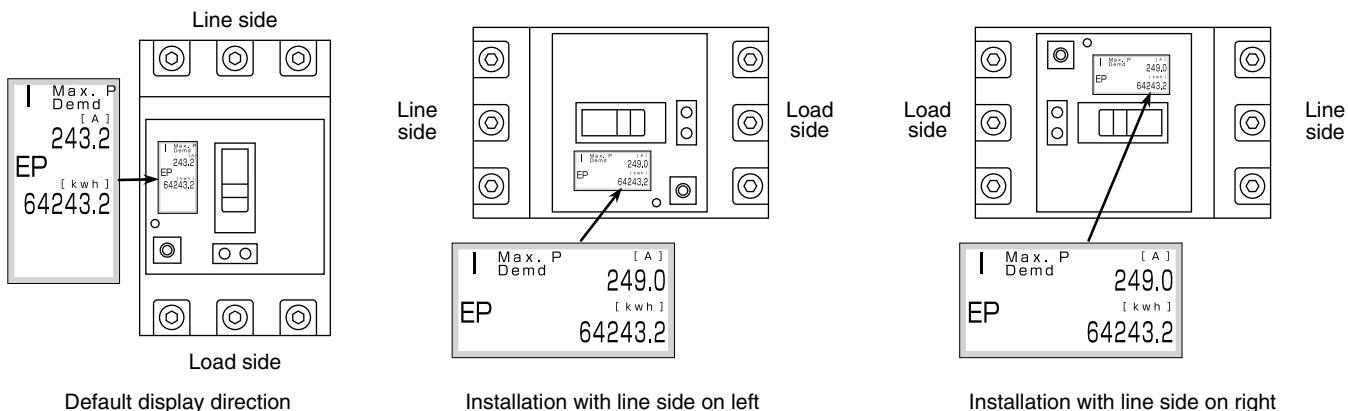


<View setting (vertical or horizontal)>

[Default value: V-VIEW (horizontal display)]

- Select VIEW on the LCD setting selection screen. (Screen [1])
- Press ENTER to switch to the view setting display screen. (Screen [2])
- Setting value switches through V-VIEW ⇄ H-VIEW1 ⇄ H-VIEW2 ⇄ V-VIEW....
- Press ENTER to decide the setting.
- Select YES on the allow changes screen and press ENTER to decide the setting. (Screen [3])

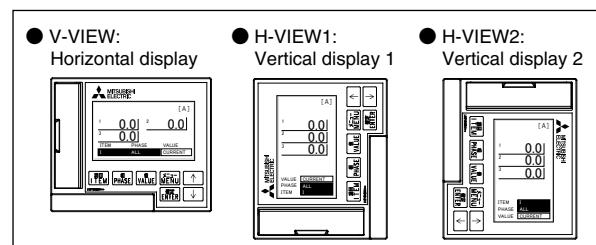


[LCD setting selection screen]

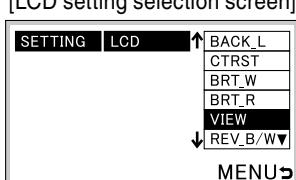

ENTER
MENU

Select with UP/DOWN


[View setting display screen]

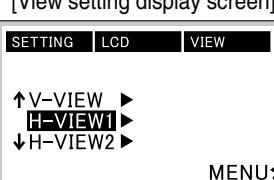

MENU

View setting value
Change with UP/DOWN

[Allow changes screen]

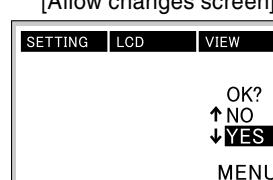


ENTER
To [LCD setting selection screen]
Select NO ⇄ YES with UP/DOWN

DC High-Voltage Circuit Breakers

Frame (A)		50						
Model		NF63-HDV						
Rated current In (A) Reference ambient temperature 40°C		15 20 30 40 50						
Number of poles		2	3					
Rated insulation voltage Ui (V)		600	690					
Rated short circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	DC	400V	10/5	-				
		600V	-	5/5				
Rated impulse withstand voltage Uimp (kV)		8						
Current		DC						
Suitability for isolation		Yes						
Reverse connection		Available *1						
Operating temperature degree		-10~+40°C *2						
Number of operating cycles Without current	With current	10000						
		1500						
Pollution degree		3						
Overall dimensions (mm)	a	50	75					
	b	130						
	c	68						
	ca	90						
	Front (F)	0.5	0.7					
Installation and connection	Rear (B)	● (Round stud)	● (Round stud) *3					
	Flush plate (FP)	-	-					
Cassette-type accessories	Plug-in (PM)	●	-					
	Alarm switch (AL)	●						
	Auxiliary switch (AX)	●						
	Shunt trip (SHT) *4	●						
	Undervoltage trip (UVT) *4	●						
	With lead-wire terminal block (SLT)	●						
	Handle lock device	LC HL HL-S	●					
	External operating handle	F type V type S type C type	● ● - -					
	Terminal cover	●						
	IEC35mm mounting rail adapter	● (Option)						
External accessories	BOX for MCCB	-						
	Electrical operation device (NFM)	-						
	Mechanical Interlock (MI)	-						
	CE marking	Self-declaration						
	UKCA marking	Self-declaration						
Page of Characteristics and dimensions	CCC	Certified						
	Automatic tripping device	Thermal-magnetic						
	Trip button	●						
Page of Characteristics and dimensions		230						

Notes: *1 Connection methods are available only shown in the following figure.

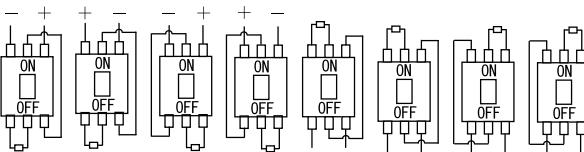

*2 To reduce a current value as follows when the ambient temperature is over 40°C.
The average value of the ambient temperature during 24hours shall not exceed 35°C.
To use a wire having a heat resistance suitable for the temperature when using at high temperature.
50°C...90% or less
60°C...70% or less
70°C...65% or less
(To use less than 6 hours per day, when the ambient temperature is 70°C.Long time use at 70°C causes life time reduction.)

*3 This product is shipped from the factory only in an assembled state, cannot be mounted by users.


*4 A shunt trip device (SHT) and an undervoltage trip device (UVT) is not available over 60°C of the ambient temperature.

Remark:*1 The time constant of the circuit is 5ms or less.

Frame (A)		125	225	250		
Model		NF125-HDVA	NF250-HDVA			
Rated current In (A) Reference ambient temperature 40°C		125 150 175 200 225				
Number of poles		4				
Rated insulation voltage Ui (V)		1000				
Rated short circuit breaking capacities (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	DC	1000V	10/5			
Rated impulse withstand voltage Uimp (kV)		8				
Current		DC				
Suitability for isolation		Yes				
Reverse connection		Available *1				
Working ambient temperature		-25~+40°C *2,*3				
Number of operating cycles Without current	With current	8,000 1,000				
Pollution degree		2				
Overall dimensions (mm)	a b c ca	140 165 68 92				
Mass of front type (kg)		2.0				
Front (F)	●					
Rear (B)	● (Round stud)	● (Round stud) *3				
Connection	Front type (F) Rear type (B) Plug-in type (PM)	● ● *4 -				
Cassette-type accessories	Alarm switch (AL) (Normal/Micro load)	● *2				
	Auxiliary switch (AX) (Normal/Micro load)	● *2				
External accessories	Shunt trip (SHT)	● *3				
	Undervoltage trip (UVT)	● *2				
	Lead-wire terminal block (SLT)					
	Handle lock device	LC HL HL-S	● ● *2			
	External operating handle	F type V type	● *3 ● *3			
	Terminal cover (TC-L, TC-LL *6, TC-S, BTC)	IEC35mm mounting rail adapter	-			
	BOX for MCCB	BOX for MCCB	-			
	Electrical operation device (NFM)	Electrical operation device (NFM)	-			
	Mechanical Interlock (MI)	Mechanical Interlock (MI)	-			
	CE marking	Self-declaration				
Page of Characteristics and dimensions	UKCA marking	Self-declaration				
	CCC	-	- *5			
Automatic tripping device		Thermal-magnetic				
Trip button		Equipped				
Page of Characteristics and dimensions		232	232	232		

Notes: *1 Although wiring method as right figure is described on MCCB, other wiring method mentioned in below Wiring diagram chart is also available.

Wiring diagram chart

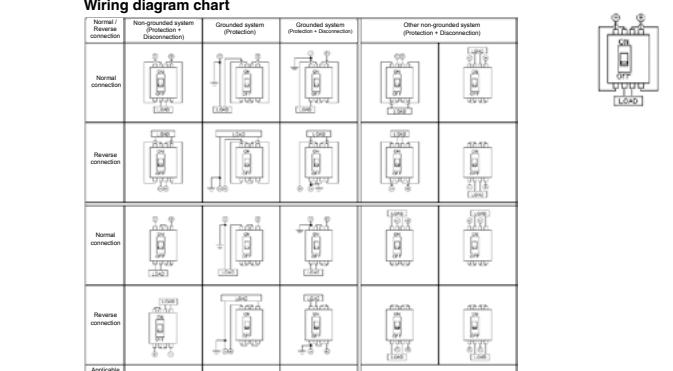

*2 Wires between terminals are prepared by a customer.

*3 Wires should be selected according to the rated current. Otherwise, there is a risk to change the operating characteristics and unnecessary operation of MCCB.

*2 ① To reduce a current value as follows when the ambient temperature is over 40°C.

The average value of the ambient temperature during 24 hours shall not exceed 35°C.

To use a wire having a heat resistance suitable for the temperature when using at high temperature.

50°C...90% or less

60°C...70% or less

70°C...65% or less

② Caution using at ambient temperature 70°C.

• To use less than 6 hours per day at 70°C. Otherwise, it will cause life time reduction.

• There is a risk of tripping during switching operation or due to vibration and shock.

In such case, please make the breaker "Reset" after a while.

③ Caution using at low ambient temperature.

• To use in an environment without frost and ice.

*3 Shunt trip device (SHT), undervoltage trip device (UVT) and external operating handle (F type, V type) should be used at standard operating condition. In case of external operating handle (F type, V type), those can be used at up to 60°C with reducing a current values according to the above *2①.

*4 In case of rear type, rear terminal cover is included as standard and it must be used.

*5 Circuit breakers for NF250-HDVA have obtained CCC certificate. Please consult us for details.

*6 It is only shipped with MCCB. Please specify "TC-L" when ordering.

If the wire size 150mm² is used, please use crimp terminal CB150-S8 (with or without insulation tape).

Remark:*1 Time constants of circuit are as follows:

Range of current	Time constant
Rated current	2ms or less
Short circuit current	5ms or less

2 Detailed Specifications [6] DC High-Voltage Circuit Breakers

2

6 Detailed Specifications

DC High-Voltage Circuit Breakers

Frame (A)		400		800	
Model		NF400-HDW		NF800-HDW	
Rated current In (A) Reference ambient temperature 40°C		250 300 350 400		500 600 630 700 800	
Number of poles		3	4	3	4
Rated insulation voltage Ui (V)		800	1000	800	1000
Rated short-circuit breaking capacity (kA)		1000V DC	10/5	-	10/5
IEC 60947-2 EN 60947-2 GB/T14048.2 (Icu/lcs)		750V	10/10	10/10	10/10 *6
Rated impulse withstand voltage Uimp (kV)			8		8
Current			DC		
Suitability for isolation			Yes		
Reverse connection (terminals unmarked)			Available		
Number of operating cycles	Without current	5000		3000	
	With current	1000		500	
Pollution degree	3	2		3	
Overall dimensions (mm)	a b c ca	140 257 109 *1 161 *1	185	210	280
Connection	Front type (F)	● Busbar terminal		● Busbar terminal	
	Rear type (B)	● Bar stud *2		● Bar stud *2	
Cassette-type accessories (Option)	Alarm switch (AL)	● *3		● *3	
	Auxiliary switch (AX)	● *3		● *3	
	Shunt trip (SHT)	● *3		● *3	
	Undervoltage trip (UVT)	● *4		● *4	
	With lead-wire terminal block (SLT)	●		●	
External accessories (Option)	Handle lock device	LC HL HL-S	- ● -	- ● -	- ● -
	External operating handle	F type V type S type C type	● ● - -	● ● - -	● ● - -
Terminal cover		● (TC-L, TTC,BTC *5)		● (TC-L, TTC,BTC *5)	
CE marking			Self-declaration		
UKCA marking			Self-declaration		
CCC			Certified		
Automatic tripping device			Thermal-magnetic		
Trip button			Equipped		
Page of Characteristics and dimensions		234		234	

Notes: *1. Dimensions are different from NF400-SW/SEW/HEW or NF800-SEW/HEW.

*2. Order with the breaker.

*3. Available to install at customer site.

*4. Only Reset type is available. (Non-reset type is not available.)


*5. BTCS for NF400-HDW or NF800-HDW are exclusive.

*6. GB/T 14048.2 is not applied.

Remark: *1. Right diagrams as wiring method are shown on breaker, others shown in "Wiring diagrams" are also available.

*2. Time constants of circuit are as follows:

Range of current	Time constant
Rated current	2ms or less
Short circuit current	5ms or less

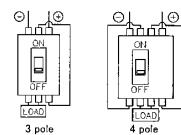

Wiring diagrams

For 3 pole

Normal / Reverse connection	Non-grounded system (Protection + Disconnection)	Grounded system (Protection)	Grounded system (Protection + Disconnection)	Other non-grounded system (Protection + Disconnection)
Normal connection				
Reverse connection				
Applicable voltage (V)	≤ 750	≤ 750	≤ 500	≤ 750


For 4 pole

Normal / Reverse connection	Non-grounded system (Protection + Disconnection)	Grounded system (Protection)	Grounded system (Protection + Disconnection)	Other non-grounded system (Protection + Disconnection)
Normal connection				
Reverse connection				
Normal connection				
Reverse connection				
Applicable voltage (V)	≤ 1000	≤ 1000	≤ 750	≤ 1000


Detailed 2 Specifications 7 Miniature Circuit Breakers

2

Detailed Specifications

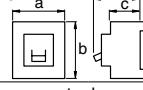Model			MCB									
			BH-D6		BH-D10			BH-DN				
Image												
Number of poles [P]			1	2	3	4(3+N) ¹	2(1+N) ¹	1	2	3	4(3+N) ¹	2 (1+N) ¹
Instantaneous tripping			Type B, C, D ²		Type B, C ²			Type B, C, D ²			Type C ²	
Rated insulation voltage U_i [V]			440					440			230	
Rated current I_n [A] at ambient temperature 30°C			0.5, 1, 1.6, 2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40, 50, 63			0.5, 1, 1.6, 2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40, 50, 63			6, 10, 16, 20			
Rated short-circuit capacity [kA] (Icn)	IEC 60898-1 EN 60898-1 GB/T 10963.1	AC	230V	6	—	6	10	—	—	4.5		
			230/400V	6	—	—	10	—	—	—		
			400V	—	6	—	—	10	—	—		
Number of operating cycles	Without current		8,000					10,000		20,000		
	With current		8,000					10,000		20,000		
Dimensions [mm]	a	ca	b	c	ca	a	36	54	72	36	18	
						18	36	54	72		18	
						b	87				88	
						c	44				44	
						ca	70				70	
Type of overcurrent release	Thermal-magnetic					Thermal-magnetic			Thermal-magnetic			
Mounting	IEC35mm rail					IEC35mm rail			IEC35mm rail			
Applicable wire size	1 to 25mm ²					1 to 25mm ²			1 to 10mm ²			
Mass [kg]	0.15	0.3	0.45	0.55	0.25	0.15	0.3	0.45	0.55	0.12		
Accessories (optional)	Alarm switch (AL)	●				●				—		
	Auxiliary switch (AX)	●				●				—		
	Shunt trip (SHT)	●				●				—		
	Handle lock device (HL)	●				●				—		
Terminal connection	Solderless					Solderless			Solderless			
Based on standard	IEC 60898-1, EN 60898-1, GB/T 10963.1					IEC 60898-1, EN 60898-1, GB/T 10963.1			IEC 60898-1, EN 60898-1, GB/T 10963.1			
CE marking	Self-declaration					Self-declaration			Self-declaration			
UKCA marking	Self-declaration					Self-declaration			Self-declaration			
CCC	Certified					Certified			Certified			
Marine use approval	CCS ³ , DNV					CCS ³ , DNV			—			
Page of Characteristics and dimensions	236					236			237			

Notes: *1 N pole is a switched neutral pole (without overcurrent release device).
*2 Type B: (3 In <, ≤ 5 In), Type C: (5 In <, ≤ 10 In), Type D: (10 In <, ≤ 20 In)
*3 Except for 4 poles breaker.

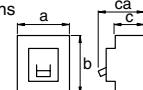Model			For DC		
			BH-D10		
Image					
Number of poles [P]	1	2			
Instantaneous tripping	Type B, C ⁴				
Rated insulation voltage U_i [V]	250				
Rated current I_n [A] at ambient temperature 30°C	0.5, 1, 1.6, 2, 3, 4, 6, 10, 13, 16, 20, 25, 32, 40, 50, 63				
Rated short-circuit capacity [kA] (Icn)	IEC 60898-2 EN 60898-2 GB/T 10963.2	DC	125V	10	—
			250V	—	10
		AC	230/400V	6	—
			400V	—	6
Number of operating cycles	Without current		8,000		
	With current		4,000		
Dimensions [mm]	a	ca	b	c	
					
	18		36		
	b		87		
	c		44		
	ca		70		
Type of overcurrent release	Thermal-magnetic				
Mounting	IEC35mm rail				
Applicable wire size	1 to 25mm ²				
Mass [kg]	0.15	0.3			
Accessories (optional)	Alarm switch (AL)	●			
	Auxiliary switch (AX)	●			
	Shunt trip (SHT)	●			
	Handle lock device (HL)	●			
Terminal connection	Solderless				
Based on standard	IEC 60898-2, EN 60898-2, GB/T 10963.2				
CE marking	Self-declaration				
UKCA marking	Self-declaration				
CCC	Certified				
Marine use approval	CCS				
Page of Characteristics and dimensions	236				

Notes: *4 Type B: (4 In <, ≤ 7 In), Type C: (7 In <, ≤ 15 In) for DC
Type B: (3 In <, ≤ 5 In), Type C: (5 In <, ≤ 10 In) for AC

Tightening torque

Screw size	Tightening torque (N·m)	Model
M5	2.1±0.4	BH-D6, BH-D10, BV-D, KB-D SHTA400-05DLS, SHTD048-05DLS
M4	1.3±0.2	BH-DN, BV-DN, BV-DN6
M3.5	0.9±0.1	AL-05DLS, AX-05DLS, ALAX-05DLS AX2-05DLS



2 Detailed Specifications 7 Miniature Circuit Breakers

7 Detailed Specifications

RCCB													
Model	BV-D												
Image													
Number of poles [P]	2(1+N) ¹ 4(3+N) ^{1 3}												
Rated current In [A] at ambient temperature 30°C	25, 40, 63												
Rated operational voltage Ue [VAC]	230 230/400												
Rated residual operating current Δn [mA]	30, 300												
Max. operating time at 5Δn [s]	0.04												
Pulsating current sensitivity	Type A												
Residual operation	Dependent on line voltage												
Dimensions [mm]	<table border="1"> <tr> <td>a</td><td>36</td><td>72</td></tr> <tr> <td>b</td><td>85</td><td></td></tr> <tr> <td>c</td><td>44</td><td></td></tr> <tr> <td>ca</td><td>70</td><td></td></tr> </table>	a	36	72	b	85		c	44		ca	70	
a	36	72											
b	85												
c	44												
ca	70												
Mass [kg]	0.2 0.35												
Rated frequency [Hz]	50/60												
Short-circuit protective device	BH-D6												
Rated making and breaking capacity Im [A]	500(In 25,40A), 630(In 63A)												
Rated conditional short-circuit current Irc [kA]	6												
Rated residual making and breaking capacity Δm [A]	500(In 25,40A), 630(In 63A)												
Rated conditional residual short-circuit current Δmc [kA]	6												
Reverse connection	Available												
Number of operating cycles	<table border="1"> <tr> <td>Without current</td><td>8,000</td></tr> <tr> <td>With current</td><td>8,000</td></tr> </table>	Without current	8,000	With current	8,000								
Without current	8,000												
With current	8,000												
Type of overcurrent release	—												
Mounting	IEC35mm rail												
Applicable wire size	1 to 25mm ²												
Terminal connection	Solderless												
Based on standard	IEC 61008-1, IEC 61008-2-2, EN 61008-1, GB/T 16916.1, GB/T 16916.22												
CE marking	Self-declaration												
UKCA marking	Self-declaration												
CCC	Certified												
Page of Characteristics and dimensions	238												

RCBO										
Model	BV-DN	BV-DN6								
Image										
Number of poles [P]	2(1+N) ¹									
Rated current In [A] at ambient temperature 30°C	6, 10, 16, 20, 25, 32, 40	3, 6, 10, 16, 20, 25, 32, 40								
Rated operational voltage Ue [VAC]	230									
Rated residual operating current Δn [mA]	30, 100, 300									
Max. operating time at 5Δn [s]	0.04									
Pulsating current sensitivity	Type A									
Residual operation	Dependent on line voltage									
Rated short-circuit capacity [kA]	IEC 61009-1 EN 61009-1 GB/T 16917.1 (Icn)	AC 230V	4.5 6							
Tripping characteristics	Type C ²									
Dimensions [mm]	<table border="1"> <tr> <td>a</td><td>36</td></tr> <tr> <td>b</td><td>88</td></tr> <tr> <td>c</td><td>44</td></tr> <tr> <td>ca</td><td>70</td></tr> </table>	a	36	b	88	c	44	ca	70	
a	36									
b	88									
c	44									
ca	70									
Mass [kg]	0.19									
Rated frequency [Hz]	50/60									
Rated residual making and breaking capacity Δm [A]	500									
Reverse connection	Available									
Number of operating cycles	<table border="1"> <tr> <td>Without current</td><td>20,000 (In 6,10,16,20A)</td></tr> <tr> <td>With current</td><td>15,000 (In 25A) 10,000 (In 32,40A)</td></tr> </table>	Without current	20,000 (In 6,10,16,20A)	With current	15,000 (In 25A) 10,000 (In 32,40A)					
Without current	20,000 (In 6,10,16,20A)									
With current	15,000 (In 25A) 10,000 (In 32,40A)									
Type of overcurrent release	Thermal-magnetic									
Mounting	IEC35mm rail									
Applicable wire size	1 to 16mm ²									
Terminal connection	Solderless									
Based on standard	IEC 61009-2-2, IEC 61009-1, EN 61009-1, GB/T 16917.1, GB/T 16917.22									
CE marking	Self-declaration									
UKCA marking	Self-declaration									
CCC	Certified									
Page of Characteristics and dimensions	239									

Notes: *1 N pole is a switched neutral pole (without overcurrent release device).

*2 Type C: (5 ln < \leq 10 ln)

*3 For use to three phase 4-wire type. When wiring to three phase 4-wire, connect the neutral line to the neutral pole. Not available for use to three phase 3-wire type.

Isolating switch																					
Model	KB-D																				
Image																					
Number of poles [P]	1 2 3 4(3+N) ⁴																				
Utilization category	AC-22A																				
Rated operational current Ie [A] at ambient temperature 30°C	32, 63, 80																				
Rated insulation voltage Ui [V]	250 440																				
Rated operational voltage Ue [VAC]	230 400																				
Rated short time withstand current Icw [A]	20 × Ie, 1s																				
Rated short-circuit making capacity Icm [A]	20 × Ie																				
Rated impulse withstand voltage Uimp [kV]	6																				
Dimensions [mm]	<table border="1"> <tr> <td>a</td><td>18</td><td>36</td><td>54</td><td>72</td></tr> <tr> <td>b</td><td></td><td>87</td><td></td><td></td></tr> <tr> <td>c</td><td></td><td>44</td><td></td><td></td></tr> <tr> <td>ca</td><td></td><td>70</td><td></td><td></td></tr> </table>	a	18	36	54	72	b		87			c		44			ca		70		
a	18	36	54	72																	
b		87																			
c		44																			
ca		70																			
Mass [kg]	0.09 0.18 0.27 0.36																				
Reverse connection	Available																				
Number of operating cycles	<table border="1"> <tr> <td>Without current</td><td>20,000</td></tr> <tr> <td>With current</td><td>3,000</td></tr> </table>	Without current	20,000	With current	3,000																
Without current	20,000																				
With current	3,000																				
Pollution degree	2																				
Mounting	IEC35mm rail																				
Applicable wire size	1 to 25mm ²																				
Terminal connection	Solderless																				
Based on standard	IEC 60947-3, EN 60947-3, GB/T 14048.3																				
CE marking	Self-declaration																				
UKCA marking	Self-declaration																				
CCC	Certified																				
Marine use approval	CCS ⁵ , DNV																				
Page of Characteristics and dimensions	240																				

Notes: *4 Connect the neutral line to the neutral pole.

*5 Except for 4 poles breaker.

Accessories for Miniature Circuit Breakers

Functions of Accessories

Accessory	Function
AL Alarm switch	Electrically indicates the trip status of the circuit breaker.
AX Auxiliary switch	Electrically indicates the On/Off status of the circuit breaker.
SHT Shunt trip	Electrically trips the circuit breaker from a remote location. Permissible working voltages are 70 to 110% of the AC rated voltage or 70 to 125% of the DC rated voltage.
HL Handle lock device	Device for locking the circuit breaker in the OFF position.

Equipping of Accessories

Accessory	Model	BH-D6	BH-D10	BH-DN, BV-DN, BV-DN6, KB-D, BV-D
AL		○	○	
AX		○	○	
SHT		○	○	
HL		○	○	

○: Accessory equipped

-: Accessory not equipped

Specifications

Type	AL	AX	AL+AX	AX+AX
	AL-05DLS	AX-05DLS	ALAX-05DLS	AX2-05DLS
Contact	Configuration	1C	1C	2C
	Contact capacity	400VAC, 2A	230VAC, 5A	120VDC, 0.4A
Function	Line	-	-	AX
	Load	AL	AX	AL
Connection	Screw terminal			
Compliance standard	IEC 60947-5-1			

Type	SHT	
	SHTA400-05DLS	SHTD048-05DLS
Cut-off switch	Equipped	
Voltage	110-400VAC	
Input power requirement	110VAC 60VA	
	230VAC 250VA	
Operating time [ms]	400VAC 750VA	
	<20	
Connection	Solderless terminal	
Compliance standard	IEC 60947-2	

* Secure a sufficient input power supply so that the voltage will not drop below the permissible lower working voltage (70% of the lowest rated voltage).

* The operating time denotes the time from when the rated voltage is applied to SHT until the time the main contact of the breaker starts to open.

Type	HL	Reference diagram	Padlock
	HLF-05BHD		

Please use on the left pole for 2 pole breaker, on the center pole for 3 pole breaker, on the second pole or third pole from the left for 4 pole breaker. (OFF lock only)
This device can be also used as a lock cover that can prohibit operation to ON position readily without any lock.
One lot contains 10 pieces.

2 Detailed Specifications 7 Miniature Circuit Breakers

2


7 Detailed Specifications

Combinations of Accessories


Accessory connection combinations	AL	
	AX	
	2AX	
	ALAX	
	SHT	
	AX+SHT	
	AL+SHT	
	2AX+SHT	
	ALAX+SHT	



Outline Drawing

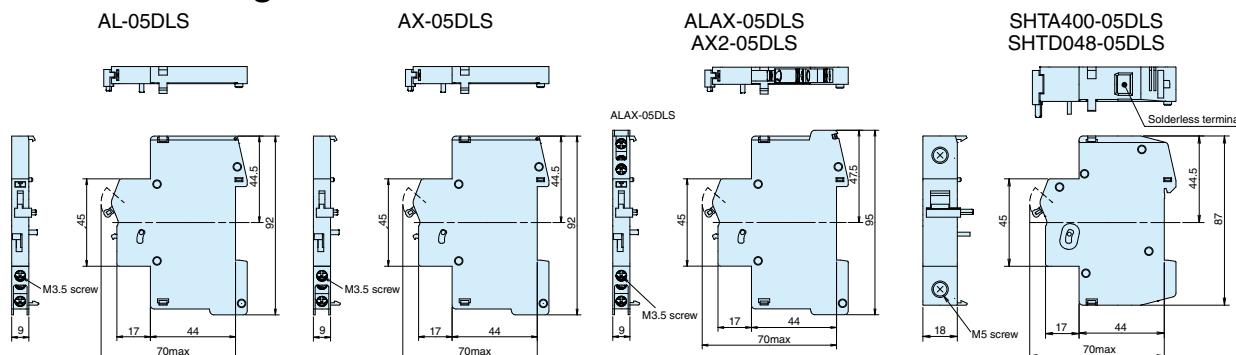


Connection of Line and Load Side

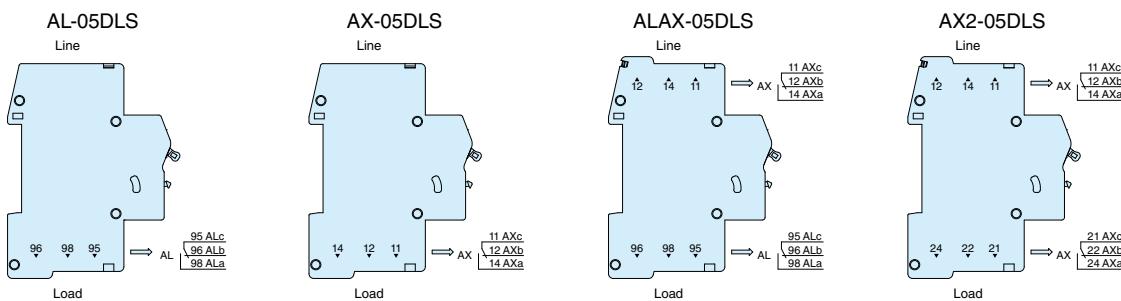


Installation of Accessories (AX, AL, SHT)

(1) Installation

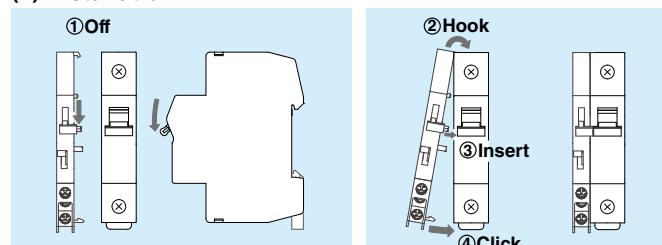

(2) Removal

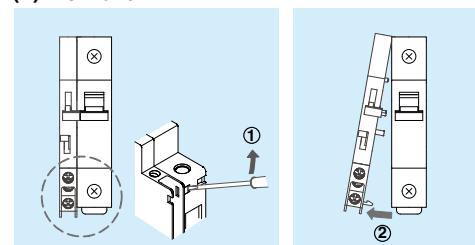

2 Detailed Specifications 8 Circuit Protectors

Frame (A)		30					
Model		CP30-BA			CP30-HU		
Image							
Number of poles		1	2	3	1	2	3
Rated insulation voltage U_i (V)		250			250		
Rated impulse withstand voltage U_{imp} (kV)		2.5			2.5		
Rated current (A)		0.1 0.25 0.3 0.5 1 2 3 5 7 10 15 20 30			0.1 0.25 0.3 0.5 1 2 3 5	250	
Rated short-circuit capacity (kA)	UL 1077 CSA C22.2 No.235 (*11)	Rated voltage (V) AC (V) DC (V)	65	125	-	65	125
	AC		2.5kA at 250V			2.5kA at 250V 10kA at 125V	10kA at 250V
IEC 60934 EN 60934 GB/T 17701 (Icn)	DC	2.5kA at 65V	2.5kA at 125V	-	10kA at 65V	10kA at 125V	-
	Rated insulation voltage U_i (V)		250			250	
IEC 60947-2 EN 60947-2 (Icu/lcs)	AC		2.5kA at 230V			2.5kA at 230V 10kA at 120V	10kA at 230V
	DC	2.5kA at 60V	2.5kA at 120V	-	10kA at 60V	10kA at 120V	-
AC-DC common use		2.5/2.5kA at 230V			2.5/2.5kA at 230V 10/10kA at 120V	10/10kA at 230V	
Reverse connection		AC/DC compatible (*13)		- (*1)	AC/DC compatible		- (*1)
Pollution degree		Available			Available		
Utilization category		2			2		
EMC environment condition (environment A or B)		A			A		
Rated ambient temperature (°C)		Not Applicable			Not Applicable		
Number of operating cycles	Without current	40 (T40)			40 (T40)		
	With current	10,000			10,000		
		6,000			6,000		
Operating characteristics		Instantaneous type (I); Medium type (M), (MD); Slow type (S), (SD); Fast type (F) (*2)			Instantaneous type (I); Medium type (M), (MD); Slow type (S)		
Mode of tripping		Instantaneous type (I): magnetic only [MO]			Instantaneous type (I): magnetic only (MO)		
Dimensions [mm]		Medium type (M), (MD) Slow type (S), (SD) : hydraulic-magnetic [HM] Fast type (F)			Medium type (M), (MD) : hydraulic-magnetic (HM) Slow type (S)		
a	a	17.5	35	52.5	17.5	35	52.5
	b	Screw	73			73	
	b	SQ	98			-	
	c		65			65	
	ca		65			65	
Method of operation		S-type (IEC 60934 / EN 60934)			S-type (IEC 60934 / EN 60934)		
Trip-free behaviour		Trip-free (IEC 60934 / EN 60934)			Trip-free (IEC 60934 / EN 60934)		
Mass (kg)	Screw	0.08	0.16	0.23	0.08	0.16	0.23
	SQ	0.09	0.17	0.25	-	-	-
Accessories	Retractable small terminal cover (TC-S)	● Standard IP20 (front, terminal covers closed) [Certified of TÜV] (*10)			● Standard IP20 (front, terminal covers closed) [Certified of TÜV]		
	Inertial delay (ID)	● (Medium, Slow type: AC only)			● (Medium, slow type: AC only)		
	Alarm switch (AL)	● (1c) (*9)			● (1c)		
	Auxiliary switch (AX)	● (1c) (*9)			● (1c)		
	Shunt trip (SHT)	● (for relay type) (*3)			● (for relay type) (*3)		
	Large terminal cover (TC-L)	● (*6), (*10), (*14)			● (*6)		
	Flushpanel mounting brackets (FP)	● (*6), (*10), (*14)			● (*6)		
	Back facing wiring terminal (BT)	● (*4), (*6), (*10), (*14)			● (*6)		
	Tracerization conductor for accessories terminal (WB)	● (*10)			●		
Connection	Accessory terminal cover (TC)	● (*6), (*10)			● (*6)		
	Main body	20A or less : Screw terminal M4 30A : Screw terminal M5 Male tab terminal 6.3mm (#250)(T) (*12) Spring clamp terminal (SQ) (*8)			Screw terminal M4		
Alarm switch / Auxiliary switch / Shunt trip		Screw terminal M3.5 Spring clamp terminal (SQ) (*9)			Screw terminal M3.5		
Main body mounting method		Surface, IEC rail mounting Flush panel mounting (option)			Surface, IEC rail mounting Flush panel mounting (option)		
CE marking		EN 60934 : TÜV approval (*11) EN 60947-2 : Self-declaration (*5) EN 60947-3 : TUV approval (*3)			EN 60934 : TÜV approval EN 60947-2 : Self-declaration (*5) EN 60947-3 : TUV approval (*3)		
UKCA marking		EN 60934 : Self-declaration (*11) EN 60947-2 : Self-declaration (*5) EN 60947-3 : Self-declaration (*3)			EN 60934 : Self-declaration EN 60947-2 : Self-declaration (*5) EN 60947-3 : Self-declaration (*3)		
CCC		Certified (*5), (*11)			-		
Classification Society (☆ approval) (NK, LR, ABS, DNV)		-	☆ (*7) (NK) (*14)	☆ (*7) (NK) (*14)	-		

Notes: *1 The 3-pole products are for AC use only.

*2 Contact us for operating characteristics other than those mentioned above.

*3 In poles equipped with a shunt tripping mechanism, the overcurrent tripping element is not operative (switched shunt tripping).

*4 For back-face wiring terminals, specify if it will be used with 30A, or 20A or less.

*5 UL (cURus), CCC, and CE, UKCA marking are displayed on standard products.

*6 It is recognition of UL (cURus), CCC, and TUV.

*7 Support for special order.

*8 A spring clamp terminal is only available for current 0.1 to 20A.

*9 In case of spring clamp terminal for AX and AL, specify if it will be used with the normal open contact or the normal close contact.

*10 In case of spring clamp terminal, it is not available.

*11 In case of spring clamp terminal rated 20A, it is not available.

*12 Male tab terminals are UL (cURus) only. Not subject to CCC, CE marking, UKCA marking. Retractable small terminal cover is not equipped.

*13 In the case of AC/DC shared models, tripping operating characteristics differ between AC and DC.

*14 Not supported when male tab terminal is selected for terminal shape.

Remarks: 1. Products for non-standard conditions are special order. (Low temperature, 1st and 2nd-degree moisture/fungal treatment, corrosion-resistant)

2. Although a buzzing sound may occur when an instantaneous type becomes 80% or more of the rated current for AC use, performance is not effected. Please take this point into consideration when selecting units for use in quiet environments.

3. Please use in environments free of high temperatures, humidity, dust, corrosive gas, vibration, and impact.

Also, do not use it in a circuit with inrush current or harmonics. Problems may result.

4. Reverse connection of power supply and load is possible.

5. Due to the automatic reset structure, the handle does not indicate the trip position. However, only the alarm switch shows the structure that displays the "trip position" between ON and OFF.

6. The standard small terminal cover supports IP20 from the front when the cover is closed. (TÜV certified)

7. When using in a harmonic circuit, multiply the load current by 1.4 before selecting and checking the rated current of the circuit protector.

2 Detailed Specifications

8 Circuit Protectors

2

8 Detailed Specifications

Internal circuits and examples of application

Internal circuit	Available model	Operating characteristics						
		Instantaneous type	Fast type	Medium type	Slow type	S	SD	shunt trip
Serial type	CP30-BA CP30-HU ¹	●	●	●	●	●	●	-
Serial type with auxiliary switch	CP30-BA CP30-HU ¹	●	●	●	●	●	●	-
Serial type with alarm switch	CP30-BA CP30-HU ¹	●	●	●	●	●	●	-
Relay type shunt trip (with SHT)	CP30-BA CP30-HU ¹	-	-	-	-	-	-	●

*1. CP30-HU is not available for fast type(F) and slow speed type(SD).

Internal accessories

Auxiliary switch (AX)

Operates in conjunction with the main circuit operating mechanism to electrically retrieve the ON/OFF status of protector.

Alarm switch (AL)

Operates in conjunction with the main circuit operating mechanism to electrically retrieve the tripping status of protector.

Remarks (1) When the handle of CP30-BA is constrained in the ON status, it does not issue the alarm signal even if it is tripped.
(2) The alarm switch will be reset when the body is reset or turned on.

Shunt trip (SHT)

A parallel relay type protector, which can break the circuit instantaneously when receiving an external signal

Inertial delay device

The inertial delay device is designed to avoid unnecessary operation caused by inrush current of transformer or lamp load. The device can withstand unpeated one pulse of crest value 20 times higher than the rated current (pulse time = 8 ms). It can be added to circuits having high, medium and low speed operating characteristics. (It cannot be added to instantaneous or DC types.)

Table 1 List of numbers of internal accessories which can be fitted

Type name	AX			AX More than one			AL			AL+AX			SHT			AL+SHT or AX+SHT			AL+AX+SHT			
	1P	2P	3P	1P	2P	3P	3P	1P	2P	3P	1P	2P	3P	1P	2P	3P	1P	2P	3P	1P	2P	3P
CP30-BA	○	○	○	-	○○	○○○	○○○	●	●	●	○○●	○○●	○○●	■	■	■	-	■○	■	○○	■○○	■○●
CP30-HU	○	○	○	-	○○	○○○	○○○	●	●	●	○○●	○○●	○○●	■	■	■	-	■○	■	○○	■○○	■○●

Remark: 1. All accessories should be fitted on the internal accessory terminal block.

Ratings of alarm switches (AL) and auxiliary switches (AX)

For CP30-BA, CP30-HU

Classification	AC			DC		
	Voltage (V)	Current (A)	Resistive load	Voltage (V)	Current (A)	Inductive load
Ratings of items other than those shaded in Table 1	Max. (250)	(1)	(0.5)	50	1	0.5
	Min. 125	3	1	30	2	1
For minute load	Max. 125	0.5	-	30	0.5	-
	Min. 1mA/24VDC, 2mA/12VDC, 5mA/6VDC					
Ratings of items shaded in Table 1	Max. 125	3	-	30	0.5	-
	Min. 0.1A/15VAC			0.1A/15VDC		
For general load	Max. 125	3	-	30	0.5	-
	Min. 0.1A/15VAC			0.1A/15VDC		
For minute load	Max. 125	0.1	-	30	0.1	-
	Min. 1mA/24VDC, 2mA/12VDC, 5mA/6VDC					

Remarks: 1. The switches having the ratings in parentheses are manufactured at the customer's request. (Specify the voltage). Such switches do not conform to UL (cURus), CCC or CE, UKCA marking requirements.

Ratings of shunt trip (SHT) coils

For CP30-BA, CP30-HU

Ratings

Rated operating voltage (V)		Time rating
100-200	Compatible with 100 to 200VAC and 100VDC	10 sec or less
24-48	Compatible with 24 to 48VDC	

Coil resistance, resistance and impedance (at 25°C)

Voltage (V)	Impedance for AC (Ω)	DC resistance for DC (Ω)
24-48	-	160
100-200	2400	2100

Remarks: 1. The allowable range is 70 to 110% of the rated voltage for AC and 75 to 120% of the rated voltage for DC.

2. The time rating is 10 seconds or less. Configure the circuit on which voltage will not be applied for more than 10 seconds.

Operation of auxiliary switch and alarm switch

Protector status		Switch status CP30-BA, CP30-HU
AX	Off or trip	AXa (open) / ALa (open) AXb (closed) / ALb (closed) AXc / ALc
AL	Off or ON	
AX	ON	AXa (closed) / ALa (closed) AXb (open) / ALb (open) AXc / ALc
AL	Trip	

■ Installation and connection

Installation method	With screws	On IEC rails	With embedded fittings
Appearance			
CP30-BA	●	●	● ¹
CP30-HU	●	●	●


*1. In case of male tab terminal or spring clamp terminal, it is not available.

Circuit protectors with AL, AX and/or SHT cannot be installed by this method.

■ Installation posture

The operating characteristics of electromagnetic (instantaneous) type circuit protectors are not affected by the installation posture. However, when installing a fluid electromagnetic (high, medium or low speed) type circuit protector, pay attention to the installation angle because the operating current value is changed under the influence of the gravity applied to the iron core in the oil dash pot.

Generally, it is recommended to use the circuit protectors in the vertical direction.

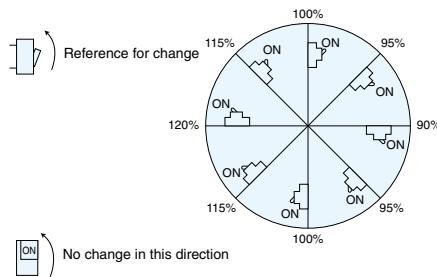

■ Electric wires which can be connected and applicable screw terminals

CP30-BA, CP30-HU

Classification	Shape of terminal	Electric wire size used (mm ²)	Applicable screw terminals	Tightening torque (N・m)
Body	Threaded terminal (standard specification) 	20 A or less M4	0.25-1.65 R1.25-4 R1.25-5	M4 1.2±0.2
	Cross recessed or slotted		1.04-2.63 R2-4 R2-5	
	30A M5	2.63-6.64 R5.5-4 R5.5-5	M5 2±0.2	
		6.64-10.52 *8-5NS (made by JST)		
Alarm and auxiliary switch terminals	Wire retaining screw (square washer) 	M3.5	0.25-1.65 R1.25-3.5	0.8±0.1
	Cross recessed or slotted		1.04-2.63 R2-3.5	

*Use the screw terminal 8-5NS made by JST.

2 Detailed Specifications 9 Low Voltage Air Circuit Breakers

2

9 Detailed Specifications

Low Voltage Air Circuit Breakers (AE-SW Series)

Frame (A)	630	1000	1250	1600	2000	2000	2500	3200	4000								
Model	AE630-SW	AE1000-SW	AE1250-SW	AE1600-SW	AE2000-SWA	AE2000-SW	AE2500-SW	AE3200-SW	AE4000-SWA								
Image		 															
AE1600-SW (Drawout type)																	
Rated current (CT rating) In (A)	630 (*1)	1000	1250	1600	2000	2000 (*1)	2500	3200	4000								
Rated current setting Ir (A) (adjustable) (Reference ambient temperature 40°C) (For marine use 45°C)	315-346.5-378-409.5- 441-472.5-504-535.5- 567-598.5-630- (*1)	500-550-600- 650-700-750- 800-850-900- 950-1000	625-687.5-750- 812.5-875-937.5- 1000-1062.5- 1125-1187.5-1250	800-880-960- 1040-1120-1200- 1280-1360-1440- 1520-1600	1000-1100-1200- 1300-1400-1500- 1600-1700-1800- 1900-2000	1000-1100-1200- 1300-1400-1500- 1600-1700-1800- 1900-2000 (*1)	1250-1375-1500- 1625-1750-1875- 2000-2125-2250- 2375-2500	1600-1760-1920- 2080-2240-2400- 2560-2720-2880- 3040-3200	2000-2200-2400- 2600-2800-3000- 3200-3400-3600- 3800-4000								
Number of poles	3, 4 (*2)																
Rated insulation voltage Ui (V)	1000																
Rated current of neutral pole (A)	630	1000	1250	1600	2000	2000	2500	3200	4000								
Rated breaking capacity (kA symmetrical RMS)	IEC 60947-2, EN 60947-2 JIS C 8201-2-1 Ann.1 Ann.2 NK, LR, DNV-GL, BV, ABS, DNV, CCS 240-500VAC	690VAC 600VAC 65 65	65	65	65	75	75	85	85								
Ics = % Icu	100%																
Rated short-time withstand current (kA symmetrical RMS)	1s	65		75													
Suitability for isolation	Yes																
Reverse connection	Available																
Number of operating cycles (*) (*7) (*8)	With rated current 690VAC In (*9) Without rated current (*10)	5000 10000 25000 (*11)	1500 8000	1500 8000	1500 8000	1000 20000 (*11)	500	500	500								
Utilization category	B																
Pollution degree	3																
EMC environment condition (environment A or B)	A (*12)																
Outline dimension (mm) Height (H) x width (W) x depth (D)	Fixed type 4-pole Drawout type 3-pole 4-pole	3-pole 4-pole 410x340x290 410x425x290 430x300x375 430x385x375	35 42 56 70	35 43 56 70	35 43 62 75	44 54 81 101	51 64 81 101	52 64 81 101	54 67 85 106								
Weight (kg) (Without Accessory) (*13)	Fixed type 4-pole Drawout type 3-pole 4-pole Cradle only 4-pole	3-pole 4-pole 410x475x290 410x605x290 430x435x375 430x565x375	35 42 56 70 24 28	35 43 56 70 27 32	35 43 62 75 33 40	44 54 81 101 33 40	51 64 81 101 34 42	52 64 81 101 34 46	54 67 85 106 46 58								
CE marking	Self-declaration																
UKCA marking	Self-declaration																
CCC (★:Certified)	★																
Marine approval (★:Certified)	★ (NK, LR, DNV, BV, ABS, CCS)																
Automatic tripping device	Electronic (effective value detection)																

● When the MCR is provided, the breaking capacity may be changed. See the catalog of Low Voltage Air Circuit Breakers, Y-0622.

● See the catalog of Low-voltage Air Circuit Breakers, Y-0622 , for the details of the accessories.

Notes: *1 AE630-SW and AE2000-SW having low rating types are available. See the catalog of Low Voltage Air Circuit Breakers, Y-0622, for the details.

*2 The 4-pole products do not have obtained the marine approval.

*3 4 (HN) means the neutral poles current capacity is 50% of the rated current, for 4poles.

*4 (FN) means the neutral poles current capacity is 100% of the rated current, for 4poles.

*4 () shows the value for 4P FN type.

*5 Marine approval value is 138KA.

*6 85KA for 690VAC and 600VAC.

*7 The number of operating cycles is the guideline for the life of the open/close operation in the standard operation environment.
These are not guaranteed values.

*8 Electrical operating cycles are included in mechanical operating cycles.

*9 This is the guideline for the life of the open/close operation when periodic inspection and maintenance are performed and consumable parts are not replaced.

*10 This is the guideline for the life of the open/close operation when periodic inspection and maintenance are performed and consumable parts are replaced.

*11 This value is max. operating cycle for just ACB body without any accessories.

(The max. operating cycles for the accessories like AX, MD, CC, SHT and UVT are half of this value.)

*12 This product is designed on the basis of environment A. When used under environment B, it might cause electromagnetic interference, and the user would be asked to do countermeasures to reduce these interference.

*13 These weights include an electronic relay, but don't include other accessories.

Features

● Higher reliability by High operating durability (Mechanical)

● Increase of rated short-time withstand current

Combination of the Electronic trip relay (ETR) with MCR (*1) enables increase of the choice coordination range.

● Applicability to increase and decrease of load and improvement of protection coordination

The electronic tripping system enables detailed setting of tripping characteristics. The system uses RMS detection resistant to distorted waves.

● More improved Electronic trip relay (ETR) and transmission functions




To flexibly meet various requirements, functions suitable for purposes can be selected effectively. In addition, improved measuring functions are provided, so that the circuit breakers are applicable to CC-Link and MODBUS transmission and helpful in establishing various electrical circuit measurement monitoring systems and energy-saving systems in combination with measuring display unit breakers.

Notes: *1 MCR is an abbreviation for marking current release. It has INST characteristic only when the circuit breaker in the OFF state turns ON (closes). The circuit breaker will lose the INST characteristic after closing, and it will have LTD and STD characteristics.

● Various connections

Various connections for panel structures are available. (See the following figure.)

Connections

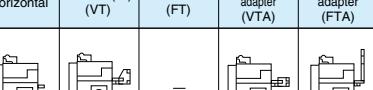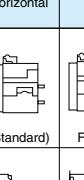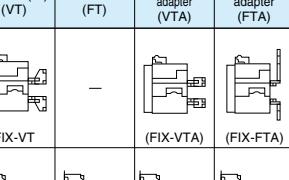
Connections Model	Horizontal	Vertical (*1) (VT)	Front (FT)	Vertical terminal adapter (VTA)	Front terminal adapter (FTA)
Fixed type (FIX)			—		
Drawout type (DR)					

Notes: *1 For AE2000-SWA, AE4000-SWA, AE4000-SW, AE5000-SW and AE6300-SW models, vertical terminal only is available.

Low Voltage Air Circuit Breakers (AE-SW Series)

Frame (A)	4000	5000	6300		
Model	AE4000-SW	AE5000-SW	AE6300-SW		
Image (Reference)	 AE6300-SW (Drawout type)				
	 Low Voltage Air Circuit Breakers Catalog world Super AC 630A~6300A WS Series				
Rated current (CT rating) In (A)	4000	5000	6300		
Rated current setting Ir (A) (adjustable) (Reference ambient temperature 40°C) (For marine use 45°C)	2000-2200-2400-2600-2800-3000-3200-3400-3600-3800-4000	2500-2750-3000-3250-3500-3750-4000-4250-4500-4750-5000	3150-3465-3780-4095-4410-4725-5040-5355-5670-5985-6300		
Number of poles	3, 4 (HN, FN) (*2) (*3)				
Rated insulation voltage Ui (V)	1000				
Rated current of neutral pole (A)	2000 (4000) (*4)	2500 (5000) (*4)	3150 (6300) (*4)		
Rated breaking capacity (kA symmetrical RMS)	IEC 60947-2, EN 60947-2 JIS C 8201-2-1 Ann.1 Ann.2 NK, LR, DNV GL, BV, ABS 690VAC 600VAC 240-500VAC	85 85 130 (*5) 100% 100 (*6) Yes	Available		
Ics = % Icu	100%				
Rated short-time withstand current (kA symmetrical RMS)	1 s	100 (*6)			
Suitability for isolation	Yes				
Reverse connection	Available				
Number of operating cycles (*) ⁽⁸⁾	With rated current (*9) 690VAC In (*10) 690VAC In (*10)	1000			
Without rated current (*10)	10000 (3P)/5000 (4P)				
Utilization category	B				
Pollution degree	3				
EMC environment condition (environment A or B)	A (*12)				
Outline dimension (mm)	Fixed type 3-pole 4-pole	414x874x290			
Height (H) x width (W) x depth (D)	Drawout type 3-pole 4-pole	414x1004 (1134)x290 (*4) 480x889x375 480x1019 (1149)x375 (*4)			
Weight (kg) (without Accessory) (*13)	Fixed type 3-pole 4-pole Drawout type 3-pole 4-pole Cradle only 3-pole 4-pole	141 159 (179) (*4) 194 223 (247) (*4) 98 113 (127) (*4)	141 159 (179) (*4) 194 223 (247) (*4) 98 113 (127) (*4)	148 166 (188) (*4) 208 238 (269) (*4) 107 121 (138) (*4)	
CE marking	Self-declaration				
UKCA marking	Self-declaration				
CCC (☆:Certified)	☆				
Marine approval (☆:Certified)	☆ (NK, LR, DNV, BV, ABS)				
Automatic tripping device	Electronic (effective value detection)				

■ Electronic trip relay (ETR) Type code

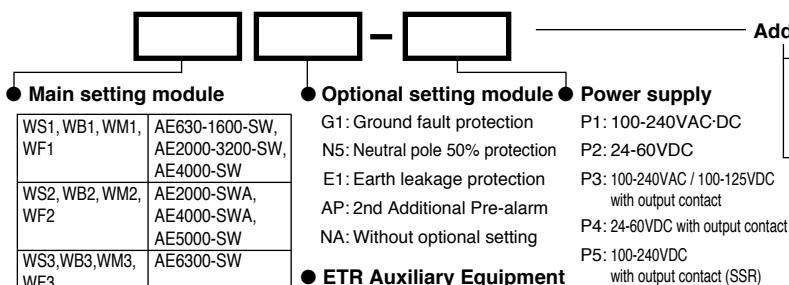

WS : General use
WM : Generator protection use
WB : INST/MCR only
WF : Protective coordination use

For the details of the characteristics, alarm contact output and expanded functions of the ETR, see the catalog of Low Voltage Air Circuit Breakers, Y-0622.

Additional function

- Extension module (EX1) **Network**
 - Display (DP1)
 - Display onto panel board (DP2)
 - VT unit (VT)
- Extension module (EX2)* **Network**
 - Display (DP1)
 - Display onto panel board (DP2)

* Cannot be used with WF relays.

Wire system (when EX1 or EX2 is specified)	
EX1 / EX2	<input type="checkbox"/> 3φ3W <input type="checkbox"/> 3φ4W
	<input type="checkbox"/> Normal connection <input type="checkbox"/> Reverse connection
	Normal connection: Upper terminal is connected to power supply. Reverse connection: Lower terminal is connected to power supply.

*The display is optional.



2 Detailed Specifications 10 Earth Leakage Relays

Earth Leakage Relays

2

10 Detailed Specifications

Model			Interchangeable leakage relays (*1)								
			Electrical self-hold type		Mechanical self-hold type		Harmonic surge ready		Harmonic surge ready		
Model name of ZCT combined (*5)			Hole diameter mm	NV-ZBA		NV-ZSA		NV-ZHA		NV-ZLA	
			15	ZT15B	-	ZT15B	-	ZT15B	-	ZT15B	-
			30	ZT30B	-	ZT30B	-	ZT30B	-	ZT30B	-
			40	ZT40B	-	ZT40B	-	ZT40B	-	ZT40B	-
			60	-	ZT60B	-	ZT60B	-	ZT60B	-	
			80	-	ZT80B	-	ZT80B	-	ZT80B	-	
			100	-	ZT100B	-	ZT100B	-	ZT100B	-	
Image											
Phase line type			3φ4W, 3φ3W, 1φ3W, 1φ2W								
Control voltage VAC		JIS	120 • 240 selectable		120 • 240 selectable 240 • 415 selectable		-		-		
		UL/JIS (*2) UL/CE (*3)	-		-		120 • 240 selectable 240 • 440 selectable		120 • 240 selectable 240 • 440 selectable 480		
JIS	High speed type	Rated sensitivity current mA	30 100 • 200 • 500 selectable	100 • 200 • 500 selectable	30 100 • 200 • 500 selectable	100 • 200 • 500 selectable	-		-		
	Delay type	Max. operating time (s)	0.1		0.1						
UL/JIS	High speed type	Rated sensitivity current mA	100 • 200 • 500 selectable		100 • 200 • 500 selectable (200 • 500 • 1000 selectable)		30 50		30 50		
	High speed type	Operating time (s) (*4)	0.3 • 0.8 • 1.6 selectable		0.3 • 0.8 • 1.6 selectable		0.1		0.1		
	Delay type	Inertial non-operating time (s) or longer than (s)	0.1 • 0.5 • 1.1		0.1 • 0.5 • 1.1		100 • 200 • 500 selectable (200 • 500 • 1000 selectable)		100 • 200 • 500 selectable (200 • 500 • 1000 selectable)		
	Delay type	Inertial non-operating time (s) or longer than (s)	-		-		0.1 • 0.5		0.1 • 0.5		
UL/CE	High speed type	Rated sensitivity current mA	-		-		30 • 50 • 100 selectable		30 • 50 • 100 selectable		
	High speed type	Max. operating time (s) at 5ΔIn	-		-		0.04		0.04		
	Delay type	Rated sensitivity current mA	-		-		100 • 300 • 500 selectable 300 • 500 • 1000 selectable		100 • 300 • 500 selectable 300 • 500 • 1000 selectable		
	Delay type	Max. operating time (s) at 2ΔIn (*4)	-		-		0.45 • 1.0 selectable		0.45 • 1.0 selectable		
Earth leakage indication			Electric type (LED)		Mechanical type (button)		Electric type (LED)		Mechanical type (button)		
Resetting method			Push button or control power switch off		Push button (combined with earth leakage indicator)		Push button or control power switch off		Push button (combined with earth leakage indicator)		
Built-in contact	Configuration		1c		1a1c		1a1c		1a1c		
	Continuous current capacity A		5		5		5		5		
	Contact capacity A		cosϕ=1	cosϕ=0.4 L/R=0.007	cosϕ=1	cosϕ=0.4 L/R=0.007	cosϕ=1	cosϕ=0.4 L/R=0.007	cosϕ=1	cosϕ=0.4 L/R=0.007	
			120VAC	5	2	120VAC	5	3	120VAC	5	3
			240VAC	5	2	240VAC	5	2	240VAC	3	2
			24VDC	5	2	415VAC	2	1	480VAC	1	1
						30VDC	4	3	30VDC	3	3
						100VDC	0.4	0.4			
						200VDC	0.2	0.2			
Connection		Front	●Clamp terminal		●Clamp terminal		●Clamp terminal		●Clamp terminal		
		Rear	-		●Clamp terminal		●Clamp terminal		●Clamp terminal		
Standard attachment (Front connection)			Mounting screw								
Mass kg		Relay	0.3		0.4		0.4		0.4		
External accessories	Terminal cover		●(TC-ZBA)		●(TC-ZSA)		●(TC-ZSA) (*6)		●(TC-ZSA) (*6)		
	Mounting hook for IEC 35mm rail (DIN rail) Fixture		●(DIN-ZBA)		-		-		-		
Max. consumption VA			3								
Conforming standard	US UL standard (UR certified)		-		-		UL1053 Recognized component (File No.E196562)		UL1053 Recognized component (File No.E196562)		
	European CE marking		-		-		Declaration for conformity IEC 60947-2 EN 60947-2		Declaration for conformity IEC 60947-2 EN 60947-2		
	UKCA marking		-		-		Declaration for conformity IEC 60947-2 EN 60947-2		Declaration for conformity IEC 60947-2 EN 60947-2		

Notes: *1 Interchangeable leakage relays can be easily combined with other relays and our ZCT. However, products with 30mA sensitivity (excluding NV-ZHA/ZLA) can only be used in combination with ZT15B, ZT30B and ZT40B.

*2 Indicates the UL-standard control voltage. UL (cURus) and JIS standards are indicated together. For JIS voltage indications, 100•200V changeover is 120•240V changeover, 200•415V changeover is 240•440V changeover, and 460V and 480V are described together. When ordering, specify "UL/JIS".

*3 Indicates the UL-standard control voltage. UL (cURus) and CE+UKCA standards are indicated together. For CE+UKCA voltage indications, 120•230V changeover is 120•240V changeover, 230•440V changeover is 240•440V selectable, which are described together. When ordering, specify "UL/CE".

*4 When operating times are 0.3 and 0.45sec, 0.8 and 1.0sec and 1.6sec, the relay operates between 0.15 and 0.45sec, 0.6 and 1.0sec and 1.2 and 2.0sec, respectively.

*5 Can be combined with an interchangeable ZCT equipped with a primary conductor. Refer to the next page for details.

*6 Not UL-certified.

Remarks: 1. Relays with rates shown in parentheses are special-order.


2. NV-ZBA/ZSA

Control voltage	Available voltage range	Example of applicable circuit voltage
120V	80-132V	100 • 110 • 120V
240V	160-264V	200 • 220 • 240V
415V	320-484V	400 • 415 • 440V

3. NV-ZHA/ZLA

Control voltage	Available voltage range	Example of applicable circuit voltage
120V	80-132V	100 • 110 • 120V
240V	160-264V	200 • 220 • 230 • 240V
440V	304-484V	380 • 400 • 415 • 440V
480V	368-528V	460 • 480V


Interchangeable ZCT

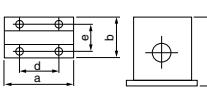Type	ZT15B	ZT30B	ZT40B	ZT60B	ZT80B	ZT100B
Aperture diameter (mm)	15	30	40	60	80	100
Mass (kg)	0.2	0.4	0.6	2.0	2.6	3.3
Rated short time current (kA)				50 (peak value)		
Dimensions (mm)	a 	a 48	b 68	c 85	d 140	e 160
	b 52	c 52	d 90	e 90		
	c 70	d 90	e 100	f 150	g 169	h 190
	d 25	e 50	f 50	g 100	h 100	i 100
	e 40	f 40	g 40	h 70	i 70	j 70


ZCT aperture diameter and wire size

	ZCT aperture diameter (mm)	15	30	40	60	80	100
		Max. 600V rated wire size in mm ² (current in amperes)					
1φ2w	Polyvinyl-chloride insulated wire	14 (88)	60 (217)	150 (395)	325 (650)	600 (992)	800 (1185)
	Cross-linked polyethylene insulated cable	2 (33)	38 (190)	60 (260)	250 (655)	400 (870)	600 (1140)
1φ3w 3φ3w	Polyvinyl-chloride insulated wire	8 (61)	38 (162)	100 (298)	250 (556)	500 (842)	725 (1095)
	Cross-linked polyethylene insulated cable	2 (33)	22 (135)	60 (260)	200 (560)	325 (760)	600 (1140)
3φ4w	Polyvinyl-chloride insulated wire	8 (61)	38 (162)	100 (298)	150 (395)	325 (650)	600 (992)
	Cross-linked polyethylene insulated cable	—	14 (105)	38 (190)	100 (365)	250 (655)	400 (870)

Interchangeable ZCTs with primary conductors

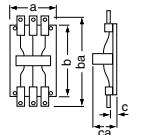Type	ZTA600A	ZTA1200A	ZTA2000A
Number of poles		3	
Rated voltage (VAC)		600	
Rated short time current (kA)		100 (peak value)	
	a 227	b 227	c 360
	b 256	c 298	d 250
	ba 366	ca 444	e 594
	c 42	f 78.5	g 79.5
	ca 125	g 176	h 214
Mass (kg)	6.5	11	27

ELRs with a ZCT with primary conductors

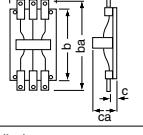Frame (A)	600	1200	2000	3200
Type	ZBA	Interchangeable ELR and interchangeable ZCTs with primary conductors		
	ZSA			NV-ZSA3200
	ZHA			NV-ZHA3200
	ZLA			NV-ZLA3200
Number of poles		3		
Rated voltage (VAC)		600		
Rated short time current (kA)		100 (peak value)		
	a 227	b 227	c 360	d 490
	b 256	c 298	d 250	e 320
	ba 366	ca 444	f 594	g 868
	c 42	f 78.5	g 79.5	h 111
	ca 125	g 176	h 214	i 290
Mass (kg)	6.5	11	27	54

Specification of ELRs	High-speed type	Control voltage (VAC)	Rated current sensitivity (mA)	Max. operating time (s)	Inertial non-operating time (s)
		ZBA	120 • 240 (*1)	100 • 200 • 500 (*1)	0.1
		ZSA	120 • 240 (*1) 240 • 415 (*1)	100 • 200 • 500 (*1)	
	Time-delay type (High-speed • Time-delay type)	ZBA	120 • 240 (*1)	0.3 • 0.8 • 1.6 (*1)	0.1 • 0.5 • 1.1
		ZSA	120 • 240 (*1) 240 • 415 (*1)	100 • 200 • 500 (*1) (200 • 500 • 1000 (*1))	0.3 • 0.8 • 1.6 (*1)
		ZHA	120 • 240 (*1) 240 • 440 (*1)	100 • 200 • 500 (*1)	0.1 • 0.45 • 1.0 (*1)
				100 • 300 • 500 (*1) 300 • 500 • 1000 (*1)	— • 0.1 • 0.5
		ZLA	120 • 240 (*1) 240 • 440 (*1) 480	100 • 200 • 500 (*1)	0.45 • 1.0 (*1) (at 2IΔn)
				100 • 300 • 500 (*1) 300 • 500 • 1000 (*1)	0.1 • 0.5 (at 2IΔn)

Note: *1 Selectable.

MEMO

2

3

Special-purpose Breakers

1) Mag Only (Instantaneous Tripping Circuit Breakers)	62
2) DC MCCBs and DSN Switches	63
3) 400Hz MCCBs	63
4) MCCB and ELCB for special environment	64

1. Mag Only (Instantaneous Tripping Circuit Breakers)

Standard magnetic trip current

Fixed	NF32-SV NF63-CV/SV/HV	AC-DC	Rated current x 10 (AC) (DC)
	NF125-CV/SV/HV	AC-DC	
	NF250-CV/SV/HV	AC-DC	
	NF400-CW/SW	AC-DC	
	NF630-CW/SW	AC-DC	
Adjustable	NF800-SEW	AC	High: Rated current x 10 Low: Rated current x 2
	NF800-SDW	DC	High: 8000A Low: 3200A
	NF1000-SEW	AC	High: Rated current x 10 Low: Rated current x 2
	NF1250-SEW	AC	High: Rated current x 10 Low: Rated current x 2
	NF1600-SEW	AC	High: Rated current x 10 Low: Rated current x 2
	NF1250-SDW NF1600-SDW	DC	High: 8000A Low: 3200A

Remarks: 1. The size, weight, accessories, etc., are all identical to the same-designation C, S and H series breakers.

•Minimum and max magnetic trip current

Fixed

Model	Rated current(A)	Current	Instantaneous tripping current(A)		Model	Rated current(A)	Current	Instantaneous tripping current(A)	
			min-max	standard				min-max	standard
NF32-SV	3	AC-DC	9-300	30	NF250-CV NF250-SV	125	AC-DC	375-3150	1250
	5		15-300	50		150		450-3150	1500
	10		30-300	100		175		525-3150	1750
	15		45-300	150		200		600-3150	2000
	20		60-300	200		225		675-3150	2250
	30		90-300	300		250		750-3150	2500
	32		96-320	320		125		375-3150	1250
NF63-CV NF63-SV NF63-HV	10		30-500	100	NF250-HV	150	AC-DC	450-3150	1500
	15		45-500	150		175		525-3150	1750
	20		60-500	200		200		600-3150	2000
	30		90-500	300		225		675-3150	2250
	40		120-500	400		250		750-3150	2500
	50		150-500	500		250		900-4000	2500
	60		180-600	600		300		900-4000	3000
NF125-CV	63		189-630	630	NF400-CW	350	AC-DC	1050-4000	3500
	60		180-1600	600		400		1200-4000	4000
	75		225-1600	750		250		900-5600	2500
	100		300-1600	1000		300		900-5600	3000
NF125-SV	125		600-1600	1250	NF630-CW	350	AC-DC	1050-5600	3500
	15		60-1600	150		400		1200-5600	4000
	20		120-1600	200		500		2000-6300	5000
	30		120-1600	300		600		2400-6300	6000
	40		200-1600	400		630		2520-6300	6300
	50		200-1600	500	NF630-SW	500	AC-DC	2000-5000	5000
	60		400-1600	600		600		2400-6000	6000
	75		400-1600	750		630		2520-6300	6300
	100		400-1600	1000					
	125		600-1600	1250					
NF125-HV	15	AC-DC	60-1600	150					
	20		120-1600	200					
	30		120-1600	300					
	40		200-1600	400					
	50		200-1600	500					
	60		400-1600	600					
	75		400-1600	750					
	100		400-1600	1000					
	125		600-1600	1250					

Adjustable(tripping current)

Model	Current	Max	Rated current(A)	Instantaneous tripping current(A)			
				Lo	2	3	Hi
NF800-SDW	DC	800	(700)	2800	4200	5600	7000
			800	3200	4800	6400	8000
NF1250-SDW	DC	1000	1000				
		1250	1250	3200	4800	6400	8000
NF1600-SDW		1600	1600				


Adjustable(rated current)

Adjustable(rated current)											
Model	Current	Rated current(A)					Instantaneous tripping current(%)				
NF800-SEW	AC	400 450 500 600 700 800					200 250 300 350 400				
NF1000-SEW		500 600 700 800 900 1000					500 600 700 800 1000				
NF1250-SEW		600 700 800 1000 1200 1250									
NF1600-SEW		800 1000 1200 1400 1500 1600									

2. DC MCCBs and DSN Switches

Breaking is more difficult with direct currents because the current value never reaches zero. While ordinary DC breakers are suitable for low voltages, special-voltage DC breakers are recommended for voltages in excess of 250VDC. Breakers for 550V are all 4-pole models. The size, shape, drilling plan, accessories, etc., are all identical to the S Series breakers with the same designations.

Wiring diagram for DC usage.

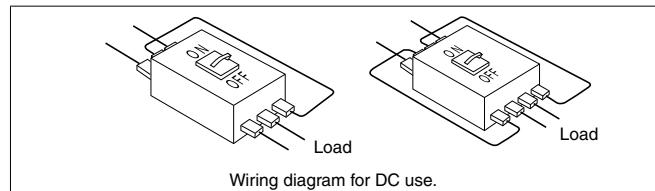

Wiring diagram for DC use.

Remark: 1. The tripping characteristics will change if the wiring differs from the one shown here.

Model	NF63-SV		NF125-SV		NF250-SV		NF400-SW		NF630-SW		NF800-SDW		NF1250-SDW		NF1600-SDW	
Number of poles	3	4	3	4	3	4	3	4	3	4	3	4	3	4	3	4
Rated voltage (VDC)	400	550	440	550	500	600	500	600	500	600	500	600	500	600	500	600
Rated breaking capacity (kA)	2/2		10/10		20/20		40/40		40/40		40/40		40/20	20/20	40/20	
IEC 60947-2 (icu/lcs)																

Remark: 1. Time constant: 10ms or below.

2. NF1250-SDW 3P and NF1600-SDW 3P/4P are Mag Only (Instantaneous Tripping Circuit Breakers).

●DC side

These breakers are designed as thyristor-Leonard system DC side breakers. They protect the thyristor from short circuiting when there is a power or

communication failure (Mag Only breakers can also be used for this purpose). Use these breakers in combination with fast fuses for even greater protection.

Model	NF125-SV		NF250-SV		NF400-SW		NF630-SW		NF800-SDW		NF1250-SDW		NF1600-SDW	
Number of poles	2	3	2	3	2	3	2	3	2	3	2	3	2	3
Rated voltage (VDC)	250	440	300	500	250	480	250	480	250	480	250	480	250	480
Rated breaking capacity (kA)	40/40	10/10	20/20		20/20		20/20		20/20		20/20		20/20	
IEC 60947-2 (icu/lcs)														
Instantaneous trip current min.)	3 times rated current	3 times rated current			900A		1000A		1400A		2500A		3200A	

●DSN switches

These are standard MCCBs without the automatic tripping element. The tripping capacity is about six times the rated current.

The appearance, size, drilling plan and available accessories are all identical to similar standard S and C Series MCCBs.

Model	DSN63-CV			DSN125-CV			DSN250-CV			DSN400-CW			DSN630-CW			DSN800-CW		
Rated current (A)	63			125			250			400			630			800		
Number of poles	2	3		2	3		2	3		2	3		3			3		
Rated voltage (AC/DC)	500/250			500/250			500/250			600/250			600/250			600/250		
Max. switching current (AC/DC)	378/155			750/310			1500/625			2400/1000			3780/1575			4800/2000		

Model	DSN32-SV	DSN63-SV	DSN125-SV	DSN125-SGV	DSN160-SGV	DSN250-SV	DSN250-SGV	DSN400-SW	DSN630-SW	DSN800-SW	DSN1000-SW	DSN1250-SW	DSN1600-SW
Rated current (A)	32	63	125	125	160	250	250	400	630	800	1000	1250	1600
Number of poles	2	3	2	3	2	3	2	3	2	3	3	3	3
Rated voltage (AC/DC)	500/250	500/250	690/250	690/300	690/300	690/250	690/300	690/250	690/250	690/250	690/250	690/250	690/250
Max. switching current (AC/DC)	192/80	378/155	750/310	750/315	960/400	1500/625	1500/625	2400/1000	3780/1575	4800/2000	6000/2500	7500/3125	9600/4000

3. 400Hz MCCBs

Standard MCCBs cannot be used in 400Hz circuits. When standard MCCBs are used in high-frequency circuits (eq. 400Hz), the instantaneous characteristics are shifted higher. The 400Hz MCCB is recommended for use in 400Hz circuits.

●Specifications

The appearance, size, rated interrupting capacity, drilling plan, accessories, etc., are all identical to the standard S and H Series breakers of the same designation.

Model	NF125-SV	NF125-HV	NF250-SV	NF250-HV	NF400-SW	NF400-SEW	NF630-SW (*)	NF630-SEW	NF800-SEW	NF1250-SEW	NF1600-SEW
Rated current (A)	16, 20, 32, 40, 50, 63, 80, 100	16, 20, 32, 40, 50, 63, 80, 100	125, 150	125, 150	225, 250 300, 350	200-350 adjustable	400, 500	300-500 adjustable	400-600 adjustable	600-800 adjustable	800-1200 adjustable
Number of poles	2	3	4	2	3	4	2	3	4	3	4
Rated insulation voltage (V)	690VAC	8/8	10/8	8/8	10/8	10/10	10/10	10/10	10/10	25/13	25/13
Rated breaking capacity (kA)	500VAC	18/18	30/23	30/30	50/38	30/30	30/30	30/30	30/30	65/33	65/33
(kA)	440VAC	25/25	50/38	36/36	65/65	42/42	42/42	42/42	42/42	85/43	85/43
IEC 60947-2 (icu/lcs)	400VAC	30/30	50/38	36/36	75/75	45/45	50/50	50/50	50/50	85/43	85/43
	230VAC	50/50	100/75	85/85	100/100	85/85	85/85	85/85	85/85	125/63	125/63

Note: *1 Instantaneous trip current : Rated current x 14 (Fix)

4. MCCB and ELCB for special environment

Our MCCBs and ELCBs are manufactured based on the normal operating conditions. When using our MCCBs and ELCBs under different conditions, MCCBs and ELCBs for special environment are also available.

●Normal operating conditions

- Ambient temperature.....-10°C~40°C
- Average temperature does not exceed 35°C in 24°C hours
- Current-temperature compensation ratio when exceeding 40°C
 50°C 0.9 times
 60°C 0.7 times
- Relative humidity.....Below 85% and no condensation
- Altitude.....Below 2,000m
- Atmosphere.....No excessive water vapor, oil vapor, smoke, dust, salt, corrosive substance, impact and vibration

Special environment		Special purpose	Specification	Model		
				MCCB	ELCB	Circuit protector
Low temp.	Cold storage warehouses	Low temp. breakers	Operation characteristics change under low temp. environment.	NF-C/S/H series (*1, *2)	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV250-CV/SV/HV	CP30-BA
High temp. High humid.	Chemical plants	Tropical treatment breakers	Under high humidity, withstand voltage and other electrical performance may be reduced. Moisture proof, mildew proof and corrosion resist breakers are available.	NF-C/S/H series (*3, *4, *5, *6, *7)	NF-C/S/H series (*3, *4, *5, *6, *7)	CP30-BA
Corrosive gas Salt	Petrochemical plants	Corrosion resist breaker	In case using breakers in environment filled with corrosive gas and salt, breaker with corrosion resisted boxes are recommended to use. If corrosion gas concentration is under standard value, corrosion resisted breaker can also be used. Gas concentration limit for standard breakers: H ₂ S(0.01ppm), SO ₂ (0.05ppm) HCl(0.05ppm), Cl ₂ (0.01ppm) NH ₃ (0.25ppm)	NF-C/S/H series (*3, *4, *5, *6, *7)	NF-C/S/H series (*3, *4, *5, *6, *7)	CP30-BA
Dust	Cement factory	Boxed breakers	In case dusty environment, boxed breakers are recommended to use. Refer to page 130. If breakers are to be installed in explosion proof case, use less ammonia molded breakers.			—

Notes: *1 SHT and UVT are not applicable.

*2 Electronic breakers are not applicable.

*3 250A frame electronic breakers are not applicable.

*4 AL, AX, SHT, UVT, TBL for 1000, 1200A frame ELCBs are not applicable.

*5 ELCBs for special voltage are not applicable.

*6 AL and AX for minute load are not applicable.

*7 UVT are not applicable.

4

Selection

1 Construction and Operation

66

1) Construction of MCCB.....	66
2) Construction of ELCB	68

2 Selection of MCCB and ELCB

69

1) Selecting Procedure.....	69
2) Features and Performance	70
3) Current-carrying Capacity and Operating Temperature	72
4) Application of Circuit Breaker According to Breaking Capacity	74
5) Selection of Circuit Breaker for Electric Lamp or Heater Circuit	75
6) Selection of Circuit Breaker for Motor Branch Circuit	77
7) Selection of Motor Protection Breaker	79
8) Selection of Circuit Breaker for Inverter Circuit	80
9) Selection of Circuit Breaker for Transformer Primary Side	81
10) Combination for Selective Breaking.....	85
11) Combinations for Cascade Breaking	87
12) International Standard Conformance List	89

3 Selection of ELCB


92

1) Electric Shock Protection	92
2) ELCB Grounding Method	93
3) Rated Voltage and Number of Poles	94
4) Earth Fault Protection Coordination and Combination of Devices	95

1. Construction of MCCB


● Arc-Extinguishing Device

MCCBs feature excellent arc-extinguishing performance by virtue of the optimum combination of grid gap, shape, and material.

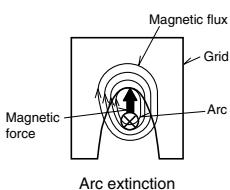

● Switching Mechanism

The contacts open and close rapidly, regardless of the moving speed of the handle, minimizing contact wear and ensuring safety.

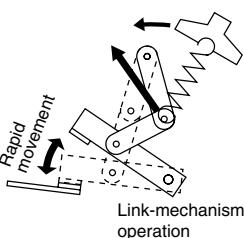

● Trip Button (Push to Trip)

Enables tripping mechanically from outside, for confirming the operation of the accessory switches and the manual resetting function.

● Adjustable Instantaneous Tripping Current

On electronic molded case circuit breakers, the instantaneous tripping current can be adjusted only by turning the knob. Therefore, optimum characteristics for load can be obtained.

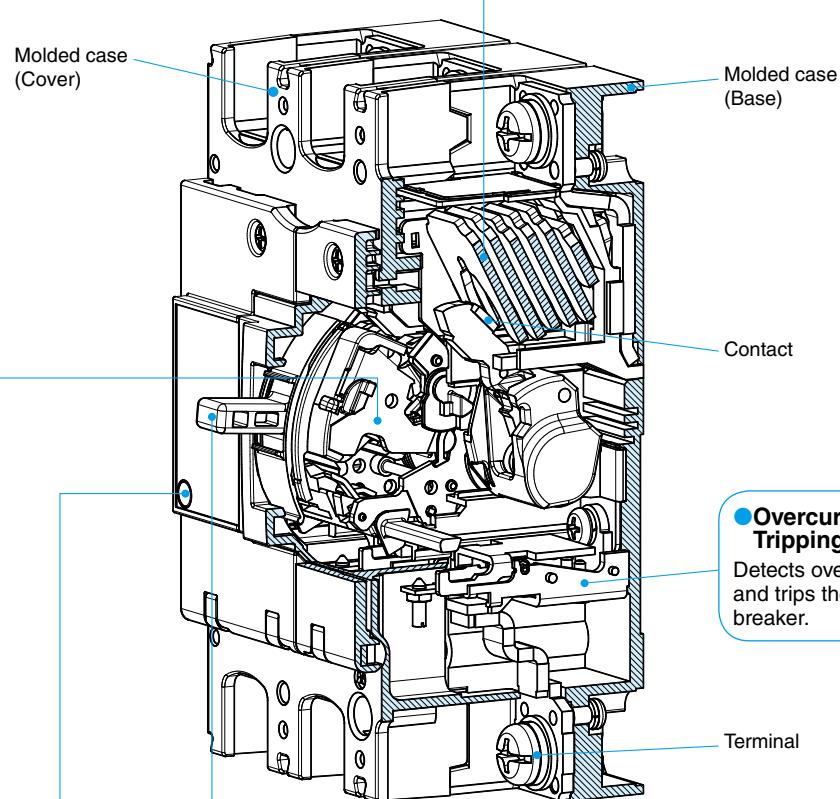
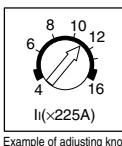


Fig. 4.1 Construction

● Overcurrent Tripping Device

Detects overcurrent and trips the circuit breaker.

● Handle

1. Trip indication

The automatically tripped condition is indicated by the handle in the center position between ON and OFF, the yellow (or white) line cannot be seen in this position.

2. Resetting

Resetting after tripping is performed by first moving the handle to the OFF position to engage the mechanism, then returning the handle to ON to reclose the circuit.

3. Trip-Free

Even if the handle is held at ON, the breaker will trip if an overcurrent flows.



Handle indication

4. Contact On Mechanism

Even in the worst case in which welding occurs owing to an overcurrent, the breaker will trip and the handle will maintain to ON, indicating the energizing state.

4-pole Breaker

- The 4-pole breaker is designed for 3-phase 4-wire circuits. A neutral pole without an overcurrent tripping element is provided at the right end. The construction and operation are the same as class S, H and U breakers. (Electronic molded case circuit breakers with frame size of 1600A or less have overcurrent tripping elements on the neutral poles.)

- Since the four poles are simultaneously opened and closed, the user will not fail in turning on the neutral pole or carelessly open the pole. (The standard construction is designed to close the neutral pole earlier and open it later than the voltage pole.)

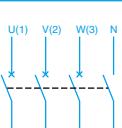


Fig. 4.2 4-pole Breaker (NF250-SV)

Over-current Tripping Devices

Thermal-Magnetic Type

(NF32-SV, NF63-CV/SV/HV, NF125-CV/SV/HV, NF250-CV/SV/HV
NF400-CW/SW, NF630-CW/SW, NF800-SDW, etc.)

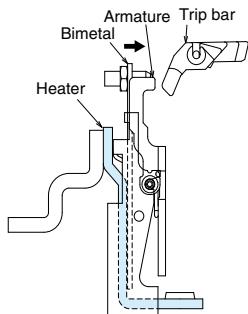


Fig. 4.3

Thermal-Magnetic Type (NF1250-SDW)

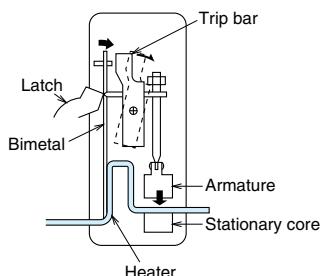


Fig. 4.4

Hydraulic-Magnetic Type (NF50-FHU etc.)

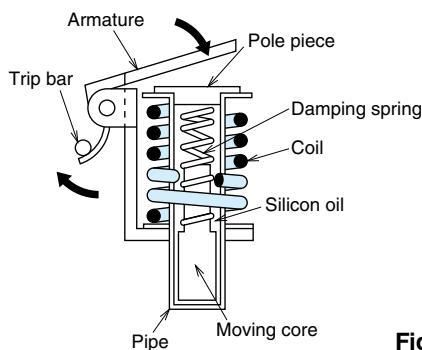


Fig. 4.5

Principle of Electronic Trip Relay (ETR) Operation

(NF125-SEV/HEV, NF250-SEV/HEV, etc.) (NF400-SEW~NF800-CEW
NF1000-SEW~NF1600-SEW, etc.)

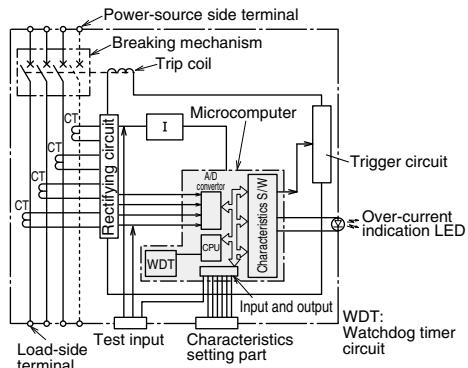


Fig. 4.6.1

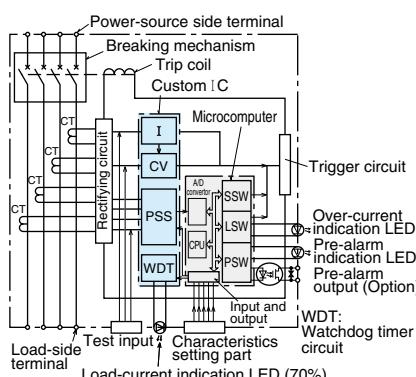


Fig. 4.6.2

Number of tripping devices

Descriptions (e.g. 2P1E and 2P0E) are not given in the number of poles fields of some models. For these models, the same number of overcurrent tripping devices as the number of poles is provided in the circuit breakers.

2 poles: 2P2E, 3 poles: 3P3E, 4 poles: 4P4E or 4P3E

(Some 4-pole models do not have overcurrent tripping devices for the neutral poles.)

1. Time-Delay Operation

An overcurrent heats and warps the bimetal to actuate the trip bar.

2. Instantaneous Operation

If the overcurrent is excessive, the armature is attracted and the trip bar actuated.

1. Time-Delay Operation

An overcurrent heats and warps the bimetal to actuate the trip bar.

2. Instantaneous Operation

If the overcurrent is excessive, magnetization of the stationary core is strong enough to attract the armature and actuate the trip bar.

1. Time-Delay Operation

At an overcurrent flow, the magnetic force of the coil overcomes the spring, the core closes to the pole piece, attracts the armature, and actuates the trip bar.

The delay is obtained by the viscosity of silicon oil.

2. Instantaneous Operation

If the overcurrent is excessive, the armature is instantly attracted, without the influence of the moving core.

1. The current flowing in each phase is monitored by a current transformer (CT).

2. Each phase of the transformed current undergoes full-phase rectification in the rectifier circuit.

3. After rectification, each of the currents are converted by a peak-conversion and an effective-value conversion circuit.

4. The largest phase is selected from the converted currents.

5. Each time-delay circuit generates a time delay corresponding to the largest phase.


6. The trigger circuit outputs a trigger signal.

7. The trip coil is excited, operating the switching mechanism.

2. Construction of ELCB

● Arc-Extinguishing Device

ELCBs feature excellent arc-extinguishing performance by virtue of the optimum combination of grid gap, shape, and material.

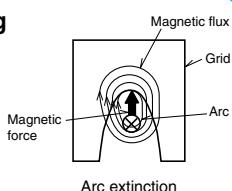

● Trip Button (Push to Trip)

Enables tripping mechanically from outside, for confirming the operation of the accessory switches and the manual resetting function.

● Overcurrent Tripping Device

The use of the proven mechanism of ELCBs ensures reliable detection of overcurrent.

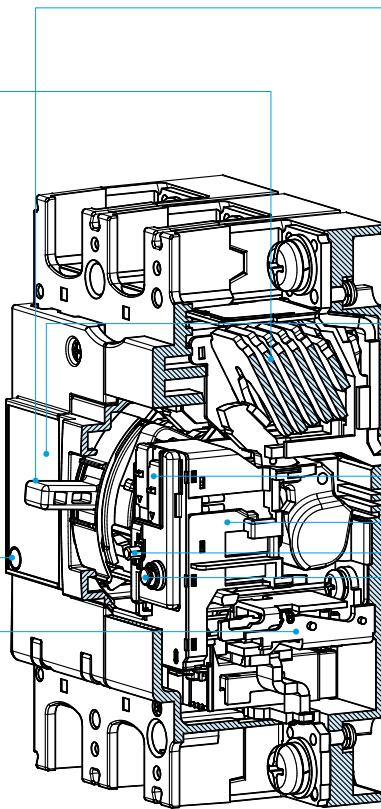


Fig. 4.7 Construction

● Switching Mechanism

The contacts open and close rapidly, regardless of the moving speed of the handle, minimizing contact wear and ensuring safety.

● Window Frame

Since the handle, trip button, test button, leakage display button and nameplate are located in one area, it is easy to cut the panel.

● Sensitivity Switching Device

The rated sensitivity current can be easily changed. A 3-stage switching device for 100, 200 and 500mA and a 2-stage switching device for 200 and 500mA are available.

● Leakage Display

Target type with display button. The display is automatically reset by the handle.

● Test Button

The button has excellent durability and performance to withstand inspection at start.

● Leakage Tripping Device

- The semiconductor circuit unit, which is the most important part of the device, is an electronic type using highly reliable ICs.
- For improvement of the function for removing harmonic and surge components, two filters are provided to prevent unnecessary operations.
- The ZCT detects any minute current. It is covered with a magnetic shield and never operates unnecessarily owing to motor starting current.

Rated operational voltage	Applicable circuit voltage	Available voltage range
100-240V	100/110/200/220/230/240V	80 to 264V
100-440V	100/110/200/220/240/254/265/380/400/415/440V	80 to 484V
200-440V	200/220/240/254/265/380/400/415/440V	160 to 484V
100-200-415V	100/110/200/220/240/254/265/380/400/415/440V	80 to 484V
200-415V	200/220/240/254/265/380/400/415/440V	160 to 484V

● Operation

1. When an earth fault occurs, voltage is induced on the secondary side of the ZCT.
2. Factors of unnecessary operations, i.e. surge and noise components, are removed from the induced voltage.
3. The signal level is discriminated, and, when the level exceeds the specified level, the electromagnetic device is excited to trip the circuit breaker body.

Overload and short-circuit

The use of the proven mechanism of ELCBs ensures reliable detection of overcurrent and earth fault to break the circuit.

Revision to EN and GB/T Standards

Products for European markets must conform to the CE Marking Directives. To affix the CE mark to a product, it is necessary that the product conforms to European Standard (EN Standard). Products for China must conform to Chinese GB/T Standard to affix the CCC mark.

The third edition (2003) of EN Standard for circuit breakers, EN 60947-2, and GB/T Standard GB/T 14048.2 (2008) prescribe that the functions of earth leakage circuit breakers should normally work even in open phase condition. Products based on the previous EN Standard (second edition) have not been approved since June, 2006. Products based on the previous GB/T Standard (2001) have not been approved since January, 2011.

★WS-V Series Earth Leakage Circuit Breakers (conforming to CE and CCC Standards) and UL 489 Listed Molded Case Circuit Breakers with earth leakage protection conform to the third edition of EN 60947-2 and GB/T 14048.2 2008 as 3-phase power supply earth leakage circuit breakers.

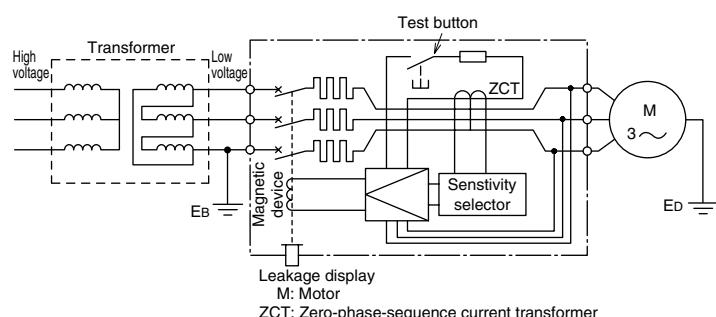


Fig. 4.8 Circuit configuration of ELCB (NV63-SV)

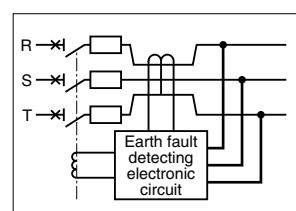


Fig. 4.9 Circuit diagram in 3-phase power supply ELCB

4 Selection [2] Selection of MCCB and ELCB

1. Selecting Procedure

MCCB (NF)

Circuit used Applicable standard	Phase and wire type, voltage, DC or AC, frequency, standard	<ul style="list-style-type: none"> ● Applicable phase and wire type 2 poles: 1-phase 2-wire 3 poles: 1-phase 2-wire, 1-phase 3-wire, 3-phase 3-wire 4 poles: 3-phase 4-wire ● Specification list (pages 18 to 59) ● List of received certifications (page 89)
Determination of rated current	Kind and size of electric wire Kind and working conditions of load Selection conditions in internal standard and electrical equipment technical standards	<ul style="list-style-type: none"> ● Relationship between temperature and electric wire (page 72) ● Selection of circuit breaker for motor branch circuit (page 77) ● Selection of circuit breaker for electric lamp or electric heater circuit (page 75) ● Selection of motor protection breaker (page 79) ● Selection of circuit breaker for inverter circuit (page 80) ● Selection of circuit breaker on transformer primary side (page 81)
Determination of interrupting capacity	Transformer capacity Electric wire thickness and length	<ul style="list-style-type: none"> ● Application based on breaking capacity (page 74) ● Table of combinations for cascade breaking (page 87)
Examination of coordination	Selective breaking	<ul style="list-style-type: none"> ● Operating characteristic curve (pages 146 to 246) ● Table of combinations for selective breaking (page 85)
Determination of model	Use	<ul style="list-style-type: none"> ● Circuit Breakers for special purpose (page 61 to 64)
Installation method	Connection and molded case circuit breaker	<ul style="list-style-type: none"> ● Installation and connection (pages 98 to 106) ● Boxed Circuit Breakers (page 137)
Accessories	Internal accessories and external accessories Electric operation	<ul style="list-style-type: none"> ● Internal accessories (pages 108 to 122) ● External accessories (pages 123 to 143) ● Electrical Operated Circuit Breakers (pages 140 to 142)

ELCB (NV)

Circuit used Applicable standard	Phase and wire type, voltage, DC or AC, frequency, standard	<ul style="list-style-type: none"> ● Specification list (pages 18 to 59) ● List of received certifications (page 89)
Determination of rated current	Kind and size of electric wire Kind and working conditions of load Selection conditions in internal standard and electrical equipment technical standards	<ul style="list-style-type: none"> ● Relationship between temperature and electric wire (page 72) ● Selection of circuit breaker for motor branch circuit (page 77) ● Selection of circuit breaker for electric lamp or electric heater circuit (page 75) ● Selection of circuit breaker for inverter circuit (page 80) ● Selection of circuit breaker on transformer primary side (page 81)
Determination of interrupting capacity	Transformer capacity Electric wire thickness and length	<ul style="list-style-type: none"> ● Application based on breaking capacity (page 74) ● Table of combinations for cascade breaking (page 87)
Determination of rated current sensitivity	Purpose of protection Obligation of installation	<ul style="list-style-type: none"> ● Purpose of protection (page 92) ● Selection of rated sensitivity current of circuit breaker for inverter circuit (page 80) ● Method of switching between rated voltage and rated sensitivity current (page 262)
Examination of coordination	Selective breaking Ground fault protection coordination	<ul style="list-style-type: none"> ● Operating characteristic curve (pages 146 to 246) ● Table of combinations for selective breaking (page 85) ● Combinations of ground fault protection coordination and devices (page 95)
Determination of model	Use	<ul style="list-style-type: none"> ● Circuit Breakers for special purpose (page 61 to 64)
Installation method	Connection and molded case circuit breaker	<ul style="list-style-type: none"> ● Installation and connection (pages 98 to 106) ● Boxed Circuit Breakers (page 137)
Accessories	Internal accessories and external accessories Electric operation	<ul style="list-style-type: none"> ● Internal accessories (pages 108 to 122) ● External accessories (pages 123 to 143) ● Electrical Operated Circuit Breakers (pages 140 to 142)

2. Features and Performance

■ Features of MCCB

● Molded Case Circuit Breakers (NF)

① Time-delay trip function

This function conforms to the allowable current and time characteristics of electric wire and prevents operation caused by the starting current of a load device. When the overcurrent is large, the operating time is short, and when the overcurrent is small, the operating time is long.

● In the case of electronic type

The electronic time-delay trip function includes a long time limit trip function conforming to the allowable current and time characteristics of conductor and a short time limit trip function for selective breaking for branch MCCB. The short time limit function operates after a delay of some cycles (0.06 to 0.3s) at overcurrent exceeding the short time limit tripping current. These functions can be adjusted by the knob.

② Instantaneous trip function

This function breaks the circuit immediately when short-circuit current flows. A circuit breaker on which the instantaneous tripping current is adjustable has the advantage that coordination in operation with other protective devices, such as electromagnetic switches and low-voltage air circuit breakers, can be easily obtained. The instantaneous operating time (total interrupting time) can be divided as shown in Fig. 4-10.

③ Operating characteristic curve

The operating characteristic curve indicates the relationship between magnitude of overcurrent and operating time. The maximum-minimum operating characteristic curve indicates that the operating time is in the range. Figs. 4-11 and 4-12 show examples of operating characteristic curves.


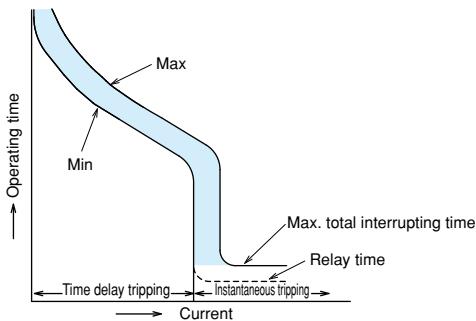


Fig. 4.11 Example of operating characteristic curve

Table 4-1 Overcurrent trip operating time (IEC 60947-2)

Rated current of circuit breaker (A)	Operating time for 130% current
63 or less	Within 1h.
Over 63	Within 2h.

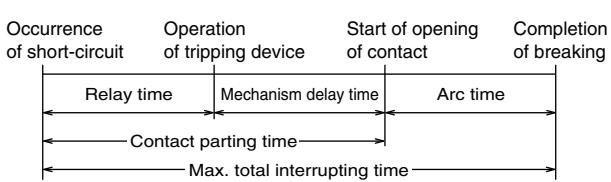

Since the relay time is normally 2 to 5ms, if large current flows for more than this time, the circuit breaker operates instantaneously.

Fig. 4.10 Instantaneous operating time

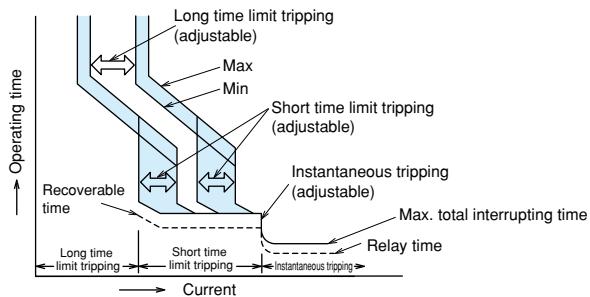


Fig. 4.12 Example of operating characteristic curve of electronic type

● Motor Protection Breakers

● The motor protection breakers are circuit breakers to be used to protect general induction motors. They prevent motors being burnt not only by short-circuit current of circuits, but also by overcurrent caused by overload operation and locking of motors.

● The Motor Protection Breakers are finely classified according to rated current so that the breakers can be applied to various types of motors.

● Although their time-delay trip and instantaneous trip functions are almost the same as those of MCCB, they are designed to operate within 2 seconds to 30 seconds at 600% of the rated current in consideration of protection from motor starting current and locked current.

● There are many kinds of motors, and the motors have various allowable characteristics for overcurrent. Therefore, when applying a motor breaker, it is necessary to compare the allowable characteristics and the operating characteristics of the motor breaker.

Note that, particularly, submersible motors may not be protected by ordinary motor breakers because their allowable locked time is short.

● When the motor starting current is large and the starting time is long and when the frequency of intermittent operation is high, motor breakers are unsuitable. In such a case, the use of a combination of an electromagnetic switch and MCCB (combination starter) is recommended.

● Characteristics of MCCB for DC circuits

When a 2-pole MCCB (250VDC or less) is used on a DC circuit, connect the poles in series.

When a 3- or 4-pole MCCB is used, refer to page 63 (for special DC voltage) or pages 18 to 25 (for DC). For DC high voltage, refer to pages 47 to 48.

If the breaker is not connected as specified, its tripping characteristics and breaking performance will change, and it cannot be used.

● Current-limiting characteristic

The current limiting refers to reduction of estimated short-circuit current depending on the circuit to prevent flow of the larger short-circuit current. The use of a class S, H or R which has excellent current-limiting characteristic or class U enables to reduce the passing energy at short-circuiting and protect the devices in the electric circuit from electromagnetic force and thermal stress.

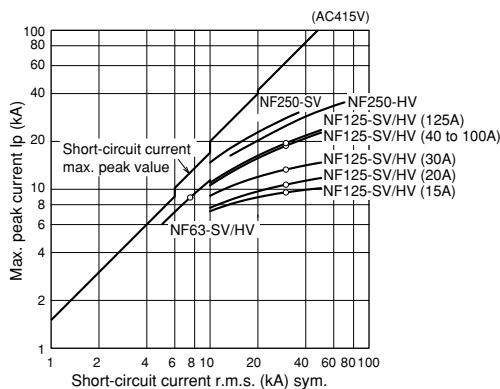
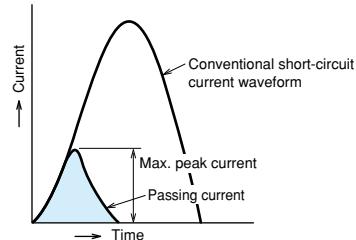


Fig. 4.13
Passing current peak value
characteristic of classes S and H
(415VAC)

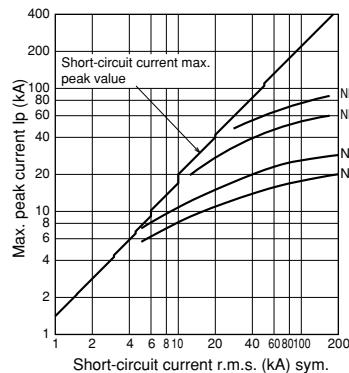


Fig. 4.14
Passing current peak value
characteristic of classes U
(415VAC)

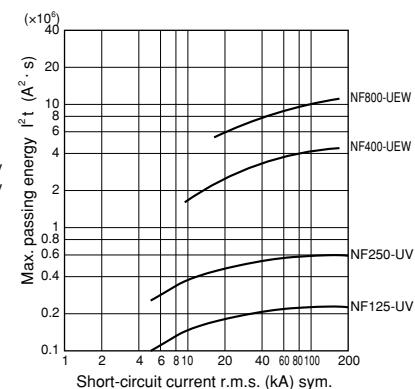


Fig. 4.15
Passing I^2t characteristic
of class U (415VAC)

■ Performance

● Short-circuit breaking performance

Short-circuit current corresponding to the rated interrupting capacity is interrupted.

● Outline of short-circuit test (IEC 60947-2)

① Rated limit short-circuit interrupting capacity (Icu)

Operating duty: O – 3min – CO

② Rated service short-circuit interrupting capacity (Ics)

Operating duty: O – 3min – CO – 3min – CO

Upper limit of temperature rise of terminal after breaking:
80K or less

O duty: The circuit breaker in the ON status carries and
interrupts short-circuit current.

CO duty: A shorted circuit is formed, and the circuit
breaker is turned on to carry and interrupt short-circuit
current.

● Opening/closing performance

Table 4-2 shows the durability against opening and closing. See the durability against opening and closing as reference when using a circuit breaker as a switchgear.

The durability against tripping by SHT (shunt tripping device), UVT (undervoltage tripping device) and trip button is 10% of the total durability against opening and closing.

Note: Opening and closing operations are regarded as one time.

If a circuit breaker is regularly used to trip, the life of the circuit breaker will be significantly reduced.

**Table 4-2 Durability of MCCB against opening and closing
(IEC 60947-2)**

Rated current (A)	Frequency of opening and closing (times/hour)	Durability against opening and closing (times)		
		With current flow	Without current flow	Total
100 or less	120	1500	8500	10000
101 to 315	120	1000	7000	8000
316 to 630	60	1000	4000	5000
631 to 2500	20	500	2500	3000
2501 or more	10	500	1500	2000

3. Current-carrying Capacity and Operating Temperature

■ Operating current vs. ambient temperature

Rated current of circuit breakers is adjusted for the rated ambient temperature. This is because circuit breakers are often installed in a casing as a switchboard or a control board, and temperature of the installed place of the breaker becomes higher than ambient temperature of the wires. If temperature of the installation site of circuit breakers greatly differ from the rated ambient temperature, it is necessary to correct rated current according to the temperature correction curve (shown in the Paragraph of characteristics and outside shape in the catalog). Load current can be increased up to the rated current corrected according to ambient temperature.

However, set current rating with enough allowance while taking fluctuation of power voltage and load current into consideration so that maximum operating current may not exceed the rated current.

(1) Cautionary instructions for using heat resistive wire

For using insulated wires of higher heat resistance than that of 600V PVC insulated wire (allowable temperature 60°C), it is necessary to take the following points into consideration.

For circuit breakers, size of test wire is stipulated by each test current in IEC60947-1.

The values are calculated figures when bus bars (that are defined by IEC60947-1) are connected and tested in open-air usage environment. If size of connection wire is thinner than the test wire size, temperature of the breaker terminals increases and overcurrent tripping operation characteristic may change in some cases. (Operating time becomes shorter usually.) So please select the size of the connected wire so that the maximum usage current does not exceed the value in Fig. 4-16 with correction rate. At motor load, for example, influence of change in operation characteristic by difference in size of connection wire is insignificant and can be disregarded because the load current is far lower than the rated current of the circuit breaker.

Since the temperature test conditions for circuit breakers with IEC60947-1 are different from the state that the circuit breakers are mounted inside panels, please make sure that the circuit breakers are tested with the actual usage assembly inside panels.

Table 4-3 IEC 60947-1 Size of test wire

Range of test current (A)	Conductor size (mm ²)
0 < ≤ 15	2.5
15	20
20	25
25	32
32	50
50	65
65	85
85	100
100	115
115	130
130	150
150	175
175	200
200	225
225	250
250	275
275	300
300	350
350	400
400	500
500	630

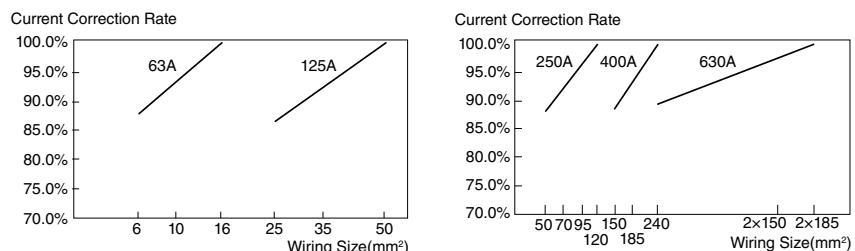


Fig. 4.16 Current Correction Example at IEC60947-1

(2) Connection of aluminum conductors

- When aluminum conductors are connected, be careful to prevent the contact resistance (due to the oxidized film of aluminum) from being increased.
- The surface of the connection point of the aluminum conductors shall be properly treated by plating (zinc displacement-Copper-Silver) or by joint compound. If the treatment is done only by joint compound, reliability is low, this should be limited to when plating is impossible (eg. at site).
- For aluminum cables, use compression terminals that are exclusively for aluminum cables.
- The compression portion of the terminal shall be provided with taping, and the aluminum wire shall not be exposed to the atmosphere.

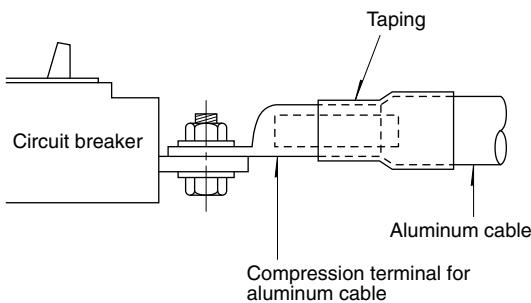


Fig. 4.17 Example of connection of aluminum conductor

(3) Maximum operating current of installation without clearance between breakers

In case of installation without clearance between breakers, because malfunction failures can result by heat of breaker, use the operating current not to exceed the below value.

Table 4-4

Model								Maximum operating current
BH-D6	BH-D10	BH-DN	BV-DN					
CP30-BA	CP30-HU							
NF32-SV	NF63-CV			NV32-SV	NV63-CV			
NF63-SV	NF63-HV			NV63-SV	NV63-HV			
NF125-CV	NF125-SGV	NF125-SEV		NV125-CV				
NF125-SV	NF125-LGV	NF125-HEV		NV125-SV				
NF125-HV	NF125-HGV			NV125-HV				80% of rated current
NF125-RGV								
NF160-SGV	NF160-LGV	NF160-HGV						
NF250-CV	NF250-LGV			NV250-CV				
NF250-SV	NF250-SGV			NV250-SV	NV250-SEV			
NF250-HV	NF250-HGV	NF250-RGV		NV250-HV	NV250-HEV			
NF400-CW	NF400-SW	NF400-SEW	NF400-HEW	NV400-CW	NV400-SW	NV400-SEW	NV400-HEW	
NF400-REW	NF400-UEW							
NF630-CW	NF630-SW	NF630-SEW	NF630-HEW	NV630-CW	NV630-SW	NV630-SEW	NV630-HEW	
NF630-REW								90% of rated current
NF800-CEW	NF800-SDW	NF800-SEW	NF800-HEW	NV800-SEW	NV800-HEW			
NF800-REW	NF800-UEW							

4. Application of Circuit Breaker According to Breaking Capacity

MCCB (NF)

Table 4-5 230VAC

3ph trans. capacity (kVA)	30 or less	50 to 75	100	150 to 300				500 to 1500			2000 to 3000					
1ph trans. capacity (kVA)	20 or less	30 to 50	75	100 to 150		200 to 300		500 to 1500		-						
Breaking capacity (kA) (sym)	2.5	5	7.5	10	15	25	30	35 36	50	85	100	125	150	170	200	
30 • 32	NF30-FAU (*1)	NF32-SV														
50 • 60 • 63	NF50-FAU (*1)	NF63-CV	NF63-SV	NF63-HV												
100 • 125	NF125-CV				NF125-SV				NF125-SEV	NF125-HEV	NF125-RGV		NF125-UV			
225 • 250	NF250-CV						NF250-SV		NF250-HV	NF250-HEV			NF250-RGV		NF250-UV	
400	NF400-CW						NF400-SW/SEW		NF400-HEW	NF400-REW	NF400-UEW					
600 • 630	NF630-CW						NF630-SW/SEW		NF630-HEW	NF630-REW						
800	NF800-CEW						NF800-SW		NF800-HEW	NF800-REW	NF800-UEW					
1000 to 4000	NF1000-SEW~NF1600-SEW															

*1 The breaking capacity of NF30-FAU and NF50-FAU having a rated current of 5A is 1.5kA.

Table 4-6 440VAC

Trans. capacity (kVA)	30 or less	50 to 100	150 to 300				500 to 1000		1500 to 2000				2500 to 5000					
Breaking capacity (kA) (sym)	1.5	2.5	7.5	10	15	20	25	30	35 36	50	65	85	125	200				
30 • 32	NF32-SV																	
50 • 60 • 63	NF63-CV	NF63-SV	NF63-HV															
100 • 125	NF125-CV				NF125-SV		NF125-HV		NF125-SEV		NF125-HEV		NF125-RV		NF125-UV			
225 • 250	NF250-CV						NF250-SV					NF250-HV		NF250-RV		NF250-UV		
400	NF400-CW						NF400-SW/SEW		NF400-HEW	NF400-REW	NF400-UEW							
600 • 630	NF630-CW						NF630-SW/SEW		NF630-HEW	NF630-REW								
800	NF800-CEW						NF800-SW		NF800-HEW	NF800-REW	NF800-UEW							
1000 to 4000	NF1000-SEW~NF1600-SEW																	

ELCB (NV)

Table 4-7 230VAC

3ph trans. capacity (kVA)	30 or less	50 to 75	100	150 to 300				500 to 1500			2000 to 3000							
1ph trans. capacity (kVA)	20 or less	30 to 50	75	100 to 150	200 to 300													
Breaking capacity (kA) (sym)	1.5	2.5	5	7.5	10	15	25	30	35 36	50	85	100	125	170				
30 • 32	NF30-FAU (*1)	NF32-SV																
50 • 60 • 63	NF50-FAU (*1)	NF63-CV	NF63-SV	NF63-HV														
100 • 125	NF125-CV				NF125-SV		NF125-HV		NF125-SEV		NF125-HEV							
225 • 250	NF250-CV						NF250-SV				NF250-SEV		NF250-HV					
400	NF400-CW						NF400-SW/SEW		NF400-HEW	NF400-REW								
600 • 630	NF630-CW						NF630-SW/SEW		NF630-HEW	NF630-REW								
800	NF800-SEW						NF800-SW		NF800-HEW	NF800-REW								

*1 The interrupting current of NF30-FAU and NF50-FAU having a rated current of 5A is 1.5kA.

Table 4-8 440VAC

Trans. capacity (kVA)	30 or less	50 to 100	150 to 300				500 to 1000		1500 to 2000				2500 to 5000					
Breaking capacity (kA) (sym)	2.5	5	7.5	10	15	25	30	35 36	50	65	70	85	125	170				
30 • 32	NV32-SV																	
50 • 60 • 63	NV63-CV	NV63-SV	NV63-HV															
100 • 125	NV125-CV				NV125-SV		NV125-HV		NV125-SEV		NV125-HEV							
225 • 250	NV250-CV						NV250-SV				NV250-SEV		NV250-HV					
400	NV400-CW						NV400-SW/SEW		NV400-HEW	NV400-REW								
600 • 630	NV630-CW						NV630-SW/SEW		NV630-HEW	NV630-REW								
800	NV800-SEW						NV800-SW		NV800-HEW	NV800-REW								

In some lighting apparatuses, the service life of circuit breakers may be reduced by the influence of inrush current applied when the lamps are turned on. Periodically check for abnormal temperature rise of the circuit breaker in such an apparatus.

5. Selection of Circuit Breaker for Electric Lamp or Heater Circuit

The maximum working current is 0.8 times the rated current of each circuit breaker.

MCCB (NF)

Table 4-9 230VAC

Max. working current (A)	Rated current of circuit breaker (A)	Breaking capacity (kA) 230VAC (Icu sym)												
		5	7.5	10	15	25	30	36	50	85	100	125	150	170
12	15													
16	20													
24	30													
32	40													
40	50													
48	60													
60	75													
80	100													
100	125													
120	150													
140	175													
160	200													
180	225													
200	250													
240	300													
280	350													
320	400													
400	500													
480	600													
560	700													
640	800													
800	1000													
960	1200													
1120	1400													
1280	1600													

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

Table 4-10 440VAC

Max. working current (A)	Rated current of circuit breaker (A)	Breaking capacity (kA) 440VAC (Icu sym)													
		2.5	5	7.5	10	25	30	36	45	50	70	85	125	150	200
12	15														
16	20														
24	30														
32	40														
40	50														
48	60														
60	75														
80	100														
100	125														
120	150														
140	175														
160	200														
180	225														
200	250														
240	300														
280	350														
320	400														
400	500														
480	600														
560	700														
640	800														
800	1000														
960	1200														
1120	1400														
1280	1600														

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

ELCB (NV)

Table 4-11 230VAC

Max. working current (A)	Rated current (A)	Breaking capacity (kA) 230VAC (Icu sym)										
		2.5	5	7.5	10	15	25	30	36	50	85	100
12	15											
16	20											
24	30											
32	40											
40	50											
48	60											
60	75											
80	100											
100	125											
120	150											
140	175											
160	200											
180	225											
200	250											
240	300											
280	350											
320	400											
400	500											
480	600											
560	700											
640	800											

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

Table 4-12 440VAC

Max. working current (A)	Rated current (A)	Breaking capacity (kA) 440VAC (Icu sym)										
		2.5	5	7.5	10	25	30	36	45	50	70	85
12	15											
16	20											
24	30											
32	40											
40	50											
48	60											
60	75											
80	100											
100	125											
120	150											
140	175											
160	200											
180	225											
200	250											
240	300											
280	350											
320	400											
400	500											
480	600											
560	700											
640	800											

Please refer to the detailed specifications of the rated current that can be manufactured with each model name.

6. Selection of Circuit Breaker for Motor Branch Circuit

(direct-to-line starting or Y-Δ starting)

MCCB (NF)

Table 4-13 200/220VAC for 3-phase induction motor

For 4-pole motor	Electromagnetic contactor	Breaking capacity (kA) 230VAC (Icu sym)																	
		7.5		15		25		30(*1)		50		85		100		150(*2)			
		Model	Heater nominal (A)	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating		
Output (kW)	Full-load current (A)																		
0.1	0.7	N10-N21	—	0.7	NF32-SV (3)	NF63-SV (3)	NF63-HV (10)			NF125-SV (15)			NF125-HV (15)			NF125-UV (15)			
0.2	1.2		1.3	NF32-SV (3)	NF63-SV (3)	NF63-HV (10)			NF125-SV (15)			NF125-HV (15)			NF125-UV (15)				
0.4	2.1	N10-N21	—	2.1	NF32-SV 5	NF63-SV 5	NF63-HV (10)			NF125-SV (15)			NF125-HV (15)			NF125-UV (15)			
0.75	3.7	N10-N21	—	3.6	NF32-SV 10	NF63-SV 10	NF63-HV 10			NF125-SV (15)			NF125-HV (15)			NF125-UV (15)			
1.5	6.4	N10-N25	—	6.6	NF32-SV 15	NF63-SV 15	NF63-HV 15			NF125-SV (15)			NF125-HV 15			NF125-UV (15)			
2.2	9.1	N10-N35	—	9	NF32-SV 20	NF63-SV 20	NF63-HV 20			NF125-SV 20			NF125-HV 20			NF125-UV 20			
3.7	15	N18-N35	—	15	NF32-SV 30	NF63-SV 30	NF63-HV 30			NF125-SV 30			NF125-HV 30			NF125-UV 30			
5.5	22	N25-N35	—	22	NF63-CV 50	NF63-SV 50	NF63-HV 50			NF125-SV 50			NF125-HV 50			NF125-UV 50			
7.5	29	N35-N50-N80	—	29	NF63-CV 60	NF63-SV 60	NF63-HV 60			NF125-SV 60			NF125-HV 60			NF125-UV 60			
11	44	N50-N95	—	42						NF125-CV 75	NF125-SV 75		NF125-HV 75			NF125-UV 75			
15	55	N65-N125	—	54						NF125-CV 100	NF125-SV 100		NF125-HV 100			NF125-UV 100			
5.5	22	—	—	22	NF63-CV 50	NF63-SV 50	NF63-HV 50			NF125-SV 50			NF125-HV 50			NF125-UV 50			
7.5	29	—	—	29	NF63-CV 60	NF63-SV 60	NF63-HV 60			NF125-SV 60			NF125-HV 60			NF125-UV 60			
11	44	—	—	42						NF125-CV 75	NF125-SV 75		NF125-HV 75			NF125-UV 75			
15	55	—	—	54						NF125-CV 100	NF125-SV 100		NF125-HV 100			NF125-UV 100			
18.5	67	N80-N125	—	67						NF125-CV 100	NF125-SV 100		NF125-HV 100			NF125-UV 100			
22	85	N95-N150	—	82						NF250-CV 150			NF250-HV 150			NF250-UV 150			
30	110	N125-N220	—	105						NF250-CV 175			NF250-HV 175			NF250-UV 175			
37	130	N150-N220	—	125						NF250-CV 225			NF250-HV 225			NF250-UV 225			
45	164	N180-N400	—	150						NF400-CW 400	NF400-SW 300	NF400-HEW 250	NF400-REW 250	NF400-UEW 250					
55	195	N220-N400	—	180						NF630-CW 500	NF400-SW 300	NF400-HEW 300	NF400-REW 300	NF400-UEW 300					
75	267	N300-N400 (N600)	—	250						NF630-CW 600	NF630-SW 500	NF400-HEW 400	NF400-REW 400	NF400-UEW 400					
90	320	N300-N400 (N600-N800)	—	330						NF800-CEW 600	NF630-SW 600	NF630-HEW 500	NF630-REW 500	NF800-UEW 500					
110	385	N300-N400 (N600-N800)	—	330						NF800-CEW 600	NF630-SEW 600	NF630-HEW 600	NF630-REW 600	NF800-UEW 600					
132	470	(N600-N800)	—	500											NF1000-SEW 700				
160	580	(N600-N800)	—	500											NF1250-SEW 800				
200	720	(N800)	—	600											NF1600-SEW 1000				

Notes *1 The breaking capacity of NF250-SV and NF250-SEV is 36kA. *2 The breaking capacity of NF400-SW is 45kA. *3 The breaking capacity of NF400- to 800-REW is 125kA.

Table 4-14 400/440VAC for 3-phase induction motor

For 4-pole motor	Electromagnetic contactor	Breaking capacity (kA) 415VAC (Icu sym)																	
		2.5		7.5		10		25		30(*1)		50(*2)		70		150(*3)			
		Model	Heater nominal (A)	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating		
Output (kW)	Full-load current (A)																		
0.2	0.6	N10-N21	—	0.7	NF32-SV (3)	NF63-SV (3)	NF63-HV 10			NF125-SV (15)	NF125-HV (15)					NF125-UV (15)			
0.4	1.1	N10-N21	—	1.3	NF32-SV (3)	NF63-SV (3)	NF63-HV 10			NF125-SV (15)	NF125-HV (15)					NF125-UV (15)			
0.75	1.9	N10-N21	—	1.7	NF32-SV 5	NF63-SV 5	NF63-HV 10			NF125-SV (15)	NF125-HV (15)					NF125-UV (15)			
1.5	3.2	N10-N21	—	3.6	NF32-SV 10	NF63-SV 10	NF63-HV 10			NF125-SV (15)	NF125-HV (15)					NF125-UV (15)			
2.2	4.6	N10-N21	—	5	NF32-SV 10	NF63-SV 10	NF63-HV 10			NF125-SV (15)	NF125-HV (15)					NF125-UV (15)			
3.7	7.5	N11-N35	—	6.6	NF32-SV 20	NF63-SV 20	NF63-HV 20			NF125-SV 20	NF125-HV 20					NF125-UV 20			
5.5	11	N18-N35	—	11	NF32-SV 30	NF63-SV 30	NF63-HV 30			NF125-SV 30	NF125-HV 30					NF125-UV 30			
7.5	15	N20-N35+N50	—	15	NF32-SV 30	NF63-SV 30	NF63-HV 30			NF125-SV 30	NF125-HV 30					NF125-UV 30			
11	22	—	—	22	NF63-CV 60	NF63-SV 60	NF63-HV 60			NF125-SV 60	NF125-HV 60					NF125-UV 60			
15	28	—	—	28	NF63-CV 60	NF63-SV 60	NF125-CV 60			NF125-SV 60	NF125-HV 60					NF125-UV 60			
18.5	34	N50-N95	—	35	NF63-CV 60	NF63-SV 60	NF125-CV 60			NF125-SV 60	NF125-HV 60					NF125-UV 60			
22	42	N50-N95	—	42						NF125-SV 75	NF125-HV 75					NF125-UV 75			
30	55	N65-N125	—	54						NF125-SV 100	NF125-HV 100					NF125-UV 100			
37	65	N80-N150	—	67						NF125-SV 100	NF125-HV 100					NF125-UV 100			
45	82	N95-N150	—	82						NF250-CV 125	NF250-SV 125					NF250-UV 125			
5.5	11	—	—	11	NF63-CV 30	NF63-SV 30	NF63-HV 30			NF125-SV 30	NF125-HV 30					NF125-UV 30			
7.5	15	—	—	15	NF63-CV 40	NF63-SV 40	NF63-HV 40			NF125-SV 40	NF125-HV 40					NF125-UV 40			
11	22	—	—	22	NF63-CV 50	NF63-SV 50	NF63-HV 50			NF125-SV 50	NF125-HV 50					NF125-UV 50			
15	28	—	—	28	NF63-CV 60	NF63-SV 60	NF125-CV 60			NF125-SV 60	NF125-HV 60					NF125-UV 60			
18.5	34	—	—	35	NF63-CV 60	NF63-SV 60	NF125-CV 60			NF125-SV 60	NF125-HV 60					NF125-UV 60			
22	42	—	—	42						NF125-SV 75	NF125-HV 75					NF125-UV 75			
30	55	—	—	54						NF125-SV 100	NF125-HV 100					NF125-UV 100			
37	65	—	—	67						NF125-SV 100	NF125-HV 100					NF125-UV 100			
45	82	—	—	82						NF250-CV 150	NF250-SV 150					NF250-UV 150			
55	96	N125-N220	—	105						NF250-CV 175	NF250-SV 175					NF250-UV 175			
75	134	N150-N220	—	125						NF250-CV 225	NF250-SV 225					NF250-UV 225			
90	160	N180-N400	—	150						NF250-CV 225	NF250-SV 225					NF250-UV 225			
110	192	N180-N400	—	180						NF400-SW 350	NF400-HEW 300	NF400-REW 225	NF400-UEW 225	NF400-UV 225					
132	233	N220-N400	—	250						NF400-SW 400	NF400-HEW 400	NF400-REW 400	NF400-UEW 400	NF400-UV 400					
160	290	N300+N400+N600	—	250						NF630-SW 500	NF630-HEW 500	NF630-REW 500	NF630-UEW 500	NF630-UV 500					
200	360	N300+N400+N600+N800	—	330						NF630-SW 600	NF630-HEW 600	NF630-REW 600	NF630-UEW 600	NF630-UV 600					</td

■ ELCB (NV)**Table 4-15 200/220VAC for 3-phase induction motor**

Output (kW)	Full-load current (A)	Electromagnetic contactor		Breaking capacity (kA) 230VAC (Icu sym)											
				7.5		15(*1)		25		30(*2)		50		85	
		Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
0.1	0.7	N10-N21	0.7	NV63-CV	(5)	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)		
0.2	1.2	N10-N21	1.3											NV125-HV	(15)
0.4	2.1	N10-N21	2.1	NV63-CV	5	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
0.75	3.7	N10-N21	3.6	NV63-CV	10	NV32-SV	(15)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
1.5	6.4	N10-N25	6.6	NV63-CV	15	NV32-SV	15	NV63-HV	15			NV125-SV	15	NV125-HV	(15)
2.2	9.1	N10-N35	9	NV63-CV	20	NV32-SV	20	NV63-HV	20			NV125-SV	20	NV125-HV	20
3.7	15	N18-N35	15	NV63-CV	30	NV32-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30
5.5	22	N25 • N35 • N50 • N65	22	NV63-CV	50	NV32-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50
7.5	29	N35 • N50-N80	29	NV63-CV	60	NV32-SV	60	NV63-HV	60			NV125-SV	60	NV125-HV	60
11	44	N50-N95	42							NV125-CV	75	NV125-SV	75	NV125-HV	75
15	55	N65-N125	54							NV125-CV	100	NV125-SV	100	NV125-HV	100
5.5	22	-	22	NV63-CV	50	NV32-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50
7.5	29	-	29	NV63-CV	60	NV32-SV	60	NV63-HV	60	NV125-CV	60	NV125-SV	60	NV125-HV	60
11	44	-	42							NV125-CV	75	NV125-SV	75	NV125-HV	75
15	55	-	54							NV125-CV	100	NV125-SV	100	NV125-HV	100
18.5	67	N80-N125	67							NV125-CV	100	NV125-SV	100	NV125-HV	100
22	85	N95-N150	82							NV250-CV	150			NV250-HV	150
30	110	N125-N220	105							NV250-CV	175			NV250-HV	175
37	130	N150-N220	125							NV250-CV	225			NV250-HV	225
45	164	N180-N400	150							NV400-CW	400	NV400-SW	300	NV400-HEW	250
55	195	N220-N400	180							NV630-CW	500	NV400-SW	300	NV400-HEW	300
75	267	N300 • N400 • (N600)	250							NV630-CW	600	NV400-SEW	400	NV400-HEW	400
90	320	N300 • N400 • (N600 • N800)	330							NV630-SEW	500	NV630-HEW	500		
110	385	N300 • N400 • (N600 • N800)	330							NV630-SEW	600	NV630-HEW	600		

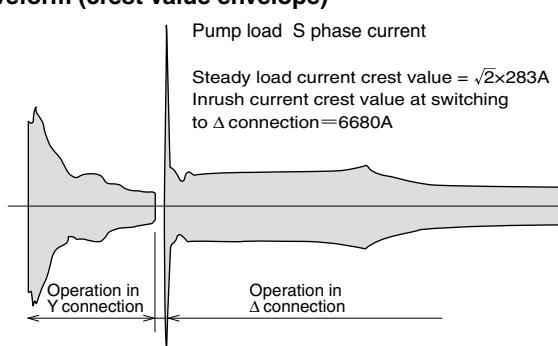
Notes *1 The breaking capacity of NV32-SV is 10kA. *2 The breaking capacity of NV250-CV is 36kA.

Table 4-16 400/440VAC for 3-phase induction motor

Output (kW)	Full-load current (A)	Electromagnetic contactor		Breaking capacity (kA) 415VAC (Icu sym)													
				2.5		5		7.5		10		25		30(*1)		50(*2)	
		Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating	Model	Rating
0.2	0.6	N10-N21	0.7	NV63-CV	(5)	NV32-SV	(5)	NV63-SV	(5)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
0.4	1.1	N10-N21	1.3	NV63-CV	(5)	NV32-SV	(5)	NV63-SV	(5)	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
0.75	1.9	N10-N21	1.7	NV63-CV	5	NV32-SV	5	NV63-SV	5	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
1.5	3.2	N10-N21	3.6	NV63-CV	10	NV32-SV	10	NV63-SV	10	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
2.2	4.6	N10-N21	5	NV63-CV	10	NV32-SV	10	NV63-SV	10	NV63-HV	(15)			NV125-SV	(15)	NV125-HV	(15)
3.7	7.5	N11-N35	6.6	NV63-CV	20	NV32-SV	20	NV63-SV	20	NV63-HV	20			NV125-SV	20	NV125-HV	20
5.5	11	N18-N35	11	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30
7.5	15	N20-N35 • N50	15	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30
11	22	N25 • N35 • N50 • N65	22	NV63-CV	50			NV63-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50
15	28	N35 • N50-N80	28	NV63-CV	60			NV63-SV	60	NV63-HV	60			NV125-SV	60	NV125-HV	60
18.5	34	N50-N95	35							NV125-CV	60			NV125-SV	60	NV125-HV	60
22	42	N50-N95	42							NV125-CV	75			NV125-SV	75	NV125-HV	75
30	55	N65-N125	54							NV125-CV	100			NV125-SV	100	NV125-HV	100
37	65	N80-N150	67							NV125-CV	100			NV125-SV	100	NV125-HV	100
45	82	N95-N150	82									NV250-CV	125	NV250-SV	125	NV250-HV	125
5.5	11	-	11	NV63-CV	30	NV32-SV	30	NV63-SV	30	NV63-HV	30			NV125-SV	30	NV125-HV	30
7.5	15	-	15	NV63-CV	40			NV63-SV	40	NV63-HV	40			NV125-SV	40	NV125-HV	40
11	22	-	22	NV63-CV	50			NV63-SV	50	NV63-HV	50			NV125-SV	50	NV125-HV	50
15	28	-	28	NV63-CV	60			NV63-SV	60	NV63-HV	60			NV125-SV	60	NV125-HV	60
18.5	34	-	35							NV125-CV	60			NV125-SV	60	NV125-HV	60
22	42	-	42							NV125-CV	75			NV125-SV	75	NV125-HV	75
30	55	-	54							NV125-CV	100			NV125-SV	100	NV125-HV	100
37	65	-	67							NV125-CV	100			NV125-SV	100	NV125-HV	100
45	82	-	82									NV250-CV	150	NV250-SV	150	NV250-HV	150
55	96	N125-N220	105									NV250-CV	175	NV250-SV	175	NV250-HV	175
75	134	N150-N220	125									NV250-CV	225	NV250-SV	225	NV250-HV	225
90	160	N180-N400	150														
110	192	N180-N400	180														
132	233	N220-N400	250														
160	290	N300 • N400 • (N600)	250														
200	360	N300 • N400 • (N600 • N800)	330														

Notes *1 The breaking capacity of NV250-SV and NV250-SEW is 36kA. *2 The breaking capacity of NV400-SW is 45kA.

Remark: 1. For the selecting conditions, please refer to the remarks on page 73.

Example of Y-Δ starting current waveform (crest value envelope)

7. Selection of Motor Protection Breaker

■Motor Protection Breakers

In principle, the operating characteristic curve of a selected motor breaker must be lower than the heat characteristic of the motor. The following table shows the rated capacities of standard squirrel-cage 3-phase motors (4-pole) made by Mitsubishi Electric. The starting conditions are shown in the table.

Table 4-17 for 3-phase induction motor

Model	Motor Protection Breaker	NF32-SV	NF63-CV	NF63-SV	NF125-SV	NF250-SV	
Rated breaking capacity (kA)	200/230V	7.5	7.5	15	50	85	
	415/440V	2.5	2.5	7.5	30	36	
600% starting time limit (s)		2	32A or less: 2 40A or more: 7	32A or less: 2 40A or more: 7	32A or less: 2 40A or more: 7	5	
Startup inrush current limit (%)		1200	1200	1200	1200	1100	
Example of rated capacity of motor (kW)		Rated current	Rated current	Rated current	Rated current	Rated current	Model for combination with electromagnetic contactor
200/220V	400/440V						
0.4							
0.2							
0.4							
0.75	1.5	4	4	4			
	2.2	5	5	5			
1.5		7.1	7.1	7.1			
	3.7	8	8	8			
2.2		10	10	10			
	5.5	12	12	12	(12.5)		
3.7	7.5	16	16	16	(16)		
	11	25	25	25	(25)		
5.5							
7.5	15	32	32	32	32		
	18.5		40	40	(40)		
11	22		45	45	45		
15	30				63		
18.5	37				71		
22	45				90		
	55				100		
	55						
30						125	
37	75					150	
45	90					175	
55	110					200	
						225	N220-N400

- Remarks:
- For the rated current in parentheses, breakers will be manufactured to order.
 - The approximate values of inrush current at direct-to-line starting are shown below. Up to 7.5kW: 1000% 11kW or more: 1200% 75kW or more: 1400% When the starting current is large and the starting power factor is low, a combination with an electromagnetic switch selected in accordance with "Table of selection of circuit breaker for motor branch circuit" shown on page 77 is suitable.


Cautions

- Note that any circuit breaker operates when the startup inrush current, starting current and starting time exceed the conditions shown in the above table. Particularly, high-efficiency motors generally have higher starting current and lower starting torque compared to general-purpose motors, and motor breakers cannot be used for such motors.
- Note that a circuit breaker may operate when an electromagnetic contactor is opened or closed while a motor is running.
- Select a motor breaker having rated current approx. 1.0 to 1.1 times higher than the full load current of motor.

8. Selection of Circuit Breaker for Inverter Circuit

■ Selection of Circuit Breaker for Inverter Circuit

Since current containing harmonic components will flow, the rated current of circuit breaker must be approx. 1.4 times the inverter input current.

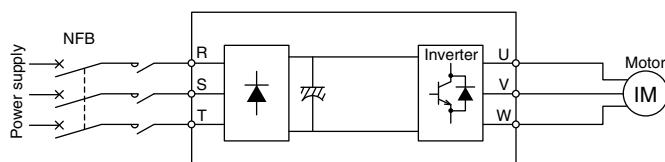

Install MCCB or ELCB on the primary side (power supply side) of the inverter. If it is installed on the secondary side, it may cause electronic circuit trouble or overheating.

Note The life cycle of the circuit breaker for the circuit on the inverter primary side will be reduced under the influence of transient inrush current. Install a switch.

Table 4-18 3-phase 200V class

Inverter input capacity kVA	Rated current of circuit breaker A	Inverter input capacity kVA	Rated current of circuit breaker A
5.5	30	41	175
9	40	52	225
12	50	66	300
17	75	80	350
20	100	100	500
28	125	110	500
34	150	132	600


■ Selection of rated sensitivity current of Earth Leakage Circuit Breaker for Inverter Circuit

Select the rated sensitivity current as stated below.

Circuit breakers for harmonics and surge: Rated sensitivity current $I_{\Delta n} \geq 10 \times \{I_{g1} + I_{gn} + I_{g2} + I_{gm}\}$

General circuit breakers: Rated sensitivity current $I_{\Delta n} \geq 10 \times \{I_{g1} + I_{gn} + 3 \times (I_{g2} + I_{gm})\}$

Example 1

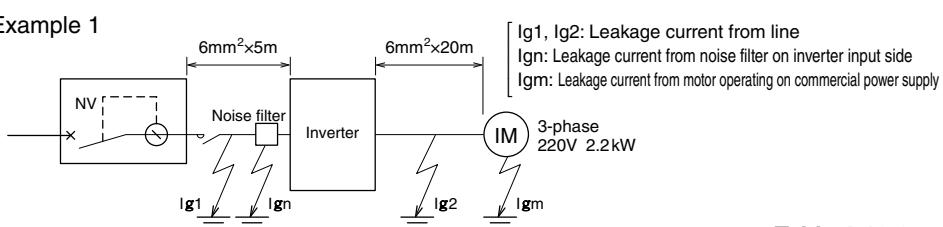

Example 2

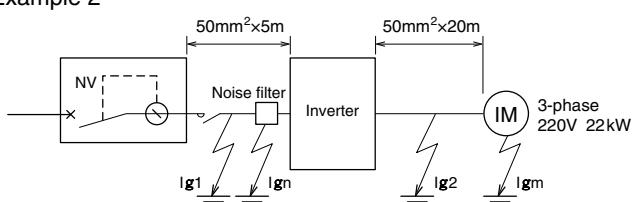


Table 4-19-1

Examples of leakage current from line when IV cable is wired in close contact with ground (wiring in metallic conduit)
(3-phase 220V 60Hz)

Wire size mm ²	Leakage current/km mA
6	135
10	140
16	169
25	176
35	203
50	205
70	241
95	247

Table 4-19-2

Example of leakage current from 3-phase induction motor (220V 60Hz)

Motor output (kW)	Leakage current (mA)
2.2	0.2
3.7	0.29
5.5	0.32
7.5	0.42
11	0.55
15	0.63
18.5	0.72
22	0.8
30	0.96
37	1.1

Example of selection 1

	Breaker for harmonics and surge	General breaker
Leakage current I_{g1}	$135 \times \frac{5}{1000} = 0.675$	$135 \times \frac{5}{1000} = 0.675$
Leakage current I_{gn}	0 (without noise filter)	
Leakage current I_{g2}	$135 \times \frac{20}{1000} = 2.7$	$135 \times \frac{20}{1000} \times 3 = 8.1$
Leakage current I_{gm}	0.18	$0.18 \times 3 = 0.54$
Total leakage current I_g	3.555	11.465
Rated sensitivity current ($> I_g \times 10$)	100	200

Remarks: 1. Circuit breakers for harmonics and surge can detect earth fault on the secondary side of inverter only when the operating frequency is 120Hz or less. In the case of star connection by neutral point grounding method, the sensitivity current for earth fault on the inverter secondary side is degraded. In this case, for protective ground for load device, apply Class C grounding (10Ω or less).

2. For general circuit breakers, the leakage current from the line between inverter and motor shall be calculated as three times the leakage current at the commercial frequency in consideration of harmonic content.

3. For the model names of circuit breakers for harmonics and surge, refer to the specification list in Section 2 of this document. Models not for harmonics and surge are general breakers.

Example of selection 2

	Breaker for harmonics and surge	General breaker
Leakage current I_{g1}	$205 \times \frac{5}{1000} = 1.025$	$205 \times \frac{5}{1000} = 1.025$
Leakage current I_{gn}	0 (without noise filter)	
Leakage current I_{g2}	$205 \times \frac{20}{1000} = 4.1$	$205 \times \frac{20}{1000} = 12.3$
Leakage current I_{gm}	0.72	$0.72 \times 3 = 2.16$
Total leakage current I_g	5.845	15.485
Rated sensitivity current ($> I_g \times 10$)	100	500

9. Selection of Circuit Breaker for Transformer Primary Side

- Notes 1. The life cycle of the circuit breaker for the circuit on the transformer primary side will be significantly reduced under the influence of excited inrush current. Install a switch to open and close the circuit.
2. Select a circuit breaker based on the example of excited inrush current of each transformer. When using a circuit breaker for a transformer, check the magnitude of excited inrush current with the transformer manufacturer.

■ Single-phase 210V

Table 4-20-1 MCCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A
5	23.8	45	NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV NF125-SEV, NF125-HEV	60 100 50	37	NF63-CV(*1) NF125-CV(*1) NF125-CV, NF125-SV	50 60 75	24	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 50 (50) 50
7.5	35.7	45	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	150 125	37	NF125-SEV NF125-CV(*1) NF250-CV, NF250-SV	50 75 125	24	NF63-CV(*1) NF125-CV(*1)(*2) NF125-CV, NF125-SV	50 60(50) 75
10	47.6	43	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 125	37	NF125-CV(*1) NF250-CV, NF250-SV NF250-SEV	100 150 125	24	NF125-CV(*1) NF125-CV, NF125-SV	60 100
15	71.4	43	NF400-CW NF400-SW NF400-SEW, NF400-HEW	400 300 200	35	NF250-CV, NF250-SV NF250-SEV	225 125	23	NF125-CV(*1) NF250-CV, NF250-SV	100 150
20	95.2	43	NF400-SW NF400-SEW, NF400-HEW	400 200	35	NF400-SW NF400-SEW	350 200	23	NF250-CV, NF250-SV NF250-SEV	200 125
30	143	37	NF400-SEW, NF400-HEW NF630-SW	200 500	34	NF400-SEW	200	23	NF400-SW NF400-SEW	300 200
50	238	35	NF630-SEW(*1) NF1000-SEW	300 500	34	NF630-SEW	300	23	NF400-SEW(*1) NF630-SEW	300 300
75	357	30	NF800-SEW(*1) NF1250-SEW	400 600	29	NF800-SEW(*1)	400	22	NF630-SEW	400
100	476	27	NF1000-SEW	800	28	NF1600-SEW	800	20	NF800-SEW(*1)	600
150	714	24	—	—	24	—	—	19	NF1600-SEW	800
200	952	21	—	—	22	—	—	19	—	—
300	1429	17	—	—	18	—	—	16	—	—
500	2381	—	—	—	17	—	—	—	—	—

Table 4-20-2 ELCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A	Crest value of first wave (multiple)	Model	Rating A
5	23.8	45	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	37	NV125-CV, NV125-SV NV125-SEV	75 50	24	NV63-CV, NV63-SV NV125-CV NV125-SV NV125-SEV	50 60 50 50
7.5	35.7	45	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	37	NV125-SEV NV250-CV, NV250-SV	50 125	24	NV125-CV, NV125-SV NV125-SEV	75 50
10	47.6	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 125	37	NV250-CV, NV250-SV NV250-SEV	150 125	24	NV125-CV, NV125-SV NV250-CV, NV250-SV	100 125
15	71.4	43	NV400-CW NV400-SW NV400-SEW, NV400-HEW	400 300 200	35	NV250-CV, NV250-SV NV250-SEV	225 125	23	NV250-CV, NV250-SV NV250-SEV	150 125
20	95.2	43	NV400-SW NV400-SEW, NV400-HEW	400 200	35	NV400-SW NV400-SEW	350 200	23	NV250-CV, NV250-SV NV250-SEV	200 125
30	143	37	NV400-SEW, NV400-HEW NV630-SEW	200 300	34	NV400-SEW	200	23	NV400-SW NV400-SEW	300 200
50	238	35	—	—	34	NV630-SEW	300	23	NV630-SEW NV800-SEW	300 400
75	357	30	—	—	29	—	—	22	NV630-SEW	400
100	476	27	—	—	28	—	—	20	—	—
150	714	24	—	—	24	—	—	19	—	—
200	952	21	—	—	22	—	—	19	—	—
300	1429	17	—	—	18	—	—	16	—	—
500	2381	—	—	—	17	—	—	—	—	—

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

*2 The circuit breakers with rating in parentheses are special models.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

2. The crest value of the first wave of excited inrush current shall be calculated based on the multiple for the crest value of the first wave in the table, and the calculated value shall not exceed the lower limit crest value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the crest value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

Single-phase 420V

Table 4-21-1 MCCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	11.9	45	NF63-CV(*1) NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV	30 50 50	37	NF32-SV NF63-CV, NF63-SV NF125-SV	15 15 15	24	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 40 15
7.5	17.9	45	NF63-CV(*1) NF125-CV, NF125-SV, NF125-HV	50 75	37	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 60 60	24	NF32-SV, NF63-CV, NF63-SV NF125-SV NF125-CV(*2)	30 30 (50)
10	23.8	43	NF125-CV(*1) NF125-CV, NF125-SV, NF125-HV	60 100	37	NF63-CV(*1) NF125-CV, NF125-SV	50 75	24	NF63-CV(*1) NF63-CV, NF63-SV NF125-CV(*2) NF125-SV	30 50 (50) 50
15	35.7	43	NF125-CV(*1) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	35	NF125-CV(*1) NF125-CV, NF125-SV	60 100	23	NF63-CV(*1) NF125-CV(*1)(*2) NF125-CV, NF125-SV	50 60(50) 75
20	47.6	43	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 125	35	NF125-CV(*1) NF250-CV, NF250-SV NF250-SEV	100 150 125	23	NF125-CV(*1) NF125-CV, NF125-SV	60 100
30	71.4	37	NF250-SEV, NF250-HEV NF400-CW NF400-SW	125 350 250	34	NF250-CV, NF250-SV NF250-SEV	225 125	23	NF125-CV(*1) NF250-CV, NF250-SV	100 150
50	119	35	NF400-SW NF400-SEW, NF400-HEW	400 200	34	NF400-SW NF400-SEW	400 200	23	NF250-SEV	150
75	179	30	NF400-SEW, NF400-HEW NF630-SW NF630-SEW, NF630-HEW	200 500 300	29	NF400-SEW	200	22	NF400-SW NF400-SEW	400 200
100	238	27	NF400-SEW(*1) NF630-SW NF630-SEW, NF630-HEW	300 600 300	28	NF400-SEW(*1) NF630-SEW	300 300	20	NF400-SEW	350
150	357	24	NF630-SEW(*1)	400	-	-	-	19	NF400-SEW(*1) NF630-SEW	400 400
200	476	21	NF800-SEW(*1)	600	22	NF800-SEW(*1)	600	19	NF800-SEW(*1)	600
300	714	17	NF1250-SEW	800	18	NF1600-SEW	800	16	NF1250-SEW	800
500	1190	-	-	-	17	-	-	-	-	-

Table 4-21-2 ELCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	11.9	45	NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV, NV125-HV	50 60 50	37	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15	24	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15
7.5	17.9	45	NV125-CV, NV125-SV, NV125-HV	75	37	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	24	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30
10	23.8	43	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	37	NV125-CV, NV125-SV NV125-SEV	75 50	24	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50
15	35.7	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	35	NV125-CV, NV125-SV NV125-SEV	100 50	23	NV125-CV, NF125-SV NV125-SEV	75 50
20	47.6	43	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 125	35	NV250-CV, NV250-SV NV250-SEV	150 125	23	NV125-CV, NF125-SV NV125-SEV	100 60
30	71.4	37	NV250-SEV, NV250-HEV NV400-CW NV400-SW	125 350 250	34	NV250-CV, NV250-SV NV250-SEV	225 125	23	NV250-SV, NV250-SV NV250-SEV	150 125
50	119	35	NV400-SW NV400-SEW, NV400-HEW	400 200	34	NV400-SW NV400-SEW	400 200	23	NV250-SEV	150
75	179	30	NV400-SEW, NV400-HEW NV630-SEW, NV630-HEW	200 300	29	NV400-SEW	200	22	NV400-SW NV400-SEW	400 200
100	238	27	NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	300 400	28	NV630-SEW NV800-SEW	300 400	20	NV400-SEW	350
150	357	24	-	-	24	-	-	19	NV630-SEW NV800-SEW	400 400
200	476	21	-	-	22	-	-	19	-	-
300	714	17	-	-	18	-	-	16	-	-
500	1190	-	-	-	-	-	-	-	-	-

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

*2 The circuit breakers with rating in parentheses are special models.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

2. The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

■3-phase 210V

Table 4-21-3 MCCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	13.7	25	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	20 20 20	26	NF32-SV, NF63-CV, NF63-SV NF125-SV	20 20	18	NF32-SV, NF63-CV, NF63-SV NF125-SV	20 20
7.5	20.6	25	NF63-CV(*) NF63-CV, NF63-SV, NF63-HV NF125-CV(*) NF125-SV, NF125-HV	30 50 (50) 50	26	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	30 50 50	18	NF32-SV, NF63-CV, NF63-SV NF125-CV(*) NF125-SV	30 (50) 30
10	27.5	24	NF63-CV(*) NF63-CV, NF63-SV, NF63-HV NF125-CV(*) NF125-CV, NF125-SV, NF125-HV	40 60 50 60	26	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 60 60	18	NF63-CV, NF63-SV NF125-CV(*) NF125-SV	50 (50) 50
15	41.2	24	NF63-CV(*) NF125-CV, NF125-SV, NF125-HV	50 100	26	NF125-CV(*) NF125-CV, NF125-SV	60 100	18	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	50 60 60
20	55.0	20	NF125-CV(*) NF125-CV, NF125-SV, NF125-HV	75 100	26	NF125-CV(*) NF125-SEV NF250-CV, NF250-SV	75 75 125	18	NF125-CV(*) NF125-CV, NF125-SV	75 100
30	82.5	20	NF125-CV(*) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	26	NF250-CV, NF250-SV NF250-SEV	200 125	18	NF125-CV(*) NF250-CV, NF250-SV	100 150
50	137	20	NF250-SEV, NF250-HEV NF400-CW NF400-SW	175 350 250	23	NF400-CW NF400-SW NF400-SEW	400 300 200	16	NF250-CV, NF250-SV NF250-SEV	200 175
75	206	21	NF400-SW NF400-SEW, NF400-HEW	400 250	18	NF400-SW NF400-SEW	350 250	14	NF400-SW NF400-SEW	300 250
100	275	21	NF400-SEW(*) NF630-SW NF630-SEW, NF630-HEW	350 600 350	17	NF400-SEW	350	13	NF400-SW NF400-SEW	350 300
150	412	17	NF630-SEW, NF630-HEW	500	14	NF630-SEW	500	13	NF630-SW NF630-SEW	500 500
200	550	16	NF800-SEW(*)	700	13	NF800-SEW	700	12	NF800-SEW	700
300	825	16	NF1600-SEW	1000	13	NF1250-SEW	1000	12	NF1000-SEW	1000
500	1375	-	-	-	11	NF1600-SEW	1600	11	NF1600-SEW	1600

Table 4-21-4 ELCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	13.7	25	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-SV, NV125-HV	20 20 20	26	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20	18	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20
7.5	20.6	25	NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV, NV125-HV	50 60 50	26	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50	18	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30
10	27.5	24	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV	60 60	26	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	18	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50
15	41.2	24	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	26	NV125-CV, NV125-SV NV125-SEV	100 50	18	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60
20	55.0	20	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 75	26	NV125-SEV NV250-CV, NV250-SV	75 125	18	NV125-CV, NV125-SV NV125-SEV	100 75
30	82.5	20	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	26	NV250-CV, NV250-SV NV250-SEV	200 125	18	NV250-CV, NV250-SV NV125-SEV	150 125
50	137	20	NV250-SEV, NV250-HEV NV400-CW NV400-SW	175 350 250	23	NV400-CW NV400-SW NV400-SEW	400 300 200	16	NV250-CV, NV250-SV NV250-SEV	200 175
75	206	21	NV400-SW NV400-SEW, NV400-HEW	400 250	18	NV400-SEW NV400-SW	250 350	14	NV400-SW NV400-SEW	300 250
100	275	21	NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	350 400	17	NV400-SEW	350	13	NV400-SW NV400-SEW	350 300
150	412	17	NV630-SEW, NV630-HEW	500	14	NV630-SEW NV800-SEW	500 500	13	NV630-SEW NV800-SEW	500 500
200	550	16	-	-	13	-	-	12	NV800-SEW	700
300	825	16	-	-	13	-	-	12	-	-
500	1375	-	-	-	11	-	-	11	-	-

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.

*2 The circuit breakers with rating in parentheses are special models.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

2. The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

3-phase 420V

Table 4-21-5 MCCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	6.9	32	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	10 10 15	26	NF32-SV, NF63-CV, NF63-SV	10 18	NF32-SV, NF63-CV, NF63-SV NF125-SV	10 15	
7.5	10.3	32	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-SV, NF125-HV	15 15 15	26	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 15	NF32-SV, NF63-CV, NF63-SV NF125-SV	15 15	
10	13.7	31	NF32-SV NF63-CV, NF63-SV, NF63-HV NF125-CV(*) NF125-SV, NF125-HV	20 20 (50) 20	26	NF32-SV NF63-CV, NF63-SV NF125-SV	20 20 20	NF32-SV NF63-CV, NF63-SV NF125-SV	20 20 20	
15	20.6	31	NF63-CV(*) NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV NF125-SEV, NF125-HEV	40 60 60 50	26	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	30 50 50	NF32-SV, NF63-CV, NF63-SV NF125-CV(*) NF125-SV	30 (50) 30	
20	27.5	26	NF63-CV(*) NF63-CV, NF63-SV, NF63-HV NF125-CV(*) NF125-CV, NF125-SV, NF125-HV	40 60 50 60	26	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 60 60	NF63-CV(*) NF63-CV, NF63-SV NF125-CV, NF125-SV	40 50 50	
30	41.2	24	NF63-CV(*) NF125-CV(*) NF125-CV, NF125-SV, NF125-HV	50 50 100	26	NF125-CV(*) NF125-CV, NF125-SV	60 100	NF63-CV(*) NF125-CV, NF125-SV	50 75	
50	68.7	22	NF125-CV(*) NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	100 150 125	23	NF125-CV(*) NF250-CV, NF250-SV	100 150	NF125-CV, NF125-SV	100	
75	103	15	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	150 125	18	NF250-CV, NF250-SV NF250-SEV	175 125	NF250-CV, NF250-SV	150	
100	137	15	NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV	200 175	17	NF250-CV, NF250-SV NF250-SEV	200 175	NF250-CV, NF250-SV	175	
150	206	15	NF400-CW NF400-SW NF400-SEW, NF400-HEW	400 300 250	14	NF400-SW NF400-SEW	300 250	NF400-CW NF400-SW NF400-SEW	400 250 250	
200	275	14	NF400-SW NF400-SEW, NF400-HEW	350 350	13	NF400-SW/SEW	350/350	NF400-SW NF400-SEW	350 350	
300	412	10	NF630-CW NF630-SW NF630-SEW, NF630-HEW	600 500 500	13	NF630-SEW	500	NF630-SW NF630-SEW	500 500	
500	687	15	NF800-SEW(*) NF1250-SEW	800 800	11	NF800-SEW	800	NF800-SEW	800	

Table 4-21-6 ELCB

Transformer capacity kVA	Rated primary current A	Example of transformer excited inrush current ①			Example of transformer excited inrush current ②			Example of transformer excited inrush current ③		
		Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A	Peak value of first wave (multiple)	Model	Rating A
5	6.9	32	NV32-SV NV63-CV, NV63-SV NV63-HV NV125-SV, NV125-HV	15 10 15(10) 15	26	NV32-SV NV63-CV, NV63-SV NV125-SV	15 10 15(10) 15	NV32-SV NV63-CV, NV63-SV NV125-SV	15 10 15(10) 15	
7.5	10.3	32	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-SV, NV125-HV	15 15 15	26	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15	NV32-SV NV63-CV, NV63-SV NV125-SV	15 15 15	
10	13.7	31	NV32-SV NV63-CV, NV63-SV, NV63-HV NV125-CV NV125-SV, NV125-HV	20 20 50 20	26	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20	NV32-SV NV63-CV, NV63-SV NV125-SV	20 20 20	
15	20.6	31	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	60 60 50	26	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50	NV32-SV NV63-CV, NV63-SV NV125-SV	30 30 30	
20	27.5	26	NV63-CV, NV63-SV, NV63-HV NV125-CV, NV125-SV, NV125-HV	60 60	26	NV63-CV, NV63-SV NV125-CV, NV125-SV	60 60	NV63-CV, NV63-SV NV125-CV NV125-SV	50 60 50	
30	41.2	24	NV125-CV, NV125-SV, NV125-HV NV125-SEV, NV125-HEV	100 50	26	NV125-CV, NV125-SV NV125-SEV	100 50	NV125-CV, NV125-SV	75	
50	68.7	22	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	23	NV250-CV, NV250-SV NV250-SEV	150 125	NV125-CV, NV125-SV	100	
75	103	15	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	150 125	18	NV250-CV, NV250-SV NV250-SEV	175 125	NV250-CV, NV250-SV	150	
100	137	15	NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	200 175	17	NV250-CV, NV250-SV NV250-SEV	200 175	NV250-CV, NV250-SV	175	
150	206	15	NV400-CW NV400-SW NV400-SEW, NV400-HEW	400 300 250	14	NV400-SW NV400-SEW	300 250	NV400-CW NV400-SW NV400-SEW	400 250 250	
200	275	14	NV400-SW NV400-SEW, NV400-HEW	350 350	13	NV400-SW NV400-SEW	350 350	NV400-SW NV400-SEW	350 350	
300	412	10	NV630-CW, NV630-SW NV630-SEW, NV630-HEW	600 500	13	NV630-SEW NV800-SEW	500 500	NV630-SEW	500	
500	687	15	-	-	11	-	-	11	-	

Notes *1 Examples of selection of high-instantaneous circuit breakers (special models) for primary side of transformer.


*2 The circuit breakers with rating in parentheses are special models.

Remarks: 1. For the circuit breakers whose rated current is adjustable, the rated current values are shown.

2. The peak value of the first wave of excited inrush current shall be calculated based on the multiple for the peak value of the first wave in the table, and the calculated value shall not exceed the lower limit peak value of instantaneous tripping current of circuit breaker. The circuit breakers are selected on condition that the transformer rated current value does not exceed 0.9 times the circuit breaker rated current. If the multiple for the peak value of the first wave is different from that shown in the table, a circuit breaker must be separately selected.

10. Combination for Selective Breaking

Combinations of main circuit breaker for coordination and branch circuit breakers capable of selective breaking and the breaking capacity (sym kA) for selective breaking at the installation point of the branch circuit breaker are shown below.

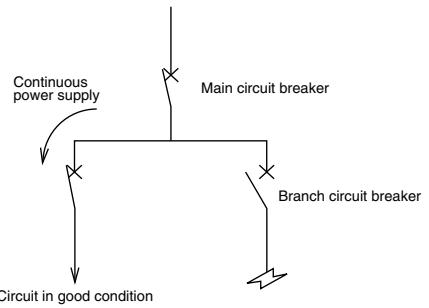

**Table 4-22-1 Combination for selective breaking
440VAC (IEC 60947-2)**

230VAC (IEC 60947-2)

		sym.kA												sym.kA													
		Main breaker												Circuit breaker													
		Branch breaker												Rated ultimate short-circuit breaking capacity of each breaker													
		Icu(kA)	36	65	36	65	42	65	42	65	36	42	65	85	85	85	85	100	85	100	85	100	85	100	125	125	
NF I S • L • H • NV	NF32-SV	2.5	1.5	1.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	7.5	7.5	
	NV32-SV	5	1.5	1.5	2.5	2.5	5	5	5	5	5	5	5	5	5	5	5	10	10	10	10	10	10	10	10	10	
	NF63-SV	7.5	1.5	1.5	2.5	2.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	15	15	15	15	15	15	15	15	15	
	NV63-SV																										
	NF63-HV	10	1.5	1.5	2.5	2.5	7.5	7.5	10	10	10	10	10	10	10	10	10	25	25	25	25	25	25	25	25	25	
	NV63-HV																										
	NF125-SV	25	—	—	2.5	2.5	5	5	10	10	10	10	10	10	10	10	10	22									
	NF125-SEV																										
	NV125-SV																										
	NV125-SEV																										
	NF125-SGV	36	—	—	2.5	2.5	7.5	7.5	15	15	15	15	15	15	15	15	15	36									
	NF125-LGV	50	—	—	2.5	2.5	7.5	7.5	15	15	15	15	15	15	15	15	15	42									
	NF125-HV	50	—	—	2.5	2.5	7.5	7.5	18	18	18	18	18	18	18	18	18	50									
	NF125-HGV	65	—	—	2.5	2.5	7.5	7.5	15	15	15	15	15	15	15	15	15	42									
	NF160-SGV	36	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF160-LGV	50	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	50									
	NF160-HGV	65	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF250-SV	36	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF250-LGV	50	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF250-HV	65	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	22									
	NF250-HEV																										
NF I S • L • H • NV	NF250-SV	36	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	22									
	NF250-LGV	50	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF250-HV	65	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF250-HEV																										
	NF250-HGV	65	—	—	—	—	—	—	10	10	10	10	10	10	10	10	10	25									
	NF400-SW	42	—	—	—	—	—	—	—	—	13	13	13	13	13	13	13	20									
	NF400-SV	42	—	—	—	—	—	—	—	—	9.5	9.5	13	13	13	13	13	20									
	NF400-SEW	42	—	—	—	—	—	—	—	—	9.5	9.5	10	10	10	10	10	20									
	NF400-HEW	65	—	—	—	—	—	—	—	—	9.5	9.5	10	10	10	10	10	20									
	NF400-REW	125	—	—	—	—	—	—	—	—	9.5	9.5	10	10	10	10	10	20									
NF I S • L • H • NV	NF630-SW	42	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	20									
	NF630-SEW																										
	NV630-SW																										
	NV630-SEW																										
	NF630-HEW	65	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	20									
	NV630-HEW																										
	NF63-CV	2.5	1.5	1.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5	7.5	7.5	
	NV63-CV																										
	NF125-CV	10	—	—	2.5	2.5	5	5	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10	10
	NV125-CV																										
NF I S • L • H • NV	NF250-CV	15	—	—	—	—	—	—	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	15	15	15	15	15	15	15	15	15	
	NV250-CV																										
	NF400-CW	25	—	—	—	—	—	—	—	—	10	10	10	10	10	10	10	10	20								
	NV400-CW																										
	NF630-CW	36	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	20								
	NV630-CW																										
	NF125-RGV	125	—	—	2.5	2.5	15	15	30	30	30	42	50	50	50	50	50	85									
	NF125-UV	200	—	—	2.5	2.5	15	15	30	30	30	42	50	50	50	50	50	85									
	NF250-RGV	125	—	—	—	—	—	—	15	15	15	25	25	25	25	25	25	85									
	NF250-UV	200	—	—	—	—	—	—	15	15	15	25	25	25	25	25	25	85									
NF I R • U	NF400-UEW	200	—	—	—	—	—	—	9.5	9.5	15	15	15	15	15	15	15	25									
	NV800-UEW	200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—									
	BH-D6 TYPE B, C, D	6	—	—	2.5	2.5	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6	6
	BH-D10 TYPE B, C, D	10	—	—	2.5	2.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	7.5	10	10	10	10	10	10	10	10	10	

Note *1 Rated currents of branch breakers are 50A or less.

Remarks: 1. It is considered that the instantaneous tripping characteristic values of main circuit breakers have been set to the maximum values.

2. For the selectivity in the overcurrent range, separately check the coordination on the operating characteristic curve.

Table 4-22-2 Combination for selective breakingwith AE-SW Series

Notes *1 The values in the table represent the max. rated current for both Series AE-SW air circuit breakers and branch breakers, and the selective co-ordination applies when the air circuit breakers instantaneous pick up is set to maximum.

*2 The numerals shown in parentheses are for AE-SW with MCR. (When set MCR.)

11. Combinations for Cascade Breaking

The following tables show the combinations of circuit breakers capable of cascade breaking and the cascade breaking capacities (symmetrical values, sym kA). The criteria conform to IEC 60947-2.

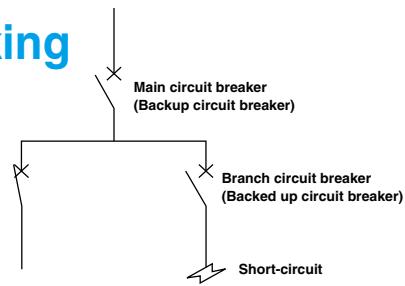


Table 4-23-1 440VAC (IEC 60947-2)

Note Rated currents of main breakers are maximum values.

Table 4-23-2 230VAC (IEC 60947-2)

Main breaker	Branch breaker	Rated ultimate short-circuit breaking capacity of each breaker (cuA)																		sym.kA			
		50	85	90	100	100	85	90	100	85	85	90	100	100	85	100	150	85	100	150	85	100	
NF	NF32-SV	7.5	42	50	50	50	50	10	10	10	10	10	10	10	10	10	-	-	-	-	-	-	-
I	NV32-SV	10	42	50	50	50	50	35	35	35	35	35	35	35	35	35	14	14	14	14	14	25	14
S	NF63-SV	15	42	85	85	85	85	35	35	35	35	35	35	35	35	35	30	30	30	30	30	25	14
NV	NV63-SV	15	42	85	85	85	85	35	35	35	35	35	35	35	35	35	-	-	-	-	-	25	-
I	NF63-HV	25	50	85	90	100	100	50	50	50	50	50	50	50	50	50	50	50	50	50	50	30	30
S	NV63-HV																					125	200
NV	NF125-SV	50	-	85	90	100	100	85	85	85	-	85	85	85	85	85	85	85	85	85	85	85	125
I	NF125-SGV	85	-	-	-	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF125-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF125-HV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF125-HGV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF160-SGV	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF160-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF160-HGV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF250-SV	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF250-SGV	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF250-LGV	90	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF250-HV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF250-HGV	100	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF250-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF250-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF400-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF400-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NF400-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
NV	NF400-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
I	NF630-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
S	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
NV	NF630-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
I	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
S	NF630-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
NV	NF630-SW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
I	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
S	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
NV	NF630-SEW	85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
I	NF63-CV	7.5	35	50	50	50	50	10	10	10	10	10	10	10	10	10	-	-	-	-	-	-	-
S	NV63-CV	30	35	85	85	85	85	50	50	50	50	50	50	50	50	50	50	50	50	50	50	125	200
NV	NF125-CV	30	35	85	85	85	85	50	50	50	50	50	50	50	50	50	50	50	50	50	50	125	200
I	NF250-CV	36	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	125
S	NV250-CV	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
NV	NF400-CW	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
I	NV400-CW	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
S	NF630-CW	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200
NV	NV630-CW	50	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	200

Note Rated currents of main breakers are maximum values.

12. International Standard Conformance List

12.1 UL and CSA Approval Product

● UL (Underwriter's Laboratories) Standards: UL 489, UL 1077

UL is an organization in the US which establishes safety standards, i.e. UL Standards, conducts safety verification test based on the UL Standards, issues the certificates to approved products and allows the manufacturers to attach the certification mark to the products. The UL certification mark has been spread widely in the US. Some states and cities oblige manufacturers to receive the UL certification. When devices, control panels and machines are exported to the US, these products must be UL certified. UL certified products have received UL Recognition or UL Listing in conformity to UL Standards (UL 489, UL1077) and allowed to be used in control panels and machines to be exported to the US.

: UL Recognition

Refers to component certification for products designed to be built in other products and devices. UL recognized products can be used in control panels, machine tools and control units.

: UL Listing

Refers to product certification for products which can be sold directly to end-users and used by end-users. These products can be used also as built-in components in control panels, machine tools and control units. Some models vary in external dimensions and terminal structure from standard models. Please refer to the page of UL listed products for details.

● CSA (Canadian Standard Association) Standards: CSA C22.2 No.5

The CSA Standards are product safety standards established by CSA. In Canada, the safety of electric products is regulated by the state laws, and some state laws prescribe that circuit breakers shall be certified by the CSA Standards. Therefore, when devices, control panels and machines are exported to Canada, these products must be CSA certified. UL certified products have received CSA certification from the testing body UL and allowed to be used in control panels and machines to be exported to Canada. UL has been authorized as a testing, certification and quality certification body by SCC, and CSA certified products tested by UL have been approved by the safety regulations in all states of Canada. It is allowed to attach the following certification marks to products certified by both UL and CSA. (It is also allowed to attach the separate marks for the US and Canada as before.)

: Recognition for US and Canada

UL and CSA recognition of components by testing body UL

: Listing for US and Canada

UL and CSA recognition of components by testing body UL

12.2 CCC (China Compulsory Certification) Approval Product

Low-voltage circuit breakers are designated as products to be compulsorily certified in China. To export such products to China and sell them in China, it is necessary to obtain the CCC certification.

12.3 Corresponding to CE Marking and UKCA Marking

● Corresponding to low voltage directives (CE marking) and to low voltage regulations (UKCA marking)

(1) When using a low voltage circuit breaker as a component and indicating conformity with the EC Directives
The CE Marking is required when a low voltage circuit breaker is distributed as a single device in EU. However, when the CE Mark is indicated on a machine tool or a control unit, it is unnecessary to affix the CE Mark to the low-voltage circuit breaker used as a built-in component. When the CE Mark is indicated on a machine tool or a control unit, it is recommended to use a product certified by a third party shown in Item (3) (TÜV certified product) as a low voltage circuit breaker.

(2) Measures for export of low voltage circuit breaker as single unit


When exporting a low-voltage circuit breaker as a single unit in EU, the circuit breaker is covered by the Low Voltage Directive. The certification of conformity with the Low Voltage Directive is self-declared as a rule. The applicable product standards are shown below.

EN 60947-2 Low-voltage switchgear and controlgear-Part 2: Circuit-breakers

EN 60934 Circuit-breakers for equipment (CBE)

(3) Models certified by third party (TÜV certified products)

When the CE Mark is indicated on a machine tool or a control unit, it is recommended to use a low voltage circuit breaker certified by a third party (TÜV certified product) as a built-in component.

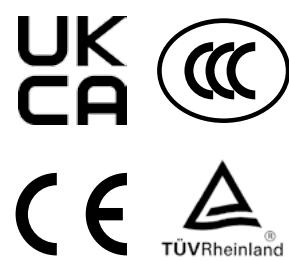

● Corresponding to RoHS directives (CE marking) and to the regulations regarding RoHS hazardous items (UKCA marking)

The Directive prescribes that products shall not emit high-intensity radio waves to the outside and shall not be affected by external electromagnetic waves. Molded case circuit breakers (electronic type) and earth leakage circuit breakers are covered by the EMC Directive. These products have been designed for environment A. Use of these products in environment B may cause unwanted electro magnetic disturbances in which case the user may be required to take adequate mitigation measures.

● Corresponding to EMC directives (CE marking) and to EMC regulations (UKCA marking)

Low voltage circuit breakers are components used in equipment, such as machine tools and control units, and are not covered by any machinery directive. When the CE Mark is indicated on a machine tool or a control unit, it is recommended to use a low voltage circuit breaker certified by a third party (TÜV certified product) as a built-in component.

● Corresponding to Machinery directives (CE marking) and to Machinery regulations (UKCA marking)

Low voltage circuit breakers are components that are used for manufacturing machines or control equipment, and machinery directive is not applicable.

● Molded Case Circuit Breakers and Motor Protection Breakers

Specifications	Class	Applicable Models and Assignments	North American Safety Mark					Compulsory Mark			Third Party Mark TUV Rheinland	Classification Society (*1) NK
			UL Standards			CSA Standards		CCC	CE	UKCA		
			USA	Canada	China	Europe	United Kingdom	Germany				
General	C	NF63-CV, NF125-CV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF250-CV	-	-	-	-	-	●	●	●(Self-declaration)	●	●
		NF400-CW, NF630-CW, NF800-CEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
	S	NF32-SV, NF63-SV, NF125-SV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF125-SEV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF250-SV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
	L/H/R	NF125-SGV, NF160-SGV, NF250-SGV, NF250-SEV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	(Except for 4P)	●
		NF400-SW, NF630-SW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF400-SEW, NF630-SEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
	Motor Protection	NF800-SEW, NF800-SDW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF1000-SEW, NF1250-SEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF1600-SEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
	HDV	NF1250-SDW, NF1600-SDW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF63-HV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF125-HV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
	HDVA	NF125-HEV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF250-HEV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF250-HV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
	HDW	NF125-LGV, NF125-HGV, NF160-LGV, NF250-LGV, NF250-HGV, NF250-HEV, NF125-RGV, NF250-RGV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF400-HEW, NF400-REW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF630-HEW, NF630-REW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
UL	UL 489 Listed	NF800-HEW, NF800-REW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF125-UV	-	-	-	-	-	-	●(Self-declaration)	●(Self-declaration)	-	●
		NF250-UV, NF400-UEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF800-U EW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF32-SV MB, NF63-CV MB, NF63-SV MB, NF125-SV MB	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	●
		NF250-SV MB	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	●	●
		NF63-HDV(2P)	-	-	-	-	-	-	●(Self-declaration)	●(Self-declaration)	-	-
		NF63-HDV(3P)	-	-	-	-	-	-	●(Self-declaration)	●(Self-declaration)	-	-
		NF125-HDVA	-	-	-	-	-	(*)	●(Self-declaration)	●(Self-declaration)	(Except for 3P)	-
		NF250-HDVA	-	-	-	-	-	(*)	●(Self-declaration)	●(Self-declaration)	(Except for 3P)	-
		NF400-HDW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF800-HDW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF50-SMU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NF50-SVFU, NF100-CVFU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF100-SRU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF100-HRU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF125-SVU, NF125-HVU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF250-CVU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF250-SVU, NF250-HVU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF400-SWU, NF400-HWU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NF630-SWU, NF630-HWU	-	-	-	●	-	●	●(Self-declaration)	●(Self-declaration)	●	-

Note *1 Except for 4 poles breaker.

Remark: 1. KC (Korea Certification) and EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

● Earth Leakage Circuit Breakers

Specifications	Class	Applicable Models and Assignments	North American Safety Mark					Compulsory Mark			Third Party Mark TUV Rheinland	Classification Society NK
			UL Standards			CSA Standards		CCC	CE	UKCA		
			USA	Canada	China	Europe	United Kingdom	Germany				
General	C	NV63-CV, NV125-CV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV250-CV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NV400-CW, NV630-CW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
	S	NV32-SV, NV63-SV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV125-SV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV250-SV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-
	H/R	NV125-SEV, NV250-SEV, NV400-SW, NV400-SEW, NV630-SW, NV630-SEW, NV800-SEW	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV63-HV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV125-HV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
	UL	NV125-HEV, NV250-HV, NV250-HEV	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	-
		NV400-HEW, NV630-HEW, NV800-HEW	-	-	-	-	-	-	-	-	-	-
		NV50-SVFU, NV100-CVFU	-	-	●	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NV125-SVU, NV125-HVU	-	-	●	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NV250-CVU	-	-	●	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-
		NV250-SVU, NV250-HVU	-	-	●	-	-	●	●(Self-declaration)	●(Self-declaration)	●	-

Remark: 1. KC (Korea Certification) and EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

● Miniature Circuit Breakers

Specifications	Class	Applicable Models	Compulsory Mark			Third Party Mark TUV Rheinland	Classification Society Japan
			CCC	CE	UKCA		
			China	Europe	United Kingdom		
General	DIN	BH-D6	●	●(Self-declaration)	●(Self-declaration)	A TÜV Rheinland	
		BH-D10	●	●(Self-declaration)	●(Self-declaration)		
		BH-DN	●	●(Self-declaration)	●(Self-declaration)		
		BV-D	●	●(Self-declaration)	●(Self-declaration)		
		BV-DN	●	●(Self-declaration)	●(Self-declaration)		
		KB-D	●	●(Self-declaration)	●(Self-declaration)		

●Circuit Protectors

Specifications	Class	Applicable Models and Assignments	North American Safety Mark					Compulsory Mark			Third Party Mark	Classification Society
			UL Standards		CSA Standards		CCC	CE	UKCA	TUV Rheinland		
			USA	Canada	China	Europe	United Kingdom	Germany	Japan	Germany		
General	CP	CP30-BA, CP30-HU	-	-	●	-	-	●(GB/T 17701) (*1)(*3)(*4)	●(EN 60934)(*) ●(EN 60947-2) ●(EN 60947-2:Self-declaration) ●(EN 60947-3)(*2)	●(EN 60934:Self-declaration)(*3)(*4) ●(EN 60947-2:Self-declaration) ●(EN 60947-3:Self-declaration)(*2)	●(EN 60934)(*) ●(EN 60947-3)(*2)	-

Remark: 1. KC (Korea Certification) approval products are prepared. Please inquire details. (Excluding CP30-HU)

Notes *1 Only CP30-BA is applicable. (CCC is not applicable for those with SHT)

*2 Only applicable to 1P SHT.

*3 Spring clamp terminals with a rated current of 20A are not applicable.

*4 Not applicable to male tab terminals.

●Air Circuit Breakers

Specifications	Class	Applicable Models	Assignments	North American Safety Mark					Compulsory Mark			Third Party Mark	Classification Society
				UL Standards		CSA Standards		CCC	CE	UKCA	TUV Rheinland		
				USA	Canada	China	Europe	United Kingdom	Germany	Japan	Germany		
IEC	SW	AE630-SW, AE1000-SW AE1250-SW, AE1600-SW AE2000-SWA, AE2000-SW AE2500-SW, AE3200-SW AE4000-SWA, AE4000-SW AE5000-SW, AE6300-SW	IEC 60947-2 or JIS C 8201-2-1	-	-	-	-	-	-	●(Self-declaration)	●(Self-declaration)	-	
CCC	SW	AE630-SW, AE1000-SW AE1250-SW, AE1600-SW AE2000-SWA, AE2000-SW AE2500-SW, AE3200-SW AE4000-SWA, AE4000-SW AE5000-SW, AE6300-SW	CCC	-	-	-	-	-	●	●(Self-declaration)	●(Self-declaration)	-	

Remark: 1. EAC (Eurasian Conformity) approval products are prepared. Please inquire details.

●Molded Case Circuit Breakers , Motor Protection Breakers, Air Circuit Breakers, Circuit Protectors and Miniature Circuit Breakers (Classification Society)

Specifications	Class	Applicable Models	Classification societies (Note)						DNV	Classification Society
			NK	LR	ABS	BV	CCS	DNV		
			Japan	United Kingdom	USA	France	China	Norway		
General	C	NF63-CV, NF125-CV NF250-CV NF400-CW, NF630-CW NF800-CEW	●	●	●	●	●	●	-	
	S	NF32-SV, NF63-SV, NF125-SV NF250-SV NF400-SW, NF630-SW NF400-SEW, NF630-SEW NF800-SEW	●	●	●	●	●	●	-	
	H/R	NF1000-SEW, NF1250-SEW NF63-HV, NF125-HV NF250-HV NF400-HEW, NF400-REW NF630-HEW, NF630-REW NF800-HEW, NF800-REW	●	●	●	●	●	(HEW)	-	
	U	NF125-UV, NF250-UV NF400-UEW, NF800-UEW	●	●	●	●	●	●	-	
	Motor Protection	NF32-SV MB, NF63-CV MB NF63-SV MB, NF125-SV MB NF250-SV MB	●	●	●	●	●	●	-	
	AE	AE630-SW, AE1000-SW AE1250-SW, AE1600-SW AE2000-SWA, AE2000-SW AE2500-SW, AE3200-SW AE4000-SWA AE4000-SW, AE5000-SW, AE6300-SW	●	●	●	●	●	●	-	
	CP	CP30-BA (*2)(*3)	-	-	-	-	-	-	-	
	BH	BH-D6, BH-D10	-	-	-	-	●	●	-	
	KB	KB-D	-	-	-	-	●	●	-	

Remark: 1. 4 poles breakers does not acquire Classification Society approval.

Note *1 Except for 4 poles breaker.

*2 Some specifications are not supported depending on the number of poles and operating characteristics. Please introduce the details.

*3 Male tab terminals and spring clamp terminals are excluded.

1. Electric Shock Protection

The safety standards for current passing through the human body are determined based on physiological phenomena as shown below.

- In places where secondary accidents may be caused by electric shock: Area below the curve b
- In places where secondary accidents will not be caused by electric shock: Area below the curve c1

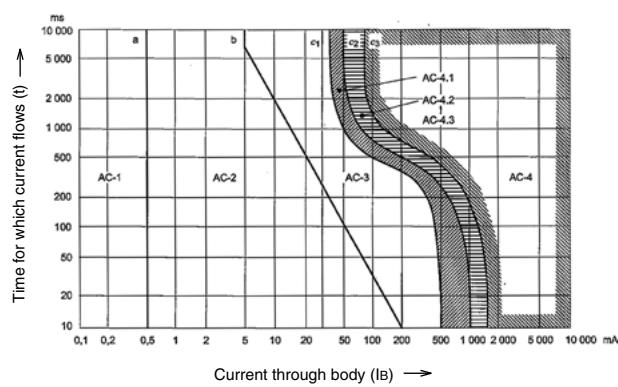


Fig. 4.17 Influence of AC (15Hz to 100Hz) on human body (IEC/TS60479-1)

2. ELCB Grounding Method

Select the rated sensitivity current based on the grounding method, purpose of protection and protection ground resistance value of load device. If the line is excessively long, the circuit breaker may operate unnecessarily owing to leakage current. Calculate the leakage current referring to Table 4-25. In this case, it is common to select sensitivity current approx. 10 times as high as the leakage current.

Table 4-24

Type of earthing system	TN system			TT system	IT system																					
	TN-C system	TN-S system	TN-C-S system																							
Typical arrangement																										
The touch voltage is limited to 50V.																										
Protective condition	$Z_s \times I_a \leq 50V$ Z_s : fault loop impedance (Ω) I_a : current causing the automatic operation of the disconnecting device within the time as below (A) U_0 : nominal line to earth voltage (V)				$R_A \times I_{\Delta n} \leq 50V$ R_A : sum of the resistances of the earth electrode and the protective conductor (Ω) $I_{\Delta n}$: rated current sensitivity (A)																					
	Maximum disconnection times (s) <table border="1"> <thead> <tr> <th rowspan="2">U₀ AC</th> <th colspan="4">Branch circuits rated 32A and less</th> <th rowspan="2">Others</th> </tr> <tr> <th>120V</th> <th>230V</th> <th>400V</th> <th>Over 400V</th> </tr> </thead> <tbody> <tr> <td>TN system</td> <td>0.8</td> <td>0.4</td> <td>0.2</td> <td>0.1</td> <td>5</td> </tr> <tr> <td>TT system</td> <td>0.3</td> <td>0.2</td> <td>0.07</td> <td>0.04</td> <td>1</td> </tr> </tbody> </table>				U ₀ AC	Branch circuits rated 32A and less				Others	120V	230V	400V	Over 400V	TN system	0.8	0.4	0.2	0.1	5	TT system	0.3	0.2	0.07	0.04	1
U ₀ AC	Branch circuits rated 32A and less					Others																				
	120V	230V	400V	Over 400V																						
TN system	0.8	0.4	0.2	0.1	5																					
TT system	0.3	0.2	0.07	0.04	1																					
Earth leakage protective device	- MCCBs Not ELCBs	- MCCBs - ELCBs	- MCCBs - ELCBs (except in TN-C zone)	- ELCBs	- Insulation monitoring devices + ELCBs																					

Table 4-25 Leakage current when 600V vinyl insulated wire is laid on 1km Δ -connected 3-phase 3-wire 200V line

Distance from grounded part	(A) 4m or more	(B) 10cm or more	(C) 1.5mm or more	(D) In close contact
Wiring work	• Wiring on first floor ceiling of wooden building • Wiring on second and higher floors of wooden building • Aerial wiring (Except (C) and (D))	• Wiring in RC building • Wiring with vinyl tube and exposed wiring in steel frames (Except (C) and (D))	• Vinyl tube burying • Vinyl tube laying in close contact with steel frames in steel building	• Wiring in metallic conduit • Wiring in metallic duct
Wire size	8mm ² or less	0.60mA/km	1.29mA/km	19.9mA/km
				100mA/km
14	0.66	1.44	22.1	110
22	0.72	1.55	23.9	120
38	0.81	1.75	26.9	135
60	0.99	2.14	32.9	165
100	1.14	2.46	37.9	189
150	1.25	2.72	41.8	209
250	1.46	3.16	48.6	243
325	1.52	3.29	50.7	253
500	1.71	3.69	56.8	284

Notes *1 The leakage current on rubber insulated wire (RB) is about 70% of the above values, and that on 3-core 600V cross-linked polyethylene insulated wire (CV) is about 50%.

*2 At 50Hz, the values are 84% of the above values.

*3 To obtain the leakage current on another line, multiply the values shown in Table 4-25 by the magnification shown in Table 4-26.

*4 To determine the line length, add the length of all wires after ELCB installation point.

**Table 4-26
Leakage current conversion table**

Type of line	Magnification
Single-phase 100V line	0.3
Single-phase 3-wire 200V line	0.3
3-phase 415V line (Δ connection)	0.7

3. Rated Voltage and Number of Poles

Select the rated voltage and number of poles according to the circuit voltage and type. The following table shows the standard circuit voltage values. However, even at special voltage, if the voltage including the circuit voltage fluctuation is within the voltage range shown right, the leakage protection device will operate.

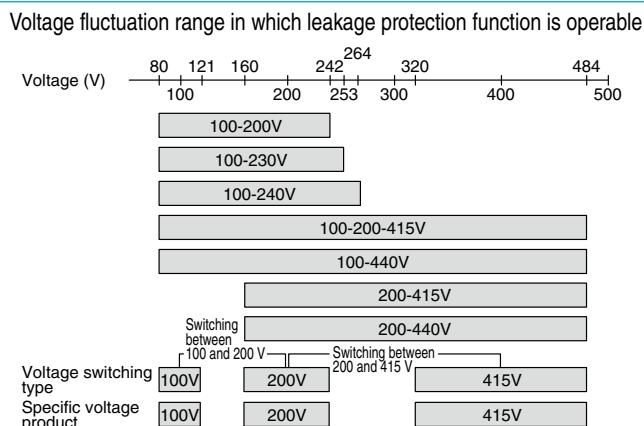


Table 4-27

Circuit type	Single-phase 2-wire 100 or 200V circuit		Single-phase 3-wire 100 and 200V circuit	
Example of connection	<ul style="list-style-type: none"> • 100-440V • 100-200-415V • 100-200V • 100-240V • 100-200-415V • 100-200V • 100-230V • 100V • 100-440V • 100-200-415V • 100-200V • 100-240V • 200-415V • 200-440V 	<ul style="list-style-type: none"> • 100-440V • 100-200-415V • 100-200V • 100-240V • 100-200-415V • 100-200V • 100-230V • 100-440V • 100-200-415V • 100-200V • 100-240V • 200-415V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 100-200V • 200-415V • 100-440V • 100-230V • 100-440V • 200-440V • 100-200-415V • 100-200V • 100-240V • 200-415V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V
Circuit type	3-phase 3-wire 200V circuit		3-phase 3-wire 415V circuit	
Example of connection	<ul style="list-style-type: none"> • 100-200-415V • 100-200V • 200-415V • 100-440V • 100-230V • 200-440V • 100-200-415V • 100-200V • 100-240V • 200-415V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V
Circuit type	3-phase 4-wire 415V circuit			
Example of connection	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V 	<ul style="list-style-type: none"> • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V • 100-200-415V • 200-415V • 415V • 100-440V • 200-440V

<Caution when selecting and connecting>

(1) When a 3-pole circuit breaker is used as a 2-pole one, use the right and left poles.

(2) For the mains of a 3-phase 4-wire 415V circuit, use a 4-pole circuit breaker having a rated voltage of 415V or 440V, and connect the neutral pole to the N pole on the right side.

4. Earth Fault Protection Coordination and Combination of Devices

Table 4-28

Protection type	Details	Installation point	Combination
With selectivity only for earth fault breaking	● On general lines, the protection grounding resistance is relatively large and the earth fault current is small. In this case, install a time-delay relay on the main circuit and a high-speed relay on a branch circuit.	Main circuit	• Time-delay ELCB • Combination of MCCB and time-delay earth leakage relay
		Branch circuit	High-speed ELCB
With selectivity for earth fault breaking and cascade type of short-circuit breaking	● The selectivity for earth fault breaking is as stated above. ● Significant short-circuit fault very rarely occurs because of its nature (in most cases, circuits are broken at the early stage of earth fault). This protection is applied when the continuity of power supply is expendable. (Refer to the combination for cascade breaking on page 83.)	Main circuit	• Class S time-delay ELCB • Combination of MCCB (class U) and time-delay earth leakage relay
		Branch circuit	• Class C time-delay ELCB • Combination of MCCB (class C) and high-speed earth leakage relay
With selectivity for earth fault breaking and short-circuit breaking	● This protection is applied when selectivity is necessary in the entire area of fault. (Refer to the combination for selective breaking on page 81.)	Main circuit	Combination of electronic MCCB and time-delay earth leakage relay
		Branch circuit	• High-speed ELCB • Combination of MCCB and high-speed earth leakage relay

Remark: 1. "Time-delay or high-speed earth leakage relay" refers to NV-ZBA, NV-ZSA, NV-ZHA or NV-ZLA.

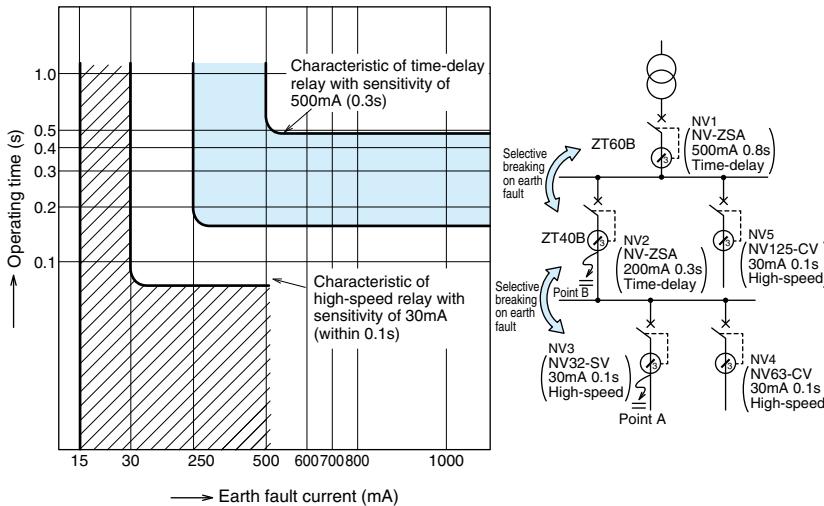


Fig. 4.18 Example of coordination of time-delay and high-speed relays for earth fault breaking

MEMO

3 Selection

5

Installation and Connection

1) Connection Types	98
2) Connecting Parts	100
3) Standard Tightening Torque	101
4) Crimp Terminal Type	102
5) Busbar	104
6) Insulation Distance on Power Source Side	105
7) Effect of Installation Orientation	106
8) Connection of Line and Load	106

1. Connection Types

Table 5-1 Connection

Note *1 It is impossible to directly connect the wires of 40 and 50A, NF/NV 50-SVFU.

*2 It is possible to modify connection type with options.

	Rear (B)		Plug-in (PM)	
	Bar stud (B-ST)	Round stud (B-ST)	Bar stud (PM)	Screw terminal (PM)
	—	● (*2)	—	●
	● (*2)	—	—	●
	●	—	●	—
	●	—	●	—
	● (*2)	—	● (Except for NF1600-SEW)	—
	●	—	—	● (Except for 4P)
	●	—	● (Except for 4P)	—
	●	—	● (Except for NF800-UEW)	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
	● (*2)	—	—	●
	● (*2)	—	—	●
	● (*2)	—	●	—
	● (*2)	—	●	—
	—	—	—	—
	—	—	—	—
	—	—	—	—
With insulating base (tube) for installation of metallic board The bar stud installation position can be turned 90° on all models (except NF800-UEW). The current-carrying capacity of a vertically installed bus bar is larger than that of a horizontally installed bus bar even if the bus bars have the same dimensions.			The circuit breaker can be connected only by pushing it onto the preliminarily wired terminal block. Install it tightening the supplied screws through the mounting holes. If you process the products based on the drilling dimensions, there will be a space between the inserting terminal block and the mounting plate so that the insulation distance can be secured between the connection conductors/ crimped terminals and the mounting plate. In order to make the space smaller, you need to secure the insulation distance by pasting the insulation place and so on.	

Table 5-2 List of terminal screws (B)

Model		Connection type	Front	Rear	Plug-in
MCCB	C	NF400-CW • NF400-SW • NF400-SEW • NF400-HEW • NF400-REW • NF630-CW • NF630-SW • NF630-SEW • NF630-HEW • NF630-REW • NF800-CEW • NF800-SEW • NF800-HEW • NF800-REW • NF800-SDW	M12 bolt		
	S	NF1000-SEW • NF1250-SEW	M12 bolt		
	H	NF1600-SEW	M10 bolt		—
	U	NF400-UEW	M12 bolt		—
		NF800-UEW	M12 bolt		—
ELCB	T ₆₀₀	NV400-SW • NV400-SEW • NV400-HEW • NV400-CW • NV630-SW • NV630-SEW • NV630-HEW • NV630-CW	M12 bolt		—
	T ₆₀₀	NV800-SEW • NV800-HEW	M12 bolt		—

2. Connecting Parts

For the connection shown in the table on the previous page, the following parts are available as connecting parts.

Table 5-3 Studs on rear surface (B-ST)

Type name	Number of poles	Applicable models		Stud shape and major included parts	Remarks
		MCCB	ELCB		
ST-05SV2	2	NF32-SV, NF63-CV, NF63-SV	NV32-SV, NV63-CV	★Round studs ●Round studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	One set includes the parts for one unit. Please place an order for the number of circuit breakers.
ST-05SV3	3	NF63-HV	NV63-SV, NV63-HV	●Bolts and nuts	
ST-05SV4	4	NF63-SV, NF63-HV	—	★Bar studs ●Bar studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-1SV2	2	NF125-CV, NF125-SV NF125-HV(3, 4P)	—	●Bolts and nuts	
ST-1SV3	3		NV125-CV, NV125-SV	★Bar studs ●Bar studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-1SV4	4		NV125-HV	●Bolts and nuts	
ST-1HV2	2	NF125-HV(2P)	—	★Bar studs ●Bar studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-2SV2	2	NF125-SEV, NF125-HEV, NF125-RGV	—	●Bolts and nuts	
ST-2SV3	3	NF125-SGV, NF125-LGV, NF125-HGV	NV125-SEV, NV125HEV NV250-CV, NV250-SV NV250-LGV/HGV, NV250-HV NV250-SEV, NV250-RGV	★Bar studs ●Bar studs (with insulating tube) (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-2SV4	4	NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV NF250-CV, NF250-SV NF250-LGV/HGV, NF250-HV NF250-SEV, NF250-RGV NF250-HEV, NF125-SGV/HGV NF125-LGV, NF160-SGV, NF160-LGV/HGV		●Bolts and nuts	
ST-4SW2	2	NF400-CW, NF400-SW NF400-SEW, NF400-HEW NF400-REW	—	★Bar studs ●Insulating bases (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-4SW3	3		NV400-CW, NV400-SW	●Bar studs (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-4SW4	4		NV400-SEW NV400-HEW	●Mounting screws, bolts and nuts	
ST-6SW2	2	NF630-CW, NF630-SW	—	★Bar studs ●Insulating base (2 pcs)	One set includes the parts for one unit. Please place an order for the number of circuit breakers.
ST-6SW3	3	NF630-SEW, NF630-HEW	NV630-CW, NV630-SW	●Bar studs (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-6SW4	4	NF630-REW	NV630-SEW, NV630-HEW	●Mounting screws, bolts and nuts	
ST-8SW2	2	NF800-SDW, NF800-CEW NF800-SEW, NF800-HEW NF800-REW	—	★Bar studs ●Insulating base (2 pcs)	
ST-8SW3	3		NV800-SEW, NV800-HEW	●Bar studs (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
ST-8SW4	4		NV800-REW	●Mounting screws, bolts and nuts	

Table 5-4 Plug-in type terminal blocks (PM)

Type name	Number of poles	Applicable models		Major included parts	
		MCCB	ELCB		
PMDN-05SV2L	2P	NF32-SV NF63-CV/SV/HV (3A-50A)	—	Plug-in type terminal block (1 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
PMDN-05SV3L	3P	NF32-SV	NV32-SV		
PMDN-05SV4L	4P	NF63-CV/SV/HV (3A-50A)	NV63-CV/SV/HV (5A-50A)		
PMDN-05SV2H	2P	NF63-CV/SV/HV (60A, 63A)	—		
PMDN-05SV3H	3P	NF63-CV/SV/HV (60A, 63A)	NV63-CV/SV/HV (60A, 63A)		
PMDN-05SV4H	4P	NF63-CV/SV/HV (60A, 63A)	NV63-CV/SV/HV (60A, 63A)		
PMDN-1SV2	2P	NF125-CV/SV	—		
PMDN-1HV2	2P	NF125-HV	—		
PMDN-1SV3	3P	NF125-CV/SV/HV	NV125-CV/SV/HV		
PMDN-1SV4	4P				
PMDN-1UV2	2P	NF125-UV	—	Plug-in type terminal block (2 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs)	
PMDN-1UV3	3P			Plug-in type terminal block (2 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs)	
—	4P			Plug-in type terminal block (2 pc) Crip terminals (2-pole: 4pcs, 3-pole: 6 pcs)	
PMDN-2SV2	2P			Plug-in type terminal block (1 pc)	
PMDN-2SV3	3P	NF125-SEV/HEV/SGV/LGV/HGV NF160-SGV/LGV/HGV	NV125-SEV/HEV NV250-CV/SV/HV/SEV/SGV/LGV/HGV	Plug-in type barriers (2-pole: 2 pcs, 3-pole: 4 pcs, 4-pole: 6 pcs)	
PMDN-2SV4	4P	NF250-CV/SV/HV/SEV/SGV/LGV/HGV	NV250-CV/SV/HV/SEV/HEV	Tulip terminals (2-pole: 4 pcs, 3-pole: 6 pcs, 4-pole: 8 pcs)	
PMDN-2SV2	2P	NF125-RGV, NF250-RGV	—	Plug-in type terminal block (2 pc)	
PMDN-2SV3	3P		—	Plug-in type barriers (2-pole: 2 pcs, 3-pole: 4 pcs)	
—	4P		—	Tulip terminals (2-pole: 4pcs, 3-pole: 6 pcs)	
PMDN-4SW2	2P	NF400-CW/SW	—	Plug-in type terminal block (2 pc) Plug-in type barriers (2-pole: 2 pcs, 3-pole: 4 pcs)	
PMDN-4SW3	3P	NF400-CW/SW/SEW	NV400-CW/SW/SEW		
PMDN-4SW3	3P	NF400-HEW/REW	NV400-HEW		
PMDN-4SW4	4P	NF400-SW/SEW	NV400-SEW		
PMDN-4SW4	4P	NF400-HEW	—		
PMDN-8SW2	2P	NF800-SDW	—		
PMDN-8SW3	3P	NF800-CEW/SEW	NV800-SEW	Plug-in type terminal block (2 pc) Tulip terminals (3-pole: 6 pcs)	
PMDN-8SW3	3P	NF800-HEW/REW	NV800-HEW		
PMDN-8SW4	4P	NF800-SEW	—		
PMDN-8SW4	4P	NF800-HEW	—		

Note In addition to the circuit breakers shown above, 4-pole and 2-pole circuit breakers are available. We are ready to manufacture such circuit breakers to order. Please consult us.

3. Standard Tightening Torque

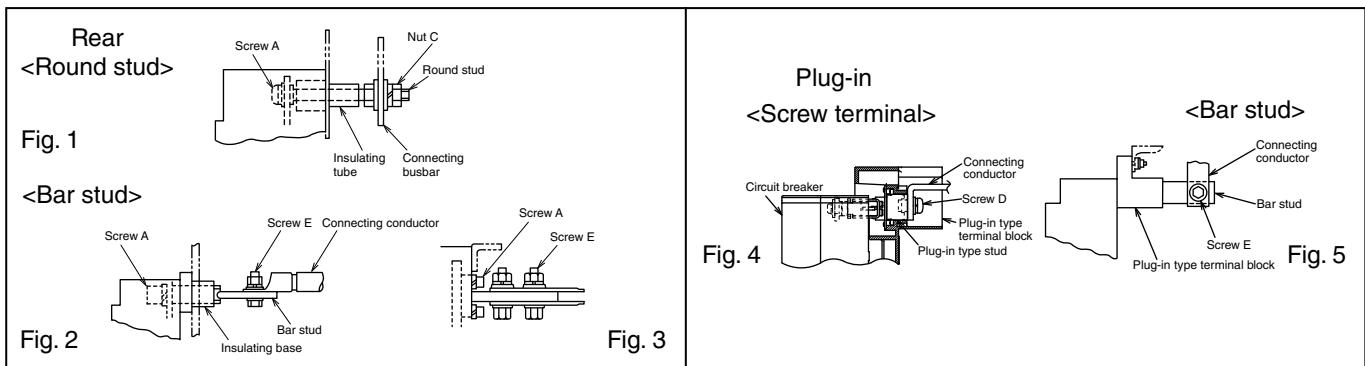


Table 5-5 Standard tightening torque (*1)

Tightening torque N·m

Model	Connection type	Rear								Plug-in			
		Round stud				Bar stud				Screw terminal		Bar stud	
		Fig.1		Fig. 2, Fig.3		Fig.4		Fig.5					
MCCB	ELCB	Screw A	Nut C	Screw A	Screw E	Screw D	Screw E	Size	Tightening torque	Size	Tightening torque	Size	Tightening torque
NF32-SV, NF63-CV NF63-SV, NF63-HV	NV32-SV, NV63-CV NV63-SV, NV63-HV	M4x0.7	1	M6	2	-	-	-	-	M6	3	-	-
NF125-CV, NF125-SV NF125-HV, NF125-UV	NV125-CV, NV125-SV NV125-HV	-	-	-	-	M6	4	M8	12	M8	6	-	-
NF125-SEV, NF125-HEV, NF125-RGV NF250-CV, NF250-SV, NF250-HV, NF250-SEV NF250-HEV, NF250-RGV, NF250-UV NF250-LGV/HGV, NF250-RGV, NF125-SGV/HGV NF125-LGV, NF160-SGV, NF160-LGV/HGV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV	NV125-SEV, NV125-HEV NV250-CV, NV250-SV NV250-HV, NV250-SEV NV250-HEV	-	-	-	-	M6	10	M8	12	-	-	M8	12
NF400-CW, NF400-SW, NF400-SEW NF400-HEW, NF400-REW NF400-UEW (3P)	NV400-CW, NV400-SW NV400-SEW, NV400-HEW	-	-	-	-	M8	20	M12	45	-	-	M12	45
NF400-UEW (4P)	-	-	-	-	-	M10	30	M12	45	-	-	M12	45
NF630-CW, NF630-SW, NF630-SEW NF630-HEW, NF630-REW	NV630-CW, NV630-SW NV630-SEW NV630-HEW	-	-	-	-	M8	20	M12	45	-	-	M12	45
NF800-CEW, NF800-SDW NF800-SEW, NF800-HEW, NF800-REW NF800-UEW (*2)	NV800-SEW NV800-HEW	-	-	-	-	M10	30	2-M12	45	-	-	2-M12	45
NF1000-SEW NF1250-SEW	-	-	-	-	-	4-M8	12	2-M12	45	-	-	2-M12	45
NF1600-SEW	-	-	-	-	-	4-M8	12	4-M10	25	-	-	-	-

Notes *1 The appropriate range of tightening torque is $\pm 20\%$ of each value (standard tightening torque) shown in the above table. Please refer to the supplied assembly manual and instruction manual for more information.

*2 The plug-in type is not available.

4. Crimp Terminal Type

Table 5-6 List of applicable crimp terminals

Frame (A)	Nominal sectional area mm ²		2	5.5	8	14	22
	Allowable current (600V, IV wire at 30°C, not in conduit) (*4)		27A	49A	61A	88A	115A
	Model	Size of mm ²	1.04 to 2.63	2.63 to 6.64	6.64 to 10.52	10.52 to 16.78	16.78 to 26.66
30	NF30-FAU	NV30-FAU	R-2-5	R-5.5-5	JST8-5NS		
	NF50-FAU	NV50-FAU	R-2-5	R-5.5-5	JST8-5NS	JST14-5NS	JST22-5NS (*5)
	NF100-FHU	NV100-FHU			R-8-8	R-14-8	R-22-8
32	NF32-SV, NF50-FHU, NF63-CV* NF63-SV* NF63-HV*	NV32-SV, NV50-FHU, NV63-CV*	R-2-5	R-5.5-5	R-8-5	R-14-5	JST22-S5 BH-22
	50A or below	NV63-SV, NV63-HV*	(*R-2-6)	(*R-5.5-6)			(L330T459-23) (*6)
	NF63-CV, NF63-SV, NF63-HV	NV63-CV, NV63-SV, NV63-HV	R-2-8	R-5.5-8	R-8-8	R-14-8	R-22-8
60		60, 63A	60, 63A				
	—	—	R-2-5 (R-2-6)	R-5.5-5 (R-5.5-6)	R-8-5	R-14-5	JST22-S5 (L330T459-23)
	NF125-CV, NF125-SV, NF125-HV, NF125-UV	60A or more	NV125-CV, NV125-SV, NV125-HV	R-2-8	R-5.5-8	R-8-8	R-14-8
125	NF125-SEV, NF125-HEV, NF125-RGV	NV125-SEV, NV125-HEV					
	NF250-CV, NF250-SV, NF250-HV, NF250-UV	NV250-CV, NV250-SV, NV250-HV					
	NF250-SEV, NF250-HEV, NF250-RGV	NV250-SEV, NV250-HEV					
225	NF125-SGV, NF160-SGV, NF250-SGV						
	NF125-LGV, NF160-LGV, NF250-LGV						
	NF125-HGV, NF160-HGV, NF250-HGV						
250	NF400-CW, NF400-SW, NF400-SEW	NV400-CW, NV400-SW					
	NF400-HEW, NF400-REW, NF400-UEW	NV400-SEW, NV400-HEW					
	NF630-CW, NF630-SW, NF630-SEW	NV630-CW, NV630-SW,					
400	NF630-HEW, NF630-REW	NV630-SEW, NV630-HEW					
	600						
	630						
800	NF800-CEW, NF800-SEW, NF800-HEW	NV800-SEW, NV800-HEW					
	NF800-REW, NF800-UEW, NF800-SDW						
	1000						
1200	NF1000-SEW, NF1250-SEW						
	1250						

Notes *1 When using 2CR-150 or CB150-S8, insulate it from TC-S with insulating tube or tape. When using CB150-S8 for a 2- or 3-pole circuit breaker, TCL-2SV3L is applicable.

*2 On the power supply side, pan-head screws M5 are used.

*3 When tightening a terminal screw without connecting a wire, crimp terminal or bar, tighten the screw to 20 to 30% of the torque shown in the above table (to prevent damage to the threads).


*4 The table shows not the allowable current values of circuit breakers, but those of wires applicable to crimp terminals.

*5 When using JST22-5NS, TC-S and RTC cannot be used. Insulate it with insulating tape or the like.

*6 When using JST22-5S and BH-22 with NF/NV50-FHU type, TC-S cannot be used. Insulate with insulating tape or the like.


● Reference drawings of connection types

Method of connecting directly to terminal(s) of body

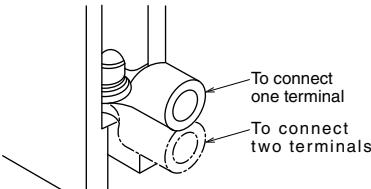


(Fig. a)

Method of connecting to front bar terminal

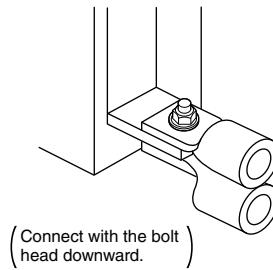






(Fig. b)

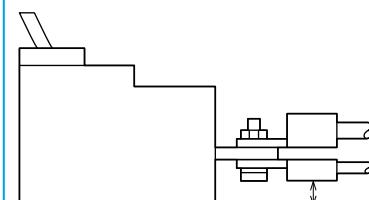

Carefully check the insulating distance between the connecting bus bar, crimp terminal and tightening bolt and the ground and the phase-to-phase insulating distance.

<Explanation of abbreviations>


R	Product specified by JIS
CB	Product specified by JEM 1399
TE	Product made by Tyco Electronics
JST	Product made by J.S.T. Mfg. Co., Ltd.
NTM	Product made by Nichifu Co., Ltd.
DST	Product made by Daido Solderless Terminal Mfg. Co., Ltd.

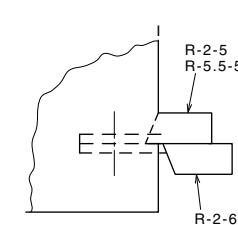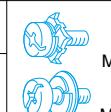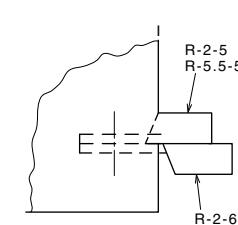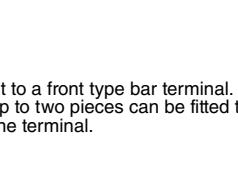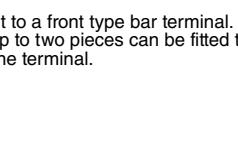	38	60	100	150	200	325	Crimp terminal tightening screw	Shape	Remarks	Reference drawing of connection type
	162A	217A	298A	395A	469A	650A	Screw size			
	26.66 to 42.42	42.42 to 60.57	96.3 to 117.2	117.2 to 152.05	192.6 to 242.27	242.27 to 325				
							M5	2.5 ± 0.5		
	TE #322870 JST 38-S8 NTM R38-S8	1AF-60 (L330T459-12) CB60-S8					M5	2.5 ± 0.5		
	TE #322870 JST 38-S8 NTM R38-S8	1AF-60 (L330T459-12) CB60-S8					M8	6 ± 1		
	TE #322870 JST 38-S8 NTM R38-S8	1AF-60 (L330T459-12) CB60-S8					M5	2.5 ± 0.5		
	R-38-8	R-60-8	2AF (LN300T920-20) CB100-S8	2CR-150(*1) (LN300T920-21) (*1)CB150-S8			M8	10.5 ± 2.5		
	R-38-12	R-60-12	R-100-12	R-150-12	R-200-12	JST325-12	M12	45 ± 5		
	R-38-12	R-60-12	R-100-12	R-150-12 RD150-12 SD150-12	R-200-12 RD200-12 SD200-12	JST325-12 RD325-12 SD325-12				

Remark: 1. For the crimp terminals for UL listed circuit breakers, refer to the page of the characteristics and external dimensions of UL 489 Listed Circuit Breakers.

● Dimensions of crimp terminals <extracted from catalog of JST>

Part number	Shape	Applicable screw size	External dimensions						Applicable wire mm ²	Part number	Shape	Applicable screw size	External dimensions						Applicable wire mm ²
			φd2	B	L	F	E	Thickness					φd2	B	L	F	E	Thickness	
R2-5	A	M5	5.3	9.5	16.8	7.3	4.8	0.8	1.04 to 2.63	LN300T920-21	B	M8	8.4	22.5	70.0	33.0	27.0	3.2	117.2 to 152.05
R2-6		M6	6.4	12.0	21.8	11.0			2.63 to 6.64	L330T402-8		M8	8.4	25.3	61.5	23.0			192.6 to 242.27
R2-8		M8	8.4		15.0	28.0			6.64 to 10.52	R150-12		M12	13.0	36.0	66.0	21.0			152.05 to 192.6
R5.5-5	A	M5	5.3	9.5	19.8	8.3	6.8	1.0	2.63 to 6.64	R200-12	A	M12	13.0	44.0	78.0	24.5	31.5	4.0	192.6 to 242.27
R5.5-6		M6	6.4	12.0	25.8	13.0			2.63 to 6.64	325-12		M12	13.0	50.5	88.0	33.5			242.27 to 325
R5.5-8		M8	8.4	15.0	28.0	13.7			2.63 to 6.64	CB60-S8		M8	8.4	16.0	46.7	20.7			42.42 to 60.57
R8-5	A	M5	5.3	12.0	23.8	9.3	8.5	1.2	6.64 to 10.52	CB100-S8	B	M8	8.4	22.0	52.5	20.5	2.6	96.3 to 117.2	96.3 to 117.2
8-5NS		M5	5.3	9.0	22.3				6.64 to 10.52	CB150-S8		M8	8.4	22.0	61.0	23.0			117.2 to 152.05
R8-6		M6	6.4	12.0	23.8				6.64 to 10.52	R8-8		M8	8.4	15.0	29.8	13.8			152.05 to 192.6
8-5 SC-9	A	M5	5.3	9	23.8	9.3	8.5	1.2	6.64 to 10.52	R-5 SC-9		M12	13.0	40.0	78.0	24.5			192.6 to 242.27
R14-5		M5	5.3	12.0	29.8	6.64 to 10.52			R14-5	M12		13.0	40.0	78.0	24.5	192.6 to 242.27			
14-5NS		M5	5.3	9.0	28.3	13.3			6.64 to 10.52	R14-6		M12	13.0	40.0	78.0	24.5			192.6 to 242.27
R14-6	A	M6	6.4	12.0	29.8	14.5	10.5	1.5	6.64 to 10.52	R14-8		M12	13.0	40.0	78.0	24.5			192.6 to 242.27
R14-8		M8	8.4	16.0	32.8				6.64 to 10.52	L330T459-23		M12	13.0	30.0	12.0	1.8	16.78 to 26.66	4.0	192.6 to 242.27
22-5NS		M5	5.3	9.5	28.7				6.64 to 10.52	22-S6		M12	13.0	30.0					192.6 to 242.27
22-S6	A	M6	6.4	12.0	30.0	14.5	10.5	1.5	6.64 to 10.52	R22-8		M12	13.0	30.0					192.6 to 242.27
R22-8		M8	8.4	16.5	33.7				6.64 to 10.52	R22-12		M12	13.0	22.0	12.0	1.8	16.78 to 26.66	4.5	242.27 to 325
R22-12		M12	13.0	22.0	42.5				6.64 to 10.52	38-S8		M8	8.4	15.5	38.0				242.27 to 325
38-S8	A	M8	8.4	22.0	42.7	177	14.0	1.8	26.66 to 42.42	R38-8		M12	13.0	22.0	12.0	1.8	16.78 to 26.66	4.0	42.42 to 60.57
R38-8		M8	8.4	22.0	42.7	177			26.66 to 42.42	R38-12		M12	13.0	22.0					42.42 to 60.57
R38-12		M12	13.0	22.0	42.7	177			26.66 to 42.42	L330T459-12		M8	8.4	16.0	46.7	20.7			42.42 to 60.57
L330T459-12	A	M8	8.4	22.0	49.7	20.7	18.0	2.0	42.42 to 60.57	R60-8		M12	13.0	22.0	12.0	1.8	16.78 to 26.66	4.5	42.42 to 60.57
R60-8		M8	8.4	22.0	49.7	20.7			42.42 to 60.57	R60-12		M12	13.0	22.0					42.42 to 60.57
R60-12		M12	13.0	22.0	49.7	20.7			42.42 to 60.57	LN300T920-20		M8	8.4	22.5	51.0	20.0			42.42 to 60.57
LN300T920-20	B	M8	8.4	22.5	51.0	20.0	21.0	2.6	96.3 to 117.2	R100-12		A	M12	13.0	28.5	55.6	20.4	3.2	117.2 to 152.05
R100-12		A	M12	13.0	28.5	55.6			96.3 to 117.2								117.2 to 152.05		

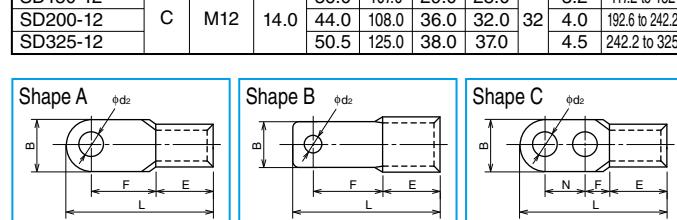

5. Busbar

The size of the conductor can be connected is shown on the outline drawing of each model. The following special busbars are available. Use them as needed. When using any busbar, isolate it from the bare busbar on the circuit breaker power supply side with an insulating barrier.

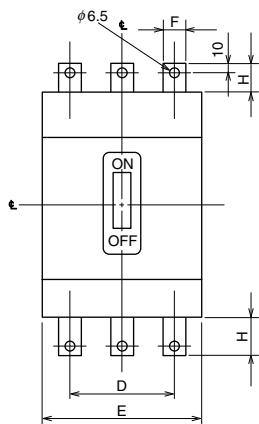


Fig. 1

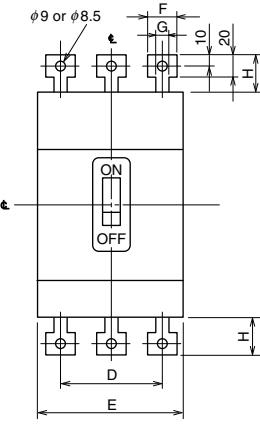
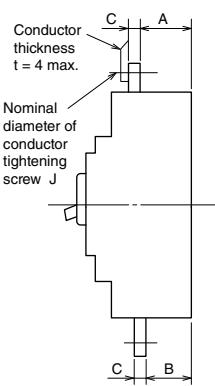


Fig. 2

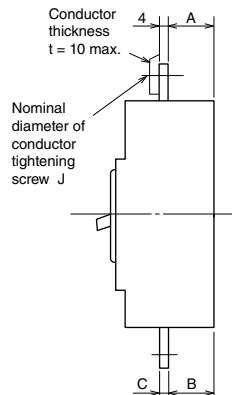


Fig. 2

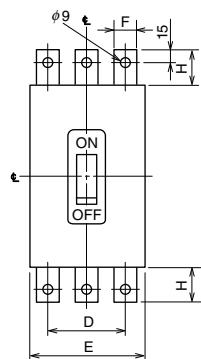


Fig. 3

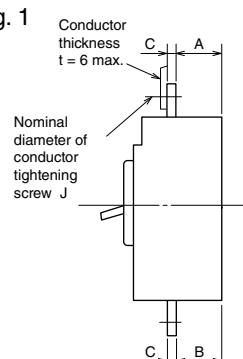


Table 5-7 Table of variable dimensions

Type name	Applicable models		Outline and dimentions	Busbar									
	MCCB	ELCB		Fig.	A	B	C	D	E	F	G	H	J
FB-05SV	NF32-SV NF63-CV (50A or below) NF63-SV (50A or below) NF63-HV (50A or below)	NV32-SV NV63-CV (50A or below) NV63-SV (50A or below) NV63-HV (50A or below)		1	24	24	2	50	75	11.5	-	25	M5x0.8
FB-1SV	NF125-CV, NF125-SV NF125-HV, NF125-UV	NV125-CV NV125-SV NV125-HV		2	24	24	4	60	90	18	15	29	M8
FB-2SV	NF125-SEV NF125-HEV, NF125-RGV NF250-CV, NF250-SV, NF250-HV NF250-UV, NF250-SEV NF250-HEV, NF250-RGV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	NV125-SEV NV125-HEV NV250-CV, NV250-SV NV250-HV, NV250-SEV NV250-HEV		3	24	24	6	70	105	20	-	37	M8

6. Insulation Distance on Power Source Side

●Basic concept

Insulation distance (distance indicated in standards)

Be sure to at least secure the insulation distances (spatial distance and creeping distance) specified by the codes and standards of the relevant equipment and facilities where the circuit breakers are installed.

It is recommended that insulation barriers and insulation tape be used to enhance the electrical insulation between bare-live parts and between bare-live parts and ground to avoid accidents otherwise caused by a loose metal piece, conductive dust, abnormal surge voltage in the circuit or a similar event so as to improve the reliability of panels.

Insulation distance

At the exhaust outlet side of breaker, arc space is necessary. When the actual load circuit is opened, especially when a large current such as overload or short-circuit is interrupted, ionized gas is emitted from the exhaust outlet. This gas can cause a short circuit between bare, live parts such as busbars, and also can cause grounding faults between conductive installation metal panels.

Therefore, it is important to secure enough arc space at the exhaust outlet side of the breaker and to strengthen insulation of parts exposed to the gas. In addition, securing enough space at the front of the exhaust outlet is necessary, because when the gas emission is blocked, failures such as deterioration of breaking performance can be caused.

●Insulation required part

With regard to insulation of bear, live parts of the line side of the breaker, please make sure to insulate at least C part C indicated in the diagram above with insulation tape, a tube or a terminal cover.

①A : Distance from the circuit breaker to the ceiling plate

②B1 : Distance from the circuit breaker to the uncovered conducting part of the upper circuit breaker terminal (front connection)

③B2 : Distance from the lower circuit breaker to the end face of the upper circuit breaker (rear connection)

④D1 : Distance from the side of the breaker to the side plate

⑤C : Insulated length of the power source terminal of the circuit breaker (front connection)

Please secure insulation using insulating tape, insulating tubing, insulation barrier, or a terminal cover, between bare charge parts within this size range. Please refer to a table a necessary size must.

◇When using insulation tape and insulation tubing together with insulation barriers and terminal covers, make them overlap with the other by at least 10mm.

◇For the models with insulation barriers supplied as standard, please make sure to use the barriers.

a : clearance specified in standard

⑥D2 : Side-to-side spacing of breakers

While the circuit breakers can basically be installed together without a clearance in between, be sure to observe the following instructions.

◇It is desirable to install an insulation barrier between the adjacent circuit breakers or insulate the bare-live parts considering the effect of cutoff gas.

◇Be sure to secure the insulation distance (dimension a) as the minimum, indispensable requirement.

◇With a leakage circuit breaker and a leakage alarm circuit breaker installed in close contact with the other, a current of 2,500A or higher flowing through one of the circuit breakers could cause the other to operate falsely.

Be sure to secure a distance of at least 50mm in between.

◇A circuit breaker of 400 ampere frame or larger with an SHT or a UVT could operate falsely if a current of 50kA or higher flows through the adjacent circuit breaker. Be sure to secure a distance of at least 50mm in between.

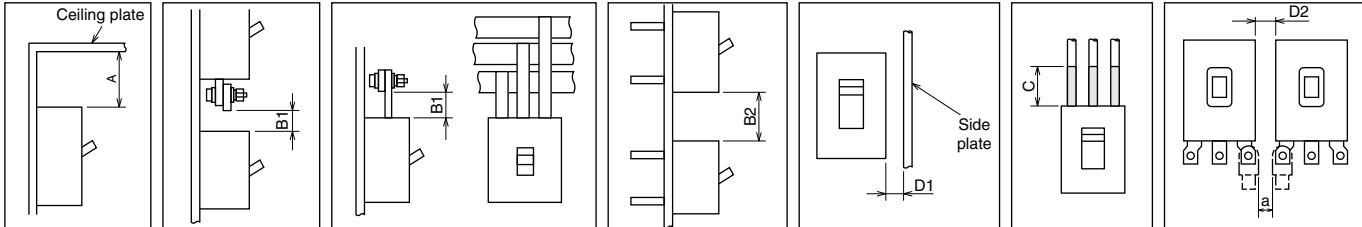


Table 5-8 Insulation distance (mm) (440VAC or below) *Figures in parentheses are for 230VAC or below.

Class • Series	Model		Ceiling plate		Vertical spacing		Horizontal spacing D1
	MCCB	ELCB	A		B1, B2	C	
			Uncovered metal Plate Without terminal cover	With terminal cover	Without terminal cover	With terminal cover	
C • S • H • R • MB	NF30-FAU, NF50-FAU, NF50-FHU, NF100-FHU	NV30-FAU, NV50-FAU, NV50-FHU, NV100-FHU	10	10	10	20	(*1) 20
	NF32-SV, NF63-CV	NV63-CV	5	5	5	20	(*1) 20
	NF63-SV, NF63-HV	NV32-SV, NV63-SV, NV63-HV	10	10	30	30	25
	NF125-CV	NV125-CV	50(30)	40(30)	10	50	(*1) 25
	NF125-SV	NV125-SV	50(10)	30(10)	10	50	50 25
	NF125-HV	NV125-HV	50	40	40	80	80 40
MB	NF250-CV	NV250-CV	40	40	40	50	50 50
	NF125-SEV, NF250-SV, NF250-SEV • NF125-SGV, NF160-SGV, NF250-SGV	NV125-SEV, NV250-SV, NV250-SEV	70(40)	40	40	70(50)	50 70(50) 50
	NF125-HEV, NF250-HV, NF250-HEV • NF125-LGV, NF160-LGV, NF250-LGV	NV125-HEV, NV250-HV, NV250-HEV	80	60	60	80	80 60
	NF125-HGV, NF160-HGV, NF250-HGV • NF400-CW	NV125-HGV, NV250-HGV, NV250-HGV	60	60	60	60	60 40
	NF400-CW, NF400-SEW	NV400-CW, NV400-SEW	70	70	70	70	70 70
	NF400-HEW, NF400-REW	NV400-HEW	200	200	200	200	200 150
R • U	NF630-SW, NF630-SEW, NF630-CW	NV630-CW, NV630-SW, NV630-SEW	70	70	70	70	70 70
	NF630-HEW, NF630-REW	NV630-HEW	200	200	200	200	200 150
	NF800-SEW, NF800-CEW	NV800-SEW	80	80	80	80	80 80
	NF800-HEW, NF800-REW	NV800-HEW	200	200	200	200	200 150
	NF1000-SEW, NF1250-SEW NF1600-SEW	—	100	100	100	100	100 100
	NF125-RGV, NF250-RGV NF125-UV, NF250-UV	—	30 (*6)	30 (*6)	30 (*6)	50 (*9)	50 (*9) 5 25
CP • UL	NF400-UEW	—	70	70	70	70	70 70
	NF800-UEW	—	80	80	80	80	80 80
	CP30-BA, CP30-HU	—	10 (*6)	10 (*6)	10 (*6)	20	(*1) 20
	NF50-SMU	—	(10)	—	(10)	—	(20) (20) (10)
	NF100-SRU	NV100-SRU	30(10)(*6)	30(10)(*6)	10(*6)	50(*7)	50(*7) 10
	NF100-HRU(*4)	NV100-HRU(*4)	60(10)(*6)(7)	60(10)(*6)(7)	10(*6)	70(*6)(*7)	70(*6)(*7) 70(*6)(*7) 10
UL	NF50-SVFU	—	10 (*6)	10 (*6)	20 (*7)	20 (*7)	30 10
	NF250-CVU	NV250-CVU	(40)	(40)	(50)	(50)	(50) (20)
	NF100-CVFU	—	50(25)	40(25)	10	50	50 25(15)
	NF125-SVU(*4)	—	40(10)	30(10)	10	50	50 25(20)
	NF125-HVU(*5)	—	40	40	40	80	80 25(20)
	NF250-SVU(*4)	—	40	40	40	70(50)	50 70(50) 50(20)
	NF250-HVU(*5)	—	40	40	40	80	80 50(20)
	NF400-SWU, NF400-HWU(*5)	—	70	70	70	70	70 70
Notes	NF630-SWU, NF630-HWU(*5)	—	70	70	70	70	70 70

Remark: 1. The table shows the dimensions in the case of the use of a large terminal cover (TC-L).

Notes *1 It is not necessary to provide an insulation distance (an arc space) on the power supply side. However, if a grounding metal piece or the like comes in close contact with the terminal, be sure to completely insulate the terminals or the bare-live parts of the cable conductors.

*2 At more than 440VAC, the distance shall be 10mm.

*3 For 480Y/277VAC.

*4 For 480VAC.

*5 For 600Y/347VAC.

*6 An exhaust port is provided also on the circuit breaker load side. Secure the dimension A both on the power supply side and on the load side.

*7 When any of the circuit breakers NF125-RGV to NF250-RGV is used on the upstream side, an exhaust port is provided also on the circuit breaker load side. Secure the larger distance of the dimension B1 of NF125-RGV, NF250-RGV or NF50-SVFU and the dimension B1 of the downstream circuit breaker.


7. Effect of Installation Orientation

Installation orientation does not affect the operating characteristics of circuit breakers of electronic or thermo-magnetic operation types. However, the installation orientation affects the operating current of fully magnetic type circuit breakers as the iron core in the oil dash pot is under gravitational force.

It is generally suggested they be installed vertically.

● Hydraulic-magnetic (The same applies to other models of hydraulic-magnetic type.)

MCCB		ELCB	
Class	Model	Class	Model
S-H	NF100-SRU, NF100-HRU	S-H	NV100-SRU, NV100-HRU
FH	NF50-FHU, NF100-FHU	FH	NV50-FHU, NV100-FHU

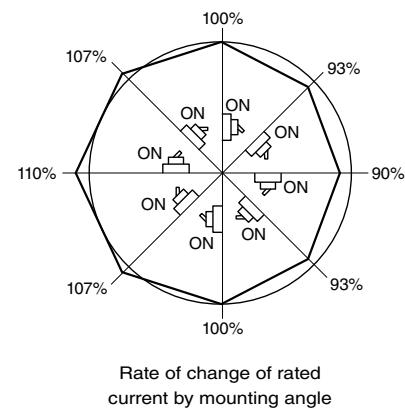


8. Connection of Line and Load

The standard wiring of line and load on the circuit breaker is as shown in (a) normal connection on the right.

Avoid the wiring shown in (b) reverse connection. This may lead to a decrease in breaking performance.

However, the reverse connection is allowed for the following models (excluding MDU breakers).

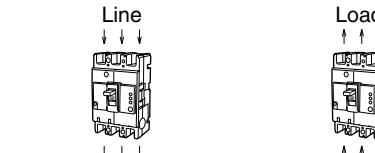

Connection methods

NF-C, NF-S, NF-H, NF-R and NF-U class CP30-BA, CP30-HU, NV-C, S, H and R class of 400 to 800AF, NF100-CVFU, NF100-SRU, NF100-HRU, NF125-SVU, NF125-HVU, NF250-CVU, NF250-SVU, NF250-HVU, NF400-SWU, NF400-HWU, NF630-SWU, NF630-HWU	Reverse connection is allowed for the standard models.
----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	--------------------------------------------------------

6

Accessories

1 Internal Accessories

108

1) Internal Accessories	108
2) Terminal Symbols	109
3) Operations and Ratings of Switches	109
4) Maximum Number of Internal Accessories	110
5) Cassette Type Accessories	115
6) Shunt Trip (SHT)	117
7) Undervoltage Trip (UVT)	118
8) Lead Wire Drawing	120
9) Lead Wire Terminal Block	120
10) Test Button Module (TBM)	121
11) Pre-Alarm Module (PAL)	122

2 External Accessories


123

1) F-type Operating Handle (Breaker Mount Type)	123
2) V-type Operating Handle (Door Mount Type)	125
3) C-type Operating Handle.....	127
4) Terminal Covers	128
5) Insulating Barriers.....	131
6) Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders	134
7) Mechanical Interlocks (MI)	136
8) Boxes for Circuit Breakers and Boxed Circuit Breakers	137
9) Electrical Operated Circuit Breakers and Electrical Operation Devices.....	140
10) IEC 35mm Rail Mounting Adapters	143


1. Internal Accessories

The accessories to be installed in circuit breakers include the followings. For the numbers of the accessories which can be installed, refer to the tables on pages 110 to 114. The standard internal accessories have lead wires (450mm in length) drawn out. (However, some of Models UVT and TBM have vertical lead wire terminal blocks as standard.) When circuit breakers are installed side by side, keep a space of 8mm or more for lead wires between the circuit breakers. (Models with lead wires drawn out toward load and models with lead wire grooves in the side faces can be installed in close contact.)


SHT (Shunt trip)
Device to electrically trip a circuit breaker from a distance. The allowable operating voltage range is 70 to 110% of the rated voltage.

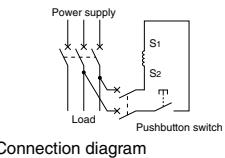

AL (Alarm switch)
Switch to electrically display the tripping status of circuit breaker.

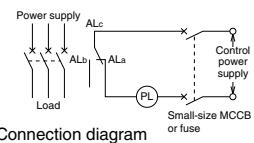


AX (Auxiliary switch)
Switch to electrically display the ON-OFF status of circuit breaker.

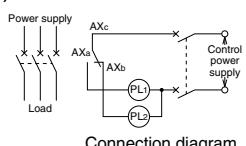

UVT (Under voltage trip)
Device to automatically trip a circuit breaker when the voltage drops. The operating voltage is 70 to 35% of the UVT rated voltage.

When the voltage recovers at least to 85% or more, the circuit breaker can be turned on after the device is manually reset.

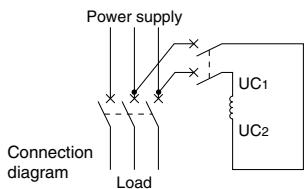


SLT (Lead wire terminal block)

Terminals for connecting with internal accessories. The terminal block will be manufactured to order. For the detailed dimensions, refer to pages 120 and 121. (The dimensions of SLT slightly vary depending on the number of installed accessories and the model.)

However, circuit breakers with a frame size of 400A and above having an electrical operation device are normally provided with SLT.

TBM (Test button module)

Unit to perform test under voltage from a distance. TBMs can be connected in parallel. (The standard TBMs are provided with SLT. In the case of the flush plate type, the external dimensions are partially different from those of the standard type.)

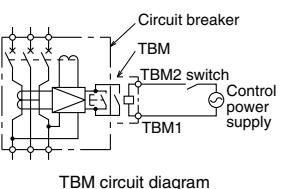

2. Terminal Symbols

Table 6-1

Accessory name	Nameplate (sample)	Accessory name	Nameplate (sample)
AL Alarm switch			
AX Auxiliary switch			
SHT Shunt tripping device			
UVT Undervoltage tripping device		TBM Test button module	

3. Operations and Ratings of Switches

Table 6-2 Operations of AL switch

Status of circuit breaker	Contact status of AL switch
Off or On	 98/ALa (open) 96/ALb (closed) 95/ALc
Trip	 98/ALa (closed) 96/ALb (open) 95/ALc

* The terminal numbers 98/ALa, 96/ALb and 95/ALc may vary depending on the number of installed switches and the installation poles.

Table 6-3 Operations of AX switch

Status of circuit breaker	Contact status of AX switch
Off or Trip	 14/AXa (open) 12/AXb (closed) 11/AXc
On	 14/AXa (closed) 12/AXb (open) 11/AXc

* The terminal numbers 14/AXa, 12/AXb and 11/AXc may vary depending on the number of installed switches and the installation poles.

Table 6-4 Ratings of AL·AX (Above 400A frame) switches

Applied switch	AC			DC		
	Voltage V	Current A		Voltage V	Current A	
A	(250)	(1)	(0.5)	(50)	(1)	(0.5)
	125	3	(1)	30	2	(1)
S	460	—	—	250	0.2	0.2
	250	3	2	125	0.4	0.4
V	125	5	3	30	4	3
	460	5	2	250	0.3	0.3
	250	10	10	125	0.6	0.6
	125	10	10	30	10	6

Remarks: 1. The ratings in parentheses do not conform to UL.
2. For the applied switches, refer to Tables 6-9 to 6-12-2.

Table 6-5 Ratings of corrosion resist AL and AX switches

Corrosion resist switch	AC			DC		
	Voltage V	Current A		Voltage V	Current A	
ST	460	—	—	250	0.2	0.2
	250	3	2	125	0.4	0.4
VT	125	5	3	30	4	3
	460	1	0.5	250	0.3	0.3
	250	5	4	125	0.4	0.4
	125	5	4	30	5	3

Table 6-6 Ratings of small loads AL·AX switches


Switch	AC			DC		
	Voltage V	Current A		Voltage V	Current A	
AB	125	0.1	—	30	(0.1)	—
SB	125	0.1	—	30	0.1	—
VB	125	0.1	—	30	0.1	—

Remark: 1. Ratings in parentheses are not subject to UL.

4. Maximum Number of Internal Accessories

MCCB and Motor Protection Breakers

Table 6-7 Table of maximum number of internal accessories

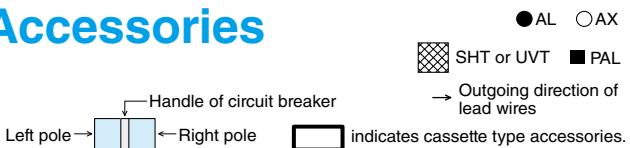

Model	C	NF63-CV NF125-CV	NF63-CV NF125-CV NF250-CV		NF400-CW NF630-CW	NF800-CEW		
		S	NF32-SV NF63-SV NF125-SV	NF125-SEV NF250-SEV	NF400-SW NF400-SEW NF630-SW NF630-SEW	NF800-SEW NF800-SDW	NF1000-SEW NF1250-SEW NF1600-SEW	
L • H • R	NF63-HV	NF63-HV	NF63-HV NF125-HV NF125-LGV NF125-HGV NF125-RGV NF160-LGV NF160-HGV NF250-HV NF250-LGV NF250-HGV NF250-RGV	NF125-HEV NF250-HEV	NF400-HEW NF400-REW NF630-HEW NF630-REW	NF800-HEW NF800-REW		
U			NF125-UV NF250-UV		NF400-UEW(3P)	NF400-UEW(4P) NF800-UEW		
HDV HDW HDVA	NF63-HDV	NF63-HDV	NF63-HDV(3P) NF125-HDVA(4P) NF250-HDVA(4P)		NF400-HDW(3P, 4P)	NF800-HDW(3P, 4P)		
Number of poles (standard) switches AL and AX	2 poles	2, 3 or 4 poles	3, 4 poles	2, 3 or 4 poles	2, 3 or 4 poles	2, 3 or 4 poles		
Accessory			S				V	
AL								
AX								
SHT or UVT								
AL + AX								
SHT + UVT								
SHT AL + or UVT								
AX + or UVT								
SHT AL + AX + or UVT								
PAL (contact output)								

Notes *1 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)

*2 The second AX can be installed in place of the AL on the left pole side. When placing an order, specify the incorporation of the switches in the body.

*3 PAL (contact output) can be installed together with AL and AX on the left pole side. (It cannot be installed together with SHT or UVT.)

The standard type is provided with SLT. PAL control voltage (compatible with 100 to 200VAC) is necessary.

*4 SHT and UVT can be installed on the left side.

*5 SHT and UVT are normally installed on the right pole side. If you intend to install them on the left pole side, specify so. (The non-reset type UVT must be installed on the left pole side.)

*6 In the case where three or more accessories are installed on the left pole side and AL, AX or AL and AX are installed on the pole on which SLT, SHT or UVT is installed, the SLT will be manufactured to order.

*7 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be installed separately.



*8 SLT is provided as standard. A control power supply (100 to 200VAC) is required. (In this case, other internal accessories cannot be installed on the right pole side.)

Remarks: 1. For electrically operated automatic reset type circuit breakers having a frame size of 400A or above, the numbers of AL switches which can be installed are smaller by 1 than the values shown above.

2. The encircled numbers indicate the order of installation.

3. AL and AX for minute load can be manufactured to order.

ELCB**Table 6-8 Table of maximum number of internal accessories**

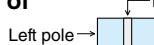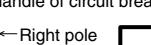Handle of circuit breaker
 Left pole →  Right pole 

● AL ○ AX  SHT or UVT

 TBM → Outgoing direction of lead wires

Model	C	NV63-CV NV125-CV NV250-CV	NV400-CW NV630-CW	
	S	NV32-SV NV63-SV NV125-SV NV125-SEV NV250-SV NV250-SEV	NV400-SW NV400-SEW NV630-SW NV630-SEW	NV800-SEW
H • R		NV63-HV NV125-HV NV125-HEV NV250-HV NV250-HEV	NV400-HEW NV630-HEW	NV800-HEW
Number of poles Switch		2, 3, or 4 poles	3 poles	
Accessory	S			
AL			 (*6)	
AX			 (*6)	
AL + AX	 (*2)	 (*6)	 (*6)	
SHT or UVT	 (*3)	 (*5)	 (*5)	
SHT AL + or UVT		 (*4) (*5) (*6)	 (*4) (*5) (*6)	
SHT AX + or UVT		 (*4) (*5) (*6)	 (*4) (*5) (*6)	
AL + AX + or UVT		 (*4) (*5) (*6)	 (*4) (*5) (*6)	
TBM	 (*1)	 (*1)	 (*1)	

Notes *1 The standard type is provided with SLT. Only in the case of 24VDC, specify the control voltage.

*2 The second AX can be installed in place of the AL on the left pole side. When placing an order, specify the incorporation of the switches in the body.

*3 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)

*4 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be separately installed.

*5 When the accessory is provided with UVT, the UVT voltage module has a vertical lead wire terminal block. The UVT is not provided with a cassette.

*6 SLT to be used when three or more accessories are installed on the left pole is manufactured to order.

Remarks: 1. The encircled numbers indicate the order of installation.

2. TBM can be installed regardless of the number of installed AL, AX, SHT and UVT.

3. AL and AX for minute load can be manufactured to order.

6 Accessories

1 Internal Accessories

UL Circuit Breakers

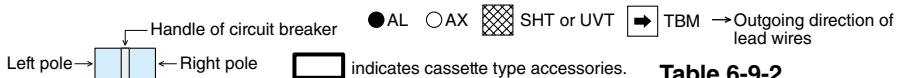


Table 6-9-1 Table of maximum number of internal accessories

Model Number of poles (standard) AL and AX switches	MCCB	NF30-FAU	NF50-FHU	NF100-SRU		NF50-SVFU	NF50-SVFU	NF125-SVU		NF400-SWU	NF630-SWU
		NF50-FAU	NF100-FHU(3P)	NF100-HRU		NF100-CVFU	NF100-CVFU	NF125-HVU		NF400-HWU	NF630-HWU
		2, 3 poles	2, 3 poles	2 poles	3 poles	2 poles	3 poles	2 or 3 poles	3 poles	3 poles	3 poles
Accessory		A	S	A			S				
AL											
AX											
SHT or UVT											
AL + AX											
AL + SHT or UVT											
AX + SHT or UVT											
AL + AX + SHT or UVT											

Table 6-9-2
Table of maximum
number of accessories

Model Number of poles (standard) AL and AX switches	NF	NF50-SMU
		1, 2, 3 poles
		-
Accessory	AL	
AX		
SHT		
AL + AX		
AL + SHT		
AX + SHT		
AL + AX + SHT		

6 Accessories

1 ELCB

Model Number of poles (standard) AL and AX switches	ELCB	NV30-FAU	NV50-FHU	NV100-SRU	NV100-HRU(3P)	NV50-SVFU	NV50-SVFU	NV125-SVU	NV125-HVU	NV250-SVU	NV250-HVU
		NV50-FAU	NV100-FHU(3P)	NV100-HRU(3P)	NV100-CVFU	NV100-CVFU	NV125-HVU	NV250-HVU			
		2, 3 poles	2, 3 poles	2, 3 poles	2 poles	3 poles	3 poles	3 poles	3 poles	3 poles	3 poles
Accessory		A	S	A			S				
AL											
AX											
SHT or UVT											
AL + AX											
AL + SHT or UVT											
AX + SHT or UVT											
AL + AX + SHT or UVT											
TBM											

Notes

- *1 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)
- *2 SHT cannot be installed.
- *3 SHT and UVT are normally installed on the right pole side. If you intend to install them on the left pole side, specify so.
- *4 In the case where three or more accessories are installed on the left pole side and AL, AX or AL and AX are installed on the pole on which SLT, SHT or UVT is installed, the SLT will be manufactured to order.
- *5 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be installed separately.
- *6 UVT of NF50-SVFU and NV50-SVFU are not provided with cassettes.
- *7 The standard type is provided with SLT. Only in the case of 24VDC, specify the control voltage.
- *8 UVT cannot be installed.
- *9 Lead drawing is standard. Lead drawing is also available. For NF/NV100-FHU, Lead wires are usually extended load side.
- *10 Lead drawing is not available.
- *11 Left pole SHT and UVT are mounted on the side of circuit breaker.

Remarks:


- 1. The encircled numbers indicate the order of installation.
- 2. AL and AX for minute load can be manufactured to order. (These switches have been certified only by UL and CSA. They have not been certified by TUV.)

MDU Breakers

Table 6-10-1 Table of maximum number of internal accessories

The numbers in **O** indicate the mounting order.

Model	NF250-SEV with MDU NF250-HEV with MDU
Number of poles	3, 4 poles
Switch	S
AL	
AX	
AL+AX	
SHT	
UVT	
AL+SHT	
AX+SHT	
AL+AX+SHT	
AL+UVT	
AX+UVT	
AL+AX+UVT	

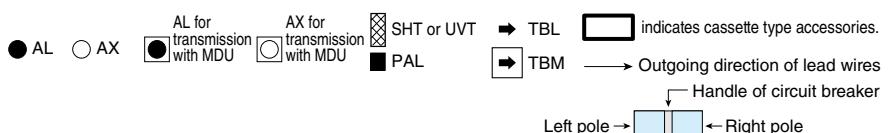

Model	NF250-SEV with MDU NF250-HEV with MDU
Number of poles	3, 4 poles
Switch	S
PAL	
AL for transmission with MDU *6	
AX for transmission with MDU *6	
AL+AX for transmission with MDU *6	
AL+AX+AL for transmission with MDU *6	
AL+AX+AX for transmission with MDU *6	
AL+AX+AL+AX for transmission with MDU *6	

Notes:

*1 The right pole SLT specification is built into the main unit (not included with the cassette).

When MDU specification is "Breaker mounting", "Breaker mounting unit separates".

*2. The second AX can be mounted in place of the AL on the left pole side. Please order with the built-in body.

*3. Left pole mounting is also possible.

*4. The UVT voltage module is a vertical lead wire terminal block type. UVT is not included with the cassette.

MDU installation type	UVT specification	Remarks
Breaker mounting	· UVT voltage module separate installation is standard. · In the case of separate display unit, UVT voltage module body mounting is also available.	Left pole mounting is also possible. (Reset type UVT can not be mounted on the left)
Breaker mounting unit separate installation		
External mounting	· UVT voltage module body mounting is standard. · A separate UVT voltage module can also be manufactured.	
Panel mounting		

*5. It comes with a terminal block specification.

A control power supply (100-240VAC/DC common) is required (In this case, other internal accessories can not be mounted on the right pole).

When MDU specification is "Breaker mounting", "Breaker mounting unit separates".

*6. When transmitting AL, AX, AL + AX, AL and AX for MDU transmission are left pole mounted.

In this case, AL and AX for MDU transmission installed on the left pole side can not be used for lead wire extraction and terminal block installation to the outside.


Remark:

1. AL and AX for minute load can be manufactured to order.

6 Accessories 1 Internal Accessories

MDU Breakers

Table 6-10-2 Table of maximum number of internal accessories

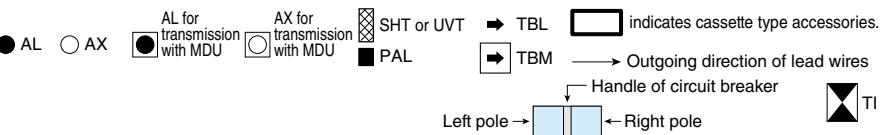

The numbers in ○ indicate the mounting order.

Model	NF400-SEW with MDU	NF800-SEW with MDU
Number of poles	3, 4 poles	
Switch	S	
AL		
AX		
SHT		
UVT		
AL+AX		
AL+SHT		
AX+SHT		
AL+AX+SHT		
AL+UVT		
AX+UVT		
AL+AX+UVT		

Notes: *1 When mounting 3 or more accessories on the left pole, SLT is manufactured upon order.

*2 The right pole mounting is standard for SHT. Please specify for left pole installation.

*3 The UVT voltage module is a vertical lead wire terminal block type. UVT is not included with the cassette. With embedded UVT, "UVT voltage module separate" Please specify

*4 UVT is standard with right pole mounting. Please specify for left pole installation. (The reset prevention type UVT has a left pole mounting)

*5 When mounting AL, AX, AL + AX on the same pole as UVT, the UVT voltage module is separate.

*6 It comes with a terminal block specification. Control power supply (100-240VAC/DC shared) 5VA is required.
 (In this case, other internal accessories can not be mounted on the right pole)

*7 When transmitting AL, AX, AL + AX, AL and AX for MDU transmission are left pole mounted.

In this case, AL and AX for MDU transmission installed on the left pole side can not be used for lead extraction and terminal block installation to the outside.

MDU installation type	UVT specification	Remarks
Breaker mounting	• UVT voltage module separate installation is standard. • In the case of separate display unit, UVT voltage module body mounting is also available.	
Breaker mounting unit separate installation		Left pole mounting is also possible. (Reset type UVT can not be mounted on the left)
External mounting	• UVT voltage module body mounting is standard.	
Panel mounting	• A separate UVT voltage module can also be manufactured.	

Remark: 1. AL and AX for minute load can be manufactured to order.

5. Cassette Type Accessories


The internal accessories for major models having a frame size from 30 to 800A come in cassettes, and they can be installed to and removed from circuit breakers by the user.

Some cassette type accessories have lead wires drawn out, and others have vertical lead wire terminal blocks (SLT). (These parts are supplied by 10 pieces for frame size from 30 to 250A or by 1 piece for frame size from 400 to 800A.)

■ Applicable models and kinds of cassette type accessories

	Model	Alarm switch (AL)	Auxiliary switch (AX)	Shunt tripping device (SHT)	Undervoltage tripping device (UVT)
MCCB	NF100-SRU, NF100-HRU NF63-CV~NF250-CV, NF32-SV~NF250-SV NF63-HV~NF250-HV NF125-SGV~NF250-SGV, NF125-LGV~NF250-LGV NF125-HGV~NF250-HGV NF125-SEV, NF250-SEV, NF125-HEV, NF250-HEV NF125-RGV, NF250-RGV, NF125-UV, NF250-UV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU	○	○	○	○
	NF50-SVFU, NF400-CW, NF630-CW, NF800-CEW NF400-SW, NF630-SW, NF400-SEW~NF800-SEW NF800-SDW, NF400-HEW~NF800-HEW NF400-REW~NF800-REW, NF400-UEW, NF800-UEW NF400-SWU/HWU, NF630-SWU/HWU	○	○	○	-
ELCB	NV100-SRU, NV100-HRU NV63-CV~NV250-CV, NV32-SV~NV250-SV NV63-HV~HV250-HV NV125-SEV, NV250-SEV, NV125-HEV, NV250-HEV NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU	○	○	○	○
	NV50-SVFU, NV400-CW, NV630-CW NV400-SW, NV630-SW, NV400-SEW~NV800-SEW NV400-HEW~NV800-HEW	○	○	○	-

■ Procedure for installing cassette type accessories

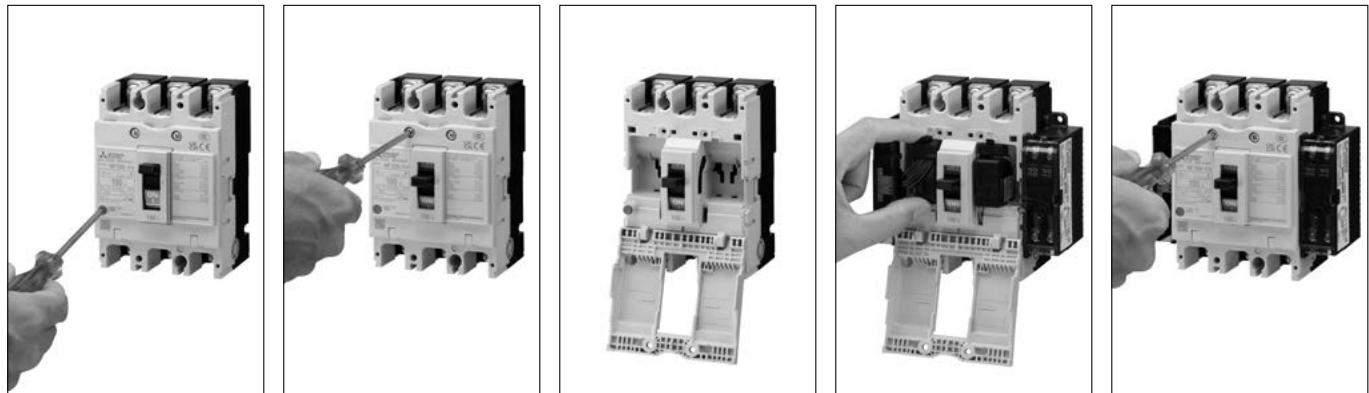

1. Press the trip button (PTT) to trip the circuit breaker. (*1)
2. Loosen the cover screws.
3. Open the cover.
4. Install the cassette type accessory. (*2)
5. Close the cover, and tighten the screws.

Notes *1. When installing any cassette type accessory, set the circuit breaker to the tripped state.

*2. If the inner lid or another accessory has been installed, remove it before installing the accessory.

When any circuit breaker supplied with the inner lid is used without an accessory, fit the inner lid without fail.

Failure to do so may affect the short-circuiting performance.

Models with inner lid: NF125-SV, NF125-HV, NF125-UV

NF125-SV, NV125-HV

NF250-SV, NF250-HV, NF250-CVU

NV250-SV, NV250-HV, NV250-CVU

NF125-SVU, NF125-HVU, NV125-SVU, NV125-HVU

NF250-SVU, NF250-HVU, NV250-SVU, NV250-HVU

NF125-SGV~NF250-SGV

NF125-LGV~NF250-LGV

NF125-HGV~NF250-HGV

NF250-SEV, NF250-HEV, NF250-UV

NF250-HEV

NF125-SEV, NF125-HEV

NV125-SEV, NV125-HEV

NF400-REW, NF400-UEW

NF630-REW

NF800-HEW, NF800-REW, NF800-UEW

NV800-HEW

NF630-SWU, NF630-HWU

Cautions when installing

Before installing or removing any cassette type accessory, set the circuit breaker and accessories to the no-voltage state.

Never install a cassette type accessory while the handle is in the ON or OFF position. Doing so may damage the accessory.

When installing an accessory with lead wires drawn out, apply the supplied nameplate to the circuit breaker side face.

When installing an accessory with lead wires drawn out for a frame size of 400 to 800A, secure the lead wires along the circuit breaker side face with the supplied lead wire retainers.

6 Accessories

Internal Accessories

Type name

Table 6-11-1

Model		Installation pole	AL	AX	AL+AX	SHT	UVTN or UVTS			
MCCB	ELCB									
NF50-SVFU		For right pole	AL-03SVU AL-03SVURS	AX-03SVU AX-03SVURS	ALAX-03SVU ALAX-03SVURS	SHTA240-03SVUR SHTA440-03SVUR SHTD100-03SVUR SHTA240-03SVURS SHTA440-03SVURS SHTD100-03SVURS	-			
		For left pole								
NV50-SVFU		For left pole	AL-03SVU AL-03SVULS	AX-03SVU AX-03SVULS	ALAX-03SVU ALAX-03SVULS	SHTA240-03SVUL SHTA440-03SVUL SHTD100-03SVUL SHTA240-03SVULS SHTA440-03SVULS SHTD100-03SVULS	-			
		For right pole	AL-05SV AL-05SVRS	AX-05SV AX-05SVRS	ALAX-05SV ALAX-05SVRS	SHTA240-05SVR SHTA550-05SVR SHTD125-05SVR SHTA240-05SVRS SHTA550-05SVRS SHTD125-05SVRS	UVTNAD130-05SVR UVTNA250-05SVR UVTNA480-05SVR UVTNAD130-05SVRS UVTNA250-05SVRS UVTNA480-05SVRS	UVTSA130-05SVR UVTSA250-05SVR UVTSA480-05SVR UVTSA130-05SVRS UVTSA250-05SVRS UVTSA480-05SVRS		
NF32-SV, NF63-CV, NF63-SV, NF63-HV NF125-CV, NF125-SV, NF125-HV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF125-SEV, NF125-HEV NF125-RGV, NF125-UV NF250-CV, NF250-SV, NF250-HV NF250-SGV, NF250-LGV, NF250-HGV NF250-SEV, NF250-HEV NF250-RGV, NF250-UV	NV32-SV, NV63-CV NV63-SV, NV63-HV NV125-CV, NV125-SV NV125-HV NV125-SEV, NV125-HEV NV250-CV, NV250-SV NV250-HV NV250-SEV, NV250-HEV	For left pole	AL-05SV AL-05SVLS	AX-05SV AX-05SVLS	ALAX-05SV ALAX-05SVLS	SHTA240-05SVL SHTA550-05SVL SHTD125-05SVL SHTA240-05SVLS SHTA550-05SVLS SHTD125-05SVLS	UVTNAD130-05SVL UVTNA250-05SVL UVTNA480-05SVL UVTNAD130-05SVLS UVTNA250-05SVLS UVTNA480-05SVLS	UVTSA130-05SVL UVTSA250-05SVL UVTSA480-05SVL UVTSA130-05SVLS UVTSA250-05SVLS UVTSA480-05SVLS		
		For right pole	AL-05SVU AL-05SVURS	AX-05SVU AX-05SVURS	ALAX-05SVU ALAX-05SVURS	SHTA240-05SVUR SHTA550-05SVUR SHTD125-05SVUR SHTA240-05SVURS SHTA550-05SVURS SHTD125-05SVURS	UVTNAD130-05SVUR UVTNA250-05SVUR UVTNA480-05SVUR UVTNAD130-05SVURS UVTNA250-05SVURS UVTNA480-05SVURS	UVTSA130-05SVUR UVTSA250-05SVUR UVTSA480-05SVUR UVTSA130-05SVURS UVTSA250-05SVURS UVTSA480-05SVURS		
NF100-CVFU NF125-SVU/HVU NF250-CVU/SVU/HVU	NV100-CVFU NV125-SVU/HVU NV250-CVU/SVU/HVU	For right pole	AL-05SVU AL-05SVURS	AX-05SVU AX-05SVURS	ALAX-05SVU ALAX-05SVURS	SHTA240-05SVUR SHTA550-05SVUR SHTD125-05SVUR SHTA240-05SVURS SHTA550-05SVURS SHTD125-05SVURS	UVTNAD130-05SVUR UVTNA250-05SVUR UVTNA480-05SVUR UVTNAD130-05SVURS UVTNA250-05SVURS UVTNA480-05SVURS	UVTSA130-05SVUR UVTSA250-05SVUR UVTSA480-05SVUR UVTSA130-05SVURS UVTSA250-05SVURS UVTSA480-05SVURS		
		For left pole	AL-05SVU AL-05SVLS	AX-05SVU AX-05SVLS	ALAX-05SVU ALAX-05SVLS	SHTA240-05SVUL SHTA550-05SVUL SHTD125-05SVUL SHTA240-05SVULS SHTA550-05SVULS SHTD125-05SVULS	UVTNAD130-05SVUL UVTNA250-05SVUL UVTNA480-05SVUL UVTNAD130-05SVULS UVTNA250-05SVULS UVTNA480-05SVULS	UVTSA130-05SVUL UVTSA250-05SVUL UVTSA480-05SVUL UVTSA130-05SVULS UVTSA250-05SVULS UVTSA480-05SVULS		
NF100-SRU NF100-HRU	NV100-SRU NV100-HRU	For right pole	AL-05SRU	AX-05SRU	ALAX-05SRU	SHTA240-05SRU SHTA480-05SRU SHTD125-05SRU	-			
		For left pole	AL-05SRURS	AX-05SRURS	ALAX-05SRURS	SHTA240-05SRURS SHTA480-05SRURS SHTD125-05SRURS	-			
NF400-CW, NF400-SW, NF400-SEW NF400-HEW, NF400-REW, NF400-UEW NF630-CW, NF630-SW, NF630-SEW NF630-HEW, NF630-REW NF800-CEW, NF800-SDW, NF800-SEW NF800-HEW, NF800-REW, NF800-UEW	NV400-CW, NV400-SW NV400-SEW, NV400-HEW NV630-CW, NV630-SW NV630-SEW, NV630-HEW NV800-SEW, NV800-HEW	For right pole (2, or 3 poles)	-	AX-4SW AX-4SWRS AX2-4SWRS	-	SHT-4SW SHT-4SWRS	-			
		For right pole (4 poles)	-	-	-	SHT-4WRFS SHT-8WRFS	-			
NF400-SWU, NF400-HWU NF630-SWU, NF630-HWU		For left pole (2, 3 or 4 poles)	AL-4SWL AL-4SWLS AL2-4SWLS	AX-4SW AX-4SWLS AX2-4SWLS	ALAX-4SWL ALAX-4SWLS	SHT-4SW SHT-4SWLS	-			
		For right pole	-	AX-4SWU AX-4SWURS AX2-4SWURS	-	SHT-4SWU SHT-4SWURS	-			
		For left pole	AL-4SWU	AX-4SWU	ALAX-4SWU	SHT-4SWU	-			

Remarks: 1. For the possibility of installation of accessories and the installation pole, refer to the tables of maximum numbers on pages 110 to 114.

2. AL and AX for minute load can be manufactured to order. (Please specify "B" at the end of the model.)

3. Corrosion-proof cassette type AL and AX are not available. When the circuit breaker body is exposed to class 1 tropicalization, class 2 tropicalization, reinforced corrosion resistance treatment or class 2 heat resistance treatment, place an order for the circuit breaker including the accessories.

4. Cassette type accessories with SLT for right pole cannot be installed to 4-pole circuit breakers. Accessories with SLT for right pole to be used in 4-pole circuit breakers are manufactured to order.

5. Cassette type accessories with SLT cannot be installed to flush plate type circuit breakers.

6. It is impossible to install a combination of a cassette type accessory with lead wires drawn out and that with SLT or a combination of cassette type accessories with SLT on the same pole.

7. It is impossible to install the cassette type AL or AX to the pole to which UVT has been installed.

8. AX and SHT with lead wires drawn out for frame size from 400 to 800A can be installed to any of the right and left poles.

9. When installing more than one AL or AX with lead wires drawn out for frame size from 400 to 800A to one side, install the necessary number of the accessories for one piece. The lead wires from the circuit breaker vary in length depending on the installation position.


10. Install the cassette accessories for frame size from 400 to 800A starting from the outside of the installation positions. For the installation positions, see the installation positions shown in the following table.

11. When three pieces of more of AL and AX are installed on a circuit breaker with a frame size 400 to 800A, the AL and AX with SLT are manufactured to order.

Installation positions of cassette type accessories for 400 to 800A frames

Installation positions

Table 6-11-2 Installation positions of cassette type accessories

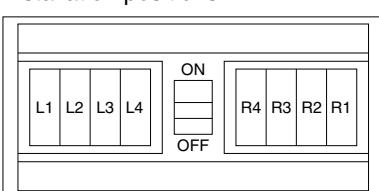

* Accessories only for Earth Leakage Circuit Breakers (NV-C, S and H), Earth Leakage Alarm Breakers (NF-Z) and single-phase 3-wire circuits (NF-N and NV-N) cannot be installed to R1, R2, R3 or R4.

Note *1 It is impossible to simultaneously install AX on R2 and SHT on R3 or R4.

Interpretation of type name

(1) Alarm switch • Auxiliary switch

AL	2	—	4	SV (or SW)	L	S	B	
Kind of accessory								
AL	Alarm switch							
AX	Auxiliary switch							
Number of accessories to be installed								
When installing more than one AL or AX with SLT, specify the number.								
Ampere frame								
05	For 30 to 250A frames							
4	For 400 to 800A frames							
Installation position								
R	Right pole, 2 or 3 poles							
RF	Right pole, 4 poles							
L	Left pole							
Blank	Right and left							
Kind of switch								
Blank	Standard							
B	Minute load							
	With SLT (vertical lead wire terminal block) (with lead wires drawn out unless otherwise specified)							

(2) Shunt tripping device

Undervoltage tripping device

SHT	A1	—	1	SV (or SW)	R	S	
Kind of accessory							
SHT	Shunt tripping device						
UVTN (*1)	Undervoltage						
UVTS (*2)	tripping device						
Voltage (SHT)							
A240	100-240VAC						
A440	380-440VAC						
A480	380-480VAC						
A550	380-550VAC						
D100	100VDC						
D125	100-125VDC						
Blank	100-450VAC/100-200VDC						
Ampere frame							
05	For 30 to 250A frames						
4	For 400-600-630A frames						
	For 800A frames (3P)						
8	For 800A frames (4P)						
Installation position							
R	Right pole, 2 or 3 poles						
RF	Right pole, 4 poles						
L	Left pole						
Blank	Right and left						
With SLT (vertical lead wire terminal block) (with lead wires drawn out unless otherwise specified)							

Notes *1 The circuit breaker cannot be reset if voltage is not applied to UVTN. (Non-reset type UVT)

*2 The circuit breaker can be reset even if voltage is not applied to UVTS. (Reset type UVT)

6. Shunt Trip (SHT)

■ Coil ratings (standard)

Table 6-12-1

Model	Provision of coil burnout preventing switch	Voltage (V)		Input (VA)		Operating time (*2) (ms)
		AC	DC	AC	DC	
NF30-FAU		100-120VAC				20 or less
NF50-FAU		200-240VAC				
NF50-FHU		100-120VAC				50
NF100-FHU		200-240VAC				15 or less
NF50-SVFU		100-240VAC				
NV50-SVFU		380-440VAC				
NV50-SVFU		100VDC				
NF32-SV, NF63-CV/SV/HV, NF125-SGV/LGV/HGV		100-240VAC				
NF160-SGV/LGV/HGV, NF125-CV/SV/HV/SEV/HEV/RGV/UV		380-550VAC				
NF250-CV/SV/HV/SEV/HEV/RGV/UV		100VDC				
NF250-SGV/LGV/HGV		100-240VAC				
NV32-SV, NV63-CV/SV/HV		380-450VAC				
NV125-CV/SV/HV/SEV/HEV, NV250-CV/SV/HV/SEV/HEV		100-125VDC				
NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU		100-240VAC				
NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU		380-480VAC				
NF100-SRU/HRU (*3)		100-240VAC				
NF400-CW/SW/SEW/HEW/REW/UEW		100-240VAC				
NF630-CW/SW/SEW/HEW/REW		380-550VAC				
NF800-CEW/SDW/SEW/HEW/REW/UEW		100-125VDC				
NV400-CW/SW/SEW/HEW		100-240VAC				
NV630-CW/SW/SEW/HEW		380-450VAC				
NV800-SEW/HEW, NF400-SWU/HWU, NF630-SWU/HWU		100VDC				
NF100-SRU/HRU		100-110VAC, 110-127VAC				
NV100-SRU/HRU		200-220VAC, 220-240VAC				
NF1000-SEW, NF1250-SEW/SDW		24VDC, 100-110VDC				
NF1600-SEW/SDW		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				
		100-120VAC				
		200-240VAC				
		380-450VAC				
		100VDC				
		100-110VAC				
		200-220VAC				
		24VDC, 100-110VDC				

7. Undervoltage Trip (UVT)

(1) Specifications for UVT and coil ratings

Table 6-13

Model	Specification		Coil ratings			
	Reset type	Non-reset type	Voltage (V)		Input (VA)	
			Standard voltage	Special voltage (*1)		
NF50-SVFU NV50-SVFU	—	○	100-130VAC/DC 200-250VAC 380-480VAC	24VAC/DC 48VAC/DC	5	30 or less
NF32-SV, NF63-CV/SV/HV/HRV NF125-CV/SV/HV/RGV/SEV/HEV/UV NF125-SGV/LGV/HGV, NF160-SGV/LGV/HGV NF250-CV/SV/HV/RGV/SEV/HEV/UV NF250-SGV/LGV/HGV NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV/SEV/HEV NV250-CV/SV/HV/SEV/HEV NF100-CVFU, NF125-SVU/HVU, NF250-CVU/SVU/HVU NV100-CVFU, NV125-SVU/HVU, NV250-CVU/SVU/HVU	○	○		24VAC/DC 48VAC/DC 500-600VAC		
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW/REW/UEW NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	○ (*4)	○ (*5)	Switching between 100 to 110 and 120 to 130VAC Switching between 200 to 220 and 230 to 250VAC Switching between 380 to 415 and 440 to 480VAC Switching between 100 and 110VDC	(*3) Switching between 24/48VAC Switching between 500 to 550/600VAC Switching between 24/48VDC Switching between 110/125VDC	5	5-30
NF1000-SEW, NF1250-SEW NF1600-SEW	○	○				5-35
NF400-SWU/HWU, NF630-SWU/HWU	○ (*4)	—				5-30
NF100-SRU/HRU, NV100-SRU/HRU	—	○	100-110VAC 110-127VAC 200-220VAC 220-240VAC 24VDC 100-110VDC	—	10	30 or less

Notes *1 Some special voltage models vary in voltage range.

*2 The operating time is the time from when the undervoltage tripping device is set to the no-voltage state until the main contact starts opening.

*3 The accessory is usable at 50Hz and 60Hz.

*4 If UVT is turned on without excitation, the circuit breaker instantaneously opens and immediately trips.

*5 Only for installation on the left pole

(2) Reset type and non-reset type UVT

■ Reset type (Refer to Table 6-15.)

The reset type UVT has a structure which does not trip a circuit breaker even if the UVT coil is not excited when the circuit breaker handle is in the OFF or reset position. Therefore, it keeps the circuit breaker in the reset state even if the coil is not excited when the breaker is reset electrically.

When the coil in the unexcited state is turned on, the circuit breaker is normally tripped. However, the major contacts of some models of circuit breakers may instantaneously close, or, on circuit breakers with AX, the AX switches may instantaneously change over. For electrical interlock, use a non-reset type UVT.

■ Non-reset type (Refer to Table 6-15.)

When the UVT coil is not excited, the circuit breaker cannot be set to the off state even if the circuit breaker is tried to be reset from the tripped state. When the coil exciting voltage restores to the reference voltage or more, the circuit breaker can be reset to the off state.

(3) Time delay UVT

- This type of UVT has a time delay in operation.
- It can prevent operation upon occurrence of instantaneous power failure.

Table 6-14

UVT module type name	Time delay	Voltage (V)	
		Standard voltage	Special voltage
U-05W	Switching among 0.1, 0.3 and 0.5s	24/48AC 100-120/200-240/380-450AC 220-250/380-450/460-550AC (Compatible with 50Hz and 60Hz) 100-110DC	380-450/460-550/600-690AC (Compatible with 50Hz and 60Hz) 24/48DC
U-30W	Switching among 0.5, 1 and 3s	100-120/200-240/380-450AC 220-250/380-450/460-550AC (Compatible with 50Hz and 60Hz)	—

Notes *1 Available voltage ranges between 85% of the minimum rated voltage to 110% of the maximum rated voltage for each setting.

(Ex.: In the case of 100 to 120V, a voltage range of 85 to 131V is available.)

*2 The operating time denotes the time from when the UVT is set to the no-voltage state until the main contact of the breaker starts to open.

*3 Operating time ranges for each setting are as shown below.
0.1s setting: 0.1 to 0.3s, 0.3s setting: 0.3 to 0.5s,
0.5s setting: 0.5 to 1.0s,
1.0s setting: 1.0 to 3.0s, 3.0s setting: 3.0 to 6.0s

*4 The maximum operating time is set by default.

*5 This value is for the minimum voltage for each rated voltage. (Ex.: 85V or less in the case of 100 to 120V.)

*6 This value is for the maximum voltage for each rated voltage. (Ex.: 42 to 84V in the case of 100 to 120V.)

Remark *1 Contact us for details on applicable type names and ordering procedures.

(4) Structure of UVT

The UVT mechanical unit is installed in a circuit breaker, and the UVT voltage module is installed on the outside of the circuit breaker. When the voltage drops, the UVT voltage module detects the voltage drop, and the UVT mechanical unit trips the circuit breaker.

The UVT voltage module has a vertical lead wire terminal block and is normally installed on the body. The external module will be manufactured to order.

●Outline drawing

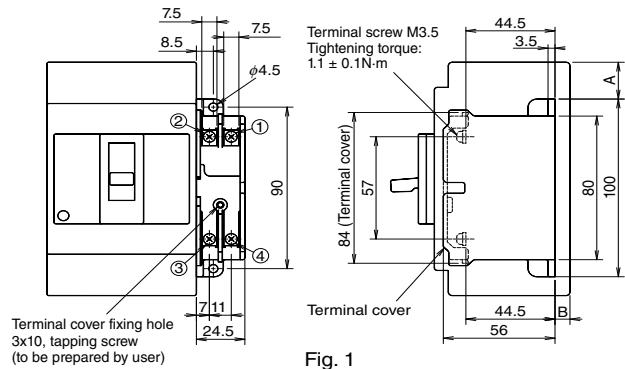


Fig. 1

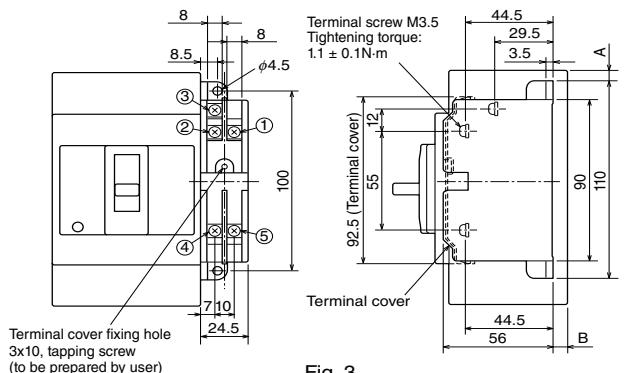


Fig. 3

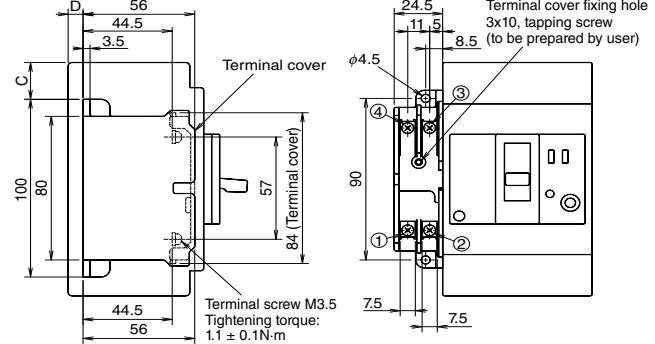


Fig. 2

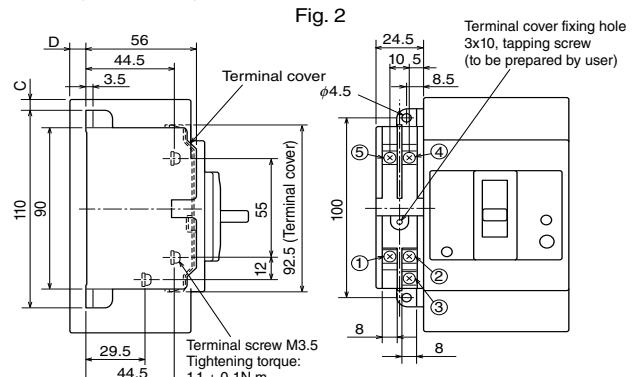


Fig. 4

●Examples of connection

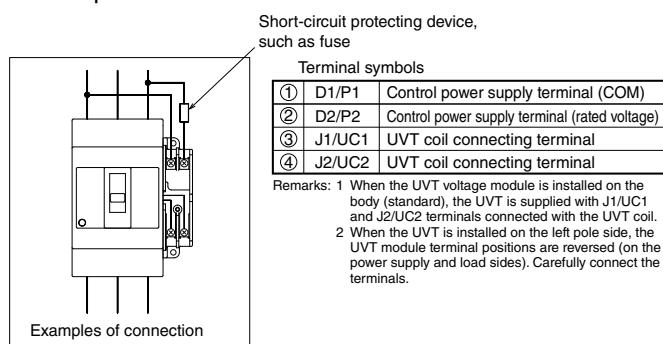


Fig. 5

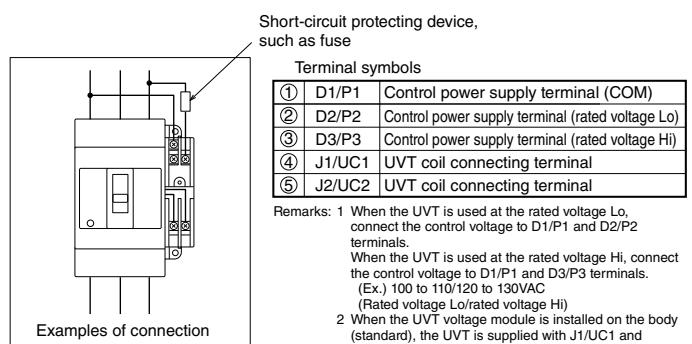


Fig. 6

Table 6-15 Installation on right pole side

Model	Reference drawing	Variable dimensions	
		A	B
NF50-SVFU		11	7.5
NF32-SV, NF63-CV/SV/HV		20.5	7.5
NF100-CVFU		20.5	7.5
NF125-CV/SV/HV		20.5	7.5
NF125-SVU/HVU		41.5	7.5
NF125-UV		81.5	7.5
NF125-SEV/HEV/RGV, NF250-CV/SV/HV/RGV/SEV/HEV		38	7.5
NF125-SGV/LGV/HGV, NF160-SGV/LGV/HGV		48	7.5
NF250-CVU/SVU/HVU		113	7.5
NF250-UV		67.5	41.5
NF400-CW/SW/SEW/HEW/REW		107.5	138.5
NF630-CW/SW/SEW/HEW/REW, NF400-SWU/HWU		76.5	41.5
NF400-UEW(3P)		123.5	138.5
NF800-CEW/SDW/SEW/HEW/REW, NF630-SWU/HWU		161	63
NF400-UEW(4P), NF800-UEW			
NF1000-SEW, NF1250-SEW, NF1600-SEW			

Table 6-16 Installation on left pole side

Model	Reference drawing	Variable dimensions	
		C	D
NV50-SVFU		11	7.5
NV32-SV, NV63-CV/SV/HV		20.5	7.5
NV100-CVFU		30.5	7.5
NV125-CV/SV/HV		20.5	7.5
NV125-SVU/HVU		41.5	7.5
NV125-SEV/HEV, NV250-CV/SV/HV/SEV/HEV		38	7.5
NV250-CVU/SVU/HVU		48	7.5
NF400-CW/SW/SEW/HEW/REW		67.5	41.5
NF630-CW/SW/SEW/HEW/REW		107.5	138.5
NV400-CW/SW/SEW/HEW		76.5	41.5
NV630-CW/SW/SEW/HEW		123.5	138.5
NF400-ZCW/ZSW/ZEW			
NF400-SWU/HWU			
NF400-UEW(3P)			
NF800-CEW/SDW/SEW/HEW/REW			
NF800-SEW/HEW, NF630-SWU/HWU			
NF400-UEW(4P), NF800-UEW			

8. Lead Wire Drawing

■ Lead wire lateral drawing ... Available to all models

Note *1 Except for BH-D6, BH-D10, BH-DN, BV-D, BV-DN and KB-D.

Remark: 1. Although the following models are applicable to lead wires drawn laterally, they are normally applicable to installation in close contact with the circuit breaker side faces.
(The circuit breaker side faces have grooves.)

■ Specifications for lead wires

Table 6-17

Applicable model	Kind of lead wire	Lead wire thickness	Lead wire length	Example of ring mark
1000A frame or above	Heat-resistant wire	0.75mm ²	450mm	98/ALa (Red), 96/ALb (Blue) 95/ALc (Gray), 14/AXa (Brown) 12/AXb (Black), 11/AXc (White) C1/S1 (Red), C2/S2 (Red) J1/UC1 (White), J2/UC2 (White)
30 to 800A frames except above models		0.5mm ²		A terminal symbol is indicated on each lead wire with a ring mark.

NF32-SV, NF63-CV/SV/HV~NF250-CV/SV/HV/UV
NF125-SEV/HEV, NF250-SEV/HEV, NF125-RGV
NF250-RGV, NF125-SGV/LGV/HGV~NF250-SGV/LGV/HGV
NV32-SV, NV63-CV/SV/HV~NV250-CV/SV/HV
NV125-SEV/HEV, NV250-SEV/HEV
NF50-SVFU, NF100-CVFU, NF125-SVU/HVU,
NF250-CVU/SVU/HVU, NV100-CVFU, NV125-SVU/HVU
NV250-CVU/SVU/HVU

(When a 4-pole model among the above models has accessories installed on the right pole side, the lead wires are 400mm long.)

9. Lead Wire Terminal Block

(1) Vertical lead wire terminal block (SLT)

The lead wire terminal blocks for plug-in terminal blocks are available (P-LT). The drilling size of these terminal blocks differs from the standard size. Consult us for details.

For a flush plate type circuit breaker, a terminal block will be installed on the circuit breaker rear face. (Specify as FP-LT.)

Note *1 When the circuit breaker body is equipped with internal accessories and electrical operation device of motor-driven type (2) or spring charge type (2), the circuit breaker is normally provided with a lead wire terminal block.

■ MCCB

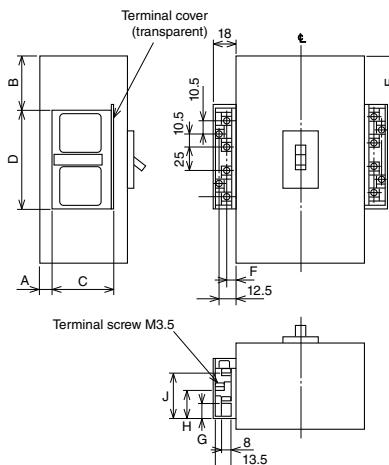



Table 6-18-1 Table of variable dimensions

(mm)

Model	A	B	C	D	E	F	G	H	J
NF30-FAU, NF50-FAU (*1)	7	1.5	44.5	69	—	9	10.5	22.5	34.5
NF100-SRU (*1)	16	16.5	44.5	86.5	16.5	6	10.5	22.5	34.5
NF100-HRU (*1)	22	16.5	44.5	86.5	16.5	6	10.5	22.5	34.5
NF50-SVFU	16.5	17	44.5	86.5	17	6	10.5	22.5	34.5
NF32-SV, NF63-CV/SV/HV	7	26.5	54	86.5	26.5	7	14	26	38
NF63-HDV	7	36.5	54	86.5	36.5	7	14	26	38
NF100-CVFU	7	26.5	54	86.5	26.5	7	14	26	38
NF125-CV/SV/HV	7	47.5	54	86.5	47.5	7	14	26	38
NF125-SVU/HVU	7	87.5	54	86.5	87.5	7	14	26	38
NF125-UV	7	119	54	86.5	119	7	14	26	38
NF125-SEV/HEV/HDVA	7	44	54	86.5	44	7	14	26	38
NF250-CV/SV/HV/HEV/HDVA	7	28.5	54	86.5	28.5	7	14	26	38
NF125-RV, NF250-RV	7	54	54	86.5	54	7	14	26	38
NF250-CVU/SVU/HVU	7	79.5	54	86.5	79.5	7	14	26	38
NF400-CW/SW/HEW/REW, NF400-SWU/HWU	41	88.5	54	86.5	88.5	7	14	26	38
NF630-CW/SW/SEW/HEW/REW		173	52	86.5	173	7	14	26	38
NF800-CEW/SDW/SEW/HEW/REW, NF630-SWU/HWU		119.5	54	86.5	119.5	7	14	26	38
NF1000-SEW, NF1250-SEW/SDW, NF1600-SEW/SDW		138	135.5	54	86.5	135.5	7	14	26
NF400-UEW(3P), NF800-UEW		14	5	44.5	86.5	5	7	10	34
NF50-FHU		14	7	44.5	86.5	-4	7	10	34
NF100-FHU		47	79.5	54	86.5	79.5	7	14	26
NF400-HDW		47	88.5	54	86.5	88.5	7	14	38

Note *1 The terminal positions are different from those shown in the left figure. Consult us for details.

Remark: 1. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1 N·m

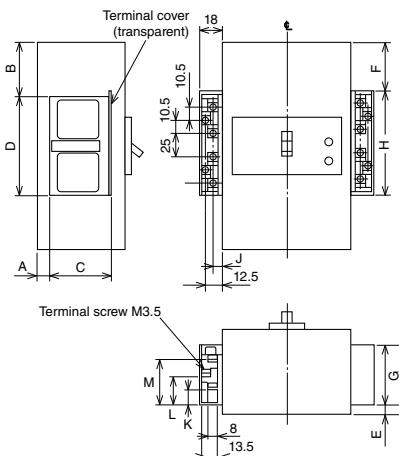ELCB**Table 6-18-2 Table of variable dimensions**


Model	A	B	C	D	E	F	G	H	J	K	L	M	
NV30-FAU, NV50-FAU	(*)1	7	1.5	44.5	69	—	—	—	—	9	10.5	22.5	34.5
NV100-SRU	(*)1	16	16.5	44.5	86.5	—	—	—	—	6	10.5	22.5	34.5
NV100-HRU	(*)1	22	16.5	44.5	86.5	—	—	—	—	6	10.5	22.5	34.5
NV50-SVFU		16.5	17	54	86.5	16.5	17	54	86.5	6	10.5	22.5	34.5
NV32-SV, NV63-CV/SV/HV		7	26.5	54	86.5	7	26.5	54	86.5	7	14	26	38
NV100-CVFU		7	36.5	54	86.5	7	36.5	54	86.5	7	14	26	38
NV125-CV/SV/HV		7	26.5	54	86.5	7	26.5	54	86.5	7	14	26	38
NV125-SVU/HVU		7	47.5	54	86.5	7	47.5	54	86.5	7	14	26	38
NV125-SEV/HEV, NV250-CV/SV/HV/SEV/HEV		7	44	54	86.5	7	44	54	86.5	7	14	26	38
NV250-CVU/SVU/HVU		7	54	54	86.5	7	54	54	86.5	7	14	26	38
NV400-CW/SW/SEW/HEW/REW		41	79.5	54	86.5	26.5	79.5	52	92	7	14	26	38
NV630-CW/SW/SEW/HEW, NV400-SWU/HWU		41	88.5	54	86.5	26.5	88.5	52	92	7	14	26	38
NV50-FHU		14	5	44.5	86.5	14	5	44.5	86.5	7	10	22	34
NV100-FHU		14	7	44.5	86.5	14	—4	44.5	86.5	7	10	22	34

Notes *1 The terminal positions are different from those shown in the left figure. Consult us for details.

Remark : 1. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

14-terminal SLT

SLT for installing three or more internal accessories on the left pole side

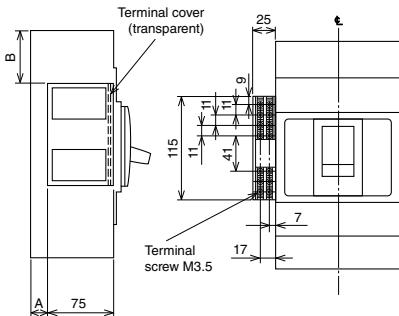**Table 6-18-3 Table of variable dimensions**

Model	MCCB	ELCB	A	B
NF400-CW/SW/SEW		NV400-CW/SW/SEW		
NF400-HEW/REW		NV400-HEW	20	60
NF630-CW/SW/SEW		NV630-CW/SW/SEW/HEW		
NF630-HEW/REW				
NF400-UEW(3P)		—	117	100
NF800-CEW/SDW/SEW		NV800-SEW/HEW	20	69
NF800-HEW/REW				
NF400-UEW(4P), NF800-UEW		—	117	116
NF1000-SEW, NF1250-SEW			35	154
NF1600-SEW				

Remarks : 1. The terminal positions are different from those shown in the left figure. Consult us for details.

2. Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

10. Test Button Module (TBM)

- The test button is kept pressed while control input voltage is applied to the button.
(When ELCB of time delay type is used, apply voltage for 2 seconds or more.)
- The test button module is supplied with voltage through a circuit isolated from the main circuit. It can share the control sequence with SHT of a molded case circuit breaker.
- The test button modules can be connected in parallel.
- The module is normally provided with a vertical lead wire terminal block (SLT).


Table 6-19

Model	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV50-SVFU NV100-CVFU NV125-SVU/HVU NV250-CVU/SVU/HVU	NV400-CW/SW NV630-CW/SW NV400-SEW~NV800-SEW NV400-HEW~NV800-HEW
Control input Rated voltage (V)	Compatible with 100 to 240AC and 100 to 240DC (24DC) (*1)	
Control input (VA)	1.5VA or less	1VA or less
Reference drawing	Fig. 1	Fig. 2

Note *1 Unless otherwise specified, the module will be manufactured for 100 to 240VAC and 100 to 240VDC.

In the case of 24VDC, specify the voltage.

Remark: 1. The length of the lead wires to be connected to TBM1 and 2 shall be 100 mm or less.

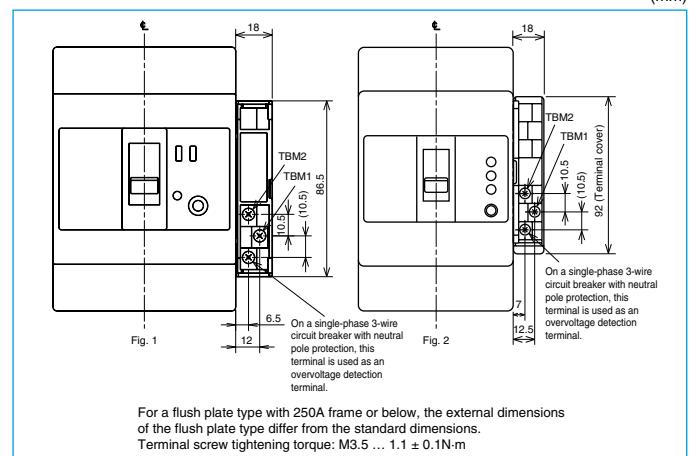

For a flush plate type with 250A frame or below, the external dimensions of the flush plate type differ from the standard dimensions.

Terminal screw tightening torque: M3.5 ... 1.1 ± 0.1N·m

11. Pre-Alarm Module (PAL)

The pre-alarm is a function to output an alarm when the load current exceeds the preset current value. It is helpful in securing continuous power supply and preventive maintenance.

It can be fitted to electronic circuit breakers with a frame size from 125 to 1600A.

■ 125 and 250A frames

● Pre-alarm module (PAL module)


The standard modules have SLT. Other internal accessories cannot be installed on the right pole side.

A control power supply (compatible with 100 to 240VAC and DC) is necessary. The control power supply voltage range is 85 to 246VAC/DC, and the required volt-ampere is 5VA.


Table 6-20-1

Model	Switching capacity	Contact output (1a)	Resetting method
NF125-SEV NF125-HEV NF250-SEV NF250-HEV NV125-SEV NV125-HEV NV250-SEV NV250-HEV	125VAC 2A 250VAC 2A	30VDC 2A 100VDC 0.3A	Press the reset button, or turn off the control power supply.


Pre-alarm characteristics

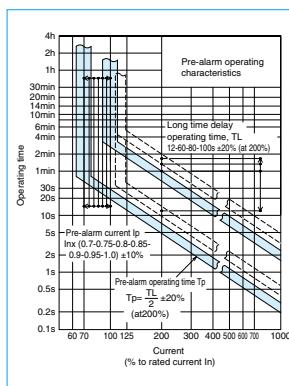

Dimensional drawing of pre-alarm module

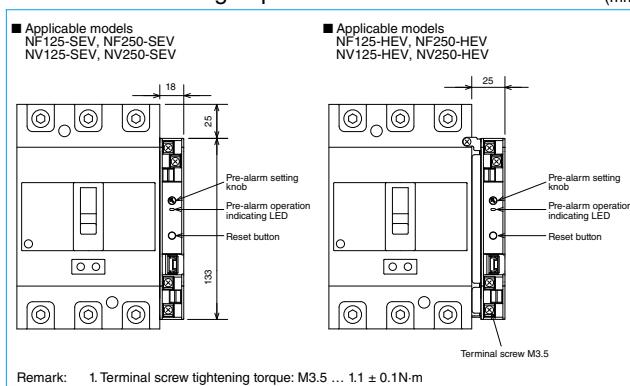

(mm) Terminal arrangement

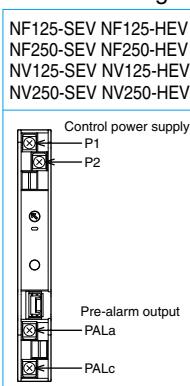

● Pre-alarm LED indication

When the load current exceeds the preset current value, the LED lamp on the pre-alarm module front panel starts blinking. When the pre-alarm output is given, the lamp stops blinking and turns on.

● Pre-alarm current setting (Ip setting)

The pre-alarm current can be set to the rated current $In \times 0.7-0.75-0.8-0.85-0.9-0.95-1.0$ with the knob on the pre-alarm module front panel.

■ 400A frame or above

● Solid state relay (SSR) output (PAL lead)

The lead wires are drawn out. On the right pole side, only internal accessories with lead wires drawn out can be installed. A control power supply is unnecessary.

Table 6-20-2

Model	Switching capacity Solid state relay (SSR) – Non-contact output	Resetting method
NF400-SEW NF400-HEW NF400-REW NF400-UEW NF630-SEW NF630-HEW NF630-REW NF800-CEW NF800-SEW NF800-HEW NF800-REW NF800-UEW NF1000-SEW NF1250-SEW NF1600-SEW NV400-SEW NV400-HEW NV630-SEW NV630-HEW NV800-SEW NV800-HEW	24 to 240VAC/DC 20mA	When the load current becomes lower than the preset current value, the alarm is reset.

● Pre-alarm module (PAL module)


The standard modules have SLT. Other internal accessories cannot be installed on the right pole side.

A control power supply (compatible with 100 to 200VAC) is necessary. The control power supply voltage range is 80 to 242VAC, and the required volt-ampere is 10VA.


Table 6-20-3

Model	Switching capacity	Contact output (1a)	Resetting method
NF400-SEW NF400-HEW NF400-REW NF400-UEW NF630-SEW NF630-HEW NF630-REW NF800-CEW NF800-SEW NF800-HEW NF800-REW NF800-UEW NF1000-SEW NF1250-SEW NF1600-SEW NV400-SEW NV400-HEW NV630-SEW NV630-HEW NV800-SEW NV800-HEW	100VAC or 200VAC, 2A		Press the reset button, or turn off the control power supply.

Pre-alarm characteristics

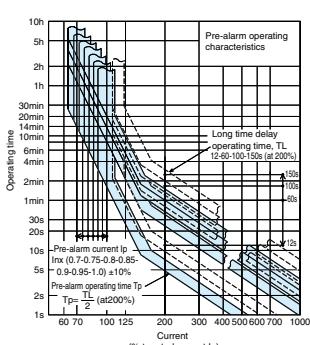


Detailed drawing of pre-alarm module

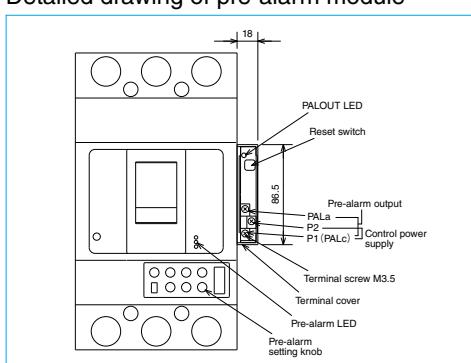

Pre-alarm module output rating

Voltage V	AC	
	Current (A) Resistive load	Inductive load
200	3	2
100	3	2

A control power supply (compatible with 100 to 200VAC) is necessary. For the wiring method, see the following figure. (The control power supply voltage range is 80 to 242VAC.) The required volt-ampere is 10VA.

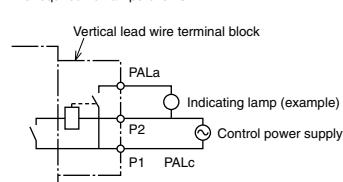

● Pre-alarm LED display (standard device)

When the load current exceeds the preset current value, the LED lamp on the circuit breaker front panel starts blinking. When the pre-alarm output is given, the lamp stops blinking and turns on at PALOUT LED.

● Pre-alarm current setting (Ip setting)

The pre-alarm current can be set to the rated current $In \times 0.7-0.75-0.8-0.85-0.9-0.95-1.0$ with the knob on the circuit breaker front panel.

1. F-Type Operating Handle

Operating handle of breaker mount type to be installed to circuit breaker body


● Appearance (Color: Munsell N1.5)




- The handle provides an isolating function in combination with the circuit breaker body (except F10SW and above).
- It has a safety device which prevents the circuit breaker turning on while the door is open.
- It can be locked in the OFF position. (Up to 3 commercially available padlocks (35mm and 40mm) can be fitted. A type which can be locked in the ON or OFF position can be manufactured. Specify the type if required.) On circuit breakers with a frame size of 1000A or above, the handle can be locked in the ON or OFF position. (If it is necessary to lock the handle only in the OFF position, specify so.)
- It is in protection class IP54 (IEC 60529). (For circuit breakers with a frame size of 1000A or above, the protection class (IEC 60529) is IP3X (IP5X when dust-proof packing is provided).)

Dust-proof packing (optional)

Type nema	Operating handle type name	Delivery category
PFL	F10SW-F120UR	●

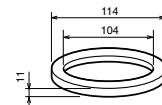


● Outline drawings

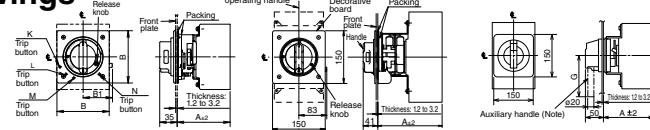

Note Auxiliary handles are provided with F10SW, F10SW4P and F120UR as standard.
Auxiliary handles (F-HT) are provided for F-4S ~ F-6SUL as option.

● Dimensional drawings of front plate drilling

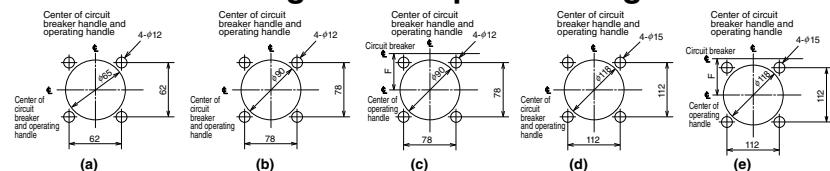

● Dimensional drawings of circuit breaker mounting holes

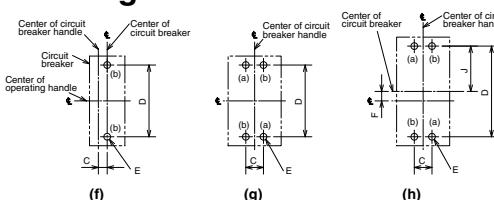


Table 6-21 Table of variable dimensions

Type name	Door opening position		Applicable model				Reference drawing		Dimensions (mm)							Trip button position (*4)	Mounting screw	
	OFF position	Reset position	MCCB	Number of poles	ELCB	Number of poles	Dimensional drawing	Drilling plan	A (*1)	B	B1	C	D	E	F	G	J	
F-05SV2	-	○	NF32-SV NF63-CV, NF63-SV, NF63-HV	2P	-	-												N
F-05SVE2	-	○	NF32-SV NF63-CV, NF63-SV, NF63-HV	3P • 4P	NV32-SV NV63-CV, NV63-SV, NV63-HV	2P • 3P		b	f	105								L
F-05SV	-	○	NF32-SV NF63-CV, NF63-SV, NF63-HV	3P • 4P	NV32-SV NV63-CV, NV63-SV, NV63-HV	2P • 3P		b	g	105								N
F-1SV2, F-1SVE2	-	○	NF125-CV, NF125-SV NF125-CV, NF125-SV	2P	-	-												L
F-1SV F-1SVE	-	○	NF125-CV, NF125-SV NF125-HV	3P • 4P 2P • 3P • 4P	NV125-CV, NV125-SV, NV125-HV	3P • 4P		b	f	105								N
F-1UV, F-1UVE	-	○	NF125-UV NF125-HV	2P • 3P • 4P	-	-												L
F-2SV F-2SVE	-	○	NF125-SEV, NF125-HEV, NF125-RV NF125-SGV, NF125-LGV, NF125-HGV NF160-SGV, NF160-LGV, NF160-HGV NF250-SGV, NF250-LGV, NF250-HGV NF250-CV, NF250-SV, NF250-HV NF250-SEV, NF250-HEV, NF250-RV	2P • 3P • 4P	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	3P • 4P	Fig. 1	b	f	107	104	58	35	126	-	-	K	
F-2UV, V-2UVE	-	○	NF250-UV NF250-HV	2P • 3P • 4P	-	-		c	h	201								100.5
F-1SVEL	-	○	NF125-SVU, NF125-HVU	3P	NV125-SVU, NV125-HVU	3P		c	h	105	30	123	35	126	-		L	
F-2SVEL	-	○	NF250-CVU, NF250-SVU, NF250-HVU	3P	NV250-CVU, NV250-SVU, NV250-HVU	3P		c	g	107							N	
F-05SRUL2	-	○	NF100-SRU NF100-HRU	2P	NV100-SRU	2P		b	f	110			0	92			K	
F-05SRUL	-	○	NF100-SRU NF100-HRU	3P	NV100-SRU NV100-HRU	3P		b	g	116			25				M	
F-03SVUL2	-	○	NF50-SVFU	2P	NV50-SVFU	2P		a	f	80	50	9	82.5				N	
F-03SVUL	-	○	NF50-SVFU	3P	NV50-SVFU	3P		a	g	105			18				L	
F-05SVUL2	-	○	NF100-CVFU	2P	-	-		b	f	104	58	13	111				Only the screws (b) are used for the following models.	
F-05SVUL	-	○	NF100-CVFU	3P	NV100-CVFU	3P		b	g	25								
F-4S	-	○	NF400-CW, SW, SEW, HEW, REW NF630-CW, SW, SEW, HEW, REW	2P, 3P, 4P	NV400-CW, SW, SEW, HEW NV630-CW, SW, SEW, HEW	3P, 4P		d	g	183								
F-4SE	-	○	NF400-UEW	3P	-	-		e	h	280								
F-4UE	-	○	NF400-UEW	3P	-	-		d	g	183								
F-8S	-	○	NF800-CEW, SDW, SEW NF800-HEW, REW	2P, 3P, 4P	NV800-SEW, HEW	3P	Fig. 2	d	g	183								
F-8SE	-	○	NF800-UEW(4P)	3P, 4P	-	-		e	h	280								
F-8U	-	○	NF800-UEW	3P, 4P	-	-		d	g	183								
F-8UE	-	○	NF400-SWU/HWU	3P	-	-												
F-4SUL	-	○	NF400-SWU/HWU	3P	-	-												
F-6SUL	-	○	NF630-SWU/HWU	3P	-	-												
F10SW (*3)	-	○	NF1000-SEW NF1250-SEW/SDW NF1600-SEW/SDW	2P, 3P	-	-	Fig. 3	d	g	221	-	-	70	375	M8 screw or φ10	-	200	
F10SW4P (*3)	-	○	NF1000-SEW NF1250-SEW/SDW NF1600-SEW/SDW	4P	-	-												

Notes *1 The dimensions for the front connection type are shown. On some models of the rear connection type and plug-in type, the reference surface for mounting the circuit breaker may change.

*2 For the 4-pole plug-in type, a special handle is required. Consult us for details.

*3 If a handle which can be locked only in the OFF position is required, specify so.


*4 The circuit breaker can be tripped by operating the trip button while the door is open.

*5 Do not remove the sponge packing used to secure the protection class IP51. Fit the supplied packing without fail.

*6 The handle cannot be used when the circuit breaker is installed on IEC 35mm rails.

Remarks: 1. The handles with E in their model names are designed for emergency stop devices. 2. The standard handles are Reset Open Type which can open the doors only when they are reset to open. OFF Open type handles which can open the doors when they are in the OFF position can be manufactured to order. 3. A handle which can be operated and can indicate the ON and OFF positions in the same manner as the standard models even if the circuit breaker is installed horizontally can be manufactured to order. 4. F10SW and higher models do not conform to the isolation function. 5. Handles which are opened and closed in the OFF position can be opened also in the reset position.

● Center of hinge and breaker

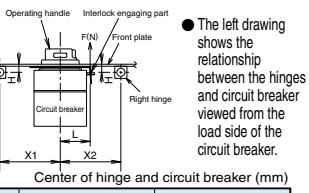

The left drawing shows the relationship between the hinges and circuit breaker viewed from the load side of the circuit breaker.

● Door lock withstand load


	F(N)	L(mm)
F-05-F-2	500	50
F-4~F-8		68

6 Accessories 2 External Accessories

● Installation procedure For details, please refer to Operating Handle Installation Manual supplied with the product.

① Installation to a breaker


Install the operating handle to the circuit breaker in accordance with the following procedure.

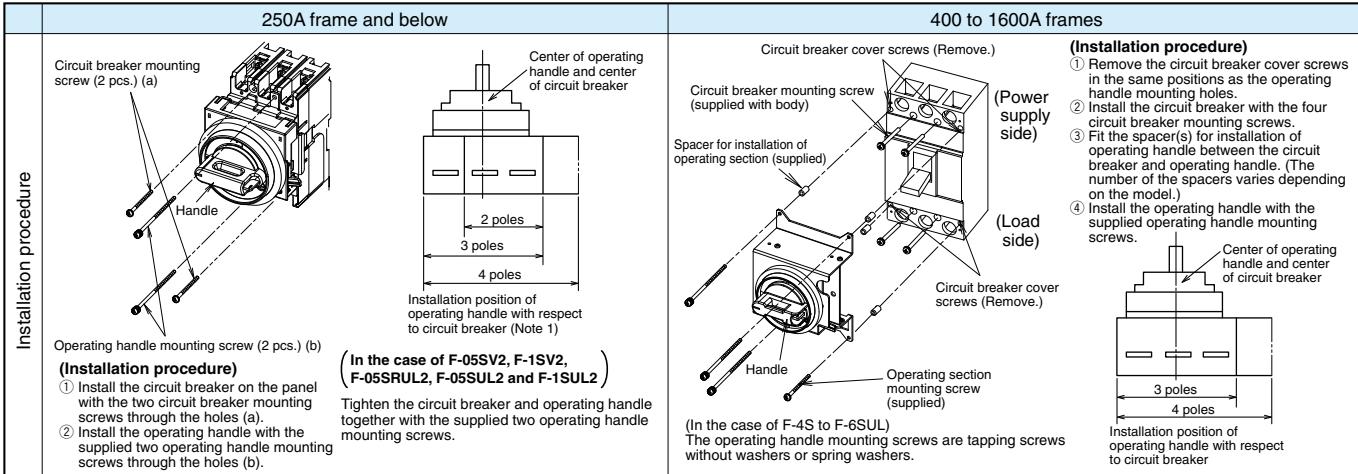

Note *1 In the case of F-05SRUL2, the center of the operating handle is the same as the center of the circuit breaker.

② Installation of decorative board and retaining board

Drill holes in the door according to the drilling size shown on the previous page, and tighten the decorative board and retaining board with the supplied countersunk screws. In the case of 800A frame or below, fit the supplied packing to the position shown right.

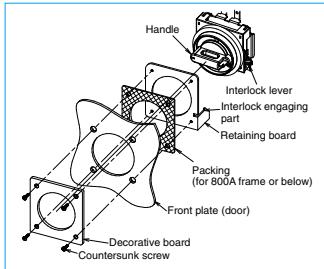

● Door locking mechanism

The panel door can be opened only when the operating handle is operated to open (reset). (On F-4S to F10SW, the door lock is held in the released state even if the handle is returned to OFF.) The door can be opened when the handle is in the ON position if the release knob is operated with a tool.

● Operation locking mechanism

Circuit breakers with a frame size of 800A or below can be locked by setting the handle in the OFF position. (Operating handles which can lock circuit breakers in the ON or OFF position can be manufactured.) Operate the locking part, and lock the handle with padlocks. Up to three padlocks can be fitted.

Lockout hasps (scissors locks) can be used.

If the circuit breaker trips even when the operating handle is locked in the ON position, also the operating handle indicates that it has tripped.


[F-2SUL or below: Only when one 35mm padlock (weighing 70g or less) is used] [F-4S or above: Only when one 40mm padlock (weighing 100g or less) is used]

To 800A frame or below, padlocks with dimension B of 3mm to 8mm can be applied.

For 1000A or above, padlocks with dimension of 3mm to 6mm can be applied. (When using padlocks of 3mm or less, please consult us.)


● Circuit breaker installation direction (except UL 489 listed circuit breakers)

We can supply circuit breakers on which the handles and their ON and OFF positions are in the same directions as on vertically installed circuit breakers even when they are installed horizontally. The door drilling size is identical. If you intend to install an operating handle on a horizontally installed circuit breaker, specify "Y" (horizontal installation with power supply on the left) or "Z" (horizontal installation with power supply on the right) at the end of the model name. (Ex.: F-4S Y)

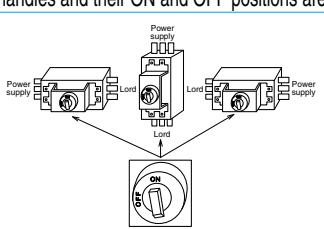

● Sealing of release knob

The use of an optional part, Release Protection "F-RCS", can prevent the panel door being opened by operating the release knob. (800A frame or below)

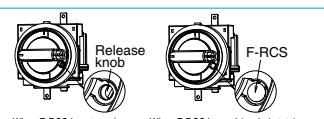

● Operation Lock Devices

(1) Padlock




Padlock Dimensions

Applicable model	A (Nominal size)	B
All models	35	5
	40	6.5 or less

Dimension B: Maximum 8mm.

(2) Lockout Devices (Scissors Lock)

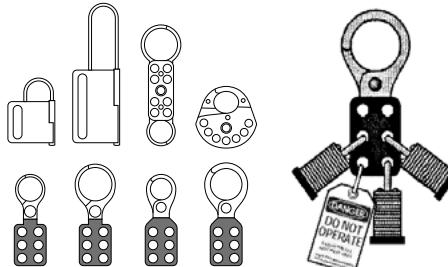

● How to order

For 800A frame or below, specify the following specification symbols together with the model name.

- Operation lock: LF Lock in OFF position
- Operation lock: LN Lock in ON or OFF position
- Door opening: DR Reset to open
- Operation lock: DF Open in OFF position
- Installation direction: Blank ... Power supply upward
- Installation direction: Y Power supply on left
- Operation lock: Z Power supply on right

For a standard product with a frame size of 1000A or above, specify the model name. When it is required to enable the operation lock only in the OFF position, specify the model name and "only lock in OFF position."

If you intend to seal the release knob, place an order for the release protection. (Lot: 10 pcs.)

● Interpretation of model name

(1) For 800A frame or below

F — 1 SV UL E 2

1) F: Operating handle type name

2) 1: Circuit breaker group (0, 1, 2, 4, 6 or 8)

3) SV: Classification of circuit breaker (S, SV, H, U, UV, SR or SG)

4) UL: Blank...General product UL...UL 489 listed product

5) E: Blank...Standard E...For emergency stop

6) 2: Blank...3P or 4P 2...2P

(2) For 1000A frame or above

F 10 SW 4P

1) F: Operating handle type name

2) 4: Circuit breaker A frame (10 or 120)

3) SW: Series name




4) 4P: Number of poles (4P) * Not indicated for 3P

2. V-Type Operating Handle

● Appearance (Color: Munsell N1.5)






● Outline drawings

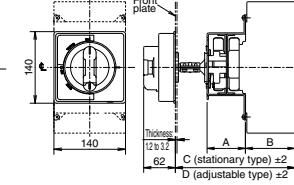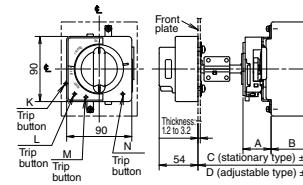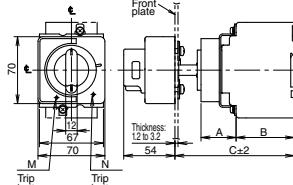

Note Auxiliary handles (F-HT) are provided for V-4S ~ V-6SUL as option.

● Dimensional drawings for front plate drilling

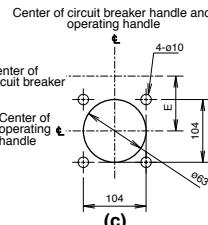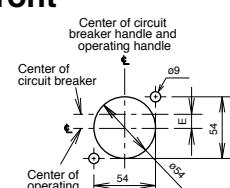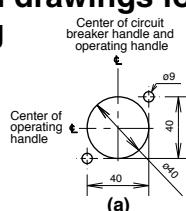

Relationship between hinges and circuit breaker viewed from load side of circuit breaker

	H	X
For 30 to 250A frames	5H+100 or more	
For 400 to 800A frames	0 or more	8H+150 or more

* The above figure shows the relationship viewed from the load side.

● Dimensional drawings of circuit breaker mounting holes

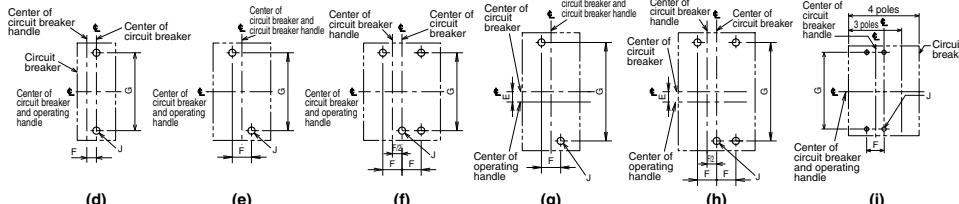


Table 6-22 Table of variable dimensions

Type name	Number of poles	Applicable model		Reference drawing	Dimensions (mm)							Trip button position (*5)			
		MCCB	ELCB		Dimensional drawing	Drilling plan	A	B	Stationary type C	Adjustable type (*) D (min)	D (max)	E	F	G	J
V-05SV2 V-05SVE2	2P	NF32-SV NF63-CV, NF63-SV, NF63-HV	—	—	Fig. 2	d	39	61	125	—	—	12.5	111	M4 screw or φ5	N
V-05SV V-05SVE	3P	NF32-SV NF63-CV, NF63-SV, NF63-HV	2P, 3P	—		e				162	300	—	25		L
V-1SV2 V-1SVE2	4P	—	—	—		d				—	—	15	N		
V-1SV V-1SVE	2P, 3P	NF125-CV, NF125-SV	—	—		e				—	—	—	30		L
V-1UV V-1UVE	4P	NF125-CV, NF125-SV	3P	—		f				—	—	—	30.5		K
V-1UV V-1UVE	2P, 3P	NF125-HV	4P	—		g				162	300	—	35		M4 screw or φ5
V-2SV V-2SVE	4P	NF125-SEV, NF125-HEV, NF125-SGV NF125-LGV, NF125-HGV, NF125-RGV NF160-SGV, NF160-LGV, NF160-HGV NF250-CV, NF250-SV, NF250-HV NF250-SGV, NF250-LGV, NF250-HGV NF250-SEV, NF250-HEV, NF250-RGV	—	—		h				41	—	126	201		M4 screw or φ5
V-2UV V-2UVE	2P, 3P	NF250-UV	—	—		e				—	—	37.5	K		
V-03SVUL2 V-03SVL	2P 3P	NF50-SVFU	2P 3P	Fig. 1	a	d e	37	61	125	—	—	9 18	82.5	M4 screw or φ5	M N
V-05SVL2 V-05SVL	2P 3P	NF100-CVFU	—	—	b	d e	39	61	125	—	—	12.5 25	111		N L
V-1SVUL V-2SVUL	3P	NF125-SVU, NF125-HVU	3P	NV100-CVFU	c	g	39	61	125	162	300	6 30	123		L
V-2SVUL	3P	NF250-CVU/SVU/HVU	3P	NV125-SVU, NV125-HVU	b	e	41	61	125	162	300	—	35		K
V-05SRUL2	2P	NF100-SRU	2P	NV100-SRU	b	d e	61 67	130 136	—	—	—	0 25	92	M4 screw or φ5	—
V-05SRUL	3P	NF100-HRU	—	—	b	d e	61 67	130 136	167	305 311	—	—	—		
V-4S V-4SE	2P, 3P 4P	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	3P, 4P	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	c	j	97	191	233	300	—	44 234	194 243		
V-4U V-4UE	3P	NF400-UEW	—	—	c	h	194	288	330	397	20	—	70 44 70	194 243 243	
V-8S V-8SE	2P, 3P 4P	NF800-CEW/SDW/SEW/HEW/REW	3P	NV800-SEW/HEW	c	j	97	191	233	300	—	—	—	M6 screw or φ7	—
V-4SUL	3P	NF400-SWU/HWU	—	—	c	—	—	—	—	—	—	—	—		
V-6SUL	3P	NF630-SWU/HWU	—	—	c	—	—	—	—	—	—	—	—	—	—

Notes *1 For the adjustable type, purchase the optional adjusting unit V-AD3S or V-AD3L.

*2 The dimensions of the adjustable type models provided with the adjusting unit V-AD3S or V-AD3L are shown.

*3 When using the operating handle for a plug-in type model with a frame size of 250A or below, specify so.

*4 The dimensions on the front connection type are shown. For the rear connection and plug-in types, separately consult us.

*5 The circuit breaker can be tripped by operating the trip button while the door is open.
(The trip button position varies depending on the model.)

*6 The handle cannot be used when the circuit breaker is installed on IEC 35mm rails.

Remarks 1. The products whose model names contain E are designed for emergency stop.

2. When the operating handle is fitted to NV, the test button cannot be pressed easily. If necessary, use a circuit breaker with TBL or TBM. When using an Earth Leakage Alarm Breaker, use the externally resetting type (ECA-SLT) or automatically resetting type (ARS).

6 Accessories [2] External Accessories

● **Installation procedure** For details, please refer to Operating Handle Installation Manual supplied with the product.

① Installation to a breaker

Install the operating handle to the circuit breaker in accordance with the following procedure.


	250A frame and below	400 to 800A frames
Installation procedure	<p>(Installation procedure)</p> <ol style="list-style-type: none"> Operating handle for 3- or 4-pole circuit breaker Set the rotary plate of the operating section to the OFF (symbol O) position, and fit the plate to the circuit breaker with the supplied operating section mounting screws and nuts. Install the circuit breaker to the panel with the circuit breaker mounting screws (2 pcs.). Operating handle for 2-pole circuit breaker Install the operating section together with the circuit breaker to the panel with the supplied operating section mounting screws (2 pcs.). 	<p>(Installation procedure)</p> <ol style="list-style-type: none"> Remove the circuit breaker cover screws (4 pcs.) in the same positions as the operating handle mounting holes. Install the circuit breaker with the circuit breaker mounting screws (4 pcs.). Fit the supplied operating section mounting spacers (4 pcs.) between the circuit breaker and operating handle. Set the rotary plate to the OFF (symbol O) position, and install the operating section to the circuit breaker with the supplied operating section mounting screws.

② Installation of operating handle section


Drill a hole in the door according to the dimensional drawing for front plate drilling given on the previous page, and install the operating handle section in accordance with the following procedure.

[Confirmation items]

- The handle should turn smoothly to the ON and OFF positions.
- When the handle is turned slightly in the ON direction (approx. 5 degrees) when in an OFF state, it should slowly return to the OFF position on its own. Furthermore, when in this state, the OFF position should not change when the handle is lightly forced in the reset direction.
- When released, the front plate should open and then immediately close.
- The operating handle section should be parallel with the breaker.

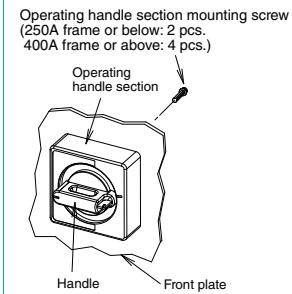


Note The adjusting unit is not applicable to 2-pole external type circuit breakers. If it is used on a 2-pole external type circuit breaker, the positions may not be correctly displayed.

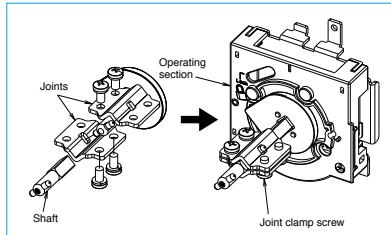


Make adjustments with the adjusting unit as stated below.

① External dimension drawing

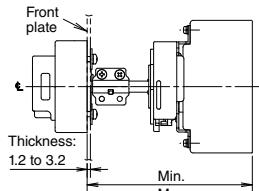

② Calculation of shaft cutting allowance

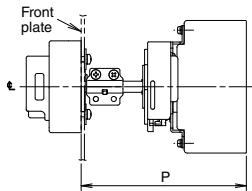


Type name	Dimensions (mm) Min. Max.	Cutting allowance	Calculation
V-05SV V-05SVUL			
V-1SV V-1SVUL V-1SUL	162 300	Shaft 175 Cutting allowance	(Cutting allowance)(P max)(panel size) X = 300 mm - P
V-2SV V-2SVUL V-2SUL			
V-2SGUL	180 318		
V-4S			
V-8S V-4SUL V-6SUL	233 300	Shaft 109 Cutting allowance	

Note The unit is applicable to operating handles for emergency stop (E).

● Operation locking mechanism

① Operating handle section

Operation lock can be set only in the OFF Position. Up to three commercially available padlocks (A = 35 or 40mm) can be fitted. Lockout hasps (scissors locks) can be used. When the operating handle section is locked with padlocks, also the door is locked.

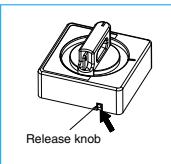


The user must prepare padlocks.

The dimensions of the padlocks are the same as those shown on page 134.

② Operating section

The operating section can be locked so that the circuit breaker will not be turned on carelessly when the inside of the panel is inspected with the panel door open. Fit a padlock through the hole in the operating section of the operating handle.

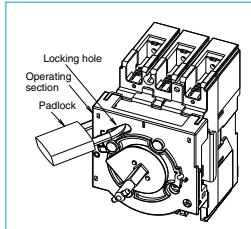

③ Adjusting unit

The height from the circuit breaker mounting surface to the panel door can be adjusted by fitting the optional adjusting unit V-AD3S or V-AD3L. Cut the shaft of the adjusting unit according to the height.

④ Interpretation of model name

(1) For 800A frame or below

$$\frac{V}{(1)} - \frac{1}{(2)} \frac{S}{(3)} \frac{UL}{(4)} \frac{E}{(5)} \frac{2}{(6)}$$

1) V: Operating handle type name

2) 1: Circuit breaker group (0.5, 1, 2, 4, 6 or 8)

3) S: Classification of circuit breaker (S, SV, H, U, UV)

4) UL: Blank...General product UL...UL 489 listed product




5) E: Blank...Standard E...For emergency stop

6) 2: Blank...3P or 4P 2...2P




3. C-type (cable-type) Operating Handle

- The panel door can only be opened in the OFF position.
 - It has a safety device which prevents the circuit breaker turning on while the door is open.
 - The handle can be locked only in the OFF position with up to three commercially available padlocks.
 - The panel door can be opened in the ON position by turning the release knob.
 - Protection class (IEC 60529) IP23 as standard.
 - The handle does not provide an isolation function.

● Outline drawings

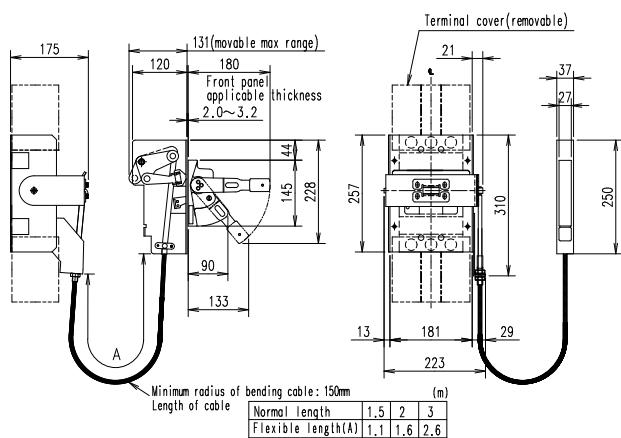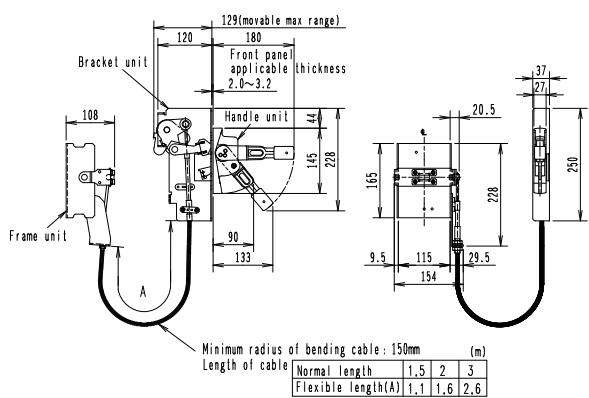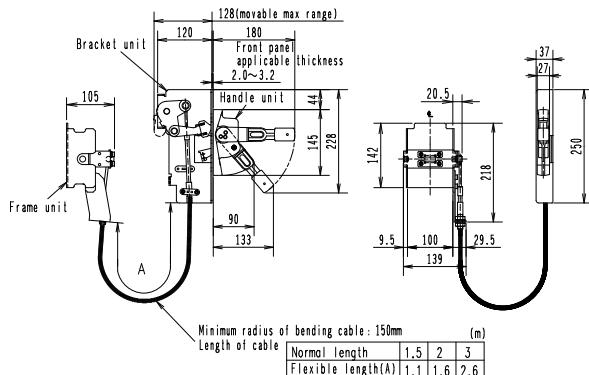

- Dimensional drawings of circuit breaker mounting holes

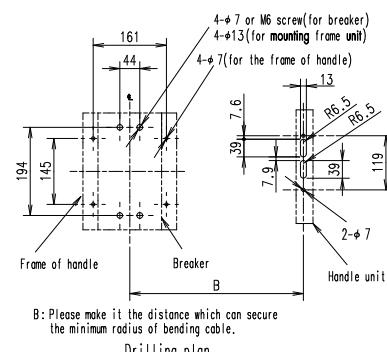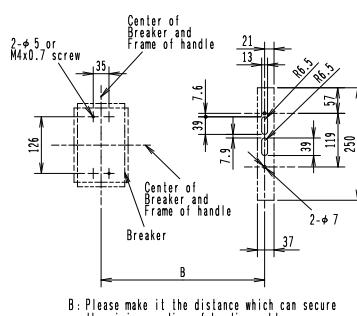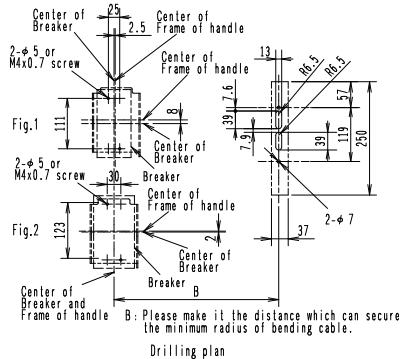

● Door interlock drawing

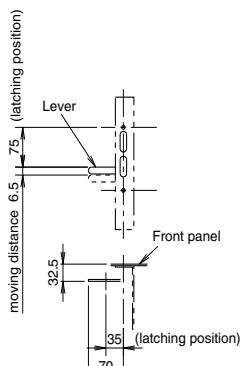


Table 6-23

Type name	Applicable model		Number of poles	Reference drawing	
	MCCB	ELCB		Dimensional drawing	Drilling plan
C1SVU	NF100-CVFU	NV100-CVFU	3P	Fig.1	a
	NF125-SVU/HVU	NV125-SVU/HVU		Fig.2	b
C2SVU	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU		Fig.3	c
C4SWU	NF400-SWU/HWU	NV400-SWU/HWU			

Notes *1 Only 3-pole models are available

*1 Only 3-pole models are available.
*2 For internal accessories, only models with lead wires drawn out can be used.

4. Terminal Covers

The terminal covers are used to avoid exposure of live parts. Many kinds of terminal covers, including large terminal covers (TC-L), small terminal covers (TC-S), transparent terminal covers (TTC), rear terminal covers (BTC) and plug-in terminal covers (PTC), for various models and applications are available, and they are helpful. (The terminal covers cannot be fitted to electrically operated circuit breakers of spring charged type (2) and motor-drive type (2). The standard terminal covers can be used for the spring charged type (1). For the motor-drive type, special terminal covers can be manufactured. Consult us for details.)

Quick terminal covers

These covers are very convenient because they can be fitted only by inserting them into the mounting holes in the circuit breaker body. To remove the terminal cover, shift the projections of the terminal cover with the tip of a slotted screwdriver or finger, and draw it out.

Table of variable dimensions

Table 6-24 Large terminal covers (TC-L)

Type name	Color	Number of poles of circuit breaker	Applicable model		Dimensions (mm)			Contents			Appearance	Remarks
			MCCB	ELCB	A	B	C	Number of covers	Cover mounting screw	Sealing plate		
TCL-05FH2	White	2	NF50-FHU	NV50-FHU	50	27	55.5	2	—	—		
TCL-05FH3	White	3	NF32-SV NF63-CV/SV/HV	—	75	27	55.5	2	—	—		
TCL-05SV2 (*1)(*7)	White	2	NF32-SV NF63-CV/SV/HV	—	50	25	65.5	2	—	2		
TCL-05SV2L (*1)(*8)	White	2	NF32-SV NF63-CV/SV/HV	—	50	40	65.5	2	—	2		
TCL-05SV3 (*2)(*7)	White	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	25	65.5	2	—	2		
TCL-05SV3L (*2)(*8)	White	3	NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-HV	75	40	65.5	2	—	2		
TCL-05SV4 (*2)	White	4	NF63-SV/HV	—	100	25	65.5	2	—	2		
TCL-1SV2 (*1)	White	2	NF125-CV/SV	—	60	40	65.5	2	—	2		
TCL-1SV3 (*2)	White	3	NF125-CV/SV	NV125-CV/SV/HV	90	40	65.5	2	—	2		
TCL-1SV4 (*2)	White	4	NF125-SV/HV/UV	NV125-SV/HV	120	40	65.5	2	—	2		
TCL-1FH3	White	3	NF100-FHU	NV100-FHU	75	42	55.5	2	—	2		
TCL-2SV3 (*2)(*9)(*11)	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	40	65.5	2	—	2		
TCL-2SV3L (*2)(*10)(*11)	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	50	65.5	2	—	2		
TCL-2SV4 (*2)(*4)(*11)	White	4	NF250-SV/HV/UV NF250-SEV/HEV NF125-SEV/HEV	NV250-SV/HV NV250-SEV/HEV NV125-SEV/HEV	140	40	65.5	2	—	2		
TCL-4SW3 (*2)	White	2, 3	NF400-CW/SW/SEW NF630-CW/SW/SEW	NV400-CW/SW/SEW NV630-CW/SW/SEW	171	110	99.5	2	—	2		
	White	3	NF400-SEW with MDU (*6)	—	171	110	132.5/196.5	2	—	2		
TCL-4SW4 (*2)	White	4	NF400-SW/SEW/HEW NF630-SW/SEW NF400-SEW with MDU (*6)	NV400-SEW/HEW NV630-SEW	240	110	105	2	6	—		
TCL-8SW3 (*2)	White	2, 3	NF800-CEW/SDW/SW/HEW/REW	NV800-SEW/HEW	224	155	103.5	2	4	—		
	White	3	NF800-SEW with MDU/HEW with MDU (*6)	—	224	155	146/194.5	2	4	—		
TCL-8UW3	Transparent	3	NF800-UEW (*3)	—	220	155	146/194.5	2	4	—		
TCL-8SW4 (*2)	White	4	NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*6)	—	294	155	103.5	2	6	—		
TCL-8UW4	Transparent	4	NF400-UEW, NF800-UEW (*3)	—	290	155	146/194.5	2	6	—		
TCL-10SW3	Transparent	3	NF1000-SEW	—	220	150	139	2	4	—		
TCL-10SW4	Transparent	4	NF1000-SEW NF1250-SEW/SDW	—	290	150	139	2	4	—		
TCL-05SRU2 (*2)	White	2	NF100-SRU	NF100-SRU	50	40	66	2	4	—		
			NF100-HRU	—	50	40	72		—	—		
TCL-05SRU3 (*2)	White	3	NF100-SRU	NF100-SRU	75	40	66	2	—	—		
			NF100-HRU	NF100-HRU	75	40	72		—	—		
TCL-03SVU2 (*2)	White	2	NF50-SVFU	NV50-SVFU	36	30	65.5	2	—	—	Quick type	
TCL-03SVU3 (*2)	White	3	NF50-SVFU	NV50-SVFU	54	30	65.5	2	—	—	(Remove the existing cover from the body, and fit the terminal cover.)	
TCL-05SVU2 (*1)(*7)	White	2	NF100-CVFU	—	50	25	65.5	2	2	2		
TCL-05SVU2L (*1)(*8)	White	2	NF100-CVFU	—	50	40	65.5	2	2	2		
TCL-05SVU3 (*2)(*7)	White	3	NF100-CVFU	NV100-CVFU	75	25	65.5	2	2	2		
TCL-05SVU3L (*2)(*8)	White	3	NF100-CVFU	NV100-CVFU	75	40	65.5	2	2	2		
TCL-1SVU3 (*2)	White	2, 3	NF125-SVU	—	90	40	65.5	2	2	2	Screw type	
	White	3	NF125-HVU	NV125-SVU/HVU	90	40	65.5	2	2	2	(Remove the existing cover from the body, and fit the terminal cover.)	
TCL-2SVU3 (*2)(*9)	White	3	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU	105	40	65.5	2	2	2	Screw type	
TCL-2SVU3L (*2)(*10)	White	3	NF250-CVU/SVU/HVU	NV250-CVU/SVU/HVU	105	50	65.5	2	2	2	(Remove the existing cover from the body, and fit the terminal cover.)	
TCL-4SWU	White	3	NF400-SWU/HWU	—	171	110	99.5	2	—	2	Quick type	
TCL-6SWU	Transparent	3	NF630-SWU/HWU	—	224	155	103.5	2	4	—	Screw type	Use in combination with insulating barrier.

Notes *1 For a circuit breaker with F or V type operating handle, specify the model name with F at the end.

(F or V type operating handle dedicated models, screws are used for fixing.)

*2 The standard models can be used in combination with F and V Type Operating Handles.

*3 The dimension C is the size on the power supply side and load side.

*4 When a crimp terminal applicable to wires with a size of 117.2 to 152.05mm² (Model 2CR-150 or CB150-S8) is used, TC-L cannot be fitted. Insulate the terminal from TC-S with insulating tube or taping.

*5 In the case of installation on the body, specify the model name with-MDU at the end.

*6 It cannot be installed in the case of installation on the body.

*7 Applicable to circuit breakers with rating of 75A or less (max. wire size 25mm²)

*8 Applicable to circuit breakers with rating of 125A or less (max. wire size 60mm²)

*9 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)


*10 Applicable to circuit breakers with rating of 250A or less (max. wire size 150mm²) (Applicable to UL wire 300kcmil)

*11 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

Remarks 1.The wire sizes shown in the above notes *8 to *11 are those of the 600V vinyl insulated wires.

2.Insulate the exposed live parts of crimp terminals with insulating tape or the like.

3.When protection from the power supply and load sides is necessary, separately consult us.

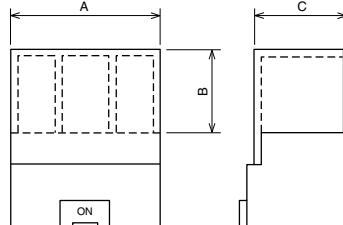

(TC-L-TC-S-TTC)

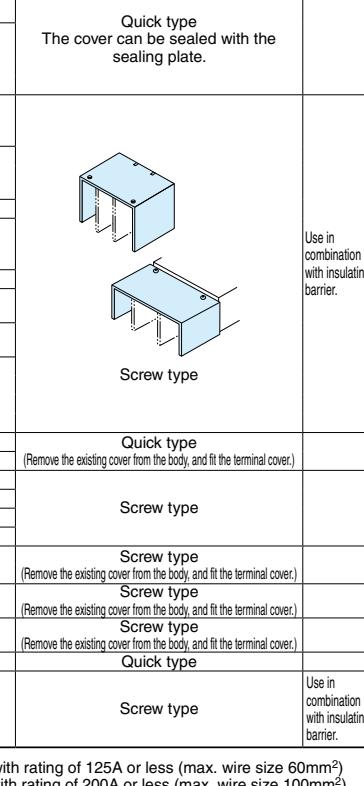


Table 6-25 Small terminal covers (TC-S)

Type name	Color	Number of poles of circuit breaker	Applicable model		Dimensions (mm)			Contents			Appearance	Remarks
			MCCB	ELCB	A	B	C	Number of covers	Cover mounting screw	Sealing plate		
TCS-05FA2 (*6)	White	2	NF30-FAU, NF50-FAU	NV30-FAU, NV50-FAU	40	7	55	2	—	—		
TCS-05FA3 (*6)	White	3			60	7	55	2	—	—		
TCS-05FH2 (*7)	White	2	NF50-FHU	NV50-FHU	50	5	55.5	2	—	—		
TCS-05FH3 (*7)	White	3			75	5	55.5	2	—	—		
TCS-05SV2 (*1)	White	2	NF32-SV, NF63-CV/SV/HV	—	50	5	65.5	2	—	2		
TCS-05SV3 (*2)	White	3	NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-HV	75	5	65.5	2	—	2		
TCS-05SV4	White	4	NF63-SV/HV	—	100	5	65.5	2	—	2		
TCS-1SV2 (*2)	White	2	NF125-CV/SV	—	60	6.5	65.5	2	—	2		
TCS-1SV3	White	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	2	—	2		
	White	2, 3	NF125-HV/UV	—								
TCS-1SV4	White	4	NF125-SV/HV/UV	NV125-SV/HV	120	6.5	65.5	2	—	2		
TCS-1FH3	White	3	NF100-FHU	NV100-FHU	75	5	55.5	2	—	2		
TCS-2SV3 (*2)(*3)	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	6.5	65.5	2	—	2		
TCS-2SV4 (*3)	White	4	NF125-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SV/HV/UV NF250-SEV/HEV NF250-SGV/LGV/HGV	NV125-SEV/HEV — NV250-SV/HV —	140	6.5	65.5	2	—	2		
TCS-05SRU2 (*2)	White	2	NF100-SRU	NV100-SRU	50	5	66 72	2	—	2		
TCS-05SRU3 (*2)	White	3	NF100-SRU	NV100-SRU								
	White	2	NF100-HRU	NV100-HRU	75	5	66 72	2	—	2		

Notes *1 For a circuit breaker with F type operating handle, specify the model name with F at the end.
(F type operating handle dedicated models, screws are used for fixing.)

*2 The standard models can be used in combination with F and V Type Operating Handles.

*3 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

*6 When a crimp terminal applicable to wires with a size of 16.78 to 22.66mm² (Model JST-22-5NS) used, TC-S cannot be fitted. Insulate with insulating tape or the like.

*7 When a crimp terminal applicable to wires with a size of 16.78 to 22.66mm² (Model JST-22-5S and BH-22) used, TC-S cannot be fitted. Insulate with insulating tape or the like.

Remark: 1. Insulate the exposed live parts of crimp terminals with insulating tape or the like.

Quick type
The cover can be sealed with the sealing plate.

Table 6-26 Transparent terminal covers (TTC)

Type name	Number of poles of circuit breaker	Applicable model		Dimensions (mm)			Contents			Appearance	Remarks		
		MCCB	ELCB	A	B	C	Number of covers	Cover mounting screw	Sealing plate				
TTC-05SV2 (*1)	2	NF32-SV NF63-CV/SV/HV	—	50	25	65.5	2	—	2				
TTC-05SV3 (*2)	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	25	65.5	2	—	2				
	2, 3	—	NV63-CV/SV										
TTC-05SV4	4	NF63-SV/HV	—	100	25	65.5	2	—			2		
TTC-1SV2 (*1)	2	NF125-CV/SV	—	60	40	65.5	2	—	2				
TTC-1SV3 (*2)	3	NF125-CV/SV	NV125-CV/SV/HV	90	40	65.5	2	—	2				
	2, 3	NF125-HV/UV	—										
TTC-1SV4	4	NF125-SV/HV/UV	NV125-SV/HV	120	40	65.5	2	—			2		
TTC-2SV3 (*2)(*3)(*5)(*6)	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	40	65.5	2	—	2				
TTC-2SV4 (*6)	4	NF125-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SV/HV/UV NF250-SEV/HEV NF250-SGV/LGV/HGV	NV125-SEV/HEV — NV250-SV/HV —	140	40	65.5	2	—	2				
TTC-4SW3	2, 3	NF400-CW/SW/SEW NF400-HEW/REW NF630-CW/SW/SEW NF630-HEW/REW	NV400-CW/SW/SEW NV400-HEW NV630-CW/SW/SEW NV630-HEW	171	110	104.5	2	4	—				
	3	NF400-SEW with MDU/HEW with MDU (*4)	—										
TTC-4SW4	4	NF400-SW/SEW/HEW NF630-SW/SEW/HEW NF400-SEW with MDU/HEW with MDU (*4)	NV400-SEW/HEW NV630-SEW	240	110	104.5	2	6	—				
TTC-8SW3	2, 3	NF800-CEW/SDW/SEW NF800-HEW/REW	NV800-SEW/HEW	224	155	103.5	2	4	—				
	3	NF800-SEW with MDU/HEW with MDU (*4)	—										
TTC-8SW4	4	NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*4)	—	294	155	103.5	2	6	—				

Notes *1 For a circuit breaker with F type operating handle, specify the model name with F at the end.

(F type operating handle dedicated models, screws are used for fixing.)

*2 The standard models can be used in combination with F and V Type Operating Handles.

*3 When a crimp terminal applicable to wires with a size of 117.2 to 152.05mm² (Model 2CR-150 or CB150-S8) is used, TTC cannot be fitted.

Use TCL-2SV3L. Or insulate the terminal from TC-S with insulating tube or taping.

*4 In the case of installation on the body, specify the model name with • MDU at the end.

*5 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)

*6 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

Remark: 1. There is also a 4-poles product.

6 Accessories [2] External Accessories

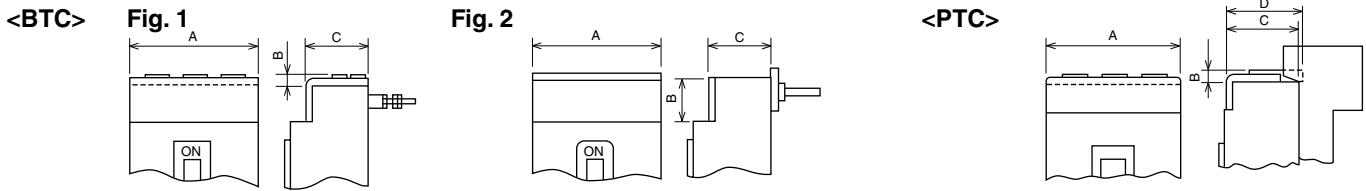
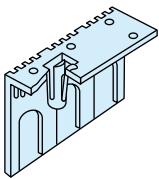
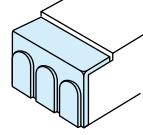
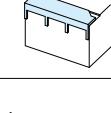
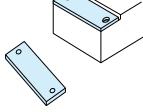


Table 6-27 Rear terminal cover (BTC)

Type name	Color	Number of poles of circuit breaker	Applicable model		Dimensions (mm)			Contents			Appearance	Remarks		
			MCCB	ELCB	A	B	C	Number of covers	Cover mounting screw	Sealing plate				
BTC-05SV2	White	2	NF32-SV NF63-CV/SV/HV	– (*1)	50	5	65.5	2	–	2	 	Cover for stud connection block on back in the case of rear connection type		
BTC-05SV3	White	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	5	65.5	2	–	2				
	White	2, 3	–	NV63-CV/SV										
BTC-05SV4	White	4	NF63-SV/HV	–	100	5	65.5	2	–	2				
BTC-1SV2	White	2	NF125-CV/SV	–	60	6.5	65.5	2	–	2				
BTC-1SV3	White	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	2	–	2				
	White	2, 3	NF125-HV/UV	–										
BTC-1SV4	White	4	NF125-SV/HV/UV	NV125-SV/HV	120	6.5	65.5	2	–	2				
BTC-2SV3	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	6.5	65.5	2	–	2				
			NF125-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	NV125-SEV/HEV –										
BTC-2SV4	White	4	NF250-SV/HV/UV	NV250-SV/HV	140	6.5	65.5	2	–	2				
			NF250-SEV/HEV NF250-SGV/LGV/HGV	–										
			NF400-CW/SW/SEW NF630-CW/SW/SEW	NV400-CW/SW/SEW NV630-CW/SW/SEW										
			NF400-SEW with MDU (*5)	(*5)										
BTC-4SW3	White	2, 3	NF400-UEW	(*4)	140	42 (*2)	99.5	2	–	2		Quick type The cover can be sealed with the sealing plate.		
		3	NF400-UEW	–										
BTC-4SW4	Transparent	4	NF400-SW/SEW/HEW NF630-SW/SEW/HEW NF400-SW with MDU/HEW with MDU (*5)	NV400-SEW/HEW NV630-SEW	185	42 (*2)	97.5	2	6	–		Screw type		
BTC-8SW3	Transparent	2, 3	NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW	210	32 (*2)	97.5	2	8	–				
		3	NF800-SEW with MDU/HEW with MDU (*5)	–										
BTC-8SW4	Transparent	4	NF800-UEW	(*4)	210	32 (*2)	146/ 194.5	2	4	–				
BTC-8SW4	Transparent	4	NF800-SEW/HEW NF800-SEW with MDU/HEW with MDU (*5)	(*5)	280	32 (*2)	97.5	2	10	–				
			NF400-UEW, NF800-UEW (*4)	–										

Notes *1 For 2-pole ELCB, use BTC for 3-pole circuit breaker.

*2 Dimension B in Fig. 2.

*3 The covers can be used for plug-in type circuit breakers. Other models are designed only for rear connection type.

*4 The dimension C is the size on the power supply side and load side.




*5 In the case of installation on the body, it can be fitted only on the power supply side.

*6 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

Remarks 1. PTC-4SW3 can be used as the back terminal covers for NF400-HEW/REW, NF630-HEW/REW, NV400-HEW and NV630-HEW.

2. For terminal covers for 4-pole circuit breakers not listed above, consult us.

Table 6-28 Plug-in terminal covers (PTC)

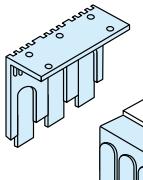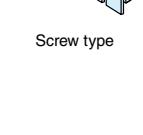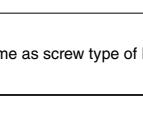Type name	Color	Number of poles of circuit breaker	Applicable model		Dimensions (mm)				Contents			Appearance	Remarks		
			MCCB	ELCB	A	B	C	D	Number of covers	Cover mounting screw	Sealing plate				
PTC-05SV2	White	2	NF32-SV NF63-CV/SV/HV	–	50	6.5	65.5	72	2	2	–	 	Cover for stud connection block in the case of plug-in type		
PTC-05SV3	White	3	NF32-SV NF63-CV/SV/HV	NV32-SV, NV63-HV	75	6.5	65.5	72	2	2	–				
	White	2, 3	–	NV63-CV/SV											
PTC-05SV4	White	4	NF63-SV/HV	–	100	6.5	65.5	72	2	2	–				
PTC-1SV2	White	2	NF125-CV/SV	–	60	6.5	65.5	–	2	4	–				
PTC-1SV3	White	3	NF125-CV/SV	NV125-CV/SV/HV	90	6.5	65.5	–	2	4	–				
	White	2, 3	NF125-HV/UV	–											
PTC-1SV4	White	4	NF125-SV/HV	NV125-SV/HV	120	6.5	65.5	–	2	2	–				
PTC-2SV3	White	2, 3	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV NV250-SEV/HEV NV125-SEV/HEV	105	6.5	65.5	78.5	2	4	–				
			NF125-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV	–											
PTC-2SV4	White	4	NF250-SV/HV/UV	NV250-SV/HV	140	6.5	65.5	78.5	2	2	–				
			NF250-SEV/HEV NF250-SGV/LGV/HGV	–											
			NF400-CW/SW/SEW NF630-CW/SW/SEW	NV400-CW/SW/SEW NV630-CW/SW/SEW	140	42	97.5	–	2	4	–				
			NF400-HEW/REW NF630-HEW/REW	(*1) (*1)											
PTC-4SW3	Transparent	2, 3	NF400-HEW/REW NF630-HEW/REW	(*1) (*1)	140	42	97.5	–	2	4	–		Same as screw type of BTC		

Notes *1 The covers can be used as back terminal covers.

*2 See Fig. 2 of BTC.

Table 6-29 List of terminal covers applicable to F and V Type Operating Handles

Large terminal covers (TC-L)	Small terminal covers (TC-S)	Transparent terminal covers (TTC)	Applicable operating handles	Number of poles of circuit breaker	Applicable model	
					MCCB	ELCB
TCL-05SV2F (*2)(*3)	TCS-05SV2F (*2)	TTC-05SV2F (*2)	F-05SV2, V-05SV2	2	NF32-SV, NF63-CV/SV/HV	– (*1)
TCL-05SV2LF (*2)(*4)				3	NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-HV
TCL-05SV3 (*3)	TCS-05SV3	TTC-05SV3	F-05SV, V-05SV	2, 3	–	NV63-CV/SV
TCL-05SV3L (*4)				4	NF32-SV, NF63-CV/SV/HV	–
TCL-05SV4	–	–		2	NF125-CV/SV	–
TCL-1SV2F (*2)	TCS-1SV2F (*2)	TTC-1SV2F (*2)	F-1SV2, V-1SV2	3	NF125-CV/SV	NV125-CV/SV/HV
TCL-1SV3	TCS-1SV3	TTC-1SV3	F-1SV, V-1SV	2, 3	NF125-HV/UV	–
TCL-1SV4	–	–		4	NF125-CV/SV/HV/UV	NV125-CV/SV/HV
TCL-2SV3 (*5)	TCS-2SV3	TTC-2SV3	F-2SV, V-2SV	2, 3	NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV, NV250-SEV/HEV NV125-SEV/HEV
TCL-2SV3L (*6)(*7)				4	NF250-CV/SV/HV/UV, NF250-SEV/HEV NF125-SEV/HEV	NV250-CV/SV/HV, NV250-SEV/HEV NV125-SEV/HEV
TCL-2SV4 (*7)	–	–	F-4S V-4S	2, 3	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW
TCL-4SW4	–	TTC-4SW4		4	NF400-SW/SEW/HEW NF630-SW/SEW/HEW	NV400-SEW/HEW NV630-SEW
TCL-8SW3	–	TTC-8SW3	F-8S V-8S	2, 3	NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW
TCL-8SW4	–	TTC-8SW4		4	NF800-SEW/HEW	–

Notes *1 For 2-pole NV, use a terminal cover for 3-pole circuit breaker.

*2 Only for F and V Type Operating Handles (screw type)


*3 Applicable to circuit breakers with rating of 75A or less (max. wire size 25mm²)*4 Applicable to circuit breakers with rating of 125A or less (max. wire size 60mm²)*5 Applicable to circuit breakers with rating of 200A or less (max. wire size 100mm²)*6 Applicable to circuit breakers with rating of 250A or less (max. wire size 150mm²)

*7 For NF125-HEV, NF250-HEV, NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.

Remark: 1. The terminal covers for UL 489 Listed Circuit Breakers can be normally combined with F Type Operating Handles.

5. Insulating Barriers

The insulating barrier enhances the insulation between the phases of circuit breaker terminals. It also prevents accidents due to conductive foreign matter and dust, and secondary accidents when isolating a fault current.

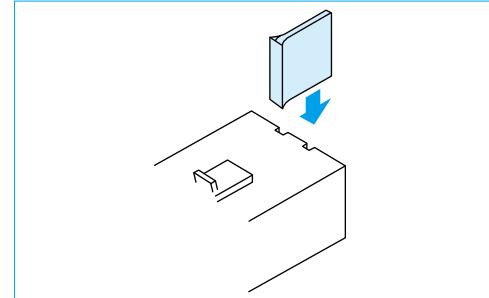

● The insulating barrier is available for the models listed in the table below.

Table 6-30

(● denotes optional)



Applicable model	ELCB	Connecting method			
		Front	Rear	Flush plate	Plug-in
NF32-SV, NF63-CV NF125-CV, NF100-CVFU NF100-SRU	NV32-SV, NV63-CV NV125-CV, NV100-CVFU NV100-SRU	●	–	–	–
NF63-SV/HV NF125-SV/HV NF100-HRU	NV63-SV/HV NV125-SV/HV NV100-HRU	Standard attachment	–	–	–
NF125-SEV/HEV NF250-CV/SV/HV/SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV/RGV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	Standard attachment	–	–	Standard attachment
NF125-SVU NF125-HVU NF250-SVU NF250-HVU NF250-CVU	NV125-SVU NV125-HVU NV250-SVU NV250-HVU NV250-CVU	Standard attachment	–	–	–
NF400-CW/SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	Standard attachment	●	●	Standard attachment
NF400-UEW(4P) NF800-CEW/SEW/HEW/REW/SDW	NV800-SEW/HEW	Standard attachment	●	●	●
NF800-UEW	–	Standard attachment	●	●	–
NF400-SWU/HWU NF630-SWU/HWU	–	Standard attachment	–	–	–
NF1000-SEW, NF1250-SEW/SDW	–	Standard attachment	–	–	Standard attachment
NF1600-SEW/SDW	–	Standard attachment	–	–	–

Always mount the insulating barrier when it comes with the circuit breaker.

6 Accessories [2] External Accessories

● Insulating Barrier-Front (BA-F)

Table 6-31 Summary of dimensions

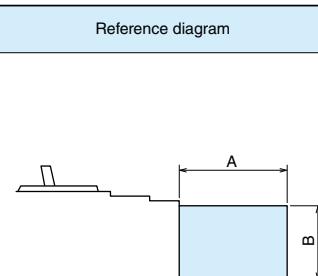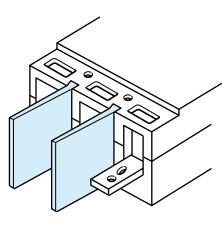Type name	Applicable model		Dimensions (mm)		Quantity per breaker			Reference diagram
	MCCB	ELCB	A	B	2P	3P	4P	
BAF-05SRU	NF100-SRU/HRU	NV100-SRU/HRU	50	59.5	1	2	-	
BAF-05SV	NF32-SV	NV32-SV	50	59.5	1 (*2)	2	3	
	NF63-CV NF125-CV	NV63-CV NV125-CV						
	NF63-SV/HV NF125-SV/HV/UV	NV63-SV/HV NV125-SV/HV						
BAF-2SV	NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV/SEV/HEV NF250-SGV/LGV/HGV/RGV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	100	59.5	2	4	6	
BAF-05SVU	NF100-CVFU	NV100-CVFU	50	59.5	2	4	-	
	NF125-SVU NF125-HVU	NV125-SVU NV125-HVU						
BAF-2SVU	NF250-SVU NF250-HVU NF250-CVU	NV250-SVU NV250-HVU NV250-CVU	100	59.5	-	4	-	
BAF-4SW	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	110	98.5	2	4	6	
BAF-4UW (*1)	NF400-UEW(3P)	-	110	132/ 98.5	-	4	-	
BAF-8SW	NF800-CEW/SEW/SDW/HEW/REW	NV800-SEW/HEW	110	98.5	1	2	3	
BAF-10SW	NF400-UEW(4P) NF800-UEW, NF1000-SEW NF1250-SEW/SDW	-	110	132	1	2	3	
BAF-4SWU	NF400-SWU/HWU	-	110	98.5	-	4	-	
BAF-6SWU	NF630-SWU/HWU(less than 600A)	-	110	98.5	-	2	-	
BAF-16SW	NF1600-SEW/SDW	-	185	132	1	2	3	

Notes *1 The barriers BAF-4UW for the power supply and load sides vary in the dimension B.

*2 Not supplied with ELCB.

● Insulating Barrier-Rear (BA-B)

Table 6-32 Summary of dimensions

Type name	Applicable model		Dimensions (mm)		Quantity per breaker			Reference diagram
	MCCB	ELCB	A	B	2P	3P	4P	
BAB-4SW	NF400-CW/SW/SEW/HEW/REW NF400-UEW(3P) NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	140	74.5	-	4	6	
BAB-8SW	NF800-CEW/SEW/SDW/HEW/REW NF400-UEW(4P) NF800-UEW	NV800-SEW/HEW	140	74.5	-	4	6	

Drilling size for use of BA-B (in the case of 3-pole circuit breaker)

NF400-CW, NF400-SW, NF400-SEW, NF400-HEW, NF400-REW, NF400-UEW NF400-CW, NV400-SW, NV400-SEW, NV400-HEW NF630-CW, NF630-SW, NF630-SEW, NF630-HEW, NF630-REW NV630-CW, NV630-SW, NV630-SEW, NV630-HEW	NF800-CEW, NF800-SEW, NF800-HEW, NF800-REW, NF800-UEW NV800-SEW, NV800-HEW
Power supply side Note The dimensions in brackets are those for NF400-UEW. Load side	Note The dimensions in brackets are those for NF800-UEW.

The drilling size drawings show the dimensions viewed from the rear side.

● Insulating Barrier-Plug-in (BA-P)

Table 6-33 Summary of dimensions


Type name	Applicable model		Dimensions (mm)		Quantity per breaker			Reference diagram
	MCCB	ELCB	A	B	2P	3P	4P	
BAP-2SV	NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV NF250-SGV/LGV/HGV/RGV NF250-SEV/HEV	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV	172	74.5	4			
BAP-4SW	NF400-CW/SW NF400-SEW/HEW/REW/UEW NF630-CW/SW NF630-SEW/HEW/REW	NV400-CW/SW NV400-SEW/HEW NV630-CW/SW NV630-SEW/HEW	178	74.5		4	6	
BAP-8SW	NF800-CEW/SEW NF800-HEW/REW	NV800-SEW/HEW	172	74.5	—			
	NF1000-SEW NF1250-SEW	—	215	74.5				

● Earth fault preventing barriers (BA-G)

Table 6-34 Summary of dimensions

Type name	Applicable model		Dimensions (mm)		Quantity per breaker		Reference diagram
	MCCB	ELCB	A	B	3P	1	
BAG-05SV3	NF32-SV NF63-CV/SV/HV	NV32-SV NV63-CV/SV/HV	30	75			
BAG-1SV3	NF125-CV/SV/HV	NV125-CV/SV/HV	40	90			
BAG-2SV3	NF125-SEV/HEV NF250-CV/SV/HV/SEV/HEV NF250-SEV/HEV with MDU	NV125-SEV/HEV NV250-CV/SV/HV/SEV/HEV NV250-SEV/HEV with MDU	63	105			
BAG-4SW3	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	63	164			
BAG-4UW3	NF400-UEW	—	63	164			
BAG-8SW3	NF800-CEW/SEW/SDW/HEW/REW	NV800-SEW/HEW	110	210			
BAG-8UW3	NF800-UEW	—	110	210			
BAG-10SW3	NF1000-SEW NF1250-SEW/SDW	—	98	210			
BAG-16SW3	NF1600-SEW/SDW	—	150	300			

Also the earth fault preventing barriers for 2- and 4-pole circuit breakers are available.

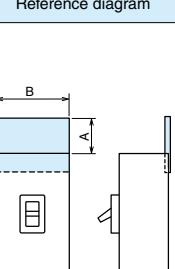

Earth fault preventing barrier (3 poles)

6. Handle Lock Devices, Lock Covers, Auxiliary Handles, Card Holders

(1) Handle Lock Devices (HL and HL-S)

These devices are used to lock the circuit breakers in the ON or OFF position. If overcurrent flows while the circuit breaker is locked, it will trip. Model HL (red resin moldings) to be fitted to handles and Model HL-S to be secured on circuit breaker covers are available. (Use a commercially available padlock having the nominal size shown in the right table. If a padlock in another size is used, the device may not lock correctly.)

Table 6-35 HL

Type name	Applicable model		Reference diagram	Padlock
	MCCB	ELCB		
HL-05FH	NF50-FHU, NF100-FHU	NV50-FHU, NV100-FHU	Fig. 4	a
HL-05FA	NF30-FA/FAU, NF50-FA/FAU	NV30-FA/FAU, NV50-FA/FAU	Fig. 5	
HLF-05BHD	BH-D6, BH-D10	—	—	
HLF-05SMU (*1)	NF50-SMU	—	—	a
HLF-05SRU	NF100-SRU/HRU	NV100-SRU/HRU	—	
HLN-05SV	NF32-SV, NF63-CV/SV/HV NF125-CV/SV/HV/UV, NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF250-SGV/LGV/HGV/RGV	NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV, NV125-SEV/HEV NV250-CV/SV/HV, NV250-SEV/HEV	Fig. 1	
HLF-05SV	NF32-SV, NF63-CV/SV/HV NF125-CV/SV/HV/UV, NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV, NF250-SEV/HEV NF250-SGV/LGV/HGV/RGV	NV32-SV, NV63-CV/SV/HV NV125-CV/SV/HV, NV125-SEV/HEV NV250-CV/SV/HV, NV250-SEV/HEV	Fig. 1	a
HLF-05SVU	NF125-SVU/HVU NF250-SVU/HVU/CVU	NV125-SVU/HVU NV250-SVU/HVU/CVU	Fig. 2	
HL-4CW	(*1) NF400-CW	NV400-CW	Fig. 2	c
HL-4SW	(*1) NF400-SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW/REW/UEW	NV400-SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	Fig. 3	
HL-4SWU	NF400-SWU/HWU, NF630-SWU/HWU	—	Fig. 3	
HL	(*2) NF1000-SEW, NF1250-SEW/SDW, NF1600-SEW/SDW	—	Fig. 4	

Notes *1 When a padlock is not used, the device can be used as a lock cover (LC).

Remarks 1. One lot of HL-4CW and HL-4SW contains one piece, and one lot of others contains 10 pieces.

*2 Place an order for a circuit breaker body combined with the device.

2. HLF types are used for OFF lock, and HLN types for ON lock.

Padlock size (mm)

Application	A (Nominal size)	B
a	25	4 or less
b	35	5 or less
c	40	6 or less

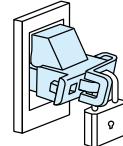
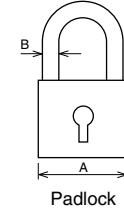


Fig. 1

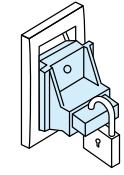


Fig. 2

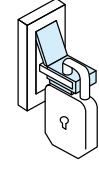


Fig. 3



Fig. 4



Fig. 5

Table 6-36 HL-S

Type name	Applicable model				Dimensions (mm)						Reference diagram	Padlock		
	MCCB	Number of poles	ELCB	Number of poles	A	B	C	D	E	F				
HLS-05SV2 (*1)	NF32-SV, NF63-CV, NF63-SV NF63-HV	2P	—	—	32	75	50	—	32	1.5	Fig. 5	b		
	NF125-CV, NF125-SV	2P	—	—			57							
HLS-05SV (*1)	NF32-SV, NF63-CV, NF63-SV NF63-HV	3P	NV32-SV, NV63-CV, NV63-SV, NV63-HV	3P	32	75	75	23	—	1.5	Fig. 5	b		
	NF63-SV, NF63-HV	4P	—	—			86	28						
HLS-2SV (*1)	NF125-CV, NF125-SV	3P	NV125-CV, NV125-SV, NV125-HV	3P	62.5	86	—	—	63	32	Fig. 5	b		
	NF125-HV	2P, 3P	—	—			28							
HLS-2SV (*1)	NF125-SV, NF125-HV	4P	NV125-SV, NV125-HV	4P	32	84	—	—	63	32	Fig. 5	b		
	NF125-UV	2P, 3P	—	—			28							
HLS-03SVU (*1)	NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV, NF250-SV, NF250-HV NF250-SGV/LGV/HGV/RGV	2P	NV125-SEV, NV125-HEV NV250-CV, NV250-SV, NV250-HV NV250-SEV, NV250-HEV	3P	32	100	—	—	-5.5	Fig. 6	Fig. 7	b		
	NF125-SEV, NF125-HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV, NF250-SV, NF250-HV NF250-SGV/LGV/HGV/RGV	3P					84	33						
HLS-05SVU2 (*1)	NF125-SEV, NF125-HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SV, NF250-HV, NF250-SEV, NF250-HEV NF250-SGV/LGV/HGV/RGV	4P	NV125-SEV, NV125-HEV NV250-SV	4P	69.5	84	—	—	32	Fig. 5	Fig. 7	b		
	NF250-UV	2P, 3P	—	—			33							
HLS-05SVU (*1)	NF50-SVFU	2P, 3P	NV50-SVFU	2P, 3P	—	—	—	—	—	—	—	Fig. 8		
HLS-05SVU2 (*1)	NF100-CVFU	2P	—	—	32	75	50	—	32	Fig. 5	Fig. 5			
HLS-05SVU (*1)	NF100-CVFU	3P	NV100-CVFU	3P			75							
HLS-05SVU (*2)	NF125-SVU/HVU	2P, 3P	NV125-SVU/HVU	3P	32	84	86	—	32	Fig. 5	Fig. 5			
HLS-2SVU (*1)	NF250-SVU/HVU/CVU	3P	NV250-SVU/HVU/CVU	3P			84							
HLS-4SW (*3)	NF400-CW/SW/SEW/HEW/REW NF630-CW/SW/SEW/HEW/REW	2P, 3P, 4P	NV400-CW/SW/SEW/HEW NV630-CW/SW/SEW/HEW	3P, 4P	—	—	—	—	—	—	—	Fig. 6		
HLS-4UW (*3)	NF400-UEW	3P	—	—	3P, 4P	84	—	—	—	—	—	Fig. 7		
HLS-8SW (*3)	NF800-CEW/SDW/SEW/HEW/REW	2P, 3P, 4P	NV800-SEW/HEW	3P, 4P			100							
HLS-8UW (*3)	NF400-UEW NF800-UEW	4P 3P, 4P	—	—	—	—	—	—	—	—	—	—	Fig. 7	

Notes *1 For locking in OFF position

*2 A, B, C and D in Figs. 5 and 6 are drilling sizes in front plate.

*3 Terminal covers cannot be fitted.

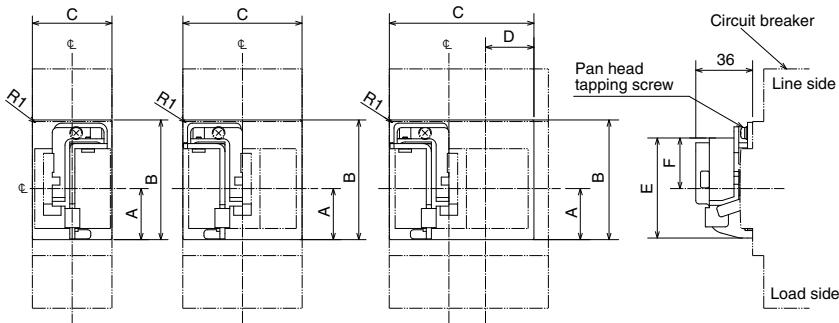


Fig. 5

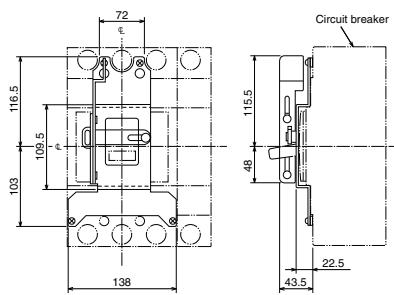


Fig. 6

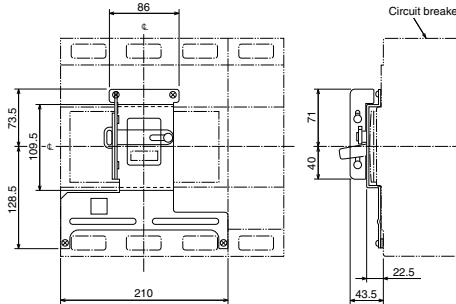


Fig. 7

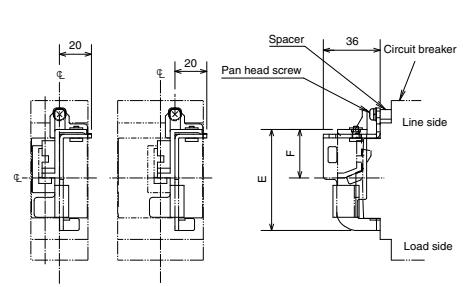


Fig. 8

(2) Lock Covers (LC)

Lock Cover is a plug-in lock for indicating easily without using padlocks that it is prohibited to operate the circuit breaker. A "Caution" tag can be hung on it. The covers are red resin moldings.

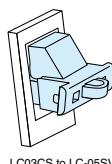



Table 6-37 LC

Type name	Applicable model	
	MCCB	ELCB
LC03CS	NF50/100-FHU	NV50/100-FHU
LC-05SV	NF32-SV NF63-CV/SV/HV NF125-CV/SV/HV/UV NF125-SEV/HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-CV/SV/HV/UV NF250-SEV/HEV NF250-SGV/LGV/HGV/RGV	NV32-SV NV63-CV/SV/HV NV125-CV/SV/HV NV125-SEV/HEV NV125-CV/SV/HV NV250-SEV/HEV
LC05FA	NF30-FAU NF50-FAU	NV30-FAU NV50-FAU

Remark: 1. One lot of and LC-NVL contains 50 pieces, and one lot of other models contains 10 pieces.

(3) Auxiliary Handles (HT)

These handles facilitate opening and closing circuit breakers.

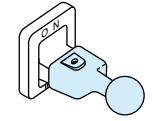

Auxiliary Handles

Table 6-38 HT

Type name	Applicable model	Dimensions					Outline dimension drawing
		A	B	C	D	E	
HT-4CW (*)	NF400-CW, NV400-CW		77.5				
HT-4SW (*) (*)	NF400-SW/SEW/HEW/REW/UEW NF630-CW/SW/SEW/HEW/REW NF800-CEW/SDW/SEW/HEW NF800-REW/UEW NV400-SW/SEW/HEW NV630-CW/SW/SEW/HEW NV800-SEW/HEW	59	81	32	38	M4	
HT-10SW (*)	NF1000-SEW NF1250-SEW/SDW NF1600-SEW/SDW	62	118	34	45	M4	

Notes *1 HT can be supplied separately. The user can fit it to the circuit breaker. (One lot contains 1 piece.)

*2 4-pole circuit breakers with 800A frame and 4-pole NF400-UEW come with auxiliary handles as standard accessories.

*3 HT is standard accessory.

(4) Card Holders (CH)

Cards showing the circuit breaker name and circuit number can be inserted to the card holder.

Fit the card holder to the circuit breaker body or the flush plate in the flush frame. (Although a card holder is supplied with each circuit breaker body, the card holder is available as an optional part.)

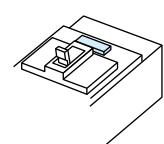


Table 6-39 Card holder size (mm)

Applicable model	Type name	A	B	C	Card size
NF250-SV or below NV250-SV or below	CH-P No.5	44	12	5	39x9
NF400-SW or above NV400-SW or above	CH-P No.3	38	22	5	33x20

7. Mechanical Interlocks (MI)

Front, rear and plug-in types

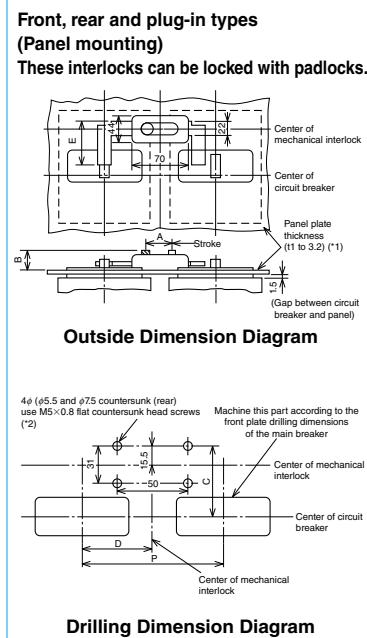


Fig. 1

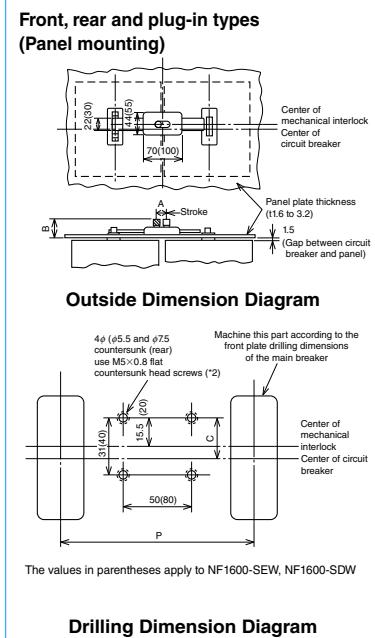


Fig. 2

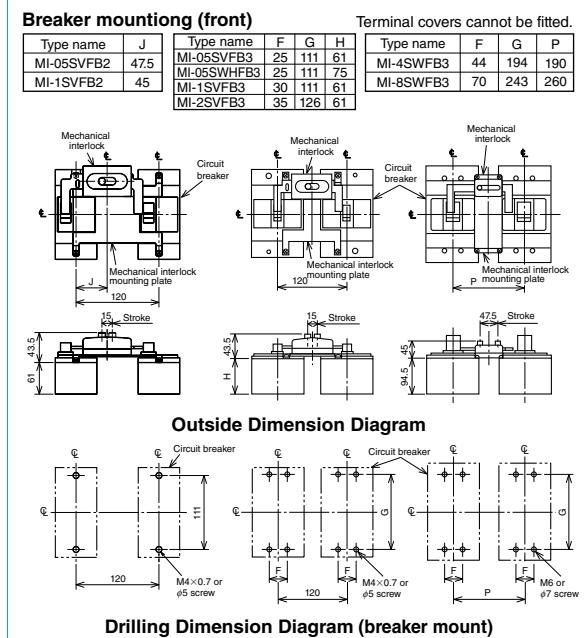


Fig. 3

Notes *1 For 400A frame or above, use a panel 1.6 to 3.2 thick.

*2 When the panel is 2.3 or more thick, countersink the panel (rear side) in ø9.5 for the four ø5.5 holes.

Table 6-40 Table of variable dimensions

Applicable model		Pitch (P) (*1)						Dimensions (mm)					Reference diagram	Breaker mount (*3)	Type name	Reference diagram (3P)
MCCB	ELCB	Standard		Semi-standard	Standard	t	A	B	C	D	E					
NF32-SV, NF63-CV/SV/HV	—	MI-05SV3	120	—	—	—	15	33	63	47.5	58	(*2)	MI-05VFB2	(Fig. 3)	2P+3P	
NF32-SV, NF63-CV/SV/HV	NV32-SV, NV63-CV/SV/HV		—	120	—	130	MI-05SV4	120 (*4)	—	—	58					
NF125-CV/SV	—		120	—	—	—	15	33	63	45	58					
NF125-CV/SV/HV	NV125-CV/SV/HV		—	120	130	150	MI-1SV4	130 (*4)	—	—	58					
NF125-UV	—		—	—	—	—	15	33	32.5	—	58					
NF125-SEV/HEV	NV125-SEV/HEV	MI-05VFB3	120 (*4)	150	180	MI-2SV4	150 (*4)	—	—	58	25.5	(*2)	MI-2SVFB3	(Fig. 3)	MI-2SVFB3	
NF125-SGV/LGV/HGV/RGV	NV125-SGV/LGV/HGV/RGV		—	—	—	—	15	33	63	—	58					
NF160-SGV/LGV/HGV	NV125-CV/SV/HV		—	120	130	150	MI-4SW4	250	47.5	33	83.5					
NF250-CV/SV/HV,	NV250-SEV/HEV		—	—	—	—	—	—	47.5	33	83.5					
NF250-SEV/HEV	NV250-SGV/LGV/HGV/RGV		—	—	—	—	—	—	47.5	33	83.5					
NF250-UV	—	MI-4SW3	—	190	—	210	MI-4SW4	250	47.5	33	83.5	(*2)	MI-4SWFB3	(Fig. 3)	MI-4SWFB3	
NF400-CW/SW/SEW/HEW/REW	NV400-CW/SW/SEW/HEW/REW		—	—	190	—	—	—	47.5	33	83.5					
NF630-CW/SW/SEW/HEW/REW	NV630-CW/SW/SEW/HEW		—	—	190	—	—	—	47.5	33	83.5					
NF400-UEW (3P)	—		—	220	—	240	MI-8SW4	290	47.5	33	60					
NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW		—	—	220	—	—	—	47.5	33	60					
NF400-UEW (4P)	—	MI-8SW3	—	220	—	240	MI-8SW4	290	47.5	33	60	(*2)	MI-8SWFB3	(Fig. 3)	MI-8SWFB3	
NF800-UEW	—		—	—	—	—	—	—	47.5	33	60					
NF1000-SEW, NF1250-SEW/SDW	—		MI-10SW3	220	—	MI-10SW4	290	2.3 (*5)	47.5	47	37.5					
NF1600-SEW/SDW	—		MI-16SW3	315	—	MI-16SW4	426	65	54.5	39	—					

Notes *1 Specify the circuit breaker mounting pitch (P).

*2 No need to specify the panel thickness (t). (Usable panel thickness range: t = 1~3.2mm. Above 400AF, use panel thickness t = 1.6~3.2mm)

*3 Terminal covers cannot be fitted. (However, TCL-4SW3 can be fitted.)

*4 When UVT is provided, separately install the module.

*5 If the thickness is not 2.3, specify the panel thickness (t).

Remarks 1. When a mechanical interlock is installed on the panel, screw type terminal covers cannot be installed.

2. These devices do not provide an isolation function. However, 400, 600, 630 and 800A frame circuit breakers can be made conforming to it. (See Note 3.)

3. On a 2-pole circuit breaker obtained by removing the neutral pole conductor from a 3-pole circuit breaker, the mechanical interlock can be installed in the same manner as on a 3-pole circuit breaker.

8. Boxes for Circuit Breakers and Boxed Circuit Breakers

(1) Kinds and specifications

Table 6-41

		Closed type (S)	Dust-proof type (I)	Water-proof type (W)
Appearance				
(*)				
MCCB (*2)	NF32-SV, NF63-CV/SV/HV	2P 3P	NFS-05SV2 (*5) NFS-05SV	NFI-05SV NFW-05SV
	NF125-CV/SV	2P 3P	NFS-1SV2 (*5) NFS-1SV	NFI-1SV NFW-1SV
	NF125-HV	2, 3P		NFW-1HV
	NF125-SGV/LGV		NFS-2SV	
	NF160-SGV/LGV			
	NF250-SGV/LGV			
	NF250-CV/SV, NF125/250-SEV			
	NF125/160/250-HGV			
	NF250-HV, NF125/250-HEV			
	NF400-CW			
ELCB (*2)	NF400-SW/SEW			
	NF630-CW/SW/SEW			
	NF800-CEW/SDW/SEW			
	NV32-SV, NV63-CV/SV/HV	2P 3P	NFS-05SV NFS-05SV	NFI-05SV NFW-05SV
	NV125-CV/SV		NFS-1SV	NFW-1SV
	NV125-HV		NFS-1SV	NFW-1HV
	NV250-CV/SV, NV125/250-SEV		NFS-2SV	NFW-2SV
	NV250-HV, NV125/250-HEV			
	NV400-CW			
	NV400-SW/SEW			
Operating method		Direct operation of circuit breaker handle	Operation through operating handle mechanism	
Standard paint color		Box: Munsell 5Y7/1	Operating handle: Munsell N1.5	
Protection class (IEC 60529)		IP3X	IP4X (*3)	IP65 (*4)

Notes *1 The window frame varies depending on the model.

*2 For 1-pole circuit breakers, boxes are not manufactured.

*3 The protection class of NFI-1SV and NFI-2SV is IP3X.

*4 The protection class of NFW-4CW, NFW-4SW, NFW-6SW and NFW-8SW is IP54.

*5 The circuit breaker body is a 2-pole external type.

Remarks: 1. Only internal accessories with lead wires drawn out can be fitted. (However, LT and SLT can be fitted on the right pole side.)

2. The dust-proof type (I) models do not provide an isolation function.

● Selection of rated current

When selecting the rated current of circuit breaker, it is necessary to consider the temperature in the box. When the rated current is carried, the temperature in the box increases by 10 to 20K. Correct the rated current with the temperature correction curve.

Determine the maximum working current to be 80% or less of the rated current.

● Locking

Type I and W boxed circuit breakers can be provided with locks in the following parts. Locking can prevent unnecessary operation.

① Cover and case

② ON or OFF position of operating handle


Padlocks must be prepared by the user.
(The dimensions of the padlocks are shown on page 116.)

● Interlock (only for Dust-proof type)

The cover cannot be opened while the circuit breaker is in the ON state. However, if the interlock release screw is turned, the cover is released from the locked state and can be opened even in the ON state.

● Handle operation and display

The ON, OFF or trip state of the body is displayed on each position on the decorative board.

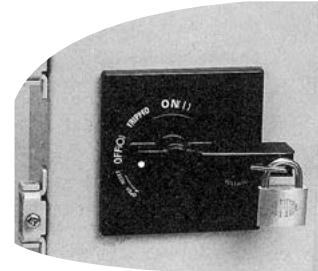

Example of Type I operating handle block

6 Accessories [2] External Accessories

(2) External dimensions

MCCB

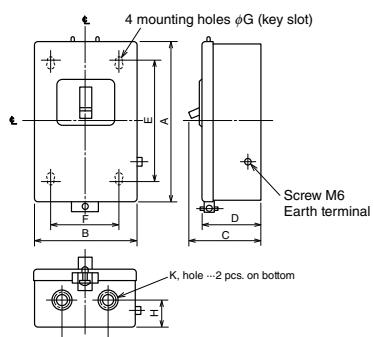


Fig. 1 Type S

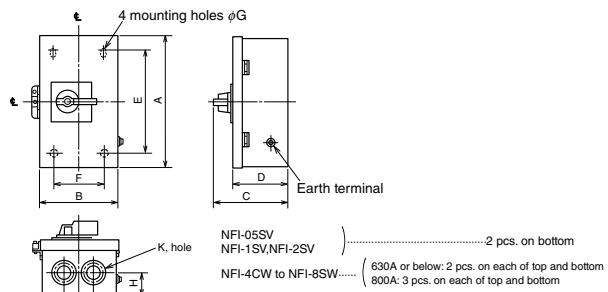


Fig. 2 Type I

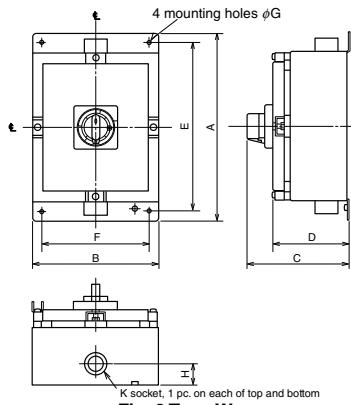


Fig. 3 Type W

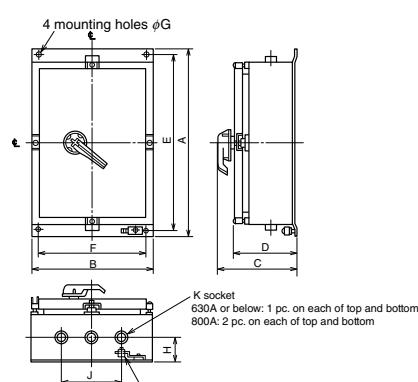


Fig. 4 Type W

Table 6-42 Table of variable dimensions (Boxes for 4-pole circuit breakers are not manufactured.)

Box type	Type name	Applicable Model	Variable dimensions (mm)										
			Fig.	A	B	C	D	E	F	G	H	J	K
S	NFS-05SV2	NF32-SV, NF63-CV/SV/HV	1	260	178	98	78	202	100	7	34	100	28, 35, 44
	NFS-05SV												
	NFS-1SV2	NF125-CV/SV	1	310	178	98	78	252	100	7	34	100	28, 35, 44
	NFS-1SV	NF125-CV/SV/HV											
	NFS-2SV	NF250-CV/SV, NF125/250-SEV NF125-SGV/LGV NF160-SGV/LGV NF250-SGV/LGV	1	440	247	137	116	373	170	9	52	120	50, 62, 78
I	NFI-05SV	NF32-SV, NF63-CV/SV/HV	2	350	186	155.5	117	286	120	7	42	100	28, 35, 44
	NFI-1SV	NF125-CV/SV/HV	2	352	188	155.5	118	286	120	7	42	100	28, 35, 44
	NFI-2SV	NF250-CV/SV/HV, NF125/250-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	2	442	248	162	124	373	170	9	54	120	50, 62, 78
	NFI-4CW	NF400-CW	2	730	320	244	191	650	240	11	87	120	50, 62, 78
	NFI-4SW	NF400-SW/SEW	2	730	320	244	191	650	240	11	65	120	50, 62, 78
	NFI-6SW	NF630-CW/SW/SEW	2	940	433	260	207	856	350	15	90	150	92
	NFI-8SW	NF800-CEW/SDW/SEW	2	1353	543	304	251	1270	460	15	90	320	104
W	NFW-05SV	NF32-SV, NF63-CV/SV/HV	3	390	265	214	160	350	225	9.5	45	—	28
	NFW-1SV	NF125-CV/SV	3	390	265	214	160	350	225	9.5	50	—	36
	NFW-1HV	NF125-HV	3	480	265	239	186	440	225	9.5	60	—	36
	NFW-2SV	NF250-CV/SV/HV, NF125/250-SEV/HEV NF125-SGV/LGV/HGV NF160-SGV/LGV/HGV NF250-SGV/LGV/HGV	3	550	355	264	210	510	315	11	75	—	54
	NFW-4CW	NF400-CW	4	800	355	257	220	760	315	11	85	—	70
	NFW-4SW	NF400-SW/SEW	4	800	355	257	220	760	315	11	85	—	70
	NFW-6SW	NF630-CW/SW/SEW	4	800	355	257	220	760	315	11	85	—	82
	NFW-8SW	NF800-CEW/SDW/SEW	4	1435	550	339	265	1395	515	15	100	180	104

Note) The sockets are applicable to thick steel duct (JIS C 8305) and conduit tube thread.

■ ELCB

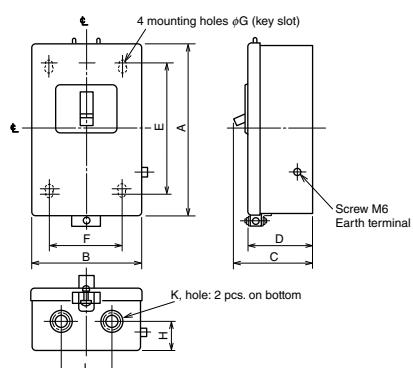


Fig. 1 Type S

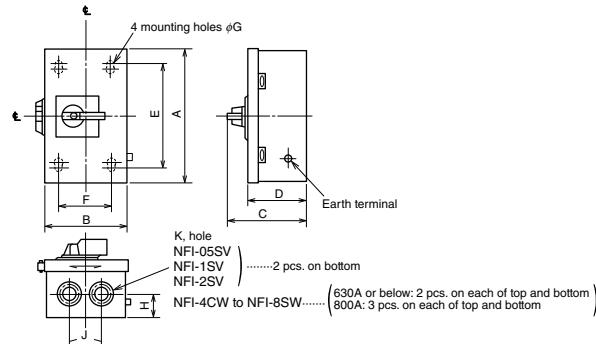


Fig. 2 Type I

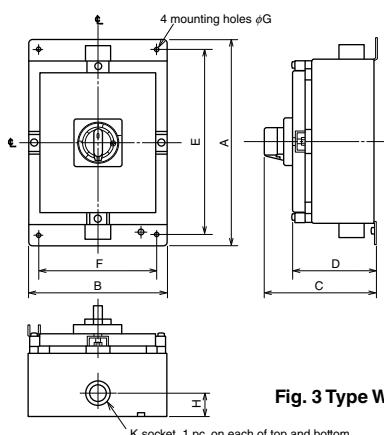


Fig. 3 Type W

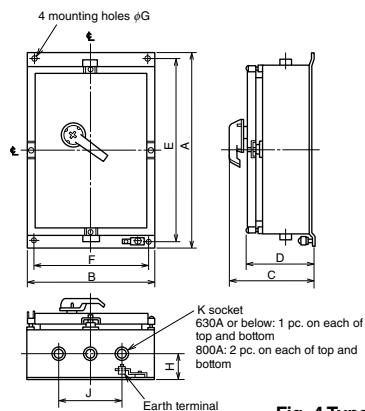


Fig. 4 Type W

Table 6-43 Table of variable dimensions (Boxes for 4-pole circuit breakers are not manufactured.)

Box type	Type name	Applicable Model	Variable dimensions (mm)										
			Fig.	A	B	C	D	E	F	G	H	J	K
S	NFS-05SV	NV32-SV, NV63-CV/SV/HV	1	260	178	98	78	202	100	7	34	100	28, 35, 44
	NFS-1SV	NV125-CV/SV/HV	1	310	178	98	78	252	100	7	34	100	28, 35, 44
	NFS-2SV	NV250-CV/SV, NV125/250-SEV	1	440	247	137	116	373	170	9	52	120	50, 62, 78
I	NFI-05SV	NV32-SV, NV63-CV/SV/HV	2	350	186	155.5	117	286	120	7	42	100	28, 35, 44
	NFI-1SV	NV125-CV/SV/HV	2	352	188	155.5	118	286	120	7	42	100	28, 35, 44
	NFI-2SV	NV250-CV/SV/HV, NV125/250-SEV/HEV	2	442	248	162	124	373	170	9	54	120	50, 62, 78
	NFI-4CW	NV400-CW	2	730	320	244	191	650	240	11	87	120	50, 62, 78
	NFI-4SW	NV400-SW/SEW	2	730	320	244	191	650	240	11	65	120	50, 62, 78
	NFI-6SW	NV630-CW/SW/SEW	2	940	433	260	207	856	350	15	90	150	92
	NFI-8SW	NV800-SEW	2	1353	543	304	251	1270	460	15	90	320	104
W	NFW-05SV	NV32-SV, NV63-CV/SV/HV	3	390	265	214	160	350	225	9.5	45	—	28
	NFW-1SV	NV125-CV/SV	3	390	265	214	160	350	225	9.5	50	—	36
	NFW-1HV	NV125-HV	3	480	265	239	186	440	225	9.5	60	—	36
	NFW-2SV	NV250-CV/SV/HV, NV125/250-SEV/HEV	3	550	355	264	210	510	315	11	75	—	54
	NFW-4CW	NV400-CW	4	800	355	257	220	760	315	11	85	—	70
	NFW-4SW	NV400-SW/SEW	4	800	355	257	220	760	315	11	85	—	70
	NFW-6SW	NV630-CW/SW/SEW	4	800	355	257	220	760	315	11	85	—	82
	NFW-8SW	NV800-SEW	4	1435	550	339	265	1395	515	15	100	180	104

(Note) The sockets are applicable to thick steel duct (JIS C 8305) and conduit tube thread.

9. Electrical Operated Circuit Breakers and Electrical Operation Devices



Spring charge type (1)



Spring charge type (2)
Standard paint color: Munsell 5Y7/1



Motor-drive type (2)
Standard paint color: Munsell 5Y7/1

(1) Specifications

● Electrically operated circuit breakers

Table 6-44

Specify the electrical operation device together with the circuit breaker body.

Electrically operating method		Spring charge type (1)		Spring charge type (2)		Motor-drive type (2)	
MCCB	Class S, H and R	NF125-SV, NF125-HV NF125-SEV, NF125-HEV NF125-SGV/LGV/HGV/RGV NF160-SGV/LGV/HGV NF250-SV, NF250-HV NF250-SEV, NF250-HEV NF250-SGV/LGV/HGV/RGV NF125-RV, NF250-RV	NF400-SW, NF400-SEW NF400-HEW, NF400-REW NF630-SW, NF630-SEW NF630-HEW, NF630-REW NF800-SDW, NF800-SEW NF800-HEW, NF800-REW	NF1000-SEW NF1250-SEW NF1250-SDW NF1600-SEW NF1600-SDW	NF400-SW, NF400-SEW NF400-HEW, NF400-REW NF630-SW, NF630-SEW NF630-HEW, NF630-REW NF800-SDW, NF800-SEW NF800-HEW, NF800-REW	NF1000-SEW NF1250-SEW NF1250-SDW NF1600-SEW NF1600-SDW	
		NF125-CV NF250-CV	NF400-CW NF630-CW NF800-CEW	—	NF400-CW NF630-CW NF800-CEW	—	—
		NF125-UV NF250-UV	NF400-UEW NF800-UEW	—	NF400-UEW NF800-UEW	—	—
		NF125-SV, NF250-SV	—	—	—	—	—
ELCB	Class S, H and R	NV125-SV, NV125-HV NV125-SEV, NV125-HEV NV250-SV, NV250-HV NV250-SEV, NV250-HEV	NV400-SW, NV400-SEW NV400-HEW NV630-SW, NV630-SEW NV630-HEW, NF800-SEW NV800-HEW	NV400-SW, NV400-SEW NV400-HEW NV630-SW, NV630-SEW NV630-HEW, NF800-SEW NV800-HEW (*3)	NV400-SW, NV400-SEW NV400-HEW NV630-SW, NV630-SEW NV630-HEW, NF800-SEW NV800-HEW (*3)	—	—
		NV125-CV NV250-CV	NV400-CW NV630-CW	—	NV400-CW (*3) NV630-CW	—	—
		NV125-SV, NV250-SV	—	—	—	—	—
		Rated operating voltage (V) (Allowable operating voltage range: 85 to 110%)	Compatible with 100 to 240VAC and 100 to 250VDC 24VDC, 48 to 60VDC (*1)	100-110VDC, 100-110VAC 200-220VAC(125VDC, 240VAC)	100-110VDC, 100-110VAC, 200-220VAC (125VDC, 240VAC)	100-110VDC, 100-110VAC, 200-220VAC (125VDC, 240VAC)	100-110VDC, 100-110VAC, 200-220VAC (125VDC, 240VAC)
Operating current (Arms) Values in (): Starting current	DC	100/110V	ON OFF	0.5 (1.5) 1.0 (3.0)	8 1.0 (3.0)	10 1.0 (4.0)	3.0(8.0) 5.0(13.5)
	AC	100/110V	ON OFF	0.6 (3.0)	10 1.0 (3.0)	10 1.0 (3.0)	4.0(8.0) 5.0(10.0)
		200/220V	ON OFF	0.5 (2.5) 0.5 (1.5)	8 0.5 (1.5)	8 0.5 (1.5)	2.0(4.5) 3.5(7.0)
			ON OFF Charge	0.05-0.1 (*2) 0.6 or less (self-holding type) 1.2 or less (self-holding type)	0.05 3 or less (self-holding type)	0.07 —	0.3 or less (self-holding type) —
Required transformer capacity VA		150		700		400	700
Endurance voltage		1500V		1500V			

Notes *1 When the rated operating voltage is 24VDC or 48 to 60VDC, specify the voltage. If the voltage is not specified, the circuit breaker will be manufactured for 100 to 240VAC and 100 to 250VDC.

*2 For 24VDC circuit breakers, the operating time at a voltage of 100% or more is shown.

*3 Models for special voltage (125VDC or 240VAC) are not provided with the test button.

*4 These are examples of operating current values, and are not guaranteed values.

Remarks 1. Flush plate type circuit breakers can be manufactured to order.

2. The models with voltage in parentheses are special voltage products.

3. For the spring charge type (1), use an ON-OFF operating switch for minute load.

4. For the spring charge type (1) The circuit breaker of 3 pole can be used TC-S, TC-L, TTC, BTC and PTC.

In case of 125A frame 4 pole can be used only TC-L.

In case of 250A frame 4 pole can be used TC-S, TC-L, TTC, BTC and PTC.

5. When the body of the spring charge type (1) breaker is an earth leakage alarm breaker, the reset button cannot be pressed. Provide such a circuit breaker with an external reset or automatic reset system (except for the electronic type).

6. When the body of the motor-drive type (2) or spring charge type (2) has internal accessories, they are normally provided with lead wire terminal blocks.

7. The types other than the spring charge type (1) do not provide an isolation function.

8. When placing an order for a CE marked product of the spring charge type (1) or spring charge type (2), specify the model name with CE.

9. The switching durability of electrically operated circuit breakers conforms to JIS.

● Electrical operation devices

The following models of Electrical Operation Devices are supplied also as separate devices. The user can install them to the circuit breaker body.
(Front connection, rear connection and plug-in types)
(When requiring a motor breaker or a CE marked product, place an order for it together with the circuit breaker body.)

Table 6-45

Electrically operating method		Spring charge type (1)				
Applicable models	Rated operating voltage	NF125-CV/SV/HV	NV125-CV/SV/HV	NF125-SEV/HEV/SGV/LGV/HGV/RGV NF160-SEV/HEV/SGV/LGV/HGV NF250-CV/SV/HV/JV/SEV/HEV/SGV/LGV/HGV/RGV NF250-UV	NV250-CV/SV/HV	NV125-SEV/HEV NV250-SEV/HEV
Compatible to 100-240VAC/100-250VDC	MDSAD240-NF1SVE	MDSAD240-NV1SVE		MDSAD240-NF2SVE	MDSAD240-NV2SVE	MDSAD240-NVE2SVE
24VDC	MDSD024-NF1SVE	MDSD024-NV1SVE		MDSD024-NF2SVE	MDSD024-NV2SVE	MDSD024-NVE2SVE
48-60VDC	MDSD060-NF1SVE	MDSD060-NV1SVE		MDSD060-NF2SVE	MDSD060-NV2SVE	MDSD060-NVE2SVE

● Cautions

- All electrical operations are based on intermittent rating. Avoid operating any device continuously 10 times or more (ON and OFF operations are counted as one time).
- Operate any device at 85 to 110% of the rated operating voltage.
- The dielectric strength of electrical operation circuits is 1500 V. When performing dielectric strength test of any of these devices and other devices, if the test voltage exceeds the rated value (1500V), disconnect the operation power supply terminal.
- When collectively operating more than one electrical operation device, isolate the devices connecting a relay to each device.
If the control terminals are directly connected in parallel, a circuit will be formed, and the devices may not normally function.

● Automatic reset (optional)

The automatic reset type has a built-in alarm switch in the circuit breaker and is connected in such a way that the OFF operation circuit is closed when the circuit breaker trips. Therefore, when the circuit breaker trips, it is automatically reset.

However, when the circuit breaker thermally trips, it may not be automatically reset.

If an automatic reset spring charge type (1) is required, the user must wire the device in accordance with the external connection diagram shown in Fig. 1 in "Cautions for use" in (2).

(2) Structure and operation

■ Spring charge type (1)

● Electrical operation

- When the ON operation switch is closed, the relay will operate, the motor will be driven, the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- When the OFF operation switch is closed, the relay will operate, the motor will be driven, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged.

Note: The charge may not be completed because the circuit protective function operates.

● Manual operation

- After turning the MANUAL/AUTO selection switch on the cover upper surface to MANUAL, press the ON button, and the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- After turning the MANUAL/AUTO selection switch on the cover upper surface to MANUAL, draw out the manual handle, and move it upward and downward about 10 to 14 times. Then, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged. Although the circuit breaker can be turned off even if the switch is not turned to MANUAL, the selection switch should be set to MANUAL because remote operation may be accepted.
- After turning the changeover switch to MANUAL, draw out the OFF lock plate, and lock the circuit breaker in the OFF state with padlocks (to be prepared by the user). Up to three padlocks can be fitted.
φ5 to φ8 padlocks can be fitted.

Note: After the completion of manual operation (on-site operation), return the selection switch to AUTO without fail. If it is not returned, electrical operation (remote operation) cannot be performed.

● Display of tripping state


When the circuit breaker trips in the ON state, the tripping state is displayed. When it trips in the OFF state, the OFF state is kept displayed.

Note: When it trips in the OFF state, signals from AL will not be output.


● Cautions for use

- ① To the ON or OFF operation switch (to be prepared by the user), current only of 24VDC and 15 to 30mA flows. Use a switch for minute load.
- ② Operate the operation switch for 0.1s or more to turn on and for 20ms or more to turn off. If it is operated for less than the time, it may not function.
The wire to the operation switch shall be less than 100m.
- ③ The power supply module has a built-in switching power supply. Therefore, it may interfere with communication devices near the module. In such a case, install a noise filter on the input side.
- ④ For the automatic reset type, purchase a circuit breaker with alarm switch (for minute load), and connect the signal circuit (among the terminal numbers S1, S2 and S4) as shown in Fig. 1. Please note that the wirings that are shown in dashed lines are wired already at the time of shipment from the factory.

If the circuit breaker in the OFF state is tripped by UVT-N or the like, it cannot be automatically reset. To reset it, it is necessary to turn it on under no current. After this operation, it will be automatically reset.

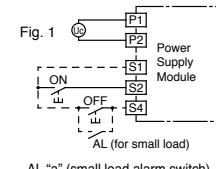

AL "a" (small load alarm switch)

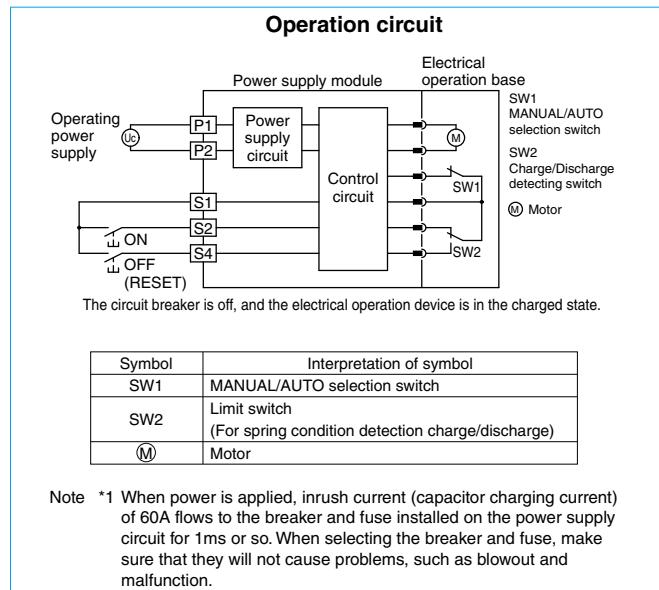

■ Motor-drive type (2)

● Electrical operation

Forward and reverse motor rotation is changed by ball screw to switch the breaker ON and OFF (reset).

● Manual operation

The manual operation handle can be used to switch the breaker ON and OFF directly.

6 Accessories [2] External Accessories

● Cautions for use


- ① In the case of a circuit breaker with UVT, if the circuit breaker trips owing to the operation of UVT, the procedure for re-closing the circuit breaker varies depending on the condition of the electrical operation device before the circuit breaker trips.
 - Tripping in ON state: Reset (OFF). → Turn on.
 - Tripping in OFF state: Turn on (idle tripping). → Reset (OFF). → Turn on.

(If the circuit breaker cannot be turned on (idle tripping), reset (OFF) it, and turn on.)


 - When an automatic reset system is configured on a non-reset type circuit breaker with UVT, if UVT is set to the no-voltage state, the operations to turn off (reset), trip, turn off (reset) and trip are repeated. Therefore, configure the circuit in such a way that power is disconnected from the electrical operation device before the circuit breaker is tripped by the non-reset type UVT.
- ② Current of about 0.2A will flow to the ON-OFF switch. Use an appropriate switch.

● Operation circuit For the automatic reset type, the connections indicated with the dashed lines are added.

● Operation circuit 1
[NF400-CW-NF800-USW]
[NV400-CW-NV800-HEW]

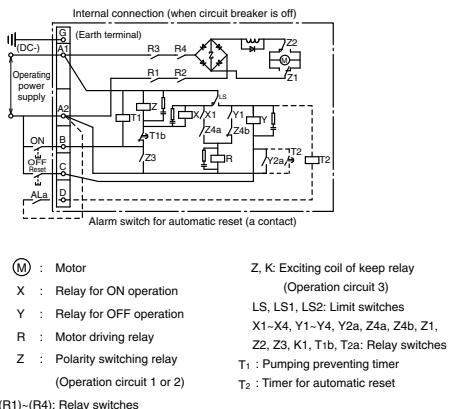

● Operation circuit 2
[NF1000-SEW-NF1600-SEW]

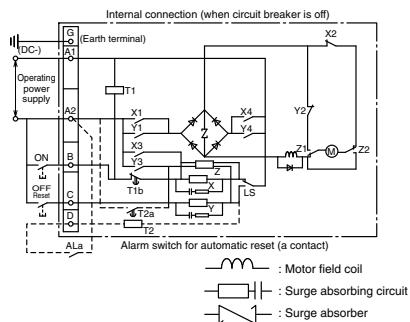

■ Spring charge type (2)

● Electrical operation

When the ON operation switch is closed, the closing coil will be excited to release the latch mechanism, and the closing spring force will instantaneously turn on the circuit breaker. When the OFF operation switch is closed, the relay will operate to start the motor, turn off (reset) the circuit breaker and, at the same time, charge the closing spring.

● Manual operation

- Press the ON button, and the latch mechanism will be released, and the closing spring force will instantaneously turn on the circuit breaker.
- Turning off (resetting)
Push the leaf spring, bring out the manual handle, and move the handle upward and downward more than ten times. Then, the circuit breaker will be turned off (reset), and, at the same time, the closing spring will be charged.


● Cautions for use

- ① In Before installing or removing the electrical operation device to or from the circuit breaker, trip the circuit breaker, and discharge the electrical operation device. After the device is installed to the circuit breaker, the device will not trip the circuit breaker in the OFF state even if the trip button is pressed. This is not a trouble.
The electrical operation device takes 3 seconds to turn off the circuit breaker. To open the circuit immediately by remote operation, use a circuit breaker with SHT or UVT.
- The device has a built-in pumping preventing relay.
- ② Current of about 9A and 0.2A will flow to the ON and OFF switches, respectively. Use appropriate switches.


③ Do not apply ON and OFF operation signals continuously. An interval of 0.5 sec or more is necessary between ON and OFF signals.

- ④ In the case of the automatic reset type device, it will perform the reset operation with an interval of 0.5 sec after NFB performs the tripping action.
- ⑤ The electrical operation device has a built-in pumping preventing circuit. Therefore, it can operate to turn off the circuit breaker while the ON operation switch is held in the closing state, but it cannot turn on continuously after turning off. To turn on, once turn off the ON operation switch, and turn on the switch. Do not apply the ON operation signal continuously.
- ⑥ The manual operating handle moves at a high speed during electrical operation. Pay attention to the handle. Keep the operation circuit power supply off during manual operation.
- ⑦ In the manual operation, surely turn the manual operating handle to the position indicated on the nameplate.

● Internal structure

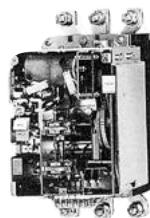


Internal structure of spring charge type

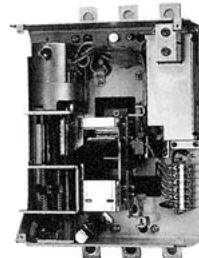

Internal structure of motor-drive type

● Operation circuit

For the automatic reset type, the connections indicated with the dashed lines are added.

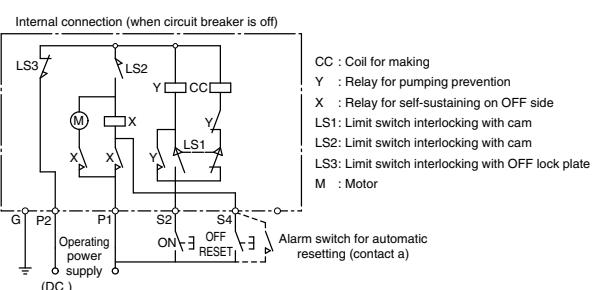


10. IEC 35mm Rail Mounting Adapters

Table 6-46

Type name	Number of poles of circuit breaker	Applicable model	
		MCCB	ELCB
(Note1) DIN-05SV	2, 3	NF32-SV NF63-CV/SV/HV	NV32-SV NV63-CV/SV/HV

Note : 1. Place an order in units of 10 pieces.

● External dimension

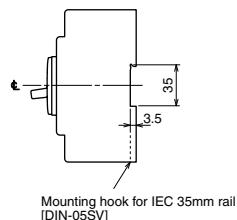

Mounting hook for IEC 35mm rail
[DIN-05SV]

MEMO

6

7

Characteristics and Dimensions

1 Molded Case Circuit Breakers 146

• NF32-SV, NF63-CV/SV/HV	146
• NF125-CV/SV/HV	148
• NF125-UV	150
• NF250-CV/SV/HV	152
• NF250-UV	154
• NF125-SGV/LGV/HGV/RGV, NF160-SGV/LGV/HGV, NF250-SGV/LGV/HGV/RGV	156
• NF125-SEV/HEV, NF250-SEV/HEV	158
• NF400-CW/SW	160
• NF400-SEW/HEW/REW	162
• NF400-UEW	164
• NF630-CW/SW	166
• NF630-SEW/HEW/REW	168
• NF800-CEW/SEW/HEW/REW.....	170
• NF800-SDW	172
• NF800-UEW	174
• NF1000-SEW, NF1250-SEW	176
• NF1250-SDW	178
• NF1600-SEW	180
• NF1600-SDW	182

2 Earth Leakage Circuit Breakers 184

• NV32-SV, NV-63CV/SV/HV	184
• NV125-CV/SV/HV	186
• NV250-CV/SV/HV	188
• NV125-SEV/HEV, NV250-SEV/HEV	190
• NV400-CW/SW	192
• NV400-SEW/HEW	194
• NV630-CW/SW	196
• NV630-SEW/HEW	198
• NV800-SEW/HEW	200

3 UL Certified Circuit Breakers 202

• NF50-SMU	202
• NF50-SVFU, NV50-SVFU	204
• NF100-CVFU, NV100-CVFU	206
• NF100-SRU/HRU, NV100-SRU/HRU	208
• NF125-SVU/HVU, NV125-SVU/HVU	210
• NF250-CVU/SVU/HVU, NV250-CVU/SVU/HVU	212
• NF400-SWU/HWU	214
• NF630-SWU/HWU	216
• NF30-FAU, NF50-FAU, NV30-FAU, NV50-FAU	218
• NF50-FHU, NF100-FHU, NV50-FHU, NV100-FHU	220

4 Measuring Display Unit Breakers 222

• NF250-SEV/HEV with MDU	222
• NF400-SEW/HEW with MDU	224
• NF800-SEW/HEW with MDU	226

5 DC High-Voltage Circuit Breakers 230

• NF63-HDV	230
• NF125-HDVA, NF250-HDVA	232
• NF400-HDW, NF800-HDW	234

6 Miniature Circuit Breakers, Residual Current Circuit Breakers, Residual Current Circuit Breakers with Overcurrent Protection and Isolating Switches 236

• BH-D6, BH-D10	236
• BH-DN	237
• BV-D.....	238
• BV-DN, BV-DN6.....	239
• KB-D.....	240

7 Circuit Protectors 241

• CP30-BA/HU	241
--------------------	-----

8 Electrical Operated Circuit Breakers 242

NF32-SV NF63-CV NF63-SV NF63-HV




NF63-SV


Model	NF32-SV		NF63-CV		NF63-SV		NF63-HV		NF32-SV [MB]		NF63-CV [MB]		NF63-SV [MB]	
Rated current In (A) Reference ambient temperature 40°C	3 4 (5) 6 6 10 (15) 16 20 25 (30) 32		3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50 (60) 63		3 4 (5) 6 10 (15) 16 20 25 (30) 32 40 50 (60) 63		10 (15) 16 20 25 (30) 32 40 50 (60) 63		4 5 7.1 8 10 12 16 25 16 25 16 25		4 5 7.1 8 10 12 16 25 32 40 45		4 5 7.1 8 10 12 16 25 32 40 45	
Number of poles	2 3		2 3		2 3 4		2 3 4		3		3		3	
Rated insulation voltage Ui (V)	600		600		600		690		500		500		500	
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (Icu/Ics)	AC	690V	—		—		2.5/2.5		—		—		
500V			2.5/2.5	2.5/2.5		7.5/7.5		7.5/7.5		—		—		
440V			2.5/2.5	2.5/2.5		7.5/7.5		10/8		2.5/2.5		2.5/2.5		
415V			2.5/2.5	2.5/2.5		7.5/7.5		10/8		2.5/2.5		2.5/2.5		
400V			5/5	5/5		7.5/7.5		10/8		5/5		5/5		
380V			5/5	5/5		7.5/7.5		10/8		5/5		5/5		
230V			7.5/7.5	7.5/7.5		15/15		25/19		7.5/7.5		7.5/7.5		
200V			7.5/7.5	7.5/7.5		15/15		25/19		—		—		
DC	250V (*1)		2.5/2.5	2.5/2.5		7.5/7.5		7.5/7.5		—		—		
Standard attached parts (front connection)			Terminal screw: 50A or less M5×14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) 60A or more M8×14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs) Insulation barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) (*2)											

Notes *1 Use two poles for three- and four-pole products. Not available for use with connection as shown at the bottom of page 18.
*2 Supplied with NF63-SV and NF63-HV.


Operating Characteristics

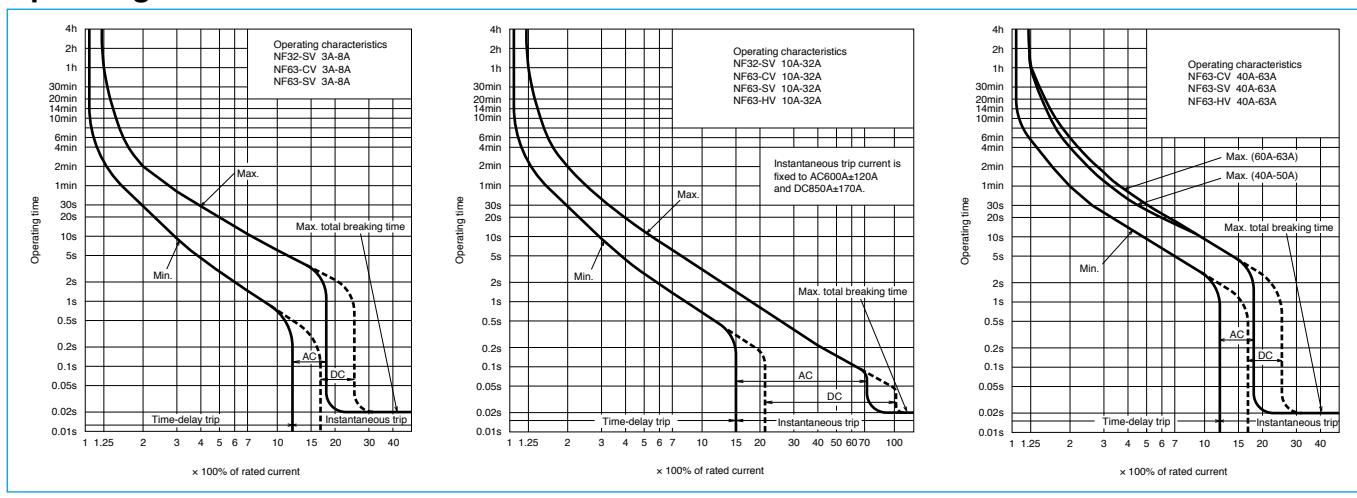

Internal Accessories

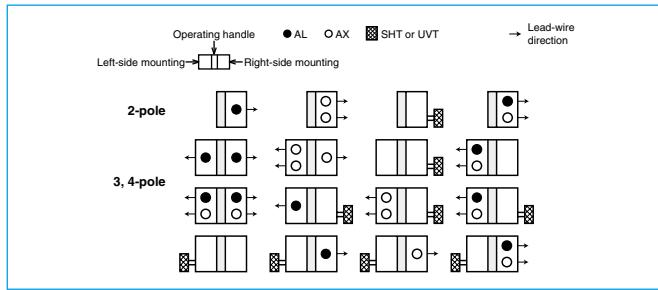

Temperature Compensation Curve

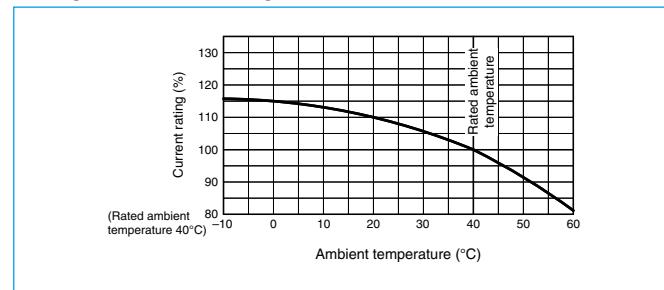


External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page				
Operating handle	F 2P F-05SV2	123	Terminal cover	2P TCS-05SV2	128				
	3, 4P F-05SV			3P TCS-05SV3					
	V 2P V-05SV2	125		4P TCS-05SV4					
	3, 4P V-05SV			2P TCL-05SV2					
Lock cover	LC LC-05SV	134		TCL-05SV2L	128				
Handle lock device	HL-05SV			3P TCL-05SV3					
	HLN-05SV			4P TCL-05SV3L					
MI	2, 3P MI-05SV3	136		4P TCL-05SV4					
	4P MI-05SV4			2P TTC-05SV2					
Note *1 HLF types are used for OFF lock and HLN types for ON lock.									
IEC 35mm rail mounting adapters DIN-05SV									
					143				

Outline Drawing


Front connection

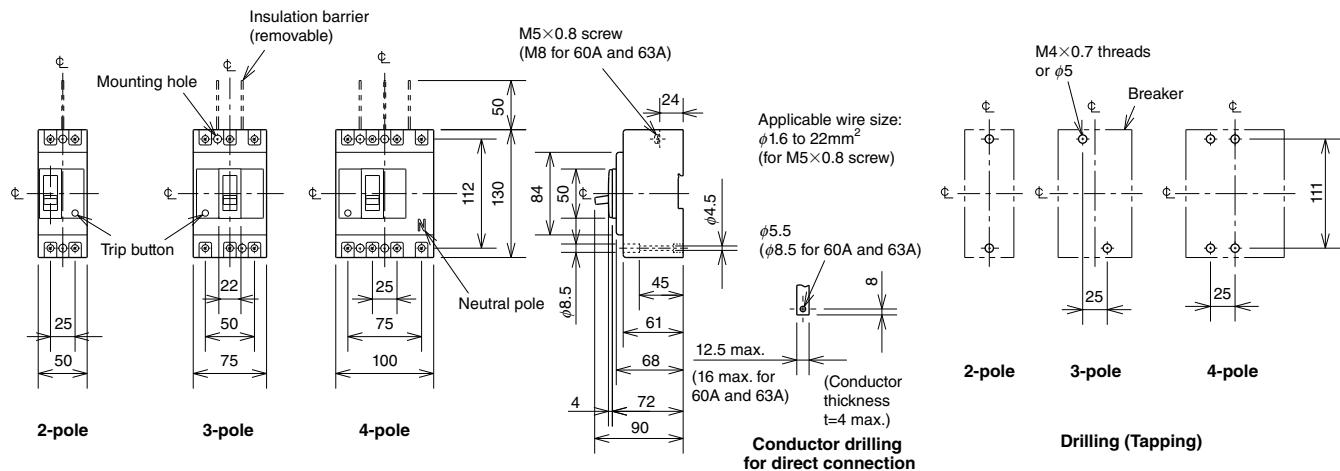

Rear connection

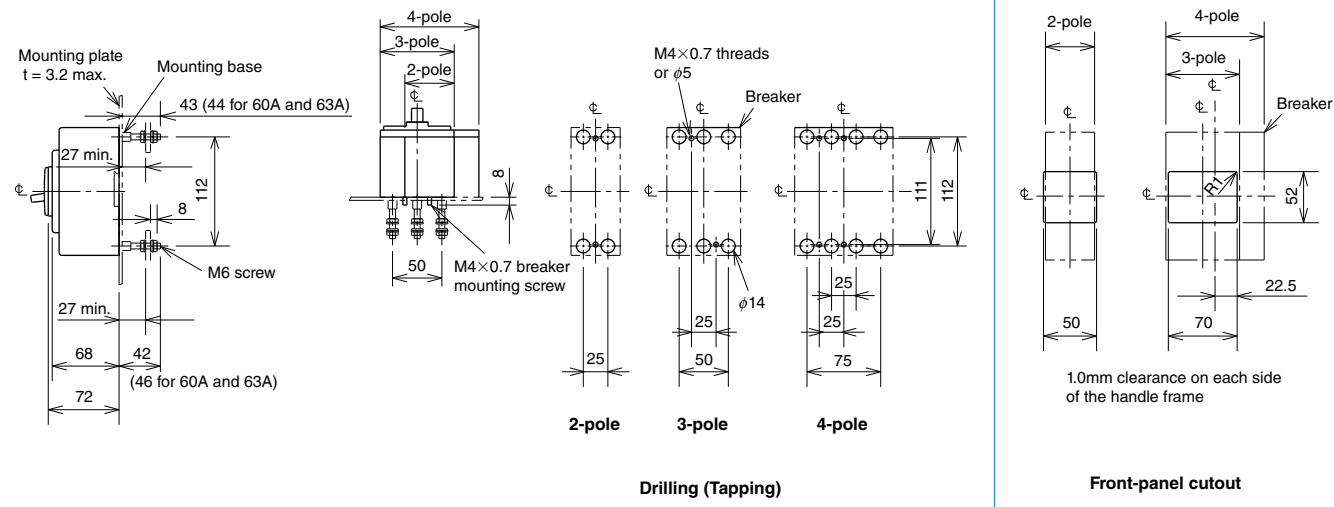

Plug-in

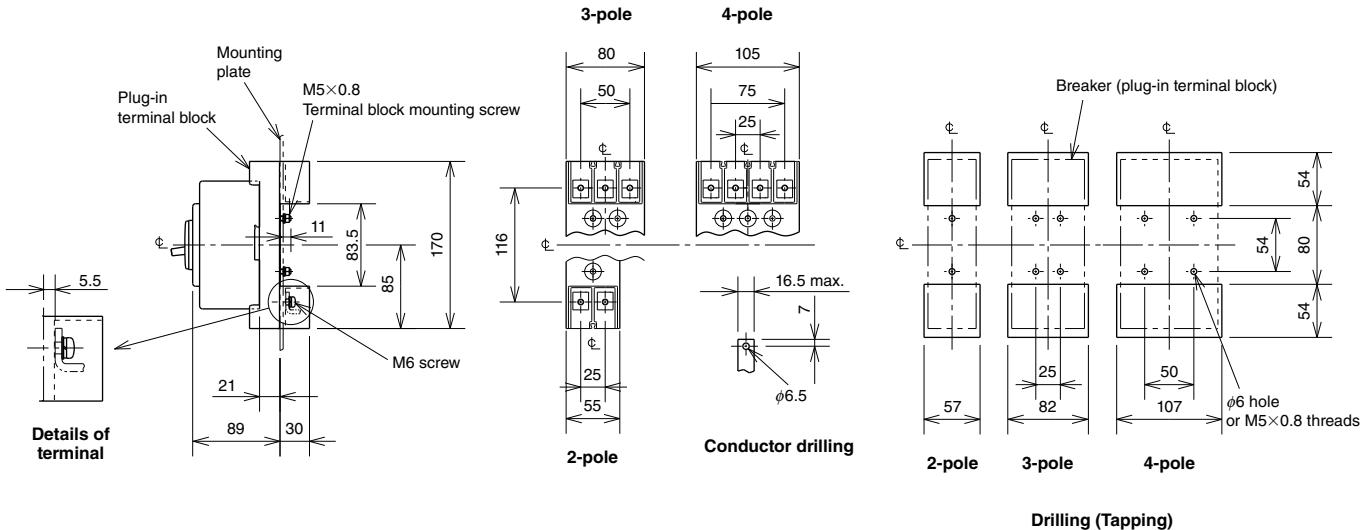

Remark: 1. Only 2-pole and 3-pole models are available for NF32-SV and NF63-CV.
2. We only have motor breakers for 3-pole models.

NF125-CV NF125-SV NF125-HV



NF125-SV


Model	NF125-CV				NF125-SV				NF125-HV				NF125-SV[MB]				
Rated current In (A) Reference ambient temperature 40°C	50 (60) 63 (75) 80 100 125				(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 125				(15) 16 20 (30) 32 40 50 (60) 63 (75) 80 100 125				(12.5) (16) (25) 32 (40) 45 63 71 90 100				
Number of poles	2		3		2		3		4		2		3		4		3
Rated insulation voltage Ui (V)	600				690				690				500				
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	690V	—	8/8	10/8	—	—	—	—	—	—	—	—	—	—	
			500V	7.5/4	18/18	30/23	—	—	—	—	—	—	—	—	—	—	
			440V	10/5	25/25	50/38	25/25	—	—	—	—	—	—	—	—	—	
			415V	10/5	30/30	50/38	30/30	—	—	—	—	—	—	—	—	—	
			400V	10/5	30/30	50/38	30/30	—	—	—	—	—	—	—	—	—	
			380V	10/5	30/30	50/38	30/30	—	—	—	—	—	—	—	—	—	
			230V	30/15	50/50	100/75	50/50	—	—	—	—	—	—	—	—	—	
			200V	30/15	50/50	100/75	50/50	—	—	—	—	—	—	—	—	—	
			DC 250V (*1)	7.5/4	40/40	—	—	—	—	—	—	—	—	—	—	—	
			Standard attached parts (front connection)	Terminal screw: M8x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) (*2) Insulation barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs)													

Notes *1 Use two poles for 3- and 4-pole products.


If wired as shown at the bottom on page 18, 3- and 4-poles can be used for up to 400 and 500VDC, respectively.

*2 Supplied with NF125-SV and NF125-HV.


Operating Characteristics

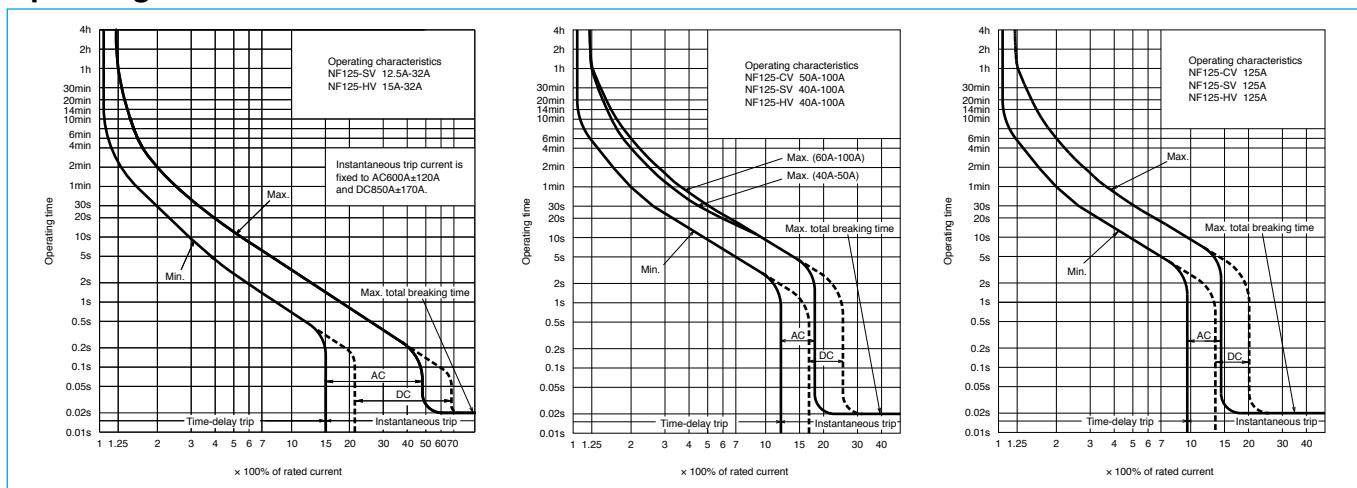

Internal Accessories

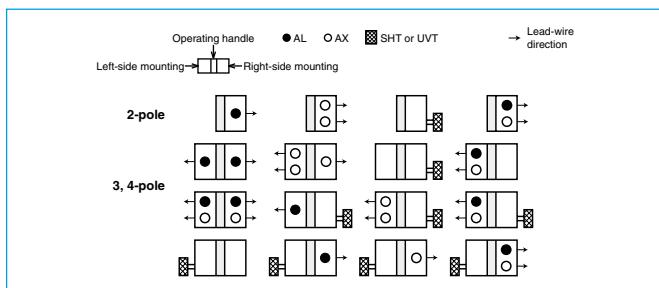

Temperature Compensation Curve

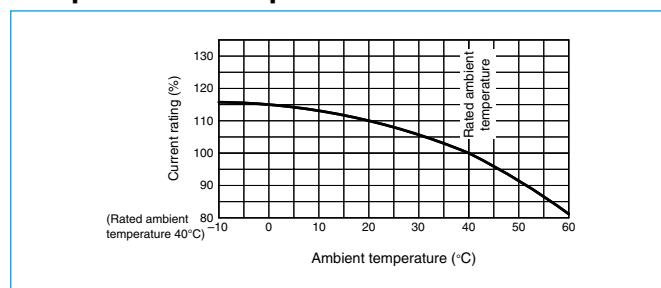


External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page			
Operating handle	F 2P F-1SV2	123	Mechanical interlock	MI 2, 3P MI-05SV3	136			
	3, 4P F-1SV			4P MI-05SV4				
	V 2P V-1SV2			2P TCS-1SV2				
Lock cover	V 3, 4P V-1SV			3P TCS-1SV3	128			
	LC LC-05SV			4P TCS-1SV4				
	HL-05SV HLN-05SV	134	Large TC-L	2P TCL-1SV2				
Handle lock device	HL-S HLS-05SV			3P TCL-1SV3				
				4P TCL-1SV4				
				2P TTC-1SV2				
Notes	*1 HLF types are used for OFF lock and HLN types for ON lock.							
	*2 Specify the working voltage. Refer to the reference page for type name.							
Terminal cover	Skeleton TTC	128	Rear BTC	3P TTC-1SV3	140			
	4P TTC-1SV4			4P TTC-1SV4				
	2P BTC-1SV2			2P BTC-1SV2				
	3P BTC-1SV3			3P BTC-1SV3				
Plug-in PTC	4P BTC-1SV4			4P BTC-1SV4				
	2P PTC-1SV2			2P PTC-1SV2				
	3P PTC-1SV3			3P PTC-1SV3				
	4P PTC-1SV4			4P PTC-1SV4				
Electrical operation device					(*2)			
					140			

Outline Drawing


Front connection

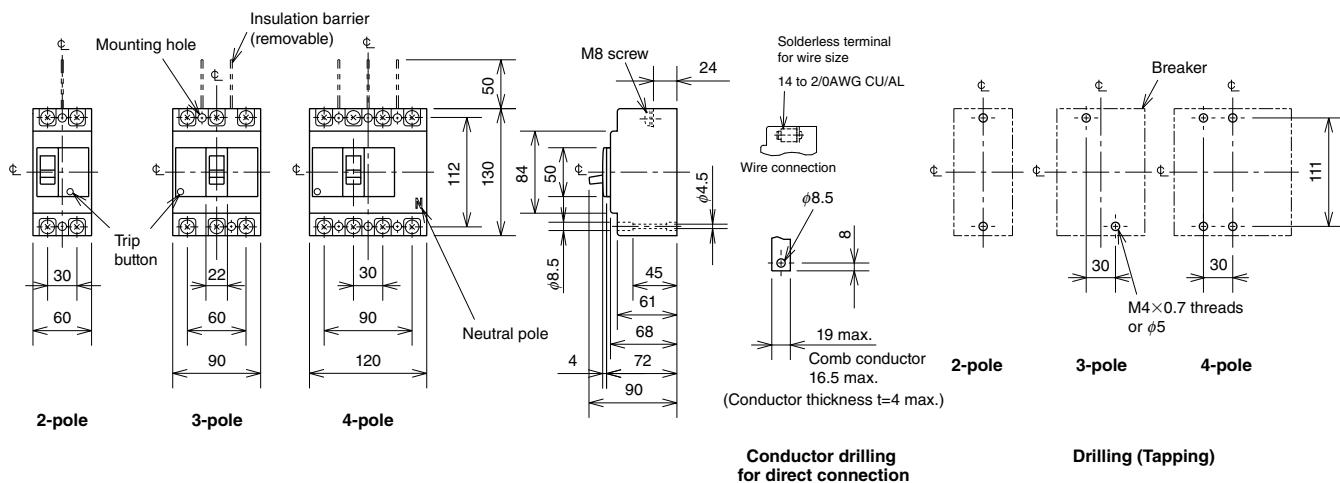

Rear connection

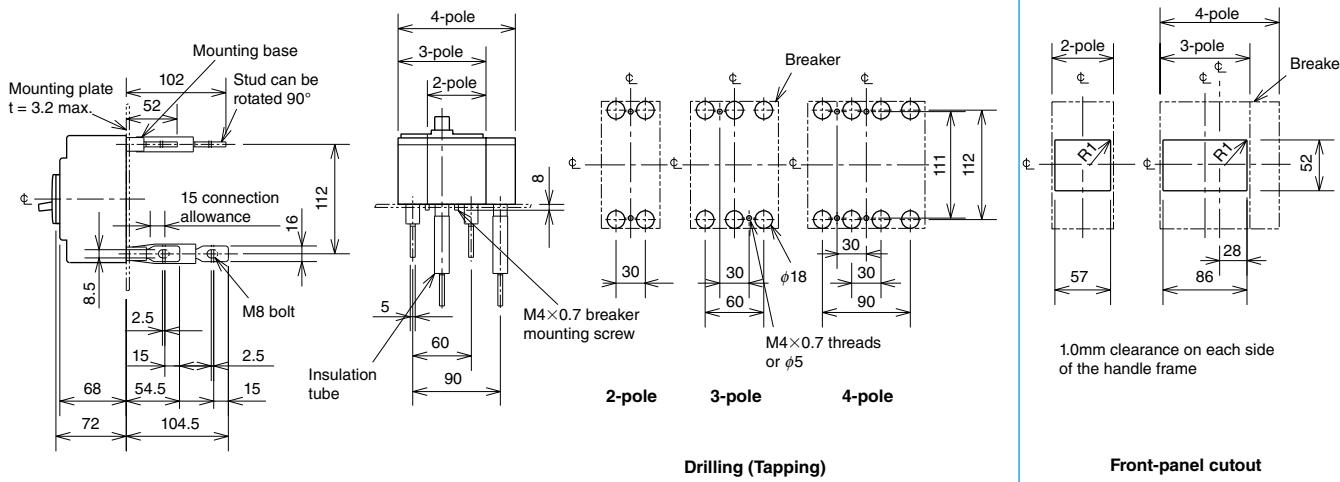

Plug-in

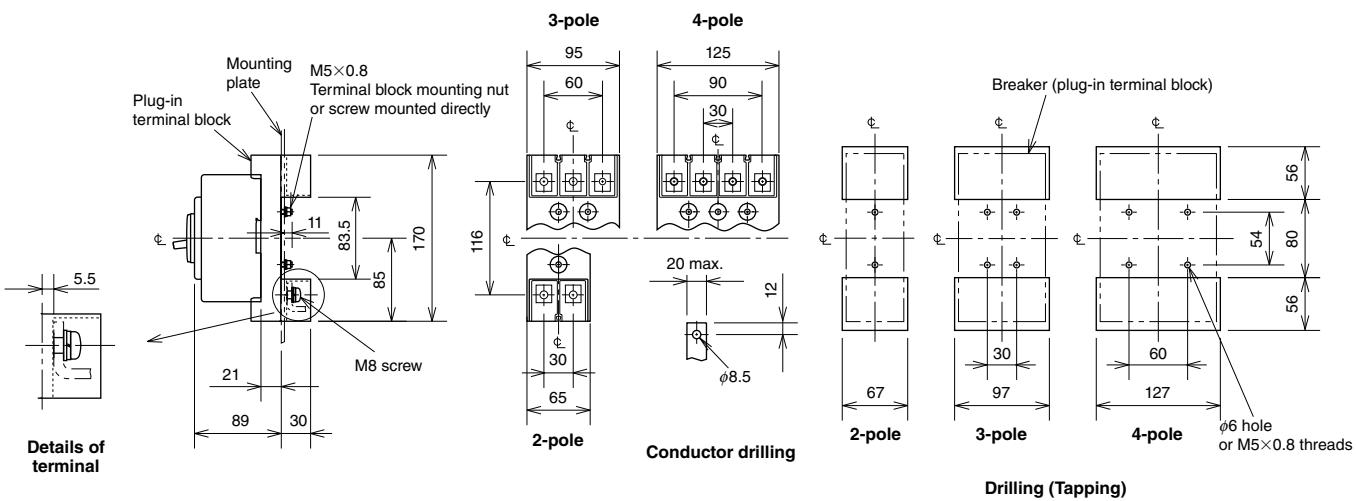

Remarks: 1. The 2-pole models of NF125-HV are 3-pole models with the central pole removed.
2. Only 2-and 3-pole models are available for NF125-CV.
3. We only have motor breakers for 3-pole models.

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers




NF125-UV




NF125-UV

Model			NF125-UV			
Rated current In (A)			15 20 30 40 50 60 75 100 125			
Reference ambient temperature 40°C						
Number of poles		2 3 4				
Rated insulation voltage Ui (V)		IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	690V	10/10	
Rated short-circuit breaking capacity (kA)			500V	200/200	200/200	
			440V	200/200	200/200	
			415V	200/200	200/200	
			400V	200/200	200/200	
			380V	200/200	200/200	
			230V	200/200	200/200	
			200V	200/200	200/200	
			DC	250V	-	
Standard attached parts (front connection)			Terminal screw: M8x14 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) M4x0.7x73 (2 and 3P: 2pcs)			


Operating Characteristics

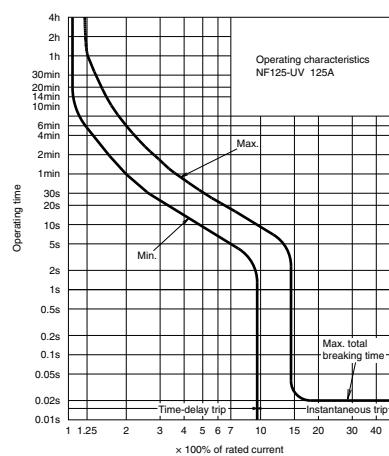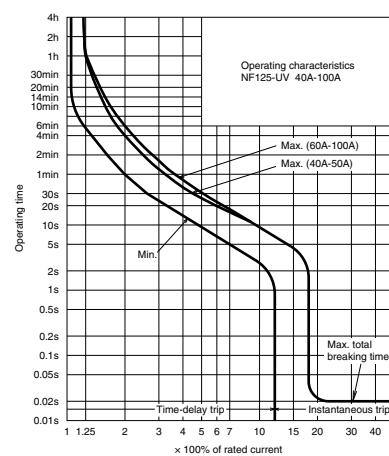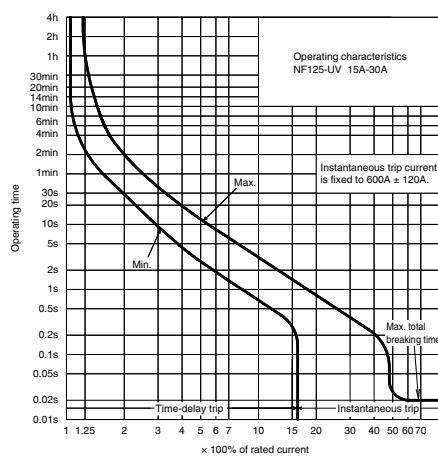

Internal Accessories

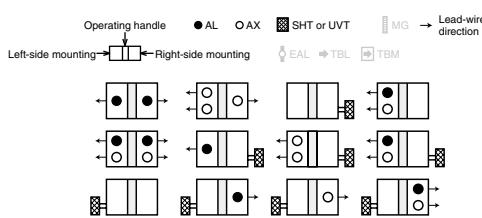

Temperature Compensation Curve


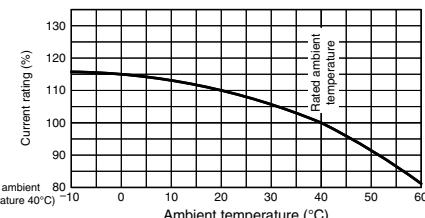


External Accessories



Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-1UV	123	Mechanical interlock	MI	2, 3P MI-05SV3 4P MI-05SV4	136	
	V	V-1UV	125	134	Small	3P TCS-1SV3 4P TCS-1SV4		
Lock cover	LC	LC-05SV			Large	3P TCL-1SV3 4P TCL-1SV4		
Handle lock device	HL (*1)	HLF-05SV			Skeleton	3P TTC-1SV3 4P TTC-1SV4		
		HLN-05SV			Rear	3P BTC-1SV3 4P BTC-1SV4		
	HL-S	HLS-05SV			Plug-in	3P PTC-1SV3 4P PTC-1SV4		
Notes *1 HLF types are used for OFF lock and HLN types for ON lock.					Electrical operation device	(*2)	140	
*2 Specify the working voltage. Refer to the reference page for type name.								

Outline Drawing

Front connection

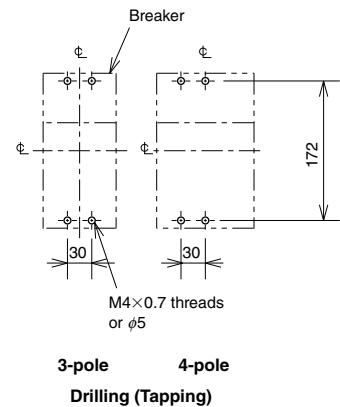
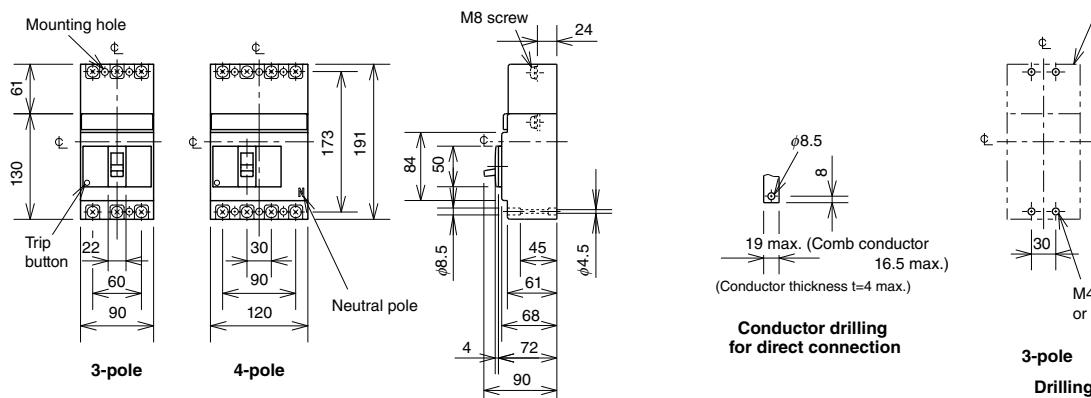


Rear connection

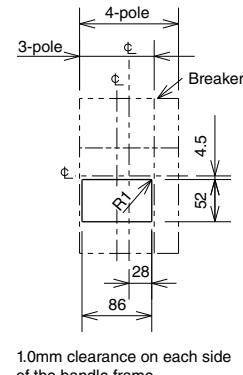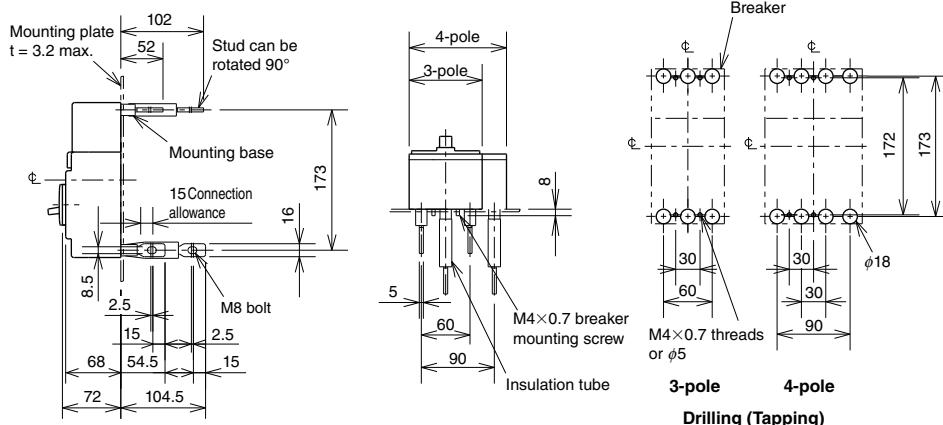

Front-panel cutout

Plug-in

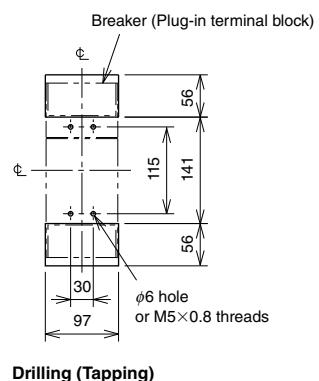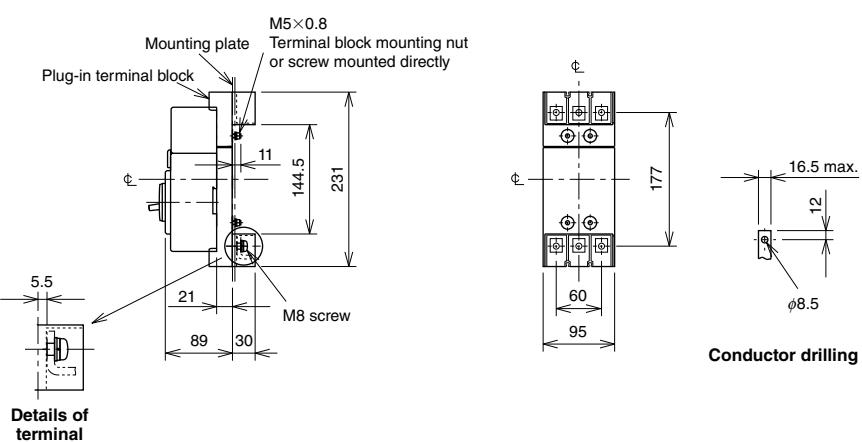

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

7 Characteristics and Dimensions

Molded Case Circuit Breakers

NF250-CV NF250-SV NF250-HV





NF250-SV


Model			NF250-CV		NF250-SV			NF250-HV			NF250-SV[MB]				
Rated current In (A) Reference ambient temperature 40°C			(100)		(100)			125 150 160 175 175 200 225 250			125 150 160 175 200 225 250				
Number of poles			2	3	2	3	4	2	3	4	3				
Rated insulation voltage Ui (V)			600		690			690			500				
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	690V	—	8/8		10/8		—		—				
			500V	10/8	30/30		50/38		—		—				
			440V	15/12	36/36		65/65		36/36		36/36				
			415V	25/19	36/36		70/70		36/36		36/36				
			400V	25/19	36/36		75/75		36/36		36/36				
			380V	25/19	36/36		75/75		36/36		36/36				
			230V	36/27	85/85		100/100		100/100		85/85				
			200V	36/27	85/85		100/100		—		—				
DC (*1)			250V	15/12	20/20 (300V)		40/40 (300V)		—		—				
Standard attached parts (front connection)			Terminal screw: M8 (Bolt(Hex-socket))×16 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)												

Note *1 Use two poles for 3- and 4-pole products. In this case, do not use the neutral pole of the 4-pole products.
If wired as shown at the bottom of page 18, 3-pole NF250-CV can be used for up to 400VDC, 3-pole NF250-SV and NF250-HV up to 500VDC and 4-pole products up to 600VDC.


Operating Characteristics

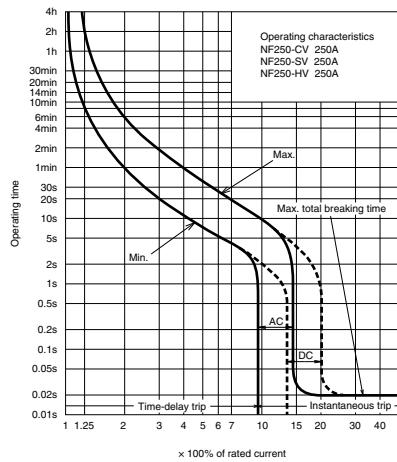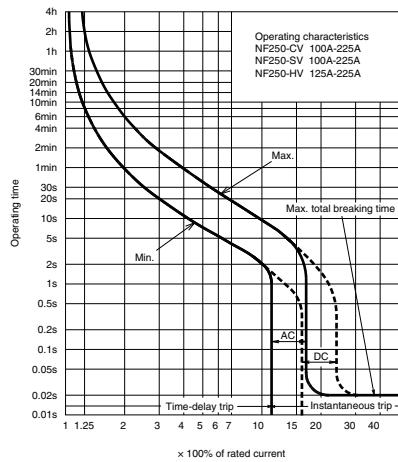

Internal Accessories

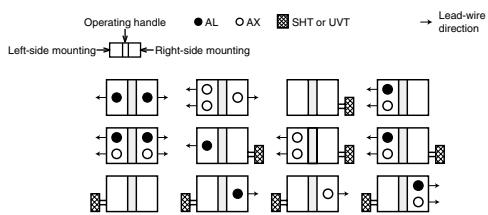

Temperature Compensation Curve

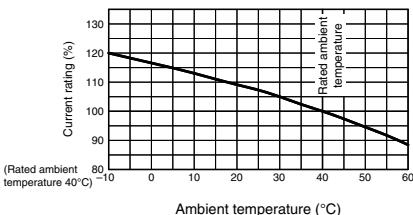


External Accessories


Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-2SV	123	Mechanical interlock	MI	2, 3P MI-05SV3 4P MI-2SV4	136
	V	V-2SV	125			2, 3P TCS-2SV3 4P TCS-2SV4	
Lock cover	LC	LC-05SV			TC-S	2, 3P TCL-2SV3 4P TCL-2SV4	
Handle lock device	HL(*1)	HLF-05SV HNL-05SV			TC-L	2, 3P TCL-2SV3L 4P TCL-2SV4	
	HL-S	HLS-2SV	134		Skeleton	2, 3P TTC-2SV3 4P TTC-2SV4	
					Rear	2, 3P BTC-2SV3 4P BTC-2SV4	
					Plug-in	2, 3P PTC-2SV3 4P PTC-2SV4	
Notes *1 HLF types are used for OFF lock and HNL types for ON lock. *2 Specify the working voltage. Refer to the reference page for type name.				Electrical operation device		(*2)	140

Outline Drawing


Front connection

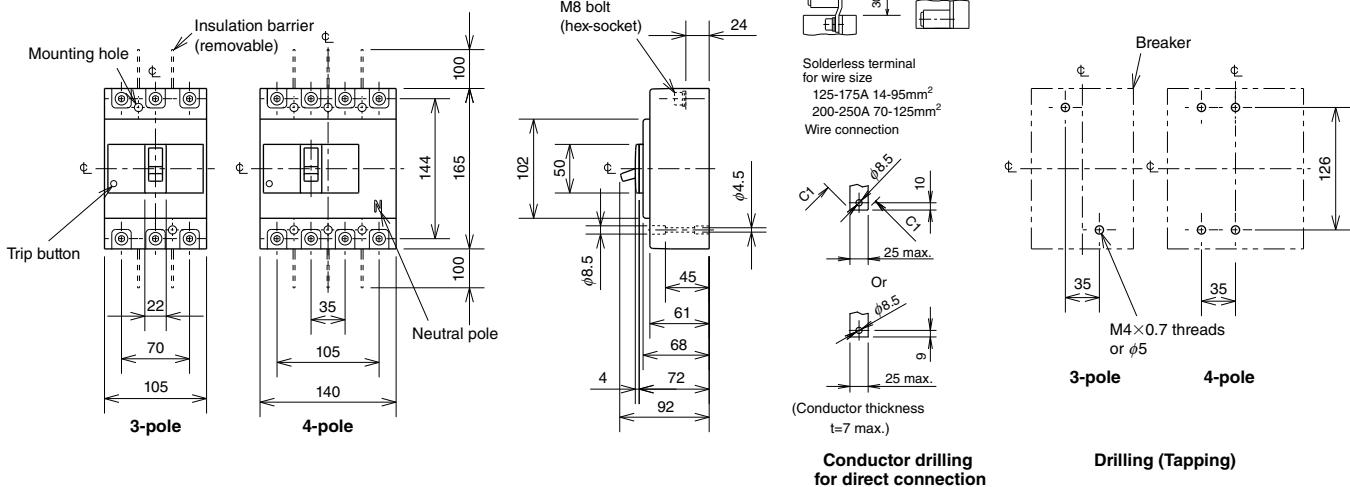

Rear connection

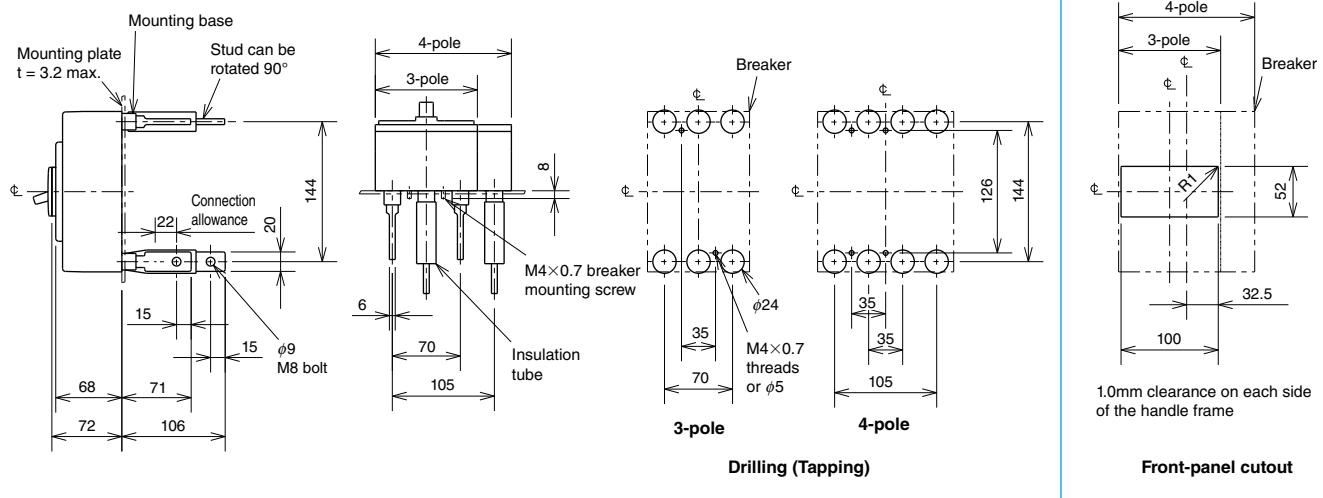

Plug-in

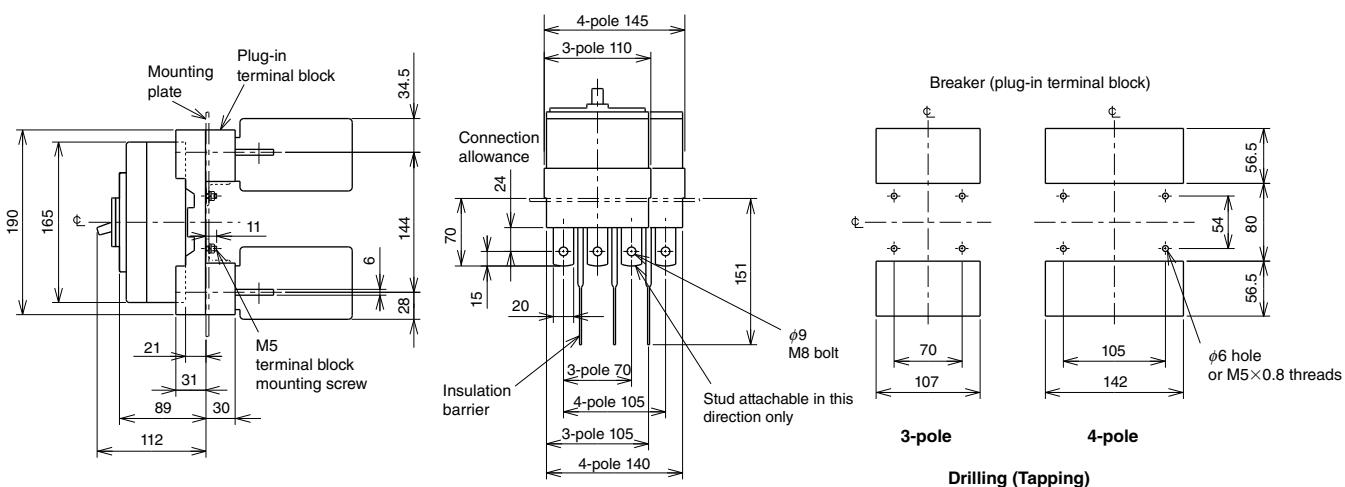

Remarks: 1. 2-pole models are 3-pole models with the central pole removed.
2. Only 2-pole and 3-pole models are available for NF250-CV.
3. We only have motor breakers for 3-pole models.

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers



NF250-UV




NF250-UV

Model		NF250-UV		
Rated current In (A)		125 150 175		
Reference ambient temperature 40°C		200 225 250		
Number of poles		2	3	4
Rated insulation voltage Ui (V)		690		
Rated short-circuit breaking capacity (kA) IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	690V	15/15	
		500V	200/200	
		440V	200/200	
		415V	200/200	
		400V	200/200	
		380V	200/200	
		230V	200/200	
		200V	200/200	
		DC 250V	-	
			Terminal screw: M8 (Bolt(Hex-socket))x16 (2P: 4pcs, 3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (2 and 3P: 2pcs, 4P: 4pcs) Mounting screw: M4x0.7x73 (2 and 3P: 2pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)	
Standard attached parts (front connection)				


Operating Characteristics

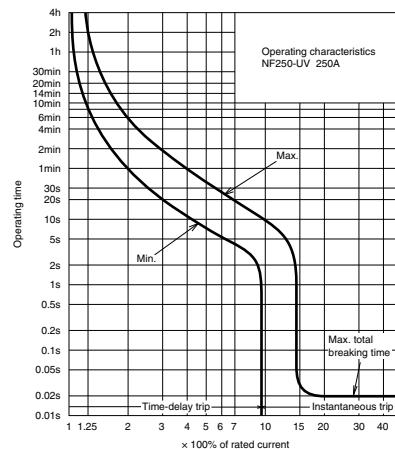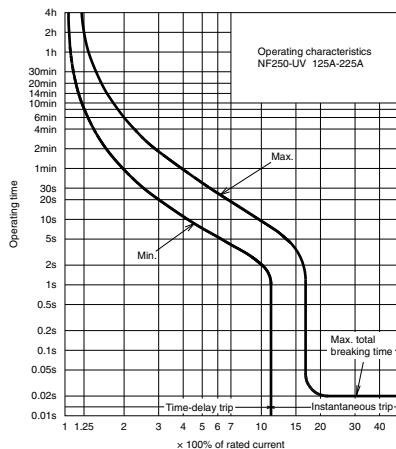

Internal Accessories

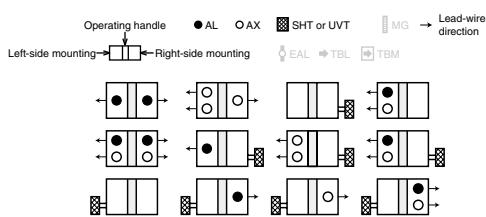

Temperature Compensation Curve

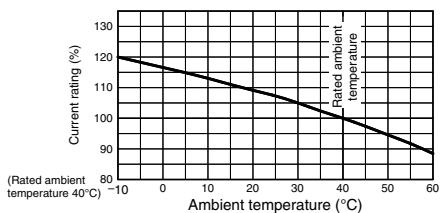


External Accessories




Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-2UV	123	Mechanical interlock	MI	2, 3P MI-05SV3	136
	V	V-2UV	125			4P MI-2SV4	
Lock cover	LC	LC-05SV	134	Small	TC-S	2, 3P TCS-2SV3	128
Handle lock device	HL(*1)	HLF-05SV				4P TCS-2SV4	
		HLN-05SV		Large	TC-L	2, 3P TCL-2SV3	
	HL-S	HLS-2SV				TCL-2SV3L	
Notes *1 HLF types are used for OFF lock and HLN types for ON lock. *2 Specify the working voltage. Refer to the reference page for type name.				Skeleton	TTC	4P TCL-2SV4	
						2, 3P TTC-2SV3	
				Rear	BTC	4P TTC-2SV4	
						2, 3P BTC-2SV3	
				Plug-in	PTC	4P BTC-2SV4	
						2, 3P PTC-2SV3	
						4P PTC-2SV4	
				Electrical operation device		(*2)	140

Outline Drawing

Front connection



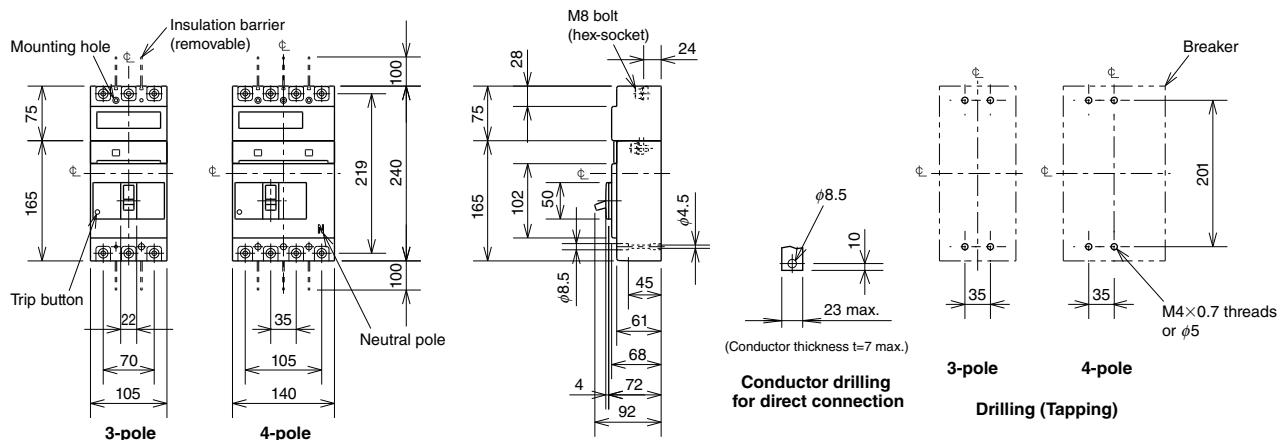


Rear connection

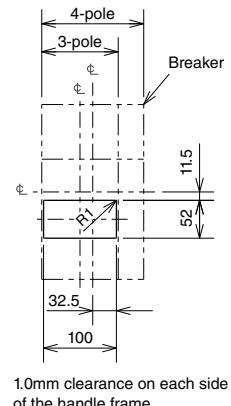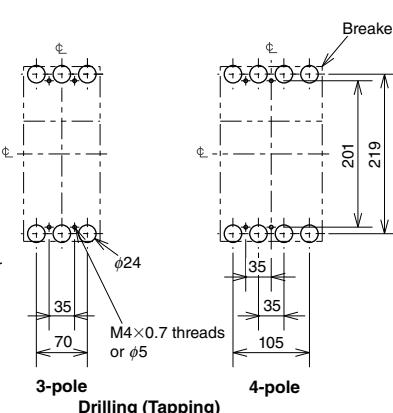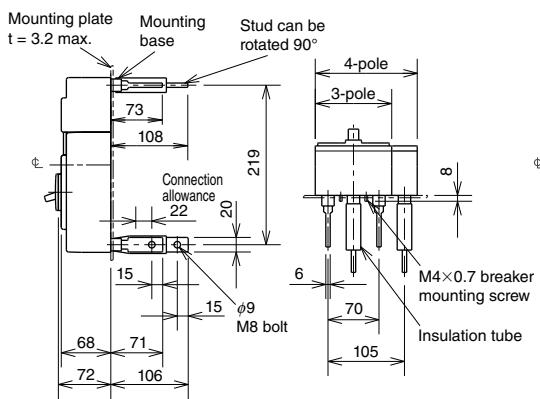

Front-panel cutout

Plug-in

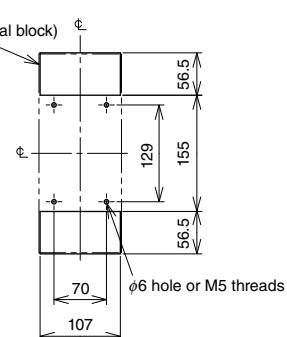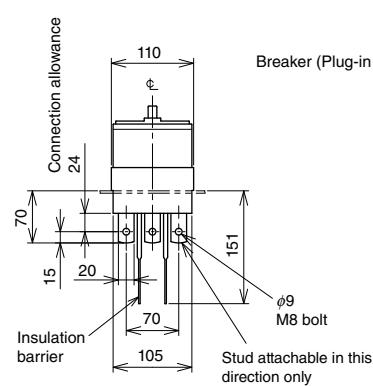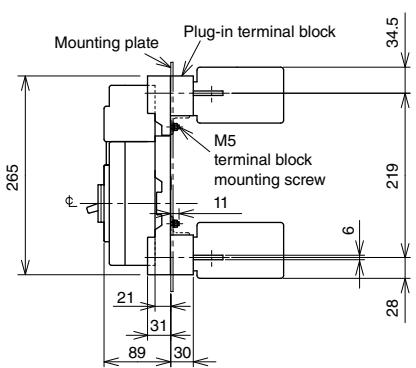

Drilling (Tapping)

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

7 Characteristics and Dimensions

Molded Case Circuit Breakers

NF125-SGV **NF160-SGV**
NF250-SGV **NF125-LGV**
NF160-LGV **NF250-LGV**
NF125-HGV **NF160-HGV**
NF250-HGV **NF125-RGV**
NF250-RGV



NF250-SGV

Model	NF125-SGV	NF160-SGV	NF250-SGV	NF125-LGV	NF160-LGV	NF250-LGV
Rated current In (A)	16-20 20-25 25-32	125-160	125-160	16-20 20-25 25-32	125-160	125-160
Reference ambient temperature 40°C	32-40 35-50 45-63		140-200	32-40 35-50 45-63	140-200	140-200
	56-80 70-100 90-125	175-250	56-80 70-100 90-125		175-250	
Number of poles	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4	2 3 4
Rated insulation voltage Ui (V)	690	690	690	690	690	690
	690V 8/8	8/8	8/8	8/8	8/8	8/8
IEC 60947-2	500V 30/30	30/30	30/30	36/36	36/36	36/36
EN 60947-2 (Icu/cs)	440V 36/36	36/36	36/36	50/50	50/50	50/50
	415V 36/36	36/36	36/36	50/50	50/50	50/50
	400V 36/36	36/36	36/36	50/50	50/50	50/50
	380V 36/36	36/36	36/36	50/50	50/50	50/50
	230V 85/85	85/85	85/85	90/90	90/90	90/90
	200V 85/85	85/85	85/85	90/90	90/90	90/90
Rated short-circuit breaking capacity (kA)	DC (*1) 300V	20/20	20/20	20/20	20/20	20/20





Standard attached parts (front connection) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs)
Insulation barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)

Model	NF125-HGV	NF160-HGV	NF250-HGV	NF125-RGV	NF250-RGV
Rated current In (A)	16-20 20-25 25-32	125-160	125-160	16-20 20-25 25-32	125-160
Reference ambient temperature 40°C	32-40 35-50 45-63		140-200	32-40 40-50 50-63	160-200
	56-80 70-100 90-125	175-250	56-80 80-100 100-125		200-250
Number of poles	2 3 4	2 3 4	2 3 4	2 3	2 3
Rated insulation voltage Ui (V)	690	690	690	690	690
	690V 10/8	10/8	10/8	—	—
IEC 60947-2	500V 50/38	50/38	50/38	—	—
EN 60947-2 (Icu/cs)	440V 65/65	65/65	65/65	125/125	125/125
	415V 70/70	70/70	70/70	150/150	150/150
	400V 75/75	75/75	75/75	150/150	150/150
	380V 75/75	75/75	75/75	150/150	150/150
	230V 100/100	100/100	100/100	150/150	150/150
	200V 100/100	100/100	100/100	150/150	150/150
Rated short-circuit breaking capacity (kA)	DC (*1) 300V	40/40	40/40	—	—


Standard attached parts (front connection) Mounting screw: M4×0.7×55 (2 and 3P: 2pcs, 4P: 4pcs)
Insulation barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)

Note *1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 500VDC, and 4-pole models for up to 600VDC.


Operating Characteristics

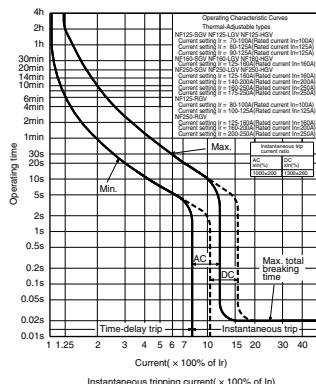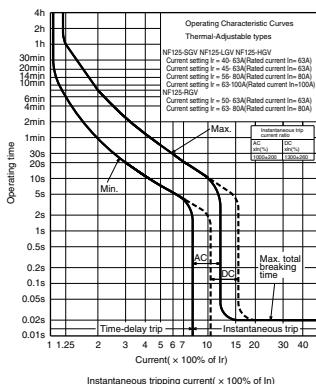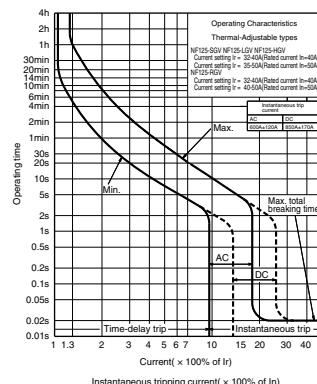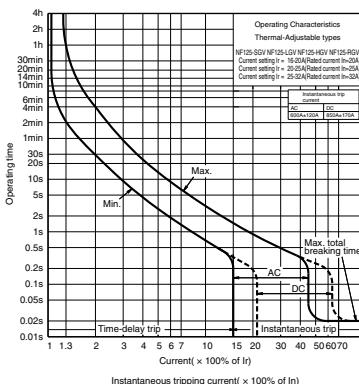

Internal Accessories

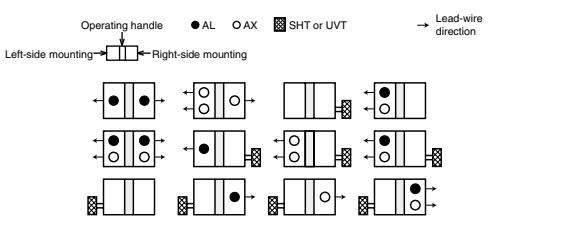

Temperature Compensation Curve

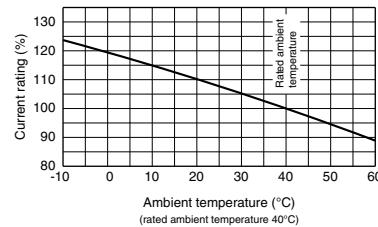

External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-2SV	123	Mechanical interlock	MI-05SV3	136
	V V-2SV	125		MI-2SV4	
Lock cover	LC LC-05SV	134	Small	TCS-2SV3	
Handle lock device	HL(*1) HLF-05SV			4P TCS-2SV4	
	HLN-05SV		Large	TCL-2SV3	
	HLS-2SV			2, 3P TCL-2SV3L	
			Skeleton	2, 3P TTC-2SV3	
				4P TTC-2SV4	
			Rear	2, 3P BTC-2SV3	
				4P BTC-2SV4	
			Plug-in	2, 3P PTC-2SV3	
				4P PTC-2SV4	
			Electrical operation device	(*)2	140

Notes *1 HLF types are used for OFF lock and HLN types for ON lock.


*2 Specify the working voltage. Refer to the reference page for type name.

Outline Drawing


Front connection

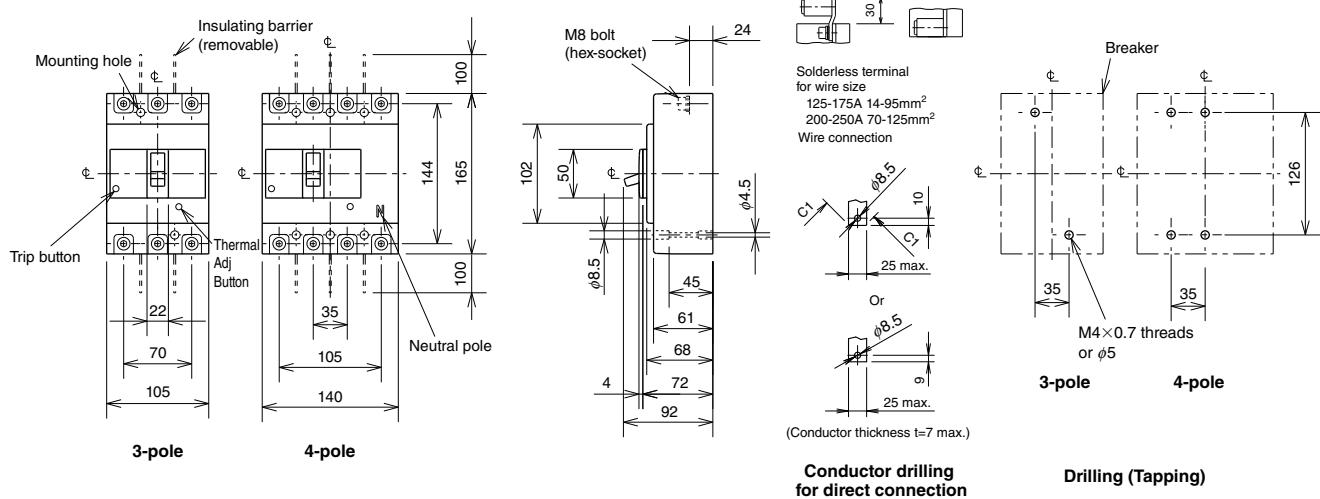

Rear connection

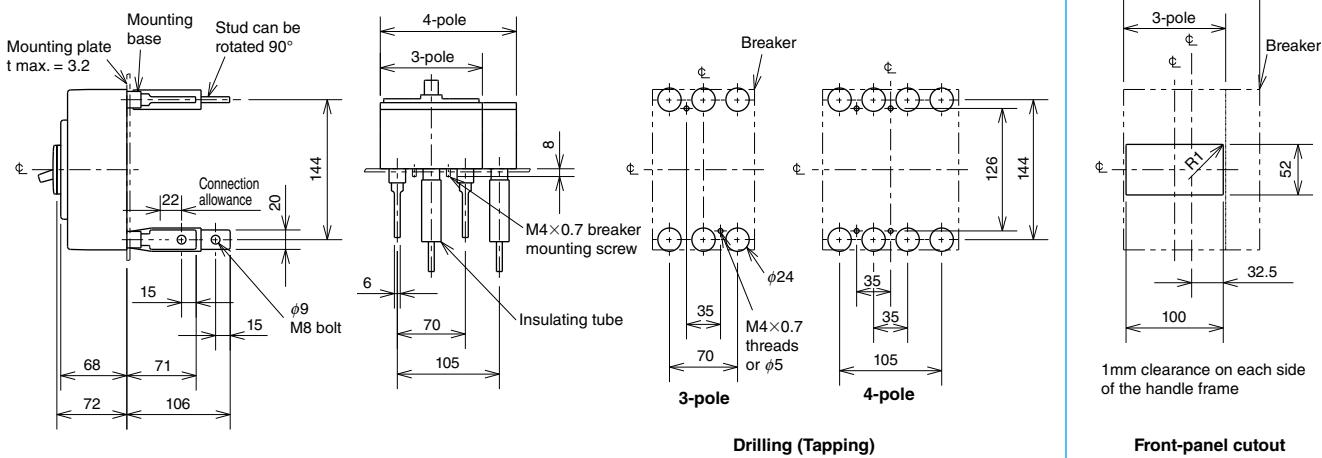

Plug-in

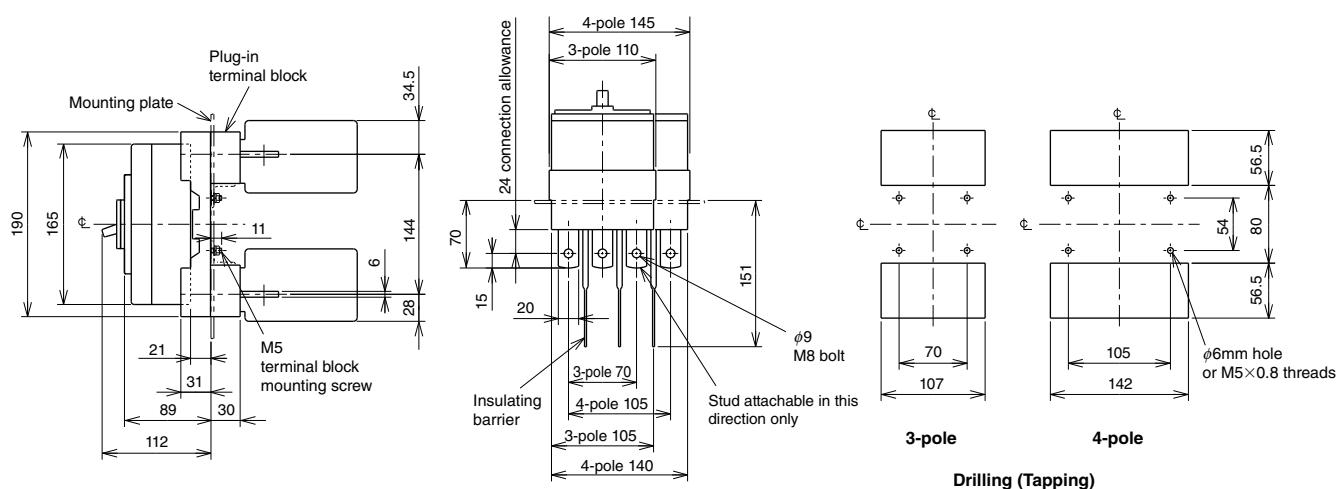

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

7 Characteristics and Dimensions

1 Molded Case Circuit Breakers



NF125-SEV NF125-HEV NF250-SEV NF250-HEV




NF125-SEV

Model	NF125-SEV			NF125-HEV			NF250-SEV			NF250-HEV		
Rated current In (A)	32 63 125			32 63 125			160 250			160 250		
Reference ambient temperature 40°C												
Current setting Ir (A)	Adjustable 16-32 32-63 63-125 (1.6A step) (3.15A step) (6.25A step)			Adjustable 16-32 32-63 63-125 (1.6A step) (3.15A step) (6.25A step)			Adjustable 80-160 125-250 (8A step) (12.5A step)			Adjustable 80-160 125-250 (8A step) (12.5A step)		
Number of poles	3 4			3 4			3 4			3 4		
Rated insulation voltage Ui (V)	690			690			690			690		
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	690V	8/8			10/8			8/8		
500V			30/30	50/38			30/30			50/38		
440V			36/36	65/65			36/36			65/65		
415V			36/36	70/70			36/36			70/70		
400V			36/36	75/75			36/36			75/75		
380V			36/36	75/75			36/36			75/75		
230V			85/85	100/100			85/85			100/100		
200V			85/85	100/100			85/85			100/100		
DC			250V	-			-			-		
Standard attached parts (front connection)	Terminal screw: M8(Bolt(Hex-socket))x16 (3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (3P: 2pcs, 4P: 4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)											


Operating Characteristics

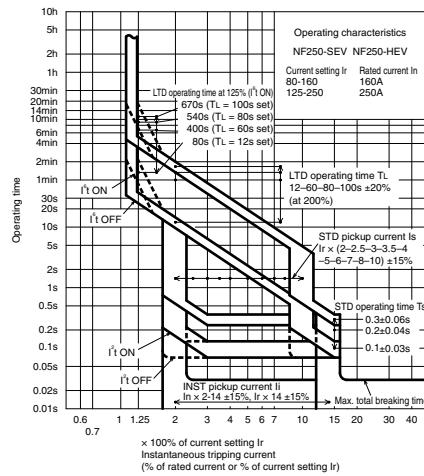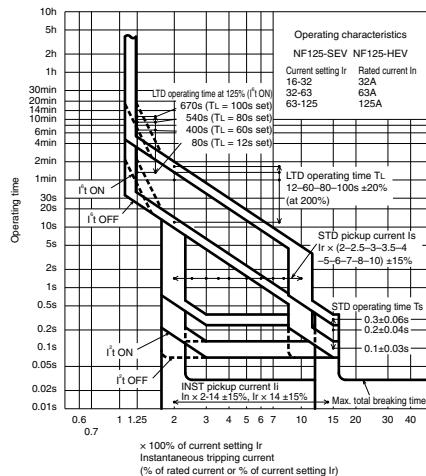

Internal Accessories

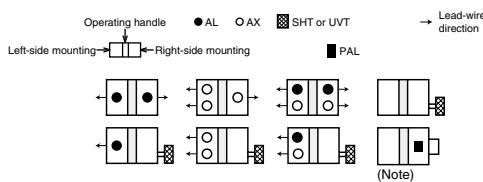

Current Reducing Curve

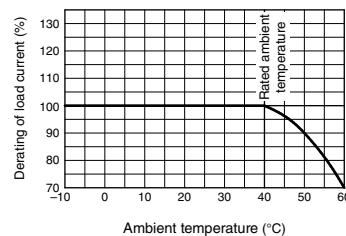

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories

Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-2SV	123	Mechanical interlock	3P MI-05SV3	
	V V-2SV	125	MI	4P MI-2SV4	136
Lock cover	LC LC-05SV				
Handle lock device	HL(*) HLF-05SV		Small TC-S	3P TCS-2SV3	
	HLN-05SV	134		4P TCS-2SV4	
	HL-S HLS-2SV		Large TC-L	3P TCL-2SV3	
				3P TCL-2SV3L	
				4P TCL-2SV4	
			Skeleton TTC	3P TTC-2SV3	
				4P TTC-2SV4	
			Rear BTC	3P BTC-2SV3	
				4P BTC-2SV4	
			Plug-in PTC	3P PTC-2SV3	128
				4P PTC-2SV4	
			Electrical operation device	(*2)	140


*1 HLF types are used for OFF lock and HLN types for ON lock.

*2 Specify the working voltage. Refer to the reference page for type name.


*3 For NF125-HEV and NF250-HEV with PAL, specify the model name with MP at the end.

Outline Drawing


Front connection

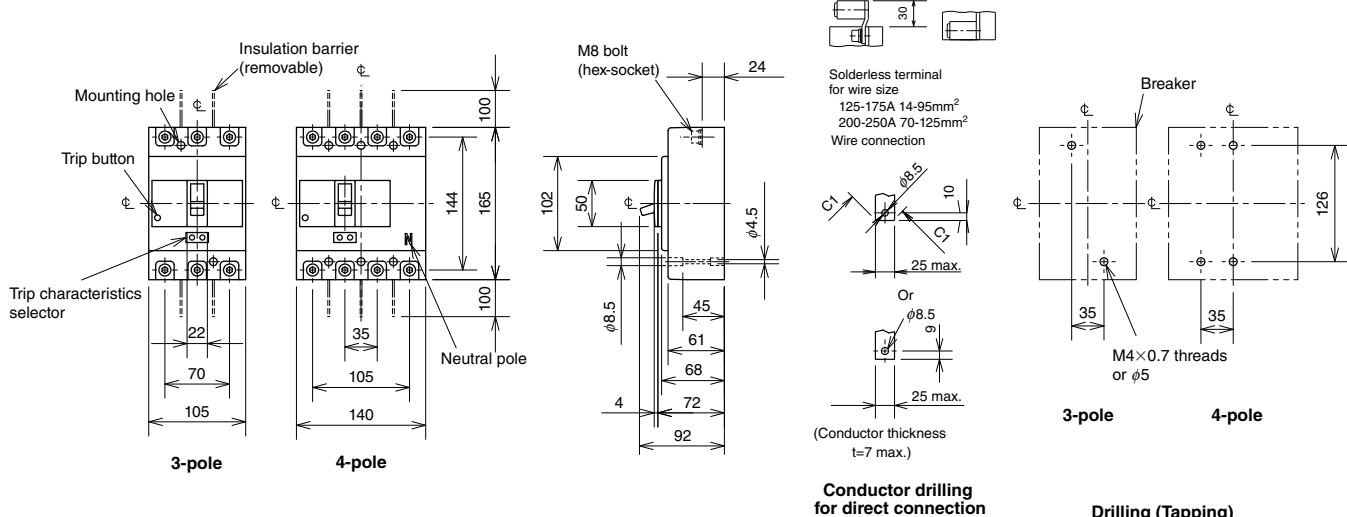

Rear connection

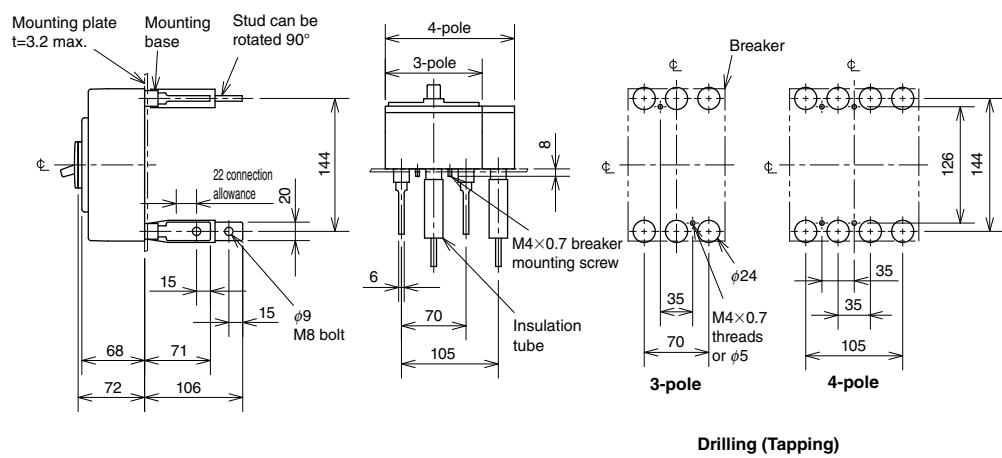

Plug-in

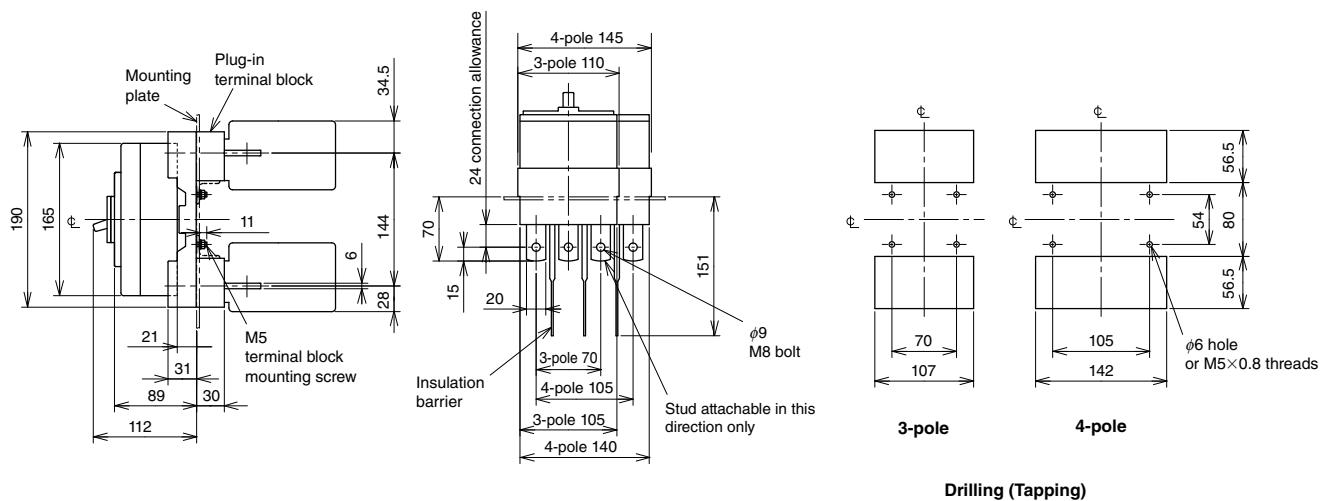

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers

NF400-CW NF400-SW





NF400-SW


Model		NF400-CW				NF400-SW					
Rated current In (A) Reference ambient temperature 40°C		250		300		350		400			
Number of poles		2		3		2		3		4	
Rated insulation voltage Ui (V)		690		—		10/10		690		690	
Rated short-circuit breaking capacity (kA) IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	690V	—	250	300	350	400	—	—	10/10	—
		500V	15/8	—	—	—	—	30/30	—	—	—
		440V	25/13	—	—	—	—	42/42	—	—	—
		415V	36/18	—	—	—	—	45/45	—	—	—
		400V	36/18	—	—	—	—	45/45	—	—	—
		380V	40/20	—	—	—	—	50/50	—	—	—
		230V	50/25	—	—	—	—	85/85	—	—	—
		200V	50/25	—	—	—	—	85/85	—	—	—
		DC (*1)	250V	—	—	20/10	—	—	40/40	—	—
		Standard attached parts		Front connection	Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x60 (4pcs) Insulating barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs)						—
Rear connection		—	—	Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs)	—						—

Note *1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 400VDC, and 4-pole models for up to 500VDC.

Operating Characteristics

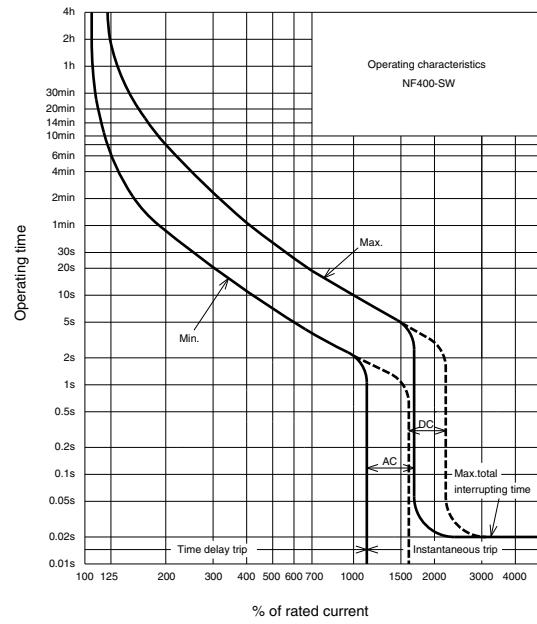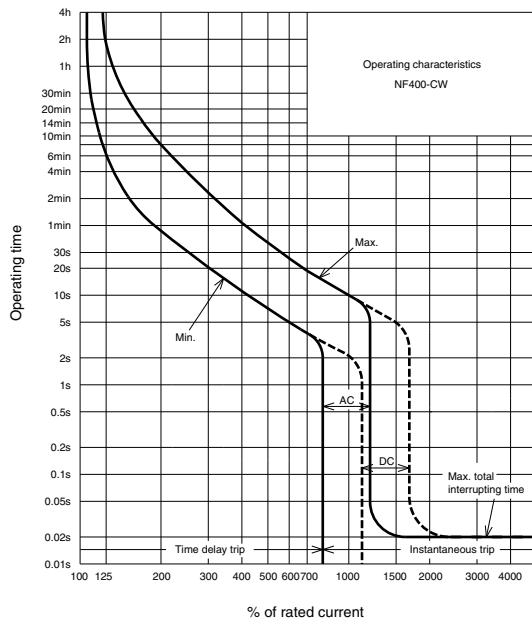


Internal Accessories

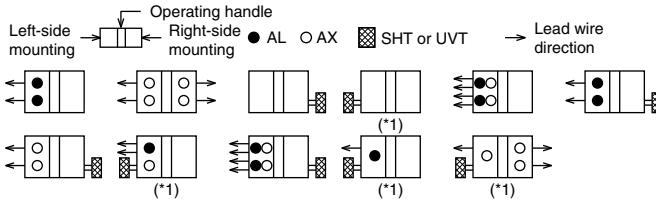

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Temperature Compensation Curve

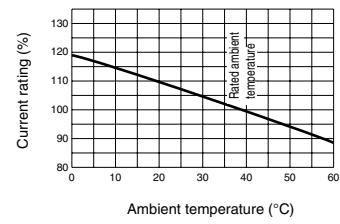


External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-4S	123	Terminal cover	Large	TC-L	2, 3P TCL-4SW3	
	V	V-4S	125			4P	TCL-4SW4	
Mechanical interlock	MI	2, 3P MI-4SW3	136		Skeleton	TTC	2, 3P TTC-4SW3	
		4P MI-4SW4				4P	TTC-4SW4	
Auxiliary handle	HT	HT-4CW, HT-4SW	135		Rear	BTC	2, 3P BTC-4SW3	
						4P	BTC-4SW4	
Handle lock device		HL	134		Handle lock device	HL	HL-4CW, HL-4SW	
		HL-S				HLS	—	
Electrical operation device		NFM	140		3P	(*1)	—	
		4P			4P			

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.


Outline Drawing

Front connection

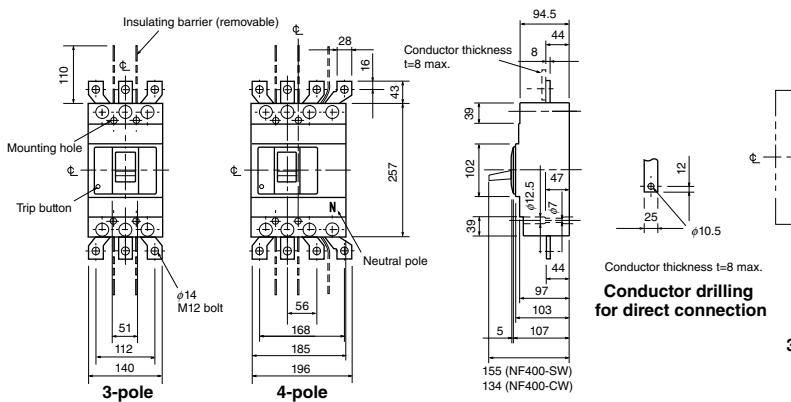

Conductor thickness t=8 max.


3-pole 4-pole
Drilling (Tapping)

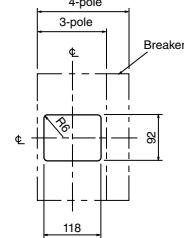

1.0mm clearance on each side of the handle frame.


Front-panel cutout

Rear connection

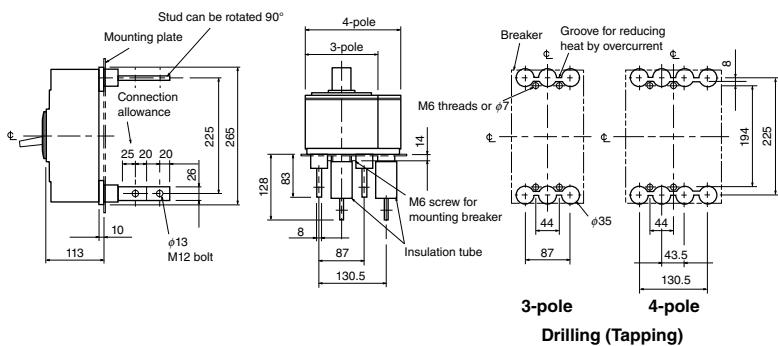


Drilling (Tapping)

Boring dimensions for rear connection type barriers (3-pole)

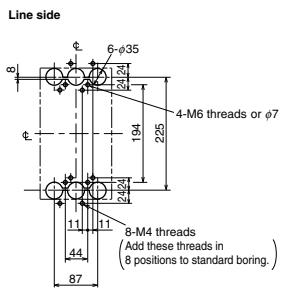

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

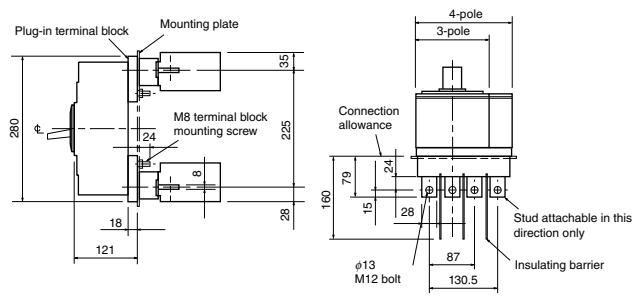

Drilling (Tapping)

Remark: 1. 2-pole models are 3-pole models with the central pole removed.


NF400-SEW NF400-HEW NF400-REW




NF400-SEW

Model		NF400-SEW		NF400-HEW		NF400-REW		
Rated current In (A)		Adjustable		200 225 250 300 350 400				
Reference ambient temperature 40°C		3	4	3	4	3		
Number of poles		690		690		690		
Rated insulation voltage Ui (V)		690V	10/10	35/18	—			
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	500V	30/30	50/50	70/35		
			440V	42/42	65/65	125/63		
			415V	50/50	70/70	125/63		
			400V	50/50	70/70	125/63		
			380V	50/50	70/70	125/63		
			230V	85/85	100/100	150/75		
			200V	85/85	100/100	150/75		
		DC	250V	—	—	—		
Standard attached parts		Front connection		Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs) Insulating barrier: (3P: 4pcs, 4P: 6pcs)				
		Rear connection		Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x85 (4pcs)				

Operating Characteristics

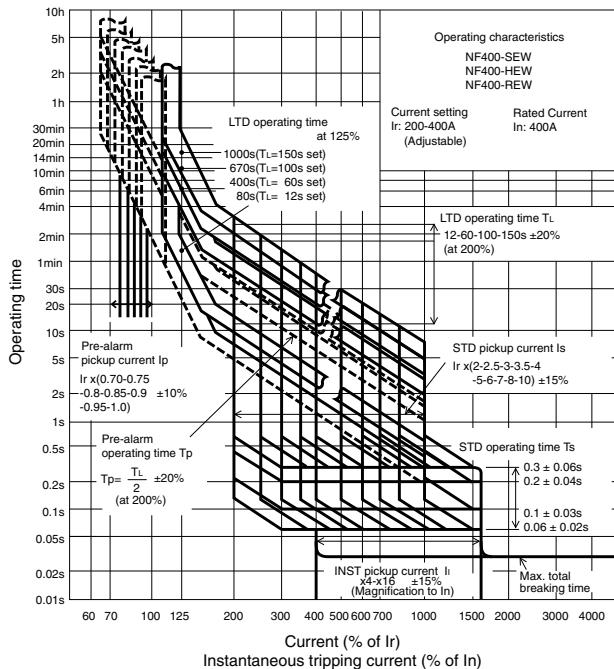


Internal Accessories

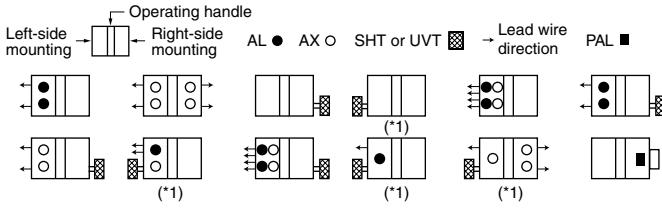

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Current Reducing Curve

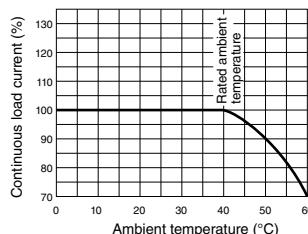

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-4S	123	Large	TC-L	3P TCL-4SW3 (*2)	128	
	V	V-4S	125		4P	TCL-4SW4 (*3)		
Mechanical interlock	MI	3P MI-4SW3	136		3P	TTC-4SW3		
		4P MI-4SW4			4P	TTC-4SW4		
Auxiliary handle	HT	HT-4SW	135	Rear	BTC	3P BTC-4SW3 (*4)	140	
					4P	BTC-4SW4		
Handle lock device		HL	134		HL-S	HLS-4SW		
		HL-S			NFM	3P (*1)		
Electrical operation device		4P	140					

Notes *1 Specify the operation method and voltage. Order in combination with the breaker unit.


*2 This is for NF400-SEW.

*3 This is for NF400-SEW/HEW.


*4 This is for NF400-SEW. For rear terminal cover of NF400-HEW/REW, use PTC-4SW3.

Outline Drawing


Front connection

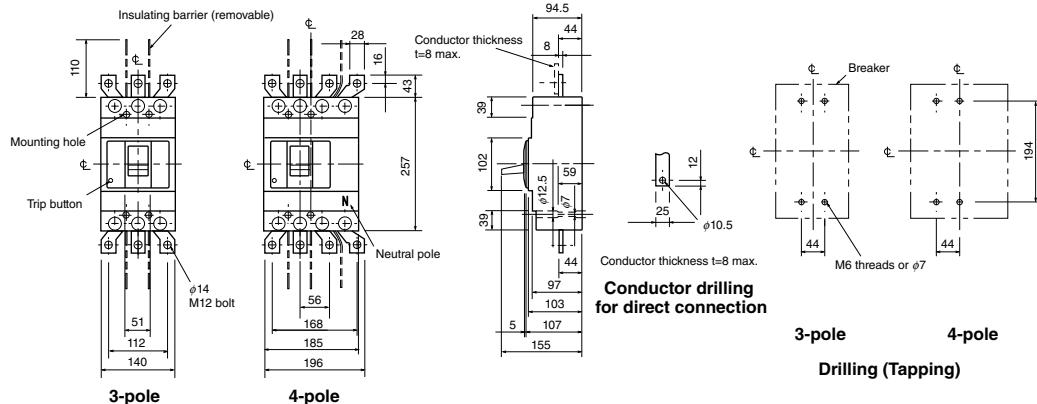


Rear connection

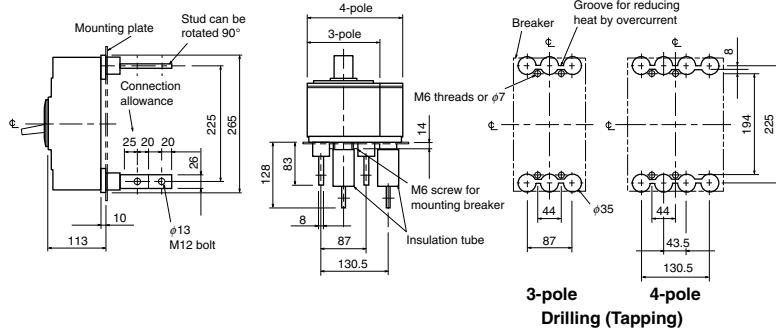

Boring dimensions for rear connection type barriers (3-pole)

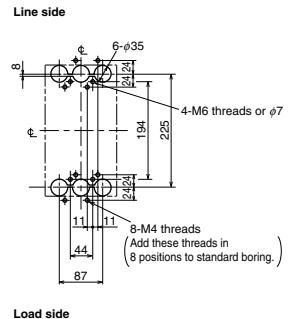

Plug-in

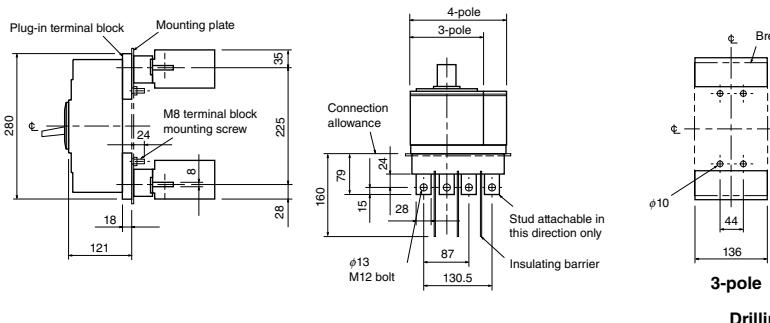

Drilling (Tapping)


NF400-UEW




NF400-UEW

Model		NF400-UEW					
Rated current In (A)		Adjustable					
Reference ambient temperature 40°C		200 225 250 300 350 400					
Number of poles		3 4					
Rated insulation voltage Ui (V)		690					
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs)	AC	690V	-				
		500V	170/170				
		440V	200/200				
		415V	200/200				
		400V	200/200				
		380V	200/200				
		230V	200/200				
		200V	200/200				
		250V	-				
		Front connection	Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: 3P M6x65 (2pcs), M6x174 (2pcs) 4P M6x35 (3pcs), M6x132 (2pcs)				
Standard attached parts (4-pole models are provided with auxiliary handle.)	Rear connection	Insulating barrier: (3P: 4pcs, 4P: 3pcs,)					
		Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: 3P M6x72 (2pcs), M6x181 (2pcs) 4P M6x35 (3pcs), M6x132 (2pcs)					

Operating Characteristics

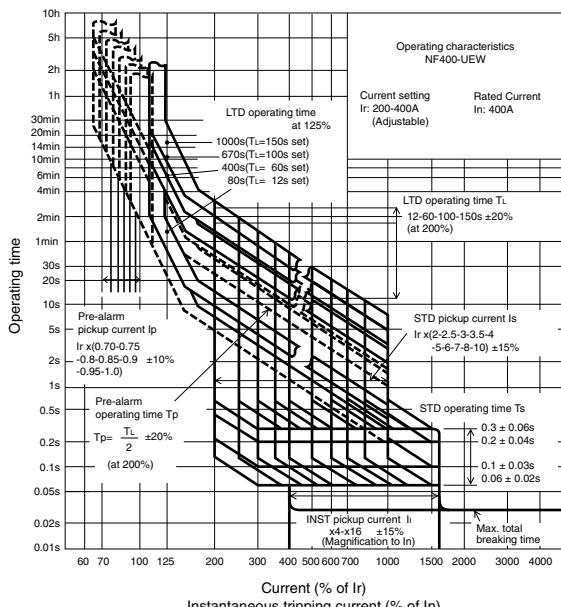


Internal Accessories

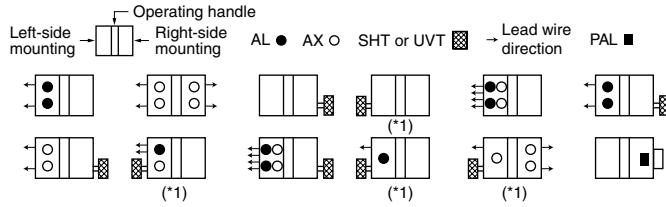

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.

Remarks: 1. Specification of 4-pole model is same as that of NF800-UEW.
2. Refer to page 110.

Current Reducing Curve

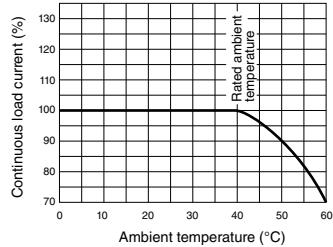

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories



Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-4U	123	Terminal cover	Large	TCL-L	128
	V	V-4U	125			3P	TCL-4SW3
Mechanical interlock	MI	MI-4SW3	136		Skeleton	4P	TCL-8UW4
Auxiliary handle	HT	HT-4SW	135			3P	—
Handle lock device		HL	134	Rear	BTC	3P	BTC-4SW3
HL-S		HLS-4UW	140		Electrical operation device		(*)1

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.


Remark *1 Specification of 4-pole model is same as that of NF800-UEW.

Outline Drawing

Front connection

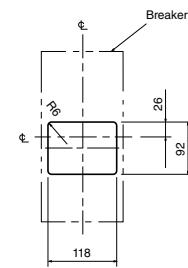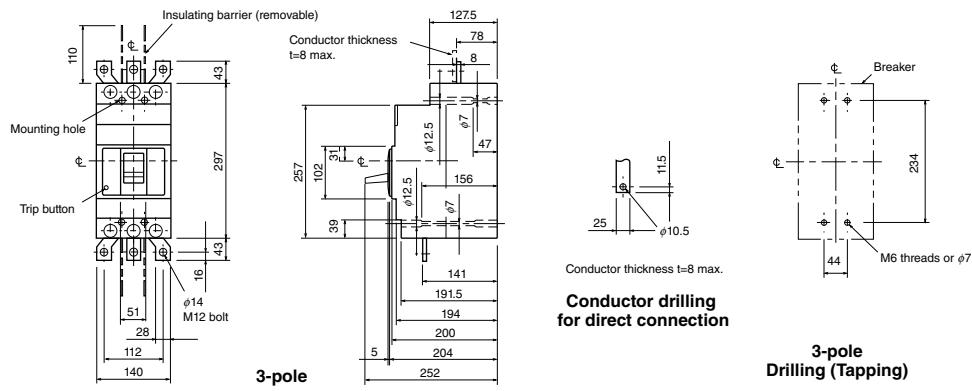


Front-panel cutout

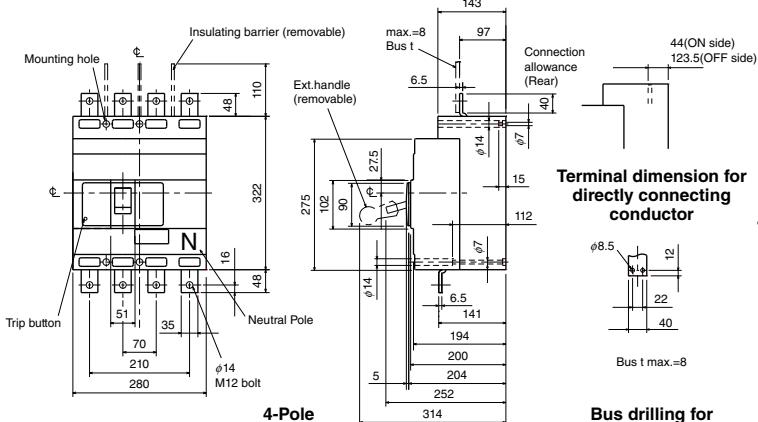


4-pole
Drilling (Tapping)

Rear connection

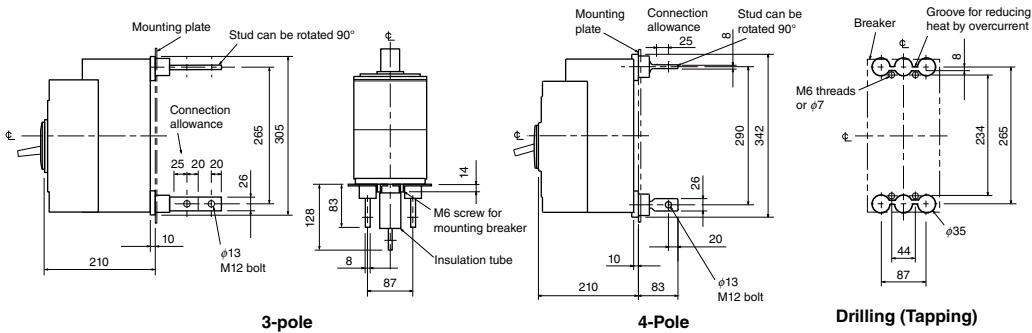


Boring dimensions for rear connection type barriers (3-pole)

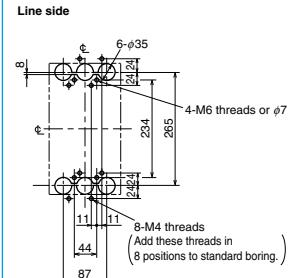

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

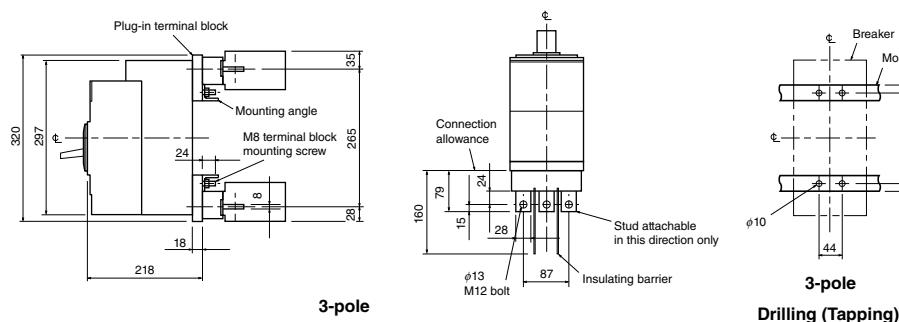

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers

NF630-CW NF630-SW





NF630-SW


Model		NF630-CW		NF630-SW	
Rated current In (A) Reference ambient temperature 40°C		500 600 (630)			
Number of poles		2	3	2	3 4
Rated insulation voltage Ui (V)		690		690	
Rated short-circuit breaking capacity (kA)	IEC 60947-2 (Icu/lcs)	690V	—	10/10	
		500V	18/9	30/30	
		440V	36/18	42/42	
		415V	36/18	50/50	
		400V	36/18	50/50	
		380V	40/20	50/50	
		230V	50/25	85/85	
		200V	50/25	85/85	
		DC (*)	250V	20/10	40/40
		Front connection		Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs)	
Standard attached parts		Rear connection		Insulating barrier: (2P: 2pcs, 3P: 4pcs, 4P: 6pcs) Terminal screw: M12 boltx35 (2-pole: 4pcs, 3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x85 (4pcs)	

Note *1 When wired as shown at the bottom of page 18, 3-pole models can be used for up to 400VDC, and 4-pole models for up to 500VDC.

Operating Characteristics

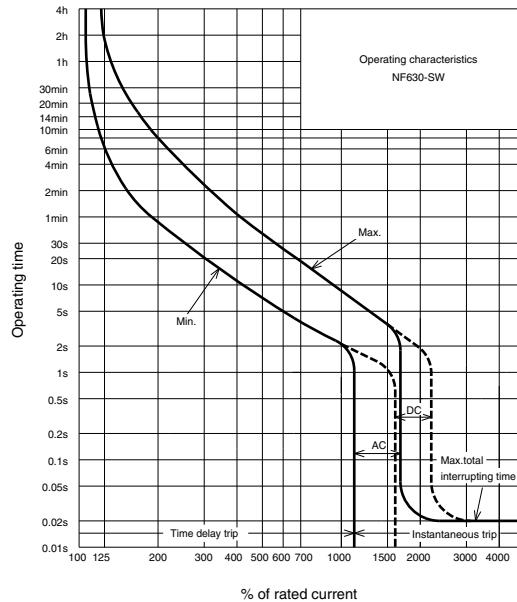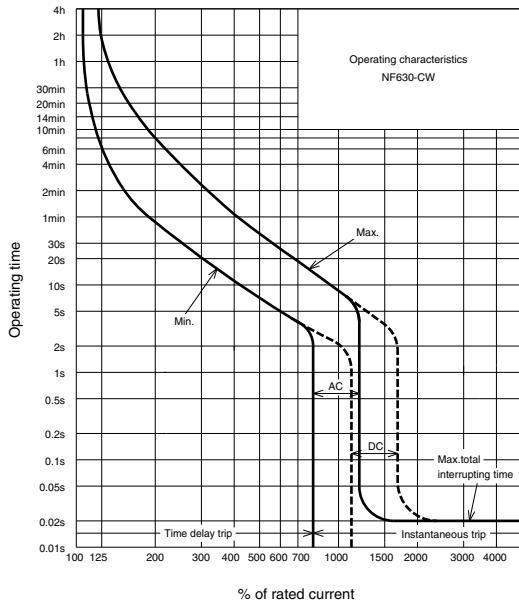


Internal Accessories

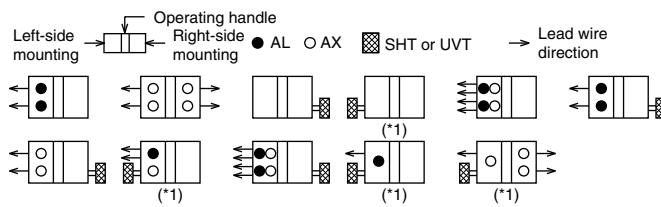

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Temperature Compensation Curve

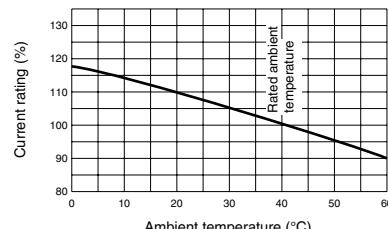


External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page	
Operating handle	F	F-4S	123	Large	TC-L	2, 3P TCL-4SW3	128	
	V	V-4S	125			4P TCL-4SW4		
Mechanical interlock	MI	2, 3P MI-4SW3	136	Skeleton	TTC	2, 3P TTC-4SW3	134	
	4P	MI-4SW4				4P TTC-4SW4		
Auxiliary handle	HT	HT-4SW	135	Rear	BTC	2, 3P BTC-4SW3	140	
						4P BTC-4SW4		
Handle lock device		HL		HL-S		HL-S-4SW		
		HL-S						
Electrical operation device		NFM	3P (*1)	(*1)				
		4P						


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing

Front connection

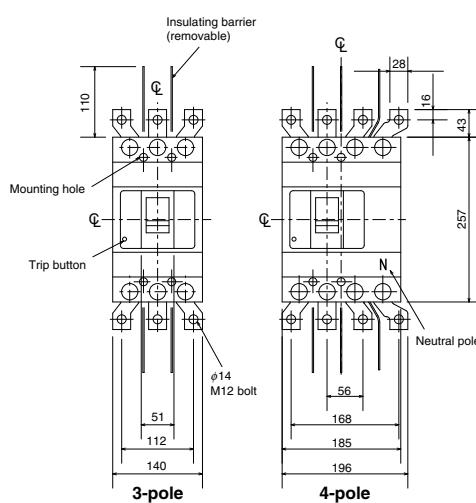


The diagram illustrates the required dimensions for a conductor connection. It features a horizontal line at the bottom labeled '30' and a vertical line on the left labeled '12'. A diagonal line extends from the top of the vertical line to the right, ending at a point labeled 'φ10.5'. A small circle is positioned near the intersection of the vertical and diagonal lines.

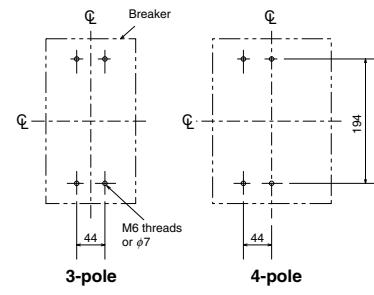


Drilling (Tapping)

Rear connection

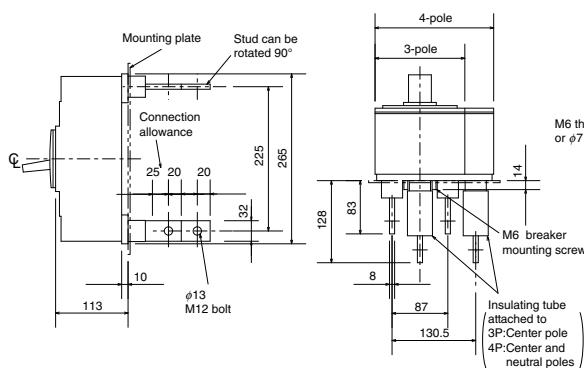

Drilling (Tapping)

Plug-in

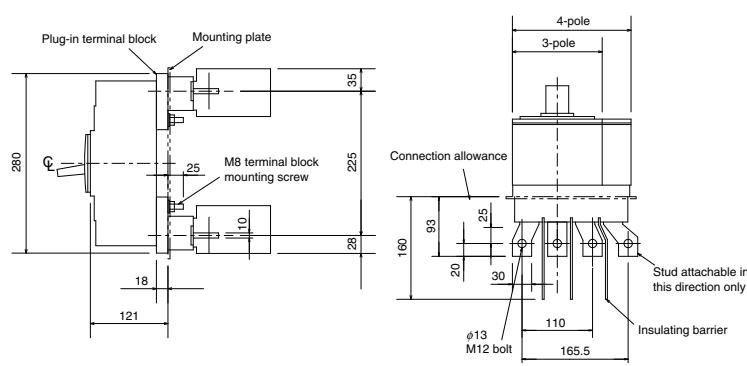

The diagram illustrates two types of electrical breakers: a 3-pole model and a 4-pole model. Both models feature a central vertical axis with horizontal dashed lines extending from the top and bottom. The 3-pole model on the left has a rectangular base with a width of 136 and a height of 44. A circular hole labeled φ10 is located on the left side of the base. The 4-pole model on the right has a rectangular base with a width of 181 and a height of 87. Above each model, there is a 'Breaker' label with a circle symbol. To the right of the 4-pole model, there are numerical values: 135, 55, and 163, which likely represent different dimensions or part numbers. At the bottom of both models, the text 'Drilling (Tapping)' is centered.

Drilling (Tapping)


Remark: 1. 2-pole models are 3-pole models with the central pole removed.

NF630-SEW NF630-HEW NF630-REW




NF630-SEW

Operating Characteristics

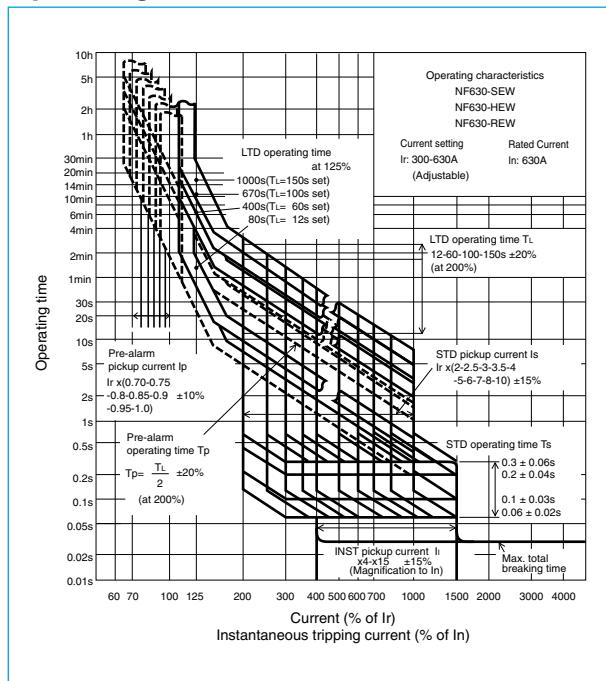


Internal Accessories

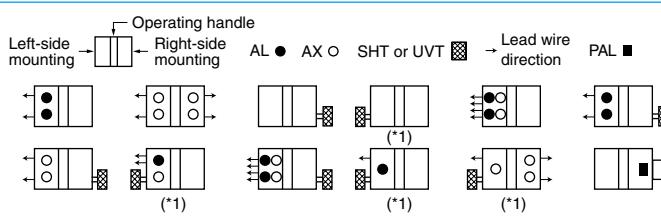

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Current Reducing Curve

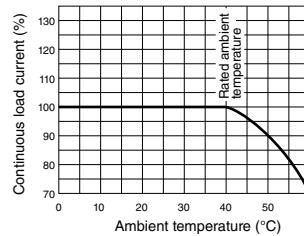

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-4S	123	Terminal cover	Large	TC-L	3P TCL-4SW3 (*2) 4P TCL-4SW4 (*2)
	V	V-4S	125			TTC	3P TTC-4SW3 4P TTC-4SW4
Mechanical interlock	MI	3P MI-4SW3	136		Rear	BTC	3P BTC-4SW3 (*3) 4P BTC-4SW4
	4P	4P MI-4SW4				HL	HL-4SW
Auxiliary handle	HT	HT-4SW	135		Handle lock device	HL-S	HLS-4SW
							134
				Electrical operation device	NFM	3P 4P	(*1)
							140


Notes *1 Specify the operation method and voltage. Order in combination with the breaker unit.

*2 This is for NF630-SEW.


*3 This is for NF630-SEW. For rear terminal cover of NF630-HEW/REW, use PTC-4SW3.

Outline Drawing



Front connection

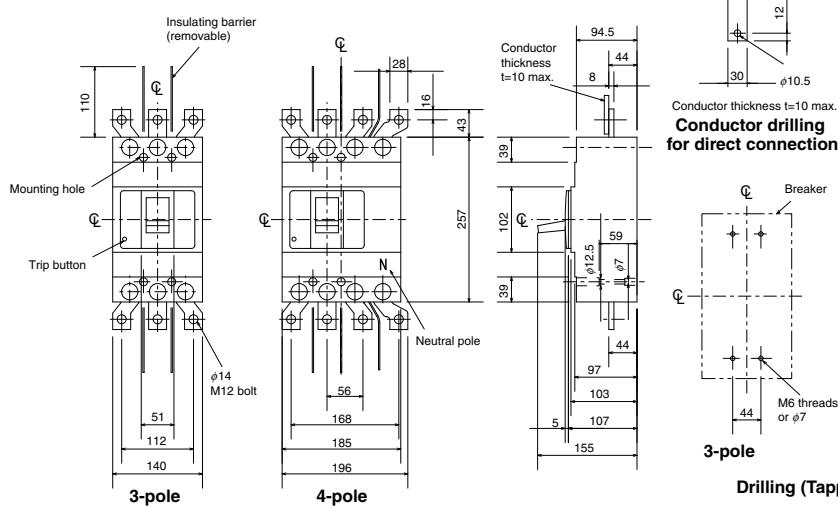


Rear connection

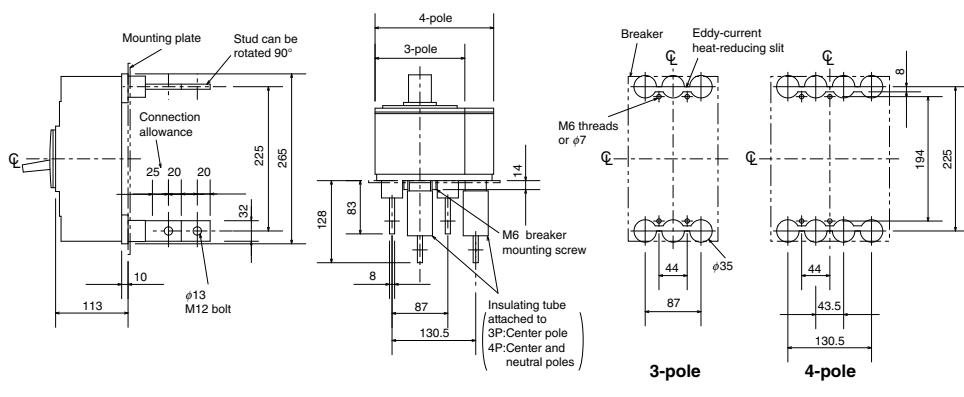

Plug-in

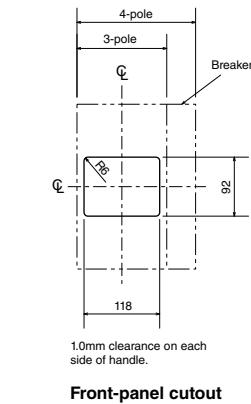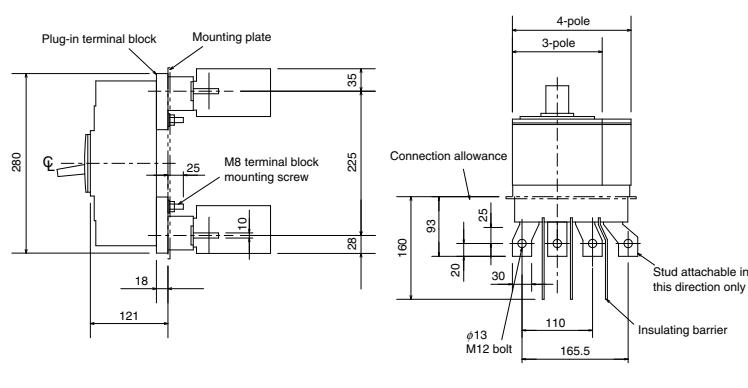

Boring dimensions for rear connection type barriers (3-pole)

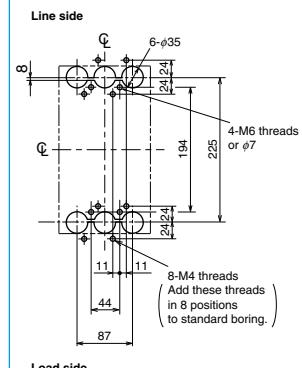

Note: The bore dimensional drawing shows the breaker viewed from the rear.


NF800-CEW NF800-SEW NF800-HEW NF800-REW




NF800-SEW

Model		NF800-CEW	NF800-SEW	NF800-HEW	NF800-REW
Rated current In (A)		Adjustable 400 450 500 600 700 800			
Reference ambient temperature 40°C		3	3	4	3
Number of poles		3	3	4	3
Rated insulation voltage Ui (V)		690	690	690	690
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs)	AC	690V	—	10/10	15/15
		500V	18/9	30/30	50/50
		440V	36/18	42/42	65/65
		415V	36/18	50/50	70/70
		400V	36/18	50/50	70/70
		380V	40/20	50/50	70/70
		230V	50/25	85/85	100/100
		200V	50/25	85/85	100/100
	DC	250V	—	—	—
Standard attached parts (4-pole models are provided with auxiliary handle.)		Front connection	Terminal screw: M12 boltx35 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6x35 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 3pcs)		
		Rear connection	Terminal screw: M12 boltx40 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6x40 (4pcs)		

Operating Characteristics

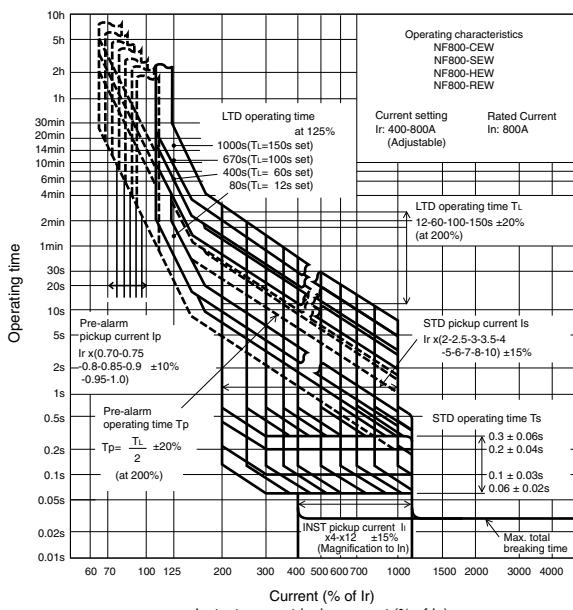


Internal Accessories

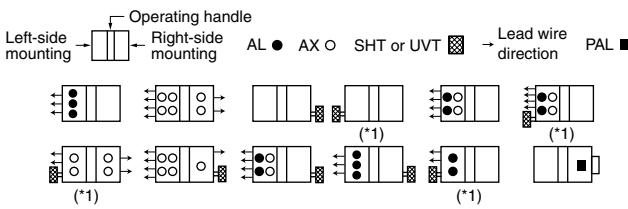

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Current Reducing Curve

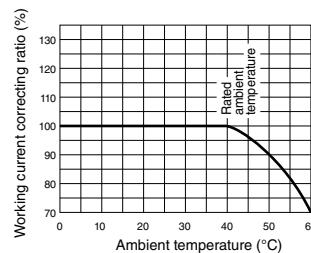

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.


External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-8S	123	Large	TC-L	3P TCL-8SW3 4P TCL-8SW4	128
	V	V-8S	125		TTC	3P TTC-8SW3 4P TTC-8SW4	
Mechanical interlock	MI	3P MI-8SW3 4P MI-8SW4	136	Skeleton	BTC	3P BTC-8SW3 4P BTC-8SW4	
Auxiliary handle	HT	HT-4SW	135		HL	HL-4SW	134
Handle lock device		HL-S	HLS-8SW				
		NFM	3P 4P	(*1)	(*1)	140	
Electrical operation device							


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing


Front connection

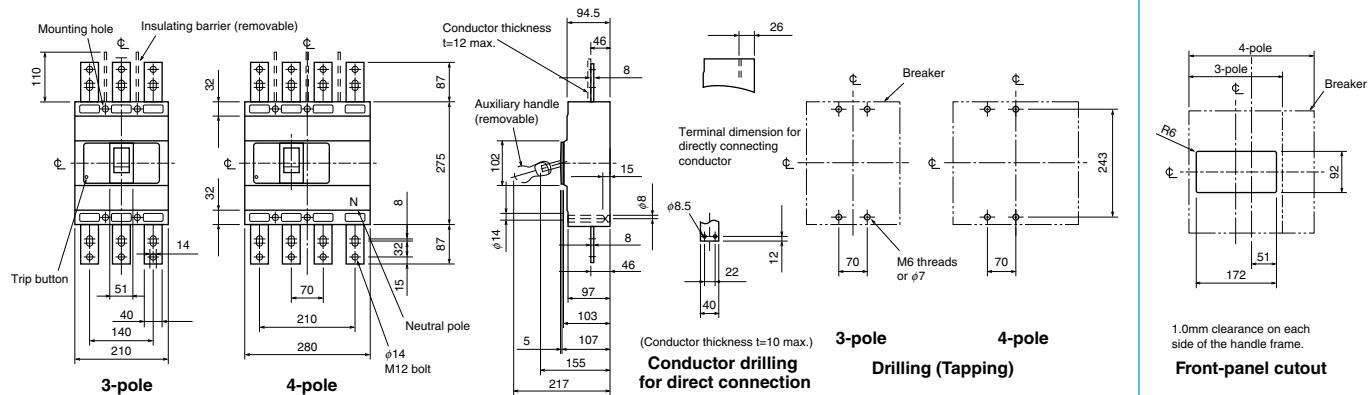

Rear connection

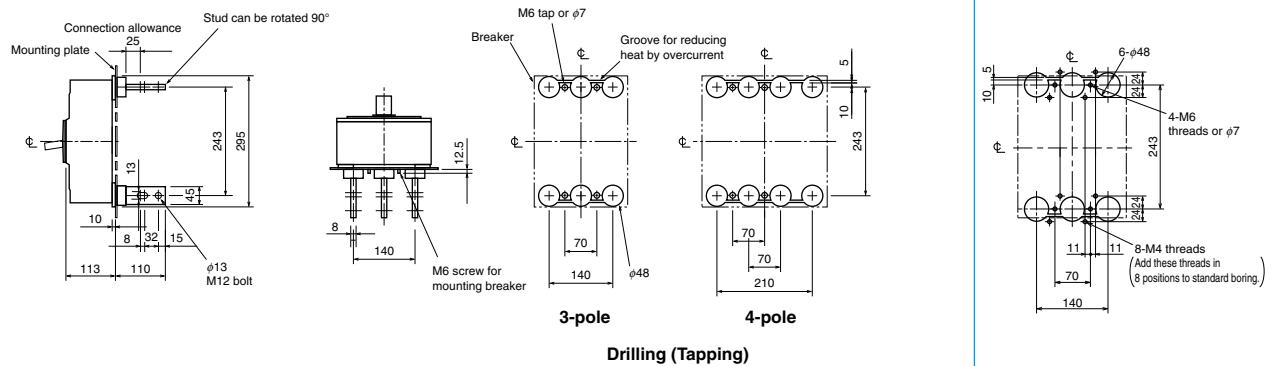

Plug-in

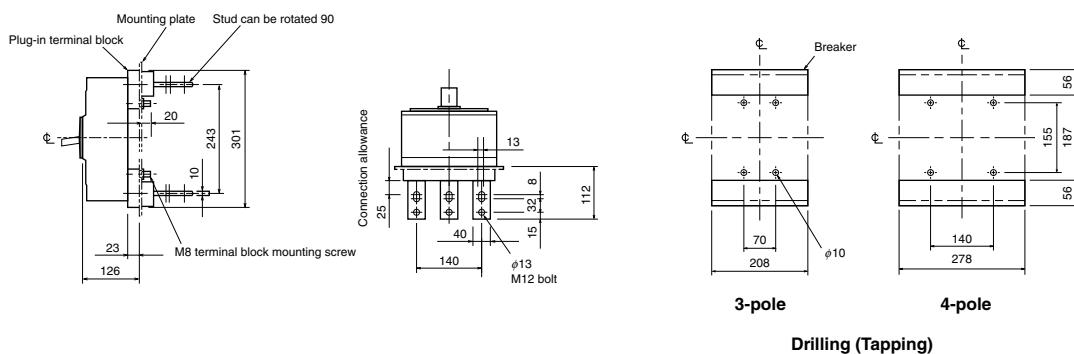

NF800-SDW




NF800-SDW


Model		NF800-SDW	
Rated current In (A) Reference ambient temperature 40°C		(700) 800	
Number of poles		2	
Rated insulation voltage Ui (V)		690	
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) Time constant not larger than 10ms	AC	690V	-
		500V	-
		440V	-
		415V	-
		400V	-
		380V	-
		230V	-
	DC	200V	-
	250V (*1)	40/40	
Standard attached parts (4-pole models are provided with auxiliary handle.)		Front connection	Terminal screw: M12 bolt×35 (2-pole: 8pcs, 3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6×35 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs)
		Rear connection	Terminal screw: M12 bolt×40 (2-pole: 8pcs, 3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M6×40 (4pcs)

Note *1 The standard specifications for NF800-SDW are 2-pole.
For DC special voltage use, we also have 3-pole and 4-pole models.

Operating Characteristics

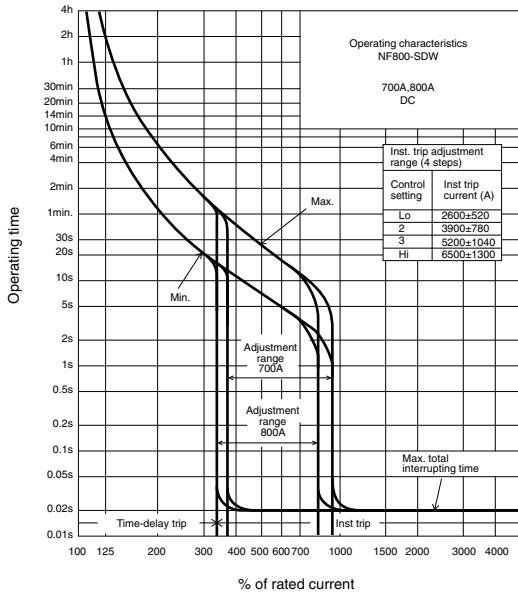


Internal Accessories

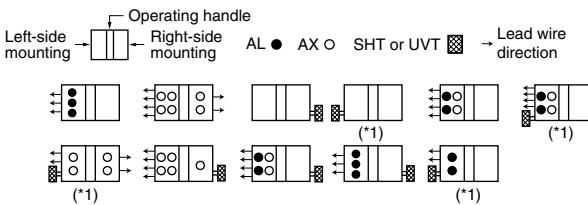

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Temperature Compensation Curve

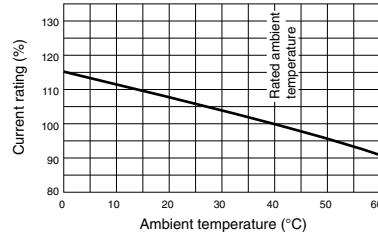


External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-8S	123	Terminal cover	Large	TC-L 2, 3P	TCL-8SW3
	V	V-8S	125			4P	TCL-8SW4
Mechanical interlock	MI	2, 3P MI-8SW3 4P MI-8SW4	136		Skeleton	TTC 2, 3P 4P	TTC-8SW3 TTC-8SW4
Auxiliary handle	HT	HT-4SW	135	Handle lock device	Rear	BTC 2, 3P 4P	BTC-8SW3 BTC-8SW4
					HL	HL-4SW	134
					HL-S	HLS-8SW	
Electrical operation device	NFM	2, 3P 4P	(*1)	Electrical operation device			140

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing

Front connection

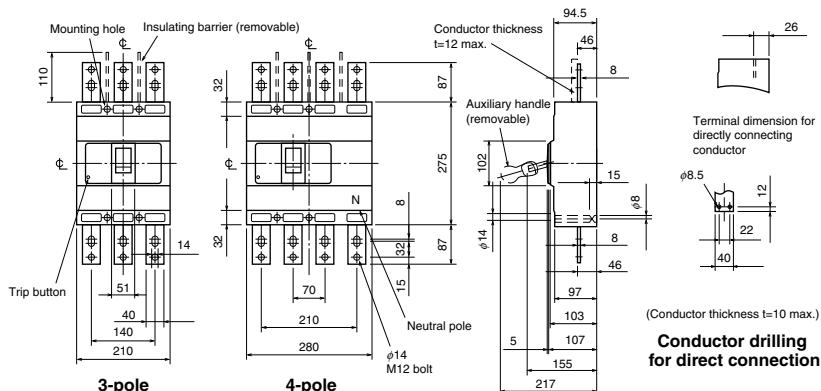


Conductor drilling for direct connection

Drilling (Tapping)


Rear connection

Boring dimensions for rear connection type barriers (3-pole)

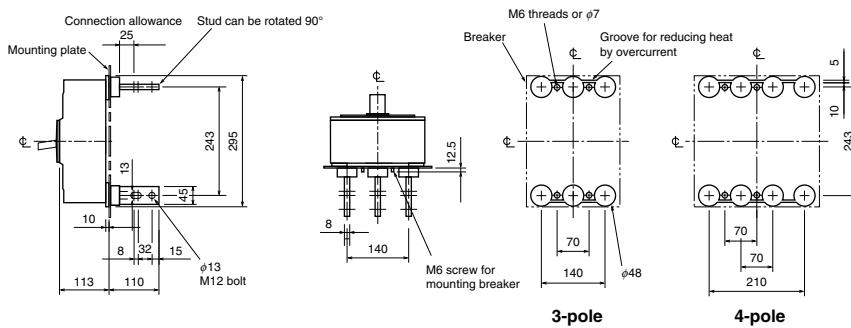

Drilling (Tapping)

Plug-in

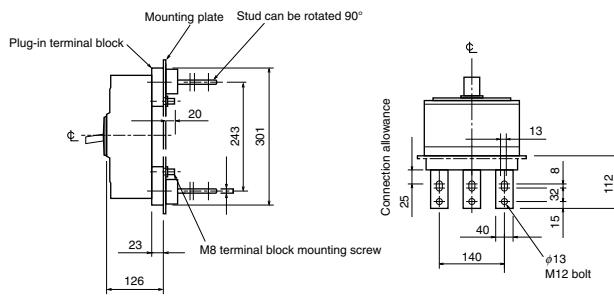

3-pole 4-pol

Remarks: 1. Standard specification of NF800-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.
2. 2-pole models are 3-pole models with the central pole removed.


NF800-UEW




NF800-UEW

Model		NF800-UEW						
Rated current In (A)		Adjustable						
Reference ambient temperature 40°C		400 450 500 600 700 800						
Number of poles		3 4						
Rated insulation voltage Ui (V)		690						
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs)	AC	690V	35/35					
		500V	170/170					
		440V	200/200					
		415V	200/200					
		400V	200/200					
		380V	200/200					
		230V	200/200					
		200V	200/200					
	DC	250V	-					
Standard attached parts (4-pole models are provided with auxiliary handle.)		Front connection	Terminal screw: M12 boltx35 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: 3P: M6x35, M6x132 (2pcs each) 4P: M6x35 (3pcs), M6x132 (2pcs) Insulating barrier: (3P: 2pcs, 4P: 3pcs)					
			Terminal screw: M12 boltx40 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: 3P: M6x40, M6x137 (2pcs each) 4P: M6x40 (3pcs), M6x137 (2pcs)					

Operating Characteristics

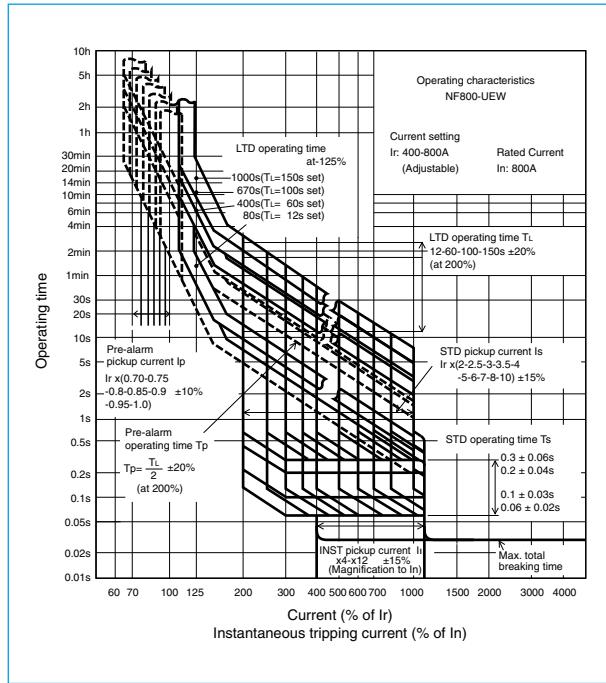


Internal Accessories

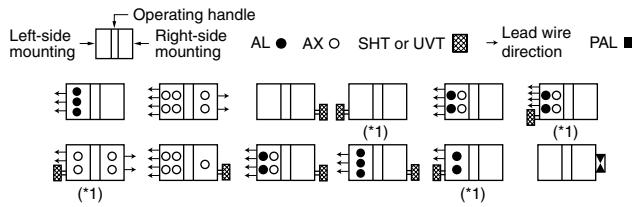

Note: *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.
Remark: 1. Refer to page 110.

Current Reducing Curve

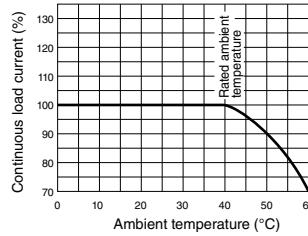

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.




External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	F-8U	123	Large	TC-L	3P	TCL-8UW3
	V	—	125			4P	TCL-8UW4
Mechanical interlock	MI	3P MI-8SW3	136	Skeleton	TTC	3P	—
		4P MI-8SW4				4P	—
Auxiliary handle	HT	HT-4SW	135	Rear	BTC	3P	BTC-8SW3
						4P	BTC-8SW4
Handle lock device		HL	HL-4SW			134	
		HL-S	HLS-8UW				
Electrical operation device				(*1)		140	


Note: *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing

Front connection

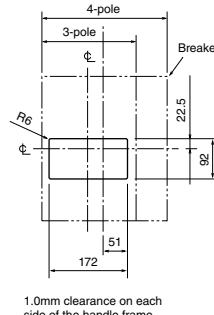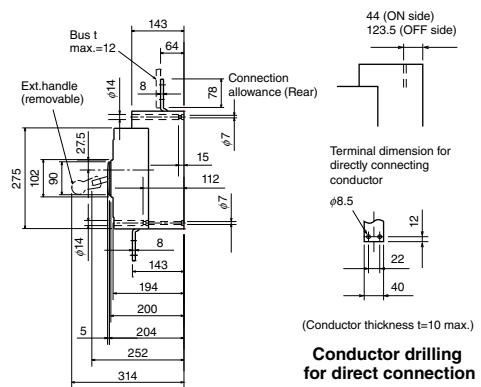
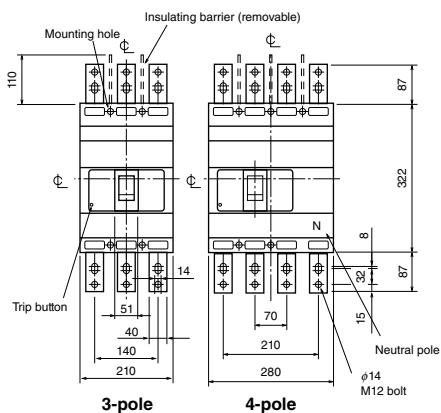


Front-panel cutout

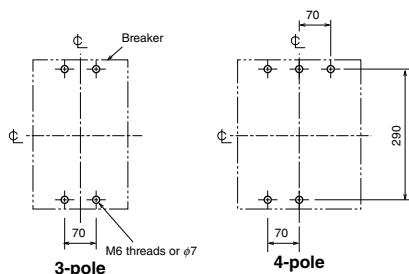


Drilling (Tapping)

Rear connection

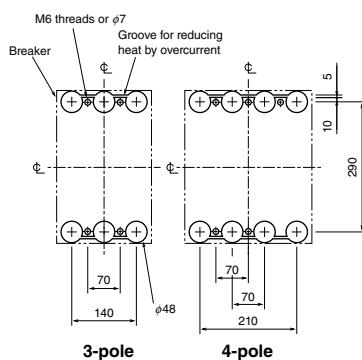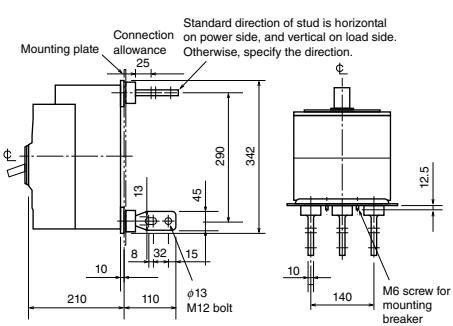

Drilling (Tapping)

Boring dimensions for rear connection type barriers (3-pole)

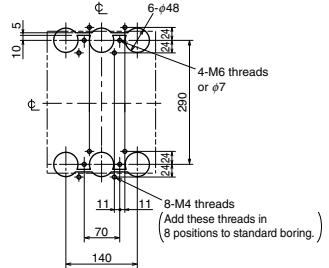


NF1000-SEW NF1250-SEW




NF1250-SEW

Model		NF1000-SEW		NF1250-SEW			
Rated current In (A)		Adjustable		Adjustable			
Reference ambient temperature 40°C		500 600 700		600 700 800			
800 900 1000		1000 1200 1250					
Number of poles	IEC 60947-2 (Icu/Ics)	AC	3	4	3		
			690	690	690		
			690V	25/13	25/13		
			500V	65/33	65/33		
			440V	85/43	85/43		
			415V	85/43	85/43		
			400V	85/43	85/43		
			380V	85/43	85/43		
			230V	125/63	125/63		
			200V	125/63	125/63		
Rated short-circuit breaking capacity (kA)			250V	-	-		
			DC	-	-		
Standard attached parts		Front connection	Terminal screw: M12 boltx50 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M8x40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)				
		Rear connection	Terminal screw: M12 boltx45 (3-pole: 12pcs, 4-pole: 16pcs) Mounting screw: M8x40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 4pcs) Auxiliary handle: (1pc)				


Operating Characteristics

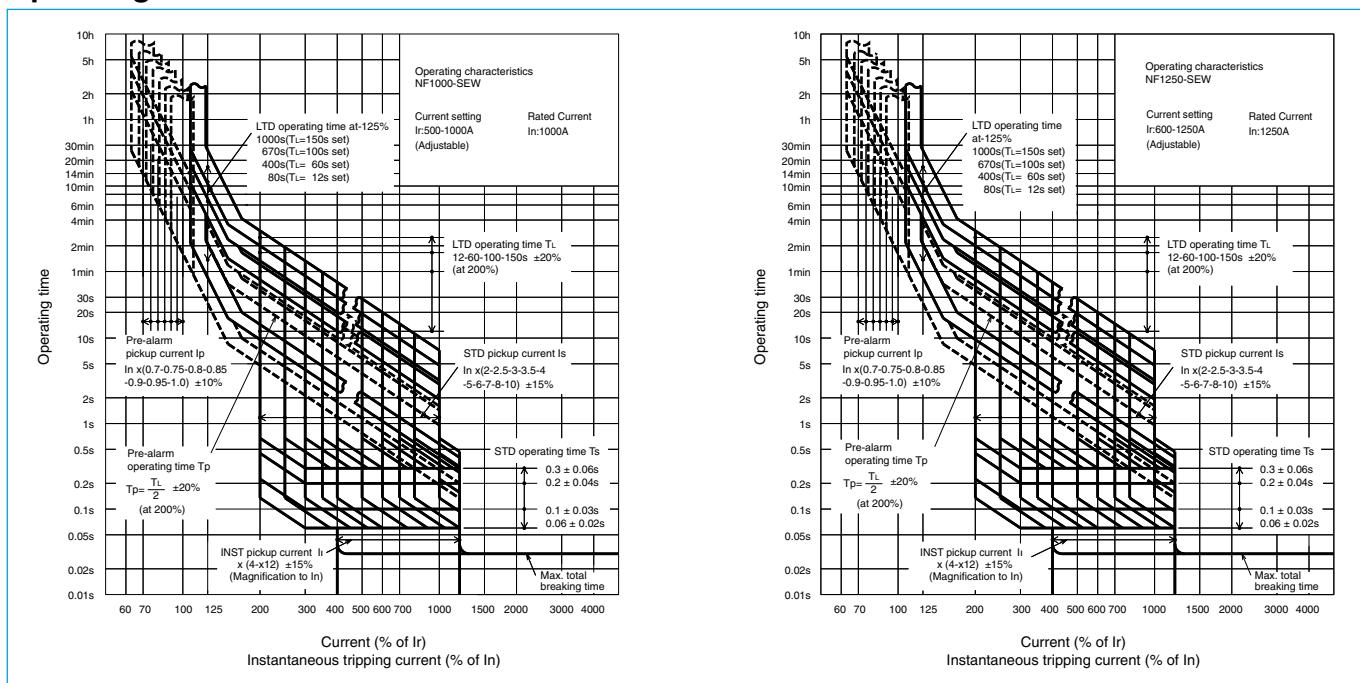

Internal Accessories

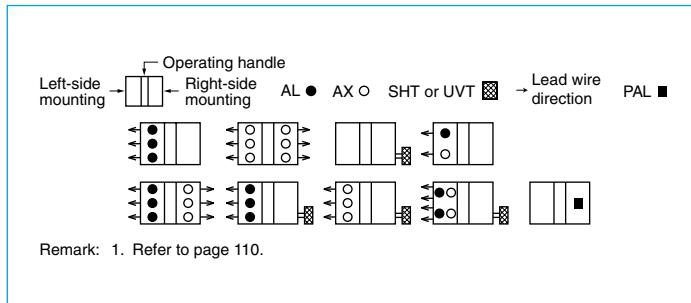

Current Reducing Curve

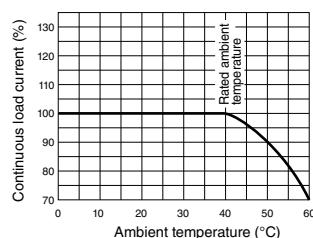

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories


(An order for ☆ should be placed at the same time as an order of circuit breaker main body.)

Accessories		Type name	Reference page	Accessories		Type name	Reference page		
Operating handle	F	3P F10SW	123	Auxiliary handle	HT	HT-10SW	135		
	4P	F10SW4P		Handle lock device	HL	HL (☆)	134		
Mechanical interlock	MI	3P MI-10SW3	136	Large terminal cover	TC-L	3P TCL-10SW3	128		
		4P MI-10SW4				4P TCL-10SW4			
				Electrical operation device	NFM	3P (1*)	140		
						4P			


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing


Front connection

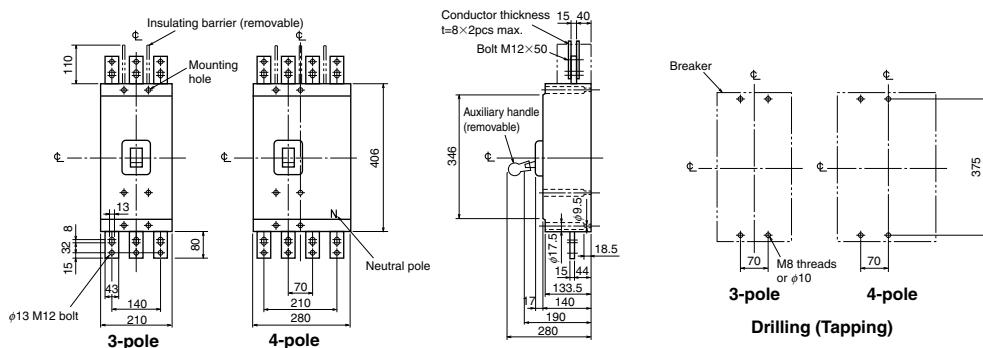

Rear connection

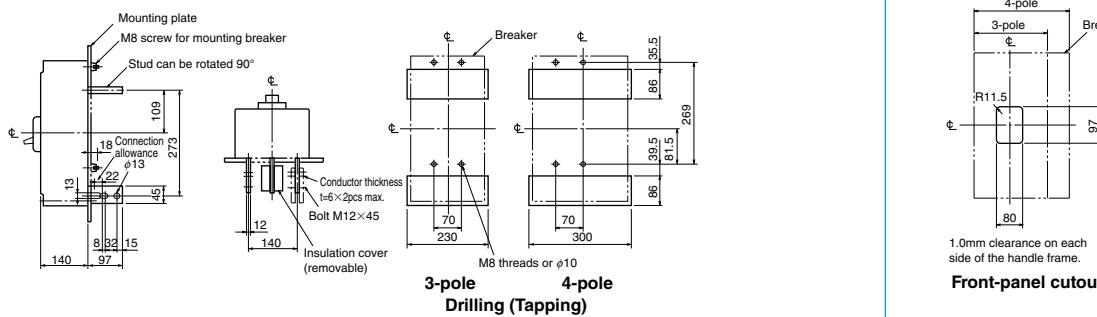

Plug-in

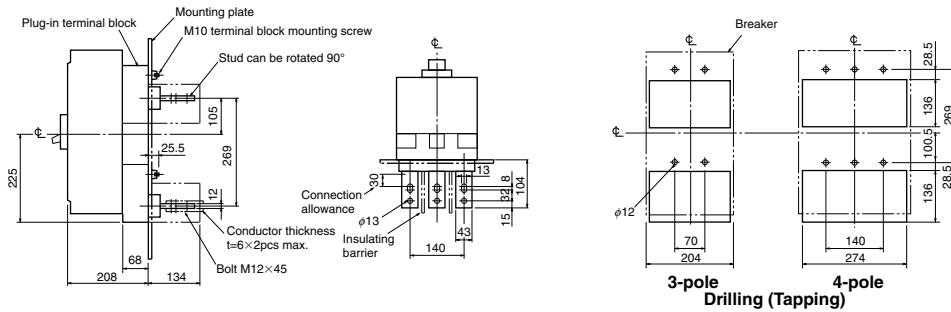

NF1250-SDW





NF1250-SDW


Model			NF1250-SDW
Rated current In (Amp.)			1000 1200 1250
Reference ambient temperature 40°C			
Number of poles			2
Rated insulation voltage Ui (V)			690
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) Time constant not large than 10ms	AC	690V	—
		500V	—
		440V	—
		415V	—
		400V	—
		380V	—
		230V	—
		200V	—
	DC	250V (*1)	40/20
Standard Attached parts			Terminal screw: M12 bolt×50 (2-pole: 8pcs, 3-pole: 12pcs) Mounting screw: M8×40 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)
			Terminal screw: M12 bolt×45 (2-pole: 8pcs, 3-pole: 12pcs) Mounting screw: M8×40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 4pcs) Auxiliary handle: (1pc)

Note *1 The standard specifications for NF1250-SDW are 2-pole.
For DC special voltage use, we also have 3-pole model.


Operating Characteristics

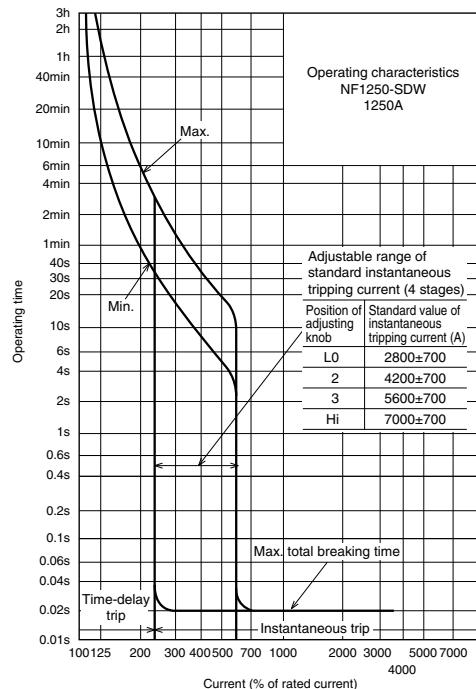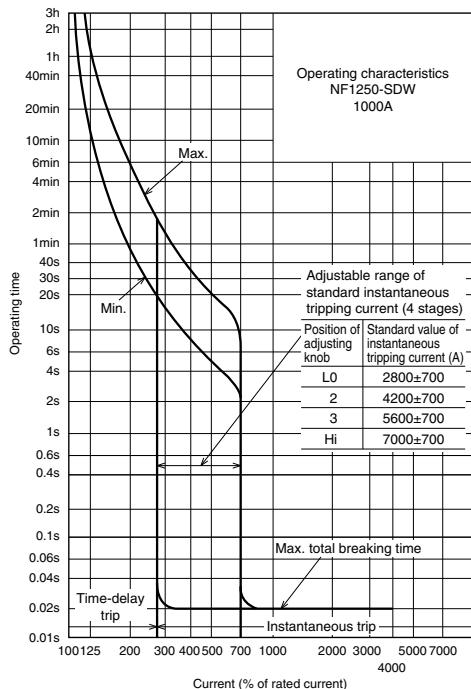

Internal Accessories

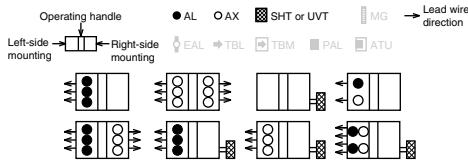

Temperature Compensation Curve

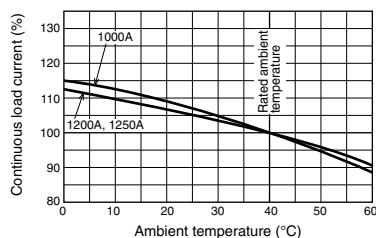

External Accessories


(An order for ☆ should be placed at the same time as an order of circuit breaker main body.)

Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	2, 3P F10SW	123	Auxiliary handle	HT	HT-10SW	135
	4P	F10SW4P		Handle lock device	HL	HL (☆)	134
Mechanical interlock	MI	2, 3P MI-10SW3	136	Large terminal cover		2, 3P TCL-10SW3	128
		4P MI-10SW4				4P TCL-10SW4	
Electrical operation device		NFM	(*1)	2, 3P	140		
				4P			


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing


Front connection

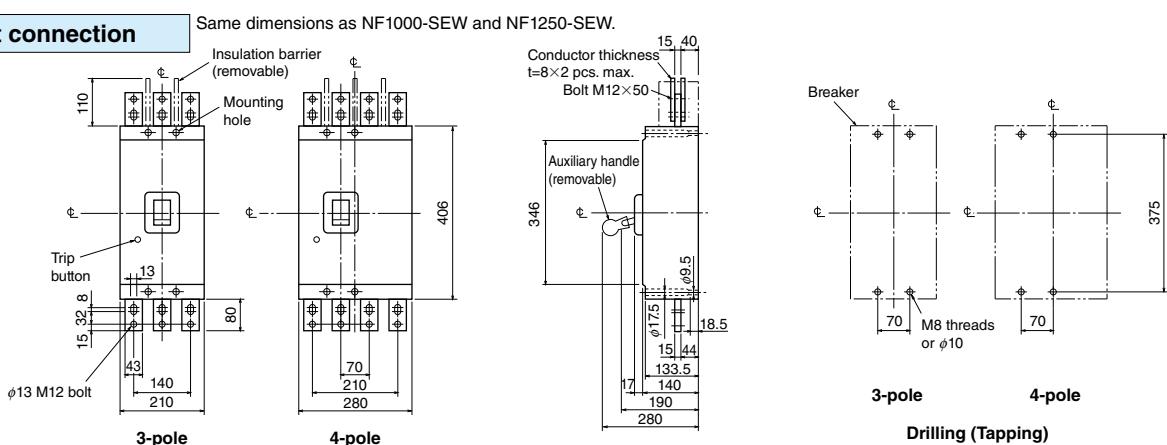

Rear connection

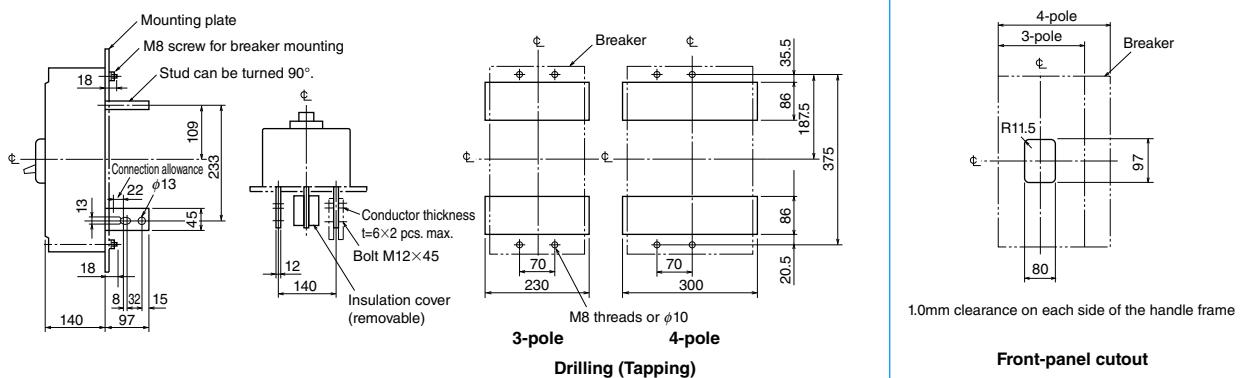

Plug-in

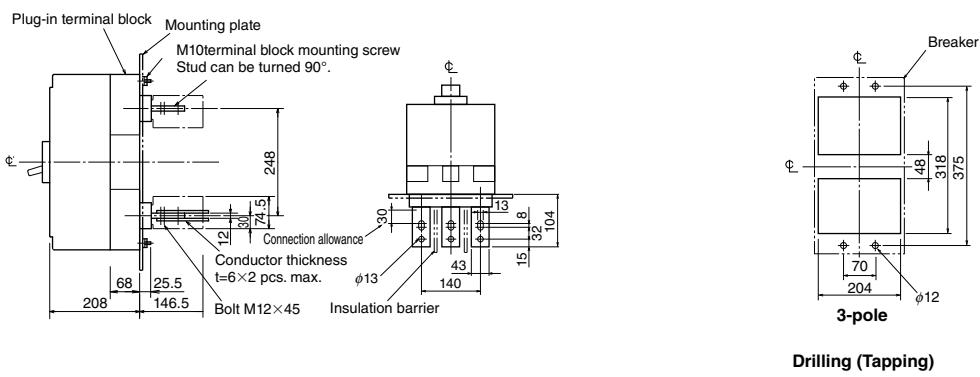

Remarks: 1. Standard specification of NF1250-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.
2. 2-pole models are 3-pole models with the central pole removed.

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers


NF1600-SEW




NF1600-SEW

Model		NF1600-SEW					
Rated current In (A)		Adjustable					
Reference ambient temperature 40°C		800 1000 1200 1400 1500 1600					
Number of poles		3 4					
Rated insulation voltage Ui (V)		IEC 60947-2 (Icu/lcs)	AC	690V 25/13			
Rated short-circuit breaking capacity (kA)				500V 65/33			
				440V 85/43			
				415V 85/43			
				400V 85/43			
				380V 85/43			
				230V 125/63			
				200V 125/63			
				250V -			
Standard attached parts			Front connection	Terminal screw: M10 boltx65 (3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8 × 40 (4pcs) Insulating barrier: (3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)			
				Terminal screw: M10 boltx50 (3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8 × 40 (4pcs) Auxiliary handle: (1pc)			

Operating Characteristics

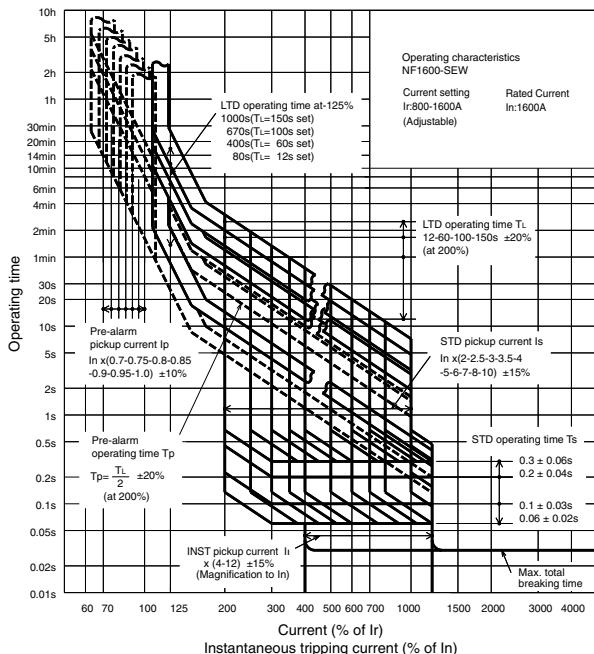


Internal Accessories

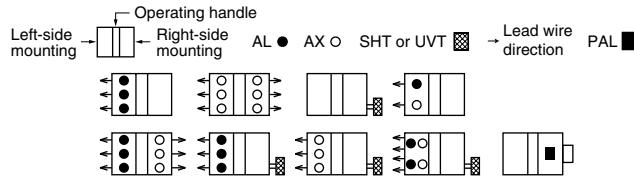

Remark: 1. Refer to page 110.

Current Reducing Curve

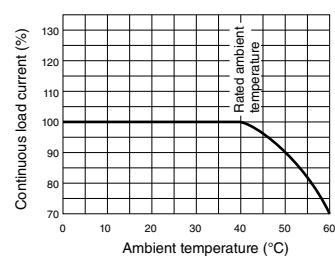

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

External Accessories



(An order for \star should be placed at the same time as an order of circuit breaker main body.)

Accessories			Type name	Reference page	Accessories		Type name	Reference page
Operating handle	F	3P	F10SW	123	Auxiliary handle	HT	HT-10SW	135
		4P	F10SW4P		Handle lock device	HL	HL (\star)	134
Mechanical interlock	MI	3P	MI-16SW3	136	Electrical operation device	NFM	3P	(*1)
		4P	MI-16SW4				4P	

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.


Outline Drawing

Front connection

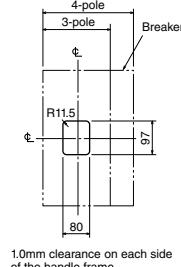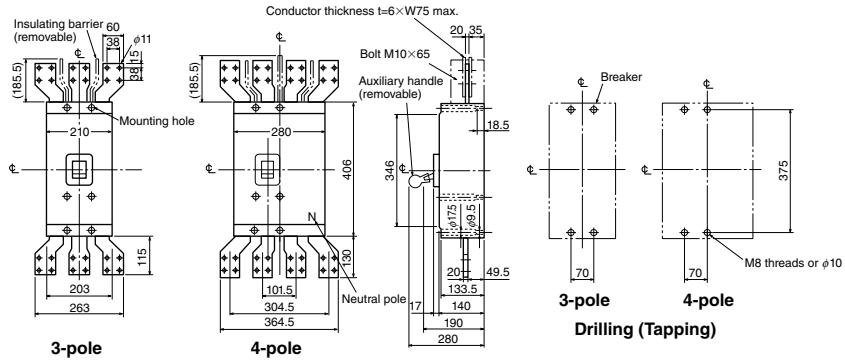

Front-panel cutout

Rear connection

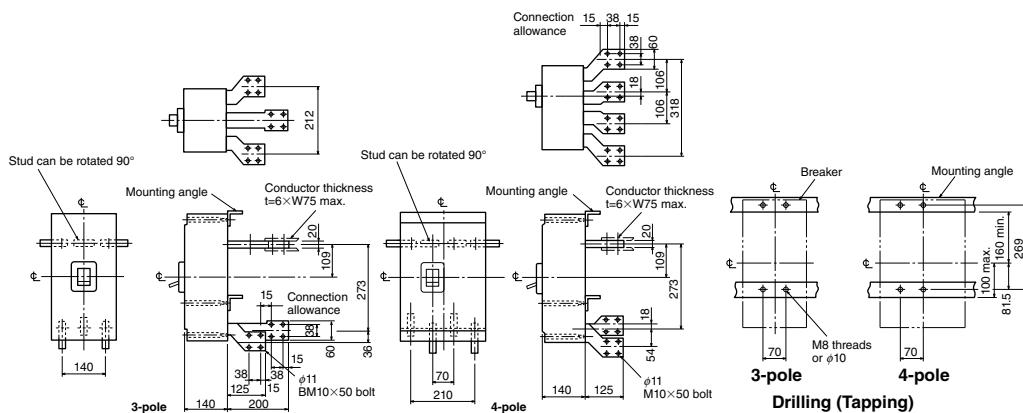

7 Characteristics and Dimensions 1 Molded Case Circuit Breakers

NF1600-SDW




NF1600-SDW


Model			NF1600-SDW
Rated current In (Amp.)			1600
Reference ambient temperature 40°C			
Number of poles			2
Rated insulation voltage Ui (V)			690
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) Time constant not large than 10msec	AC	690V	—
		500V	—
		440V	—
		415V	—
		400V	—
		380V	—
		230V	—
	DC	200V	—
	250V (*1)	40/20	
Standard Attached parts			Front connection
			Rear connection
			Terminal screw: M10 bolt×65 (2-pole: 16pcs, 3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8×40 (4pcs) Insulating barrier: (2P: 1pc, 3P: 2pcs, 4P: 3pcs) Auxiliary handle: (1pc)
			Terminal screw: M10 bolt×50 (2-pole: 16pcs, 3-pole: 24pcs, 4-pole: 32pcs) Mounting screw: M8×40 (4pcs) Auxiliary handle: (1pc)

Note *1 The standard specifications for NF1600-SDW are 2-pole.
For DC special voltage use, we also have 3-pole and 4-pole models.

Operating Characteristics

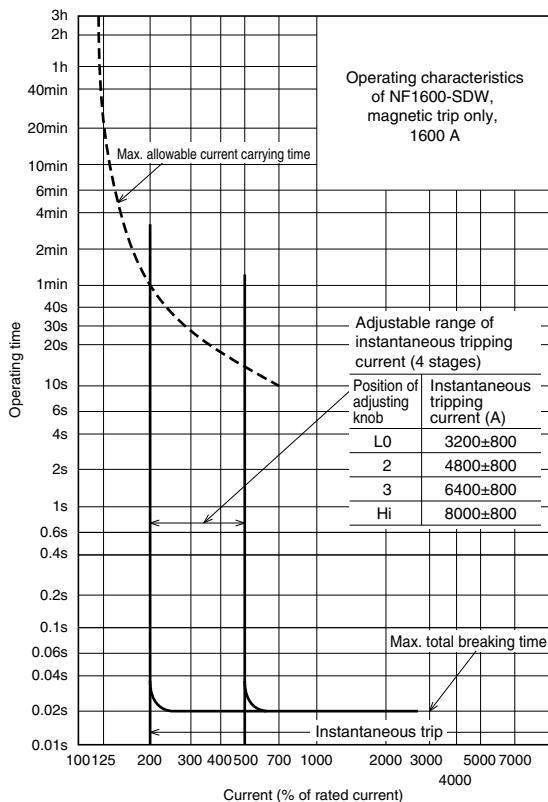

Internal Accessories

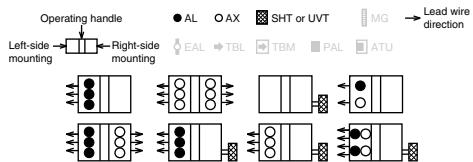

External Accessories

(An order for ☆ should be placed at the same time as an order of circuit breaker main body.)



Accessories			Type name	Reference page	Accessories			Type name	Reference page
Operating handle	F	2, 3P	F10SW	123	Auxiliary handle	HT		HT-10SW	135
		4P	F10SW4P		Handle lock device	HL		HL (☆)	134
Mechanical interlock	MI	2, 3P	MI-16SW3	136	Electrical operation device		NFM	2, 3P	(*1)
		4P	MI-16SW4				4P		

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Outline Drawing

Front connection

Same dimensions as NF1600-SEW.

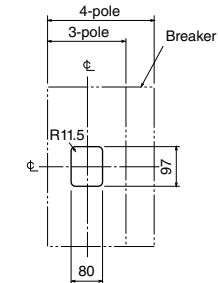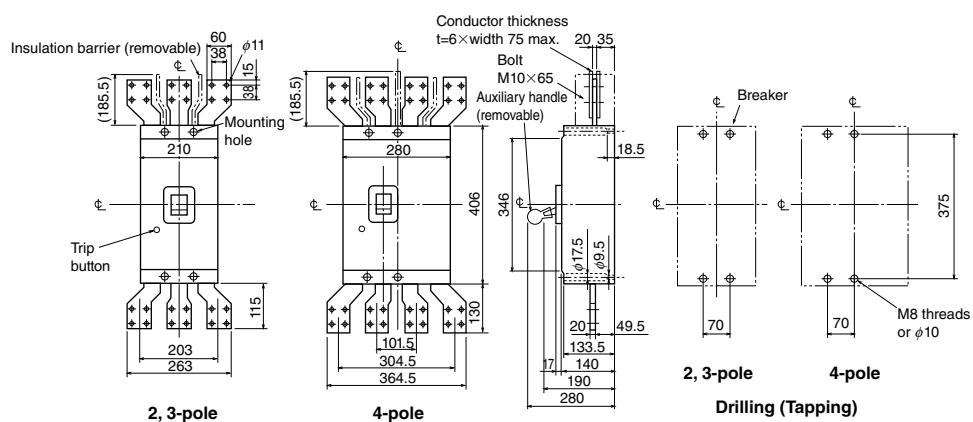


1.0mm clearance on each side of the handle frame

Front-panel cutout

Rear connection

Differing in external dimensions from NF1600-SEW.

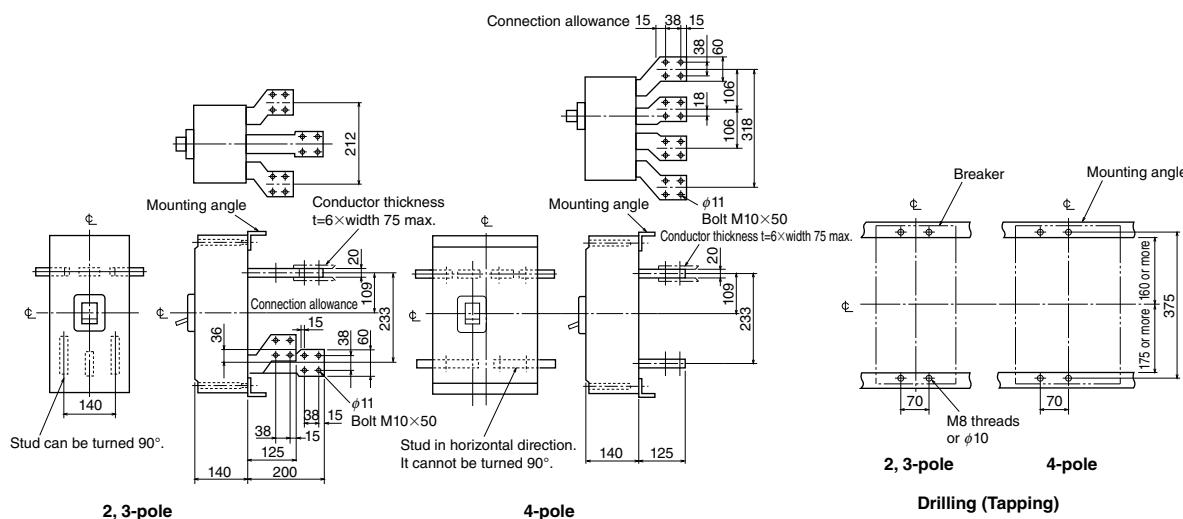

Remarks: 1. Standard specification of NF1600-SDW is 2-pole model. 3-pole and 4-pole models are available for DC special voltage.
2. 2-pole models are 3-pole models with the central pole removed.




NV32-SV
NV63-CV
NV63-SV
NV63-HV




NV63-SV

Note *1 Attached to NV63-SV and NV63-HV.


Operating Characteristics

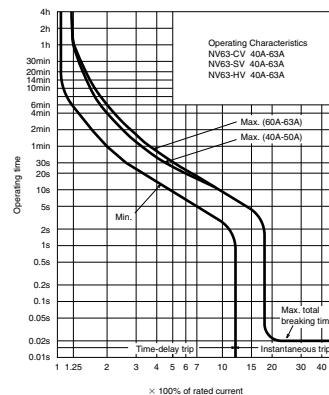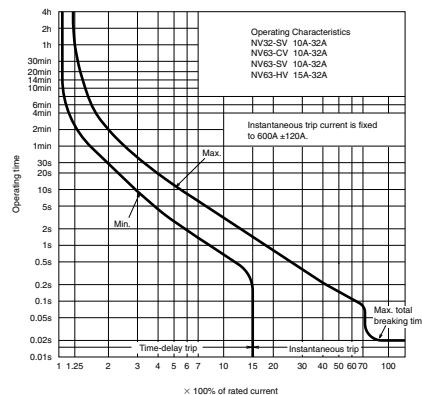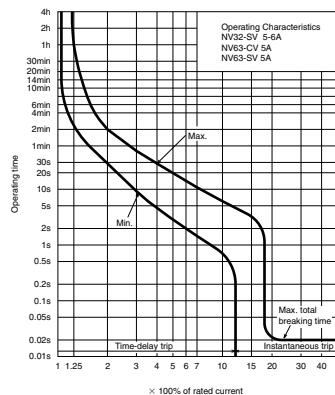

Earth leakage Tripping Characteristics

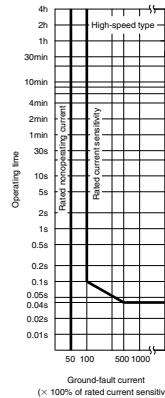


Internal Accessories

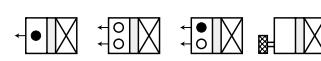


The diagram illustrates the lead-wire assembly. It features a central rectangular component with two horizontal slots. An arrow labeled "Operating handle" points down to the top slot. To the left is a bracket labeled "Left-side mounting" and to the right is a bracket labeled "Right-side mounting". A small arrow points from the right bracket towards the central component. At the bottom center, there is a vertical rectangular frame with a small circular hole containing a lead-wire, indicated by an arrow labeled "Lead-wire".

Temperature Compensation Curve

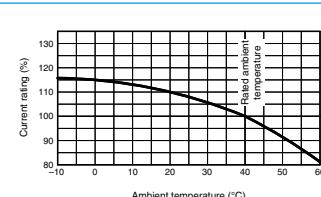

Internal Wiring Diagram

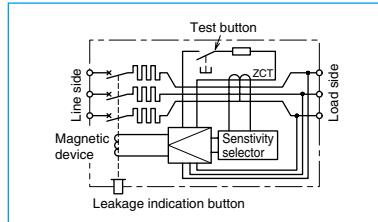



External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page			
Operating handle	F	F-05SV	123	Mechanical interlock	MI	MI-05SV3	136			
	V	V-05SV	125	Terminal cover	Small	TC-S	TCS-05SV3			
Lock cover	LC	LC-05SV	134		Large	TC-L	TCL-05SV3			
Handle lock device	HL (*1)	HLF-05SV					TCL-05SV3L			
		HLN-05SV			Skeleton	TTC	TTC-05SV3			
	HL-S	HLS-05SV			Rear	BTC	BTC-05SV3			
Note *1 HLF types are used for OFF lock and HLN types for ON lock.					Plug-in	PTC	PTC-05SV3			
					IEC 35mm rail mounting adapters		DIN-05SV			
							143			




Note: *1 HLF types are used for OFF lock and HLN types for ON lock.

Outline Drawing

Front connection

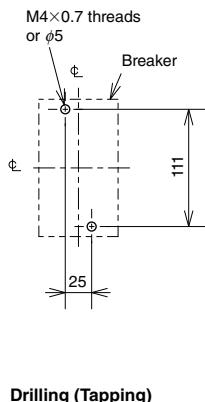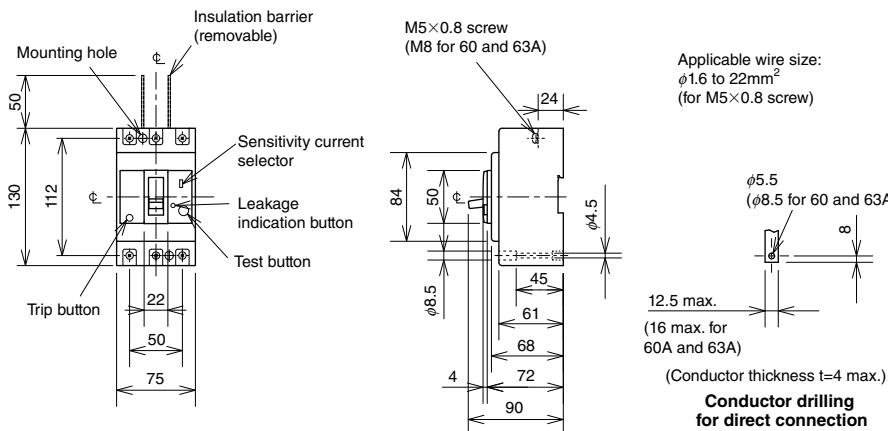


Rear connection

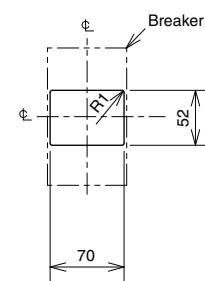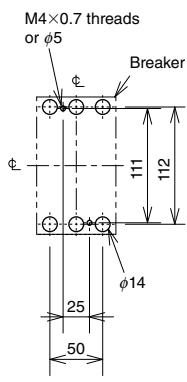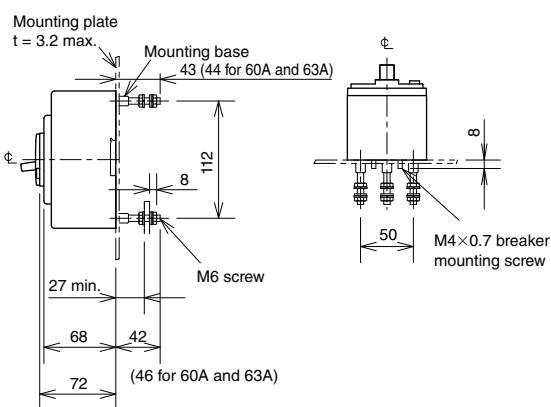


Front-panel cutout


Plug-in

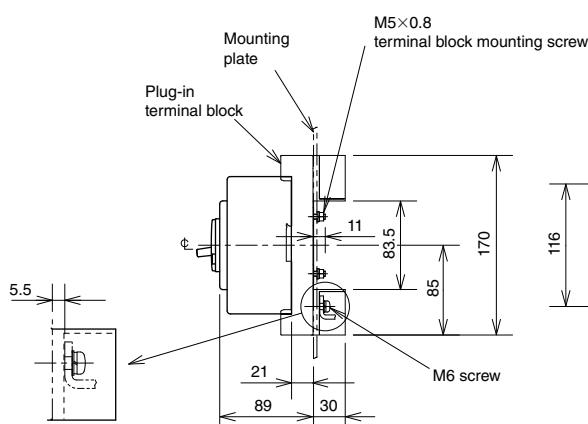

Details of terminal

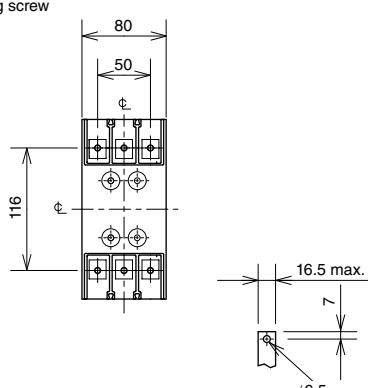

Conductor drilling

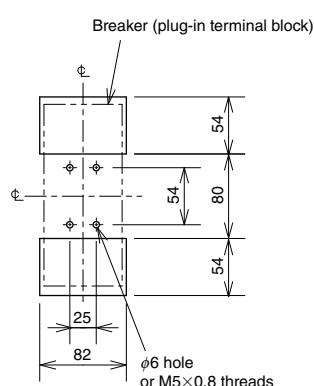

Drilling (Tapping)

Remark: 1. 2-pole models are 3-pole models with the central pole removed.

NV125-CV
NV125-SV
NV125-HV






NV125-SV

Note *1 Attached to NV125-SV and NV125-HV


*2 In case of time delay type, rated current is produced with 20amp. or more

*3 Rated operational voltage of time-delay type is for 200-440V


Operating Characteristics

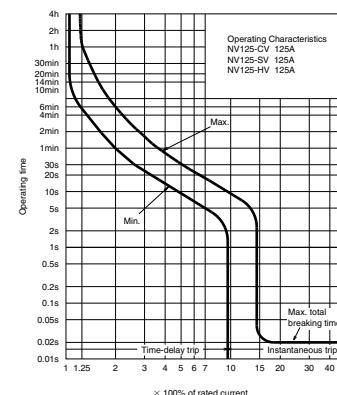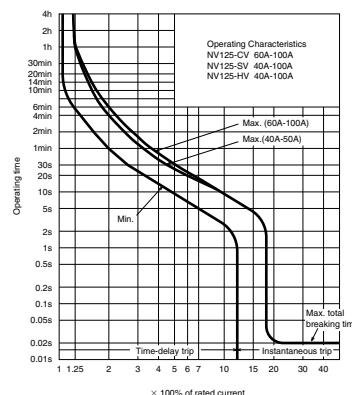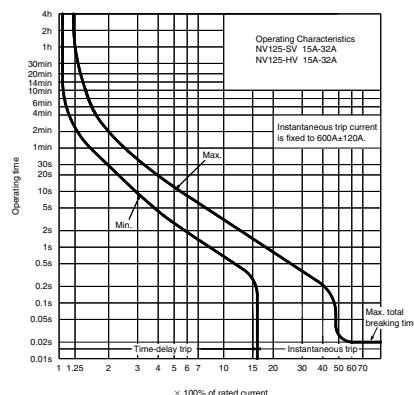


Earth leakage Tripping Characteristics

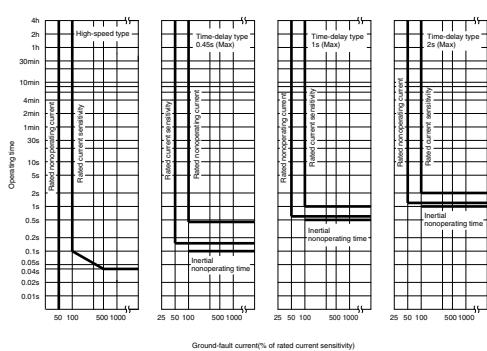


Internal Accessories

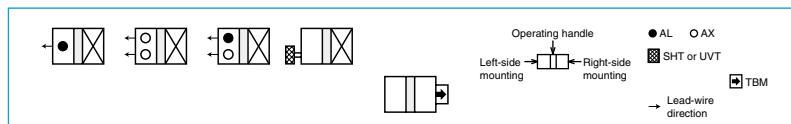

Temperature Compensation Curve

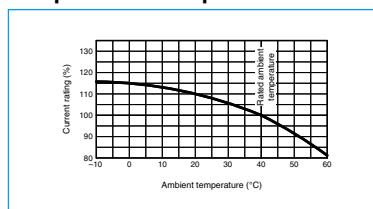

Internal Wiring Diagram

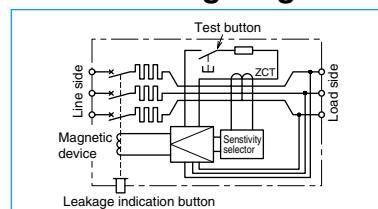

External Accessories


Accessories		Type name	Reference page	Accessories				Type name	Reference page	
Operating handle	F	F-1SV	123	Mechanical interlock	MI	3P	MI-05SV3	136		
	V	V-1SV	125			4P	MI-1SV4			
Lock cover	LC	LC-05SV		Terminal cover	Small	3P	TCS-1SV3			
Handle lock device	HL (*1)	HLF-05SV	134			4P	TCS-1SV4			
		HLN-05SV	Large		3P	TCL-1SV3				
		HL-S			4P	TCL-1SV4				
Notes *1 HLF types are used for OFF lock and HLN types for ON lock. *2 Specify the working voltage. Refer to the reference page for type name.					Skeleton	3P	TTC-1SV3	128		
						4P	TTC-1SV4			
					Rear	3P	BTC-1SV3			
						4P	BTC-1SV4			
					Plug-in	3P	PTC-1SV3			
						4P	PTC-1SV4			
Electrical operation device					(*2)				140	

Nano #1-HLF1 M-CEEL-LUHNL-6-CNL


Notes *1 HLF types are used for OFF lock and HLN types for ON lock.
*2 Specify the working voltage. Refer to the reference page for type name.

Outline Drawing


Front connection

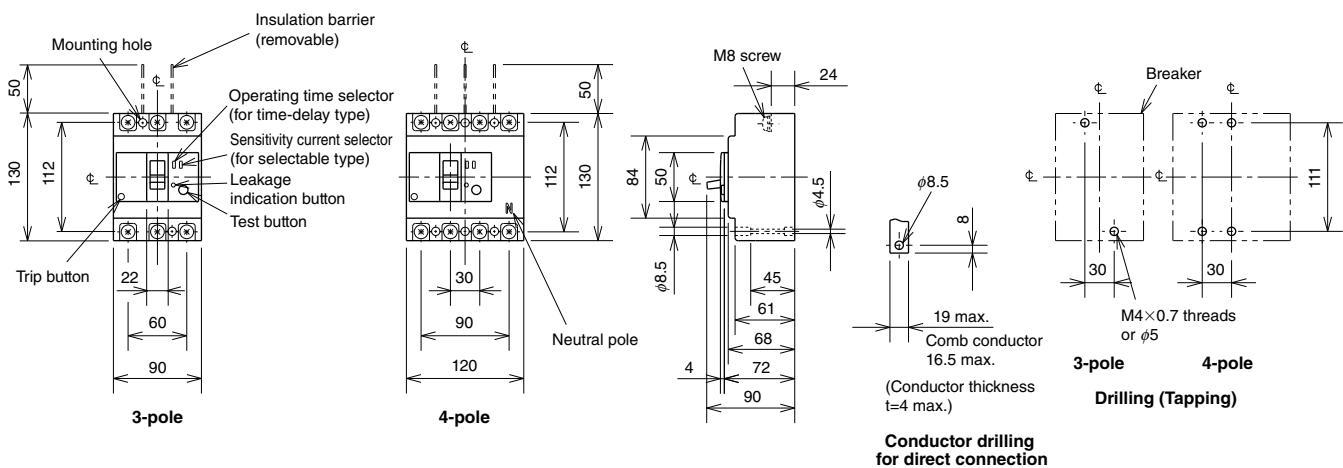

Rear connection

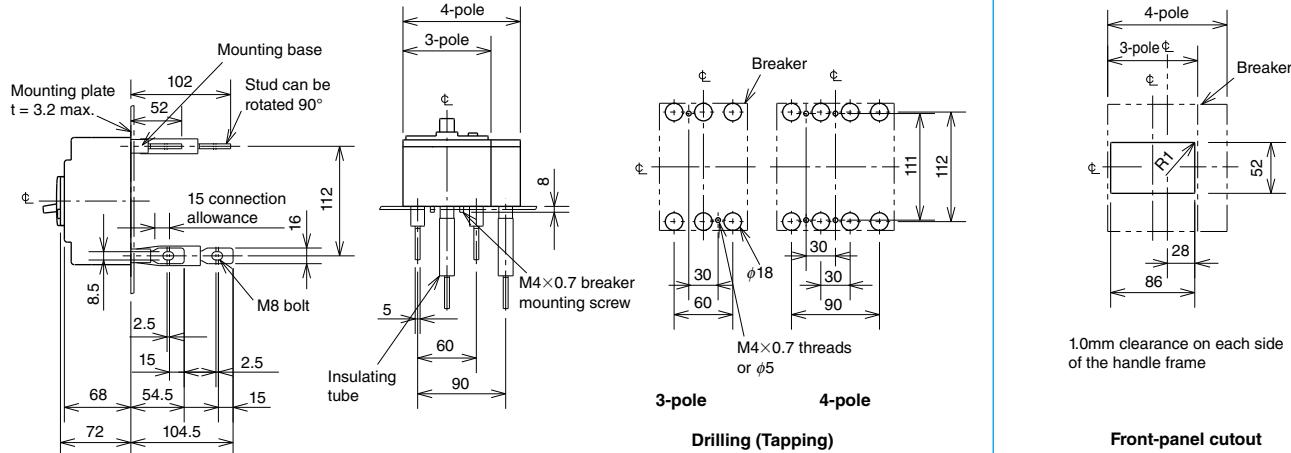

Plug-in

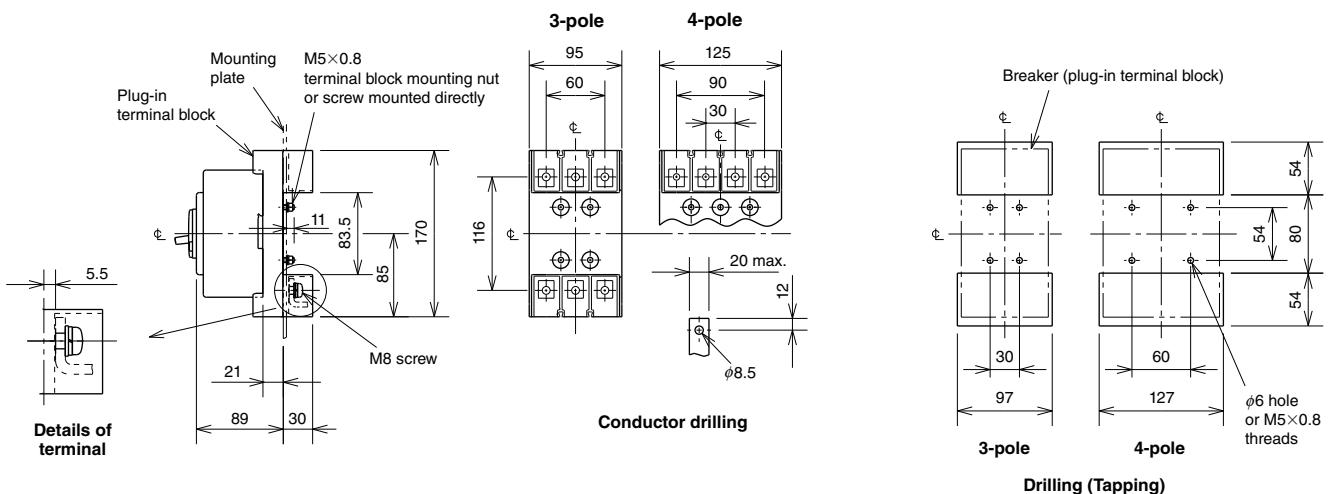

Remark: 1. Only 3-pole models are available for NV125-CV.

NV250-CV NV250-SV NV250-HV




NV250-CV


Model	NV250-CV			NV250-SV		NV250-HV	
Rated current In (A) Reference ambient temperature 40°C	125 150 175 200 225 250			125 150 175 200 225 250		125 150 175 200 225 250	
Number of poles	3	3	4	3	4	3	4
Phase line	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ4W	3φ4W
Rated operational voltage Ue (V) (*1)	AC	100-440	100-440	200-440	100-440	200-440	200-440
High-speed type	Rated current sensitivity (mA)	30 100/200/500 selectable	(30) 100/200/500 selectable	(30) 100/200/500 selectable	30 100/200/500 selectable	30 100/200/500 selectable	30 100/200/500 selectable
	Max operating time (s) at $I \Delta n$	0.1	0.1	0.1	0.1	0.1	0.1
	at $5I \Delta n$	0.04	0.04	0.04	0.04	0.04	0.04
Time-delay type	Rated current sensitivity (mA)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)	(100/200/500 selectable)
	Max operating time (s)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)
	Inertial operating time (s) (or more)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)	(0.1/0.5/1.0)
Earth-leakage indication system	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)	Mechanical type (button)
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	440V 415V 400V 230V 200V 100V	15/12 25/19 25/19 36/27 36/27 36/27	36/36 36/36 36/36 85/85 85/85 85/85	65/65 70/70 75/75 100/100 100/100 100/100	- -
Standard attached parts (Front connection)	Terminal screw: M8 (Bolt(Hex-socket))x16 (3P: 6pcs, 4P: 8pcs) Mounting screw: M4x0.7x55 (3P: 2pcs, 4P: 4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)						

Note *1 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

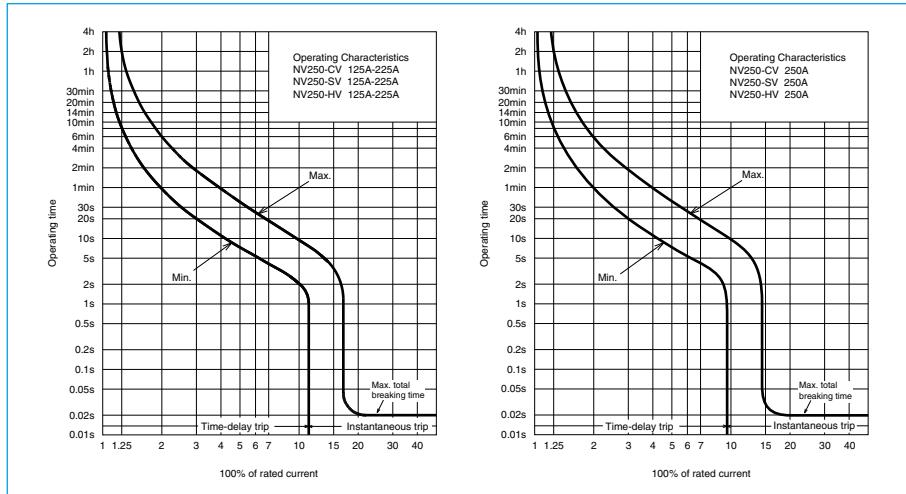


Earth leakage Tripping Characteristics

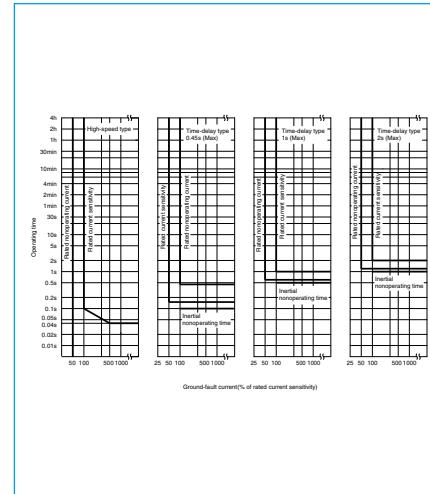


Internal Accessories

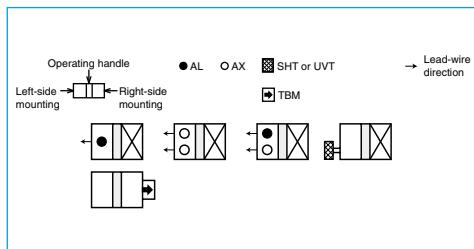

Temperature Compensation Curve

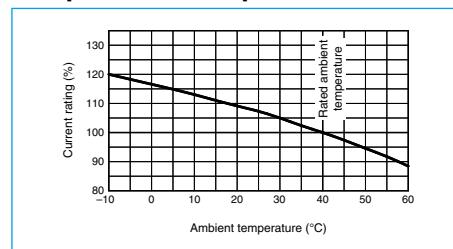

Internal Wiring Diagram

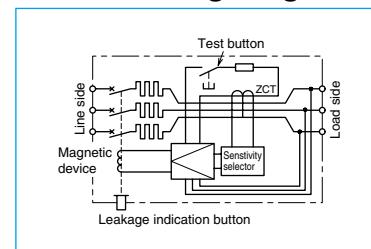


External Accessories



Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-2SV	123	Mechanical interlock	3P MI-05SV3	136
	V V-2SV	125		4P MI-2SV4	
Lock cover	LC LC-05SV		Small	3P TCS-2SV3	
Handle lock device	HL (*1) HLF-05SV			4P TCS-2SV4	
	HLN-05SV	134	Large	3P TCL-2SV3	
	HL-S HLS-2SV			4P TCL-2SV3L	
Notes	(*1) HLF types are used for OFF lock and HLN types for ON lock. (*2) Specify the working voltage. Refer to the reference page for type name.			3P TTL-2SV4	
				4P TTC-2SV3	
				3P TTC-2SV4	
				4P BTC-2SV3	
				3P BTC-2SV4	
				3P PTC-2SV3	128
				4P PTC-2SV4	
			Terminal cover	Electrical operation device	(*2)
					140

Outline Drawing

Front connection


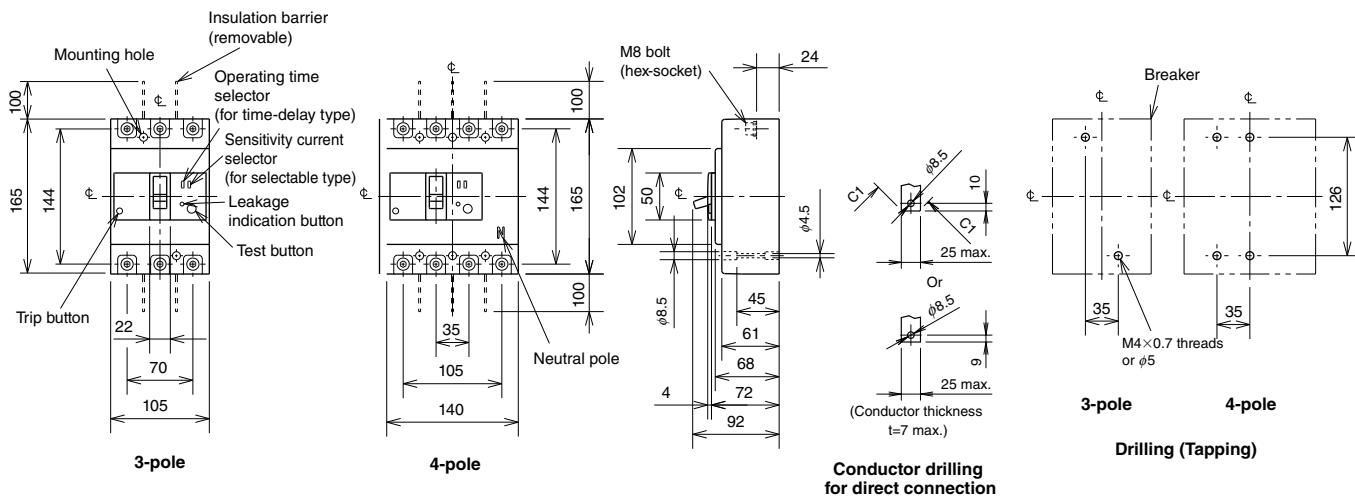


Rear connection

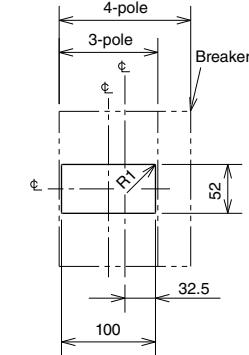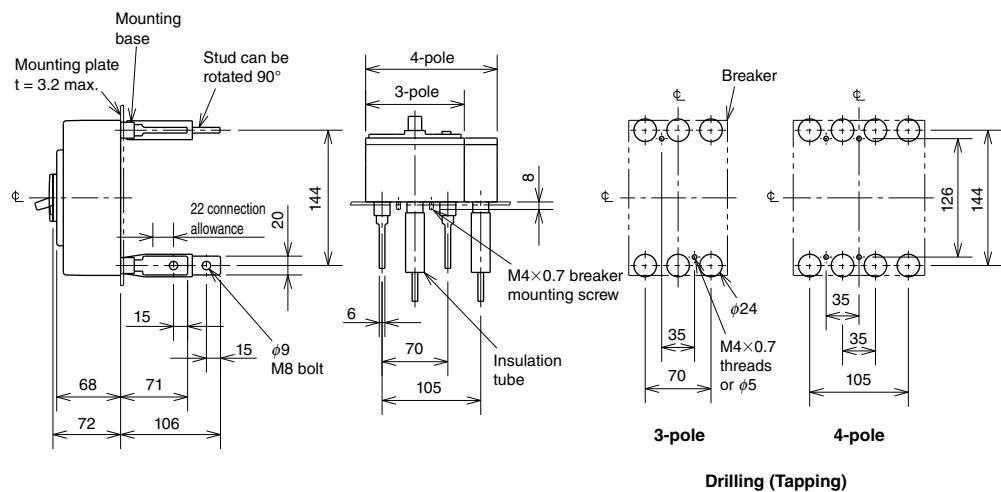

Front-panel cutout

Plug-in

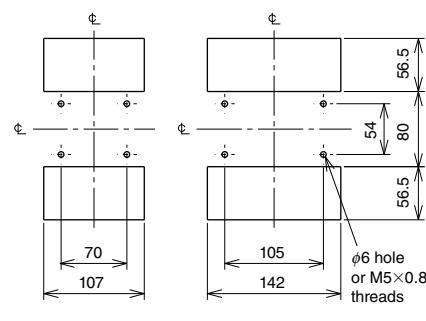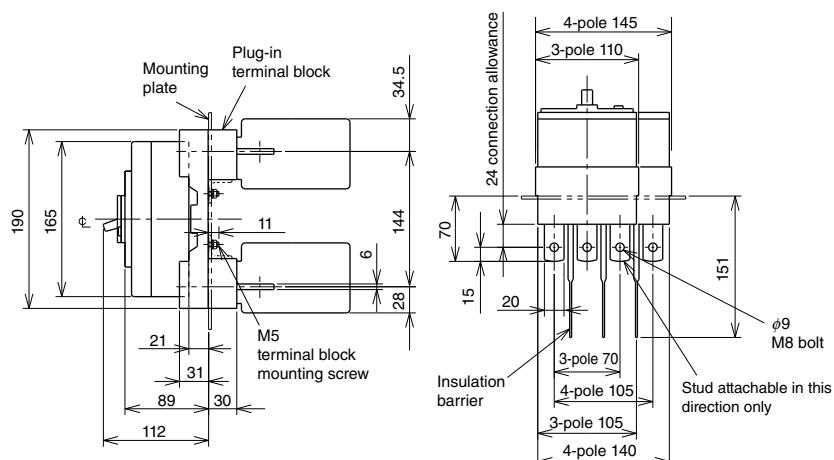

Drilling (Tapping)

Remark: 1. Only 3-pole models are available for the model of NV250-CV.

NV125-SEV
NV125-HEV
NV250-SEV
NV250-HEV





NV250-SEV


Model			NV125-SEV		NV125-HEV		NV250-SEV	NV250-HEV
Rated current In (A) Reference ambient temperature 40°C			125		125		250	250
Current setting Ir (A)			Adjustable 63-125 (6.25A step)		Adjustable 63-125 (6.25A step)		Adjustable 125-250 (12.5A step)	Adjustable 125-250 (12.5A step)
Number of poles			3	4	3	4	3	3
Phase line			3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ4W	3φ3W, 1φ3W, 1φ2W	3φ3W, 1φ3W, 1φ2W
Rated operational voltage Ue (V) (*1)		AC	100-440		100-440		100-440	100-440
High-speed type	Rated current sensitivity (mA)		(30) 100/200/500 selectable		(30) 100/200/500 selectable		(30) 100/200/500 selectable	(30) 100/200/500 selectable
	Max operating time (s)	at 1Δn	0.1		0.1		0.1	0.1
		at 5Δn	0.04		0.04		0.04	0.04
Time-delay type	Rated current sensitivity (mA)		(100/200/500 selectable)		(100/200/500 selectable)		(100/200/500 selectable)	(100/200/500 selectable)
	Max operating time (s)		(0.45/1.0/2.0 selectable)		(0.45/1.0/2.0 selectable)		(0.45/1.0/2.0 selectable)	(0.45/1.0/2.0 selectable)
	Inertial operating time (s) (or more)		(0.1/0.5/1.0)		(0.1/0.5/1.0)		(0.1/0.5/1.0)	(0.1/0.5/1.0)
Earth-leakage indication system			Mechanical type (button)		Mechanical type (button)		Mechanical type (button)	Mechanical type (button)
Rated short-circuit breaking capacity (kA)	IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	440V	36/36		65/65	36/36	65/65
			415V	36/36		70/70	36/36	70/70
			400V	36/36		75/75	36/36	75/75
			230V	85/85		100/100	85/85	100/100
			200V	85/85		100/100	85/85	100/100
			100V	85/85		100/100	85/85	100/100
Standard attached parts (Front connection)			Terminal screw: M8 (Bolt(Hex-sOCKET))×16 (3P: 6pcs, 4P: 8pcs) Mounting screw: M4×0.7×55 (3P: 2pcs, 4P: 4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)					

Note *1 Rated operational voltage of time-delay type is for 200-440V


Operating Characteristics

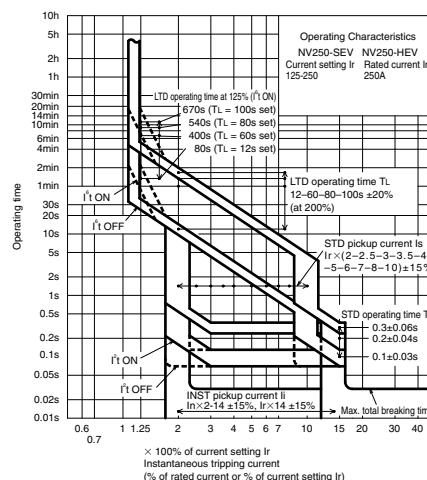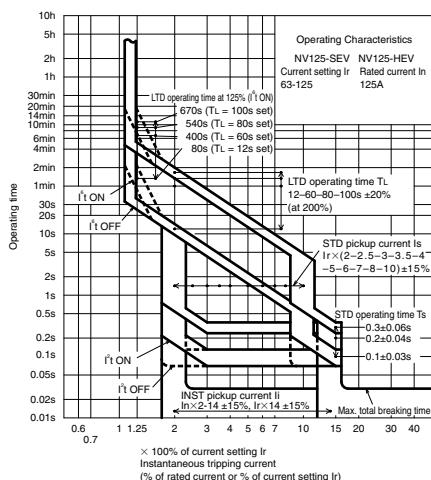


Earth leakage Tripping Characteristics

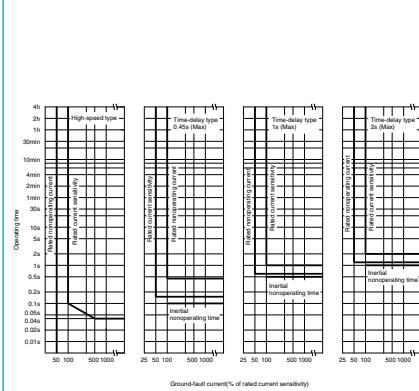


Internal Accessories

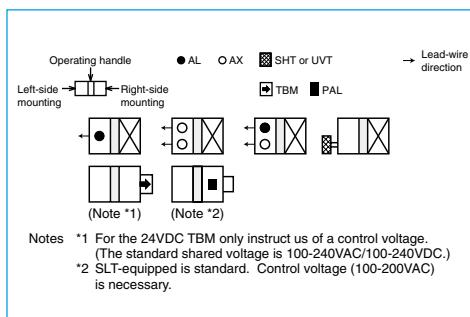

Current Reducing Curve

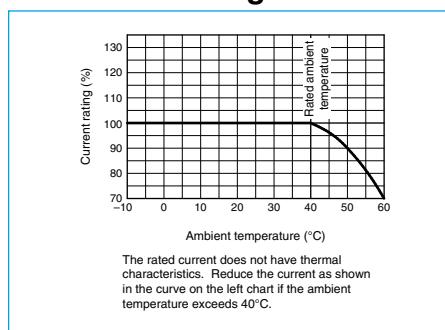

Internal Wiring Diagram

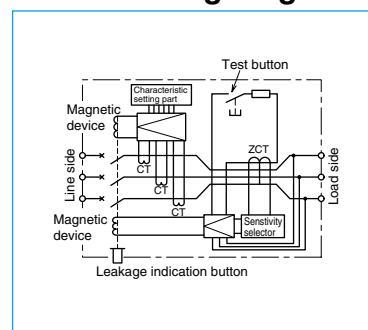


External Accessories



Accessories		Type name	Reference page	Accessories			Type name		Reference page			
Operating handle	F	F-2SV	123	Mechanical interlock	MI	3P	MI-05SV3		136			
	V	V-2SV	125			4P	MI-2SV4					
Lock cover	LC	LC-05SV	134	Terminal cover (*3)	Small	3P	TCS-2SV3		128			
Handle lock device	HL (*1)	HLF-05SV				4P	TCS-2SV4					
		HLN-05SV				3P	TCL-2SV3					
	HL-S	HLS-2SV				4P	TCL-2SV3L					
Notes *1 HLF types are used for OFF lock and HLN types for ON lock. *2 Specify the working voltage. Refer to the reference page for type name. *3 For NV125-HEV and NV250-HEV with PAL, specify the model name with MP at the end.												
					Skeleton	TTC	3P	TTC-2SV3				
							4P	TTC-2SV4				
					Rear	BTC	3P	BTC-2SV3				
							4P	BTC-2SV4				
					Plug-in	PTC	3P	PTC-2SV3				
							4P	PTC-2SV4				
				Electrical operation device			(*2)		140			

Outline Drawing


Front connection

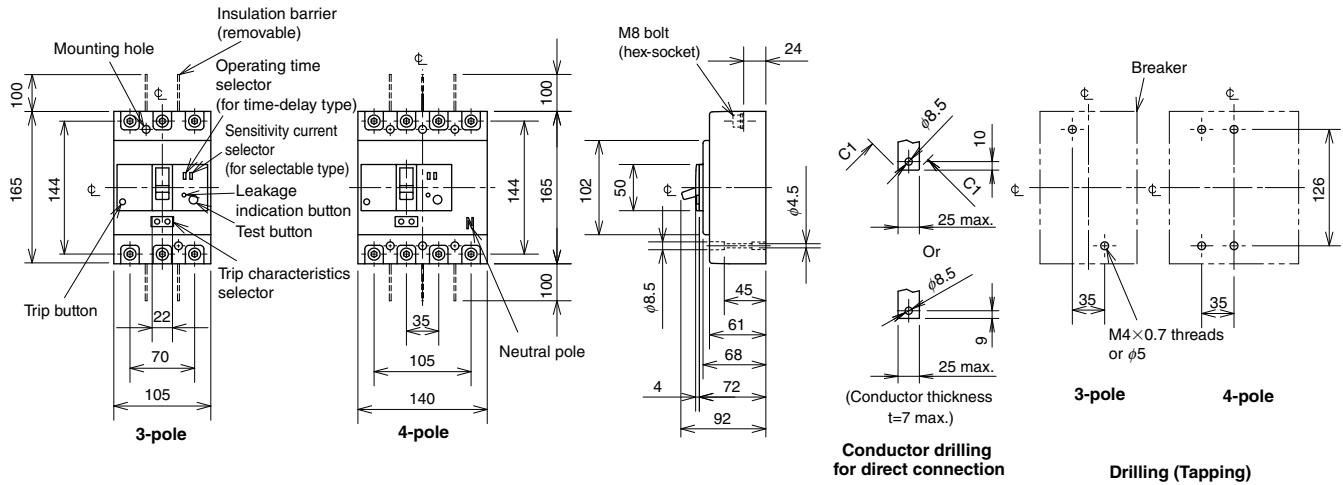

Rear connection

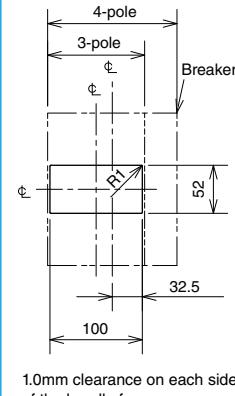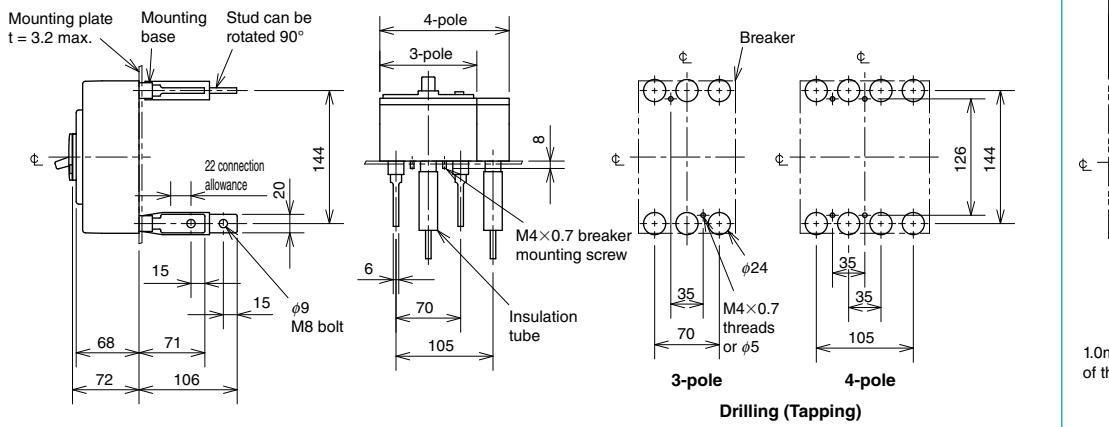

Plug-in

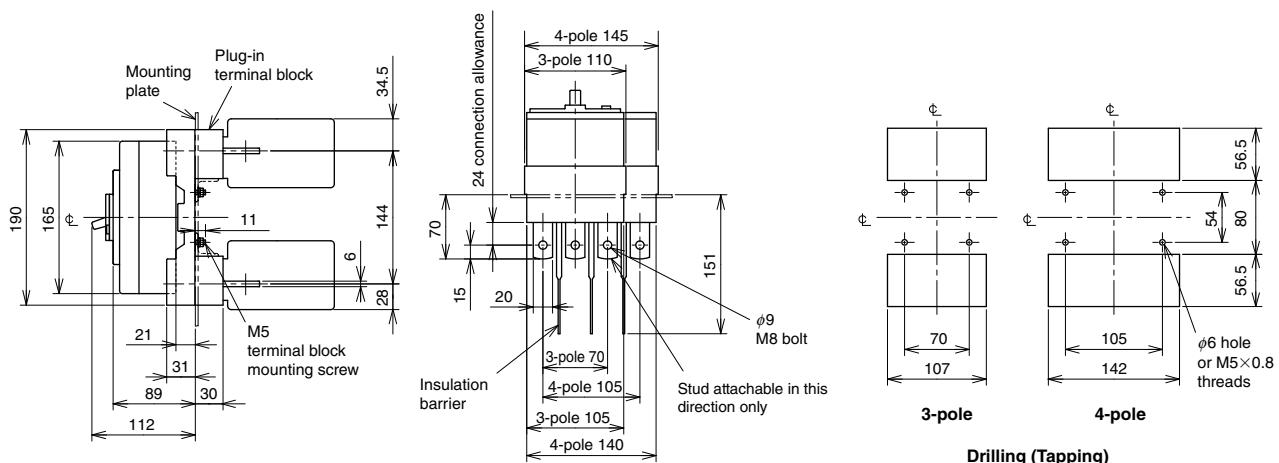

Remark: 1. Only 3-pole models are available for the model of NV250-SEV and NV250-HEV.

NV400-CW NV400-SW




NV400-SW


Model	NV400-CW	NV400-SW
Rated current In (A) Reference ambient temperature 40°C	250 300 350 400	
Number of poles	3	
Phase line	3φ3W, 1φ3W, 1φ2W	
Rated operational voltage Ue (V) (*1)	AC	100-440
High-speed type	Rated current sensitivity (mA)	(30) 100 · 200 · 500 Selectable
	at 1Δn	0.1
	at 51Δn	0.04
Time-delay type	Rated current sensitivity (mA)	(100 · 200 · 500 Selectable)
	Max operating time (s)	(0.45 · 1.0 · 2.0 Selectable)
	Inertial operating time (s) (or more)	(0.1 · 0.5 · 1.0)
Earth leakage protection characteristic	Type AC	
Earth-leakage indication system	Mechanical type (Button)	
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) EN 60947-2	AC	440V 25/13 42/42 415V 36/18 45/45 400V 36/18 45/45 230V 50/25 85/85 200V 50/25 85/85 100V 50/25 85/85
Standard attached parts (Front connection)		Terminal screw: M12 bolt×35 (3-pole: 6pcs) Mounting screw: M6×60 (4pcs) Insulation barrier: (4pcs)

Note *1 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

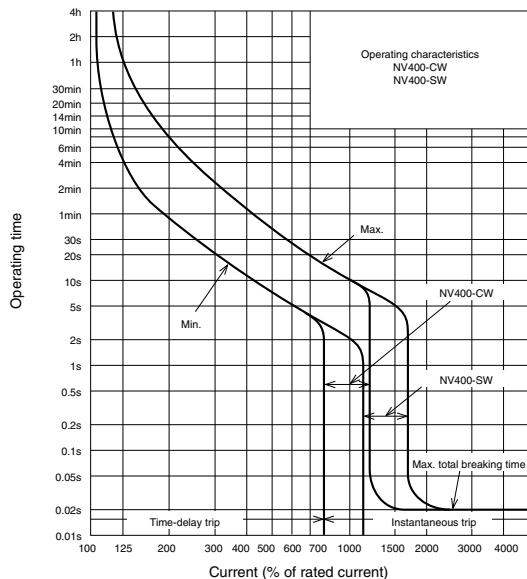

Earth Leakage Tripping Characteristics

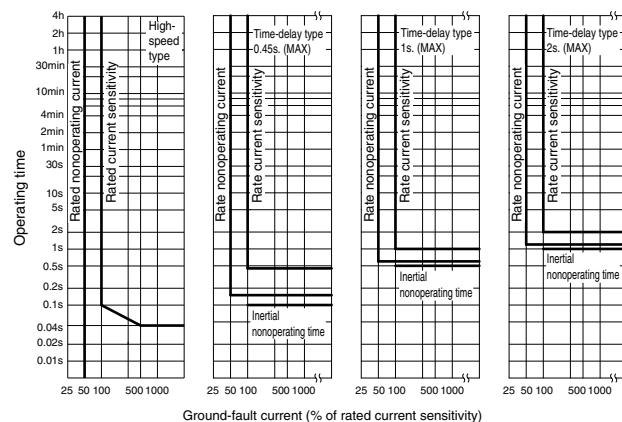

Internal Accessories

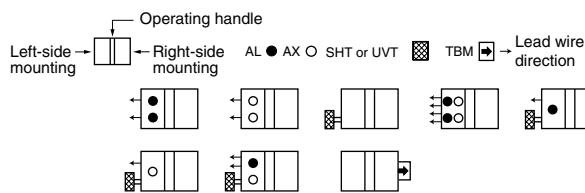


Remark: 1. Refer to page 111.

External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-4S	123	Auxiliary handle	HT HT-4CW, HT-4SW	135
	V V-4S	125	Large	TCL-TCL-4SW3	
Mechanical interlock	MI MI-4SW3	136	Skeleton	TTC TTC-4SW3	128
			Rear	BTC BTC-4SW3	
			Handle lock device	HL HL-4CW, HL-4SW	134
				HL-S HLS-4SW	
			Electrical operation device	(*1)	140

Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Temperature Compensation Curve


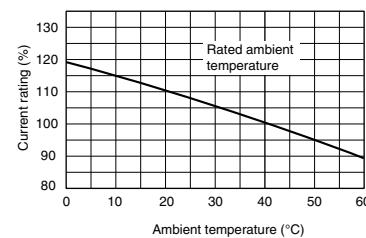


Internal Wiring Diagram

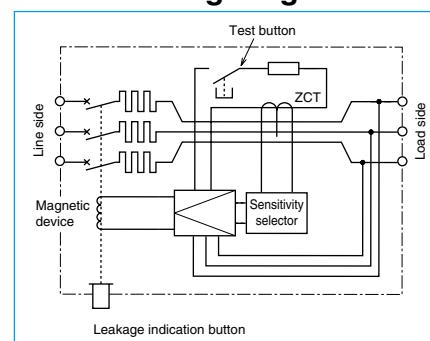


Outline Drawing

Front connection

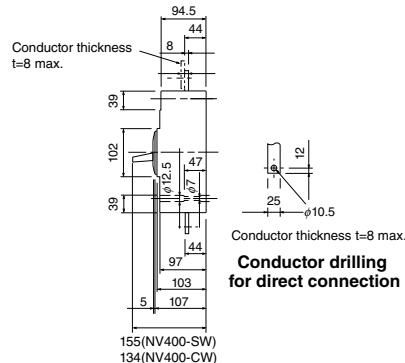
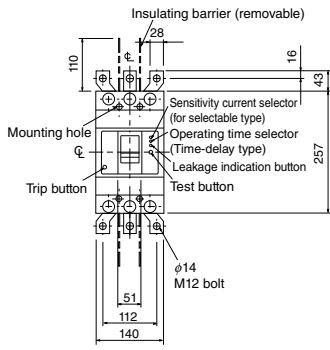


Drilling (Tapping)

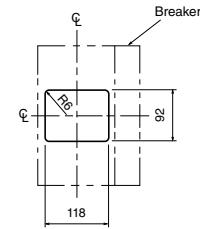

Front-panel cutout


Rear connection

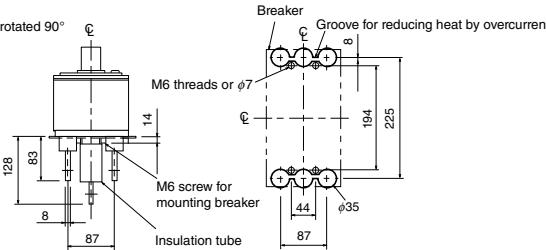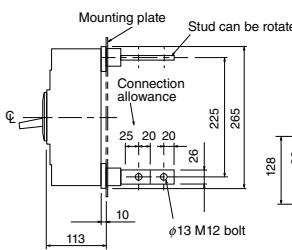

Drilling (Tapping)

Boring dimensions for rear connection type barriers (3-pole)




Line side

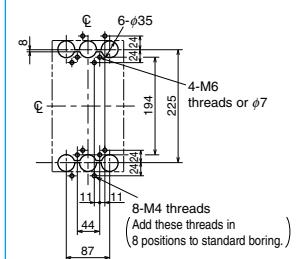

Load side

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

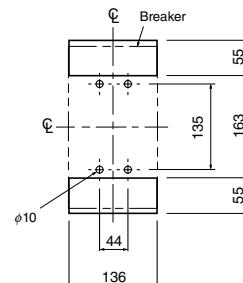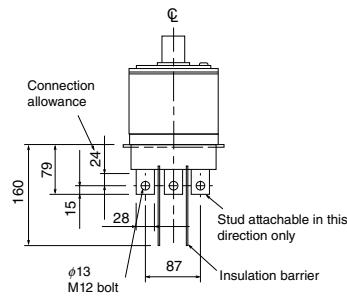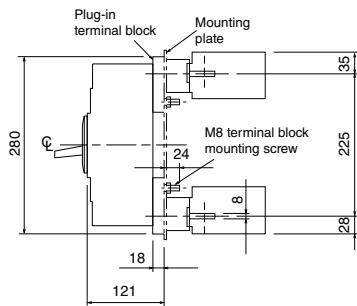

Drilling (Tapping)

NV400-SEW NV400-HEW




NV400-SEW


Model	NV400-SEW		NV400-HEW	
Rated current In (A)	Adjustable		200 225 250 300 350 400	
Reference ambient temperature 40°C				
Number of poles	3 4 3 4			
Phase line	3P : 3φ3W, 1φ3W, 1φ2W 4P : 3φ4W			
Rated operational voltage Ue (V) (*1)	AC		100-440	
High-speed type	Rated current sensitivity (mA)		(30) 100 - 200 · 500 Selectable	
	at IΔn		0.1	
	at 5IΔn		0.04	
Time-delay type	Rated current sensitivity (mA)		(100 - 200 · 500 Selectable)	
	Max operating time (s)		(0.45 - 1.0 - 2.0 Selectable)	
	Inertial operating time (s) (or more)		(0.1 - 0.5 - 1.0)	
Earth leakage protection characteristic	Type AC			
Earth-leakage indication system	Mechanical type (Button)			
	AC		440V	42/42
			415V	50/50
			400V	50/50
			230V	85/85
			200V	85/85
			100V	85/85
Standard attached parts (Front connection)	Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)			

Note *1 Rated operational voltage of time-delay type is for 200-440V.


Operating Characteristics

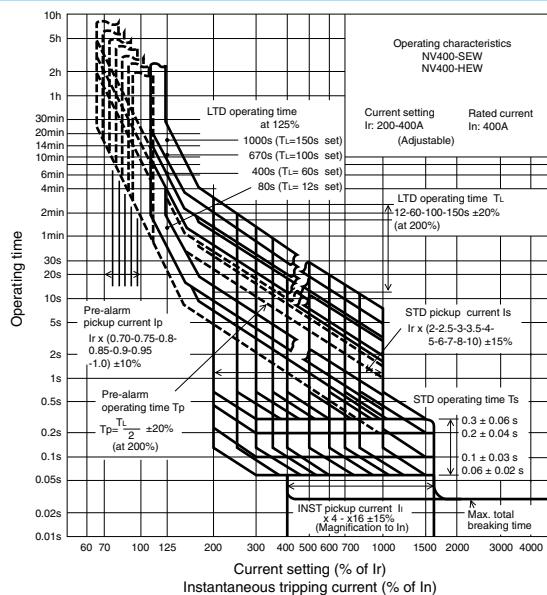

Earth Leakage Tripping Characteristics

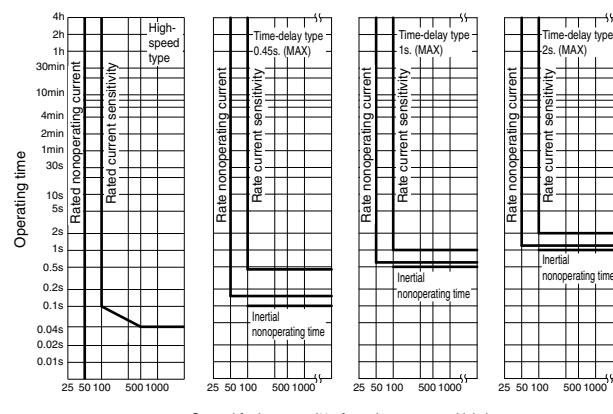

Internal Accessories

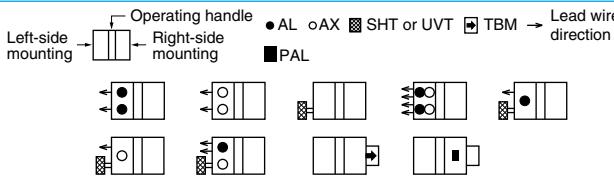

Remarks: 1. Instead of TBM, pre-alarm module (PAL) can be attached.
2. Refer to page 111.

External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-4S	123	Auxiliary handle	HT HT-4SW	135
	V V-4S	125			
Mechanical interlock	MI 3P MI-4SW3	136	Terminal cover	TC-L Large 3P TCL-4SW3 (*1) 4P TCL-4SW4 (*1)	
	4P MI-4SW4		Skeleton	3P TTC-4SW3 4P TTC-4SW4	128
Handle lock device	HL HL-4SW	134	Rear	3P BTC-4SW3 (*2) 4P BTC-4SW4	
Electrical operation device	NVM 3P NVM-4SW	(*3)			
	4P	140			

Notes *1 This is for NV400-SEW.

*2 This is for NV400-SEW. For rear terminal cover of NV400-HEW, use PTC-4SW3.


*3 Specify the operation method and voltage. Order in combination with the breaker unit.

Current Reducing Curve

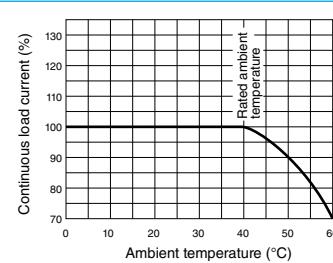



The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40 °C.

Internal Wiring Diagram

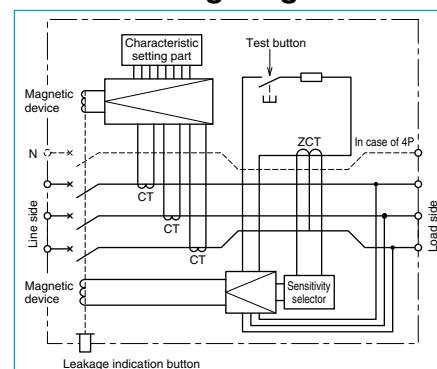


Outline Drawing


Front connection

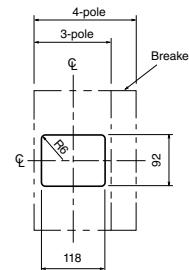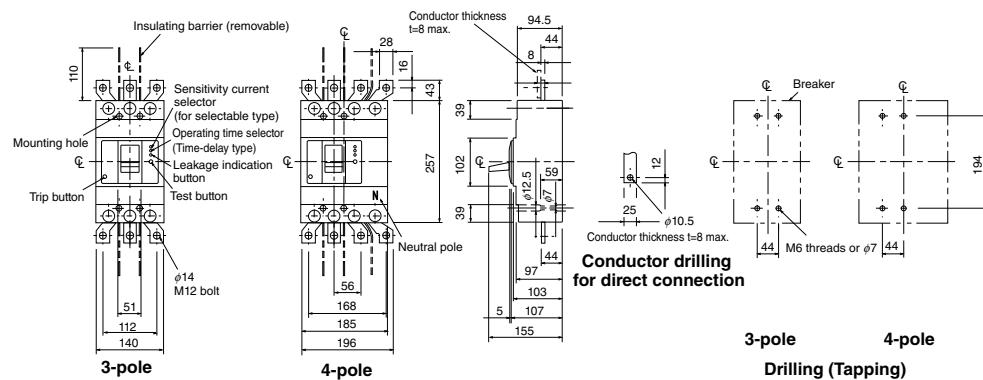

Rear connection


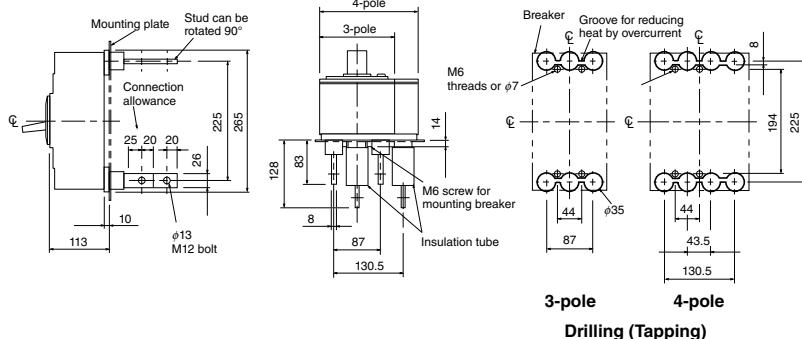


Boring dimensions for rear connection type barriers (3-pole)

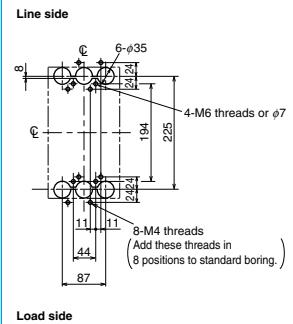

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

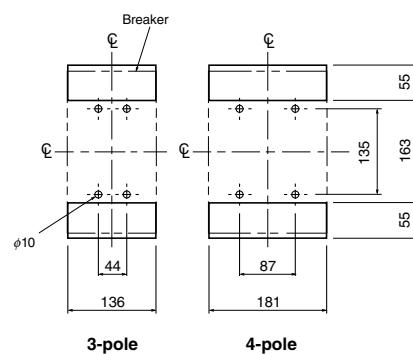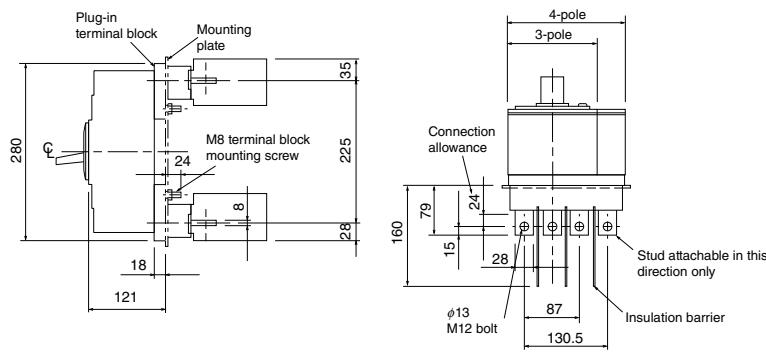


NV630-CW NV630-SW




NV630-SW

Model	NV630-CW	NV630-SW
Rated current In (A)	500 600 (630)	
Reference ambient temperature 40°C		
Number of poles	3	
Phase line	3φ3W, 1φ3W, 1φ2W	
Rated operational voltage Ue (V)	AC 200-440	
High-speed type	Rated current sensitivity (mA) at $I \Delta n$ Max operating time (s) at $5I \Delta n$	— — —
Time-delay type	Rated current sensitivity (mA) Max operating time (s) Inertial operating time (s) (or more)	100 · 200 · 500 Selectable 0.45 · 1.0 · 2.0 Selectable 0.1 · 0.5 · 1.0
Earth leakage protection characteristic	Type AC	
Earth-leakage indication system	Mechanical type (Button)	
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) EN 60947-2	AC 440V 415V 400V 230V 200V 100V	36/18 36/18 36/18 50/25 50/25 —
Standard attached parts (Front connection)		Terminal screw: M12 bolt×35 (3-pole: 6pcs) Mounting screw: M6×72 (4pcs) Insulation barrier: (4pcs)


Operating Characteristics

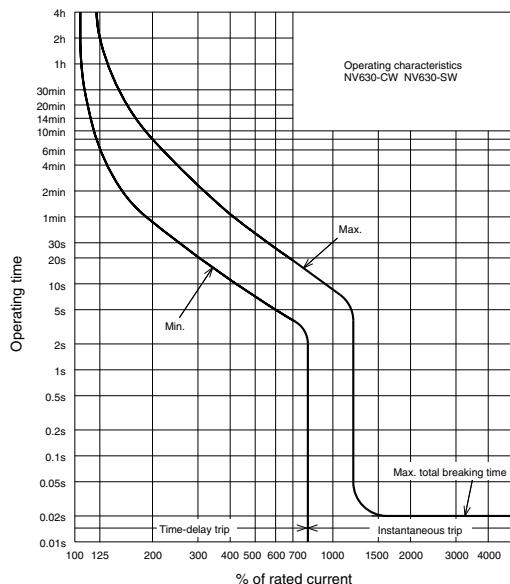

Earth Leakage Tripping Characteristics

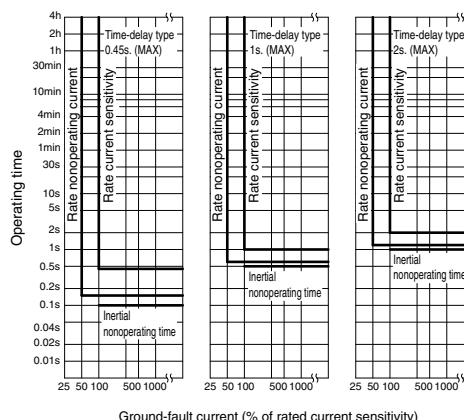


Internal Accessories

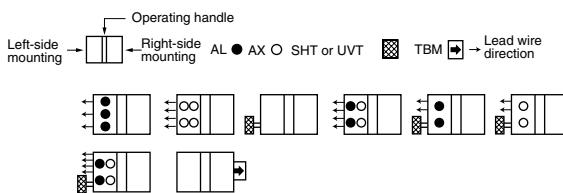

Remark: 1. Refer to page 111.

Temperature Compensation Curve

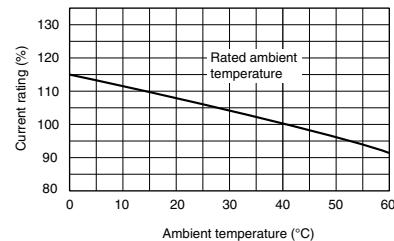


External Accessories

Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-4S	123	Auxiliary handle	HT HT-4SW	135
	V V-4S	125	Large	TCL-TCL-4SW3	
Mechanical interlock	MI MI-4SW3	136	Skeleton	TTC-TTC-4SW3	128
			Rear	BTC-BTC-4SW3	
			Handle lock device	HL HL-4SW	134
				HL-S HLS-4SW	
			Electrical operation device	(*1)	140


Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Internal Wiring Diagram

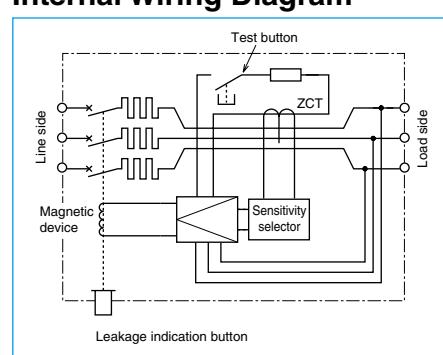


Outline Drawing


Front connection

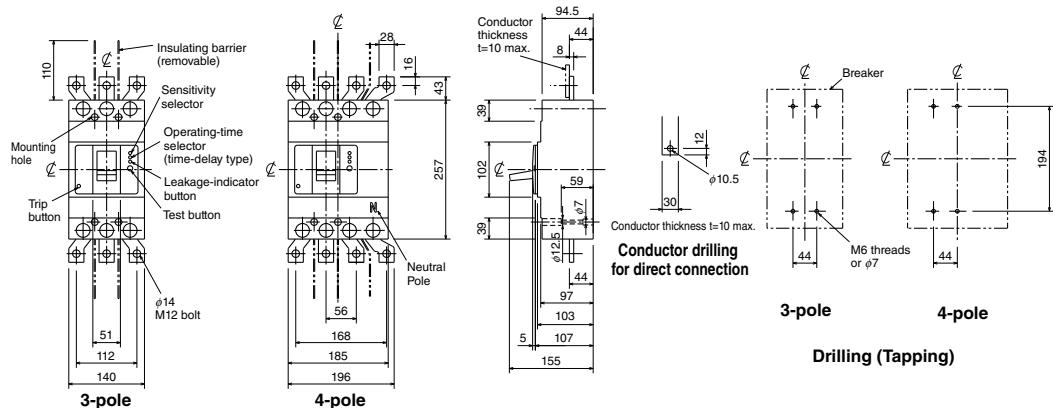

Rear connection

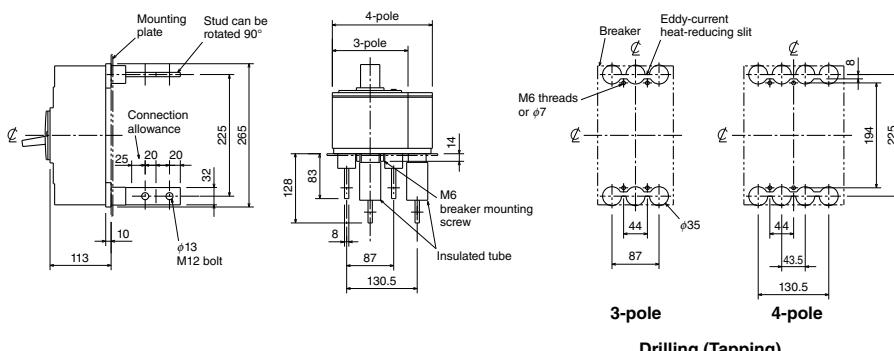


Boring dimensions for rear connection type barriers (3-pole)

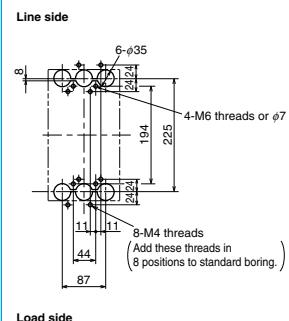

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

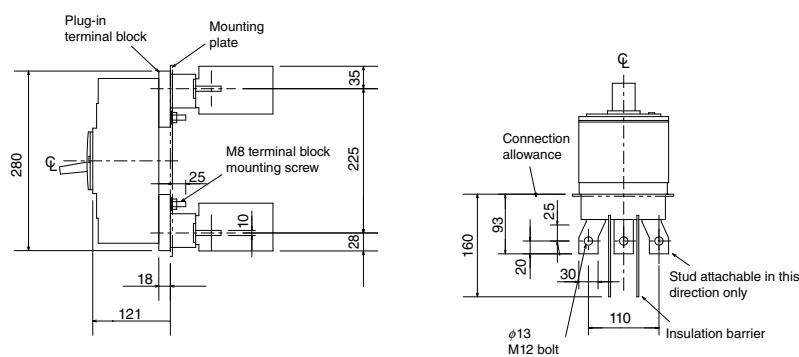

Drilling (Tapping)


NV630-SEW NV630-HEW




NV630-SEW

Model	NV630-SEW	NV630-HEW
Rated current In (A)	Adjustable	
Reference ambient temperature 40°C	300 350 400 500 600 630	
Number of poles	3 4 3	
Phase line	3P : 3φ3W, 1φ3W, 1φ2W 4P : 3φ4W	
Rated operational voltage Ue (V)	AC 200-440	
High-speed type	Rated current sensitivity (mA) at $I \Delta n$ Max operating time (s) at $5I \Delta n$	— — —
Time-delay type	Rated current sensitivity (mA) Max operating time (s) Inertial operating time (s) (or more)	(100 · 200 · 500 Selectable) (0.45 · 1.0 · 2.0 Selectable) (0.1 · 0.5 · 1.0)
Earth leakage protection characteristic	Type AC	
Earth-leakage indication system	Mechanical type (Button)	
Rated short-circuit breaking capacity (kA)	440V 415V 400V 230V 200V 100V	42/42 50/50 50/50 85/85 85/85 —
IEC 60947-2 (lcu/lcs)	AC	65/65 70/70 70/70 100/100 100/100 —
EN 60947-2		
Standard attached parts (Front connection)	Terminal screw: M12 boltx35 (3-pole: 6pcs, 4-pole: 8pcs) Mounting screw: M6x72 (4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)	


Operating Characteristics

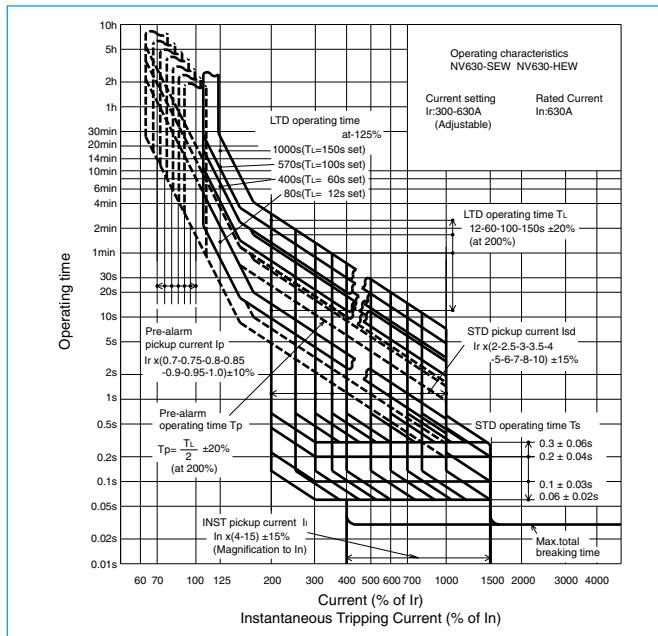


Earth Leakage Tripping Characteristics

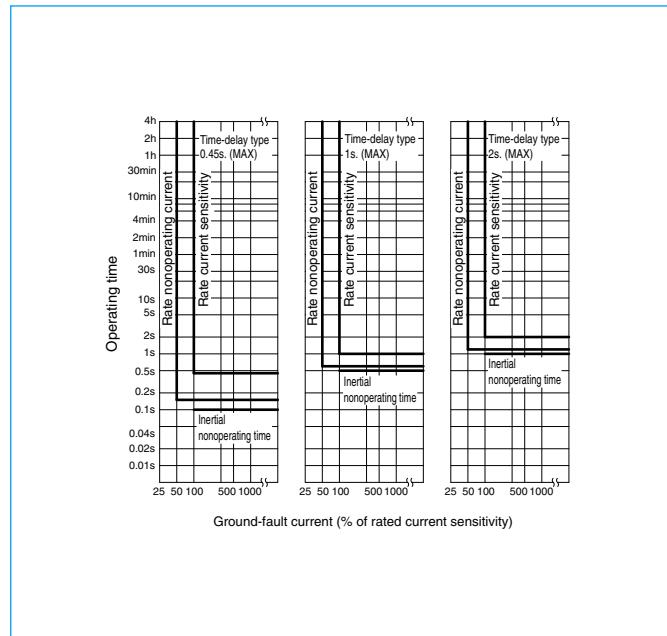

Internal Accessories

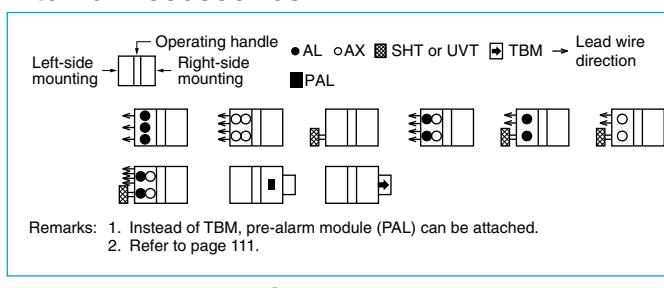

Current Reducing Curve

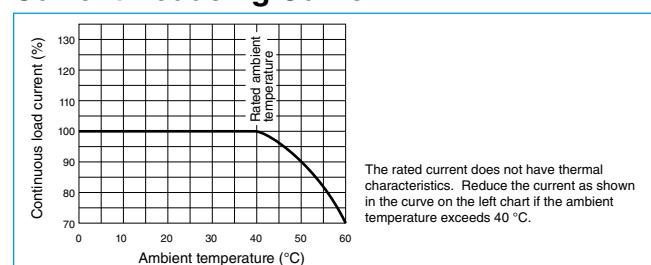

External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-4S	123	Auxiliary handle	HT HT-4SW	135
	V V-4S	125		TCL-L 3P TCL-4SW3 (*1)	
Mechanical interlock	MI 3P MI-4SW3	136		4P TCL-4SW4 (*1)	
	4P MI-4SW4		Skeleton	3P TTC-4SW3	128
				4P TTC-4SW4	
			Rear	3P BTC-4SW3 (*2)	
				4P BTC-4SW4	
			Handle lock device	HL HL-4SW	134
				HL-S HLS-4SW	
			Electrical operation device	NVM 3P 4P (*3)	140

Notes *1 This is for NV630-SEW.

*2 This is for NV630-SEW. For rear terminal cover of NV630-HEW, use PTC-4SW3.


*3 Specify the operation method and voltage. Order in combination with the breaker unit.

Internal Wiring Diagram

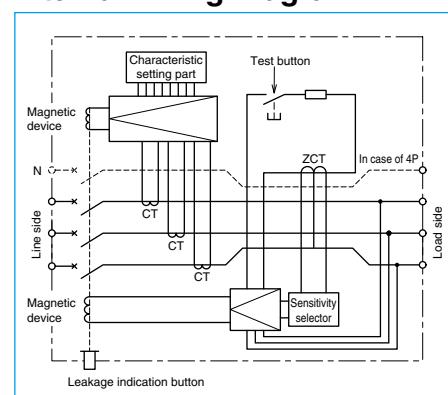


Outline Drawing

Front connection


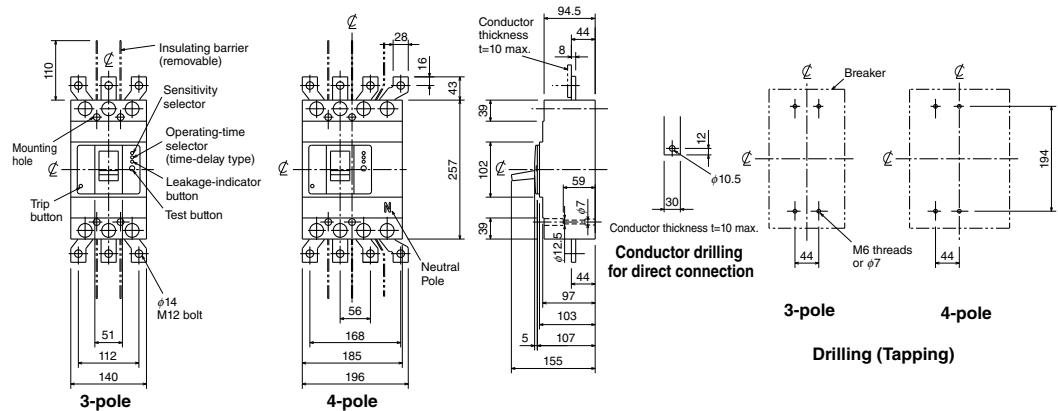


Rear connection

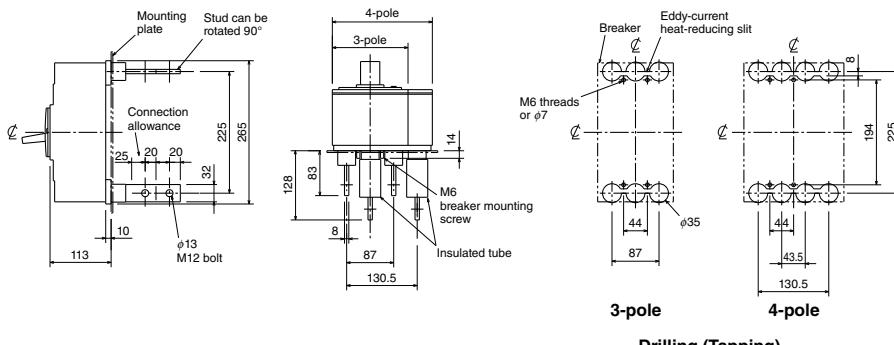

Boring dimensions for rear connection type barriers (3-pole)

Plug-in

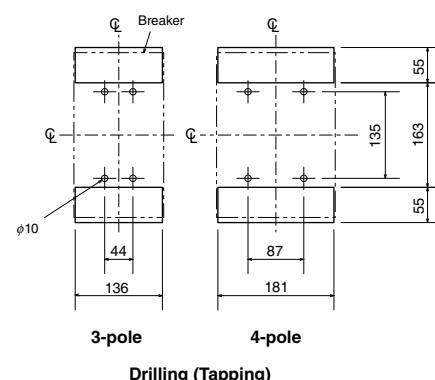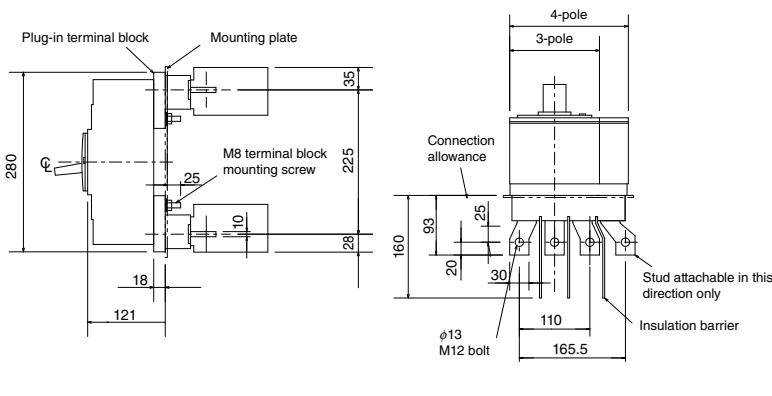


NV800-SEW NV800-HEW




NV800-SEW

Model	NV800-SEW	NV800-HEW
Rated current In (A)		Adjustable 400 450 500 600 700 800
Reference ambient temperature 40°C		
Number of poles		3
Phase line		3φ3W, 1φ3W, 1φ2W
Rated operational voltage Ue (V)	AC	200-440
High-speed type	Rated current sensitivity (mA) at $I \Delta n$ Max operating time (s) at $5I \Delta n$	— — —
Time-delay type	Rated current sensitivity (mA) Max operating time (s) Inertial operating time (s) (or more)	100 · 200 · 500 Selectable 0.45 · 1.0 · 2.0 Selectable 0.1 · 0.5 · 1.0
Earth leakage protection characteristic		Type AC
Earth-leakage indication system		Mechanical type (Button)
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs) EN 60947-2	AC 440V 415V 400V 230V 200V 100V	42/42 50/50 50/50 85/85 85/85 —
Standard attached parts (Front connection)		Terminal screw: M12 bolt×35 (3-pole: 12pcs) Mounting screw: M6×35 (4pcs) Insulation barrier: (2pcs)


Operating Characteristics

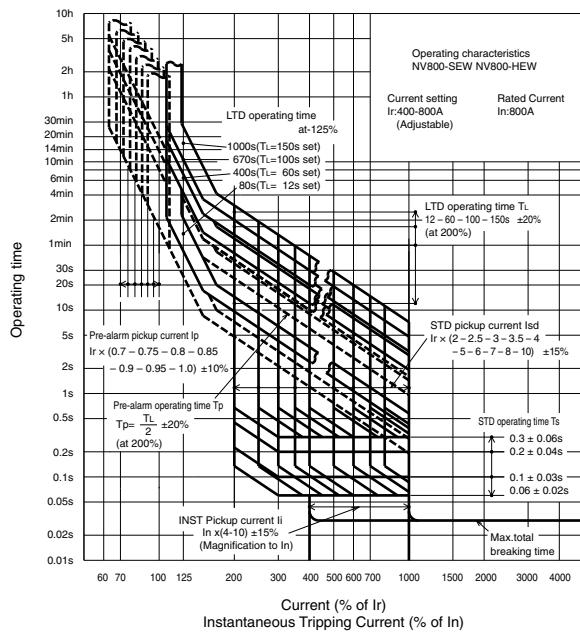

Earth Leakage Tripping Characteristics

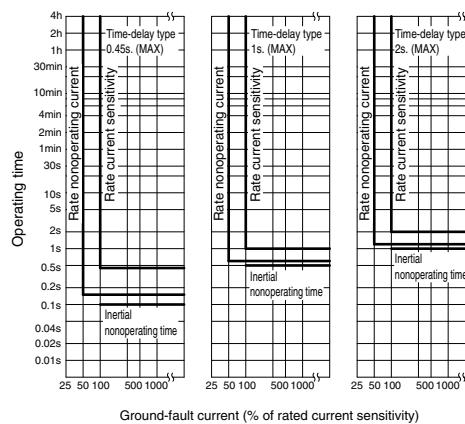


Internal Accessories

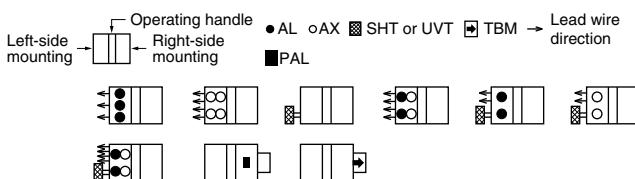

Remarks: 1. Instead of TBM, pre-alarm module (PAL) or trip indicator (TI) can be attached.
2. Refer to page 111.

Current Reducing Curve

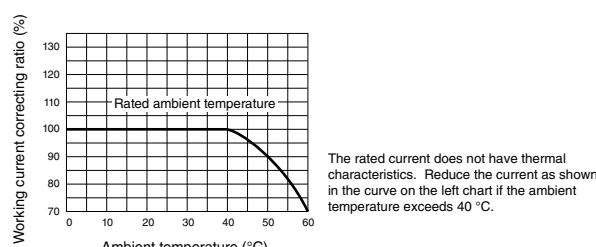


External Accessories

Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-8S	123	Auxiliary handle	HT	HT-4SW 135
	V V-8S	125	Large	TC-L	TCL-8SW3
Mechanical interlock	MI MI-8SW3	136	Skeleton	TTC	TTC-8SW3
			Rear	BTC	BTC-8SW3
			Handle lock device	HL	HL-4SW 134
				HL-S	HLS-8SW
			Electrical operation device	(*1)	140





Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.

Internal Wiring Diagram

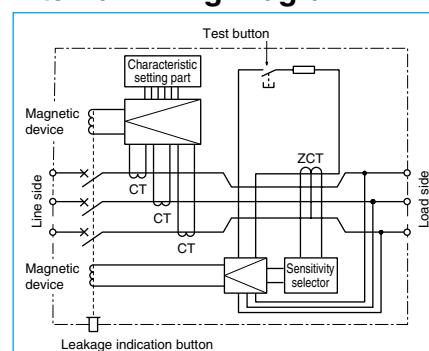




Outline Drawing

Front connection

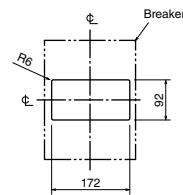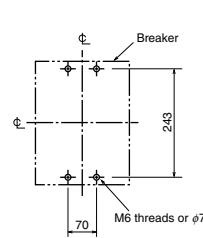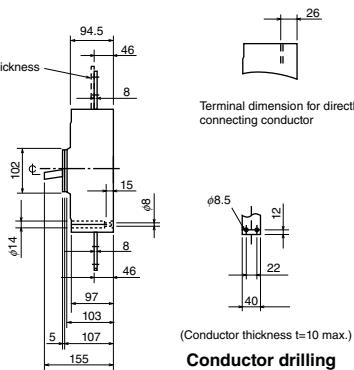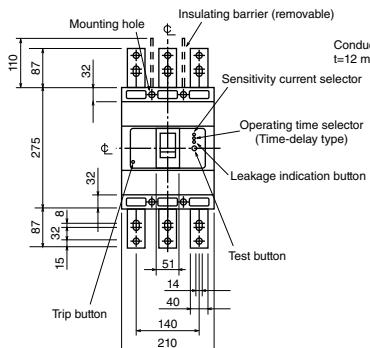


Front-panel cutout

Rear connection

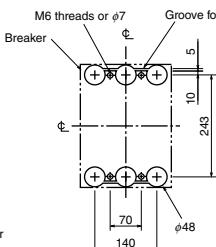
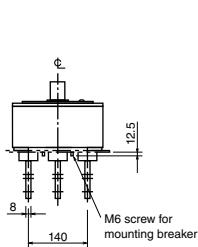
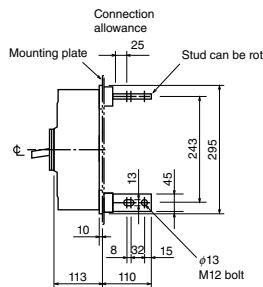


Boring dimensions for rear connection type barriers (3-pole)

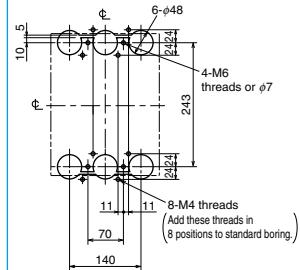

Note The bore dimensional drawing shows the breaker viewed from the rear.

Plug-in

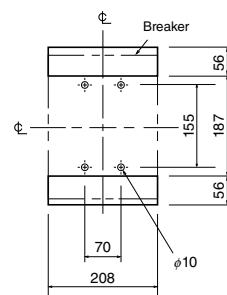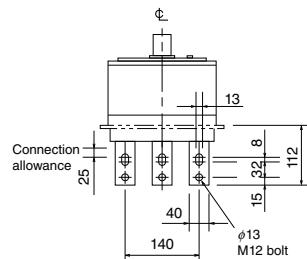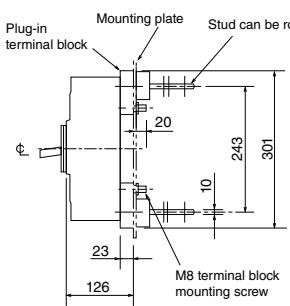

Drilling (Tapping)

NF50-SMU




NF50-SMU


Model		NF50-SMU										
Rated current In (A) Reference ambient temperature 40°C		0.5	1	1.5	2	3	4	5	6	7	8	10
Number of poles Rated short-circuit breaking capacity (kA)	UL 489 CSA C22.2 No.5	Number of poles		1	2	3						
		AC	240V	5							10	
		AC	120V		10						-	
		DC	60V		10						-	
IEC 60947-2 EN 60947-2 (Icu/Ics)		Rated insulation voltage UI/V		440								
		AC	400V		-						10/7.5	
		AC	230V		10/7.5						10/7.5	
		DC	60V		10/7.5						-	

Note *1 The handle does not indicate the trip position due to automatic reset structure.

Operating Characteristics

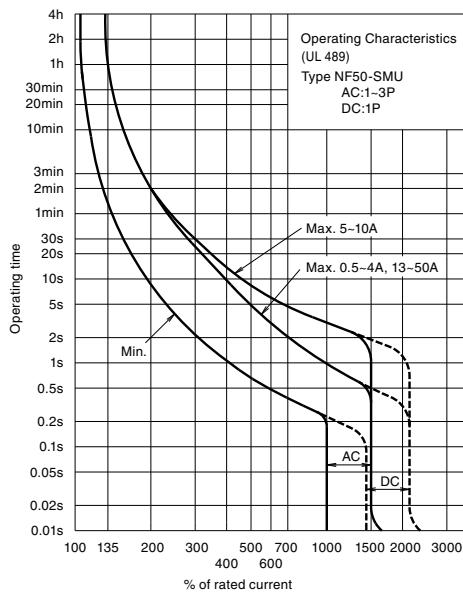

Temperature Compensation Curve

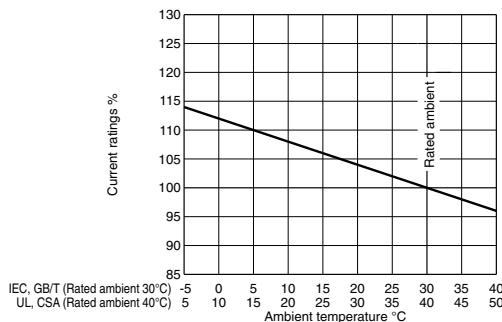


External Accessories

Accessories	Type name	Reference page
AL	AL-05SMU	
AX	AX-05SMU	
SHT	SHT024-05SMU SHTA130-05SMU SHT048-05SMU SHTA277-05SMU SHTD130-05SMU	203
HL	HLF-05SMU	134

Outline Drawing

Front connection

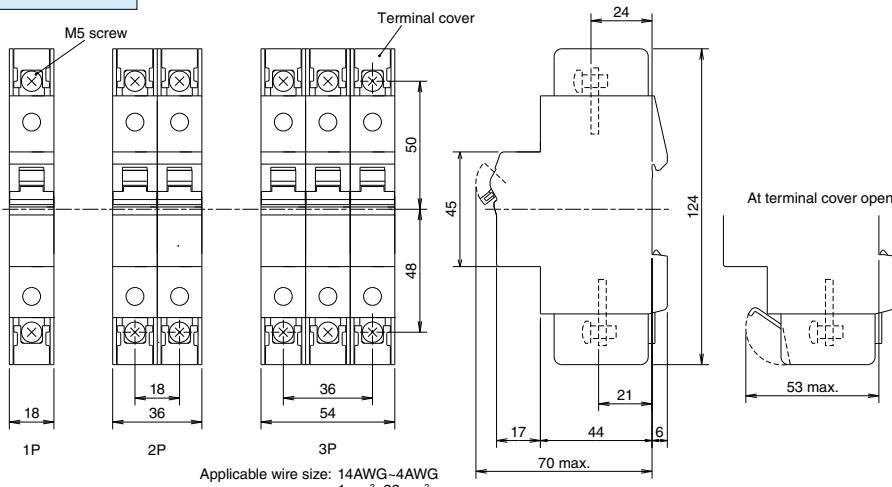

Remark : The wires cannot be connected directly.

Applicable crimp terminal torque 18 lb-in. (2N-m)


Applicable wire mm ²	AWG (#) (75°C)	JST	NTM
0.65-1.65	18-16	R1.25-5	R1.25-5
1.04-2.63	16-14	R2-5 2-M5 V2-5 V2-M5	R2-5 R2-5M R2-5M
2.63-4.6	12	-	R3.5-5S R3.5-5L
2.63-6.64	12-10	R5.5-5 V5.5-5	R5.5-5 R5.5-5S R5.5-5N
6.64-10.52	8	R8-5	R8-5 R8-5S
10.52-16.78	6	R14-5 14-NK5	R14-5 R14-5S
16.78-26.66	4	-	R22-5S

JST: Japan Solderless Terminal Mfg. Co.


NTM: Nichifu Co., Ltd.

Note *1 When using in wire connection use crimp terminal in the table.

AL/ AX

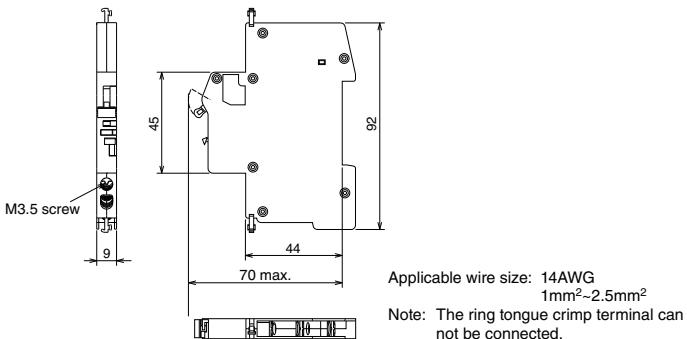


SHT

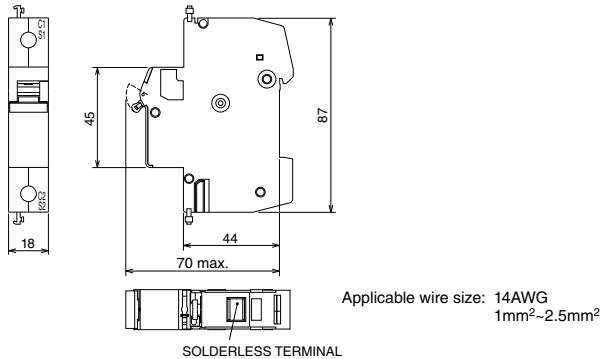

Type Name	Alarm switch (AL)	Auxiliary switch (AX)
Configuration	1c	1c
Contact capacity	277VAC 3A 240VAC 6A 130VDC 1A 48VDC 2A 24VDC 6A	
Terminal	Load side (OFF side)	
Terminal connection	Clamp terminal M3.5 (*1)	
Dimension (mm)	a b c ca	9 92 44 70
Mass (kg)		0.05

Note *1 Ring tongue crimp terminal can not be connected.


Terminal Symbol

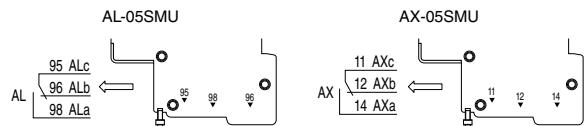

Type Name	Shunt trip device (SHT)				
Voltage V	SHT024-DC24	AC48-130	AC48/DC48	AC220-277	DC110-130
Input power requirement (VA) (*2)	60	200	70	70	105
Operating time (ms) (*3)		20 or less			
Terminal connection		Solderless			
Dimension (mm)	a b c ca	18 87 44 70			
Mass (kg)		0.1			

Note *2 Secure a sufficient input power so that the voltage will not drop below the permissible lower working voltage (70% of the lowest rated voltage).

*3 The operating time denotes the time from when the rated voltage is applied to SHT until when the main contact of the breaker starts to open.

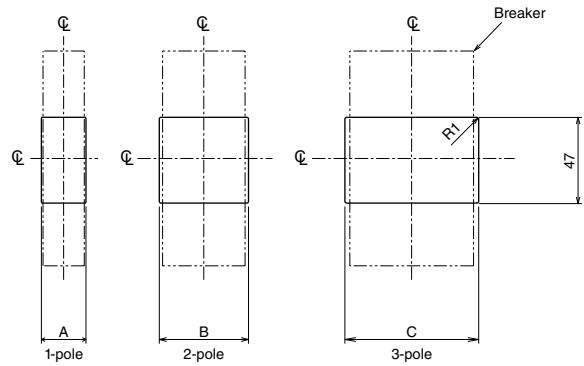

Front-panel cutout

Rate of dimensional change (Front-plate cutout)

Pole	Width	Accessory (mm)					
		No accessory	AL or AX	AL or 2 pcs AX	SHT1	AL or AX with SHT	AL or 2 pcs AX with SHT
1	A	20	29	38	38	47	56
2	B	38	47	56	56	65	74
3	C	56	65	74	74	83	92

NF50-SVFU NV50-SVFU







NV50-SVFU

Model		NF50-SVFU		Model		NV50-SVFU		
Rated current In (A) Reference ambient temperature 40°C		(3) 5 10 15 20 30 40 50		Rated current In (A) Reference ambient temperature 40°C		(5) (10) 15 20 30 40 50		
Number of poles		2 3		Number of poles		2 3		
Rated short-circuit breaking capacity (kA)		Rated voltage VAC		Phase line		3Ø3W 1Ø2W		
UL 489 CSA C22.2 No.5	AC	UL 489		UL 489		120-240		
		600Y/347V		IEC 60947-2 EN 60947-2 (lcu/lcs)		100-240		
		480V		IEC 60947-2 EN 60947-2 (lcu/lcs)		100-440		
		480Y/277V		240V		100-240		
		240V		120V		100-440		
		120V		440		100-240		
		Rated insulation voltage UV		690V		100-240		
IEC 60947-2 EN 60947-2 (lcu/lcs)		500V		500V		100-240		
AC		440V		440V		100-240		
AC		415V		415V		100-240		
AC		400V		400V		100-240		
AC		380V		380V		100-240		
AC		230V		230V		100-240		
Standard attached parts (Front connection)		Terminal screw: M5x14 (2P: 4pcs, 3P: 6pcs) IEC35 rail mounting claws		480V		100-240		
Standard attached parts (Front connection)		240V		240V		100-240		
Standard attached parts (Front connection)		120V		120V		100-240		
Standard attached parts (Front connection)		440		440		100-240		
Standard attached parts (Front connection)		690V		690V		100-240		
Standard attached parts (Front connection)		500V		500V		100-240		
Standard attached parts (Front connection)		380V		380V		100-240		
Standard attached parts (Front connection)		230V		230V		100-240		
Standard attached parts (Front connection)		15/8		15/8		100-240		
Standard attached parts (Front connection)		10/5		10/5		100-240		
Standard attached parts (Front connection)		7.5/4		7.5/4		100-240		
Standard attached parts (Front connection)		400V		400V		100-240		
Standard attached parts (Front connection)		380V		380V		100-240		
Standard attached parts (Front connection)		300V		300V		100-240		
Standard attached parts (Front connection)		250V		250V		100-240		
Standard attached parts (Front connection)		200V		200V		100-240		
Standard attached parts (Front connection)		150V		150V		100-240		
Standard attached parts (Front connection)		100V		100V		100-240		
Standard attached parts (Front connection)		75V		75V		100-240		
Standard attached parts (Front connection)		63.8V		63.8V		100-240		
Standard attached parts (Front connection)		50V		50V		100-240		
Standard attached parts (Front connection)		40V		40V		100-240		
Standard attached parts (Front connection)		30V		30V		100-240		
Standard attached parts (Front connection)		20V		20V		100-240		
Standard attached parts (Front connection)		15V		15V		100-240		
Standard attached parts (Front connection)		10V		10V		100-240		
Standard attached parts (Front connection)		5V		5V		100-240		
Standard attached parts (Front connection)		2.5V		2.5V		100-240		
Standard attached parts (Front connection)		1.5V		1.5V		100-240		
Standard attached parts (Front connection)		0.75V		0.75V		100-240		
Standard attached parts (Front connection)		0.5V		0.5V		100-240		
Standard attached parts (Front connection)		0.25V		0.25V		100-240		
Standard attached parts (Front connection)		0.1V		0.1V		100-240		
Standard attached parts (Front connection)		0.05V		0.05V		100-240		
Standard attached parts (Front connection)		0.025V		0.025V		100-240		
Standard attached parts (Front connection)		0.01V		0.01V		100-240		
Standard attached parts (Front connection)		0.005V		0.005V		100-240		
Standard attached parts (Front connection)		0.0025V		0.0025V		100-240		
Standard attached parts (Front connection)		0.001V		0.001V		100-240		
Standard attached parts (Front connection)		0.0005V		0.0005V		100-240		
Standard attached parts (Front connection)		0.00025V		0.00025V		100-240		
Standard attached parts (Front connection)		0.0001V		0.0001V		100-240		
Standard attached parts (Front connection)		0.00005V		0.00005V		100-240		
Standard attached parts (Front connection)		0.000025V		0.000025V		100-240		
Standard attached parts (Front connection)		0.00001V		0.00001V		100-240		
Standard attached parts (Front connection)		0.000005V		0.000005V		100-240		
Standard attached parts (Front connection)		0.0000025V		0.0000025V		100-240		
Standard attached parts (Front connection)		0.000001V		0.000001V		100-240		
Standard attached parts (Front connection)		0.0000005V		0.0000005V		100-240		
Standard attached parts (Front connection)		0.00000025V		0.00000025V		100-240		
Standard attached parts (Front connection)		0.0000001V		0.0000001V		100-240		
Standard attached parts (Front connection)		0.00000005V		0.00000005V		100-240		
Standard attached parts (Front connection)		0.000000025V		0.000000025V		100-240		
Standard attached parts (Front connection)		0.00000001V		0.00000001V		100-240		
Standard attached parts (Front connection)		0.000000005V		0.000000005V		100-240		
Standard attached parts (Front connection)		0.0000000025V		0.0000000025V		100-240		
Standard attached parts (Front connection)		0.000000001V		0.000000001V		100-240		
Standard attached parts (Front connection)		0.0000000005V		0.0000000005V		100-240		
Standard attached parts (Front connection)		0.00000000025V		0.00000000025V		100-240		
Standard attached parts (Front connection)		0.0000000001V		0.0000000001V		100-240		
Standard attached parts (Front connection)		0.00000000005V		0.00000000005V		100-240		
Standard attached parts (Front connection)		0.000000000025V		0.000000000025V		100-240		
Standard attached parts (Front connection)		0.00000000001V		0.00000000001V		100-240		
Standard attached parts (Front connection)		0.000000000005V		0.000000000005V		100-240		
Standard attached parts (Front connection)		0.0000000000025V		0.0000000000025V		100-240		
Standard attached parts (Front connection)		0.000000000001V		0.000000000001V		100-240		
Standard attached parts (Front connection)		0.0000000000005V		0.0000000000005V		100-240		
Standard attached parts (Front connection)		0.00000000000025V		0.00000000000025V		100-240		
Standard attached parts (Front connection)		0.0000000000001V						

Outline Drawing

Front connection

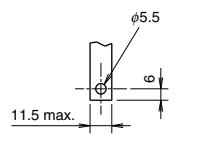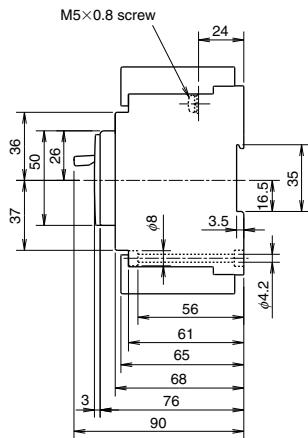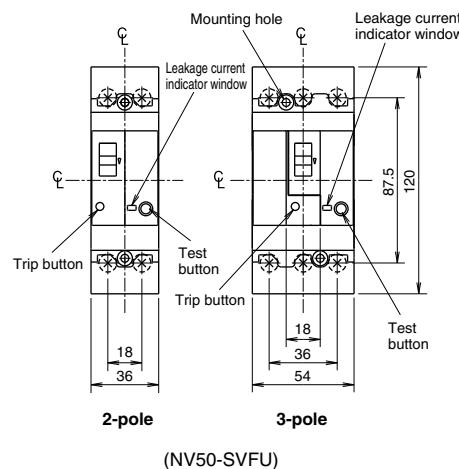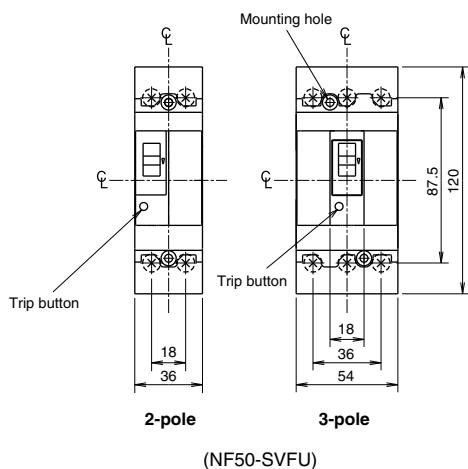

Conductor drilling for direct connection

Remarks: 1. The mounting screws are not enclosed with the breaker.
2. The wires cannot be connected directly.

Compatible crimp terminals Tightening torque 22lb-in (2.5N·m)


Applicable wire range (*1) mm ²	AWG (#) (60°C/75°C)	Crimp terminal type (*2) JST	NTM
2.5-2.63	14	R2-5 2-M5 V2-5 V2-M5	R2-5 R2-5M
2.63-4.6	12	-	R3.5-5S R3.5-5L
2.63-6.64	12-10	R5.5-5 V5.5-5	R5.5-5 R5.5-5S R5.5-5N
6.64-10.52	8	R8-5	R8-5 R8-5S
10.52-16.78	6	R14-5 14-NK5	R14-5 R14-5S
16.78-26.66	4	22-S5 22-S6	R22-5S

JST: Japan Solderless Terminal Mfg. Co.

NTM: Nichifu Co., Ltd.

Notes *1 14AWG or larger to comply with UL Standards.

*2 When using with a wire connection, use the crimp terminal combination shown above.

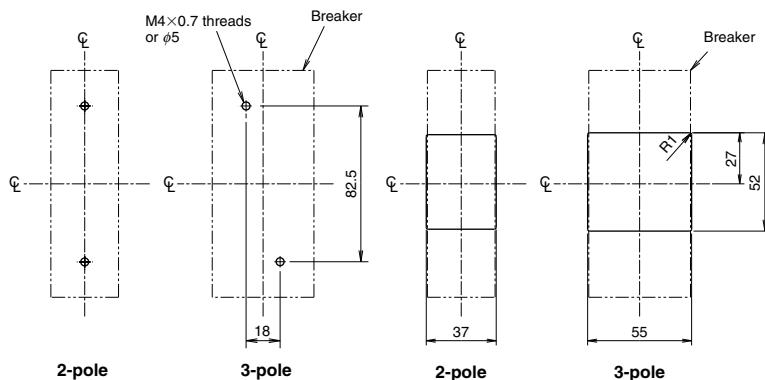

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Front-panel cutout

NF100-CVFU NV100-CVFU




NF100-CVFU

Model			NF100-CVFU		Model			NV100-CVFU			
Rated current In (A) Reference ambient temperature 40°C			60 (70) 75 (80) (90) 100		Rated current In (A) Reference ambient temperature 40°C			60 (70) 75 (80) (90) 100			
Number of poles			2	3	Number of poles			3			
UL 489 CSA C22.2 No.5			Rated voltage VAC		240		Phase line		3φ3W 1φ2W		
			600Y/347V		–		UL 489		120-240		
			480V		–		IEC 60947-2 EN 60947-2		100-440		
			480Y/277V		–		Rated voltage VAC				
			240V		14		Rated current sensitivity $I_{\Delta n}$ mA		30 50 100/200/500 selectable		
			120V		–		Pick-up current UL 1053		75% of $I_{\Delta n}$		
IEC 60947-2 EN 60947-2 (Icu/lcs)			Rated insulation voltage Ui V		600		Operating time (sec) within AT $5I_{\Delta n}$		0.04 (*1)		
			690V		–		Earth-leakage indication system		Mechanical button		
			500V		7.5/4		UL 489		480V –		
			440V		10/5		CSA C22.2		240V 14		
			415V		10/5		AC		120V 14		
			400V		10/5		IEC 60947-2		440V 10/5		
			380V		10/5		EN 60947-2		400V 10/5		
			230V		15/8		(Icu/lcs)		230V 15/8		
			IEC35 rail mounting claws, Insulating barrier (2P: 2pcs, 3P: 4pcs) (Only for type with bar terminal) Mounting screw M4×0.7×55 (2 pcs) Terminal screw: M8×14 (2P: 4pcs, 3P: 6pcs)			IEC35 rail mounting claws, Insulating barrier (4pcs) (Only for type with bar terminal) Mounting screw M4×0.7×55 (2 pcs) Terminal screw: M8×14 (3P: 6pcs)					
			Standard attached parts (Front connection)			Standard attached parts (Front connection)					


Note *1 0.1 for UL1053.

Operating Characteristics

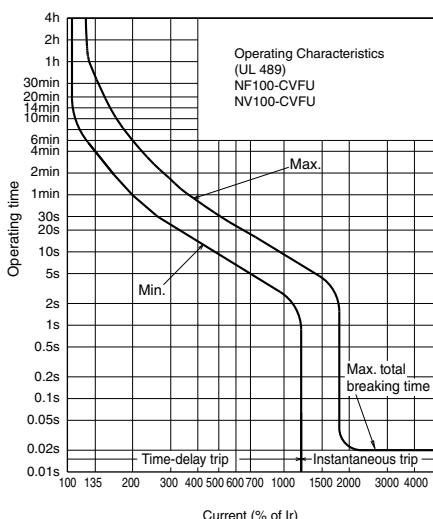


Earth Leakage Tripping Characteristics


NV100-CVFU
(UL 1053)

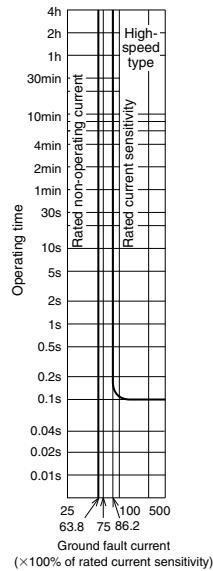


Internal Accessories

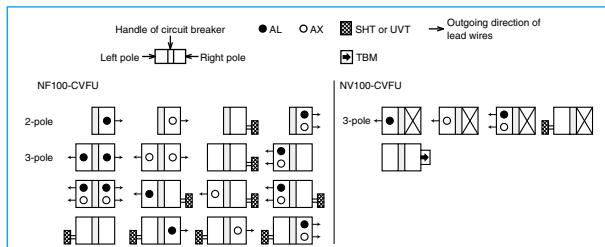

Temperature Compensation Curve

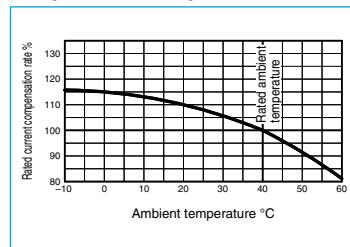

Internal Wiring Diagram

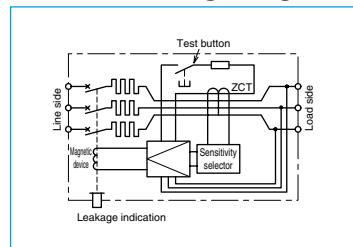


External Accessories


Accessories		Type name	Reference page	Accessories			Type name	Reference page						
Operating handle	F	2P F-05SVUL2	123	Terminal cover	Large	TC-L	2P TCL-05SVU2	128						
	3P	F-05SVUL					TCL-05SVU2L							
	V	2P V-05SVUL2					3P TCL-05SVU3							
	3P	V-05SVUL					TCL-05SVU3L							
Handle lock device	C	3P C-1SVU	127											
	HL	HLF-05SVU	134											
	HL-S	2P HLS-05SVU2												
	3P	3P HLS-05SVU												

Outline Drawing


Front connection

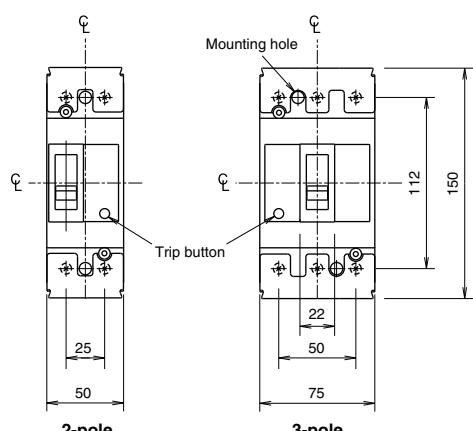

(NF100-CVFU)

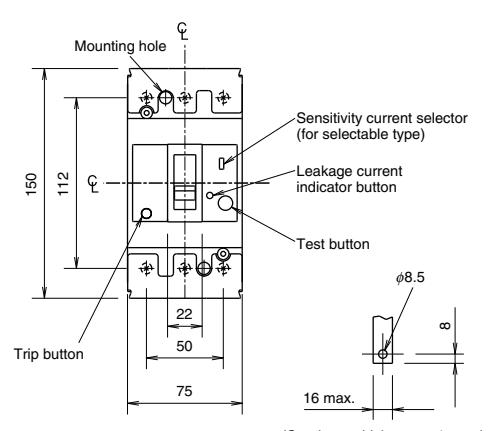

(NV100-CVFU)

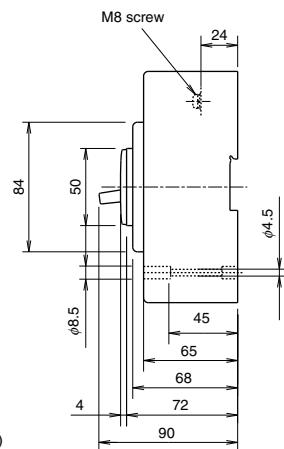

Conductor drilling for direct connection

Compatible crimp terminals Tightening torque 54lb-in (6N·m)


Applicable wire range mm ²	AWG (#) (60°C/75°C)	Crimp terminal type (*1)
2.5-2.63	14	R2-8
2.63-6.64	12-10	R5.5-8
6.64-10.52	8	R8-8
10.52-16.78	6	R14-8
16.78-26.66	4	R22-8
26.66-42.42	2	R38-8S
42.42-60.57	1/0	60-2BA 60-S8

JST: Japan Solderless Terminal Mfg. Co.


NTM: Nichifu Co., Ltd.

Note *1 When using with a wire connection, use the crimp terminal combination shown above.

Front connection(solderless terminal)

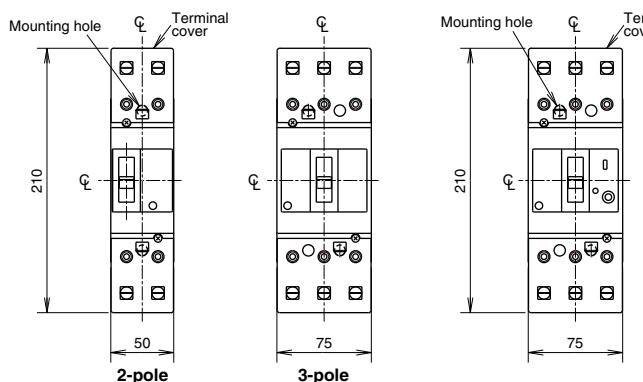

(NF100-CVFU)

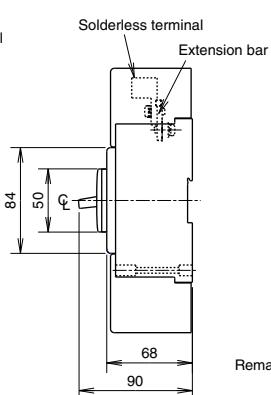


Size of screwdriver with bolting
Please bolt with flat head screwdriver.
The length of X : 6mm-7mm
The length of Y \leq 9.5mm




Wire size 60°C/75°C CU ONLY	Number of strands
14AWG	7
12-10AWG	7
8AWG	7
6-4AWG	7
2AWG	7
1-1/0AWG	19

The tightening torque is different according to connected wire.
Refer to instruction manual for details.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.

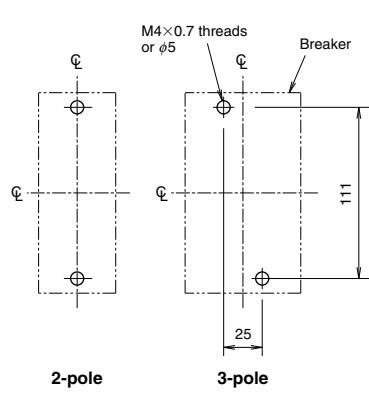

Drilling (Tapping)

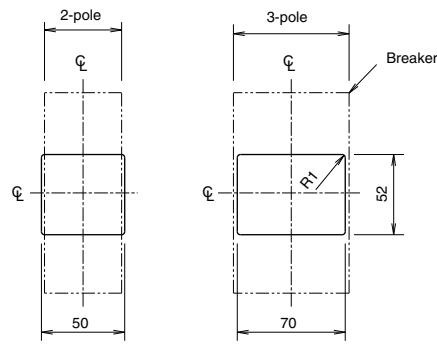

The drilling dimensions have a 1.0mm clearance on each side of the breaker window frame.

Front-panel cutout

NF100-SRU NF100-HRU NV100-SRU NV100-HRU




NF100-HRU 3P

Model		NF100-SRU	NF100-HRU	Model	NV100-SRU	NV100-HRU	
Rated current In (A)		1 2 3 5 10 15 20 25 30 40 50 60 70 75 80 90 100	1 2 3 5 10 15 20 25 30 40 50 60 70 75 80 90 100	Phase line	1Φ2W 15 20 25 30 30 40 50 60 70 75 80 90 100	3Φ3W, 1Φ2W 5 10 15 20 25 30 40 50 60 70 75 80 90 100	
Reference ambient temperature 40°C				Number of poles	2	3	
Number of poles		2	3	Rated operational voltage(UL489)(VAC)	120-240	120-240-480	
UL 489 CSA C22.2 No.5	AC	480V 240V 690V 500V 440V 415V 400V 230V DC 250V	— 35(25) (*1) — 10/5 15/8 15/8 15/8 35/18(25/13) (*1) —	18(10) (*1) 50(25) (*1) — 18/9(10/5) (*1) 25/13(15/8) (*1) 25/13(15/8) (*1) 50/25(13/15) (*1) —	Rated current In (A)	5 10 15 20 25 30 40 50 50 100-230	5 10 15 20 25 30 40 50 60 70 75 80 90 100
Rated short-circuit breaking capacity (kA)	AC			Rated current sensitivity IΔn (mA)	30 50 100/300/500 selectable	30 50 100/300/500 selectable	
IEC 60947-2 EN 60947-2 (lcu/lcs)				Pickup current UL1053	IΔn × 75%	IΔn × 75%	
Standard attached parts (Front connection)				Max. operating time (s) at 5 IΔn	0.04 (*2)	0.04 (*2)	
				Leakage detection characteristics	Type A	Type A	
				Earth-leakage indication system	Mechanical button	Mechanical button	
	UL 489 CSA C22.2 No.5	480V 240V 120V 440V 400V 230V 100V	— 35(25) (*1) 35(25) (*1) — — 35/18(25/13) (*1) 35/18(25/13) (*1)	Terminal screw: 50A or less M5x14 (2P: 4pcs, 3P: 6pcs) 60A or more M8x14 (2P: 4pcs, 3P: 6pcs) Mounting screw: M4x0.7x35 (NF100-SRU 2P, 3P: 2pcs) M4x0.7x62 (NF100-HRU 2P, 3P: 2pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs Only NF100-HRU)	18(10) (*1) 50(25) (*1) 50(25) (*1) 25/13(15/8) (*1) 25/13(15/8) (*1) 50/25(13/15) (*1) 50/25(13/15) (*1)	Terminal screw: 50A or less M5x14 (2P: 4pcs, 3P: 6pcs) 60A or more M8x14 (2P: 4pcs, 3P: 6pcs) Mounting screw: M4x0.7x35 (NF100-SRU 2P, 3P: 2pcs) M4x0.7x62 (NF100-HRU 2P, 3P: 2pcs) Insulation barrier: (2P: 2pcs, 3P: 4pcs Only NF100-HRU)	


Notes *1 Rated short-circuit breaking capacity parenthesized are applied to below rated current 15A.
*2 In case of UL1053, operating time is 0.1s.

Operating Characteristics

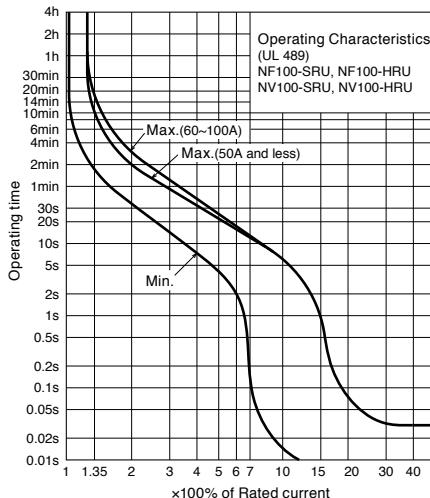

Ground fault Tripping Characteristics



NV100-SRU
NV100-HRU
(UL 1053)

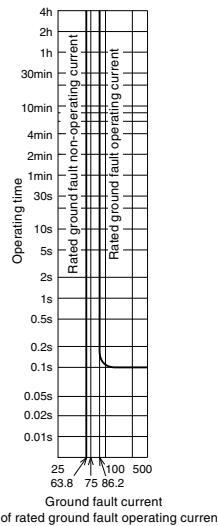

Internal Accessories

Handle of circuit breaker ● AL ○ AX ■ SHT or UVT ■ MG → Outgoing direction of lead wires


Left pole → Right pole □ EAL → TBL □ TBM ■ PAL □ ATU

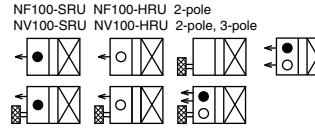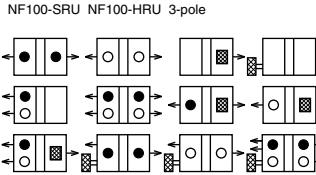

External Accessories


Accessories		Type name	Reference page
Operating handle	F	2P F-05SRUL2 3P F-05SRUL	123
	V	2P V-05SRUL2 3P V-05SRUL	
	HL	HLF-05SRU	134
Handle lock device	HL-S	2P HLS-05SRU2 3P HLS-05SRU3	
	TC-S	2P TCS-05SRU2 3P TCS-05SRU3	
	TC-L	2P TCL-05SRU2 3P TCL-05SRU3	128

Temperature Characteristics

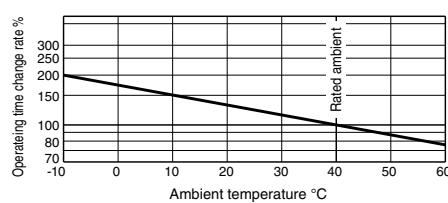



Internal Wiring Diagram

NV100-SRU, NV100-HRU

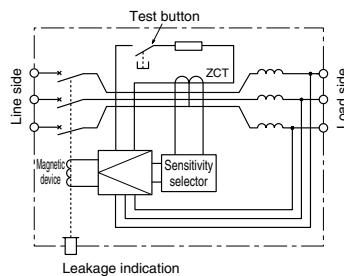

Outline Drawing

Front connection

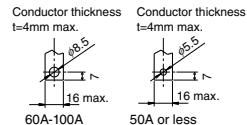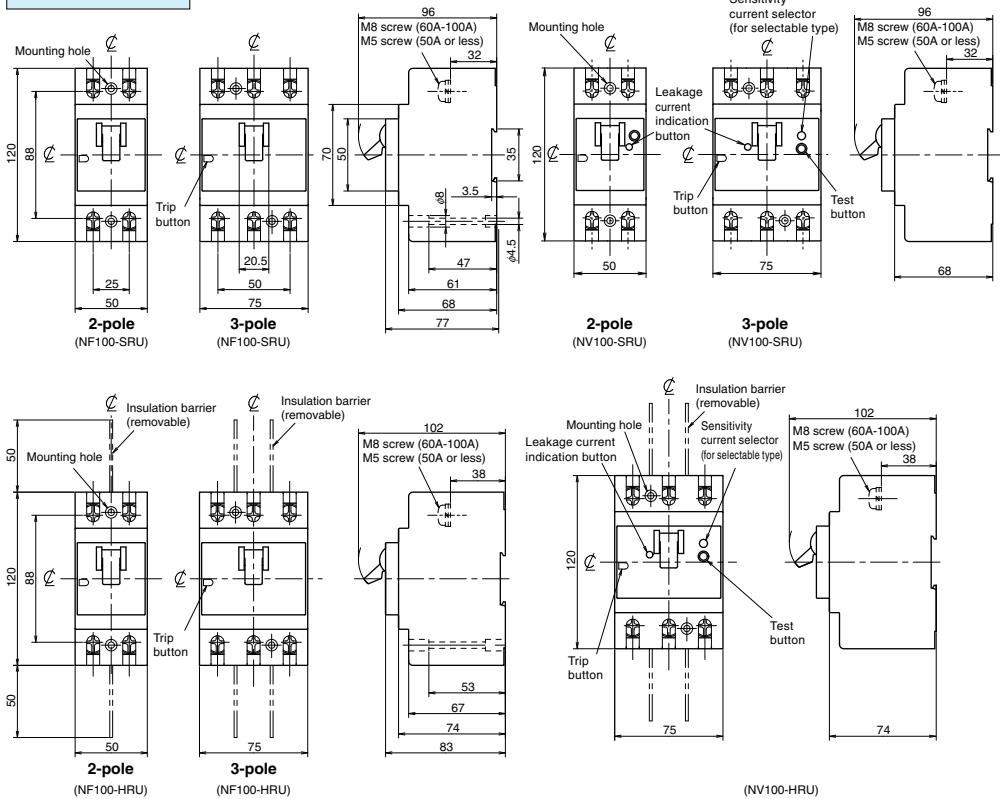

Conductor drilling for direct connection

Remark : The wires cannot be connected directly.

Tightening torque 26lb-in. (3N.m)

Compatible crimp terminals (50A or less)

Applicable wire range (*1)	Crimp terminal type (*2)
mm ²	AWG (#) (60°C/75°C)
2.5 to 2.63	14 R2-5 R2-5 2-M5 R2-5M
2.63 to 6.64	12 to 10 R5.5-5 R5.5-5 5.5-S5 R5.5-S5
6.64 to 10.52	8 R8-5 R8-5 R8-S5
10.52 to 16.78	6 R14-5 R14-5 R14-SS
16.78 to 26.66	4 22-S6 R22-5S
26.66 to 42.42	2, 1 38-S8 R38-8S
42.42 to 60.57	1/0 CB60-8 60-2BA CB60-8

JST: Japan Solderless Terminal Mfg. Co.

NTM: Nichifu Co., Ltd.

Notes : *1 AWG or larger to comply with UL standards.

*2 When using with a wire connection, use the crimp terminal combination shown above.

Tightening torque 54lb-in. (6N.m)




Compatible crimp terminals (60A-100A)

Applicable wire range	Crimp terminal type (*2)
mm ²	AWG (#) (60°C/75°C)
2.5 to 2.63	14 R2-8 R2-8
2.63 to 6.64	12 to 10 R5.5-8 R5.5-8 5.5-S8 R5.5-S8
6.64 to 10.52	8 R8-8 R8-8
10.52 to 16.78	6 R14-8 R14-8 R14-8S
16.78 to 26.66	4 22-S8 R22-8S
26.66 to 42.42	2 38-S8 R38-8S
42.42 to 60.57	1/0 CB60-8 60-2BA CB60-8

JST: Japan Solderless Terminal Mfg. Co.

NTM: Nichifu Co., Ltd.

Front connection (solderless terminal)

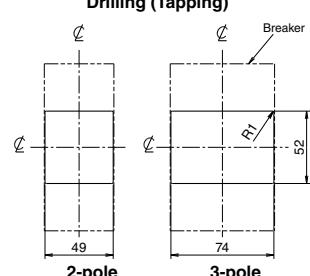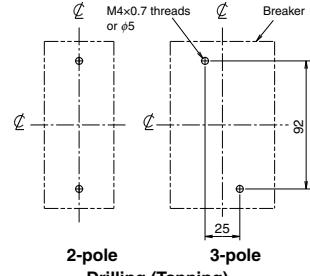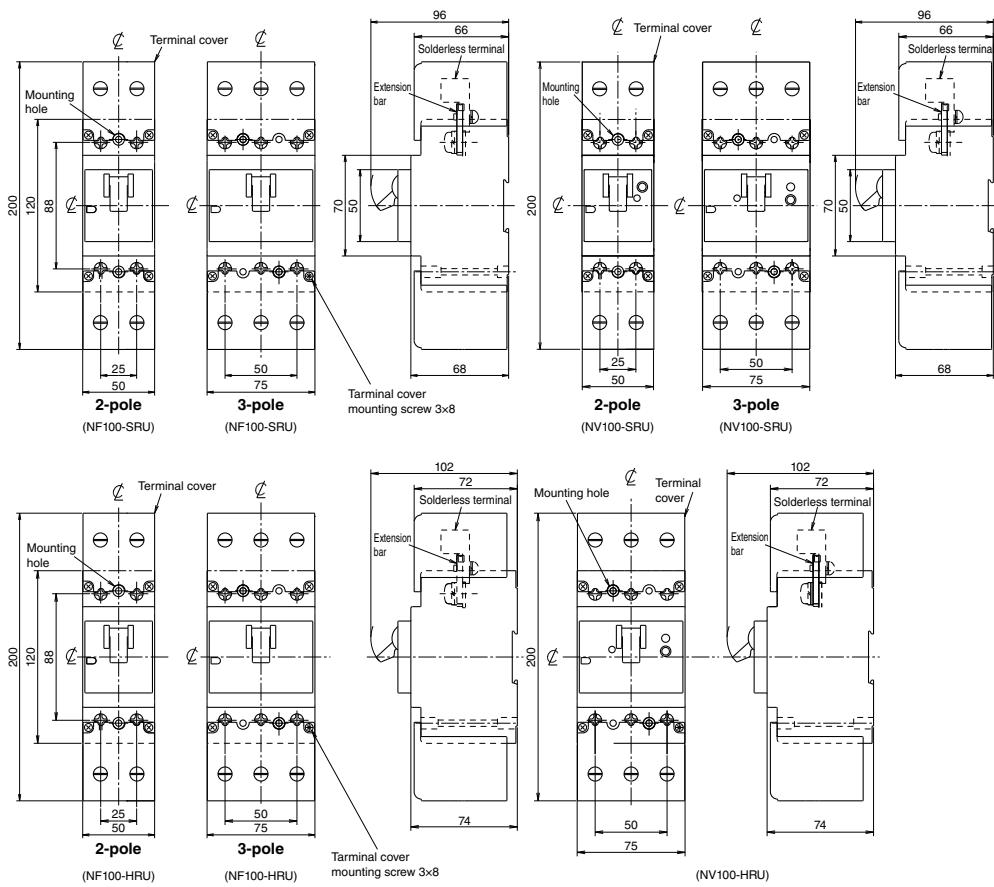

1.0mm clearance on each side of handle frame.

Front-panel cutout

Size of screwdriver with bolting
Please bolt with flat head screwdriver.
The length of X : 6mm-7mm The length of Y ≤ 9.5mm



Wire size 60°C/75°C CU/AL	Number of strands
Copper wire	Aluminum wire
14AWG	a* 7
12, 10AWG	a* 7
8AWG	7
4, 6AWG	7
2AWG	7
1, 1/0AWG	19

The tightening torque is different according to connected wire.
Refer to instruction manual for details.

a:Solid wire is usable.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.

7 Characteristics and Dimensions [3]

UL Certified Circuit Breakers




NF125-SVU NF125-HVU NV125-SVU NV125-HVU




NF125-HVU

Model	NF125-SVU		NF125-HVU			Model	NV125-SVU		NV125-HVU	
Rated current In (A) Reference ambient temperature 40°C	15 20 30 40 50 60 (70) 75 (80) (90) 100		125		15 20 30 40 50 60 (70) 75 (80) (90) 100		125		15 20 30 (40) 50 60 75 100	
Number of poles	2	3	2	3	3	3	2	3	3	3
Rated short-circuit breaking capacity (kA)	UL 489 CSA C22.2 No.5		AC		600Y/347V 480V 240V 120V		600Y/347V 480 600Y/347V 600Y/347V		18 50 100	
Rated insulation voltage U _{IV}	IEC 60947-2 EN 60947-2 (Icu/lcs)		AC		690 690V 500V 440V 415V 400V 380V 230V		690 690 18/9 30/15 30/15 30/15 30/15 50/25		10/5 50 100 100 100 100 100 100	
Standard attached parts (Front connection)							Terminal screw M8x14 (2P: 4pcs, 3P: 6pcs) Mounting screw M4x0.7x55 (2 screws), Insulating barrier (2P: 2pcs, 3P: 4pcs)			
Note *1 0.1 for UL1053.										


Operating Characteristics

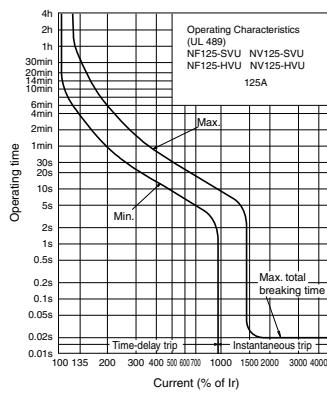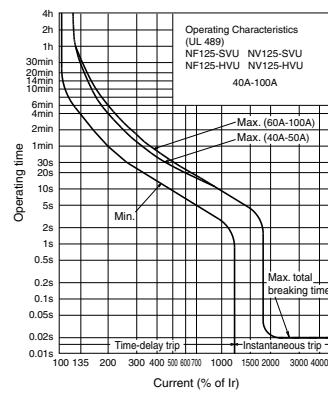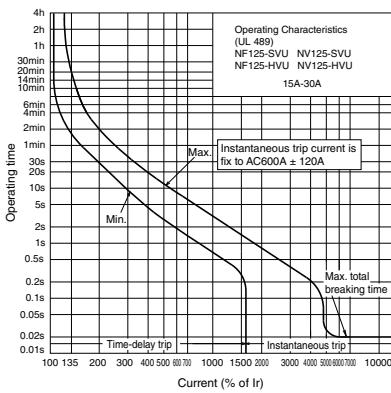


Earth Leakage Tripping Characteristics

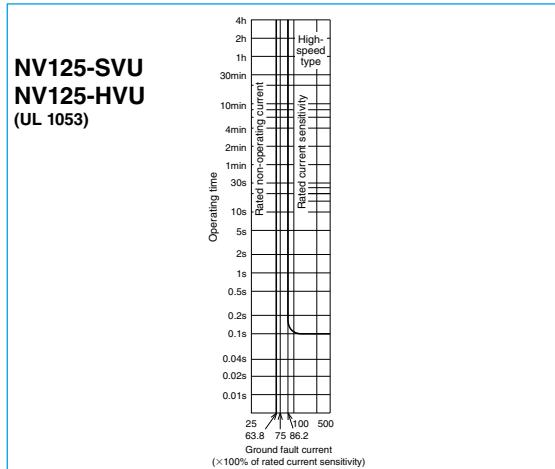

Internal Accessories

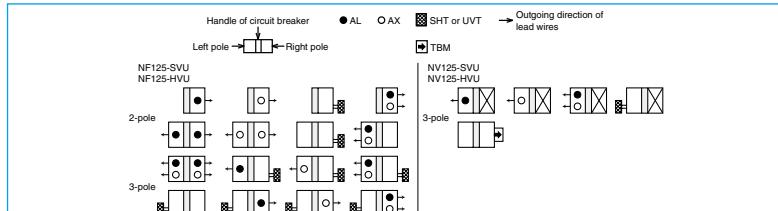

Temperature Compensation Curve Internal Wiring Diagram

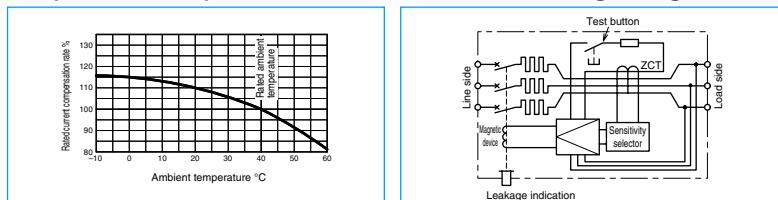


External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-1SVUL	123	Terminal cover	Large	128
	V V-1SVUL	125			
	C C-1SVU	127			
Handle lock device	HL HLF-05SVU	134	TC-L	TCL-1SVU3	128
	HL-S HLS-05SVU				

Outline Drawing


Front connection

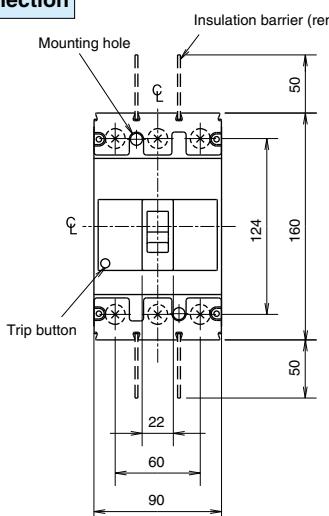

(NF125-SVU, NF125-HVU)

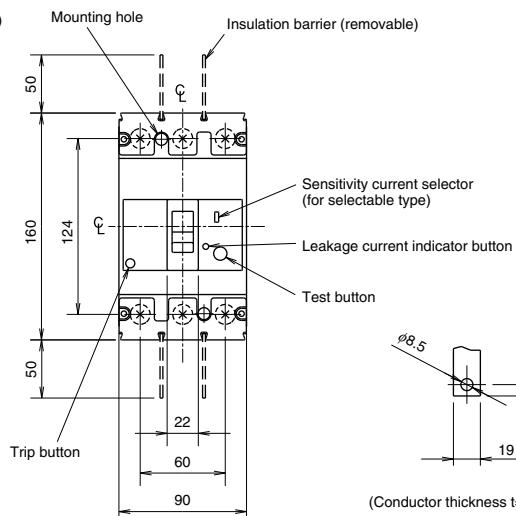

(NV125-SVU, NV125-HVU)

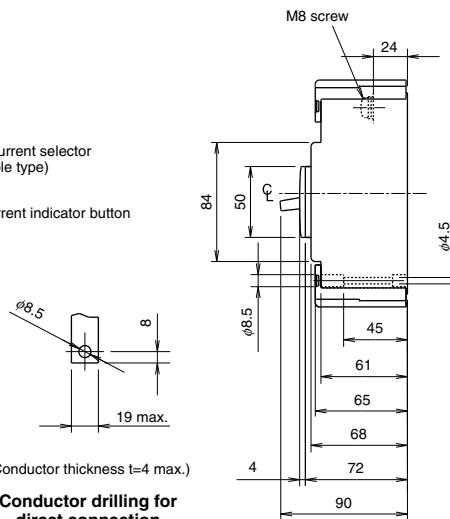

(Conductor thickness $t=4$ max.)
Conductor drilling for direct connection

Compatible crimp terminals Tightening torque 54lb-in (6N-m)


Applicable wire range	Crimp terminal type (*1)
mm ²	AWG (#) (60°C/75°C)
2.5-2.63	14 R2-8 R2-8
2.63-6.64	12-10 R5.5-8 R5.5-8
6.64-10.52	8 R8-8 R8-8
10.52-16.78	6 R14-8 R14-8 R14-8S
16.78-26.66	4 R22-8 R22-8S
26.66-42.42	2 38-S8 R38-8S
42.42-60.57	1/0 60-2BA 60-S8 CB60-8

JST: Japan Solderless Terminal Mfg. Co.


NTM: Nichifu Co., Ltd.

Note *1 When using with a wire connection, use the crimp terminal combination shown above.

Front connection (solderless terminal)

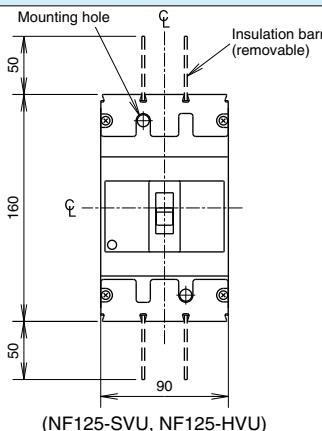


(NF125-SVU, NF125-HVU)

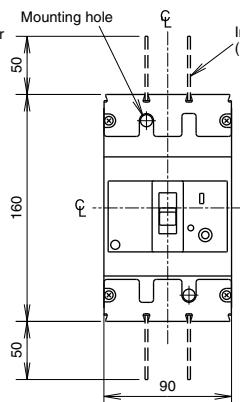

(NV125-SVU, NV125-HVU)

Hexagon socket set screw

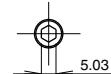


Wire size 60°C/75°C CU ONLY	Number of strands
14AWG	^a 7
12-10AWG	^a 7
8AWG	7
6AWG	7
4-2AWG	7
1AWG	19


The tightening torque is different according to connected wire.
Refer to instruction manual for details.

a:Solid copper wire is usable.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.

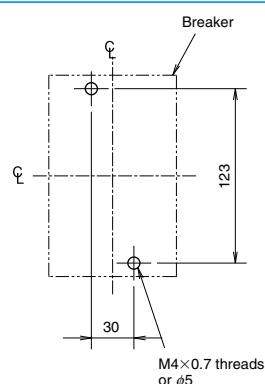

Drilling (Tapping)

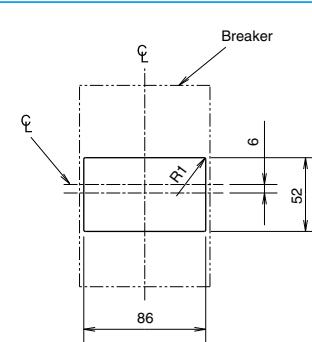

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Front-panel cutout

Remark: 1.2-pole models are 3-pole with the central pole conductor removed.

NF250-CVU NF250-SVU NF250-HVU NV250-CVU NV250-SVU NV250-HVU





NF250-HVU

Model		NF250-CVU	NF250-SVU	NF250-HVU			Model		NV250-CVU	NV250-SVU	NV250-HVU		
Rated current In (A) Reference ambient temperature 40°C		125 150 175 200 225	125 150 175 200 225	125 150 175 200 225			Rated current In (A) Reference ambient temperature 40°C		125 150 175 200 225	125 150 175 200 225	125 150 175 200 225		
Number of poles		3	3	3	3	3	Number of poles		3	3	3		
UL 489 CSA C22.2 No.5	Rated voltage VAC	240	240	480	480	600Y/347V	Phase line	3Ø3W 1Ø2W	3Ø3W 1Ø2W	3Ø3W 1Ø2W	3Ø3W 1Ø2W		
AC	600Y/347V	—	—	—	—	18	Rated voltage VAC	UL 489	120-240	120-240	120-480	120-480	
240V	—	—	35	35	50	50	IEC 60947-2 EN 60947-2 (lcu/s)	100-440	100-440	100-440	100-440	100-440	
240V	35	35	65	65	100	100	EN 60947-2 EN 60947-2 (lcu/s)	100-440	100-440	100-440	100-440	100-440	
120V	—	—	—	—	—	—	High-speed type	Rated current sensitivity $I_{\Delta n}$ mA 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	30 50 100/200/500 selectable	
Rated insulation voltage UI V	600	600	690	690	690	690	Pick-up current UL 1053	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	75% of $I_{\Delta n}$	
690V	—	—	8/4	8/4	10/5	10/5	Operating time s within AT 5ln	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)	0.04 (*1)	
500V	10/8	10/8	25/13	25/13	36/18	36/18	UL 489 CSA C22.2 No.5	480V	—	—	35	35	
440V	15/12	15/12	36/18	36/18	50/25	50/25	AC	240V	35	35	65	65	
415V	25/19	25/19	36/18	36/18	50/25	50/25	120V	35	35	65	65	100	
400V	25/19	25/19	36/18	36/18	50/25	50/25	IEC 60947-2 EN 60947-2 (lcu/s)	440V	15/12	15/12	36/18	36/18	
380V	25/19	25/19	36/18	36/18	50/25	50/25	400V	25/19	25/19	36/18	36/18	50/25	
230V	36/27	36/27	65/33	65/33	100/50	100/50	230V	36/27	36/27	65/33	65/33	100/50	
Standard attached parts (Front connection)	Terminal screw M8 (Bolt (Hex-socket)) x16 (3P: 6pcs) Mounting screw M4×0.7×55 (2 screws), Insulating barrier (4pcs)						Standard attached parts (Front connection)	Terminal screw M8 (Bolt (Hex-socket)) x16 (3P: 6pcs) Mounting screw M4×0.7×55 (2 screws), Insulating barrier (4pcs)					


Note *1 0.1 for UL1053.

Operating Characteristics

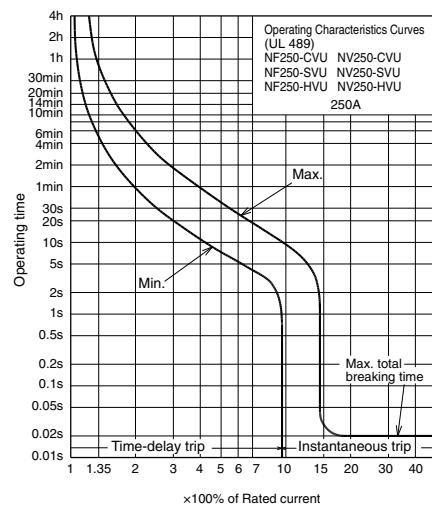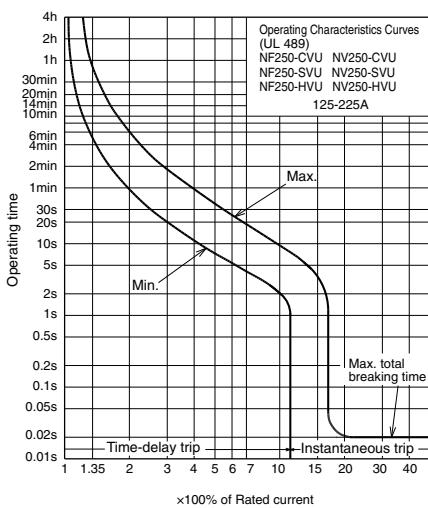


Earth Leakage Tripping Characteristics



NV250-CVU NV250-SVU NV250-HVU

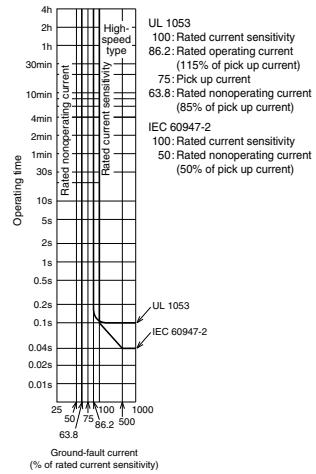

Internal Accessories

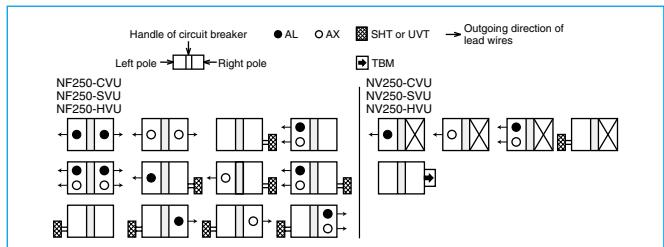

Temperature Compensation Curve Internal Wiring Diagram

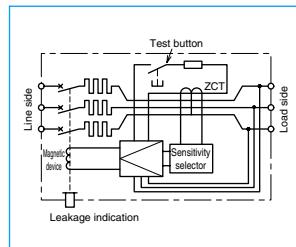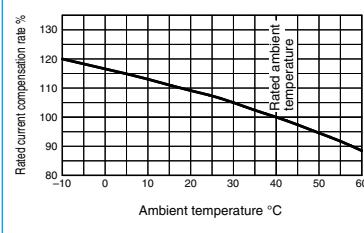


External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F-2SVUL	123	Terminal cover	TCL-2SVU3	128
	V-2SVUL	125		TCL-2SVU3L	
	C-2SVU	127			
Handle lock device	HL HLF-05SVU				
	HL-S HLS-2SVU	134			

Outline Drawing


Front connection

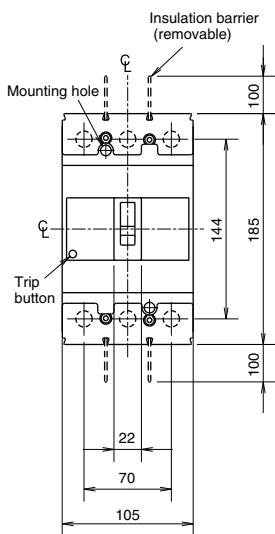

(NF250-CVU, NF250-SVU, NF250-HVU)

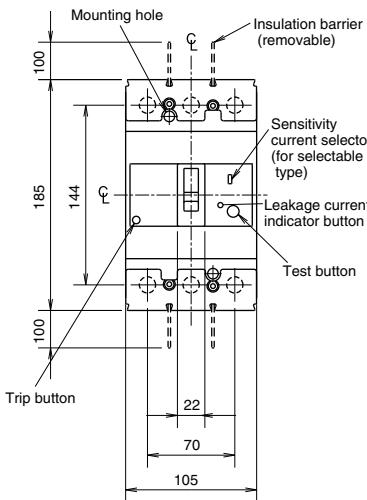

(NV250-CVU, NV250-SVU, NV250-HVU)

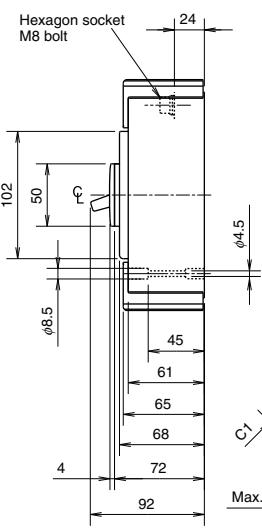

Compatible crimp terminals Tightening torque 90lb-in (10N.m)


Applicable wire range mm ²	AWG (#) (75°C)	Crimp terminal type (*2)	
mm ²	AWG (#) (75°C)	JST	NTM
16.78-26.66	4	R22-8 R22-8S CB22-8S	R22-8 R22-8S CB22-8S
26.66-42.42	2	R38-8 38-S8	R38-8 38-S8
42.42-60.57	1/0	R60-8 60-2BA CB60-S8	R60-8 CB60-8 CB60-S8
60.57-76.28	2/0	70-8	R70-8
76.28-96.3	3/0	80-3BA CB80-S8	
96.3-117.2	4/0	100-3BA CB100-S8	
117.2-152.05	250/300kcmil	CB150-S8 (*1)	

JST: Japan Solderless Terminal Mfg. Co.

NTM: Nichiflu Co., Ltd.


Notes *1 TCL-2SVU3L can be mounted when using CB150-S8.

*2 When using with a wire connection, use the crimp terminal combination shown above.

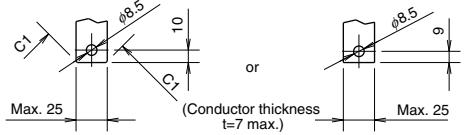


Conductor drilling for direct connection



Front connection (solderless terminal)

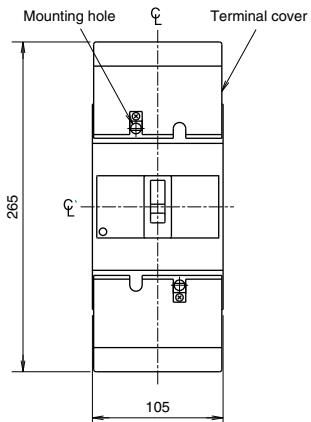

(NF250-CVU, NF250-SVU, NF250-HVU)

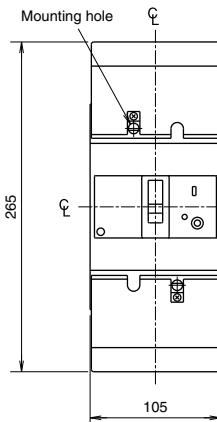


(NV250-CVU, NV250-SVU, NV250-HVU)

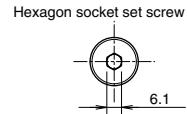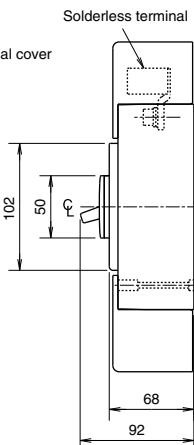


Wire size 75°C CU ONLY	Number of strands
4-2AWG	7
1-1/0AWG	19
3/0-4/0AWG	19
250-350kcmil	37

The tightening torque is different according to connected wire.
Refer to instruction manual for details.

Remark: Periodical retightening prevents overheating by the setting of twisted strands or the stress of heating and cooling.

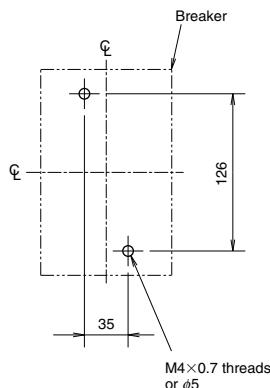

Drilling (Tapping)

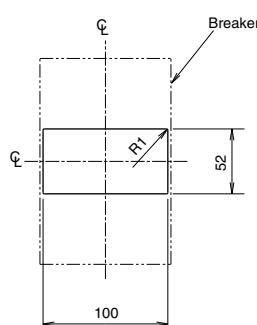

The drilling dimensions have a 1.0mm clearance on each side of breaker window frame.

Front-panel cutout

NF400-SWU NF400-HWU




NF400-SWU

Model		NF400-SWU		NF400-HWU	
Rated current In (A)		250 300		250 300	
Reference ambient temperature 40°C		350 400		350 400	
Number of poles		3	3		
UL 489 CSA C22.2 No.5	Rated voltage (VAC) AC	600Y/347V	600Y/347	600Y/347	600Y/347
		480V	20	25	25
IEC 60947-2 EN 60947-2 (lcu/lcs)	AC	240V	35	65	65
		Rated insulation voltage Ui (V)	65	100	100
Rated short-circuit breaking capacities (kA)	AC	690V	690	690	690
		690V	10/10(5/5) (*1)	15/10	15/10
		500V	30/30(25/25) (*1)	42/42	42/42
		440V	42/42(36/36) (*1)	65/65	65/65
		415V	45/45(36/36) (*1)	70/70	70/70
		400V	45/45(36/36) (*1)	70/70	70/70
		380V	50/50(42/42) (*1)	70/70	70/70
		230V	85/85(65/65) (*1)	100/100	100/100
Standard attached parts		Terminal screw: M12 bolt×35 (3-pole; 6pcs) Mounting screw: M6×60 (4screws) Insulating plate (1pce) Insulating barrier (4pcs) (Only for type with bar terminals)			


Note *1 In case of solderless terminal, interrupting capacity reduces: (/).

*2 0.1 for UL1053.


Operating Characteristics

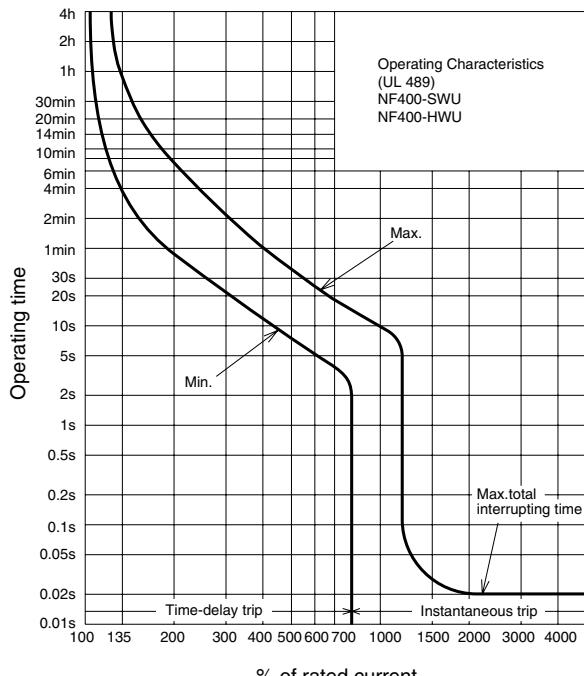

Internal Accessories

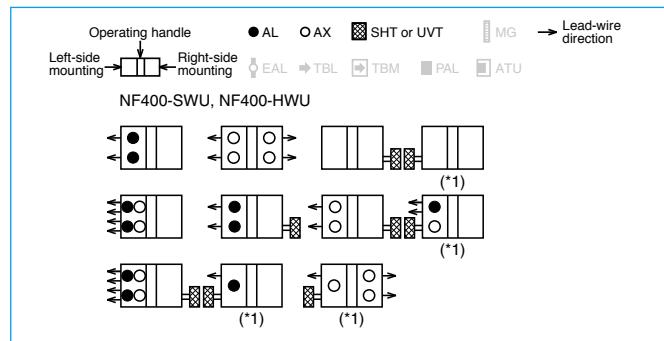

Temperature Compensation Curve

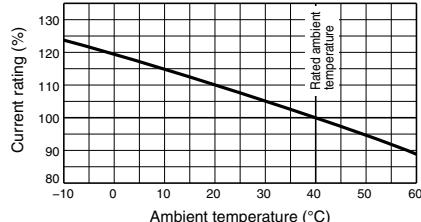


External Accessories


Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-4SUL	123	Terminal cover	Large	TC-L
	V V-4SUL	125			
	C C-4SWU	127			
Handle lock device	HL HL-4SWU	134	TCL-4SWU		128

Outline Drawing

Front connection (Solderless terminal)

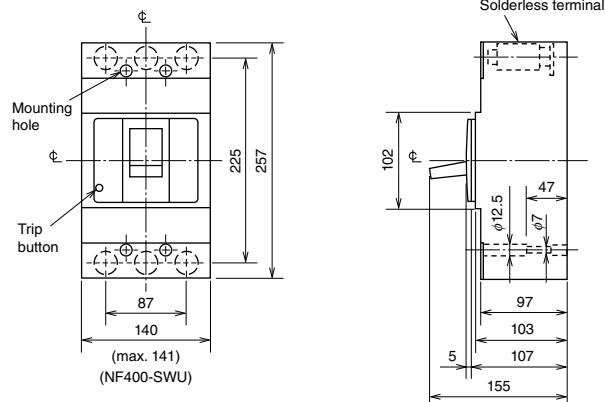

Hexagon socket set screw

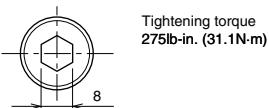

UL

Ampere ratings	Wire size	Number of strands
250A, 300A	250-350kcmil CU	37
250A	350kcmil AL	
350A, 400A	(2) 3/0AWG CU	19


IEC

Ampere ratings	Wire size (IEC 60228)	
	Class 2	Class 5
250A, 300A	70-185mm ²	95-185mm ²
350A, 400A	150-240mm ²	150-185mm ²



- 3. Use a wire size that can carry the rated current.
- 4. When using IEC Class 5 (multi-core wire), pay attention to strand breakage and pinching, etc., while tightening.
- 5. The NF400-HWU does not have a solderless terminal.

Remarks: 1. Do not remove solderless terminal in any case.
 2. When using the solderless terminals, conduct periodic inspections and tightening as the wires may wear down over use.


Front connection (Busbar terminal)

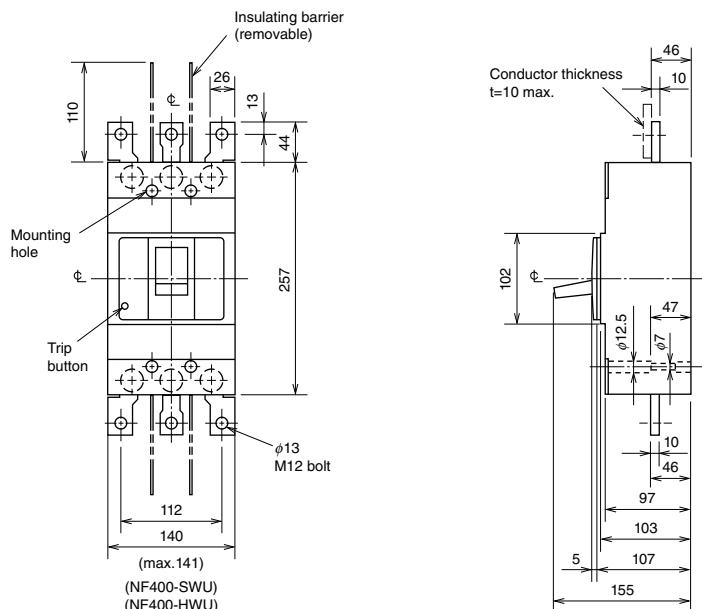

Remark: Do not remove busbar terminal in any case.

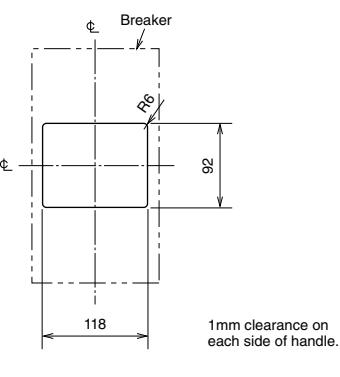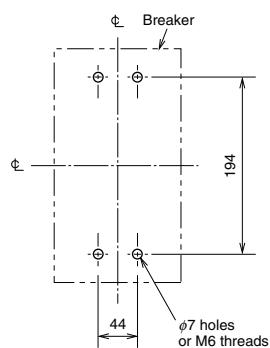

Remarks: When mounted in steel or cast box cover must be insulated as shown.
 58mm air gap to cover or 0.8mm fibre insulating plate extending 12.7mm out from each side of breaker.

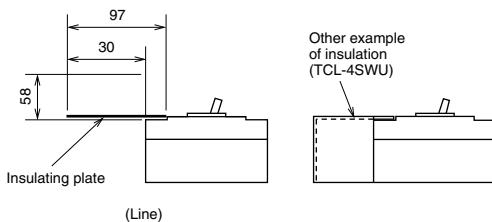


NF630-SWU NF630-HWU




Model		NF630-SWU		NF630-HWU	
Rated current In (A) Reference ambient temperature 40°C			500 600 630	500 600 630	
Number of poles			3	3	
Rated short-circuit breaking capacities (kA)	UL 489 CSA C22.2 No.5	Rated voltage (VAC)	600Y/347	600Y/347	600Y/347
		600Y/347V	20	25	
		480V	35	65	
		240V	85	100	
		Rated insulation voltage U_i (V)	690	690	
	IEC 60947-2 EN 60947-2 (Icu/ics)	690V	10/10	15/10	
		500V	30/30	42/42	
		440V	42/42	65/65	
		415V	45/45	70/70	
		400V	45/45	70/70	
		380V	50/50	70/70	
		230V	85/85	100/100	
Standard attached parts			Terminal screw: M12 bolt×40 (3-pole: 12pcs) Mounting screw: M6×35 (4pcs) Insulating plate (1pc) Insulating barrier (500A, 600A: 2pcs, 630A: 4pcs) (Only for type with bar terminals)		

Operating Characteristics

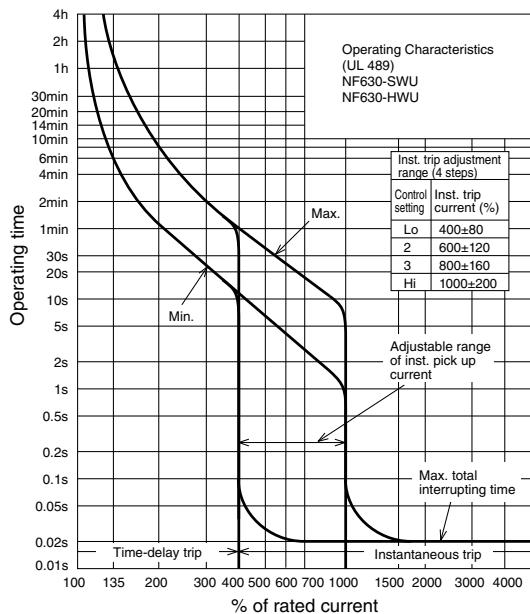


Internal Accessories

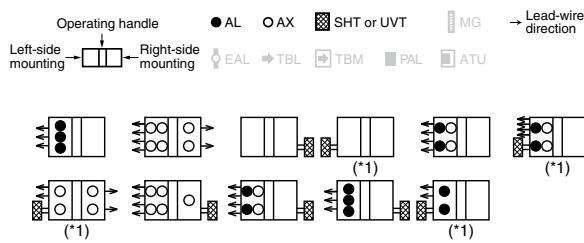

Note *1 Right-side mounting is standard of SHT and UVT. Specify separately for left-side mounting.

Temperature Compensation Curve

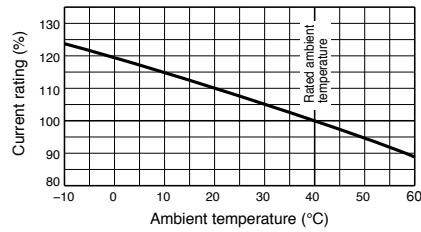


External Accessories

Accessories	Type name	Reference page	Accessories	Type name	Reference page
Operating handle	F F-6SUL	123	Terminal cover	Large	TC-L
	V V-6SUL	125			
Handle lock device	HL HL-4SWU	134	TCL-6SWU		128


Outline Drawing

Front connection (Solderless terminal)

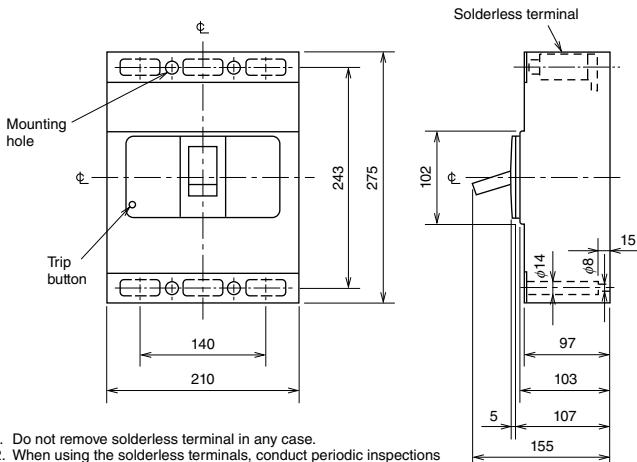

Remarks:
 1. Do not remove solderless terminal in any case.
 2. When using the solderless terminals, conduct periodic inspections and tightening as the wires may wear down over use.

Hexagon socket set screw

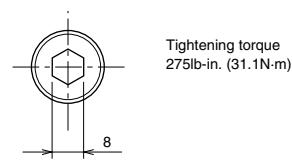

UL



Ampere ratings	Wire size	Number of strands
500A, 600A	(2) 250-350kcmil CU ONLY	37

IEC


Ampere ratings	Wire size (IEC 60228)	
	Class 2	Class 5
500A, 600A	(2) 95-185mm ²	(2) 120-185mm ²

- 3. Use a wire size that can carry the rated current.
- 4. When using IEC Class 5 (multi-core wire), pay attention to strand breakage and pinching, etc., while tightening.
- 5. The 630A and NF630-HWU does not have a solderless terminal.


Front connection (Busbar terminal)

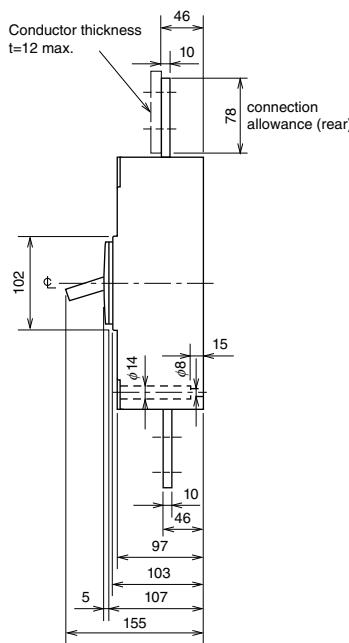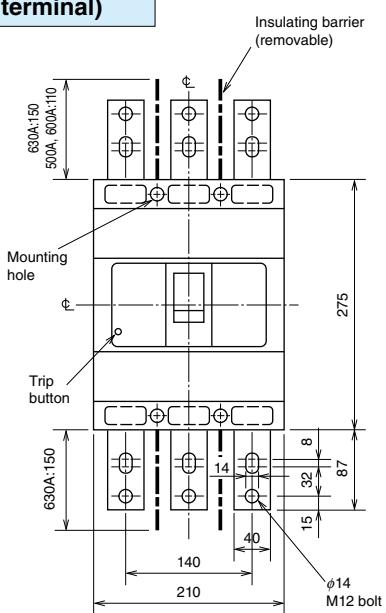

Remark: Do not remove busbar terminal in any case.

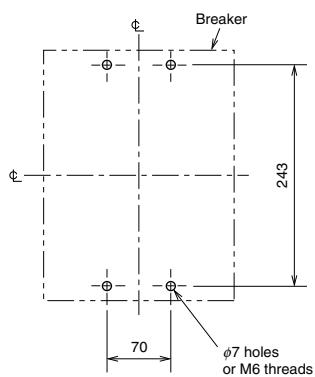


Drilling (Tapping)

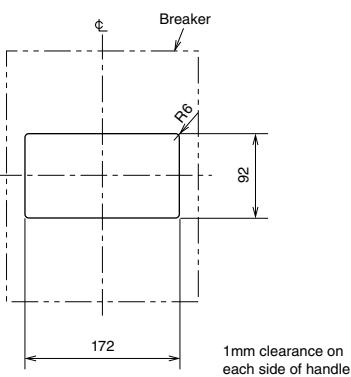

Front-panel cutout

Remarks: When mounted in steel or cast box cover must be insulated as shown.
 58mm air gap to cover or 0.8mm fibre insulating plate extending 12.7mm out from each side of breaker.

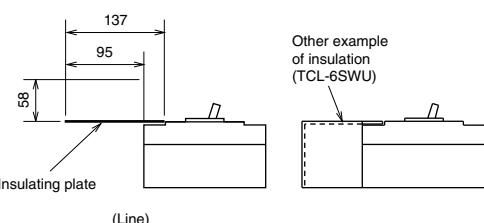

NF30-FAU NF50-FAU NV30-FAU NV50-FAU




NF30-FAU



NV30-FAU

Earth Leakage Tripping Characteristics

NV30-FAU
NV50-FAU
(UL 1053)

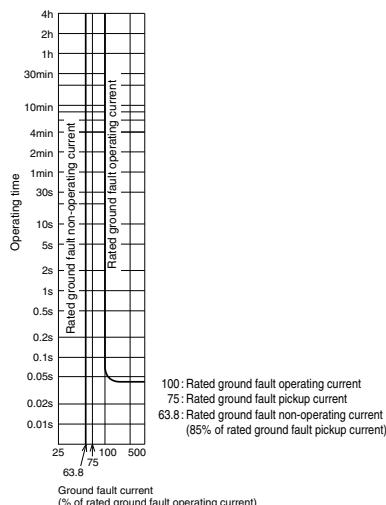

Model	NF30-FAU			NF50-FAU	
Rated current In (A) Reference ambient temperature 40°C	5 10 15 20 30			5 10 15 20 30 40 50	
Number of poles	2			2	3
Rated short-circuit breaking capacities (kA)	UL 1077 CSA 22.2 No.235	AC	240V	2.5 (*1)	
	DC	60V		1.5	
IEC 60947-2 EN 60947-2 (Icu/lcs)	Rated insulation voltage Ui (V)			250	
	AC	230V		2.5/1 (*2)	
	DC	60V		1.5/1	
Standard attached parts	IEC35 rail mounting claws				

Notes *1 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.



*2 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.

Model	NV30-FAU			NV50-FAU	
Rated current In (A) Reference ambient temperature 40°C	5 10 15 20 30			5 10 15 20 30 40 50	
Number of poles	2			2	3
Phase line	1φ2W			3φ3W 1φ2W	1φ2W 3φ3W 1φ2W
	AC	240V		30	
Rated current sensitivity (mA)	75% of $I_{\Delta n}$				
Pick-up current sensitivity UL 1053	0.04 (at $5I_{\Delta n}$)				
Operating time (sec) within at $5I_{\Delta n}$	Type AC				
Earth leakage protection characteristic	Mechanical type (button)				
Earth leakage indication system	UL 1077 CSA 22.2 No.235	AC	240V	2.5 (*1)	
	IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	230V	2.5/1 (*2)	
Standard attached parts	IEC35 rail mounting claws				

Notes *1 Rated short-circuit breaking capacity of rated current 5A is 1.5kA.


*2 Rated short-circuit breaking capacity of rated current 5A is 1.5/1kA.

Operating Characteristics

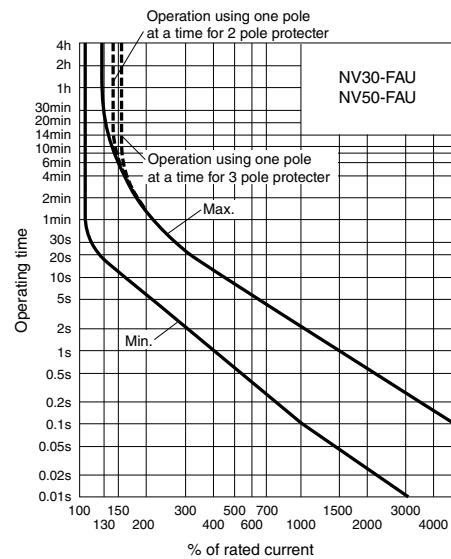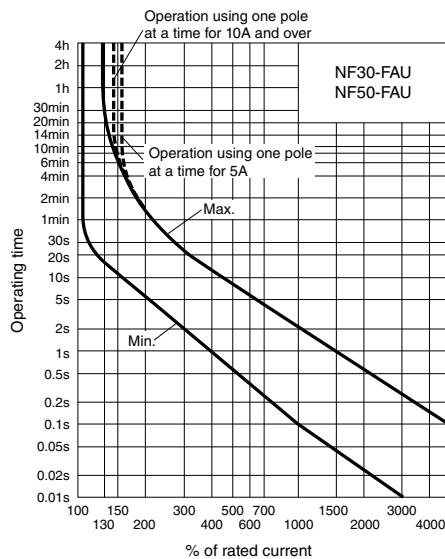


Internal Accessories

Type	NF30-FAU, NF50-FAU		NV30-FAU, NV50-FAU	
Number of poles Accessories	2P	3P	2P	3P
AL				
AX				
AL+AX				
SHT				
AL+SHT				

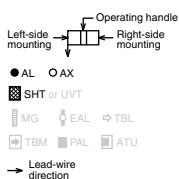

Temperature Compensation Curve

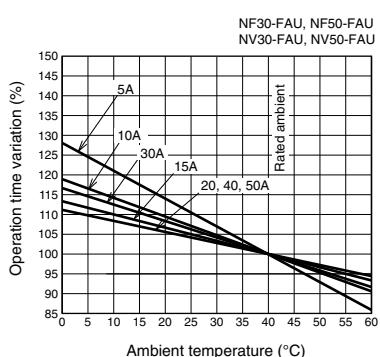


External Accessories

Accessories	Type name	Reference page
Terminal cover	Small TC-S	128
	Rear RTC	
	TCS-05FA2	
	TCS-05FA3	
Lock cover	LC	135
Handle lock device	HL	134

Note *1 It is recognition of UL (cURus), CSA.
 It is not recognition of CCC, TÜV, UKCA.

Outline Drawing

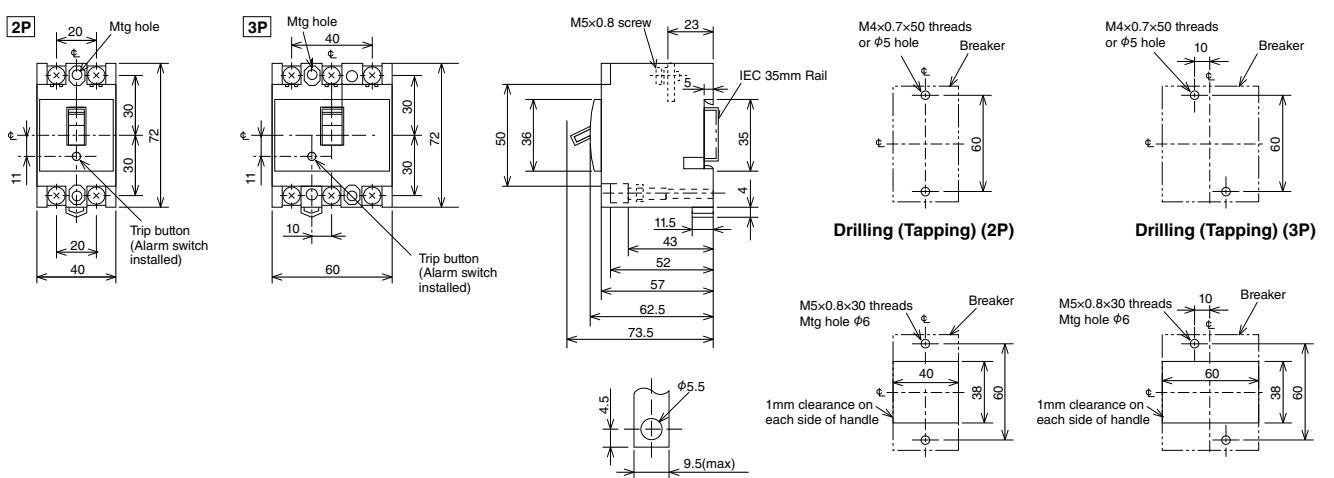

Remark : *1 Mounting screws are not attached.

NF50-FHU NF100-FHU NV50-FHU NV100-FHU



NF100-FHU




NV100-FHU

Model	NF50-FHU		NF100-FHU	
Rated current In (A) Reference ambient temperature 40°C	3 5 10 15 20 30 40 50		60 75 100	
Number of poles	2		3	
Rated short-circuit breaking capacities (kA)	UL 1077 CSA 22.2 No.235	AC	240V	5
	IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	500	5
Rated insulation voltage Ui (V)		400V	1.5/1	-
		230V	5/2	5/2
Standard attached parts		IEC35 rail mounting claws		


Model	NV50-FHU		NV100-FHU			
Rated current In (A) Reference ambient temperature 40°C	5 10 15 20 30 40 50		60 75 100			
Number of poles	2		3			
Phase line	1φ2W		3φ3W 1φ2W 1φ3W			
	1φ2W		3φ3W 1φ2W 1φ3W			
Rated current sensitivity (mA)	30 50 100					
Pick-up current sensitivity UL 1053	75% off Δn					
Operating time (sec) within at 5 Δn	0.04 (at 5 Δn)					
Earth leakage protection characteristic	Type AC					
Earth leakage indication system	Mechanical type (button)					
Rated short-circuit breaking capacities (kA)	UL 1077 CSA 22.2 No.235	AC	240V	5		
	IEC 60947-2 EN 60947-2 (Icu/lcs)	AC	230V	5/2		
Standard attached parts		IEC35 rail mounting claws				

Operating Characteristics

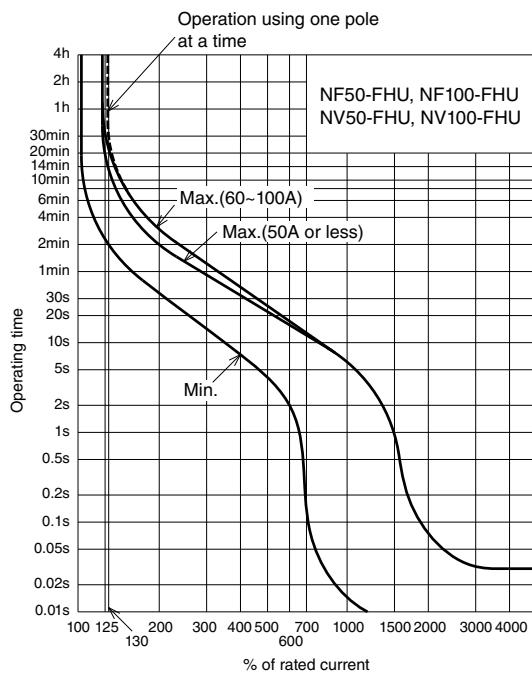

Earth Leakage Tripping Characteristics

NV50-FHU, NV100-FHU
(UL 1053)

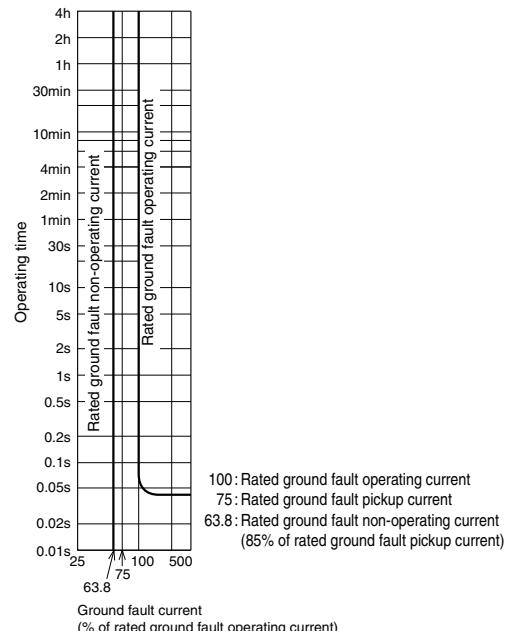

Outline Drawing


Internal Accessories

Type	NF50-FHU (*1)		NF100-FHU (*2)
Number of Accessories	2P	3P	3P
AL			
AX			
AL+AX			
SHT			
AL+SHT			

Type	NV50-FHU (*1)		NV100-FHU (*2)
Number of Accessories	2P	3P	3P
AL			
AX			
AL+AX			

Note *1 Lead wires are normally extended laterally.
Grooves are provided standard on the face of the breaker, allowing the extension of the lead wires along them.
*2 Lead wires are usually extended load side.

Temperature Characteristic Curve

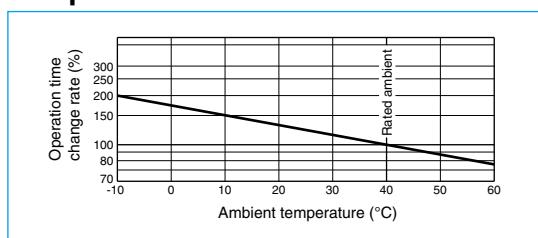


External Accessories

Accessories	Type name		Reference page
	Small	TC-S	
Terminal cover	TCS-05FH2		128
	TCS-05FH3		
	TCS-1FH3		
	TCL-05FH2		
	TCL-05FH3		
	TCL-1FH3		
Lock cover	LC (*1)	LC03CS	135
Handle lock device	HL (*1)	HL-05FH	134

Note *1 Not acquire UL (cURus), CCC, TÜV, UKCA.

Outline Drawing

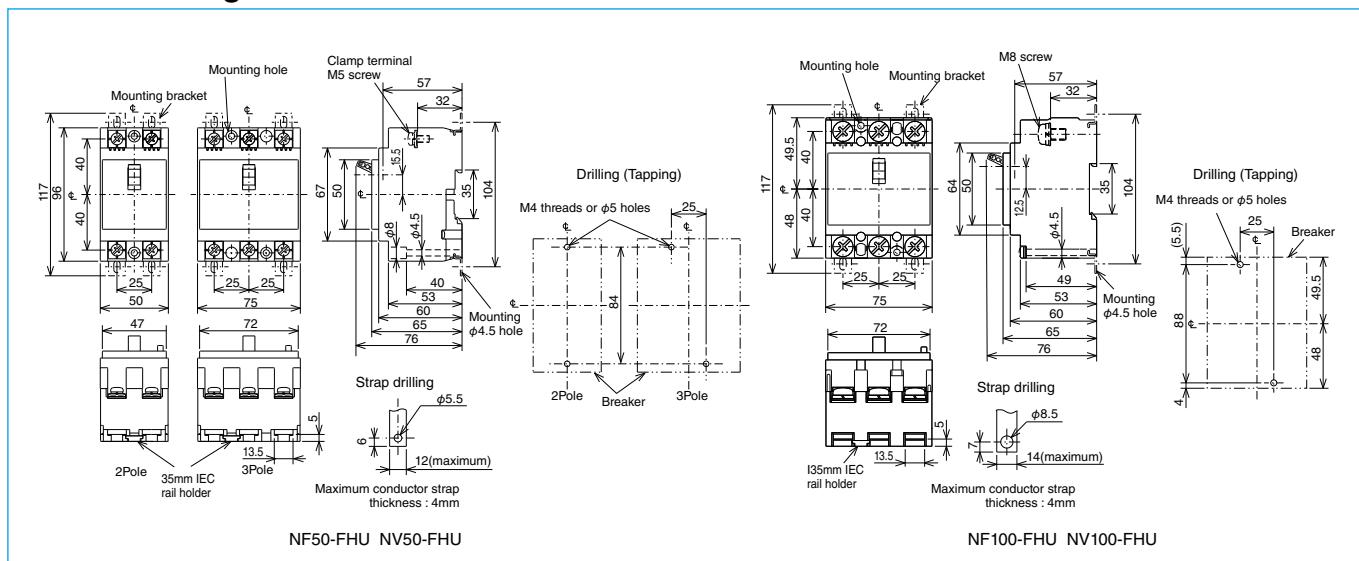


NF250-SEV with MDU NF250-HEV with MDU




NF250-SEV with MDU **NF250-SEV with MDU**
(Breaker mounting) (External mounting)

Model		NF250-SEV with MDU	NF250-HEV with MDU
Rated current In (A) Reference ambient temperature 40°C		Adjustable 125-250 (12.5A step)	Adjustable 125-250 (12.5A step)
Number of poles		3	4
Rated insulation voltage Ui (V)		690	690
Rated short-circuit breaking capacity (kA) IEC 60947-2 (icu/lcs)	AC	690V	8/8
		500V	18/18
		440V	36/36
		415V	36/36
		400V	36/36
		380V	36/36
		230V	85/85
			100/100
Standard attached parts (Front connection)		Mounting screw M4 × 0.7 × 55 (3P: 2psc, 4P: 4pcs) Insulation barrier (3P: 4pcs, 4P: 6pcs)	
MDU accessories	External mounting	MDU, Mounting plate, Mounting plate screw, MDU mounting screw	
	Breaker mounting	MDU, Connection cable (for breaker mounting)	
	Panel mounting	MDU, Panel mounting bracket, Panel mounting screw, Connection cable (for panel mounting)	

Operating Characteristics

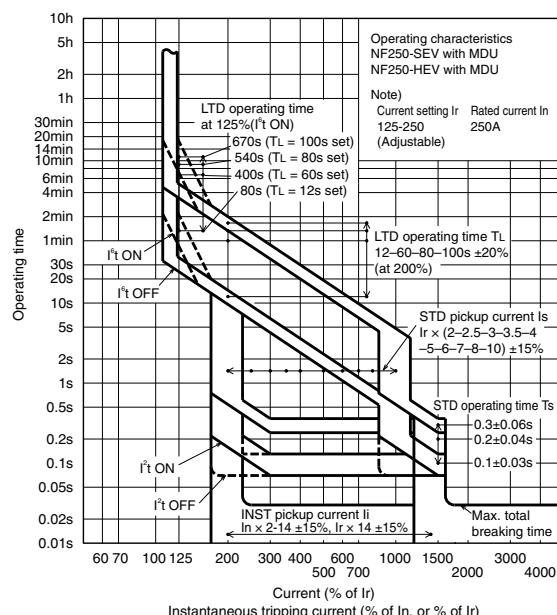


Current Reducing Curve

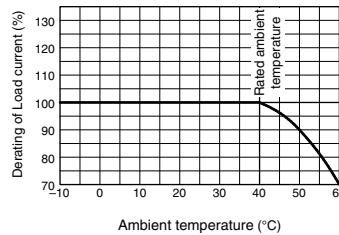

The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40°C.

Internal Accessories

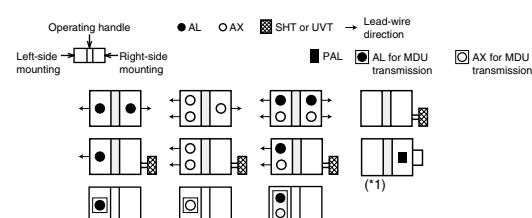

Note *1 SLT-equipped is standard. Control voltage (100-240VAC/100-240VDC) is necessary.

External Accessories


Accessories		Type name	Reference page	Accessories		Type name	Reference page
Operating handle (*1)	F	F-2SV	123	Mechanical interlock	MI	3P MI-05SV3 4P MI-2SV4	136
	V	V-2SV	125	Terminal cover	Small	TCS 4P TCS-2SV4	
Handle lock device	LC	LC-05SV	135		Large	3P TCS-2SV3 (*4) 4P TCS-2SV4 3P TCL-2SV3 (*4) 4P TCL-2SV4	
	HL (*2)	HLF-05SV			Skeleton	3P TTC-2SV3 (*4) 4P TTC-2SV4	
	HLN-05SV		134		Rear	3P BTC-2SV3 (*4) 4P BTC-2SV4	128
	HL-S (*1)	HLS-2SV		Electrical operation device (*1)		(*3)	140

Notes
 *1 Available only for the MDU panel mounting type.
 *2 HLF types are used for OFF lock and HLN types for ON lock.
 *3 Specify the working voltage.
 *4 In the case of the MDU breaker mounting type, specify the model name with MP at the end.


Outline Drawing

Front connection

MDU external mounting

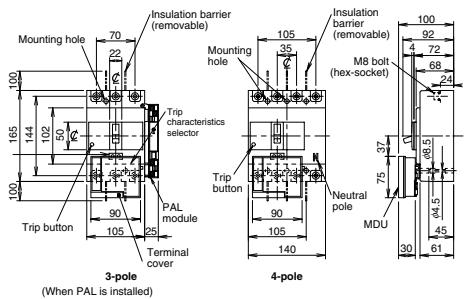


MDU breaker mounting


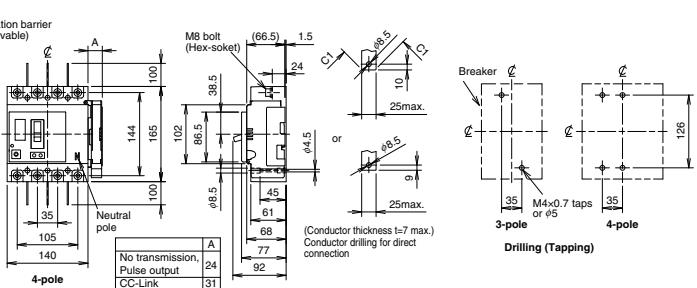


Rear connection

MDU external mounting

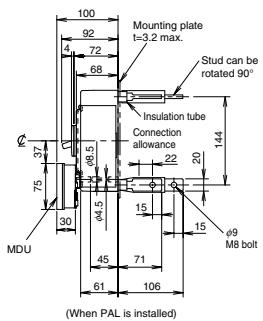


MDU breaker mounting

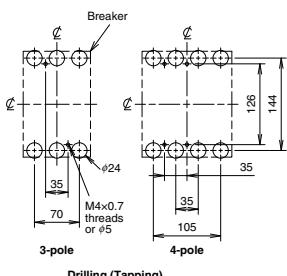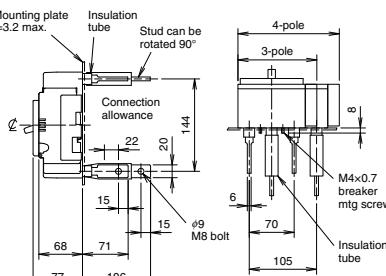

Front-panel cutout


MDU breaker mounting

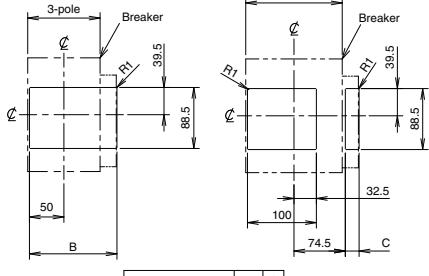


MDU specification	B	C
No transmission, Pulse output	127	20
CC-Link	134	27

1.0mm clearance on each side of handle frame


MDU external mounting

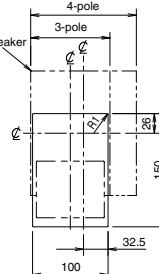

MDU panel mounting

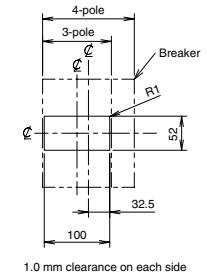

NF400-SEW with MDU NF400-HEW with MDU

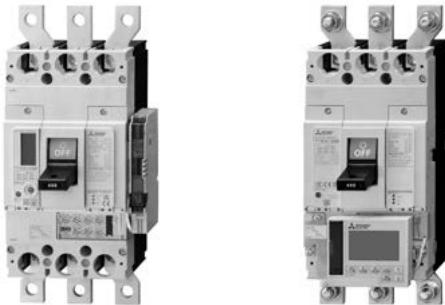


NF400-SEW with MDU
(Breaker mounting)


NF400-SEW with MDU
(External mounting)

Model		NF400-SEW with MDU	NF400-HEW with MDU
Rated current In (A) Reference ambient temperature 40°C		Adjustable 200 225 250 300 350 400	
Number of poles		3	4
Rated operational voltage Ue V		690	690
Rated short-circuit breaking capacity (kA)	IEC 60947-2 (Icu/lcs)	AC	
690V			10/10
500V			30/30
440V			42/42
415V			50/50
400V			50/50
380V			50/50
230V			85/85
200V			100/100
			85/85
			100/100
Standard attached parts (Front connection)		Breaker	Mounting screw M6 × 60 (4pcs) Insulation barrier (3P: 4pcs, 4P: 6pcs)
MDU accessories		External mounting	MDU, Mounting plate, Mounting plate screw, Connection cable, MDU mounting screw
		Breaker mounting	MDU, Connection cable (for breaker mounting)
		Panel mounting	MDU, Panel mounting bracket, Panel mounting screw, Connection cable (for panel mounting)

Operating Characteristics

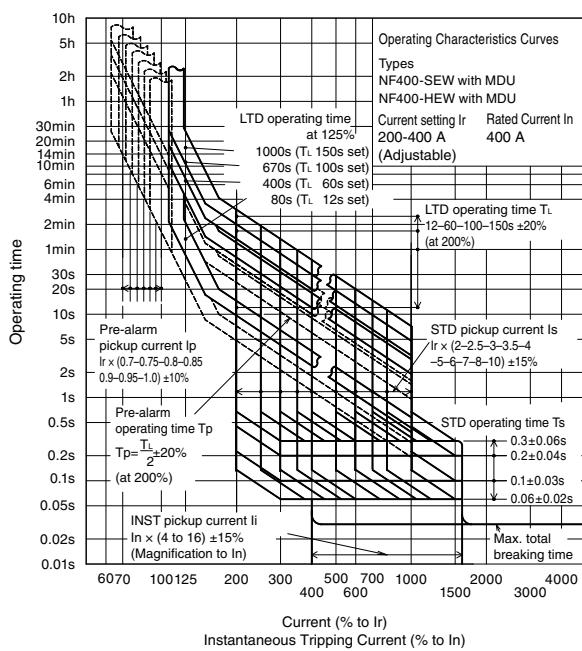


Internal Accessories

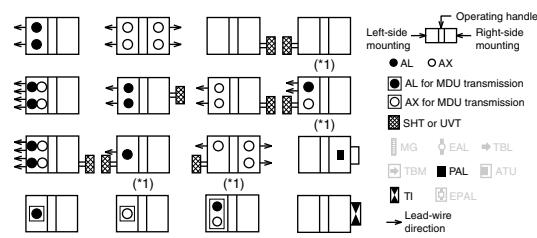

Note *1 Right side mounting is standard of SHT and UVT. Specify separately for left side mounting.

Current Reducing Curve

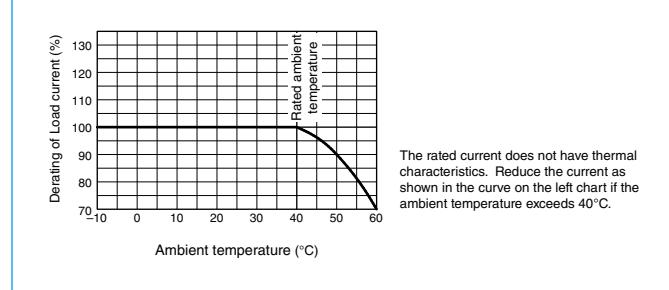

External Accessories

Accessories		Type name		Reference page	Accessories		Type name		Reference page
		Breaker mounting	Panel mounting				Breaker mounting	Panel mounting	
Operating handle	F	—	F-4S	123	Large	TC-L	3P	—	TCL-4SW3 (*1)
	V	—	V-4S				4P	—	TCL-4SW4 (*1)
Handle lock device	HL	HL-4SW	HL-4SW	134	Skeleton	TTC	3P	TTC-4SW3-MDUB	TTC-4SW3
	HL-S	—	HLS-4SW				4P	TTC-4SW4-MDUB	TTC-4SW4
Mechanical interlock	MI	3P	MI-4SW3	MI-4SW3	Rear	BTC	3P	BTC-4SW3 (*1) Only line side	BTC-4SW3 (*3)
	MI	4P	MI-4SW4	MI-4SW4			4P	BTC-4SW4 Only line side	BTC-4SW4
Auxiliary handle	HT	HT-4SW		135	Electrical operation device	NFM	3P	(*2)	140
							4P		

Notes *1 For NF400SEW with MDU.

*2 Specify the operation method and voltage. Order in combination with the breaker unit.


*3 This is for NF400-SEW with MDU. For rear terminal cover of NF400-HEW with MDU, use PTC-4SW3.

128


Outline Drawing

Front connection

MDU external mounting

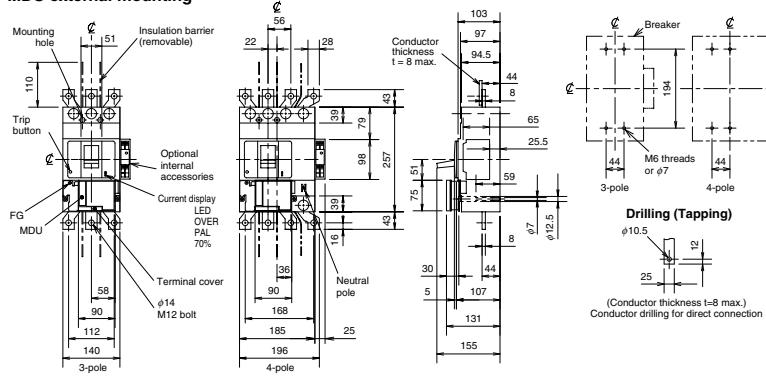


MDU breaker mounting

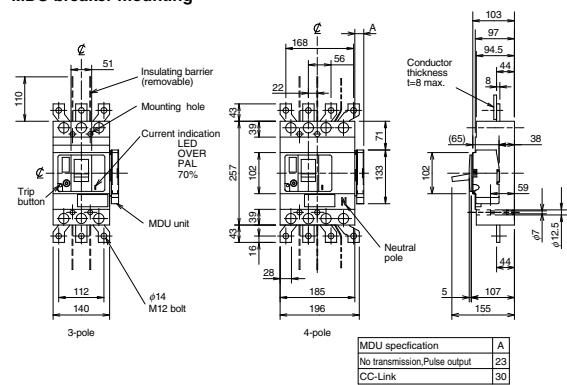


Rear connection

MDU external mounting

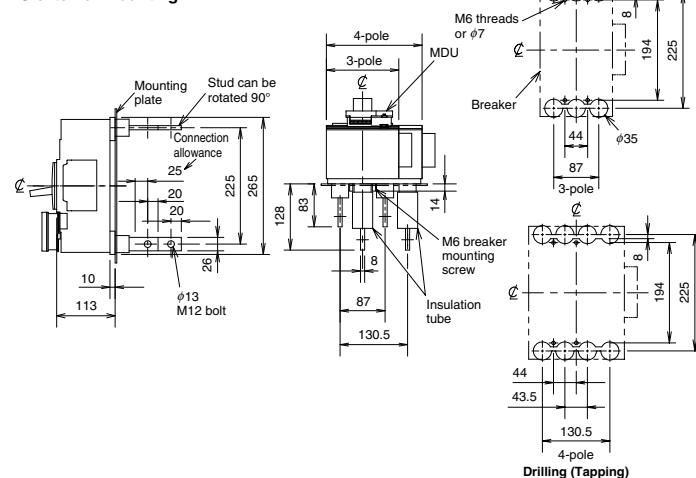


MDU breaker mounting

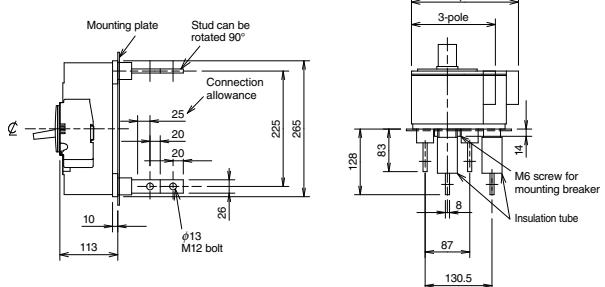


Note: When the insulating barrier for rear connection is used, mounting holes are added.

Front-panel cutout


MDU external mounting

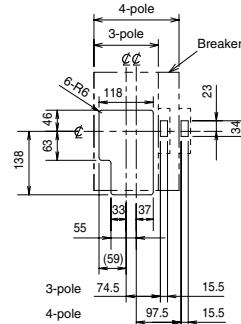

MDU panel mounting

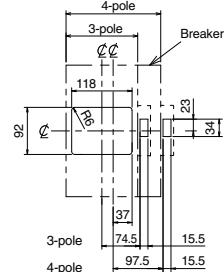

MDU breaker mounting

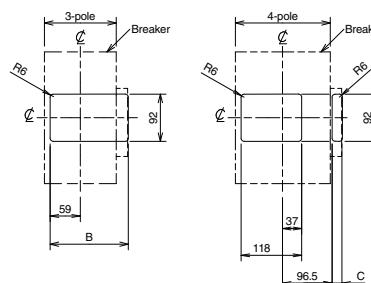

MDU specification	B	C
No transmission, Pulse output	153	20
CC-Link	160	27

NF800-SEW with MDU NF800-HEW with MDU





NF800-SEW with MDU
(Breaker mounting)

NF800-SEW with MDU
(External mounting)


Model		NF800-SEW with MDU	NF800-HEW with MDU	NF800-SEW with MDU	NF800-HEW with MDU	
Rated current In (A) Reference ambient temperature 40°C		Adjustable 300 350 400 500 600 630		Adjustable 400 450 500 600 700 800		
Number of poles		3	4	3	4	
Rated operational voltage Ue V		690	690	690	690	
Rated short-circuit breaking capacity (kA) IEC 60947-2 (Icu/lcs)	AC	690V	10/10	15/15	10/10	
		500V	30/30	50/50	30/30	
		440V	42/42	65/65	42/42	
		415V	50/50	70/70	50/50	
		400V	50/50	70/70	50/50	
		380V	50/50	70/70	50/50	
		230V	85/85	100/100	85/85	
		200V	85/85	100/100	85/85	
					100/100	
Standard attached parts (Front connection) (*1)		Breaker				
		Mounting screw M6 × 35 (4pcs) Insulation barrier (3P: 2pcs, 4P: 3pcs)				
External mounting		MDU, Mounting plate, Mounting plate screw, Connection cable, MDU mounting screw				
MDU accessories		MDU, Breaker mounting plate, Mounting screw for breaker mounting plate, Connection cable (for breaker mounting), MDU Mounting screw				
Panel mounting		MDU, Panel mounting bracket, Panel mounting nut, Connection cable (for panel mounting), MDU Mounting screw				

Note *1 4-pole models are provided with auxiliary handle.

Operating Characteristics

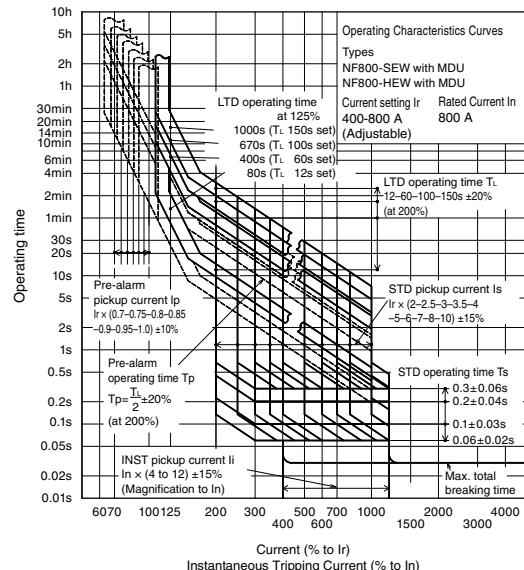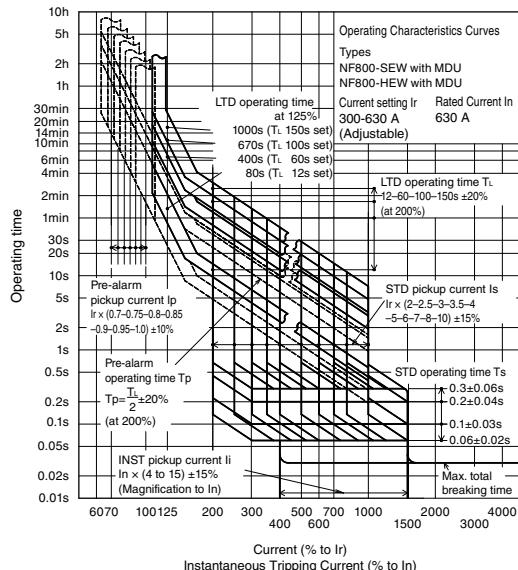


Internal Accessories

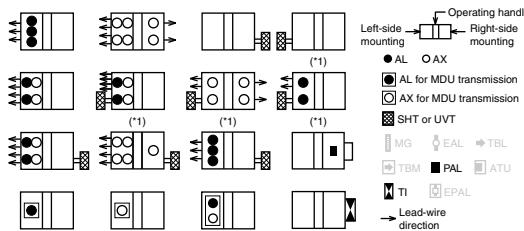

Note *1 Right side mounting is standard of SHT and UVT. Specify separately for left side mounting.

Current Reducing Curve

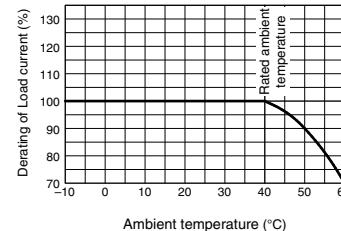


The rated current does not have thermal characteristics. Reduce the current as shown in the curve on the left chart if the ambient temperature exceeds 40°C.

External Accessories

Accessories		Type name		Reference page	Accessories			Type name		Reference page	
		Breaker mounting	Panel mounting					Breaker mounting	Panel mounting		
Operating handle	F	–	F-8S	123	Large	TC-L	3P	–	TCL-8SW3	128	
	V	–	V-8S	125			4P	–	TCL-8SW4		
Handle lock device	HL	HL-4SW	HL-4SW	134	Skeleton	TTC	3P	TTC-8SW3-MDUB	TTC-8SW3	128	
	HL-S	–	HLS-8SW				4P	TTC-8SW4-MDUB	TTC-8SW4		
Mechanical interlock	MI	3P	MI-8SW3	136	Rear	BTC	3P	BTC-8SW3 Only line side	BTC-8SW3	128	
		4P	MI-8SW4	136			4P	BTC-8SW4 Only line side	BTC-8SW4		
Auxiliary handle	HT	HT-4SW	HT-4SW	135	Electrical operation device		3P	–	(*1)	140	
Note *1 Specify the operation method and voltage. Order in combination with the breaker unit.											


Front connection

MDU external mounting

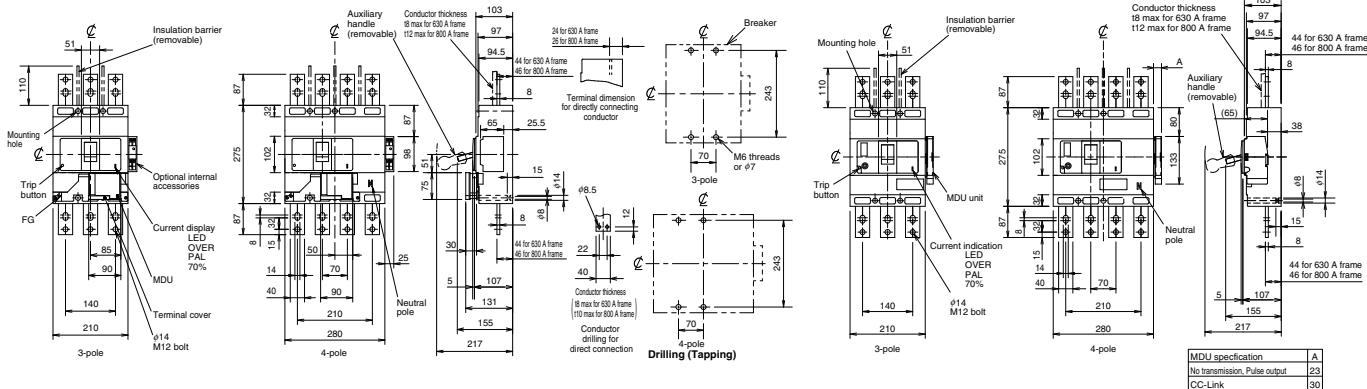


Rear connection

MDU external mounting

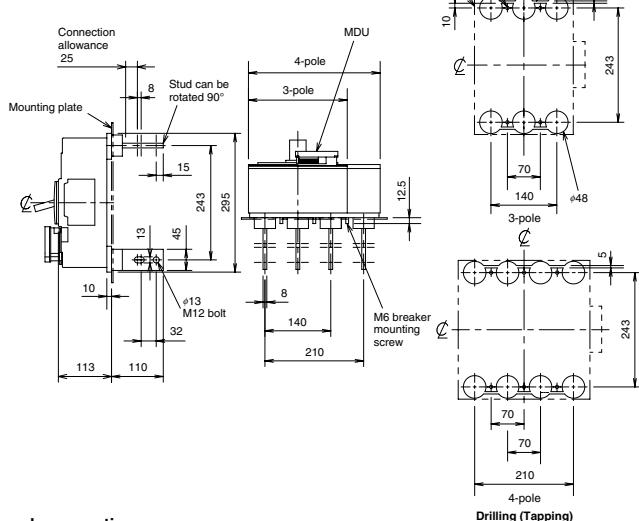


MDU breaker mounting

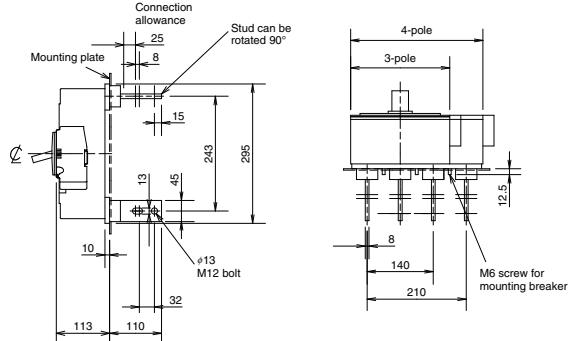


Note: When the insulating barrier for rear connection is used, mounting holes are added.

MDU breaker mounting

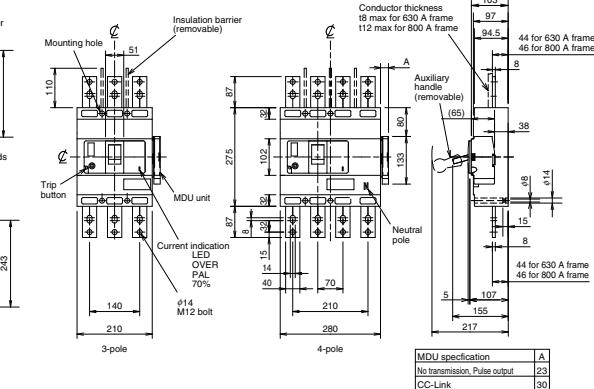


Front-panel cutout


MDU external mounting

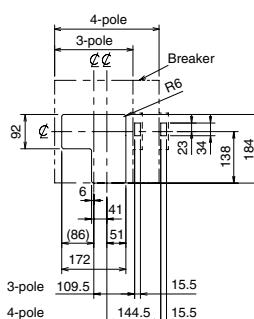

MDU panel mounting

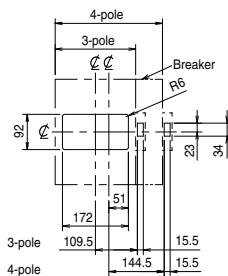

MDU breaker mounting

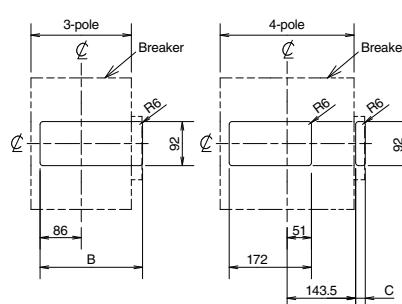

MDU specification	B	C
No transmission, Pulse output	215	215
CC-Link	222	222


7 Characteristics and Dimensions

4

Measuring Display Unit Breakers

MDU-BN (No transmission), MDU-BP (Pulse output)

Panel mounting

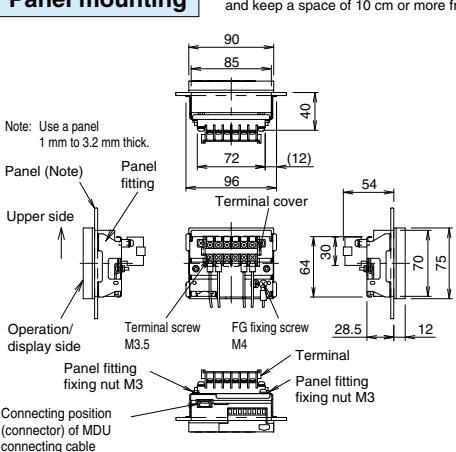


When installing, ensure a distance larger than the following size, and keep a space of 10 cm or more from the distribution line.

Model	A	B
NF250-SEV with MDU	198	158
NF250-HEW with MDU	208	
NF400-SEV with MDU	244	205
NF400-HEW with MDU	374	
NF800-SEW with MDU (630)	253	
NF800-SEW with MDU	263	221
NF800-HEW with MDU	383	

Terminal arrangement


Secure the wires with cable clamps, etc.

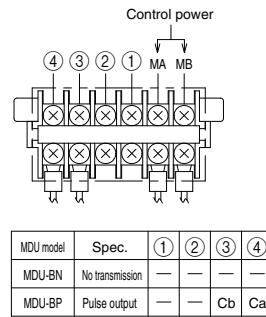

Note: In the case of front connection, keep a sufficient distance from the connecting wires and insulating barrier.

MDU-BC (CC-Link), MDU-BM (MODBUS)

Panel mounting

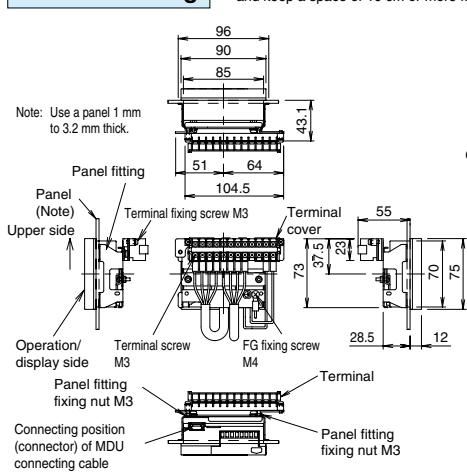


When installing, ensure a distance larger than the following size, and keep a space of 10 cm or more from the distribution line.

Model	A	B
NF250-SEV with MDU	218	158
NF250-HEW with MDU	228	
NF400-SEV with MDU	263	205
NF400-HEW with MDU	393	
NF800-SEW with MDU (630)	272	
NF800-SEW with MDU	282	221
NF800-HEW with MDU	402	


Terminal arrangement

Secure the wires with cable clamps, etc.

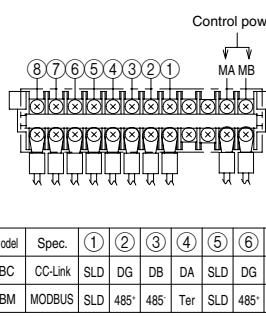

Note: In the case of front connection, keep a sufficient distance from the connecting wires and insulating barrier.


Breaker mounting

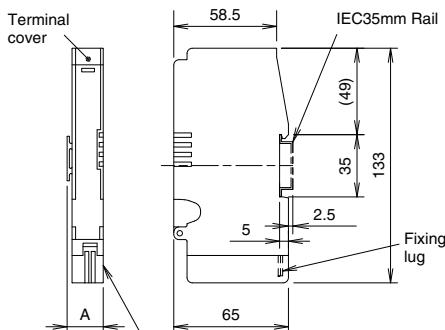

MDU spec.	A
No transmission, Pulse output	21
CC-Link	28

Terminal arrangement

Figure is removed the terminal cover.

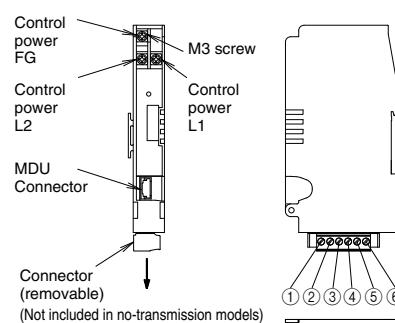


MDU spec.	①	②	③	④	⑤	⑥
No transmission	—	—	—	—	—	—
Pulse output	—	—	—	—	Cb	Ca
CC-Link	—	SLD	—	DG	DB	DA

(Tightening torque Line side 0.6±0.1N·m Load side 0.55±0.05N·m)

MDU terminal arrangement

In the figure below the terminal cover is removed. Secure the wires with cable clamps, etc.

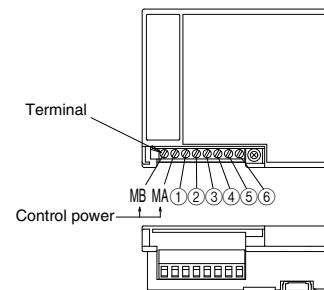

Model	Spec.	①	②	③	④	⑤	⑥
MDU-BN	No transmission	—	FG	—	—	—	—
MDU-BP	Pulse output	—	FG	—	—	Cb	Ca
MDU-BC	CC-Link	—	FG	SLD	DG	DB	DA
MDU-BM	MODBUS	—	FG	SLD	485	485	Ter

(Tightening torque 0.55±0.05N·m)

MEMO



NF63-HDV




NF63-HDV

Model		NF63-HDV				
Rated current In(A)		15 20 30 40 50				
Reference ambient temperature 40°C		15 20 30 40 50				
Number of poles		2				
Rated insulation voltage Ui(V)		600				
Rated short-circuit breaking capacity(kA)	IEC 60947-2 (lcu/lcs)	DC	400V	10/5	—	—
			600V	—	5/5	
Standard attached parts (front connection)		Terminal screw: M5×14 (2P: 4pcs, 3P: 6pcs) Mounting screw: M4×0.7×55(2P and 3P: 2pcs) Insulation barrier: (2P: 1pcs, 3P: 2pcs)				


Operating Characteristics

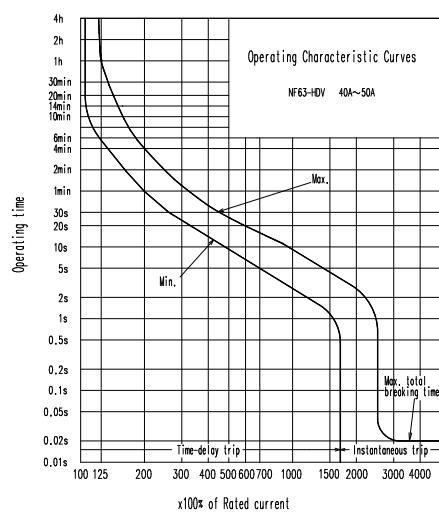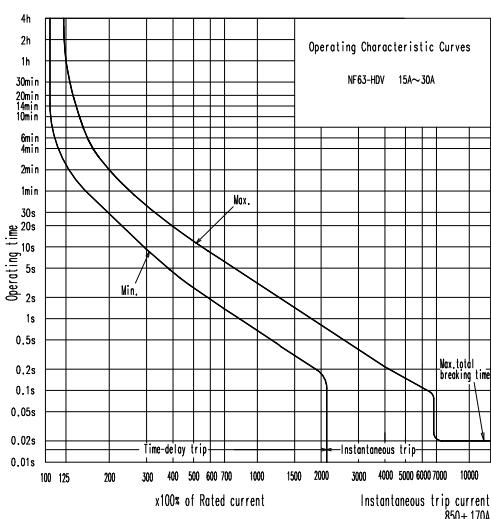

Temperature Compensation Curve

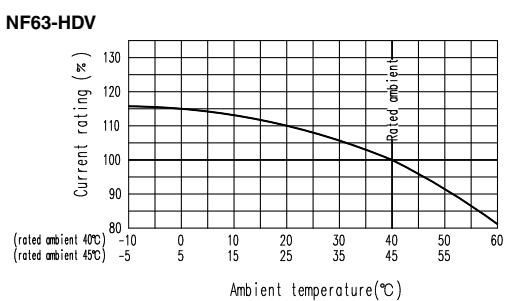

Internal Accessories

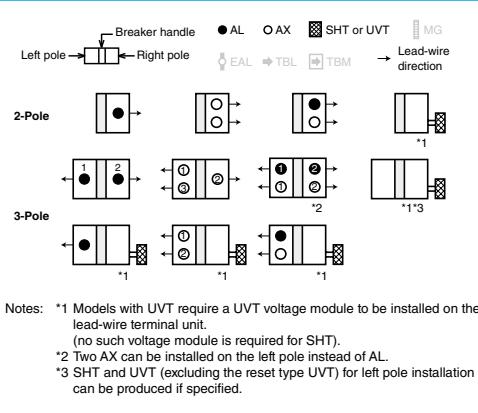



External Accessories

Accessories		Type name	Reference page	Accessories		Type name	Reference page		
Operating handle	F	2P F-05SV2	123	Small	TC-S	2P TCS-05SV2	128		
		3P F-05SV				3P TCS-05SV3			
	V	2P V-05SV2	125			2P TCL-05SV2			
		3P V-05SV				3P TCL-05SV2L			
Lock cover	LC	LC-05SV	135	Large	TC-L	TCL-05SV3			
Handle lock device	HL(*1)	HLF-05SV	134			TCL-05SV3L			
		HLN-05SV				2P BTC-05SV2			
	HL-S	HLS-05SV				3P BTC-05SV3			
Note *1 HLF types are used for OFF lock and HLN types for ON lock.				Rear	BTC	2P BTC-2SV3			
				Terminal cover	PTC	2P PTC-05SV2			
						IEC35mm rail mounting adapters DIN-05SV	143		

Outline Drawing


NF63-HDV 2P

Front connection

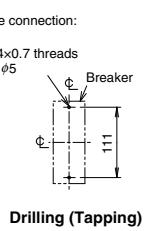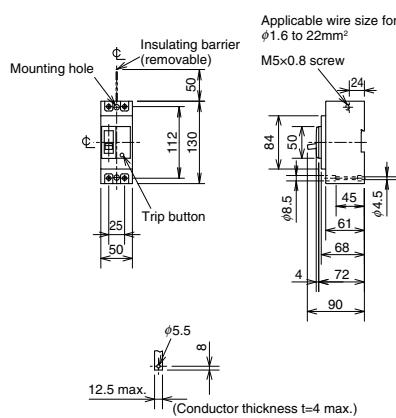


Conductor drilling for direct connection

Rear connection


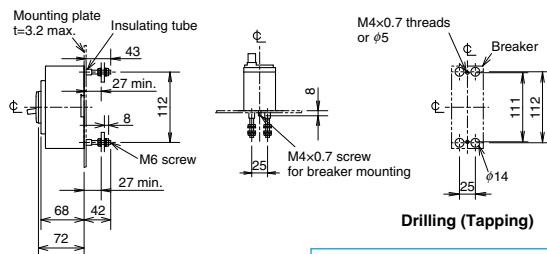


Drilling (Tapping)

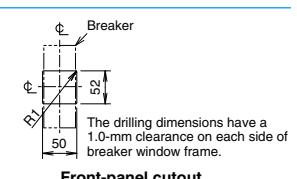

Front-panel cutout

Plug-in

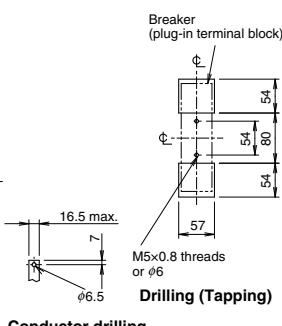
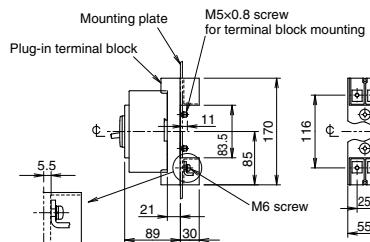


Details of terminal

Conductor drilling


NF63-HDV 3P

Front connection

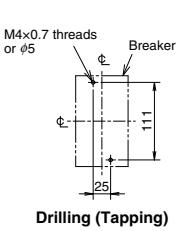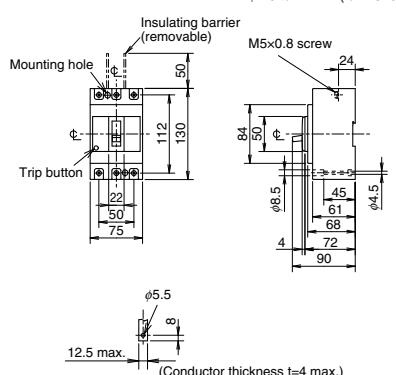


Conductor drilling for direct connection

Rear connection

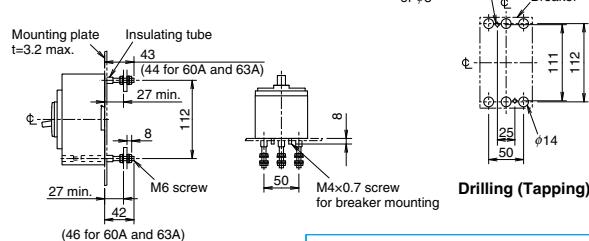

Drilling (Tapping)

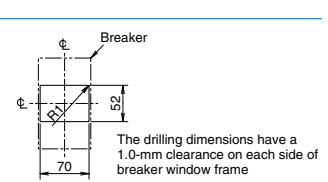

Front-panel cutout


NF125-HDVA NF250-HDVA




NF250-HDVA

Model		NF125-HDVA		NF250-HDVA	
Rated current In(A) Reference ambient temperature 40°C		125		125 150 175 200 225	250
Number of poles			4		
Rated insulation voltage Ui(V)			1000		
Rated short-circuit breaking capacity(kA)	IEC 60947-2 (Icu/lcs)	DC	1000V	10/5	
Standard attached parts (front connection)			Terminal screw: M8 bolt ×16 (4pcs) Mounting screw: M4x0.7x55(4pcs) Insulation barrier: (6pcs)		


Operating Characteristics

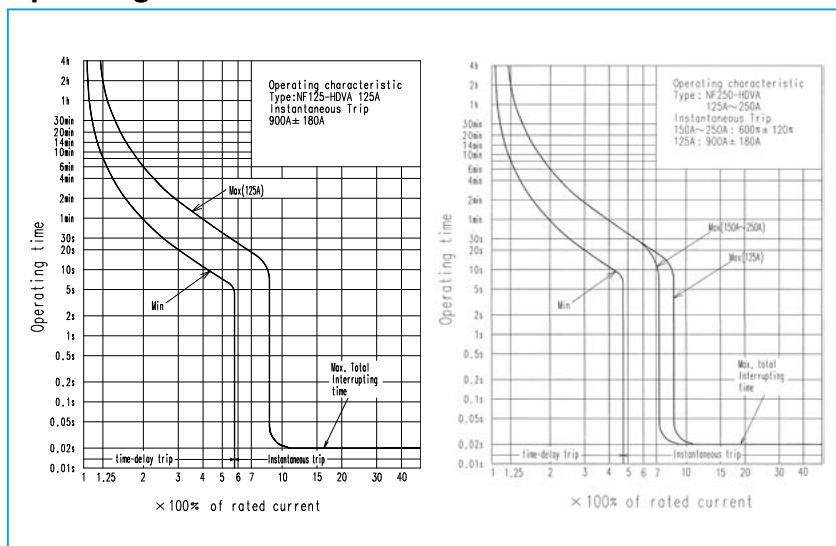

Temperature Compensation Curve

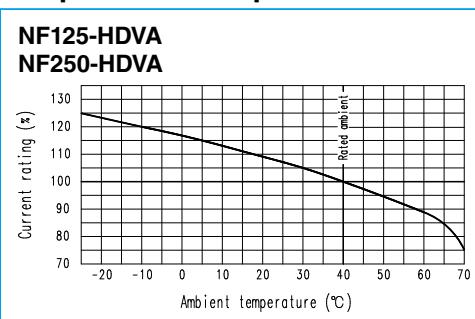

Internal Accessories

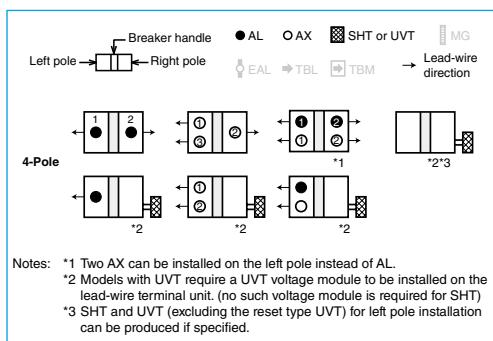

Notes: *1 Two AX can be installed on the left pole instead of AL.

*2 Models with UVT require a UVT voltage module to be installed on the lead-wire terminal unit. (no such voltage module is required for SHT)

*3 SHT and UVT (excluding the reset type UVT) for left pole installation can be produced if specified.

External Accessories

NF125-HDVA/NF250-HDVA


Accessories		Type name	Reference page	Accessories				Type name	Reference page
Operating handle	F	F-2SV	123	Terminal cover	Large	TC-L	4P	TCL-2SV4	128
	V	V-2SV	125						
Lock cover	LC	LC-05SV	135						
Handle lock device	HL(*1)	HLF-05SV							
		HLN-05SV							
	HLS	HLS-2SV	134						

Note *1 HLF types are used for OFF lock and HLN types for ON lock.


Outline Drawing

NF125-HDVA/NF250-HDVA 4P


Front connection

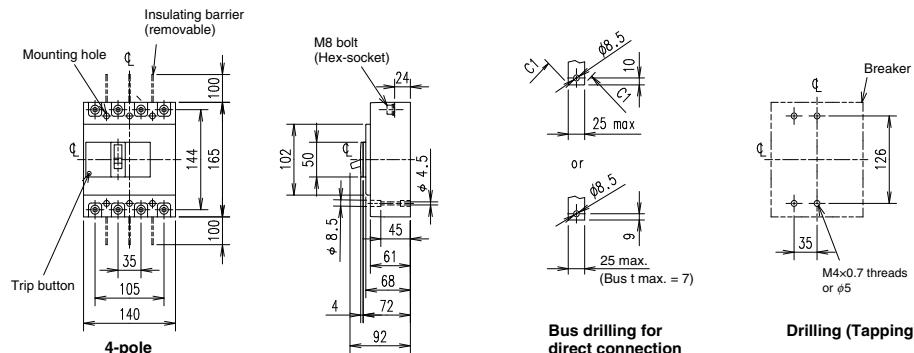

Rear connection

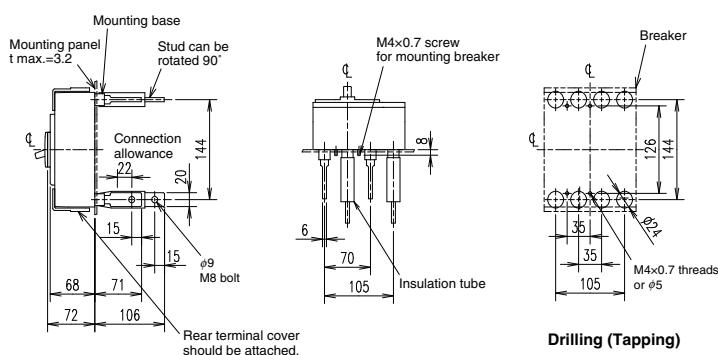


Drilling (Tapping)

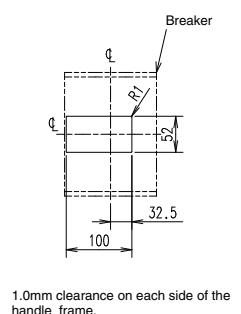

Front-panel cutout

Arc-Space

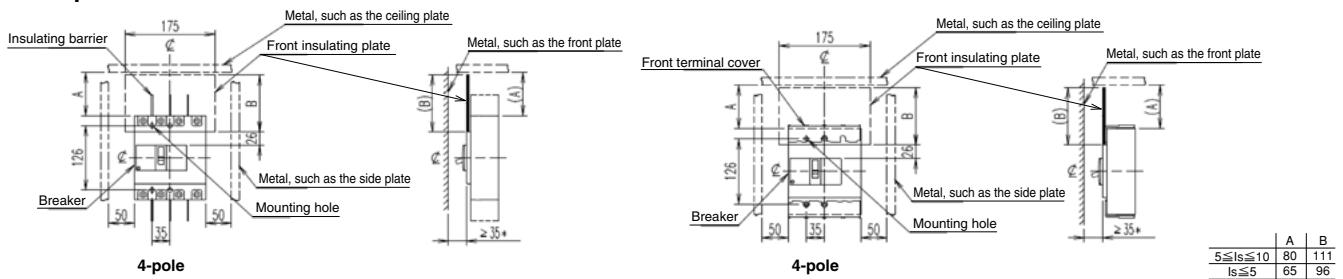

NF400-HDW NF800-HDW





NF800-HDW



Model				NF400-HDW		NF800-HDW	
Rated current In(A) Reference ambient temperature 40°C				250 300 350 400		500 600 630 700 800	
Number of poles		3		4		3	
Rated insulation voltage Ui(V)		800		1000		800	
Rated short-circuit breaking capacity(kA)	IEC 60947-2 (lcu/lcs)	DC	1000V 750V	—	10/5	—	10/5
Standard attached parts	Front connection			Mounting screw: M6x72(4pcs) Insulation barrier: (3P: 4pcs, 4P: 6pcs)		Mounting screw: M6x40(4pcs) Insulation barrier: (3P: 2pcs, 4P: 3pcs)	
	Rear connection			Mounting screw: M6x72(4pcs)		Mounting screw: M6x40(4pcs)	

Note *1 An auxiliary handle is included with the 4-pole model of the NF800-HDW.


Operating Characteristics

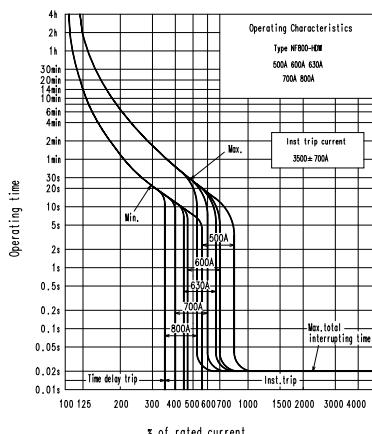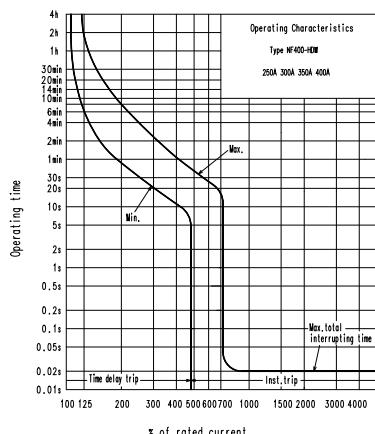

Temperature Compensation Curve

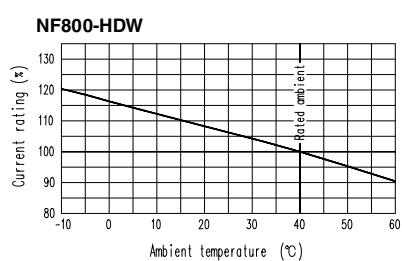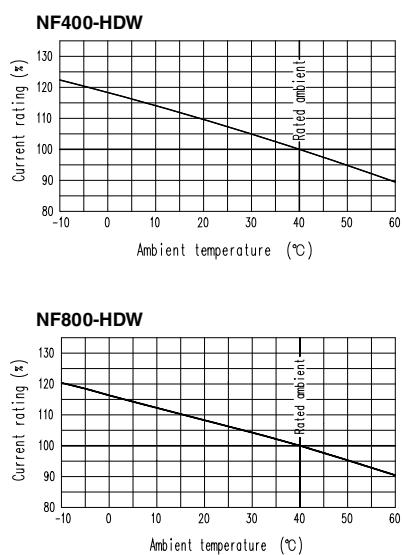

Internal Accessories

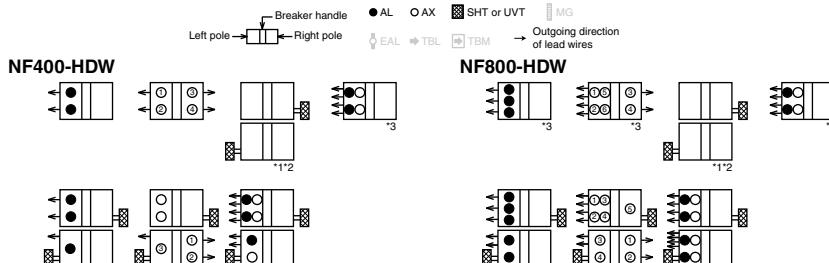

Notes
 *1 When UVT is provided, the UVT voltage module will come in the vertical lead wire terminal block type. (SHT does not have a voltage module.)
 *2 SHT and UVT are installed on the right pole as standard. Please specify if SHT and UVT are required to be installed on the left pole.

*3 In the case where three or more accessories are installed on the left pole side and AL, AX or AL and AX are installed on the pole on which SLT, SHT or UVT is installed, SLT will be manufactured to order.

*4 When AL, AX or AL and AX are installed on the pole on which UVT is installed, the UVT voltage module must be installed separately.

Remarks
 1 The encircled numbers indicate the order of installation.

2 AL:AX for minute load are also available.

External Accessories

NF400-HDW

Accessories		Type name	Reference page
Operating handle	F	F-4S	123
	V	V-4S	125
Terminal cover	Large	TC-L 3P TCL-4SW3 4P TCL-4SW4	
	Skeleton	TTC 3P TTC-4SW3 4P TTC-4SW4	128
Terminal cover	Rear	BTC 3P BTC-4HDW3 4P BTC-4HDW4	
Handle lock device	HL	HL-4SW	134
Auxiliary handle	HT	HT-4SW	135


NF800-HDW

Accessories		Type name	Reference page
Operating handle	F	F-8S	123
	V	V-8S	125
Terminal cover	Large	TC-L 3P TCL-8SW3 4P TCL-8SW4	
	Skeleton	TTC 3P TTC-8SW3 4P TTC-8SW4	128
Terminal cover	Rear	BTC 3P BTC-8HDW3 4P BTC-8HDW4	
Handle lock device	HL	HL-4SW	134
Auxiliary handle	HT	HT-4SW	135


Outline Drawing

NF400-HDW, DSN400-HDW

Front connection

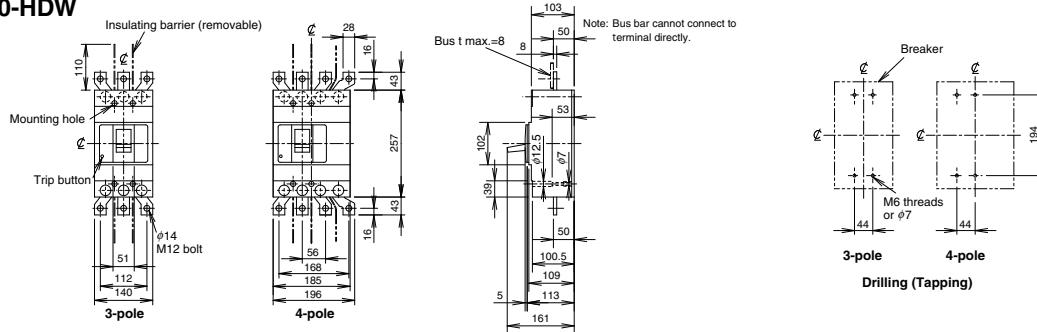


Rear connection

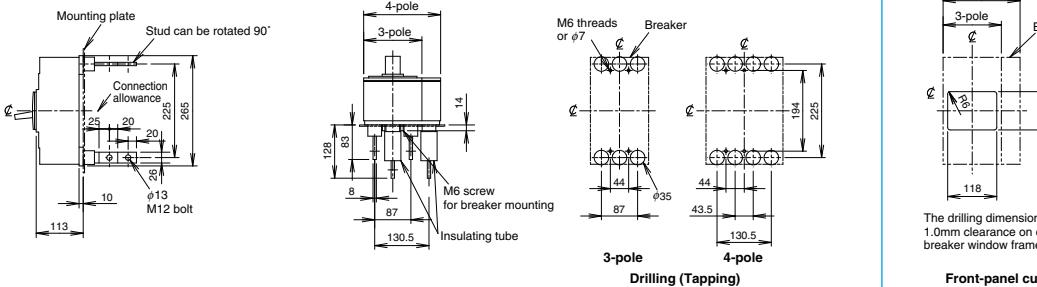

Note. A mounting hole will need to be added when using an insulating barrier for the rear connection type. Refer to page 212.


Arc-Space

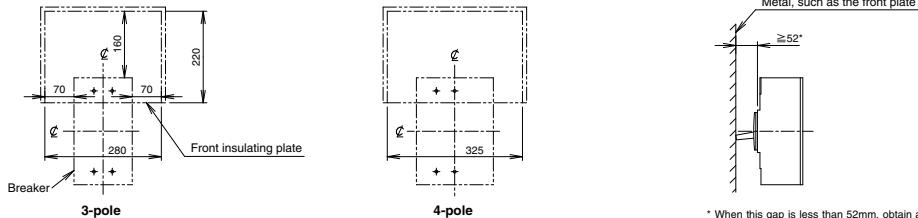


* When this gap is less than 52mm, obtain a front insulating plate and install it to the front plate.
* If using TC-L (4-pole model only) or TTC (3-pole and 4-pole models) terminal covers, no front insulating plate is necessary even if this gap is less than 52mm.

NF800-HDW, DSN800-HDW

Front connection

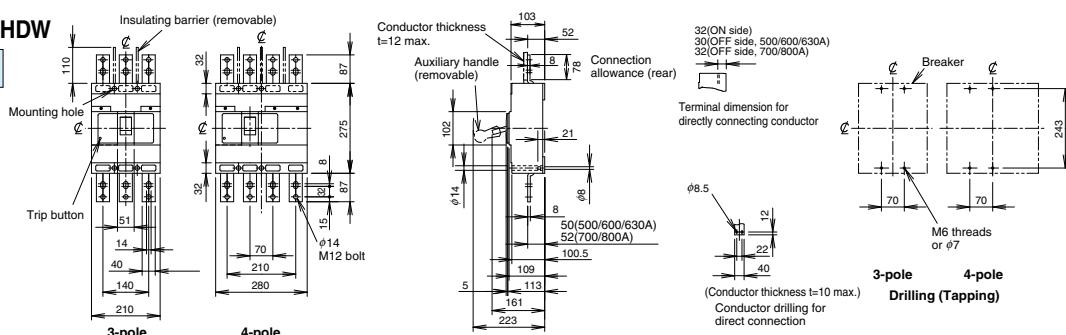


Rear connection

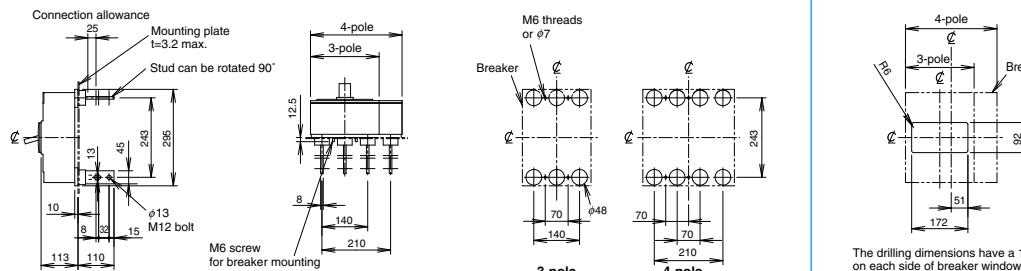

Note. A mounting hole will need to be added when using an insulating barrier for the rear connection type. Refer to page 212.

Arc-Space

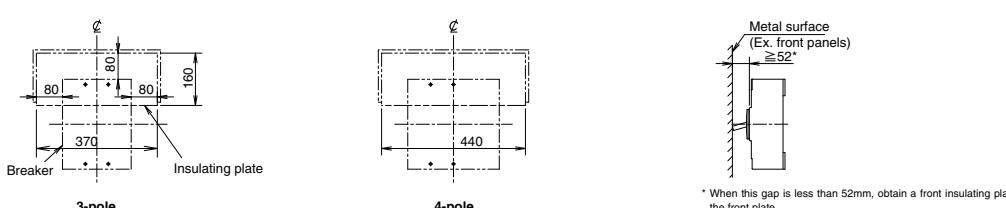

* When this gap is less than 52mm, obtain a front insulating plate and install it to the front plate.
* If using TC-L or TTC terminal covers, no front insulating plate is necessary even if this gap is less than 52mm.

7 Characteristics and Dimensions [6] Miniature Circuit Breakers

BH-D6 BH-D10






BH-D6

Model		BH-D6					BH-D10				BH-D10 (For DC)	
Number of poles (P)		1	2	3	4(3+N) (*1)	2(1+N) (*1)	1	2	3	4(3+N) (*1)	1	2
Instantaneous tripping		Type B, C, D					Type B, C		Type B, C, D			Type B, C
Rated insulation voltage U_i (V)		440					440				250	
Rated current I_n (A) Reference ambient temperature 30°C		0.5 1 1.6 2 3 4 6 10 13	0.5 1 1.6 2 3 4 6 10 13 16 20 25 32 40	16 20 25 32 40 50 63			0.5 1 1.6 2 3 4 6 10 13	0.5 1 1.6 2 3 4 6 10 13	16 20 25 32 40 50 63	0.5 1 1.6 2 3 4 6 10 13 16 20 25 32 40 50 63		
Rated short-circuit capacity (kA)	IEC 60898-1 EN 60898-1 GB/T 10963.1 (Icn)	AC 230V	6	—	6	10	—	6	—	6	—	
		230/400V	6	—	—	10	—	6	—	6	—	
		400V	—	6	—	—	10	—	6	—	6	
		DC	125V	—			—		10	—	10	
		250V	—			—	—	—	—	—	10	
	IEC 60898-2 EN 60898-2 GB/T 10963.2 (Icn)	AC 230/400V	—			—	—	6	—	6	—	
		400V	—			—	—	—	—	—	6	
											6	
											6	
											6	


Note *1 N pole is a switched neutral pole (without overcurrent release device).

Operating Characteristics

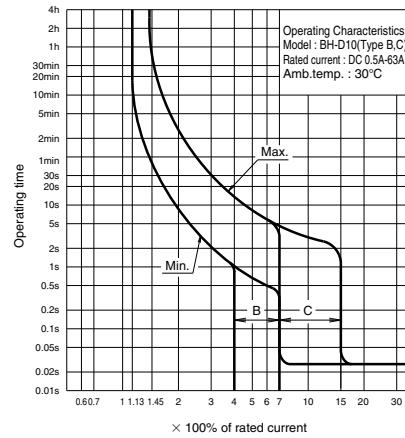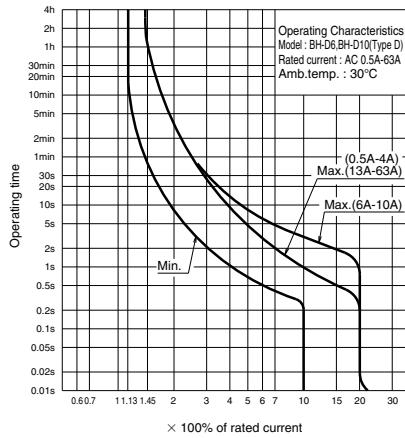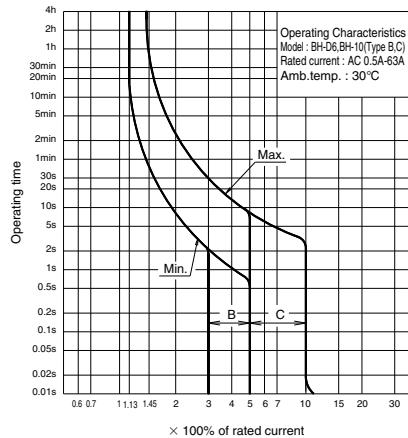


* When using BH-D10(for DC) in AC circuit, characteristic curve of BH-D10(Type B, C) for AC is applied.

Outline Drawing

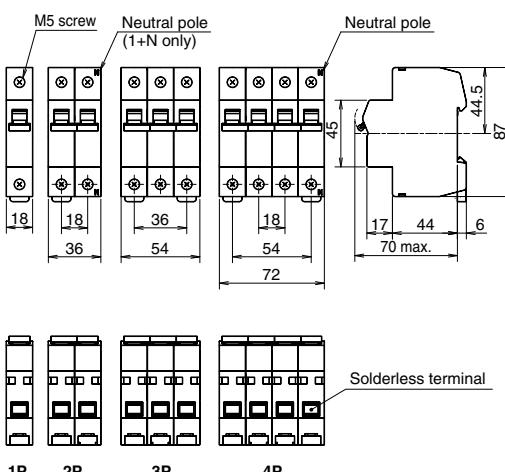

Temperature Compensation Curve

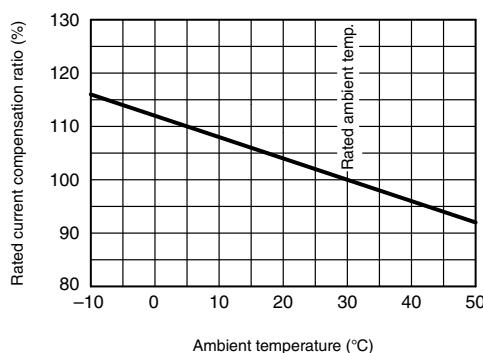

* In case of installing breakers side by side, reduce the passing current to under 80% of the rated current.

BH-DN




BH-DN


Model		BH-DN	
Number of poles (P)		2 (1+N) (*1)	
Instantaneous tripping		Type C	
Rated insulation voltage U_i (V)		230	
Rated current I_n (A) Reference ambient temperature 30°C		6 10 16 20	
Rated short-circuit capacity (kA)	IEC 60898-1 EN 60898-1 GB/T 10963.1 (Icn)	AC	230V
			4.5

Note *1 N pole is a switched neutral pole (without overcurrent release device).


Operating Characteristics

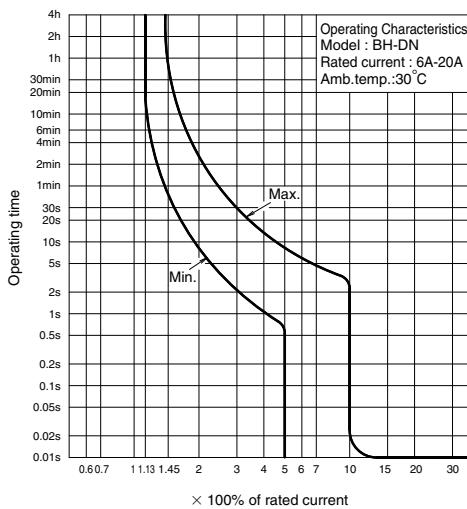

Outline Drawing

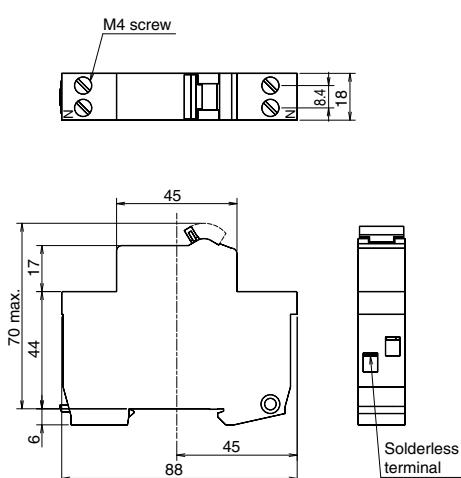

Temperature Compensation Curve

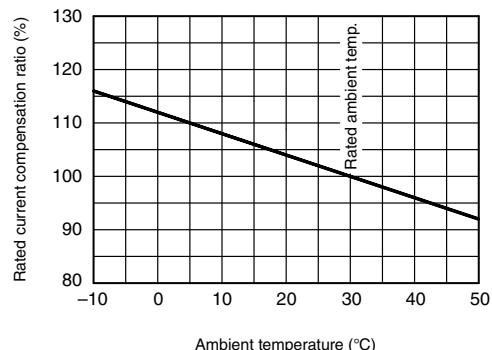

* In case of installing breakers side by side, reduce the passing current to under 80% of the rated current.

BV-D




BV-D

Model	BV-D	
Number of poles (P)	2 (1+N) (*1)	4 (3+N) (*1) (*2)
Rated operational voltage Ue (VAC)	230	230/400
Rated current In (A)	25	40 63
Reference ambient temperature 30°C	30, 300	
Rated residual operating current IΔn (mA)	0.04	
Max. operating time at 5IΔn (s)	Type A	
Pulsating current sensitivity	Dependent on line voltage	
Residual operation	500 (In 25, 40A) 630 (In63A)	
Rated making and breaking capacity Im (A)	6	
Rated conditional short-circuit current Inc (kA)	500 (In 25, 40A) 630 (In63A)	
Rated residual making and breaking capacity IΔm (A)	6	
Rated conditional residual short-circuit current IΔc (kA)		


Notes *1 N pole is a switched neutral pole (without overcurrent release device).

*2 For use to three phase 4-wire type. When wiring to three phase 4-wire, connect the neutral line to the neutral pole. Not available for use to three phase 3-wire type.

Earth Leakage Tripping Characteristics

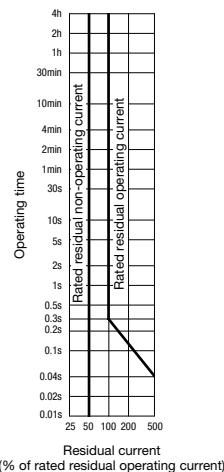

Outline Drawing

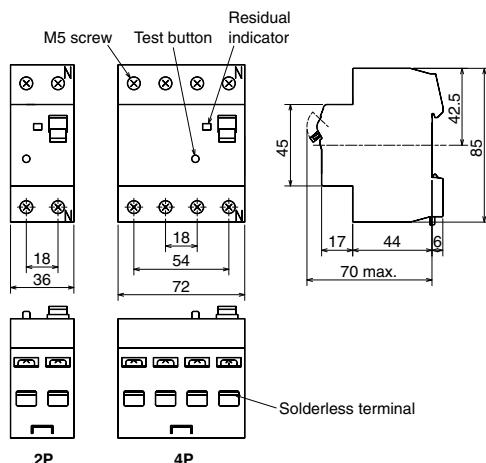

BV-DN BV-DN6




BV-DN


Model	BV-DN					BV-DN6	
Number of poles (P)	2 (1+N) (*1)						
Rated operational voltage Ue (VAC)	230						
Rated current In (A) Reference ambient temperature 30°C	6 10 16 20 25	32 40				3 6 10 16 20 25	32 40
Instantaneous tripping	Type C						
Rated current sensitivity IΔn (mA)	30, 100, 300						
Max. operating time at 5IΔn (s)	0.04						
Pulsating current sensitivity	Type A						
Residual operation	Dependent on line voltage						
Rated short-circuit capacity (kA)	IEC 61009-1 EN 61009-1 GB/T 16917.1 (Icn)	AC	230V		4.5	6	
Rated residual making and breaking capacity IΔm (A)	500						

Note *1 N pole is a switched neutral pole (without overcurrent release device).


Operating Characteristics

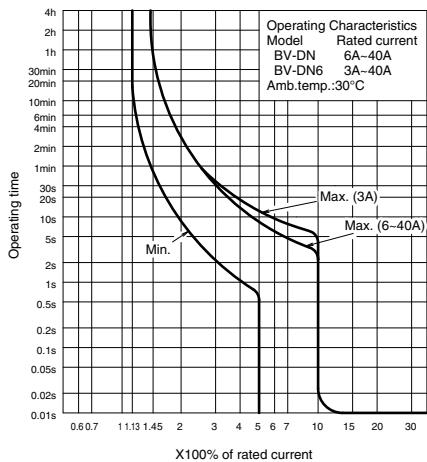


Earth Leakage Tripping Characteristics

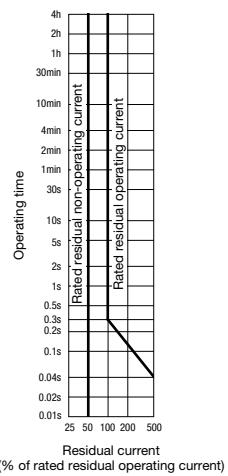

Outline Drawing

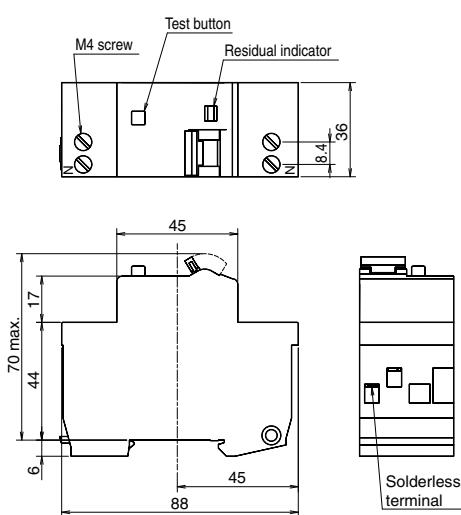

Temperature Compensation Curve

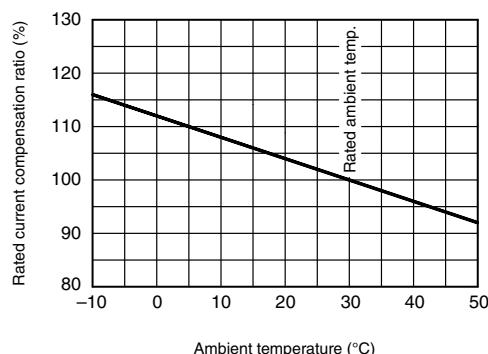

* In case of installing breakers side by side, reduce the passing current to under 80% of the rated current.

KB-D




KB-D

Model	KB-D			
Number of poles (P)	1	2	3	4 (3+N) (*1)
Utilization category	AC-22A class			
Rated insulation voltage U_i (V)	250			440
Rated voltage U_e (VAC)	230			400
Rated current I_n (A) Reference ambient temperature 30°C	32	63	80	
Short-time withstand current (A)	$20 \times I_n$, 1sec			
Short-time making current (A)	$20 \times I_n$			

Note *1 N pole is a switched neutral pole (without overcurrent release device).

Outline Drawing

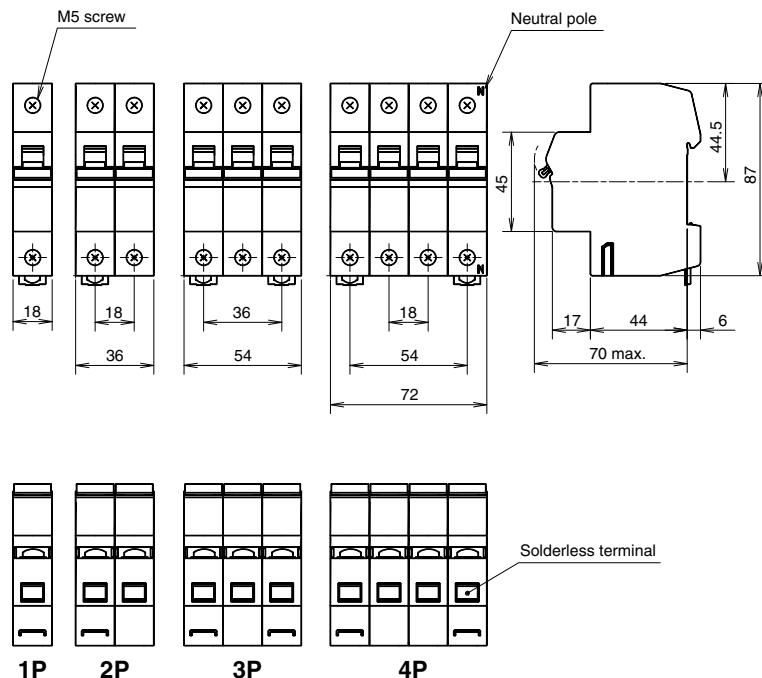

7 Characteristics and Dimensions

7 Circuit Protectors

CP30-BA CP30-HU



CP30-BA




CP30-HU


Frame (A)		30			30		
Model		CP30-BA			CP30-HU		
Number of poles		1	2	3	1	2	3
Rated impulse withstand voltage U_{imp} (kV)		2.5			2.5		
Rated current (A)		0.1 0.25 0.3 0.5 1 2 3 5 7 10 15 20 30			0.1 0.25 0.3 0.5 1 2 3 5		
Reference ambient temperature 40°C							
UL 1077 CSA C22.2 No.235	Rated voltage (V) AC (V) DC (V)	250			250		
	AC	2.5kA at 250V			2.5kA at 250V 10kA at 125V		
	DC	2.5kA at 65V 2.5kA at 125V			10kA at 65V 10kA at 125V		
IEC 60934 EN 60934	Rated insulation voltage U_i (V) AC	250			250		
	DC	2.5kA at 60V 2.5kA at 120V			10kA at 60V 10kA at 120V		
	Rated insulation voltage U_i (V)	250			250		
EN 60947-2 IEC 60947-2 (lcu/lcs)	AC	2.5/2.5kA at 230V			2.5/2.5kA at 230V 10/10kA at 120V		
	DC	2.5/2.5kA at 60V 2.5/2.5kA at 120V			10/10kA at 60V 10/10kA at 120V		
	AC/DC common use	●			- (*1)		
Operating characteristics		Instantaneous type (I) Medium type (M),(MD) Slow type (S),(SD) Fast type (F)			Instantaneous type (I) Medium type (M),(MD) Slow type (S)		
Mode of tripping		Instantaneous type (I): magnetic only [MO] Other type (M, MD, S, SD, F):hydraulic-magnetic [HM]			Instantaneous type (I): magnetic [MO] Other type (M, MD, S):hydraulic-magnetic [HM]		

Note *1 The 3-pole products are for AC use only.


Operating Characteristics

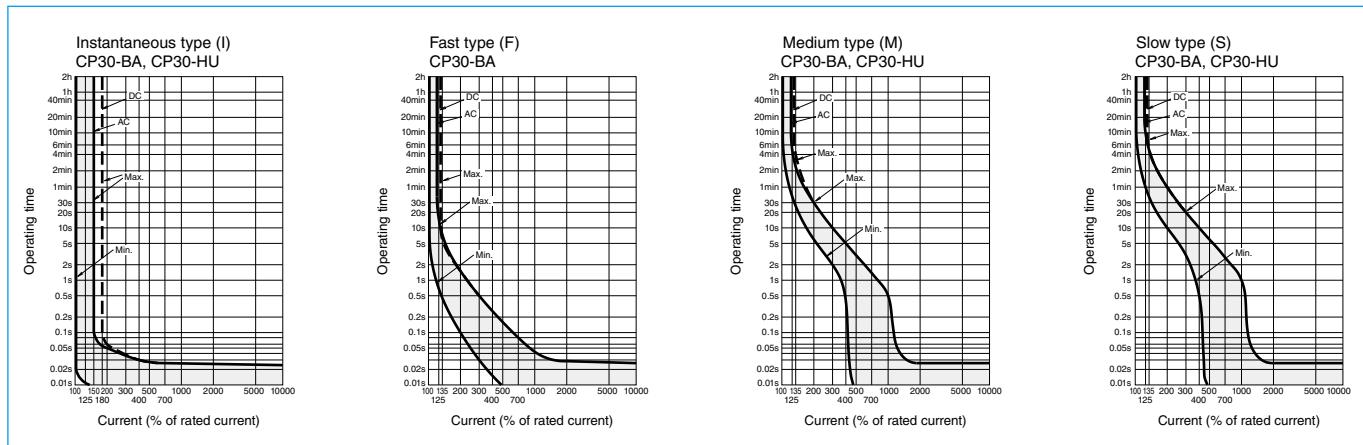

Outline Drawing

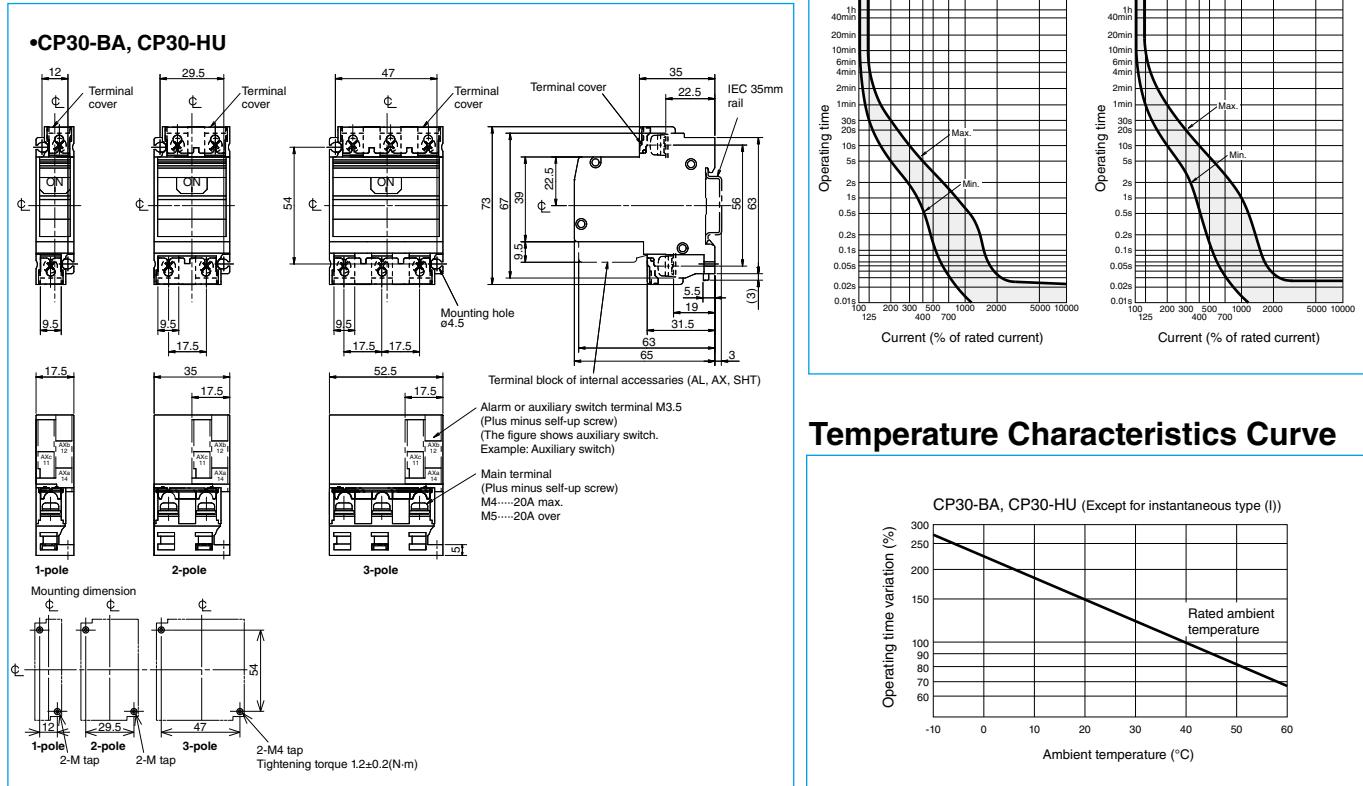

Temperature Characteristics Curve

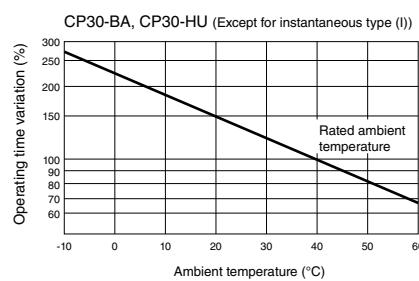


(1) Dimensions of electrical operated circuit breakers

The following concept is applied for the dimensions of the electrical operated circuit breaker. Please understand this before using this type of breaker.

Connection method	Outline dimensions listing method			
	Model	Listed page	Model	Listed page
Front connection (Rear connection)	NF125-CV/SV/HV	229	NF400-CW/SW/SEW/HEW/REW	230
	NV125-CV/SV/HV		NF630-CW/SW/SEW/HEW/REW	
	NF125-UV		NF400-UEW (3P)	
	NF125-SEV/HEV/RV/ZEV		NV400-CW/SW/SEW/HEW	
	NF250-CV/SV/HV/SEV/HEV		NF400-UEW (4P)	
	NF250-RV		NV630-CW/SW/SEW/HEW	
	NF125-SGV/LGV/HGV/RGV		NF800-CEW/SEW/HEW/REW/SDW	
	NF160-SGV/LGV/HGV		NF800-UEW	
	NF250-SGV/LGV/HGV/RGV		NV800-SEW/HEW	
	NV125-SEV/HEV		NF1000-SEW, NF1250-SEW/SDW	
	NV250-CV/SV/HV/SEV/HEV		NF1600-SEW/SDW	
	NF250-UV		(*1)	
Rear connection Plug-in	The drilling dimensions and connection related dimensions are the same as the dimensions for the breaker body. Refer to the dimension drawings of each model. Note that for the rear connection type, four mounting holes are required even for the 2-pole or 3-pole types.			


(2) Front connection (Rear connection)

NF125-CV, NF125-SV, NF125-HV
NV125-CV, NV125-SV, NV125-HV

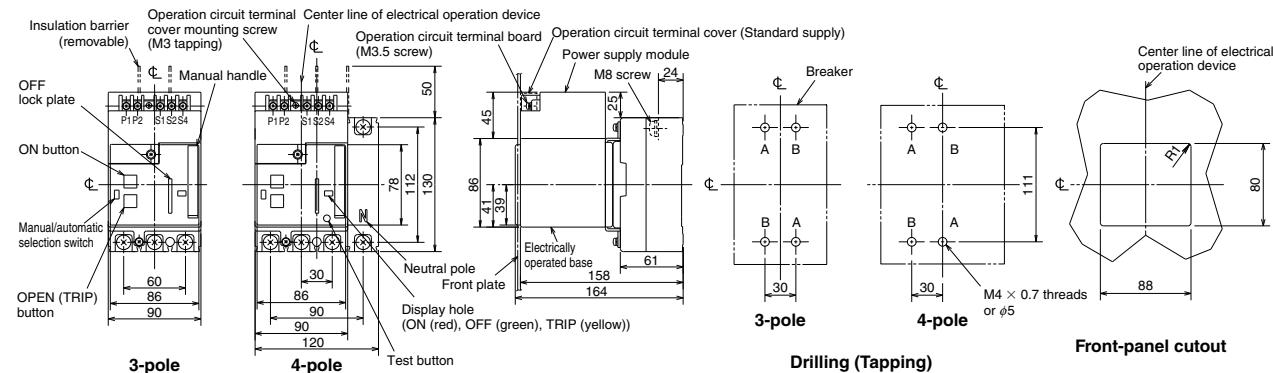Front connection

Remarks: 1. This cannot be mounted on the 2-pole breaker.
2. The test button is equipped only on the earth leakage circuit breaker.

NF125-SEV, NF125-HEV, NF125-RV
NF250-CV, NF250-SV, NF250-HV, NF250-SEV, NF250-HEV, NF250-RV
NV125-SEV, NV125-HEV
NV250-CV, NV250-SV, NV250-HV, NV250-SEV, NV250-HEV
NF125-SGV/LGV/HGV/RGV
NF160-SGV/LGV/HGV
NF250-SGV/LGV/HGV/RGV

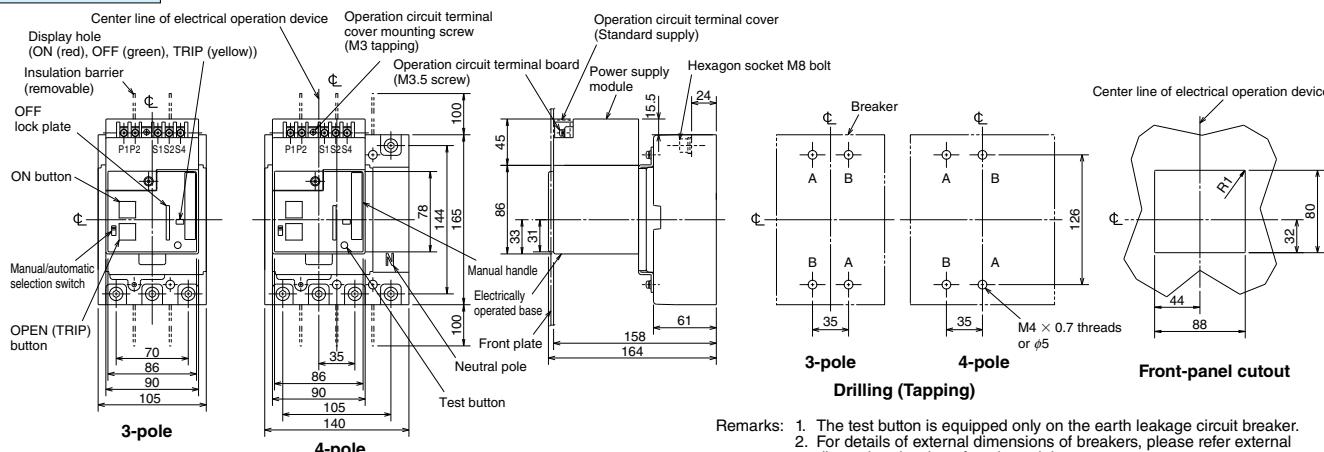
Front connection

Remarks: 1. The test button is equipped only on the earth leakage circuit breaker.
2. For details of external dimensions of breakers, please refer external dimension drawing of each model.

Outline Drawing


NF400-CW, NF400-SW, NF400-SEW, NF400-HEW, NF400-REW, NF630-CW, NF630-SW, NF630-SEW, NF630-HEW, NF630-REW Motor drive type

Front connection

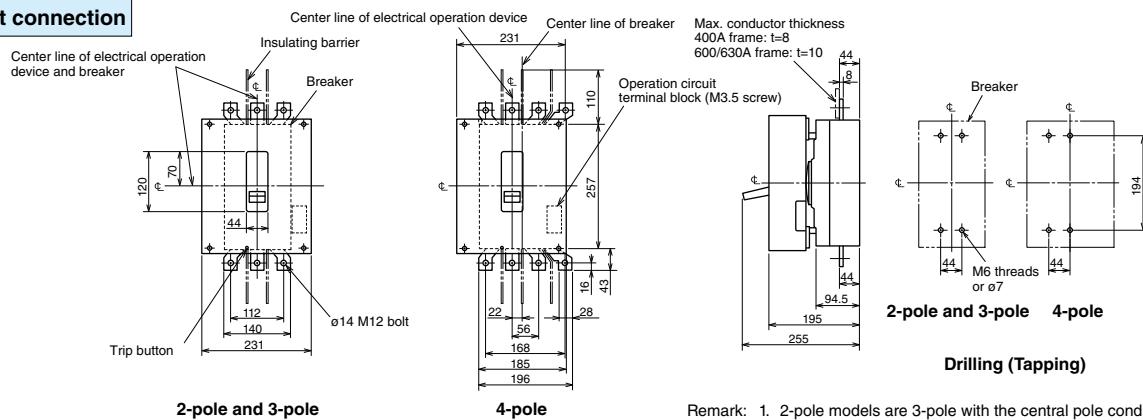


NF400-UEW (3-pole) Motor drive type

Front connection

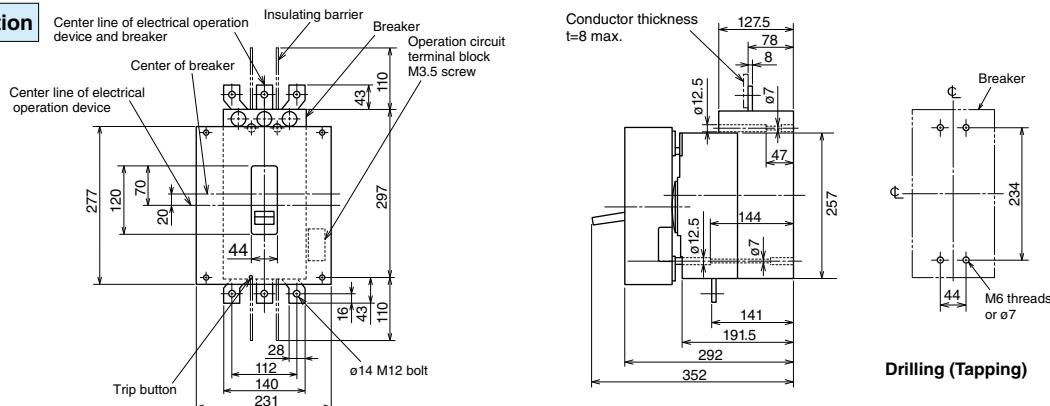


NV400-CW, NV400-SW, NV400-SEW, NV400-HEW, NV630-CW, NV630-SW, NV630-SEW, NV630-HEW Motor drive type

Front connection

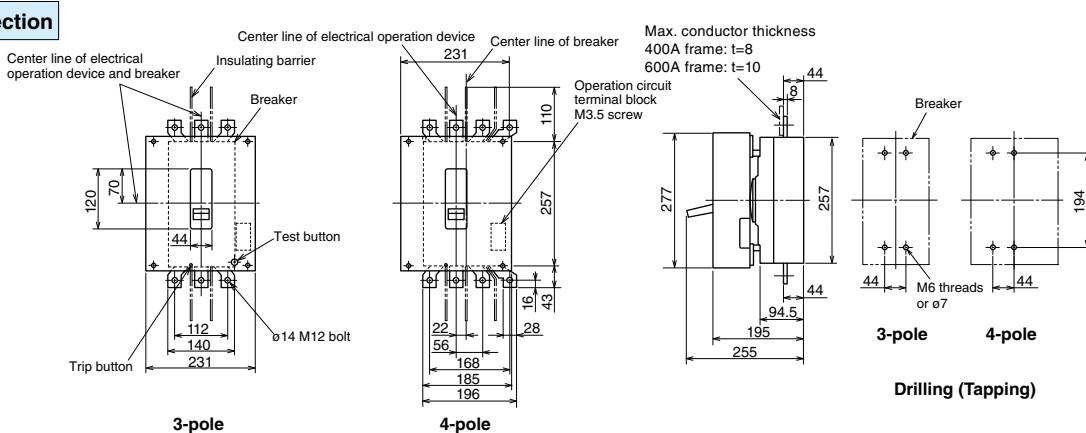


NF400-UEW (4-pole) Motor drive type

Front connection

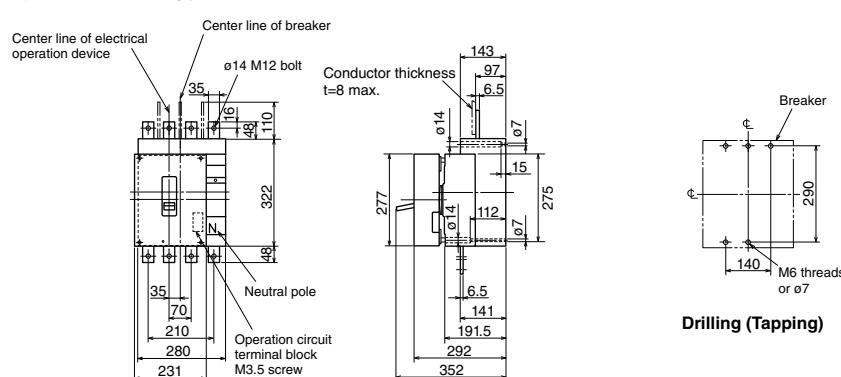

NF800-CEW, NF800-SDW, NF800-SEW, NF800-HEW, NF800-REW Motor drive type


Front connection

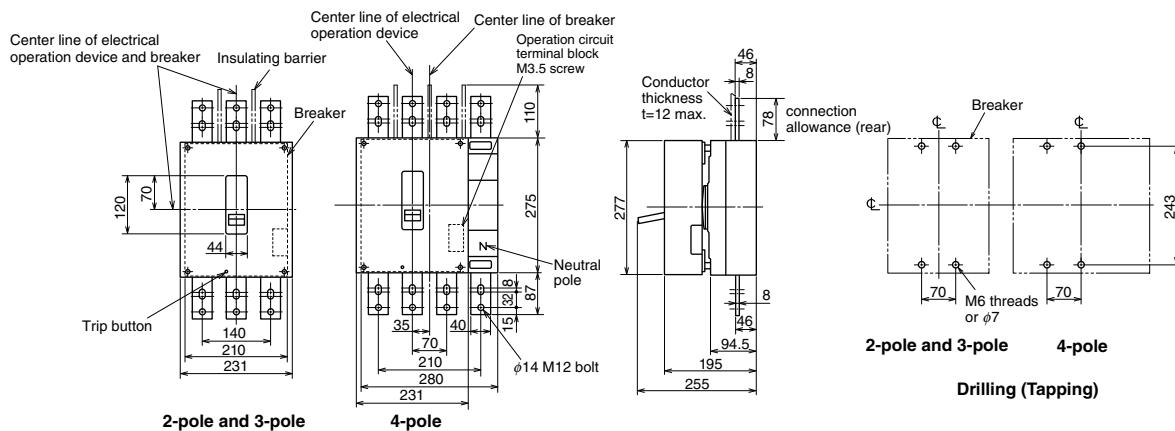

Remark: 1. 2-pole models are 3-pole with the central pole conductor removed.


NF800-UEW Motor drive type

Front connection

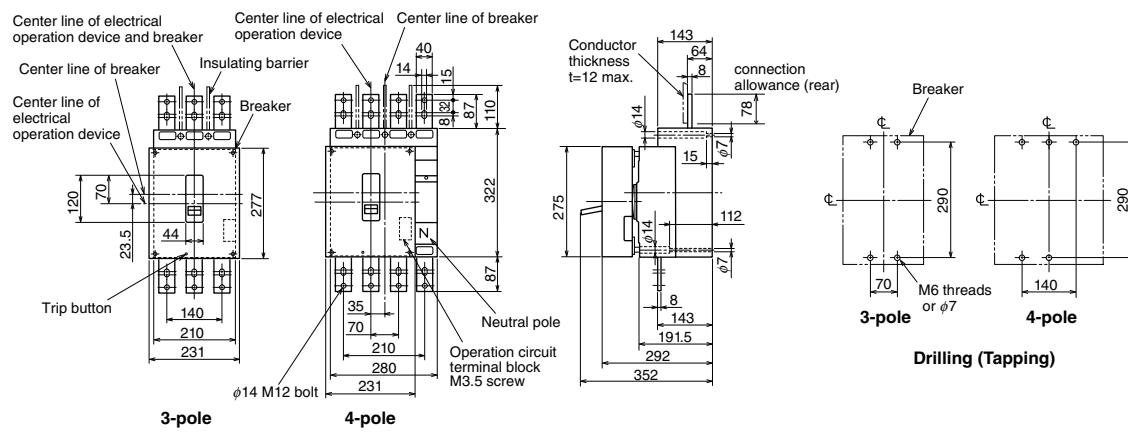

NV800-SEW, NV800-HEW Motor drive type



Front connection

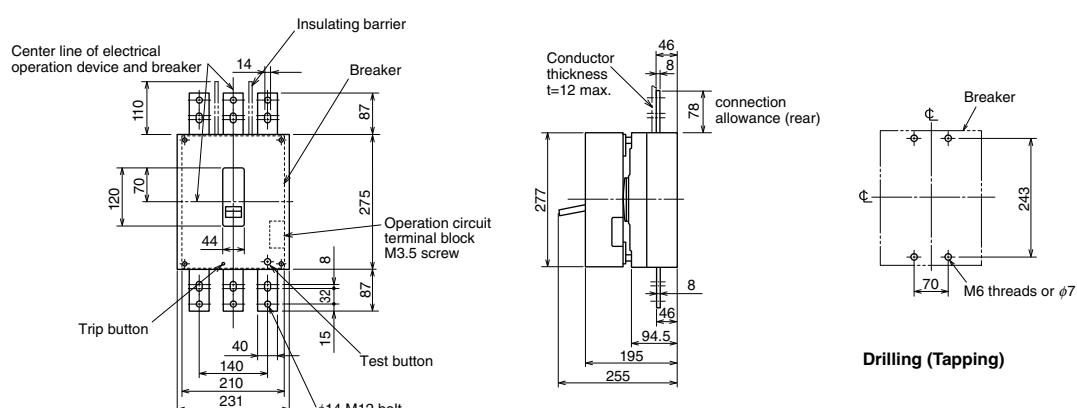

Outline Drawing

NF1000-SEW, NF1250-SEW, NF1250-SDW Motor drive type

Front connection

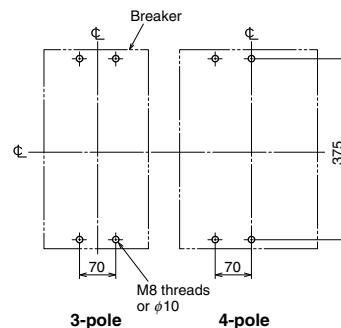
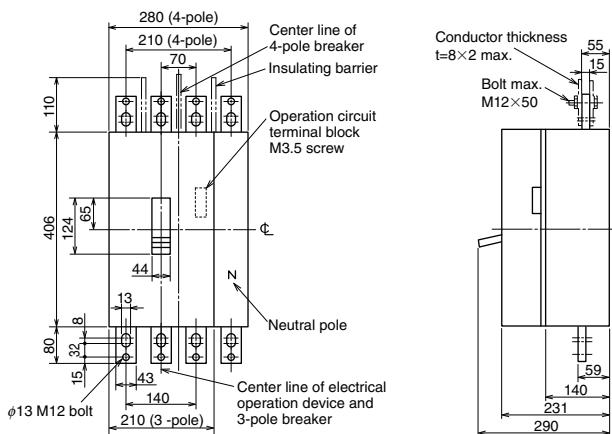


Drilling (Tapping)

Remark: 1. 2-pole models are 3-pole with the central pole conductor removed.

NF1600-SEW, NF1600-SDW Motor drive type

Front connection

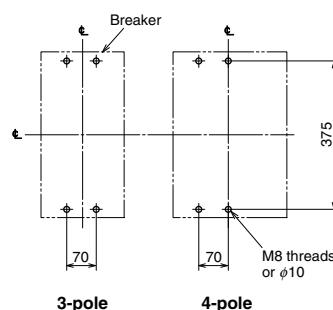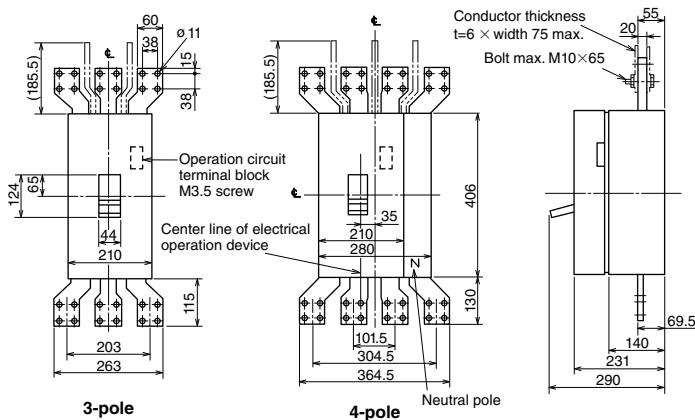

Drilling (Tapping)


Remark: 1. NF1600-SDW is a 3-pole breaker without a center pole conductor.

7 Characteristics and Dimensions

8 Electrical Operated Circuit Breakers


NF1600-SEW (3-pole) Motor drive type

Rear connection

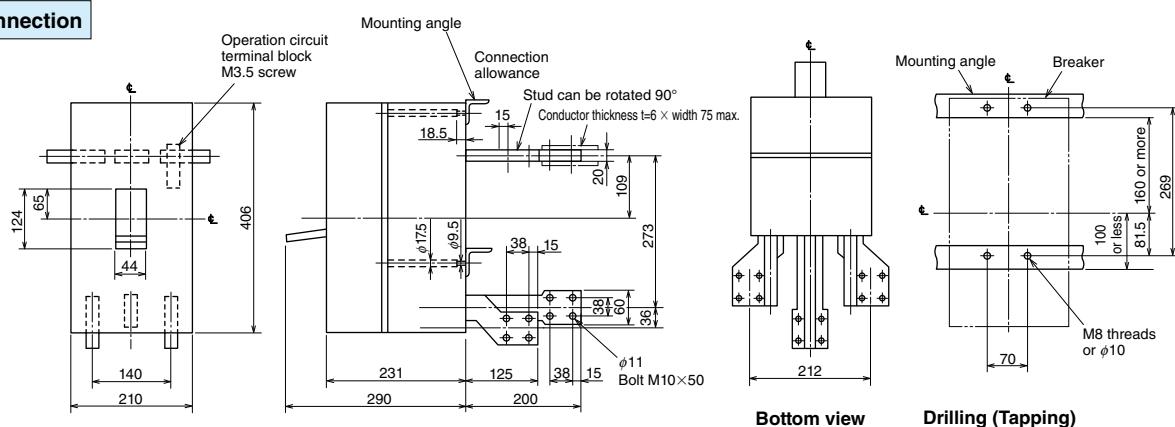


NF1600-SEW (4-pole) Motor drive type

Rear connection

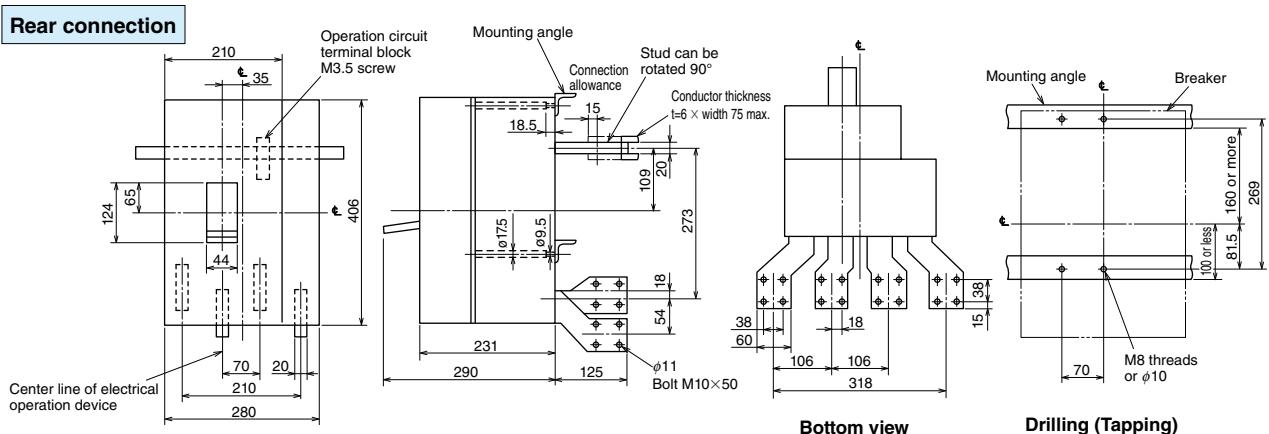

NF1600-SDW (3-pole) Motor-drive type


Rear connection

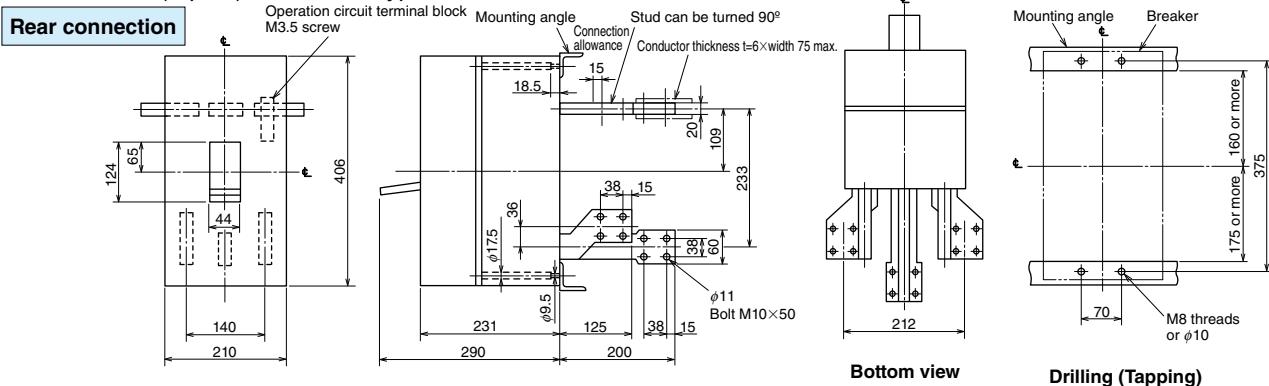

Remark: 2-pole models are 3-pole models with the central pole removed.

NF1600-SDW (4-pole) Motor-drive type

Rear connection

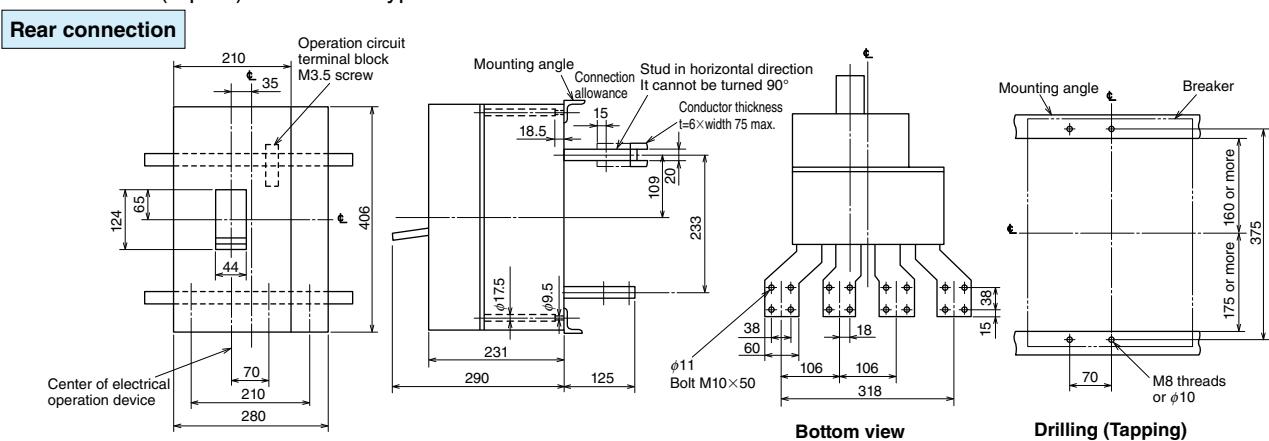








8

Handling and Maintenance

1) Storage and Transportation	248
2) Normal Service Conditions	248
3) Mounting and Connections	249
4) Maintenance and Inspections	252
5) Troubleshooting	254

1. Storage and Transportation

(1) Precautions for storage

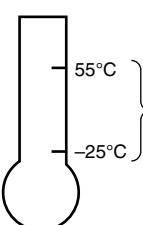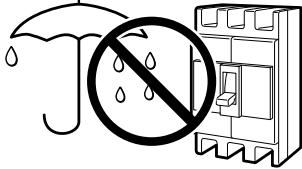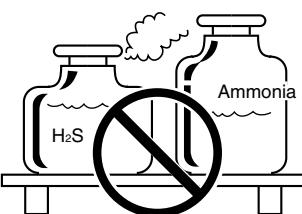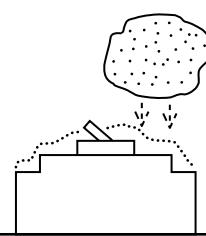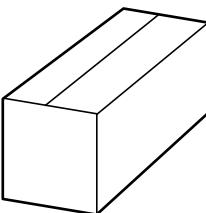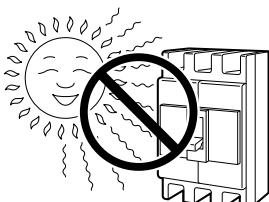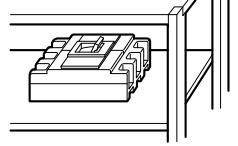Storage temperature -25°C to +55°C	Avoid moisture	Avoid corrosive gases
 <p>Store the breaker in this temperature range.</p>	 <ul style="list-style-type: none"> Do not leave the breaker in a location subject to humidity for long periods of time. Store in a location free from condensation. 	 <p>Do not store the product in an atmosphere containing gases such as hydrogen sulfide, sulfur dioxide, or ammonia. H₂S: 0.01ppm or less SO₂: 0.05ppm or less NH₃: 0.25ppm or less</p>
Keep away from dust	Place and store in a packing case	Avoid direct sunlight
		 <p>Do not store the breaker in a location where it will be subjected to direct sunlight.</p>
		Store in the OFF or tripped state
		 <p>Store the breaker in the OFF state or tripped state. However, models that arrive in the ON state can be stored in the ON state. When storing for long periods of time, store in the ON state.</p>

(2) Precautions for transportation

Carefully pack and transport	Do not carry by holding the front and back of the flush plate	Do not carry by the lead wires	Do not transport upside down (when mounted on IEC 35mm rail)
 <p>Do not drop the package during transport. When shipping the breaker, make sure to package it carefully.</p>	 <p>Do not carry the flush plate type breaker by holding the front and back of the flush plate. The breaker could drop during transport.</p>	 <p>Do not carry accessories by the lead wires. Excessive force will be applied to the accessories.</p>	 <p>Do not transport a panel containing parts mounted on an IEC 35mm rail in an upside down state.</p>

2. Normal Service Conditions

- Working ambient temperature ... -10°C to 40°C
(Note that the 24-hour average value must not exceed 35°C)
- working current reduction rate in ambient temperature exceeding 40°C.
 - 50°C... 0.9 times
 - 60°C... 0.7 times

- Relative humidity ... 85% or less with no dew condensation.
- Altitude ... 2000m or less
- Atmosphere ... Free of excessive moisture, oil vapors, smoke, dust, salt, corrosive substances, vibration or impact, etc.

3. Mounting and Connections

(1) Precautions for mounting


The operating temperature is -10°C to 40°C and the 24-hr average temperature must not exceed 35°C	Avoid moisture	Avoid corrosive gases	Avoid vibration and impact
<p>40°C -10°C</p> <p>Use within this range.</p>	<ul style="list-style-type: none"> Do not leave the breaker in humid locations. Store in a location free from condensation. 	<p>H₂S Ammonia</p> <p>Do not install the product in an atmosphere containing gases such as hydrogen sulfide, sulfur dioxide, or ammonia.</p>	
Keep away from rain, drill shavings, and machining dust	Prevent the intrusion of foreign matter from the exhaust outlet	Do not disassemble	Use inside of a panel or box
<p>Failure to do may cause the breaker to malfunction or become inoperable.</p> <p>Prevent the breaker from direct contact with rainwater, oil, and dust. In particular, take care to prevent contact with conductive materials such as drill shavings from steel plates.</p>	<p>Cover with material such as a sheet when performing work.</p> <p>Failure to do so may cause poor contact point conductivity or overheating.</p>	<p>Doing so may cause the breaker to malfunction or become inoperable.</p> <p>Do not remove the rear cover or the compound applied to screws on the rear surface.</p>	<p>Because the breaker generates an arc, do not leave it exposed, but instead use it inside of a panel or box.</p>
Avoid direct sunlight	Use the specified screws	Do not cover the exhaust outlet	Prevent liquids such as rainwater from getting inside the panel
<p>Failure to do so may cause the breaker to malfunction due to temperature rises.</p>	<p>Use the specified screws (length and quantity) and the specified mounting bracket, and mount them in the correct positions.</p>	<p>Doing so may cause breaker performance to drop.</p>	<p>Take measures to prevent conductive liquids such as rainwater from getting inside the panel.</p>
Do not wipe with thinners, detergents, or chemically treated cloths	Do not apply tape to the identification plate	Keep away from locations subject to strong magnetic fields	
<p>Doing so may cause markings on the identification plate to disappear or may cause insulation performance to drop.</p> <p>Instead, clean with air or a brush.</p>	<p>Doing so may cause the identification plate to peel off.</p>	<p>When using a transceiver, use at least 1m away from locations where earth leakage circuit breakers and electronic type breakers are installed.</p>	

8 Handling and Maintenance

● Mounting orientation


(1) Because the following models use a completely electromagnetic method of overcurrent tripping, pay attention to the mounting angle as the overcurrent tripping characteristics may vary according to the mounting orientation. Use in a vertical direction is recommended. (The same applies for other model that use a completely electromagnetic method.)

	Model name
Molded case circuit breaker	NF50-FHU, NF100-FHU
Earth leakage circuit breaker	NV50-FHU, NV100-FHU

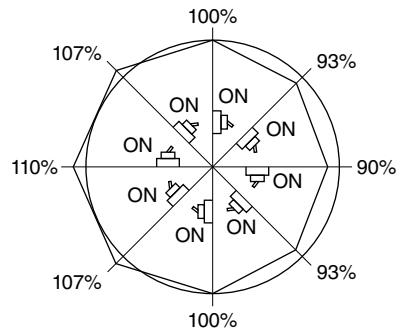


Rate of rated current change due to mounting angle
(molded case circuit breakers, earth leakage circuit breakers)

	Model name
Circuit protector	CP30-BA, CP30-HU

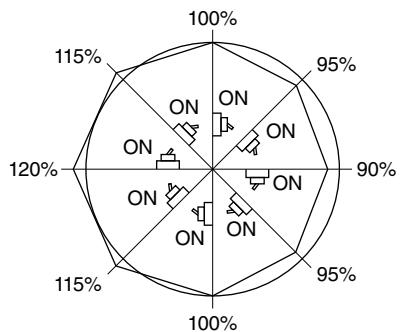

Rate of rated current change due to mounting angle
(circuit protectors)

(2) Mounting orientation does not affect thermal-magnetic types, thermal types, or electronic types.

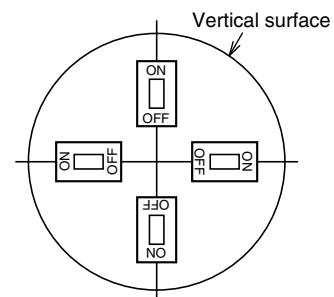

Mounting style that guarantees operating characteristics for complete electromagnetic types

● Tightening torque for breaker mounting screws

The case of the breaker is made of plastic. If screws are directly attached to the case of the breaker, install them using the tightening torques shown in the table below and take care to not apply excessive thrust to the breaker.

Tightening torque (N·m)

Models that do not include mounting screws (Note 2)			Models that include mounting screws (Note 1)
Screw material	Steel screws (zinc-plated)	Stainless steel screws	
NF/NV50-SVFU FHU series	M4:1.2±0.2	M4:0.7±0.1	M4: 1.2±0.2 M6: 3.3±0.7 M8: 6±1 M10: 25±5 M12: 45±5 M16: 110±15
FAU series	M4:1.7±0.2 M5:1.7±0.2 (mounted to front plate)	M4:1.1±0.1 M5:1.1±0.1 (mounted to front plate)	




Note 1: If mounting screws are included, use those mounting screws.

Note 2: Combine Phillips pan head screws with a spring washer and plain washer (round type) or use Phillips pan head screws that include a spring washer and plain washer.


Remark: Refer to page 265 for information on whether mounting screws are included.

(2) Precautions for connections

(Secure an insulation distance between phases based on the standard for the panel side.)

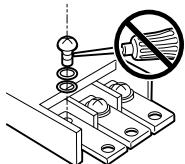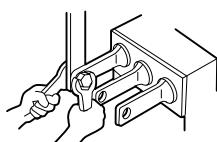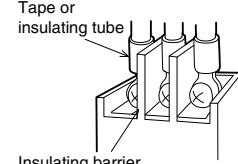Oiling of screws is prohibited	Do not deform studs	Insulate exposed portions of live wires	Use the included terminal screws	Use the appropriate crimp terminal
 <p>Oil will decrease screw friction and cause the screws to loosen. Excessive tightening can cause the screws to break.</p>	 <p>When connecting the conductors, perform tightening in a manner that does not deform the studs.</p>	 <p>Tape or insulating tube Insulating barrier</p> <p>Insulate exposed live terminal wires using means such as tape, an insulating tube, or an insulating barrier if the insulation distance is insufficient, as well as to prevent accidents such as short circuits or earth faults caused by loose metal pieces. Bare live wires are particularly dangerous in the case of 400V or higher! Note: Make sure to mount the insulating barriers in the case of models that come standard with insulating barriers.</p>	<p>Terminal screws that are too long will cause the insulation distance to be insufficient while terminal screws that are too short will cause tightening force to be insufficient. This could cause overheating to occur. Note: For terminal screw sizes, refer to Table 5-6 on page 102.</p>	<p>If connecting a large number of crimp terminals, perform connection by referring to Table 5-6 on page 102. Note: If using crimp terminal connections, refer to Table 5-6 on page 102.</p>


Do not connect in reverse

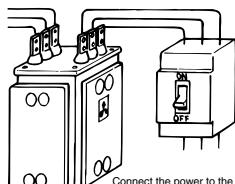

Connect the power to the ON side.

- As a rule, do not connect the power load in reverse. If necessary, refer to the specifications and select a model that can be connected in reverse.
- An insulating barrier should be provided on both the power and load sides of the breakers when using a high voltage circuit where dew condenses easily and the circuit is in reverse connection.

Securely fix conductors to each pole in parallel

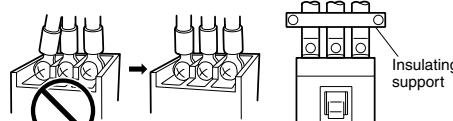


Mount conductors to each pole in parallel. Because large electromagnetic force is applied to connected conductors according to the accident current, securely fix (tighten) the conductors.

Electromagnetic force applied per 1m conductor (During 3-phase short-circuit)

Prospective fault current kA(Pf)	Distance between conductors cm	N/m	
		10	20
10 (0.4)	500	250	
18 (0.3)	1900	950	
25 (0.2)	4500	2250	
35 (0.2)	8900	4450	
42 (0.2)	12800	6400	
50 (0.2)	18200	9100	
65 (0.2)	30800	15400	
85 (0.2)	52600	26300	
100 (0.2)	73000	36500	
125 (0.2)	114000	57000	


Busbar connection

- When connecting conductors directly, perform machining by referring to the conductor drilling diagram shown in the outline drawing.
- When connecting conductors to a busbar terminal, pay attention to the insulating distance with the ground. An earth fault prevention barrier is available as an option.

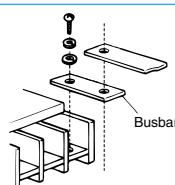


Clamp connection

- When directly connecting to the terminal, insert the single strand or stranded wires in straight and then tighten. A commercially-available crimp terminal or busbar can also be connected directly.
- When using stranded wires with a thin core wire, such as appliance wiring material, connect less than 5.5 mm² of wire without splitting it. If more than 5.5 mm² of wire, connect by splitting it.

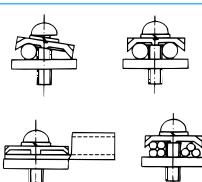

Solderless terminal connection

- Untwist the connection wires, align the core wires, and then tighten. The wires will loosen during use, and must be tightened during periodic maintenance.
- Do not solder or bind the ends of the stranded wires.
- Make sure not to catch the insulating sheath of the wire when tightening.

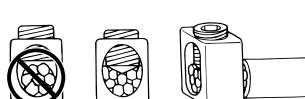


Earth terminals

- For safety, ground the earth terminals except under certain conditions.

ELCB connection

- When using a 3-pole ELCB with single-phase 2-wire models, connect to the left and right poles (poles at both sides) of the ELCB. Do not use the center pole.

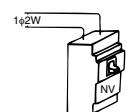

- Never connect ELCB units in parallel as it will create a loop circuit, and could burn the magnetic device when the ELCBs operate.
- Never connect the MCCB and ELCB in parallel.



Connecting spring clamp terminals

- Do not allow the wire ends to unravel. Unraveled strands may come in contact with each other and cause a phase fault.
- Use the specified wires, ferrules, and crimping tools. Failure to do so will result in connections being inadequate and may cause heat generation or a fire.
- Make sure to strip wires to the appropriate length. Failure to do so will result in poor connections and may cause heat generation or a fire.
- Only copper wires can be used. Using other types of wires may cause heat generation or a fire.
- Do not insert multiple wires into a single wire port. Doing so may damage equipment.
- Wires can be inserted/extracted 50 times.
- Because wires are inserted from the front of the breaker unit, connected wires may interfere with peripheral parts such as panels or external accessories. Observe the allowable bend radius specified by the wire manufacturer and use the appropriate wire to prevent interference with peripheral parts.

4. Maintenance and Inspections

(1) Initial inspections

After installing the MCCB and ELCB, inspect the following matters before powering the units.

Model	Inspection items	Criterion	Remarks
Common	1. Are there any excessive screws, drilling scraps, wire scraps or any other conductive materials around the terminals?	All conductive material must be removed.	Prevent any foreign conductive matter around the terminals from becoming caught as it may cause an earth fault or short circuit.
	2. Are there any cracks or damage on the cover or base?	No cracks or breaks allowed.	
	3. Is there any dew condensation on the cover, base or terminals?	No dew condensation allowed.	
	4. Measure the insulation resistance with a 500V insulation resistance tester.	5MΩ or more	Refer to Precautions ② for the ELCB.
	5. Are the connector connections tightened securely?	Must be specified tightening torque.	
ELCB	6. Are the ELCB rated voltage and circuit voltage the same?	Voltages must be the same.	
	7. Apply voltage, press the test button and check the operation.	Must trip with an earth leak.	

Earth leakage tripping must occur and it must close again.

Precautions

① Withstand voltage test

A guide for the test is given on the following. Do not perform a withstand voltage test exceeding these levels. (Note) Test the operating circuit between the live section and ground.

(Application time: one minute)		(Unit: V)	
Main circuit		Auxiliary circuit or control circuit	
Rated insulation voltage	Test voltage (effective value for alternating current)	Rated insulation voltage of operating circuit	Test voltage (effective value for alternating current)
$U_i \leq 300$	2000	$U_{is} \leq 60$	1000

300 < $U_i \leq 690$	2500	$60 < U_{is} \leq 690$	$2U_{is} + 1000$ (min. 1500)
----------------------	------	------------------------	------------------------------



Applying voltage to the incorrect location or applying a voltage that exceeds standards may cause the product to malfunction.

② Insulation resistance measurement and withstand voltage test

The restrictions a and b apply to the following models.

Applicable models: Earth leakage circuit breaker, Measuring display unit breaker.

Measurement position	Test		Insulation resistance measurement		Withstand voltage test	
	ON	OFF	ON	OFF	ON	OFF
Between live section of main circuit and ground	○	○	○	○	○	○
Between left - middle, middle - right, left - right poles	△	○	×	○		
Between left - neutral pole, middle - neutral poles right - neutral poles	○ (△)	○	○ (x)	○		
Between left - middle, middle - right, left - right poles	△	△	×	×		
Between left - neutral poles, middle - neutral poles right - neutral poles	○ (△)	○ (△)	○ (x)	○ (x)		
Between power - load side terminals	-	○	-	○		
Between main circuit live sections - operating circuit live sections	○	○	○	○		
Between operating circuit live section - ground	○	○	○	○		

Note *1 Values in parentheses apply for measuring display unit breaker.

(2) Periodic inspections

To prevent trouble and ensure the breaker operates safely for a long time, inspect the breaker one month after starting use and periodically thereafter according to the environmental conditions.

Inspection Interval Guide

1	Clean and dry environment	Once every 2 to 3 years
2	Environment with low levels of dust, corrosive gas, vapors, salt, etc.	Once a year
3	Places other than 1 or 2	Once every six months

Model	Inspection items	Criterion	Remarks
Common (*2)	1. Are any of the conductors loose?	No conductor must be loose.	If any conductor is loose, tighten again with the appropriate torque given in Tables 5-5 and 5-6 on pages 101 to 103.
	2. Is any cover or base cracked? Is any handle damaged?	There must be no cracks, damage or breaks.	
	3. Has the breaker been submerged and infiltrated with water? Is the breaker heavily dirtied by mud or dust?	There must be no infiltration of water, heavy mud or dust.	If water has infiltrated the breaker, it must be replaced with a new product or overhauled by the Mitsubishi Service Center.
	4. Has the temperature risen abnormally?	(1) Visually inspect that none of the studs on the backs of the terminals, or the breaker's tightened or molded sections are discolored from burning. (2) There must be no especially high temperature rise when the current at each phase is balanced. (Tolerable maximum value for terminal temperature rise: 60K) (3) There should be no difference on the left and right side of the base sides if the load current is balanced.	There may be a light temperature difference between the following terminals. ● Between the power side terminal and load side terminal ● Between the center pole terminal and left and right pole terminals.
	5. Can the handle be turned ON and OFF smoothly?	Should operate smoothly.	Open and close a normally closed breaker periodically. This will clean the contact and prevent abnormal heating. (*1)
	6. Does pressing the TRIP button result in a trip?	Must be resettable after tripping.	
	7. Test by pressing the TEST button.	Must operate properly and close again.	Test the operation once a month.

Notes : 1. Depending on the usage environment, any lubricants (grease) applied inside the breaker may seep out and become adhered to the outside of the breaker or cause it to become discolored. However, this will not affect the functionality or performance of the breaker and it can continue to be used as is. Any lubricants (grease) that have become adhered can be partially removed using ethanol.

2. Because a silver alloy is used for the contacts (contactors), an oxide film will form on the surface of the contacts when they are in contact with oxygen for a long time. If the resistance value between terminals is particularly high, try cleaning the contact surface by opening and closing the circuit breaker (while energized is recommended) or by operating the trip button.

(3) Inspection after Tripping

Whether the circuit breaker can be reused or must be replaced after switching off a fault current depends on the intensity of the current which was switched off.

Intensity of trip current, degree of MCCB and ELCB damage, and countermeasures

Intensity of trip current	Degree of MCCB and ELCB damage	Countermeasures
When it is clear that the circuit breaker operated within the time-delay trip range (Overcurrent up to 10 times of rated current)	No abnormality such as contamination around vent observed	Reusable [The circuit breaker can function 50 times (100A or less) at overload current which is 6 times higher than rated current]
Relatively low short-circuit current which causes instantaneous tripping Large short-circuit current close to rated breaking capacity	Soot and dust found near vent Soot and dust found near handle, remarkable contamination found near vent Molten metal found in circuit breaker Box of box type circuit breaker is severely deformed	Reusable Replace with a new product

If the intensity of the fault current cannot be estimated, remove the MCCB and ELCB, and measure the insulation resistance. If the specified value (5Ω) has not been reached, perform a withstand voltage test. If the withstand voltage is within the specified value, the circuit breaker can be used temporarily but it should be replaced with a new part as soon as possible. If both the insulation resistance and withstand voltage are sufficient, the circuit breaker may be judged as reusable. However, it should be checked for abnormalities, such as an abnormal rise in temperature for a set period.

- Measure the insulation resistance and perform the withstand voltage test with the procedures given in section 1 and 2 on page 252.
- Check that the ELCB operates when the test button is pressed.

(4) Guide to service life

Maintenance and inspection must be conducted according to the environment in which the circuit breaker is installed.

The service life of the circuit breaker cannot be determined just by the number of service years.

A reference to the service life is given below, but the circuit breaker must be diagnosed by a specialist for an accurate reading.

Guide to service life

Degree	Environment	Example	Guide for replacement (years)
Standard usage state	1	Place where air is always clean and dry	Dust-proof and air-conditioned electrical room Approx. 10 to 20
	2	Indoors, where there is little dust and no corrosive gas	Circuit-breakers housed in distribution panels or boxes within an individual electric room having no dust-proofing or air-conditioning Approx. 7 to 15
Poor environment	1	Place with gases such as sulfuric acid, hydrogen sulfide, salt and high levels of moisture, but low levels of dust	Geothermal power house, sewage treatment plants, iron and steel works, paper and pulp plants, etc. Approx. 3 to 7
	2	Place with high levels of gas and dust which humans cannot endure for long periods of time	Chemical plants, quarries, mines, etc. Approx. 1 to 3

Standard	Size of circuit breaker frame (A)	Number of operating cycles (times)			Number of tripping times by shunt tripping device or undervoltage tripping device, or by trip button
		Energization	No energization	Total	
JIS C 8201-2-1 Ann.2	100 or less	1500	8500	10000	10% of total operating cycles
JIS C 8201-2-2 Ann.2	More than 100, 315 or less	1000	7000	8000	
JIS C 8201-2-1 Ann.1	More than 315, 630 or less	1000	4000	5000	
JIS C 8201-2-2 Ann.1	More than 630, 2500 or less	500	2500	3000	
IEC 60947-2 (*1)	More than 2500	500	1500	2000	

Note *1 The number of trips by the ELCB test button is one-third the number of energizations.

The operating life shortens as the circuit breaker frame size increases. (Refer to above tables.)

These values may seem low, but since this circuit breaker is a protective device, it basically differs from a switch intended for frequent opening and closing.

For tripping by a shunt tripping device, the life is especially short and special consideration should be taken.

⚠ WARNING Continuing user of a circuit breaker which has reached its service life can result in the following problems. Always update the circuit breakers accordingly.

- ① Insulation fault: Risk of burning, internal short-circuit, and electric shock.
- ② Energizing fault: Burning or unnecessary operations caused by overheating of the internal parts, etc.
- ③ Operation fault: ON and OFF operation of the circuit may be disabled.
- ④ Tripping fault: Protection of the load device or wiring, etc., may be disabled.

⚠ CAUTION When the operating endurance exceeds the specified value, the above faults could occur or the internal conductor could break, overheat or burn.

8 Handling and Maintenance

5. Troubleshooting

(1) Troubleshooting for breaker unit (MCCB, ELCB)

Fault state		Cause		Countermeasures and Actions
Operation errors	Can't close	Foreign matter in switching mechanism		Replace with a new part
		Breaker hasn't been reset		Reset again
		Breaker can't be reset		See below (*)
	(*) Can't be reset Can't trip Can't turn OFF	Wear due to tripping endurance	Excessive use of shunt trip operation End of service life	Replace with a new part
		Reset mechanism is faulty		Replace with a new part
		Undervoltage trip coil is not excited	Wiring error	Excite by applying rated voltage
		Resetting time has not elapsed		Wait until the bimetal cools
		Switching spring is broken	End of service life	Replace with a new part
		Contact has fused because of excessive breaking current		Replace with a new part with a large breaking capacity
		Insufficient lubricant (grease)		Replace with a new part
Broken handle	Excessive power during operation			Replace with a new part
	Excessive external shock			
Poor energizing	Insulation material caught between contacts			Replace with a new part
	Corrosion due to rainwater, etc.			
	Fusion at conductive section	Excessive breaking current		Replace with a new part with a large breaking capacity
	Excessive wear of contacts	Short-circuit current cut off / End of service life		Replace with a new part
Annoying operation	Operates under normal load	Ambient temperature is high	Incorrect selection (temperature compensation)	Select a different rating
		Panel is sealed		Ventilate
		Excessive temperature rise	Loosening at terminal connections	Tighten
		Applied frequency is incorrect	Incorrect selection (frequency)	Replace with a breaker with the correct frequency
		Load current contains high levels of high-frequency distortion		Insert a reactor to decrease the distortion factor
		Measuring instrument is reading small measurement values because of distorted current		Replace with a breaker with a high rated current
	Electronic type breaker	Rated current setting is too low		Select the correct rating by measuring with a true RMS converter
		Rated current selector malfunction		Set the correct rated current
	Time-delayed operation when starting	Heat accumulation due to repeated starts	Incorrect selection	Replace with a breaker with a higher rating (replace with a new part)
		Starting current is too high		
		Long starting time		
	Instantaneous operation when starting	Starting rush current is too high	Excessive current when Y-Δ starting is selected, excessive current due to reverse operation	Change the instantaneous setting or replace with a breaker with a higher rating (replace with a new part)
		Excessive current when Y-Δ starting is selected, excessive current due to reverse operation		
		Rush current during instantaneous restart		
		Layer short circuit of motor		Repair or replace the motor
		Bimetal reset incomplete after instantaneous tripping		Allow the bimetal to cool until properly reset
		Abnormal current flow at same time as closing (short-circuit closing)		Inspect the circuit and eliminate the cause
Short-circuit on power side	Dust has accumulated			Replace with a new part
	Conductive matter has dropped into power side			
Temperature rise	Terminal temperature is high	Improper tightening	Improper maintenance	Tighten
		Excessive wear of contacts		Replace with a new part
	Mold side temperature is high	Complete electromagnetic type being used at a high frequency (400Hz, etc.)		Select a breaker with the correct frequency
		Load current contains high levels of high-frequency distortion		Insert a reactor to decrease the distortion factor
		Differences according to each person's sense		Replace with a breaker with a high rated current
	Heating at stud tightening section	Studs are loose		Measure with a measuring instrument
		Contact fault between stud conductor and body terminal		Tighten
		Grooves to reduce overcurrent heating not machined on steel mounting plate of rear connection type (400A frame or more)		Reassemble the stud
	Grooves to reduce overcurrent heating not machined on steel mounting plate of rear connection type (400A frame or more)			Machine grooves to reduce overcurrent heating
No operation	No tripping at overcurrent	Selected rated current is too high		Replace with a breaker with a lower rating (replace with a new part)
		Applied frequency is incorrect	Incorrect selection (frequency)	Replace with a breaker with the correct frequency
		An upstream breaker has instantaneously tripped	The instantaneous tripping current of an upstream breaker is too low	Lower the instantaneous tripping current Raise the instantaneous tripping current of the upstream breaker (In the case of breakers without an adjustment function, replace with a new part with a different rating)
	Overcurrent indicator LED does not turn ON	The battery of the breaker tester or adjuster is spent		Replace the battery of the breaker tester or adjuster
Does not operate with breaker tester or adjuster (Electronic type breaker)	Overcurrent indicator LED turns ON and then OFF after specified time, but does not trip	Tripping mechanism is faulty		Replace with a new part
		Electronic circuit failure		

Remarks: 1. Since the related equipment of No-Fuse Circuit Breakers, Earth Leakage Circuit Breakers are nonrepairable, we are not able to provide repairing services.

(2) Troubleshooting for leakage operation section

Fault state		Cause	Countermeasures and Actions
Annoying operation	Operates simultaneously with closing The leakage mechanism operates, such as the leakage indication button pops out	The wiring is long creating a large ground electrostatic capacity, and causes a leakage current flow	Change the rated sensitivity current or install the ELCB near the load
		ELCB units are being used in parallel, or is incorrectly connected with a neutral wire, etc.	Use the correct wiring
	Operates during use	An excessive surge, such as inducted lightning, has infiltrated the unit	Install a surge absorber, etc., near the circuit
		Induction noise from a nearby large current bus, etc., has infiltrated the unit	Avoid sources of noise
Operation errors	Leakage operation occurs when the test button is pressed, etc., but there is no indication	LED is faulty or is at end of service life	Replace with a new part
		The indicator button is improperly adjusted and does not protrude	Replace with a new part
No operation	No operation takes place when the test button is pressed	Electronic circuit section is faulty	Replace with a new part
		Voltage is not applied	Apply the specified voltage
		Contact continuity is faulty	Remove the foreign matter from the contact

Remarks: 1. When using a transceiver, use at least 1m away from the electronic MCCB and ELCB.


(3) Troubleshooting for accessories

Fault state		Cause		Countermeasures and Actions
NFM NVM (Electric operation device)	Operation disabled	Operation power voltage has dropped	Operation circuit wire capacity is insufficient	Use a larger operation circuit wire
			Operation power capacity is insufficient	Improve the operation power
		Resistor or motor is burned	Excessive continuous operation	Return for repairs (motor replacement)
		Connection is incorrect		Use the correct wiring
	Continuous idling	Applied voltage is incorrect		Apply the correct operation voltage
		ON and OFF circuits are operating simultaneously, operation is mistaken		Provide an interlock at the pushbutton
	One idle run when closing	For the self-holding type, the auxiliary switch contact is used for automatic reset		Use the alarm switch contact for the automatic reset contact
		Voltage rippling in the OFF state, or tripping caused by undervoltage		Turn OFF once to reset, and then turn ON again
UVT (Undervoltage tripping device)	Closing disabled	Breaker itself has automatically cut-off and tripped		
		Applied frequency or voltage is incorrect		Improve the power
	Doesn't attract	voltage drop is large		Improve the voltage
SHT (Shunt tripping device)	Doesn't trip	Breaker's tripping mechanism is faulty		Return for repairs
	Doesn't trip	Insufficient voltage	Operation voltage has dropped	Improve the power
			Applied voltage is incorrect	Improve the power
		Coil is burnt	Coil is continuously excited	Return for repairs (coil replacement, installation of burn prevention auxiliary coil)
			Operation voltage has dropped causing continuous excitation	Return for repairs (coil replacement), improve power
			Burn preventing auxiliary contact is faulty	Return for repairs (coil replacement, contact repair)
			Abnormal voltage is applied	Return for repairs (coil replacement)
AL (Alarm switch) AX (Auxiliary switch) EAL (Earth leakage alarm contact) TBM (Test button module) PAL (Pre-alarm)	Malfunction	Contact fault caused by overcurrent		Return for repairs
		Incorrect connection	Connection mistaken during installation	Refer to nameplate and correct the wiring
		Microload	Incorrect selection	Return for repairs (replacement with type for microloads)
		Loose mounting screws	Insufficient tightening Vibration during transportation	Return for repairs (readjustment)

8 Handling and Maintenance

(4) Cases of unnecessary ELCB operation

Even if the ELCB is not faulty, there may be a problem in the circuit which causes frequent operation or instantaneous operation at closing. Refer to the following section and incorporate it as part of the circuit inspection and troubleshooting.

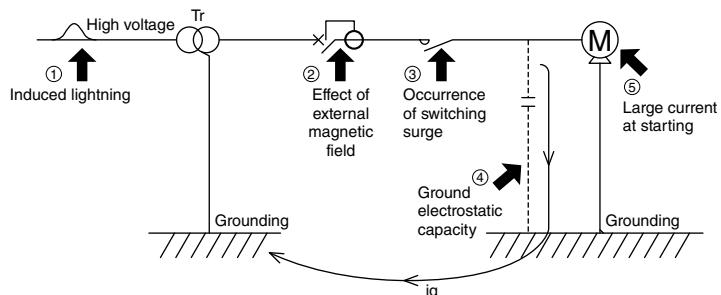

The following five conditions are the most conceivable causes of trips in cases such as when the breaker trips immediately after the ELCB is closed, or when the breaker trips suddenly during use but inspection of circuit shows no ground fault accidents. Check each item and if any problems are found, correct them accordingly.

Cause	Countermeasures
1 Induction lightning	All models incorporate a non-operating shock structure and should sufficiently withstand 7kV (JIS Standards), so unnecessary operation should not occur.
2 External magnetic field	The ZCT is equipped with a magnetic shield, and is not affected easily. However, the breaker could operate if there are large current buses reaching several thousand amperes near the ELCB, or if there is a short-circuit fault in nearby circuit. Separate the ELCB from the large current bus wires by at least 10cm.
3 Switching surge	All models incorporate a non-operating shock structure and should not operate unnecessarily. However if there is a time lag in the closing time of each pole in the magnetic switch, unnecessary operation could occur due to the relation of the ground electrostatic capacity.
4 Effect of ground electrostatic capacity	If the wires are stored in a metal conduit or metal duct wiring, the ground electrostatic capacity will increase compared to other wiring methods. This may cause the leakage current to constantly increase. If the magnetic switch chatters, etc., the leakage current may become temporarily unbalanced thus reaching a leakage current equivalent to the sensitivity current and causing unnecessary operation. Review the following matters in this case. <ol style="list-style-type: none">1) Shorten the load circuit line, or install the ELCB near the load (device) being used. (Install in a branch circuit.)2) Lead the control circuit for the control device, etc., from the power on the ELCB side.3) If the above measures are difficult or if they cause further unnecessary operation, reconsider the selected ELCB rated sensitivity current.
5 Equilibrium properties caused by large current at starting	The ZCT is made of high-grade permalloy, a material with Ni as its main element and which has outstanding residual magnetic characteristics. The periphery of the ZCT is covered with material having outstanding magnetic characteristics, creating a complete magnetic shield. This suppresses the effect of residual currents to small, and it has excellent equilibrium characteristics. Therefore, even if the starting inrush current of the motor is several to several tens of times the rated current flowing through the breaker, the earth leakage tripping function will not cause unnecessary operation. When using a compatible ZCT such as a earth leakage relay, This property changes when the primary conductor near the ZCT is bent. When penetrating a primary conductor of 300A or more, make a straight line of 30cm or more on one side.

9

Appendix

1) Handle Operation Angle Dimensions	258
2) MCCB Trip Button, Instantaneous Adjustment Dial Drilling and Terminal Cover Mounting Hole Dimensions	259
3) ELCB Button and Switch Dimensions	260
4) List of Product Weights	261
5) Switching the Adjustable Items	262
6) Breaker Mounting Screw Dimensions	265
7) List of Mold Surface Temperature-rise Values.....	266
8) Ordering Information	267
9) Index	269
10) MELSELECT™	270
11) Low-Voltage Products Website.....	271
12) Service Network	272

1. Handle Operation Angle Dimensions

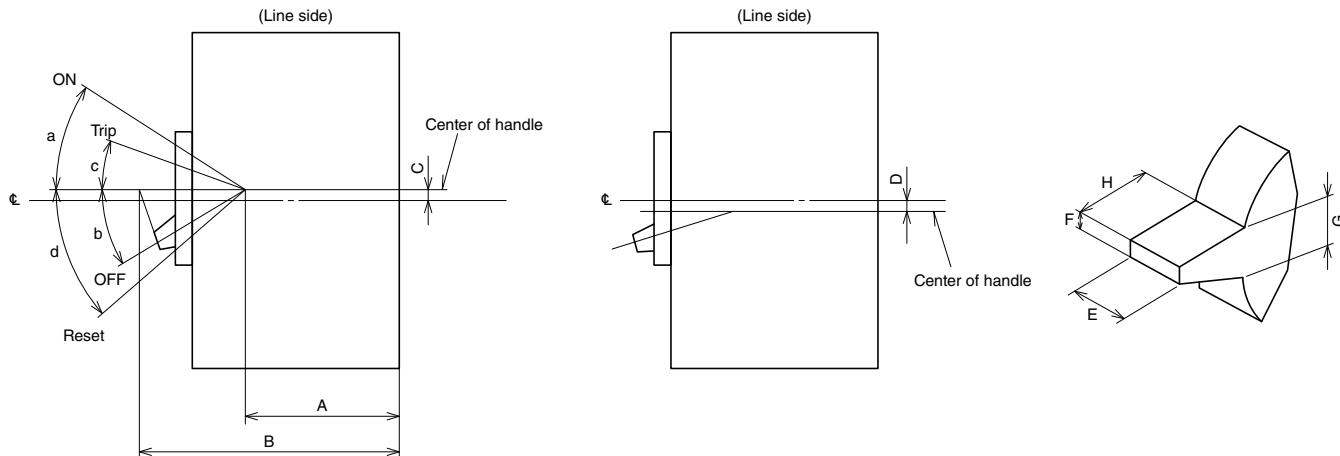


Table of dimension variations

Class	Model		Operation angle (°)				Dimensions (mm)							
			ON	OFF	Trip	Reset	A	B	C	D	E	F	G	H
	MCCB, MCB	ELCB, RCCB, RCBO	a	b	c	d								
	NF50-SVFU	NV50-SVFU	12	20	4	27	55	90	13	—	8	5	5	14
C • S • H	NF32-SV, NF63-HDV	NV32-SV												
	NF63-CV, NF63-SV, NF63-HV	NV63-CV, NV63-SV, NV63-HV	15	19	5	21	40	90	2	—	12	7	7	17
	NF125-CV, NF125-SV, NF125-HV	NV125-CV, NV125-SV, NV125-HV												
	NF100-CVFU, NF125-SVU, NF125-HVU	NV100-CVFU, NV125-SVU, NV125-HVU												
	NF125-SEV, NF125-HEV	NV125-SEV, NV125-HEV												
	NF250-CV, NF250-SV, NF250-HV	NV250-CV, NV250-SV, NV250-HV												
	NF250-SEV, NF250-HEV	NV250-SEV, NV250-HEV												
	NF250-SEV/HEV with MDU	NV250-SEV/HEV with MDU												
	NF125-HDVA	NV125-HDVA												
	NF250-SGV, NF250-LGV, NF250-HGV	NV250-SGV, NV250-LGV, NV250-HGV												
R • U	NF125-SGV, NF125-LGV, NF125-HGV	NV125-SGV, NV125-LGV, NV125-HGV												
	NF160-SGV, NF160-LGV, NF160-HGV	NV160-SGV, NV160-LGV, NV160-HGV												
	NF250-CVU, NF250-SVU, NF250-HVU	NV250-CVU, NV250-SVU, NV250-HVU												
	NF100-SRU	NV100-SRU	20	35.5	5	44.5	71	96	13	—	10	5	8.5	16.5
	NF100-HRU	NV100-HRU	20	35.5	5	44.5	71	102	13	—	10	5	8.5	16.5
	NF400-CW	NV400-CW	16.5	10	6.5	14.5	49	134	6.5	—	32.5	14.5	15.5	25
	NF400-SW/SEW/HEW/REW	NV400-SW/SEW/HEW/REW												
	NF630-CW/SW/SEW/HEW/REW	NV630-CW/SW/SEW/HEW	16.5	10	6.5	14.5	49	155	6.5	—	32.5	13.5	15.5	46
	NF400-SWU/HWU	NV400-SWU/HWU												
	NF400-HDW	—	16.5	10	6.5	14.5	55	161	65	—	32.5	13.5	15.5	46
FAU	NF800-CEW/SDW/SEW/HEW/REW	NV800-SEW/HEW	16.5	10	6.5	14.5	49	155	6.5	—	32.5	13.5	15.5	46
	NF800-SEW/HEW with MDU	NV800-SEW/HEW with MDU												
	NF630-SWU/HWU	NV630-SWU/HWU												
	NF800-HDW	—	16.5	10	6.5	14.5	55	161	6.5	—	32.5	13.5	15.5	46
	NF1000-SEW, NF1250-SEW	NV1000-SEW, NV1250-SEW	—	18	12	6	17	84	190	—	4	41.5	13.5	15
FHU	NF1600-SEW	NV1600-SEW												
	NF125-RGV, NF250-RGV	—	15	19	5	21	40	92	2	—	12	7	7	19
	NF125-UV	—	15	19	5	21	40	92	—	29	12	7	7	17
	NF250-UV	—	15	19	5	21	40	92	—	35	12	7	7	19
	NF400-UEW	—	16.5	10	6.5	14.5	146	252	—	13.5	32.5	13.5	15.5	46
BH	NF400-UEW(4P), NF800-UEW	—	16.5	10	6.5	14.5	146	252	—	17	32.5	13.5	15.5	46
	NF30-FAU, NF50-FAU	NV30-FAU, NV50-FAU	30	21	1	31	53.5	73.5	5	—	8	5	6	13
	NF50-FHU	NV50-FHU	21	29	1	31	57	76	15.5	—	8.5	4.5	6	13
	NF100-FHU	NV100-FHU	21	29	1	31	57	76	12.5	—	8.5	4.5	6	13
BH	BH-D6*1, BH-D10*1	—	41	36	—	—	63	76	9	—	—	—	—	—
	BH-DN*1	—	42	48	—	—	63	76	10	—	17	4	9.5	12
	KB-D	—	41	48	—	—	63	76	9	—	—	—	—	—
	—	BV-D*1	42	40	—	—	61	76	10	—	14	4	—	—
	—	BV-DN*1, BV-DN6*1	42	48	—	—	63	76	10	—	17	4	—	—

Note *1 Trip is the same as the OFF position. Resetting is not required.

2. MCCB Trip Button, Instantaneous Adjustment Dial Drilling and Terminal Cover Mounting Hole Dimensions

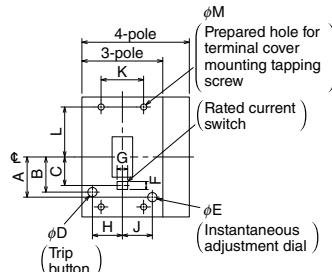


Fig. a

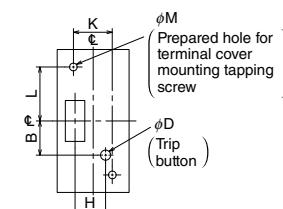


Fig. b

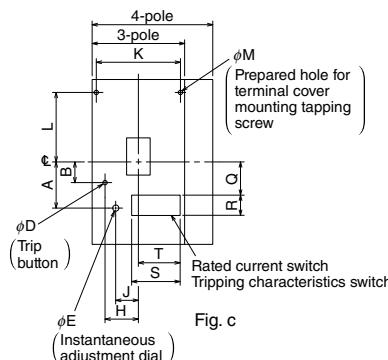


Fig. c

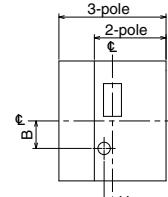


Fig. d

Table of dimension variations

Model	Number of poles	Fig.	A	B	C	φD	φE	F	G	H	J	K	L	φM	N	P	Q	R	S	T
NF50-SVFU	2, 3	d	—	14	—	6.5	—	—	—	4	—	—	—	—	—	—	—	—	—	—
NF32-SV, NF63-CV	2	b	—	20	—	6.5	—	—	—	21	—	—	—	—	—	—	—	—	—	—
NF63-SV, NF63-HV	3, 4	a	—	20	—	6.5	—	—	—	29	—	—	—	—	—	—	—	—	—	—
NF63-HDV																				
NF125-CV, NF125-SV, NF125-HV	2	b	—	20	—	6.5	—	—	—	21	—	—	—	—	—	—	—	—	—	—
NF100-CVFU, NF125-SVU, NF125-HVU	3, 4	a	—	20	—	6.5	—	—	—	37	—	—	—	—	—	—	—	—	—	—
NF125-UV	2, 3, 4	a	—	20	—	6.5	—	—	—	37	—	—	—	—	—	—	—	—	—	—
NF125-SEV, NF125-HEV, NF250-SV, NF250-HV																				
NF125-SGV, NF125-LGV, NF125-HGV																				
NF160-SGV, NF160-LGV, NF160-HGV																				
NF250-SGV, NF250-LGV, NF250-HGV																				
NF250-CVU, NF250-SVU, NF250-HVU, NF250-UV																				
NF250-SEV, NF250-HEV	3, 4	a	—	20	—	6.5	—	—	—	44	—	—	—	—	—	—	—	—	—	—
NF125-RGV	2, 3	a	—	20	—	6.5	—	—	—	44	—	—	—	—	—	—	—	—	—	—
NF250-RGV	2, 3	a	—	20	—	6.5	—	—	—	44	—	—	—	—	—	—	—	—	—	—
NF50-FHU	2	a	—	9.5	—	4	—	—	—	15	—	—	—	—	—	—	—	—	—	—
	3	a	—	9.5	—	4	—	—	—	27.5	—	—	—	—	—	—	—	—	—	—
NF30-FAU, NF50-FAU	2	a	—	11	—	4	—	—	—	0	—	—	—	—	—	—	—	—	—	—
	3	a	—	11	—	4	—	—	—	10	—	—	—	—	—	—	—	—	—	—
NF100-SRU, NF100-HRU	2	a	—	2.5	—	4	—	—	—	18.5	—	—	—	—	—	—	—	—	—	—
	3	a	—	2.5	—	4	—	—	—	31	—	—	—	—	—	—	—	—	—	—
NF100-FHU	3	a	—	12.5	—	4	—	—	—	27.5	—	—	—	—	—	—	—	—	—	—
NF400-CW	2, 3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
	2, 3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
NF400-SW, NF400-SWU, NF400-HWU	4	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
	3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	53	30	74	63.5
NF400-SEW, NF400-HEW, NF400-REW	4	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	53	30	74	63.5
	3	c	—	50.5	—	6.5	—	—	—	51.5	—	125	130.5	3.5	—	—	53	30	74	63.5
NF400-UEW	4	c	—	54	—	6.5	—	—	—	78.5	—	156	152	3.5	—	—	76.5	30	74	98.5
NF400-HDW	3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
	4	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
NF630-CW	2, 3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
	2, 3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
NF630-SW	4	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	—	—	—	—
	3	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	53	30	74	98.5
NF630-SEW, NF630-HEW, NF630-REW	4	c	—	30.5	—	6.5	—	—	—	51.5	—	125	110.5	3.5	—	—	53	30	74	98.5
	3	c	—	30.5	—	6.5	—	—	—	78.5	—	86	128.5	3.4	—	—	53	30	74	98.5
NF800-CEW, NF800-SEW, NF800-HEW, NF800-REW	4	c	—	30.5	—	6.5	—	—	—	78.5	—	156	128.5	3.4	—	—	53	30	74	98.5
	3	c	—	30.5	—	6.5	—	—	—	78.5	—	156	128.5	3.4	—	—	53	30	74	98.5
NF800-SDW, NF630-SWU, NF630-HWU	2, 3	c	74	30.5	—	6.5	10	—	—	78.5	57	86	128.5	3.4	—	—	—	—	—	—
	4	c	74	30.5	—	6.5	10	—	—	78.5	57	156	128.5	3.4	—	—	—	—	—	—
NF800-UEW	3	c	—	54	—	6.5	—	—	—	78.5	—	86	152	3.4	—	—	76.5	30	74	98.5
	4	c	—	54	—	6.5	—	—	—	78.5	—	156	152	3.4	—	—	76.5	30	74	98.5
NF800-HDW	3	c	—	30.5	—	6.5	—	—	—	78.5	—	86	128.5	3.4	—	—	—	—	—	—
	4	c	—	30.5	—	6.5	—	—	—	78.5	—	156	128.5	3.4	—	—	—	—	—	—
NF1000-SEW, NF1250-SEW	3	c	—	70	—	6	—	—	—	56.5	—	199	178.5	3.4	—	—	130	30	74	89
NF1600-SEW	4	c	—	70	—	6	—	—	—	56.5	—	269	178.5	3.4	—	—	130	30	74	89

Remarks: 1. The 4-pole part is available for the S and H Series 50A frame to 1600A frame (excluding NF400-REW, NF630-REW and NF800-REW).

2. The 2-pole part for NF250-CV and larger is the same as the 3-pole part. (Including NF125-HV.)

3. The terminal cover mounting hole shows the case for the screwed type. The breaker mounting hole is used to mount the one-touch terminal cover. Refer to the respective dimension drawings.

4. The K dimensions are divided down the breaker center.

3. ELCB Button and Switch Dimensions

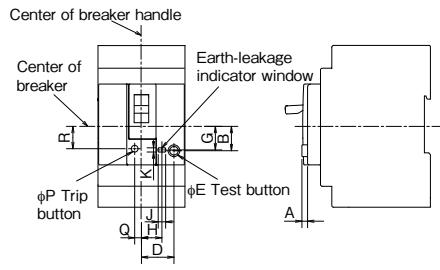
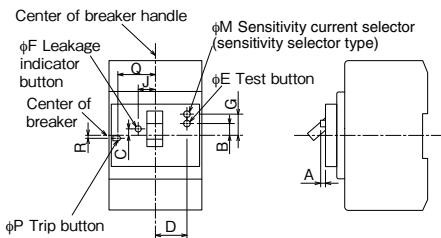
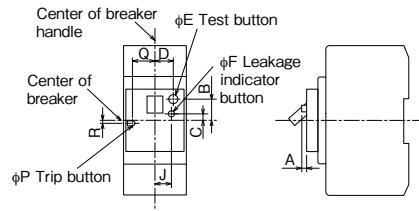
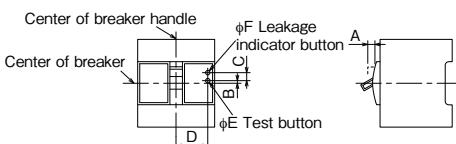
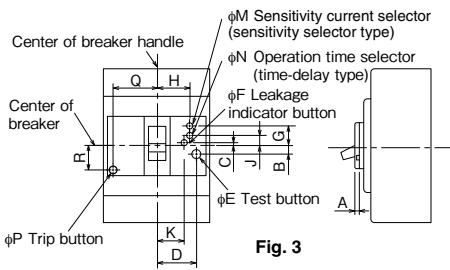
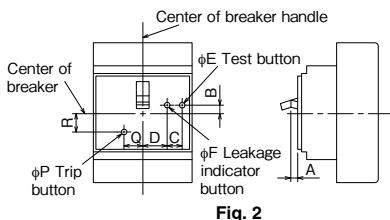
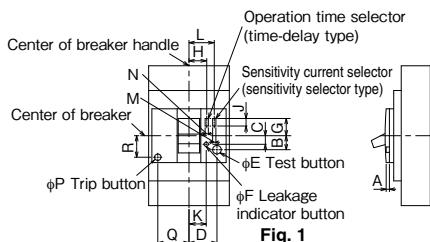


Table of dimension variations

Model	Reference drawing	Variable dimensions (mm)																	
		A Test button Indicator button		B	C	D	E	F	G	H	J	K	L	M	N	P	Q	R	
NV50-SVFU	Fig. 7	3.5	—	15	—	20	7	—	14.5	12.5	4.5	2.5	—	—	—	4	4	14	
NV32-SV	Fig. 1	Fixed type	13	8	26.5	9.5	4	—	—	—	16	—	—	—	—	6	29	20	
NV63-CV, NV63-SV, NV63-HV			16	—	—	7	—	16	—	—	23.5	3	—	—	—				
NV125-CV, NV125-SV, NV125-HV		Fixed type	13	8	26.5	9.5	4	—	—	—	—	—	—	—	—	6	37	20	
NV125-SEV, NV125-HEV	Fig. 1	Selector type	16	—	—	7	—	16	—	—	24	3	—	—	—				
NV250-CV, NV250-SV, NV250-HV			16	17	7	—	—	16	—	—	24	3	3	—	—				
NV250-CVU, NV250-SVU, NV250-HVU		Time-delay type	13	8	34	9.5	4	—	—	—	—	—	—	—	—	6	44	20	
NV250-SEV, NV250-HEV	Fig. 1	16	—	7	—	23.5	—	—	31	3	—	—	—	—	—				
NV100-FHU		Fixed type	13	8	32	9.5	4	—	—	—	31	3	—	—	—	6	44	20	
NV100-FHU		Selector type	16	—	7	—	23.5	—	—	31	3	—	—	—	—				
NV100-SRU	Fig. 5	Time-delay type	16	24	7	—	—	31	3	3	—	—	—	—	—				
NV100-SRU/HRU		2P	10.5	8	32	9.5	4	—	—	—	—	—	—	—	—	6	44	20	
NV100-SRU/HRU		3P	9	—	—	—	—	—	—	—	—	—	—	—	—				
NV400-CW (*1)	Fig. 3	2P	4	4	6.5	9	9.5	4	4	—	—	—	—	—	—	6.5	51.5	30.5	
NV400-SW		3P	9	—	—	—	—	—	—	—	—	—	—	—	—				
NV630-CW, NV630-SW		Time-delay type	22	—	—	—	—	—	—	—	43.5	—	—	5.5	—				
NV400-SEW, NV400-HEW	Fig. 3	2P	3	3	(2.3)	14.6	43.5	9.5	5	30.6	43.5	—	43.5	—	5.5	—	6.5	51.5	30.5
NV630-SEW, NV630-HEW		3P	30.6	—	—	—	—	—	30.6	43.5	—	43.5	—	5.5	—				
NV800-SEW, NV800-HEW		Time-delay type	30.6	—	—	—	—	—	30.6	54.1	—	54.1	—	5.5	—				

Note *1 Dimensions shown in parentheses apply to minus direction.

4. List of Product Weights

MCCB

Model	Item	Breaker body												Accessories (weight of only accessories) (kg)						
		Front connection type				Rear connection type				Plug-in type (including plug-in frame)				Electric operated type	Boxed type			Operation handle		Mechanical interlock (MI)
		1P	2P	3P	4P	1P	2P	3P	4P	2P	3P	4P	S	I	W	F type	V type	C type		
NF32-SV	-	0.45	0.65	-	-	0.55	0.8	-	0.8	1.2	-	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
NF63-CV (rated current 50A or less)	-	0.45	0.65	-	-	0.55	0.8	-	0.8	1.2	-	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
NF63-CV (rated current 60A, 63A)	-	0.5	0.7	-	-	0.6	0.85	-	0.85	1.25	-	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
NF63-SV, NF63-HV (rated current 50A or less)	-	0.5	0.7	0.9	-	0.6	0.85	1.1	0.85	1.25	1.5	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
NF63-SV, NF63-HV (rated current 60A, 63A)	-	0.55	0.75	1.0	-	0.65	0.9	1.2	0.9	1.3	1.6	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17
NF125-CV	-	0.6	1.0	-	-	1.0	1.5	-	1.2	1.9	-	1.3	1.8	5.1	10.2	0.4	0.45	-	0.17	
NF125-SV	-	0.7	0.95	1.3	-	1.1	1.5	2.0	1.3	1.9	2.4	1.3	1.8	5.1	10.2	0.4	0.45	-	0.17	
NF125-HV	-	0.6	1.0	1.2	-	1.0	1.5	1.9	1.2	1.9	2.3	1.3	1.8	5.1	10.5	0.4	0.45	-	0.17	
NF125-SEV	-	1.7	2.2	-	-	2.2	2.9	-	2.6	3.3	1.3	1.8	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF125-HEV	-	1.7	2.2	-	-	2.2	2.9	-	2.6	3.3	1.3	1.8	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF250-CV	-	1.3	1.5	-	-	1.7	2.2	-	3.1	3.4	-	1.3	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF250-SV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF250-HV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF250-SEV	-	1.7	2.2	-	-	2.4	3.2	-	3.6	4.7	1.3	1.8	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF250-HEV	-	1.7	2.2	-	-	2.4	3.2	-	3.6	4.7	1.3	1.8	8.7	13.5	0.5	0.55	-	0.17		
NF125-SGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF125-LGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF125-HGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF160-SGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF160-LGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	6.8	8.7	13.5	0.5	0.55	-	0.17	
NF250-SGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF250-LGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF250-HGV	-	1.4	1.6	2.0	-	1.8	2.3	3.0	3.2	3.5	4.5	1.3	-	8.7	13.5	0.5	0.55	-	0.17	
NF400-CW	-	4.4	5.0	-	-	5.7	7.0	-	7.0	8.3	-	-	-	-	-	-	-	-	-	
NF400-SW	-	4.6	5.2	6.8	-	5.9	7.3	9.7	7.2	8.5	11.3	-	-	19	30	-	-	-	-	
NF400-SEW/HEW	-	-	6.0	7.6	-	-	8.1	10.5	-	9.3	12.0	-	-	-	-	-	-	-	-	
NF400-REW	-	-	6.0	-	-	-	8.5	-	-	9.3	-	-	-	-	-	-	-	-	-	
NF630-CW	-	5.2	6.0	-	-	6.5	7.9	-	7.6	9.1	-	-	-	-	-	-	-	-	-	
NF630-SW	-	5.4	6.2	8.0	-	6.7	8.1	10.6	7.8	9.3	12.0	-	-	33	30	-	-	-	-	
NF630-SEW/HEW	-	-	6.5	8.3	-	-	8.4	10.9	-	9.6	12.3	-	-	-	-	-	-	-	-	
NF630-REW	-	-	6.5	-	-	-	8.4	-	-	9.6	-	-	-	-	-	-	-	-	-	
NF800-CEW	-	-	10.9	-	-	-	12.1	-	-	16.3	-	-	-	-	-	-	-	-	-	
NF800-SDW	-	9	-	-	-	10	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF800-SEW/HEW	-	-	10.9	14.2	-	-	12.1	15.8	-	16.3	21.4	-	-	-	-	-	-	-	-	
NF800-REW	-	-	10.9	-	-	-	12.1	-	-	16.3	-	-	-	-	-	-	-	-	-	
NF1000-SEW, NF1250-SEW	-	-	23.5	30.7	-	-	23	30.8	-	26.6	35.5	10	-	48	70	3.4	-	-	-	
NF1600-SEW	-	-	34.5	41.2	-	-	30	40.7	-	-	-	10	-	-	-	-	-	-	-	
NF125-RGV	-	1.5	1.8	-	-	-	-	-	2.35	2.7	-	1.3	-	-	-	-	-	-	0.55	
NF250-RGV	-	1.5	1.8	-	-	-	-	-	3.2	3.6	-	1.3	-	-	-	-	-	-	0.17	
NF125-UV	-	1.35	1.5	1.9	-	-	-	-	2.2	2.4	-	1.3	-	-	-	-	-	-	0.17	
NF250-UV	-	2.5	2.7	3.7	-	-	-	-	4.2	4.5	-	1.3	-	-	-	-	-	-	0.17	
NF400-UEW	-	-	16.2	25.4	-	-	18.6	30.7	-	19.8	-	9.0	-	-	-	-	-	-	2.2	
NF800-UEW	-	-	27.6	33.7	-	-	31.2	38.4	-	-	-	-	-	-	-	-	-	-	0.45	
NF63-HDV (rated current 50A or less)	-	0.45	0.65	-	-	0.55	0.8	-	-	-	-	-	-	-	-	-	-	-	-	
NF125-HDVA	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF250-HDVA	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF400-HDW	-	-	5.6	7.3	-	-	7.3	9.7	-	-	-	-	-	-	-	-	-	-	-	
NF800-HDW	-	-	9.9	13.0	-	-	11.0	14.4	-	-	-	-	-	-	-	-	-	-	-	
NF30-FA, NF30-FAU	-	0.14	0.2	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF50-FA, NF50-FAU	-	0.16	0.22	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF50-FHU	-	0.25	0.37	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF100-FHU	-	-	0.51	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
BH-D6, BH-D10	0.15	0.3	0.45	0.55	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
BH-DN	-	0.12	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
KB-D	0.09	0.18	0.27	0.36	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF50-SVFU	-	0.3	0.45	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF100-CVFU	-	0.6	0.85	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF125-SVU	-	0.7	0.95	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF125-HVU	-	-	1.0	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF100-SRU	-	0.5	0.75	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF100-HRU	-	0.55	0.8	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF400-SWU/HWU	-	-	5.7	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	
NF630-SWU/HWU	-	-	9.6	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	-	

Model	Item	Breaker body												Accessories (weight of only accessories) (kg)						
		Front connection type				Rear connection type				Plug-in type (including plug-in frame)				Electric operated type	Boxed type			Operation handle		Mechanical interlock (MI)
		2P	3P	4P	2P	3P	4P	2P	3P	4P	S	I	W	F type	V type	C type				
NV32-SV	-	0.75	-	-	0.95	-	-	1.35	-	-	1.5	5.0	10.2	0.4	0.45	-	0.17	-	-	-
NV63-CV (rated current 50A or less)	-	0.7	0.75																	

5. Switching the Adjustable Items

(1) Adjustable rated current and tripping characteristics items

Applicable model		Adjustable item		Rated current	LTD tripping characteristics	STD tripping characteristics	Instantaneous tripping characteristics	PAL	Rated sensitivity	Rated Operating time (for time-delay type)	Rated voltage
MCCB	NF125-SEV/HEV			<input type="radio"/>	<input type="radio"/> (*2)	<input type="radio"/> (*2)			<input type="radio"/> (*1)		
	NF250-SEV/HEV			<input type="radio"/>	<input type="radio"/> (*2)	<input type="radio"/> (*2)			<input type="radio"/> (*1)		
	NF400-SEW/HEW/REW/UEW										
	NF630-SEW/HEW/REW			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>			
	NF800-CEW/SEW/HEW/REW/UEW										
	NF1000-SEW, NF1250-SEW, NF1600-SEW										
	NF800-SDW, NF630-SWU/HWU						<input type="radio"/>				
ELCB	NF125-SGV/LGV/HGV			<input type="radio"/>							
	NF160-SGV/LGV/HGV			<input type="radio"/>							
	NF250-SGV/LGV/HGV										
	NV125-SEV/HEV			<input type="radio"/>	<input type="radio"/> (*2)	<input type="radio"/> (*2)	<input type="radio"/>	<input type="radio"/> (*1)	<input type="radio"/>	<input type="radio"/>	
	NV250-SEV/HEV			<input type="radio"/>	<input type="radio"/> (*2)	<input type="radio"/> (*2)	<input type="radio"/>	<input type="radio"/> (*1)	<input type="radio"/>	<input type="radio"/>	
	NV400-SEW/HEW										
	NV630-SEW/HEW			<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	<input type="radio"/>	
ELCB	NV800-SEW/HEW										
	NV32-SV, NV63-CV/SV/HV								<input type="radio"/>		
	NV100-SRU, NV100-HRU										
	NV125-CV/SV/HV/SVU/HVU										
	NV250-CV/SV/HV/CVU/SVU/HVU								<input type="radio"/>	<input type="radio"/>	
NV400-CW/SW, NV630-CW											

Notes *1 Available only for models with pre-alarm module.

*2 Use the OPERATION CHECK & SETUP UNIT Y-360-V(-VW). Consult Mitsubishi for details.

Remarks: Unless otherwise specified, the electronic breaker is adjusted to the following settings as a default.

(1) Rated current: maximum value

(2) LTD tripping characteristics:maximum value

(3) STD tripping characteristics (current, operating time):maximum value

(4) Instantaneous tripping characteristics:maximum value

(5) PAL:minimum value

(6) Rated sensitivity current:maximum value




(7) Leakage operation time (for time-delay type):maximum value

(2) Adjusting the rated current and tripping characteristics

Item	Electronic type	
Application	125 to 250A frame	400 to 1600A frame
Example of selector layout	<p>Diagram illustrating the selector layout for the 125 to 250A frame. The top panel includes a Trip (PTT) button, an OVER LED (red) and 70% LED (green), a replacement label, a current setting label, and a trip characteristics selector. Below the panel is a clear cover containing two sets of dial controls for current setting (step type) and instantaneous tripping current (step type).</p>	<p>Diagram illustrating the selector layout for the 400 to 1600A frame. The top panel includes a Trip (PTT) button, an OVER LED (red), a PAL LED (yellow), a 70% LED (green), a replacement label, a clear cover, and a trip characteristics selector. Below the panel is a detailed view of the clear cover showing various dial settings for rated current (step type), variable current setting (Co variable type), STD tripping current, instantaneous tripping current, pre-alarm current, LTD operating time, and STD operating time.</p>
Example of making a selection	<p>Turn the handle to OFF before starting the settings.</p> <ol style="list-style-type: none"> Set the arrow of each characteristic's setting dial to the required scale position. Always set the dial arrow within the bold lines of the setting value. If stopped at the middle, the adjacent setting value may be applied. Use a 0.5mm thick flat-tip screwdriver with a 3mm or less tip width. Turn the screwdriver at 0.05N·m or less. From the replacement labels, select the rated current label with the same value as the setting value. Replace the rated current label. Close the cover and tighten the screw. 	<p>Turn the handle to OFF before starting the settings.</p> <ol style="list-style-type: none"> Open the clear cover. Set the arrow of each characteristic's setting dial to the required scale position. For values other than instantaneous tripping current and adjustable current settings, which can be adjusted at any time, always set the dial arrow within the bold lines of the setting value. If stopped at the middle, the adjacent setting value may be applied. Use a 0.6mm thick flat-tip screwdriver with a 4.5mm or less tip width. Turn the screwdriver at 0.05N·m or less. From the replacement labels, select the rated current label with the same value as the setting value. Replace the rated current label. Close the clear cover.
Setter and tester	<p>In case of 125 to 250A frame (Application: Electronic (effective value detection) breaker) The following items can be set and tested using the breaker test and setter Y-360-V(-VW).</p> <ul style="list-style-type: none"> LTD and STD characteristics settings Long-term operation test (variable signal) Short-term operation test (fixed signal) *1 Instantaneous operation test (fixed signal) Pre-alarm operation test (variable signal) *2 <p>*1. Fixed signal which is 1.5 times the STD trip current. *2. Only for models with pre-alarm module.</p>	<p>In case of 400 to 1600A frame (Application: Electronic (effective value detection) breaker) The following items can be tested using the tester Y-360-W(-VW).</p> <ul style="list-style-type: none"> Long-term operation test (variable signal) Short-term operation test (fixed signal) Instantaneous operation test (fixed signal) Pre-alarm operation test (variable signal)

9 Appendix

(3) Selecting the rated voltage, rated sensitivity and operating time

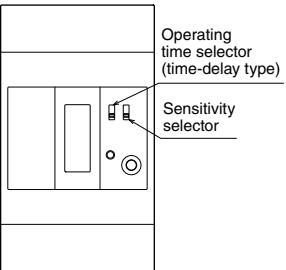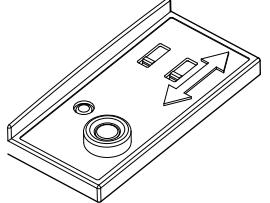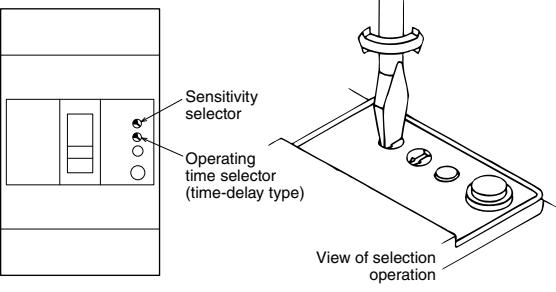Model	Selector layout	Voltage selection	Sensitivity and operation time selection
ELCB 3-step sensitivity selector type	 	Use for the circuit voltage within the rated voltage.	Turn the handle to OFF before changing the selection.
		Use for the circuit voltage within the rated voltage.	Turn the handle to OFF before changing the selection.

6. Breaker Mounting Screw Dimensions


MCCB • MCB

Class	Model	Hole depth A	Wood screw (round wood screw) for front connection	Front connection type	Rear connection type	Plug-in type	Required quantity per unit			
							1P	2P	3P	4P
C • S • H	NF50-SVFU	56	—	M4×0.7×65 (note)	—	—	—	2	2	—
	NF32-SV, NF63-CV, NF63-SV, NF63-HV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55	—	2	2	4
	NF125-CV, NF125-SV, NF125-HV									
	NF100-CVFU, NF125-SVU									
	NF125-HVU									
	NF125-SEV, NF125-HEV									
	NF250-CV, NF250-SV, NF250-HV									
	NF250-SEV, NF250-HEV									
	NF250-CVU, NF250-SVU, NF250-HVU	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55 M4×0.7×73	—	2 (For plug-in type 4)	2	4
	NF125-SGV, NF125-LGV, NF125-HGV									
R • U	NF160-SGV, NF160-LGV, NF160-HGV									
	NF250-SGV, NF250-LGV, NF250-HGV									
	NF400-CW, NF400-SW	47	—	M6×60	M6×72	M6×72	—	4	4	4
	NF400-SWU, NF400-HWU									
	NF400-SEW, NF400-HEW, NF400-REW									
	NF630-CW, NF630-SW, NF630-SEW	59	—	M6×72	M6×85	M6×85	—	4	4	4
	NF630-HEW, NF630-REW									
	NF800-CEW, NF800-SEW									
	NF800-HEW, NF800-REW	15	—	M6×35	M6×40	M6×35	—	4	4	4
	NF630-SWU, NF630-HWU									
BH	NF1000-SEW, NF1250-SEW	18.5	—	M8×40	M8×40	M8×40	—	4	4	4
	NF1600-SEW	18.5	—	M8×40	M8×40	—	—	4	4	4
	NF125-RGV	45	—	M4×0.7×55	M4×0.7×55	M4×0.7×55	—	2	2	—
	NF250-RGV									
	NF125-UV, NF250-UV	45/61	—	M4×0.7×55/73	M4×0.7×55/73	M4×0.7×55/73	—	4	4	—
•	NF125-UV (4P), NF250-UV (4P)	45	—	M4×0.7×55	M4×0.7×55	M4×0.7×55	—	2	2	4
	NF400-UEW (3P)	47/156	—	M6×65/174	M6×72/181	M6×72/181	—	—	4	—
BH	NF400-UEW (4P), NF800-UEW	15/112	—	M6×35/132	M6×40/137	M6×35/132	—	—	4	6
	BH-D6	—	—	—	—	—	—	—	—	—
	BH-DN	—	—	—	—	—	—	—	—	—
	KB-D	—	—	—	—	—	—	—	—	—
BH	BH-D10	—	—	—	—	—	—	—	—	—

Remarks: 1. The mounting shown in the  sections are enclosed with the MCCB. The mounting screws for the plug-in connection are enclosed with the plug-in terminal block.
All other mounting screws must be prepared by the user.

2. All mounting screws other than the hexagon socket bolts and hexagon bolts are P-type panhead screws.
3. For models with two types of mounting screws, the screw length differs on the supply side and load side.
4. The plug-in type is not available for NF800-UEW.

Note For the P-type panhead screw, use a type with a spring washer and flat washer (small round) combination, or a P-type panhead screw with spring washer and flat washer.

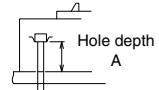


ELCB • RCCB • RCBO

Class	Model	Hole depth A	Wood screw (round wood screw) for front connection	Screw for steel plates (P-type panhead screw)			Required quantity per unit		
				Front connection type	Rear connection type	Plug-in type	2, 3P	4P	
NV	NV50-SVFU	56	—	M4×0.7×65 (note)	—	—	—	2	—
	NV32-SV, NV63-CV, NV63-SV, NV63-HV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55	2	4	
	NV125-CV, NV125-SV, NV125-HV								
	NV100-CVFU, NV125-SVU, NV125-HVU								
	NV125-SEV, NV125-HEV								
	NV250-CV, NV250-SV, NV250-HV	45	4.1×58	M4×0.7×55	M4×0.7×55	M4×0.7×55 M4×0.7×73	—	2 (For plug-in type 4)	4
	NV250-SEV, NV250-HEV,								
	NV250-CVU, NV250-SVU, NV250-HVU								
	NV400-CW, NV400-SW	47	—	M6×60	M6×72	M6×72	4	4	
	NV400-SEW, NV400-HEW								
BV	NV630-CW, NV630-SW, NV630-SEW	59	—	M6×72	M6×85	M6×85	4	4	
	NV630-HEW								
	NV800-SEW, NV800-HEW	15	—	M6×35	M6×40	M6×35	4	4	
	BV-D	—	—	—	—	—	—	—	
BV	BV-DN	—	—	—	—	—	—	—	

Remark : 1. The mounting shown in the  sections are enclosed with the ELCB.

Note For the P-type panhead screw, use a type with a spring washer and flat washer (small round) combination, or a P-type panhead screw with spring washer and flat washer.

7. List of Mold Surface Temperature-rise Values

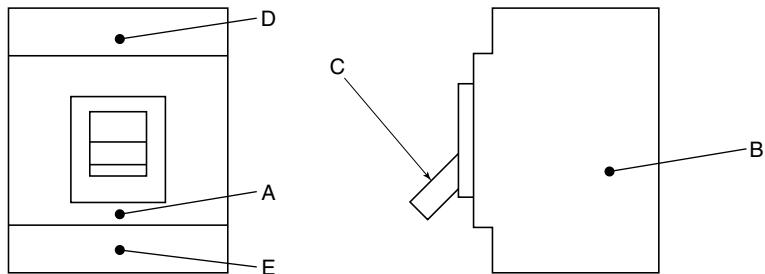

MCCB

Model	Conducting current	Measurement point				
		Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NF32-SV	32A	14	38	12	36	37
NF63-CV	63A	15	42	14	39	44
NF63-SV	63A	15	39	12	41	44
NF63-HV	63A	15	42	12	41	49
NF125-CV	125A	13	29	9	43	42
NF125-SV	125A	14	32	10	44	40
NF125-HV	125A	16	33	11	49	42
NF250-CV	250A	19	35	13	46	45
NF250-SV	250A	20	36	13	47	45
NF250-HV	250A	20	36	13	49	46
NF125-SGV	125A	20	35	13	42	49
NF250-SGV	250A	20	36	13	49	50
NF160-SGV	160A	20	35	13	40	44

Model	Conducting current	Measurement point				
		Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NF400-CW	400A	16	25	16	47	37
NF400-SW	400A	20	27	10	46	37
NF400-SEW	400A	14	22	9	35	31
NF400-HEW	400A	14	23	8	34	32
NF400-REW	400A	15	23	9	35	32
NF400-UEW	400A	19	28	13	42	33
NF630-CW	630A	23	32	15	52	52
NF630-SW	630A	23	33	16	54	52
NF630-SEW	630A	22	31	14	51	45
NF630-HEW	630A	20	31	13	50	44
NF630-REW	630A	21	31	13	51	44
NF800-CEW	800A	21	30	13	45	40
NF800-SDW	800A	18	28	12	46	44
NF800-SEW	800A	21	30	12	45	41
NF800-HEW	800A	22	31	12	47	42
NF800-REW	800A	21	30	13	46	42
NF800-UEW	800A	25	35	16	51	46

ELCB

Model	Conducting current	Measurement point				
		Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NV32-SV	32A	15	35	11	36	41
NV63-CV	63A	17	32	13	43	41
NV63-SV	63A	17	37	13	45	47
NV63-HV	63A	17	35	13	43	43
NV125-CV	125A	13	30	13	47	43
NV125-SV	125A	14	30	15	45	43
NV125-HV	125A	14	32	14	42	43
NV250-CV	250A	21	37	14	43	44
NV250-SV	250A	21	39	18	47	43
NV250-HV	250A	23	38	17	48	43

Model	Conducting current	Measurement point				
		Cover surface (A)	Base side (B)	Handle (C)	Line terminal (D)	Load terminal (E)
NV400-CW	400A	22	32	11	46	41
NV400-SW	400A	23	32	12	47	42
NV400-SEW	400A	16	23	10	36	34
NV400-HEW	400A	15	22	11	35	35
NV630-CW	630A	24	34	17	54	52
NV630-SW	630A	23	33	16	53	53
NV630-SEW	630A	23	34	17	54	53
NV630-HEW	630A	22	33	17	54	52
NV800-SEW	800A	29	40	13	53	46


Notes *1 The connected wire size follows JIS C 8201 Ann.2 Standards. The temperature rise value will vary according to the size of the connected wire.

*2 This table shows the temperature-rise values. The ambient temperature must be added for the actual measurement value.


*3 These are examples of the measurement values, and are not guaranteed values. Use these as reference data.

8. Ordering Information

● Molded Case Circuit Breakers

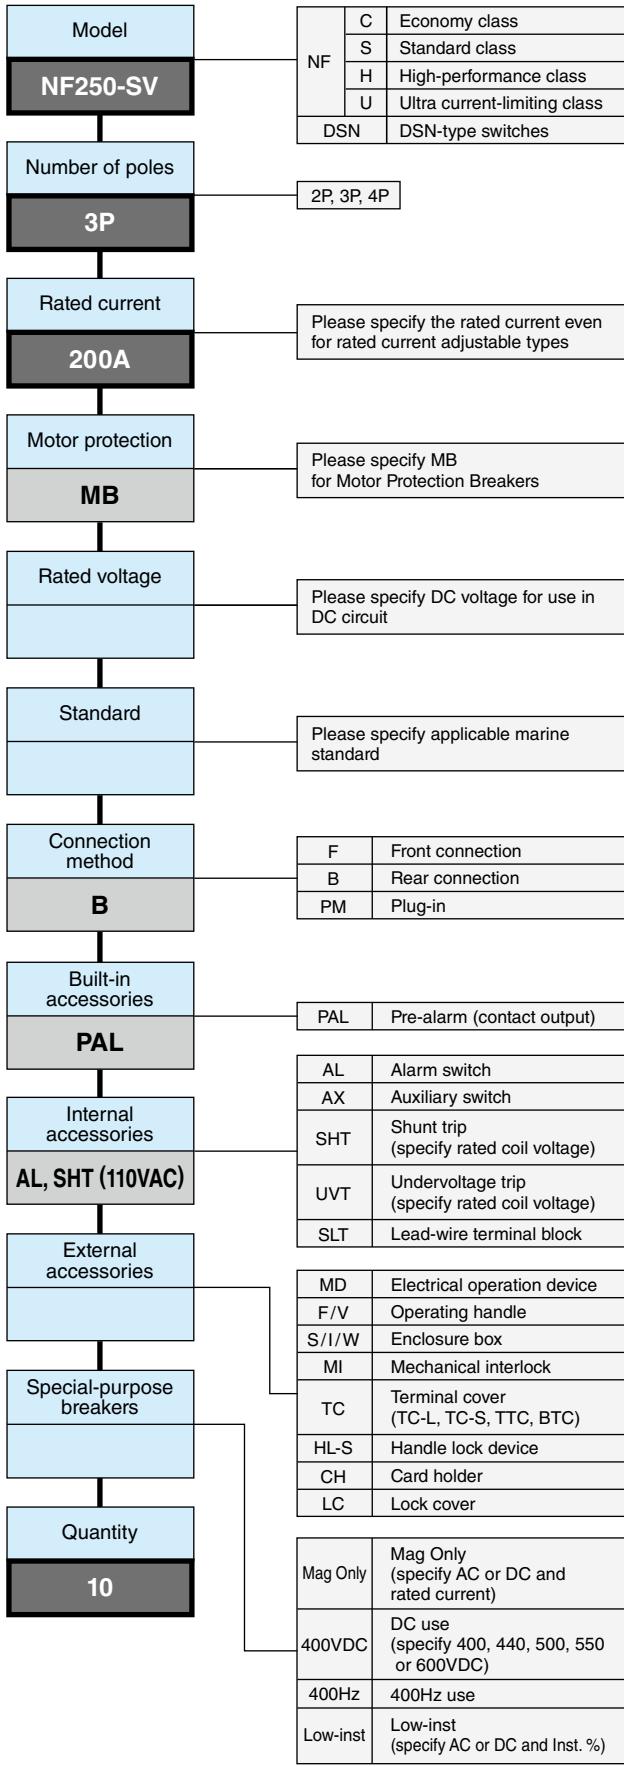


● Earth Leakage Circuit Breakers

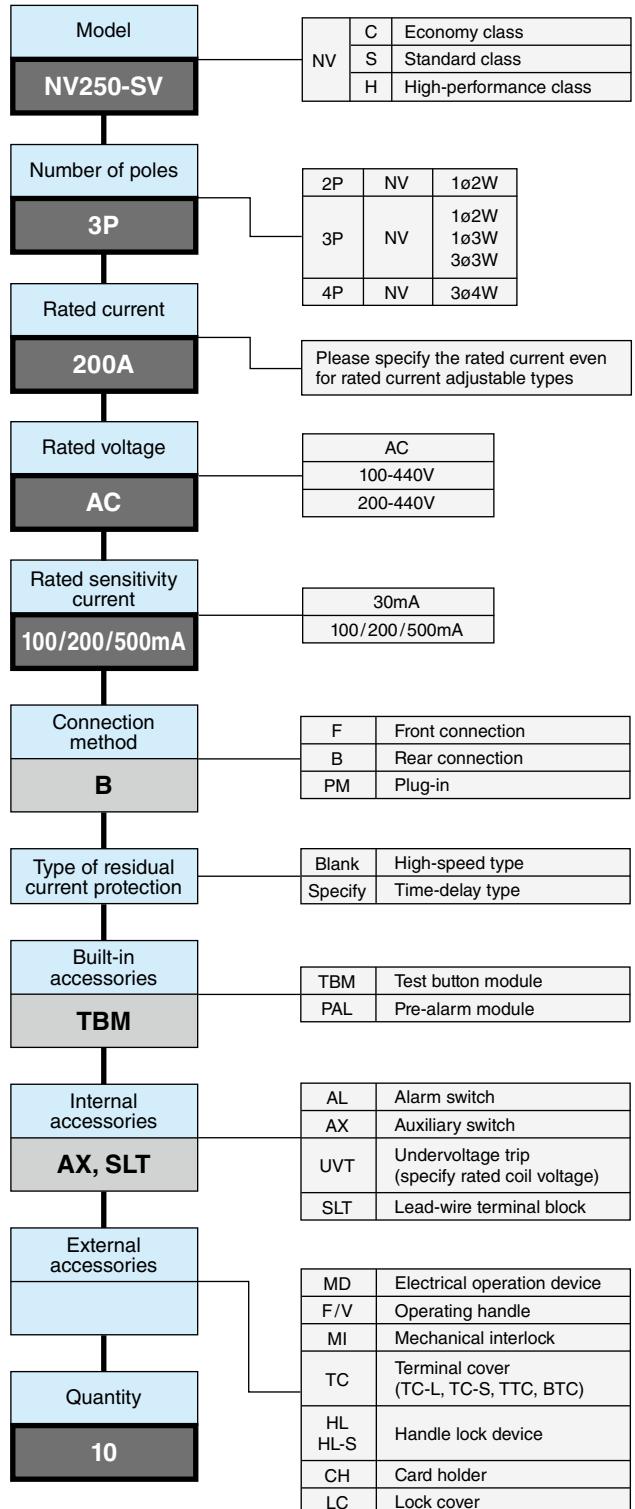

9 Appendix

Circuit Protector (CP30-BA)

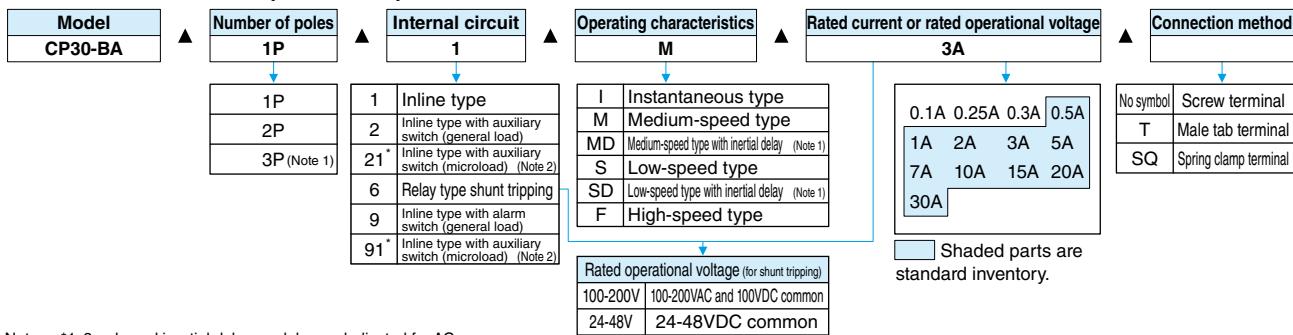

Notes *1 3-pole and inertial delay models are dedicated for AC.

2 If an auxiliary switch (AX) or alarm switch (AL) used for a 125VAC 0.5A or less circuit is required, select the microload type indicated with an asterisk.

*3 The relay type shunt trip is subject to CCC. This is a UL (cURus) CE and UKCA Marking compliant product.


Example 1. CP30-BA 1P 1-M 3A (example of inline type, medium-speed, 1-pole part, 3A, screw terminal specifications)

As a standard, this product is a UL (cURus), CE, UKCA Marking, CCC compliant product.


Mandatory items are indicated with a bold box. Always specify these items.

Unless specified, all other items will be manufactured with standard Mitsubishi specifications.

UL 489 Listed Molded Case Circuit Breakers

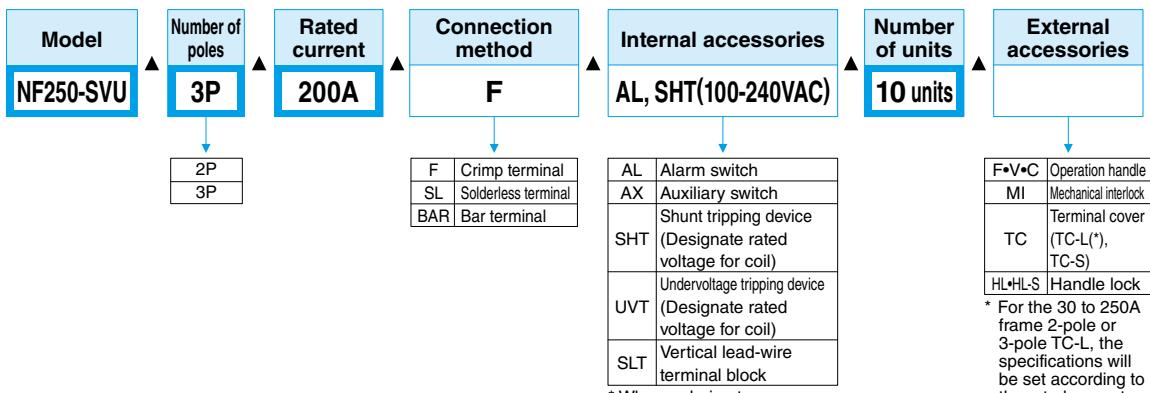

UL 489 Listed Earth Leakage Circuit Breakers

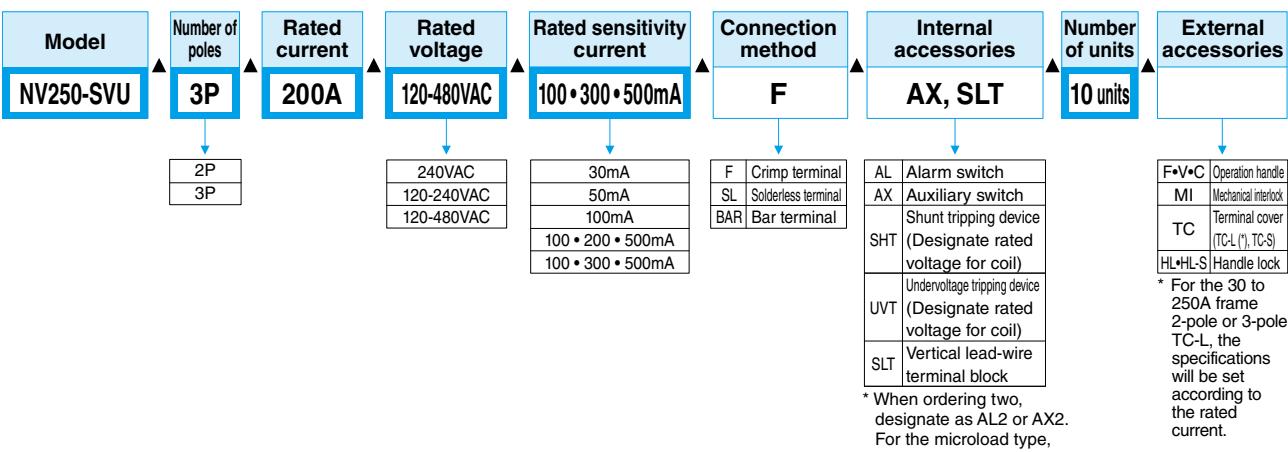


9. Index

	Chapter	page
A	AE	2 56
	AL	6 108
	AX	6 108
B	B(Rear)	5 98
	BA-B	6 132
	BA-F	6 132
	BA-G	6 133
	BA-P	6 133
	BAR	5 98
	BOX	6 137
	B-ST	5 98
	BTC	6 130
C	CE marking	4 89
	CH	6 135
	CP	2 53
	C-type handle	6 127
D	DC MCCB	3 63
	DC DSN switch	3 63
	DIN rail mounting adapter	6 143
F	F(AMP-N)	5 98
	FAU/FHU series	2 38
	FP	5 98
	F-type handle	6 123
H	HL	6 134
	HL-S	6 134
	HT	6 135
I	I-box(Dust-proof type)	6 137
	IEC 35-mm rail mounting adapter	6 143
L	LC	6 135
M	MB	2 34
	MD	6 140
	MDS	6 140
	MDU breaker	2 41
	MI	6 136
N	NFI(Dust-proof type)	6 137
	NFS(Closed type)	6 137
	NFW(Water-proof type)	6 137
P	P-LT	6 120
	PAL	6 122
	PM	5 98
	PTC	6 130
S	S-box(Closed-type)	6 137
	SHT	6 108
	SLT	6 108
	SQ	2 53
T	TBM	6 121
	TC-L	6 128
	TC-S	6 129
	TTC	6 129
U	UL 489 Listed	2 35
	UVT	6 108
V	V-type handle	6 125
W	W-box(water-proof type)	6 137
Y	Y-360	9 263
Z	ZCT	2 58
	ZT	2 58

10. MELSELECT™

Short-circuit current calculation and model selection software

MELSELECT is the software that calculates short circuit current and autoselects suitable products from Mitsubishi Electric ranges for circuit protection.

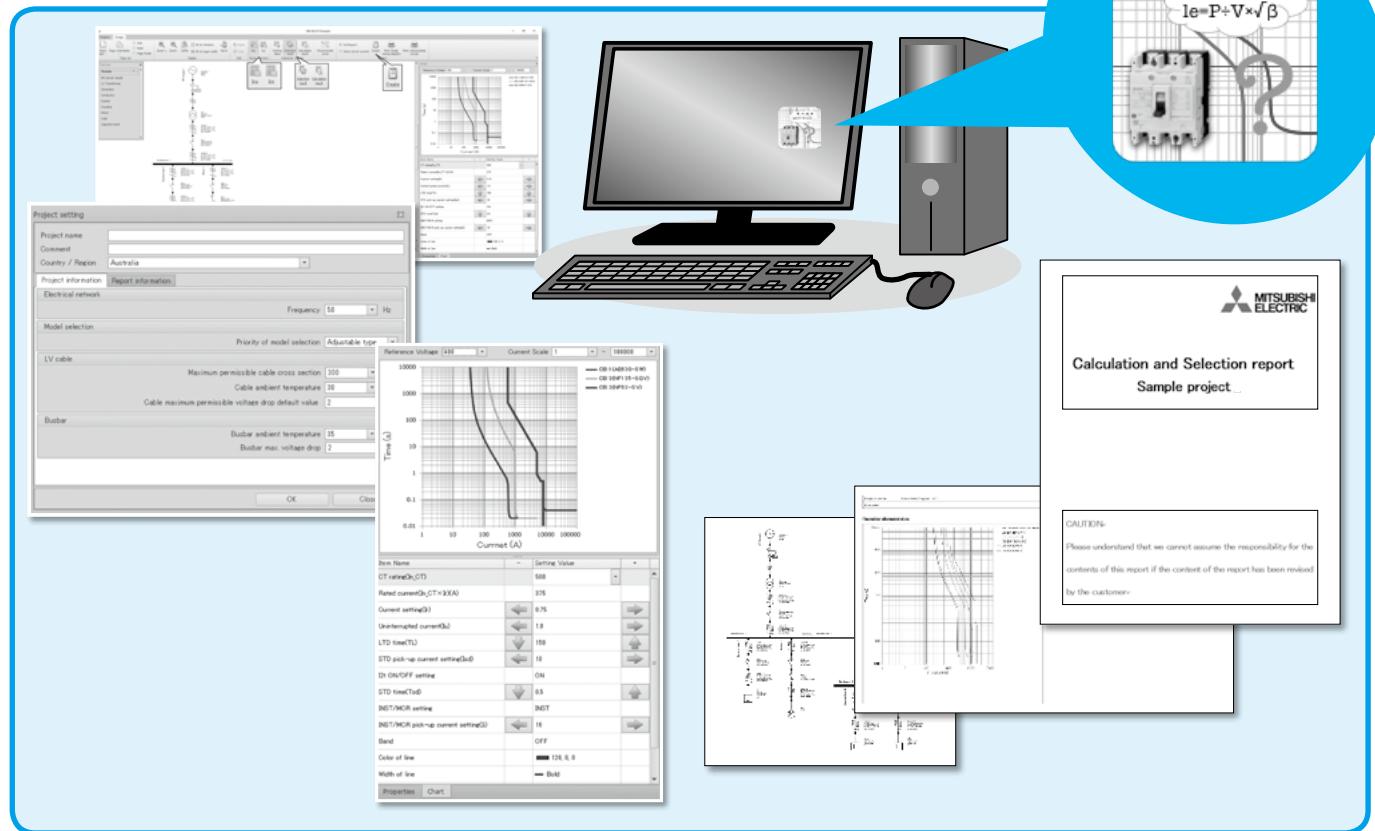

MELSELECT simplifies the circuit design and improves the work rate!

● Registered Products

Low-voltage Power Distribution Products: ACBs, MCCBs, ELCBs, MCBs, Contactors, Thermal relays

● Features

- Calculating short circuit current and auto-selecting the suitable combination of installation components from Mitsubishi Electric ranges.
- Outputting a report of calculation and selection results.
- Checking coordination by comparing the characteristics of the selected products.
- Multi-languages available. (Japanese, English, Chinese)
- Widely-used in the world. (57 countries and regions)
- Compatibility with Windows 10.
- IEC based SLD (Single Line Diagram) indication.
- Free software open to public on Mitsubishi Electric FA Global Website and off-line operating.

● System Requirements

- Operating system (OS): Microsoft Windows 10 (32/64 bit) Pro.
 - Microsoft .NET Framework: Microsoft .NET Framework 4.6.
- * Microsoft, Windows, .NET Framework and Word are registered trademarks of Microsoft Corporation in the United States and other countries.

● Download Link

<http://www.mitsubishielectric.com/fa/products/lvd/lvcb/smerit/melselect/index.html>

11. Low Voltage Products Website

Changes for the Better



<https://www.mitsubishielectric.com/fa/>

— Easier to Navigate, More Information Available —

Whether you are looking for information on high-performance power distribution/protection systems and energy-saving support equipment or simply interested in one of our many low-voltage power control products, we've made things easier for you to find. The website is now organized to provide enhanced usability for customers, and the latest information on our low-voltage products and systems.

Please be sure to visit, check out our new look, and bookmark the site for future reference.

“Four Key Features

1 Product Information

Based on past customer requests, we've increased the content to include a full product line-up, product specifications and relevant CAD data. The Products pages are divided into two categories:

Low-voltage Circuit Breakers

WS-V Series Next-generation MCCB and ELCB, AE-SW Series ACB, DIN Series MCB

Energy Measuring Devices

New SS series Multi-measuring instruments, EcoMoniorPlus Energy Measuring Unit

2 Downloads

The latest catalogs, information on certifications acquired, handling and maintenance information, and technical notes can all be downloaded free of charge. We've organized the information for maximum customer convenience, and will be updating the contents periodically.

3 News

Check here for the latest, up-to-date news on Mitsubishi Electric products such as new product releases and changes in specifications.

4 Support

Our interest is to serve you! Please contact us whenever you have a question or are in need of support. We'll reply at the earliest possible time. Committed to supporting our customers' businesses, we also provide information through Mitsubishi Electric's global network.

“Empowering
Industries”

9 Appendix

12. Service Network

Country/Region	Corporation Name	Address	Telephone
Australia	Mitsubishi Electric Australia Pty. Ltd.	348 Victoria Road, Rydalmere, N.S.W. 2116, Australia	+61-2-9684-7777
Algeria	Mec Casa	Rue i N 125 Hay-Es-Salem, 02000, W-Chief, Algeria	+213-27798069
Bangladesh	PROGRESSIVE TRADING CORPORATION ELECTROMECH AUTOMATION& ENGINEERING LTD.	HAQUE TOWER,2ND FLOOR,610/11,JUBILEE ROAD, CHITTAGONG, BANGLADESH SHATABDI CENTER, 12TH FLOOR, SUITES: 12-B, 292, INNER CIRCULAR ROAD, FAKIRA POOL, MOTIHEEL, DHAKA-1000, BANGLADESH	+880-31-624307 +88-02-7192826
Belarus	Technikon	Oktjabrskaya 19, Off. 705, BY-220030 Minsk, Belarus	+375 (0)17 / 210 46 26
Belgium	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
Brazil	Mitsubishi Electric do Brasil Comercio e Servicos Ltda.	Avenida Adelino Cardana, 293 – 21º Andar, Bethaville, Barueri, SP, Brasil, CEP 06401-147	+55-11-4689-3000
Cambodia	DHINIMEX CO.,LTD	#245, St. Tep Phan, Phnom Penh, Cambodia	+855-23-997-725
Central America	Automation International LLC	7050 W. Palmetto Park Road Suite #15 PMB #555, Boca Raton, FL 33433	+1-561-237-5228
Chile	Rhona S.A. (Main office)	Vte. Agua Santa 4211 Casilla 30-D (P.O. Box) Vina del Mar, Chile	+56-32-2-320-600
China	Mitsubishi Electric Automation (China) Ltd.	Mitsubishi Electric Automation Building, No.1386 Hongqiao Road, Shanghai, China 200336	+86-21-2322-3030
	Mitsubishi Electric Automation (China) Ltd. Beijing	5/F, ONE INDIGO, 20 Jiuxianqiao Road Chaoyang District, Beijing, China 100016	+86-10-6518-8830
	Mitsubishi Electric Automation (China) Ltd. Shenzhen	Level 8, Galaxy World Tower B, 1 Yabao Road, Longgang District, Shenzhen, China 518129	+86-755-2399-8272
	Mitsubishi Electric Automation (China) Ltd. GuangZhou	Rm.1006, A1 Times E-Park, No.276-282, Hanxi Road East, Zhongcun Street, Panyu District, Guangzhou, China 510030	+86-20-8923-6730
	Mitsubishi Electric Automation (China) Ltd. ChengDu	1501-1503,15F, Guang-hua Centre Building-C, No.98 North Guang Hua 3th Rd Chengdu, China 610000	+86-28-8446-8030
	Mitsubishi Electric Automation (Hong Kong) Ltd.	20/F,1111 King's Road, Taikoo Shing, Hong Kong	+852-2510-0555
Colombia	Proelectrico Representaciones S.A.	Carrera 42 N° 75 – 367 Bodega 109, Itagüí, Medellín, Antioquia, Colombia	+57-4-4441284
Czech Republic	AUTOCONT CONTROL SYSTEMS S.R.O	Technologická 374/6, CZ-708 00 Ostrava - Pustkovec	+420 595 691 150
Denmark	BEIER ELECTRONICS A/S	LYKEGARDSVEJ 17, DK-4000 ROSKILDE, Denmark	+45 (0)46/ 75 76 66
Egypt	Cairo Electrical Group	9, Rostoun St. Garden City P.O. Box 165-11516 Maglis El-Shaab,Cairo - Egypt	+20-2-27961337
France	Mitsubishi Electric Europe B.V. French Branch	FR-92741 Nanterre Cedex	+33 (0)1 55 68 57 01
Germany	Mitsubishi Electric Europe B.V.	Mitsubishi-Electric-Platz 1, 40882 Ratingen, Germany	+49 (0) 2102 4860
Greece	KALAMARAKIS-SAPOUNAS S.A.	IONIAS & NEROMILOU STR., CHAMOMILOS ACHARNES, ATHENS, 13678 Greece	+30-2102 406000
Hungary	Meltrade Ltd.	Fertő utca 14 HU-1107 Budapest, Hungary	+36 (0)1-431-9726
India	Mitsubishi Electric India Private Limited	3rd Floor, Tower A, Global Gateway, MG Road, Gurugram - 122002, Haryana, India	+91(124)673 9300
	Mitsubishi Electric India Private Limited Pune Sales Office	ICC-Devi Gaurav Technology Park, Unit no. 402, Fourth Floor, Survey no. 191-192 (P), Opp. Vallabh Nagar Bus Depot, Pune – 411018, Maharashtra, India	+91-20-68192100
	Mitsubishi Electric India Private Limited FA Center	204-209, 2nd Floor, 31FINE, Corporate Road, Prahladnagar, Ahmedabad 380015,Gujarat, India	+91-79677-77888
Indonesia	PT. Sahabat Indonesia	P.O.Box 5045 Kawasan Industri Pergudangan, Jakarta, Indonesia	+62-(0)21-6610651-9
Ireland	Mitsubishi Electric Europe B.V.	Westgate Business Park, Ballymount, IRL-Dublin 24, Ireland	+353 (0)1-4198800
Israel	Gino Industries Ltd.	26, Ophir Street IL-32235 Haifa, Israel	+972 (0)4-867-0656
Italy	Mitsubishi Electric Europe B.V.	Viale Colleoni 7, I-20041 Agrate Brianza (MI), Italy	+39 039-60531
Kazakhstan	Kazpromavtomatika	Ul. Zhambyla 28, KAZ - 100017 Karaganda	+7-7212-501000
Korea	Mitsubishi Electric Automation Korea Co., Ltd	9F Gangseo Hangang xi-tower A, 401 Yangcheon-ro, Gangseo-gu, Seoul 07528 Korea	+82-2-3660-9573
Laos	AROUNKIT CORPORATION IMPORT- EXPORT SOLE CO.,LTD	SAPHANMO VILLAGE. SAYSETHA DISTRICT, VIENTIANE CAPITAL, LAOS	+856-20-415899
Lebanon	Comptoir d'Electricite Generale-Liban	Cebaco Center - Block A Autostrade Dora, P.O. Box 11-2597 Beirut - Lebanon	+961-1-240445
Lithuania	Rifas UAB	Tinklu 29A, LT-5300 Panevezys, Lithuania	+370 (0)45-582-728
Malaysia	Mittric Sdn Bhd	No. 5 Jalan Pemberita U1/49, Temasya Industrial Park, Glenmarie 40150 Shah Alam, Selangor, Malaysia	+603-5569-3748
Malta	ALFATRADE LTD	99 PAOLA HILL, PAOLA PLA 1702, Malta	+356 (0)21-697-816
Maroco	SCHIELE MAROC	KM 7,2 NOUVELLE ROUTE DE RABAT AIN SEBAA, 20600 Casablanca, Maroco	+212 661 45 15 96
Myanmar	Peace Myanmar Electric Co.,Ltd.	NO137/139 Botahtaung Pagoda Road, Botahtaung Town Ship 11161,Yangon,Myanmar	+95-(0)1-202589
Nepal	Watt&Volt House	KHA 2-65,Volt House Dillibazar Post Box:2108,Kathmandu,Nepal	+977-1-4411330
Netherlands	Mitsubishi Electric Europe B.V. Benelux Branch	Nijverheidsweg 23A, 3641 RP Mijdrecht	+31 (0)297 250 350
North America	Mitsubishi Electric Automation, Inc.	500 Corporate Woods Parkway, Vernon Hills, IL 60061 USA	+847-478-2100
Norway	Scanelec AS	Leirvikasen 43B, NO-5179 Godvik, Norway	+47 (0)55-506000
Mexico	Mitsubishi Electric Automation, Inc. Mexico Branch	Blvd. Miguel de Cervantes Saavedra 301, Torre Norte Piso 5, Col. Ampliación Granada, Miguel Hidalgo, Ciudad de México, CP 11520, México	+52-55-3067-7511
Middle East Arab Countries & Cyprus	Comptoir d'Electricite Generale-International-S.A.L.	Cebaco Center - Block A Autostrade Dora P.O. Box 11-1314 Beirut - Lebanon	+961-1-240430
Pakistan	Prince Electric Co.	2-P GULBERG II, LAHORE, 54600, PAKISTAN	+92-42-575232, 5753373
Peru	Rhona S.A. (Branch office)	Avenida Argentina 2201, Cercado de Lima	+51-1-464-4459
Philippines	Edison Electric Integrated, Inc.	24th Fl. Galleria Corporate Center, Edsa Cr. Ortigas Ave., Quezon City Metro Manila, Philippines	+63-(0)2-634-8691
Poland	Mitsubishi Electric Europe B.V. Polish Branch	Krakowska 48, 32-083 Balice, Poland	+48 12 347 65 00
Republic of Moldova	Intehsis SRL	bld. Traian 23/1, MD-2060 Kishinev, Moldova	+373 (0)22-66-4242
Romania	Sirius Trading & Services SRL	RO-060841 Bucuresti, Sector 6 Aleea Lacul Morii Nr. 3	+40-(0)21-430-40-06
Russia	Mitsubishi Electric (Russia) LLC	2 bld.1, Letnitskaya street, Moscow, 115114, Russia	+7 495 721-2070
Saudi Arabia	Center of Electrical Goods	Al-Shuwayer St. Side way of Salahuddin Al-Ayoubi St. P.O. Box 15955 Riyadh 11454 - Saudi Arabia	+966-1-4770149
Singapore	Mitsubishi Electric Asia Pte. Ltd.	307 Alexandra Road, Mitsubishi Electric Building, Singapore 159943	+65-6473-2308
Slovakia	PROCONT, Presov	Kupelna 1/, SK - 08001 Presov, Slovakia	+421 (0)51 - 7580 611
	SIMAP	Jana Derku 1671, SK - 91101 Trencin, Slovakia	+421 (0)32 743 04 72
Slovenia	Inea RBT d.o.o.	Stegne 11, SI-1000 Ljubljana, Slovenia	+386 (0)1-513-8116
South Africa	CBI-electric: low voltage	Private Bag 2016, ZA-1600 Isando Gauteng, South Africa	+27-(0)11-9282000
Spain	Mitsubishi Electric Europe B.V. Spanish Branch	Carretera de Rubí 76-80, E-08190 Sant Cugat del Vallés (Barcelona), Spain	+34 (0)93-565-3131
Sweden	Mitsubishi Electric Europe B.V. (Scandinavia)	Hedvig Möllers gata 6, 223 55 Lund, Sweden	+46 (0)8-625-10-00
	Euro Energy Components AB	Järnvägsgatan 36, S-434 24 Kungsbacka, Sweden	+46 (0)300-690040
Switzerland	TriElec AG	Muehlentalstrasse 136, CH-8201 Schaffhausen, Switzerland	+41-(0)52-6258425
Taiwan	Setsuya Enterprise Co., Ltd	5th Fl., No.105, Wu Kung 3rd, Wu-Ku Hsiang, Taipei, Taiwan, R.O.C.	+886-(0)2-2298-8889
Thailand	United Trading & Import Co., Ltd.	77/12 Bamrunmuang Road,Klong Mahanak Pomprab Bangkok Thailand	+66-223-4220-3
Tunisia	MOTRA Electric	3, Résidence Imen, Avenue des Martyrs Mourouj III, 2074 - El Mourouj III Ben Arous, Tunisia	+216-71 474 599
Turkey	Mitsubishi Electric Turkey A.Ş.	Serifali Mahallesi Kafe Sokak No: 41, 34775 Ümraniye, Istanbul, Turkey	+90-216-969-2666
United Kingdom	Mitsubishi Electric Europe B.V.	Travellers Lane, UK-Hatfield, Herts, AL10 8XB, United Kingdom	+44 (0)1707-276100
Uruguay	Fierro Vignoli S.A.	Avda. Uruguay 1274 Montevideo Uruguay	+598-2-902-0808
Vietnam	Mitsubishi Electric Vietnam Co.,Ltd. Head Office	11th & 12th Floor, Viettel Tower B, 285 Cach Mang Thang 8 Street, Ward 12, District 10, Ho Chi Minh City, Vietnam	+84-28-3910-5945
	Mitsubishi Electric Vietnam Co.,Ltd. Hanoi Branch	24th Floor, Handico Tower, Pham Hung Road, khu do thi moi Me Tri Ha, Nam Tu Liem District, Hanoi City, Vietnam	+84-24-3937-8075

Creating Solutions Together.



Low-voltage Power Distribution Products



Transformers, Med-voltage Distribution Products



Power Monitoring and Energy Saving Products



Power (UPS) and Environmental Products



Compact and Modular Controllers



Servos, Motors and Inverters



Visualization: HMIs



Edge Computing Products



Numerical Control (NC)



Collaborative and Industrial Robots



Processing machines: EDM, Lasers



SCADA, analytics and simulation software

Mitsubishi Electric's product lineup, from various controllers and drives to energy-saving devices and CFRP laser processing machines, all help you to automate your world. They are underpinned by software, innovative data monitoring, and modelling systems supported by advanced industrial networking and Edgecross IT/OT connectivity. Together with a worldwide partner ecosystem, Mitsubishi Electric factory automation (FA) has everything to make IoT and Digital Manufacturing a reality.

With a complete portfolio and comprehensive capabilities that combine synergies with diverse business units, Mitsubishi Electric provides a one-stop approach to how companies can tackle the shift to clean energy and energy conservation, carbon neutrality and sustainability, which are now a universal requirement of factories, buildings, and social infrastructure.

We at Mitsubishi Electric FA are your solution partners waiting to work with you as you take a step toward the realization of sustainable manufacturing and society through the application of automation.
Let's automate the world together!

Low Voltage Circuit Breakers

For Safety : Please read the instruction manual carefully before using the products in this catalog.
Wiring and connection must be done by the person have a specialized knowledge of electric construction and wiring.



Mitsubishi Electric's e-F@ctory concept utilizes both FA and IT technologies, to reduce the total cost of development, production and maintenance, with the aim of achieving manufacturing that is a "step ahead of the times". It is supported by the e-F@ctory Alliance Partners covering software, devices, and system integration, creating the optimal e-F@ctory architecture to meet the end users needs and investment plans.



MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN