



Valid for converters with Article No. 6SL5310-1B...

Edition

03/2023

OPERATING INSTRUCTIONS

SINAMICS/SIMOTICS

SINAMICS S210 servo drive system

SINAMICS S210 converter from FW V6.1
SIMOTICS S-1FK2 and S-1FT2 servomotors

SIEMENS

SINAMICS/SIMOTICS

SINAMICS S210 servo drive system with SIMOTICS S-1FK2 and S-1FT2

Operating Instructions

Introduction	1
Fundamental safety instructions	2
Overview	3
Configuring	4
Safety Integrated Functions	5
Installing	6
Commissioning (web server)	7
Commissioning (Startdrive)	8
Series commissioning	9
Diagnostics	10
Service and maintenance	11
Technical specifications	12
Dimension drawings	13
Decommissioning and disposal	14
Accessories and spare parts	15
Ordering data	16
Parameters	17
Faults and alarms	18
Appendix	A

Valid for converters with Article No. 6SL5310-1B...

Translation of the original instructions


03/2023, FW V6.1


A5E52380168B AA


Legal information

Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 DANGER
indicates that death or severe personal injury will result if proper precautions are not taken.

 WARNING
indicates that death or severe personal injury may result if proper precautions are not taken.

 CAUTION
indicates that minor personal injury can result if proper precautions are not taken.

NOTICE
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

Proper use of Siemens products

Note the following:

 WARNING
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

Table of contents

1	Introduction	17
1.1	About SINAMICS	17
1.2	About this manual	17
1.2.1	Content	17
1.2.2	Target group	18
1.2.3	Standard scope	18
1.2.4	Websites of third-party companies.....	18
1.3	SINAMICS documentation	19
1.4	Service and Support.....	20
1.4.1	Siemens Industry Online Support on the Web.....	20
1.4.2	Siemens Industry Online Support on the road.....	20
1.4.3	Getting information about the product.....	21
1.4.4	Feedback on the technical documentation	22
1.4.5	mySupport documentation	22
1.4.6	Technical support.....	23
1.4.7	Training	24
1.4.8	Spare parts services	24
1.5	Important product information	24
1.5.1	Proper and intended use	24
1.5.2	Updates and constraints.....	26
1.5.3	Open-source software (OSS)	26
1.5.4	Compliance with the General Data Protection Regulation.....	26
2	Fundamental safety instructions	29
2.1	General safety instructions.....	29
2.2	Equipment damage due to electric fields or electrostatic discharge	36
2.3	Warranty and liability for application examples	36
2.4	Security information	37
2.5	Residual risks of power drive systems	38
3	Overview	41
3.1	System overview.....	41
3.2	Commissioning tools.....	45
3.3	The scope of supply for the system components.....	46
3.4	Motor	47
3.5	Motor-converter combinations for 1FK2	50
3.5.1	Motor-converter combinations for 1 AC 200 ... 240 V.....	50
3.5.2	Motor-converter combinations for 3 AC 200 ... 240 V.....	51
3.5.3	Motor-converter combinations for 3 AC 380 ... 480 V.....	52

3.6	Motor-converter combinations for 1FT2.....	53
3.6.1	Motor-converter combinations for 1 AC 200 ... 240 V.....	53
3.6.2	Motor-converter combinations for 3 AC 200 ... 240 V.....	54
3.6.3	Motor-converter combinations for 3 AC 380 ... 480 V.....	56
3.7	Converter	58
3.8	Connection system	63
4	Configuring	65
4.1	Permissible line supplies and connection options.....	65
4.1.1	Converters with 1 AC line connection	65
4.1.2	Converters with 3 AC line connection	66
4.1.3	Permissible line system configurations for motors.....	66
4.1.4	Minimum cross-section of the protective conductor	67
4.1.5	Connection options for converters with 1 AC line connection.....	68
4.1.6	Connection options for converters with 3 AC line connection.....	72
4.1.7	Line connection via protection and monitoring equipment	76
4.1.7.1	Overcurrent protective devices (mandatory)	76
4.1.7.2	Residual current devices (optional).....	77
4.2	Configuring the motor.....	79
4.2.1	Configuration sequence	79
4.2.2	Clarify the drive type	80
4.2.3	Define the boundary conditions and incorporate them into the automation system.....	81
4.2.4	Define the load case, calculate the maximum load torque and determine the motor	82
4.3	Configuring the braking resistor	86
4.3.1	Calculating the braking energy.....	87
4.3.2	Requirements placed on the external braking resistor	89
4.3.3	Connecting an external braking resistor.....	92
4.4	DC link coupling (for converters with 3 AC line connection)	93
4.5	Vertical axis	94
4.5.1	Setting SS1 in conjunction with vertical axes	94
4.5.2	Setting the electronic counterweight for a vertical axis	96
4.6	Application examples	96
4.7	Establishing communication of the converter with the controller	97
4.8	Functions that require licensing.....	98
4.8.1	Fundamentals.....	98
4.8.2	System responses to under-licensing (ramp-up).....	99
4.8.3	System responses to under-licensing (operation)	100
4.8.4	Creating and downloading the license file	100
4.8.5	Downloading the license file at a later time	101
4.8.6	Transferring the license file to the converter and activating it	102
4.8.7	Restoring licensing after the memory card is removed	103
4.8.8	Loading certificates of license (eCoL) into the file directory of the operating unit.....	103
5	Safety Integrated Functions	105
5.1	Safety Integrated Functions.....	105
5.2	Certification	106

5.3	PFH values	108
5.4	Usage time	108
5.5	Stop functions	109
5.5.1	Safe Torque Off (STO).....	109
5.5.2	Safe Stop 1 (SS1)	111
5.5.2.1	Safe Stop 1 with time control (SS1-t)	112
5.5.2.2	Safe Stop 1 with acceleration monitoring (SS1-a).....	114
5.5.2.3	Safe Stop 1 with braking ramp monitoring (SS1-r)	115
5.6	Safe Brake Management	117
5.6.1	Safe Brake Control (SBC)	117
5.7	Motion monitoring.....	119
5.7.1	Safely-Limited Speed (SLS).....	119
5.7.1.1	SLS with one limit value only.....	120
5.7.1.2	SLS with multiple limit values.....	121
5.7.1.3	SLS with variable speed limit value	123
5.7.1.4	Limitation of the speed setpoint for SLS.....	123
5.7.2	Safe Speed Monitor (SSM).....	124
5.7.3	Safe Direction (SDI).....	126
5.7.3.1	Limitation of the speed setpoint for SDI	128
5.8	Safety Integrated commissioning and configuration.....	128
5.8.1	Selection of the Safety Integrated Functions	129
5.8.2	Safety Integrated parameterization.....	130
5.8.3	Safety Integrated control.....	131
5.8.3.1	PROFIsafe configuration	131
5.8.3.2	Transferring the F-DI status via PROFIsafe	132
5.8.3.3	EMERGENCY STOP via terminals of the failsafe digital input (F-DI)	133
5.8.3.4	F-DI configuration	133
5.8.3.5	Discrepancy time	134
5.8.3.6	Input filter.....	135
5.8.3.7	Self-test of the failsafe digital input (F-DI).....	135
5.8.4	Acceptance - completion of commissioning	137
5.8.4.1	Acceptance test requirements	137
5.8.4.2	Acceptance test for the converter	138
5.8.4.3	Examples of acceptance tests	139
5.8.4.4	Test of brake output.....	141
5.8.4.5	Information about series acceptance	142
5.8.4.6	Information pertaining to component replacements.....	142
5.9	Status and diagnostics of the Safety Integrated Functions	144
5.10	Responses to safety faults and alarms.....	146
5.10.1	Stop responses.....	146
5.10.2	Fail-safe acknowledgment of safety messages	146
5.11	Priority of stop responses and stop functions	147
5.12	Response times.....	148
5.12.1	Monitoring cycle and PROFIsafe cycle	148
5.12.2	Response times when controlling via PROFIsafe.....	149
5.12.3	Response times when controlling via terminals.....	150
5.12.4	Response times - independent of the control type	150

5.13	Functional safety	151
5.14	Machinery Directive	152
6	Installing	153
6.1	EMC-compliant installation of a machine or system	153
6.2	Installing the motor	153
6.2.1	Mounting instructions for the motor	155
6.2.2	Attaching the output elements.....	156
6.3	Installing the converter	157
6.3.1	Installation conditions.....	157
6.3.2	Dimensions and drilling dimensions	160
6.4	Connecting the converter and the motor	161
6.4.1	Cable lengths.....	162
6.4.2	Connecting a MOTION-CONNECT cable at the motor.....	163
6.4.3	Connecting the power cable to the motor.....	165
6.4.4	Connecting the converter.....	168
6.4.5	Converters with 1 AC line connection	172
6.4.5.1	Connecting the MOTION-CONNECT cable to the converter	172
6.4.5.2	Connecting the converter to the line supply.....	174
6.4.5.3	Using several single-phase converters in machines and plants.....	174
6.4.5.4	Connecting a braking resistor	176
6.4.6	Converter with 3 AC line connection.....	177
6.4.6.1	Connecting the MOTION-CONNECT cable to the converter	177
6.4.6.2	Connecting the converter to the line supply.....	179
6.4.6.3	DC link coupling.....	182
6.4.6.4	Establishing the AC coupling and the DC link coupling	183
6.4.6.5	Connecting a braking resistor	185
6.4.7	Additional connections at 1 AC / 3 AC converters	186
6.4.7.1	Connecting digital inputs and the external 24 V supply	186
6.4.7.2	Connecting service interface and PROFINET.....	188
6.4.8	Connection examples.....	189
6.4.9	Connection examples of the fail-safe digital input.....	191
7	Commissioning (web server)	193
7.1	Introduction.....	193
7.2	Requirements for commissioning	193
7.3	Fundamentals.....	194
7.3.1	Supported operating units	194
7.3.2	Supported browsers.....	194
7.3.3	Communication interfaces	195
7.3.4	Making the operating instructions available for the web server information system.....	195
7.3.5	Using the web server information system	197
7.3.6	Reloading pages	201
7.4	Getting Started	201
7.4.1	Calling the web server.....	201
7.4.2	Settings for brand-new converters.....	202
7.4.3	Basic settings	202
7.4.4	Security settings	203

7.5	Functions and menus.....	205
7.5.1	Home page.....	205
7.5.2	Commissioning.....	206
7.5.2.1	Complete commissioning workflow.....	206
7.5.2.2	Quick setup.....	208
7.5.2.3	Testing the converter configuration.....	212
7.5.2.4	Optimization.....	213
7.5.2.5	Safety Integrated commissioning.....	215
7.5.3	Operator control and monitoring.....	218
7.5.3.1	Drive status.....	218
7.5.3.2	Inputs/outputs.....	220
7.5.4	Diagnostics.....	220
7.5.4.1	Messages.....	220
7.5.4.2	Diagnostics buffer.....	222
7.5.4.3	Safety Integrated.....	223
7.5.4.4	Connection overview.....	225
7.5.4.5	Communication.....	226
7.5.4.6	Status word and control word.....	228
7.5.5	Parameters.....	229
7.5.5.1	Parameter list.....	229
7.5.5.2	User-defined parameter list.....	231
7.5.6	Backup and restore.....	232
7.5.6.1	Overview.....	232
7.5.6.2	Save drive data to backup file.....	234
7.5.6.3	Status after backing up.....	234
7.5.6.4	Restore drive data from backup file.....	235
7.5.6.5	Restore factory settings.....	236
7.5.6.6	Restore Safety Integrated to factory settings.....	237
7.5.7	System.....	237
7.5.7.1	Settings.....	237
7.5.7.2	User management.....	239
7.5.7.3	Protection & Security.....	240
7.5.7.4	Licenses.....	242
7.5.7.5	Firmware update.....	243
7.5.7.6	About web server.....	244
7.5.8	Support.....	244
7.5.9	Control panel.....	245
8	Commissioning (Startdrive).....	247
8.1	Introduction.....	247
8.2	Requirements for commissioning.....	247
8.3	Basics.....	248
8.3.1	Communication interfaces.....	248
8.3.2	Loading data from the drive into the project.....	249
8.3.3	Loading project data into the drive.....	249
8.3.4	Saving changes in the project.....	250
8.3.5	Retentively saving changes.....	251
8.3.6	Using parameter lists and user-defined lists.....	252
8.4	Procedures for device configuration and commissioning.....	253
8.4.1	Overview.....	253

8.4.2	Simple basic parameterization (offline)	254
8.4.3	Simple basic parameterization (online)	255
8.4.4	Basic parameterization together with a SIMATIC controller	256
8.5	Combining and configuring devices in the project.....	257
8.5.1	Converter	257
8.5.1.1	Inserting a converter into the project.....	257
8.5.1.2	Optional: Replacing a converter.....	259
8.5.1.3	Making detailed converter settings.....	262
8.5.1.4	Specifying a motor	264
8.5.1.5	Optional: Replacing the motor.....	265
8.5.2	Control and technology object	269
8.5.2.1	Inserting a SIMATIC S7 controller into the project.....	269
8.5.2.2	Networking the SIMATIC S7 controller and converter	271
8.5.2.3	Inserting a technology object into the SIMATIC S7 controller	273
8.5.2.4	Interconnecting the technology object and drive	275
8.6	Carrying out guided quick startup	277
8.6.1	Overview	277
8.6.2	User interface	278
8.6.3	Editing mode (only online).....	280
8.6.4	Connection to PLC.....	282
8.6.5	Limits	283
8.6.6	I/O configuration	284
8.6.7	Telegrams (only offline).....	285
8.6.8	Rotating & optimizing	286
8.6.9	Overview (offline)	288
8.6.10	(Online) overview	289
8.7	Configuring the converter	289
8.7.1	Fundamentals.....	289
8.7.2	Carry out the basic parameterization	290
8.7.3	Configuring digital inputs via technology object.....	291
8.7.3.1	Configuring a measuring probe using the technology object	292
8.7.4	Safety Integrated	294
8.7.4.1	Fundamentals for Safety Integrated commissioning	294
8.7.4.2	Starting/exiting Safety Integrated editing mode	296
8.7.4.3	Permanently saving Safety Integrated parameterization	297
8.7.4.4	Security for Safety Integrated	298
8.7.4.5	Carrying out an acceptance test.	298
8.7.5	Configuring telegrams.....	307
8.7.5.1	Calling the telegram configuration	307
8.7.5.2	Telegram settings.....	308
8.7.5.3	Adding telegrams.....	309
8.8	Optimizing commissioning.....	310
8.8.1	Establishing online connection.....	310
8.8.2	Traversing the drive from the control panel with speed setpoint.....	311
8.8.3	Perform One Button Tuning.....	312
8.8.4	Terminating the online connection.....	314
8.9	Using online diagnostic functions.....	314
8.9.1	Diagnostics icons	314
8.9.2	Display messages	315
8.9.3	Calling Online & Diagnostics	316

8.9.4	Diagnostics	317
8.9.5	Security	318
8.9.6	Communication	319
8.9.6.1	Receive direction.....	319
8.9.6.2	Send direction	320
8.9.7	Functions.....	321
8.9.7.1	Resetting PROFINET interfaces.....	321
8.9.7.2	Setting the time with synchronization (NTP server).....	323
8.9.7.3	Setting the time with synchronization (PLC as NTP server)	323
8.9.7.4	Setting the time without synchronization	324
8.9.8	Backup and restore	325
8.9.8.1	Restart the drive now.....	325
8.9.8.2	Retentively saving the drive data	326
8.9.8.3	Restore factory settings.....	326
8.9.8.4	Restoring the Safety Integrated factory settings	327
8.9.9	Overview of licenses	328
8.9.10	Updating the firmware in the Startdrive project.....	330
8.10	Checking using the trace function	332
8.10.1	Example: Selecting signal bits and setting the trigger event	334
9	Series commissioning	337
9.1	Series commissioning with memory card	338
9.2	Series commissioning using the web server.....	338
10	Diagnostics	341
10.1	Status displays and operating elements on the converter	341
10.1.1	Overview of display and operating elements on the converter	341
10.1.2	Status display via LEDs	342
10.2	Message classes in accordance with PROFIdrive	344
10.3	Alarms.....	348
10.4	Faults	348
11	Service and maintenance	351
11.1	Service and maintenance for the motor.....	351
11.1.1	Replacing the motor bearings.....	353
11.1.2	Replacing the motor.....	354
11.2	Service and maintenance for the converter.....	356
11.2.1	Restoring the converter to factory settings	356
11.2.1.1	Restoring factory settings via a commissioning tool	356
11.2.1.2	Manual reset to factory settings with memory card.....	356
11.2.2	Converter firmware update.....	358
11.2.3	Firmware update via memory card	358
11.2.4	Replacing fans - only for converters with 3 AC line connection	359
11.2.5	Forming the DC link capacitors	361
11.2.6	Replacing the converter in a spare part scenario	365
11.2.6.1	Overview	365
11.2.6.2	Replacing a converter using a memory card with firmware.....	365
11.2.6.3	Replacing a converter using a memory card without firmware.....	366
11.2.6.4	Replacing a converter using a backup file (no memory card)	368

11.2.6.5	Replacing a converter without data backup (no memory card, no backup file)	371
12	Technical specifications	373
12.1	Line connection conditions for the S210 converter system with the motors 1FK2/1FT2	373
12.2	Technical data and properties of the motor	374
12.2.1	Technical features	374
12.2.2	Permissible environmental conditions for the motor	375
12.2.3	Protection against electromagnetic fields (motor)	377
12.2.4	Cooling	377
12.2.5	Derating factors	378
12.2.6	Degree of protection	381
12.2.7	Balancing	383
12.2.8	Vibration response	383
12.2.9	Shaft extension	384
12.2.10	Radial eccentricity, concentricity and axial eccentricity	385
12.2.11	Axial and radial forces	387
12.2.12	Available encoders	392
12.2.13	Holding brake data	394
12.2.14	Options	397
12.2.14.1	Option: Planetary gearbox (Axx, Bxx or Cxx)	397
12.2.14.2	Option: Motors with increased chemical resistance (N16)	400
12.2.14.3	Option: Pressure compensation (Q20)	401
12.2.14.4	Option: Metal rating plate on the motor (Q31)	402
12.2.14.5	Option: Special paint finish (X0x + K23)	403
12.2.14.6	Option: Customer data on the rating plate (Y84)	404
12.2.15	Technical data and characteristics of the 1FK2 connected to 1 AC 230 V, 3 AC 240 V	405
12.2.15.1	1FK2102-0AG connected to 1 AC 230 V / 3 AC 240 V	405
12.2.15.2	1FK2102-1AG connected to 1 AC 230 V / 3 AC 240 V	406
12.2.15.3	1FK2103-2AG connected to 1 AC 230 V / 3 AC 240 V	407
12.2.15.4	1FK2103-4AG connected to 1 AC 230 V / 3 AC 240 V	408
12.2.15.5	1FK2104-4AF connected to 1 AC 230 V / 3 AC 240 V	409
12.2.15.6	1FK2104-4AK connected to 230 V 1 AC / 240 V 3 AC	410
12.2.15.7	1FK2104-5AF connected to 1 AC 230 V / 3 AC 240 V	411
12.2.15.8	1FK2104-5AK connected to 1 AC 230 V / 3 AC 240 V	412
12.2.15.9	1FK2104-6AF connected to 1 AC 230 V / 3 AC 240 V	413
12.2.15.10	1FK2105-4AF connected to 3 AC 240 V	414
12.2.15.11	1FK2105-6AF connected to 3 AC 240 V	415
12.2.15.12	1FK2106-3AF connected to 240 V 3 AC	416
12.2.15.13	1FK2106-4AF connected to 240 V 3 AC	417
12.2.15.14	1FK2106-6AF connected to 240 V 3 AC	418
12.2.15.15	1FK2203-2AG connected to 1 AC 230 V / 3 AC 240 V	419
12.2.15.16	1FK2203-4AG connected to 1 AC 230 V / 3 AC 240 V	420
12.2.15.17	1FK2204-5AF connected to 1 AC 230 V / 3 AC 240 V	421
12.2.15.18	1FK2204-5AK connected to 1 AC 230 V / 3 AC 240 V	422
12.2.15.19	1FK2204-6AF connected to 1 AC 230 V / 3 AC 240 V	423
12.2.15.20	1FK2205-2AF connected to 1 AC 230 V / 3 AC 240 V	424
12.2.15.21	1FK2205-4AF connected to 3 AC 240 V	425
12.2.15.22	1FK2206-2AF connected to 240 V 3 AC	426
12.2.15.23	1FK2206-4AF connected to 240 V 3 AC	427
12.2.15.24	1FK2208-3AC connected to 3 AC 240 V	428
12.2.15.25	1FK2208-4AC connected to 3 AC 240 V	429
12.2.15.26	1FK2208-5AC connected to 3 AC 240 V	430

12.2.15.27	1FK2210-3AB connected to 240 V 3 AC	431
12.2.15.28	1FK2210-3AC connected to 240 V 3 AC	432
12.2.15.29	1FK2210-4AB connected to 240 V 3 AC	433
12.2.15.30	1FK2210-4AC connected to 240 V 3 AC	434
12.2.16	Technical data and characteristics of the 1FK2 connected to 3 AC 400 V, 3 AC 480 V	435
12.2.16.1	1FK2103-2AH connected to 3 AC 400 V / 3 AC 480 V	435
12.2.16.2	1FK2103-4AH connected to 3 AC 400V / 3 AC 480 V	436
12.2.16.3	1FK2104-4AF connected to 3 AC 400 V / 3 AC 480 V	437
12.2.16.4	1FK2104-4AK connected to 3 AC 400 V / 3 AC 480 V	438
12.2.16.5	1FK2104-5AF connected to 3 AC 400 V / 3 AC 480 V	439
12.2.16.6	1FK2104-5AK connected to 3 AC 400 V / 3 AC 480 V	440
12.2.16.7	1FK2104-6AF connected to 3 AC 400 V / 3 AC 480 V	441
12.2.16.8	1FK2105-4AF connected to 3 AC 400 V / 3 AC 480 V	442
12.2.16.9	1FK2105-6AF connected to 3 AC 400 V / 3 AC 480 V	443
12.2.16.10	1FK2106-3AF connected to 400 V 3 AC / 480 V 3 AC	444
12.2.16.11	1FK2106-4AF connected to 400 V 3 AC / 480 V 3 AC	445
12.2.16.12	1FK2106-6AF connected 400 V 3 AC / 480 V 3 AC	446
12.2.16.13	1FK2203-2AK connected to 3 AC 400 V / 3 AC 480 V	447
12.2.16.14	1FK2203-4AK connected to 3 AC 400 V / 3 AC 480 V	448
12.2.16.15	1FK2204-5AF connected to 3 AC 400 V / 3 AC 480 V	449
12.2.16.16	1FK2204-5AK connected to 3 AC 400 V / 3 AC 480 V	450
12.2.16.17	1FK2204-6AF connected to 3 AC 400 V / 3 AC 480 V	451
12.2.16.18	1FK2205-2AF connected to 3 AC 400 V / 3 AC 480 V	452
12.2.16.19	1FK2205-4AF connected to 3 AC 400 V / 3 AC 480 V	453
12.2.16.20	1FK2206-2AF connected to 3 AC 400 V / 3 AC 480 V	454
12.2.16.21	1FK2206-4AF connected to 3 AC 400 V / 3 AC 480 V	455
12.2.16.22	1FK2208-3AC connected to 3 AC 400 V / 3 AC 480 V	456
12.2.16.23	1FK2208-4AC connected to 3 AC 400 V / 3 AC 480 V	457
12.2.16.24	1FK2208-5AC connected to 3 AC 400 V / 3 AC 480 V	458
12.2.16.25	1FK2210-3AB connected to 400 V 3 AC / 480 V 3 AC	459
12.2.16.26	1FK2210-3AC connected to 3 AC 400 V / 3 AC 480 V	460
12.2.16.27	1FK2210-4AB connected to 400 V 3 AC / 480 V 3 AC	461
12.2.16.28	1FK2210-4AC connected to 3 AC 400 V / 3 AC 480 V	462
12.2.17	Technical data and characteristics of the 1FT2 connected to 1 AC 230 V, 3 AC 240 V	463
12.2.17.1	1FT2102-0AG connected to 230 V 1 AC / 240 V 3 AC	463
12.2.17.2	1FT2102-1AG connected to 230 V 1 AC / 240 V 3 AC	464
12.2.17.3	1FT2103-2AG connected to 230 V 1 AC / 240 V 3 AC	465
12.2.17.4	1FT2103-4AG connected to 230 V 1 AC / 240 V 3 AC	466
12.2.17.5	1FT2104-4AF connected to 230 V 1 AC / 240 V 3 AC	467
12.2.17.6	1FT2104-4AK connected to 230 V 1 AC / 240 V 3 AC	468
12.2.17.7	1FT2104-5AF connected to 230 V 1 AC / 240 V 3 AC	469
12.2.17.8	1FT2104-5AK connected to 230 V 1 AC / 240 V 3 AC	470
12.2.17.9	1FT2104-6AF connected to 230 V 1 AC / 240 V 3 AC	471
12.2.17.10	1FT2105-4AF connected to 230 V 1 AC / 240 V 3 AC	472
12.2.17.11	1FT2105-4AH connected to 3 AC 240 V	473
12.2.17.12	1FT2105-6AF connected to 3 AC 240 V	474
12.2.17.13	1FT2106-3AF connected to 3 AC 240 V	475
12.2.17.14	1FT2106-4AF connected to 3 AC 240 V	476
12.2.17.15	1FT2106-6AF connected to 3 AC 240 V	477
12.2.17.16	1FT2203-2AG connected to 230 V 1 AC / 240 V 3 AC	478
12.2.17.17	1FT2203-4AG connected to 230 V 1 AC / 240 V 3 AC	479
12.2.17.18	1FT2204-5AF connected to 230 V 1 AC / 240 V 3 AC	480

12.2.17.19	1FT2204-5AK connected to 230 V 1 AC / 240 V 3 AC.....	481
12.2.17.20	1FT2204-6AF connected to 230 V 1 AC / 240 V 3 AC.....	482
12.2.17.21	1FT2205-2AC connected to 1 AC 230 V / 3 AC 240 V.....	483
12.2.17.22	1FT2205-2AF connected to 230 V 1 AC / 240 V 3 AC.....	484
12.2.17.23	1FT2205-2AH connected to 230 V 1 AC / 240 V 3 AC.....	485
12.2.17.24	1FT2205-4AF connected to 230 V 1 AC / 240 V 3 AC.....	486
12.2.17.25	1FT2206-2AF connected to 230 V 1 AC / 240 V 3 AC.....	487
12.2.17.26	1FT2206-2AH connected to 3 AC 240 V.....	488
12.2.17.27	1FT2206-3AB connected to 1 AC 230 V / 3 AC 240 V.....	489
12.2.17.28	1FT2206-3AF connected to 1 AC 230 V / 3 AC 240 V.....	490
12.2.17.29	1FT2206-4AF connected to 3 AC 240 V.....	491
12.2.17.30	1FT2206-4AH connected to 3 AC 240 V.....	492
12.2.17.31	1FT2208-3AC connected to 3 AC 240 V.....	493
12.2.17.32	1FT2208-3AF connected to 3 AC 240 V.....	494
12.2.17.33	1FT2208-4AC connected to 3 AC 240 V.....	495
12.2.17.34	1FT2208-4AF connected to 3 AC 240 V.....	496
12.2.17.35	1FT2208-5AB connected to 3 AC 240 V.....	497
12.2.17.36	1FT2208-5AC connected to 3 AC 240 V.....	498
12.2.17.37	1FT2210-3AB connected to 3 AC 240 V.....	499
12.2.17.38	1FT2210-3AC connected to 3 AC 240 V.....	500
12.2.17.39	1FT2210-4AB connected to 3 AC 240 V.....	501
12.2.17.40	1FT2210-4AC connected to 3 AC 240 V.....	502
12.2.17.41	1FT2210-5AB connected to 1 AC 230 V / 3 AC 240 V.....	503
12.2.18	Technical data and characteristics of the 1FT2 connected to 3 AC 400 V, 3 AC 480 V.....	504
12.2.18.1	1FT2103-2AH connected to 3 AC 400 V / 3 AC 480 V.....	504
12.2.18.2	1FT2103-4AH connected to 3 AC 400 V / 3 AC 480 V.....	505
12.2.18.3	1FT2104-4AF connected to 400 V 3 AC / 480 V 3 AC.....	506
12.2.18.4	1FT2104-4AK connected to 3 AC 400 V / 3 AC 480 V.....	507
12.2.18.5	1FT2104-5AF connected to 400 V 3 AC / 480 V 3 AC.....	508
12.2.18.6	1FT2104-5AK connected to 3 AC 400 V / 3 AC 480 V.....	509
12.2.18.7	1FT2104-6AF connected to 3 AC 400 V / 3 AC 480 V.....	510
12.2.18.8	1FT2105-4AF connected to 400 V 3 AC / 480 V 3 AC.....	511
12.2.18.9	1FT2105-4AH connected to 400 V 3 AC / 480 V 3 AC.....	512
12.2.18.10	1FT2105-6AF connected to 400 V 3 AC / 480 V 3 AC.....	513
12.2.18.11	1FT2106-3AF connected to 400 V 3 AC / 480 V 3 AC.....	514
12.2.18.12	1FT2106-4AF connected to 400 V 3 AC / 480 V 3 AC.....	515
12.2.18.13	1FT2106-6AF connected to 400 V 3 AC / 480 V 3 AC.....	516
12.2.18.14	1FT2203-2AK connected to 3 AC 400 V / 3 AC 480 V.....	517
12.2.18.15	1FT2203-4AK connected to 3 AC 400 V / 3 AC 480 V.....	518
12.2.18.16	1FT2204-5AF connected to 400 V 3 AC / 480 V 3 AC.....	519
12.2.18.17	1FT2204-5AK connected to 400 V 3 AC / 480 V 3 AC.....	520
12.2.18.18	1FT2204-6AF connected to 400 V 3 AC / 480 V 3 AC.....	521
12.2.18.19	1FT2205-2AC connected to 3 AC 400 V / 3 AC 480 V.....	522
12.2.18.20	1FT2205-2AF connected to 400 V 3 AC / 480 V 3 AC.....	523
12.2.18.21	1FT2205-2AH connected to 400 V 3 AC / 480 V 3 AC.....	524
12.2.18.22	1FT2205-4AF connected to 400 V 3 AC / 480 V 3 AC.....	525
12.2.18.23	1FT2206-2AC connected to 3 AC 400 V / 3 AC 480 V.....	526
12.2.18.24	1FT2206-2AF connected to 400 V 3 AC / 480 V 3 AC.....	527
12.2.18.25	1FT2206-2AH connected to 400 V 3 AC / 480 V 3 AC.....	528
12.2.18.26	1FT2206-3AB connected to 3 AC 400 V / 3 AC 480 V.....	529
12.2.18.27	1FT2206-3AF connected to 1 AC 400 V / 3 AC 480 V.....	530
12.2.18.28	1FT2206-4AC connected to 3 AC 400 V / 3 AC 480 V.....	531

12.2.18.29	1FT2206-4AF connected to 400 V 3 AC / 480 V 3 AC	532
12.2.18.30	1FT2206-4AH connected to 400 V 3 AC / 480 V 3 AC	533
12.2.18.31	1FT2208-3AB connected to 3 AC 400 V / 3 AC 480 V	534
12.2.18.32	1FT2208-3AC connected to 400 V 3 AC / 480 V 3 AC	535
12.2.18.33	1FT2208-3AF connected to 400 V 3 AC / 480 V 3 AC	536
12.2.18.34	1FT2208-4AB connected to 3 AC 400 V / 3 AC 480 V	537
12.2.18.35	1FT2208-4AC connected to 400 V 3 AC / 480 V 3 AC	538
12.2.18.36	1FT2208-4AF connected to 400 V 3 AC / 480 V 3 AC	539
12.2.18.37	1FT2208-5AB connected to 3 AC 400 V / 3 AC 480 V	540
12.2.18.38	1FT2208-5AC connected to 400 V 3 AC / 480 V 3 AC	541
12.2.18.39	1FT2210-3AB connected to 3 AC 400 V / 3 AC 480 V	542
12.2.18.40	1FT2210-3AC connected to 3 AC 400 V / 3 AC 480 V	543
12.2.18.41	1FT2210-4AB connected to 400 V 3 AC / 480 V 3 AC	544
12.2.18.42	1FT2210-4AC connected to 3 AC 400 V / 3 AC 480 V	545
12.2.18.43	1FT2210-5AB connected to 3 AC 400 V / 3 AC 480 V	546
12.3	Technical specifications of the converter	547
12.3.1	Overload capability	547
12.3.2	Electromagnetic compatibility according to IEC 61800-3	550
12.3.3	Protection from electromagnetic fields	551
12.3.4	Permissible environmental conditions for the converter	553
12.3.5	General data	555
12.3.6	Specific data of the converter with 1 AC line connection	558
12.3.7	Specific data of the converter with 3 AC line connection	560
12.4	Technical data and properties of the connection system	562
13	Dimension drawings	565
13.1	Dimension drawings of 1FK2 motors	565
13.1.1	Dimension drawings of 1FK2, frame size 20	565
13.1.2	Dimension drawings of 1FK2, frame size 30	566
13.1.3	Dimension drawings of 1FK2, frame size 40	567
13.1.4	Dimension drawings of 1FK2, frame size 48	568
13.1.5	Dimension drawings of 1FK2, frame size 52	569
13.1.6	Dimension drawings 1FK2, frame size 63	570
13.1.7	Dimension drawings of 1FK2, frame size 80	571
13.1.8	Dimension drawings of 1FK2, frame size 100	572
13.2	Dimension drawings of 1FT2 motors	573
13.2.1	Dimension drawings of 1FT2, frame size 20	573
13.2.2	Dimension drawings of 1FT2, frame size 30	574
13.2.3	Dimension drawings of 1FT2, frame size 40	575
13.2.4	Dimension drawings of 1FT2, frame size 48	576
13.2.5	Dimension drawings of 1FT2, frame size 52	577
13.2.6	Dimension drawings 1FT2, frame size 63	578
13.2.7	Dimension drawings of 1FT2, frame size 80	579
13.2.8	Dimension drawings of 1FT2, frame size 100	580
13.3	Dimension drawings, converter	581
13.3.1	FSA with 1 AC line connection	581
13.3.2	FSB with 1 AC line connection	582
13.3.3	FSC with 1 AC line connection	583
13.3.4	FSA with 3 AC line connection	584
13.3.5	FSB with 3 AC line connection	585

13.3.6	FSC with 3 AC line connection	586
14	Decommissioning and disposal	587
14.1	Device disposal	587
15	Accessories and spare parts.....	589
15.1	Accessories	589
15.1.1	Memory cards.....	589
15.1.2	SINAMICS Smart Adapter.....	590
15.1.2.1	SINAMICS Smart Adapter.....	590
15.1.2.2	SINAMICS Smart Adapter ordering data	590
15.1.3	Connectors and cables for the AC coupling and DC link coupling	591
15.1.4	PROFINET patch cable	592
15.1.5	External line filters	592
15.1.5.1	Safety instructions	593
15.1.5.2	Interfaces	595
15.1.5.3	Dimension drawings	597
15.1.5.4	Mounting	600
15.1.5.5	Technical data.....	603
15.1.6	External braking resistors for 1/3 AC 200 ... 240 V.....	604
15.1.7	Cabinet bushing via mounting flange	606
15.1.8	Degree of protection kit IP65 for the motor.....	607
15.1.9	Extensions for connecting cables between the motor and the converter.....	607
15.2	Spare parts	610
15.2.1	Connector set for converters with 1 AC line connection - 6SL3260-2DB00-0AA0	610
15.2.2	Connector set for converters with 3 AC line connection - 6SL3260-2DB10-0AA0	614
16	Ordering data	619
16.1	Ordering data of the motor	619
16.2	Ordering data of the converter	621
16.2.1	Order data for converters with 1 AC line connection	621
16.2.2	Order data for converters with 3 AC line connection	622
16.3	Ordering data of the connection system	622
16.3.1	Order data for OCC MOTION-CONNECT cables	622
16.3.2	Determining the article number of a prefabricated OCC MOTION-CONNECT cable	624
17	Parameters.....	627
17.1	Explanation of the list of parameters	627
17.2	List of parameters	632
18	Faults and alarms.....	747
18.1	Overview of faults and alarms	747
18.1.1	Display of faults/alarms (messages)	747
18.1.2	Differences between faults and alarms	747
18.1.3	Explanation of the list of faults and alarms	748
18.2	List of faults and alarms	755
A	Appendix.....	869
A.1	Communication telegrams	869
A.1.1	Standard telegrams	869

A.1.1.1	Telegram 3	869
A.1.1.2	Telegram 5	869
A.1.1.3	Telegram 102	870
A.1.1.4	Telegram 105	871
A.1.2	Supplementary telegrams	871
A.1.2.1	Telegram 700	871
A.1.2.2	Telegram 750	872
A.1.3	PROFIsafe telegrams	872
A.1.3.1	Telegram 30	872
A.1.3.2	Telegram 901	873
A.1.4	Control words, status words and message word.....	873
A.1.4.1	Control word 1 and status word 1.....	873
A.1.4.2	Control word 2 and status word 2.....	877
A.1.4.3	Encoder-1 control word and encoder-1 status word	878
A.1.4.4	Safety control word 1 and safety status word 1	879
A.1.4.5	Safety control word 2 and safety status word 2.....	880
A.1.4.6	Safety status word 1B	883
A.1.4.7	Message word	883
A.2	Directives and standards	884
A.2.1	Directives, standards and certificates for the converter.....	884
A.2.2	Directives, standards and certificates for the motor	885
A.3	UL Markings.....	889
A.4	EMERGENCY OFF and EMERGENCY STOP	890
A.5	List of abbreviations.....	892

Introduction

1.1 About SINAMICS

Description

With the SINAMICS converter series you can solve drive tasks in the low, medium and DC voltage range. All Siemens drive components, such as converters, motors, and controls, are matched to each other and can be integrated into your existing automation systems.

You can find more information via the SINAMICS YouTube playlist (<https://www.youtube.com/playlist?list=PLw7lLwXw4H53rtHeTeifKtVMr2aXTYt0X>).

1.2 About this manual

1.2.1 Content

Description

These operating instructions provide a summary of all of the information required to safely and reliably operate the converter-motor combination.

The operating instructions enable the target groups being addressed to mount, install, connect, and commission the converter and motor safely and in the correct manner.

To illustrate possible application areas for our products, typical use cases are listed in this product documentation and in the online help. These are purely exemplary and do not constitute a statement on the suitability of the respective product for applications in specific individual cases. Unless explicitly contractually agreed, Siemens assumes no liability for such suitability. Suitability for a particular application in specific individual cases must be assessed by the user, taking into account all technical, legal, and other requirements on a case-by-case basis. Always observe the descriptions of the technical properties and the relevant constraints of the respective product contained in the product documentation.

1.2.2 Target group

Description

These operating instructions are intended for persons who perform different tasks in the drive environment, e.g. for:

- Planning engineers
- Project engineers
- Machine manufacturers
- Commissioning engineers
- Electricians
- Installation personnel
- Service technician
- Warehouse personnel

1.2.3 Standard scope

Description

This documentation describes the functionality of the standard scope. This scope may differ from the scope of the functionality of the system that is actually supplied. Please refer to the ordering documentation only for the functionality of the supplied drive system.

Further functions may be executable in the system, which are not explained in this documentation. However, there is no entitlement to these functions in the case of a new delivery or service.

This documentation does not contain all detailed information on all types of the product. Furthermore, this documentation cannot take into consideration every conceivable type of installation, operation and service/maintenance.

The machine manufacturer must document any additions or modifications they make to the product themselves.

1.2.4 Websites of third-party companies

Description

This document may contain hyperlinks to third-party websites. Siemens is not responsible for and shall not be liable for these websites and their content. Siemens has no control over the information which appears on these websites and is not responsible for the content and information provided there. The user bears the risk for their use.

1.3 SINAMICS documentation

Description

Comprehensive documentation on the SINAMICS converter series can be found at Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/ps/13205/man>).



Figure 1-1 The SINAMICS converter family

You have the option of either displaying the documents or downloading them in the PDF and multimedia format.

The converter documentation essentially comprises the following manuals:

Table 1-1 SINAMICS documentation

Information	Documentation class	Content
Basic information	Operating instructions	Comprehensive collection of all information necessary for the safe operation of products, plant units, and complete plants (IEC/IEEE 82079-1)
	Product Information	Information that only becomes known shortly before or even after start of delivery and is therefore not included in the associated user documentation
General information	Industrial Security Configuration Manual	Information on the security functions and safe converter operation

1.4 Service and Support

1.4.1 Siemens Industry Online Support on the Web

Description

The following is available via Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/>), among others:

- Product support
- Global forum for information and best practice sharing between users and specialists
- Local contact persons via the contact person database (→ Contact)
- Information about field services, repairs, spare parts, and much more (→ Services)
- Search for product info
- Important topics at a glance
- FAQs (frequently asked questions)
- Application examples
- Manuals
- Downloads
- Compatibility tool
- Newsletters with information about your products
- Catalogs/brochures

1.4.2 Siemens Industry Online Support on the road

Description



Figure 1-2 "Siemens Industry Online Support" app



The "Industry Online Support" app supports you in the following areas, for example:

- Resolving problems when executing a project
- Troubleshooting when faults develop
- Expanding a system or planning a new system

Furthermore, you have access to the Technical Forum and other articles that our experts have drawn up:

- FAQs
- Application examples
- Manuals
- Certificates
- Product announcements and much more

There is a data matrix code or QR code on the nameplate of your product. Scan the code using the "Industry Online Support" app (<https://support.industry.siemens.com/cs/ww/en/sc/2067>) to obtain technical information about the device.

The app is available for Apple iOS and Android.

1.4.3 Getting information about the product

Overview

You can use the ID link to get information about your product.

The ID link is a globally unique identifier according to IEC 61406-1.

Requirement

There is a QR code on the product and on the product packaging.



Figure 1-3 QR code with ID link included

You can recognize the ID link by the frame with a black frame corner at the bottom right.

Procedure

Scan the QR code using either a standard code scanner or the "Industry Online Support" app.

When using a standard code scanner, you open the scanned ID link in an Internet browser that is provided on your device.

Result

You can use the ID link to get product data, manuals, declarations of conformity, certificates and other information about your product.

1.4.4 Feedback on the technical documentation

Description

We welcome your questions, suggestions, and corrections for this technical documentation. Please use the "Provide feedback" link at the end of the entries in Siemens Industry Online Support.

Requests and feedback

What do you want to do?

- You have a technical question / problem: Ask the Technical Support
> [Create support request](#)
- You want to discuss in our forum and exchange experiences with other users
> [Go to the Forum](#)
- You want to create CAx data for one or more products
> [Go to the CAx download manager](#)
- You would like to send us feedback on this Entry
> [Provide feedback](#)

Note: The feedback always relates to the current entry / product. Your message will be forwarded to our technical editors working in the Online Support. In a few days, you will receive a response if your feedback requires one. If we have no further questions, you will not

Figure 1-4 Requests and feedback

1.4.5 mySupport documentation

Description

With the "mySupport documentation" web-based system, you can compile your own individual documentation based on Siemens content and adapt this for your own machine documentation.

To start the application, click the "My Documentation" tile on the mySupport homepage (<https://support.industry.siemens.com/cs/ww/en/my>):

mySupport Links and Tools

Figure 1-5 mySupport

The configured manual can be exported in the PDF or XML format.

Siemens content that supports the mySupport documentation can be identified by the "Configure" link.

1.4.6 Technical support

Description

Your routes to technical support (<https://support.industry.siemens.com/cs/ww/en/sc/4868>):

- Support Request (<https://www.siemens.com/SupportRequest>)
- Contact person database (https://www.automation.siemens.com/aspa_app)
- "Industry Online Support" mobile app

The Support Request is the most important input channel for questions relating to products from Siemens Industry. This will assign your request a unique ticket number for tracking purposes. The Support Request offers you:

- Direct access to technical experts
- Recommended solutions for various questions (e.g. FAQs)
- Status tracking of your requests

Technical support also assists you in some cases via remote support (<https://support.industry.siemens.com/cs/ww/en/view/106665159>) to resolve your requests. A Support representative will assist you in diagnosing or resolving the problem through screen transfer.

More information on the Support service packages is available on the Internet via the following address (<https://support.industry.siemens.com/cs/ww/en/sc/4869>).

1.4.7 Training

Description

SITRAIN – Digital Industry Academy offers a comprehensive range of training courses on Siemens industrial products – directly from the manufacturer, for all industries and use cases, for all knowledge levels from beginner to expert.

More information can be found on the Internet via the following address (<https://www.siemens.com/sitrain>).

1.4.8 Spare parts services

Description

By using the online spare parts service "Spares on Web", you ensure the smooth operation of your product. The spare parts service is aimed at the following:


- Improved spare parts inventories by balancing stock and spare parts on call
- Minimized downtimes during a plant standstill
- Reduced costs


More information can be found on the Internet via the following address (<https://www.sow.siemens.com/>).

1.5 Important product information

1.5.1 Proper and intended use

Requirement

 WARNING
Death or serious injury if not used as intended
Not using as intended can result in hazardous states.
<ul style="list-style-type: none">• Carefully observe the description of proper and intended use

 WARNING
Incorrect use of the motor
Incorrect use of the motor may cause death, serious injury (crushing) and/or property damage.
<ul style="list-style-type: none">• Carefully observe the description of proper and intended use• Do not use the motors in hazardous areas (where there is a risk of explosion), if the motors have not been expressly released and authorized for these types of applications. Carefully observe any special supplementary notes that may be attached.• Make sure that the conditions at the location of use comply with all the rating plate data.• Make sure that the conditions at the location of use comply with the conditions specified in this documentation. When necessary, take into account deviations regarding approvals or country-specific regulations.

Note

It cannot be guaranteed that EMC emission limits are complied with if the products are connected to an isolated line supply grounded through a high ohmic connection or a line supply with grounded line conductor.

- Draw-up an EMC plan to comply with the EMC requirements of the intended application.

Description

The products described in this document, together with software, accessories and options, form an electric drive to supply low-voltage, three-phase motors.

The products are professional devices for stationary indoor use in industrial, light-industrial and commercial applications and are intended for supply from a non-public (industrial) low-voltage network. The products are not intended for use in residential areas and are not intended for supply from a public low-voltage network.

The products must be correctly transported and stored and must be installed, commissioned and maintained by professionals who have adequate knowledge to implement the safety, security and EMC measures in accordance with the specifications described in this manual and recognized state-of-the-art engineering practice.

You may only use the products when the following requirements are complied with:

- All regulations and directives that are applicable at the place of final use, especially with regard to electrical safety, functional safety and electromagnetic compatibility (EMC).
- All instructions, notes, technical specifications, safety information and security information contained in this document and other supporting documentation.

The products are part of a machine or system. They must guarantee the safety of persons and material assets as well as electromagnetic compatibility by applying suitable measures when designing the system.

Perform a risk assessment of the complete application including third-party products and implement adequate safety and security measures before using the product.

Products without protective enclosure (IP00 or IP20) are intended for installation in control panels or control cabinets that provide the required level of protection.

1.5 Important product information

Any other use that is not expressly permitted can result in malfunctions and unpredictable hazards.

The motor is only approved for converter operation.

1.5.2 Updates and constraints

Description

Updates and constraints for the converters with the current firmware are available in SIOS:

Updates and constraints for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109812303>)

1.5.3 Open-source software (OSS)

Description

The license conditions and copyright information of the open-source software components used by the device are saved on the device itself. You can download license and copyright information onto your PC via the support page of the integrated web server.

1.5.4 Compliance with the General Data Protection Regulation

Description

Siemens complies with the principles of the **General Data Protection Regulation (EU)**, in particular the principle of data minimization (privacy by design). For this SINAMICS product, this means:

- **User management and access control (UMAC)**

The product processes or stores the following personal data:

- Login data for user management and access control:
User name, group, password, role, rights.

The data for user management and access control are stored in the converter and optionally on a memory card.

- **Support data (optional)**

For optimal support in service cases, the end user or machine manufacturer (OEM) can optionally store contact data (header, email address, telephone number, homepage) in the converter.

If these data are created, the author must give thought to data protection consent for these optional data. Siemens takes no responsibility for these data.

These support contact data can be read and are freely accessible in, for example, the user interface as well as in the diagnostics report. These data are not encrypted.

These data are used for user management and access control (UMAC) and for the support function. The storage of these data is appropriate and limited to what is necessary, as it is essential to identify the authorized operators and service contact.

The personal data are also available as part of the backup system to ensure fast recovery of use cases.

The above-mentioned personal data cannot be stored anonymously or pseudonymized, as they serve the purpose of identifying the operating personnel. The anonymization or pseudonymization, e.g. of the login data, must be performed using suitable login names and contact data by the plant/machine operator.

Our product does not provide any functions for automatically deleting personal data. Individual UMAC data can be deleted manually by authorized personnel as soon as this is deemed recommended/required.

Fundamental safety instructions

2.1 General safety instructions



WARNING

Electric shock and danger to life due to other energy sources

Touching live components can result in death or severe injury.

- Only work on electrical devices when you are qualified for this job.
- Always observe the country-specific safety rules.

Generally, the following steps apply when establishing safety:

1. Prepare for disconnection. Notify all those who will be affected by the procedure.
2. Isolate the drive system from the power supply and take measures to prevent it being switched back on again.
3. Wait until the discharge time specified on the warning labels has elapsed.
4. Check that there is no voltage between any of the power connections, and between any of the power connections and the protective conductor connection.
5. Check whether the existing auxiliary supply circuits are de-energized.
6. Ensure that the motors cannot move.
7. Identify all other dangerous energy sources, e.g. compressed air, hydraulic systems, or water. Switch the energy sources to a safe state.
8. Check that the correct drive system is completely locked.

After you have completed the work, restore the operational readiness in the inverse sequence.



WARNING

Risk of electric shock and fire from supply networks with an excessively high impedance

Excessively low short-circuit currents can lead to the protective devices not tripping or tripping too late, and thus causing electric shock or a fire.

- In the case of a conductor-conductor or conductor-ground short-circuit, ensure that the short-circuit current at the point where the converter is connected to the line supply at least meets the minimum requirements for the response of the protective device used.
- You must use an additional residual-current device (RCD) if a conductor-ground short circuit does not reach the short-circuit current required for the protective device to respond. The required short-circuit current can be too low, especially for TT supply systems.



⚠ WARNING

Risk of electric shock and fire from supply networks with an excessively low impedance

Excessively high short-circuit currents can lead to the protective devices not being able to interrupt these short-circuit currents and being destroyed, and thus causing electric shock or a fire.

- Ensure that the prospective short-circuit current at the line terminal of the converter does not exceed the breaking capacity (SCCR or I_{cc}) of the protective device used.



⚠ WARNING

Electric shock if there is no ground connection

For missing or incorrectly implemented protective conductor connection for devices with protection class I, high voltages can be present at open, exposed parts, which when touched, can result in death or severe injury.

- Ground the device in compliance with the applicable regulations.



⚠ WARNING

Electric shock due to connection to an unsuitable power supply

When equipment is connected to an unsuitable power supply, exposed components may carry a hazardous voltage. Contact with hazardous voltage can result in severe injury or death.

- Only use power supplies that provide SELV (Safety Extra Low Voltage) or PELV- (Protective Extra Low Voltage) output voltages for all connections and terminals of the electronics modules.



⚠ WARNING

Electric shock due to damaged motors or devices

Improper handling of motors or devices can damage them.

Hazardous voltages can be present at the enclosure or at exposed components on damaged motors or devices.

- Ensure compliance with the limit values specified in the technical data during transport, storage and operation.
- Do not use any damaged motors or devices.



⚠ WARNING

Electric shock due to unconnected cable shields

Hazardous touch voltages can occur through capacitive cross-coupling due to unconnected cable shields.

- As a minimum, connect cable shields and the cores of cables that are not used at one end at the grounded housing potential.



⚠ WARNING

Arcing when a plug connection is opened during operation

Opening a plug connection when a system is operation can result in arcing that may cause serious injury or death.

- Only open plug connections when the equipment is in a voltage-free state, unless it has been explicitly stated that they can be opened in operation.



⚠ WARNING

Electric shock due to residual charges in power components

Because of the capacitors, a hazardous voltage is present for up to 5 minutes after the power supply has been switched off. Contact with live parts can result in death or serious injury.

- Wait for 5 minutes before you check that the unit really is in a no-voltage condition and start work.

NOTICE

Damage to equipment due to unsuitable tightening tools.

Unsuitable tightening tools or fastening methods can damage the screws of the equipment.

- Only use screw inserts that exactly match the screw head.
- Tighten the screws with the torque specified in the technical documentation.
- Use a torque wrench or a mechanical precision nut runner with a dynamic torque sensor and speed limitation system.
- Adjust the tools used regularly.

⚠ WARNING

Electromagnetic interference due to inadequate shield support

A lack of adequate shield support for the power cables can cause malfunctions and impermissibly high levels of interference.

- Use the shield connection plates supplied or recommended.
- Use the shield connection clips recommended.

 **WARNING**

Spread of fire from built-in devices

Built-in devices can cause a fire and a pressure wave in the event of a fault. Fire and smoke can escape from the control cabinet and cause serious personal injury and property damage.

- Install built-in appliances in a robust metal control cabinet that is suitable for protecting people from fire and smoke.
- Only operate built-in devices with the control cabinet doors closed.
- Ensure that smoke can only escape via controlled and monitored paths.

 **WARNING**

Active implant malfunctions due to electromagnetic fields

Converters generate electromagnetic fields (EMF) in operation. Electromagnetic fields may interfere with active implants, e.g. pacemakers. People with active implants in the immediate vicinity of an converter are at risk.

- As the operator of an EMF-emitting installation, assess the individual risks of persons with active implants.
- Observe the data on EMF emission provided in the product documentation.



 **WARNING**

Active implant malfunctions due to permanent-magnet fields

Even when switched off, electric motors with permanent magnets represent a potential risk for persons with heart pacemakers or implants if they are close to converters/motors.

- If you have a heart pacemaker or implant, maintain the minimum distance specified in the Chapter "Technical data".
- When transporting or storing permanent-magnet motors always use the original packing materials with the warning labels attached.
- Clearly mark the storage locations with the appropriate warning labels.
- IATA regulations must be observed when transported by air.

 **CAUTION****Symptomatic respiratory and skin reaction to chemicals**

A newly purchased product might contain traces of substances that are identified as sensitizers.

Sensitizers are substances which can cause sensitization in the lungs and skin after exposure to them.

Once sensitized, individuals can have severe reactions to further exposure, even in small amounts. In the most extreme cases, individuals might develop asthma or dermatitis respectively.

- If the product has a strong smell, keep it in a well-ventilated area for 14 days.

 **WARNING****Unexpected machine movement caused by radio devices or mobile phones**

Using radio devices, cellphones, or mobile WLAN devices in the immediate vicinity of the components can result in equipment malfunction. Malfunctions may impair the functional safety of machines and can therefore put people in danger or lead to property damage.

- Therefore, if you move closer than 20 cm to the components, be sure to switch off radio devices, cellphones or WLAN devices.
- Use the "SIEMENS Industry Online Support app" only on equipment that has already been switched off.

NOTICE**Damage to motor insulation due to excessive voltages**

When operated on systems with grounded line conductors or in the event of a ground fault in the IT system, the motor insulation can be damaged by the higher voltage against ground. If you use motors that have insulation that is not designed for operation with grounded line conductors, you must perform the following measures:

- IT system: Use a ground fault monitor and eliminate the fault as quickly as possible.
- TN or TT systems with grounded line conductor: Use an isolating transformer on the line side.

 **WARNING****Fire due to inadequate ventilation clearances**

Inadequate ventilation clearances can cause overheating of components with subsequent fire and smoke. This can cause severe injury or even death. This can also result in increased downtime and reduced service lives for devices/systems.

- Ensure compliance with the specified minimum clearance as ventilation clearance for the respective component.

NOTICE

Overheating due to inadmissible mounting position

The device may overheat and therefore be damaged if mounted in an inadmissible position.

- Only operate the device in admissible mounting positions.



WARNING

Unrecognized dangers due to missing or illegible warning labels

Dangers might not be recognized if warning labels are missing or illegible. Unrecognized dangers may cause accidents resulting in serious injury or death.

- Check that the warning labels are complete based on the documentation.
- Attach any missing warning labels to the components, where necessary in the national language.
- Replace illegible warning labels.

NOTICE

Device damage caused by incorrect voltage/insulation tests

Incorrect voltage/insulation tests can damage the device.

- Before carrying out a voltage/insulation check of the system/machine, disconnect the devices as all converters and motors have been subject to a high voltage test by the manufacturer, and therefore it is not necessary to perform an additional test within the system/machine.



WARNING

Unexpected movement of machines caused by inactive safety functions

Inactive or non-adapted safety functions can trigger unexpected machine movements that may result in serious injury or death.

- Observe the information in the appropriate product documentation before commissioning.
- Carry out a safety inspection for functions relevant to safety on the entire system, including all safety-related components.
- Ensure that the safety functions used in your drives and automation tasks are adjusted and activated through appropriate parameterizing.
- Perform a function test.
- Only put your plant into live operation once you have guaranteed that the functions relevant to safety are running correctly.

Note**Important Safety instructions for Safety Integrated**

If you want to use Safety Integrated functions, you must observe the Safety instructions in the Safety Integrated documentation.

 **WARNING****Malfunctions of the machine as a result of incorrect or changed parameter settings**

As a result of incorrect or changed parameterization, machines can malfunction, which in turn can lead to injuries or death.

- Protect the parameterization against unauthorized access.
- Handle possible malfunctions by taking suitable measures, e.g. emergency stop or emergency off.

 **WARNING****Injury caused by moving or ejected parts**

Contact with moving motor parts or drive output elements and the ejection of loose motor parts (e.g. feather keys) out of the motor enclosure can result in severe injury or death.

- Remove any loose parts or secure them so that they cannot be flung out.
- Do not touch any moving parts.
- Safeguard all moving parts using the appropriate safety guards.

 **WARNING****Fire due to incorrect operation of the motor**

When incorrectly operated and in the case of a fault, the motor can overheat resulting in fire and smoke. This can result in severe injury or death. Further, excessively high temperatures destroy motor components and result in increased failures as well as shorter service lives of motors.

- Operate the motor according to the relevant specifications.
- Only operate the motors in conjunction with effective temperature monitoring.
- Immediately switch off the motor if excessively high temperatures occur.



CAUTION

Burns and thermal damage caused by hot surfaces

Temperatures above 100 °C may occur on the surfaces of motors, converters, and other drive components.

Touching hot surfaces may result in burns. Hot surfaces may damage or destroy temperature sensitive parts.

- Ensure that temperature-sensitive parts do not come into contact with hot surfaces.
- Mount drive components so that they are not accessible during operation.

Measures when maintenance is required:

- Allow drive components to cool off before starting any work.
- Use appropriate personnel protection equipment, e.g. gloves.

2.2

Equipment damage due to electric fields or electrostatic discharge

Electrostatic sensitive devices (ESD) are individual components, integrated circuits, modules or devices that may be damaged by either electric fields or electrostatic discharge.



NOTICE

Equipment damage due to electric fields or electrostatic discharge

Electric fields or electrostatic discharge can cause malfunctions through damaged individual components, integrated circuits, modules or devices.

- Only pack, store, transport and send electronic components, modules or devices in their original packaging or in other suitable materials, e.g. conductive foam rubber or aluminum foil.
- Only touch components, modules and devices when you are grounded by one of the following methods:
 - Wearing an ESD wrist strap
 - Wearing ESD shoes or ESD grounding straps in ESD areas with conductive flooring
- Only place electronic components, modules or devices on conductive surfaces (table with ESD surface, conductive ESD foam, ESD packaging, ESD transport container).

2.3

Warranty and liability for application examples

Application examples are not binding and do not claim to be complete regarding configuration, equipment or any eventuality which may arise. Application examples do not represent specific customer solutions, but are only intended to provide support for typical tasks.

As the user you yourself are responsible for ensuring that the products described are operated correctly. Application examples do not relieve you of your responsibility for safe handling when using, installing, operating and maintaining the equipment.

2.4 Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit

<https://www.siemens.com/industrialsecurity>.

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customer's exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed under

<https://www.siemens.com/cert>.

Further information is provided on the Internet:

Industrial Security Configuration Manual (<https://support.industry.siemens.com/cs/ww/en/view/109810578>)

WARNING

Unsafe operating states resulting from software manipulation

Software manipulations, e.g. viruses, Trojans, or worms, can cause unsafe operating states in your system that may lead to death, serious injury, and property damage.

- Keep the software up to date.
- Incorporate the automation and drive components into a holistic, state-of-the-art industrial security concept for the installation or machine.
- Make sure that you include all installed products into the holistic industrial security concept.
- Protect files stored on exchangeable storage media from malicious software by with suitable protection measures, e.g. virus scanners.
- On completion of commissioning, check all security-related settings.

2.5 Residual risks of power drive systems

When assessing the machine or system-related risk in accordance with the respective local regulations (e.g. EC Machinery Directive), the machine manufacturer or system integrator must take into account the following residual risks emanating from the control and drive components of a drive system:

1. Unintentional movements of driven machine or system components during commissioning, operation, maintenance, and repairs caused by, for example,
 - Hardware faults and/or software errors in the sensors, control system, actuators, and connections
 - Response times of the control system and of the drive
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - Parameterization, programming, cabling, and installation errors
 - Use of wireless devices/mobile phones in the immediate vicinity of electronic components
 - External influences/damage
 - X-ray, ionizing radiation and cosmic radiation
2. Unusually high temperatures, including open flames, as well as emissions of light, noise, particles, gases, etc., can occur inside and outside the components under fault conditions caused by, for example:
 - Component failure
 - Software errors
 - Operation and/or environmental conditions outside the specification
 - External influences/damage
3. Hazardous shock voltages caused by, for example:
 - Component failure
 - Influence during electrostatic charging
 - Induction of voltages in moving motors
 - Operation and/or environmental conditions outside the specification
 - Condensation/conductive contamination
 - External influences/damage
4. Electrical, magnetic and electromagnetic fields generated in operation that can pose a risk to people with a pacemaker, implants or metal replacement joints, etc., if they are too close
5. Release of environmental pollutants or emissions as a result of improper operation of the system and/or failure to dispose of components safely and correctly

6. Influence of network-connected communication systems, e.g. ripple-control transmitters or data communication via the network
7. Motors for use in potentially explosive areas:
When moving components such as bearings become worn, this can cause enclosure components to exhibit unexpectedly high temperatures during operation, creating a hazard in areas with a potentially explosive atmosphere.

For more information about the residual risks of the drive system components, see the relevant sections in the technical user documentation.

Overview

3.1 System overview

The drive system comprises the following system components tailored to one another:


- SINAMICS S210 converter with firmware V6.1 or higher
- SIMOTICS S-1FK2 or S-1FT2 motor
- OCC MOTION-CONNECT cable (OCC = "One Cable Connection")

SIMOTICS S-1FK2 and SIMOTICS S-1FT2 servomotors with mounted planetary gearbox are optionally available. More information is provided in the relevant Configuration Manual.

The converter and the motor are intended for use with a higher-level controller (PLC). Connection to the controller is via PROFINET.


Prefabricated MOTION-CONNECT cables in various lengths are available to simply connect the motor to the converter and to ensure safe and reliable operation.

3.1 System overview

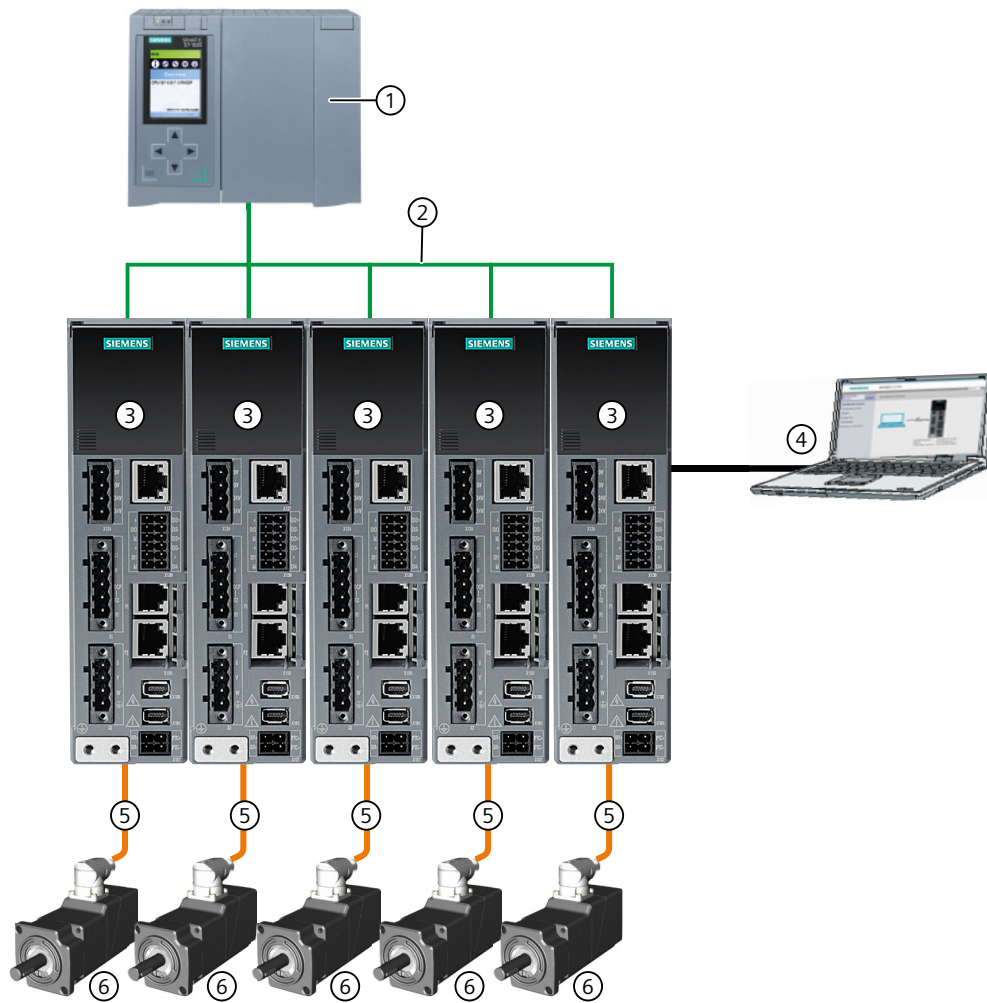

- ① Controller (PLC), e.g. SIMATIC S7-1500
- ② Communication between the converter and the controller via PROFINET
- ③ SINAMICS S210 converter
- ④ Operating unit, e.g. a PC with a LAN connection to the web server in the converter
- ⑤ OCC MOTION-CONNECT cable for the power connection, the motor holding brake, and the encoder
- ⑥ SIMOTICS S-1FK2 or S-1FT2 motor


Figure 3-1 System

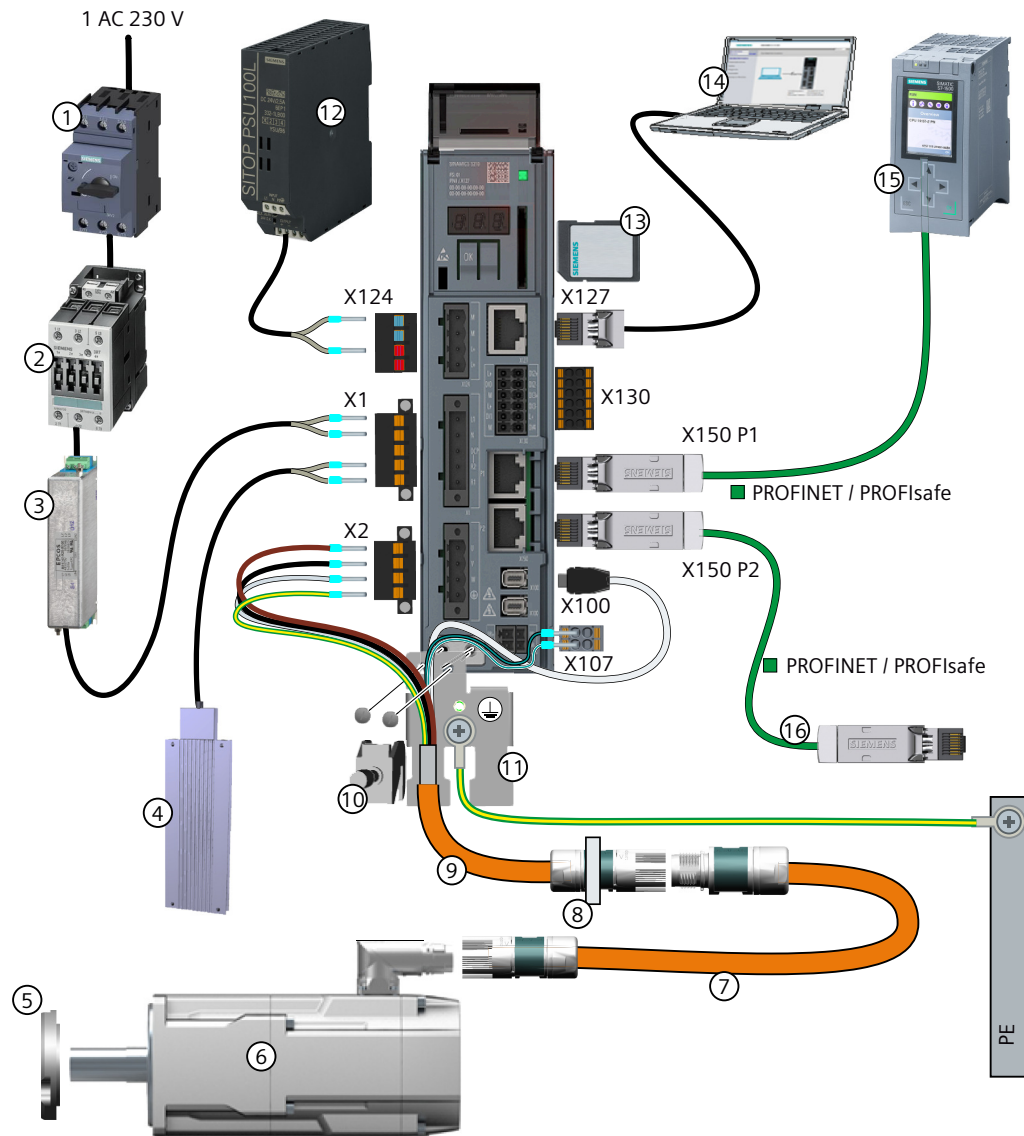

- | | |
|--|--|
| ① Fuse or circuit breaker | ⑨ OCC connection cable for motor, motor holding brake and encoder |
| ② Line contactor (optional) | ⑩ Shield clamp |
| ③ Line filter (optional) | ⑪ Shield plate |
| ④ External braking resistor (optional) | ⑫ 24 V power supply |
| ⑤ Shaft sealing ring for IP65 (optional) | ⑬ SD card (optional) |
| ⑥ 1FK2 or 1FT2 servomotor | ⑭ Operating unit, e.g. PC with a LAN connection to the web server in the converter |
| ⑦ OCC extension cable (optional) | ⑮ Controller, e.g. SIMATIC S7-1500 |
| ⑧ Mounting flange for control cabinet bushing (optional) | ⑯ PROFINET/PROFIsafe to the next participant |

Figure 3-2 System components and accessories for converters with 1 AC line connection

3.1 System overview

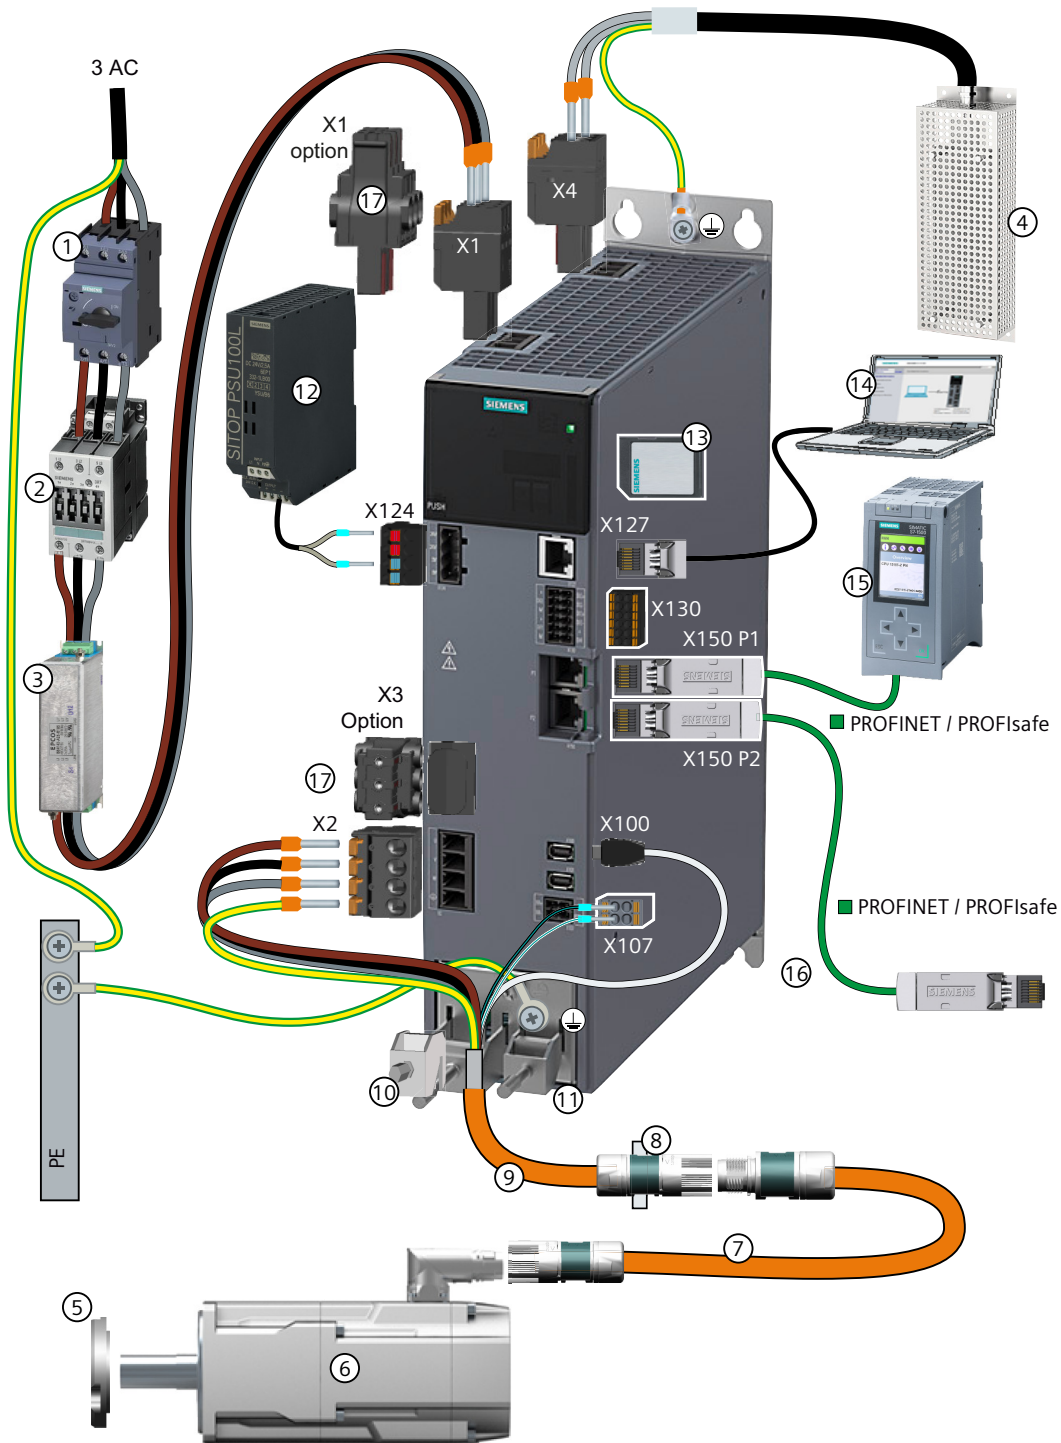

- ① ... ⑬
- ⑭
- ⑮

Same as in the previous figure
 X1: Connector for AC coupling (optional)
 X3: Connector for DC link coupling (optional)

Figure 3-3 System components and accessories for converters with 3 AC line connection

3.2 Commissioning tools

Overview

The web server and Startdrive commissioning tools are available for commissioning and configuring the converter.

Description

Web server

The web server commissioning tool is an **online tool** for the complete life cycle of a drive application. The web server is integrated in the SINAMICS converter.

The web server offers functions for online commissioning, for diagnostics, for local operation and monitoring as well as for carrying out service and maintenance work. This means that the web server is suitable as universal tool for SINAMICS drives locally and directly **online**.

Startdrive

The Startdrive commissioning tool is an **offline and online tool** to support all usage phases of a drive application. Startdrive is installed on an external system (e.g. PC with Windows 11 Professional) and is integrated in the TIA Portal.

Startdrive provides all functions that are required for editing drive applications both offline and online. As a consequence, the entire engineering process for configuring, commissioning, optimizing and maintaining & updating drive solutions while operational is addressed both **offline and online**.

3.3 The scope of supply for the system components

You must order the following components individually.

Motor

Included in the scope of supply:

- A "Safety instructions" sheet
- A sheet referencing links to product information
- A second rating plate

Converter

The components listed below are included in the scope of delivery:

For all converters

- A "Safety instructions" sheet
- A warning label for affixing in the control cabinet
- X2: Connector for motor connection
- X107: Connector for motor holding brake
- X124: Connector for 24 V DC supply voltage
- X130: Connector for digital inputs

For converters with 1 AC line connection

- Shield plate
- X1: Connector for line connection and external braking resistor (jumper for internal braking resistor is included)

For converters with 3 AC line connection

- The shield plate for frame size FSA
For frame sizes FSB and FSC, the shield connection is integrated in the converter itself.
- X1: Connector for line connection
- X4: Connector for external braking resistor (jumper for internal braking resistor is included)
- X3: Cover for DC link connection

Note

All connectors are designed so that they cannot be inadvertently interchanged.

MOTION-CONNECT cable (OCC cable)

The scope of supply for the prefabricated MOTION-CONNECT cables includes:

- MOTION-CONNECT cable with assembled connectors for connecting motors and encoders
- A shield clamp for the connection of the shield to the shield plate of the converter
- A safety data sheet

Details of the MOTION-CONNECT OCC cables can be found in Chapter "Determining the article number of a prefabricated OCC MOTION-CONNECT cable (Page 624)".

Optional accessories

The optional accessories are listed in Chapter "Accessories (Page 589)".

3.4 Motor

The SIMOTICS S-1FK2 and SIMOTICS S-1FT2 motors, called "1FK2" or "1FT2" in the following, are permanent-magnet excited compact synchronous motors with an integrated encoder and a high degree of protection.

Both motor series comply with standards EN 60034 and EN 60204-1 and the Low-Voltage Directive 2014/35/EU.

In this document, "1F□2" represents the validity for both 1FK2 and 1FT2.

Dynamic versions

- 1F□21 "High Dynamic" with low moment of inertia for a maximum acceleration capability in applications involving low load moments of inertia
- 1F□22 "Compact" with medium moment of inertia and precise positioning and synchronous operation characteristics for applications with a high and variable load moment of inertia

Torque range

- 0.16 Nm ... 3.6 Nm for a 1 AC 230 V line supply
- 0.16 Nm ... 50 Nm for a 3 AC 240 V line supply
- 0.64 Nm ... 50 Nm for a 400 V 3 AC line supply

Degree of protection

- IP64
- IP65 with radial shaft sealing ring
- IP67 with radial shaft sealing ring only for 1FT2, with the exception of frame size 20.

You can find more information on the degree of protection in Chapter "Degree of protection (Page 381)".

Cooling

The 1F□2 is a non-ventilated motor.

The motor thermal losses are dissipated by thermal conduction, thermal radiation and natural convection.

If the ambient temperature exceeds 40 °C (104 °F) or the installation altitude 1000 meters above sea level, you must reduce torque and power of the motor (derating).

Information on derating can be found in Chapter "Derating factors (Page 378)".

Observe the instructions for mounting the motor in Chapter "Cooling (Page 377)".

Bearing version

The motors have deep groove ball bearings with life-long lubrication.

The average bearing service life is designed for 25000 operating hours.

The motors have spring-loaded bearings in the NDE direction. For version with holding brake, the NDE bearing is a locating bearing.

The permissible axial and radial forces can be found in the technical specifications in Chapter "Axial and radial forces (Page 387)".

Shaft extension

The motors are available with two different shaft extensions.

- Cylindrical shaft without feather key
- Cylindrical shaft with feather key (half-key balancing)

You can find more information in Chapter "Shaft extension (Page 384)".

Encoder

The encoder resolution is 22 bit per revolution (single-turn). An optional multiturn encoder is available that is equipped with an additional 12-bit revolution counter (traversing range of 4096 revolutions).

The encoder designations are as follows:

- AS22DQC: Absolute encoder single-turn, 22 bit
- AM22DQC: Absolute encoder, 22 bit + 12 bit multiturn
- AS26DQC: Absolute encoder, singleturn, 26 bit (only for 1FT2)
- AM26DQC: Absolute encoder 26 bit + 12 bit multiturn (only for 1FT2)

You can find more information in Chapter "Available encoders (Page 392)".

Holding brake

The 1F□2 servomotor is available with integrated holding brake.

The holding brake closes in the current-free state and locks the motor shaft at a standstill. When current flows, the holding brake opens and releases the motor shaft.

SINAMICS S210 controls the holding brake without any additional devices.

The holding brake is not a working brake for braking the rotating motor. Limited EMERGENCY STOP operation is permissible.

Holding brake data are provided in Chapter "Holding brake data (Page 394)".

Rating plate

The rating plate contains the article number and the technical data of the motor.

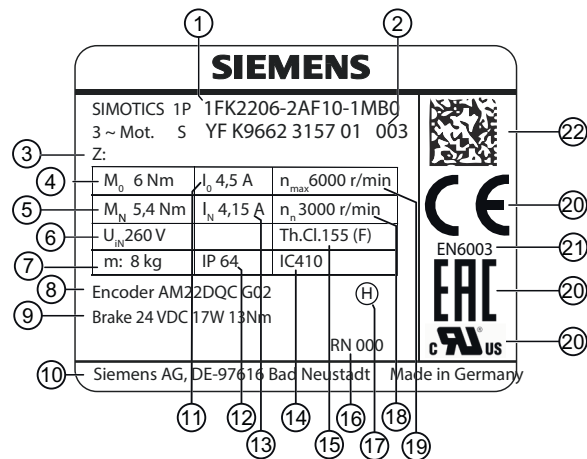


Figure 3-4 Rating plate 1FK2/1FT2 for S120 (example illustration)

Position	Description / technical specifications	Position	Description / technical specifications
1	Article number	12	Degree of protection
2	ID No., serial number	13	Rated current I_N
3	Order codes as a supplement to the article number.	14	Cooling method according to EN 60034-6
4	Static torque M_0	15	Temperature class of the insulation system
5	Rated torque M_N	16	Revision
6	Induced voltage at rated speed U_{IN}	17	Type of balancing (only for motors with feather key)
7	Motor weight m	18	Rated speed n_N
8	Marking of encoder type	19	Maximum permissible mechanical speed of the motor n_{max}
9	Data of the holding brake	20	Certifications
10	Manufacturer's address	21	Standard for all rotating electrical machines
11	Stall current I_0	22	Data matrix code

3.5 Motor-converter combinations for 1FK2

3.5.1 Motor-converter combinations for 1 AC 200 ... 240 V

The following table lists recommended combinations of converters with a 1 AC 200 V ... 240 V line connection and motors with the associated connecting cables.

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BB10-...	Connector size	Article number 6FX□002-8Q...
High Dynamic					
1FK2102-0AG	0.16	0.1	...1CF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)
1FK2102-1AG	0.32				
1FK2103-2AG	0.64	0.2	...2CF0		
1FK2103-4AG	1.27	0.4	...4CF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2104-4AF		0.2	...2CF0		
1FK2104-4AK	2.4	0.4	...4CF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2104-5AF		0.75	...8CF0		
1FK2104-5AK					
1FK2104-6AF	3.2				
Compact					
1FK2203-2AG	0.64	0.2	...2CF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)
1FK2203-4AG	1.27	0.4	...4CF0		
1FK2204-5AF	2.4	0.75	...8CF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2204-5AK					
1FK2204-6AF	3.2	0.4	...4CF0		
1FK2205-2AC					
1FK2205-2AF	3.6	0.75	...8CF0		

¹⁾ For IEC applications

²⁾ For UL applications

3.5.2 Motor-converter combinations for 3 AC 200 ... 240 V

The following table lists recommended combinations of converters with a 3 AC 200 V ... 240 V line connection and motors with the associated connecting cables.

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...
High Dynamic					
1FK2102-0AG	0.16	0.4	...0-4DF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22)
1FK2102-1AG	0.32				
1FK2103-2AG	0.64	0.75	...0-8DF0	M17	...N05... ²⁾ (0.82 mm ² / AWG18)
1FK2103-4AG	1.27	1.0	...1-0DF0		
1FK2104-4AF	2.4	0.4	...0-4DF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2104-4AK		1.0	...1-0DF0		
1FK2104-5AF		0.75	...0-8DF0		
1FK2104-5AK		1.5	...1-5DF0		
1FK2104-6AF	3.2	1.0	...1-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2105-4AF	5	1.5	...1-5DF0		
1FK2105-6AF	8	2.0	...2-0DF0		
1FK2106-3AF	9	5.0	...5-0DF0		
1FK2106-4AF	12	7.0	...7-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2106-6AF	16				
Compact					
1FK2203-2AG	0.64	0.75	...0-8DF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22)
1FK2203-4AG	1.27	1.0	...1-0DF0		
1FK2204-5AF	2.4	0.75	...0-8DF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2204-5AK		1.5	...1-5DF0		
1FK2204-6AF	3.2	1.0	...1-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2205-2AF	3.6				
1FK2205-4AF	6	1.5	...1-5DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2206-2AF	6.5	3.5	...3-5DF0		
1FK2206-4AF	12				
1FK2208-3AC	18	5.0	...5-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2208-4AC	22				
1FK2208-5AC	27	7.0	...7-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2210-3AB	30	3.5	...3-5DF0		
1FK2210-3AC		7.0	...7-0DF0		
1FK2210-4AB	40	5.0	...5-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FK2210-4AC		7.0	...7-0DF0		

¹⁾ For IEC applications

²⁾ For UL applications

3.5 Motor-converter combinations for 1FK2

3.5.3 Motor-converter combinations for 3 AC 380 ... 480 V

The following table lists recommended combinations of converters connected to a 3 AC 380 V ... 480 V line supply and motors with the associated connecting cables.

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...
High Dynamic					
1FK2103-2AH	0.64	0.4	...0-4DF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2103-4AH	1.27	0.75	...0-8DF0		
1FK2104-4AF		0.4	...0-4DF0		
1FK2104-4AK		1.0	...1-0DF0		
1FK2104-5AF	2.4	0.75	...0-8DF0		
1FK2104-5AK		1.5	...1-5DF0		
1FK2104-6AF	3.2	1.0	...1-0DF0		
1FK2105-4AF	5	1.5	...1-5DF0		
1FK2105-6AF	8	2.0	...2-0DF0		
1FK2106-3AF	9	5.0	...5-0DF0	M23	...N11... (1.5 mm ² / AWG16) ...N21... (2.5 mm ² / AWG14)
1FK2106-4AF	12				
1FK2106-6AF	16		...7-0DF0		
Compact					
1FK2203-2AK	0.64	0.4	...0-4DF0	M17	...N08... (0.82 mm ² / AWG18)
1FK2203-4AK	1.27	0.75	...0-8DF0		
1FK2204-5AF	2.4	0.75	...0-8DF0		
1FK2204-5AK		1.5	...1-5DF0		
1FK2204-6AF	3.2	1.0	...1-0DF0		
1FK2205-2AF	3.6				
1FK2205-4AF	6	1.5	...1-5DF0		
1FK2206-2AF	6.5	3.5	...3-5DF0	M23	...N11... (1.5 mm ² / AWG16) ...N21... (2.5 mm ² / AWG14)
1FK2206-4AF	12				
1FK2208-3AC	18				
1FK2208-4AC	22	5.0	...5-0DF0		
1FK2208-5AC	27	7.0	...7-0DF0		
1FK2210-3AB	30	3.5	...3-5DF0		
1FK2210-3AC		7.0	...7-0DF0		
1FK2210-4AB	40	5.0	...5-0DF0		
1FK2210-4AC		7.0	...7-0DF0		

- 1) For IEC applications
- 2) For UL applications

3.6 Motor-converter combinations for 1FT2

3.6.1 Motor-converter combinations for 1 AC 200 ... 240 V

The following table lists recommended combinations of converters with a 1 AC 200 V ... 240 V line connection and motors with the associated connecting cables.

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BB10-...	Connector size	Article number 6FX□002-8Q...
High Dynamic					
1FT2102-0AG	0.16	0.1	...1CF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)
1FT2102-1AG	0.32				
1FT2103-2AG	0.64	0.2	...2CF0		
1FT2103-4AG	1.27	0.4	...4CF0	M17	...N08... (0.82 mm ² / AWG18)
1FT2104-4AF		0.2	...2CF0		
1FT2104-4AK	2.4	0.4	...4CF0		
1FT2104-5AF		0.75	...8CF0		
1FT2104-5AK					
1FT2104-6AF	3.2				
Compact					
1FT2203-2AG	0.64	0.2	...2CF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)
1FT2203-4AG	1.27	0.4	...4CF0		
1FT2204-5AF	2.4	0.75	...8CF0	M17	...N08... (0.82 mm ² / AWG18)
1FT2204-5AK					
1FT2204-6AF	3.2	0.4	...4CF0		
1FT2205-2AC					
1FT2205-2AF	3.6	0.75	...8CF0		
1FT2205-2AH	3.6				

¹⁾ For IEC applications

²⁾ For UL applications

3.6 Motor-converter combinations for 1FT2

3.6.2 Motor-converter combinations for 3 AC 200 ... 240 V

The following table lists recommended combinations of converters with a 3 AC 200 V ... 240 V line connection and motors with the associated connecting cables.

Motor		Converter		OCC cable			
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...		
High Dynamic							
1FT2102-0AG	0.16	0.4	...0-4DF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)		
1FT2102-1AG	0.32						
1FT2103-2AG	0.64	0.75	...0-8DF0				
1FT2103-4AG	1.27	1.0	...1-0DF0	M17	...N08... (0.82 mm ² / AWG18)		
1FT2104-4AF		0.4	...0-4DF0				
1FT2104-4AK	1.0	...1-0DF0					
1FT2104-5AF	2.4	0.75	...0-8DF0				
1FT2104-5AK		1.5	...1-5UF0				
1FT2104-6AF	3.2	1.0	...1-0DF0				
1FT2105-4AF	5	1.5	...1-5DF0				
1FT2105-4AH		3.5	...3-5DF0				
1FT2105-6AF	8	2.0	...2-0DF0				
1FT2106-3AF	9	5.0	...5-0DF0			M23	...N11... (1.5 mm ² / AWG16)
1FT2106-4AF	12						
1FT2106-6AF	16		...7-0DF0				
Compact							
1FT2203-2AG	0.64	0.75	...0-8DF0	M12	...N04... ¹⁾ (0.38 mm ² / AWG22) ...N05... ²⁾ (0.82 mm ² / AWG18)		
1FT2203-4AG	1.27	1.0	...1-0DF0				

3.6 Motor-converter combinations for 1FT2

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...
1FT2204-5AF	2.4	0.75	...0-8DF0	M17	...N08... (0.82 mm ² / AWG18)
1FT2204-5AK		1.5	...1-5DF0		
1FT2204-6AF	3.2	1.0	...1-0DF0		
1FT2205-2AC		0.75	...0-8DF0		
1FT2205-2AF	3.6	1.0	...1-0DF0		
1FT2205-2AH		0.8	...1-5DF0		
1FT2205-4AF	6	1.5			
1FT2206-2AC		1.0	...1-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FT2206-2AF	6.5	1.5	...1-5DF0		
1FT2206-2AH		2.0	...2-0DF0		
1FT2206-3AB	9	1.5	...1-5DF0		
1FT2206-3AF		2.0	...2-0DF0		
1FT2206-4AC	12	1.5	...1-5DF0		
1FK2206-4AF		3.5	...3-5DF0		
1FT2206-4AH		5.0	...5-0DF0		
1FT2208-3AB	18	2.0	...2-0DF0		
1FT2208-3AC		3.5	...3-5DF0		
1FT2208-3AF		5.0	...5-0DF0		
1FT2208-4AB	22	3.5	...3-5DF0		
1FT2208-4AC		5.0	...5-0DF0		
1FT2208-4AF		7.0	...7-0DF0		
1FT2208-5AB	27	3.5	...3-5DF0		
1FT2208-5AC		7.0	...7-0DF0		
1FT2210-3AB	30	3.5	...3-5DF0		
1FT2210-3AC		7.0	...7-0DF0		
1FT2210-4AB	40	5.0	...5-0DF0		
1FT2210-4AC		7.0	...7-0DF0		
1FT2210-5AB	50				

1) For IEC applications

2) For UL applications

3.6.3 Motor-converter combinations for 3 AC 380 ... 480 V

The following table lists recommended combinations of converters connected to a 3 AC 380 V ... 480 V line supply and motors with the associated connecting cables.

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...
High Dynamic					
1FT2103-2AH	0.64	0.4	...0-4DF0	M17	...N08... (0.82 mm ² / AWG18)
1FT2103-4AH	1.27	0.75	...0-8DF0		
1FK2104-4AF	1.27	0.4	...0-4DF0		
1FT2104-4AK	1.27	1	...1-0DF0		
1FT2104-5AF	2.4	0.75	...0-8DF0		
1FT2104-5AK	2.4	1.5	...1-5DF0		
1FT2104-6AF	3.2	1	...1-0DF0		
1FT2105-4AF	5	1.5	...1-5DF0		
1FT2105-4AH		3.5	...3-5DF0		
1FT2105-6AF	8	2	...2-0DF0		
1FT2106-3AF	9	5	...5-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FT2106-4AF	12				
1FT2106-6AF	16	7	...7-0DF0		
Compact					
1FT2203-2AK	0.64	0.4	...0-4DF0	M17	...N08... (0.82 mm ² / AWG18)
1FT2203-4AK	1.27	0.75	...0-8DF0		
1FT2204-5AF	2.4	0.75	...0-8DF0		
1FT2204-5AK		1.5	...1-5DF0		
1FT2204-6AF	3.2	1.0	...1-0DF0		
1FT2205-2AC		0.75	...0-8DF0		
1FT2205-2AF	3.6	1.0	...1-0DF0		
1FT2205-4AF	6	1.5	...1-5DF0		
1FT2205-2AH	3.6	1.1			

3.6 Motor-converter combinations for 1FT2

Motor		Converter		OCC cable	
Article number (digits 1 ... 10)	Torque M_0 / Nm	Rated power P_N / kW	Article number 6SL5310-1BE1...	Connector size	Article number 6FX□002-8Q...
1FT2206-2AC	6	1.0	...1-0DF0	M23	...N11... (1.5 mm ² / AWG16)
1FT2206-2AF	6.5	1.5	...1-5DF0		
1FT2206-2AH		2.0	...2-0DF0		
1FT2206-3AB	9	1.5	...1-5DF0		
1FT2206-3AF		2.0	...2-0DF0		
1FT2206-4AC	12	1.5	...1-5DF0		
1FT2206-4AF		3.5	...3-5DF0		
1FT2206-4AH		5.0	...5-0DF0		
1FT2208-3AB	18	2.0	...2-0DF0		
1FT2208-3AC		3.5	...3-5DF0		
1FT2208-3AF		5.0	...5-0DF0		
1FT2208-4AB	22	3.5	...3-5DF0		
1FT2208-4AC		5.0	...5-0DF0		
1FT2208-4AF		7.0	...7-0DF0		
1FT2208-5AB	27	3.5	...3-5DF0		
1FT2208-5AC		7.0	...7-0DF0		
1FT2210-3AB	30	3.5	...3-5DF0		
1FT2210-3AC		7.0	...7-0DF0		
1FT2210-4AB	40	5.0	...5-0DF0		
1FT2210-4AC		7.0	...7-0DF0		
1FT2210-5AB	50				

- 1) For IEC applications
2) For UL applications

3.7 Converter

The converter is a single-axis device (complete converter with integrated infeed). It is characterized by a compact design, side-by-side installation and high overload capability.

The converter is intended for use with 1FK2 and 1FT2 motors and is available in the following versions:

- Line supply voltage 1 AC 230 V (200 V ... 240 V)
Power range 0.1 kW ... 0.75 kW
- Line supply voltage 240 V 3 AC (200 V ... 240 V) and 400 V 3 AC (380 V ... 480 V)
Power range when connected to 400 V 3 AC: 0.4 kW ... 7 kW

Control mode

Servo control, optimized for 1F□2 motors

Safety Integrated Functions

The converter offers the following Safety Integrated Functions:

Table 3-1 Safety Integrated Functions

Functions	Abbr.	Brief description
Safe Torque Off	STO	Safe Torque Off according to stop Category 0
Safe Stop 1	SS1	Safe stopping process according to category 1
Safe Brake Control	SBC	Safe brake control
Safe Speed Monitor	SSM	Safe output signal to monitor speed limits
Safe Direction	SDI	Safe monitoring of the direction of motion
Safely-Limited Speed	SLS	Safe speed monitoring

You can find more information in Chapter "Selection of the Safety Integrated Functions (Page 129)".

Integrated braking resistor

In order to absorb the regenerative load of the motor, converters have an internal braking resistor (exception: 100 W device)¹⁾.

If the internal braking resistor is not sufficient, you have the option of connecting an external braking resistor.

More information:

- "Configuring the braking resistor (Page 86)"
- "Connecting the converter (Page 168)"

¹⁾ An internal braking resistor is not required for normal operation (as a result of the available DC link capacitance).

DC link coupling (devices of the 3 AC series only)

For devices of the 3 AC series, the DC links of up to 6 converters can be coupled. This means that energy balancing between axes is possible, and the braking energy of an axis can be used by other axes when accelerating. This also reduces the dissipated heat in the control cabinet because the braking energy no longer has to be converted into heat in the braking resistor.

More information:

- "DC link coupling (for converters with 3 AC line connection) (Page 93)"

Communicating with the controller via PROFINET


The converter supports the following functions:

- RT (real time)
- IRT (isochronous real time) with the telegrams 5 and 105
- MRP (media redundancy) with RT
- MRPD (seamless media redundancy) with IRT
- Shared device
- PROFI-safe
- PROFIdenergy
- Automatic telegram selection

Commissioning, operator control and monitoring and data backup

- Web server (integrated in the converter):
"Commissioning (web server) (Page 193)"
- Startdrive (commissioning software):
"Commissioning (Startdrive) (Page 247)"

Nameplate, information plate and date of manufacture - 1 AC

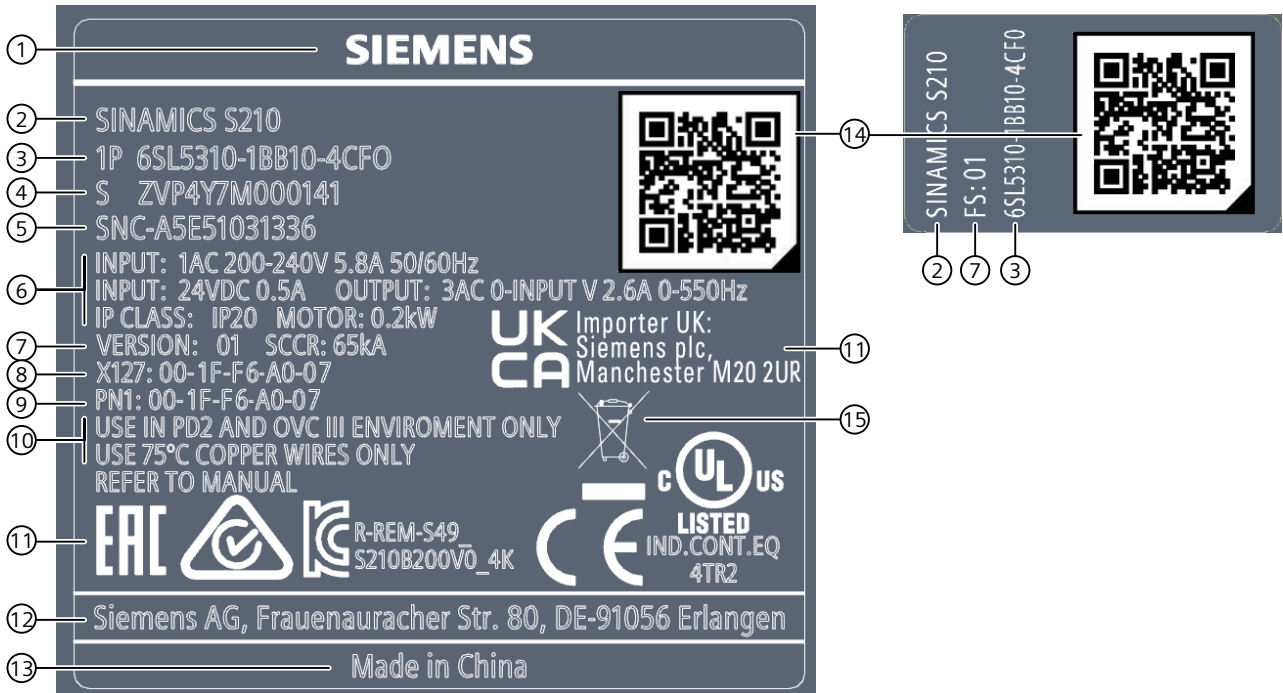

- ① Manufacturer
- ② Product designation
- ③ Article number
- ④ Serial number
- ⑤ Material number
- ⑥ Electrical data and degree of protection
- ⑦ Function release/version
- ⑧ MAC address of the service interface
- ⑨ MAC address of the PROFINET interface
- ⑩ Environmental conditions
- ⑪ Certificate examples
- ⑫ Manufacturer's address
- ⑬ Production location
- ⑭ ID link
- ⑮ Note on disposal

Date of manufacture


The date of manufacture of the converter is coded in the serial number:

S ZVP **4** Y 7 M 0 0 0 1 4 1

Month of manufacture							
1	January	2	February	3	March	4	April
5	May	6	June	7	July	8	August
9	September	0	October	N	November	D	December
Year of manufacture							
E	2014	F	2015	H	2016	J	2017
N	2021	P	2022	R	2023	S	2024
W	2028	X	2029	K	2018	L	2019
				M	2020	U	2026
				V	2027		

Figure 3-5 Date of manufacture (example April 2022)

Nameplate, information plate and date of manufacture - 3 AC

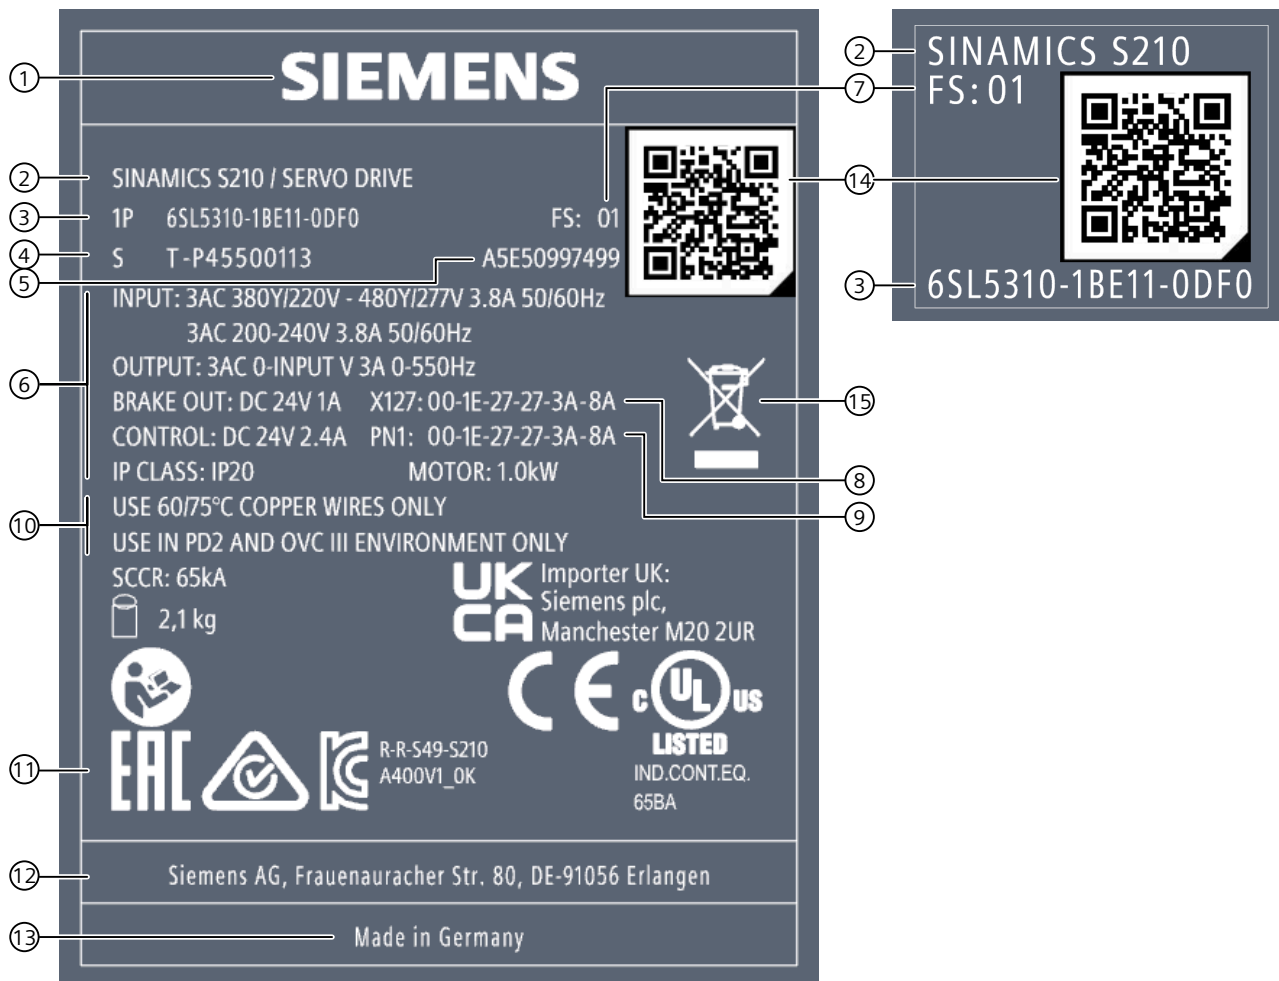

- | | | | |
|---|--|---|---------------------------------------|
| ① | Manufacturer | ⑨ | MAC address of the PROFINET interface |
| ② | Product designation | ⑩ | Environmental conditions |
| ③ | Article number | ⑪ | Certificate examples |
| ④ | Serial number | ⑫ | Manufacturer's address |
| ⑤ | Material number | ⑬ | Production location |
| ⑥ | Electrical data and degree of protection | ⑭ | ID link |
| ⑦ | Function release/version | ⑮ | Note on disposal |
| ⑧ | MAC address of the service interface | | |

Date of manufacture

The date of manufacture of the converter is coded in the serial number:

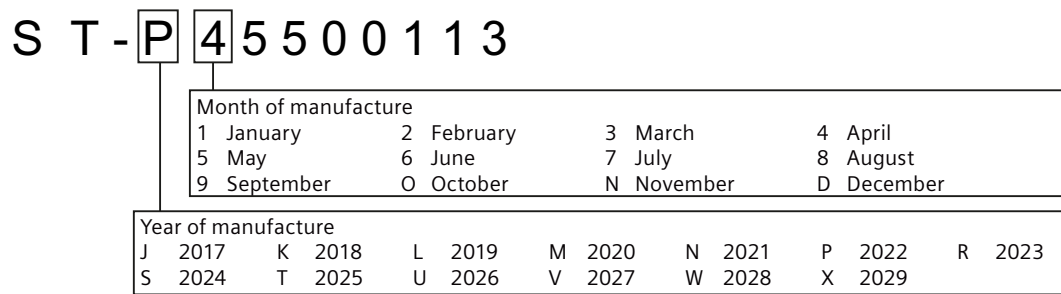


Figure 3-6 Date of manufacture (example April 2022)

3.8 Connection system

The motor is connected to the converter by a MOTION-CONNECT cable.

The cable uses all-in-one cable technology (One Cable Connection, OCC cable). As a result of its flexibility and low diameter, it permits very tight bending radii.

The OCC cables are available in the following variants:

- MOTION-CONNECT 500
 - Cost-effective solution for mainly fixed installation
 - Suitable for low mechanical loading
- MOTION-CONNECT 800PLUS
 - Fulfills the requirements for use in cable carriers
 - Tested for horizontal traversing paths up to 50 m
 - Not self-supporting
 - Suitable for high mechanical loading
 - Oil-resistant

The OCC cables can be supplied in lengths by the decimeter.

Extensions and cabinet bushings are available for the OCC cables.

You will find more information under:

- "Technical data and properties of the connection system (Page 562)"
- "Determining the article number of a prefabricated OCC MOTION-CONNECT cable (Page 624)"

Configuring

4.1 Permissible line supplies and connection options

4.1.1 Converters with 1 AC line connection

The converter is designed for grounded TN and TT line systems and non-grounded IT line systems according to IEC 60364-1 (2005).

You can find more information in Chapter "Line connection conditions for the S210 converter system with the motors 1FK2/1FT2 (Page 373)".

Connecting a converter to a 1 AC IT line system

You must remove the grounding screw when operating the converter on an IT line system. This means that you remove the connection of the integrated line filter to ground.

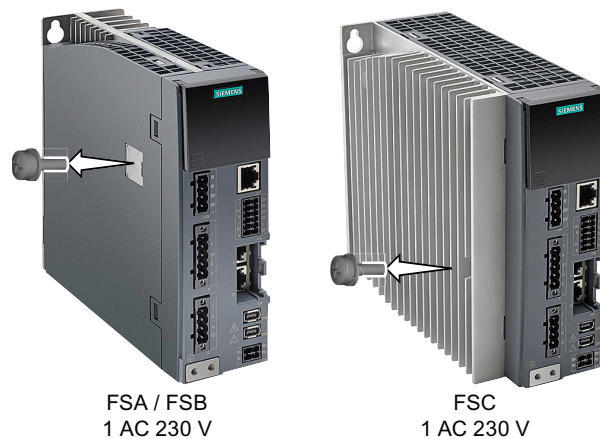


Figure 4-1 Removing the grounding screw

For converters, sizes FSA and FSB, the grounding screw is located behind a plastic cover. Open the cover, and after removing the grounding screw, close it again.

4.1 Permissible line supplies and connection options

Keep the grounding screw in a safe place in case it must be reinstalled.
Type: M3, tightening torque: 0.8 Nm



! WARNING
Electric shock when the grounding screw is removed
As a result of the capacitors, a hazardous voltage is present at the grounding screw for up to 5 minutes after the line supply has been switched off.
Contact with live parts can result in death or serious injury.
<ul style="list-style-type: none">• After switching off the supply voltage, wait for 5 minutes before you check that the device really is in a no-voltage condition and start work.

4.1.2 Converters with 3 AC line connection

The converter is designed for grounded TN and TT line systems and non-grounded IT line systems according to IEC 60364-1 (2005). Specific measures are required when connecting to IT line systems.

You can find more information in Chapter "Line connection conditions for the S210 converter system with the motors 1FK2/1FT2 (Page 373)".



! WARNING
Electric shock when operating the converter without grounding screw
If the converter is operated without a grounding screw, there is a risk of electric shock through contact with live parts when the cover is open or missing.
<ul style="list-style-type: none">• Do not open the cover and do not remove the grounding screw.


NOTICE
Destruction of the converter when operated without grounding screw
Operating the converter with 3 AC line connection without grounding screw will destroy it.
<ul style="list-style-type: none">• Do not remove the grounding screw.

4.1.3 Permissible line system configurations for motors

In combination with the drive system, the motors are generally designed for grounded TN and TT line systems and non-grounded IT line systems.

You can find more information in Chapter "Line connection conditions for the S210 converter system with the motors 1FK2/1FT2 (Page 373)".

4.1.4 Minimum cross-section of the protective conductor

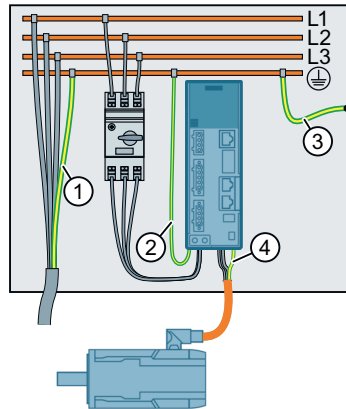

- ① The protective conductor (PE) must be dimensioned in accordance with the local installation rules for equipment with increased discharge currents. As a minimum, one of the following conditions must be satisfied:
 - The protective conductor is routed so that along its complete length it is protected against mechanical damage.
 - The protective conductor has a cross-section $\geq 10 \text{ mm}^2 \text{ Cu}$.
For a cross-section $< 10 \text{ mm}^2$ copper, a 2nd protective conductor with the same cross-section is provided.
 - When establishing the connection using an industrial plug connector according to EN 60309, the insulated conductor of a multi-conductor cable must have a cross-section $\geq 2.5 \text{ mm}^2 \text{ Cu}$.
 - As an insulated conductor of a multi-conductor cable, the protective conductor has a cross-section $\geq 2.5 \text{ mm}^2 \text{ Cu}$.
- ② The protective conductor must be dimensioned in compliance with local installation rules.
 - If each converter is individually protected, the protective conductor with the same cross-section must be routed in the same way as the line connecting cable to the converter.
 - If a group of converters is connected via the AC coupling, the protective conductor must be implemented as follows:
 - Group protection according to IEC: as a minimum $6 \text{ mm}^2 \text{ Cu}$ ¹⁾
 - Group protection according to NEC/CEC: AWG 8 Cu²⁾
- ③ The cable cross-section must be dimensioned in compliance with local installation rules.
- ④ Same cross-section as the line conductor of the motor cable. The protective conductor is part of the OCC cable.

¹⁾ According to IEC 60364-5-54, Chap. 543.1.2

²⁾ According to NEC (NFPA 70) Table 250.122 / CEC (CSA 22.1.18) Rule 10-6149

Figure 4-2 Protective connection concept

4.1.5 Connection options for converters with 1 AC line connection

Basic connection options

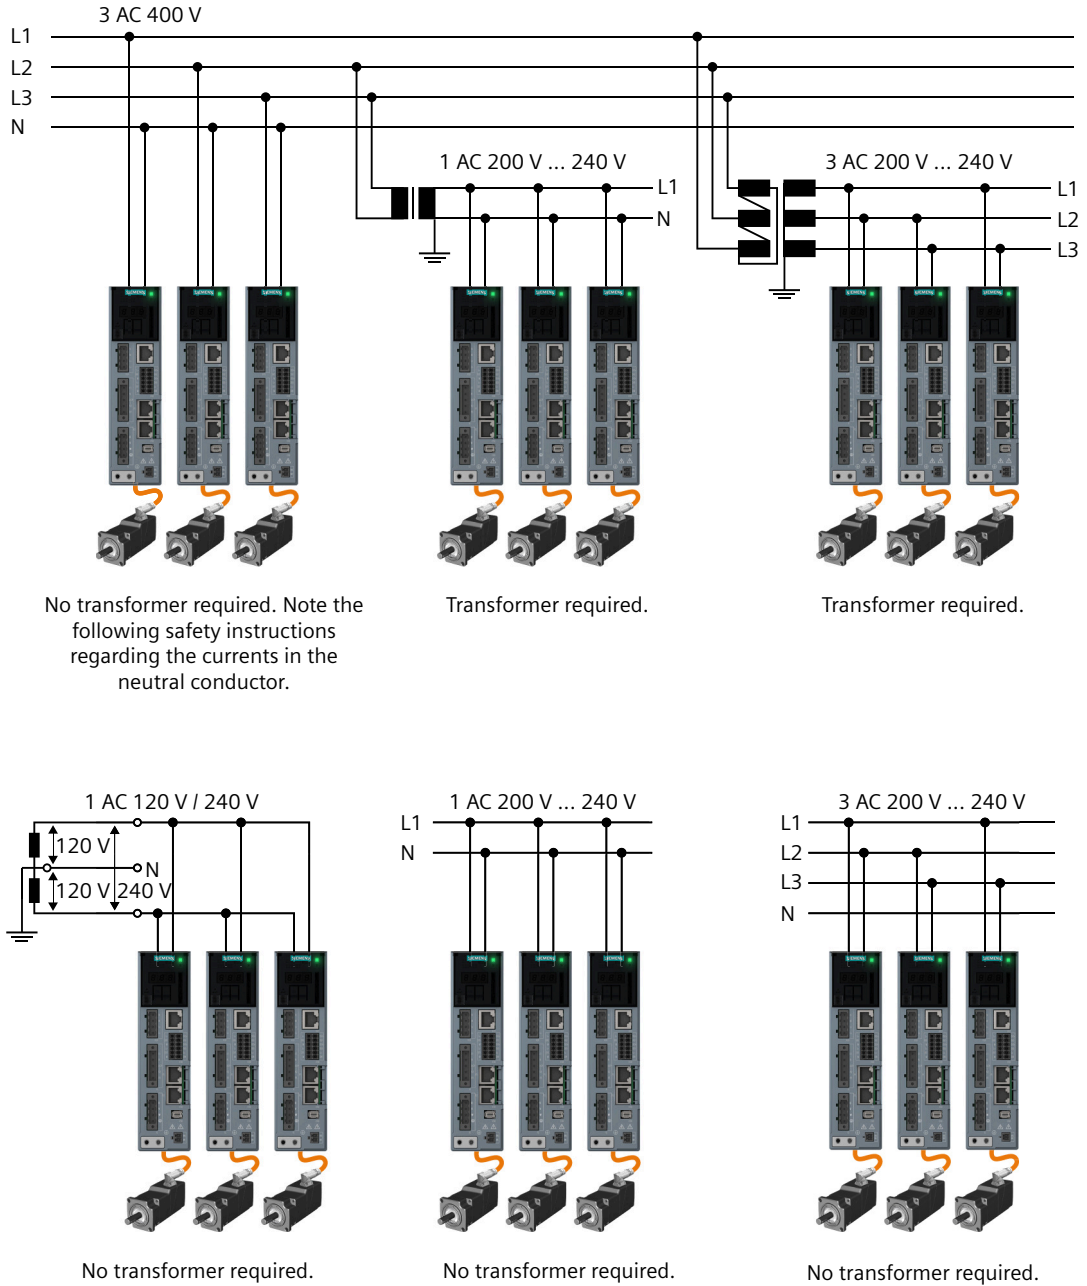


Figure 4-3 Connection options

 WARNING**Neutral conductor fire caused by high currents**


If you connect the converter without an isolating transformer to a supply system with 400 V 3 AC between the N-conductor and a line conductor (L1, L2 or L3), the harmonic currents in the N-conductor can add up to values that are greater than the currents in the line conductors. This heats up the N-conductor and can cause a fire.

- Take the harmonic currents into account when dimensioning the line connecting cables, e.g. according to DIN VDE 100-520 Insert 3.

Connection examples and cable cross-sections

The protective devices should be provided to protect the cable in the case of a short-circuit or ground fault. Overload converter protection is integrated in the converter itself.


Connecting devices to line voltage 1 AC 230 V

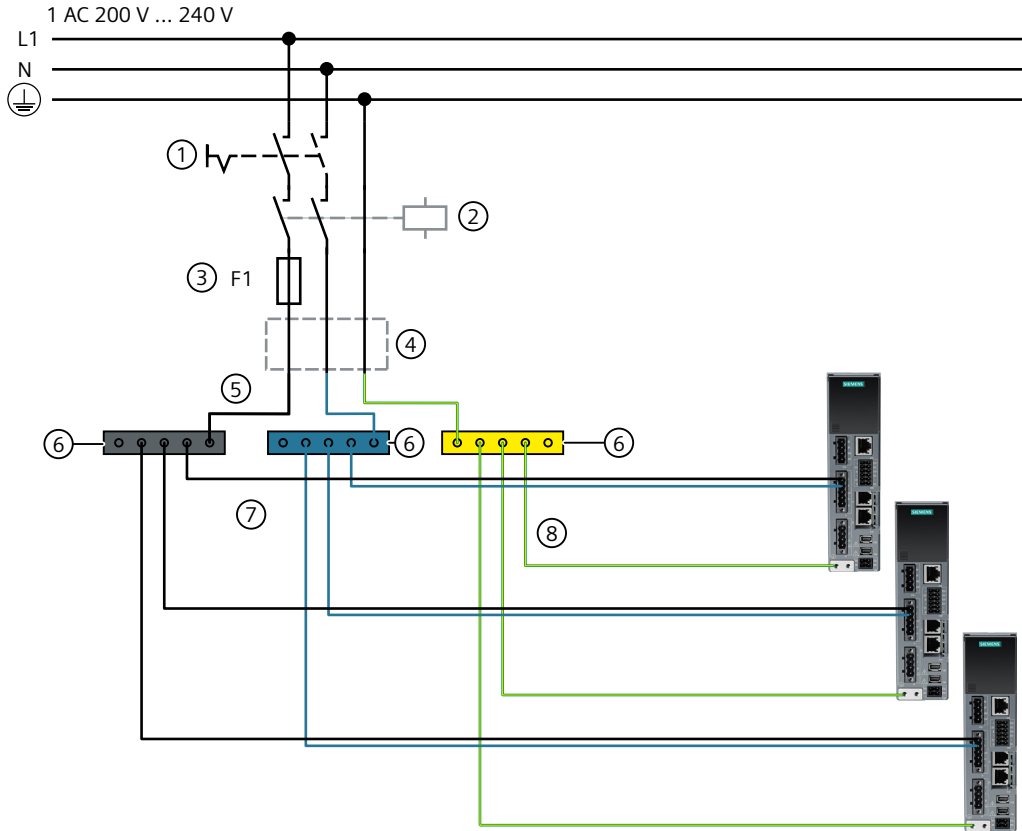

- ① Line disconnecting device e.g. load disconnector
- ② Line contactor optional
- ③ Protective device for fault protection e.g. fuses, circuit breakers, miniature circuit breakers (see Product Information "Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)")
- ④ Line filter (optional) 6SL3203-0BB21-8VA1 rated current 18 A
In conjunction with the line filter, the sum of the rated input currents must not exceed 18 A. The rated current of the protective device ③ must be appropriately adapted.
- ⑤ Cable to the distribution block Depending on the installation conditions (type of cable routing and ambient temperature) and the local regulations with reference to the total rated input currents.
The same cross-section should be used for the protective conductor.
- ⑥ Distribution block
- ⑦ Line connection 0.75 mm² ... 2.5 mm² / AWG 18 ... AWG 12 in accordance with the installation conditions (type of cable routing and ambient temperature) and the local regulations
- ⑧ Protective conductor connection Same cross-section as the line connecting cable ⑦

Figure 4-4 Example for connecting devices to a line voltage of 1 AC 230 V

Connecting devices to line voltage 3 AC 400 V

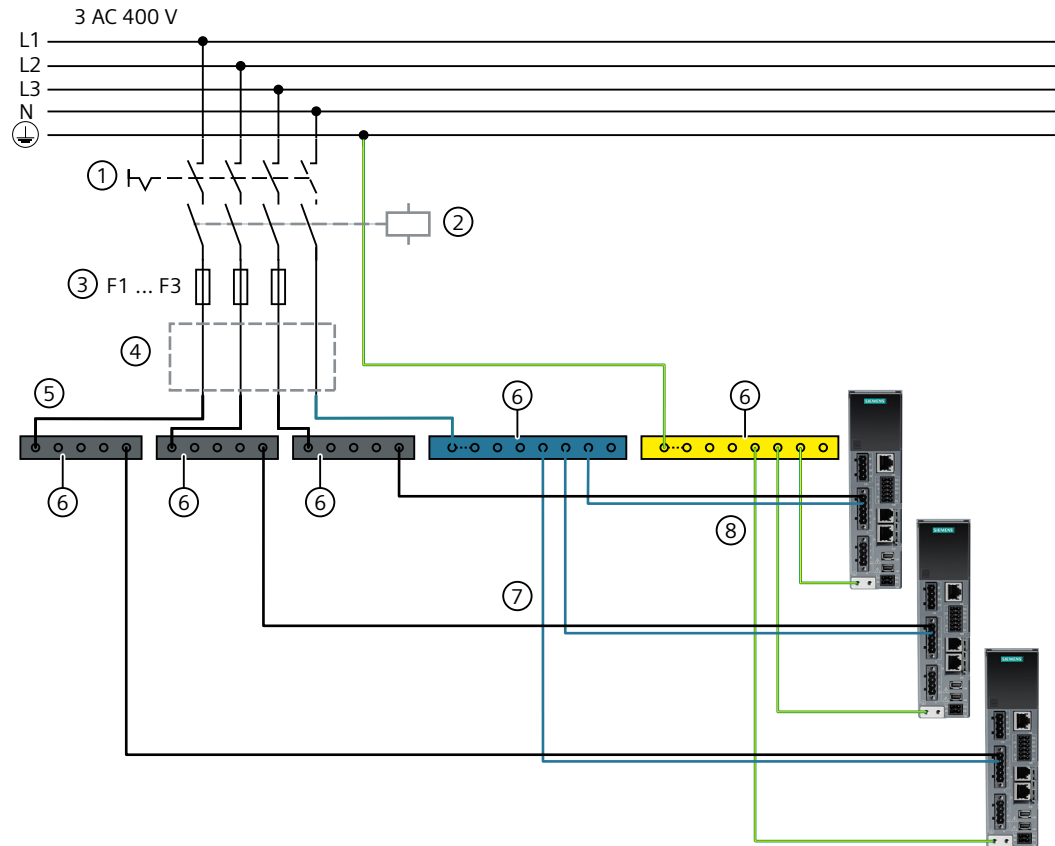

- | | | |
|---|--|---|
| ① | Line disconnecting device | e.g. load disconnector |
| ② | Line contactor | optional |
| ③ | Protective device for fault protection | e.g. fuses, circuit breakers, miniature circuit breakers (see Product Information "Protective Devices for SINAMICS S210 (https://support.industry.siemens.com/cs/ww/en/view/109815356)") |
| ④ | Line filter (optional) | from third-party manufacturers |
| ⑤ | Cable to the distribution block | Depending on the installation conditions (type of cable routing and ambient temperature) and the local regulations with reference to the total rated input currents.
The same cross-section should be used for the protective conductor. |
| ⑥ | Distribution block | |
| ⑦ | Line connection | 0.75 mm ² ... 2.5 mm ² / AWG 18 ... AWG 12 in accordance with the installation conditions (type of cable routing and ambient temperature) and the local regulations |
| ⑧ | Protective conductor connection | Same cross-section as the line connecting cable ⑦ |


Figure 4-5 Example for connecting devices to a line voltage of 3 AC 400 V

4.1.6 Connection options for converters with 3 AC line connection

You can connect each converter individually via the standard terminals and the protective devices assigned to them in accordance with the local installation regulations or you can connect a group of converters via the optional AC coupling and a common protective device.

In addition, you can couple the DC links of up to 6 converters to exchange energy within this drive line-up. To couple the DC links, the line connections of the coupled converters must also be connected.

Individual connection using standard terminals

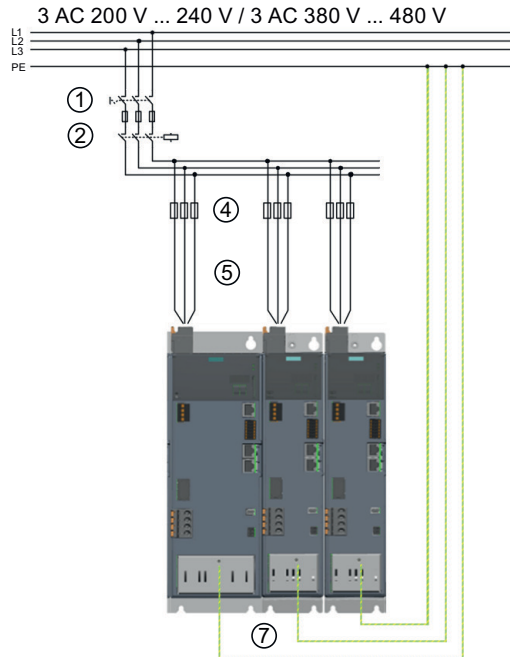

- ① Line disconnecting device e.g. load disconnector
- ② Line contactor optional
- ④ Protective device for fault protection e.g. fuses, circuit breakers, miniature circuit breakers (see Product Information "Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)")
- ⑤ Line connection 1.5 mm² ... 6 mm² / AWG 16 ... AWG 10 in accordance with the conditions in the installation (type of cable installation and ambient temperature) and the local regulations
- ⑦ Protective conductor connection Same cross-section as the line connecting cable ⑤


Figure 4-6 Individually connected converters via standard terminals

Common connection via an AC coupling

You can connect a group of converters via a common protective device if you order the connector kit for AC coupling 6SL3260-2DC10-0AA0 (AC link) for each converter. It is not permissible that the sum of the rated input currents of the converter exceed the continuous current carrying capacity of the cables and/or the rated current of the optional line filter; see Section "Connecting DC links via the DC link coupling".

The connector in the connector kit for the AC coupling (16 mm²/AWG 6) replaces the line connector contained in the scope of delivery of the converter (6 mm²/AWG 10). The single-core cable is routed through this connector and electrical contact with the cable is made with a set screw. In this way, the line connections of a phase are connected via a cable for all converters (see also Chapter "Establishing the AC coupling and the DC link coupling (Page 183)").

4.1 Permissible line supplies and connection options

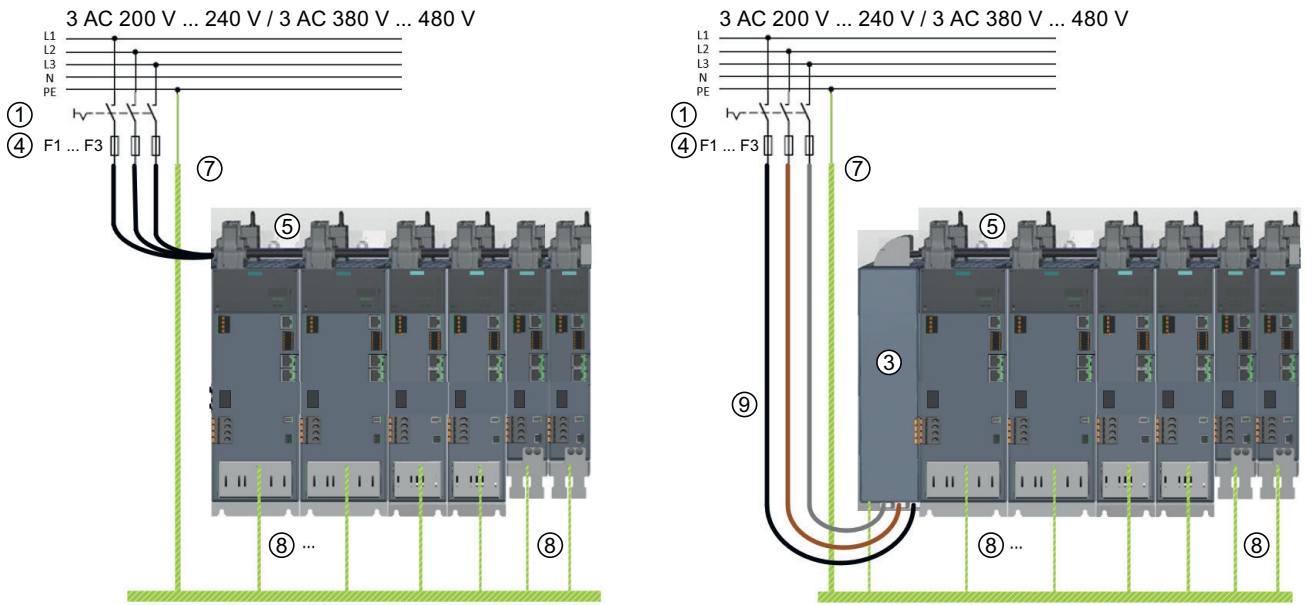


- ① Line disconnecting device e.g. load disconnector
- ③ Line filter (optional) 6SL3203-OBE23-5HA0: Rated current 35 A
6SL3203-OBE26-5HA0: Rated current 65 A
- ④ Protective device for fault protection e.g. fuses, circuit breakers, miniature circuit breakers (see Product Information "Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)")
- ⑤ Cables for the AC coupling For permissible cables for IEC, UL and CSA applications, see Chapter "Establishing the AC coupling and the DC link coupling (Page 183)"
- ⑦ Protective conductor For the cross-section according to ⑨
minimum cross-section, see ⑧
- ⑧ Protective connection Group protection according to IEC:
 - 6 mm² / AWG 10
 Group protection according to NEC/CEC:
 - 6 mm² / AWG 10 for overcurrent protective devices up to 60 A
 - 10 mm² / AWG 8 for overcurrent protective devices up to 100 A
- ⑨ Cable to the line filter Depending on the installation conditions (type of cable routing and ambient temperature) and the local regulations with reference to the total rated input currents.

Figure 4-7 Converter with AC coupling (without/with line filter)

DC links coupled via the DC link coupling

You can couple the DC links of up to 6 converters to exchange energy within this drive line-up. To couple the DC links, the line connections of the coupled converters must also be connected. For each converter, order connector kit 6SL3260-2DC00-0AA0 for the AC and DC link coupling (AC and DC link).

The following figure shows the basic structure of such a system.

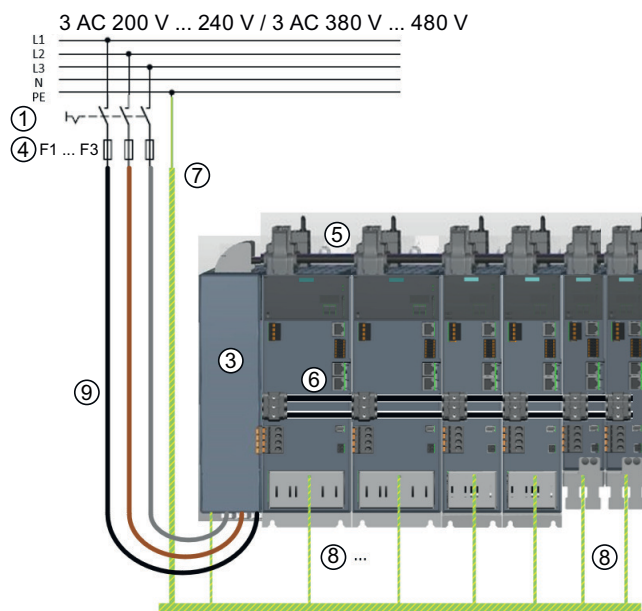

- | | | |
|---|--|---|
| ① | Line disconnecting device | e.g. load disconnecter |
| ③ | Line filter (optional) | 6SL3203-0BE23-5HA0: Rated current 35 A
6SL3203-0BE26-5HA0: Rated current 65 A |
| ④ | Protective device for fault protection | e.g. fuses, circuit breakers, miniature circuit breakers (see Product Information "Protective Devices for SINAMICS S210 (https://support.industry.siemens.com/cs/ww/en/view/109815356)") |
| ⑤ | Cables for the AC coupling | For permissible cables for IEC, UL and CSA applications, see Chapter "Establishing the AC coupling and the DC link coupling (Page 183)" |
| ⑥ | Cables for the DC link coupling | same as ⑤ |
| ⑦ | Protective conductor | For the cross-section according to ⑨
minimum cross-section, see ⑧ |
| ⑧ | Protective connection | Group protection according to IEC: <ul style="list-style-type: none"> • 6 mm² / AWG 10 Group protection according to NEC/CEC: <ul style="list-style-type: none"> • 6 mm² / AWG 10 for overcurrent protective devices up to 60 A • 10 mm² / AWG 8 for overcurrent protective devices up to 100 A |
| ⑨ | Cable to the line filter | Depending on the installation conditions (type of cable routing and ambient temperature) and the local regulations with reference to the total rated input currents. |

Figure 4-8 Converters with AC coupling and DC link coupling

Note that for the cables for the line connection ⑤ and for coupling the DC links ⑥, only the specified cable types are permissible to achieve degree of protection IP20 and ensure reliable contacting.

The cables for the AC coupling ⑤ of a drive line-up must be loaded with no more than 65 A due to the plug-in connector. Calculate the permissible current-carrying capacity of the cables in accordance with the local installation regulations and make sure that the total of

4.1 Permissible line supplies and connection options

the rated input currents of all devices that are connected to a common AC coupling does not exceed the calculated current-carrying capacity of the cables or the optional line filter.

Example of a calculation according to IEC 60364-5-52:

- Cross-section: 16 mm²
- Insulating material: PVC
- No. of loaded conductors: 3
- Type of cable installation: E
- Ambient temperature: 50 °C
- Current carrying capacity: 56.8 A

Ambient temperature [°C]	Max. current at 70 °C cables [A]	Max. current at 90 °C cables [A]
40	65.0	65.0
45	63.2	65.0
50	56.8	65.0

For end use in the USA or Canada, the relevant national standards that apply there must be observed in installations.

The common protective device must disconnect the power supply of the drive line-up in the event of a fault without thermally overloading the AC coupling.

For suitable protective devices, see Product Information "Protective devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)".

The selection of the protective device can be as follows with estimation:

- Calculate the input current of group I_{L_group} as the total of the rated input currents (see Chapter "Specific data of the converter with 3 AC line connection (Page 560)").
- The input current of group I_{L_group} must be less than the current-carrying capacity I_z of the AC coupling.
- The rated current I_N of the protective device should be 25% greater than the previously calculated input current of the group. However, the maximum permissible rated current of the largest protective element according to "Protective devices for SINAMICS S210" must not be exceeded.

4.1.7 Line connection via protection and monitoring equipment

4.1.7.1 Overcurrent protective devices (mandatory)

Standard fuses for IEC and UL

Examples of suitable fuses are provided in the technical data.

Permissible protective devices are described for 3 connection types (1 AC, 3 AC and 3 AC with AC coupling) in the subsequent chapters with connection options for converters.

More detailed information is provided in the product information "Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)".

For installation in conformance with UL and cUL, additional information is provided in the Appendix: UL Markings (Page 889)".

4.1.7.2 Residual current devices (optional)

Residual current circuit breakers (RCCB) can be used in addition to overcurrent protective devices.

Using residual current circuit breakers for converters with 1 AC line connection

- Only use super-resistant (short time-delayed) type A or type B residual current circuit breakers.
- Use a residual current circuit breaker with a rated fault current of 300 mA.
- Carefully ensure that the loop impedance is maintained corresponding to local installation regulations.
- Only operate the system with the internal line filters or recommended external line filters.
- Ensure that the switching elements (disconnecter unit, contactors) for connecting and disconnecting the drive system have a delay time of max. 35 ms between the closing/ opening of the individual main contacts.

Using residual current circuit breakers for converters with 3 AC line connection

- Only use super-resistant (short time-delayed) type B residual current circuit breakers.
- Use a residual current circuit breaker with a rated fault current of 300 mA.
- Carefully ensure that the loop impedance is maintained corresponding to local installation regulations.
- Only operate the system with the internal line filters or recommended external line filters.
- Ensure that the switching elements (disconnecter unit, contactors) for connecting and disconnecting the drive system have a delay time of max. 35 ms between the closing/ opening of the individual main contacts.
- Install separate residual current circuit breakers for each converter or for a group of converters when using an AC coupling.



WARNING

Electric shock or fire when using unsuitable residual current devices

In the case of a fault, converters with 3 AC line connection can generate smooth DC fault currents, which means that type A or AC residual current circuit breakers cannot be used.

- Use the recommended type B residual current circuit breakers to protect converters.
- If higher-level residual current circuit breakers are used, then these must also be type B devices.

Typical converter leakage currents

Note

Nuisance tripping of residual current circuit breakers

For unfavorable line supply conditions, as a result of the inherent system, converters can generate capacitive discharge currents. These capacitive discharge currents can cause a residual current circuit breaker to unnecessarily trip (nuisance tripping).

Typical leakage currents for converters with 1 AC line connection

Table 4-1 Decision-making support/guide values for leakage currents of 1 AC devices¹⁾

Device	I_{cm} , typical 50 Hz component up to 240 V	I_{cm} , typical 60 Hz component up to 240 V	I_{cm} , typical Complete frequency spectrum for 50 Hz, up to 240 V
Frame size FSA	13 mA	15 mA	70 mA (maximum @ 8 kHz)
Frame size FSB	13 mA	15 mA	70 mA (maximum @ 8 kHz)
Frame size FSC	13 mA	15 mA	70 mA (maximum @ 8 kHz)
1 AC line filter (18 A)	7 mA	8 mA	A statement is not possible, as this depends heavily on the system
Supplementary filter (for additional load, three-phase)	40 mA	48 mA	

¹⁾ Actual values can deviate significantly from the data as a result of the dependency of the leakage current on the load, cable length, line voltage and frequency, component tolerances as well as the protective conductor connection.

By removing the grounding screw of the integrated line filter, for an appropriate configuration, multiples of the leakage currents of the complete frequency spectrum can occur from the table above.

Typical leakage currents for converters with 3 AC line connection

Table 4-2 Decision-making support/guide values for leakage currents of 3 AC devices¹⁾

Device	I_{cm} , typical 50 Hz component up to 480 V	I_{cm} , typical 60 Hz component up to 480 V	I_{cm} , typical Complete frequency spectrum for 50 Hz, up to 480 V
Frame size FSA	10 mA	12 mA	85 mA (maximum @ 8 kHz)
Frame size FSB	15 mA	17 mA	100 mA (maximum @ 750 Hz)
Frame size FSC	24 mA	29 mA	100 mA (maximum @ 750 Hz)

Device	I_{cmr} typical 50 Hz component up to 480 V	I_{cmr} typical 60 Hz component up to 480 V	I_{cmr} typical Complete frequency spectrum for 50 Hz, up to 480 V
3 AC line filter (35 A and 65 A)	9 mA	11 mA	A statement is not possible, as this depends heavily on the system
Supplementary filter (for additional load, three-phase)	40 mA	48 mA	

¹⁾ Actual values can deviate significantly from the data as a result of the dependency of the leakage current on the load, cable length, line voltage and frequency, component tolerances as well as the protective conductor connection.

By removing the grounding screw of the integrated line filter, for an appropriate configuration, multiples of the leakage currents of the complete frequency spectrum can occur from the table above.

4.2 Configuring the motor

4.2.1 Configuration sequence

Motion Control

Drives are optimized for motion control applications. They execute linear or rotary movements within a defined travel cycle. All movements should be optimized in terms of time.

As a result, drives must meet the following requirements:

- High dynamic response, i.e. short rise times
- Capable of overload, i.e. a high reserve for accelerating
- Wide control range, i.e. high resolution for precise positioning.

The following table "Configuring procedure" is applicable for synchronous and induction motors.

General configuring procedure

The function description of the machine provides the basis for configuration. The components are selected according to physical interdependencies and the selection process is usually carried out in the following sequence of steps:

Table 4-3 Configuration sequence

step	Description of the configuring activity	
1.	Clarify the drive type	Refer to the next Chapter
2.	Define the constraints and incorporate them into the automation system	
3.	Define the load case, calculate the maximum load torque and determine the motor	
4.	Define the converter required	See the Catalog
5.	Repeat steps 3 and 4 for additional axes	
6.	Determine line-side power options (main switch, fuses, line filters, etc.)	
7.	Define other system components (e.g. braking resistors)	
8.	Calculate the current demand of the components for the 24 V DC power supply - and specify the power supplies (SITOP devices, Control Supply Modules)	
9.	Determine the connection system components	
10.	Configure the drive line-up components	
11.	Calculate the required cable cross sections for power supply and motor connections	
12.	Inclusion of mandatory installation clearances	

Also observe the recommended combinations of converters and motors with the associated connecting cables in Chapters "Motor-converter combinations for 1FK2 (Page 50)" and "Motor-converter combinations for 1FT2 (Page 53)".

More information

We recommend using the "SIZER" configuration software to select the converter.

You can find additional information about SIZER on the Internet:

Download SIZER (<https://support.industry.siemens.com/cs/ww/en/view/54992004>)

4.2.2 Clarify the drive type

Select the motor on the basis of the required torque (load torque), which is defined by the application, e.g. traveling drives, hoisting drives, test stands, centrifuges, paper and rolling mill drives, feed drives or main spindle drives.

Gearboxes to convert motion or to adapt the motor speed and motor torque to the load conditions must also be taken into account when selecting the motor.

You must know the following mechanical data in order to determine the torque to be supplied by the motor:

- The load torque specified by the application
- Masses to be moved

- Diameter of the drive wheel
- Leadscrew pitch, gear ratios
- Frictional resistance data
- Mechanical efficiency
- Traversing distances
- Maximum velocity
- Maximum acceleration and maximum deceleration
- Cycle time

4.2.3 Define the boundary conditions and incorporate them into the automation system

When configuring, take into account the following:

- The line system configuration when using specific motor types and/or line filters
- Rated values of the motor
- The ambient temperatures and the installation altitude of the motors and drive components
- Heat dissipation from the motors

Other conditions apply when integrating the drives into an automation environment such as SIMATIC or SIMOTION.


For motion control and technology functions (e.g. positioning), as well as for synchronous operation functions, the corresponding automation system, e.g. SIMATIC S7-1500 or SIMOTION D is used.

4.2.4 Define the load case, calculate the maximum load torque and determine the motor

The motors are defined bases on the motor type-specific limiting characteristic curves.

The limiting characteristic curves describe the torque or power curve over the speed.

The limiting characteristic curves take the limits of the motor into account on the basis of the DC-link voltage. The DC-link voltage is dependent on the line voltage.

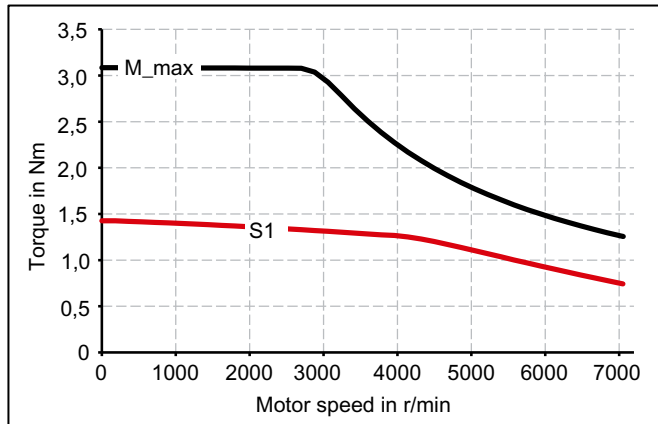

M_max Curve of the maximum torque

S1 S1 characteristic

Figure 4-9 Limit characteristics for synchronous motors

Procedure

1. Determine the load that is specified by the application itself.
Use different characteristics for the different loads.
The following operating scenarios have been defined:
 - Duty cycle with constant ON duration
 - Free duty cycle
2. Determine the characteristic torque and speed operating points of the motor for the defined load.
3. Calculate the acceleration torque of the motor.
Add the load torque and the acceleration torque. to obtain the maximum required torque.
4. Verify the maximum motor torque with the limiting characteristic curves of the motors.
The following criteria must be taken into account when selecting the motor:
 - Compliance with the dynamic limits
All torque-speed points of the load must be below the relevant limiting characteristic curve.
 - Compliance with the thermal limits
At average motor speed, the effective motor torque must be below the S1 characteristic (continuous motion) during the load.

Duty cycles with constant ON duration

For duty cycles with constant ON duration, there are specific requirements for the torque characteristic curve as a function of the speed, for example:

$$M = \text{constant}, M \sim n^2, M \sim n \text{ or } P = \text{constant}$$


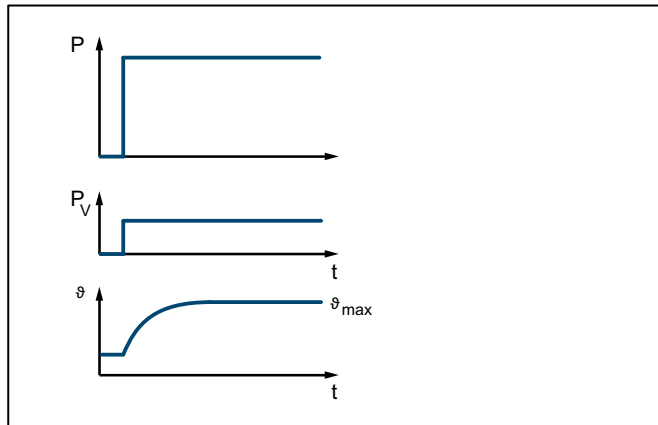


Figure 4-10 S1 duty (continuous motion)

The drives with this load cycle typically operate at a stationary operating point.

Procedure

1. Configure a base load for the stationary operating point. The base load torque must lie below the S1 characteristic.
2. In the event of transient overloads (e.g. during acceleration), configure an overload. Calculate the overload current in relation to the required overload torque. The overload torque must lie below the M_{max} characteristic.
In summary, the motor is configured as follows:

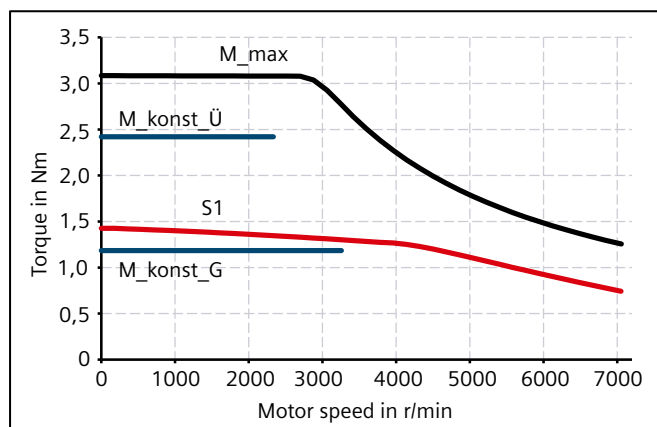

- | | | | |
|------------------|-----------------------------|--------------------------|-------------------------------|
| M_{max} | Curve of the maximum torque | $M_{\text{const_over}}$ | Curve of the overload torque |
| S1 | S1 characteristic | $M_{\text{const_base}}$ | Curve of the base load torque |

Figure 4-11 Motor selection for a duty cycle with constant switch-on duration

3. Select a motor that satisfies the requirements of S1 duty.

The effective torque is obtained as follows:

$$M_{\text{Mot, eff}} = \sqrt{\frac{\sum M_{\text{Mot, i}}^2 \cdot \Delta t_i}{T}}$$


The average motor speed is calculated as follows:

$$n_{\text{Mot, mittel}} = \frac{\sum n_{\text{Mot, i, A}} + n_{\text{Mot, i, E}} \cdot \Delta t_i}{T}$$

- J_M Motor moment of inertia
- J_G Gearbox moment of inertia
- J_{load} Load moment of inertia
- n_{load} Load speed
- i Gear ratio
- η_G Gearbox efficiency
- M_{load} Load torque
- M_R Frictional torque
- T Cycle time
- A; E Initial value, final value in time slice Δt_i
- t_e ON duration
- Δt_i Time interval

The effective torque M_{eff} must lie below the S1 characteristic.

The maximum torque M_{max} is produced during the acceleration operation. M_{max} must lie below the voltage limiting characteristic curve. In summary, the motor is configured as follows:

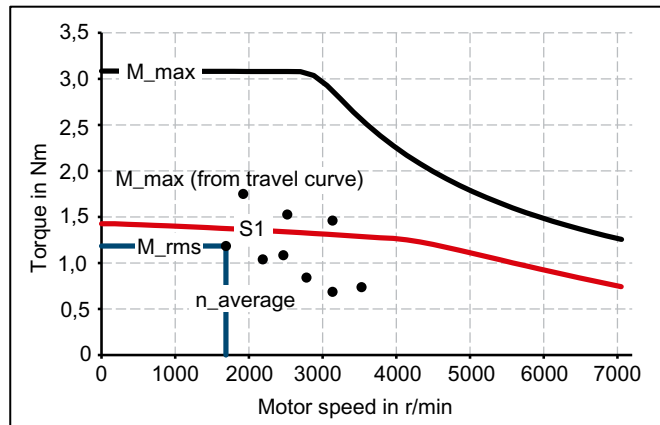

- M_{max} Curve of the maximum torque
- M_{eff} Effective torque
- n_{mean} Mean speed
- S1 S1 characteristic = M_0
- Points from the traversing profile

Figure 4-13 Motor selection for duty cycle

Defining the motor

By varying, you can find the motor that satisfies the conditions of the operating mode (duty cycle).

- Determine the motor current at base load. The calculation depends on the type of motor (synchronous motor or induction motor) and the operating mode (duty cycle) used.

Note

When configuring according to duty cycle with constant ON duration with overload, the overload current is calculated in relation to the required overload torque.

- Comply with the thermal limits of the motor.
- Configure the other properties of the motor through the available motor options.

4.3 Configuring the braking resistor

The converters are equipped with a Braking Module that converts the regenerative energy of the servomotor into heat using an integrated braking resistor. Regenerative energy is produced, for example, when braking the connected mechanical system.

If the motor feeds back more energy than can be dissipated by the internal braking resistor, then the converter shuts down with fault F30002 (DC link overvoltage). In this case, you will require an external braking resistor.

If you know the moment of inertia of your system (referred to the motor shaft), then calculate the braking energy that occurs according to the information provided in Chapter "Calculating the braking energy (Page 87)".

Table 4-4 Braking power and braking energy with the internal braking resistor

Article number	Rated power in kW	Continuous braking power in W	Peak power in kW	Braking energy in kJ
Converter with line connection 200 V ... 240 V 1 AC				
6SL5310-1BB10-1CF0	0.1	5 ¹⁾	0.35	0.01
6SL5310-1BB10-2CF0	0.2	10	0.6	0.15
6SL5310-1BB10-4CF0	0.4	20	1.3	0.325
6SL5310-1BB10-8CF0	0.75	40	2.4	0.60
Converters with 3 AC 200 ... 240 V line connection				
6SL5310-1BE10-4DF0	0.4	50	0.6	0.3
6SL5310-1BE10-8DF0	0.75	50	0.8	0.3
6SL5310-1BE11-0DF0	1.0	50	0.8	0.3
6SL5310-1BE11-5DF0	1.5	100	1.6	0.6
6SL5310-1BE12-0DF0	2.0	100	1.6	0.6
6SL5310-1BE13-5DF0	3.5	325	5.0	1.95
6SL5310-1BE15-0DF0	5.0	325	5.0	1.95
6SL5310-1BE17-0DF0	7.0	325	5.0	1.95

Article number	Rated power in kW	Continuous braking power in W	Peak power in kW	Braking energy in kJ
Converter with line connection 3 AC 380 V ... 480 V				
6SL5310-1BE10-4DF0	0.4	50	1.2	0.30
6SL5310-1BE10-8DF0	0.75	50	2.4	0.30
6SL5310-1BE11-0DF0	1.0	50	3.0	0.30
6SL5310-1BE11-5DF0	1.5	100	5.7	0.60
6SL5310-1BE12-0DF0	2.0	100	6.0	0.60
6SL5310-1BE13-5DF0	3.5	325	15.0	1.95
6SL5310-1BE15-0DF0	5.0	325	19.0	1.95
6SL5310-1BE17-0DF0	7.0	325	19.5	1.95

¹⁾ The 1 AC 200 ... 240 V 100 W device is not equipped with an internal braking resistor. An internal braking resistor is not required for normal operation as a result of the available DC link capacitance.

4.3.1 Calculating the braking energy

To find out whether you require an external braking resistor, calculate the braking energy according to the following formula:

$$W = \frac{1}{2} (J_{mot} + J) \frac{4\pi^2}{3600} (n_1^2 - n_2^2)$$

W / J Braking energy

J_{mot} / kgm^2 Moment of inertia of the servo motor

- Technical data and characteristics of the 1FK2 connected to 1 AC 230 V, 3 AC 240 V (Page 405)
- Technical data and characteristics of the 1FK2 connected to 3 AC 400 V, 3 AC 480 V (Page 435)
- Technical data and characteristics of the 1FT2 connected to 1 AC 230 V, 3 AC 240 V (Page 463)
- Technical data and characteristics of the 1FT2 connected to 3 AC 400 V, 3 AC 480 V (Page 504)

J / kgm^2 Moment of inertia of the driven mechanical system in relation to the shaft of the servomotor

$n_1 / \text{r/min}$ Initial speed

$n_2 / \text{r/min}$ Speed after braking

Note

As the friction is not taken into account in the above formula, less energy is fed back to the servo drive system in practice than that calculated in the formula.

Example

An 1FK2104-5AK1... servomotor with low moment of inertia (with integrated holding brake) with mechanical system is fed from a SINAMICS S210 6SL5310-BB10-8CF0. It is to be braked from 3000 r/min to 600 r/min

Moment of inertia of the servomotor 1FK2104-5AK1... $J_{\text{mot}} = 0.65 \times 10^{-4} \text{ kgm}^2$

Moment of inertia of the driven mechanical system $J = 4 \times 10^{-4} \text{ kgm}^2$

$n_1 = 3000 \text{ r/min}$ $n_2 = 600 \text{ r/min}$

$\Rightarrow W = 22.03 \text{ J}$ (1 J = 1 Ws)

The braking energy that can be absorbed by the integrated braking resistor (600 J) is higher than the actual braking energy (22.03 J). In this case, therefore, no external braking resistor is required.

4.3.2 Requirements placed on the external braking resistor

WARNING

Risk of fire caused by continuous overload

An explosion or a fire could occur if the external braking resistor is continuously overloaded (for example as the result of a defective Braking Module). This can result in severe injury or death and/or the enclosure could melt.

- Use only braking resistors that are intrinsically safe.
- Use only a braking resistor with temperature monitoring and connect the temperature monitoring to digital input DI4 of the converter.

NOTICE

Damage to the converter due to its maximum load being exceeded

If the maximum permissible continuous power, peak power or braking energy is exceeded, the converter may be damaged.

- Only ever operate the converter within its maximum permissible working range.

Load cycles for braking resistors

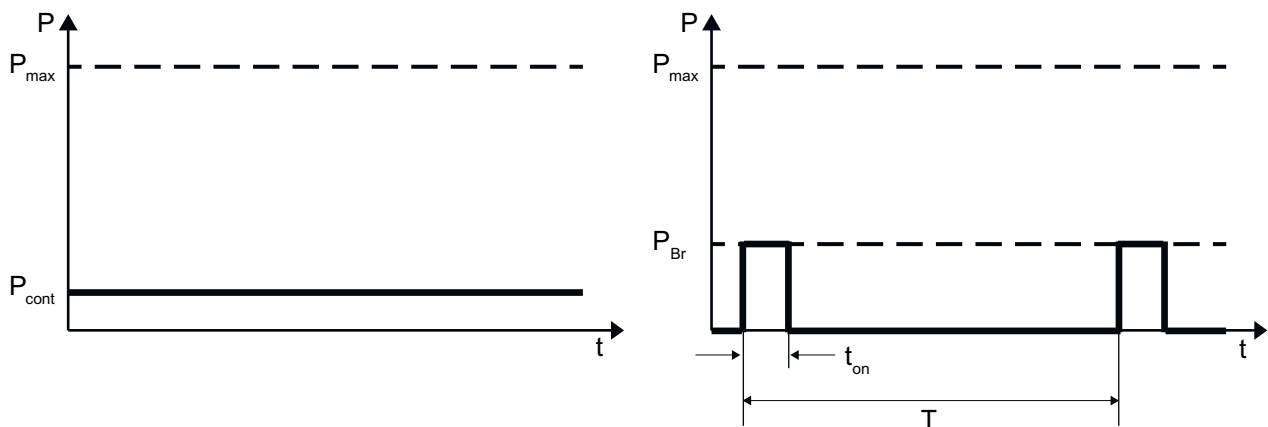


Figure 4-14 Peak power, continuous power and duty cycle of the braking resistor

$$P_{Br} \leq P_{max}$$

$$E_{Br} = P_{Br} \cdot t_{on}$$

$$E_{Br} \leq E_{max}$$

$$T \geq E_{Br} / P_{cont}$$

P_{max} [kW]: Maximum peak power

P_{cont} [kW]: Maximum continuous power

P_{Br} [kW]: Application-specific braking power

E_{max} [kJ]: Maximum braking energy

E_{Br} [kJ]: Application-specific braking energy

t_{on} [s]: Braking duration

T [s]: Cycle duration

Observe the following points when calculating the braking power:

- The braking power required in the application must not exceed the maximum peak power (according to the following tables).
- The required braking energy results from the product of the required braking power and the duty cycle (integral of the braking power over time).
- The required braking energy must not exceed the maximum braking energy (according to the following tables).
- The average braking power (arithmetic mean of the braking cycle) must not exceed the maximum continuous power (according to the following tables).

Resistance data for an external braking resistor

Table 4-5 Resistance data for an external braking resistor

Converter		Braking resistor			
Article number	Rated power in kW	Minimum resistance in Ω	Maximum continuous power in W	Maximum peak power in W	Maximum braking energy in kJ
Line voltage 200 ... 240 V 1 AC					
6SL5310-1BB10-1CF0	0.1	300	50	350	0.7
6SL5310-1BB10-2CF0	0.2	150	100	600	1.3
6SL5310-1BB10-4CF0	0.4	100	200	1300	2.3
6SL5310-1BB10-8CF0	0.75	50	380	2400	3.8
Line voltage 200 ... 240 V 3 AC					
6SL5310-1BE10-4DF0	0.4	100	200	600	1
6SL5310-1BE10-8DF0	0.75	100	380	1200	1
6SL5310-1BE11-0DF0	1.0	100	500	1700	1
6SL5310-1BE11-5DF0	1.5	50	880	2900	20
6SL5310-1BE12-0DF0	2.0	50	1000	3800	20
6SL5310-1BE13-5DF0	3.5	15	1750	7500	25
6SL5310-1BE15-0DF0	5.0	15	2500	9500	25
6SL5310-1BE17-0DF0	7.0	15	3250	12500	25
Line voltage 380 ... 480 V 3 AC					
6SL5310-1BE10-4DF0	0.4	200	200	1200	8
6SL5310-1BE10-8DF0	0.75	200	380	2400	8
6SL5310-1BE11-0DF0	1.0	200	500	3400	8
6SL5310-1BE11-5DF0	1.5	100	880	5700	80
6SL5310-1BE12-0DF0	2.0	100	1000	7600	80
6SL5310-1BE13-5DF0	3.5	30	1750	15000	100
6SL5310-1BE15-0DF0	5.0	30	2500	19000	100
6SL5310-1BE17-0DF0	7.0	30	3250	25000	100

Examples of suitable intrinsically safe braking resistors from a third-party supplier

Table 4-6 Examples of suitable intrinsically safe braking resistors from a third-party supplier

Converter		Braking resistor, Michael Koch GmbH ¹⁾				
Article number	Rated power in kW	Order designation with temperature sensor 190 °C	Continuous power in W for CE	Continuous power in W for UL	Maximum peak power in W	Maximum braking energy in kJ
Line voltage 200 ... 240 V 1 AC						
6SL5310-1BB10-1CF0	0.1	BWG250047TS-190 ²⁾	50	50	350	0.7
6SL5310-1BB10-2CF0	0.2	BWG250047TS-190 ²⁾	100	100	600	1.1
6SL5310-1BB10-4CF0	0.4	BWG250047TS-190 ²⁾	100	100	1300	1.8
6SL5310-1BB10-8CF0	0.75	BWG500027TS-190	200	200	2400	2.7
Line voltage 200 ... 240 V 3 AC						
6SL5310-1BE10-4DF0	0.4	BWG500027TS-190	200	200	600	0.9
6SL5310-1BE10-8DF0	0.75	BWG600014TS-190 ³⁾	380	240	1200	0.8
6SL5310-1BE11-0DF0	1.0	BWG600014TS-190 ³⁾	400	240	1700	0.8
6SL5310-1BE11-5DF0	1.5	BWD500027K03LIP65IS	600	600	2900	14.5
6SL5310-1BE12-0DF0	2.0	BWD500027K03LIP65IS	600	600	3800	13.9
6SL5310-1BE13-5DF0	3.5	BWD600014K03LIP65IS	1200	720	7500	18.7
6SL5310-1BE15-0DF0	5.0	BWD600014K03LIP65IS	1200	720	9500	17.8
6SL5310-1BE17-0DF0	7.0	BWD600014K03LIP65IS	1200	720	12500	18.2
Line voltage 380 ... 480 V 3 AC						
6SL5310-1BE10-4DF0	0.4	BWG500100TS-190	200	200	1200	5.2
6SL5310-1BE10-8DF0	0.75	BWG600047TS-190	380	240	2400	6.2
6SL5310-1BE11-0DF0	1.0	BWG600047TS-190	400	240	3400	6.1
6SL5310-1BE11-5DF0	1.5	BWD500100K03LIP65IS	600	600	5700	30.4
6SL5310-1BE12-0DF0	2.0	BWD500100K03LIP65IS	600	600	7600	30.4
6SL5310-1BE13-5DF0	3.5	BWD600047K03LIP65IS	1200	720	15000	50.0
6SL5310-1BE15-0DF0	5.0	BWD600047K03LIP65IS	1200	720	19000	47.5
6SL5310-1BE17-0DF0	7.0	BWD600047K03LIP65IS	1200	720	25000	41.7

¹⁾ Can only be directly sourced from Michael Koch GmbH

²⁾ This resistor can be directly ordered through Siemens by specifying the following Article number: GXX:BWG250047TS-190

³⁾ This resistor can be directly ordered through Siemens by specifying the following Article number: GXX:BWG600014TS-190

Remark relating to braking resistors:

- Braking resistors from Michael Koch GmbH
The resistance values of the braking resistors deviate from the listed general values in Table "Resistance data for an external braking resistor".
The braking resistors have been tested in conjunction with SINAMICS S210 converters and are approved.
- Braking resistors from other manufacturers
Braking resistors from other manufacturers should be dimensioned according to Table "Resistance data for an external braking resistor".

4.3.3 Connecting an external braking resistor

Connecting an external braking resistor

Use shielded cables to connect power to the external braking resistor.

How you connect an external braking resistor and the temperature monitoring is described in the following Chapters:

- For converters with 1 AC line connection: "Connecting a 1 AC braking resistor (Page 176)"
- For converters with 3 AC line connection: "Connecting a 3 AC braking resistor (Page 185)"

Setting the temperature monitoring of the external braking resistor

Connect the temperature monitoring of the external braking resistor at digital input DI4: "Connecting the digital input (Page 186)".

If you have connected an external braking resistor with temperature monitoring, then you must activate the temperature monitoring.

Activate the DI4 digital input "Temperature monitoring of the external braking resistor".

The converter switches the motor off as soon as the external braking resistor is too hot or when no external braking resistor is connected (wire break).

F7860 power unit: Thermal overload of external braking resistor

Cause: The external braking resistor is thermally overloaded. Its use is therefore disabled.

Note: The monitoring of the external braking resistor configured via DI4 of X130 has tripped.


4.4 DC link coupling (for converters with 3 AC line connection)

Using connector X3 you can connect the DC links of up to six converters with one another.

With the DC link coupling, energy recovered by drives operating in the generating mode does not have to be converted into heat via the braking resistor, but is instead used by drives operating in the motoring mode.

Prerequisites and conditions for the DC link coupling

- It is permissible to couple the DC links of converters with different power ratings.
- The converters must be mounted with decreasing power ratings starting from the line supply infeed.

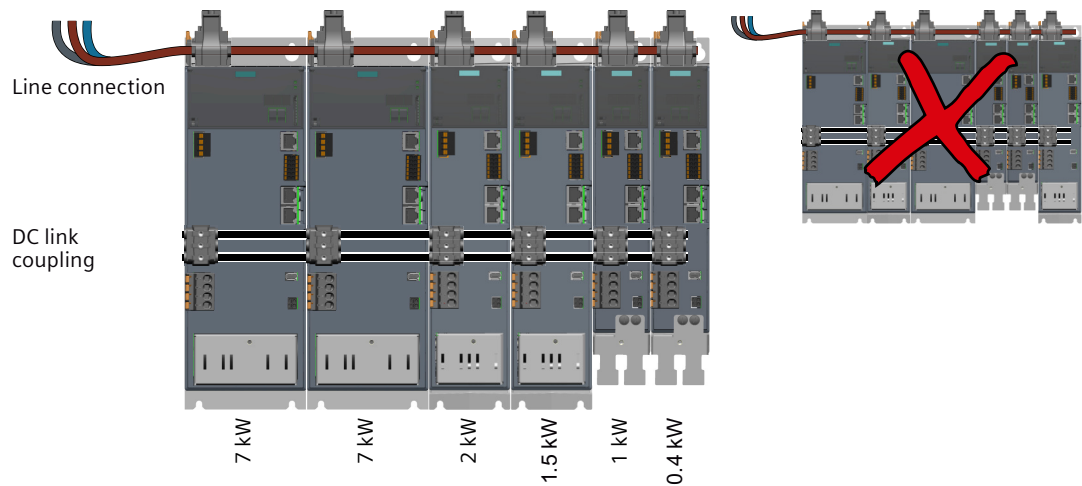

- All converters whose DC links are coupled, must also be coupled on the line side (AC coupling).
- The coupled converters must be housed in the same control cabinet.
- Only a 1-row setup is permissible. It is not possible to distribute the coupled converters over 2 or more rows.
- You are not recommended to create a common DC link coupling for devices with Article No. 6SL5... and devices with Article No. 6SL3....

Note

- For a DC link coupling, line connection via the standard connector is not permissible.
- Feeding in DC power directly at the DC link is not permissible!

Establishing the DC link coupling

1. Mount the converters, without any lateral intermediate spaces, with decreasing power ratings starting from the line supply infeed.
If a line filter is used, you must connect the line supply infeed from the left-hand side.
2. Establishing the AC and DC link coupling:
Use the connectors and cables that are described in the following chapters:
 - "Establishing the AC coupling and the DC link coupling (Page 183)"
 - "Connectors and cables for the AC coupling and DC link coupling (Page 591)"

Additional external braking resistors for the DC link coupling

The entire braking power of all converters coupled in a group is always available for braking.

If you require an external braking resistor for your system in spite of a DC link coupling, then you must connect this to the converter with the highest power rating. You can find more information in Chapter:

- "Configuring the braking resistor (Page 86)"

Special features for converters with a 200 V ... 240 V 3 AC line connection

- The DC link coupling is only permissible for converters of the same frame size. Otherwise, the above mentioned points apply.

4.5 Vertical axis

4.5.1 Setting SS1 in conjunction with vertical axes

Requirement

One of the two Safety Integrated Functions "Safe Stop 1 with time control" (SS1-t) or "Safe Stop 1 with acceleration monitoring" (SS1-a) is enabled.

Settings

With a vertical axis, if you use the Safety Integrated Functions "Safe Stop 1 with time control" (SS1-t) or "Safe Stop 1 with acceleration monitoring" (SS1-a), then you must set p9556 as follows:

Table 4-7 SS1 setting

Parameter	Setting value	Description
p9556	$p9556 > p1135 + p1228 + r1217$	This setting prevents the vertical axis from sagging after the transition to STO.

Result

After the correct setting is made, SS1-t and SS1-a behave as follows:

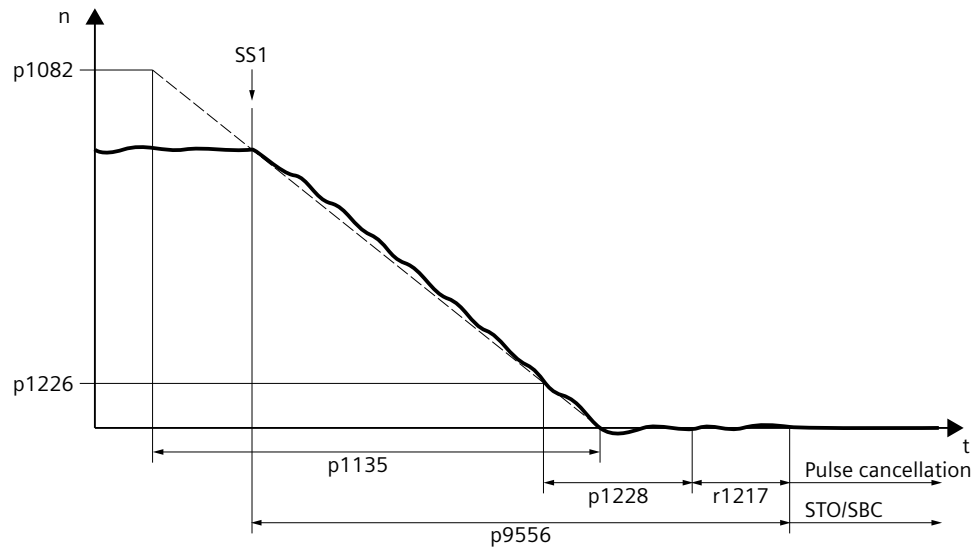


Figure 4-15 Correct setting of p9556 for SS1-t and SS1-a

- By immediately specifying $n_set = 0$, the converter brakes along the OFF3 down ramp (p1135).
- Once standstill has been detected, the converter closes the motor holding brake. The converter detects standstill in the following cases:
 - If the speed actual value falls below the speed threshold (p1226).
 - When the monitoring time (p1227), which was started when the speed setpoint \leq speed threshold (p1226), has expired.
- At the end of the holding brake closing time (r1217), the converter cuts off the motor torque (pulse cancellation).
- The converter is in the "switching on inhibited" state.

Parameters

The following list contains parameters to set SS1-t and SS1-a in conjunction with a vertical axis.

Number	Name	Unit
p1135[0]	OFF3 ramp-down time	[s]
r1217[0]	Motor holding brake closing time	[ms]
p1226[0]	Threshold for zero speed detection	[rpm]
p1227[0]	Zero speed detection monitoring time	[s]
p1228[0]	Pulse cancellation delay time	[s]
p9556	SI transition time SS1 to STO	[ms]

4.5.2 Setting the electronic counterweight for a vertical axis

Overview

With a vertical axis without mechanical weight compensation, you can set an electronic counterweight.

Requirement

The axis is at a standstill.

Procedure

Proceed as follows to set the electronic counterweight:

1. Make a note of the necessary offset value when the axis is at standstill:
r0031
2. Set the value from r0031 in p1532.
3. Save the change.
4. To prevent the axis from dropping after the brake is released, specify the torque offset as an additional torque setpoint (M_ADD) via the supplementary telegram 750.
The supplementary telegram 750 must be configured in the PLC.
As a result, the holding torque is specified when the brake is released.

Note

Due to the specified supplementary torque setpoint via the controller, a switchover of the supplementary torque is also possible. Thus, when the load is lifted, you can specify a supplementary torque that is different from the supplementary torque for movement without a load.

Parameters

The following list contains parameters to set the electronic counterweight for a vertical axis.

Number	Name	Unit
r0031	Actual torque smoothed	[Nm]
p1532[0]	Torque limit offset	[Nm]

4.6 Application examples

You can find SINAMICS application examples in the Siemens Industry Online Support (<https://support.industry.siemens.com/cs/ww/en/view/60733299>).

4.7 Establishing communication of the converter with the controller

To ensure that communication between the PLC and converter is possible, configure the converter or converters in the PLC, and activate the topology-based initialization. When powering up, the converter takes the PROFINET device name as well as the IP address from the PLC.

The converter also imports the telegram settings from the PLC.

The converter supports a standard telegram with 2 supplementary telegrams and a PROFIsafe telegram.

The following telegrams are possible:

- Standard telegrams
 - Telegram 3
 - Telegram 5
 - Telegram 102
 - Telegram 105

The telegrams are suitable for IRT communication.

Telegrams 3 and 102 are also suitable for RT communication.

IRT communication is mandatory for telegrams 5 and 105.

- Supplementary telegrams
 - Telegram 700
 - Telegram 750
- PROFIsafe telegrams
 - Telegram 30
 - Telegram 901

More information

- Acyclic communication

The converter supports reading and writing parameters via acyclic communication. The converter can simultaneously establish a total of 8 acyclic connections via the integrated PROFINET interface.
- You can find more information about the telegrams here:
Communication telegrams (Page 869)

4.8 Functions that require licensing

4.8.1 Fundamentals

Overview

When it is delivered from the factory, the converter contains the firmware files required for operation. It can be operated without a memory card. In this case, the converter is used with the basic functionality without functions that require licensing.

Refer to the ordering documentation (e.g. catalogs) for information on basic functions of the converter and functions that require licensing.

Using functions that require licensing

If you want to use functions that require licensing, you must purchase the relevant licenses.

In the commissioning tool, load the licenses into the converter in the form of a license file. The license file is stored retentively on the memory card. The memory card must be inserted in the converter so that the converter can check during ramp-up that the necessary licenses are present.

Web License Manager

See Web License Manager (<http://www.siemens.com/automation/license>) to find out which licenses are assigned to an existing memory card.

If you need additional licenses, you can assign these licenses to the memory card and create a new license file in the Web License Manager.

Ordering licenses together with a memory card

When licenses are purchased as Z options together with a memory card, the following applies:

- The certificates of license (eCoL) are stored with the license file on the memory card during the ordering process. The certificates of license are in PDF format.
- The license file is permanently assigned to the memory card during the ordering process. The license file is provided as a ZIP file.

Purchase licenses without memory card

If licenses are purchased and assigned to an existing memory card, the following applies:

- The purchaser receives individual certificates of license (eCoL) in PDF format for purchased licenses.
If the purchaser wishes to include the certificates of license on the memory card, they must be copied to the memory card manually.
- The license file is created in the Web License Manager using the certificates of license, assigned to an existing memory card, and made available to download as a ZIP file.

Differences between certificates of license and license files

Certificates of license and license files differ as follows:

Type	Description
Certificate of license (eCoL)	<ul style="list-style-type: none"> • Provided as a PDF for each license purchased. • Contains the delivery note number and license number. • Necessary in order to create the license file in the Web License Manager. • It is not contained in the license file.
License file	<ul style="list-style-type: none"> • Provided as a ZIP file. • Contains serial number of the memory card in the file name. Cannot be transferred to other memory cards. • Necessary in order to activate licenses for functions that require licensing in the commissioning tool. • Contains a signature file. The converter uses the signature file to verify the authenticity of the licenses.

Trial License mode

Operation of a converter with one or more functions requiring licensing without sufficient licensing is only permissible during commissioning and servicing. To do this, activate Trial License mode in the license overview in the commissioning tool.

Note

Not all functions requiring licensing can be used in Trial License mode.

4.8.2 System responses to under-licensing (ramp-up)

Requirement

- A memory card is present and inserted into the converter.
Licenses for functions requiring licensing must be assigned to a memory card. You can find more information in Chapter "Creating and downloading the license file (Page 100)".

Description of function

Licensing is automatically checked during ramp-up of the converter.

Insufficient licensing is indicated as follows on the converter:

- F13000 License not adequate
- READY LED red light flashing at 2 Hz

4.8.3 System responses to under-licensing (operation)

Requirement

- A memory card is present and inserted into the converter.

Description of function

Insufficient licensing is indicated as follows on the converter:

- A13002 licensing not sufficient in operation

Possible cause:

- The memory card is defective or was removed.
- Functions requiring licensing were activated during operation and the licensing is not sufficient.

Possible consequence:

- If the cause is not eliminated, fault F13000 is output automatically at the next restart. The function that requires licensing can no longer be used.

4.8.4 Creating and downloading the license file

Requirement

The following information is required to create a license file in the Web License Manager:

- License number and delivery note number of the license
- Product designation
- Serial number of the memory card
The serial number is on the memory card.
Alternative: Copy the serial number from the license overview in the commissioning tool you are using, and then paste the number in the Web License Manager.

Procedure

1. Call the following link: Web License Manager (<http://www.siemens.com/automation/license>).
2. Click on "Direct access".
The progress indicator shows the "Login" step.
3. Enter the license number and delivery note number of your license. Then click "Next".
The progress indicator shows the "Identify product" step.
4. Enter the serial number of the memory card.

5. Select the product you are using. Then click "Next".
The progress indicator shows the "Select licenses" step.
In the "Already assigned licenses" column, you can see which licenses of a particular memory card have already been assigned and how often.
In the "Additional licenses to be assigned" column, activate the licenses you want and specify how many additional licenses you require.
6. Activate the additionally required licenses. Then click "Next".
The progress indicator shows the "Assign licenses" step.
This page shows a summary of the selected licenses for checking.
7. To start the assignment, click "Assign".
The progress indicator shows the "Generate license key" step.
The licenses are assigned to the specified memory card.
The license file is displayed and is available to download.
8. Download the license file to the file directory of your operating unit.

Result

The license file is stored in the file directory of your operating unit.

4.8.5 Downloading the license file at a later time

Requirement

The license file has already been created in the Web License Manager.

Procedure

To display the license file so you can download it, proceed as follows:

1. Call the following link: Web License Manager (<http://www.siemens.com/automation/license>).
2. In the navigation, click the "Display license key" option in the "User menu".
3. Enter the serial number of the memory card you are using in the "Hardware serial number" field.
OR
In the "License number" field, enter your license number.
4. Click the "Display license key" button.
The license file is displayed and is available to download.
5. Download the license file to the file directory of your operating unit.

Result

The license file is stored in the file directory of your operating unit.

4.8.6 Transferring the license file to the converter and activating it

Overview

Check the license status for the converter at the license overview page. All functions that require licensing for the converter are listed in a table. The table also shows which functions are enabled and whether licenses are missing for individual functions.

You can call the license overview page from the web server or the Startdrive project of the converter.

The procedure is described below using Startdrive as an example.

Requirement

- A memory card is plugged into the converter.
- The license file is in the file directory of your operating unit.
- The data in the converter and in the Startdrive project are consistent.
- There is an online connection between the operating unit and the drive.

Procedure

1. Call the license overview page.
2. Click the "Activate the license key file" button.
A corresponding dialog opens.
3. Select the license file in the file system of your operating unit.
4. Close the load dialog.
The licenses are checked.
After a check has been successfully completed, dialog "Licensing" opens.
5. Click on the "Activate " button.
The dialog closes.

Result

The licenses are active. The license status for the converter is updated.

More information

For additional information about the license overview in Startdrive, see Chapter "Overview of licenses (Page 328)".

For additional information about the license overview in the web server, see Chapter "Licenses (Page 242)".

4.8.7 Restoring licensing after the memory card is removed

Overview

When a license file is loaded into the converter, the license file is stored retentively on the memory card.

If you remove the memory card from the converter and perform a restart, the function requiring licensing is blocked after ramp-up.

Requirement

The license file has been loaded into the converter.

Procedure

Proceed as follows to start using blocked functions again:

1. Reinsert the memory card into the converter.
2. Perform a restart.
3. Check the license status on the license overview page.

4.8.8 Loading certificates of license (eCoL) into the file directory of the operating unit

Overview

Use this function to back up the certificates of license (eCoL) contained on the memory card to your operating unit.

Requirement

- The memory card contains certificates of license.

Procedure

1. Click on the "Save eCoL archive" button.
2. Select a file directory in your operating unit and then confirm the selection.

Result

The certificates of license are stored in the file directory of your operating unit.

Safety Integrated Functions

WARNING

Unexpected machine movement caused by inactive Safety Integrated Functions

Inactive Safety Integrated Functions or Safety Integrated Functions that have not been adapted can trigger unexpected machine movements that may result in serious injury or death.

If a card without Safety Integrated Functions is inserted instead of a memory card with active Safety Integrated Functions, when the supply voltage is switched on the next time, the Safety Integrated Functions are deactivated.

- Only insert a memory card with the required settings into the drive.
- Prevent unauthorized persons accessing the drive.
- Protect configurations with active Safety Integrated Functions against changes by assigning roles using user management (UMAC).

Note

Fault of Safety Integrated Functions in the case of non-EMC-compliant installation

A non-EMC-compliant installation of your machine/system can result in sporadic faults in Safety Integrated Functions.

- Install the drive so that it is EMC-compliant.

5.1 Safety Integrated Functions

Overview

Safety Integrated Functions are used to reduce risk in safety-related applications.

Description

In comparison to standard converter functions, Safety Integrated Functions have especially high failsafety. The Performance Level (PL) and Safety Integrity Level (SIL) of the corresponding standards are a measure of failsafety.

Safety Integrated Functions are accordingly suitable for reducing risk in safety-related applications. If the risk analysis of the machine or the system indicates a special hazard potential in the application, an application is safety-related.

5.2 Certification

Safety Integrated means that the functions are integrated into the converter and can be executed without need of external components.

Note

Protection against manipulation by unauthorized third parties

Safety Integrated Functions protect against hardware faults and software errors, but not against manipulation by unauthorized third parties.

Protective measures against unauthorized manipulation are described in the Startdrive Operating Instructions and online help. The measures address the following issues:

- Parameter configuration of the Safety Integrated Functions
- Connection
- Hardware components

More information

There is an overview of Safety Integrated Functions requiring licenses in Chapter "Selection of the Safety Integrated Functions (Page 129)".

5.2 Certification

Description

The Safety Integrated Functions comply with:

- Safety Integrity Level (SIL) 3 to IEC 61800-5-2
- Performance Level (PL) e to ISO 13849-1
- Category 3 or 4 to ISO 13849-1

The Safety Integrated Functions correspond to functions according to IEC 61800-5-2 and IEC 61800-5-3.

The individual Safety Integrated components have the following certifications:

Table 5-1 Certifications for the converter Safety Integrated component

Converter	SIL	PL	Category
Control via PROFIsafe	SIL3	PL e	Category 4
Control via F-DI	SIL3	PL e	Category 3 or 4 ¹⁾
Stop functions STO, SS1	SIL3	PL e	Category 4
Safe Brake Control (SBC)	SIL3	PL e	Category 3 or 4 ²⁾
Motion monitoring functions SLS, SDI, SSM	SIL3	PL e	Category 3

¹⁾ Depends on the parameterized diagnostic function (online self-test)

²⁾ Depends on the test stop version

Table 5-2 Certification for the motor encoder Safety Integrated component

Motor encoder	SIL	PL	Category
Safe Incremental Position (SIP)	SIL3	PL e	Category 3

Independent institutes also certify Safety Integrated Functions. A list of currently certified components is available on request from your sales partner.

5.3 PFH values

Description

The probability of failure for Safety Integrated Functions must be specified in the form of a PFH value (probability of failure per hour) according to IEC 61800-5-2, IEC 62061 and EN ISO 13849-1. The PFH value of a Safety Integrated Function depends on the safety concept of the converter and its hardware configuration, as well as on the PFH values of other components used for this Safety Integrated Function.

More information

The PFH values can be found under: PFH values (<https://support.industry.siemens.com/cs/ww/en/view/76254308>)

You can map the PFH values of all Safety Integrated components from Siemens using the "Safety evaluation" function in the TIA selection tool: Safety evaluation (<http://www.siemens.com/safety-evaluation-tool>)

5.4 Usage time

Description

You may not operate converters with Safety Integrated Functions for longer than 20 years. The 20 years starts when the device is delivered. The mission time cannot be extended. This is the case even if a service department checks the converter – or in the meantime, the converter was decommissioned.

5.5 Stop functions

5.5.1 Safe Torque Off (STO)

Overview

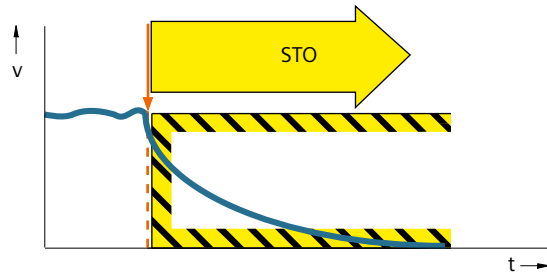



Figure 5-1 Overview STO

The Safe Torque Off (STO) function prevents the torque-generating supply of energy to the motor and prevents the motor from unexpectedly starting.

Requirement

 WARNING
<p>Unexpected motor movement through active Safe Torque Off</p> <p>There may be unexpected motor movements if the Safe Torque Off (STO) function is active. For instance, the motor can coast down to a standstill or a hanging load may accelerate the motor. Unexpected movements can lead to damage to property, risk to persons, severe injury and death.</p> <ul style="list-style-type: none"> • Take account of the way the Safe Torque Off (STO) function works when you perform risk assessments of the machine or system. • Prevent movements of the motor, for example by using a holding brake.

STO is enabled in the function selection.

Description of function

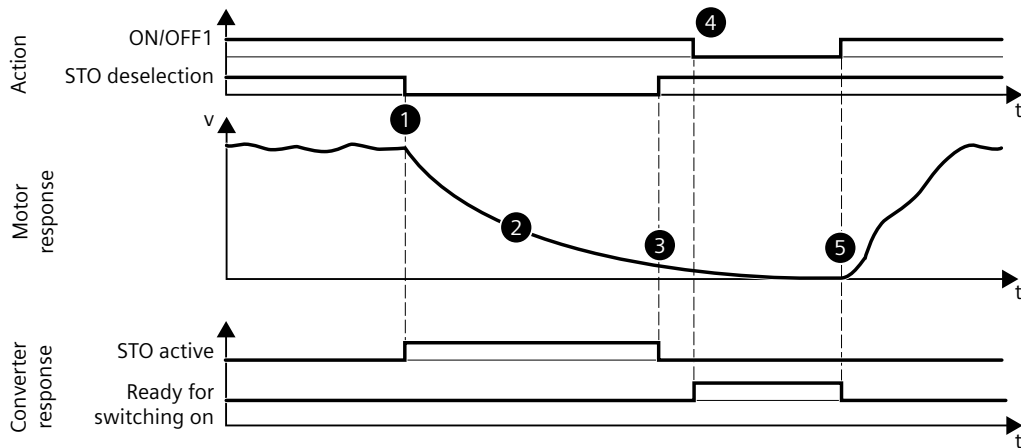


Figure 5-2 Flow diagram STO

	Action	Motor/converter response
①	Selection of STO	<ul style="list-style-type: none"> The converter detects selection of STO and signals the status "STO active" (r9722.0). The converter interrupts the torque-generating energy feed to the motor. If you use a line contactor, the converter opens the line contactor. The "switching on inhibited" status prevents the motor from restarting automatically.
②		<ul style="list-style-type: none"> The motor coasts down to a standstill.
③	Deselection of STO	<ul style="list-style-type: none"> The converter detects deselection of STO.
④	Signal change at ON/OFF1 from 1 to 0	<ul style="list-style-type: none"> The converter is ready to start again.
⑤	Signal change at ON/OFF1 from 0 to 1	<ul style="list-style-type: none"> The motor starts again.

Example

Applications include all machines and systems with moving axes (for example, conveyor technology, handling).

With STO, maintenance work on the machine with an open protective door is possible, for example. An EMERGENCY STOP with electromechanical disconnection is not required.

5.5.2 Safe Stop 1 (SS1)

Overview

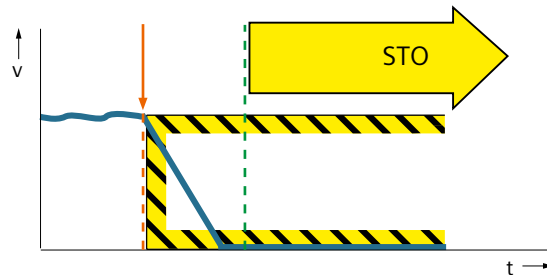


Figure 5-3 Overview SS1

With Safe Stop 1 (SS1), the converter stops dangerous movement of an electrically driven machine component (e.g. motor). After stopping, the Safe Torque Off (STO) function prevents the machine component from restarting.

Description of function

Table 5-3 Versions of the function

Abbreviation	Brief description
SS1-t	Safe Stop 1 with time control
SS1-a	Safe Stop 1 with acceleration monitoring (SAM)
SS1-r	Safe Stop 1 with braking ramp monitoring (SBR)

Interruption of SS1

- If SS1 is deselected again within the delay time, after the delay time elapses or after the shutdown speed is fallen below, the converter selects and deselects STO. This terminates the SS1 function normally. It cannot be interrupted.
- During the delay time, SS1 cannot be deselected by withdrawing the control command, therefore fulfilling the requirements of EN 60204-1 relating to an EMERGENCY STOP function.

SS1 delay time

Select the SS1 delay time so that before the torque is shut down, the motor can completely ramp down along the OFF3 ramp, and if available, the motor holding brake can be closed. The OFF3 ramp-down time must be oriented to the actual braking capacity of the system or machine.

5.5 Stop functions

Use the following procedure to select the SS1 delay time:

- SS1 delay time **with** parameterized motor holding brake:
 $SS1 \text{ delay time (p9556)} \geq \text{OFF3 ramp-down time (p1135)} + \text{pulse cancellation delay time (p1228)} + \text{motor holding brake closing time (r1217)}$
- SS1 delay time **without** parameterized motor holding brake:
 $SS1 \text{ delay time (p9556)} \geq \text{OFF3 ramp-down time (p1135)} + \text{pulse cancellation} + \text{delay time (p1228)}$

Example

Table 5-4 SS1 application example


Example	Possible solution
A converter must brake a motor as quickly as possible after the EMERGENCY STOP button has been actuated. It is not permissible that the stationary motor undesirably restarts.	Select SS1 via a failsafe digital input or via PROFIsafe.

5.5.2.1 Safe Stop 1 with time control (SS1-t)

Overview

With SS1-t, the converter stops the motor along the OFF3 ramp within the set delay time. After the delay time elapses, irrespective of the current speed, the converter activates the Safe Torque Off (STO) function.

Requirement

 WARNING
<p>Unexpected motor movement through active Safe Torque Off</p>
<p>There may be unexpected motor movements if the Safe Torque Off (STO) function is active. For instance, the motor can coast down to a standstill or a hanging load may accelerate the motor. Unexpected movements can lead to damage to property, risk to persons, severe injury and death.</p>
<ul style="list-style-type: none"> • Take account of the way the SS1-t function works when you perform risk assessments of the machine or system. • Prevent movements of the motor, for example by using a holding brake.

SS1 is enabled in the function selection.

Description of function

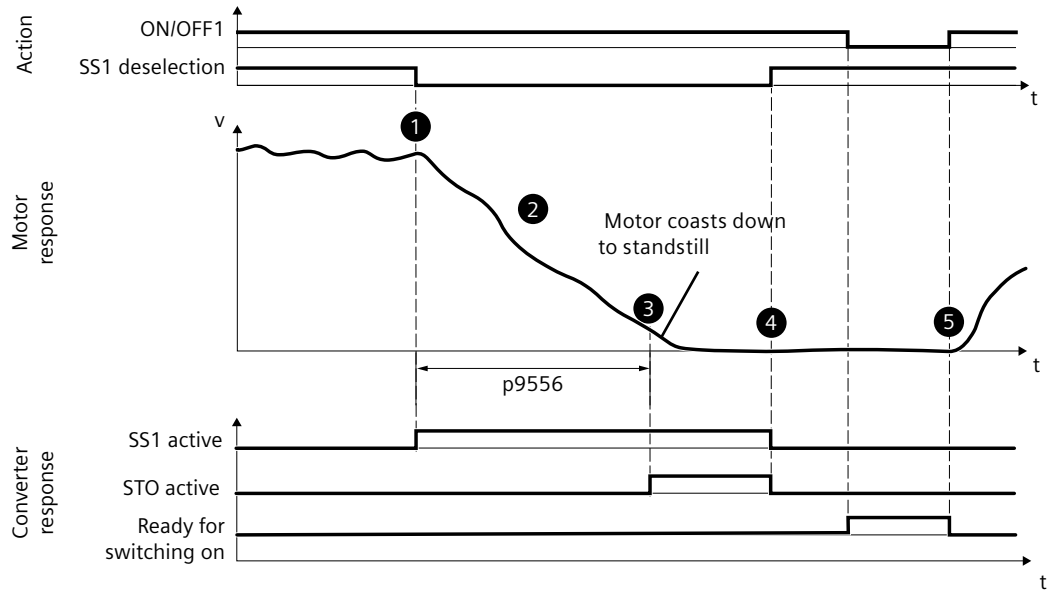


Figure 5-4 Flow diagram Safe Stop 1 with time control (SS1-t)

Action		Motor/converter response
①	Selection of SS1	<ul style="list-style-type: none"> The converter detects selection of SS1 and signals the status "SS1 active" (r9722.1). The converter starts the transition time SS1 to STO (p9556). The converter initiates braking along the OFF3 ramp.
②		<ul style="list-style-type: none"> The converter brakes the motor along the OFF3 ramp. Braking along the OFF3 ramp is not monitored.
③		<ul style="list-style-type: none"> The transition time from SS1 to STO (p9556) elapses. The converter activates STO and signals the status "STO active" (r9722.0) and the status "SS1 active". STO interrupts the torque-generating supply of energy to the motor and prevents the motor from restarting. The motor coasts down to a standstill.
④	Deselection of SS1	<ul style="list-style-type: none"> The converter detects deselection of SS1. The converter deactivates STO.
⑤	Signal change at ON/OFF1 from 1 to 0	<ul style="list-style-type: none"> The converter is ready to start again.
⑥	Signal change at ON/OFF1 from 0 to 1	<ul style="list-style-type: none"> The motor starts again.

5.5.2.2 Safe Stop 1 with acceleration monitoring (SS1-a)

Overview

SS1-a with Safe Acceleration Monitor (SAM) monitors whether or not the motor inadmissibly accelerates when braking. After a defined time interval has elapsed or the speed falls below a defined shutdown speed, Safe Torque Off (STO) becomes active.

Requirement

SS1 is enabled in the function selection.

Description of function

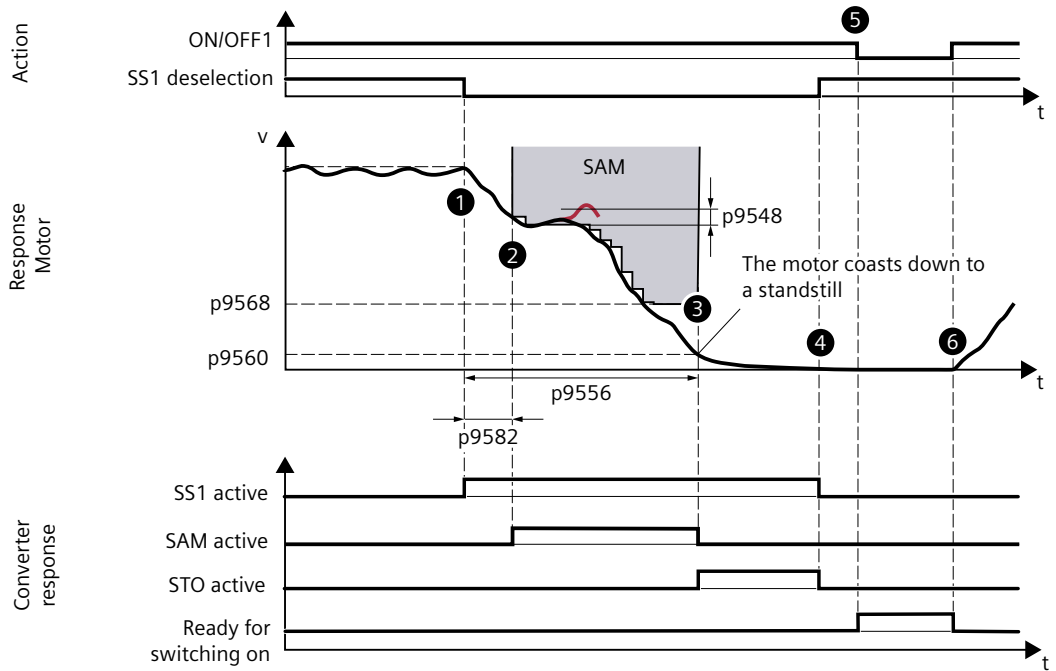


Figure 5-5 Flow diagram Safe Stop 1 with acceleration monitoring (SS1-a)

Action	Motor/converter response
① Selection of SS1	<ul style="list-style-type: none"> The converter detects selection of SS1 and signals the status "SS1 active" (r9722.1). The converter starts the transition time SS1 to STO (p9556) and the SAM delay time (p9582). The converter brakes the motor along the OFF3 ramp.

②		<ul style="list-style-type: none"> • The SAM delay time elapses. With SAM, the converter monitors whether the motor impermissibly accelerates. • The SAM limit value follows the falling motor speed: The converter reduces the SAM monitoring speed in steps when the absolute value of the motor speed is less than the previous SAM monitoring speed. It is not possible to increase the SAM monitoring speed while braking. • If the motor speed exceeds the SAM monitoring speed by more than the speed tolerance (p9548), then the converter signals a fault and activates STO. • If the motor speed reaches the SAM limit value (p9568), then the converter limits the value for the SAM monitoring to p9568. • As long as the speed decreases, the converter continuously adds the configurable tolerance p9548 to the current speed and the monitoring of the speed adjusts accordingly. If the speed temporarily increases, the monitoring threshold remains at the last value.
③		<ul style="list-style-type: none"> • SAM ends when the motor speed falls below the STO shutdown speed (p9560), or the SS1 to STO (p9556) transition time expires. STO is then activated. • The converter detects selection of STO and signals the status "STO active" (r9722.0). SS1 remains active. • STO interrupts the torque-generating supply of energy to the motor and prevents the motor from unexpectedly restarting. • The motor coasts down to a standstill.
④	Deselection of SS1	<ul style="list-style-type: none"> • The converter detects deselection of SS1. STO is deactivated simultaneously.
⑤	Signal change at ON/OFF1 from 1 to 0	<ul style="list-style-type: none"> • The converter is ready to start again.
⑥	Signal change at ON/OFF1 from 0 to 1	<ul style="list-style-type: none"> • The motor starts again.

5.5.2.3 Safe Stop 1 with braking ramp monitoring (SS1-r)

Overview

With SS1-r, while braking, the converter monitors whether the speed of the motor remains below a defined ramp using the safe brake ramp monitoring (SBR).

Requirement

SS1 is enabled in the function selection.

Description of function

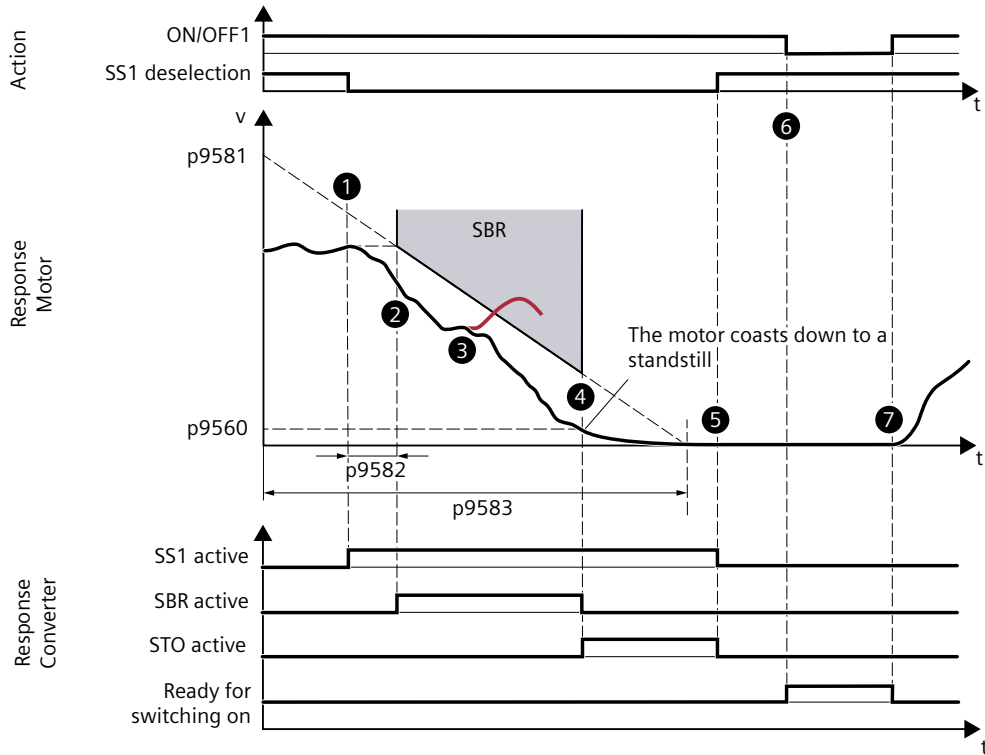


Figure 5-6 Flow diagram Safe Stop 1 with braking ramp monitoring (SS1-r)

Action		Motor/converter response
①	Selection of SS1	<ul style="list-style-type: none"> The converter detects selection of SS1 and signals the status "SS1 active" (r9722.1). The converter brakes the motor along the OFF3 ramp. The converter starts the SBR delay time (p9582).
②		<ul style="list-style-type: none"> The SBR delay time elapses. The converter starts the Safe Brake Ramp SBR.
③		<ul style="list-style-type: none"> The converter monitors whether the motor exceeds the set safe brake ramp when braking. If the motor speed fails to follow the braking ramp, the converter signals a fault and activates STO.
④		<ul style="list-style-type: none"> SBR ends as soon as the actual speed value is below the STO switch-off speed (p9560). The converter detects selection of STO and signals the status "STO active" (r9722.0). SS1 remains active. STO interrupts the torque-generating supply of energy to the motor and prevents the motor from unexpectedly restarting. The motor coasts down to a standstill.
⑤	Deselection of SS1	<ul style="list-style-type: none"> The converter detects deselection of SS1. STO is deactivated simultaneously.

⑥	Signal change at ON/OFF1 from 1 to 0	<ul style="list-style-type: none"> The converter is ready to start again.
⑦	Signal change at ON/OFF1 from 0 to 1	<ul style="list-style-type: none"> The motor starts again.

5.6 Safe Brake Management

5.6.1 Safe Brake Control (SBC)

Overview

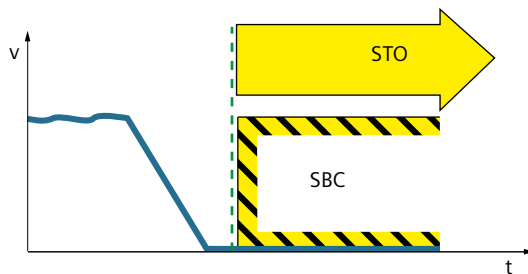


Figure 5-7 Overview SBC


Safe Brake Control (SBC) is used to safely control a holding brake integrated in the motor. The holding brake operates according to the closed-circuit principle.

SBC cannot be selected as an autonomous function: SBC is activated immediately when STO is selected.

For SBC, the converter assumes a controlling function, and ensures the following response:

- The converter interrupts the brake current if it detects a fault or failure of the brake.
- The brake closes and a safe state is reached.

Requirement

 WARNING
<p>Unexpected movement due to a defective, worn or soiled holding brake</p> <p>SBC does not detect mechanical defects, wear or soiling of the holding brake. SBC only detects a broken cable or short-circuit in the brake winding when the holding brake is opened. Undetected defects, wear or soiling can trigger unexpected movements. Unexpected motor movements can result in severe injury or death.</p> <ul style="list-style-type: none"> • Test the function of the holding brake regularly. • Replace a defective, worn or soiled holding brake.

STO/SS1 and SBC are enabled in the function selection.

Description of function

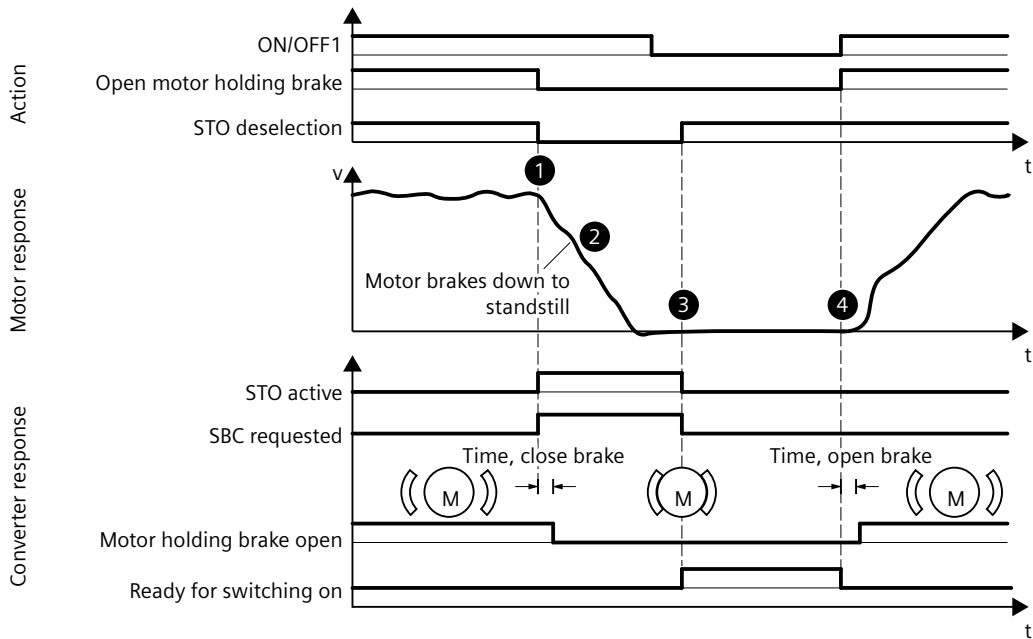


Figure 5-8 Flow diagram SBC

Action		Motor/converter response
①	Selection of STO	<ul style="list-style-type: none"> The converter detects selection of STO and signals the status "STO active" (r9722.0). The converter interrupts the torque-generating energy feed to the motor. The "switching on inhibited" status prevents the motor from restarting automatically. The converter requests SBC at the same time as STO. The holding brake is safely controlled using SBC. The converter immediately closes the holding brake.
②		<ul style="list-style-type: none"> The motor brakes down to standstill. With SBC, the converter ensures that the brake current is interrupted and the holding brake remains closed.
③	Deselection of STO	<ul style="list-style-type: none"> The converter detects deselection of STO. SBC is also deactivated when STO is deselected. The holding brake remains (unsafely) closed, until the standard program issues a command to open the brake.
④	Command to open the brake	<ul style="list-style-type: none"> The converter opens the brake taking into account the brake opening time.

Example

SBC is suitable for applications where the converter must maintain a safe position, even when the motor is in a no-current condition.

SBC prevents that hanging or pulling loads sag. Hanging or pulling loads include e.g. hoisting gear, elevators and windings. External logic or switching elements not required, as the functionality is integrated in the converter.

5.7 Motion monitoring

5.7.1 Safely-Limited Speed (SLS)

Overview

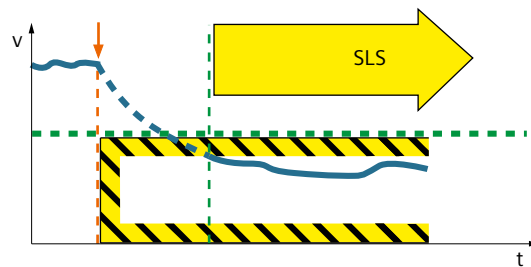


Figure 5-9 Overview SLS

With Safely-Limited Speed (SLS), the converter monitors the motor speed. The converter executes the set stop response if the motor exceeds the permitted speed.

Description of function

SLS can be used in various ways:

- SLS with 4 independent speed levels that can be toggled between during the runtime
- SLS with a variable speed limit value

SLS is controlled via PROFIsafe.

On selection of SLS or switchover to a lower SLS level, the SLS delay time (p9551) starts. The active SLS level remains active during the delay time. The selected SLS level only becomes effective afterwards.

Changing the variable speed limit value via PROFIsafe should also be considered as SLS level switchover.

Example

SLS is suitable for machines where hazards due to excessive speeds are possible. In the following work steps, the use of SLS is particularly useful for direct contact between man and machine:

- During commissioning
- During setup
- For maintenance work

Table 5-5 Application examples SLS

Example	Solution
Setup mode: The machine operator must enter the dangerous area of a machine and manually introduce material into a machine part.	With SLS, the converter monitors the speed of the machine component.
To protect the drill chuck from destruction, a turning machine must not exceed a certain maximum speed of the machine part.	

5.7.1.1 SLS with one limit value only

Overview

Safely-Limited Speed (SLS) monitors the motor speed. If the motor speed violates the SLS limit value, the converter initiates the set stop response.

Description of function

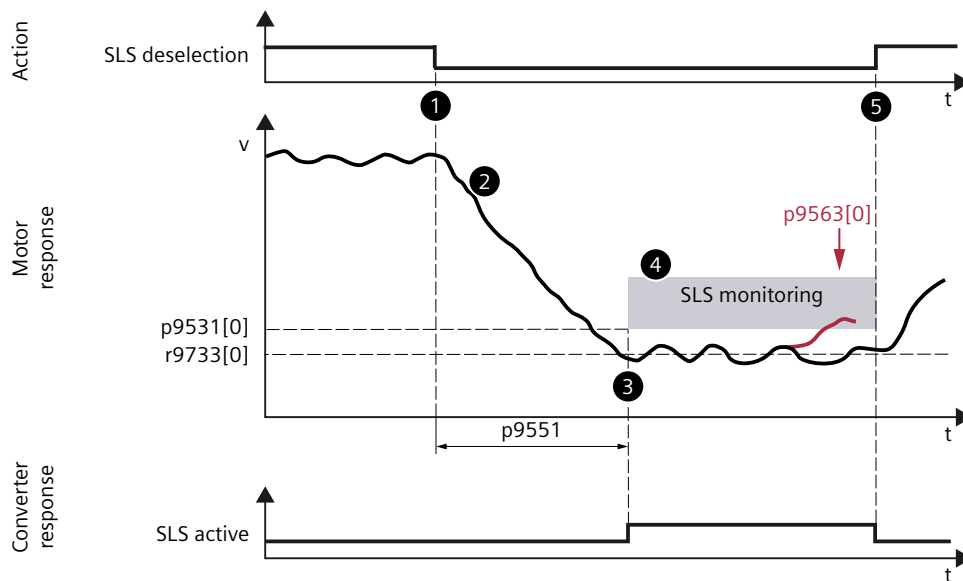


Figure 5-10 Flow diagram SLS with a speed level

Action		Motor/converter response
①	Selection of SLS	<ul style="list-style-type: none"> The converter detects the selection of SLS. The converter starts the SLS delay time (p9551).
②		<ul style="list-style-type: none"> The motor follows the external setpoint and brakes. The motor speed must remain below the SLS limit value until the SLS delay time has elapsed.
③		<ul style="list-style-type: none"> Monitoring of the SLS limit value p9531[0] is effective once the SLS delay time (p9551) has elapsed. The converter reports the status "SLS active" (r9722.4).
④		<ul style="list-style-type: none"> If the SLS limit value is violated, the converter executes the set stop response p9563[0].
⑤	Deselection of SLS	<ul style="list-style-type: none"> The converter detects deselection of SLS. The motor follows the external setpoint and accelerates, e.g. following the change to an "Automatic" mode.

5.7.1.2 SLS with multiple limit values

Overview

Safely-Limited Speed (SLS) has 4 independent SLS limit values that can be switched between during operation. If the motor speed violates the currently selected SLS limit value, the converter initiates a set stop response.

Requirement

SLS is enabled in the function selection.

The SLS limit values are parameterized as follows:

SLS1 limit value < SLS2 limit value < ... < SLS3 limit value.

WARNING

Unexpectedly high speed due to incorrect parameterization

If you parameterize the SLS limit values incorrectly, the motor can accelerate beyond the selected SLS limit value. Unexpectedly high speeds can result in serious injury and death.

- Parameterize the SLS limit values as specified.

Description of function

This figure illustrates the change from a higher SLS limit value to a lower SLS limit value. For the change from a lower SLS limit value to a higher SLS limit value, there is no SLS delay time. The new SLS limit value is active immediately.

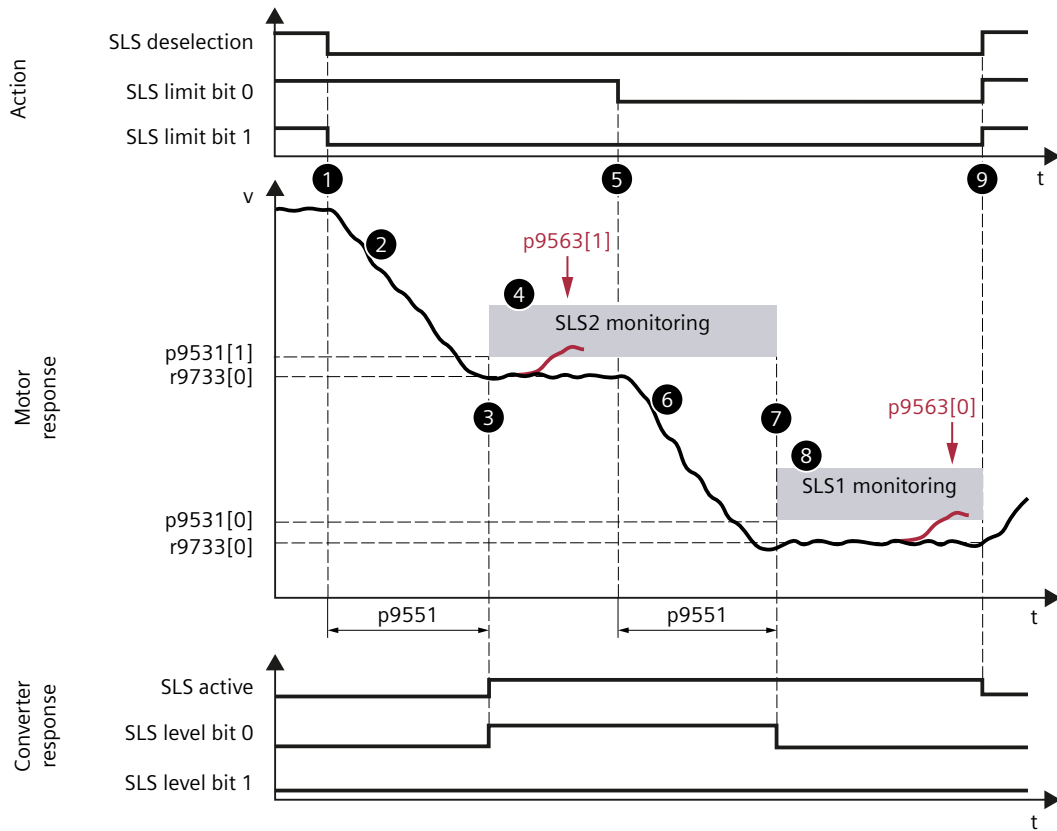


Figure 5-11 SLS with change between two SLS limit values

Action		Motor/converter response
①	Selection of SLS	<ul style="list-style-type: none"> The converter detects when the SLS2 limit value is selected. The converter starts the SLS delay time (p9551).
②		<ul style="list-style-type: none"> The motor follows the external setpoint and brakes. The actual speed must remain below the SLS2 limit value until the SLS delay time has elapsed.
③		<ul style="list-style-type: none"> Monitoring of the SLS2 limit value (p9531[1]) is effective once the SLS delay time (p9551) has elapsed. The converter signals the status "SLS active" (r9722.4) and the active SLS level (r9722.9 = 1, r9722.10 = 0).
④		<ul style="list-style-type: none"> If the motor speed violates the SLS2 limit value, the converter initiates the set stop response p9563[1].
⑤	Change to SLS1 limit value	<ul style="list-style-type: none"> The converter detects when the SLS1 limit value is selected. The converter starts the SLS delay time (p9551). The SLS2 limit value remains while the SLS delay time is active.

⑥		<ul style="list-style-type: none"> The motor follows the external setpoint and brakes. The actual speed must remain below the SLS1 limit value until the SLS delay time has elapsed.
⑦		<ul style="list-style-type: none"> Monitoring of the SLS1 limit value (p9531[0]) is effective once the SLS delay time (p9551) has elapsed. The converter signals the active SLS level (r9722.9 = 0, r9722.10 = 0).
⑧		<ul style="list-style-type: none"> If the motor speed violates the SLS1 limit value, the converter initiates the set stop response p9563[0].
⑨	Deselection of SLS	<ul style="list-style-type: none"> The converter detects deselection of SLS. The motor follows the external setpoint and accelerates, e.g. following the change to an "Automatic" mode.

5.7.1.3 SLS with variable speed limit value

Overview

The SLS1 limit value is scalable during operation with the PROFIsafe telegram 901.

Requirement

The SLS1 limit value is selected with the PROFIsafe telegram.

p9604.9 is set: Transfer of the SLS limit value via PROFIsafe is enabled.

Description of function

The signal S_SLS_LIMIT_A in PROFIsafe telegram 901 scales the SLS1 limit value.

The S_SLS_LIMIT_A scaling has the value range 1 ... 32767.

The scaled SLS1 limit value is calculated as follows: Scaled SLS1 limit value = $S_SLS_LIMIT_A / 32767 \cdot p9531[0]$

Before the higher-level control (F-CPU) selects an SLS limit value or changes the SLS1 limit value, the control must reduce the motor speed according to the changed SLS limit value.

With the scaled SLS1 limit value, too, the SLS2, SLS3 and SLS4 limit values can be selected with r9720.9 and r9720.10.

An invalid value in S_SLS_LIMIT_A results in the stop response parameterized in p9563[0].

5.7.1.4 Limitation of the speed setpoint for SLS

Overview

For Safely-Limited Speed (SLS), it is useful to limit the speed setpoint with the higher-level control.

Description of function

The higher-level control receives the value for the required limitation of the speed setpoint from the Safety Info Channel (SIC) in telegram 700.

With SLS active, the converter sends the required setpoint limit r9733 in the S_V_LIMIT_B signal of telegram 700.

The converter calculates r9733 as follows:

- $r9733[0] = p9531[x] \cdot p9533$ (converted from the load to the motor side)
- $r9733[1] = -p9531[x] \cdot p9533$ (converted from the load to the motor side)
[x] = selected SLS limit value

p9533 is the weighting factor to determine the setpoint limit from the selected actual speed limit in percent.

Conversion factor from the motor to the load side:

- Motor type = rotary and axis type = linear: $p9522/(p9521 \cdot p9520)$
- Otherwise: $p9522/p9521$

5.7.2 Safe Speed Monitor (SSM)

Overview

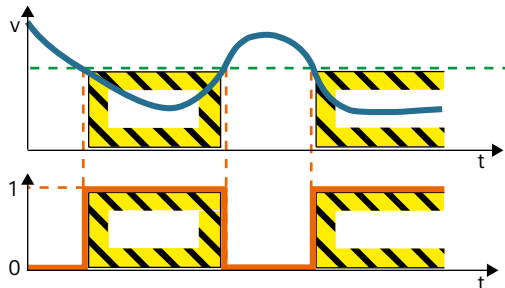


Figure 5-12 Overview SSM

Safe Speed Monitor (SSM) safely detects when the speed falls below a speed limit in both directions of motion. SSM is a pure signaling function. The converter provides a safety-related signal for further processing.

If the speed of the motor exceeds the SSM limit value, no stop response is initiated, contrary to other Safety Integrated Functions.

Requirement

SSM is enabled in the function selection.

Description of function

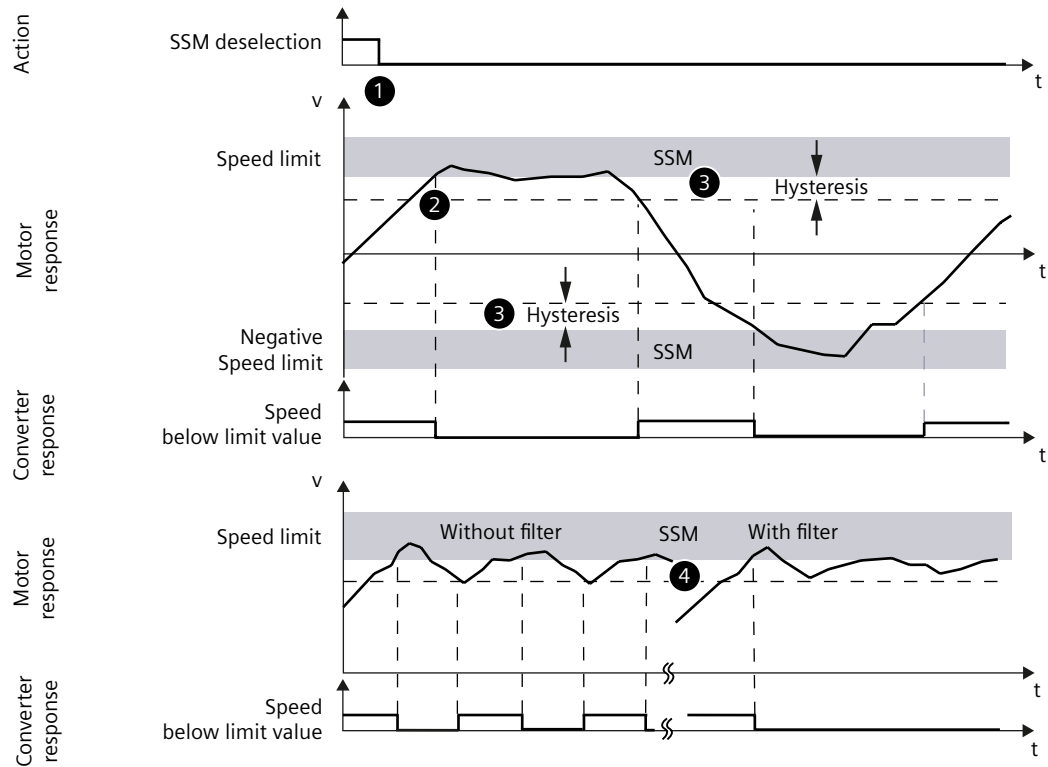


Figure 5-13 Representation of SSM

Action		Motor/converter response
①	Selection of SSM	<ul style="list-style-type: none"> The converter detects when SSM is selected. SSM checks the speed actual value.
②		<ul style="list-style-type: none"> If the speed of the motor falls below the speed limit, then signal "Speed below limit value" (p9722.15 = 1) is set. If the speed is greater than the limit, the "Speed below limit value" signal is not set. The speed limit (p9546) is effective in both directions of motion.
③		<ul style="list-style-type: none"> Speed hysteresis (p9547) stabilizes signal "Speed below limit value". As a result of the hysteresis, in the vicinity of the monitoring threshold, the "Speed below limit value" signal does not jump between values "0" and "1". When "hysteresis and filtering" is activated with output signal SSM, a time-delayed SSM feedback signal occurs for the axes. This is a property of the filtering.
④		<ul style="list-style-type: none"> The signal filter smooths the speed measured by the converter. The filter is suitable for monitoring speeds that lie just below the speed limit. The response can be set using filter time (p9545).

Example

SSM is suitable for enabling access to the machine by way of safe SSM feedback. For example, it is possible to unlock safety doors only when the speed falls below critical levels.

5.7.3 Safe Direction (SDI)

Overview

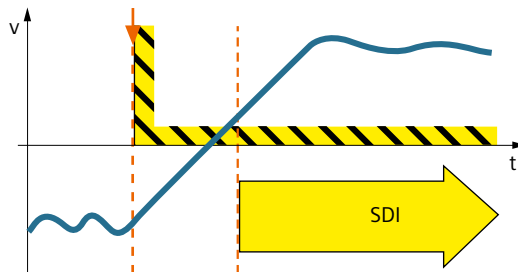


Figure 5-14 Overview SDI

With Safe Direction (SDI), the converter monitors the direction of motion of the motor. If the motor moves in the inhibited direction, then the converter stops the motor with an SDI-specific stop response.

The following SDI variants are available, depending on the direction of motion:

- SDI positive (SDI+)
- SDI negative (SDI-)

Requirement

SDI is enabled in the function selection.

Description of function

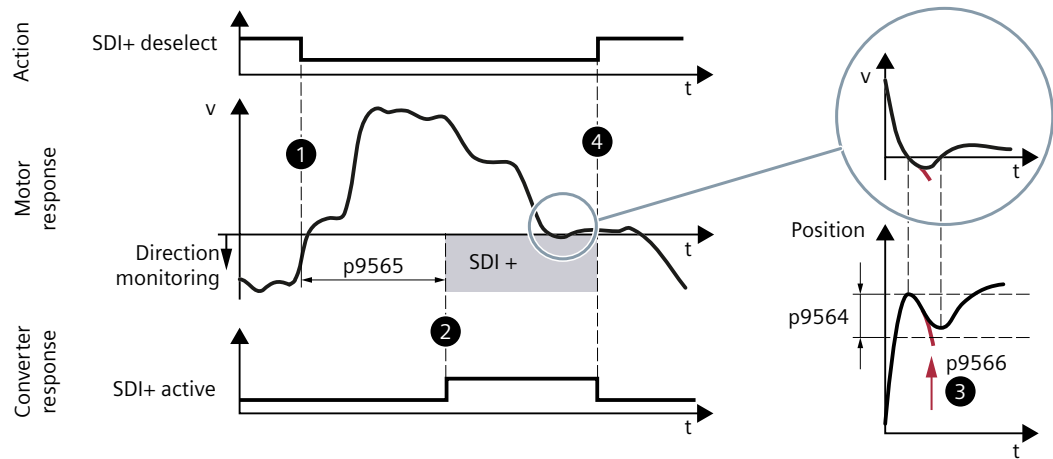


Figure 5-15 SDI+ with tolerance violation and direction of movement monitoring

Action	Motor/converter response
① Selection of SDI+	<ul style="list-style-type: none"> The converter detects the selection of SDI+. The converter starts the SDI delay time (p9565).
②	<ul style="list-style-type: none"> After the SDI delay time has expired, the converter monitors the direction of motion of the motor. The converter reports the status "SDI positive active" (r9722.12). The converter continuously calculates the position of the motor. As soon as the motor moves in the inhibited direction, the converter stores the current position and monitors the discrepancy between the current position and the stored position.
③	<ul style="list-style-type: none"> If the discrepancy between the current position and the stored position is greater than the SDI tolerance p9564, the converter brakes the motor with the set stop response (p9566) and outputs a safety message¹⁾.
④ Deselection of SDI+	<ul style="list-style-type: none"> The converter detects deselection of SDI+. The converter stops monitoring the motion direction. The motor can now be moved in both directions.

¹⁾ The following steps are required to acknowledge the safety message:
 - Deselect and reselect SDI
 - Safe acknowledgement

Note

No detection of a change in direction using p1821

If the direction of motion is reversed using p1821, then safe monitoring is still possible. However, in this case, the setpoint limitation r9733 is calculated with the wrong direction of rotation. p9539 can be used to set the direction of motion for safety monitoring.

5.7.3.1 Limitation of the speed setpoint for SDI

Overview

For Safe Direction (SDI) it makes sense to limit the speed setpoint with the higher-level control.

Description of function

The higher-level control receives the value for the required limitation of the speed setpoint from the Safety Info Channel (SIC) in telegram 700.

With SDI active, the converter sends the required setpoint limit r9733 in the S_V_LIMIT_B signal of telegram 700.

The converter calculates r9733 as follows:

- For SDI negative (SDI-): r9733[0] = 0
- For SDI positive (SDI+): r9733[1] = 0

5.8 Safety Integrated commissioning and configuration

Overview

The following commissioning tools are available for commissioning and configuring the converter:

- Web server integrated in the converter as web application
- Startdrive in the TIA Portal

Description of function

Commissioning Safety Integrated involves the steps:

- Function selection
- Parameter assignment
- Control
- Completing commissioning with acceptance test

Once Safety Integrated has been commissioned, the converter adopts the modified commissioning settings. The converter is then automatically restarted.

Commissioning of Safety Integrated has been completed after the restart.

Specific information about the tools is provided in the Commissioning chapters.

5.8.1 Selection of the Safety Integrated Functions

Overview


In the function selection, the available Safety Integrated Functions are available depending on the control type.

The function selection offers the following setting options:

- Selection of each individual function
- Axis type





The converter must be restarted after making changes to the configuration.

Description of function

Safety Integrated Functions requiring a license are marked in the function selection using the  symbol. You require the Safety Extended license for the corresponding functions. Safety Integrated is available in the Trial License mode for test purposes.

The functions available for selection depend on the selected control type:

Table 5-6 Safety Integrated Functions for every control type (p9603)

Control type	STO	SS1 ¹⁾ 	SBC	SLS 	SSM 	SDI 
PROFIsafe	x	x	x	x	x	x
PROFIsafe and EMERGENCY STOP via terminals ²⁾	x	x	x	x	x	x
Terminals ²⁾	x	x	x	-	-	-

¹⁾ SS1-t does not require a license. SS1-a and SS1-r require a license.

²⁾ SLS, SSM, SDI cannot be controlled via terminals. When switching over to this control type, the system automatically deactivates these functions.

Safety Integrated Functions are enabled with default settings after function selection (p9604). The default settings can be parameterized.

The stop responses STO and SS1 shown in the function selection must always be parameterized because the stop responses stop the motor in the case of a fault and for a limit value violation. If the STO and SS1 functions are also to be controlled via PROFIsafe and/or F-DI, then STO and SS1 must additionally be enabled in the function selection.

The function selection displays the actual value acquisition cycle and the monitoring cycle. The actual value acquisition cycle (p9511) and the monitoring cycle (p9500) cannot be changed.

Selecting the axis type (p9502) influences the display in the function view for the actual value acquisition/mechanical system and changes the units.

5.8.2 Safety Integrated parameterization

Overview

All of the Safety Integrated Functions enabled in the function selected are listed in the parameterization and can be changed. If a monitoring function is enabled, then "Actual value acquisition/mechanical system" is also displayed.

For Safety Integrated Functions that have been enabled, the function view shows the interconnection diagram and the setting options.

Description of function

The following settings can be edited in the function view of the parameterization:

Table 5-7 Possible settings the Safety Integrated Functions

Function	Possible settings
Safe Torque Off (STO)	Settings not required
Safe Brake Control (SBC)	SBC is always used together with STO or SS1
Safe Stop 1 (SS1)	<ul style="list-style-type: none"> • Monitoring mode: <ul style="list-style-type: none"> – SS1-t: time-controlled – SS1-a: with acceleration monitoring (SAM) – SS1-r: with braking ramp monitoring (SBR) • Detail settings for SAM or SBR • Delay time for SS1 • Optional with SAM active: STO shutdown speed
Safely-Limited Speed (SLS)	<ul style="list-style-type: none"> • Delay time for SLS • Speed limits for max. 4 levels • Stop responses (STO or SS1) for each level • Activate/inhibit PROFIsafe override für SLS of level 1 With this, you transfer variable SLS limits via PROFIsafe to the converter.
Safe Speed Monitor (SSM)	<ul style="list-style-type: none"> • Speed hysteresis • Speed limit • Filter time
Safe Direction (SDI)	<ul style="list-style-type: none"> • Delay time for SDI • Monitoring tolerance • Stop response (STO or SS1)

The following settings can be changed in the function view of the actual value acquisition/mechanical system:

Table 5-8 Explanation of actual value acquisition/mechanical system - can be changed

Possible settings	Explanation
Load revolutions (p9521) and encoder revolutions (p9522)	The two setting options are required when using a gear ratio. A gear ratio is the ratio of encoder revolutions to revolutions of the drive shaft (load revolutions).
Reverse direction of the load (p9539)	This setting is required if the gearbox used is associated with a "Reverse direction".
Leadscrew pitch (p9520) for type "Linear axis"	The transmission ratio between the encoder and load in mm/revolution (linear axis with rotary encoder) is set using the leadscrew pitch.

5.8.3 Safety Integrated control

Overview

The Safety Integrated Functions can be controlled centrally via PROFIsafe or locally via terminals.

Description of function

The fundamental control type for Safety Integrated Functions is "via PROFIsafe".

The following options are also supported:

- When required, a local EMERGENCY STOP concept as well as PROFIsafe: Control of STO or SS1 via terminals (F-DI 0)
- For applications without PROFIsafe: subsequent control of EMERGENCY STOP via terminals (F-DI 0)

5.8.3.1 PROFIsafe configuration

Overview

After PROFIsafe has been configured, Safety Integrated Functions can be selected and deselected, and safety faults can be safely acknowledged using PROFIsafe telegrams.

Description of function

The PROFIsafe configuration encompasses the following settings:

Table 5-9 PROFIsafe settings

Settings	Explanation
PROFIsafe telegram number (p9611)	<p>Selection of the PROFIsafe telegram</p> <p>PROFIsafe telegrams can be used in various ways:</p> <ul style="list-style-type: none"> Telegram 30: Control of the functions Telegram 901: Control of the functions + transfer of the F-DI status via PROFIsafe (c10050) + transfer of the SLS limit value via PROFIsafe (p9064.9) <p>The Safety Info Channel in the supplementary telegram 700 is available for non-safety-related diagnostics of the Safety Integrated Functions on the higher-level controller.</p>
F-source address (p9613) F-destination address (9610) F-monitoring time (p9614)	<p>When using PROFIsafe address type 1, the uniqueness of the PROFIsafe address is only guaranteed as a result of the F-destination address.</p> <p>When using PROFIsafe address type 2, the uniqueness of the PROFIsafe address is guaranteed as a result of the combination of F-source address and F-destination address.</p> <p>The PROFIsafe address must be unique throughout the network and the CPU. The PROFIsafe address is unique if these conditions are satisfied:</p> <ul style="list-style-type: none"> The F-source address of the F-CPU is unique throughout the network. The F-destination address of the converter is unique throughout the complete CPU. <p>Within the monitoring time, a valid and current PROFIsafe telegram must be received from the F-CPU. This therefore secures the following:</p> <ul style="list-style-type: none"> Detection of faults and failures Initiation of responses, which keep the F-system in a safe state or transition it into a safe state
Response to a PROFIsafe failure (p9612)	Selection options for communication failure between STO and SS1

More information

More information about telegrams and how to assign control and status words is provided in the Appendix under Communication telegrams (Page 869).

5.8.3.2 Transferring the F-DI status via PROFIsafe

Overview

The configuration of the transfer of the F-DI status defines the input mode of an F-DI, and activates the transfer of an F-DI state to the F-control.

Requirement

A PROFIsafe telegram with transfer of the F-DI status is set.

Description of function

The configuration of the transfer of the F-DI status includes the following settings:

- p10040 defines whether the F-DI should operate as NC contact/NC contact (default setting) or as NC contact/NO contact.
- c10050 contains the F-DI state to be transferred to the F-control.

5.8.3.3 EMERGENCY STOP via terminals of the failsafe digital input (F-DI)

Overview

After the configuration, a stop function for EMERGENCY STOP via terminals is defined.

Description of function

EMERGENCY STOP is permanently assigned to F-DI 0. The following functions can be selected:

- Safe Torque Off (STO)
- Safe Stop 1 (SS1)

5.8.3.4 F-DI configuration

Overview

The F-DI configuration includes the following steps:

- Assignment of Safety Integrated Functions to a failsafe digital input (F-DI)
- Defining the input modes of an F-DI

Description of function

The F-DI configuration allows the assignment of Safety Integrated Functions to the F-DI. After configuring the F-DI, the interconnected Safety Integrated Function can be selected and deselected.

In the F-DI configuration, it is also possible to set the input modes of an F-DI (p10040). The setting defines whether the F-DI should operate as NC contact/NC contact (default setting) or as NC contact/NO contact.

At the F-DI, the following components can be used:

- Non-self-monitoring sensors (e.g. EMERGENCY STOP button)
- Self-monitoring components (OSSD)

5.8.3.5 Discrepancy time

Overview

During the discrepancy time, the converter tolerates inconsistent input signals.

Description of function

The converter monitors at the two input terminals of the F-DI whether the input signals attain the same logical signal state within the discrepancy time. With electromechanical sensors, e.g. EMERGENCY STOP buttons or position switches, the two sensor contacts never switch at exactly the same time. The input signals of the F-DI are inconsistent (discrepancy).

During the discrepancy time, the converter tolerates inconsistent input signals. The discrepancy time does not extend the converter response time.

A permanent discrepancy signifies an error in the F-DI interconnection. In this case, the converter responds with a safety message


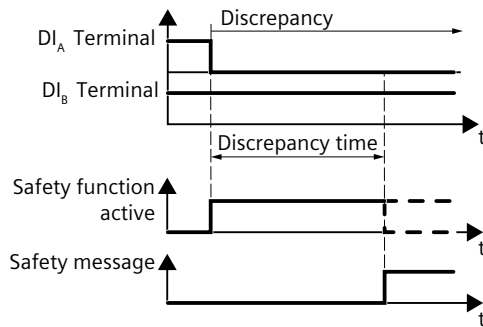


Figure 5-16 Permanent discrepancy

The discrepancy time must be set so that it is less than the smallest expected switching interval of the signal at the F-DI, see the illustration below.

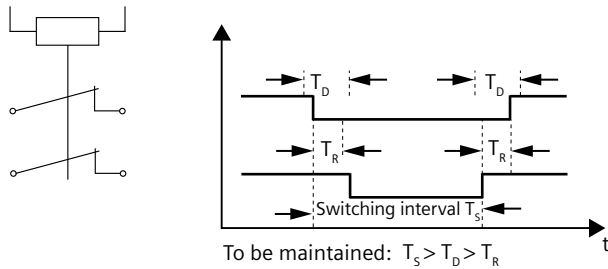

- T_S Switching interval
- T_D Discrepancy time
- T_R Response time


Figure 5-17 Discrepancy time when a relay is switched

5.8.3.6 Input filter

Overview

The input filter suppresses unwanted brief signal changes at a fail-safe digital input (F-DI).

Requirement

 WARNING
<p>Unexpected movements due to long connecting cables</p> <p>If a cable at a fail-safe digital input is too long, the fail-safe digital input might not reliably detect a short-circuit of the connecting cable to 24 V or to ground. An undetected short-circuit may mean that the connected sensor is no longer working. This may impair the functional safety of the machine or the system and therefore endanger people or lead to material damage.</p> <ul style="list-style-type: none"> • Only connect cables with a length of ≤ 30 m to a fail-safe digital input.

Description of function

If a fail-safe digital input (F-DI) is connected to an electromechanical sensor, for example, then contact bounce leads to brief signal changes. In this case, an immediate response of the converter to signal changes is not desirable. Too many signal changes within a specific time result in a converter fault.

During the filter time (p10017) of the input filter, the converter ignores signal changes.

The input filter lengthens the response time of the Safety Integrated Function connected to the F-DI.

5.8.3.7 Self-test of the failsafe digital input (F-DI)

Overview

To detect faults at an early stage, the converter continuously tests its shutdown paths, functions and interfaces.

Various modes are available to test a failsafe digital input (F-DI):

- Self-test with internal test signals
- Self-test using entered dark pulses
- Self-test using externally entered dark pulses

Description of function

The self-test checks with test signals at the input terminals of the F-DI whether the F-DI can be switched to the failsafe state (to "low"). If the converter does not detect a feedback signal, then it triggers a fault response.

The debounce time (p10017) prevents a converter response to the dark pulse. If the debounce time is shorter than the test signal or dark pulse length, then the converter interprets the dark pulse as a switching operation.

Self-test with internal test signals

The converter internally generates test signals for the input circuit of the F-DI (p10041 = 0).

The test signal length and the test cycle cannot be changed.

The self-test using internal test signals meets the following requirements:

- Safety Integrity Level (SIL) 3 to IEC 61800-5-2
- Performance Level (PL) e to ISO 13849-1
- Category 3 to ISO 13849-1

Self-test using entered dark pulses

The converter provides the switchable voltage source VS+ at terminal block X130. VS+ generates dark pulses, to diagnose the control circuit, for example.

The self-test using specified dark pulses with VS+ (p10041 = 1) offers additional short-circuit detection between ground and 24 V.

The dark pulse length of the switchable power supply (p10018) can be parameterized. The test cycle has a fixed value of 5 seconds.

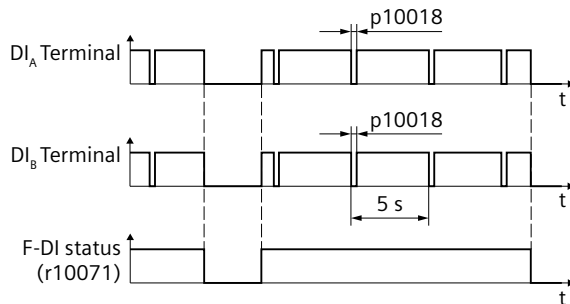


Figure 5-18 Dark pulses through switchable power supply

For the debounce time:

- $p10017 > \text{dark pulse length (p10018)} + 2 \text{ ms}$

The self-test using entered dark pulses meets the following requirements:

- Safety Integrity Level (SIL) 3 to IEC 61800-5-2
- Performance Level (PL) e to ISO 13849-1
- Category 4 to ISO 13849-1

Self-test using externally entered dark pulses

An electronic control, e.g. F-PLC, generates dark pulses at the input terminals of the F-DI (p10041 = 3).

The dark pulse length is determined by the control. The maximum wait time for dark pulses (p10019) can be parameterized.

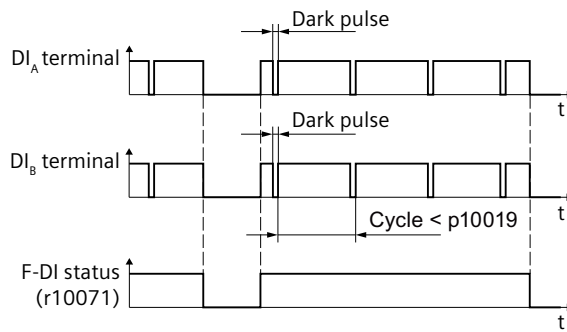


Figure 5-19 Dark pulses through control

For the debounce time:

- $p10017 > \text{dark pulse length (p10018)} + 2 \text{ ms}$
The test pulse length of the external control must be checked and the debounce time must be adapted.

The self-test using externally entered dark pulses meets the following requirements:

- Safety Integrity Level (SIL) 3 to IEC 61800-5-2
- Performance Level (PL) e to ISO 13849-1
- Category 4 to ISO 13849-1

5.8.4 Acceptance - completion of commissioning

5.8.4.1 Acceptance test requirements

Overview

The machine manufacturer is responsible in ensuring that the plant or machine functions perfectly. As a consequence, after commissioning, the machine manufacturer must check those functions which represent an increased risk of injury or material damage, or have them checked by specialist personnel. This acceptance or validation is specified in the European Machinery Directive and comprises 2 parts:

- **Acceptance test:** Check the safety-relevant functions and machine parts after commissioning.
- **Documentation:** Generate an "Acceptance report" that describes the test results.

ISO 13849-1 provides additional information relating to validation, for example. The acceptance test requirements (configuration check) for the safety functions of electric drives are based on IEC 61800-5-2.

Description of function

Acceptance test of the machine or plant

The acceptance test checks whether the safety-relevant functions in the plant or machine function correctly. The documentation of the components used in the Safety Integrated Functions can also provide information about the tests required. Testing the safety-relevant functions includes, e.g. the following:

- Is all safety equipment, such as protective door monitoring devices, light barriers or EMERGENCY STOP buttons, connected and ready for operation?
- Does the higher-level control respond as expected to the safety-relevant feedback signals of the drive?
- Do the drive settings match the configured safety-relevant function in the machine?

Acceptance test of the converter

The acceptance test of the converter is a part of the acceptance test of the entire machine or plant.

The acceptance test of the converter tests whether Safety Integrated Functions have been set to match the configured Safety Functions of the machine. The acceptance test documents the settings with which the real function fulfills the intended functionality.

Documentation

The documentation encompasses the following:

- Result of the acceptance tests
- Settings of the Safety Integrated Functions

This documentation must be countersigned.

Persons authorized to perform the acceptance test

Personnel from the machine manufacturer, who, on account of their technical qualifications and knowledge of the safety functions, are in a position to perform the acceptance test in the correct manner are authorized to perform the acceptance testing of the converter and the motor.

5.8.4.2 Acceptance test for the converter

Overview

An acceptance test must be performed in the following cases:

- After commissioning
- After importing a new firmware version into the converter
- After changing the parameterization
- After a component is replaced

Description of function

The converter acceptance test comprises the following steps:

- Documentation
 - Supplement/change the hardware data
 - Supplement/change the software data (specify version)
- Function test of the Safety Integrated Functions:
Each function that is used and every configured control must be individually tested. Acceptance tests should be performed at the maximum speeds and acceleration rates that are possible for the machine. The maximum braking distances and braking times that can be expected can be determined based on the maximum speeds and acceleration rates.

5.8.4.3 Examples of acceptance tests

Overview

The following examples show the principal steps for performing an acceptance test for a Safety Integrated Function. The examples are not suitable for every converter setting.

The Startdrive commissioning tool offers functions for the converter acceptance test (Safety Acceptance Test), as well as the system interfaces (Safety Activation Test).

Requirement

The converter is ready for operation.

The converter signals neither faults nor alarms of the Safety Integrated Functions (r0945[0...7], r2122[0...7], r60047[0...7]).

The function to be tested is not active.

Description of function

The acceptance test for the individual functions encompasses the steps:

- Switch on the motor
- Selection of the Safety Integrated Function
- Deselection of the Safety Integrated Function

Examples

STO acceptance test

- Switch on the motor:
Enter speed setpoints $\neq 0$ + switch on the motor + test whether the motor runs as required
- Selection of STO while the motor is running
Test whether each configured control, e.g. via F-DI and via PROFIsafe, functions
Test whether the following points apply:
 - If a mechanical brake is not available, the motor coasts to a standstill.
A mechanical brake brakes the motor and holds it to ensure that it remains at a standstill.
 - The motor signals neither faults nor alarms of the Safety Integrated Functions (r0945[0...7], r2122[0...7], r60047[0...7]).
 - The converter signals: "STO is active" (r9722.0 = 1).
- Deselection of STO
Test whether the following points apply:
 - STO is not active (r9722.0 = 0).
 - The converter signals neither faults nor alarms of the Safety Integrated Functions (r0945[0...7], r2122[0...7], r60047[0...7]).
 - The motor runs as required.

SS1-t acceptance test

- Switch on the motor:
Enter speed setpoints $\neq 0$ + switch on the motor + test whether the motor runs as required
- Selection of SS1-t while the motor is running
Test whether each configured control, e.g. via F-DI and via PROFIsafe, functions
Test whether the following points apply:
 - The motor brakes on the OFF3 ramp.
 - The converter signals: "SS1 is active" (r9722.1 = 1).
 - STO becomes active after time p9556 elapses. The converter signals: "STO is active" (r9722.0 = 1).
- Deselection of SS1-t
Test whether the following points apply:
 - SS1 is not active (r9722.1 = 0).
 - The converter signals neither faults nor alarms of the Safety Integrated Functions (r0945[0...7], r2122[0...7], r60047[0...7]).
 - The motor runs as required.

SBC acceptance test

- Switch on the motor:
Enter speed setpoints $\neq 0$ + switch on the motor + test whether the motor runs as required + then enter a speed setpoint = 0
- Selection of STO or SS1 while the motor is switched on
Test whether the following point applies:
 - The converter signals: "SBC is active" ($r9722.0 = 1$ and $r0899.12 = 0$).
- Deselection of STO or SS1
Test whether the following points apply:
 - The converter signals: "SBC is not active" ($r9722.0 = 0$ and $r0899.12 = 1$).
 - The converter signals neither faults nor alarms of the Safety Integrated Functions ($r0945[0...7]$, $r2122[0...7]$, $r60047[0...7]$).

More information

More information is provided in the chapter on commissioning (Startdrive) under "Performing the acceptance test (Page 298)".

5.8.4.4 Test of brake output

Overview

To meet the requirements of the ISO 13849-1 and IEC 61800-5-2 standards in terms of timely fault detection, the converter must test its brake output regularly - at least once a year - for correct functioning.

Description of function

To test the brake output of the converter, the SBC (Safe Brake Control) function must be activated within a defined time interval. The time interval depends on the required Safety Integrity Level (SIL) and on the desired Performance Level (PL) category:

- SIL2 / PL d / Category 3: 1 year
- SIL3 / PL e / Category 3: 3 months
- SIL3 / PL e / Category 4: 1 day

A timer is available to test the brake output for the safe brake control using SBC. In the standard, this is preset to 2160 h \cong 3 months (p9659). The remaining time is shown in r9660. Message "Test brake output required" is output after the timer elapses. After the next time that the brake is either closed or opened, the message is withdrawn and the monitoring time is reset. In operation, the monitoring time is reset each time the brake is actuated.

5.8.4.5 Information about series acceptance

Overview

When the project is transferred to other machines (series commissioning) a reduced acceptance test of the Safety Integrated Functions is necessary.

Description of function

In series commissioning, the reduced acceptance test involves the following steps:


- Test of the EMERGENCY STOP function (STO or SS1) and the SBC function that is potentially used
- A general test of the actual value acquisition by switching on and operating briefly with traversing in both directions
- Only for motion monitoring functions - testing the safe actual value acquisition: Brief movement of the motor with the motion monitoring functions active (e.g. SLS) in both directions.
- Countersigned acceptance report with the following content:
 - New converter data (HW/SW version)
 - Changed checksum
 - Time stamp

5.8.4.6 Information pertaining to component replacements

Overview

After making changes to the machine, a new acceptance test must be performed with documentation.

Requirement

 WARNING
Unexpected movement due to incorrect component replacement
After a component has been replaced, connections or functions may be defective. This can lead to unexpected movements of motors that may result in death or serious injury.
<ul style="list-style-type: none">• After component replacement, run a simplified function test.

The faulty component was replaced.

Description of function

The following table shows the converter response after a component replacement and the resulting action required:

Table 5-10 Response after a component has been replaced

Replaced component	Control type	Converter response (alarm)	User action	Diagnostic parameters
			Save by copying from RAM to ROM (p0977 = 1) ¹⁾	
Motor	All	A01641.5 = 1	Yes	r9776.2 = 1

¹⁾ The condition for saving is: There is no firmware update active on the converter. Without saving, the converter signals the fault again after the next POWER ON.

Acceptance test and acceptance report

Alarm A01641 reports which component was replaced.

Each time a component is replaced, a function test must always be carried out so that incorrect connections or wiring can be ruled out.

Replacing a motor

The converter reports motor replacement with the alarm A01641. If the replaced motor is of the same type with the same integrated encoder and sensor, the converter does not trigger a stop response. Motor operation is not restricted. The message is deleted after saving by copying from RAM to ROM and restarting the converter.

A reduced acceptance test of the Safety Integrated Functions is required:

- A general test of the actual value acquisition by switching on and operating briefly with traversing in both directions after a component has been released.
- Only for motion monitoring functions - testing the safe actual value acquisition: With the motion monitoring functions active (e.g. SLS), briefly move the motor in both directions.
- Only for motion monitoring functions and after the encoder has been replaced: Test the encoder parameterization (a trace recording is not required)
- Countersigned acceptance report with the following content:
 - New converter data (HW/FW version)
 - Changed checksum
 - Time stamp

Converter replacement

A message is not issued after the converter is replaced. The converter is ready for use after the project data have been transferred to it. Project data are transferred by inserting the SD card, backing up and restoring the data using the web server, or downloading the data from the commissioning tool.

A reduced acceptance test of the Safety Integrated Functions is required:

- Test of the EMERGENCY STOP function (STO or SS1) and the SBC function that is potentially used
- A general test of the actual value acquisition by switching on and operating briefly with traversing in both directions
- Countersigned acceptance report with the following content:
 - New converter data (HW/FW version)
 - Changed checksum
 - Time stamp

5.9 Status and diagnostics of the Safety Integrated Functions

Overview

Function status/diagnostics shows information about the Safety Integrated settings and states of the converter.

If no Safety Integrated Function is enabled, then a function status cannot be viewed.

Description of function

Function status/diagnostics shows the status of the enabled Safety Integrated Functions. If a function is active, then the status indicates "active" (r9722). When STO and SS1 are active, then EMERGENCY STOP is initiated. The brake is safely controlled if SBC is active. When SLS, SDI and SSM are active, then the monitoring of the particular function is also active.

In addition to the function status, the following data can be viewed:

- Supplementary information (depending on the function)
 - Example of SLS: Displays the active level, the active SLS limit value and the speed actual value (r9714).
- Status of the converter:
Provides information as to whether internal events (e.g. software errors in the converter or a discrepancy in the monitoring channels) have been signaled and whether the communication functions.

- Overview of the checksums:
 - Functional checksum (r9780) and time stamp (r9781)
The checksum displays the functional checksum of the converter and is used to track changes (safety logbook). The functional checksum corresponds to a fingerprint of the parameterized Safety Integrated Functions on the converter. The checksum is updated after completing the Safety Integrated commissioning. The time stamp displays the update time.
 - Functions (offline: p9799 and online: r9798) and PROFIsafe (offline: p9797 and online: r9796)
The checksum is displayed using the checksum-checked parameters for the converter configuration. Based on these data, it can be identified whether the parameterization of the Safety Integrated Functions was changed. The checksum of the PROFIsafe parameterization is displayed next to it.
The checksums are calculated and displayed once offline and online commissioning have been completed.
- Version:
The version shows the software versions of the corresponding components relevant for Safety Integrated. These data are predominantly provided as information for service and update.
 - SINAMICS Safety firmware version
 - I/O processor firmware version
 - Encoder firmware version

Checksums

Using the checksums, it can be identified as to whether the configuration and/or parameterization of Safety Integrated was changed.

An acceptance test is required after changing the checksums. The system outputs the appropriate messages to indicate that an acceptance test is required. The checksums are used for documentation purposes within the scope of an acceptance test.

The parameterization can be transferred to several devices by separating the checksums for function and communication. When transferring the parameterization to several devices, you must check whether the device is correctly assigned in the communication group.

More information

Further information about the checksums is provided in the parameter list.

5.10 Responses to safety faults and alarms

5.10.1 Stop responses


Description of function

The converter triggers a fault reaction in response to certain events:

- Stop response SCF
The converter detects a discrepancy in the Safety Integrated monitoring channels, e.g. an error in the result and data comparison.
The time p9555 delays the transition to the stop response SS1.
- Stop response STO or SS1
The converter detects a limit violation, for example involving the Safely-Limited Speed (SLS) function. The stop response is settable.
If stop response SS1 is set, stop response STO automatically follows when the motor comes to a standstill.

It is not possible to select a stop response externally, for example via PROFIsafe.

All stop responses bring the motor to a standstill.

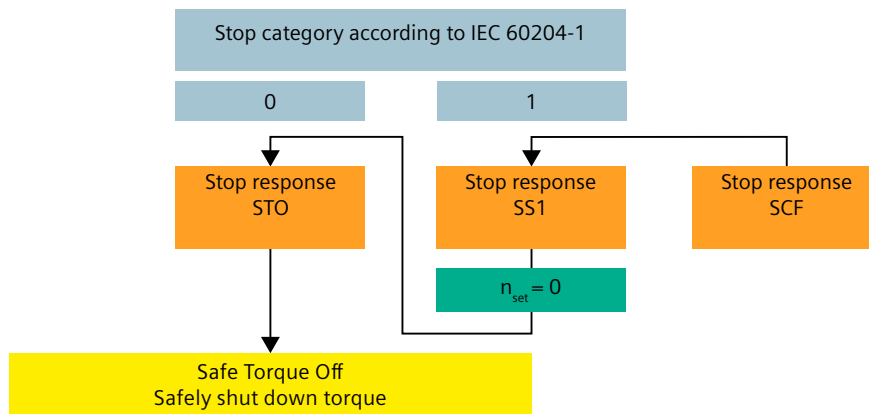

- STO Safe Torque Off
- SS1 Safe Stop 1
- SCF Safety Channel Failure

Figure 5-20 Stop responses

5.10.2 Fail-safe acknowledgment of safety messages

Overview

In the event of safety messages, e.g. due to limit value violations of the motor with active Safety Integrated Functions, the converter detects an internal event.

A safety message requires a failsafe acknowledgement.

Requirement

You checked and eliminated the cause of the internal event.

Procedure

You must acknowledge safety messages with a failsafe signal. You have the following options for failsafe acknowledgement:

Via PROFIsafe

Acknowledge the fault with bit 7 of safety control words 1 or 2:

- Bit 7 = 0 → 1 → 0

Via selection and deselection of STO/SS1

Select the Safety Integrated Function STO or SS1 and then deselect again:

- Via F-DI = 1 → 0 → 1
or
- With bit 0 or 1 of the PROFIsafe safety control word 1 or 2: Bit 0 or 1 = 1 → 0 → 1

By switching the supply voltage on and off

Temporarily switch the power supply of the converter off and on again.

Note

Additional acknowledgement via the "standard" acknowledgement signal

Safety Integrated uses its own message type (C) by default. With p3117 you have the option of reparameterizing safety messages as Alarm (A) or Fault (F). In this case, you must additionally acknowledge the internal event with the "Standard" acknowledgement signal.

5.11 Priority of stop responses and stop functions

Overview

If multiple Safety Integrated Functions or stop responses are active at the same time, the priority of each function determines the behavior of the motor.

Description of function

The priority determines whether a stop response or a stop function influences another active Safety Integrated Function.

The stop responses and stop functions have a higher priority than all other Safety Integrated Functions.

Amongst themselves, the stop responses and stop functions have different priorities.

Table 5-11 Priority of stop responses and stop functions

Priority	Stop response or stop function
High	Safe Torque Off (STO)
Low	Safe Stop 1 (SS1)

A stop response or stop function with a higher priority influences an active stop response or stop function with a lower priority.

A stop response or stop function with a lower priority has no influence on an active stop response or stop function with a higher priority.

Example

Examples of the behavior of the motor if a stop response is active or if a stop function is selected:

- Safely-Limited Speed (SLS) is active and Safe Stop 1 (SS1) is selected.
Result: The converter brakes the motor because the stop function Safe Stop 1 (SS1) has a higher priority than Safely-Limited Speed (SLS).
- Safely-Limited Speed (SLS) is active and the converter detects a limit value violation.
Safe Torque Off (STO) is set as the stop response to a limit value valuation.
During the stop response, the stop function Safe Stop 1 (SS1) is selected.
Result: The selection of Safe Stop 1 (SS1) has no influence on the behavior of the motor. The motor coasts down because Safe Torque Off (STO) has a higher priority than Safe Stop 1 (SS1).

5.12 Response times

5.12.1 Monitoring cycle and PROFIsafe cycle

Description

The Safety Integrated Functions are executed in the monitoring cycle (p9500).

The PROFIsafe telegrams are evaluated in the monitoring cycle.

5.12.2 Response times when controlling via PROFIsafe

Technical data

The response times are converter-internal response times. Program runtimes in the F-host and the transmission time via PROFINET are not taken into account. Consider the following with regard to the calculation of the response times between F-CPU and converter: Safety Integrated Functions are only selected after the PROFIsafe monitoring time (F_WD_Time) has elapsed, e.g. due to communication faults. The PROFIsafe monitoring time (F_WD_Time) must therefore also be included as a relevant component in the calculation when an error occurs.

Notes regarding understanding the following table

The specified response times are applicable for a fault-free drive system as well as when a fault is active in the system.

- Worst Case Delay Time (WCDDT): Maximum response time between a PROFIsafe telegram being received and a stop function being initiated when there is no fault
- One Fault Delay Time (OFDDT): Maximum response time between a PROFIsafe telegram being received and a stop function being initiated when a fault is active
- Watchdog Time (WDDTime): Time between receiving the last valid PROFIsafe telegram and the initiation of a stop function after the PROFIsafe monitoring time elapses
- Device Acknowledgement Time (DAT): Time between receiving a PROFIsafe telegram and sending a response to this telegram
- State change at the failsafe digital input (F-DI): Response time when switching an F-DI up to sending the F-DI state in the PROFIsafe telegram to the F-PLC

Table 5-12 Technical specifications - Response times

Property	Function	Unit	Value
WCDDT / OFDDT	STO / SS1 / SBC	ms	$(2 \cdot p9500) + t_{K1}$
WDDTime	STO / SS1 / SBC	ms	$F_WD_Time + (2 \cdot p9500) + t_{K1}$
DAT		ms	$(2 \cdot p9500) + t_{K1} + t_{K2}$
State change F-DI		ms	$p10017 + (2 \cdot p9500) + 3.5 \text{ ms} + t_{K2}$

p9500: Monitoring cycle (factory setting: 4 ms)

If an isochronous PROFIsafe telegram is used, and synchronism with the F-CPU is optimally set, then p9500 can be reduced from 2 cycles to one cycle. Optimally matched: bus clock cycle = p9500. The F-PLC receives one PROFIsafe telegram per cycle from the converter, and the converter receives one PROFIsafe telegram per cycle from the F-PLC.

p10017: Debounce time of the F-DI (factory setting: 4 ms)

F_WD_Time: PROFIsafe monitoring time

Take the F_WD_Time from your PROFIsafe configuration.

5.12 Response times

- t_{K1}: Time for the internal converter communication when receiving a PROFIsafe telegram
 - For isochronous communication: t_{K1} = T_o. Determine T_o from the bus configuration on the control side.
 - For non-isochronous communication: t_{K1} = 4 ms
- t_{K2}: Time for the internal converter communication when sending a PROFIsafe telegram
 - For isochronous communication: t_{K2} = bus cycle time. The bus cycle time is the send clock of the PROFINET controller.
 - For non-isochronous communication: t_{K2} = 4 ms

5.12.3 Response times when controlling via terminals

Technical data

The following response times are applicable for stop functions for control via terminals of the failsafe digital input (F-DI). The response time of a stop function is the time between the selection of the stop function and the initiation of a stop response.

The specified response times are applicable for a fault-free drive system as well as when a fault is active in the system.

Table 5-13 Technical specifications - Response times

Function	Unit	Worst case delay time
STO / SS1 / SBC	ms	p10017 + (2 · p9500) + 3.5 ms

p10017: Debounce time des F-DI (factory setting: 4 ms)

p9500: Monitoring cycle (factory setting: 4 ms)

5.12.4 Response times - independent of the control type

Technical data

The following response times of the monitoring functions are independent of the control type.

The response times of Safety Integrated Functions are defined as follows:

- Safe Direction (SDI) and Safely-Limited Speed (SLS): The response time is the time between a limit value being violated and initiating the respective stop function.
- Safe Speed Monitor (SSM): The response time is the time between a limit value being violated up to sending the information via PROFIsafe.

The specified response times are applicable for a fault-free drive as well as when there is a fault.

Table 5-14 Technical specifications - Response times

Function	Unit	Worst case delay time
SDI	ms	$(3 \cdot p9500) + t_R$
SLS	ms	$(3 \cdot p9500) + t_R$
SSM (output to the bus)	ms	$(3 \cdot p9500) + p9545 + t_K_2$

p9500: Monitoring cycle (factory setting: 4 ms)

t_R: t_R depends on the relevant stop response initiated after the limit is breached:

- STO: 0.5 ms
- SS1: 2 ms

p9545: SSM filter time

t_K₂: Time for the internal converter communication when sending a PROFIsafe telegram

- For isochronous communication: $t_K_2 = T_{dp}$. Determine T_{dp} from the bus configuration on the control side.
- For non-isochronous communication: $t_K_2 = 4$ ms

5.13 Functional safety

Overview

A system or machine is considered functionally safe if the safety-relevant parts of the protection and control equipment function correctly.

Description

Safety, from the perspective of the object to be protected, cannot be split-up. The causes of danger and therefore also the technical measures to prevent them can vary widely. This is why a differentiation is made between different types of safety (e.g. by specifying the cause of possible hazards). "Functional safety" is involved if safety depends on the correct function.

To ensure the functional safety of a system or machine, the safety-related parts of the protection and control devices must function correctly. In the case of a fault, systems must respond in such a way that either the plant remains in a safe state or it is brought into a safe state. In this case, it is necessary to use specially qualified technology that fulfills the requirements described in the associated Standards. The requirements to implement functional safety are based on the following basic objectives:

- Avoiding systematic faults
- Controlling random faults or failures

Benchmarks for establishing whether or not a sufficient level of functional safety has been achieved include the probability of hazardous failures, the fault tolerance and the

quality that is to be guaranteed by avoiding systematic faults. This is expressed in the standards using specific classification. In IEC 61800-5-2, IEC 62061 "Safety Integrity Level" (SIL) and ISO 13849-1 "Category" and "Performance Level" (PL).

5.14 Machinery Directive

Overview

The basic safety and health requirements specified in Annex I of the Directive must be fulfilled for the safety of machines.

Description

The protective goals must be implemented responsibly to ensure compliance with the Directive.

Manufacturers of a machine must verify that their machine complies with the basic requirements. This verification is facilitated by means of harmonized standards.

IEC 61800-5-2 Adjustable-speed electrical power drive systems Part 5-2 is relevant for the Machinery Directive: Safety requirements - Functional safety.

Within the context of EN 61508, IEC 61800-5-2 considers adjustable-speed electrical power drive systems (PDS), which are suitable for use in safety-related applications (PDS(SR)).

IEC 61800-5-2 places requirements on PDS(SR) as subsystems of a safety-related system. This therefore permits the implementation of the electrical/electronic/programmable electronic elements of a PDS(SR) taking into account the safety-relevant performance of the safety function(s) of a PDS.

Manufacturers and suppliers of PDS(SR) can prove to users (e.g. integrators of control systems, developers of machines and plants etc.) the safety-relevant performance of their equipment by implementing the specifications stipulated in standard IEC 61800-5-2.

Installing

6.1 EMC-compliant installation of a machine or system

The converter is designed for operation in industrial environments.


Reliable and disturbance-free operation is only guaranteed for EMC-compliant installation.

More information

More information about EMC-compliant installation is available in the Internet:

- EMC installation guideline (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)

6.2 Installing the motor

 WARNING
<p>Fire due to inadequate cooling</p> <p>Inadequate cooling can cause the motor to overheat, resulting in smoke and fire. Possible consequences can be serious injury or death. This can also result in increased failures and reduced service lives of motors.</p> <ul style="list-style-type: none"> • Comply with the specified cooling requirements for the motor.

Note

Required checks

The checklists below do not purport to be complete. It may be necessary to perform additional checks and tests in accordance with the situation specific to the particular installation site.

- Install the motor as described in the following chapters of the operating instructions.
- Thoroughly familiarize yourself with the safety instructions and observe the checklists below before starting any work.

Table 6-1 Checklist prior to installation

Check	OK
General checks	
Are all necessary components of the configured drive available?	
Are the ambient conditions in the permissible range?	
<ul style="list-style-type: none"> • Section "Permissible environmental conditions for the motor (Page 375)" 	

Table 6-2 Checklist to check the mechanical system

Check	OK
Checking the mechanical system	
Is the motor free of visible damage?	
Have the mounting surfaces (e.g. flange, shaft) on the customer machine and on the motor been cleaned?	
Are the mounting surfaces free of corrosion?	
Do the mounting dimensions (e.g. shaft diameter, shaft length, true run) on the customer machine meet the specification?	

6.2.1 Mounting instructions for the motor

NOTICE
Damage to shaft sealing rings caused by solvent
If shaft sealing rings come into contact with solvents when preservation coating is removed, the shaft sealing rings can be damaged.
<ul style="list-style-type: none"> • Avoid contact between solvents and shaft sealing rings.

NOTICE
Damage to the motor due to radial eccentricity at the shaft extension
Radial eccentricity and axial forces at the shaft extension can damage the motor.
<ul style="list-style-type: none"> • Mount the motor in such as way that no radial eccentricity and axial forces occur at the shaft extension.

- Adhere to the specifications on the rating plate.
- Observe the warning and information plates on the motor.
- Check the permissible ambient conditions (e.g. temperature, installation altitude) at the installation location.
- Thoroughly remove any anti-corrosion agents from the shaft extension. Use commercially available solvents.
- Ensure that power losses are adequately dissipated. See Chapter "Cooling (Page 377)".
- If the motor is installed vertically with the shaft extension facing up, ensure that no liquid can enter the upper bearing.
- Carefully ensure that the flange is in even contact with the mounting surface.
- Use hexagon socket head cap screws with a property class of at least 8.8.
- When tightening the fastening bolts avoid any uneven stressing.
- Observe the tightening torques for the fixing screws (see table below).

Tightening torques for fastening bolts

The general tolerance for the tightening torque is 10%. The tightening torque is based on a friction coefficient of $\mu = 0.14$.

Table 6-3 The data apply to 1FK2 and 1FT2 motors.


Motor	Bolt DIN 7984	Washer ISO 7092 in mm	Tightening torque for bolts (not for electrical connections)
1F□2102	M4	4 (d2 = 8)	2.2 Nm
1F□2□03	M5	5 (d2 = 9)	4 Nm
1F□2□04 1F□2205	M6	6 (d2 = 11)	8 Nm

Motor	Bolt DIN 7984	Washer ISO 7092 in mm	Tightening torque for bolts (not for electrical connections)
1F□2105 1F□2□06	M8	8 (d2 = 15)	20 Nm
1F□2□08	M10	10 (d2 = 18)	35 Nm
1F□2□10	M12	12 (d2 = 20)	60 Nm

6.2.2 Attaching the output elements

Reduce the bending torque load applied to the shaft and the bearing by appropriately arranging the output elements.


Mount the output elements as close as possible to the motor bearing.

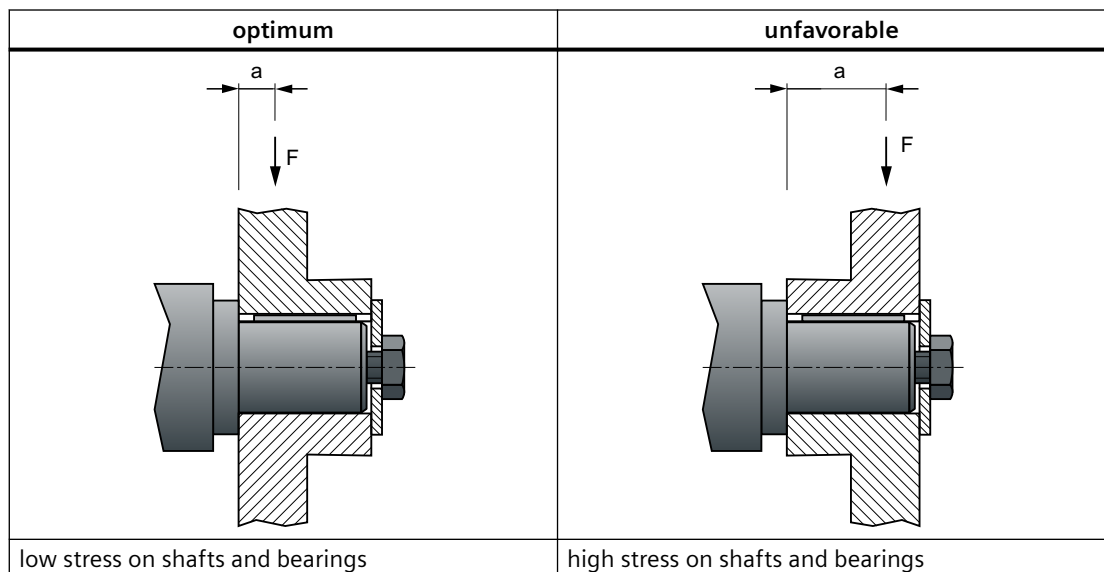

Mount or remove the power output elements (e.g. couplings, gear wheels, belt pulleys) using suitable devices only (see figure).

- Use the threaded hole in the shaft extension.
- If required, heat up the output elements before mounting or removing.

- When removing the output elements, use an intermediate disk to protect the centering in the shaft extension.

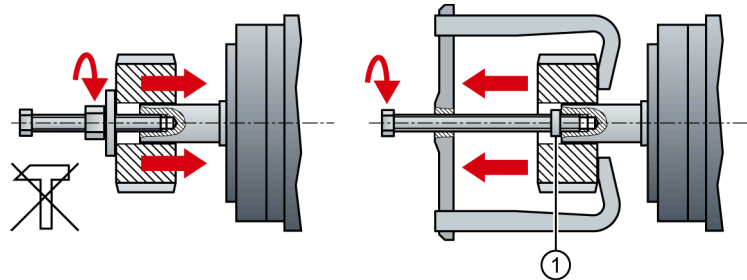

1 Intermediate washer/disk (to protect the centering in the shaft extension)

Figure 6-1 Mounting and removing output elements

- If necessary, completely balance the motor together with the output elements according to ISO 1940.

Note

Motors with feather key are half-key balanced. The motors have been balanced with half a feather key.

The motor dimensions can be found in section "Dimension drawings (Page 565)".

6.3 Installing the converter

6.3.1 Installation conditions

When installing the converter carefully observe the conditions listed below in order to guarantee reliable, continuous and trouble-free operation.

- The converter is designed for installation in a control cabinet.
- The converter is certified for use in environments with degree of pollution 2 without condensation; i.e. in environments where no conductive pollution/dirt occurs. Condensation is not permissible.
- The converter fulfills degree of protection IP20 according to IEC 60529.
- EMC-compliant installation
Chapter: EMC-compliant installation of a machine or system (Page 153)

Note

Keep the cover of the operator panel closed to protect the operator controls and the SD card.

Additional requirements for plants and systems in the United States / Canada (UL/cUL)

A label with the following number is provided with the device: A5E36790112.

Note the instructions on the label and attach the label in a clearly visible location close to the converter in the control cabinet.

Installation notes

- Install the converter vertically with the flap for the LED display facing upwards.



Figure 6-2 Mounting position of the converter

- Maintain the minimum clearances to other components.
- Use the recommended fastening elements and comply with the specified torques.

Clearances to cabinet panels and other components

Leave a minimum 100 mm clearance to other devices at the top and bottom. A lateral clearance between several SINAMICS S210 converters is not mandatory. Observe a lateral clearance of at least 10 mm to other devices.

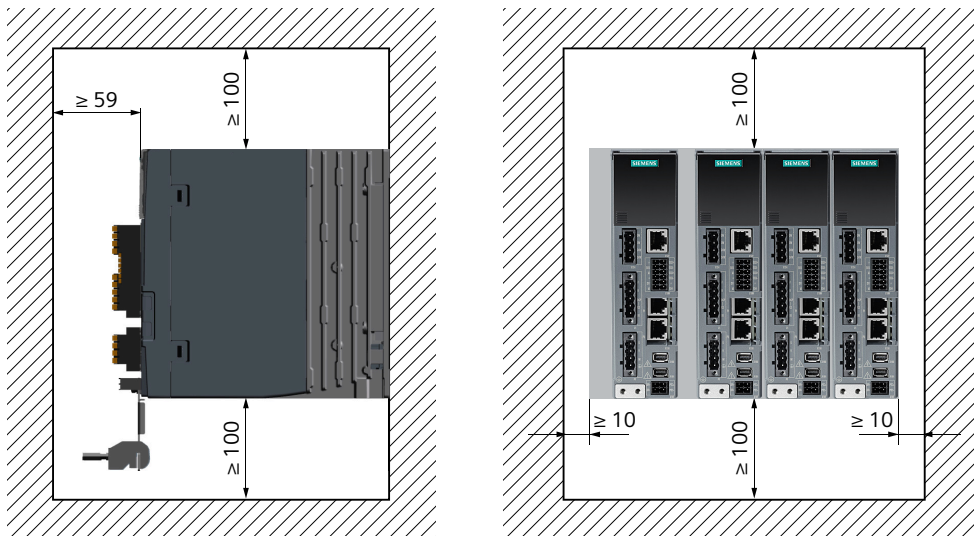


Figure 6-3 Clearances to cabinet panels and other components for converters with 1 AC line connection

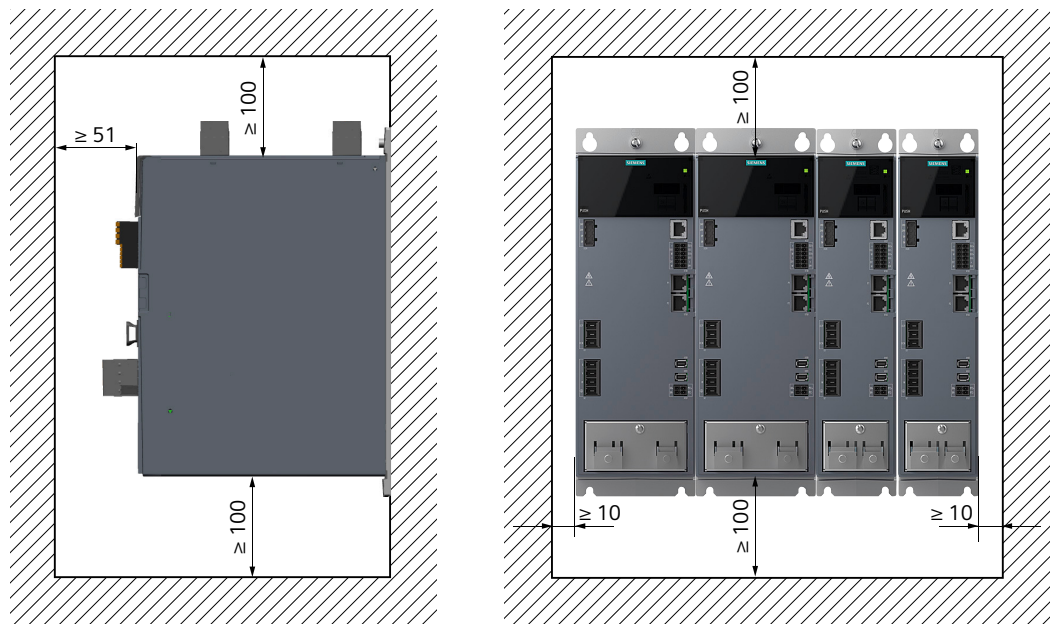


Figure 6-4 Clearances to cabinet panels and other components for converters with 3 AC line connection

6.3.2 Dimensions and drilling dimensions

Dimension drawings and drilling dimensions for converters with 1 AC line connection

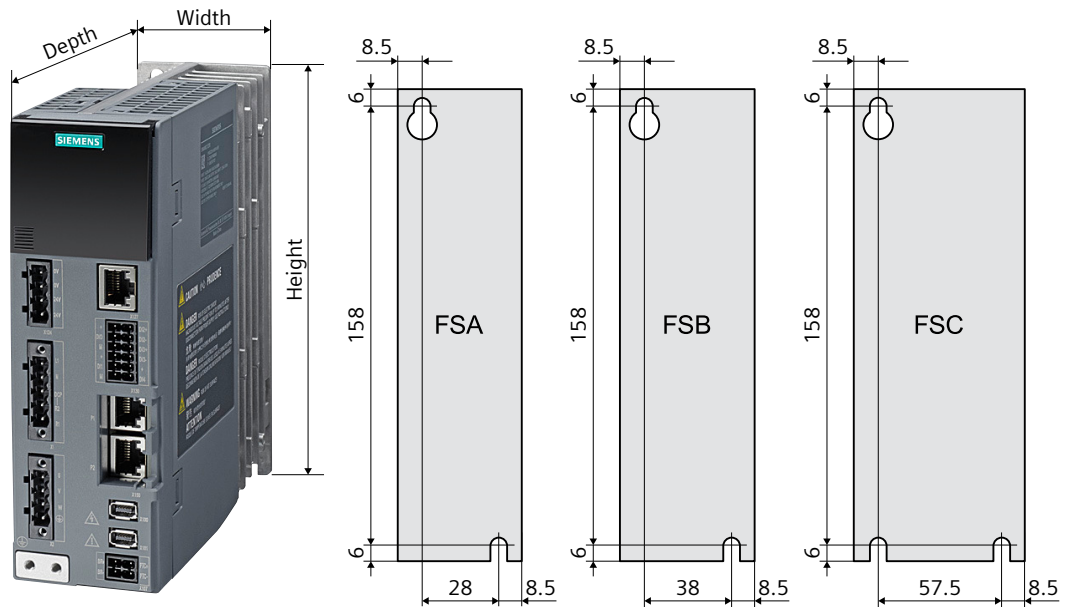


Figure 6-5 Dimension drawing and drilling dimensions

Table 6-4 Dimensions and mounting

Frame size	Width	Height	Depth	Weight	Fixing
FSA	45 mm	170 mm	172.4 mm	1.1 kg	2 x M5 / 4 Nm
FSB	55 mm	170 mm	172.4 mm	1.2 kg	2 x M5 / 4 Nm
FSC	74.5 mm	170 mm	197.4 mm	1.9 kg	3 x M5 / 4 Nm

Dimension drawings and drilling dimensions for converters with 3 AC line connection

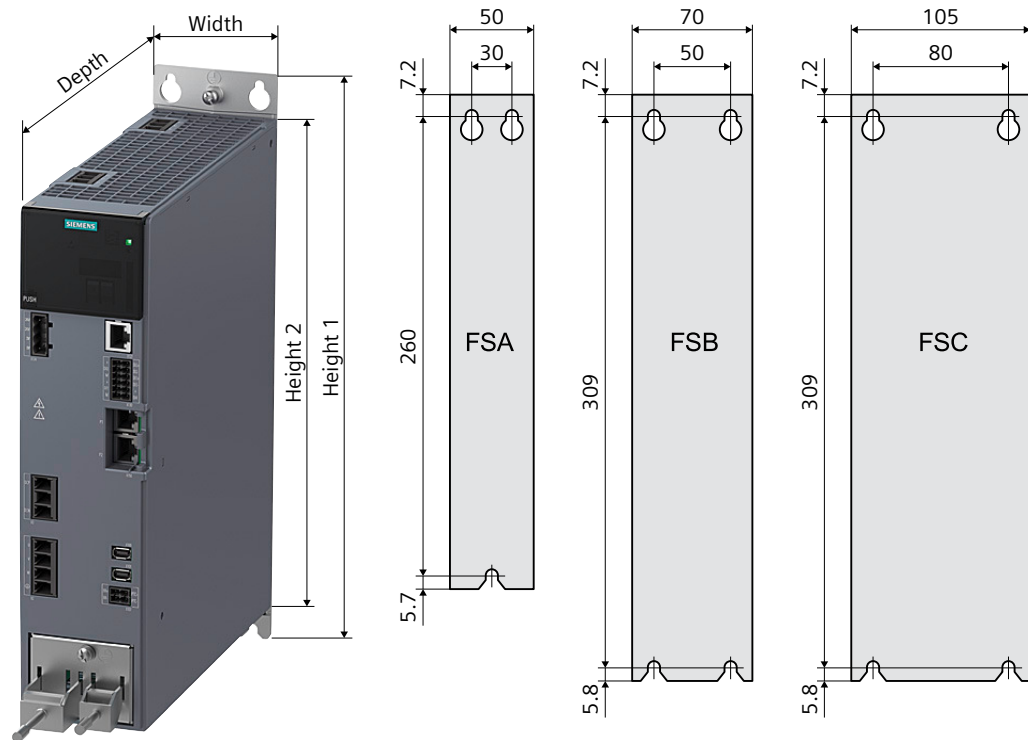


Figure 6-6 Dimension drawing and drilling dimensions

Table 6-5 Dimensions and mounting

Frame size	Width	Height 1	Height 2	Depth	Weight	Fixing
FSA	50 mm	272.9 mm	231 mm	223.3 mm	2.1 kg	3 x M5 / 4 Nm
FSB	70 mm	322 mm	280 mm	223.3 mm	3.3 kg	4 x M5 / 4 Nm
FSC	105 mm	322 mm	280 mm	223.3 mm	5.0 kg	4 x M5 / 4 Nm

6.4 Connecting the converter and the motor

You can find general information in chapter "Permissible line supplies and connection options (Page 65)".

6.4.1 Cable lengths

Cable lengths for the converter connections

Type of connection	Connection via	Permissible cable length
Control voltage 24 V DC	X124	30 m
External braking resistor for converters with 1 AC line connection	X1 (R1, DCP)	10 m
External braking resistor for converters with 3 AC line connection	X4 (R1, DCP)	10 m
Service interface	X127	10 m
Digital inputs	X130	30 m
Connection to the control system via PROFINET	X150 P1 X150 P2	100 m
Motor power connections	X2	50 m
Encoder	X100	50 m
Motor holding brake	X107	50 m

Cable lengths for connecting the motor to the converter

The motor is connected to the converter using a one cable system (OCC - one cable connection) via the MOTION-CONNECT cable. The MOTION-CONNECT cable includes the power connections for the motor, the encoder connection and the connections for the motor holding brake.

The permissible cable lengths for the various EMC categories are given in Chapter:

- "Electromagnetic compatibility according to IEC 61800-3 (Page 550)"

Ordering information for MOTION-CONNECT cables is provided in Chapter:

- "Determining the article number of a prefabricated OCC MOTION-CONNECT cable (Page 624)"

Ordering information for external line filters is provided in Chapter:

- "Technical data (Page 603)"

6.4.2 Connecting a MOTION-CONNECT cable at the motor

NOTICE

Destruction of the motor if it is directly connected to the three-phase line supply

The motor will be destroyed if it is directly connected to the three-phase line supply.

- Only operate motors with the permitted converters.


The manufacturer of the system/machine is responsible for ensuring that installation is performed correctly.

Ensure that the associated warning labels in the appropriate national language are attached.

The motors have SPEED-CONNECT M12, M17 or M23 connectors that can be rotated.

You connect the motor to the converter using a MOTION-CONNECT OCC cable. The cables for the power, the holding brake, the encoder and the shielding are integrated in the OCC cable.

- Use the prefabricated MOTION-CONNECT OCC cables from SIEMENS. This reduces the installation time and costs, and increases the operational reliability of the drive.

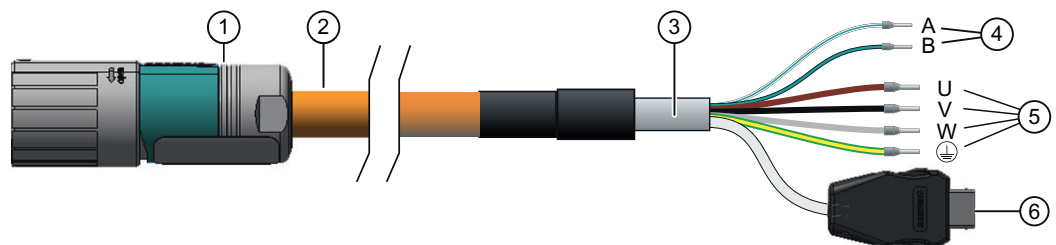

- | | |
|--|--|
| ① Round connector M12, M17 or M23, 10-pole | ④ Cables for a holding brake, A (WT) = "-", B (BK) = "+" |
| ② MOTION-CONNECT OCC cable | ⑤ Power cables |
| ③ Shielding | ⑥ SIEMENS IX connector for signal line |

Figure 6-7 MOTION-CONNECT OCC (example)

- Check that the sealing surfaces of the connectors have not been damaged.

Clearance required when connecting the motor

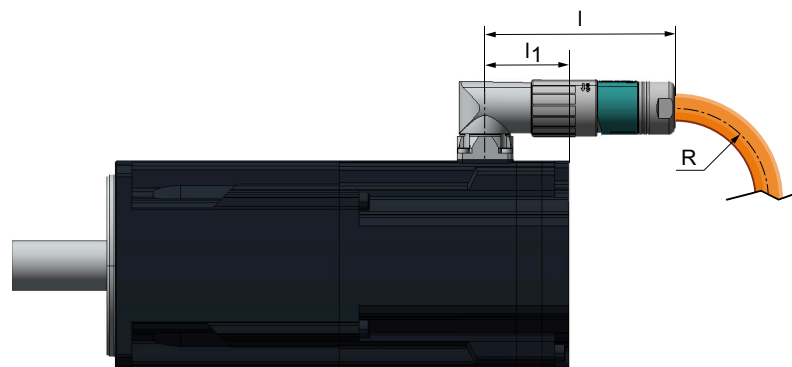


Figure 6-8 Example

6.4 Connecting the converter and the motor

Table 6-6 Clearance required when connecting the motor

Motor	Connector size	Distance, point of rotation to NDE		Length of the plug connection <i>l</i> / mm	Minimum bending radius, static	
		Without brake	With brake		MC500	MC800 PLUS
		<i>l</i> ₁ / mm			<i>R</i> _{static} / mm	
1F□2□02	M12	33		61	23.5	27.2
1F□2□03-□□G		23				
1F□2□03-□□H	M17	26		70	25.5	30.6
1F□2□03-□□K		26				
1F□2□04		26				
1F□2205		28	34			
1F□2105		34				
1F□2□06	M23	41	53	99	30.7	36.9
1F□2□08		39				
1F□2□10		43				

Rotation range of the OCC connector on the motor

The data apply to 1FK2 and 1FT2 motors.

You can rotate the motor connector. Use a suitable socket connector as lever to rotate the connector.

Note

A maximum of 10 rotations are permitted so as not to impair the degree of protection of the motor.

Table 6-7 Rotational range of the connector

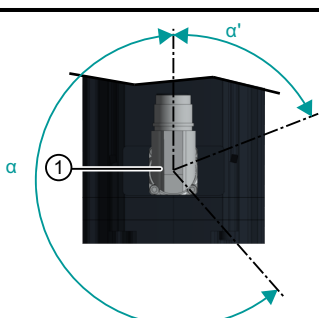
Motor	Angle α	Angle α'	Connector size	Drawing
1F□2□02 1F□2□03-□□G	261°	45°	M12	

Table 6-8 Rotational range of the connector

Motor	Angle α	Angle α'	Connector size	Drawing
1F□2□03-□□H	205°	80°	M17	
1F□2□03-□□K				
1F□2□04				
1F□2□05	255°	35°	M23	
1F□2□06	312°	13°		
1F□2□08				
1F□2□10				

6.4.3 Connecting the power cable to the motor

The chapter describes how you connect a power cable to the motor.

Overview

The motors are equipped with SPEED-CONNECT connectors.

You can connect quick-connection cables with SPEED-CONNECT as well as conventional cables with screw locks (fully threaded) to the motor connector.

Note

We recommend cables with SPEED-CONNECT because they are easier to use.

Establishing a SPEED-CONNECT connection


Procedure

Note

- Only tighten the connector by hand.
 - Do not use any wrenches or similar tools.
-

6.4 Connecting the converter and the motor

1. Ensure that the union nut of the SPEED-CONNECT connector is rotated to the end stop in the direction of the "open" arrow.
2. Align the SPEED-CONNECT connector so that the triangles on the top of the connectors are opposite one another.

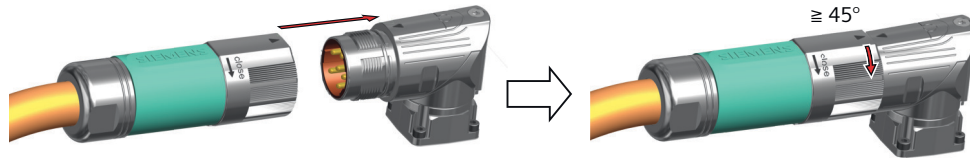

3. Push the power connector onto the motor connecting socket as far as it will go.
4. Turn the union nut by hand in the direction of "close" by at least 45° (position A) or up to the end stop (position B)




- A Minimum locking
- B Maximum locking up to the end stop

Note

A secure connection is only guaranteed from position A onward.

Releasing a SPEED-CONNECT connection

Procedure

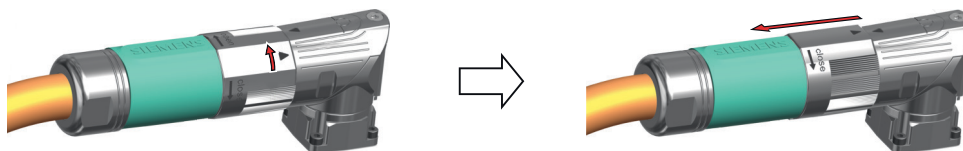

1. Turn the union nut of the SPEED-CONNECT connector in the direction of "open" to the end stop. The triangles on the top of the connectors must be opposite one another.
2. Withdraw the connector.

Note

Pull out the connector at the connector itself, do not pull on the cable.

Routing cables in damp environments

If you are operating the motor in environments in which moisture can arise, follow the subsequent instructions for routing the connecting cables.

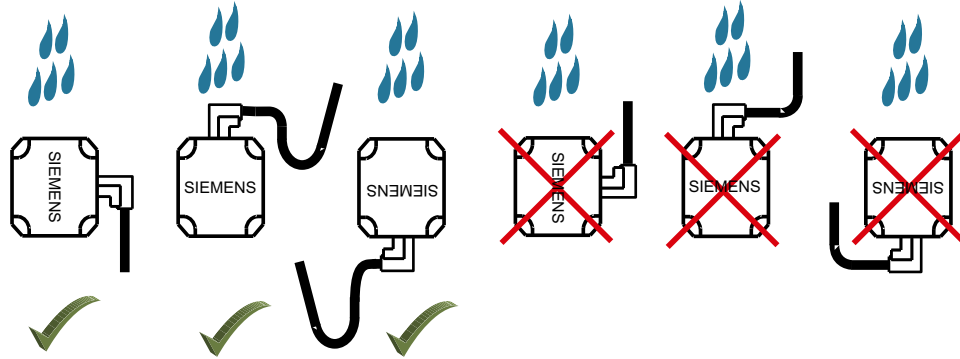


Figure 6-9 Permissible and impermissible cable routing when connecting in a damp environment

6.4.4 Connecting the converter

Install the converter so that you are compliant with local regulations for erecting and installing low-voltage systems.

Carefully observe the following product memorandum about protection against electric shock:

Ensure protection against electric shock in the motor circuit of a converter according to IEC/EN 61800-5-1 through automatic shut down in the case of a fault according to IEC/EN 60364-4-41 (VDE 0100-410) (<https://support.industry.siemens.com/cs/ww/en/view/103474993>)

Notes for connecting up the converter

Operating displays for converter operation

If, when switching over a function from ON to OFF, an LED or other similar display is not lit or not active; this does not indicate that the device is switched-off or in a no-current condition.

Shield plate

For converters, frame sizes FSB and FSC with 3 AC line connection, the shield plate is integrated in the converter itself. For the other converters, the shield plate is included in the accessories pack of the converter.

Fixing connecting cables

Fix all of the connecting cables using shield clamps or suitable cable ties to the converter shield plate.

Power connections

NOTICE

Property damage due to loose power connections

Insufficient tightening torques or vibration can result in loose power connections. This can result in damage due to fire, device defects, or malfunctions.

- Tighten all power connections to the specified torque.
- Check all power connections at regular intervals, particularly after equipment has been transported.

Connection of motor holding brake, connector X107

Also connect the insulated conductors for the motor holding brake to the connector at X107, even when you are using a motor without holding brake.

Shielded cables

Shielded cables are required for connecting the OCC cable, the external braking resistor and the digital inputs to ensure that the drive functions perfectly.

Use the converter shield support to connect the shield at the converter. We recommend connecting the shield using the shield clamp that is provided with the prefabricated OCC cable used to connect the motor (see the following diagram).

Use shielded cables to establish the following connections:

- Cable between the converter line filter (only for 1 AC 230 V)
- Cable between the converter and motor
- Cable between the converter and external braking resistor
- Signal cables if they are routed next to cables with high levels of noise and interference

NOTICE

Damage/fault caused by connecting several loads to the same line infeed point

For loads not belonging to the SINAMICS S210 drive system, make sure that a sufficient EMC interference suppression is provided. If several such loads are connected to the same line infeed point, this may result in damage or faults.

- Provide interference suppression for such loads using appropriate line filters. To prevent mutual interference, it is not permissible that this line filter is equipped with capacitors with respect to ground on the line side. A series B84144A*R120 filter from EPCOS is recommended for a 24 V power supply with a 3-phase connection.

Cable routing and shielding must be compliant with the EMC zone concept.

- Connect the shield at the converter. We recommend that the shield of the preassembled OCC connecting cable is connected with the shield terminal on the shield connection plate of the converter (see ① in the diagram).
- Use cables with finely-stranded, braided shields.
- Carefully ensure that the shield is not interrupted or broken.

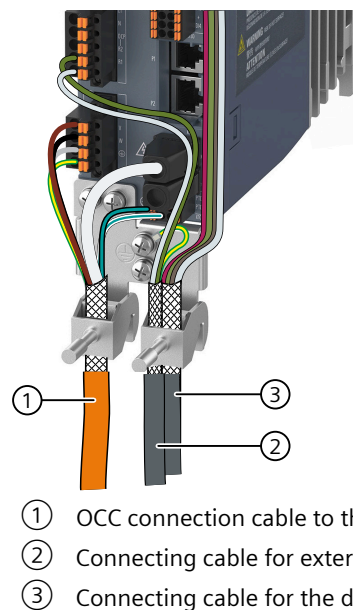


Figure 6-10 Shield support with shield plate and shield clamps for prefabricated OCC cable shown using an example of a converter with 1 AC line connection

Connections and operating elements of the converter with 1 AC line connection

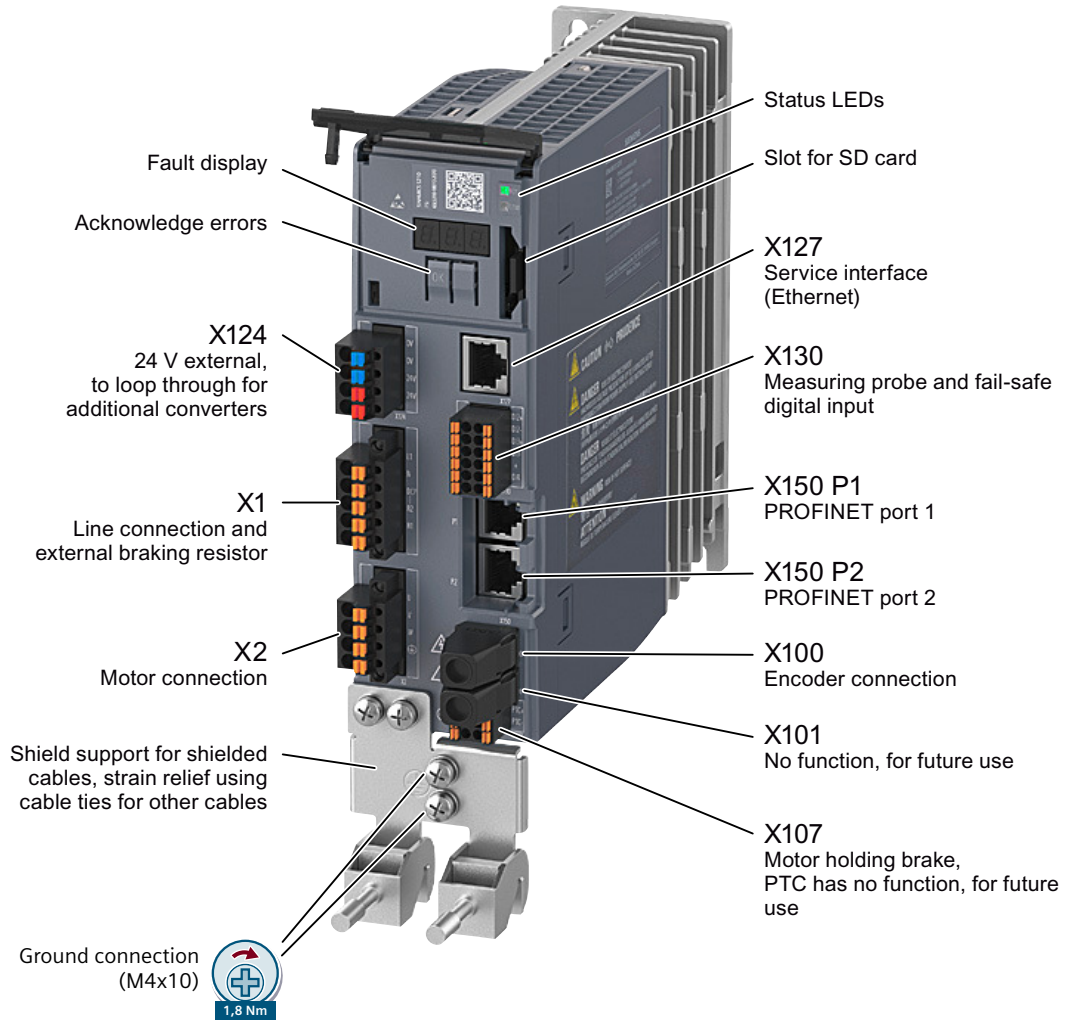


Figure 6-11 Connections and operating elements of the converter with 1 AC line connection
Connectors X1, X2, X107, X124 and X130 are included in the scope of delivery of the converter.

Encoder connector X100 is included with the OCC cable.

You require Ethernet cables with RJ45 connectors to connect service interface X127, as well as for PROFINET ports X150 P1 and X150 P2.

Connections and operating elements of the converter with 3 AC line connection

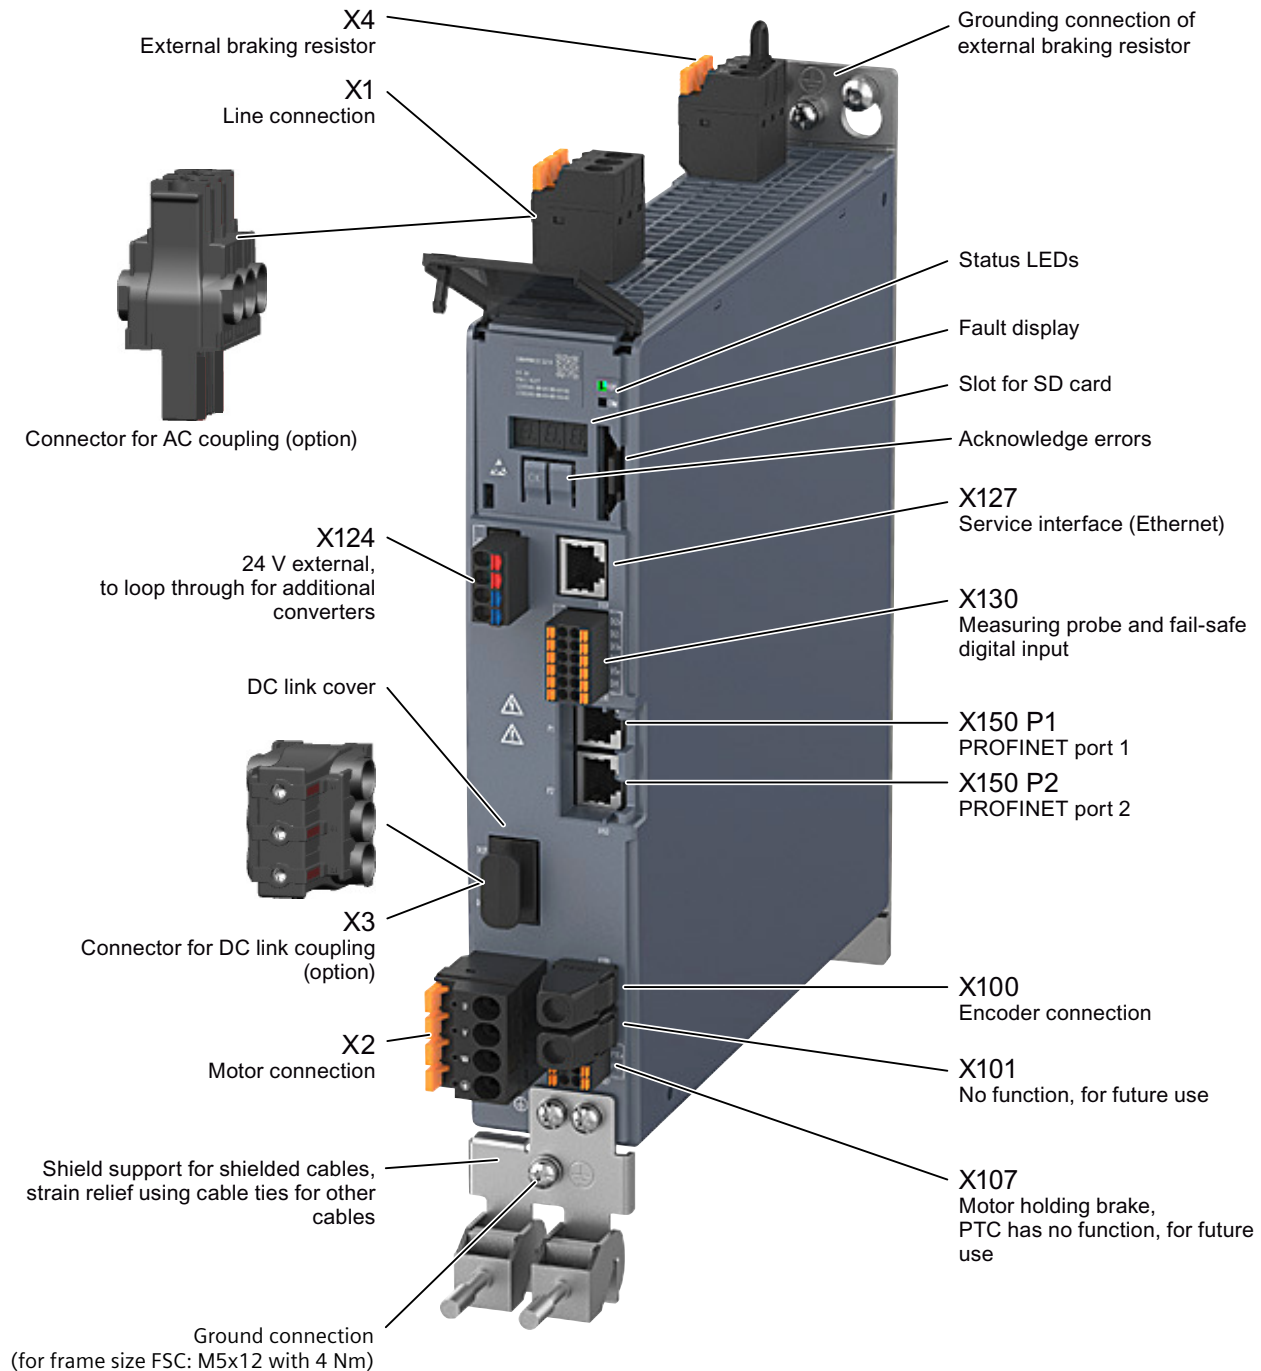


Figure 6-12 Connections and operating elements of the converter with 3 AC line connection

Connectors X1 standard, X2, X4, X107, X124 and X130 are included in the scope of delivery of the converter.

Encoder connector X100 is included with the OCC cable.

You require Ethernet cables with RJ45 connectors to connect service interface X127, as well as for PROFINET ports X150 P1 and X150 P2.

You must order the connectors for AC coupling X1 and for DC link coupling X3 separately as required:

see Chapter "Connectors and cables for the AC coupling and DC link coupling (Page 591)".

6.4.5 Converters with 1 AC line connection

6.4.5.1 Connecting the MOTION-CONNECT cable to the converter

In addition to the motor connections, the MOTION-CONNECT cable from the motor to the converter also includes the conductors for the encoder and the motor holding brake.

NOTICE

Damage to the device by connecting other motors or devices

Connecting other devices (motors, encoders) can destroy the converter or the connected device.

- Only connect 1FK2 and 1FT2 motors to the converter.
- Use only MOTION-CONNECT cables from Siemens or cables that you have fabricated yourself with the correct pin assignment.

Connecting the motor cable to the converter

Connect conductors U, V, W of the MOTION-CONNECT cable to connector X2 of the converter as shown below.

Connect the shield of the MOTION-CONNECT cable to the shield plate through a large surface area. Use commercially available clamps, the clamps supplied with the prefabricated cable or the shield connection clamps supplied as accessories.

The terminals are spring-loaded terminals.

Color coding for MOTION-CONNECT cables:

- Phase U = brown
- Phase V = black
- Phase W = gray

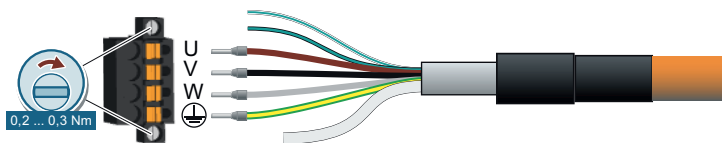


Figure 6-13 X2 - motor connection

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 26 ... 12
- Insulation stripping length: 10 mm

Connecting the encoder to the converter

The cables and the connector for the encoder connection are part of the MOTION-CONNECT cable from the motor to the converter.

Insert the Siemens IX plug-in plug socket X100 as shown below.

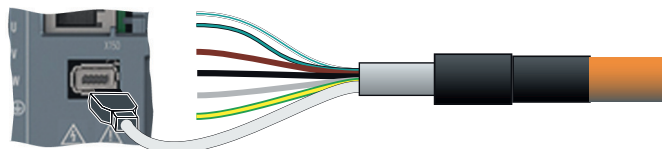



Figure 6-14 X100 - encoder connection

Connecting the motor holding brake

The cables for the motor holding brake are part of the MOTION-CONNECT cable from the motor to the converter.

Connect the cables as shown below to the connector X107 of the converter.

The terminals are spring-loaded terminals.

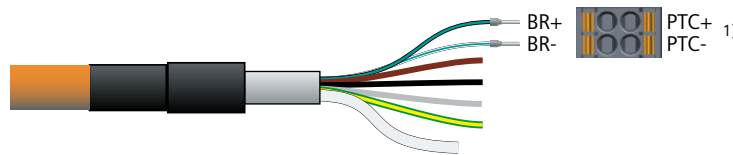

1) no function, for future use

Figure 6-15 X107 - Motor holding brake connection

Permissible conductor cross-sections:

- For single-conductor cables or for flexible cable conductors with end sleeves without protective collars or long end sleeves with protective collars:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

Note**Connection of motor holding brake, connector X107**

Connect the conductors for the motor holding brake to connector X107 even if you are using a motor without holding brake.

6.4.5.2 Connecting the converter to the line supply

Connect the line feeder cable as shown below to the connector X1 of the converter. Connect the protective conductor with a cable lug and an M4 screw to the shield plate of the converter.

The terminals are spring-loaded terminals.

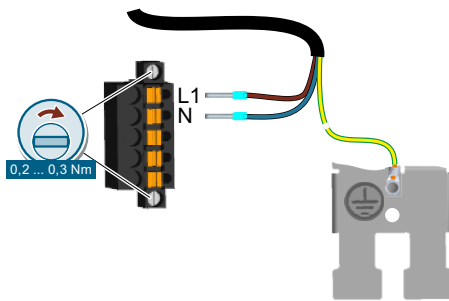


Figure 6-16 X1 - line connection 1 AC

The shield plate is fixed with two M4x10 screws with a tightening torque of 1.8 Nm.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 26 ... 12
- Insulation stripping length: 10 mm

6.4.5.3 Using several single-phase converters in machines and plants**Overview**

Evaluate the input currents of single-phase converters in your machine or plant in terms of harmonics and unbalance.

Description

In unfavorable cases, the harmonic currents of several converters in the neutral conductor (N) add up to a value greater than the currents of the line conductors (L1, L2, L3). The current-carrying capacity of the neutral conductor must be sufficient for this. IEC 60364-5-52:2019, Section 524, provides recommendations for dimensioning the neutral conductor. If no more precise information is available, the standard recommends dimensioning the neutral conductor for 1.45 times the current-carrying capacity of the line conductors.

 WARNING
--

Fire caused by neutral conductor (N) overload
--

The neutral conductor can heat up due to the load from harmonic currents and cause a fire.
--

- | |
|---|
| <ul style="list-style-type: none"> • Consider the harmonic currents when dimensioning the neutral conductor. |
|---|



 WARNING
--

Electric shock caused by PEN conductor overload
--

In TN-C supply networks, the protective function of the PEN conductor can be adversely affected by exposure to harmonic currents.

- | |
|---|
| <ul style="list-style-type: none"> • Consider the harmonic currents when dimensioning the PEN conductor. |
|---|

6.4.5.4 Connecting a braking resistor

You can either use the internal braking resistor or connect an external braking resistor.

Using the internal braking resistor

If you are using the internal braking resistor, terminals DCP and R2 must be jumpered at connector X1.

The jumper is included in the scope of delivery of the converter.

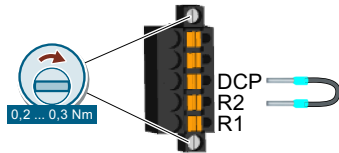


Figure 6-17 X1 - connection for using the internal braking resistor


Using an external braking resistor

If you are using an external braking resistor, terminals DCP and R2 must not be jumpered at connector X1. Connect the braking resistor via the DCP and R1 terminals.

The converter shield plate is used for the protective conductor connection and the shield support.

The terminals are spring-loaded terminals.

The permissible cable length is 10 m.

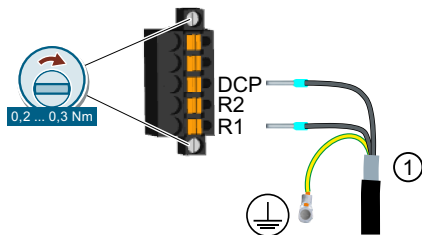

① Shield

Figure 6-18 X1 - connection for using an external braking resistor

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 26 ... 12
- Insulation stripping length: 10 mm

6.4.6 Converter with 3 AC line connection

6.4.6.1 Connecting the MOTION-CONNECT cable to the converter

In addition to the motor connections, the MOTION-CONNECT cable from the motor to the converter also includes the conductors for the encoder and the motor holding brake.

NOTICE
Damage to the device by connecting other motors or devices
Connecting other devices (motors, encoders) can destroy the converter or the connected device.
<ul style="list-style-type: none">• Only connect 1FK2 and 1FT2 motors to the converter.• Use only MOTION-CONNECT cables from Siemens or cables that you have fabricated yourself with the correct pin assignment.

Connecting the motor cable to the converter

Connect conductors U, V, W of the MOTION-CONNECT cable to connector X2 of the converter as shown below.

Connect the shield of the MOTION-CONNECT cable to the shield plate through a large surface area. Use commercially available clamps, the clamps supplied with the prefabricated cable or the shield connection clamps supplied as accessories.

The terminals are spring-loaded terminals.

Color coding for MOTION-CONNECT cables:

- Phase U = brown
- Phase V = black
- Phase W = gray

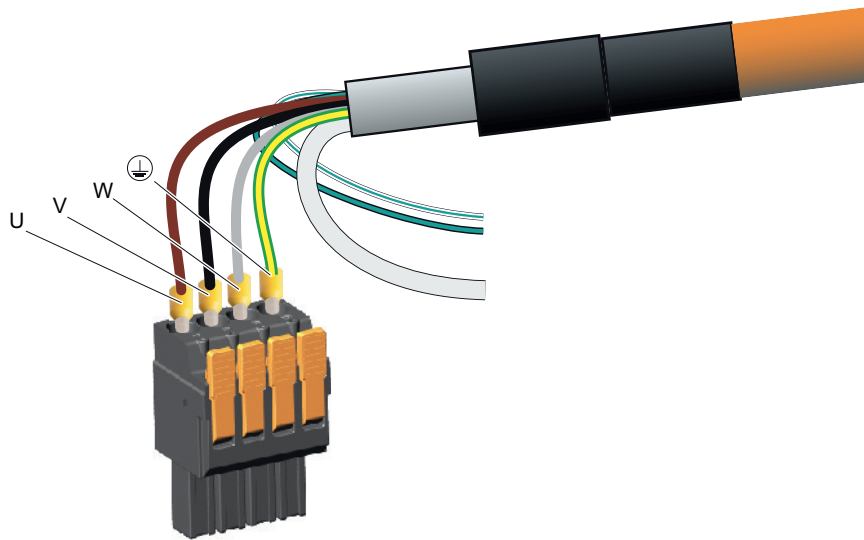


Figure 6-19 X2 - motor connection

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 10
- Insulation stripping length: 18 mm

Connecting the encoder to the converter

The cables and the connector for the encoder connection are part of the MOTION-CONNECT cable from the motor to the converter.

Insert the Siemens IX plug-in plug socket X100 as shown below.

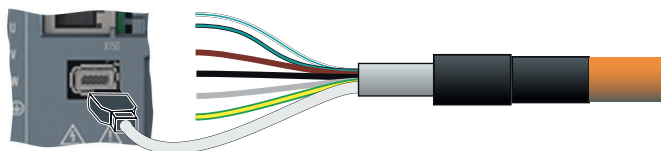



Figure 6-20 X100 - encoder connection

Connecting the motor holding brake

The cables for the motor holding brake are part of the MOTION-CONNECT cable from the motor to the converter.

Connect the cables as shown below to the connector X107 of the converter.

The terminals are spring-loaded terminals.

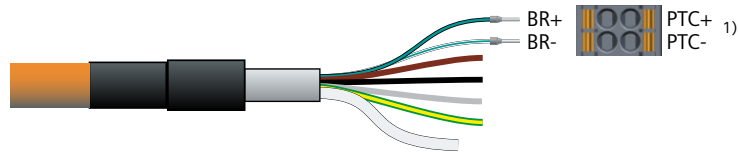

1) no function, for future use

Figure 6-21 X107 - Motor holding brake connection

Permissible conductor cross-sections:

- For single-conductor cables or for flexible cable conductors with end sleeves without protective collars or long end sleeves with protective collars:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

Note

Connection of motor holding brake, connector X107

Connect the conductors for the motor holding brake to connector X107 even if you are using a motor without holding brake.

6.4.6.2 Connecting the converter to the line supply


The converter is supplied with connectors for connecting it to the line supply.

If you connect several converters in parallel, the optional connectors for the AC coupling are available to connect to the line supply. This significantly reduces the wiring costs.

Both connection options are shown below.

Connecting a converter with standard terminals

The terminals are spring-loaded terminals.

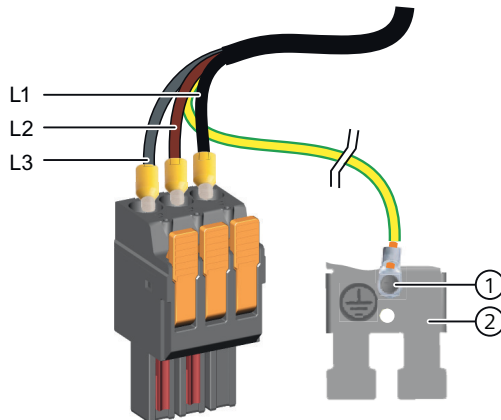

L1, L2, L3 Cores of the line connecting cable

① M4x10 screw to fasten the protective conductor and the shield plate

② Shield plate

Figure 6-22 X1 - line connection with standard terminals (example for frame size FSA)

The shield plate for frame size FSA is fixed with two M4x10 screws with a tightening torque of 1.8 Nm.

For frame sizes FSB and FSC, the shield connection is integrated in the converter itself.

The protective conductor for frame size FSC is fixed with one M5x12 screw with a tightening torque of 4 Nm.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 10
- Insulation stripping length: 18 mm

Note

Connector X4 for braking resistor

Insert connector X4 even if you are not using an external braking resistor. In this case, you need to bridge the terminals DCP and R2 to use the internal resistor with the supplied jumper. Otherwise, pre-charging of the converter will not take place.

You can find more detailed information in the section "Connecting a braking resistor (Page 185)".

Connecting a converter with terminals for the AC coupling


The connectors for the AC coupling are not included in the scope of delivery of the converter.

Ordering data:

- "Connectors and cables for the AC coupling and DC link coupling (Page 591)"

The permissible cables for the AC coupling as well as the installation instructions are provided in section:

- "Establishing the AC coupling and the DC link coupling (Page 183)"

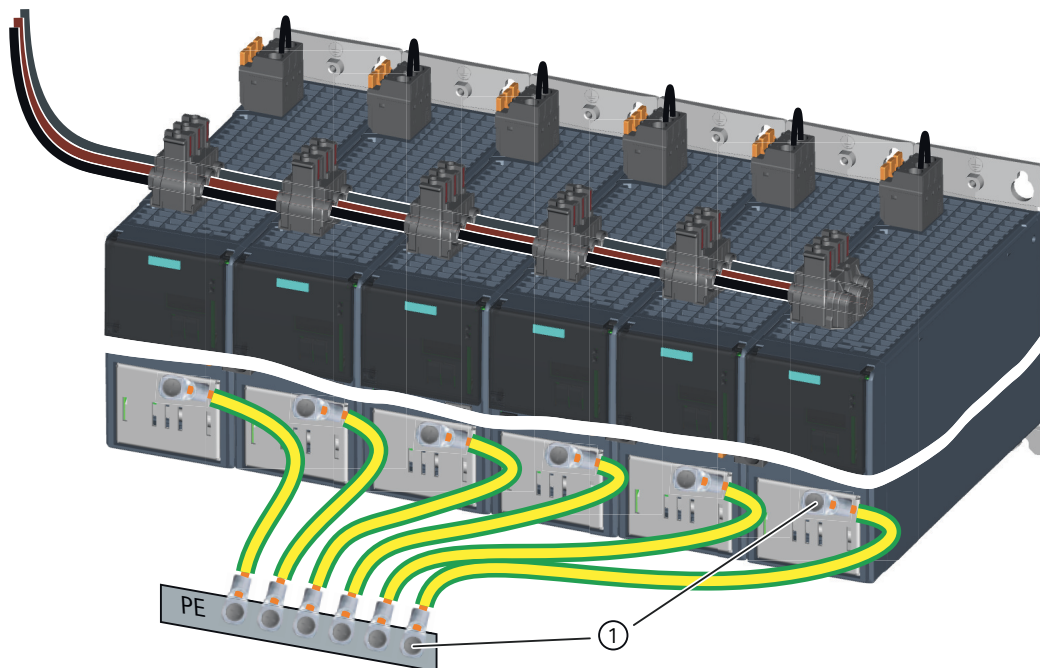

- ① M4 for frame sizes FSA and FSB
M5 for frame size FSC

Figure 6-23 X1 - line connection with AC coupling

6.4.6.3 DC link coupling

The connectors for the DC link coupling are not included in the scope of delivery of the converter.

Ordering data:

- "Connectors and cables for the AC coupling and DC link coupling (Page 591)"

The permissible cables for the DC link coupling as well as the installation instructions are provided in Chapter:

- "Establishing the AC coupling and the DC link coupling (Page 183)"

You can find the prerequisites for the DC link coupling in Chapter:

- "DC link coupling (for converters with 3 AC line connection) (Page 93)"

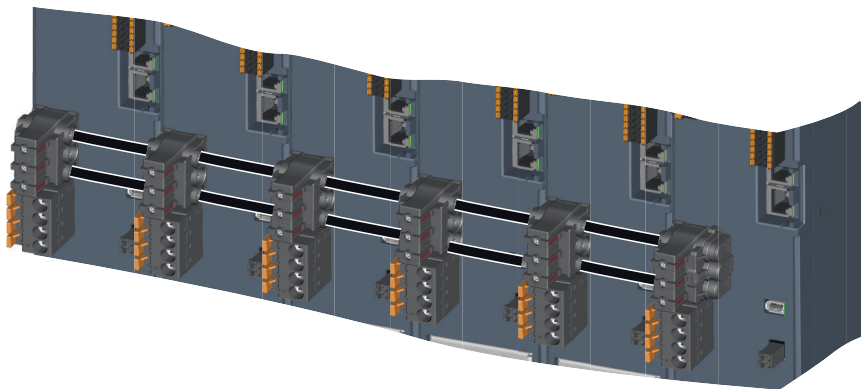


Figure 6-24 X3 - connection of the coupling



If no DC link coupling is used, seal the socket in the device with a DC link cover.

6.4.6.4 Establishing the AC coupling and the DC link coupling

The connection of the individual converters for the AC coupling and the DC link coupling are established by inserting the cables, together with their insulation through the openings of the connector one after the other. The electrical contact is established when tightening the screw connections of the individual connectors with the specified torque.

Permissible cables for the AC coupling and DC link coupling

The cables required for the AC coupling and DC link coupling are standard cables, and therefore not included in the scope of delivery.

Permissible cables for IEC applications:

Use the following cables for the AC coupling and for the DC link coupling:

- 16 mm², Class 5 (finely stranded, PVC-insulated), H07V-K + H07V2-K according to DIN EN 50525-2-31
- HELUTHERM® 145 [helukabel.com]: 16 mm², Class 5 (finely-stranded, crosslinked polyolefin-copolymer, halogen-free)
- Outer diameter 6.7 mm ... 8.1 mm

Permissible cables for UL and cUL applications:

Only use copper cables for 60/75 °C with the following properties for the AC coupling and the DC link coupling:

- AWG 6, copper conductor with PVC insulation, with or without nylon jacket, 19 strands
- Types: MTW, THHW, THW, THW-2, THHN, THWN-2, TW, TWN
- CSA types: TW, TWU, TWN75, TW75, TWU75, T90. It is not permissible that other cables are used.

You can also use cables with a higher rated temperature value. It is not permissible to reduce the conductor cross-section.

Establishing the coupling

1. Thread the insulated cables through the connector, allow the cables to protrude by 3 mm ... 5 mm at the end connectors.
Markings are provided on the end caps showing the permissible amount of protrusion. To do this, place the end cap on the connector as shown in the diagram and then shorten the conductors appropriately.



2. Tighten the screws with a torque of 3 Nm to establish an electrical contact. Please note that you must tighten the screws so that the red marking on the connector is no longer visible. The electrical contact has not been reliably established if the red marking is still visible.
3. For the AC coupling, close and seal the connector of the last converter using an end cap. For the DC link coupling, close and seal the connectors of the first and last converters using end caps.

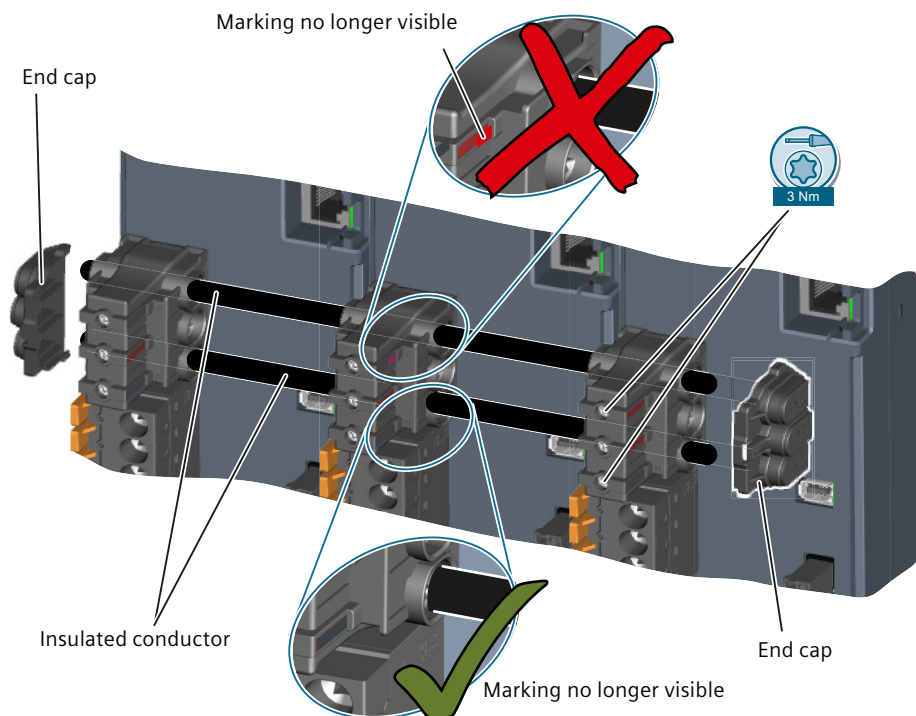


Figure 6-25 Establish a coupling - example for a DC link coupling

Note

The cables for the AC coupling and the DC link coupling may only be used once to establish a connection.

Further, comply with the notes provided in the documentation supplied with the contactors.

6.4.6.5 Connecting a braking resistor

You can either use the internal braking resistor or connect an external braking resistor.

Using the internal braking resistor

If you are using the internal braking resistor, terminals DCP and R2 must be jumpered at connector X4.

The jumper is included in the scope of delivery of the converter.

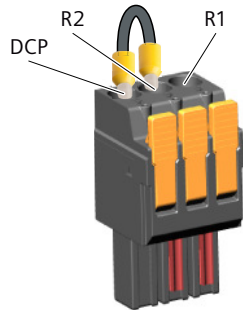


Figure 6-26 X4 - connection for using the internal braking resistor


Using an external braking resistor

If you are using an external braking resistor, terminals DCP and R2 must not be jumpered at connector X4. Connect the braking resistor via the DCP and R1 terminals. Pre-charging of the converter then takes place via the external braking resistor.

The protective conductor is connected at the upper grounding connection of the device. The shield support is realized at the rear panel of the electrical cabinet; the shield must be connected through a large surface area.

The terminals are spring-loaded terminals.

The permissible cable length is 10 m.

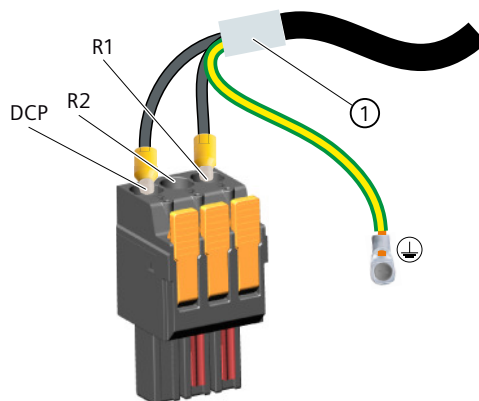

① Shield

Figure 6-27 X4 - connection for an external braking resistor

6.4 Connecting the converter and the motor

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 10
- Insulation stripping length: 18 mm

6.4.7 Additional connections at 1 AC / 3 AC converters

6.4.7.1 Connecting digital inputs and the external 24 V supply

Connecting the external 24 V supply

Connect a 24 V power supply to the converter.

The terminals are spring-loaded terminals.

Permissible cable length: 30 m

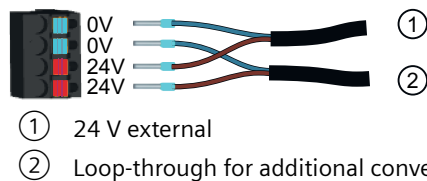


Figure 6-28 X124 - 24 V external (connection at converters with 1 AC line connection)

Note

Connecting converters with 3 AC line connection

For converters with 3 AC line connection, the mounting position of the connector is rotated 180°.

Maximum current for looping through via the internal jumper (blue-blue, red-red): 24 A.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 24 ... 12
- Insulation stripping length: 10 mm

Connecting digital inputs

Digital inputs DI 0 and DI 1 are high-speed digital inputs and can be used as measuring probes.

Digital inputs DI 2 and DI 3 form a failsafe digital input.

You can connect the temperature monitoring for an external braking resistor to DI 4. When you use the temperature monitoring function, the converter shuts down the motor if the external braking resistor temperature becomes too high.

The terminals are spring-loaded terminals.

Permissible cable length: 30 m

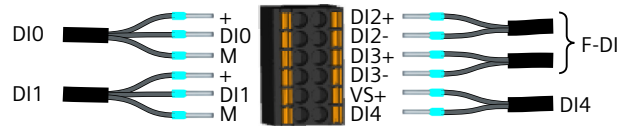


Figure 6-29 X130 - connector for digital inputs

Note

Switchable voltage source VS+

A switchable voltage source is available at the terminal marked with "VS+".

Via this terminal, adjustable dark pulses can be generated that can be used to diagnose the control circuits for the failsafe digital inputs. For additional information, see Chapter "Self-test of the failsafe digital input (F-DI) (Page 135)."

When using dark pulses via terminal "VS+", the power supply for the temperature monitoring of an external braking resistor must be realized via a terminal marked "+", or must be externally provided.

Permissible conductor cross-sections:

- For single-conductor connection:
 - 0.2 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

The three terminals marked with "+" and "VS+" are provided as power supply for external sensors. They are short-circuit-proof and provide a max. of 50 mA per sensor. A sensor short-circuit interrupts the power supply for all three sensors.

6.4.7.2 Connecting service interface and PROFINET

Connect your operating unit, for example a PC, via an Ethernet cable to the service interface (socket X127).


The transmission rates are 10 Mbit/s or 100 Mbit/s.

Connect the converter with PROFINET cables with RJ45 FastConnect connectors or with PROFINET patch cables (see accessories) via the sockets X150 P1 and X150 P2 to the PROFINET network.



Figure 6-30 RJ45 FastConnect connector

Table 6-9 Pin assignment for X127, X150 P1 and X150 P2

	Pin	Pin assignment	Explanation
	1	RXP	Receiving data +
	2	RXN	Receiving data -
	3	TXP	Sending data +
	4	Reserved	-
	5	Reserved	-
	6	TXN	Sending data -
	7	Reserved	-
	8	Reserved	-

Permissible cable length for the service interface (terminal X127): 10 m

Permissible cable length for PROFINET (terminals X150 P1 and X150 P2): 100 m

LED states

For diagnostic purposes, the PROFINET interface X150 P1/P2 features a green and a yellow LED.

The following status information is displayed:

Table 6-10 LED states of PROFINET interface X150 P1/P2

LED	Color	Status	Description
Link port	-	Off	Missing or faulty link
	Green	Continuous light	10 or 100 Mbit link is available
Activity port	-	Off	No activity
	Yellow	Flashing light	Sending or receiving data

6.4.8 Connection examples

Connection example for converters with 1 AC line connection

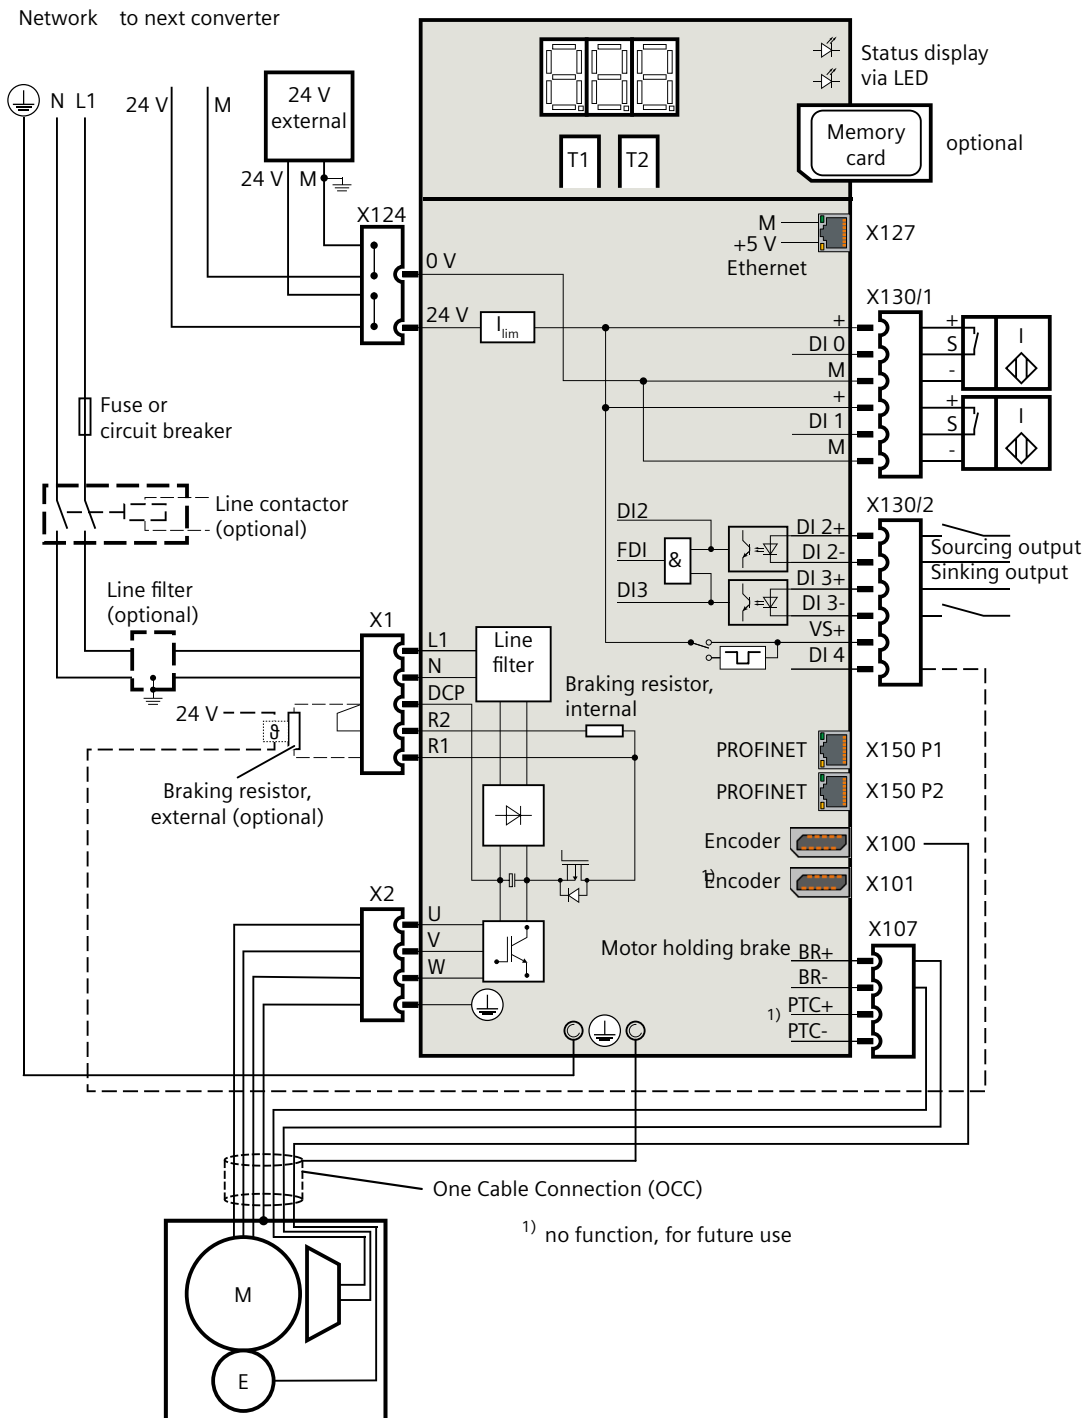


Figure 6-31 Connection example for converters with 1 AC line connection

Connection example for converters with 3 AC line connection

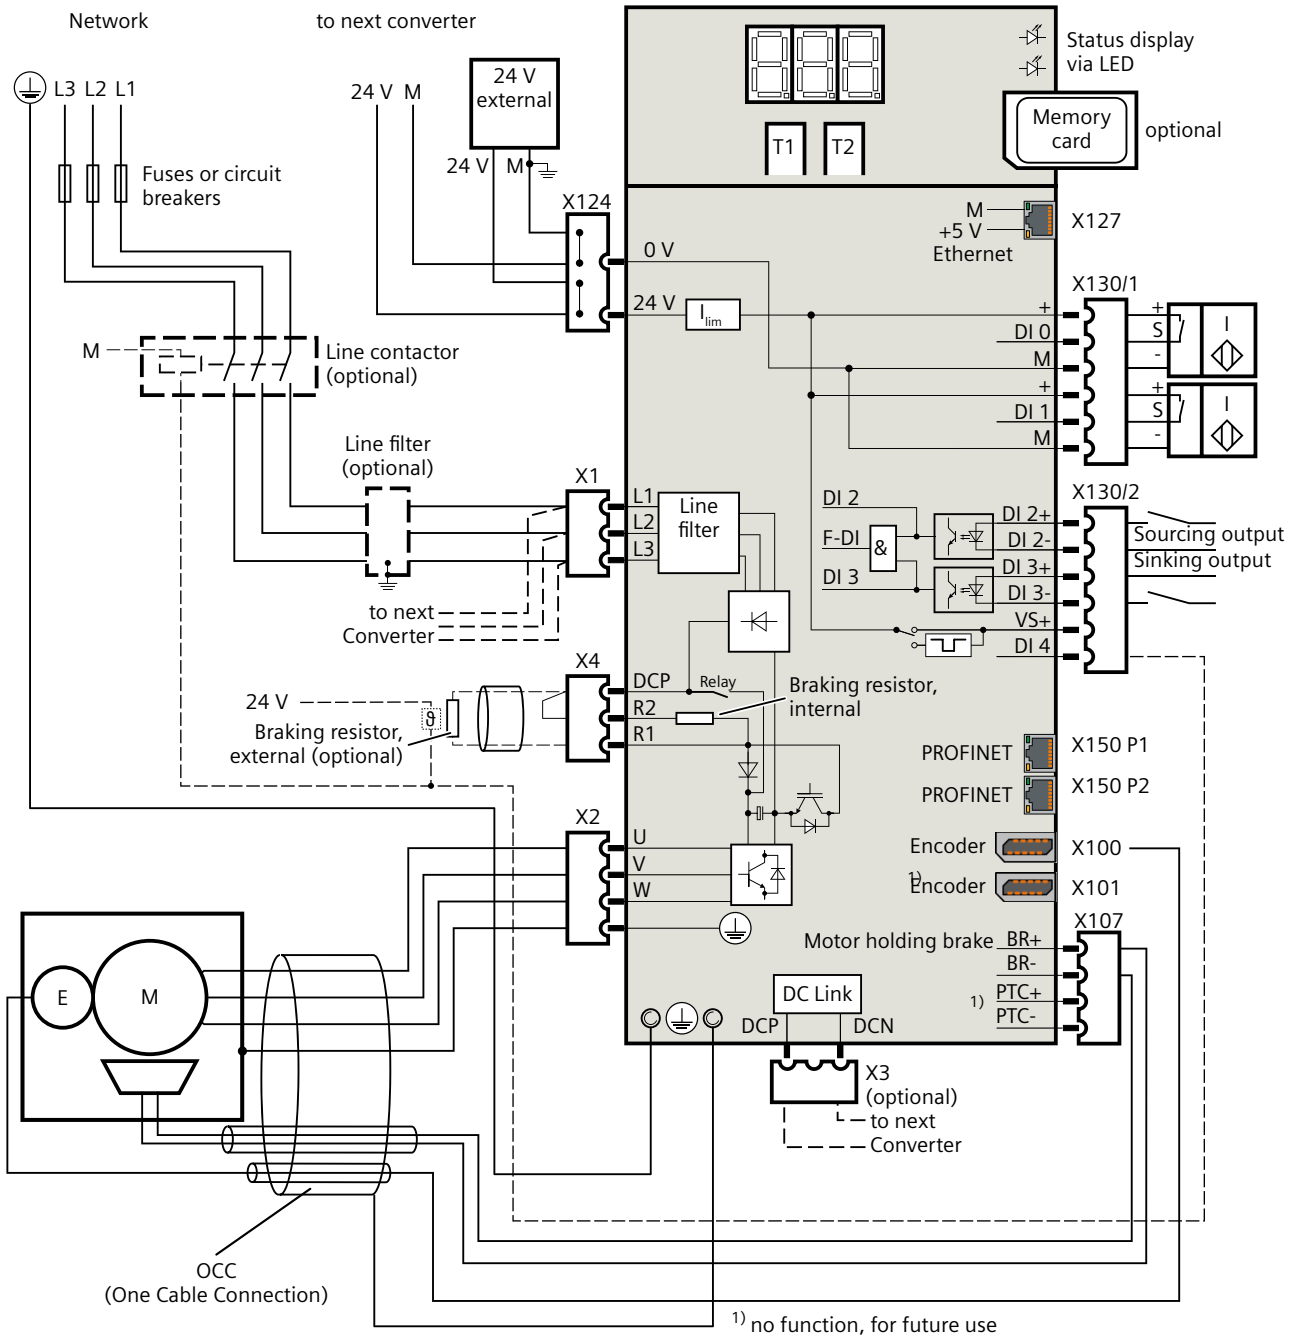


Figure 6-32 Connection example for converters with 3 AC line connection

6.4.9 Connection examples of the fail-safe digital input

Interconnection for an EMERGENCY STOP button with 24 V internal

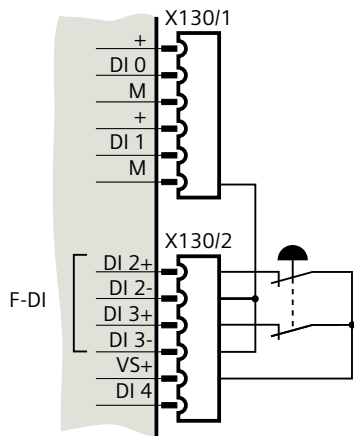


Figure 6-33 Interconnection for an EMERGENCY STOP button with 24 V internal

Uses of the interconnection:

- Self-test using dark pulses entered via terminal VS+
- Category 4 according to ISO 13849-1 can be achieved (local use, e.g. EMERGENCY STOP)
- Short-circuit detection (with respect to ground and 24 V)

Interconnection for an EMERGENCY STOP button with 24 V DC external

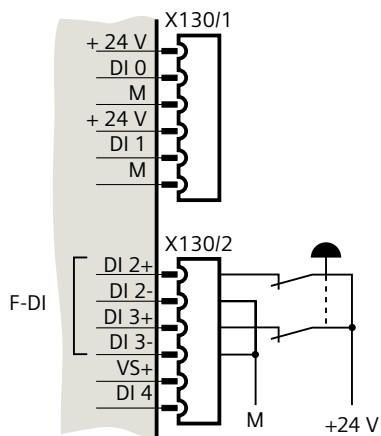


Figure 6-34 Interconnection for an EMERGENCY STOP button with 24 V DC external

Uses of the interconnection:

- Self-test using internal test signals
- Category 3 according to ISO 13849-1 can be achieved (local use, e.g. EMERGENCY STOP)

Interconnection of the failsafe digital input with a failsafe digital output

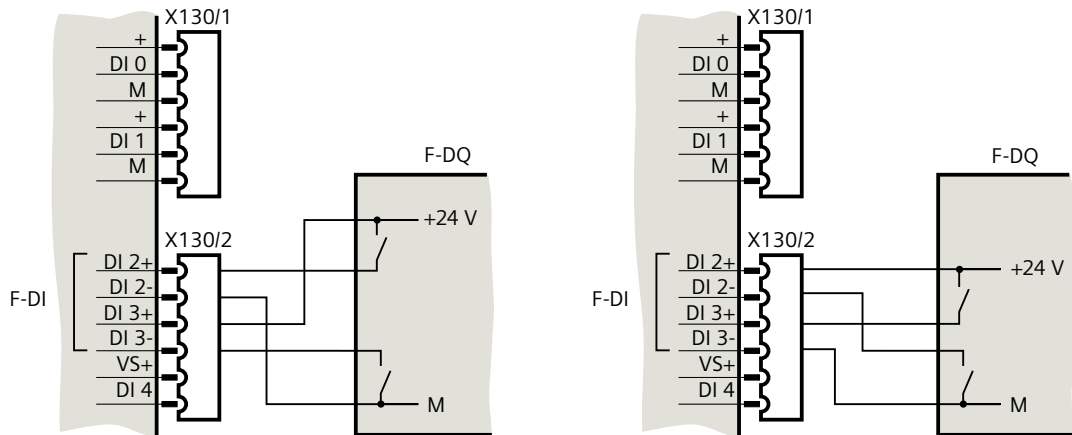


Figure 6-35 Interconnection of the failsafe digital input with a failsafe digital output

Uses of the interconnection:

- Self-test using externally entered dark pulses
- Category 4 according to ISO 13849-1 can be achieved (local use, e.g. EMERGENCY STOP)

Commissioning (web server)

7.1 Introduction

Description

The web server commissioning tool is integrated in the converter.

The web server supports you throughout the service life of the application:

- Online commissioning
- Diagnostics
- Operator control and monitoring
- Service and maintenance
- Support

The settings made are applied after commissioning has been completed and transferred to the converter.

The web server has multi-level security functionality.

More information

Detailed information about security settings in the web server is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

7.2 Requirements for commissioning

Description

- You have correctly installed the converter and the motor.
- You have mounted the motor including encoder to the mechanical system.
- You have connected the motor to the converter.
- You have connected the converter to the operating unit via the service interface (X127).
- You have switched on the converter supply voltage.
- The converter has ramped up.

7.3 Fundamentals

7.3.1 Supported operating units

Description

The following operating units are supported for the connection with the web server:

- Programming device, PC, notebook
- Tablet, smartphone
Mobile end devices are connected to the converter via SINAMICS Smart Adapter.
More information about the SINAMICS Smart Adapter can be found in Chapter "SINAMICS Smart Adapter (Page 590)".

As a result of the responsive design, content is adapted to the display size of the operating unit.

7.3.2 Supported browsers

Description

The web server supports the following browsers:

Browser ¹⁾	Version
Apple Safari	≥ Version 15.0
Google Chrome	≥ Version 83
Microsoft Edge	≥ Version 88
Mozilla Firefox	≥ Version 91

¹⁾ Whichever browser you use, we recommend using the most up-to-date version.

7.3.3 Communication interfaces

Description

The following interfaces are available for accessing the converter:

Interface	Information
Service interface X127	The default access to the web server is via the service interface X127.
	Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible.
	Defaults: <ul style="list-style-type: none"> • IP address: 169.254.11.22 • Subnet mask: 255.255.0.0 • Connection type: HTTPS
	Restrictions: <ul style="list-style-type: none"> • Only local access is allowed. • No networking or only local networking in a closed and locked electrical cabinet is permissible. • For remote access to the electrical cabinet, you must apply additional security measures to prevent misuse through sabotage, data manipulation by unqualified persons and interception of confidential data.
	Access using mobile end devices: <ul style="list-style-type: none"> • If you carry out commissioning or diagnostics using a mobile end device such as a smartphone or tablet, you may temporarily connect the service interface X127 to an external WLAN access point. • The SINAMICS Smart Adapter establishes a point-to-point connection to the mobile end device via WLAN.
PROFINET interface X150	The IP addresses of the service interface X127 and the PROFINET interface X150 must not be in the same subnet.

7.3.4 Making the operating instructions available for the web server information system

Overview

For selected topics, you can use the information system of the web server to access the operating instructions directly. To do this, you must make the operating instructions available on a prepared memory card (SD card).


Requirement

- You have an empty SD card with a maximum storage capacity of 32 GB (e.g. 6SL5970-0AA00-0AA0) onto which you can load the operating instructions.
- You have connected a suitable SD card reader to your PC.


Procedure

To make the operating instructions available for the web server information system, proceed as follows:

1. Load the web server information system to your PC.
 The operating instructions for the web server information system are available to download at this address (<https://support.industry.siemens.com/cs/ww/en/view/109815715>).
 The operating instructions are provided as a zipped file "S210_S-1FK2_S-1FT2_op_instr_0223_Webserver.zip" under "Annex to this entry".
2. Unzip the file that you downloaded "S210_S-1FK2_S-1FT2_op_instr_0223_Webserver.zip".
 The annex contains all available language versions as an individually zipped language-dependent file.

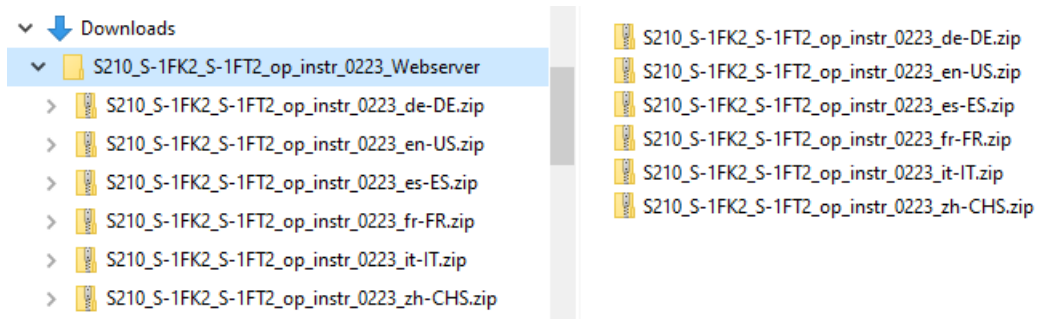

3. Unzip the relevant language-dependent ZIP file to a folder with the name of the ZIP file (e.g. for the English version "S210_S-1FK2_S-1FT2_op_instr_0223_en-EN").
 The unzipped files are contained in this folder.
4. Insert the SD card into your PC's SD card reader.
5. In the root directory of the memory card, create a folder called "DOC".
6. Copy the unzipped folder (e.g. in the English version "S210_S-1FK2_S-1FT2_op_instr_0223_en-EN") to the "DOC" directory on the SD card.

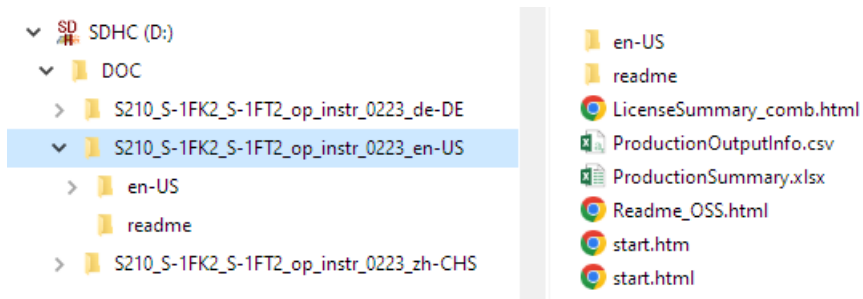

Depending on the available space on the SD card, you can copy all available language versions to the SD card. To do this, repeat the unzip/copy process for each language version.

7. Eject the SD card from the PC.
8. Remove the SD card from the reader.
9. Insert the SD card into the converter.

Result

You have made the operating instructions available for the web server information system.

For selected topics, you can now access the instructions via the context-sensitive information system.

7.3.5 Using the web server information system


Overview

In the web server, you have the support of an integrated, multi-level information system.

You decide in a context-sensitive interface how much and what kind of information is displayed.

Information in the current view

Information displayed in the current view of the web server:

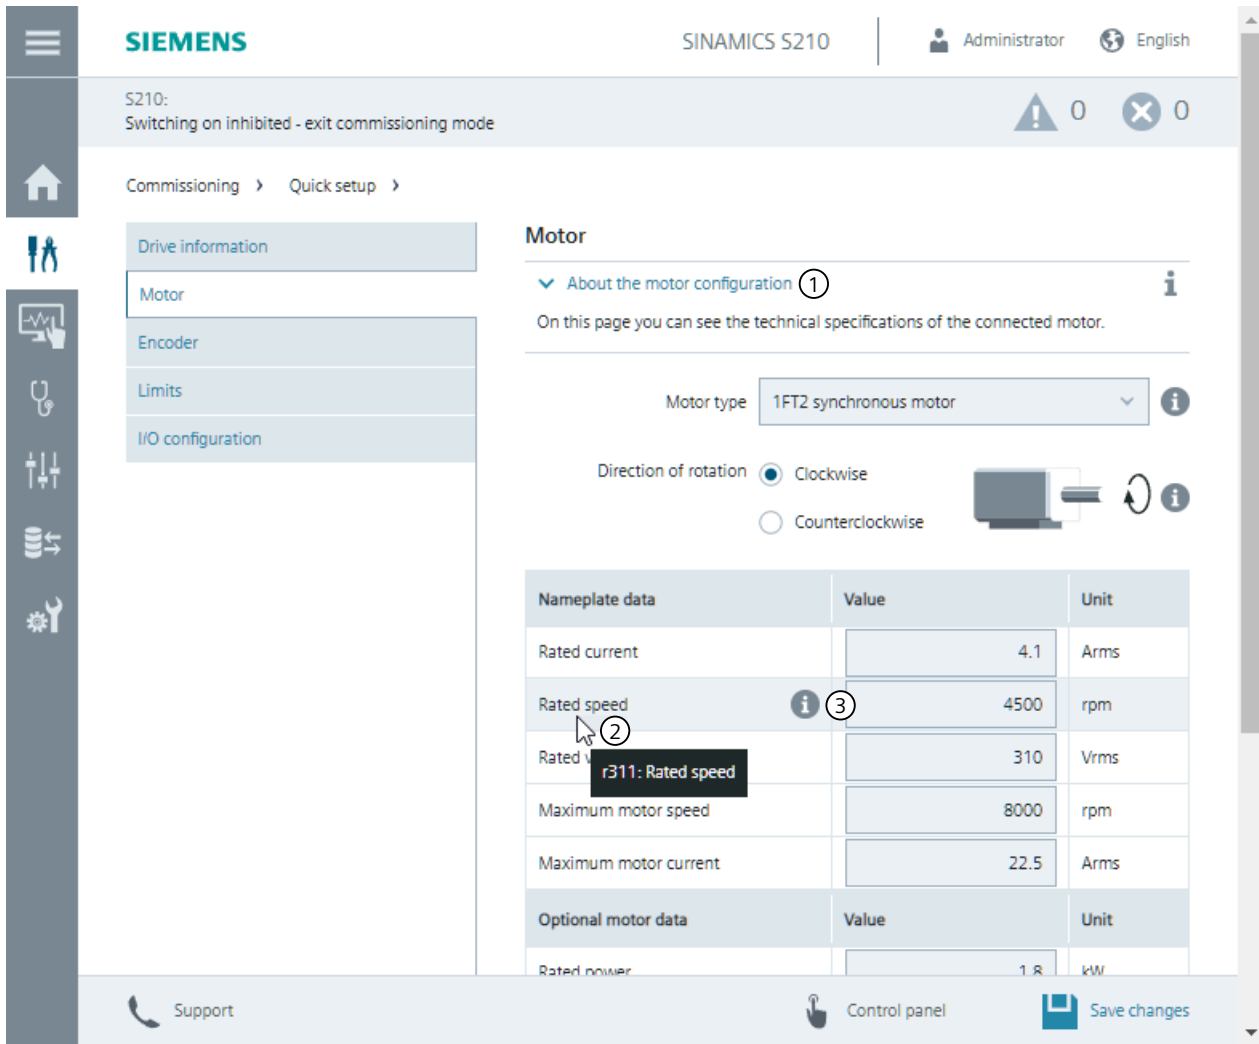

- ① **Display general information about the function of the current view**

 - Click or tap on the header or on the expand icon to show general information about the function of the current view.
 - Click or tap again on the header or on the collapse icon to hide the general information about the function of the current view.
- ② **Display a tooltip with context-sensitive short information about a setting**

 - 📘 Point with the mouse pointer or tap on the setting you need information about.
 - The setting is highlighted and the assigned info icon appears.
 - If you hold the mouse pointer or keep the tap pressed on the setting for longer, a tooltip with the context-sensitive short information is displayed.



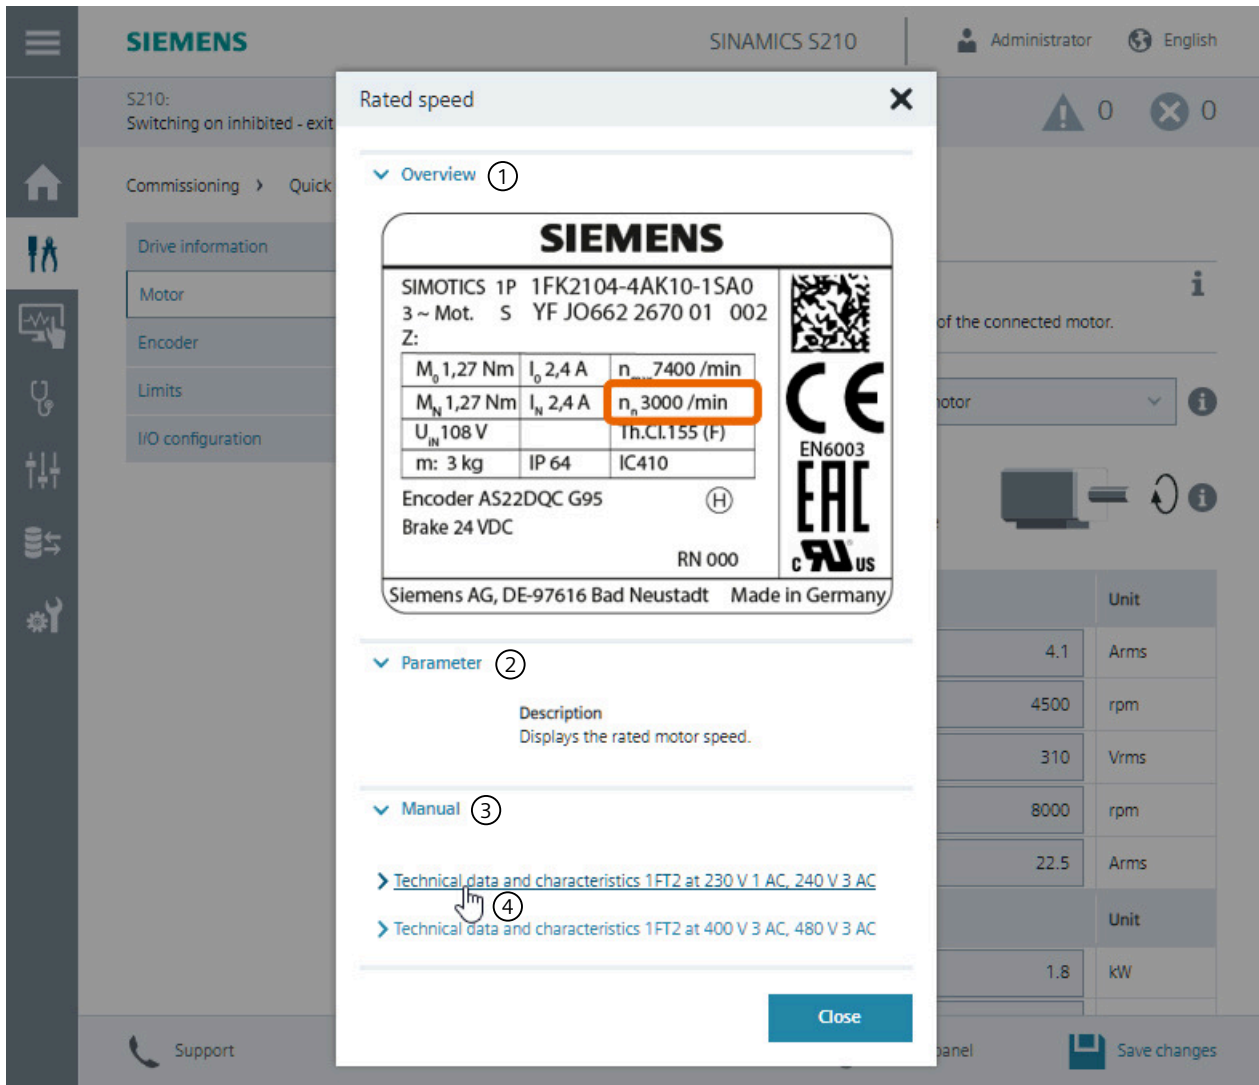
- ③ **Display detailed information in a context-sensitive help window**
 -  Point with the mouse pointer or tap on the setting you need information about.
The setting is highlighted and the assigned info icon appears.
 -  When you move the mouse pointer to the info icon, the icon and the mouse pointer change their appearance.
If you now click or tap on the info icon, a context-sensitive help window appears with detailed information.

Figure 7-1 Information in the current view

Detailed information in a context-sensitive help window

Detailed information about a setting displayed in a context-sensitive help window:



- ① **Overview**
 Display general information about the meaning or function of the setting.
 - Click or tap on "Overview" or on the associated expand icon to show general information about the meaning or function of the setting.
 - ✓ Click or tap again on "Overview" or on the associated collapse icon to hide the general information about the meaning or function of the setting.

- ② **Parameter**
 Display detailed information about the parameter defined by the setting.
 - Click or tap on "Parameter" or on the associated expand icon to show detailed information about the parameter.
 - ✓ Click or tap again on "Parameter" or on the associated collapse icon to hide the detailed information about the parameter.

③

Manual

For selected settings, you can use the links under "Manual" to access the operating instructions directly.

The requirements in order to do this are set out in Chapter "Making the operating instructions available for the web server information system (Page 195)".



Click or tap on "Manual" or on the associated expand icon to show links to the operating instructions.



Click or tap again on "Manual" or on the associated collapse icon to hide the links to the operating instructions.

④


Click or tap on a link to open the web browser and display the linked information in the operating instructions.

Figure 7-2 Information in a context-sensitive help window

7.3.6 Reloading pages

Procedure

If the web server does not respond, or if buttons are inactive or are not labeled, although the converter is not fully utilized with internal calculations, reload the web server pages as follows:

- At the PG/PC via <F5>
- At the tablet PC or smartphone via 

7.4 Getting Started

7.4.1 Calling the web server

Overview

Converter commissioning takes place with the user interface of the web server.

Requirement

- You have connected the converter to the operating unit via the service interface X127.

Procedure

To access the web server, enter the IP address of the converter, e.g. `https://169.254.11.22`, in the browser.

More information

When you call the web server for the first time, you are prompted to define the basic settings.

7.4 Getting Started

If you have already made the basic settings, then the web server starts and opens the home page. You can commission the converter, troubleshoot it, operate it, monitor it or call up support through the support pages.

7.4.2 Settings for brand-new converters

Overview

The basis settings are required before performing first commissioning for a brand-new converter.

Requirement

- The operating unit is connected to the converter via the service interface X127 or the PROFINET interface X150.
- The web server is accessed with the IP address (default: 169.254.11.22).

Description of function

If the web server was called, then you are automatically transferred to define the settings. When doing, this several function views are run through.

The function views contain the following settings:

- Basic settings (Page 202)
- Security settings (Page 203)

7.4.3 Basic settings

Overview

Initial basic settings are defined in the function view.

Requirement

The web server is being called for the first time.

Description of function

The basic settings are as follows:

- Preferred language of the user interface
- Converter date and time; either manually or via NTP

After these entries have been made, using the "Next" button, you can continue to the Security Wizard.

7.4.4 Security settings

Overview

The settings for user management and access control (UMAC) are defined using the Security Wizard.

Requirement

NOTICE**Converter damage due to data manipulation**

Inadequate protection of drive data makes it easier to gain unauthorized access to the converter. Unauthorized data manipulation can change the converter settings. Changed settings can stop the converter working properly or damage the converter.

- Only deploy low protection in exceptional cases and only when no outsider can access the converter, e.g. if the converter is not yet connected to a network.
- Protect the interfaces of the converter against unauthorized access, e.g. with a locking control cabinet.
- Create a higher level of security as soon as possible.

Description of function

One of the following options can be selected:

- "Configure security settings"
We recommend this setting for comprehensive protection.
- "Continue with low security settings"
With this setting, UMAC is deactivated.
You can configure the security settings at a later time, see Chapter "Protection & Security (Page 240)".

Select "Configure security settings"

Define the settings for UMAC:

- "Activate User Management & Access Control":
Activation is preset.
If UMAC is activated, it can only be deactivated by a full reset of the converter to factory settings. This causes all security settings to be lost.
You can find more information about the full reset to factory settings in Chapter "Manual reset to factory settings with memory card (Page 356)".
- "Administrator setup":
Specify the user name and password of the drive administrator.
The drive administrator is permanently assigned the runtime role "Drive Administrator". This assignment cannot be changed.
- "Read access configuration":
Specify whether the user has read rights without logging in and whether the user is allowed to acknowledge results without logging in.
The option is deactivated in the factory setting. If read access is not permitted, then the login page is displayed when the web server is called.

Define the settings to access the web server:

- "Web server activation":
Factory settings to access the web server:
 - Via service interface X127 with the HTTPS protocol
 - Via PROFINET interface X150 with the HTTPS protocol
If both factory settings are deactivated, then it is not possible to access the web server.

Check the selected security settings:

- "Summary":
The summary provides an overview of the selected settings.

Finish and continue

The security settings are checked by clicking on "Finish". If there is no error, the settings are applied.

After finishing, you can continue with one of the following options:


- Continue with quick setup
- Continue with the web server home page

7.5 Functions and menus

7.5.1 Home page

Description

The following figure shows the basic structure of the web server pages.

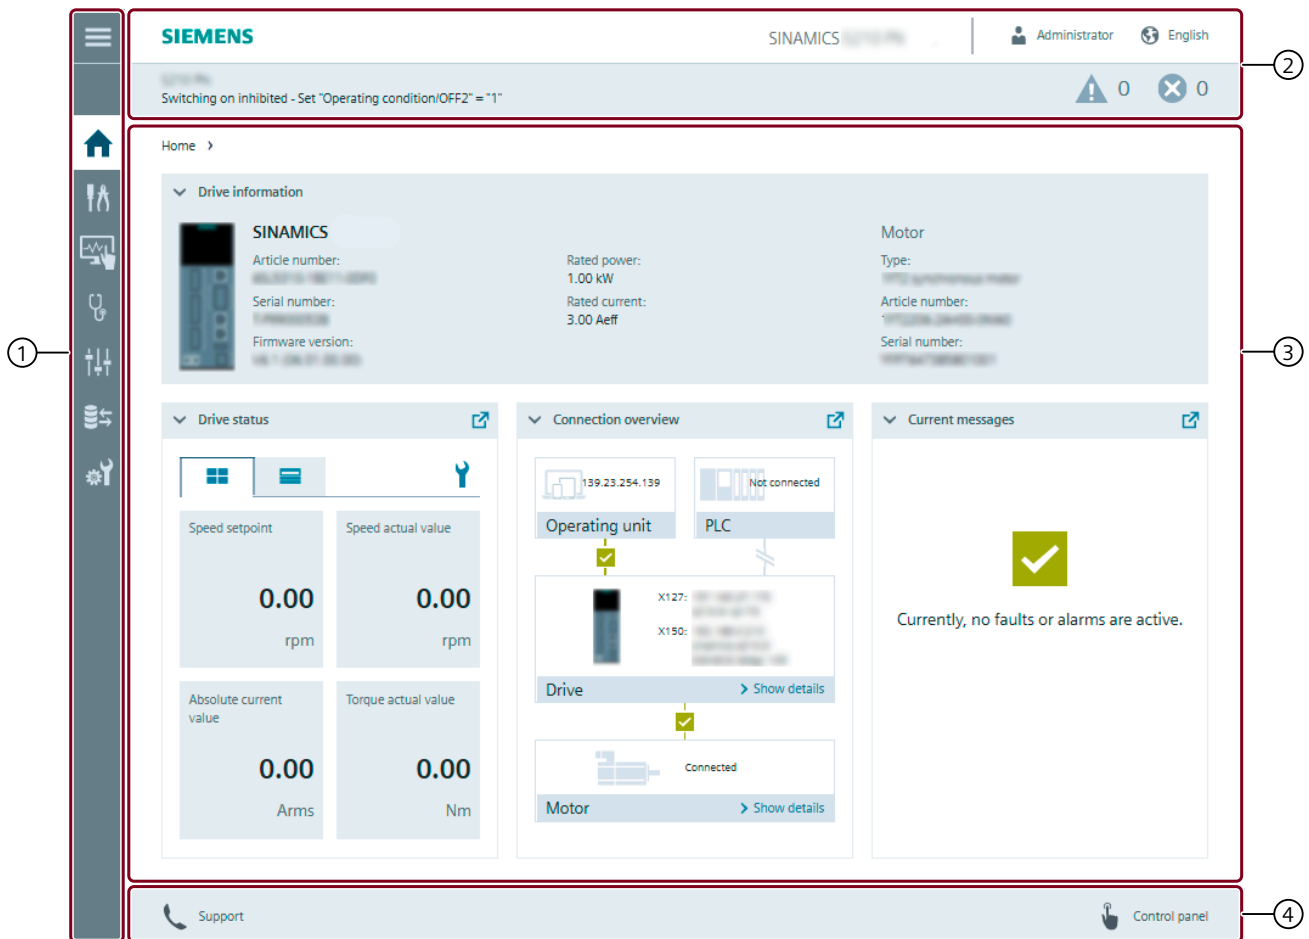

① Navigation bar

② Status bar

③ Main window

Access to the function views depends on the access rights of the logged-in user.

④ Action bar


Note: The action bar may also contain a save button if manual saving (factory setting) is activated in the menu "System" > "Settings". However, if automatic saving is activated there is no save button .

Figure 7-3 Structure of the web server (example)

7.5.2 Commissioning

7.5.2.1 Complete commissioning workflow

Overview

The web server guides users step-by-step through the drive commissioning.

Description of function

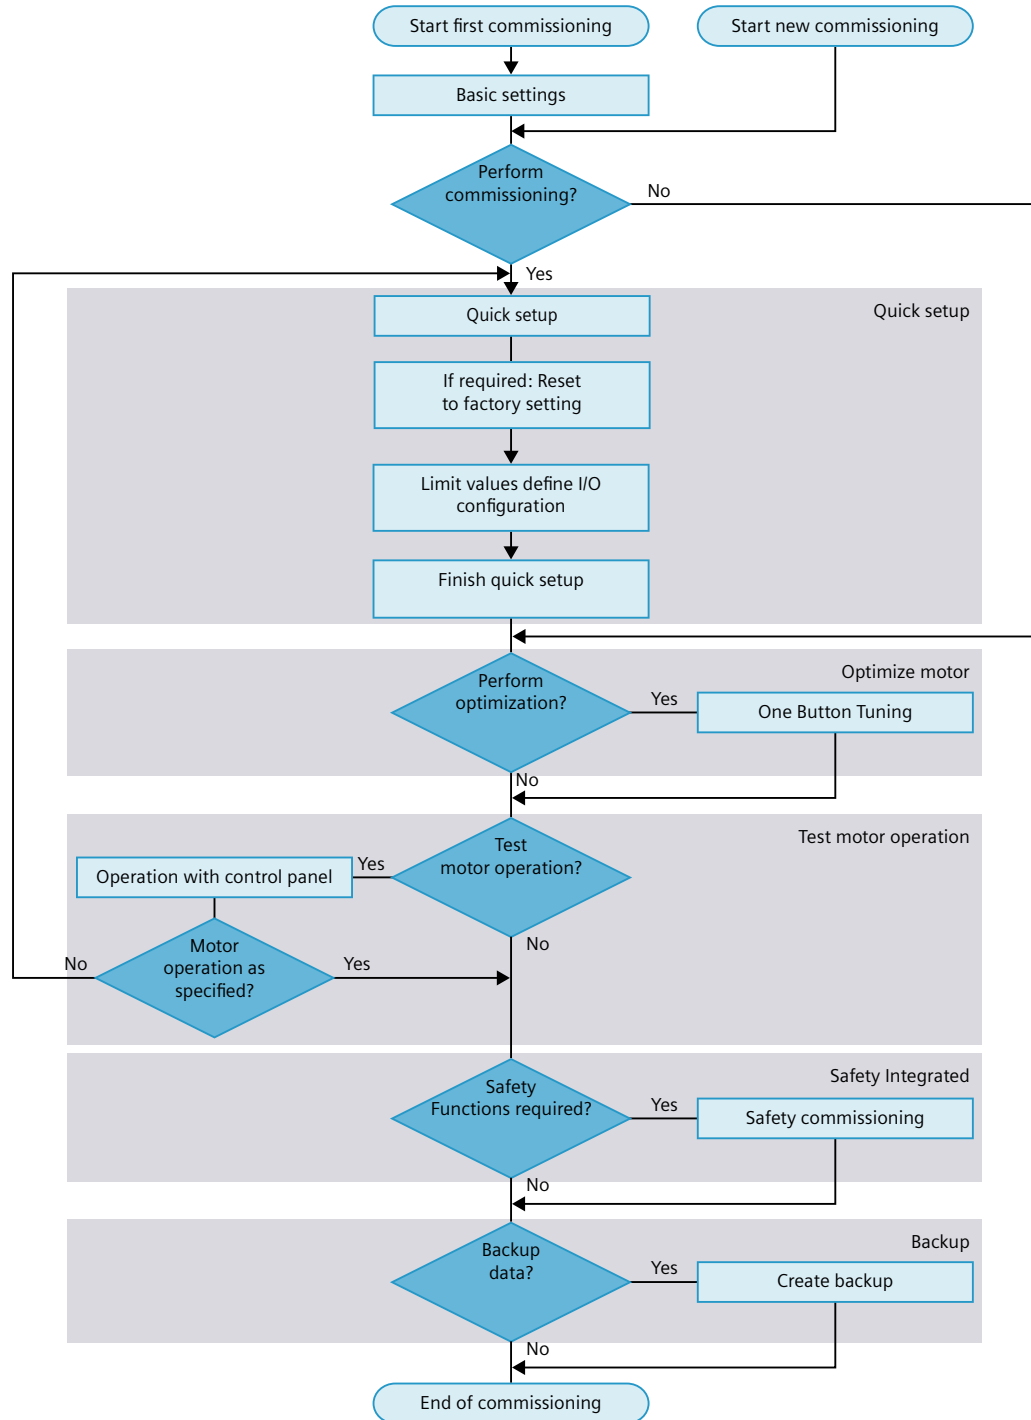


Figure 7-4 Procedure for commissioning with web server

Commissioning involves the following steps:

- **Basic settings:**
If the converter has already been commissioned, then the web server jumps to the basic settings.
The following settings are required for a brand-new converter:
 - Language, date, time
 - Configuring security settings
The Security Wizard can be called again at any time from the menu "System".
- **Quick setup:**
Menu "Commissioning" > "Quick setup"
The converter identifies the motor and encoder data via the DRIVE-CLiQ connection after the supply voltage has been switched on.
Optionally, you can define the limit values to be respected and the I/O configuration.
- **Optimize motor:**
Menu "Commissioning" > "Optimization"
With the One Button Tuning (OBT) function, the mechanical drive train is measured using short test signals.
In this way, the controller parameters are optimally adapted to the existing mechanical system.
- **Test motor operation:**
Action bar > "Control panel"
The closed-loop speed control of the motor can be tested by moving the motor from the web server control panel in jog or continuous motion.
- **Safety Integrated commissioning:**
Menu "Commissioning" > "Safety Integrated"
If Safety Integrated Functions are required, you must set the Safety Integrated Functions and test using an acceptance test.
- **Backup:**
Menu "Backup and restore"
We recommend a backup of the drive settings.

More information

More detailed information on user management and security settings is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

7.5.2.2 Quick setup


Overview

The converter can generally be operated without making additional settings using quick setup. We recommend that quick setup is performed to set the limit values and the I/O configuration to optimally address the target application.

Requirement

- The drive system has been configured. The components are wired.
- Web server access is active.

Description of function

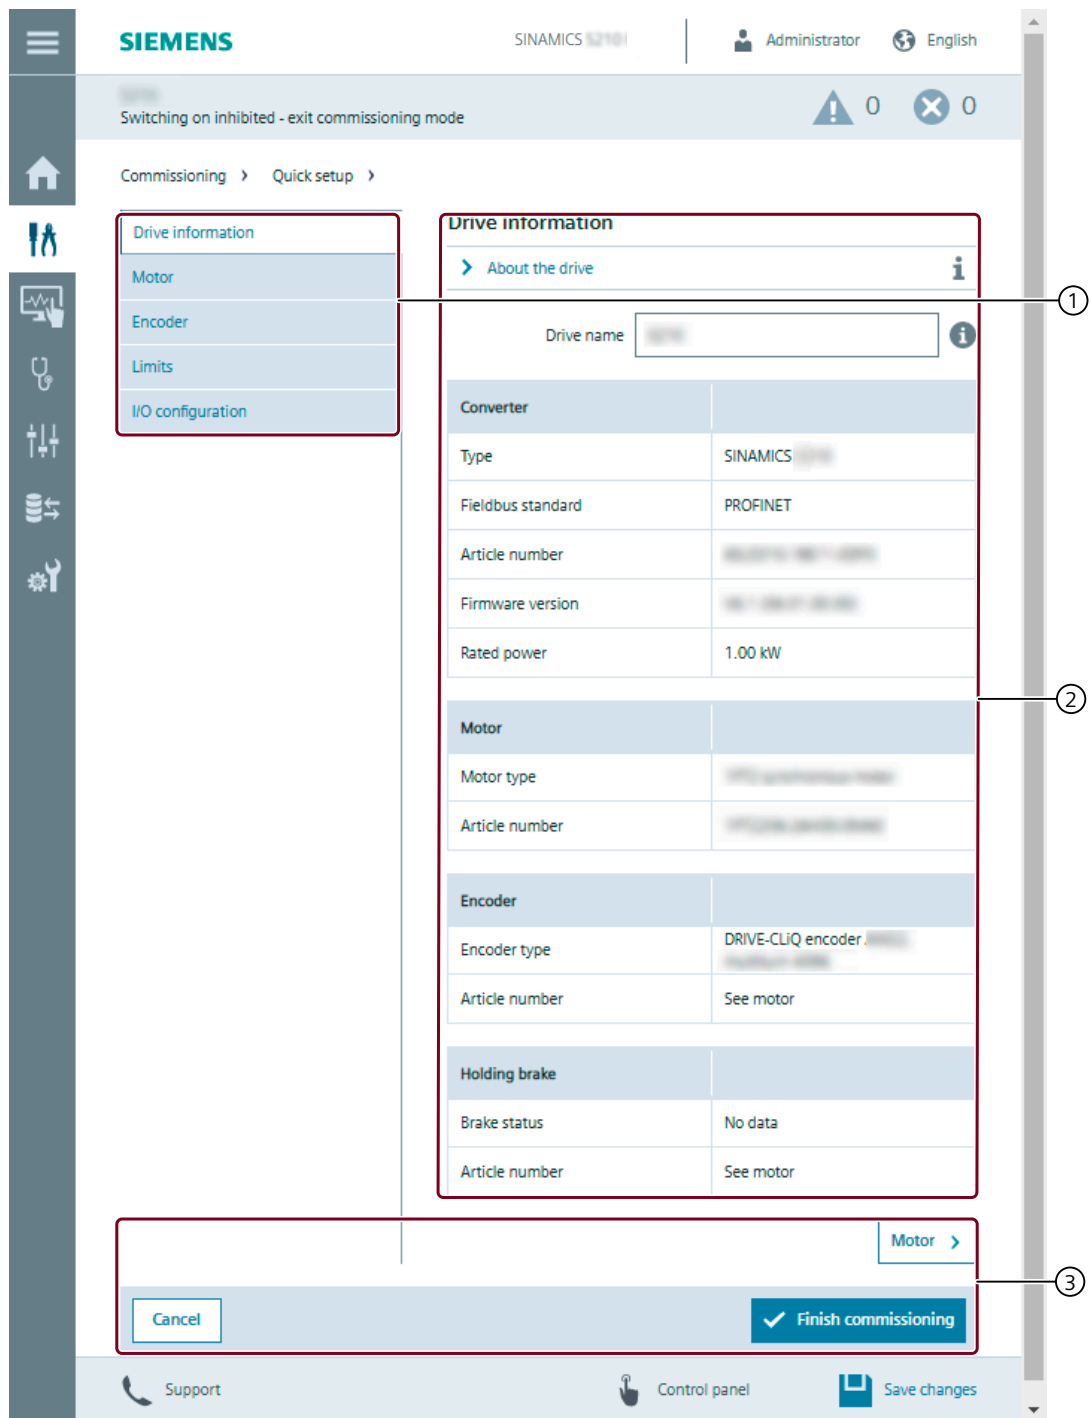

- ① Menu and navigation for quick setup
- ② Display of the individual quick setup steps
- ③ Navigation

Figure 7-5 Quick setup using the web server

Only the most important properties of the converter are configured in the quick setup.

Motor and encoder are directly detected during ramp-up as a result of the DRIVE-CLiQ connection. The data are accepted and shown in steps "Motor" and "Encoder". These data are for information only and cannot be changed during quick setup.

The converter creates a restore point when quick setup is started. The converter saves the changes after every commissioning step. The converter is reset to the restore point if quick setup is canceled.

For fast navigation through the quick setup, for example to check the set configuration data, the web server has a read-only mode.

The commissioning Wizard of the web server guides users through the following quick setup steps.

Drive information

The step provides information about the converter, motor, encoder and motor holding brake being used.

The following data can be changed:

- Drive name
A specific drive name can be assigned.

Motor

The data of the motor being used are displayed. It is not possible to configure another motor.

The direction of rotation of the motor can be selected:

- Right
- Left

Encoder

The data of the encoder being used are displayed.

Configuration is not possible.

Limit values

The converter limit values are shown graphically and in a tabular form.

The following data can be configured:

- Limit values by making an entry in the table
From the content perspective, table and diagram are linked with one another.
- Device supply voltage

I/O configuration

The configuration of the digital converter inputs is shown graphically and in a tabular form.

Configuration options:

- In the table, a function can be assigned to each digital input of the terminal. Specified functions can be selected. The selection is shown in the diagram.
- DI 2, 3 is reserved for Safety Integrated.
If DI 2,3 was configured as FDI 0 via Safety Integrated, then the yellow F-DI symbol is displayed in the table.
- The digital input 0 or 1 can be defined as the equivalent zero mark. No equivalent zero mark is active in the default setting. The evaluation is realized via the encoder zero mark.

7.5.2.3 Testing the converter configuration

Overview

After the quick setup, the web server allows you to test the converter configuration in jog mode or continuous motion via the control panel.

Description

To test the configuration, the control panel must be open and the speed setpoint entered.

There are 2 ways of opening the control panel:

- Button "Finish quick setup" > Dialog query with selection option "Open control panel"
- Action bar > "Control panel"

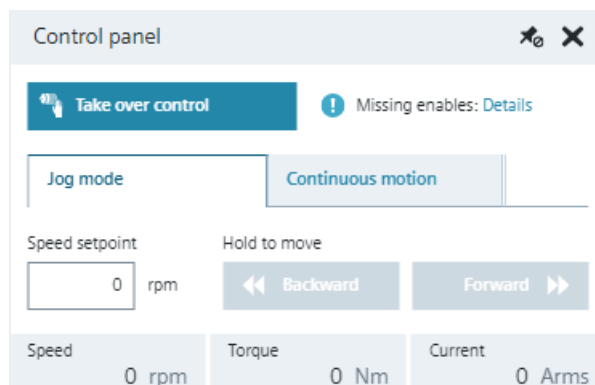


Figure 7-6 Testing the converter configuration via the control panel

More information

You can find more information in Chapter "Control panel (Page 245)".

7.5.2.4 Optimization

Overview

Once quick setup has been completed the drive settings are optimized using the One Button Tuning (OBT) function.

With OBT, the mechanical drive train is measured using short test signals. In this way, the controller parameters are optimally adapted to the existing mechanical system.

Requirement

To reduce the stress on the mechanical system, before OBT, the torque limit can be reduced, and after OBT has been completed, the previous value can be set again.

NOTICE
Material damage caused by an impermissible direction of motion of the motor
One Button Tuning runs the motor in both directions. Impermissible directions of motion can damage the machine or installation.
<ul style="list-style-type: none">• If a particular direction of motion of the motor is impermissible, do not carry out One Button Tuning.

Description of function

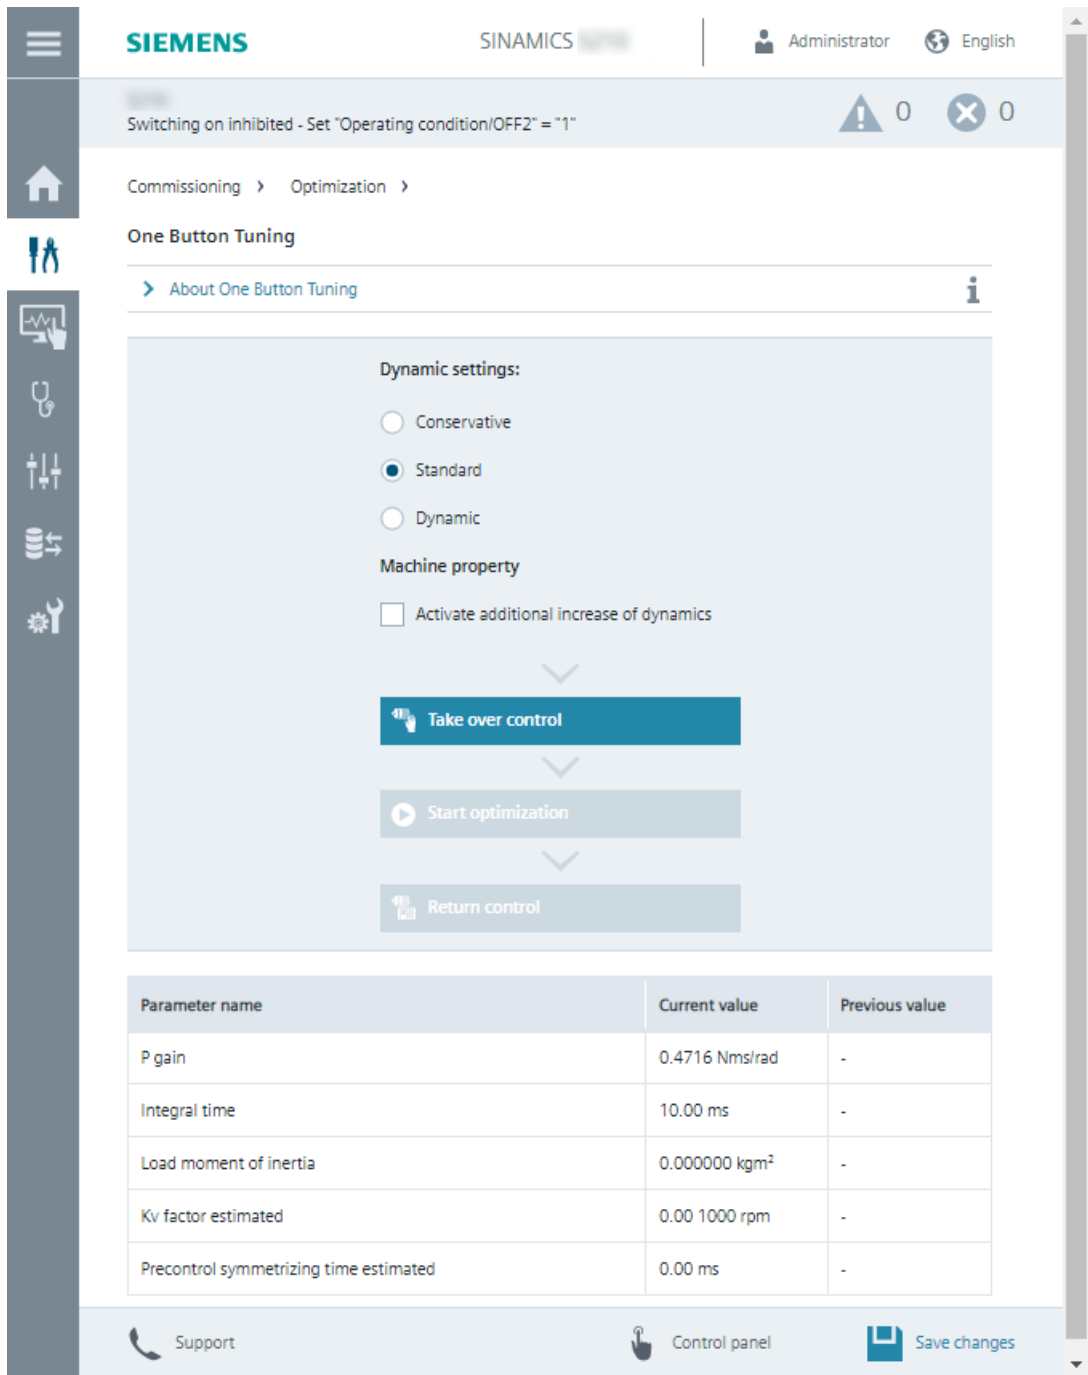


Figure 7-7 One Button Tuning

The optimum controller settings are determined using the following settings:

- Take over control and relinquish control:
Take over master control before starting to optimize the controller.
Relinquish master control back to the converter once the controller has been optimized.
- Select dynamic response settings:
 - Dynamic
100% dynamic response; speed control with fast torque precontrol
 - Conservative
60% dynamic response; speed control without torque precontrol
 - Standard
80% dynamic response; speed control with torque precontrol
- Machine property:
The "Activate additional dynamic response increase" option increases the proportional gain of the optimized speed control. The dynamic response is increased. The speed controller becomes faster.
If the dynamic factor is increased too much, the speed controller may become unstable.
- Start optimization:
 - Enter the angle of rotation (rotation limit) through which the motor and the connected machine are permitted to turn for the required measurements (e.g. 360°) without the mechanical system being damaged. Sensible controller parameters are obtained from an angle > 90°.
When a negative angle is entered, then the motor moves in the opposite direction.
 - The table shows how the settings have been changed by OBT.

If OBT was not successful, repeat the optimization with other settings.

7.5.2.5 Safety Integrated commissioning

Overview

Commissioning the Safety Integrated Functions of the converter includes the following:


- Selecting the functions
- Parameterizing the functions as required for the application
- Control of the functions

Requirement

- The drive system has been configured. The components are wired.
- The converter and motor are completely created in the device configuration.
- Web server access is active.
Commissioning using the web server is only possible if access to the web server via interfaces X127 and X150 was selected in the security settings.

- The appropriate license is available for Safety Integrated Functions requiring a license.
- Function rights have been assigned with the role "Drive Safety Engineer".

Description of function

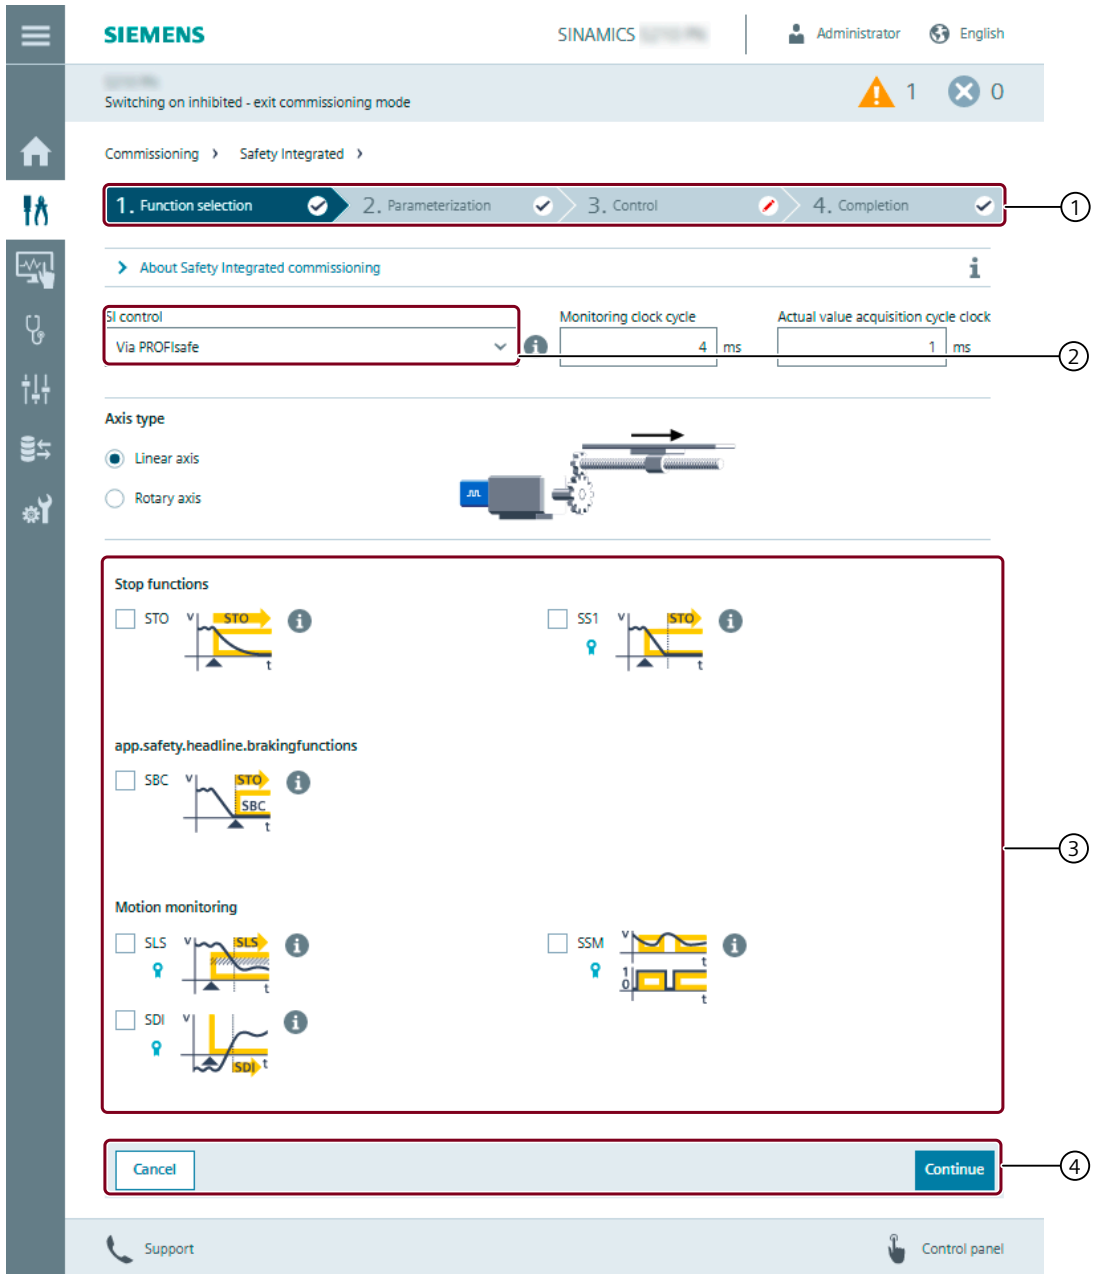

- ① Step display of the Safety Integrated commissioning Wizards
- ② Control type
- ③ Function selection
- ④ Navigation

Figure 7-8 Safety Integrated commissioning using the web server (example)

Changes to Safety Integrated settings are only possible in the "Safety Integrated commissioning" mode. The drive is in the safe state as soon as the commissioning mode is active. Safe Torque Off (STO) is active.

Commissioning of Safety Integrated must be completely run through. No settings are applied if an interruption occurs during commissioning.

The activated user management protects against unauthorized changes to Safety Integrated settings. Login takes place when the web server starts. After this, only authorized users have the necessary rights to change Safety Integrated settings. The "Safety Integrated application" right is a component of the "Drive Safety Engineer" role.

When starting Safety Integrated commissioning, the converter creates a restore point. The converter saves the changes after every commissioning step. The converter is reset to the restore point if quick setup is canceled.

For fast navigation through Safety Integrated commissioning, for example to check the settings, the web server has a read-only mode.

Safety Integrated commissioning involves the following steps:

1. Function selection
 - Selecting the Safety Integrated control type
 - Monitoring cycle: Value is set to 4 ms in the factory and cannot be changed.
 - Actual value acquisition cycle: Value is set to 1 ms in the factory and cannot be changed.
 - Selecting the axis type
When switching over the axis type, the units are also changed.
 - Selecting the available Safety Integrated Functions depending on the control type
 - License symbol
The license symbol shows the Safety Integrated Functions that require a Safety Extended license. Safety Integrated can be used in the Trial License mode for test purposes.
2. Parameter assignment
Configuration of the activated Safety Integrated Functions
 - Function-dependent display of the converter parameters
The function view shows a graphic of the function. The parameters of the function are listed in the context-sensitive table.
The parameter values can be changed. When required, additional parameters are displayed.
 - Actual value acquisition/mechanical system
The actual value acquisition/mechanical system can be viewed if Safety Integrated motion monitoring functions were activated.
The parameter values can be changed.
3. Control
Parameterizing the control type
4. Completion
The configurations are completed and applied by clicking on "Finish":
 - The subsequent parameter assignments are made
 - Checksums are calculated

More information

You will find detailed information in Chapter "Safety Integrated Functions (Page 105)".

7.5.3 Operator control and monitoring

7.5.3.1 Drive status

Overview

Function view "Drive status" shows the current status of the converter.

Description of function

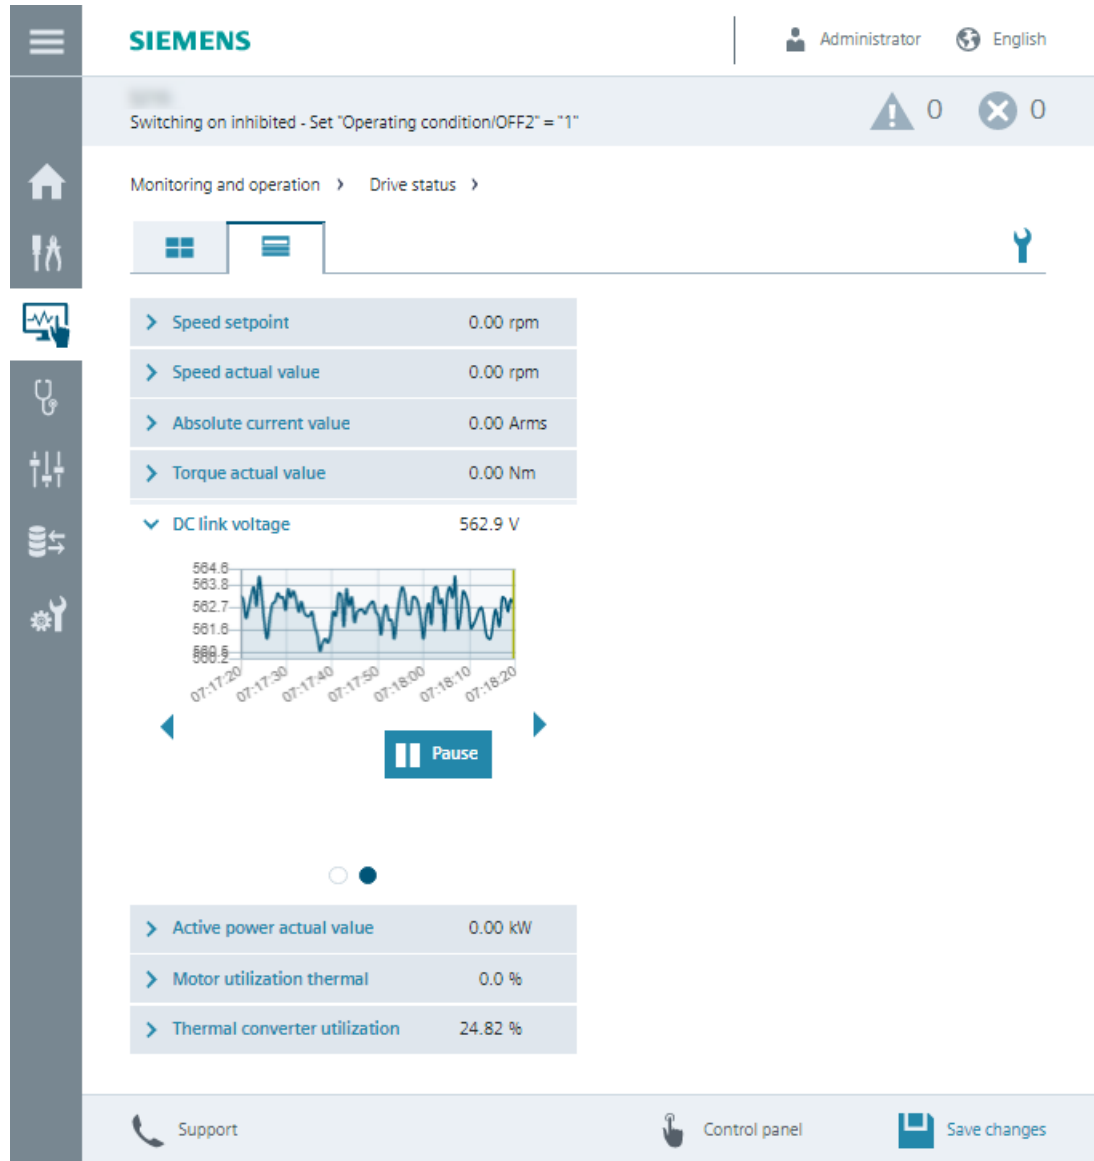


Figure 7-9 Drive status

The drive information displayed is preset in the factory setting, and when required, can be adapted using symbol . If user management is active, the "Edit web server configuration" right is required in order to make changes.

Values are indicated as follows:

- Factory setting: 8 values are displayed
- It is possible to display all values completely

The drive status is displayed as follows:

- : Individual values are continuously displayed
- : Individual values and trend diagrams are continuously displayed

7.5.3.2 Inputs/outputs

Overview

The function view "Inputs/outputs" shows the status of the digital inputs offered by the converter.

Description of function

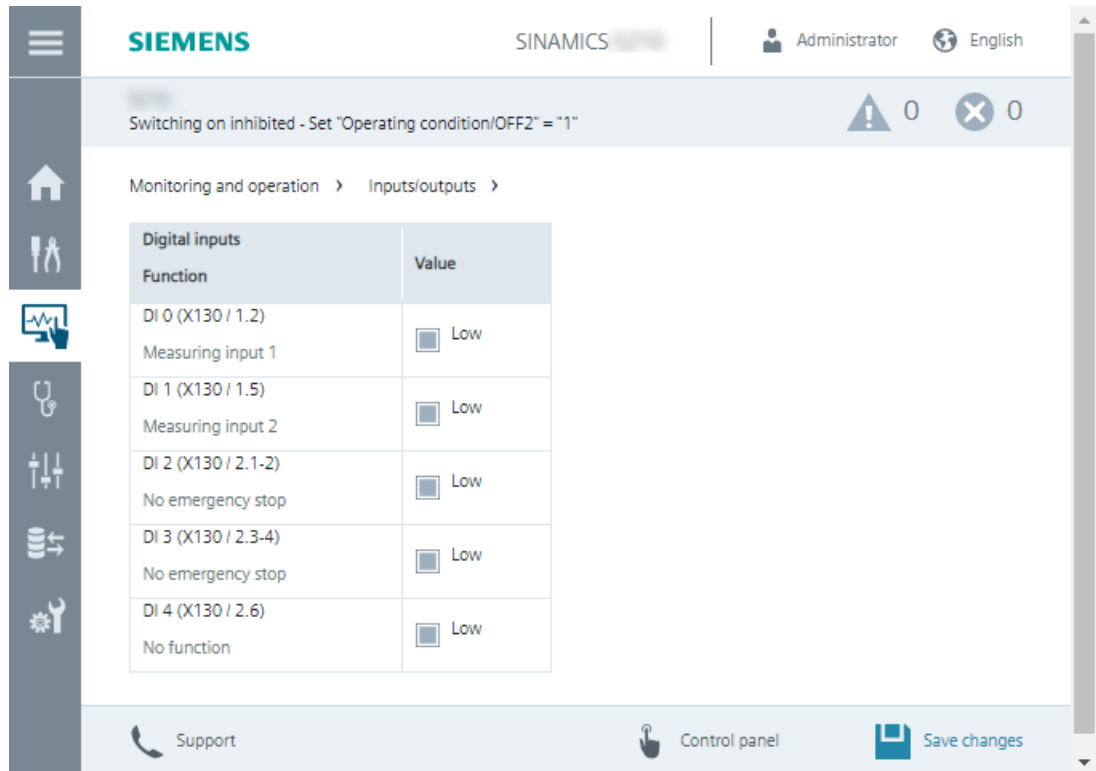


Figure 7-10 Inputs/outputs

7.5.4 Diagnostics

7.5.4.1 Messages

Overview

The function view "Messages" shows active and historical messages.

Description of function

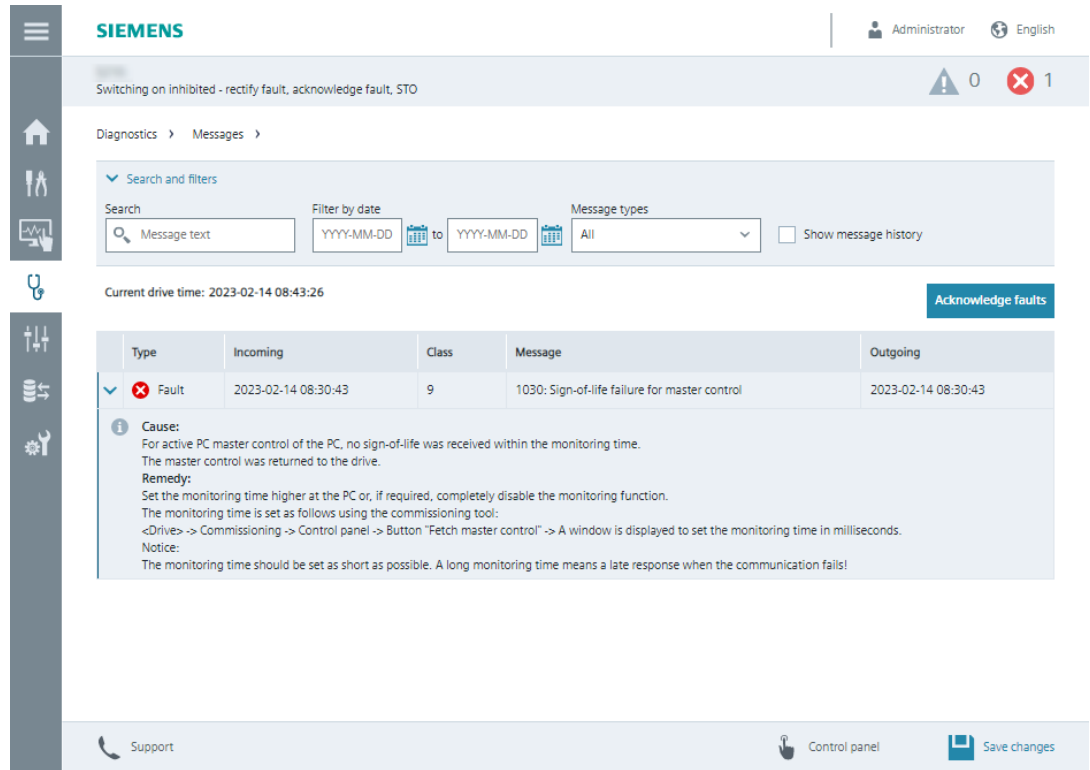


Figure 7-11 Messages

Using search and filter options, the number of alarms and faults can be restricted. The available filter options can be combined with one another and can be reset at any time.

The message history can be optionally displayed.

Selecting messages

Search	Enter a keyword
Filter by date	Select a date or time interval
Message types	Select the message type that should be displayed: <ul style="list-style-type: none"> • All • Faults • Alarms

Displaying messages

Type	Displaying the message type: <ul style="list-style-type: none"> • Alarm • Fault
Incoming	Time that the message was received

7.5 Functions and menus

Class	Assign the message to a message class according to PROFIdrive <ul style="list-style-type: none">• The class is displayed at the integrated operator panel "SINAMICS SDI status".• The message number is output on all operating units, e.g. PC, SIMATIC HMI.
Message	Specification of the message number with message text
Gone	Time when the message went <ul style="list-style-type: none">• Faults are given the status "Outgoing" if the following are true:<ul style="list-style-type: none">– The causes have been eliminated.– The message has been acknowledged.
>	Selection for more information: <ul style="list-style-type: none">• Description of the message with cause and remedy

7.5.4.2 Diagnostics buffer

Overview

Function view "Diagnostics buffer" provides information about all system-relevant operations, e.g. commissioning, new ramp-up, generation of a certificate.

Description of function

The screenshot shows the Siemens SINAMICS web interface. The top bar displays the Siemens logo, the text 'SINAMICS', and user information 'Administrator' and 'English'. Below the top bar, there is a status bar with a warning icon and the text 'Switching on inhibited - Set "Operating condition/OFF2" = "1"'. The main content area is titled 'Diagnostics > Diagnostics buffer >'. It features a search and filter section with a search input field labeled 'Event text' and two date range input fields labeled 'YYYY-MM-DD' and 'to YYYY-MM-DD'. Below the search section, the current drive time is shown as '2023-03-16 10:12:32'. A table lists the diagnostic events:

No.	Date and time	Event text
1	2023-03-16 09:21:22	DO 1 retentively saved
2	2023-03-16 09:21:17	Retentive save DO 1 started
3	2023-03-16 09:19:51	Ramp-up completed, cyclic operation
4	2023-03-16 09:19:46	Commissioning DO 1 activated (0)
5	2023-03-16 09:19:46	A new certificate was automatically generated.
6	2023-03-16 09:19:40	TEC index 0: End address 0x26034572
7	2023-03-16 09:19:40	TEC index 0: Start address 0x26034571
8	2023-03-16 09:19:40	TEC index 0: End address 0x26034571

At the bottom of the interface, there are buttons for 'Support', 'Control panel', and 'Save changes'.

Figure 7-12 Diagnostics buffer

Reading out the diagnostic buffer facilitates converter diagnostics and supports fault analysis. The search can be limited by searching for keywords and using the filter function according to date.

The diagnostic buffer can only be cleared by performing a manual reset to factory settings with a memory card. For further information, refer to the Chapter "Manual reset to factory settings with memory card (Page 356)".

The diagnostic buffer is kept when restoring factory settings via menu "Backup and restore".

7.5.4.3 Safety Integrated

Overview

Function view "Safety Integrated" provides information about the Safety Integrated Functions that have been enabled.

Description of function

The screenshot shows the Siemens SIMATIC Manager web interface for Safety Integrated functions. The top navigation bar includes the Siemens logo, user 'Administrator', and language 'English'. A status bar at the top right shows 'Switching on inhibited - rectify fault, acknowledge fault, STO' with 2 warning icons and 4 error icons. The main content area is titled 'Diagnostics > Safety Integrated >'. An internal event message states: 'Internal event: A stop response was initiated due to a limit value being exceeded or a Safety Integrated Function fault.' Below this, the 'Status of Safety Integrated Functions' section shows three active functions: STO, SBC, and SLS, each with a graph of speed (v) vs. time (t) and the label 'Function active'. The SLS section includes input fields for 'Active level' (1), 'SLS limit value' (1995 mm/min), and 'Speed actual value' (0 mm/min). The 'Status' section shows an error: 'Internal event has occurred'. The 'Checksum' section displays values for 'Checksum' (F7D8 0967 H), 'Functions' (90D7 0A79 H), 'PROFIsafe' (BB17 F9E4 H), and 'Time stamp' (2023-02-14 11:34:22:96). The 'Versions' section shows 'SINAMICS Safety Integrated firmware version', 'I/O processor firmware version', and 'Encoder firmware version'. A bottom bar contains 'Support', 'Control panel', and 'Save changes' buttons.

Figure 7-13 Safety Integrated

The following content is displayed:

- "Status of Safety Integrated Functions"
The status of the enabled Safety Integrated Functions is displayed.
- "Status"
"Active" is displayed if Safety Integrated Functions are active.

- "Selected"
Under "Selected" you will see the following data about the Safety Integrated commissioning:
 - "Checksum"
Displays the functional checksum of the converter to track changes (safety logbook)
 - "Functions"
Displays the checksum over the checksum-checked parameters to configure the converter
 - "PROFIsafe"
Displays the checksum of the PROFIsafe parameterization
 - "Time stamp"
The time stamp indicates when the update was made.
- "Versions"
Displays the safety-relevant software versions of the corresponding components

7.5.4.4 Connection overview

Overview

Function view "Connection overview" provides information about the connections in the drive system.

Description of function



Figure 7-14 Connection overview

The individual components with IP address and additional details are graphically displayed in the connection overview.

7.5.4.5 Communication

Overview

Function view "Communication" provides information about the activated fieldbus interface.

Description of function

The screenshot shows the Siemens SINAMICS web server interface. The top navigation bar includes the Siemens logo, the user 'Administrator', and the language 'English'. The main content area is titled 'Switching on inhibited - exit commissioning mode' and shows the 'Communication' diagnostics page. The page displays the following information:

- PROFINET IP of Station: 192.168.1.1
- PROFINET Name of Station: SINAMICS
- Cyclic connection diagnostics: OK

There are two tabs: 'PROFIdrive telegram' (selected) and 'PROFIsafe telegram'. Below the tabs, the 'PROFIdrive PZD telegram selection' is shown as 'SINAMICS PROFIdrive PZD telegram selection'. The 'Receive direction: control > converter' table is as follows:

PZD	Designation	Explanation	Value	
1	STW1	Control word 1	0000	hex
2_3	NSOLL_B	Speed setpoint B (32-bit)	0000 0000	hex
4	STW2	Control word 2	0000	hex
5	MOMRED	Torque reduction	0000	hex
6	G1_STW	Encoder 1 control word	0000	hex
7_8	XERR	Position deviation	0000 0000	hex
9_10	KPC	Position controller gain factor	0000 0000	hex

The 'Send direction: converter > control' table is as follows:

PZD	Designation	Explanation	Value	
1	ZSW1	Status word 1	0000	hex
2_3	NIST_B	Speed actual value B (32-bit)	0000 0000	hex
4	ZSW2	Status word 2	0000	hex
5	MELDW	Message word	0000	hex
6	G1_ZSW	Encoder 1 status word	0000	hex

At the bottom of the interface, there is a 'Support' button and a 'Control panel' button.

Figure 7-15 Communication

The following content is displayed:

- Connection status
- Process data of the set telegram in the send and receive directions.
The values are shown in the hexadecimal format. The display of individual values is switched between binary, decimal and hex format by clicking on the button to the right of the value.

7.5.4.6 Status word and control word

Overview

The function view "Control/status word" provides information about the current status of the sequence control system.

Description of function

SIEMENS SINAMICS Administrator English

Switching on inhibited - exit commissioning mode

Diagnostics > Control/status word >

Parameter	Value	Parameter	Value
Control word sequence control	1000 H	Status word sequence control	2240 H
00: ON/OFF1	No	00: Ready for switching on	No
01: Operating condition / OFF2	No	01: Ready	No
02: Operating condition / OFF3	No	02: Operation enabled	No
03: Enable operation	No	03: Jog active	No
04: Enable ramp-function generator	No	04: No coasting active	OFF2 active
05: Continue ramp-function generator	No	05: No Quick Stop active	OFF3 inactive
06: Enable speed setpoint	No	06: Switching on inhibited active	No
07: Command open brake	No	07: Drive ready	No
08: Jog 1	No	08: Controller enable	Yes
09: Jog 2	No	09: Control request	No
10: Master control by PLC	No	11: Pulses enabled	No
12: Speed controller enable	No	12: Open holding brake	No
14: Command close brake	Yes	13: Command close holding brake	Yes

Support Control panel

Figure 7-16 Control and status word

The control and status word is indicated by all sequence control states. This also includes states that are not available, which prevent the motor from being switched on and switched off. Diagnostics supports fault analysis.


7.5.5 Parameters

7.5.5.1 Parameter list

Overview

The parameter list shows all the parameters of the converter. The parameter list allows specific parameters to be changed.

Description of function

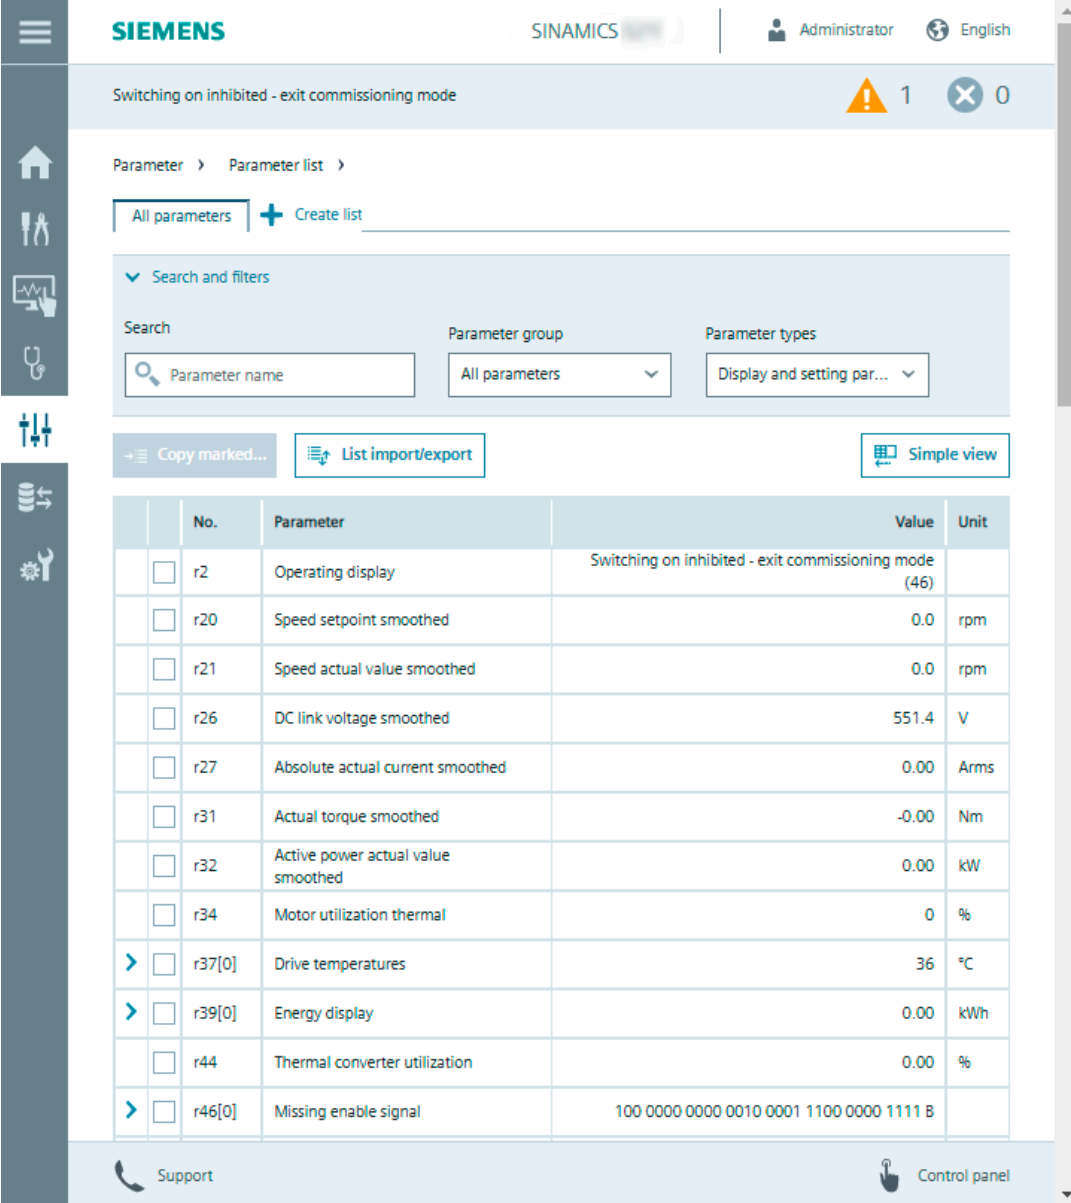

The screenshot shows the Siemens SINAMICS web server interface. The top navigation bar includes the Siemens logo, the SINAMICS brand name, and user information (Administrator, English). A status bar indicates "Switching on inhibited - exit commissioning mode" with an alarm icon and a count of 1. Below this, the "Parameter list" is displayed in an extended view. The interface includes a search and filter section with a search box for "Parameter name", a dropdown for "Parameter group" (set to "All parameters"), and a dropdown for "Parameter types" (set to "Display and setting par..."). There are also buttons for "Copy marked...", "List import/export", and "Simple view". The main content is a table of parameters:

No.	Parameter	Value	Unit
<input type="checkbox"/> r2	Operating display	Switching on inhibited - exit commissioning mode (46)	
<input type="checkbox"/> r20	Speed setpoint smoothed	0.0	rpm
<input type="checkbox"/> r21	Speed actual value smoothed	0.0	rpm
<input type="checkbox"/> r26	DC link voltage smoothed	551.4	V
<input type="checkbox"/> r27	Absolute actual current smoothed	0.00	Arms
<input type="checkbox"/> r31	Actual torque smoothed	-0.00	Nm
<input type="checkbox"/> r32	Active power actual value smoothed	0.00	kW
<input type="checkbox"/> r34	Motor utilization thermal	0	%
<input checked="" type="checkbox"/> r37[0]	Drive temperatures	36	°C
<input checked="" type="checkbox"/> r39[0]	Energy display	0.00	kWh
<input type="checkbox"/> r44	Thermal converter utilization	0.00	%
<input checked="" type="checkbox"/> r46[0]	Missing enable signal	100 0000 0000 0010 0001 1100 0000 1111 B	



At the bottom of the interface, there are links for "Support" and "Control panel".

Figure 7-17 Parameter list in the extended view

The parameter list offers the following options:

- Toggling between two list views
 - Show as "Simple view" and "Advanced view" with parameter numbers
- Searching parameters
 - Search by parameter number or text search within parameter names

- Filtering the parameter list
 - Parameter groups: Only show the parameters that are assigned to a particular function.
 - Parameter types: display and/or setting parameters
- Changing parameter values directly in a parameter list
 - Exception: blocked parameters

p	Setting parameters	Are read/write.
		The setting parameter can only be parameterized in the active commissioning mode. Depending on the parameter, changes are possible in the quick setup or Safety Integrated commissioning.
		The setting parameter can only be parameterized when the user has the appropriate function rights.
r	Display parameters	Can only be read and cannot be edited.
c	Display parameters	Can only be read and cannot be edited.

7.5.5.2 User-defined parameter list

Overview

A user-defined parameter list is a combination of specific parameters from the standard parameter list of the converter. These can be used to configure frequently used user functions, for example.

Description of function

With the user-defined parameter lists, the web server provides the following functions:

- Creating up to 20 user-defined parameter lists
- Configuring list properties
 - Name
 - Position or sequence of the tabs
 - Comment
 - Delete list
- Exporting and importing user-defined parameter lists
 - Export:
 - Export one or several user-defined parameter lists.
 - The web server exports the lists exclusively as a json file.
 - Export files generated by the web server can be imported into a Startdrive project.
 - Import:
 - The list import function in the web server exclusively imports json files.
 - User-defined parameter lists exported via the web server or Startdrive as a json file can be imported into another drive of the same type via the web server.
Requirement: same drive type and same firmware version

If values are changed, the data must be saved retentively.

7.5.6 Backup and restore

7.5.6.1 Overview

Overview

With "Backup and restore" you can back up parameters and other settings and restore the settings again if necessary.

Description of function

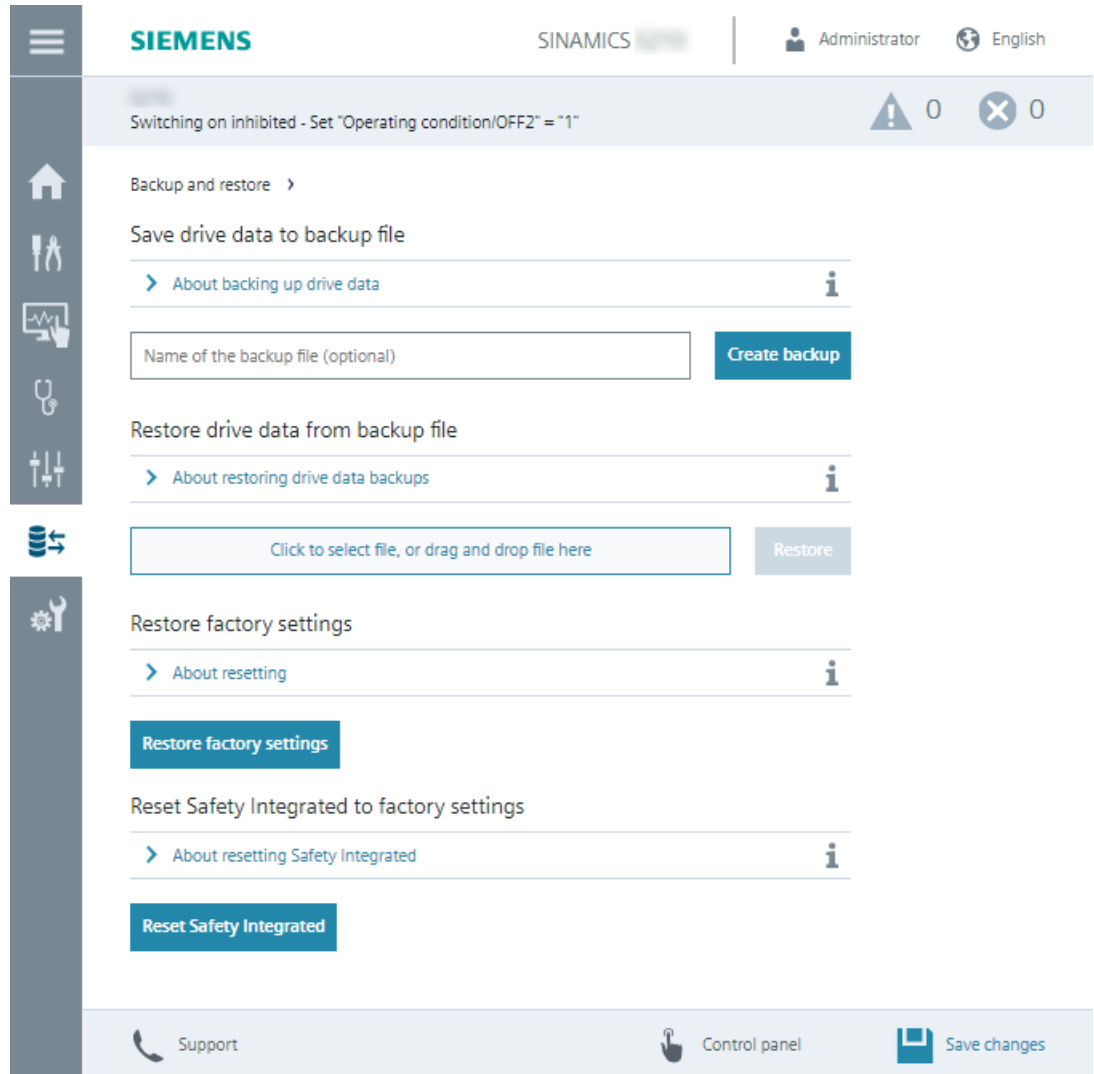


Figure 7-18 Backup and restore

The following functions are available to back up and restore data and settings:

- **Back up parameters**
Back up the parameter settings to a file after commissioning.
- **Restore parameters from file**
When replacing a device or for series commissioning, load the backed-up parameter settings to the converter.
- **Restore factory settings**
Reset all converter settings to the factory values.
- **Restore Safety Integrated to factory settings**
The converter only sets the settings of the Safety Integrated Functions to factory settings. All other settings remain unchanged.

More information

If you want to restore the converter to factory settings with the memory card, see the information in Chapter "Manual reset to factory settings with memory card (Page 356)".

7.5.6.2 Save drive data to backup file

Overview

With "Save drive data to backup file" you can back up all converter settings to one file. Run the "Save drive data to backup file" function in the following situations:

- After commissioning
- Before "Restore factory settings"
- Before a firmware update/downgrade

Requirement

There are no active converter faults.

Procedure

1. Call the "Backup and restore" menu.
2. Click on the "Save drive data to backup file" button.
A name can be optionally assigned to the backup file. Parameters are backed up. The backup file is saved in the download folder of your operating unit.
3. Optional: If you only wish to use the backup file at a later point in time, then place the backup file in a protected location in the operating unit.

More information

You can load backed-up data and settings of a converter to other converters. The target converter must satisfy the following prerequisites:

- The rated power of the target converter is the same as the backed-up rated power.
- Firmware version of the target converter is \geq firmware version of the converter from which the backed-up data and settings originate.

7.5.6.3 Status after backing up

Overview

The "Back up parameters" function backs up all converter settings to one file.

Description

The converter backs up the following data and settings:

- Communication interface settings
- Parameters (including safety parameters)
- Security settings
- UMAC data
- Web server settings:
 - Modified settings in window "Drive status" on the home page
 - User-defined parameter lists
 - Support settings
 - Save changes manually / automatically
- Displayed parameters (display standard parameters/all parameters):
 - Standard parameters
 - View all parameters
 - Display brightness

The converter firmware files are not backed up.

7.5.6.4 Restore drive data from backup file

Overview

When replacing a device or for series commissioning, you load the backed-up drive data to the converter.

Requirement

- You have a backup file on your operating unit.
- The rated power of the target converter is the same as the backed-up rated power.
- Firmware version of the target converter is \geq firmware version of the converter from which the backed-up drive data originate.
- Function rights required for active user management (UMAC):
 - Edit device configuration or drive applications
 - If Safety Integrated is contained in the backup file, the "Edit Safety Integrated application" right is required.

Procedure

1. Call the "Backup and restore" menu.
2. Click on the "Restore drive data from backup file" button.
3. Select the backup file from the file system of the operating unit.

The backup file is loaded to the converter.

7.5.6.5 Restore factory settings

Overview

The reset to factory settings with the web server deletes the user-specific parameterization of the converter, for example the motor data.

The following data are retained when the factory settings are restored:

- Communication interface settings
- Security settings
- Language setting
- Date and time

In the following cases it may be necessary to restore the converter to factory settings:

- If the motor is changed
- If there is uncertainty regarding the previous parameterization and/or the previous use of the converter

Requirement

If User Management & Access Control is activated, you will need the following function rights:

- Edit device configuration or drive applications
- Edit Safety Integrated application (if Safety Integrated is contained in the parameterization)

Procedure

1. Call the "Backup and restore" menu.
2. Click the "Restore factory settings" button.
3. Acknowledge the confirmation prompt.

The converter is reset and then restarted. If the "RDY" and "COM" LEDs on the converter light up green, resetting is complete.

More information

For a full reset of the converter, proceed as described in Chapter "Manual reset to factory settings with memory card (Page 356)".

7.5.6.6 Restore Safety Integrated to factory settings

Overview

It is not always necessary to reset all of the converter settings. A separate reset function exists for Safety Integrated settings, which exclusively restores Safety Integrated settings to factory settings.

Requirement

- Function rights required for active user management (UMAC):
 - Edit device configuration or drive applications
 - Edit Safety Integrated application

Note

Perform a parameter backup before resetting so you can restore the old settings.

Procedure

1. Call the "Backup and restore" menu.
2. Click on the "Reset Safety Integrated" button.
3. Acknowledge the confirmation prompt.
4. Wait: the converter resets its Safety Integrated settings.
5. Wait: the converter restarts.
6. The converter is ready for operation and the "RDY" and "COM" LEDs are on and green.

Result

The Safety Integrated settings for the converter have been reset.

7.5.7 System

7.5.7.1 Settings

Overview

The function view "Settings" offers basic settings for the web server and the converter.

Requirement

- To edit the web server settings you will need the "Edit web server configuration" right.
- To edit the drive settings you will need the "Edit device configuration or drive applications" right.

Description of function

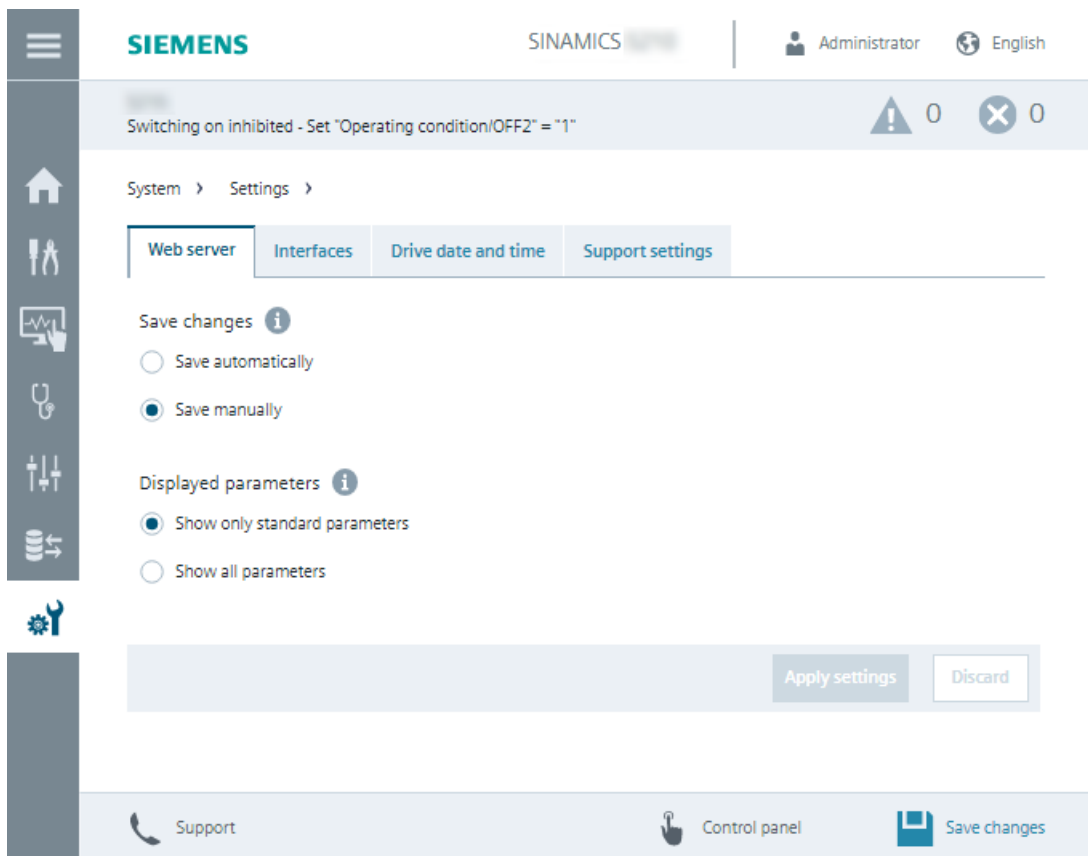


Figure 7-19 Settings

Web server

Under "Web server", the web server offers options for saving changes and displaying parameters.

Interfaces

Under "Interfaces", the web server provides information about the status and the settings of the interfaces of the converter.

Drive date and time

Under "Drive date and time", the web server provides options for setting the date format and for obtaining the date, time and time zone of the converter.

Support settings

Under "Support settings", the web server provides the option to store additional support and hotline data. The web server displays these data in the function view "Support".

7.5.7.2 User management


Overview

In "User management" you manage users and configure their roles and rights for accessing the converter.

Requirement

- You activated user management (UMAC) in "Configure security settings" during first commissioning.
- You are logged into the web server and have the necessary rights to manage users.

Description of function

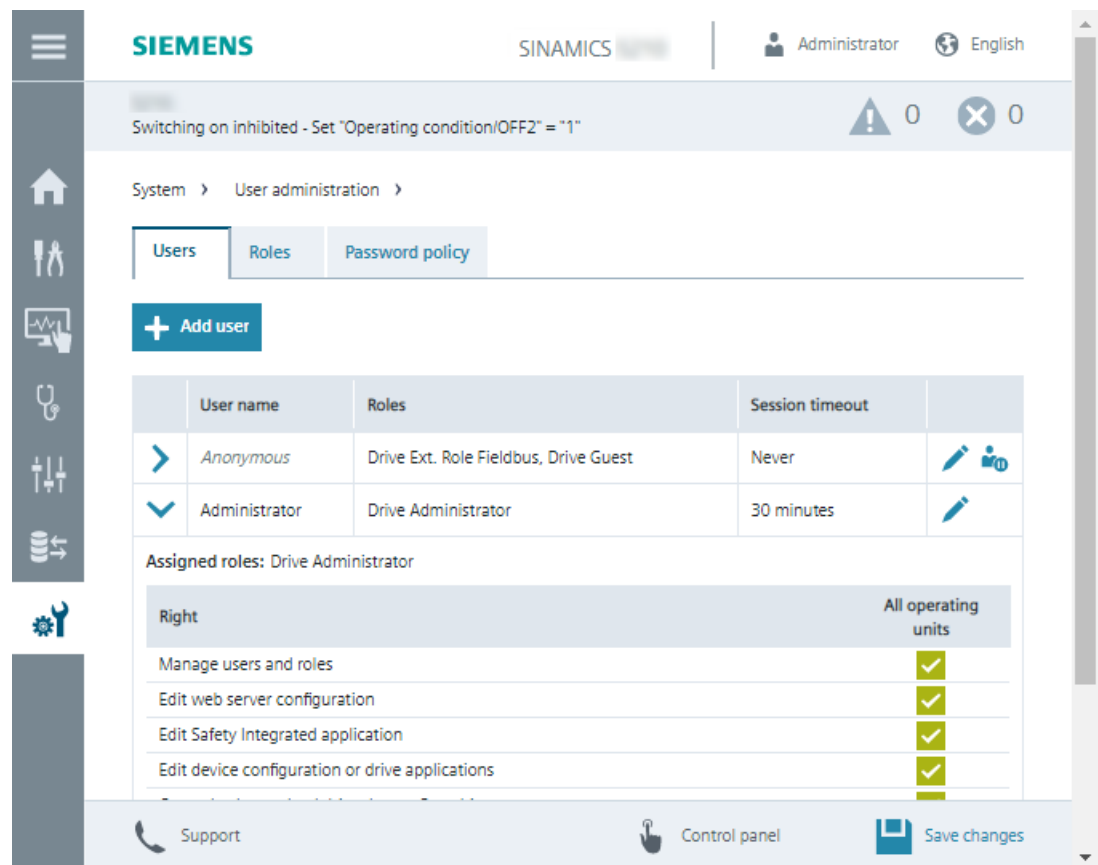

The screenshot displays the Siemens SINAMICS web server interface for user management. The top navigation bar includes the Siemens logo, the product name 'SINAMICS', and the user 'Administrator' logged in. A status bar at the top indicates 'Switching on inhibited - Set "Operating condition/OFF2" = "1"'. The main content area is titled 'System > User administration >' and has three tabs: 'Users', 'Roles', and 'Password policy'. The 'Users' tab is active, showing a '+ Add user' button and a table of existing users.

	User name	Roles	Session timeout	
>	Anonymous	Drive Ext. Role Fieldbus, Drive Guest	Never	
✓	Administrator	Drive Administrator	30 minutes	

Below the table, the 'Assigned roles: Drive Administrator' section shows a list of rights for 'All operating units':

Right	All operating units
Manage users and roles	✓
Edit web server configuration	✓
Edit Safety Integrated application	✓
Edit device configuration or drive applications	✓

The bottom of the interface features a 'Support' button, a 'Control panel' button, and a 'Save changes' button.

Figure 7-20 User management

Users

Under "Users", the web server provides a summary of the created users and offers the following functions:

- Create new user accounts
- Change existing user accounts
- Activate or deactivate user accounts

Roles are assigned to give users read or write access to certain functions.

Roles

Under "Roles", the web server provides a summary of the existing roles and the assigned rights.

Password policy

Under "Password policy", you specify the requirements a password must meet. You define the password complexity and the time to password expiry (if any).

More information

More detailed information on user management and security settings is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

7.5.7.3 Protection & Security

Overview

In "Protection & Security", you configure basic security settings using the Security Wizard and the tables it contains.

Requirement

- You activated the security settings during first commissioning.
- You are logged into the web server and have the necessary rights to edit drive data.

Description of function

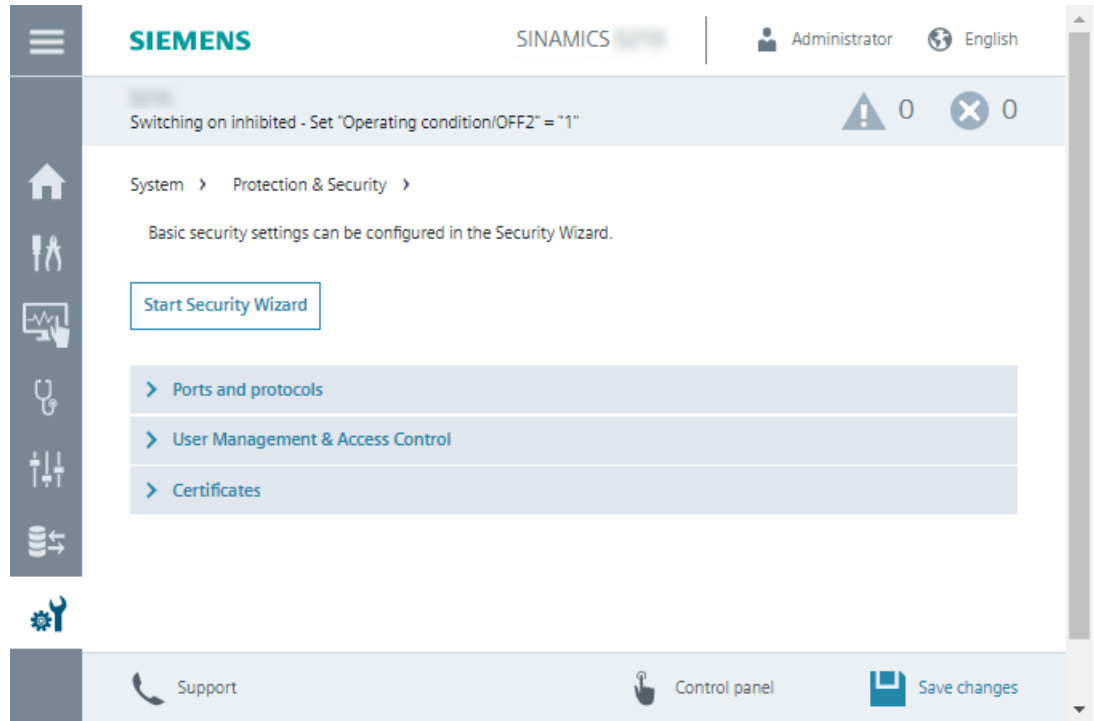


Figure 7-21 Protection & Security

Start Security Wizard

In the Security Wizard, you configure the most important security settings for the drive. They include User Management & Access Control and web server activation.

Ports and protocols

The web server provides an overview of the available ports and protocols and their status. This is where you activate or deactivate the communication interfaces.

User Management & Access Control

The web server provides an overview of the settings in user management.

Certificates

The web server provides an overview of the issued certificates. Digital certificates identify the converter as a "trusted device". The web server cannot be accessed from an operating unit without a digital certificate. When activating user management, a certificate is automatically created and assigned to the converter.

Use "Download certificate to operating panel" to download a certificate to the operating panel.

More information

More detailed information on configuring secure communication is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

7.5.7.4 Licenses

Overview

You must purchase licenses for supplementary functions and options.
Use the function view "Licenses" to manage the licenses for drive functions and options.

Requirement

- You are logged into the web server and have the necessary rights to edit drive data.
- The operating panel is connected online with the drive.

Description of function

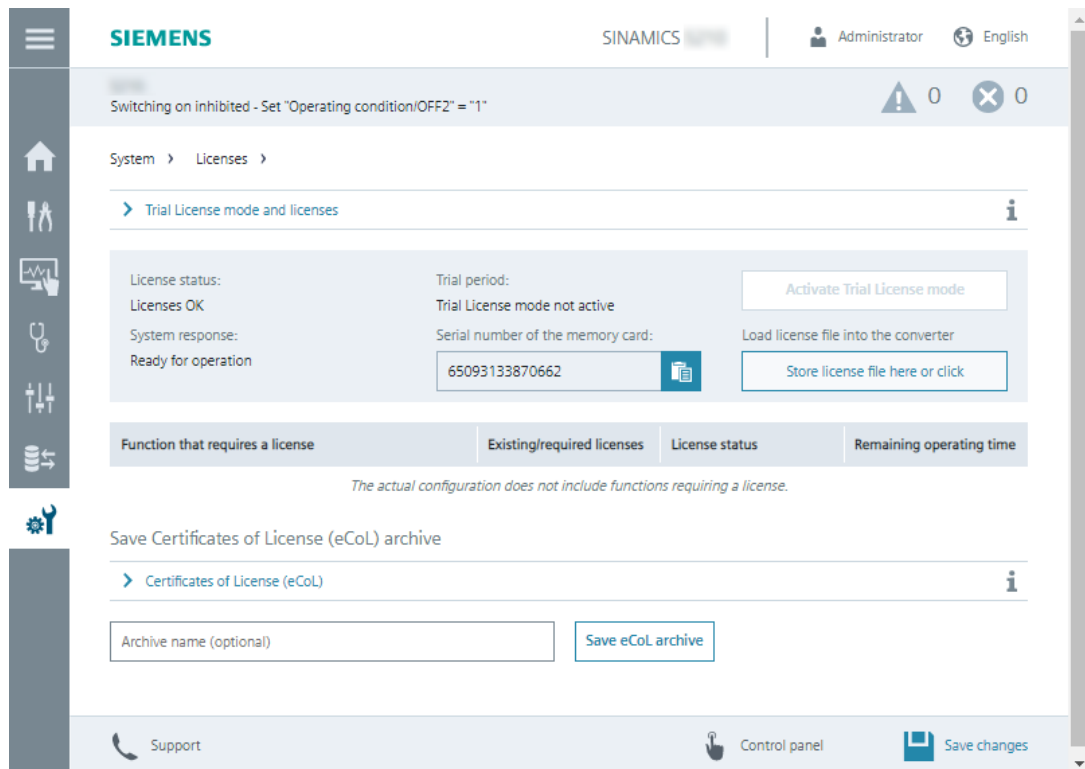


Figure 7-22 Licenses

The function view "Licenses" offers the following functions:

- Display the installed functions requiring licenses
- Read and copy the serial number of the SD card inserted into the converter
- Load and activate purchased licenses

Load and activate licenses

Under "Trial License mode and licenses", you upload license files created with the Web License Manager.

In Trial License mode, you can try out functions for a specified period.

Using functions/options requiring a license

The web server provides an overview of the options that require licensing and their license status.

Certificates of License (eCoL)

Under "Certificates of License (eCoL)", you load purchased licenses directly from a memory card into the file system of the operating unit.

More information

- You can find additional information about creating and managing license files in Chapter "Functions that require licensing (Page 98)".
- Additional information about the licensing process or on the Trial License mode is provided in the TIA Portal information system. There, browse for S210 drives using the keyword phrase "Managing supplementary functions that require a license".

7.5.7.5 Firmware update

Overview

You can perform a firmware update in the web server:

- For an upgrade, the converter settings are retained.
- For a downgrade, the converter is restored to factory settings.

Requirement

You have saved the ZIP file with the firmware to a drive, which you can access using the operating panel.

Description of function

This function view "Firmware update" displays the current version of the firmware and of the web server.

To copy a different firmware version to the converter, load the ZIP file containing the firmware from the file system of the operating panel.

7.5.7.6 About web server

Overview

"About web server" contains information about the web server and links to additional information.

Description of function

Under "Versions" you can see the revision levels of the web server and the loaded firmware.

Under "Third-party software" there is a link to information about any third-party software used. The license conditions are loaded to the operating panel in the file "READ_OSS.ZIP". You can display the HTML file included in the ZIP file using your browser.

There are more links to information about:

- Cookie policies
- Industrial Security
- Privacy policy


7.5.8 Support

Overview

The footer of the web server contains a support dialog.

Description of function

The support dialog contains links to additional information for the converter.

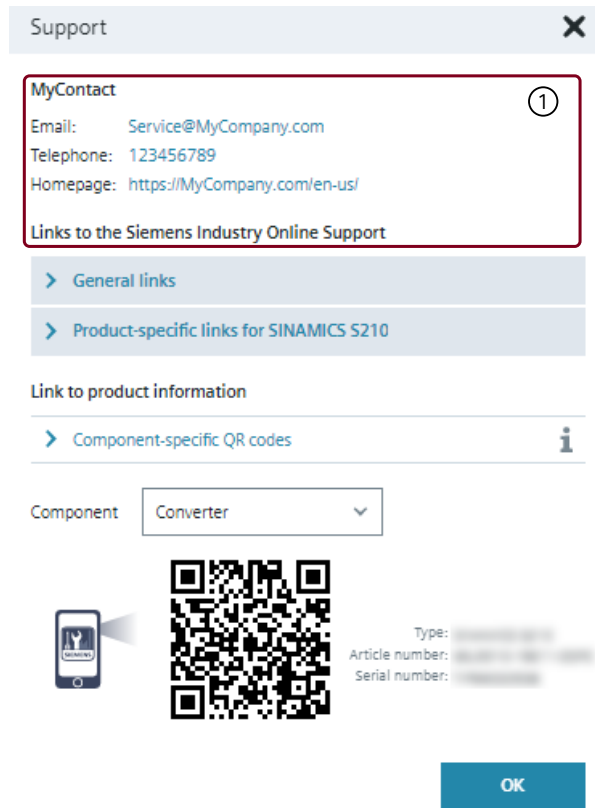

- ① Display of additional support and hotline data
For more information about configuration, see Chapter "Settings (Page 237)".

Figure 7-23 Support information

7.5.9 Control panel

Overview

The control panel moves the motor using the operating unit, bypassing the higher-level controller, for example to test the converter settings after commissioning.

Requirement



WARNING

Unexpected motor movement through incorrect operation

If the control panel is active, the safety shutdowns of the higher-level controller have no effect. The "Stop with space bar" function is not guaranteed in all operating states. Incorrect operation by untrained personnel may result in unexpected motor movement which can cause death or serious injuries.

- Only use the control panel for commissioning, diagnostics and service purposes.
- Only use the control panel if you are trained and authorized accordingly.
- Install an EMERGENCY STOP for the drive which is independent of the higher-level controller.

Description of function

The "Take over control" dialog deactivates the signals of the higher-level controller and switches the source for enables and the setpoint value to the control panel.

Note

Drive responds immediately

Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.

The control panel offers the following operating modes to move the motor:

- Jog mode moves the motor while the direction buttons are pressed.
- Continuous motion starts the motor when a direction button is pressed.

Commissioning (Startdrive)

8.1 Introduction

Description

You configure devices and commission your converter in the Startdrive commissioning tool. Further information about the Startdrive commissioning tool can be found in the information system of the TIA Portal.

8.2 Requirements for commissioning

Description

- TIA Portal version V18 or higher is installed on your operating unit.
- Startdrive version V18 SP1 or higher is installed on your operating unit. You will find the download page at the following link (<https://support.industry.siemens.com/cs/ww/en/view/109807137>).
- Firmware version V6.1 or higher is installed in the converter.
- You have all of the required licenses to use the TIA Portal without any restrictions.
- Your converter is connected with a SIMATIC S7 controller. Alternatively, a SINUMERIK control system can be used.

8.3 Basics

8.3.1 Communication interfaces

Description

The following interfaces are available for accessing the converter:

Interface	Information
Service interface X127	The default access to the web server is via the service interface X127.
	Ethernet interface X127 is intended for commissioning and diagnostics, which means that it must always be accessible.
	Defaults: <ul style="list-style-type: none"> • IP address: 169.254.11.22 • Subnet mask: 255.255.0.0 • Connection type: HTTPS
	Restrictions: <ul style="list-style-type: none"> • Only local access is allowed. • No networking or only local networking in a closed and locked electrical cabinet is permissible. • For remote access to the electrical cabinet, you must apply additional security measures to prevent misuse through sabotage, data manipulation by unqualified persons and interception of confidential data.
	Access using mobile end devices: <ul style="list-style-type: none"> • If you carry out commissioning or diagnostics using a mobile end device such as a smartphone or tablet, you may temporarily connect the service interface X127 to an external WLAN access point. • The SINAMICS Smart Adapter establishes a point-to-point connection to the mobile end device via WLAN.
PROFINET interface X150	The IP addresses of the service interface X127 and the PROFINET interface X150 must not be in the same subnet.

Secure communication

If the Startdrive project and the converter are unprotected, access is possible via both interfaces. This enables unrestricted access from the project or a higher-level controller to the drive data.

Non-authorized users can manipulate the drive data. To avoid the risk of data manipulation, we recommend protecting access to the project and the converter.

Detailed information about security settings is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>).

8.3.2 Loading data from the drive into the project


Overview

If you change the configuration of a converter in the online mode, then the configuration deviates from the data in the Startdrive project. To update project data, load the drive data from the converter into the project.

Requirement

- A project with a matching drive is created and is open in Startdrive.
- The converter and SIMATIC S7 controller are in offline mode.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Click on icon  (Upload from device) in the toolbar.
The "Upload preview" dialog opens. Startdrive checks whether all requirements for loading have been met. In the event of any obstructions, these are displayed as messages in the dialog.
2. Check the messages. If necessary, activate the actions in column "Action".
As soon as uploading becomes possible, the "Upload from device" button is enabled.
3. Click the "Upload from device" button.
The data are loaded from the converter into the project. The drive data are saved with the project.

8.3.3 Loading project data into the drive

Overview

Load the data from your Startdrive project into a drive.


Requirement

- A project has been created.
- A drive has been created and completely configured in the project.

8.3 Basics

- Optional: There is an active online connection between the drive and operating unit.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Select a drive in the project tree.
2. Click on icon  (Load to device) in the toolbar.
 - If you have already established an online connection, then the "Load preview" dialog opens.
This dialog displays alarms and proposes actions necessary for loading.
 - If you have still not established an online connection, then the "Extended loading" dialog opens.
Using this dialog, establish an online connection to the required drive.
3. Check the messages in the "Load preview" dialog.
The "Save parameterization retentively" action is enabled by default.
4. Click "Load".
The project data are downloaded into the drive.

8.3.4 Saving changes in the project

Overview

Project data that are not saved are lost when closing the project. The entire project must be saved in order for the settings to take effect permanently.

Requirement

- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

In the toolbar, click on the icon .

OR

Select the "Project > Save" or "Project > Save as" menu.

8.3.5 Retentively saving changes

Overview


Parameter assignments of your drive are always volatile and are lost when the drive is switched off. Information is subsequently provided as to how you can retentively save online data or offline data.

Requirement

- A project has been created.
- A drive has been created and completely configured in the project.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Retentively saving online data


You are connected online with the drive; save your configuration as follows:

1. In the function view of the active Startdrive project, click on icon  (retentively save data of the complete device).
OR
2. In the project tree of your drive device, double-click on "Online & Diagnostics".
 - In the secondary navigation select menu "Functions > Backup/Restore".
 - In the "Retentively save RAM data" area, click "Save".

The system checks whether a memory card is available. If an appropriate memory card is detected, then the parameter values are retentively saved to the memory card.

Retentively saving offline data

When retentively saving data, it is important that the settings made are not only saved on your operating unit in the Startdrive project, but also permanently saved on the drive memory card (also known as "save retentively" or "RAM to ROM"). An online connection must be established to the drive for this purpose.

1. Establish an online connection to your drive.
2. Load the project data into your drive.
3. Click the  icon in the function view of the active Startdrive project.
The current project settings are stored retentively on the memory card of the drive.

8.3.6 Using parameter lists and user-defined lists

Overview

Users configure a drive in Startdrive as standard using specific configuration views. For the configuration, experienced users preferably take the parameter lists or user-defined lists.

Requirement

- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Parameter list

The following functions are available:

- Monitoring parameter values
- Editing parameter values directly from the parameter view
Only parameters with a light grey background can be directly edited in the parameter list. Other parameters are locked in the parameter list and cannot be edited.
- Exporting parameters as CSV
- Comparing parameter settings:
 - Offline - Factory setting
 - Online - Offline
 - Online - Factory setting

User-defined list

You compile the selected parameters in a user-defined list. This involves an excerpt with specific parameters, from an underlying parameter list.

User-defined lists are only created and edited in the project tree.

You use user-defined lists for the following purposes:

- Compiling the most important parameters
- Assigning parameters to parameter groups with comments for users
- Carrying out series commissioning based on saved parameter values
- Documentation of the drive with listed parameters and setting values

Opening and reading parameter lists in the web server

Parameter lists are exported in the json format. You can open lists and view parameter values if you access the converter using the web server.

Example

In the following application, you create a user-defined list with the objective of accepting parameter values for an additional drive.

1. You create a user-defined list with parameter values for a configured drive.
2. You open the list in another drive with the same hardware configuration.
3. You compare the parameter values of the drive with the saved values.
4. You apply the required parameter values for the drive.

More information

Detailed information about handling parameter lists and user-defined lists is provided in the TIA Portal information system.

8.4 Procedures for device configuration and commissioning

8.4.1 Overview

Note

Only in the offline mode

The drive components can only be combined and specified in the offline mode. In the online mode, all corresponding setting ranges are marked in the device view and in the inspector window.

Note

User management and security

SINAMICS drives of the latest generation generally have extended protection. This usually has the effect that, as a user, you have to log in to view or edit the drive data offline as well as online.

The most important protective measures in brief:

- Project protection can be activated for Startdrive projects in the TIA Portal (offline). If project protection is activated, corresponding rights are required for access. Once project protection has been activated, it cannot be deactivated.
- A "Security Wizard" usually appears when creating new drives in the project. With the help of this wizard, you can already make the most important security settings for this drive within the project when creating the drive. After loading the project data into the drive, the protection settings become effective there.
- To access a protected drive online, you ALWAYS need the corresponding access rights. This also applies if no project protection is activated for the Startdrive project.

Detailed information on this topic is provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Note

Editing mode required for online commissioning

If you want to make important settings online, activation of the editing mode is mandatory. Restore points that are required as a return point following a cancellation of the current online parameterization are automatically created by the editing mode in the "guided quick startup" (and in the "Parameterization" area) during configuration.

No separate editing mode is necessary in the "Rotate & optimize" area.

Note

Telegram configuration offline

In the guided quick startup, telegram settings can in principle only be made offline.

8.4.2 Simple basic parameterization (offline)

Overview

The following workflow represents the simplest form of commissioning.

Procedure

1. Create or open project with Startdrive.
2. Create device configuration in Startdrive offline.
 - Insert the SINAMICS drive into the project and specify it
 - Create and specify SINAMICS components
 - Make detailed settings for drive and components
 - Optional: Configure user management and make protection settings for the drive
3. Make basic settings offline via the guided quick startup.
4. Load project data into the target device.
5. Establish an online connection between Startdrive and the target device.
6. Optimize commissioning.

Result

The motor turns.

More information

Detailed information can be found in the information system of the TIA Portal in Chapter "Configuring SINAMICS S210 drives".

8.4.3 Simple basic parameterization (online)

Overview

The basic parameterization can also be carried out in online mode as an alternative to offline mode.

Procedure

1. Create or open project with Startdrive.
2. Create device configuration in Startdrive offline.
 - Insert and specify the SINAMICS drive in the project.
 - Create and specify SINAMICS components.
 - Make detailed settings for the drive and components.
 - Optional: Configure user management and make protection settings for the drive.
3. Load project data to the target device.

8.4 Procedures for device configuration and commissioning

4. Establish an online connection between Startdrive and the target device.
5. Make basic settings online via the guided quick startup in the editing mode.
 - Make basic settings in the quick startup steps.
 - Optimize commissioning.

Result

The motor turns.

More information

Detailed information can be found in the information system of the TIA Portal in Chapter "Configuring SINAMICS S210 drives".

8.4.4 Basic parameterization together with a SIMATIC controller

Overview

SINAMICS drives are frequently operated with SIMATIC or SINUMERIK controls. To speed up commissioning the individual components, the drive and control can be commissioned together in a Startdrive project.

Procedure

1. Create or open project with Startdrive.
2. Create device configuration in Startdrive offline.
 - Insert and specify the SINAMICS drive in the project.
 - Create and specify SINAMICS components and make detailed settings.
 - Insert and specify the SIMATIC controller in the project.
 - Network the SIMATIC controller and drive.
 - Optional: Configure user management and protection settings for the drive and control system.
 - Insert a technology object into the SIMATIC controller.
 - Interconnect the technology object with the drive.
3. Load project data to the target devices.
4. Establish an online connection between Startdrive and the target device.
5. Make basic settings online via the guided quick startup in the editing mode.
 - Make basic settings in the quick startup steps.
 - Optimize commissioning.

Result

The motor turns.

More information

Detailed information can be found in the information system of the TIA Portal in Chapter "Configuring SINAMICS S210 drives".

8.5 Combining and configuring devices in the project

8.5.1 Converter


8.5.1.1 Inserting a converter into the project

Overview

You either add a new converter to the project view or to the portal view. For the latest generation of SINAMICS converters, you can define the security settings for access to the drive data at the time of setup.

Note**Firmware versions**

The description in these operating instructions refers exclusively to S210 drives with firmware version V6.1 or higher, which are configured with a Startdrive version V18 SP1 or higher.

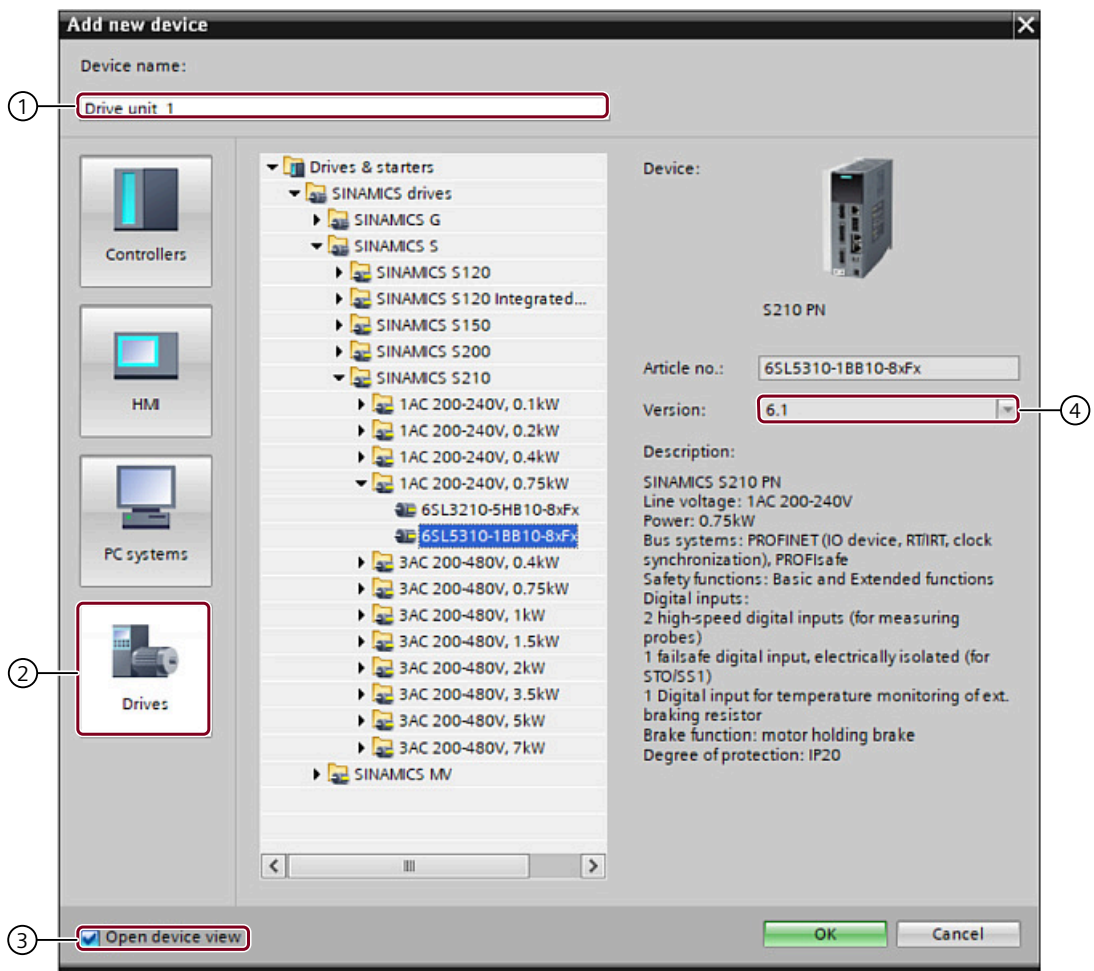

- ① "Device name" input field (default: drive unit_x)
- ② "Drives" button
- ③ Enable/disable the "Open device view" option
- ④ Firmware version drop-down list

Requirement

- A new project has been created.
OR
An existing project is open.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Double-click "Add new device" in the project tree.
The corresponding dialog opens.
2. Click the "Drives" button ② to display the available S210 converters.
3. Expand the "SINAMICS S210" entry in the displayed list.
A list of all available SINAMICS S210 converters is displayed.
4. Expand the entry (e.g. 200-240 V 1AC, 0.1 kW) for the relevant S210 converter.
The selected S210 converter is displayed with the corresponding article number.
5. Click on the desired SINAMICS S210 converter.
When a SINAMICS S210 converter is created, the latest firmware version ④ is always suggested.
6. If the firmware version on the converter memory card deviates from the displayed firmware version, then change the firmware version via the drop-down list "Version" ④.
It will not be possible to go online later if the firmware versions do not match.
OR
Install the corresponding firmware version on your converter.
7. Assign a different device name in the input field ① if required.
8. Click "OK".
If the "Open device view" option ③ is activated, the converter is automatically created and displayed in the device view.

Result

The inserted converter is displayed in the device view and can be configured.

8.5.1.2 Optional: Replacing a converter

Overview

In the device configuration and the project tree of an S210 drive, at any time, you can replace the current device by a device with another power rating. When replacing the drive, previous configurations of the motor and/or the encoder are kept if both devices are compatible with one another.

Requirement

- A project has been created.
- An S210 Control Unit has been inserted in the device configuration.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Replacing a device via the project tree

1. In the project tree, select the drive to be replaced. Open context menu "Change device". Dialog "Change device - S210" opens:

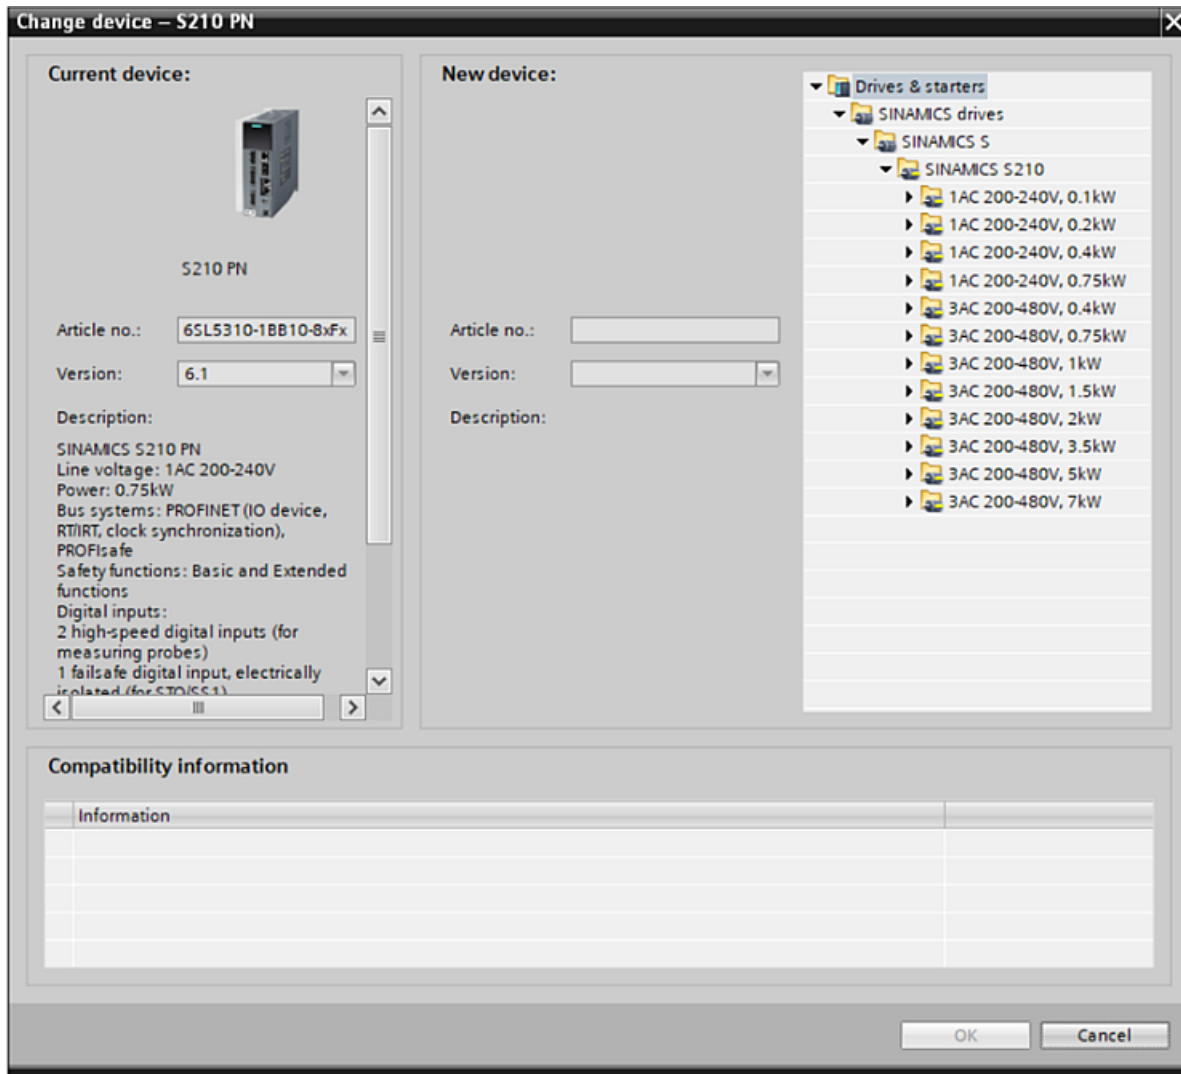


Figure 8-1 Changing the device using the project tree

The data of the current drive are displayed on the top left. At the top right, the replacement devices that are applicable are displayed in a hardware catalog.

2. In the hardware catalog of dialog "Change device", select the replacement device required. Now, only the most important data of the new device are displayed at the center of the dialog in the field "New device". You can compare these data with the data of the current device (left-hand side).
If both drives are not fully compatible, then the corresponding information is displayed in the "Compatibility information" field. This can mean that you must possibly assign another motor if you still go ahead and accept the required replacement device.
3. Click on "OK" to accept the new drive.

Replacing a device using the hardware catalog

1. In the hardware catalog, select the new S210 drive. In the device view, drag the drive to the placeholder for the current drive.
The "Change device" dialog opens:

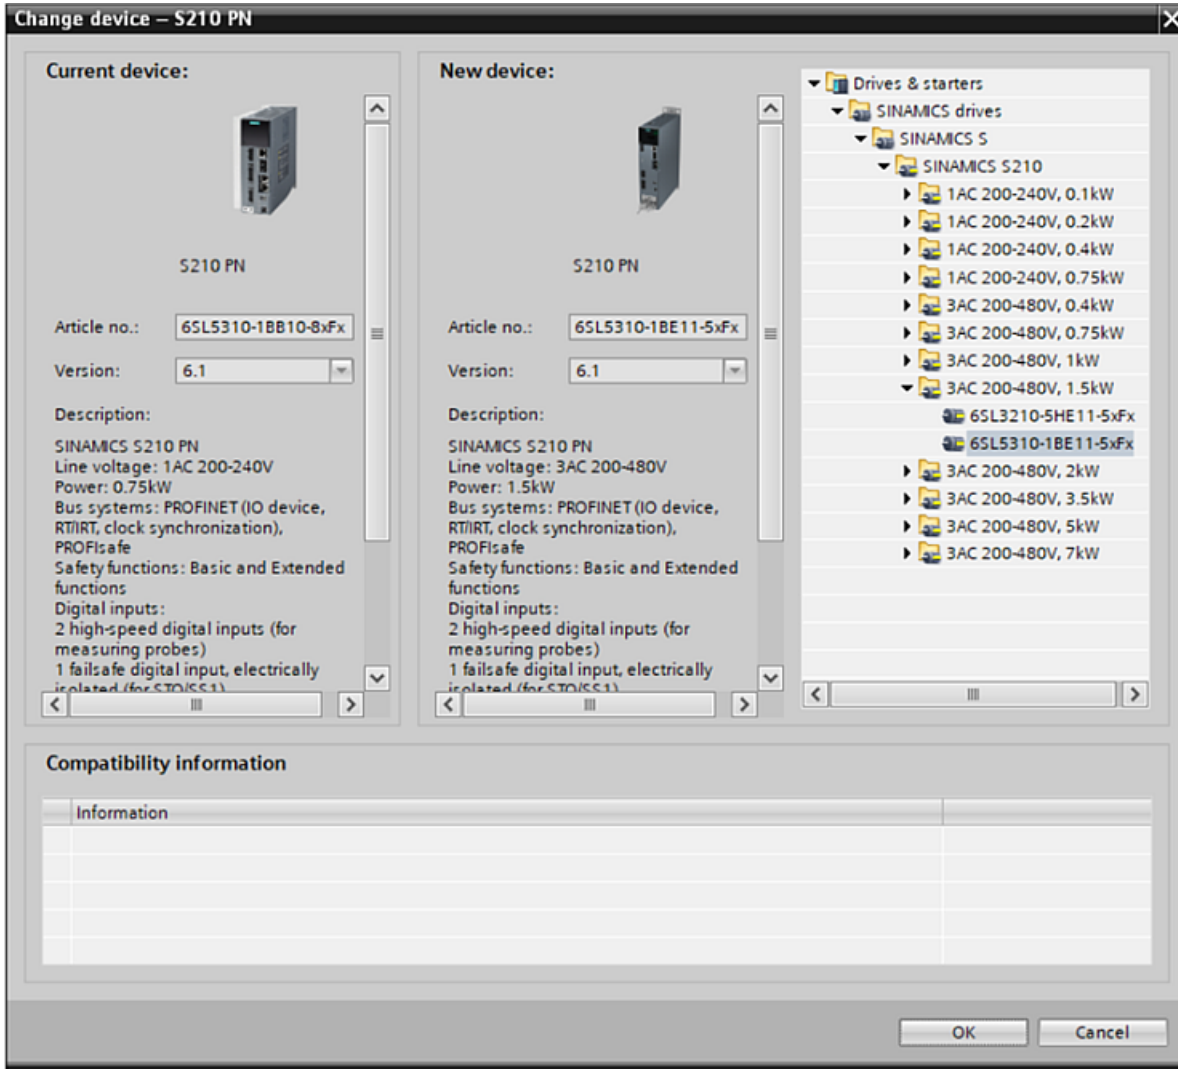


Figure 8-2 Changing the device using the hardware catalog

In the dialog, the most important data of the existing drive and the new drive are compared. If both drives are not fully compatible, then the corresponding information is displayed in the "Compatibility information" field. This can mean that you must possibly assign another motor if you still go ahead and accept the required replacement device.

2. Click on "OK" to accept the new drive.

Result

The current drive is replaced by the required replacement device.

8.5 Combining and configuring devices in the project

If the two drives are not completely compatible with one another, then in the device navigation, the placeholder for the motor is displayed unspecified. You must reassign an appropriate motor power.

8.5.1.3 Making detailed converter settings

Overview

You can configure the following details for the SINAMICS S210 drive:

Group	Settings
General	<ul style="list-style-type: none"> • Product information Name data • Catalog information Brief description, description of the components included, firmware version used • Identification & Maintenance Information and data to identify and localize a drive within a plant or system.
PROFINET interface [X150]	<ul style="list-style-type: none"> • General • Ethernet addresses Subnet, IP address, subnet mask, PROFINET names • Telegram configuration <ul style="list-style-type: none"> – Telegrams of the closed-loop drive control: Send, receive, Safety Integrated Details are contained in Chapter "Configuring telegrams (Page 307)" • Advanced options <ul style="list-style-type: none"> – Interface options – Media redundancy – Clock cycle synchronization for local modules (isochronous mode) – Real time settings – Port [X150 P1] and port [X150 P2]
Module parameters	<ul style="list-style-type: none"> • Activation of channel diagnostics
Protection & Security	<ul style="list-style-type: none"> • Wizard for security settings • User Management & Access Control • Ports and protocols • Encryption of drive data <p>Note: Information about these protection settings is provided in the Configuration Manual "SINAMICS Industrial Security" or in the information system of the TIA Portal.</p>
Ethernet commissioning interface [X127]	<ul style="list-style-type: none"> • General • Ethernet addresses: <ul style="list-style-type: none"> – Subnet, IP address, subnet mask

Group	Settings
Time synchronization/Time	<ul style="list-style-type: none"> Option "Synchronize with NTP server" If the drive is connected to a controller in the device configuration, the option "Use PLC as NTP server" is activated automatically. If the drive is connected to a PLC, the IP address of the PLC is displayed. In this case, the IP address and the time zone of the NTP server can be changed. Option "No synchronization" In this case, NTP synchronization is not managed in the project. You can configure this synchronization separately for the drive in online mode with the Online & Diagnostics function "Set time".
Hardware settings	<ul style="list-style-type: none"> Output voltage
Web server	<ul style="list-style-type: none"> Enabling access to the PROFINET interface [X150] and/or the service interface [X127] via HTTP or HTTPS.

Requirement

- A new project has been created.
OR
An existing project is open.
- A SINAMICS S210 drive has been created in the project.
- For activated user management (UMAC):
The function rights for editing drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

- Select the S210 drive in the device view and open the inspector window.
- In the secondary navigation of the inspector window, select the desired detail menu (see list in the summary).
- Make the required detail settings in the white fields. Default settings are usually available in most detail menus.
The gray fields are corrected automatically in accordance with their setting. Fields with a gray background cannot be edited directly.

Result

You have made the detailed settings for the drive in your device configuration.

8.5.1.4 Specifying a motor

Overview

The drive that has just been inserted in the project has a placeholder for the required motor (standard motor type: "1FK2"). You must specify this placeholder in the configuration.

Note

Different motor types

If your converter has a motor, type "1FT2" or "1FS2", before specifying the motor, the motor placeholder must first be exchanged. Proceed as described in the following chapter: "Optional: Replacing the motor (Page 265)".

Requirement

- A project has been created.
- An S210 drive is inserted in the device configuration.
- For activated user management (UMAC):
The function rights for editing drive data and configuring in the inspector window are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Double-click on the white motor placeholder (MOT) in the drive. The inspector window is displayed.
2. If required, select the "Motor - Selection 1Fxx" entry in the secondary navigation in the inspector window.
3. In the list, select the motor power rating and an associated encoder based on the article number. Then specify whether the motor should be equipped with a holding brake - or not. A DRIVE-CLiQ encoder is automatically assigned to all motors in the list.

Result

The motor placeholder is assigned the data of the selected motor. The white area turns gray.

The motor has been added. The assigned encoder and the encoder evaluation are automatically also added and specified.

You can then carry out the basic parameterization, or alternatively, you can carry out the guided quick startup.

See also

Carry out the basic parameterization (Page 290)

Carrying out guided quick startup (Page 277)

8.5.1.5 Optional: Replacing the motor**Overview**

When creating an S210 drive in the device configuration, a motor placeholder is always used for motor type "1FK2". If you want to use another motor type, e.g. "1FS2", from the motor list, you can replace the motor placeholder before specifying.

Requirement

- The drive is offline.
- A project has been created.
- An S210 drive is inserted in the device configuration.
- For activated user management (UMAC):
The function rights for editing drive data and configuring in the inspector window are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Replacing a motor using the hardware catalog

1. In the hardware catalog, select the required motor type. Drag the corresponding placeholder in the device view onto the placeholder for the currently used motor type. Dialog "Change device - XYZ motor" opens:

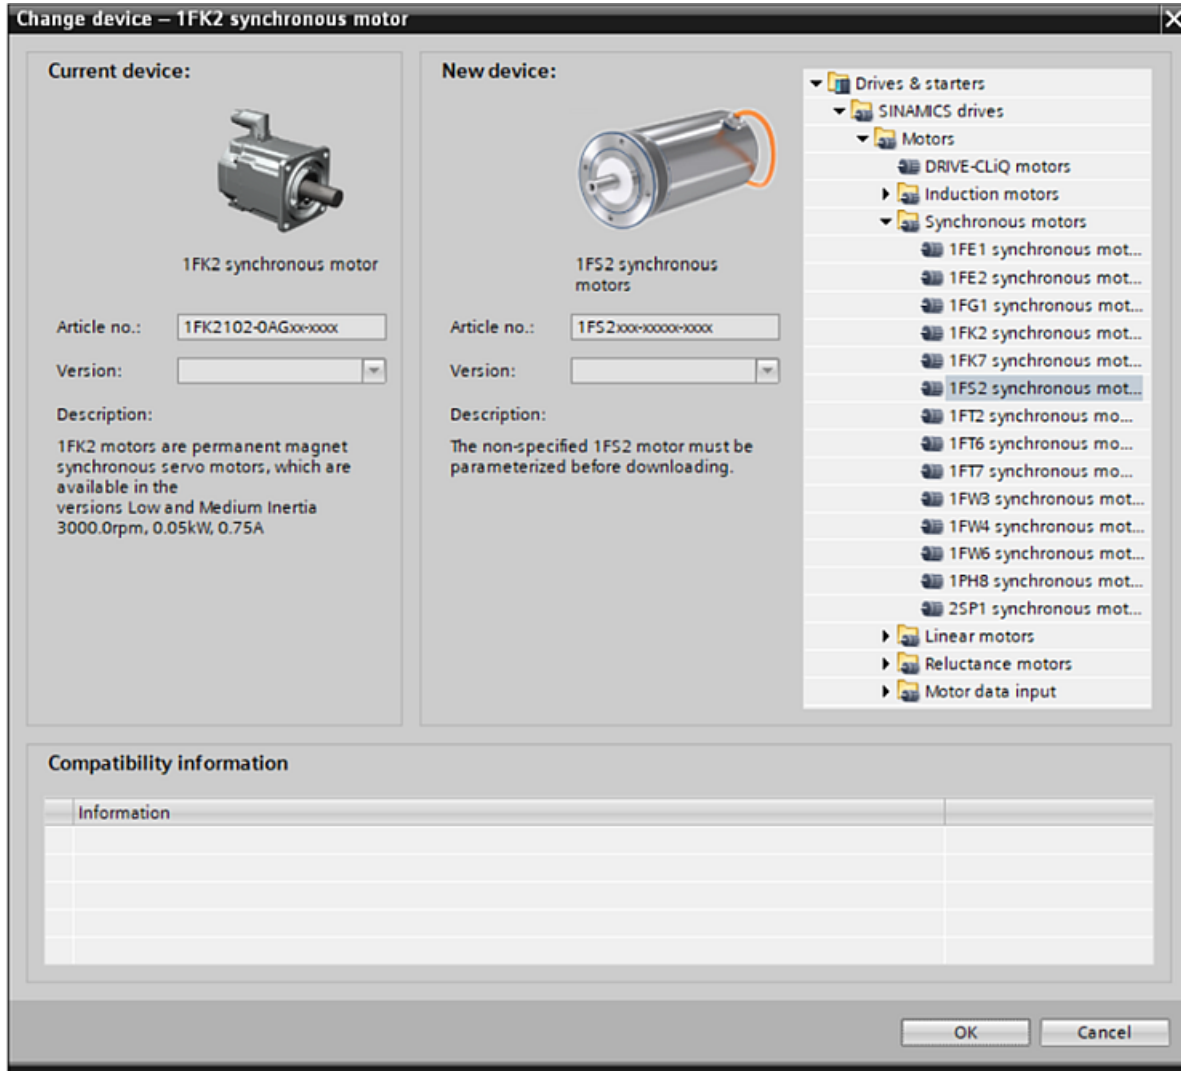


Figure 8-3 Replacing the motor placeholder using hardware selection

In the dialog, the most important data of the used motor type and the new motor type are compared. If the two types of motors are not fully compatible, the corresponding information is displayed in the "Compatibility information" field.

2. To accept the new motor type, click "OK".
3. Click on the unspecified motor in the device view.

4. If required, select the "Motor - Selection" entry in the secondary navigation in the inspector window.
5. In the list, select your motor based on the article number.
The motor placeholder is assigned the data of the selected motor. The white area turns gray.
If you have selected a motor with encoder, the encoder and the encoder evaluation are also added automatically.

Replacing a motor using the context menu

1. In the device configuration, select the motor placeholder of the drive. Open context menu "Change device".
Dialog "Change device - XYZ motor" opens:

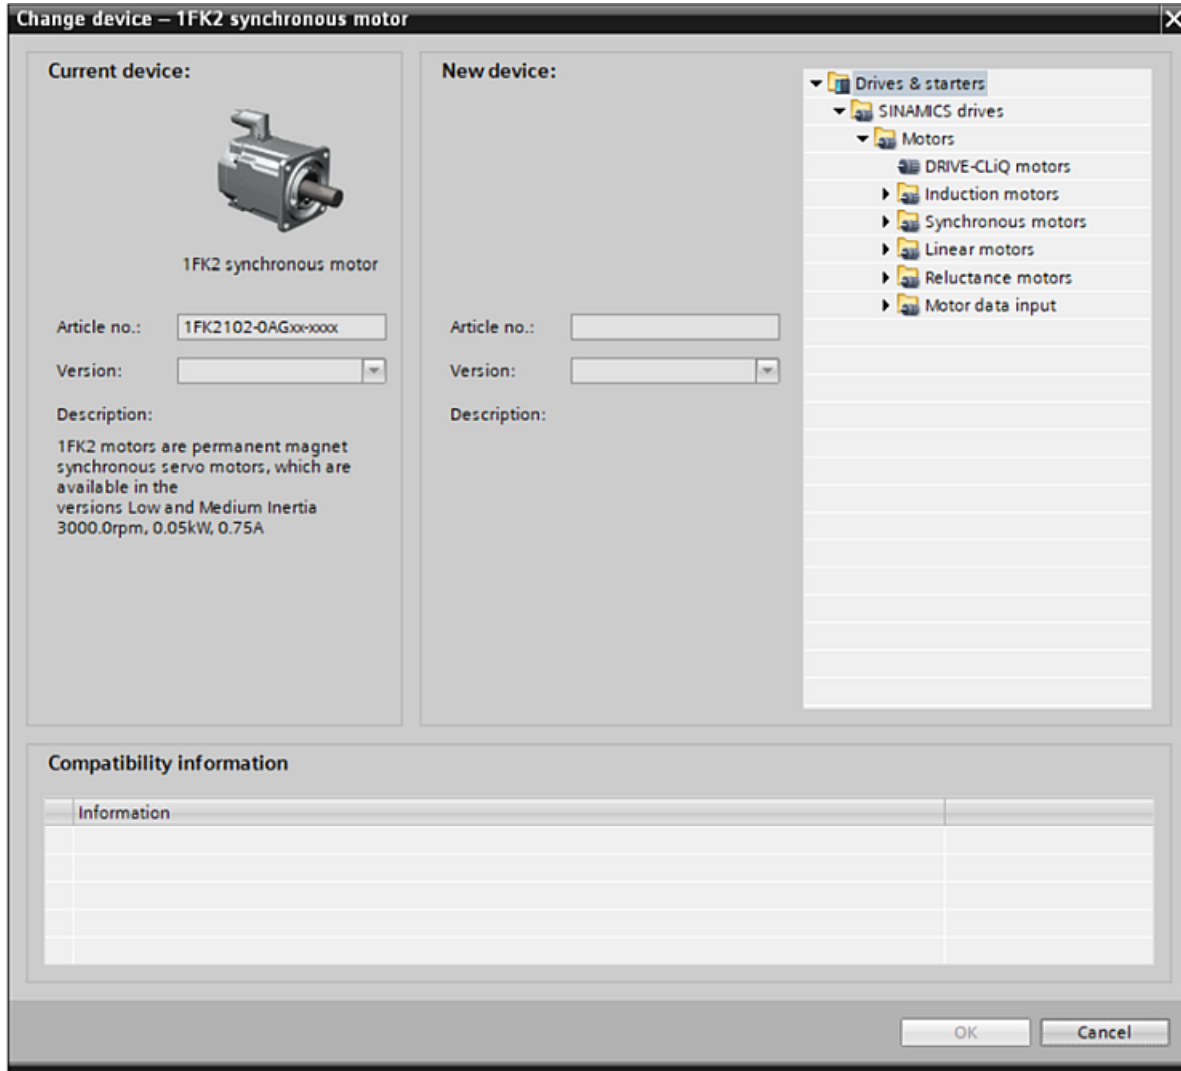


Figure 8-4 Manually changing the motor placeholder

The data of the current motor type are displayed at the top left. The motor types that are applicable are displayed in a hardware catalog at the top right.

2. In the hardware catalog, select the motor placeholder of the required motor type. The most important data of the new motor type are displayed at the center of the dialog in the field "New device". You can compare these data with the data of the current motor type (left-hand side).
If both motor types are not fully compatible, then the corresponding information is displayed in the "Compatibility information" field.
3. Click on "OK" to accept the motor type.
4. Click on the unspecified motor in the device view.

5. If required, select the "Motor - Selection" entry in the secondary navigation in the inspector window.
6. In the list, select your motor based on the article number.
The motor placeholder is assigned the data of the selected motor. The white area turns gray. If you have selected a motor with encoder, the encoder and the encoder evaluation are also added automatically.

Result

The motor has been added. If you had already inserted and specified an encoder before replacing the motor, you must do this again at this point. When replacing the motor, the encoder is deleted from the device configuration, since the encoder settings always refer to the motor used.

8.5.2 Control and technology object

8.5.2.1 Inserting a SIMATIC S7 controller into the project

Overview

If, in addition to the SINAMICS drive, you also wish to use a SIMATIC S7 controller in the device configuration, then create an appropriate PLC in your project.

Note

Other control systems


As an alternative to a SIMATIC S7 controller, a SINUMERIK ONE or a SINUMERIK MC can be used. The procedure remains the same.

Requirement

- A new project has been created.
OR
An existing project is open.
- For activated user management (UMAC):
The function rights for editing drive and control system data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Double-click "Add new device" in the project tree.
The corresponding dialog opens.

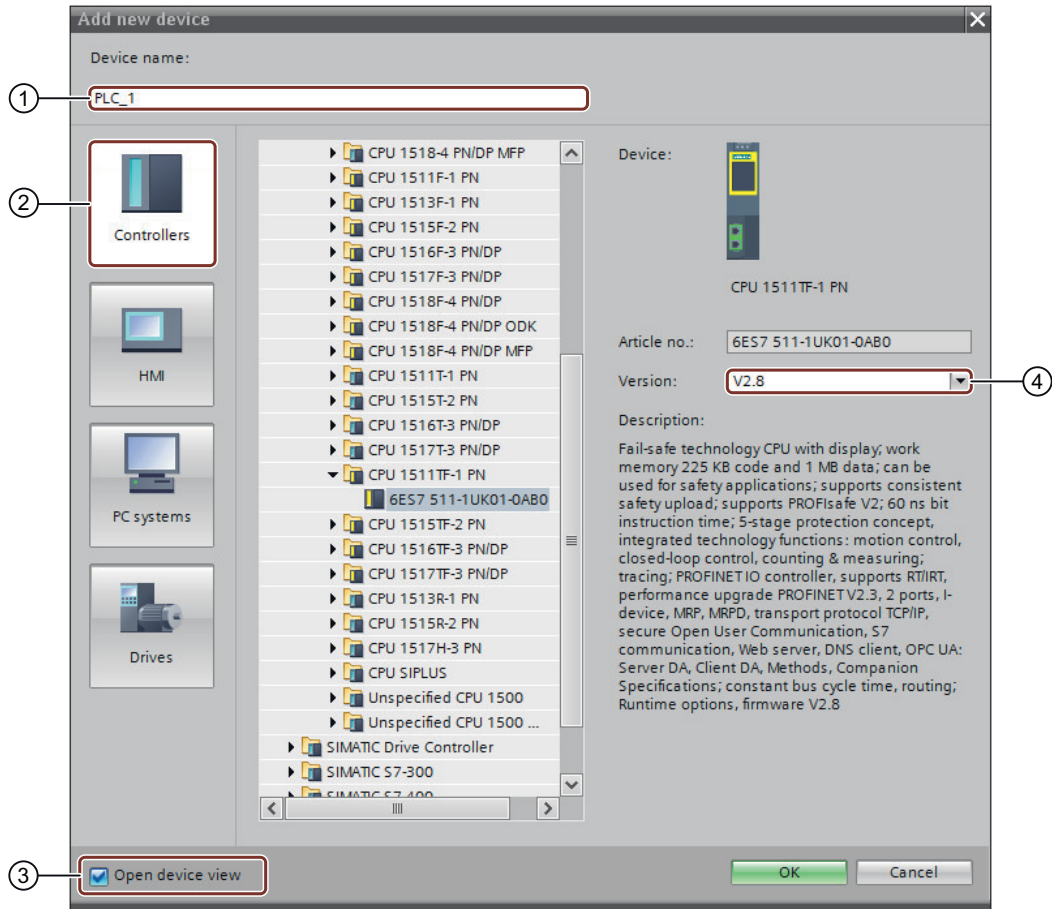

- ① "Device name" input field (default: PLC_xx)
- ② "Controller" button
- ③ Enable/disable the "Open device view" option
- ④ Firmware version drop-down list

2. Click the "Controllers" button ② to show the available controllers.
3. Expand the desired controller type (e.g. SIMATIC S7-1500) and select the desired CPU (e.g. CPU 1511TF-1 PN) in the list.
When the CPU is expanded, the component is displayed with its article number.
The current firmware version ④ is always suggested when creating a SIMATIC S7 controller.
4. If the firmware version on the memory card of your SIMATIC S7 controller deviates from the displayed firmware version, then change the firmware version via the drop-down list "Version" ④.
It will not be possible to go online later if the firmware versions do not match.

5. Assign a different device name in the input field ① if required.
6. Click "OK".
If the "Open device view" option ③ is activated, the SIMATIC S7 controller is automatically created in the project and then displayed in the device view.

Result

The inserted SIMATIC S7 controller is displayed in the device view and can be configured.

8.5.2.2 Networking the SIMATIC S7 controller and converter

Overview


After inserting a SIMATIC S7 controller and a converter into the project, network the components in the network and topology view.

Requirement


- A project is open.
- The project includes at least one drive and one control system.
- For activated user management (UMAC):
The function rights for editing drive and control system data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Open the network view by double-clicking on "Devices & networks" in the project tree.
2. Draw a connection between the PROFINET interface of the controller and the PROFINET interface X150 of the converter.
The PROFINET connection is established, and the converter is assigned to the controller.

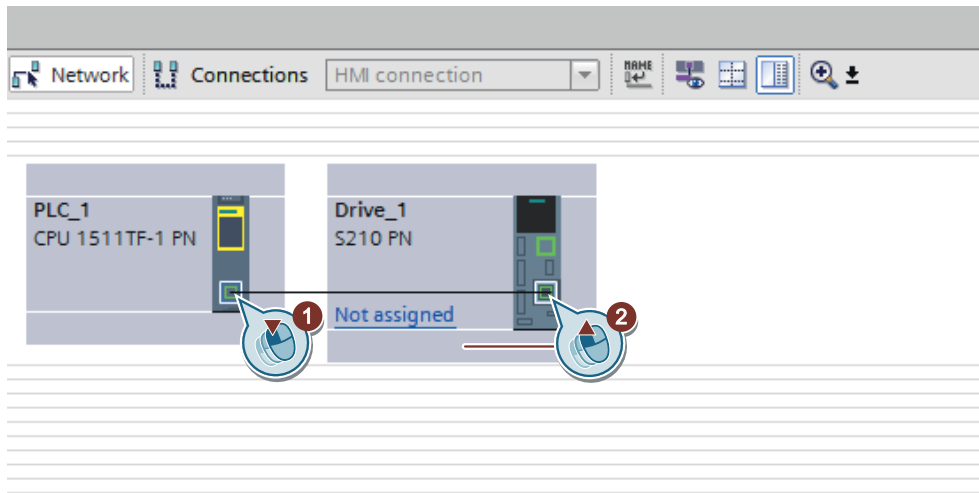


3. Click on the PROFINET interface_1 [X1].

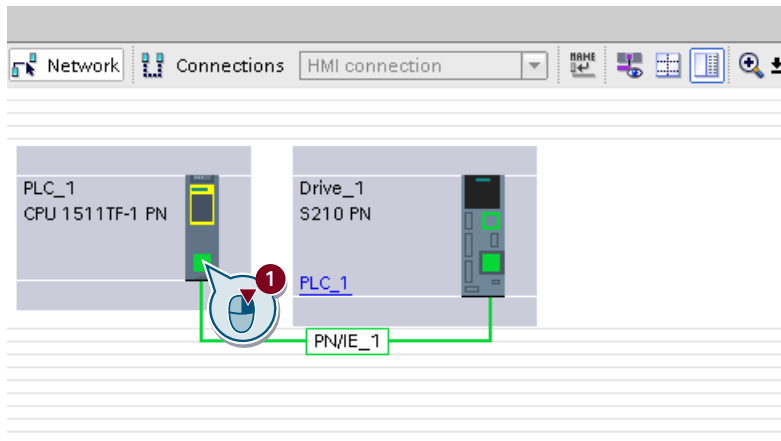


4. Open menu "Advanced options".
The menu item is in the secondary navigation, in tab "General".
5. Open menu "Realtime settings".

- Open menu "Synchronization" with a double-click.

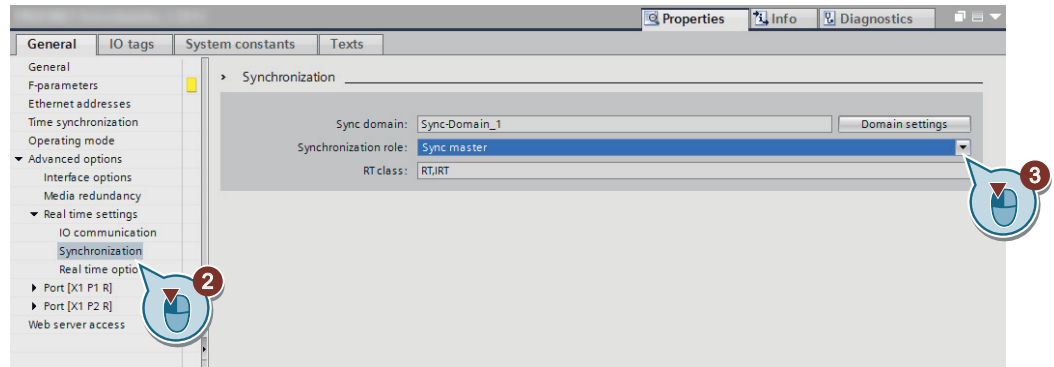

- Select the "Sync master" setting ③ from the "Synchronization role" drop-down list.
- Switch to the topology view.
- Draw a connection between Port_1 [X1.P1] of the controller and Port_1 [X150.P1] of the converter.

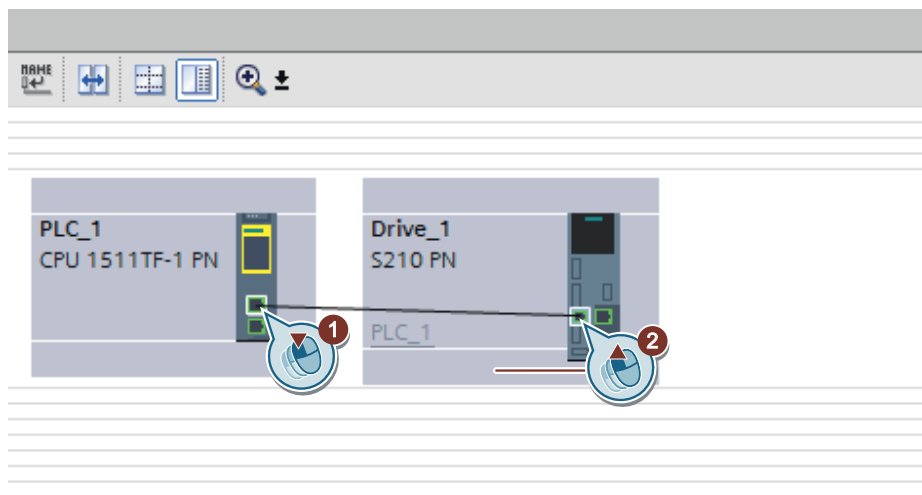

Result

The SIMATIC S7 controller and the SINAMICS S210 converter are networked with one another in the network and topology view.

8.5.2.3 Inserting a technology object into the SIMATIC S7 controller

Overview

Through the technology object, Motion Control functions such as positioning and synchronous axes are available to you. For this reason, insert a new technology object (TO) in the SIMATIC S7 controller. In the "Configuration" function view, you can directly assign the inserted SINAMICS drive and go to the drive configuration.


Positioning is the most frequent application for SINAMICS drives. To be able to perform positioning tasks in the SIMATIC S7 controller, you need to insert the Motion Control function "TO_PositioningAxis". Inserting a TO is described below based on the example of the Motion Control function "TO_PositioningAxis".

Requirement

- A SINAMICS drive is created and specified.
- A control system (e.g. SIMATIC S7-1500) is created and networked with the drive.
- For activated user management (UMAC):
The function rights for editing drive and control system data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".


Procedure

1. In the project tree, open the menu for the SIMATIC S7 controller.

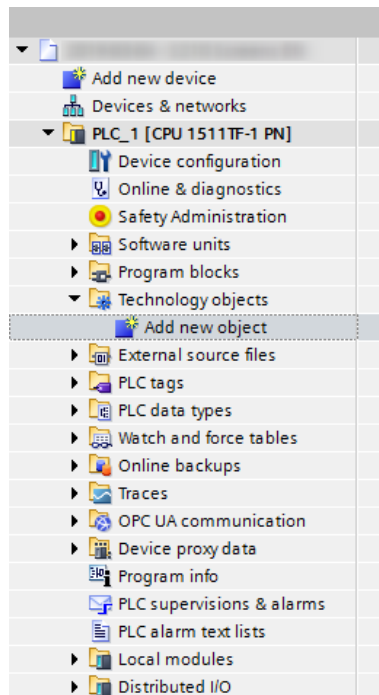

2. Open menu "Technology objects".

- Open menu "Add new object" with a double-click.
The corresponding dialog opens.

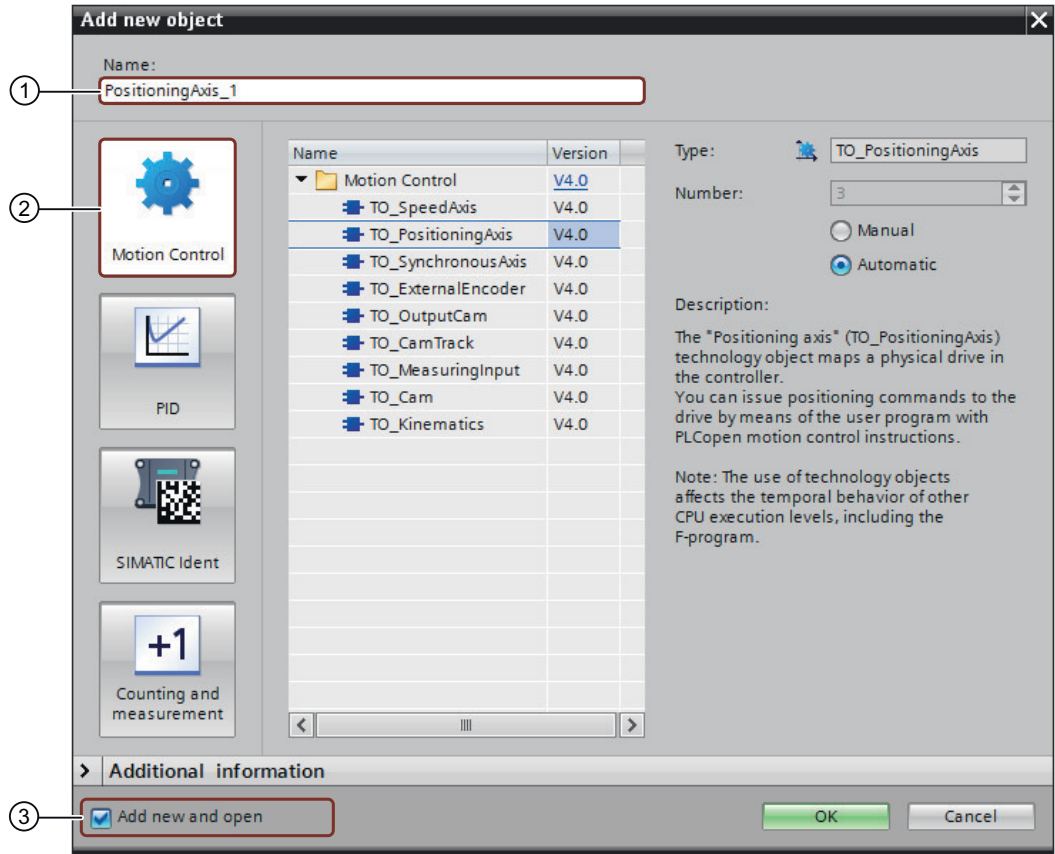

- "Object name" input field
- "Motion Control" button
- Enable/disable "Add new and open" option

- Click on "Motion Control" ②.
- Select object "TO_PositioningAxis".
- If required, assign another name for the object in input field ①.
- Click "OK".

Result

The "TO_PositioningAxis" technology object has been inserted and can be configured.

8.5.2.4 Interconnecting the technology object and drive

Overview


The inserted technology object "TO_PositioningAxis", must be interconnected with the SINAMICS drive.

Requirement



- A SINAMICS drive is created and specified.
- A control system (e.g. SIMATIC S7-1500) is created and networked with the drive.
- For activated user management (UMAC):
The function rights for editing drive and control system data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

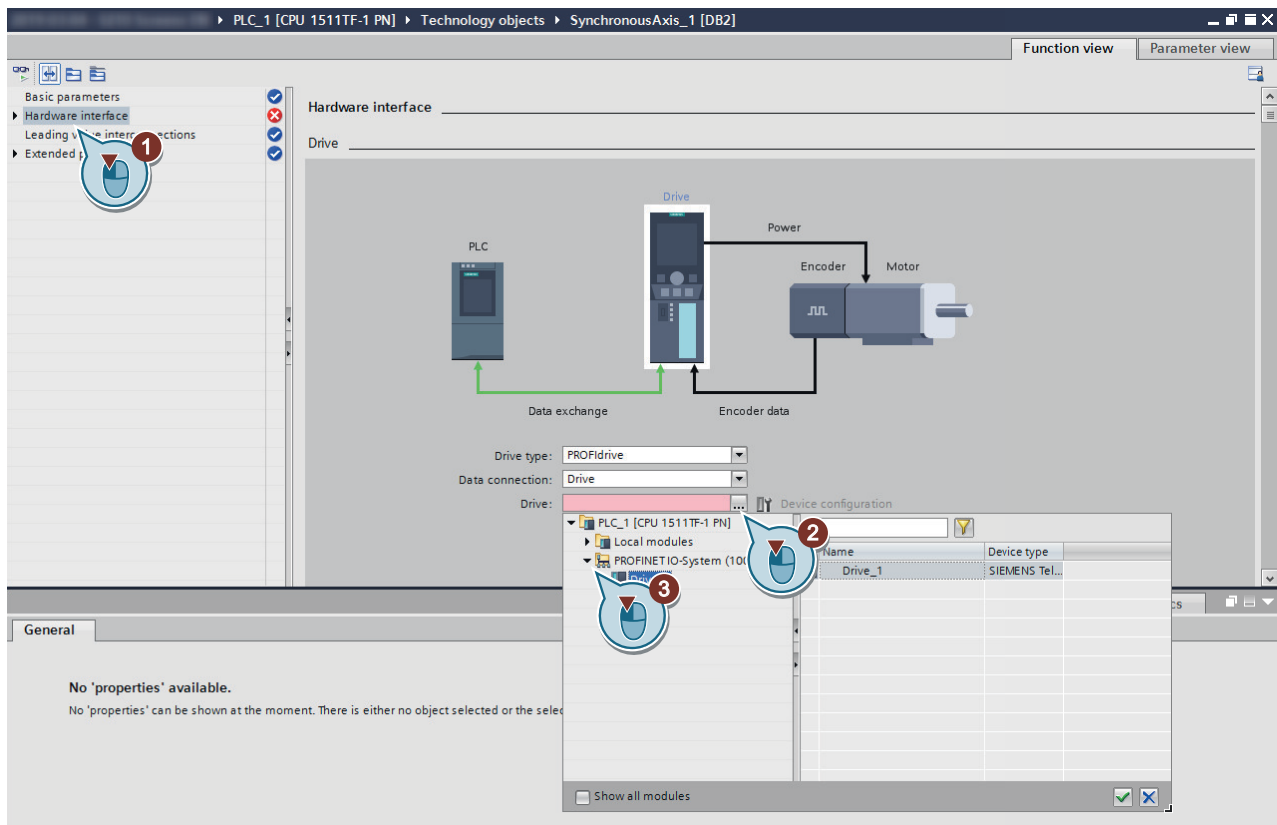1. In the project tree, double-click the "Configuration" entry under the created technology object.
2. In the secondary navigation, select menu "Hardware interface" ①.
The corresponding function view opens.



3. Open the selection list in the "Drive" selection box ②.
4. Expand the "PROFINET IO system (100)" entry ③.
5. Click on the displayed converter (in this case: "Drive unit_1").
Telegram 105 is automatically preset.

6. Click on the checkmark icon  to confirm the selection.
The "Device configuration" setting option is enabled. In addition, the "Drive configuration" setting option is displayed and enabled.
7. To get to the basic parameter assignment of the converter, click the green arrow icon .

8.6 Carrying out guided quick startup

8.6.1 Overview

Overview

Using the "guided quick startup", you perform the basic settings for the drive in Startdrive that are used to avoid the following detailed settings as far as possible. All drive settings are pre-assigned according to the required application use via these basic settings.

Requirement

- The drive has been completely created and specified in the device configuration. Without a complete specification, the guided quick startup cannot be used and a message appears.
- If a control is also used, it must be connected to the drive in the topology view and in the network view. The connection between the devices must also be configured.
- Optional: The operating unit is connected to the drive via LAN (physically online).
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Quick startup areas

You can define the following basic settings in the steps with the same name:

- **Connection to PLC**
Here you define whether you want to configure the drive in the project together with a control and which of the two components then has master control.
- **Limits**
Here, you define the minimum and maximum values of the motor used: Current, speed, running times.
- **I/O configuration**
This is where you configure the function of individual inputs and outputs of the converter.

8.6 Carrying out guided quick startup

- **Telegrams**
Telegrams are proposed here based on previous presettings. You can define different telegrams and/or make detailed settings. Telegram settings can only be made offline.
- **Rotate & Optimize**
Here, you optimize the motor in the online mode. The control panel or One Button Tuning (OBT) is available for this purpose.
- **Overview**
Here you will find a compilation of all settings made after completing the configuration in the guided quick startup.
 - Offline mode: When required, you can load these settings directly to the drive.
 - Online mode: When required, you can load these settings directly to the Startdrive project.

More information


Detailed information on the topic of "Guided quick startup" can be found in the information system of the TIA Portal.

8.6.2 User interface

Overview

The "Guided quick startup" is a commissioning wizard that you can use to set the most important basic settings of the S210 drive centrally.

Structure

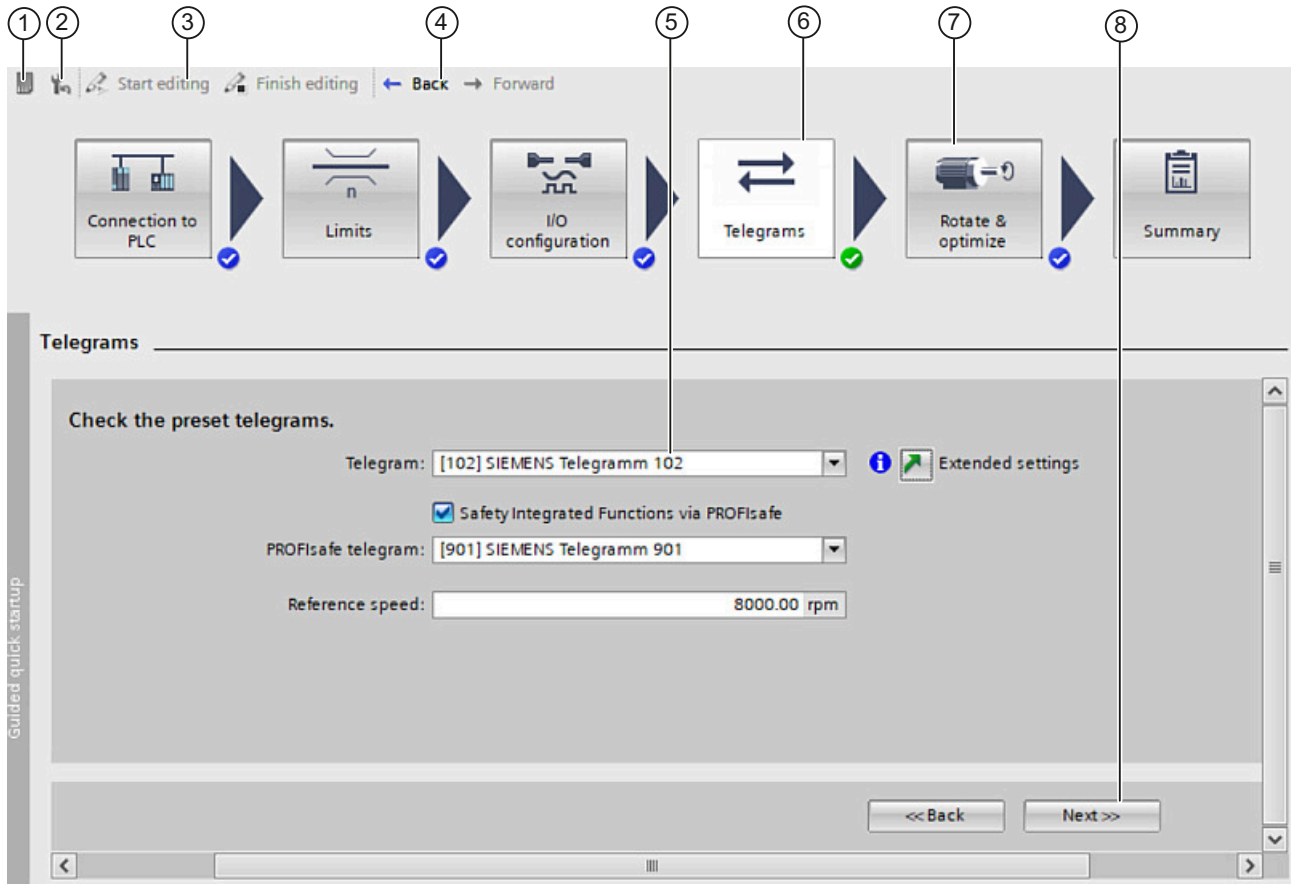




- ① Icon: Saves data retentively (in the online mode)
- ② Icon: Restores the factory settings (in online mode)
- ③ Buttons: Start or exit the editing mode (in the online mode)
- ④ Buttons: Jump to the next or previous step.
- ⑤ Detailed setting of active quick startup step.
- ⑥ Active quick startup step: Button is brightened
- ⑦ Inactive quick startup step: One of several possible steps
- ⑧ Quick startup buttons:
 - Back/Next: are always displayed.
 - Cancel/finish: only displayed in online mode.


Figure 8-5 Example: Guided quick startup in offline mode

Status display after changes


Changes to individual settings can also affect settings in the guided quick startup. Status symbols indicate the change state of the particular step:

Icon	Meaning
	The system defaults in this step are valid.
	The settings made in this step are valid. The settings were made directly in this step, or are the consequences of settings in another step.
	The program changed the settings in this step. Possible causes are: <ul style="list-style-type: none"> • Subsequent changes were made in other steps, which are not automatically valid. • The device configuration was subsequently changed. The changes influence the original settings. Check the settings of this step.

Status indicator in the quick startup steps

Settings of individual steps can also impact settings in previous steps. In this case, an appropriate note with the following icon  appears for the active quick startup step. Check and, if necessary, correct the corresponding settings.

Further identifications:

The  icon designates information or a context-sensitive note for users.

The  icon identifies an area of the step where an entry is urgently required.

8.6.3 Editing mode (only online)

Overview

If you want to work with the guided quick startup in online mode, you need restore points in case commissioning is aborted. Restore points are stored retentively on the memory card of the converter.

Restore points are automatically created when activating or exiting the editing mode and also when switching from one step into the next step of the quick startup.

Note

Behavior when the online connection is terminated


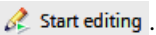
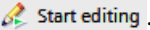

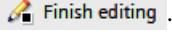
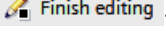
If the connection to the drive is re-established after the online connection has been terminated, the program reverts to the stored data of the last restore point.

Requirement

- The drive has been completely created and specified in the device configuration.
- If a control is also used, it must be connected to the drive in the topology view and in the network view. The connection between the devices must also be configured.
- There is an active online connection between the drive and the operating unit.
- No other access from another operating unit to the selected drive is active.

Activating/exiting the editing mode

Settings in the guided quick startup can be made online only in an "editing mode".

Display	Status	Description
	The editing mode is not yet activated.	<p>Proceed as follows to activate editing mode:</p> <ul style="list-style-type: none"> • In the toolbar of the step, click on the button  Start editing . OR • Click in the step below the button  Start editing . You can configure the settings.
	The editing mode is active.	<p>To exit the editing mode, proceed as follows:</p> <ul style="list-style-type: none"> • In the toolbar of the step, click on the button  Finish editing . OR • Click in the step below the button  Finish editing . Editing has been finished. A new restore point is assigned automatically. The current configuration is saved retentively.

Note

Message in case of multiple access

The editing mode can only be activated if the drive is not simultaneously accessed by another PC via Startdrive or the web server.

If another access is active, activation of the editing mode will be denied. An appropriate message is displayed.

Note


Message when editing factory settings in the online mode

A message is displayed if a drive still has the factory settings, and the editing mode of the guided quick startup is started. This states that the motor data are based on the rated power of a standard motor.

Therefore, check the motor data online in dialog "Show motor data". When required, correct the motor data and close the dialog.

8.6 Carrying out guided quick startup

Completing online commissioning

1. To complete online commissioning in the guided quick startup, click on button  **Finish editing** .
All settings made in the quick startup are then saved retentively. You are provided with an overview of all of the settings made in the last "Overview" step.

Canceling online commissioning

1. If you want to cancel online commissioning via the guided quick startup, click on the "Cancel" button.
A confirmation prompt appears.
2. If you really want to cancel, click on "OK".
All settings made in the quick startup are then discarded. Then the previous settings are restored via the last restore point.

8.6.4 Connection to PLC

Overview


In the quick startup step "Connection to the PLC", you define whether you wish to commission and/or operate the drive together with a control system, and whether you also wish to use Safety Integrated Functions.

Startdrive then makes default settings to speed up commissioning.

Requirement

- The drive has been completely created and specified in the device configuration.
- Optionally, a controller (PLC) also can be created in the device configuration and networked with the drive.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure


1. Specify whether the drive is connected to a controller (PLC). Click on the white part of the switch ().

Note

This setting is automatically set to "Yes" and locked against change if a PROFIsafe telegram has been activated at another point in the program for the active drive:

- Quick startup step "Telegrams"
- "Telegram configuration" inspector window menu

The lock at this point can only be removed if the telegram setting at the setting location is undone.

The activated area of the switch is marked blue ().

2. If you wish to use Safety Integrated Functions with PROFIsafe, also activate option "Safety Integrated Functions via PROFIsafe".
This option automatically activates PROFIsafe telegram 901 in the telegram configuring.
3. Click on "Next" to display the next quick startup step.

Result

Startdrive defines the default settings of the setup based on your specifications.

8.6.5 Limits

Overview

You define the basic properties of the closed-loop drive control using the "Limits" quick startup step.

Designation	Number	Description
Upper speed limit	p1083	Maximum speed for the positive direction. The set value must be less than or equal to the maximum speed (p1082).
Lower speed limit	p1086	Maximum speed for the negative direction. The set value must be less than or equal to the maximum speed (p1082).
Torque limit upper	p1520	Defines the upper torque limit or torque limit when motoring.
Torque limit lower	p1521	Defines the lower torque limit or the torque limit when generating
Quick stop Ramp-down time (OFF3)	p1135	The OFF3 ramp-down time is effective from the maximum speed down to the motor standstill.

The limits can be defined online as well as offline.

Note

Displaying the actual motor data

Using button "Display motor data", you can open a dialog window with the same name that displays the actual motor data of your drive.

Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. When required, adapt the specified default values (see the table above).
2. Click on "Next" to display the next quick startup step.

8.6.6 I/O configuration

Overview

In quick startup step "I/O configuration", make the basic settings for the digital inputs of the drive:

- Digital inputs DI 2 and DI 3
- 2 fast digital inputs (DI 0 and DI 1) as measuring probes for evaluation in the control
- Digital input DI 4 for monitoring the temperature of an optional external braking resistor

The function of the digital inputs DI 0 (≙ activate measuring probe 1) and DI 1 (≙ activate measuring probe 2) is already pre-configured and activated.

Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- You do not want to manage the digital inputs via a technology object of the control system.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

If you are not using any measuring probes, then you can deactivate them manually using the corresponding drop-down lists. However, measuring probes are generally available. The default setting is correct in these cases.

1. Optional: For DI 0 or DI 1, deactivate the measuring probe.
2. In the drop-down list "Activate equivalent zero mark", select whether you wish to use an external zero mark and whether this external zero mark should apply for DI 0 or DI 1.
3. In the drop-down list on the right for DI4, select whether the temperature monitoring of the external braking resistor should be activated or not. Temperature monitoring is deactivated as default setting.
4. Click on the button to the right of "F-DI" if you wish to configure the failsafe digital input. The Safety Function view "Control" then opens. For additional settings, refer to Chapter "Safety Integrated control (Page 131)".
5. Click on "Next" to display the next quick startup step.

8.6.7 Telegrams (only offline)

Overview

The telegrams of the drive were preconfigured by the specifications previously defined in the guided quick startup.

In quick startup step "Telegrams", you can optimize these default settings if this is necessary for your drive.

Requirement


- The motor used in the device configuration of the drive has been completely specified and configured.
- Optionally, a controller (PLC) also can be created in the device configuration and networked with the drive.

8.6 Carrying out guided quick startup

- There is **no** active online connection between the drive and operating unit. Telegrams can only be configured offline.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user role. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

The default telegrams are displayed in the "Telegrams" quick startup area.

1. Select the desired standard telegram from the "Telegram" drop-down list.
2. If you have not yet activated a PROFI-safe telegram in the quick startup area "Connection to PLC", then you can activate a PROFI-safe telegram here. For this purpose, activate the option "Use Safety Integrated Functions via PROFI-safe".
This option automatically activates PROFI-safe telegram 901 in the telegram configuring.
3. If, instead of the suggested PROFI-safe telegram 901, you wish to use PROFI-safe telegram 30, then select the telegram in the "PROFI-safe Telegram" drop-down list.
4. Correct the preset reference speed (p2000) in the field with the same name.
5. Click on icon  "Extended settings" if you wish to optimize the settings of the telegrams used in the telegram configuration.
The properties of the PROFINET interface are displayed in the inspector window. Make the required settings under "Telegram settings (Page 307)".
6. Switch back to the quick startup step "Telegrams".
7. Click on "Next" to display the next quick startup step.

Result

The telegrams for communication are configured.

8.6.8 Rotating & optimizing

Overview

Optimize the converter online in quick startup step "Rotate & Optimize". To do this, use either the control panel or One Button Tuning (OBT).

Offline, no settings can be made. After an optimization, you can view the corresponding data offline.

Note

Alternatively: Operate the drive from the control panel

If you wish to traverse the drive, click on the "Use control panel" button. Instead of One Button Tuning, the control panel is now displayed in the quick startup step. Proceed as described in the following chapter: "Traversing the drive from the control panel with speed setpoint (Page 311)".

Requirement

- The motor used in the device configuration of the drive has been completely specified and configured.
- Direct optimization required:
 - There is an active online connection between the drive and the operating unit.
 - The editing mode (Page 280) is activated.
- For activated user management (UMAC):
The function rights for configuring in the quick startup and using the control panel are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

You can carry out the optimization settings both offline as well as online. Proceed as follows:

1. Choose the dynamic response setting for the OBT based on the mechanical system of your machine.
The OBT optimizes the drive based on the selected dynamic response setting.
 - Conservative
Slow closed-loop speed control – low mechanical load.
 - Standard
Best compromise between fast closed-loop speed control and low mechanical load.
 - Dynamic
Fast speed control – high mechanical load.
2. In the "Distance limit" field, enter the angle through which the motor and the connected machine are permitted to turn for the required measurements (e.g. 360°) without the mechanical system being damaged.
The angle should be at least 60° in order to determine useful controller parameters. Longer traversing distances result in better optimization results.
3. If you want to perform extended settings, click on the "Extended settings" button.
The "Machine property" dialog opens. You obtain information about the conditions under which you can increase the speed control dynamic performance. If you wish to increase the dynamic response, activate option "Set the current setpoint filter with loop compensation".

8.6 Carrying out guided quick startup

4. Establish an online connection to the drive if up until now you had worked in the offline mode.
 - Then activate master control.
 - Start the OBT.
 - Check the optimization results.
 - Deactivate the master control.

The individual steps are described in detail in Chapter "Perform One Button Tuning (Page 312)".

5. Click on "Next" to display the next quick startup step.

Result

The result of the optimization is displayed in the "Status" area. If optimization was successful, the appropriate LED lights up green. The "Optimization result" list compares the settings changed by the optimization with the earlier settings prior to optimization.

If optimization was not successful, repeat the optimization, possibly with modified data.

8.6.9 Overview (offline)

Overview

After completing the commissioning steps in the guided quick startup, here, you will find a compilation of all settings that were made offline.

If necessary, you can load the settings made offline from the overview into the device.

Requirement

- The drive has been completely created and specified in the device configuration.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Optional: Downloading project data to the device

1. In function view "Overview", click on "Download".
To transfer the protected project data, you must log into the device with your user data.
2. Proceed as described in Chapter "Loading project data into the drive (Page 249)".

8.6.10 (Online) overview


Overview

After completing the commissioning steps in the guided quick startup, here, you will find a compilation of all settings that were made online. You can sort and export the corresponding information or also compare it with the factory settings.

Requirement

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the drive and the operating unit.
- The online configuration was completed.
- For activated user management (UMAC):
The function rights for configuring in the quick startup are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Optional: Uploading project data from the device

1. After the online commissioning has been completed, if you want to transfer the current project data into the TIA project of your operating unit, click on "Finish".
Icon (Upload from device) is subsequently displayed in function view "Overview".
2. Click on icon  (Upload from device).
3. Proceed as described in the following chapter: "Loading data from the drive into the project (Page 249)".

8.7 Configuring the converter

8.7.1 Fundamentals

Overview

After carrying out the basic configuration of devices in the project, make the extended settings for commissioning.

The following areas are provided in display area "Parameterization":

- **Basic parameter assignment**
Here you can view the preassigned basic parameters of the converter, and if necessary you can change individual values. If the motor brake is available, then you can also set that this brake is forced open.
- **Inputs/outputs**
Here you can configure the digital inputs of the converter.
- **Safety Integrated**
Here, you can activate and configure the available safety functions.

Note

Guided quick startup

You can also easily configure the settings of the basic parameterization and the digital inputs using the guided quick startup.

Details are contained in Chapter "Carrying out guided quick startup (Page 277)".

Note

Telegram configuration

You configure the telegrams used in the drive configuration in the inspector window in the telegram configuration. The most important settings are listed in Chapter "Configuring telegrams (Page 307)".

8.7.2 Carry out the basic parameterization

Overview

You can parameterize the most important operating parameters in the basic setting.

These include:

- Device supply voltage
- Direction of rotation
- Speed limit
- Torque limit
- Ramp-down times
After an OFF1 command, and for a quick stop OFF3.
- Forced opening of the brake
Only if the motor being used is equipped with a holding brake.

Requirement

- The drive has been completely created and completely specified in the device configuration.
- For activated user management (UMAC):
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".


Procedure

1. Change the default settings of this function view.
2. Optionally, if the motor being used is equipped with a "Standard holding brake", and you wish to permanently open this brake:
Click on button "Force open brake".
3. Save the project to apply the settings.

8.7.3 Configuring digital inputs via technology object

Pre-assignment of the digital inputs DI 0, DI 1 and DI 4

The function of the digital inputs DI 0 (≙ activate measuring probe 1) and DI 1 (≙ activate measuring probe 2) is already pre-configured and activated.

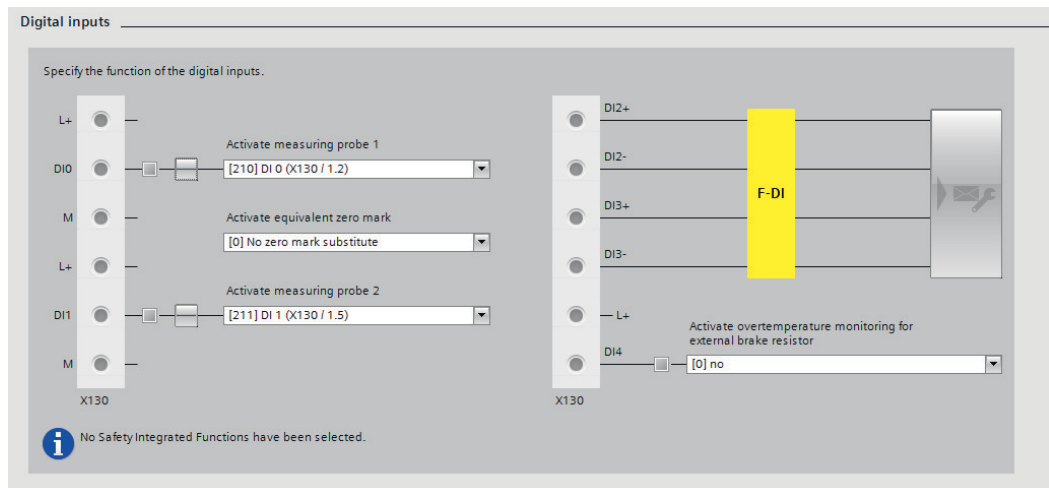

Requirement

- The drive has been completely created and completely specified in the device configuration.
- For activated user management (UMAC):
The function rights required to edit the drive data are activated for your user role.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

If you are not using any measuring probes, then you can deactivate them manually using the corresponding drop-down lists. However, measuring probes are generally available. The default setting is correct in these cases.

1. In the drop-down list "Activate equivalent zero mark", select whether you wish to use an external zero mark and whether this external zero mark should apply for DI 0 or DI 1.
2. In drop-down list "Activate overtemperature monitoring for external braking resistor", select whether the temperature monitoring of the external braking resistor should be activated or not.
3. Click on the button to the right of "F-DI" if you wish to configure the failsafe digital input. The safety interconnection screen form "Control" then opens. For additional settings, refer to Chapter "Safety Integrated control (Page 131)".
4. Then save the project to apply the settings.

8.7.3.1 Configuring a measuring probe using the technology object




Requirement

- The project includes a control system, and is connected to the converter.
- A technology object "PositioningAxis_1" is created for the control system and is active.

Procedure

If you want to configure the measuring probes for the digital inputs of the drive using technology objects, proceed as follows:


1. In the project tree, expand the follow entries in the order specified below:

-  Technology objects
-  PositioningAxis_1
-  Measuring probes

The "Add new measuring probe" entry is displayed.

2. Double-click the "Add new measuring probe" entry ①.

A new measuring probe is created and additional functions are displayed.

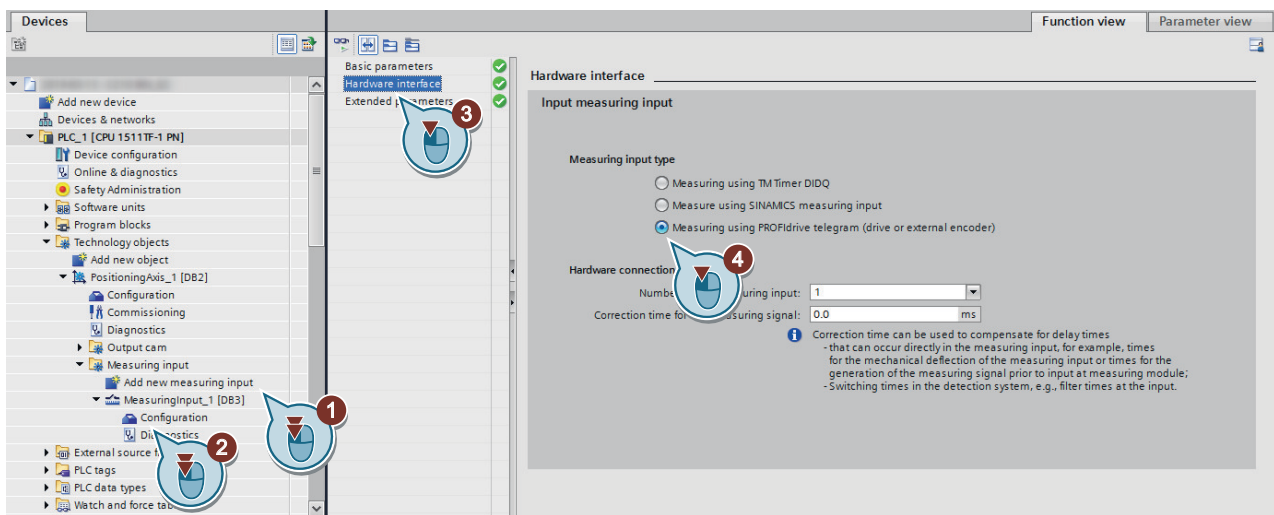

3. Double-click the "Configuration" entry ②.

The corresponding function view opens in the device view.

4. Click the "Hardware interface" option ③ in the secondary navigation.

The corresponding function view is displayed.

5. Select the measuring probe type "Measuring using PROFIdrive telegram (drive or external encoder)" ④.

A measuring probe of the type "Measuring using PROFIdrive telegram (drive or external encoder)" is created.

You can configure a maximum of 2 measuring probes to an actual value or an encoder. For the measurement, only one measuring probe can be active.

6. To correct the measuring time point, set a correction time.

Result

A measuring probe of the type "Measuring using PROFIdrive telegram (drive or external encoder)" is created and can be used.

8.7.4 Safety Integrated

8.7.4.1 Fundamentals for Safety Integrated commissioning

Overview

Commissioning the Safety Integrated Functions of the converter includes the following configurations:


- Function selection
- Parameterizing the functions as required for the application
- Control of the functions

Requirement

The converter is completely created in the device configuration.

You have the function rights necessary for changing Safety Integrated settings.

Description of function

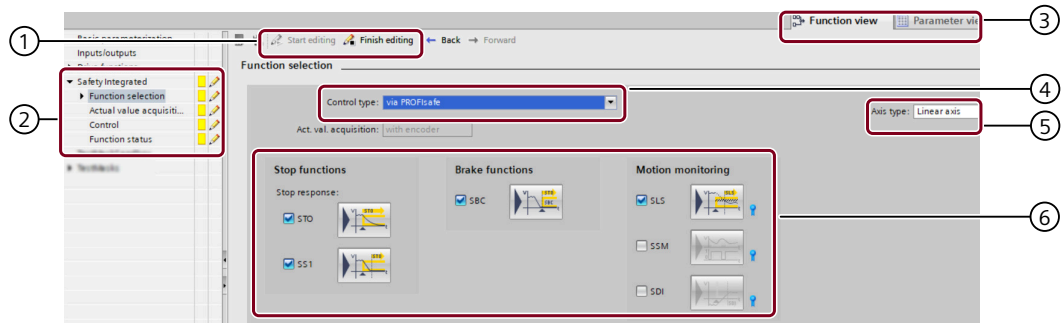

- ① Editing mode
- ② Secondary navigation
- ③ Function view / Parameter view
- ④ Function selection
- ⑤ Axis type
- ⑥ Function selection

Figure 8-6 Overview of Safety Integrated commissioning (example)



Changes to Safety Integrated settings are only possible in the Safety Integrated editing mode. The activated user management protects against unauthorized changes to Safety Integrated settings. When starting the editing mode, Startdrive checks whether the security rights required are available.

Commissioning steps

- Function selection:
 - Selecting the Safety Integrated control type
 - Selecting the axis type
When switching over the axis type, the units are changed.
 - Selecting the available Safety Integrated Functions depending on the control type
The stop responses (STO and SS1) shown in the function selection must always be parameterized. The reason is that the stop responses must stop the motor in the case of a fault and for a limit value violation. If you also want the functions to be controlled via PROFIsafe and/or F-DI, then an additional enable is required through appropriate selection.
The selection enables the function. The enabled function then appears in the secondary navigation as a subpoint of the function selection.
 - License symbol
The license symbol shows the Safety Integrated Functions that require a Safety Extended license. For test purposes, there is a Trial License mode for Safety Integrated.
- Parameterization of the enabled Safety Integrated Functions
 - Function-dependent display of the converter parameters
A function view is offered for every enabled Safety Integrated Function. The function view of the particular function is available in the drop-down list for function selection in the secondary navigation. The function view shows a graphic and the important setting parameters. If additional parameters must be set/observed for the particular function, it is necessary to switch to parameter view. Parameter view has two views: "Standard" and "Extended". Different parameters appear depending on whether the "Standard" view or "Extended" view is selected.
Changes in the parameter view become effective after the editing mode is ended in the function view.
 - Actual value acquisition/mechanical system
The actual value acquisition/mechanical system can be viewed if Safety Integrated motion monitoring functions were activated.

8.7 Configuring the converter

- Parameterization of the selected control type
The parameterization of the control type determines the settings for PROFIsafe and the failsafe digital input (F-DI).
- Function status
The function status shows the following values:
 - Function status of the enabled functions

Display	Function status
	Function is active
	Function is not active

Safety Integrated Function status of an enabled function

- Status of Safety Integrated in the device
- Checksums
Offline: Shows the checksums calculated when Safety Integrated commissioning was completed.
Online: Shows the current status of all configured Safety Integrated Functions as well as the checksums calculated when Safety Integrated commissioning was completed.
- Software versions in the converter

Navigation tips

The secondary navigation of the parameterization can be used to navigate between the various commissioning steps.

Alternatively, "Next" and "Back" buttons are available at the lower edge of the screen form.

More information

For detailed information, see Chapter "Safety Integrated Functions (Page 105)".

8.7.4.2 Starting/exiting Safety Integrated editing mode

Overview



You must start the editing mode in order to make changes to the Safety Integrated settings. This applies to both offline and online configurations.

The system behaves differently depending on whether you are working online or offline.

Requirement

The converter is completely created in the device configuration.

Procedure

1. Click on  **Start editing** to activate editing mode.
If you are working online: If the current Safety Integrated settings deviate from the factory settings, you will be prompted to select which basis you want to use for the configuration:
 - Based on the current settings
 - Based on the factory settingsIf you are working offline, this prompt does not appear.
2. Click on  **Finish editing** to exit the editing mode.
If you are working online: The checksums are calculated for the parameterization carried out, and saved directly in the converter. This activates the parameterization, and can be executed at the machine.
If you are working offline: The checksums are calculated for the parameterization carried out, and saved in the project.

Note

Loss of settings if commissioning is canceled in the online configuration

If you do not close editing mode with "Finish editing", the following applies:

You can discard the Safety Integrated settings made using the "Cancel" button. As a result, the Safety Integrated settings from before editing mode was started are restored.

8.7.4.3 Permanently saving Safety Integrated parameterization


Requirement



You have configured the Safety Integrated commissioning or made changes to the parameterization.

You are in the online configuration.

Procedure

Proceed as follows to permanently save the Safety Integrated parameterization:

1. Exit the editing mode.
2. To save the Safety Integrated parameters permanently in the drive, retentive saving is necessary.
In the toolbar of the function view, click on the icon .
3. Observe the messages in the diagnostics window.

4. Restart the system if necessary.
5. Then establish consistency between the drive and Startdrive project:
 - Load the settings from the drive into the Startdrive project. To do this, click the icon .
 - Disconnect the online connection .
 - Save the Startdrive project.

8.7.4.4 Security for Safety Integrated

Overview

Only authorized and authenticated personnel may change Safety Integrated settings. You protect these settings using the project protection and the user management (UMAC) of the Totally Integrated Automation Portal (TIA Portal).

Description of function

It is possible to create specific users and roles in the user management of the TIA Portal. Based on the assigned function rights, users are authorized to make changes to the settings in Safety Integrated Functions.

The following roles can make changes in Safety Integrated without the need to modify other settings:

- Drive Safety Engineer
- Engineering Standard

The system checks the UMAC status before each change to the Safety Integrated settings. An fault message is displayed if function rights are not available or authentication is not possible.

More information

More detailed information is provided in the Configuration Manual "SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>)" in Chapter "Security settings in Startdrive".

8.7.4.5 Carrying out an acceptance test.

Acceptance test - notes

Note

Conditions for the acceptance test

As far as possible, the acceptance tests are to be carried out at the maximum possible machine speed and acceleration rates to determine the maximum braking distances and braking times that can be expected.

Note

Acceptance test for Safety Integrated Functions

In the function selection, the Safety Integrated acceptance test offers you the testable functions for selection, depending on the device type and its settings.

Note

Trace recordings

Trace recordings are used to analyze the machine response during a test run. Based on the signal characteristics, a check can be made as to whether the machine response corresponds to the expectations of the test engineer. The recorded signals can be used to evaluate delay times and over-travel distances, for example. The trace recordings are automatically parameterized and performed by the tool.

Note

Non-critical alarms

When evaluating the alarm buffer you can tolerate the following alarms:

- A01699 SI: Test brake output necessary
This alarm occurs after the time in p9659 has expired.

You do not need to include these alarms in the acceptance report.

Note

No acceptance test with alarm A01796

If the alarm A01796 is active, the pulses are safely canceled, and an acceptance test is not possible.

Note

Consistency between the offline project and drive

The acceptance test is performed after commissioning has been completed. After this, it is no longer permissible that any parameters are changed in the drive.

Before the acceptance test, upload the drive to establish consistency between the offline project and the drive. This means that all checksums are consistent.

The results of the acceptance test are saved in the project.

Without additional changes to the project or to the drive parameterization, all checksums are kept unchanged.

A change to the checksums should be taken into consideration in the following cases:

- If the drive parameterization (offline or online) is changed after performing the acceptance test, then the functional checksums are changed.
- If drive components are replaced, then the hardware-specific checksums are changed.

After any changes, the acceptance test (complete or partial) must be performed again. Recommendations are described in the drive documentation.

The Safety Integrated acceptance test report can be exported at any time. When doing this, a check is not made as to whether the project is consistent between offline and online.




For the final documentation of the acceptance report, ensure that there are no inconsistencies in the system.

Note

Startdrive supports the consistency check

The consistency check in Startdrive is performed automatically and permanently online. The result of the consistency check is shown as an icon next to the acceptance test in the secondary navigation.

The following states are displayed:

- : The online and offline comparison values are identical.
 - : The online and offline comparison values are different. The consistency between the offline project and the drive must be established using "Download to device" or "Upload from device".
 - : An error occurred during the consistency check.
-

Acceptance test - overview

Overview

The Safety Integrated acceptance test wizard supports you when running through the acceptance test.

Description of function

The wizard provides the following support:

- The wizard guides you step-by-step through the acceptance tests for the individual Safety Integrated Functions.
- The wizard explicitly asks you for the entries and actions that you must go through.
- The wizard creates the trace recordings needed for analyzing the machine behavior during the tests.
- The wizard creates the required acceptance report.

Preparing the acceptance test

Requirement

- There is an active online connection between the drive and the operating unit.
- The drives to be tested are fully configured and operational.
A subsequent change means that a new acceptance test must be performed.
- For active user management (UMAC): You have the required function rights for Safety Integrated.

Procedure

Proceed as follows to prepare for the acceptance test:

1. Click "Acceptance test" in the project tree.
2. Select all Safety Integrated Functions to be tested for the desired drive in the secondary navigation.
The active functions are automatically preselected. Depending on the specific requirement, change this preselection and either select or deselect functions.
3. To define the function selection for the Safety Integrated acceptance test, click "Apply".
Entries are displayed in the secondary navigation for the functions to be tested. Navigate with these settings to the individual tests.

Optional: Resetting test results

1. To delete all tests performed for this drive so far, click the "Reset test results" button.
As a consequence, the initial state is restored. New acceptance tests are possible before the initial state.

Performing the acceptance test (example)

Overview

After accepting the function selection in step "Prepare acceptance test", the functions to be tested are displayed in the secondary navigation. Work through the tests from top to bottom or in any order.

The status of the individual tests is shown as follows:

- Blue: The test for this function has still not been performed.
- Green: The test was successfully performed.
- Red: The test was canceled with an error. The test can be repeated by preselecting the function.

The guided wizards have the same distribution for each acceptance test. The workflow, which represents the individual test steps and their state, is located in the upper area.

These states have the following meaning:

- Blue: Active test step
- Green: Test step completed

The instructions for the various steps of the acceptance test are displayed in the area below the workflow.

Requirement

- The drive has been completely created and specified in the device configuration.
- The Safety Integrated Functions of the selected drive have been completely configured.
- There is an active online connection between the drive and operating unit. The project data in the project and drive are consistent.
- For active user management (UMAC): You have the required function rights for Safety Integrated.

Procedure

Proceed as follows to execute each acceptance test:

1. Click on a Safety Integrated Function to be tested.
2. Enter a test designation. This designation also appears later in the acceptance report.
3. Change the trace settings for this test or use the default settings.
The preassignment is appropriate for the majority of applications. By changing the trace settings, you adapt the test to the mechanical conditions of the machine. Example: The mechanical system of the axis has a very high moment of inertia. As a consequence, longer ramp times are required for accelerating and braking.
4. Once you have completed all the preparations, click on "Start test".
The wizard for the selected test opens.
5. Comply with the safety instructions and notes on the pages of the function view of the acceptance test wizard until the test has been (successfully) completed.
6. Follow the instructions and click on "Next".
7. Exit the acceptance test via "Finish".

Result

You can see the test status in the secondary navigation.

Note

Acceptance test canceled

If you open another window during the acceptance test, the acceptance test is canceled and is marked as "failed" in the acceptance report.

Remedy:

- Open the other window with function "Unpin" as separate window. Using "Embed", you reintegrate the separate window at a later point in time.
-

See also

Preparing the acceptance test (Page 301)

Completing the acceptance test with report

Overview

The overview under "Create report" lists all drives and their current test status.

You have the option of creating the acceptance report at any time. For example, intermediate states can be documented, even though some tests are still open or were ended with errors.

Requirement

- For active user management (UMAC): You have the required function rights.
- For a final acceptance report: You have successfully completed all acceptance tests. All tests are marked positive with a green checkmark.

Procedure

Proceed as follows to create an acceptance report:

1. In the "Completion" screen form, select the drives for which you wish to create a report. The drive instances to which the results were transferred are also displayed in the list as subentries that can be opened. These drive instances are always included in the acceptance report with the selection of the respective main drive.
2. Click on "Create".
The "Save As..." dialog is displayed.
 - When selecting a drive, the file name of the acceptance report is preassigned the drive designation as default setting.
 - When selecting several drives, a dialog is displayed to select the directory where the report is saved. For each selected drive, a report is saved with the name of the drive.

3. Depending on the specific requirement, enter the file name of the report.
4. Click on "Save".

Optional: Creating a function table

You can use the function table to create a user-defined overview that is documented in the acceptance report in addition to the results of the acceptance test.

Table 8-1 Function table

Column	Explanation
Operating mode	Select one of the specified operating modes from the drop-down list to map the required scenario.
Description	Enter an explanatory comment for the selected operating mode.
Protective device	Select the applied protection mechanism from the drop-down list.
Version	Enter an explanatory comment on the protective device being used.
Axis	Select the relevant drive from the drop-down list.
Monitoring	Select the safety function being used from the drop-down list.

Result

The acceptance report is created as table in the "xlsx" format. You can open the report in Microsoft Excel as well as in other spreadsheet programs (e.g. LibreOffice).

The report is in the form of several individual tables:

- Cover page: Introduction with the machine description
- Drive_x - overview: Documentation of parameters for this drive
- Drive_x - function test: Documentation of all test data and traces for this drive
Test status color coding:
 - Red: Failed
 - Yellow: Not tested
 - Green: Test successful
- Completion: Summary and signatures

Note**Correct display of the acceptance report**

How the acceptance report is actually displayed, depends on Microsoft Windows and the spreadsheet program used.

- Microsoft Excel
If the following is configured in the display settings of Microsoft Windows, then the display of the report is correct:
Control Panel > Appearance and Personalization > Display > Make text and other items larger or smaller > Option "Smaller – 100%"
 - LibreOffice
The display of the acceptance report is independent of Microsoft Windows and is always correct.
-

Transferring acceptance test results

Overview

To simplify additional acceptance tests, transfer the results of successfully performed tests to drives with the same functionality.

Requirement

- You have successfully performed the acceptance tests.
- For active user management (UMAC): You have the required function rights.

Procedure

Proceed as follows to transfer the results of an acceptance test:

1. Open the page of function view "Result transfer" for a drive for which you have successfully completed the acceptance test.
2. Click on "Determine" to determine suitable drives.
 - After initial determination, the button changes to "Refresh".
 - The acceptance test wizard lists all of the drives that could be involved.
3. Select the drives to which you want to transfer the results.
The selected drives become instances of the tested drive.
4. Click on "Apply".
The transfer status is displayed in the function view.
5. You disconnect instances from the tested drive using "Deselect" and "Apply".

Optional acceptance test functions

Overview

Startdrive provides additional functions for the acceptance test. More details on these functions can be found in the TIA Portal information system.

Description of function

Safety Activation Test

You test the control signals in the automation topology using the "Safety Activation Test".

The "Safety Activation Test" tests the following:

- Is the defined signal path correctly run through from the sensor through the evaluation up to the drive and/or actuator?
- Are there wiring errors or other errors present?

You can use the acceptance test to test the Safety Integrated Functions in the SINAMICS drive for proper parameterization.

Test cases that define the input conditions (system states) and the expected system responses are defined for this purpose. Wizards are available for the tests. The results of the acceptance test are included in the acceptance report.

User-defined texts

You describe the instructions of the individual test steps together with the terminology using user-defined texts. Align the operating instructions to address the specific operation of your machine. A screen form shows the instruction texts for the individual steps of all test cases. These are marked with the "System" description.

Depending on the specific requirement, either filter the test cases of the current drive or the sum of all test cases for the drives in the project.

Multuser Engineering

The acceptance test is possible in the multi-user engineering. The following individual functions are available:

- The acceptance test for an axis is performed in a local session, and is checked into the test results of the server session.
In the server session, the potentially available test results of this axis are overwritten with the results from the local session.
- The "Safety Activation Test" for a drive is performed in a local session and is checked into the test results of the server session.
In the server session, test results potentially available for this drive are overwritten with the results from the local session.

8.7.5 Configuring telegrams

8.7.5.1 Calling the telegram configuration

Overview

The "Telegram configuration" function is part of the device configuration, and is displayed in the inspector window.

You can either call this function via the project tree or for Startdrive S drives, also via direct links from the communication screen forms.

Information about the telegrams used in the converter is provided in Chapter "Communication telegrams (Page 869)".

Requirement

- The drive has been completely created and specified in the device configuration.
- For activated user management (UMAC):
The function rights required to configure telegrams in the inspector window are activated for your user role.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Open the drive in the project tree and double-click on entry "Device configuration".
The device configuration opens.
2. Select the S210 drive in the device configuration.
3. Select the entry "Telegram configuration" in the "Properties" tab of the inspector window.
The settings for the telegram configuration are displayed below the respective fieldbus interface.

8.7.5.2 Telegram settings

Overview

The dialog box for the telegram configuration is structured as follows:

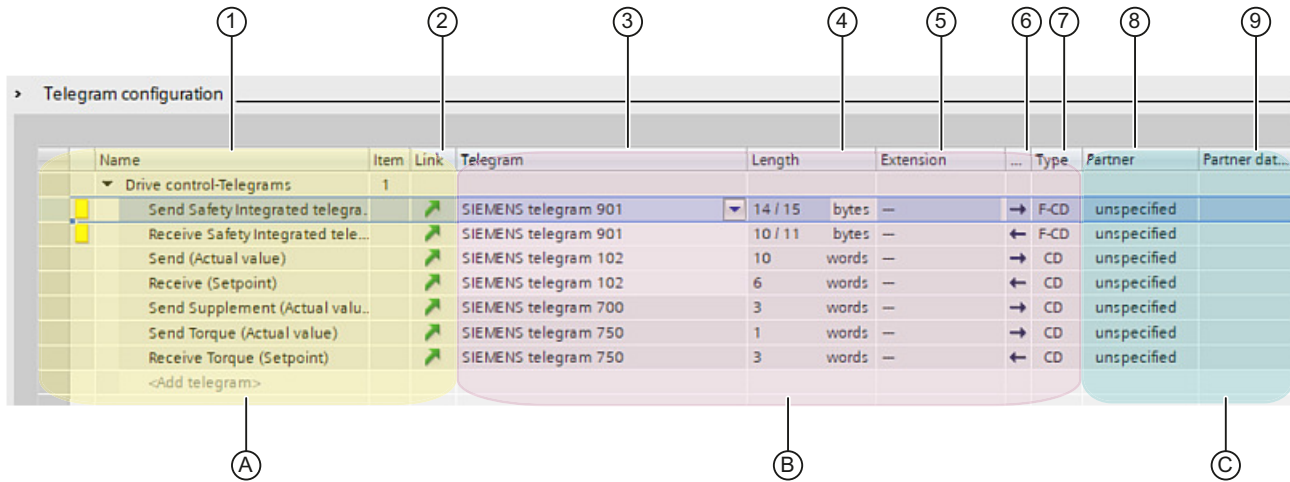


Figure 8-7 Telegram configuration

Number	Description
A	Area for drive objects (setpoints, actual values and safety components)
B	Area for the interfaces
C	Area for the communication partners of the drive (e.g. controller or another drive)
①	Drive object display
②	Link to the communication screen forms of the particular drive object
③	Drop-down list with the available telegrams
④	Length of the telegram
⑤	Telegram extension
⑥	Communication direction (send direction →/receive direction ←)
⑦	Type of communication
	CD = Controller - Device for PROFINET IO
	F_ = PROFIsafe-specific extension (safety telegram)
⑧	Name of the partner (controller)
⑨	Partner data area

More information

Detailed information on configuring telegrams is also provided in the TIA Portal information system.

8.7.5.3 Adding telegrams

Overview

You can add the following telegrams once, as long as they are still not available in the telegram list of the drive object:

- PROFIsafe telegram
- Supplementary telegram 700
- Torque telegram 750

Requirement

- A drive and a partner are created in the project, and connected via a fieldbus. The drive is selected and the parameter editor is open.
- For activated user management (UMAC):
The function rights required to configure telegrams in the inspector window are activated for your user role.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

To add a telegram, proceed as follows:

1. Open the following menu path from the secondary navigation of the inspector window: "Properties > PROFINET interface > Telegram configuration".
2. Click on entry "Add telegram" (at the required drive object).
A drop-down list opens. All telegram types that have not been assigned yet can be used.
3. Select the required telegram type.
The entries for the telegram are created.
4. If required, now change the telegram type, e.g. from telegram 30 to telegram 901.
5. Save the project.

Result

Telegram is added.

8.8 Optimizing commissioning

8.8.1 Establishing online connection

Overview


Before you traverse your drive from the control panel or optimize the axis, you need to establish an online connection to the drive.

Requirement

- The configuration is loaded into the SIMATIC S7 controller. The drive can therefore be accessed in the PROFINET network via the SIMATIC S7 controller and your operating unit is connected to the corresponding PROFINET interface of the controller (e.g. X1).
- For activated user management (UMAC): The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Double-click the **Online & diagnostics** entry in the project tree under the S210 drive. The "Online access" function view is displayed.

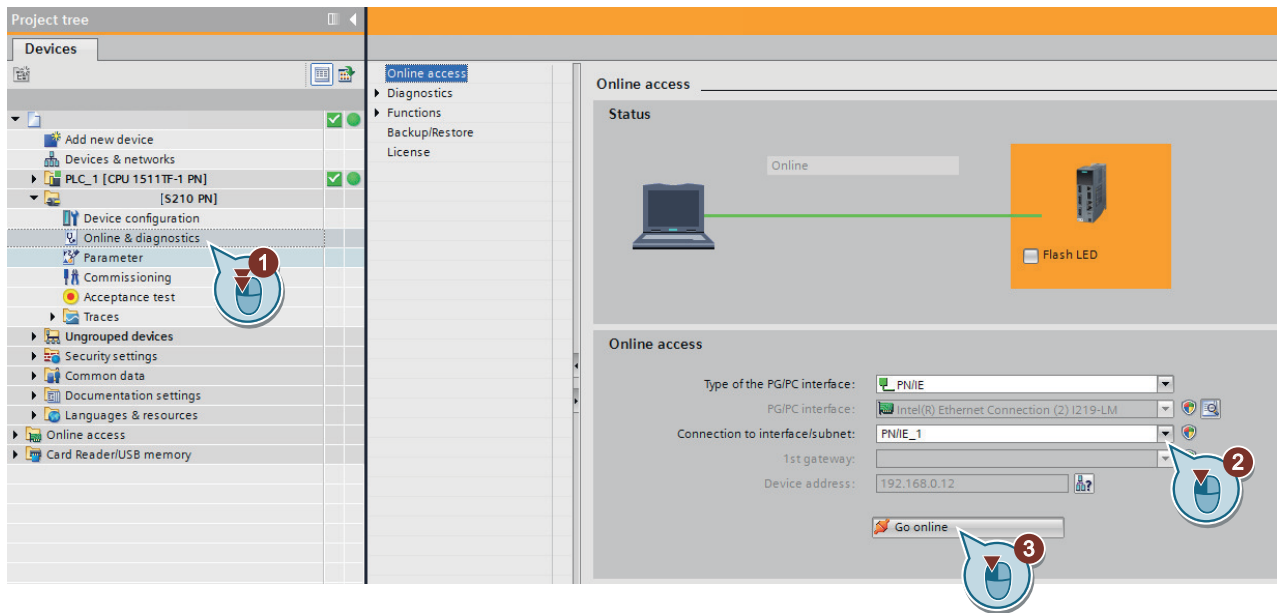

2. Select the PROFINET network in the "Connection with interface/subnet" drop-down list.
3. Click the "Go online" button.

Result


The online connection to the drive is established.

8.8.2 Traversing the drive from the control panel with speed setpoint

Overview

Traverse the drive from the control panel and test the settings made. The control panel can only be activated for one drive.

By activating the control panel, you assume master control of the drive. Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.


 WARNING
Risk of death if the safety instructions for the control panel are not carefully complied with
The safety shutdowns from the higher-level controller have no effect with this function. The Stop with space bar function is not guaranteed in all operating states. Incorrect operation by untrained personnel – without taking into account the appropriate safety instructions – can therefore result in death or severe injury.
<ul style="list-style-type: none">• Make sure that this function is only used for commissioning, diagnostic and service purposes.• Make sure that this function is only used by trained and authorized skilled personnel.• Ensure that EMERGENCY OFF circuit is always implemented as hardware circuit.

Note

Drive responds immediately

Although all enable signals are removed before returning the master control, the setpoints and commands still come from the original parameterized sources after the master control is returned.

Requirement

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the drive and the operating unit.
- Display area "Rotate & Optimize"  was opened via the project tree.
- For activated user management (UMAC):
The function rights required to edit the drive data and to use the control panel are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

You can traverse the drive using both the control panel of the technology object and the control panel of the drive itself.

Proceed as follows to traverse the drive from the control panel of the drive:

1. Select the "Control panel" function in the secondary navigation.
The corresponding function view is displayed.
2. Click the "Activate" button to enable master control for the drive.
The "Activate master control" message window is displayed.
3. Read the alarms carefully and check the value for the monitoring time.
The monitoring time specifies the time during which the connection from your operating unit to the drive is cyclically monitored. The monitoring time is preset to 2000 ms and should only be changed if required.
4. Confirm the monitoring time with "OK".
The message window closes and the control panel is enabled. The drive enables are set automatically.
5. In the "Speed" input field, enter a value \leq the maximum speed.
6. Traverse the drive in the desired direction using the controller buttons.
7. Click the "Deactivate" button to disable master control.
The "Deactivate master control" dialog window is displayed.
8. Confirm deactivation of master control with "Yes".

Result

The current values of various parameters are displayed under "Actual values". Enables and faults are displayed under "Drive status". In addition to "Active fault", the currently pending fault is displayed.


8.8.3 Perform One Button Tuning

Overview



For One Button Tuning (OBT), the mechanical drive train is measured using short test signals. This means that you optimally adapt the controller parameters to the mechanical system being used. Using this optimization routine, you can determine the optimum controller settings with just a few entries.

Requirement

- The drive has been completely created and specified in the device configuration.
- There is an active online connection between the drive and the operating unit.

- Display area "Rotate & Optimize"  was opened via the project tree.
- For activated user management (UMAC):
The function rights required to edit the drive data and to use the control panel are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure


1. Select the "One Button Tuning" function in the secondary navigation.
The corresponding function view is displayed.
2. Select the desired setting (e.g. "Conservative") in the "Dynamic settings" area.
The "Standard" setting is selected by default.
3. Enter a value (e.g. 360) in the input field "Path limit from 0° to".
Sensible controller parameters are obtained from an angle > 90°.
4. Confirm the entry with "Enter".
The error icon  is then hidden.
5. Click the "Activate" button to enable master control for the drive.
The "Activate master control" message window is displayed.
6. Read the alarms carefully and check the value for the monitoring time.
The monitoring time specifies the time during which the connection from your operating unit to the drive is cyclically monitored. The monitoring time is preset to 2000 ms and should only be changed if required.
7. Confirm the monitoring time with "OK".
The message window is closed and One Button Tuning is activated.
8. Click the "Start" button to start the optimization.
Optimization of the drive is performed. After optimization is completed successfully, the green status icon  appears and the changed values are shown in the "Current value" column in the "Result of optimization" area.

NOTICE



Unpredictable drive response when making manual changes after One Button Tuning

Manual changes of the calculated values can lead to unpredictable behavior of the drive. This can damage the drive.

- After the One Button Tuning, carefully check that the optimized values are not subsequently changed manually.
- Always first restore the factory settings if you do not want to use the values optimized using One Button Tuning.

9. Click the "Deactivate" button to disable master control.
The "Deactivate master control" dialog window is displayed.
10. Confirm deactivation of master control with "Yes".
11. Click the memory card icon  to store the result of the optimization permanently in your drive.

8.9 Using online diagnostic functions

12. To load the data from your drive into the project, first select the drive unit in the project tree and then click the  icon (Upload from device) in the toolbar.
13. Click the icon  (Save project) to store the result of the optimization permanently in your drive.

Result

You have performed the optimization routine and saved the result of the optimization permanently in your drive and project.

8.8.4 Terminating the online connection

Overview

After you traverse your drive from the control panel or optimize the axis, you need to disconnect the online connection to the drive.

Requirement

- For activated user management (UMAC):
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. Click on the S210 drive in the project tree.
2. Click on "Disconnect online connection" in the menu bar.

Result

The online connection to the drive is disconnected.

8.9 Using online diagnostic functions

8.9.1 Diagnostics icons

Overview













Faults, alarms and any maintenance that is required are indicated using diagnostic icons.

Description of function

The icons are displayed in the following areas of the TIA Portal:

- Project tree
- Device view
- Device overview

The icons are displayed in both the line as well as topology views.

Icon	Meaning
	No fault or maintenance required
	Maintenance required
	Maintenance requirement for a subordinate component
	Maintenance request
	Maintenance request for a subordinate component
	Fault/error
	Fault/error on a subordinate component
	Connection error to the device
	Establish a connection
	The diagnostic status is determined
	The configured device and the actual device have incompatible types.
	The device is only available in the offline configured device configuration and has been deactivated.

8.9.2 Display messages


Overview

The diagnostic icons, which are displayed in the network and topology views, are assigned to specific messages.

Requirement

- For activated user management (UMAC):
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".


Procedure

1. Double-click on a diagnostics icon, for example . The inspector window opens.
2. Click the "Message display" tab. All current messages are displayed.

8.9.3 Calling Online & Diagnostics

Overview

In the diagnostics view, you can see important information about the drive or make important basic settings.

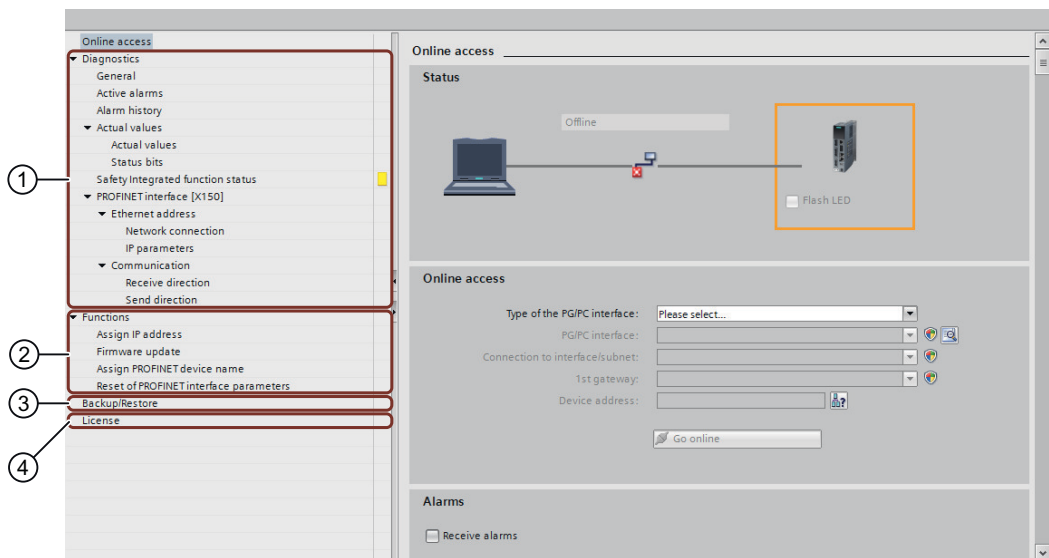

- ① "Diagnostics" (information on the condition of the drive)
- ② "Functions" (configuration of the physical interfaces)
- ③ "Backup / Restore"
- ④ Overview of licenses

Figure 8-8 Overview: Diagnostic functions

Requirement

- For activated user management (UMAC): The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. In the project tree, double-click on menu "Online & 'Diagnostics".
Diagnostics and diagnostic functions are displayed in the secondary navigation and can be called from here.
2. Select the "Online access" entry in the secondary navigation.
3. Select the network interface of your operating unit.
4. Click on "Go online".
The online connection to the drive is established.
5. Click on "Go offline" in the menu bar.
The online connection to the drive is disconnected.

8.9.4 Diagnostics



Requirement

- There is an online connection between the drive and the operating unit.
Diagnostic information can only be read out in the online mode.
- For activated user management (UMAC):
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

You call the individual diagnostic information in the secondary navigation of the diagnostics view.

The following information on the connected drive is provided in the diagnostics view:

- General:
Information about component, module and manufacturer is displayed.
 - This means that you identify the drive, and the most important drive data are displayed.
- Security:
Information about security settings of the connected drive is displayed.
You can find more information in Chapter "Security (Page 318)".
- Active messages:
Information about active alarms and faults is displayed.
 - For a fault, the status signal ZSW1.3 is sent. Faults must be acknowledged once the cause has been resolved. To do this, use the function icon at the top of the function view (/ ).
 - For an alarm, status signal ZSW1.7 is set. The alarm is also entered into the alarm buffer. Alarms are self-acknowledging.

- Message history:
 - The message history records all alarms and faults.
 - Using the function icons in the function view, you can either delete the fault buffer (🗑️) or export to a CSV file (📄➡️).
- Actual values:

Information about the most important parameter actual values and status bits is displayed.
- Safety Integrated Function status:

Information about the current status of Safety Integrated Functions is displayed. You can find more information in Chapter "Fundamentals for Safety Integrated commissioning (Page 294)", in "Function status".
- PROFINET interface (X150):
 - Ethernet address:

Information about IP parameters (IP address and subnet mask) and network connection (MAC address) is displayed.
 - Communication:

Information about send and receive directions (PZDs of telegrams e.g. 105) is displayed. More detailed information on PZDs and telegrams is provided in Section "Communication (Page 319)".

8.9.5 Security

Requirement

- There is an online connection between the drive and the operating unit. Diagnostic information can only be read out in the online mode.
- The user administration (UMAC) is activated for the project and drive. The following applies: The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

A summary of the active security settings of the connected converter is displayed in diagnostics view "Security".

- Logged-in user:
 - The user that is logged into the drive.
OR
 - No logged-in user, as UMAC is not active.
In this case, we recommend activating UMAC.
- Ports & protocols:

Displays the activation state for the interfaces of the following areas:

 - Web server access
 - Fieldbus and associated protocols
 - S7 commissioning reports
 - DHCP configuration
- UMAC settings:

Shows certain UMAC settings which are activated for the drive. Shows, for example, whether UMAC is active and what rights the user account "Anonymous" has.

You can only change the displayed security settings offline in the inspector window of the converter in the project.

8.9.6 Communication

8.9.6.1 Receive direction

Requirement

- For activated user management (UMAC):

The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

As standard, the components and interconnections of PROFIdrive telegrams in the receive direction for the converter are displayed in this function view (e.g. 105, 700 or 750).

You can add additional telegrams via the telegram configuration (). The content of the selected telegram is then displayed in the "PROFIsafe" or "Supplementary data" area.

Telegram structure

The process data in the receive direction are created automatically.

8.9 Using online diagnostic functions

Only those telegrams available for the converter are offered. The following information of the displayed telegrams is displayed:

Telegram type	PZD	Display of the value	Format switchover	Control words
	The numbering and arrangement of the process data.	Value of the process data (PZD)	The value of the process data is switched to a different representation (hex, bin, dec).	List of the control words that are transmitted in the telegram.
PROFIdrive 3, 5, 102, 105	X	X	X	X
PROFIsafe 30, 901	X	X	X	X
Supplementary data 700	X	X	X	X
Torque supplementary telegram 750	X	X	X	X

8.9.6.2 Send direction

Requirement

- For activated user management (UMAC):
The function rights required to read the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

As standard, the components and interconnections of PROFIdrive telegrams in the send direction for the converter are displayed in this function view (e.g. 105, 700 or 750).

You can add additional telegrams via the telegram configuration (). The content of the selected telegram is then displayed in the "PROFIsafe" or "Supplementary data" area.

Telegram structure

The interconnections for the process data in the send direction are created automatically for the standard and manufacturer-specific telegrams.

The following information of the displayed telegrams is displayed:

Telegram type	Status words	Value	Format switchover	PZD
	List of the status words that are transferred in the telegram.	Value of the process data (PZD)	The value of the process data is switched to a different representation (hex, bin, dec).	Numbering and arrangement of the process data.
PROFIdrive 3, 5, 102, 105	X	X	X	X
PROFIsafe 30, 901	X	X	X	X
Supplementary data 700	X	X	X	X
Torque supplementary telegram 750	X	X	X	X

8.9.7 Functions

Overview

In the "Functions" area, you can call the following functions via the secondary navigation of the diagnostic view and make settings within them:

- Assign IP address
- Firmware update
- Assign PROFINET device name
- Reset PROFINET interface parameters
- Set time

8.9.7.1 Resetting PROFINET interfaces

Overview

To restore the converter to the delivery state, you need to reset the PROFINET interfaces of the converter in addition to restoring the factory settings.

If the converter is connected to a SIMATIC S7 controller while the PROFINET interfaces are being reset, the controller assigns new interface parameters to the converter immediately after the reset. To prevent this, switch the controller to "Stop" mode before the reset or terminate the connection between controller and converter.

Requirement

- The connection between the converter and control system is disconnected.
- For activated user management (UMAC):
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. In the secondary navigation, open menu "Functions".
2. Click on menu "Reset of PROFINET interface parameters".
The corresponding function view opens.
3. Select one of the following options:
 - Retain I&M data
If the option "Retain I&M data" is active, the I&M1 to I&M3 data are retained.
 - Delete I&M data
If the option "Delete I&M data" is active, the I&M1 to I&M3 data are deleted.
4. Click on the "Reset" button.

Result

The parameters of the PROFINET interfaces are reset. The reset data are displayed in the "Online access" function view.

More information

More information on restoring the factory settings is provided in Chapter "Restore factory settings (Page 326)".

Overview

The option "Synchronize with an NTP server" is activated when the "Set time" diagnostics view is called up for the first time.


Description of function

For the operation of a drive, the definition of a drive time is important. The following options are available:

- Synchronize with NTP server
If the drive is connected to other devices and a central NTP server is to provide the time for the connected devices. Alternatively, a controller can also act as NTP server.
- No synchronization, set time manually
if the drive is initially operated without control.

You set the drive time in the diagnostics view as a direct function. If a time has already been set, it is displayed in the "Current drive time" area. If it is a synchronized time, the NTP server used is also displayed in the "Time source" field.

Alternatively, you can set the time settings offline in the inspector window of the drive. However, these settings are only transferred to the drive when the drive data are loaded.

If you differentiate the time settings between the drive and the project, this is indicated by the icon . In this case, reload the drive data into the drive.

8.9.7.2 Setting the time with synchronization (NTP server)

Requirement

- The drive is operated with a controller.
- There is an online connection between the drive and the operating unit.
The direct functions can only be performed in online mode.

Procedure

1. If the "Synchronize with NTP server" option is not enabled, enable this option.
By default, the "Use PLC as NTP server" option is now enabled. If the drive is connected to a PLC, the IP address of the PLC is displayed.
2. Disable the option "Use PLC as NTP server".
The input field for the IP address is cleared.
3. Enter the IP address of the desired NTP server in the "IP address" field.
4. Select the time zone of your country in the "Time zone" area.
Example: For Central Europe, use the time zone "GMT+01:00".
5. Then click "Apply".

Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

8.9.7.3 Setting the time with synchronization (PLC as NTP server)

Requirement

- The drive is operated with a controller.
- There is an online connection between the drive and the operating unit.
The direct functions can only be performed in online mode.

Procedure

To synchronize the time, proceed as follows:

1. If the "Synchronize with NTP server" option is not enabled, enable this option.
By default, the "Use PLC as NTP server" option is now enabled. If the drive is connected to a PLC, the IP address of the PLC is displayed.
2. Select the time zone of your country in the "Time zone" area.
Example: For Central Europe, use the time zone "GMT+01:00".
3. Then click on "Apply".

Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

8.9.7.4 Setting the time without synchronization

Overview

A time of the drive without synchronization is used if the drive is operated for test purposes without a control unit connected.

Requirement

- There is an online connection between the drive and the operating unit.
The direct functions can only be performed in online mode.

Procedure

1. Activate the option "No synchronization, set time manually".
You can then choose whether to copy the time from your operating unit or enter the time manually.
2. If you want to use the time from your operating unit, activate the option "Use time from PG/PC".
- Or -
If you want to set the time manually, proceed as follows:
 - In the "Drive time" area, set the current calendar day, the current year, and the desired time.
 - Select the time zone of your country in the "Time zone" area.
Example: For Central Europe, use the time zone "GMT+01:00".
3. Then click "Apply".

Result

The set time is directly transferred to the drive. The current time settings are displayed in the "Current drive time" area.

8.9.8 Backup and restore

Overview

Perform the following actions in function view "Backup/Restore":

- Restart the drive now
- Retentively save the drive data in the converter
- Restore the drive data to factory settings
Security and interface settings are excluded.
- Restore Safety Integrated settings to factory settings

8.9.8.1 Restart the drive now

Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing online connection (Page 310)").
- The drive is switched on and has voltage.
- For activated user management (UMAC):
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. In the secondary navigation, click on menu "Backup/Restore".
The corresponding function view opens.
2. In the "Restart the drive" field, click on "Restart".

Result

The drive is restarted. The restart is finished when the RDY and COM LEDs on the drive light up green.

8.9.8.2 Retentively saving the drive data

Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing online connection (Page 310)").
- Optional memory card is inserted (for a parameter backup).
- For activated user management (UMAC):
The function rights required to edit and save the drive data are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. In the secondary navigation, click on menu "Backup/Restore".
The corresponding function view opens.
2. Click on the "Save" button in the "Save RAM data retentively" field.

Result

Drive data are retentively saved in the drive.

If you have inserted an SD card in the drive, the drive data are stored on the memory card in addition.

8.9.8.3 Restore factory settings

Overview

With this function, you restore the user-specific parameterization of the converter to factory settings.

The following data are retained when the factory settings are restored:

- Communication interface settings
- Security settings
- Language setting
- Date and time

In the following cases it may be necessary to restore the converter to factory settings:

- Incomplete commissioning
- If the motor is changed
- If there is uncertainty regarding the previous parameterization and/or the previous use of the converter

Requirement

- There is an online connection between the project and the drive.
You can find more information in Chapter "Establishing online connection (Page 310)".
- For activated user management (UMAC):
The function rights required for "Restore factory settings" are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

1. In the secondary navigation, click on menu "Backup/Restore".
The corresponding function view opens.
2. Click the "Start" button in the "Restore factory setting" field.

Result

The converter is reset and then restarted. If the "RDY" and "COM" LEDs on the converter light up green, resetting is complete.

More information

For a full reset of the converter, proceed as described in Chapter "Manual reset to factory settings with memory card (Page 356)".

8.9.8.4 Restoring the Safety Integrated factory settings

Overview

It is not always necessary to reset all of the converter settings. A separate reset function exists for Safety Integrated settings, which explicitly only restores Safety Integrated settings to factory settings.

Requirement

- There is an online connection between the project and the drive (see Chapter "Establishing online connection (Page 310)").
- For activated user management (UMAC):
The function rights required to edit drive settings and Safety Integrated settings are activated for your user account.
Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Procedure

To restore the Safety Integrated factory settings, proceed as follows:

1. In the secondary navigation, click on menu "Backup/Restore".
The corresponding function view opens.
2. In field "Restore Safety Integrated factory setting", click on "Start".

Result

The current Safety Integrated settings in the converter are reset. The converter is then restarted. When both LEDs on the converter are lit green, the Safety Integrated settings of the converter have been reset to factory settings.

8.9.9 Overview of licenses

Overview

In the online mode, in function view "License", you can view information about options/ functions that require licensing and also perform the following actions:




- View status of individual licenses.
- Load license file.
- Display and copy serial number of the memory card being used.
- Activate Trial License mode.

Requirement

- For activated user management (UMAC):
The function rights required to edit the drive data are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

Element	Description
General license status	Indicates the current license status (e.g. you do not have all of the licenses you need).
System response	Displays the system response to the current license status, e.g. "Blocks the drive from being switched on again."
Trial period	Displays of the Trial License status; e.g. "Trial License mode not active".
Serial number of the memory card	Serial number of the memory card and button to copy the serial number
Activate Trial License mode	Button for activating Trial License mode
Activate the license key file	Button for loading a license file
Save eCoL archive	Button for saving the license certificates to the file system of the operating unit

Element	Description
Table columns	
Status	The following icons indicate the status:  License is complete.  Trial License mode is active.  License is not available or the memory card with license is not inserted (under licensed).
Function that requires licensing	List of all used system options/functions subject to licensing
Existing/required licenses	The required number of licenses compared with the number of licenses included with the license key. For operation, the number of available licenses \geq the number of licenses required.
License status	Displays the current status of the function subject to licensing.
Remaining operating time	Displays the remaining operating time of a trial period.

Trial License mode

Licenses for functions requiring licensing can either be ordered together with an SD card for an S210 drive or, when ordered later, can be assigned to an existing SD card via the Web License Manager. Most of the functions that require licensing can also be operated for a limited period of time in Trial License mode.

Before you activate Trial License mode, make sure to read the information and notes in the "About the licensing process" dialog.

More information

- More information about the license file and about extending licenses is provided in Chapter "Functions that require licensing (Page 98)".
- Additional information about the licensing process or on the trial license mode is provided in the TIA Portal information system. There, browse for S210 drives using the keyword phrase "Managing supplementary functions that require a license".

8.9.10 Updating the firmware in the Startdrive project

Overview

You upgrade the converter firmware directly in the Startdrive project.

Note

Firmware version in Startdrive project and drive


Online connections between the Startdrive project and drive are only possible if the firmware versions in the project and the drive are the same.

- Create a new project if your current project works with a firmware version that is older than the firmware version of the drive. Set the firmware version of the project to the currently upgraded version of the drive. Apply all of the other settings from the old project.
 - If you are using an old Startdrive version, it may be necessary to install a new Startdrive version that supports the firmware version.
-




Requirement

- For an update via an online connection:
A physical connection between the Ethernet interface of your operating unit and the Ethernet or PROFINET interface of your drive.
- For activated user management (UMAC):
The function rights required for the firmware update are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".



Procedure

1. Open the  Online access entry in the project tree.
2. Select the network interface of your operating unit.
3. Double-click "Update accessible devices".
The accessible device is displayed with the IP address.
4. Call the "Online & diagnostics" function for the displayed device.
An online connection to the selected participant is established and the "Online access" function view opens.
5. Expand the "Functions" entry in the secondary navigation.
6. Click the "Firmware update" entry.
The corresponding function view opens.
In the "Online data" area, the article number of the drive and the firmware version currently in use are displayed.
7. Click the "Browse" button in the "Firmware loader" area.
A selection dialog opens.

8. Select the firmware file with the required version in the file system of your operating unit.
The firmware file is displayed in the line with the same name in the "Firmware loader" area.
9. Check in the "Firmware version" field whether you have selected the required firmware version.
10. In the "Status" field, check that the firmware can be read.
11. Optional: Activate the option "Restart drive automatically".
If this option is activated, there is no need to restart the drive manually after the firmware update. Step 13 is omitted in this case.
12. To load the firmware to the drive, click on "OK".
 - The status of the firmware update is displayed in the "Status" field.
The new firmware is installed. The installation may take up to 15 minutes or longer.
The progress is displayed at the converter LEDs.

RDY	COM	Explanation of LED displays
		Firmware update is active: <ul style="list-style-type: none"> • Do not switch off the power supply. • Do not disconnect the motor from the converter.
	-	Initializing firmware

- If the firmware is loaded, then the connected DRIVE-CLiQ components are updated.

RDY	Explanation of LED displays
 (0.5 Hz)	Firmware of the connected DRIVE-CLiQ components being updated: <ul style="list-style-type: none"> • Do not switch off the power supply. • Do not disconnect the motor from the converter.
 (2 Hz)	Firmware of the DRIVE-CLiQ components has been updated: <ul style="list-style-type: none"> • Waiting for POWER ON of the respective component. Remedy: Switch the component off and on again.

Note

Check that the firmware has been updated

Startdrive displays an appropriate message when completing the update. After the message has been displayed, using the LEDs, check whether the converter update has been completed.

13. Optional: If you have not activated the option "Restart drive automatically...", switch the converter off and on again.
14. Optional: Call the catalog information using the secondary navigation in the inspector window. Check whether the new firmware version is installed.

More information

Additional information about available firmware versions can be found on this website: (<https://support.industry.siemens.com/cs/ww/en/view/109812303>)

8.10 Checking using the trace function

Overview

In a trace configuration, depending on the SINAMICS S drive being used, define the following:

- Signals to be recorded
- Recording duration
- Trigger conditions

Requirement

- For activated user management (UMAC):
The function rights required for trace configuration are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".

Description of function

The trace configuration for S210 drives is characterized by the following special features and device-specific default settings:

- Preset trace signals:
 - For the first trace that you create for an S210 drive, the first four signals are preassigned with the following parameters, which are typical for Motion Control applications:
 - r0062 (Speed setpoint after filter)
 - r0061[0] (Actual speed unsmoothed: Encoder 1)
 - r0080 (Torque actual value)
 - r0479[0] (Diagnostics encoder position actual value Gn_XIST1: Encoder 1)

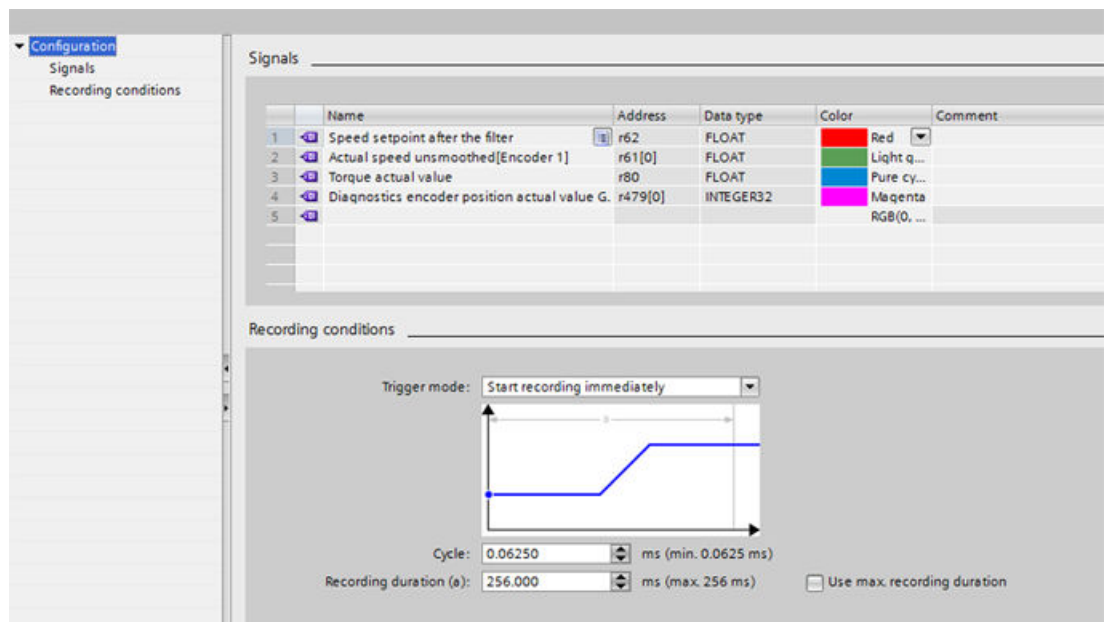


Figure 8-9 S210 trace called

No signals are preset for other traces you create for an S210 drive.

Note

Other lines are not preassigned. When further signals are inserted, the cycle is changed to 4 ms.

- Possible cycle times:
 - In the "Cycle" input field of the trace configuration, you can enter the cycle time with which the trace should be recorded. The possible cycle times for an S210 drive depend on the number of signals to be recorded:
 - Up to four signals: 0.0625 ms minimum recording cycle
 - As of five signals: 4.0 ms minimum recording cycle
- Selecting signal bits based on plain text descriptions:
 - By selecting a trigger variable, you can display individual signal bits based on plain text descriptions (e.g. "Drive control.control word sequence control.ON / OFF1") in the trace

8.10 Checking using the trace function

configuration and select them directly. A description of how you can select an individual signal bit and set a trigger event is provided below using the "Drive control.control word sequence control" trigger variable as an example.

More information

Additional information on the trace function and configuration in the TIA Portal is provided in the TIA Portal information system.

8.10.1 Example: Selecting signal bits and setting the trigger event


Destination


You want to make the basic settings for evaluating a trace.

Requirement


- For activated user management (UMAC):
The function rights required for trace configuration are activated for your user account. Details on this topic are provided in the Configuration Manual SINAMICS Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>) in Chapter "Security settings in Startdrive".


Procedure

1. Define a trigger mode (e.g. "Trigger on tag") via the "Trigger mode" drop-down list.
2. To open the signal selection table, click on the  icon in the "Trigger tag" input field.




The signal selection table is displayed.

3. In the signal selection table, scroll to the desired signal (e.g. "control word sequence control").
4. To open the bit selection table, click on the  icon (2) in the row with the desired signal.

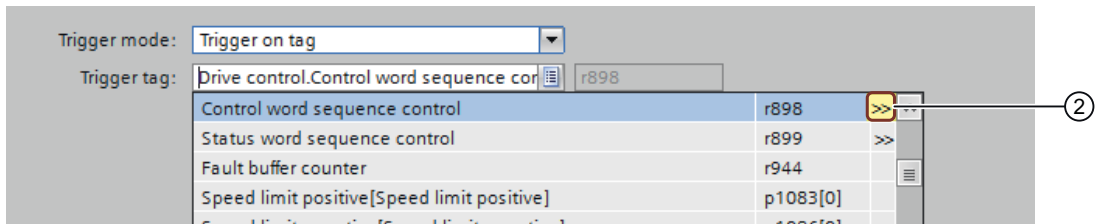

The bit selection table shows the bits of the selected signal in plain text (e.g. "control word sequence control.ON / OFF1").

5. Select the required bit.
The selected bit is displayed in the "Trigger tag" input field ③.

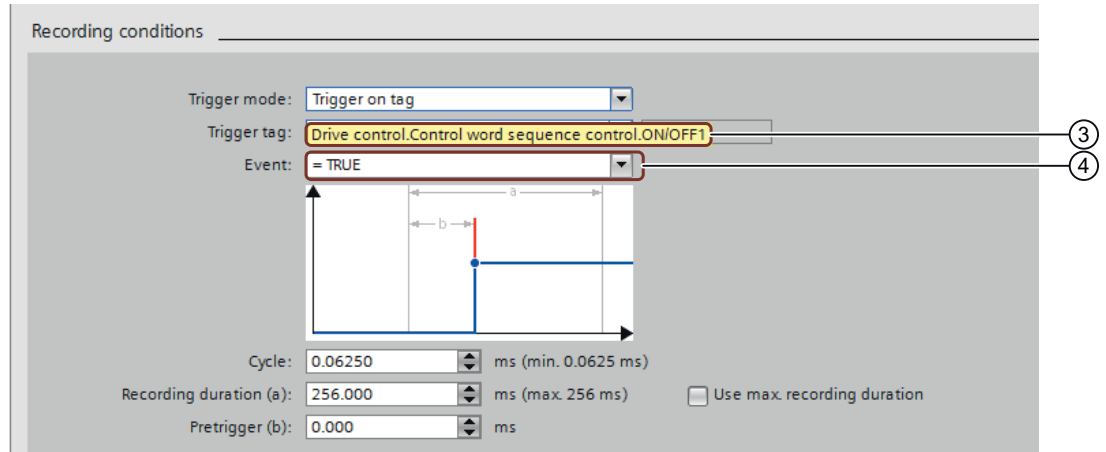

6. To show the "Event" input field, press "Enter".
The "Event" input field is displayed with a preset trigger event ④.
7. Select the desired trigger event, if necessary, using the drop-down list in the "Event" input field.
The selected trigger event is displayed in the "Event" input field.

Series commissioning

Overview

In series commissioning, the backed-up data and settings of a converter are loaded to other converters.

Requirement

The target converter must satisfy the following prerequisites:

- The rated power of the target converter is the same as the rated power of the converter from which the backed-up data and settings originate.
- The firmware version of the target converter is higher than or equal to the firmware version of the converter from which the backed-up data and settings originate.
- The machines that are commissioned via series commissioning are identical in terms of the application, converter and motor.
- The target converters are all configured to factory settings.

Description of function

Note

PROFINET-IP address and PROFINET device name are not transferred for series commissioning. You must configure the PROFINET IP address and the PROFINET device names in the PLC. The converter takes the settings from the PLC.

There are two options when carrying out series commissioning of the converter:

- **Series commissioning with memory card**
All settings on the memory card (including user management and access control) are transferred to the converter.
- **Series commissioning using the web server**
All settings from the parameter backup (including user management and access control) are transferred to the converter.
When performing series commissioning, also observe the fundamental principles for working with the web server (see Chapter "Fundamentals (Page 194)").

9.1 Series commissioning with memory card

Series commissioning with a memory card

Proceed as follows to perform series commissioning using a memory card:


1. Insert an empty SD card with a maximum capacity of 32 GB (e.g.: 6SL5970-0AA00-0AA0) into the card slot of the converter while it is switched off.
2. Switch on the converter and perform commissioning.
3. Save the settings retentively at the end of commissioning.
This saves the settings retentively not only on the converter but also to the memory card.
4. Switch off the converter and remove the memory card from the converter.
5. Insert the memory card into the next, switched off converter.
6. Switch on the converter and wait until it has ramped up - the RDY LED lights green.
During ramp-up, the converter takes the settings from the memory card - including user management and access control.
7. Switch off the converter and remove the memory card from the converter.

Repeat steps 5 to 7 for all converters to which you want to transfer these settings.

9.2 Series commissioning using the web server

Series commissioning using the web server

Proceed as follows to perform series commissioning using the web server:

1. Switch on the converter supply voltage and use your operating unit, e.g. a PC, to perform commissioning.
You can find more information in Chapter "Commissioning (web server) (Page 193)".
2. Save the settings at the end of commissioning via .
3. Select "Backup and Restore" in the navigation - and back up the parameter settings in a file using "Back up parameters".
4. Connect your operating unit to the next converter.
5. Switch on the supply voltage to the converter.
6. Enter the IP address of the converter, e.g. https://169.254.11.22, in the browser.
7. Select the option "Exit the Security Wizard and continue with low security settings".
User management and access control (UMAC) is not activated.
You can configure the security settings at a later time, see Chapter "Protection & Security (Page 240)".
8. In the navigation, select "Backup and Restore" - and load the parameter settings using "Restore parameters via file" to the converter.
The converter accepts the parameters (including from user management and access control) from the file and restarts.

Repeat steps 4 to 7 for all converters to which you want to transfer these settings.

Diagnostics

10.1 Status displays and operating elements on the converter

10.1.1 Overview of display and operating elements on the converter

The status of the converter is displayed via the three-digit display as well as by the "RDY" and "COM" LEDs.



- ① LED display
- ② Three-digit display
- ③ OK button








Display and operating elements on the converter

- Status display via LEDs
 - The converter displays the current operating state via two LEDs.
 - RDY: converter state
 - COM: communication state

During ramp-up, the LEDs assume different states.
The converter is ready for operation when the "RDY" LED is permanently green.
The LEDs always operate independently of one another, except when updating the firmware.
- Status display via the three-digit display
 - Normally, the display is dark.
 - During ramp-up, "210" appears as a reference to the SINAMICS S210 converter.
 - Faults are shown according to the message classes defined in PROFIdrive. If PROFIdrive diagnostics is active, the faults are simultaneously transferred to the control system.
 - More detailed information about alarms and faults is provided by the web server of the converter.
- OK button
 - You can acknowledge the faults whose cause has been corrected with the OK button.





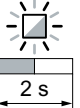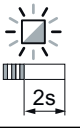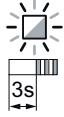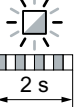





10.1.2 Status display via LEDs

Table 10-1 Significance of the icons for the subsequent tables

Icon	Meaning
	LED is bright
	LED is OFF
	LED flashes slowly
	LED flashes in alternating order 3 times quickly - 2 s pause - ...
	LED is on for 3 s then flashes 3 times quickly
	LED flashes quickly
	LED flashes with variable frequency

Please contact Technical Support for LED states that are not subsequently described.

Table 10-2 Meaning of RDY and COM LEDs during converter ramp-up

RDY	COM	Meaning
		POWER ON All LEDs light up for approx. 1 s.
		BIOS loaded
-		Firmware has been checked. No CRC error detected.
		Loading firmware: RDY LED lights up red, COM LED flashes orange without fixed frequency.
	-	Firmware has been loaded.
	-	Initializing firmware
	-	Converter is ready for operation.

10.1 Status displays and operating elements on the converter

Table 10-3 Other states of RDY and COM LEDs during converter ramp-up




















RDY	COM	Meaning
		BIOS error: "An error occurred while loading the BIOS."
		Firmware has been checked. CRC error detected.
		File error: <ul style="list-style-type: none"> Memory card is not available or is faulty. Software on the memory card is not available or is faulty.
-		File error during firmware update
	-	Project being backed up.
	-	Manual reset to factory settings with memory card is completed.
		Firmware update is active.
	-	Firmware update completed. Converter waits until the power supply is switched off and switched on again after a firmware update.

Table 10-4 Significance of LED RDY in operation

RDY	Meaning
	The electronics power supply is missing or outside the permissible tolerance range. Remedy: Check the power supply.
	Temporary status after the supply voltage is switched on.
	The device is ready for operation. Cyclic DRIVE-CLiQ communication is in progress.
	Writing to the memory card
	Commissioning or restore factory settings via commissioning tool
	Manual reset to factory settings with memory card is active. The settings are reset.
	Manual reset to factory settings with memory card is completed.

10.2 Message classes in accordance with PROFIdrive











RDY	Meaning
	Active fault or missing license Remedy: <ul style="list-style-type: none"> • Check the converter settings/configuration. • Activate the required license
	Firmware update in progress for the connected DRIVE-CLiQ components. <ul style="list-style-type: none"> • Do not switch off the power supply. • Do not disconnect the motor from the converter.
	DRIVE-CLiQ component firmware update has been completed. Waiting for POWER ON of the respective component. Remedy: Switch the component off and on again.
	Converter detection via DCP flashing. RDY LED is green for 3 s and flashes red 3 times at 1 Hz Additional flashing on the PROFINET interface (X150) or Ethernet interface (X127): The Activity and Link LEDs flash 3 times at 1 Hz
	Missing license: There is no license, however, the Trial License Mode has been activated.

Table 10-5 Significance of LED COM in operation

COM	Meaning
	No bus fault is present.
	Temporary status after the supply voltage is switched on.
	Bus ok. cyclic communication running perfectly
	Bus ok; however, no setpoints (PLC in stop) In isochronous mode: Bus ok, no synchronization
	No bus connection Remedy: Make sure that the bus cables are connected and are not damaged.

10.2 Message classes in accordance with PROFIdrive

The message classes according to PROFIdrive are shown in the converter display.

Example: Message class 4: F04

Message class	PN ¹⁾ (hex)	Explanation of the message class according to PROFIdrive - cause and remedy.
1	9000	<p>Hardware fault/software error</p> <p>A hardware or software malfunction has been identified.</p> <ul style="list-style-type: none"> • Carry out a POWER ON for the relevant component. • If it occurs again, replace again.
2	9001	<p>Line fault</p> <p>A line supply fault has occurred (phase failure, voltage level, ...).</p> <ul style="list-style-type: none"> • Check the line supply/fuses. • Check the supply voltage. • Check the wiring.
3	9002	<p>Supply voltage fault</p> <p>An electronics power supply fault (24 V) has been identified.</p> <ul style="list-style-type: none"> • Check the wiring. • Check the voltage level.
4	9003	<p>DC link overvoltage</p> <p>The DC link voltage has assumed an inadmissibly high value.</p> <ul style="list-style-type: none"> • Check the dimensioning of the system (line supply, voltages). • Check the infeed settings.
5	9004	<p>Power electronics fault</p> <p>An inadmissible operating state of the power electronics has been identified (overcurrent, overtemperature, IGBT failure, ...).</p> <ul style="list-style-type: none"> • Check compliance with the permissible load cycles. • Check the ambient temperatures (fan).
6	9005	<p>Electronic component overload</p> <p>The temperature in the component has exceeded the highest permissible limit.</p> <ul style="list-style-type: none"> • Check the ambient temperature / control cabinet ventilation.
7	9006	<p>Ground fault / inter-phase short-circuit detected</p> <p>A ground fault / inter-phase short-circuit has been identified in the power cables or in the motor windings.</p> <ul style="list-style-type: none"> • Check the power cables (connection). • Check the motor.
8	9007	<p>Motor overload</p> <p>The motor was operated outside the permissible limits (temperature, current, torque, ...).</p> <ul style="list-style-type: none"> • Check the load cycles and set limits. • Check the ambient temperature / motor cooling.

Message class	PN ¹⁾ (hex)	Explanation of the message class according to PROFIdrive - cause and remedy.
9	9008	<p>Communication error to the higher-level controller</p> <p>The communication to the higher-level controller is faulted or interrupted.</p> <ul style="list-style-type: none"> • Check the state of the higher-level controller. • Check the communication connection/wiring. • Check the bus configuration / clock cycles.
10	9009	<p>Safety monitoring channel has identified an error</p> <p>A safe operation monitoring function (Safety) has detected an error.</p>
11	900A	<p>Actual position value / actual speed value incorrect or not available</p> <p>An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values, ...).</p> <ul style="list-style-type: none"> • Check the encoder / state of the encoder signals. • Observe the maximum permissible frequencies.
12	900B	<p>Internal (DRIVE-CLiQ) communication error</p> <p>The internal communication between the SINAMICS components is faulted or interrupted.</p> <ul style="list-style-type: none"> • Check the DRIVE-CLiQ wiring. • Ensure an EMC-compliant design.
13	900C	<p>Infeed fault</p> <p>The infeed is faulted or has failed.</p> <ul style="list-style-type: none"> • Check the infeed and its environment (line supply, filters, fuses, ...). • Check the infeed control.
14	900D	<p>Braking controller / Braking Module faulted</p> <p>The internal or external Braking Module is faulted or overloaded (temperature).</p> <ul style="list-style-type: none"> • Check the connection/state of the Braking Module. • Comply with the permissible number of braking operations and their duration.
15	900E	<p>Line filter faulted</p> <p>The line filter monitoring has identified an excessively high temperature or other inadmissible state.</p> <ul style="list-style-type: none"> • Check the temperature / temperature monitoring. • Check the configuration to ensure that it is permissible (filter type, in-feed, thresholds).
16	900F	<p>External measured value / signal state outside of the permissible range</p> <p>A measured value / signal state read in via the input area (digital/analog/temperature) has assumed an inadmissible value/state.</p> <ul style="list-style-type: none"> • Identify and check the relevant signal. • Check the set thresholds.
17	9010	<p>Application / technology function faulted</p> <p>The application / technological function has exceeded a (set) limit (position, speed, torque, ...).</p> <ul style="list-style-type: none"> • Identify and check the relevant limit. • Check the setpoint specification of the higher-level controller.

Message class	PN ¹⁾ (hex)	Explanation of the message class according to PROFIdrive - cause and remedy.
18	9011	<p>Error in the parameterization/configuration/commissioning sequence</p> <p>An error in the parameter assignment or in a commissioning run was identified, or the parameter assignment does not match the prevailing device configuration.</p> <ul style="list-style-type: none"> • Determine the precise cause of the fault using the commissioning tool. • Adapt the parameterization or device configuration.
19	9012	<p>General drive fault</p> <p>Group fault.</p> <ul style="list-style-type: none"> • Determine the precise cause of the fault using the commissioning tool.

¹⁾ "Channel Error Type" of the PROFINET channel diagnostics. When channel diagnostics is activated, then the fault texts are indicated in the PLC.

10.3 Alarms

Alarms

Alarms have the following properties:

- Alarms have no direct influence on the drive.
- Alarms disappear again when the cause is eliminated.
- Alarms cannot be acknowledged.
- Alarms are displayed as follows:
 - In the PLC according to the PROFIdrive message class
 - On the drive via LEDs
 - At the drive using the three-digit display according to the PROFIdrive message class
 - In the web server
You can find more information on the display of alarms in Chapter "Messages (Page 220)".
 - In Startdrive
You can find more information on the display of alarms in Chapter "Display messages (Page 315)".

Alarm code or alarm value describe the cause of the alarm.

More information

You can find more information on alarms in Chapter "Overview of faults and alarms (Page 747)".

10.4 Faults

Faults

Faults have the following properties:

- A fault may cause the motor to switch off.
- Faults must be acknowledged.
- Faults are displayed as follows:
 - In the PLC according to the PROFIdrive message class
 - On the drive via LEDs
 - At the drive using the three-digit display according to the PROFIdrive message class
 - In the web server
You can find more information on the display of faults in Chapter "Messages (Page 220)".
 - In Startdrive
You can find more information on the display of faults in Chapter "Display messages (Page 315)".

Acknowledge fault

Before you can acknowledge a fault, you must have resolved the cause of the fault.

To acknowledge, you have the following options:

- Acknowledging via the PLC
- Acknowledging via the OK button under the front cover
- Switching off the converter power supply and switch on again
- Acknowledging via the web server or Startdrive
- The Safety Integrated error is acknowledged by selecting/deselecting the STO function. As a result of the extended message acknowledgment (p9507.0 = 1), possibly active messages of other Safety Integrated Functions are simultaneously acknowledged. You must also execute the standard acknowledgment mechanism.

You can only acknowledge faults detected by the internal converter monitoring of hardware and firmware by switching the supply voltage off and on again. In the list of faults, you will find the information on limitations when acknowledging at the corresponding fault codes.


More information

You can find more information on faults in Chapter "Overview of faults and alarms (Page 747)".

Service and maintenance

11.1 Service and maintenance for the motor

Requirement

 WARNING
Risk of injury if protective devices are removed. Operation without functioning protective devices can cause death or severe injury. <ul style="list-style-type: none">• Operate the motor, even in test operation, only with functioning protective devices.

Procedure

If there are deviations from normal operation or if faults occur, proceed as follows.

1. Identify the fault using the following table.
You should also take account of the messages of the converter.

Fault	Fault cause (see "Fault causes and remedial measures" key table)															
Motor does not start	A	B														
Motor starts slowly	A		C		F											
Humming sound when starting			C		F											
Humming sound in operation	A		C		F											
High temperature rise under no-load operation				D		I										
High temperature rise under load	A		C			I										
High temperature rise of individual winding sections					F											
Uneven running							J	K								
Grinding sound, running noise									L							
Radial vibrations										M	N	O	P			R
Axial vibrations												O		Q		R

2. Rectify the fault using the following table.

No.	Fault cause	Remedial measures
A	Overload	Reduce load
B	Interruption of a phase in the supply cable / motor winding	Check the frequency converter and supply cables, measure the winding resistances and insulation resistances, repair after consultation with manufacturer
C	Interrupted phase in the feeder cable after switching on	Check the frequency converter, supply cables and the winding resistances
D	Converter output voltage too high, frequency too low	Check the settings on the frequency converter, perform automatic motor identification
F	Winding short-circuit or phase short-circuit in stator winding	Measure the winding resistances and insulation resistances, repair after consultation with the manufacturer, if required, replace the motor
I	Heat dissipation impeded by deposits	Clean the surface of the drives and ensure that the cooling air can flow in and out unimpeded
	Cooling air inlet/outlet is blocked by foreign bodies	Remove the reason for the blocking and ensure that the cooling air can flow in and out unimpeded
J	Insufficient shielding for motor and/or encoder cable	Check the shielding and grounding
K	Excessive drive controller gain	Adjust the controller
L	Rotating parts are grinding	Determine cause and adjust parts
	Foreign bodies inside the motor	Replace the motor
	Bearing damage	For SH20... SH50, replace the motor; for SH63 ... SH100, replace the bearings and encoder
M	Rotor not balanced	Replace the motor

No.	Fault cause	Remedial measures
N	Rotor out of true, shaft bent	Consult the manufacturer
O	Poor alignment	Align motor set, check coupling
P	Coupled machine not balanced	Re-balance coupled machine
Q	Shocks from coupled machine	Check coupled machine
R	Fault originating from the gearbox	Adjust/repair gearbox

If the fault still cannot be resolved after taking the measures stated above, please contact the manufacturer or the Siemens Service Center.

11.1.1 Replacing the motor bearings

Motor bearings are wearing parts. They must be replaced after a defined number of operating hours.

At medium loads, the motor bearings last approx. 25000 h.

The procedure for replacing the motor bearing depends on the size of the motor.

- For 1F□2□03 ... 1F□2□05 motors, it is not possible to replace the motor bearings. Replace these motors in their entirety.
- Replacement of the motor bearings is only intended as from 1F□2□06.

Especially favorable ambient conditions, such as low average speed, low radial force (transverse force) and vibration load can prolong the interval until motor replacement.

Note

Premature bearing and motor replacement

Harsh operating conditions, e.g. continuous operation at n_{max} , high vibration/shock loads, frequent reversing operation reduce the bearing or motor service life by up to 50 %.

The maintenance and repair of the motor can be performed in authorized Siemens Service Centers all over the world.

Contact your personal Siemens representative if you would like to take advantage of this service.

11.1.2 Replacing the motor

Requirement

The new motor has the same article number as the motor to be replaced.

Note

A motor with a singleturn encoder AS22DQC (1F□2□□□_□□□□□-□S□□) can be replaced by an otherwise identical motor with a multiturn encoder AM22DQC (1F□2□□□_□□□□□-□M□□) without having to recommission the drive system.

- Replace the motor following steps 1 to 3 as explained below.

Replacing a motor with a motor with another article number

If the converter has already been operated with a motor, and you wish to replace this motor by another motor with a different article number, then after replacing the motor, you must commission the converter again.

Procedure

1. Verify absence of operating voltage to the converter.



 WARNING
--


Danger to life due to unintentional starting of the drive unit

Unintentional starting of the drive unit can cause death or severe injury.
--

- | |
|---|
| <ul style="list-style-type: none"> • Make sure that the drive unit cannot be started accidentally. • Post a warning notice to this effect at the point where the switch is located. |
|---|

2. Replace the motor.



 CAUTION
--

Burns as a result of touching hot surfaces

In operation, the motor enclosure can reach high temperatures, which can cause burns if touched.
--

- | |
|--|
| <ul style="list-style-type: none"> • Do not touch any hot surfaces. • Allow the motor to cool down before starting any work. • Use the appropriate personnel protection equipment, e.g. gloves. |
|--|

- Release the motor connector. You will find detailed information in Chapter "Connecting the power cable to the motor (Page 165)".
- Release the motor mounting screws.
- Remove the motor.
- Mount and install the new motor. You will find detailed information in Chapter "Installing the motor (Page 153)".

3. Switch the converter on.

If you are using a different motor type (a motor with a different article number), then you must also carry out the following steps:

1. Reset the converter to factory settings.
You can find more information in Chapter "Restoring the converter to factory settings (Page 356)".
2. Commission the converter. You can find more information in the following chapters:
 - "Commissioning (web server) (Page 193)"
 - "Commissioning (Startdrive) (Page 247)"
 - "Series commissioning (Page 337)"

11.2 Service and maintenance for the converter

11.2.1 Restoring the converter to factory settings

11.2.1.1 Restoring factory settings via a commissioning tool

Description

The reset to factory settings with a commissioning tool (web server, Startdrive) only deletes the user-specific parameterization of the converter, for example motor data.

The following settings are retained with the reset:

- Activation and settings of User Management & Access Control
- The "IP configuration" and "Device name" communication settings of the service interface (X127) and PROFINET interface (X150)
- Installed firmware on the converter

The reset to factory settings with the commissioning tool is described in the following chapters:

- Web server: Restore factory settings (Page 236)
- Startdrive: Restore factory settings (Page 326)

11.2.1.2 Manual reset to factory settings with memory card

Overview

In the following cases it may be necessary to restore the converter to factory settings:

- The available credentials do not allow the necessary configuration of the converter (no password for example).
- Before recommissioning of the converter, for example if the application use of the converter changes.
- Before the converter is sold or disposed of, in order to erase all user-defined settings.

The manual reset to factory settings with SD card deletes the following user-defined settings on the converter:

- Parameterization of the converter
- Activation and settings of User Management & Access Control
- "IP configuration" and "Device name" communication settings of the service interface (X127) and PROFINET interface (X150)
- Self-generated certificates
- User-defined parameter lists in the web server



The reset to factory settings with SD card retains the installed SINAMICS firmware on the converter.

Requirement

- You can access the converter manually.
- The converter must be disconnected from the motor:
 - Disconnect all of the electrical connections to the motor (encoder, power and brake cables).
 - Disconnect the PROFINET connection to the control system and other devices.
- You have an empty writable SD card (max. 32 GB; e.g. 6SL5970-0AA00-0AA0).
- The files necessary for the manual reset to factory settings are available from the following address (<https://support.industry.siemens.com/cs/ww/en/view/109815742>).

Procedure

Proceed as follows to manually reset the converter to factory settings with a memory card:

1. Copy the files necessary for the reset to the empty SD card.
2. Switch off the converter.
3. Insert the SD card with the copied files into the card slot of the converter.
4. Switch on the converter again.
While the settings are being reset to factory settings, the RDY LED flashes quickly.

5. Wait until the reset to factory settings is completed.
The RDY LED flashes in alternating order 3 times quickly - pause.

6. Switch off the converter.
7. Remove the SD card with the copied files.
If the SD card with the copied files is left plugged in, the converter performs the manual reset to factory settings every time it restarts.

Result

All user-defined converter settings are deleted.

After the manual reset to factory settings, access to the web server is possible via the service interface (X127) and via the PROFINET interface (X150). For access via the service interface (X127), use the secure transmission protocol HTTPS.

11.2.2 Converter firmware update

Requirement

NOTICE
Damage to equipment during firmware update due to voltage supply interruption
If the firmware is being updated, interrupting the power supply or disconnecting the motor can result in defects or cause the devices to malfunction.
<ul style="list-style-type: none">• Do not switch off the converter's supply voltage while the firmware update is running.

Description

Firmware updates change the settings in the converter according to the relative firmware version:

- If the converter is upgraded to a more recent firmware version, the converter settings are retained.
- Downgrading to an older firmware version resets the converter to the factory settings.

The following options are available for a firmware update:

- Firmware update via memory card (Page 358)
- Firmware update via web server (Page 243)
- Firmware update via Startdrive (Page 330)

11.2.3 Firmware update via memory card

Overview

If you can physically access your S210 drive, you can directly update the firmware on the S210 drive using a memory card (SD card).




Requirement

- You have an SD card with the appropriate firmware, e.g. 6SL3570-0GB00-0AA0.
- You have an empty SD card with a maximum storage capacity of 32 GB (e.g. 6SL5970-0AA00-0AA0) onto which you can load the firmware.
You can find the available firmware versions at the following link: "Firmware versions (<https://support.industry.siemens.com/cs/ww/en/view/109812303>)".



Procedure

Proceed as follows to update the firmware using an SD card:

1. Switch off the converter.
2. Insert the SD card into the converter and switch on the converter.
The new firmware is installed. The process takes approx. 2 minutes.

RDY	COM	Explanation of LED displays
		Firmware update is active <ul style="list-style-type: none"> • Do not switch off the power supply. • Do not disconnect the motor from the converter
	-	Firmware update is completed

3. Switch off the converter.
4. Remove the SD card.
5. Switch on the converter again. The firmware of the connected DRIVE-CLiQ components is updated. This may require a restart (see active alarms in the web server).

RDY	Explanation of LED displays
	Firmware of the connected DRIVE-CLiQ components being updated: <ul style="list-style-type: none"> • Do not switch off the power supply. • Do not disconnect the motor from the converter.
	Firmware of the DRIVE-CLiQ components has been updated: <ul style="list-style-type: none"> • Waiting for POWER ON of the respective component. Remedy: Switch the component off and on again.

6. Check whether the new version is installed. The firmware version of the converter is displayed on the home page of the web server under the converter.

11.2.4 Replacing fans - only for converters with 3 AC line connection

The fan module is installed in the lower section of the converter.

Operating period of the fan

The average operating period of the fan is 40,000 hours. However, in practice the operating period may be shorter. Especially a dusty environment can block up the fan.

Parameter r0277 is used to display the fan wear as a percentage of the operating period.

The alarm A30042 appears if the maximum operating period will shortly be reached or has already been exceeded.


The alarm value is contained in r2124 (interpret as a binary value):

- Bit 0 = 1: The wear counter has reached 99%, and after the remaining 1% has elapsed, bit 0 is cleared and bit 2 is set.
- Bit 2 = 1: The wear counter has exceeded 100%.

The fan must be replaced in good time to ensure that the converter remains ready for operation.

You can find the article number for the replacement fan in Chapter "Spare parts (Page 610)".

Replacing fans

 **CAUTION**


Injury caused by a rotating fan

Touching a fan while it is rotating can result in injury.

- Switch off the supply voltage to the converter.
- Wait until the fan is stationary before work on it.

Proceed as follows to remove the fan module:

1. Switch off the converter power supply.
2. If necessary, remove the converter. To do so, loosen all connections at the converter.


 **WARNING**

Electric shock as a result of a residual charge in power components

After the power supply has been switched off, it takes up to 5 min. until the capacitors in the converter have discharged so that the residual charge is at a non-hazardous level.

- Check the voltage at the converter connections before releasing the connections at the converter.

- Remove the fan as shown in the diagram.

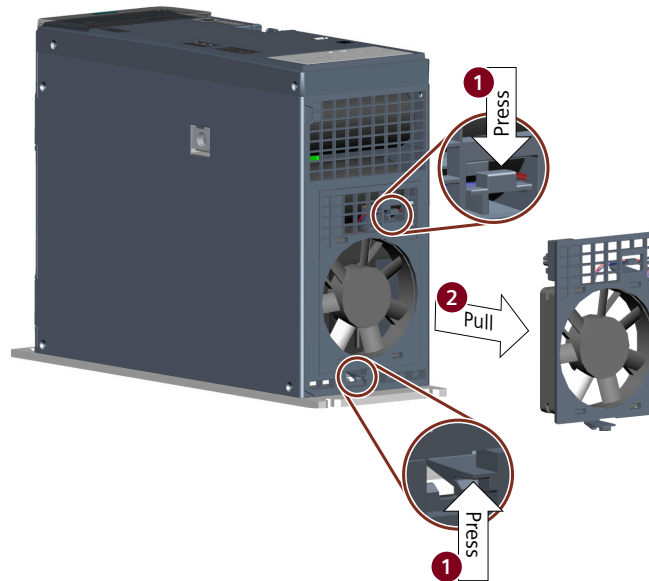

- Install the new fan in the reverse order.
- Set the wear counter (r0277) of the fan to 0 using an operating unit such as a PC with access to the web server.

11.2.5 Forming the DC link capacitors

Requirement

If the cabinet is commissioned within two years of its date of manufacture, the DC link capacitors do not need to be reformed. The date of manufacture can be taken from the serial number on the nameplate.

NOTICE

Damage caused by supply voltage after a long storage time

After being in storage for more than two years, the converter may be damaged when the supply voltage is switched on.

- Form the DC link capacitors of the converter.

Storage period

The storage period starts from the production date and not from the date on which the equipment was shipped.

11.2 Service and maintenance for the converter

The production date can be derived from the following assignment to the serial number (e.g. S ZV-P4Y7M000141 for April 2022, ST-P455500113 for April 2022):

Table 11-1 Production year and month

Symbol	Year of manufacture	Symbol	Month of manufacture
M	2020	1 to 9	January to September
N	2021	O	October
P	2022	N	November
R	2023	D	December
S	2024		
T	2025		
U	2026		
V	2027		
W	2028		

The serial number is found on the nameplate.

Forming circuit

When DC link capacitors are formed, a defined voltage is connected to them and a defined current flows so that the appropriate capacitor characteristics are restored for them to be re-used as DC link capacitors.

The forming circuit can be configured using resistors.

Forming circuit for converters with 1 AC line connection

Components required for forming outside the drive line-up:

- 1 fuse switch 2-pole 230 V / 10 A
- Cable 1.5 mm² (AWG 16)
- 2 resistors 1 k Ω each / 100 W (e.g. GWK150J1001KLX000, Vishay company)

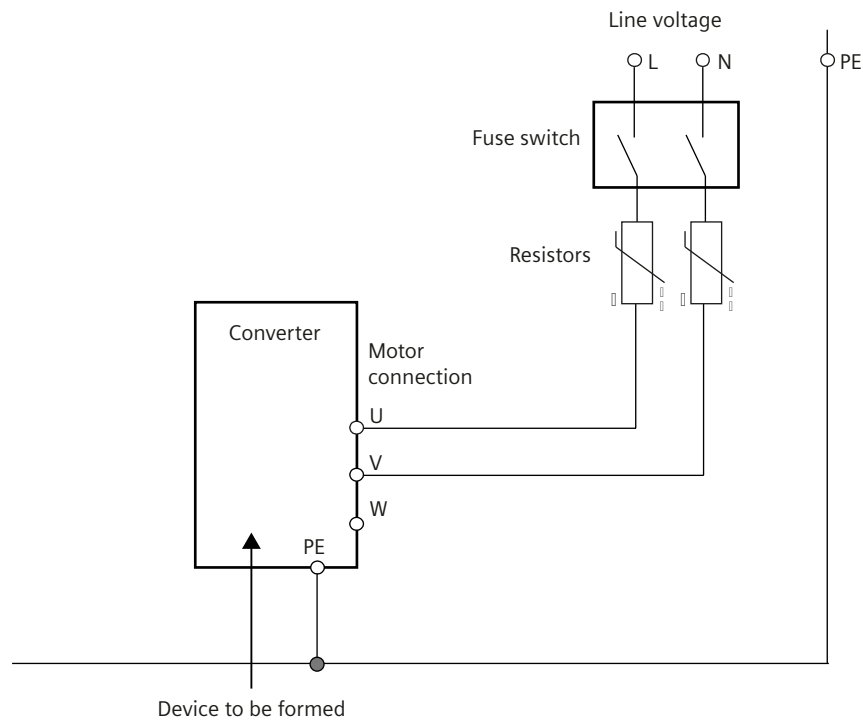


Figure 11-1 Forming circuit for converters with 1 AC line connection

Forming circuit for converters with 3 AC line connection

Components required for forming outside the drive line-up:

- 1 fuse switch 3-pole 400 V
- Cable 1.5 mm² (AWG 16)
- 3 resistors 1 k Ω each / 100 W (e.g. GWK150J1001KLX000, Vishay company)

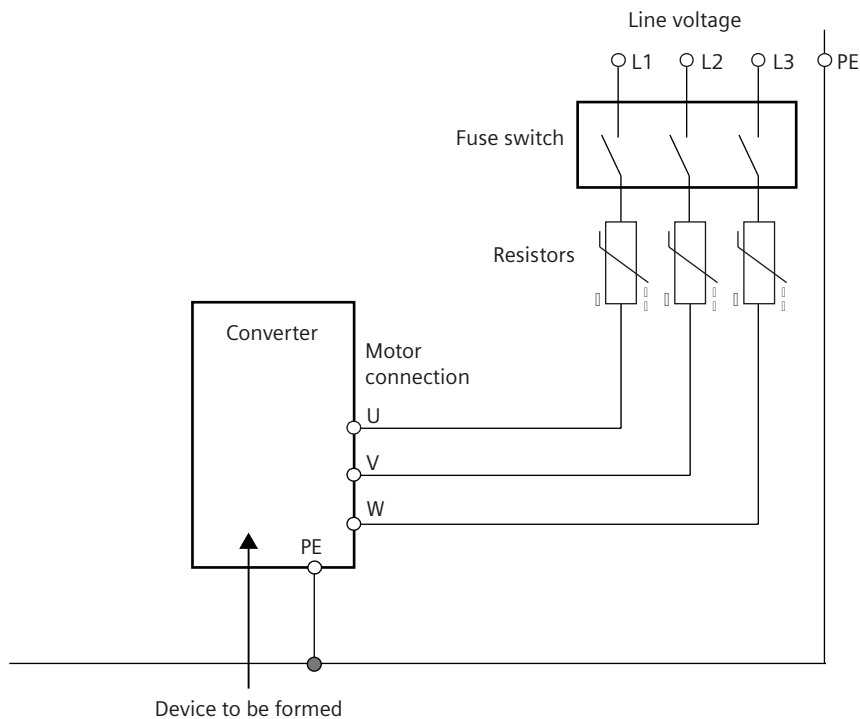


Figure 11-2 Forming circuit for converters with 3 AC line connection

Procedure

Proceed as follows to reform DC link capacitors:

1. Ensure that the device does **not** receive a power-on command (e.g. from the keyboard or terminal block).
2. Connect the forming circuit.
3. For forming using resistors, the converter must remain in the circuit for approx. 1 h. The resistors will become very hot if there is a fault in the unit (surface temperature > 80 °C).

CAUTION

Burns resulting from high resistor surface temperatures

The resistors can reach a high temperature if there is a fault in the converter (surface temperature > 80 °C). You can get seriously burnt when touching the surface.

- Mount the resistors so that contact is not possible. If this is not possible, attach clearly visible and understandable warning notices at hazardous positions.

11.2.6 Replacing the converter in a spare part scenario

11.2.6.1 Overview

Requirement

The new converter must have the same converter type and power as the converter being replaced.

Operation with memory card

If the converter being replaced was operated with a memory card, you have the following options in a spare part scenario:

- If the memory card contains the configuration data and the firmware of the converter, proceed as described in Chapter "Replacing a converter using a memory card with firmware (Page 365)".
- If the memory card only contains the configuration data, proceed as described in Chapter "Replacing a converter using a memory card without firmware (Page 366)".

Operation without memory card

If the converter being replaced was operated without a memory card, you have the following options in a spare part scenario:

- If you have a backup file, proceed as described in Chapter "Replacing a converter using a backup file (no memory card) (Page 368)".
- If there is no backup file, proceed as described in Chapter "Replacing a converter without data backup (no memory card, no backup file) (Page 371)".

Operation with Safety Integrated Functions

If the converter being replaced was operated with Safety Integrated Functions, an acceptance test must be carried out after the replacement. You can find more information in Chapter "Information pertaining to component replacements (Page 142)".

11.2.6.2 Replacing a converter using a memory card with firmware

Overview

If you retentively saved the configuration of the converter being replaced after commissioning, all configuration data are stored in the "USER" folder on the memory card.

Requirement

- The converter being replaced was operated with a memory card.
- The memory card contains the firmware files and the configuration data of the converter being replaced.
- The rated power of the replacement device is the same as the rated power of the converter being replaced.
- The replacement device is unused or has been reset to the factory setting.

Procedure

1. Switch off the supply voltage to the converter.
2. Remove the memory card from the converter.
3. Check that all parts of the device are in a no-voltage condition.
4. Release all of the connections at the converter, replace the converter and re-establish the connections.
5. Insert the memory card into the new converter.
6. Switch on the supply voltage to the converter.
If the firmware version in the replacement device differs from the firmware version in the converter being replaced, the converter performs a firmware update. Switch the supply voltage to the converter off and on again after the update.

More information

There is more information about installation in the following chapters:

- "Installing the converter (Page 157)"
- "Connecting the converter (Page 168)"

See also

Firmware update via memory card (Page 358)

11.2.6.3 Replacing a converter using a memory card without firmware

Overview

If you retentively saved the configuration of the converter being replaced after commissioning, all configuration data are stored in the "USER" folder on the memory card.

The procedure is described below using the web server as an example.

Requirement

- The converter being replaced was operated with a memory card.
- The memory card contains the configuration data of the converter being replaced.
- The rated power of the replacement device is the same as the rated power of the converter being replaced.
- The replacement device is unused or has been reset to the factory setting.

Procedure


1. Switch off the supply voltage to the converter.
2. Remove the memory card from the converter.
3. Check that all parts of the device are in a no-voltage condition.
4. Release all of the connections at the converter, replace the converter and re-establish the connections.
5. Switch on the supply voltage to the converter.
6. Connect your operating unit to the converter via the service interface X127.
7. Enter the IP address of the converter, e.g. <https://169.254.11.22>, in the browser. When the web server is called for the first time, the function view appears with the basic settings.
8. Make the following basic settings:
 - Preferred language of the user interface
 - Converter date and time; either manually or via NTP
9. Click on the "Next" button. You are taken to the Security Wizard.
10. Select the option "Exit the Security Wizard and continue with low security settings". User management and access control (UMAC) is not activated. You can configure the security settings at a later time, see Chapter "Protection & Security (Page 240)".
11. Check the installed firmware version on the home page of the web server.
 - If the firmware in the replacement device < the firmware in the replaced converter, proceed as described in the next step.

Note**Loss of configuration data**

If you skip the next step, the converter will be reset to factory settings at the next ramp-up. The configuration data will be lost.

- If the firmware in the replacement device \geq the firmware in the replaced converter, continue with step 13.
12. Perform a firmware update to a firmware \geq the firmware in the replaced converter. You can find more information on updating the firmware using the web server in Chapter "Firmware update (Page 243)".

11.2 Service and maintenance for the converter

13. Switch off the supply voltage to the converter.
14. Insert the memory card into the converter.
15. Switch on the supply voltage to the converter.
 - The converter imports the settings from the memory card during ramp-up.
 - Following ramp-up, commissioning is completed.
16. Log in to the web server via the IP address of the converter, e.g. <https://169.254.11.22>.
17. Save the settings retentively using the Save button .

More information

- There is more information about installation in the following chapters:
 - "Installing the converter (Page 157)"
 - "Connecting the converter (Page 168)"
- You can find information about all options in the firmware update in Chapter "Converter firmware update (Page 358)".
- Information about available firmware versions can be found on this website (<https://support.industry.siemens.com/cs/ww/en/view/109812303>).

11.2.6.4 Replacing a converter using a backup file (no memory card)

Overview

If you retentively saved the configuration of the converter being replaced after commissioning, and created a backup file, all configuration data are stored in the backup file.

The procedure is described below using the web server as an example.

Requirement

- The backup file was created in the web server with the function "Save drive data to backup file".
- The backup file is in the file directory of your operating unit.
- The rated power of the replacement device is the same as the rated power of the converter being replaced.
- The replacement device is unused or has been reset to the factory setting.


Procedure

1. Switch off the supply voltage to the converter.
2. Check that all parts of the device are in a no-voltage condition.
3. Release all of the connections at the converter, replace the converter and re-establish the connections.

4. Switch on the supply voltage to the converter.
5. Connect your operating unit to the converter via the service interface X127.
6. Enter the IP address of the converter, e.g. `https://169.254.11.22`, in the browser.
When the web server is called for the first time, the function view appears with the basic settings.
7. Make the following basic settings:
 - Preferred language of the user interface
 - Converter date and time; either manually or via NTP
8. Click on the "Next" button.
You are taken to the Security Wizard.
9. Select the option "Exit the Security Wizard and continue with low security settings".
User management and access control (UMAC) is not activated.
You can configure the security settings at a later time, see Chapter "Protection & Security (Page 240)".
10. Check the installed firmware version on the home page of the web server.
 - If the firmware in the replacement device < the firmware in the replaced converter, proceed as described in the next step.

Note**Loss of configuration data**

If you skip the next step, the converter will be reset to factory settings at the next ramp-up. The configuration data will be lost.

- If the firmware in the replacement device \geq the firmware in the replaced converter, continue with step 12.
11. Perform a firmware update to a firmware \geq the firmware in the replaced converter.
You can find more information on updating the firmware using the web server in Chapter "Firmware update (Page 243)".
 12. Call the function view "Backup and restore".
 13. In the area "Restore drive data from backup file", click on the "Click to select file, or drag and drop file here" button.
A dialog window opens.
 14. In your file directory, select the backup file.
 15. Click "Restore".
 - The backup file is checked and loading begins.
 - To load the settings to the converter, a ramp-up (reset) is initiated.
When the process has been completed successfully, a corresponding message is displayed.
 - The current settings are displayed after the ramp-up (reset).
 16. If the UMAC settings are changed through loading of the backup file, you may be logged out of the web server. Now log back in to the web server.
 17. Save the settings retentively using the Save button .

More information

- Information about installation can be found in the following chapters:
 - "Installing the converter (Page 157)"
 - "Connecting the converter (Page 168)"
- You can find information about all options in the firmware update in Chapter "Converter firmware update (Page 358)".
- Information about available firmware versions can be found on this website (<https://support.industry.siemens.com/cs/ww/en/view/109812303>).

11.2.6.5 Replacing a converter without data backup (no memory card, no backup file)

Requirement

The replacement device is unused or has been reset to the factory setting.

Procedure

1. Switch off the supply voltage to the converter.
2. Check that all parts of the device are in a no-voltage condition.
3. Release all of the connections at the converter, replace the converter and re-establish the connections.
4. Switch on the supply voltage to the converter.
5. Carry out a complete commissioning procedure with a commissioning tool.

More information

- Information about installation can be found in the following chapters:
 - "Installing the converter (Page 157)"
 - "Connecting the converter (Page 168)"
- Information about performing commissioning can be found in the following chapters:
 - "Commissioning (web server) (Page 193)"
 - "Commissioning (Startdrive) (Page 247)"

Technical specifications

12.1 Line connection conditions for the S210 converter system with the motors 1FK2/1FT2

Description

The drive system is designed for connection to grounded TN/TT and non-grounded IT line systems.

Depending on the motor/converter combination and the planned installation altitude, the following constraints must be taken into account regarding the line connection.

Motor	Converter	Converter input voltage	Permissible line system configurations for installation altitude 0 ... 2000 m	Permissible line system configurations for installation altitude 2001 ... 4000 m
240 V	1 AC	1 AC 200 ... 240 V $\pm 10\%$	<ul style="list-style-type: none"> TN and TT line systems with grounding at any potential IT line systems ¹⁾ 	Install an isolation transformer and ground the secondary side at any potential.
240 V 400 V	3 AC	3 AC 200 ... 240 V $\pm 10\%$	<ul style="list-style-type: none"> TN and TT line systems with grounded neutral point or line conductor IT line systems Install an isolation transformer and ground the secondary side at the neutral point. 	<ul style="list-style-type: none"> TN and TT line systems with grounded neutral point IT line systems Install an isolation transformer and ground the secondary side at the neutral point.
400 V	3 AC	3 AC 380 ... 480 V $\pm 10\%$	<ul style="list-style-type: none"> TN and TT line systems with grounded neutral point IT line systems Install an isolation transformer and ground the secondary side at the neutral point. 	Install an isolation transformer and ground the secondary side at the neutral point.

¹⁾ With the grounding screw removed, see Chapter "Converters with 3 AC line connection (Page 66)".

NOTICE

Damage to motor insulation due to excessive voltages

In the event of a ground fault in the IT supply system, the motor insulation can be damaged by the higher voltage to ground.

- Use a ground fault monitor.
- Eliminate the ground fault as quickly as possible.

12.2 Technical data and properties of the motor

12.2.1 Technical features

Property	Version
Type of motor	Permanent-magnet synchronous motor
Rotor inertia	1F□21 - High Dynamic - motor with low rotor inertia 1F□22 - Compact - motor with medium rotor inertia
Cooling	Natural cooling
Stator winding insulation according to EN 60034-1 (IEC 60034-1)	1F□2□02, 1F□2□03: Temperature class 130 (B) for a winding temperature of $\Delta T = 80$ K at an ambient temperature of $+40$ °C 1F□2□04, 1F□2□05, 1F□2□06, 1F□2□08, 1F□2□10: Temperature class 155 (F) for a winding overtemperature of $\Delta T = 100$ K at an ambient temperature of $+40$ °C
Impulse voltage-insulation class according to EN 60034-18-41 (IEC 60034-18-41)	IVIC: C
Operating range	-15 to $+40$ °C, derating at higher temperatures
Installation altitude (acc. to EN 60034-1 and IEC 60034-1)	≤ 1000 m above sea level, otherwise power derating
Type of construction acc. to EN 60034-7 (IEC 60034-7)	IM B5 (IM V1, IM V3)
Degree of protection according to EN 60034-5 (IEC 60034-5)	IP64, optionally IP65 or IP67 (IP67 only for 1FT2, but not for frame size 20)
Temperature monitoring	Thermal motor model
Paint finish	Anthracite (RAL 7016)
Shaft extension according to DIN 748-3 (IEC 60072-1)	Plain shaft, optionally with feather key and half-key balancing,
Radial eccentricity, concentricity and axial eccentricity acc. to DIN 42955 (IEC 60072-1) ¹⁾	Tolerance N (normal)
Vibration severity grade according to EN 60034-14 (IEC 60034-14)	Grade A is maintained up to rated speed
Sound pressure level L_{pA} (1 m) according to DIN EN ISO 1680, max. tolerance $+3$ dB(A)	1F□2102, 1F□2□03, 1F□2□04: 55 dB(A) 1F□2□05, 1F□2□06: 65dB(A) 1F□2□08, 1F□2210: 70dB(A)
Encoder systems, built-in with DRIVE-CLiQ interface	<ul style="list-style-type: none"> AS22DQC, absolute encoder single-turn, 22 bit (identification letter: S) AM22DQC, absolute encoder, 22 bit + 12 bit multiturn (identification letter: M) AS26DQC, absolute encoder single-turn 26 bit (identification letter: B) (only for 1FT2) AM26DQC, absolute encoder 26 bit + 12 bit multiturn (identification letter: C) (only for 1FT2)
Connection	One cable system (OCC), rotatable
Holding brake	Optional integrated holding brake

- 1) Shaft extension run-out, concentricity of centering edge, and perpendicularity of the mounting flange to the axis of the shaft extension.

12.2.2 Permissible environmental conditions for the motor

Environmental conditions for transport in the transport packaging according to Class 2K3 to DIN EN IEC 60721-3-2, except for the "air temperature" and "condensation" environmental factors	
Climatic environmental conditions	-15 °C ... +70 °C
Highest relative humidity	< 95% at 40 °C, condensation not permissible
Mechanical environmental conditions	Shock and vibration permissible according to 3M8 to EN 60721-3-3: Single shocks (6 ms) max. 250 m/s ²
Protection against chemical substances	Protected according to Class 2C2
Biological environmental conditions	Suitable according to Class 2B2

Environmental conditions for long-term storage in the product packaging according to Class 1K3 to DIN EN IEC 60721-3-1, except for environmental variables "air temperature", "highest relative humidity" and "condensation"	
Climatic environmental conditions	-15 °C ... +55 °C
Highest relative humidity	< 60%, condensation not permissible
Mechanical environmental conditions	Vibration-free storage space, $v_{rms} < 0.2$ mm/s
Protection against chemical substances	Protected according to Class 1C2
Biological environmental conditions	Suitable according to Class 1B2
Duration	<ul style="list-style-type: none"> • Six months for the above-mentioned conditions. • Special preservation measures are required for storage periods of 6 months up to a maximum of two years. For more information, please contact your local sales partner.

12.2 Technical data and properties of the motor

Environmental conditions during operation according to 3K4 to DIN EN IEC 60721-3-3, except for environmental variables "low air temperature", "condensation" and "low air pressure"	
Installation altitude	Up to 1000 m above sea level without limitations You can find more information in Chapter "Derating factors (Page 378)".
Climatic environmental conditions ¹⁾	<ul style="list-style-type: none"> • Temperature range: -15 °C¹⁾ ... +40 °C • Recommended relative humidity: 5 ... 95%, condensation not permitted • Permissible relative humidity from 0.25% at 20 °C, dew point: - 50 °C • Absolute air humidity: 1 ... 29 g/m³ • Rate of temperature change²⁾: 0.5°/min • Atmospheric pressure: 89^{1), 3)} ... 106 kPa⁴⁾ • Solar radiation: 700 W/m² ²⁾ • Movement of the air: 1.0 m/s • Water (other than rain): See protection class
Mechanical environmental conditions	<ul style="list-style-type: none"> • Vibration levels permissible according to Class 3M8 to EN 60721-3-3: Max. 50 m/s² • Shocks permissible according to Class 3M8 to EN 60721-3-3
Protection against chemical substances	Protected according to 3C2 to DIN EN IEC 60721-3-3
Biological environmental conditions	Suitable according to 3B2 to DIN EN IEC 60721-3-3
Pollution	Suitable for environments with degree of pollution 2 acc. to IEC 61800-5-1
Cooling air	Clean and dry air
<p>The motors are not suitable for operation:</p> <ul style="list-style-type: none"> • In a vacuum⁵⁾ • In salt-laden or aggressive atmospheres • Outdoors 	

¹⁾ Increased ruggedness with regard to low air temperature and low atmospheric pressure better than 3K3 according to DIN EN IEC 60721-3-3

²⁾ Averaged over a period of 5 min


³⁾ The limit value of 89 kPa covers applications at altitudes up to 1000 m.

⁴⁾ Conditions in mines are not considered.

⁵⁾ Operation in a vacuum is not permissible because of the low dielectric strength and poor heat dissipation.

12.2.3 Protection against electromagnetic fields (motor)

Active implant malfunctions due to electromagnetic fields

 WARNING
<p>Malfunction of active implants due to magnetic and electrical fields</p> <p>Electric motors pose a danger to people with active medical implants, e.g. heart pacemakers, who come close to these motors.</p> <ul style="list-style-type: none"> • If you are affected, stay a minimum distance of 30 cm away from the motors (tripping threshold for static magnetic fields of 0.5 mT according to Directive 2013/35/EU).

12.2.4 Cooling

Description

The 1F□2 is a non-ventilated motor.

To ensure sufficient heat dissipation when installed, the motor requires a minimum clearance of 100 mm from adjacent components on three sides.

- Maintain these clearances irrespective of the following mounting variants.

Non-thermally insulated mounting

Some of the motor power loss is dissipated through the flange when the motor is connected to the mounting surface.

- Observe the following mounting conditions for the specified motor data:

Shaft height	Steel plate, width x height x thickness (in mm)
1F□2□02	200 x 200 x 6
1F□2□03	250 x 250 x 6
1F□2□04	
1F□2□05	300 x 300 x 12
1F□2□06	450 x 370 x 30
1F□2□08	
1F□2□10	

The data in the table refers to an ambient temperature of 40 °C and an installation altitude up to 1000 m above sea level.

If the environmental conditions are different, derating may be required. You can find information on this in the chapter "Derating factors (Page 378)".

For larger mounting surfaces, the heat dissipation conditions improve.

Thermally insulated mounting without additional mounted components

The following description applies only to motors with frame sizes 1F□2□02 ... 1F□2□04.

For naturally cooled motors, you must reduce the S1/characteristic as follows:

- Reduce the motor static torque by 20 % to 30 %.
- Reduce the torque at 3000 r/min by 40 % to 50 %.

Thermal motor protection

The converter monitors the motor temperature based on a thermal motor model and issues the alarm "Motor overtemperature" before the maximum temperature is reached. If the motor exceeds the maximum temperature, the converter switches off the motor with the fault message "Motor overtemperature".

If the ambient temperature exceeds 40 °C, you need to set the ambient temperature at the converter so that the motor is reliably protected.

- To do this, select parameter p0613 at the converter.
- Set the maximum ambient temperature that occurs.

Parameter r0034 indicates the thermal load of the motor as a percentage. The reading is influenced by the ambient temperature selected in parameter p0613.

You can find additional information in the parameter lists "Parameters (Page 627)".

Motor overload protection according to IEC 61800-5-1 Ed.3 / UL 61800-5-1 Ed.2

The converter complies with the motor overload protection according to IEC 61800-5-1 Ed.3 or UL 61800-5-1 Ed.2; to achieve this, you must make the following settings after commissioning.

Procedure

Proceed as follows, to activate motor overload protection according to IEC 61800-5-1 Ed.3 / UL 61800-5-1 Ed.2:

1. Set p5375.0 = 1
2. Set p5375.1 = 1

12.2.5 Derating factors

Description

Due to the decreasing air pressure in higher installation altitudes, the cooling of the motor deteriorates. Therefore, reduce the power of the motor as the installation altitude increases.

Multiply the permissible torques or powers by the factors from the following table.

Reduce the torques and powers according to the values determined.

Factors for power derating depending on the installation altitude and the ambient temperature

Table 12-1 Factors for power derating depending on the installation altitude and the ambient temperature

Installation altitude above sea level in m	Ambient temperature in °C				
	30	40	45	50	55
1000	1.05	1	0.95	0.89	0.84
2000	1	0.95	0.86	0.8	0.73
3000	0.95	0.89	0.76	0.69	0.62
4000	0.89	0.84	0.65	0.57	0.47

Calculate the derating factor for ambient temperatures that are not shown here and installation altitudes below the maximum values by interpolating. For example: 40 °C at 1500 m above sea level = derating factor 0.965.

Calculating the reduced characteristic curve

$$M_{S1 \text{ red}}(n) = x_d \cdot M_{S1}(n / x_d)$$

$M_{S1 \text{ red}}$ Reduced motor torque for S1 operation at the required installation altitude and ambient temperature

M_{S1} Motor torque for S1 operation at an ambient temperature of 40 °C and 1000 m above sea level (see Chapter "Technical specifications and characteristics")

n Motor speed

x_d Derating factor from the table "Factors for reducing the power..." above

Graphic representation of the derating factors

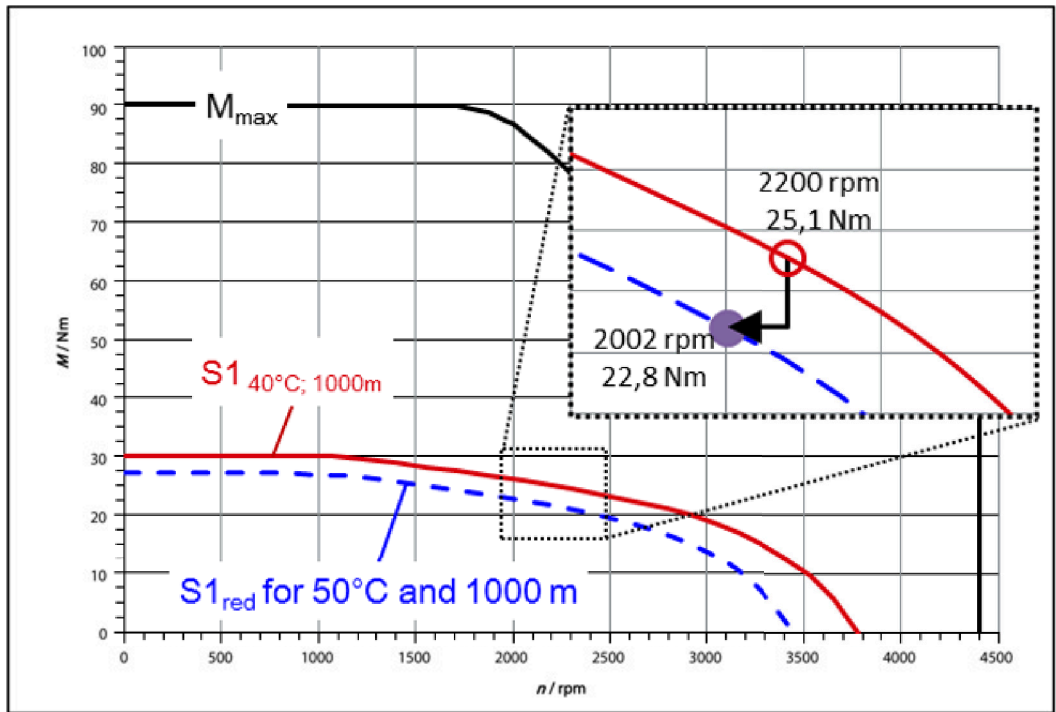


Figure 12-1 Example of a derating factor

Factors for reducing the DC link voltage depending on the installation altitude

The voltage strength of the motor insulation is reduced for installation altitudes exceeding 2000 m above sea level. Check whether it is necessary to limit the DC link voltage.

Reduce the permissible DC link voltage with increasing installation altitude due to the decreasing air pressure.

Table 12-2 Limit values for the DC link voltage for motors of the 1FK2/1FS2/1FT2 series at installation altitudes below 2000 m mean sea level

Motors with the following rated speed in the article number (part number) 1F□□□□□-□□X□□..., X =	Max. permissible converter DC link voltage in V
G	375
B, C, F, H, K	720

Table 12-3 Typical DC link voltage of the SINAMICS converters

Network	Infeed	DC link voltage in V
1 AC 230 V	Non-regulated	248
3 AC 240 V	Non-regulated	307

Network	Infeed	DC link voltage in V
3 AC 400 V	Non-regulated	528
3 AC 480 V	Non-regulated	634

As the DC link voltage is reduced, the converter output voltage also decreases. This reduces the operating range in the M-n diagram.

The M-n diagrams are provided in the following chapters:

- "Technical data and characteristics of the 1FK2 connected to 1 AC 230 V, 3 AC 240 V (Page 405)"
- "Technical data and characteristics of the 1FK2 connected to 3 AC 400 V, 3 AC 480 V (Page 435)"
- "Technical data and characteristics of the 1FT2 connected to 1 AC 230 V, 3 AC 240 V (Page 463)"
- "Technical data and characteristics of the 1FT2 connected to 3 AC 400 V, 3 AC 480 V (Page 504)"

See also

Technical specifications of the converter (Page 547)

12.2.6 Degree of protection

Description

The degree of protection of a motor is marked, for example, using "IP64".

The motor degree of protection is classified according to EN 60034-5 (IEC 60034-5).

The combination of "IP" + 2 numbers means the following:

IP = International Protection

1st Number = Protection against the ingress of foreign bodies

2. Number = Protection against the ingress of water

DIN 60034-5 is valid for water as potentially occurring medium, not for oil or other creeping fluids.

Configure the motor in the required degree of protection.


Degrees of protection available for the 1FK2 and the 1FT2

Degree of protection	1FK2	1FT2
IP64	x	x
IP65	x	x
IP67		x ^{*)}

*) Not applicable for 1F□2□02


The degree of protection is specified on the rating plate.

Motors with degree of protection IP65 and IP67 have a radial shaft sealing ring.

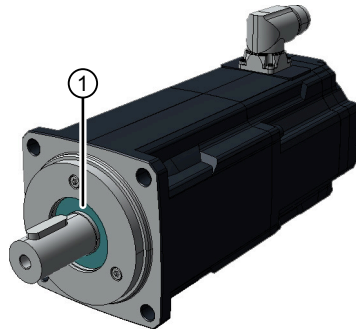

1F□2□02 ... 1F□2□04

① radial shaft seal ring

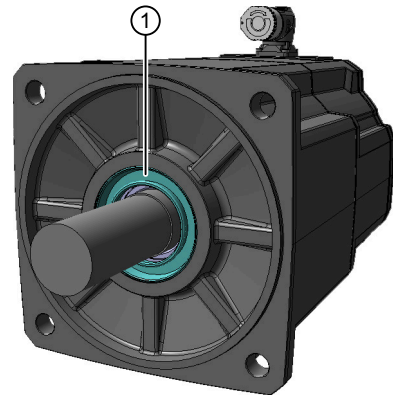

1F□2□05 ... 1F□2□10

For 1F□2□02, 1F□2□03 and 1F□2□04, the radial shaft sealing ring shortens the length of shaft end that can be used.

Note

It is permissible that the radial shaft sealing ring runs dry.

With degrees of protection IP65 and IP67, it is not permissible for liquid to collect on the flange.

The service life of the radial shaft sealing ring is approximately 25000 operating hours.

You can find more information in Chapter "Shaft extension (Page 384)".

12.2.7 Balancing

The motors are balanced according to EN 60034-14.

Motors with featherkey in the shaft are half-key balanced.

A mass equalization for the protruding half key must be taken into account for the output elements.

12.2.8 Vibration response

Vibration severity grade

Motors with keyway are balanced by the manufacturer using a half-key.

The vibration response of the system at the location of use is influenced by output elements, any built-on parts, the alignment, the installation, and external vibrations. This can change the vibration values of the motor.

The motors conform to vibration severity grade A according to EN 60034-14 (IEC 60034-14).

The specified values refer only to the motor. The installation-dependent system vibration behavior can increase these values at the motor.

The vibration severity grade is maintained up to the rated speed (n_N)

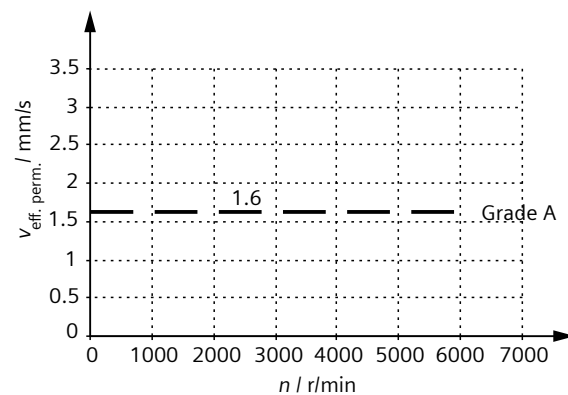


Figure 12-2 Vibration severity levels

Permissible vibration in operation


In order to guarantee the proper function of the motor and not to impair the lifetime of the bearing, the following vibration values must be observed during operation.

- Vibration velocity¹⁾ V_{rms} according to ISO 10816 Max. 4.5 mm/s
- Vibration acceleration a_{peak} axial²⁾ 50 m/s²
- Vibration acceleration a_{peak} radial²⁾ 50 m/s²

¹⁾ To assess the vibration velocity, the measuring equipment must fulfill the requirements of ISO 2954.

²⁾ The vibration acceleration is evaluated in the frequency range of 10 Hz to 2000 Hz. The maximum peak in the measurement time range is considered.

Select the measuring points according to ISO 10816-1 Section 3.2. The vibration values must not exceed the specified limits at any measuring point.

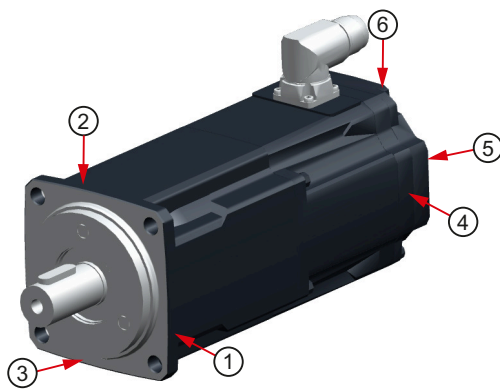

- ① End shield DE radial
- ② End shield DE radial
- ③ End shield DE axial
- ④ End shield NDE radial
- ⑤ End shield NDE axial
- ⑥ End shield NDE radial

Measuring points for vibration values

12.2.9 Shaft extension

The motors are supplied with cylindrical shaft extensions. The shaft end usually has a centering thread according to DIN 332, form DR.

Optionally, a shaft extension with keyway and fitted key is available.

With motors 1F□2□02 ... 1F□2□04, the usable shaft end is reduced by the radial shaft sealing with IP65 degree of protection.

Dimensions of shaft ends

Motor	Shaft extension with IP64 Diameter x length in mm	Shaft extension with IP65 Diameter x length in mm	Feather key Width x height x length in mm	Centering thread
1F□2□02	8 (h6) x 25	8 (h6) x 18	2 x 2 x 10	M3
1F□2□03	14 (h6) x 30	14 (h6) x 21.5	5 x 5 x 16	M5
	11 (k6) x 23 ¹⁾	-	-	M4

Motor	Shaft extension with IP64 Diameter x length in mm	Shaft extension with IP65 Diameter x length in mm	Feather key Width x height x length in mm	Centering thread
1F□2□04	19 (k6) x 40	19 (k6) x 32	6 x 6 x 22	M6
	14 (k6) x 30	-	-	M5
1F□2□05	19 (k6) x 40		6 x 6 x 32	M6
1F□2□06	24 (k6) x 50		8 x 7 x 40	M8
1F□2□08	32 (k6) x 58		10 x 8 x 45	M12
1F□2□10	38 (k6) x 80		10 x 8 x 70	M12

¹⁾ The optional 11 mm x 23 mm shaft extension is only available without a keyway and without a shaft sealing ring (IP65).

12.2.10 Radial eccentricity, concentricity and axial eccentricity


Description

The shaft and flange accuracies for 1F□2 motors are implemented according to DIN 42955 (IEC 60072-1) as standard (Normal class).

Radial eccentricity tolerance of the shaft to the frame axis (referred to cylindrical shaft ends)

Motor	Standard (Normal class)
1F□2□02	0.03 mm
1F□2□03	0.035 mm
1F□2□04 1F□2□05 1F□2□06	0.04 mm
1F□2□08 1F□2□10	0.05 mm

12.2 Technical data and properties of the motor

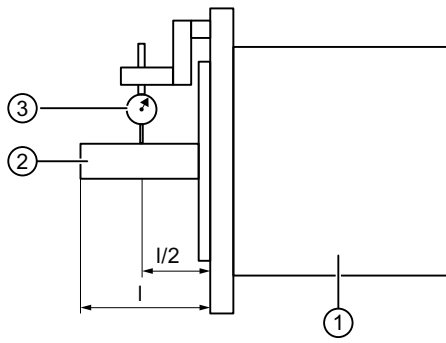


- ① Motor
- ② Motor shaft
- ③ Dial gauge

Figure 12-3 Checking the radial eccentricity (diagram with example)

Concentricity and axial eccentricity tolerance of the flange surface to the shaft axis (referred to the centering diameter of the mounting flange)

Motor	Standard (Normal class)
1F□2□02 1F□2□03 1F□2□04 1F□2□05	0.08 mm
1F□2□06 1F□2□08 1F□2□10	0.1 mm

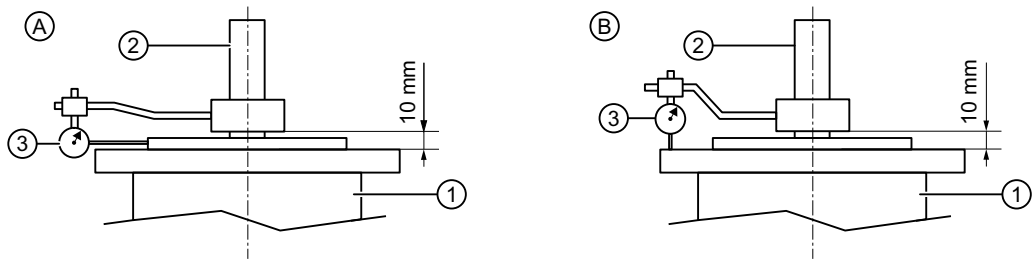

- A Check for concentricity
- B Check for axial eccentricity
- ① Motor
- ② Motor shaft
- ③ Dial gauge

Figure 12-4 Checking the concentricity and axial eccentricity (diagram with example)

12.2.11 Axial and radial forces

Permissible axial forces

Type	Axial force, static ¹⁾ $F_{A\text{stat}} / \text{N}$
1F□2□02	30
1F□2□03	75
1F□2□04	100
1F□2105	120
1F□2106	200
1F□2205	120
1F□2206	200
1F□2208	300
1F□2210	450

¹⁾ The specified axial forces are determined by the spring loading and therefore also apply for motors with holding brake.

Note

Applications with an angular toothed pinion directly on the motor shaft are not permitted if the permissible axial forces are exceeded.

Permissible radial forces

As a result of the bearing arrangement, the 1F□2 is designed for aligned forces. Forces such as these occur for belt drives, for example.

All radial forces always refer to aligned forces.


NOTICE

Motor damage caused by circulating forces

Circulating forces can cause bearing motion, and therefore damage the motor.

- Avoid rotating forces.

Point of application of radial forces F_R at the shaft extension

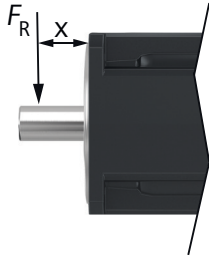

F_R Point of application of the radial force

x Distance between where the radial force is applied and the shaft shoulder in mm


Figure 12-5 Force application point at the shaft extension

The following diagrams indicate the maximum permissible radial force for the corresponding motor frame size. It depends on the force application point and the average speed for a nominal bearing service life (L10h) of 25000 h.


Note

The radial force diagrams of the 1FK2 motors also apply to 1FT2 motors.


Radial force diagram 1F□2□02

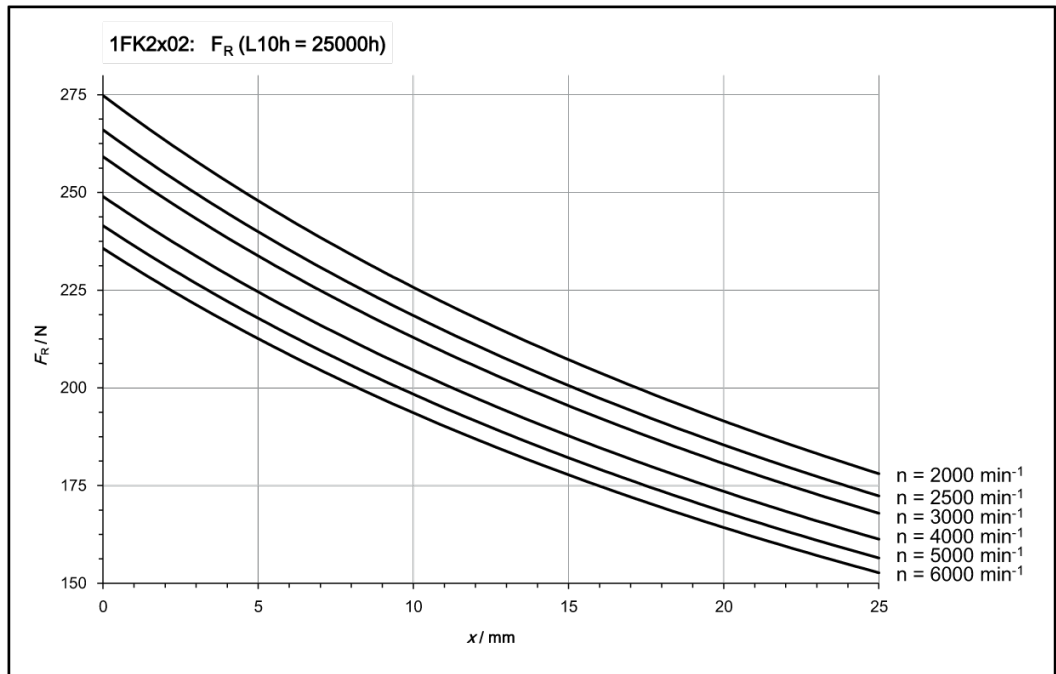


Radial force diagram 1FK2□03

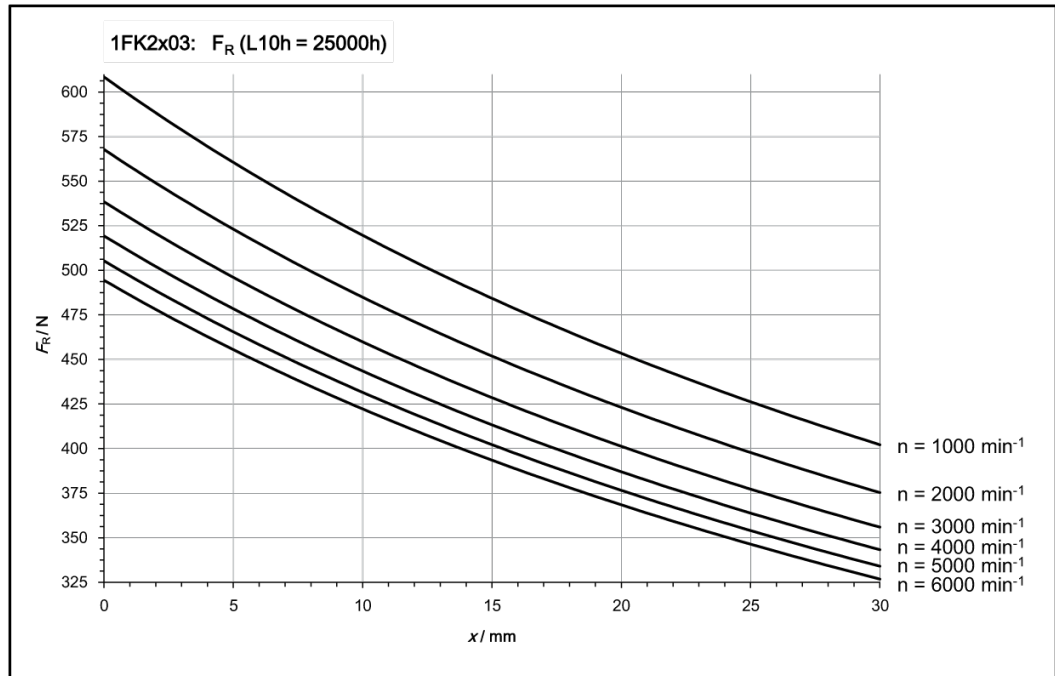


Radial force diagram 1FK2□04

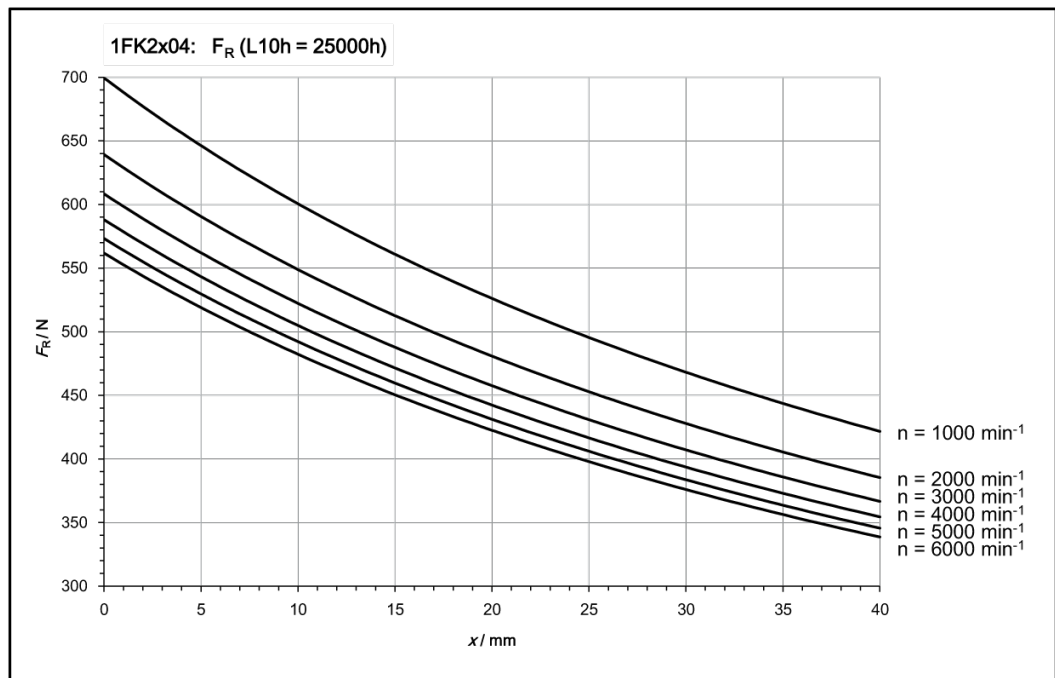


Radial force diagram 1FK2105

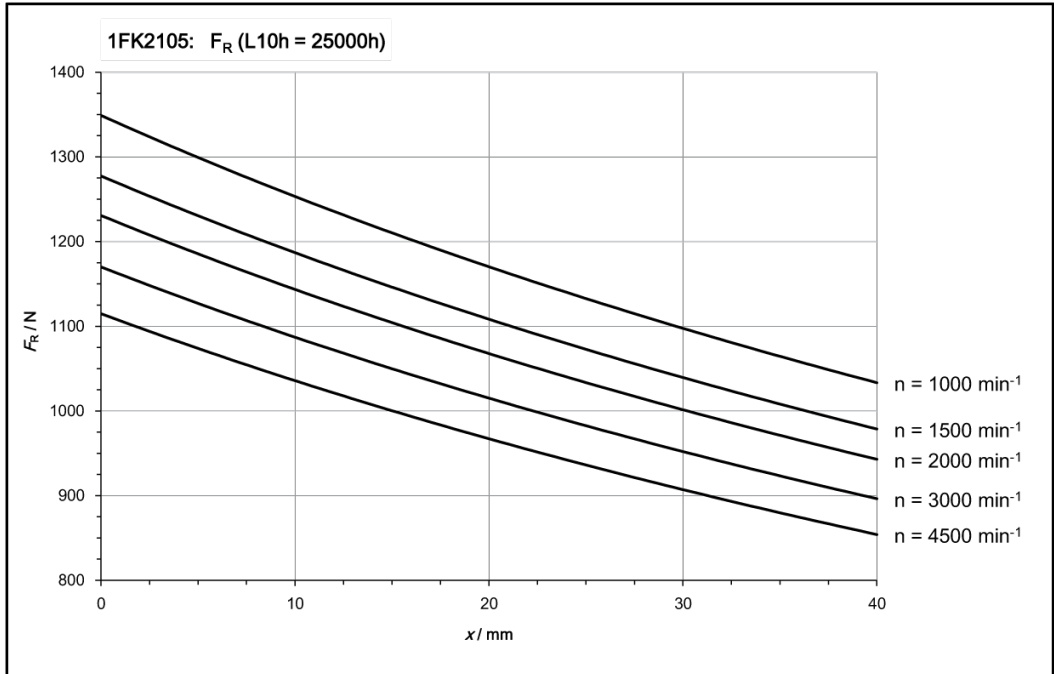


Radial force diagram 1FK2205

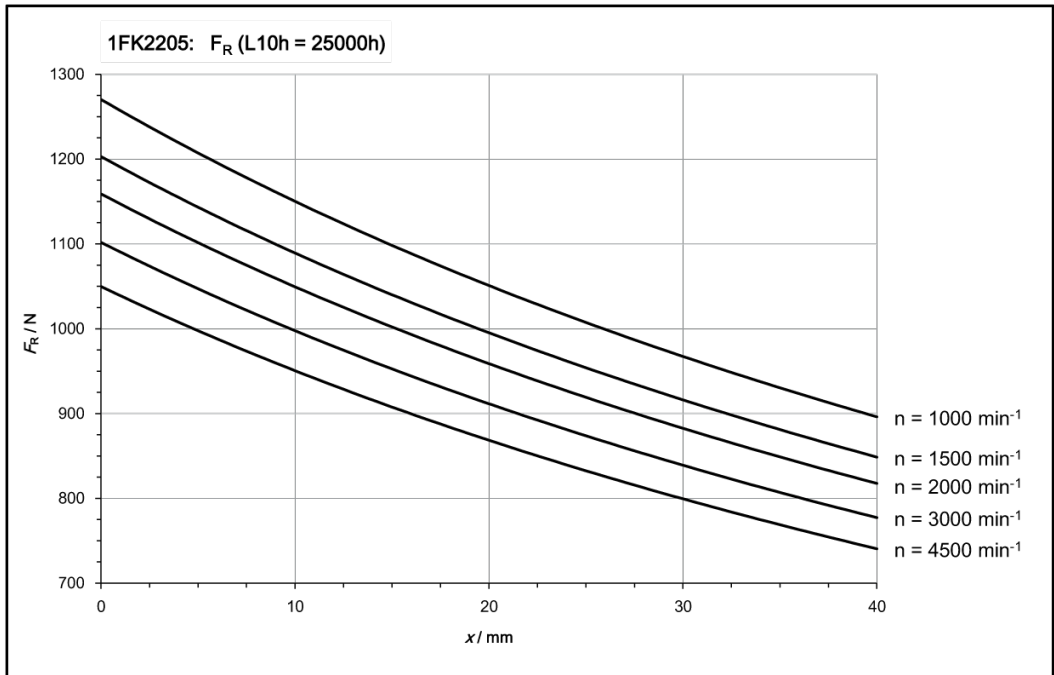


Radial force diagram 1FK2□06

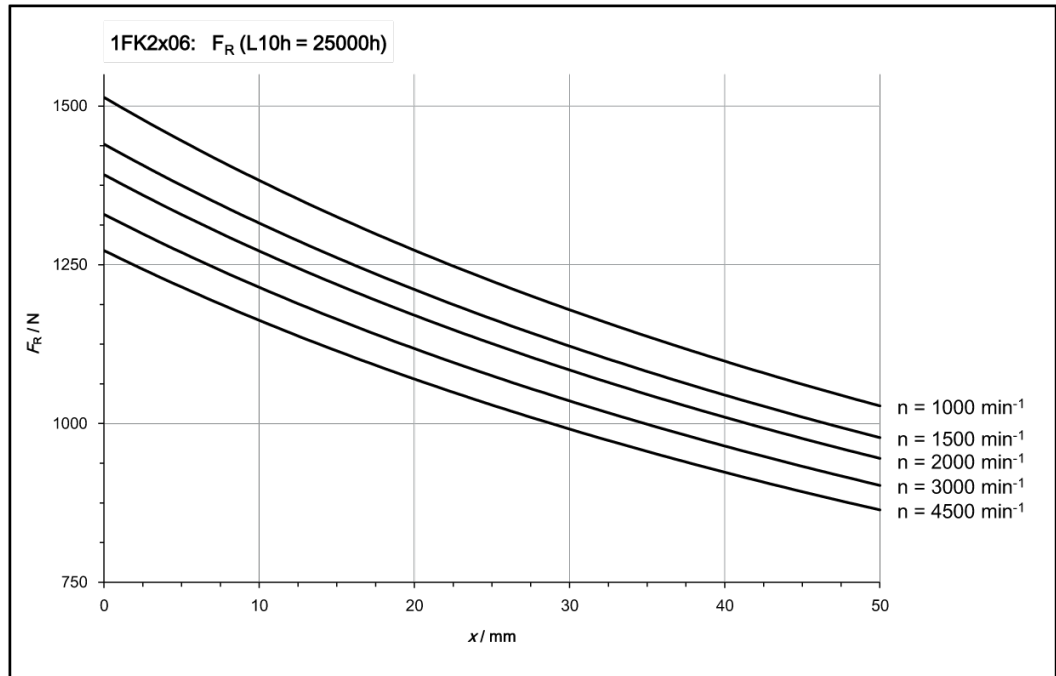

Radial force diagram 1FK□2208

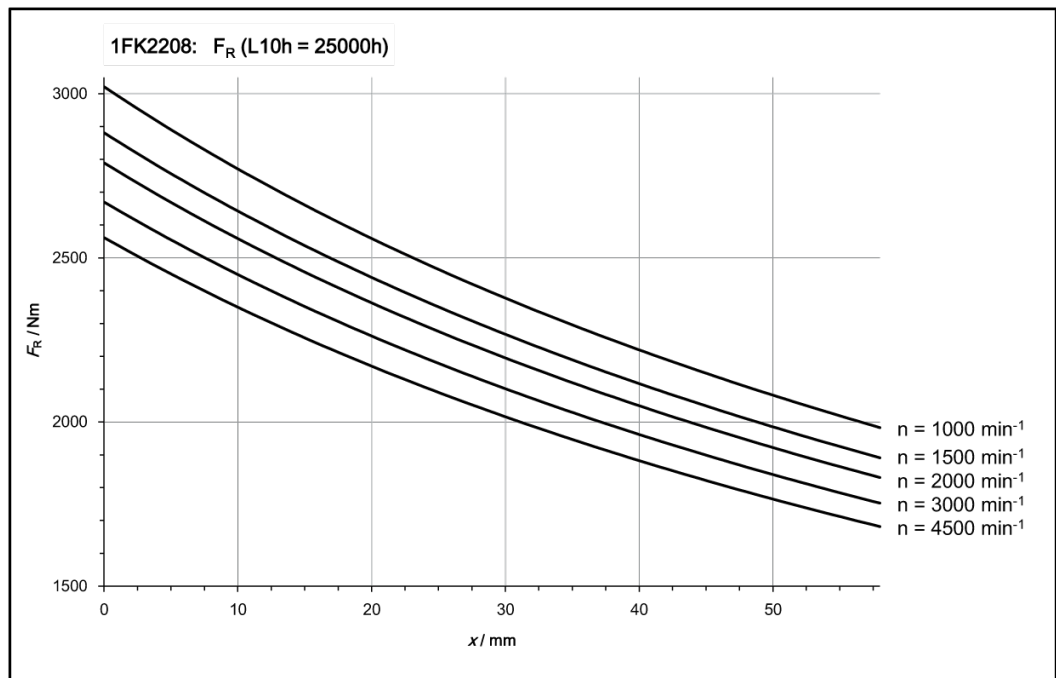

Radial force diagram 1FK2210

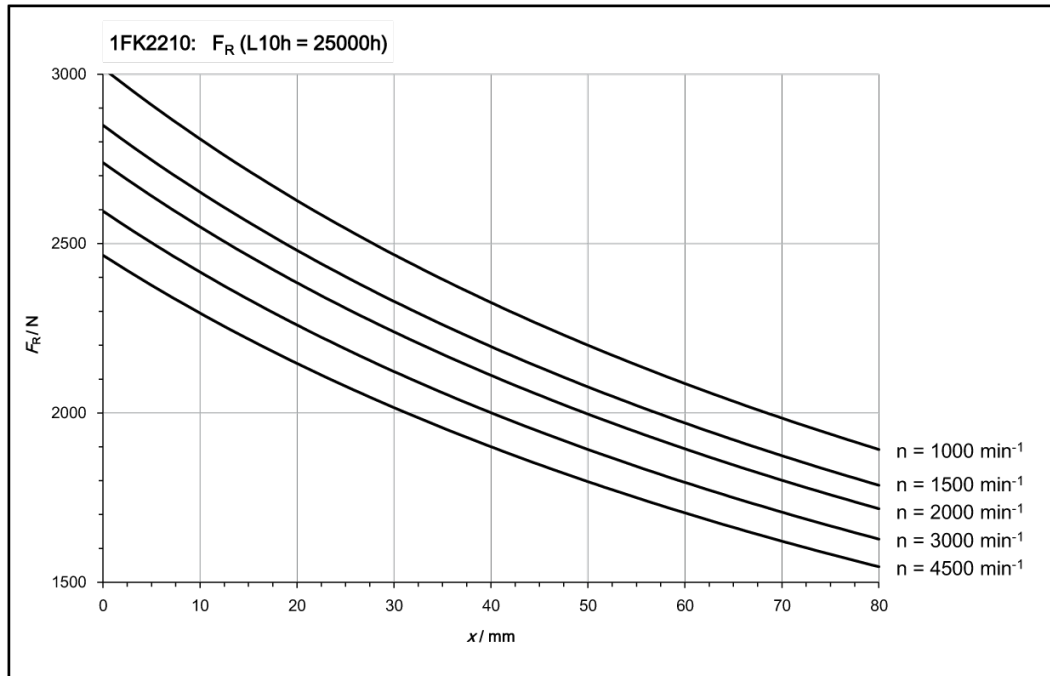

12.2.12 Available encoders

Encoders that can be ordered for the 1FK2

	Absolute encoder single-turn, 22 bit	Absolute encoder, 22 bit +12 bit multiturn
Encoder designation	AS22DQC	AM22DQC
Identification in the article number	S	M
Resolution	4,194,304 = 22 bit	4,194,304 = 22 bit
Absolute position	Yes, one revolution	Yes, 4096 revolutions (12 bit)
Angle error	$\pm 100''$	$\pm 100''$

Encoders that can be ordered for the 1FT2


	Absolute encoder, single-turn		Absolute encoder, multiturn	
	22 bit	26 bit	22 bit +12 bit	26 bit +12 bit
Encoder designation	AS22DQC	AS26DQC	AM22DQC	AM26DQC
Identification in the article number	S	B	M	C

	Absolute encoder, single-turn		Absolute encoder, multiturn	
	22 bit	26 bit	22 bit +12 bit	26 bit +12 bit
Resolution	4,194,304 = 22 bit	67,108,864 = 26 bit	4,194,304 = 22 bit	67,108,864 = 26 bit
Absolute position	Yes, one revolution		Yes, 4096 revolutions (12 bit)	
Angle error	± 100"	± 40"	± 100"	± 40"

12.2.13 Holding brake data

The holding brake is used to clamp the motor shaft when the motor is at a standstill. The holding brake is not a working brake for braking the rotating motor. When the motor is at a standstill, the holding brake is designed for at least 5 million switching cycles.

Limited EMERGENCY STOP operation is permissible. Take into account the maximum permissible single operating energy as well as service life, total operating energy of the brake.

 WARNING
Unintentional movements through inadequate braking effect
If you use the holding brake incorrectly, e.g. as an operating brake or you ignore the permissible operating energy of the brake, then the brake will be subject to excessive and impermissible wear. As a consequence, there may be no brake effect. Unintentional movements of the machine or system can result in death or serious injury.
<ul style="list-style-type: none"> • Observe the permissible number of operating cycles and EMERGENCY STOP properties. • Operate the motor only in conjunction with an intact brake. • Avoid repeated brief acceleration of the motor against a holding brake that is still closed.

The holding brakes of the 1F□2 have a torsional backlash of less than 1.5°.

Description

The following table lists technical data regarding the holding brakes for operation with a SINAMICS S210 converter.

Motor type	①	②	③	④	⑤	⑥ ¹⁾	⑦	⑧	⑨	
	M_4 / Nm	M_{1m} / Nm	M_{1max} / Nm	t_{open_f} / ms	t_{close_f} / ms	W_{max} / J	W_{Tot} / kJ	I_h / A	I_{o_n} / A	t_{oex} / ms
For spring-loaded brake										
1F□2□02	0.32	0.32	1	25	20	7.4	1.75	0.1	0.6	50
1F□2□03	1.3	1.3	3.9	40	30	62	17.5	0.15	0.8	60
1F□2□04	3.3	3.3	9	50	40	270	120	0.2	1.2	80
For permanent-magnet brake										
1F□2□05	8	5	18	35	20	568	284	0.3	1.1	120
1F□2206	13	6.5	35	70	35	1548	774	0.35		
1F□2106	16	9				1065				
1F□2□08-3	19	12	37			2000	1800	0.4		

Motor type	①	②	③	④	⑤	⑥ ¹⁾	⑦	⑧	⑨	
	M_4 / Nm	M_{1m} / Nm	M_{1max} / Nm	t_{open_f} / ms	t_{close_f} / ms	W_{max} / J	W_{Tot} / kJ	I_h / A	$I_{o,n}$ / A	t_{oex} / ms
1F□2□08-4 1F□2□08-5 1F□2□10-3	32	17	70	120	40	4800 6658	2400	0.5	1.4	180
1F□2□10-4 1F□2□10-5	55	26	100	130	65	8700	3800	0.5	1.5	200
Higher performance brake for 1FT22□□-□□□2□-□□□□										
1FT2208-□□□2□ 1FT2208-□□□3□	32	17	70	120	40	4800	2400	0.5	1.4	180
1FT2210-□□□2□ 1FT2210-□□□3□	55	26	100	130	65	8700	3800	0.5	1.5	200

¹⁾ Maximum of three consecutive EMERGENCY STOP procedures. Maximum 25% of all EMERGENCY STOP procedures as high-energy stops with W_{max} .

① Holding torque M_4

The holding torque M_4 is the highest permissible torque for the closed brake in steady-state operation without slip (holding function when motor is at standstill). The data applies for the state at operating temperature (120 °C).

② Dynamic braking torque M_{1m}

The dynamic braking torque M_{1m} is the smallest mean dynamic braking torque that can occur for an EMERGENCY STOP.

③ Maximum dynamic braking torque M_{1max}

The maximum dynamic braking torque M_{1max} is the greatest dynamic braking torque that can occur for an EMERGENCY STOP.

Based on M_{1max} , you can assess whether mounted mechanical elements, e.g. a gearbox, can withstand the maximum possible peak torques occurring on EMERGENCY STOP.

④ Opening time t_o and ⑤ closing time t_{c1}

The delay times that occur when switching the brake t_o and t_{c1} are saved in the motor and are automatically taken into consideration.

After activation of the holding brake (opening), the speed/velocity setpoint remains at "Zero" during the opening time t_o . The speed/velocity setpoint is only enabled after the opening time t_o has elapsed.

After OFF1 or OFF3 and activation of the holding brake (closing), the drive still remains in closed-loop control with speed/velocity setpoint "Zero" during closing time t_{c1} . The pulses are only canceled after this.

12.2 Technical data and properties of the motor

⑥ Maximum permissible single operating energy W_{max}

The maximum permissible single operating energy of an individual EMERGENCY STOP operation.

After an EMERGENCY STOP with the maximum single operating energy, allow a cooling time of at least 3 minutes before you operate the motor again.

⑦ Total operating energy (service life) W_{total}

The total operating energy is the sum of the single operating energy (operating energy for each EMERGENCY STOP procedure). If you exceed the total operating energy, problem-free functioning of the brake can no longer be guaranteed.

- Refurbish the motor.

⑧ Holding current I_h

The holding current I_h keeps the holding brake open. The holding current I_h continues to load the 24-V power supply of the converter after time t_{oex} until the brake is released.

⑨ Typical opening current I_o for overexcitation time t_{oex}

After activation of the holding brake (opening), the break-induced current I_o places a load on the 24 V power supply of the converter for the specified overexcitation time t_{oex} . This break-induced current applies to a brake temperature of approx. 20 °C.

At a brake temperature of -15 °C, the break-induced current can increase by up to 30%.

Formula to calculate the operating energy per braking operation

$$W_{BR} = (J_{Mot Br} + J_{load}) \cdot n_{mot}^2 / 182.4$$

W_{Br} / J Operating energy per braking operation

$n_{Mot} / r/min$ Speed at which the brake is engaged

$J_{Mot Br} / kgm^2$ Rotor moment of inertia of the motor with brake

You can find this information in these chapters:

- "Technical data and characteristics of the 1FK2 connected to 1 AC 230 V, 3 AC 240 V (Page 405)"
- "Technical data and characteristics of the 1FK2 connected to 3 AC 400 V, 3 AC 480 V (Page 435)"
- "Technical data and characteristics of the 1FT2 connected to 1 AC 230 V, 3 AC 240 V (Page 463)"
- "Technical data and characteristics of the 1FT2 connected to 3 AC 400 V, 3 AC 480 V (Page 504)"

J_{load} / kgm^2 Load moment of inertia of the mounting part on the motor with brake (kgm^2)

182.4 Constant for calculating the circular frequency and SI units


12.2.14 Options

Description

The following options are available for the 1FT2.

The selected options are noted on the rating plate as order codes.

Option	Order code
Acceptance test certificate	B02
Coaxial planetary gearboxes and right angle planetary gearboxes	A□□, B□□ or C□□
Increased chemical resistance	N16
Pressure compensation connector	Q20
Metal rating plate	Q31
Paint finish	X0□
Customer data on the rating plate	Y84

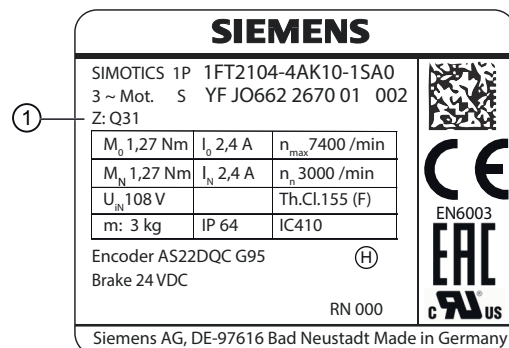

① Order codes for the selected options

Figure 12-6 Rating plate 1FT2 with options (diagram showing an example)

12.2.14.1 Option: Planetary gearbox (Axx, Bxx or Cxx)

Overview of planetary gearboxes for S-1FK2 and S-1FT2 servomotors

You can optionally combine the servomotors SIMOTICS S-1FK2 or S-1FT2, collectively referred to as "1F□2" below, with various planetary gearboxes to form compact servo planetary geared motors.

The coaxial planetary gearboxes NRB, NRK and NLC and the right angle planetary gearboxes NRBW, NRKW and NLCW can be used.

Right angle planetary gearboxes are planetary gearboxes with an output shaft arranged at an angle with a bevel gear stage.

The coaxial planetary gearboxes are available for the 1FK2 and the 1FT2.

The right angle planetary gearboxes are only available for the 1FT2 and are identified with an extra "W".

12.2 Technical data and properties of the motor

The following table shows the possible combinations of planetary gearboxes with servomotors.

Coaxial planetary gearbox for 1F□2	Right angle planetary gearbox for 1FT2
NRB	NRBW
NRK	NRKW
NLC	NLCW

1F□2 geared motors are specified and delivered as complete units. All outstanding performance data are matched to the motor-gearbox combination.

The illustrations show the planetary gearboxes mounted on the S-1FT2 servomotor:

Table 12-4 Coaxial planetary gearbox series



Table 12-5 Right angle planetary gearbox series



Motor versions







Two motor versions are available for 1F□2 geared motors.

	High-Dynamic motors	Compact motors
Series	1FK21□□-□ 1FT21□□-□	1FK22□□-□ 1FT22□□-□
Dimensioning	<ul style="list-style-type: none"> • Low intrinsic moment of inertia • For applications in which small masses are moved with maximum dynamics and precision 	<ul style="list-style-type: none"> • Average intrinsic moment of inertia • For applications in which large loads are moved with dynamics and precision • In connection with planetary gearboxes with higher transmission ratios for applications with inertia ratios which are difficult to regulate via control technology

Planetary gearboxes

Planetary gearboxes N NRB, NRBW, NRK, NRKW, NLC and NLCW are maintenance-free due to their lifetime lubrication and can be mounted in any mounting position without restriction.

Table 12-6 Design and technical features of planetary gearboxes

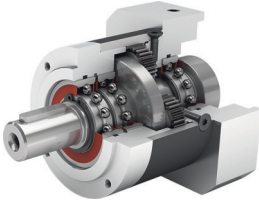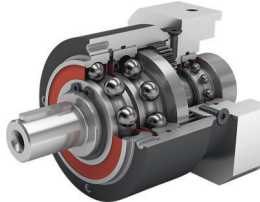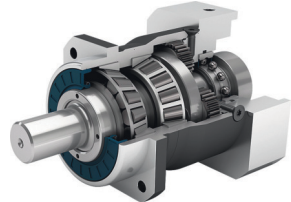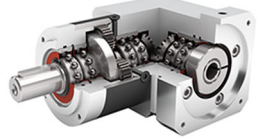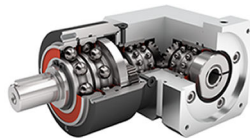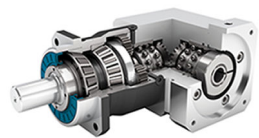Planetary gearboxes	NRB, NRBW	NRK, NRKW	NLC, NLCW
Illustrations of coaxial planetary gearboxes NRB, NRK and NLC			
Illustrations of right angle planetary gearboxes NRBW, NRKW and NLCW			
Special features	<ul style="list-style-type: none"> • For high speeds • Lightweight gearbox 	<ul style="list-style-type: none"> • For higher radial and axial forces exerted on the output shaft by large ball bearings • Low friction for maximum speeds 	For high radial and axial forces exerted by preloaded tapered roller bearings
Transmission ratio i	3 ... 512	3 ... 100	3 ... 100
Gear stages z	1-, 2- and 3-stage	1- and 2-stage	1- and 2-stage
Torsional backlash φ_2 of planetary gearboxes in arcmin	6 ... 22 for NRB 11 .. 28 for NRBW	8 ... 20 for NRK 11 ... 25 for NRKW	7 ... 10 for NLC 11 ... 18 for NLCW
Gearbox type	IM B14	IM B14	IM B15
Degree of protection	IP64	IP64	IP65
Power density	+++	++	++
Bearing loading capacity	+	++	+++
Suitable for high speeds	++	++	+
Degree of protection	+	+	++
Applications	Pharmaceutical and medical technology Foodstuff industry	Automation and assembly technology -	• Foodstuff industry • Pressure
	Packaging, auxiliary axes in machine tools		
Options	<ul style="list-style-type: none"> • Plain shaft or solid shaft with feather key • Standard lubrication or food-safe lubricant 		

12.2.14.2 Option: Motors with increased chemical resistance (N16)

Description

You can order 1F□2 motors with increased chemical resistance.

The motor is classified according to corrosivity category according to DIN EN ISO 12944-2.

With this option, the motor has corrosion protection according to Class C4.

This option is available for 1FT2 for all frame sizes from 1FT2□03.

For more information, refer to the product information for Option N16 (<https://support.industry.siemens.com/cs/ww/en/view/58657336>).

Additional characteristics of the motor with option "Increased chemical resistance"

- 4-layer paint system (PS Premium paint system)
- Nickel-plated plug connectors
- Resistant to greases, mineral oils, aliphatic solvents (10%), caustic soda (10%)

Permissible environmental conditions when using the motor

- Indoor and outdoor installations, when installing motors outdoor, we recommend that the motors are protected using a suitable weather protection cover. Especially prevent solar radiation from increasing the motor temperature.
- Chemical plants, swimming pools, wastewater treatment plants
- Electroplating facilities and boathouses above seawater
- Industrial areas and coastal areas with moderate salt levels

Motor applications

Typical applications for these versions are for plants and systems in the foodstuff industry - as well as machine tools, for example.

The paint system for these motors is resistant to a wide range of common cleaning and disinfecting agents.

Note

The ECOLAB Deutschland GmbH company verified the resistance to cleaning and disinfecting agents based on a material resistance test. The certificate is provided in the product information for Option N16 (<https://support.industry.siemens.com/cs/ww/en/view/58657336>).


- Check the resistance of your complete system comprising motor, connections and cables before use.
-

12.2.14.3 Option: Pressure compensation (Q20)

Description

With this option, 1FT2 motors are equipped with a pressure compensation connection.

Pressure compensation is available for 1FT2 in all frame sizes with the exception of 1FT2102-□□□□□.

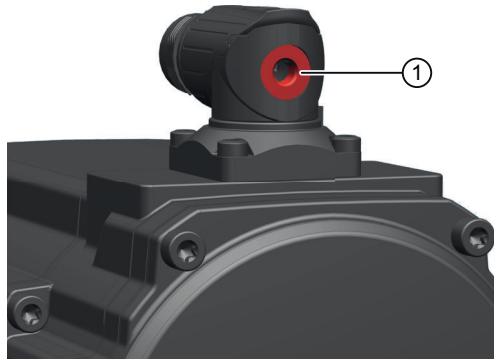

① Pressure compensation connection (closed with a plug if not used)

Figure 12-7 Connector with pressure compensation on 1FT2

The pressure compensation connector has an M5 female thread and is located in the power connector.

Purpose of the pressure compensation

When the motor cools down after operation, underpressure can build up in the motor. This may result in moisture ingress.

You can prevent such moisture ingress with an air supply provided by a connected pressure compensation tube.

NOTICE

Motor damage due to continuous overpressure

The motor must not be subjected to continuous overpressure resulting from the pressure compensation connection.

Continuous overpressure leads to motor leaks and may cause motor damage.

- Use the pressure compensation connection only for pressure compensation.


Air quality requirements for pressure compensation

Note

The connected pressure compensation tube must supply dry and dust-free air.
Use a suitable filter if necessary.

Maximum residual water content in g/m ³	0.12
Maximum residual oil content in g/m ³	0.01
Maximum residual dust in mg/m ³	0.1
Particle size for optical encoder in µm	< 3

Technical specifications of the pressure compensation connection

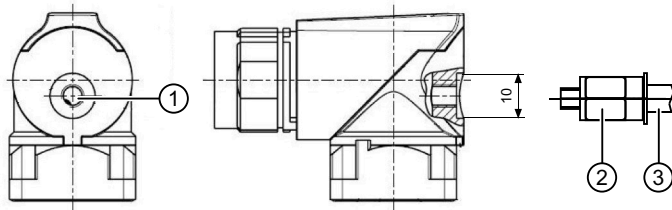

- ① M5 pressure compensation connector
- ② Connector nipple, e.g. Festo QSM-B-M5-4-20
- ③ Tube, outside diameter 4 mm, inside diameter 2.5 mm.

The connection tightening torque is 3.5 5 Nm.

When supplied, the M5 thread is sealed with a treated hexagon socket head cap screw with flat head. The screw was treated with Fluid-D. The Fluid-D remains pasty and does not harden.

Note

If necessary, you can remove the Fluid-D using a lint-free cloth and a bit of ethanol.

If there is no other way for you to seal the pressure compensation connection, e.g. using a flat gasket, you can also treat it with Fluid-D, e.g. TEROSON 410, known as FLUID-D.


12.2.14.4 Option: Metal rating plate on the motor (Q31)

The motor rating plate is usually an adhesive label made of plastic. You can use the order code Q31 to order a metal rating plate made of aluminum instead. The laser engraving stays legible even in difficult ambient conditions.

12.2.14.5 Option: Special paint finish (X0x + K23)

Description

If specific color and paint/coating data are not specified when ordering, 1F□2 motors are painted in the standard anthracite color (RAL 7016).

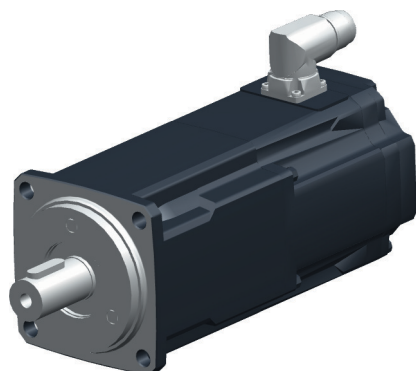

1FT2 is available in various colors.

The standard paint finishes meet the requirements for environmental conditions of climate class 3K4 according to IEC 60721-3-3 with the exception of the environmental variables "low air temperature", "condensation" and "low air pressure".








The standard paint finish fulfills corrosivity category C1 according to DIN EN ISO 12944-2

For higher corrosion protection categories, you require option "Option: Motors with increased chemical resistance (N16) (Page 400)".


Note

You can find more information in Chapter "Permissible environmental conditions for the motor (Page 375)".

Standard colors (option X0□)

Designation	3-digit article designation	Color pattern
RAL 9005, jet black, matte	X01	
RAL 9001, cream white	X02	
RAL 6011, reseda green	X03	
RAL 7032, pebble gray	X04	
RAL 5015, sky blue	X05	
RAL 1015, light ivory	X06	
RAL 9006, white aluminum	X08	

12.2 Technical data and properties of the motor

Designation	3-digit article designation	Color pattern
Special paint finish corresponding to the environmental conditions for the standard paint finish and for condensation on the outer motor surfaces, primer and paint finish in RAL 7016, anthracite grey	K23	
Special paint finish as K23, but color according to color table	K23 + X□□	

12.2.14.6 Option: Customer data on the rating plate (Y84)

Description


This option permits customer data on the rating plate of the motor. If you are ordering electronically, you can enter the text for the rating plate when you select order code Y84.

Note

The text can be up to 20 characters long. Excess characters will be cut off. This option will have no impact on the delivery time.

Order code Y84 is not displayed on the rating plate.

The customer data are printed on the rating plate and on the type labels for the product packaging.

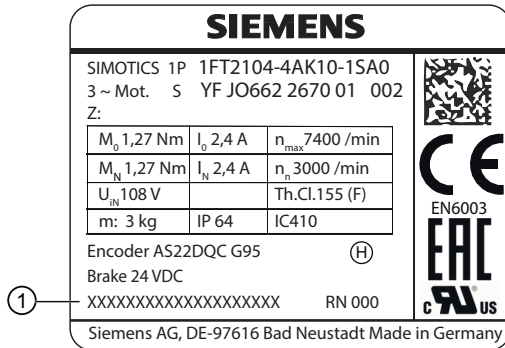


① Field for customer data (max. 20 characters, any distribution)

Figure 12-8 Rating plate 1F□□ with the field for customer data (diagram showing an example)

12.2.15 Technical data and characteristics of the 1FK2 connected to 1 AC 230 V, 3 AC 240 V


12.2.15.1 1FK2102-0AG connected to 1 AC 230 V / 3 AC 240 V

1FK2102-0AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.16
Stall current	I_0	A	0.75
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	0.56
Maximum current	I_{max}	A	3.1
Thermal time constant	T_{th}	min	14
Moment of inertia	J_{mot}	kgcm ²	0.0245
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.0285
Weight	m_{mot}	kg	0.47
Weight (with brake)	$m_{mot br}$	kg	0.73
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.16
Rated current	I_{rated}	A	0.75
Rated power	P_{rated}	kW	0.05

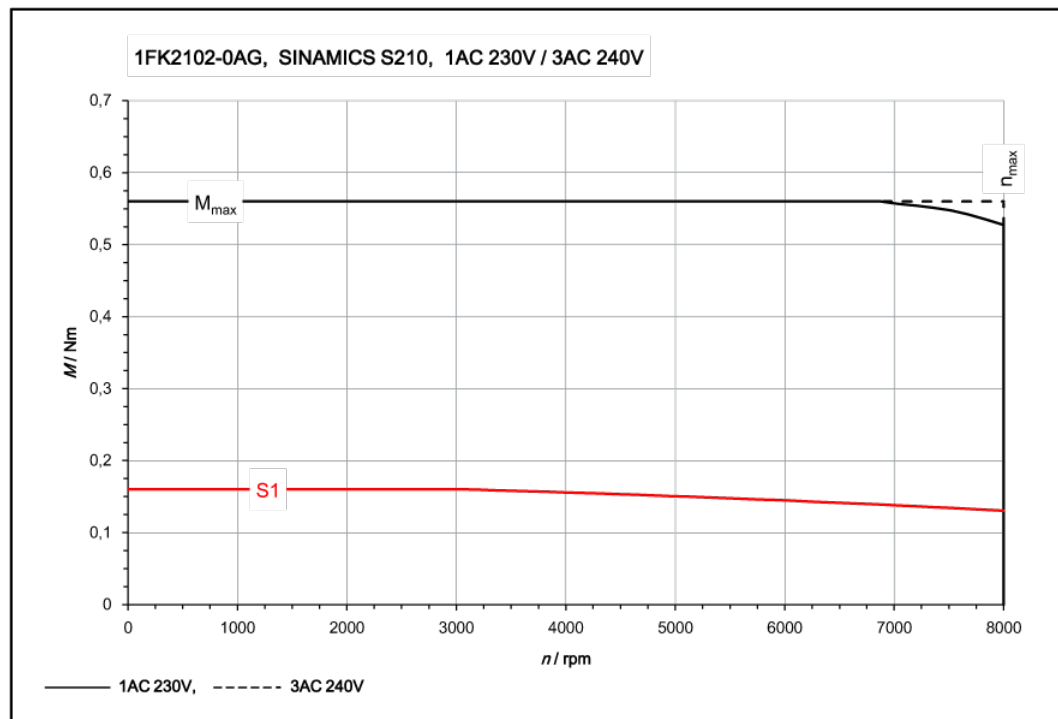


12.2.15.2 1FK2102-1AG connected to 1 AC 230 V / 3 AC 240 V

1FK2102-1AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.32
Stall current	I_0	A	0.76
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.11
Maximum current	I_{max}	A	2.95
Thermal time constant	T_{th}	min	16
Moment of inertia	J_{mot}	kgcm ²	0.036
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.04
Weight	m_{mot}	kg	0.6
Weight (with brake)	$m_{mot br}$	kg	0.86
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.32
Rated current	I_{rated}	A	0.76
Rated power	P_{rated}	kW	0.1

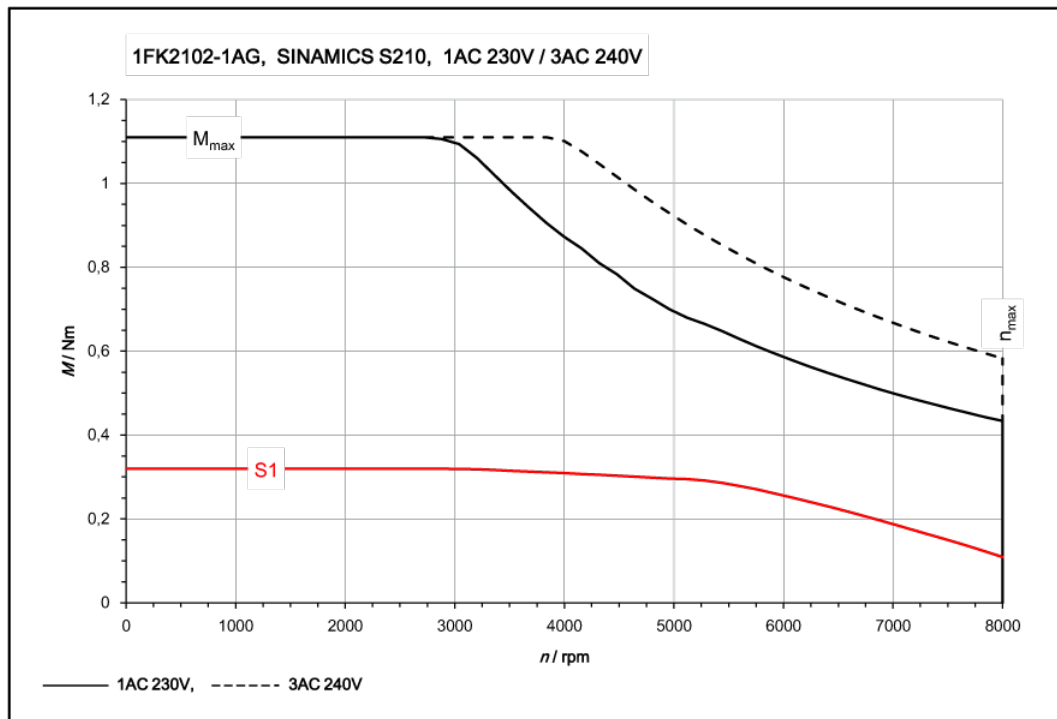


12.2.15.3 1FK2103-2AG connected to 1 AC 230 V / 3 AC 240 V

1FK2103-2AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.36
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.95
Maximum current	I_{max}	A	4.8
Thermal time constant	T_{th}	min	17
Moment of inertia	J_{mot}	kgcm ²	0.093
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.112
Weight	m_{mot}	kg	1.17
Weight (with brake)	$m_{mot br}$	kg	1.54
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.64
Rated current	I_{rated}	A	1.36
Rated power	P_{rated}	kW	0.2

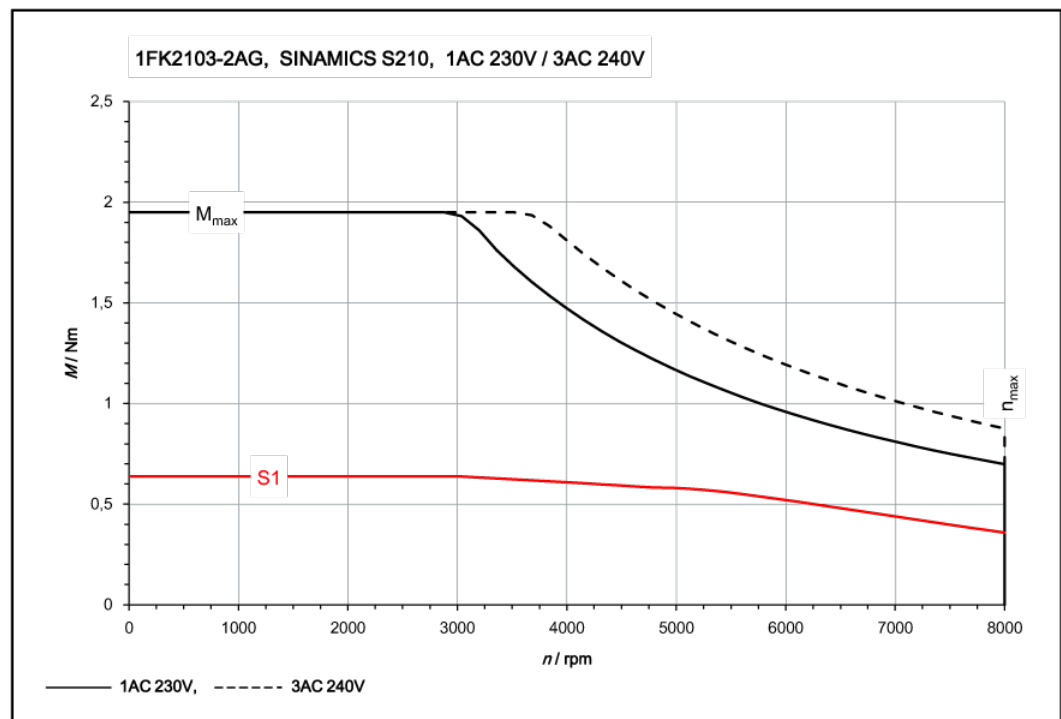


12.2.15.4 1FK2103-4AG connected to 1 AC 230 V / 3 AC 240 V

1FK2103-4AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	7300
Maximum torque	M_{max}	Nm	4.05
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	min	21
Moment of inertia	J_{mot}	kgcm ²	0.139
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.158
Weight	m_{mot}	kg	1.64
Weight (with brake)	$m_{mot br}$	kg	1.98
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.4
Rated power	P_{rated}	kW	0.4

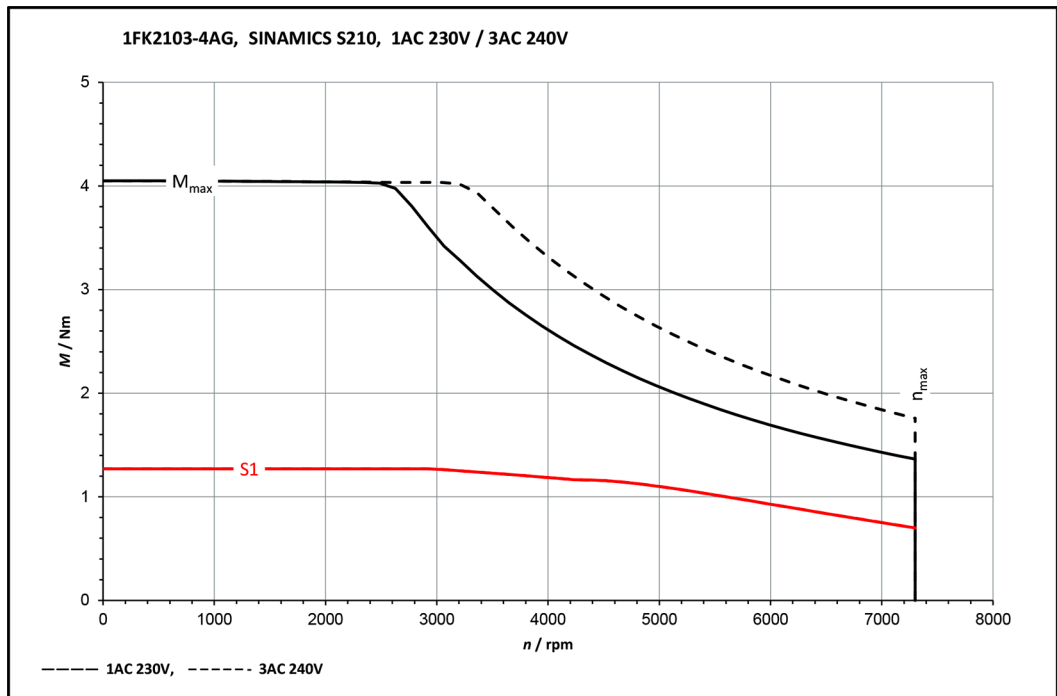


12.2.15.5 1FK2104-4AF connected to 1 AC 230 V / 3 AC 240 V

1FK2104-4AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.19
Maximum permissible speed	n_{max}	r/min	3600
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	1.19
Rated power	P_{rated}	kW	0.2

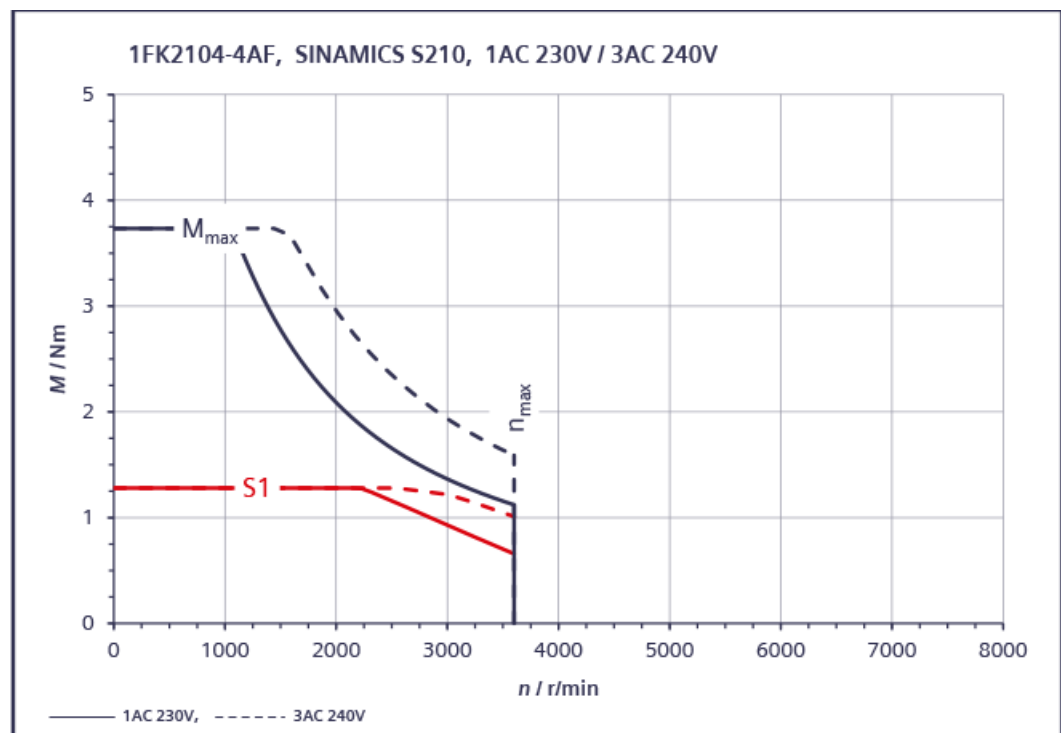


12.2.15.6 1FK2104-4AK connected to 230 V 1 AC / 240 V 3 AC

1FK2104-4AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	3.85
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.4
Rated power	P_{rated}	kW	0.4

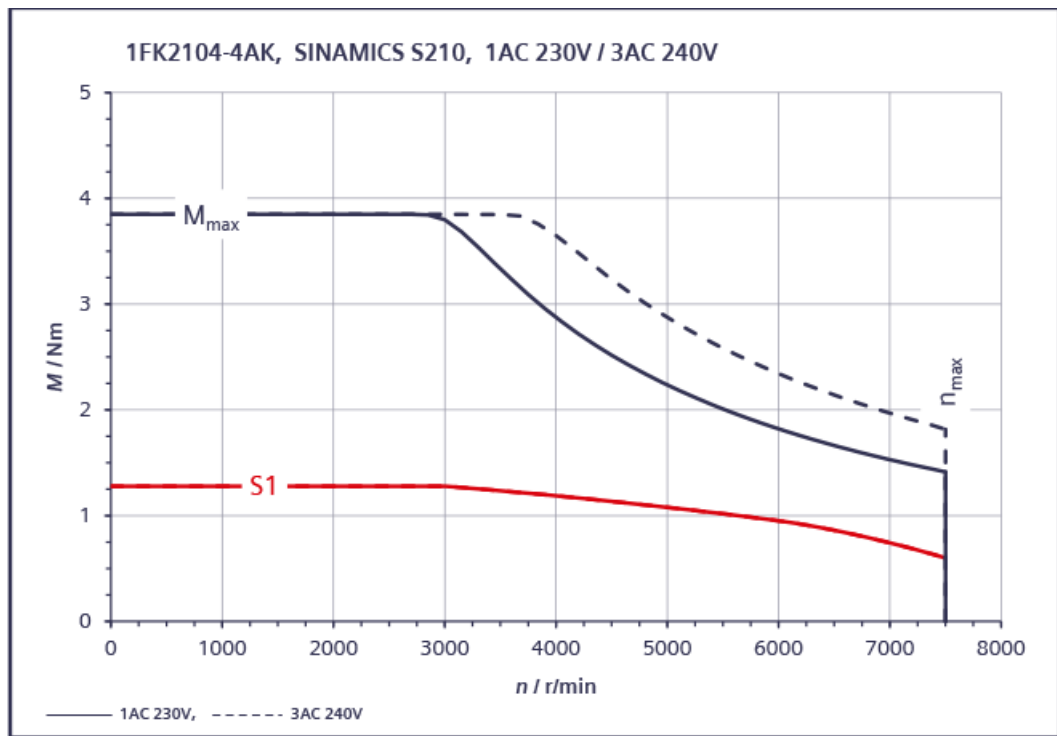


12.2.15.7 1FK2104-5AF connected to 1 AC 230 V / 3 AC 240 V

1FK2104-5AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.1
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	7.5
Maximum current	I_{max}	A	7.6
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.1
Rated power	P_{rated}	kW	0.375

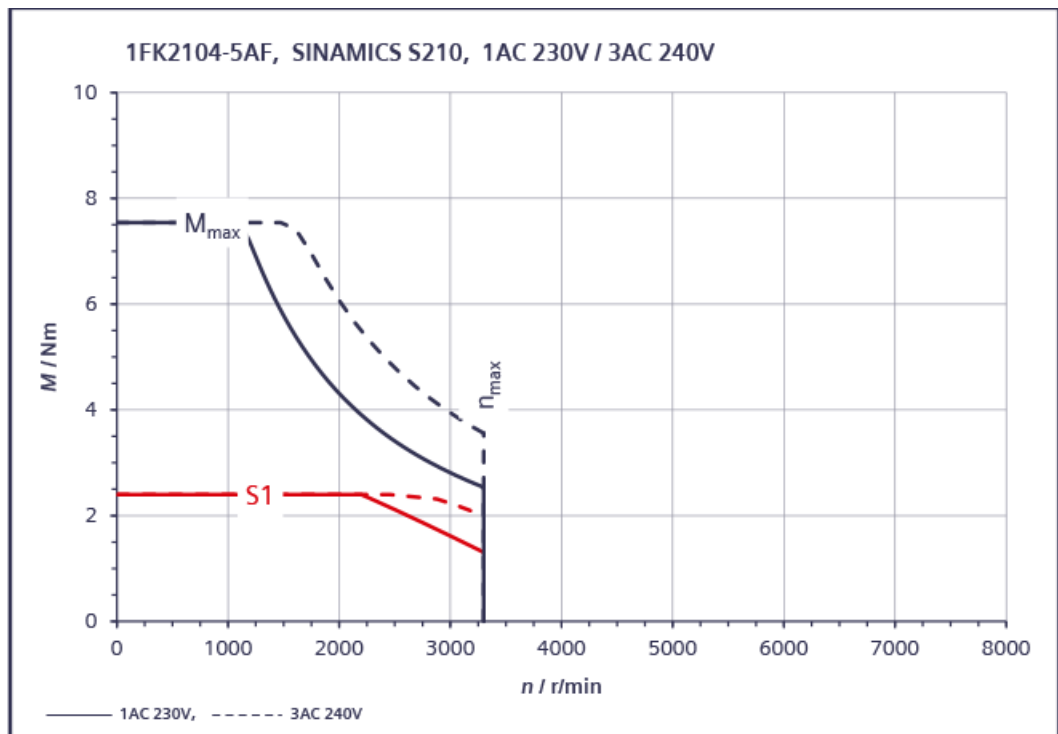


12.2.15.8 1FK2104-5AK connected to 1 AC 230 V / 3 AC 240 V

1FK2104-5AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	7100
Maximum torque	M_{max}	Nm	7.6
Maximum current	I_{max}	A	16
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	4.4
Rated power	P_{rated}	kW	0.75

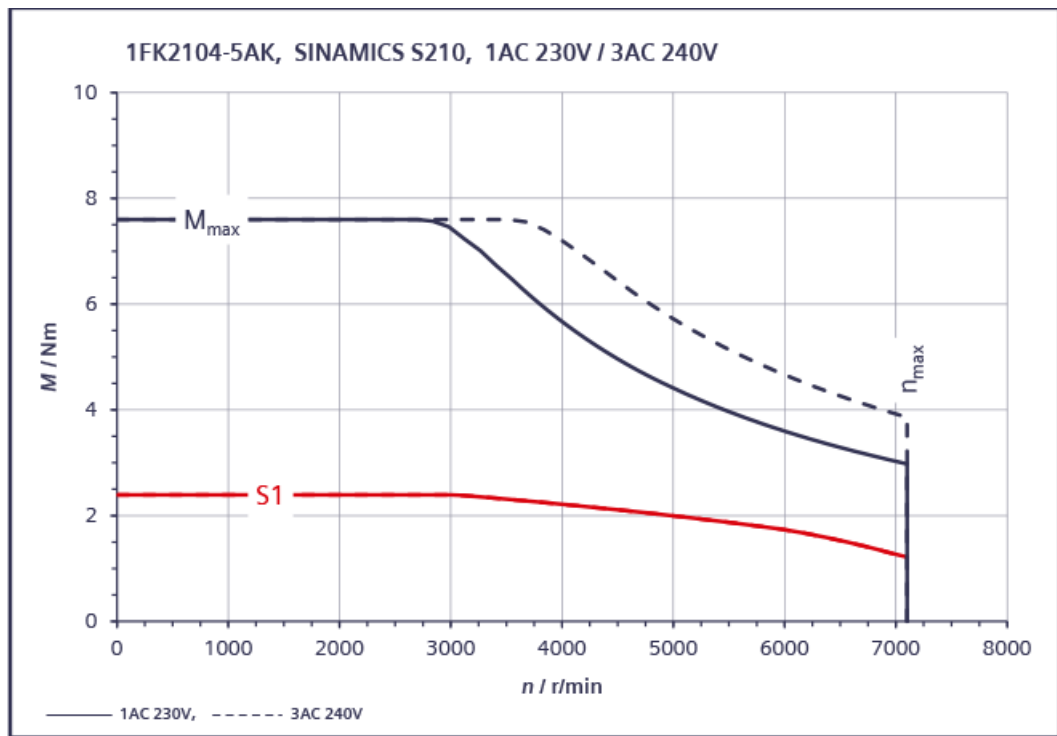


12.2.15.9 1FK2104-6AF connected to 1 AC 230 V / 3 AC 240 V

1FK2104-6AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	3600
Maximum torque	M_{max}	Nm	10
Maximum current	I_{max}	A	10.9
Thermal time constant	T_{th}	min	38
Rotor moment of inertia	J_{mot}	kgcm ²	0.76
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.84
Weight	m_{mot}	kg	3.4
Weight (with brake)	$m_{mot br}$	kg	4.25
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	0.5

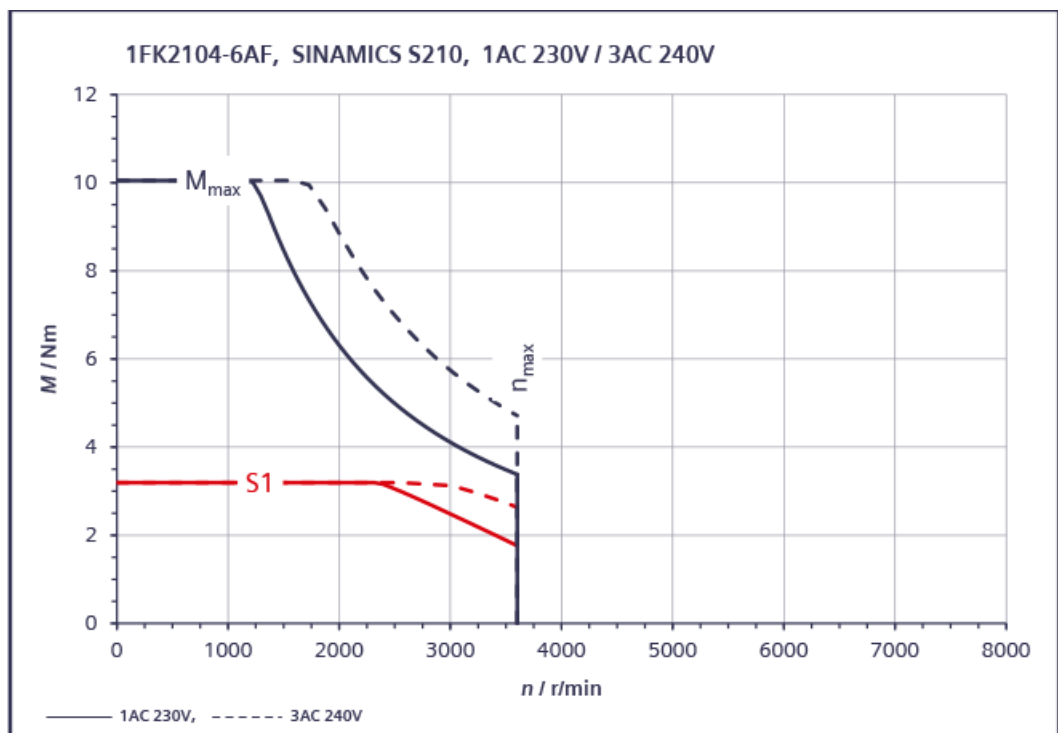


12.2.15.10 1FK2105-4AF connected to 3 AC 240 V

1FK2105-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	4.65
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	18
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	5
Rated current	I_{rated}	A	4.65
Rated power	P_{rated}	kW	0.79

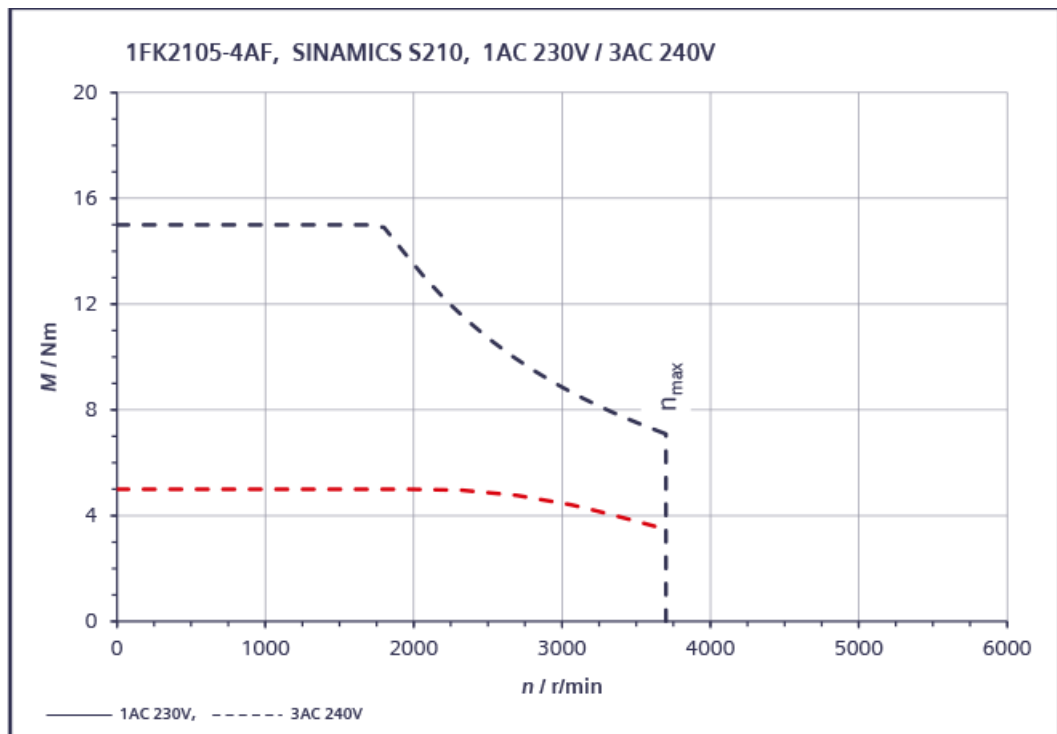


12.2.15.11 1FK2105-6AF connected to 3 AC 240 V

1FK2105-6AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	8
Stall current	I_0	A	6.7
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	24
Maximum current	I_{max}	A	24
Thermal time constant	T_{th}	min	40
Rotor moment of inertia	J_{mot}	kgcm ²	2.65
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	3.5
Weight	m_{mot}	kg	7.7
Weight (with brake)	$m_{mot br}$	kg	8.7
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8
Rated current	I_{rated}	A	6.7
Rated power	P_{rated}	kW	1.26

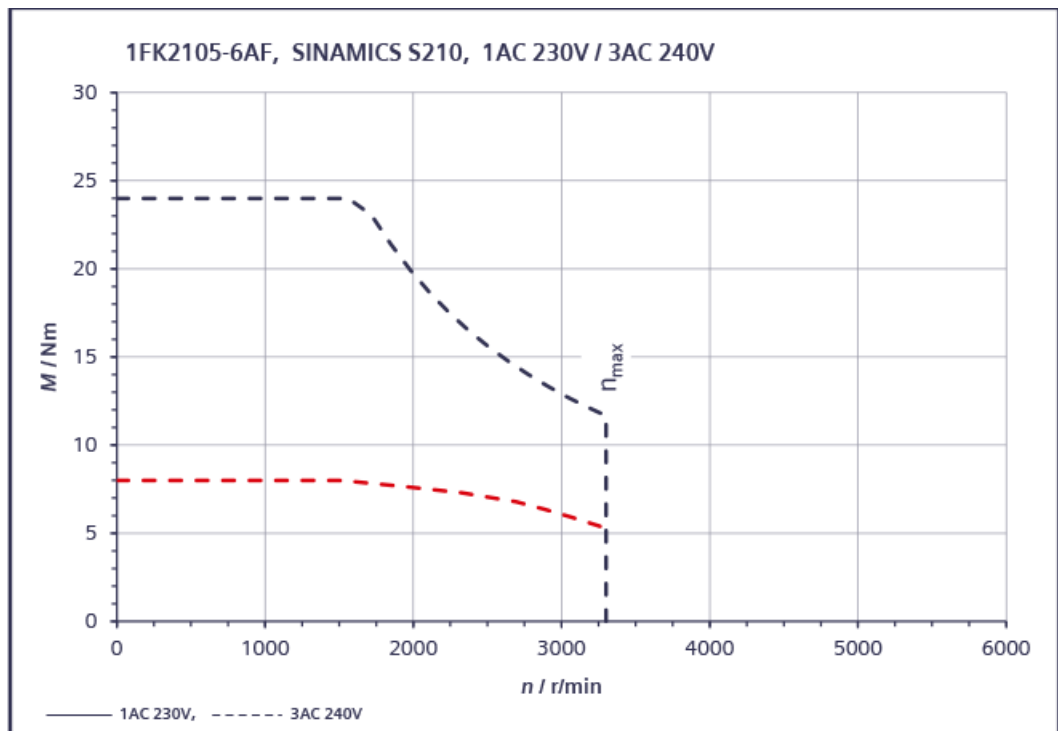


12.2.15.12 1FK2106-3AF connected to 240 V 3 AC

1FK2106-3AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	9.2
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	26
Maximum current	I_{max}	A	43
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	4.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6.3
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8.3
Rated current	I_{rated}	A	8.7
Rated power	P_{rated}	kW	1.3

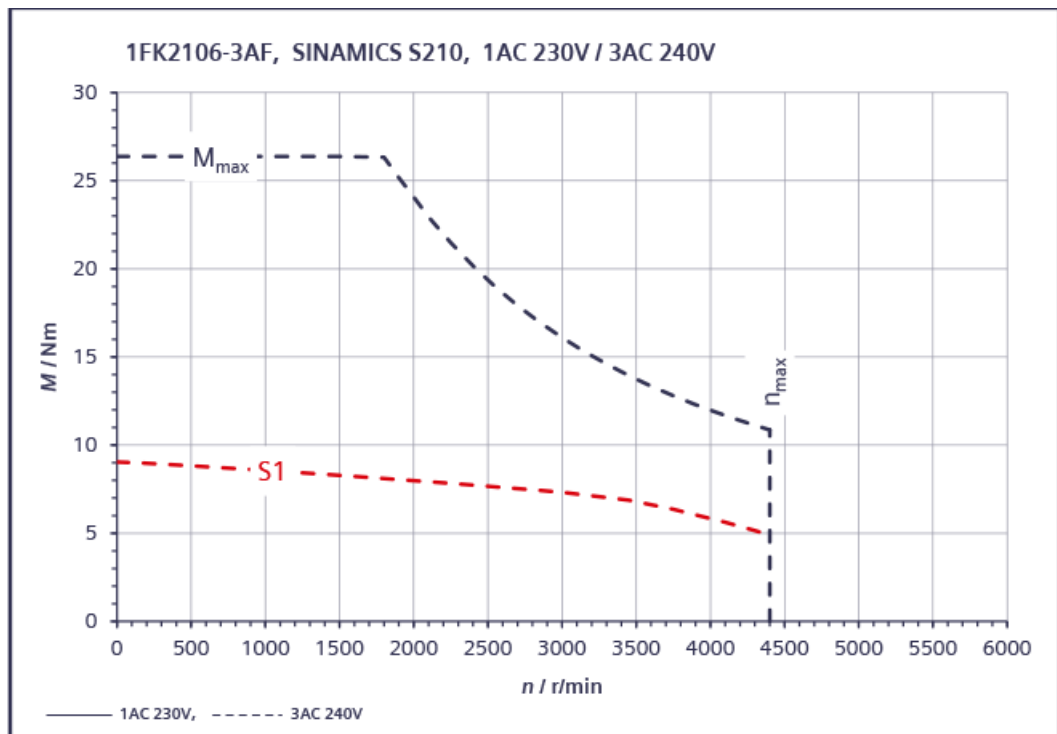


12.2.15.13 1FK2106-4AF connected to 240 V 3 AC

1FK2106-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	10.7
Maximum permissible speed	n_{max}	r/min	3950
Maximum torque	M_{max}	Nm	33
Maximum current	I_{max}	A	42
Thermal time constant	T_{th}	min	34
Rotor moment of inertia	J_{mot}	kgcm ²	6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	7.6
Weight	m_{mot}	kg	9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	10.5
Rated current	I_{rated}	A	9.6
Rated power	P_{rated}	kW	1.64

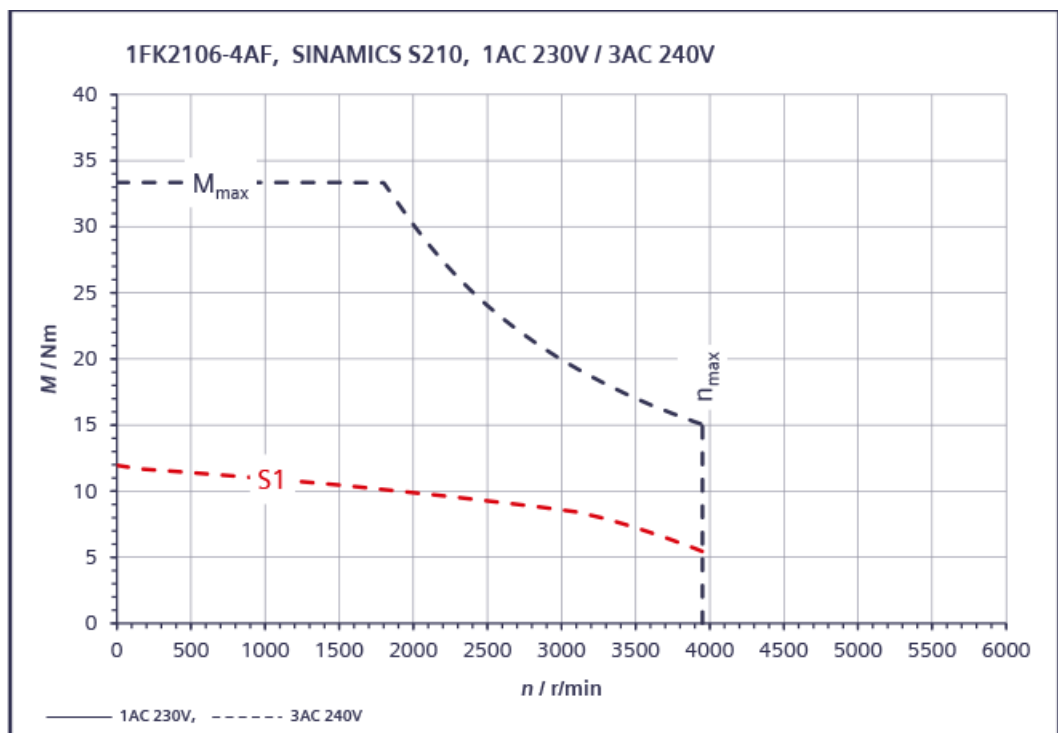


12.2.15.14 1FK2106-6AF connected to 240 V 3 AC

1FK2106-6AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	16
Stall current	I_0	A	14.3
Maximum permissible speed	n_{max}	r/min	3850
Maximum torque	M_{max}	Nm	45.5
Maximum current	I_{max}	A	49
Thermal time constant	T_{th}	min	50
Rotor moment of inertia	J_{mot}	kgcm ²	8.7
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	10.4
Weight	m_{mot}	kg	11.8
Weight (with brake)	$m_{mot br}$	kg	13.4
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	13.8
Rated current	I_{rated}	A	12.5
Rated power	P_{rated}	kW	2.15

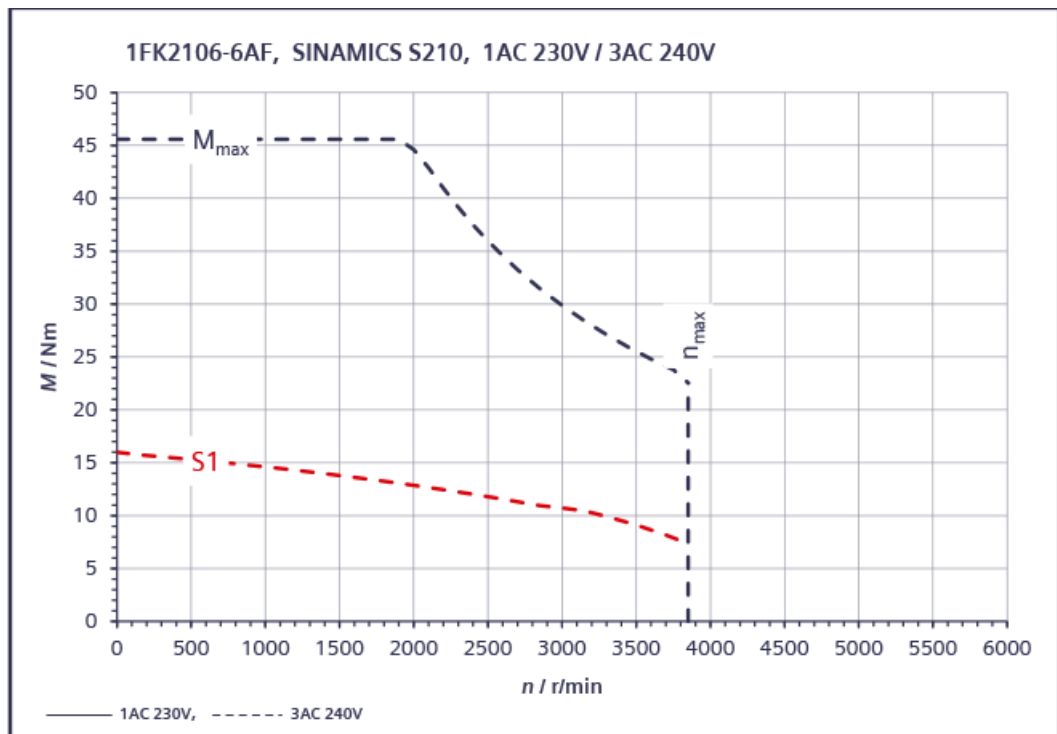


12.2.15.15 1FK2203-2AG connected to 1 AC 230 V / 3 AC 240 V

1FK2203-2AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.38
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.85
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.2
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.22
Weight	m_{mot}	kg	1.15
Weight (with brake)	$m_{mot br}$	kg	1.52
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.64
Rated current	I_{rated}	A	1.38
Rated power	P_{rated}	kW	0.2

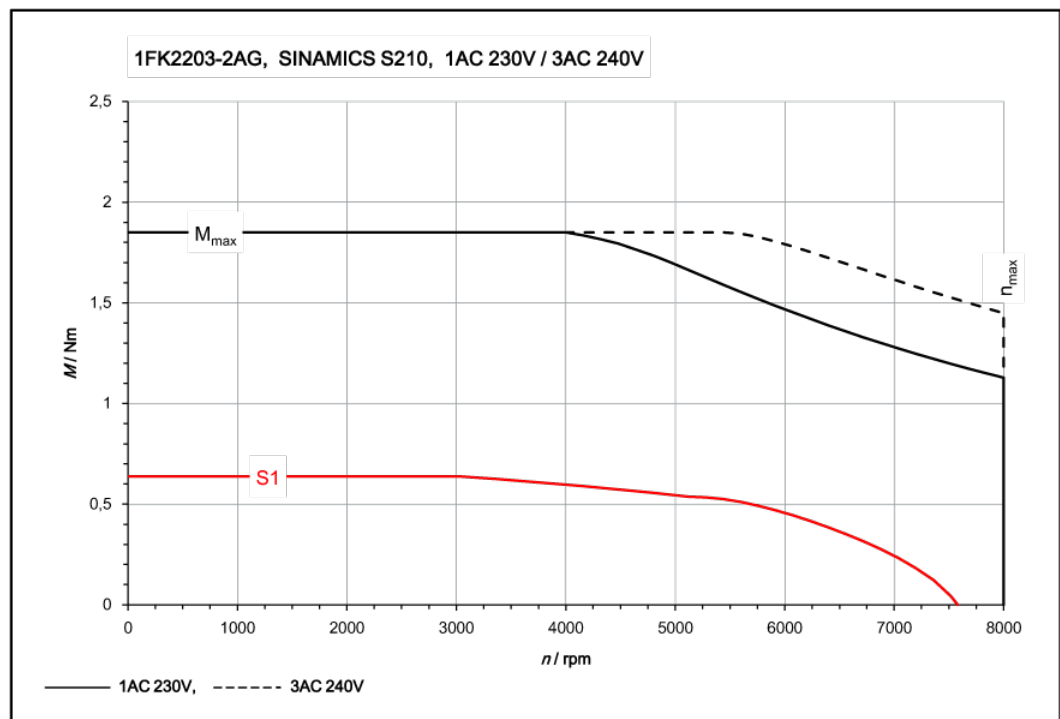


12.2.15.16 1FK2203-4AG connected to 1 AC 230 V / 3 AC 240 V

1FK2203-4AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.52
Maximum permissible speed	n_{max}	r/min	7800
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	7.8
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.37
Weight	m_{mot}	kg	1.48
Weight (with brake)	$m_{mot br}$	kg	1.96
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.52
Rated power	P_{rated}	kW	0.4

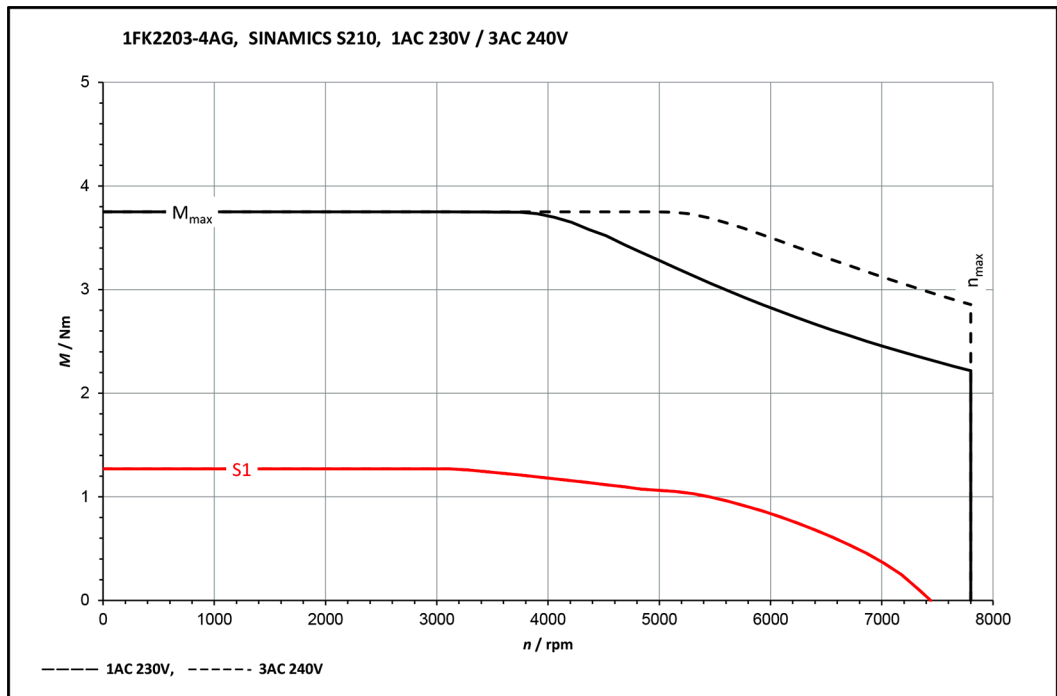


12.2.15.17 1FK2204-5AF connected to 1 AC 230 V / 3 AC 240 V

1FK2204-5AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.25
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.25
Rated power	P_{rated}	kW	0.375

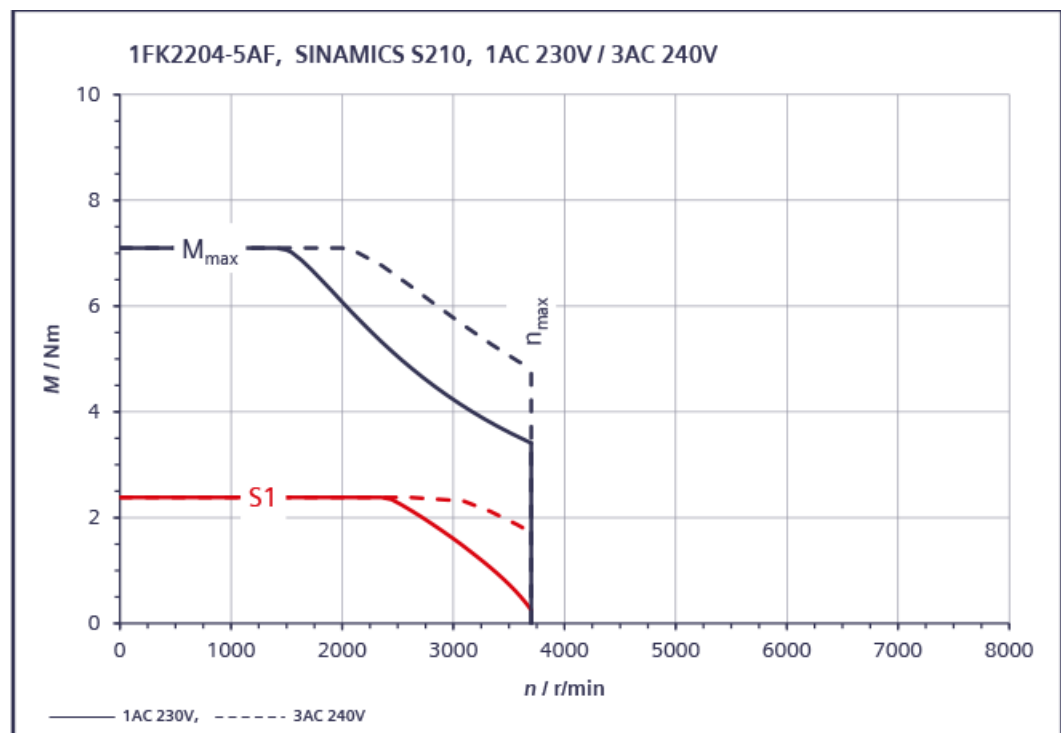


12.2.15.18 1FK2204-5AK connected to 1 AC 230 V / 3 AC 240 V

1FK2204-5AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	14.2
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	4.4
Rated power	P_{rated}	kW	0.75

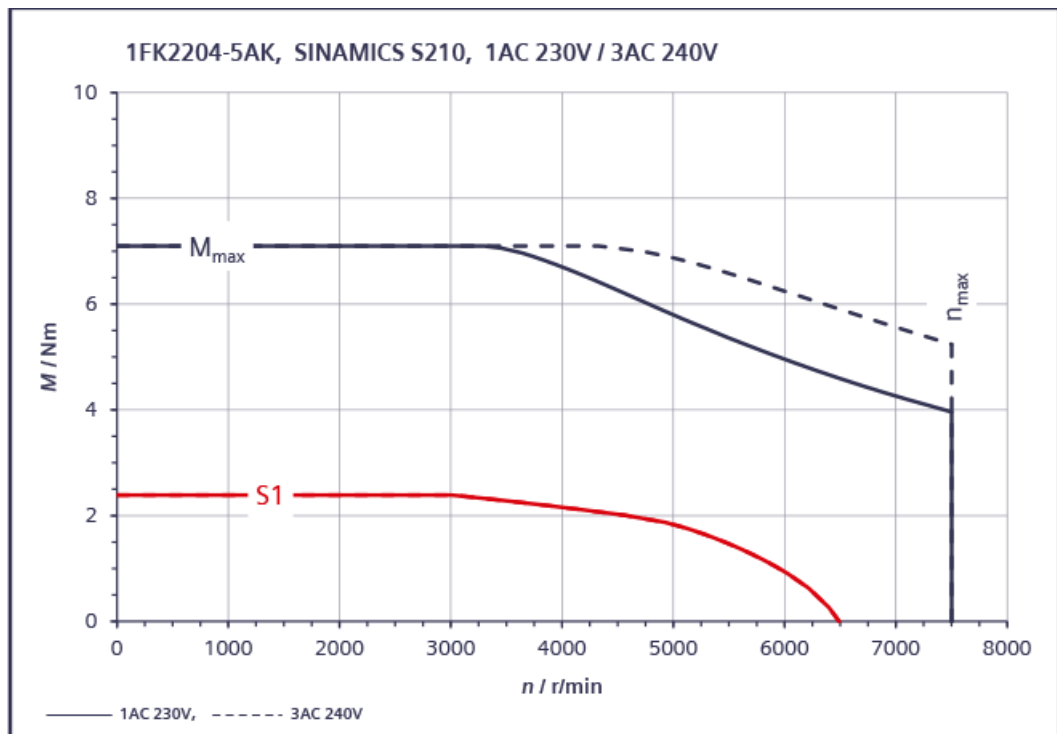


12.2.15.19 1FK2204-6AF connected to 1 AC 230 V / 3 AC 240 V

1FK2204-6AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	9.5
Maximum current	I_{max}	A	9.9
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	1.61
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.69
Weight	m_{mot}	kg	3.5
Weight (with brake)	$m_{mot br}$	kg	4.35
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	0.5

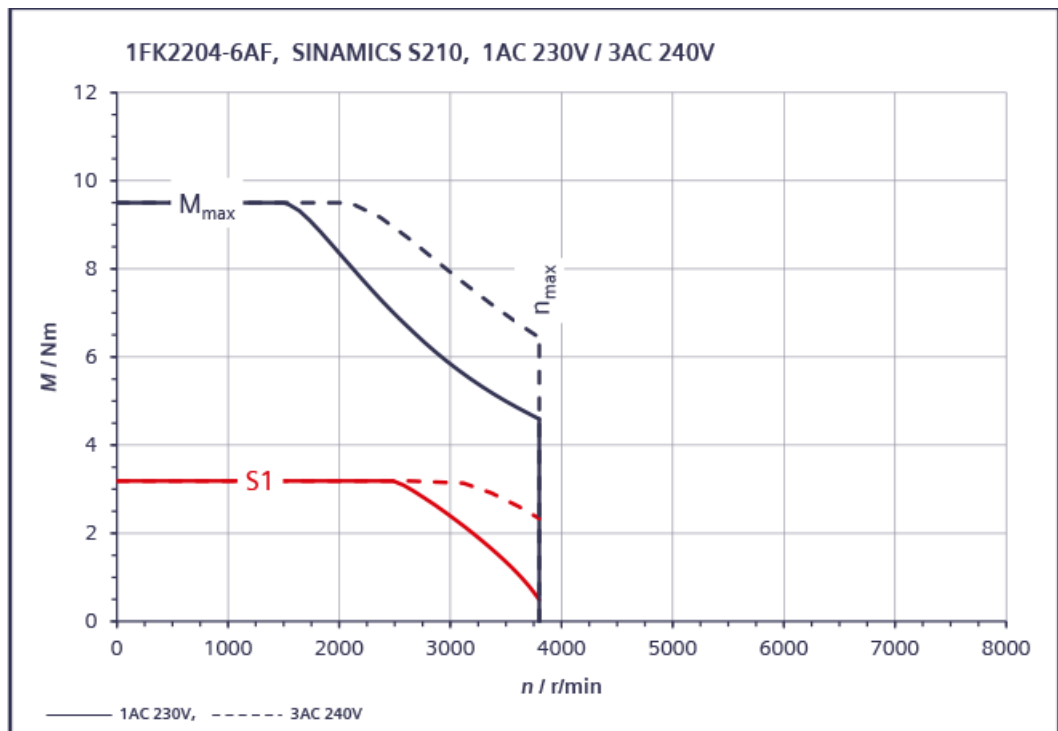


12.2.15.20 1FK2205-2AF connected to 1 AC 230 V / 3 AC 240 V

1FK2205-2AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	2.9
Maximum permissible speed	n_{max}	r/min	3200
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	9.5
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.4
Rated current	I_{rated}	A	2.8
Rated power	P_{rated}	kW	0.53

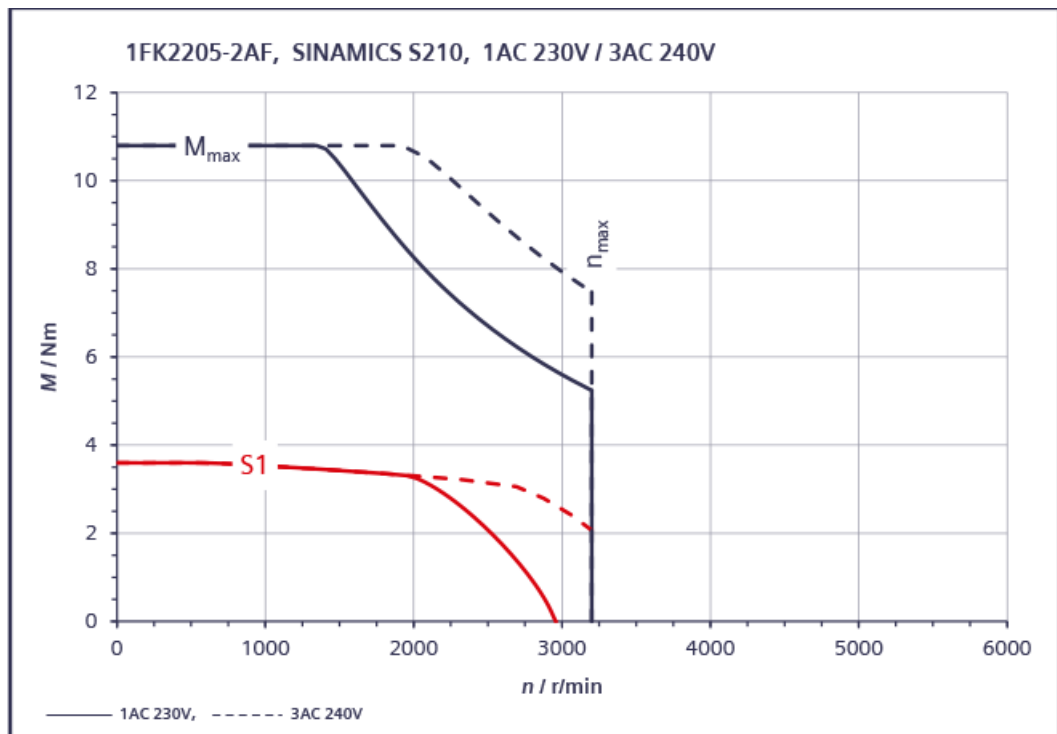


12.2.15.21 1FK2205-4AF connected to 3 AC 240 V

1FK2205-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6
Stall current	I_0	A	4.7
Maximum permissible speed	n_{max}	r/min	3100
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	15.1
Thermal time constant	T_{th}	min	31
Rotor moment of inertia	J_{mot}	kgcm ²	5.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6
Weight	m_{mot}	kg	5.2
Weight (with brake)	$m_{mot br}$	kg	6.2
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	5.5
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	0.86

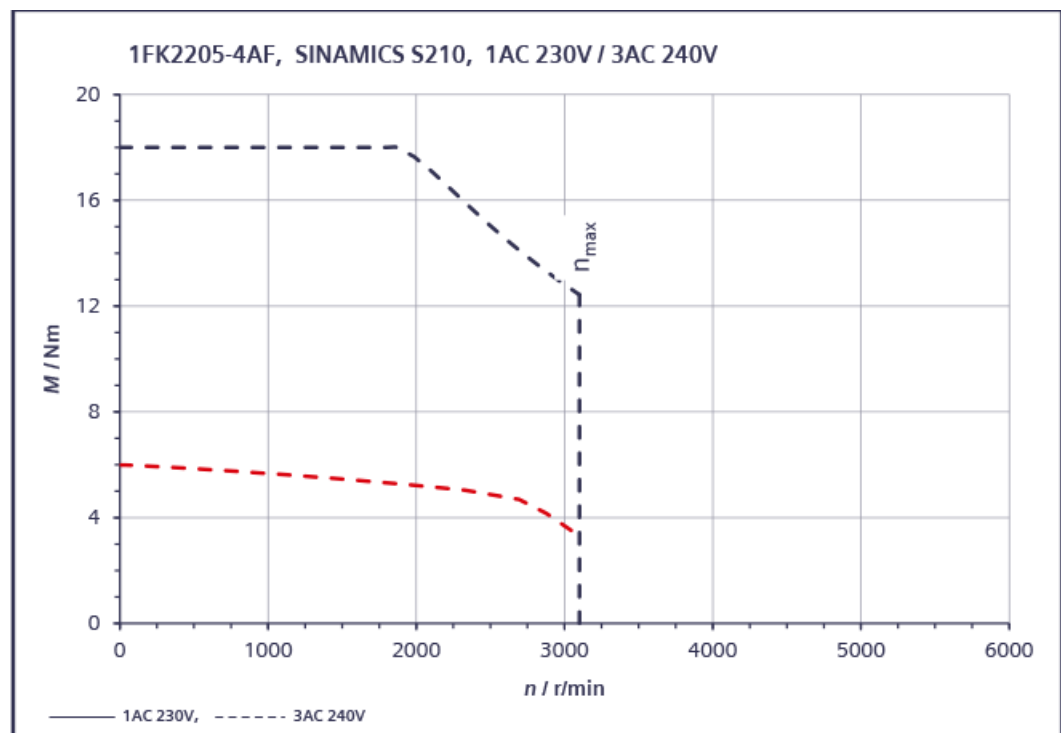

12.2.15.22 1FK2206-2AF connected to 240 V 3 AC

1FK2206-2AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	5
Maximum permissible speed	n_{max}	r/min	3400
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	17.8
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	6.1
Rated current	I_{rated}	A	4.8
Rated power	P_{rated}	kW	0.97

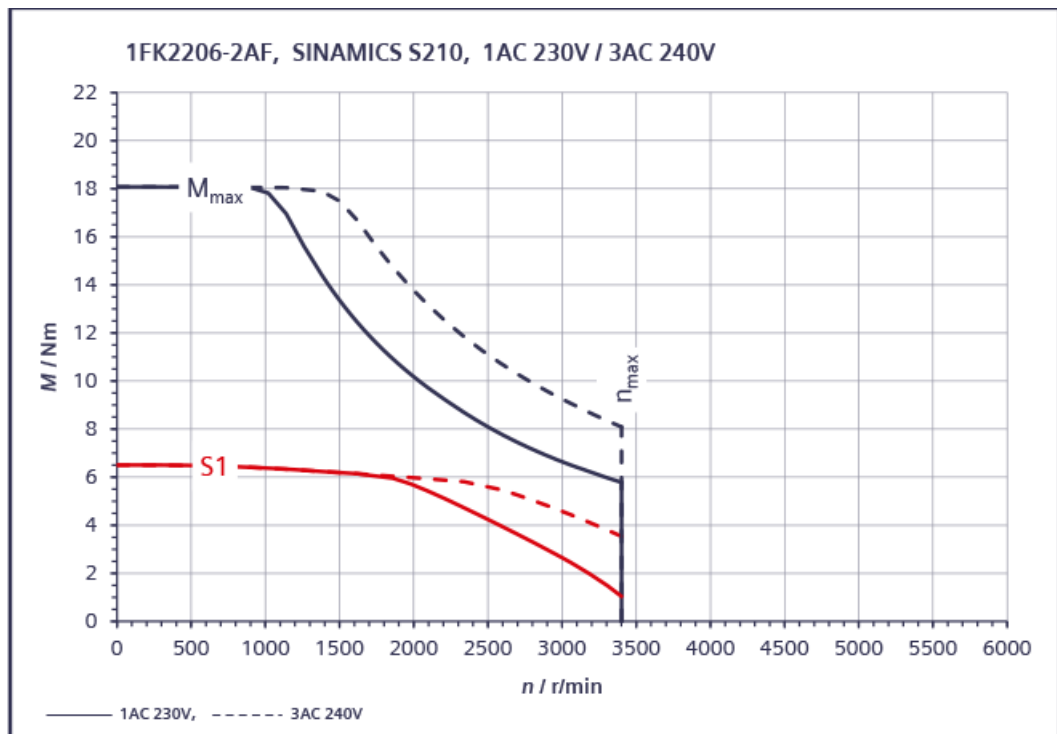

12.2.15.23 1FK2206-4AF connected to 240 V 3 AC

1FK2206-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	7.9
Maximum permissible speed	n_{max}	r/min	2900
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	10.9
Rated current	I_{rated}	A	7.3
Rated power	P_{rated}	kW	1.72


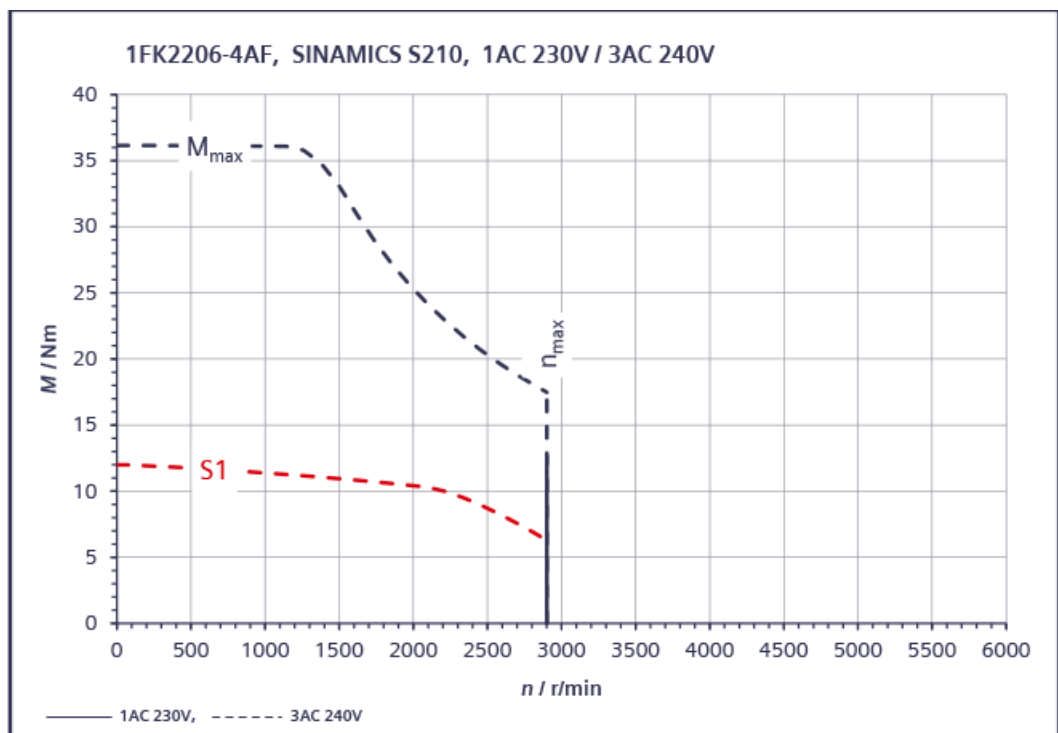


Figure 12-9 1FK2206-4AF_230V


12.2.15.24 1FK2208-3AC connected to 3 AC 240 V

1FK2208-3AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	8.4
Maximum permissible speed	n_{max}	r/min	2050
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.6
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	16.6
Rated current	I_{rated}	A	7.9
Rated power	P_{rated}	kW	1.74

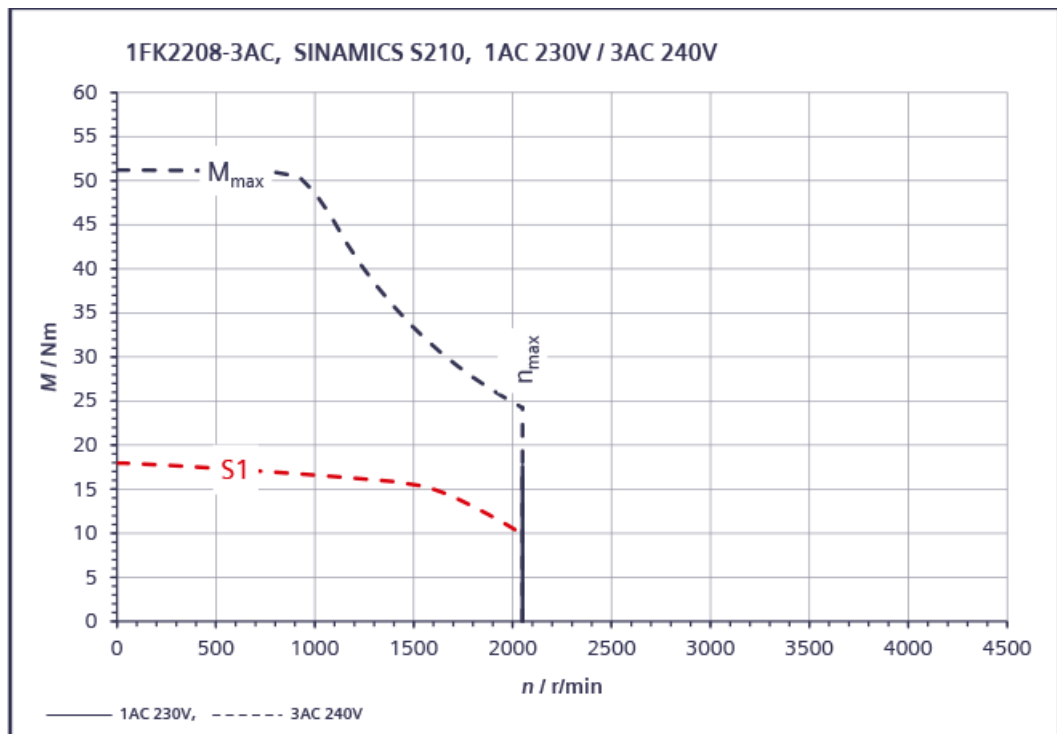


12.2.15.25 1FK2208-4AC connected to 3 AC 240 V

1FK2208-4AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	11.7
Maximum permissible speed	n_{max}	r/min	2300
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	20
Rated current	I_{rated}	A	10.9
Rated power	P_{rated}	kW	2.15

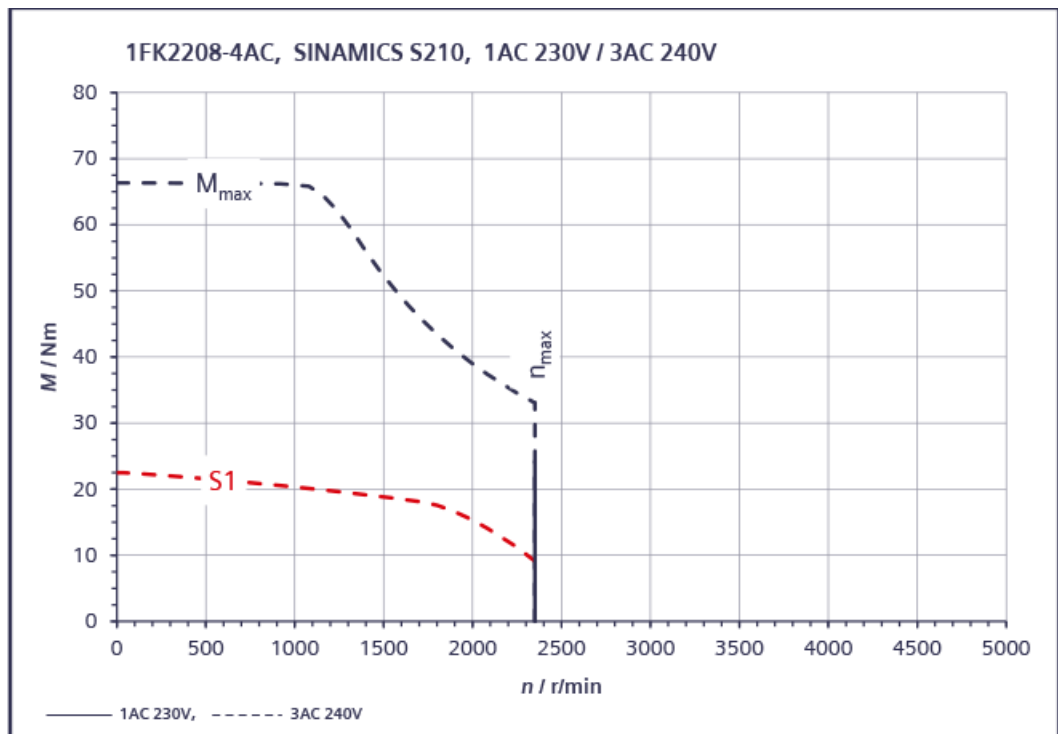


12.2.15.26 1FK2208-5AC connected to 3 AC 240 V

1FK2208-5AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	14.6
Maximum permissible speed	n_{max}	r/min	2350
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	51.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	23.5
Rated current	I_{rated}	A	13.2
Rated power	P_{rated}	kW	2.5

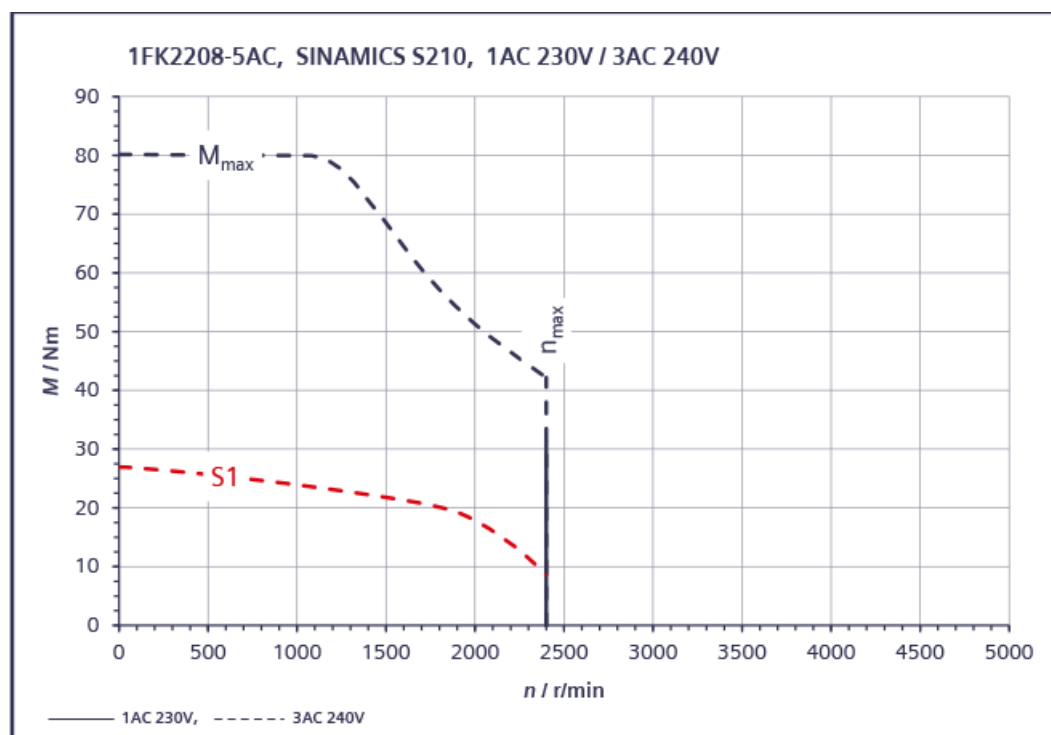


12.2.15.27 1FK2210-3AB connected to 240 V 3 AC

1FK2210-3AB	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	8.5
Maximum permissible speed	n_{max}	r/min	1250
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	31.5
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	30
Rated current	I_{rated}	A	8.6
Rated power	P_{rated}	kW	2.5

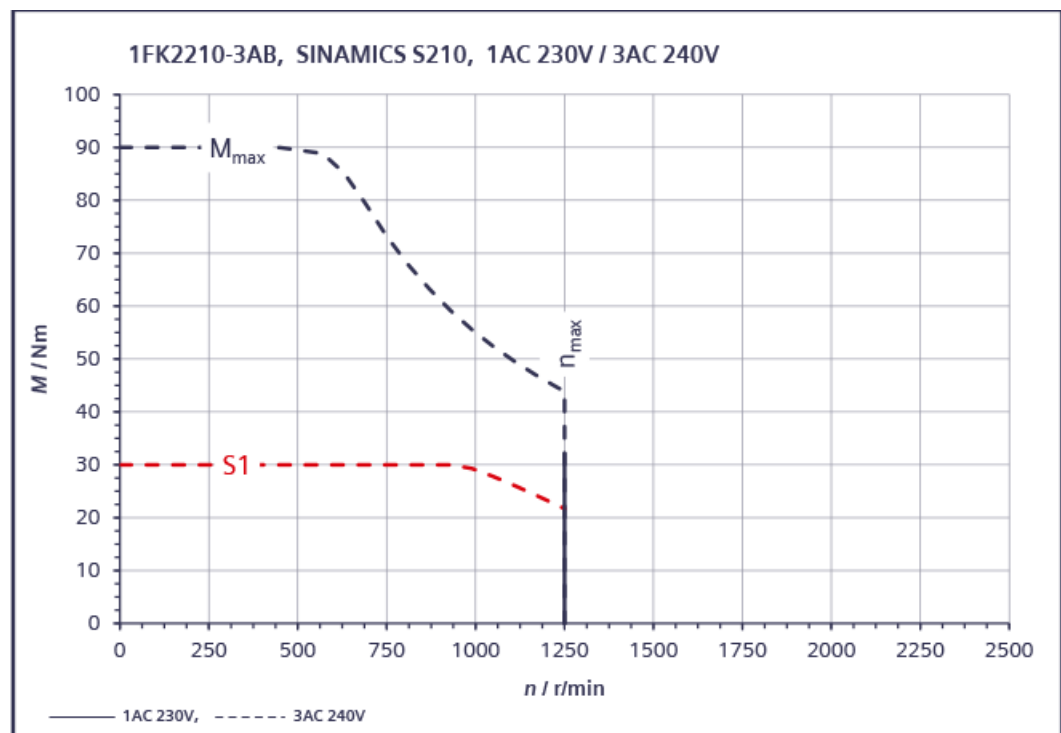


12.2.15.28 1FK2210-3AC connected to 240 V 3 AC

1FK2210-3AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	2200
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	30
Rated current	I_{rated}	A	15.5
Rated power	P_{rated}	kW	3.2

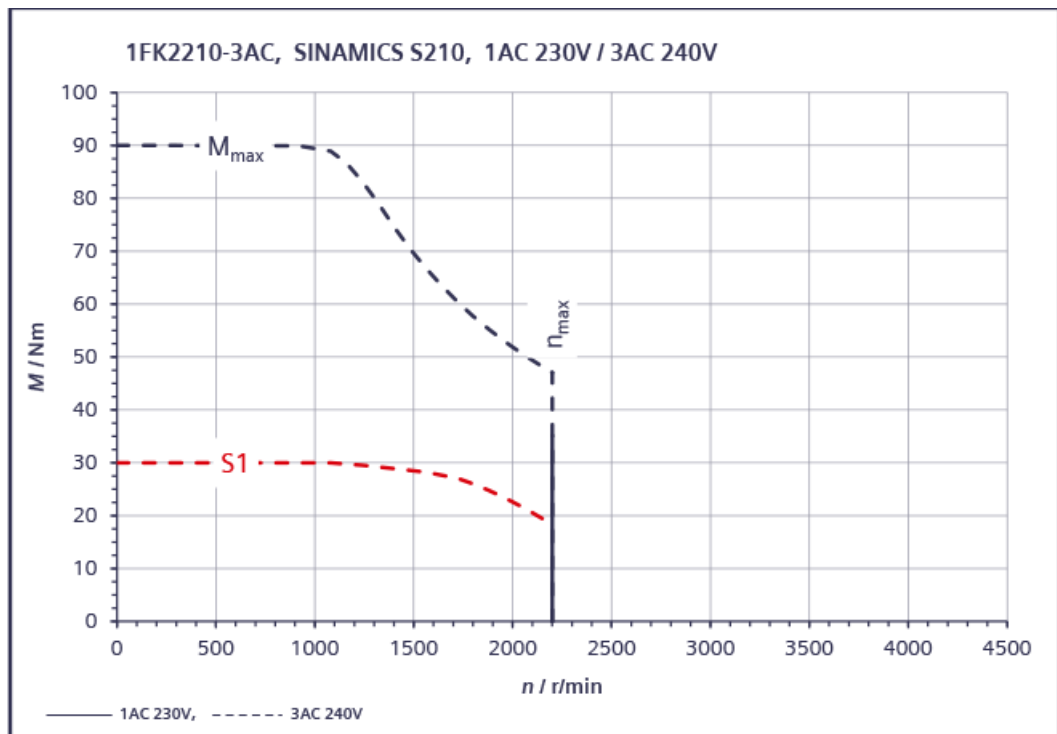


12.2.15.29 1FK2210-4AB connected to 240 V 3 AC

1FK2210-4AB	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	11.8
Maximum permissible speed	n_{max}	r/min	1250
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	39
Rated current	I_{rated}	A	11.6
Rated power	P_{rated}	kW	3.05

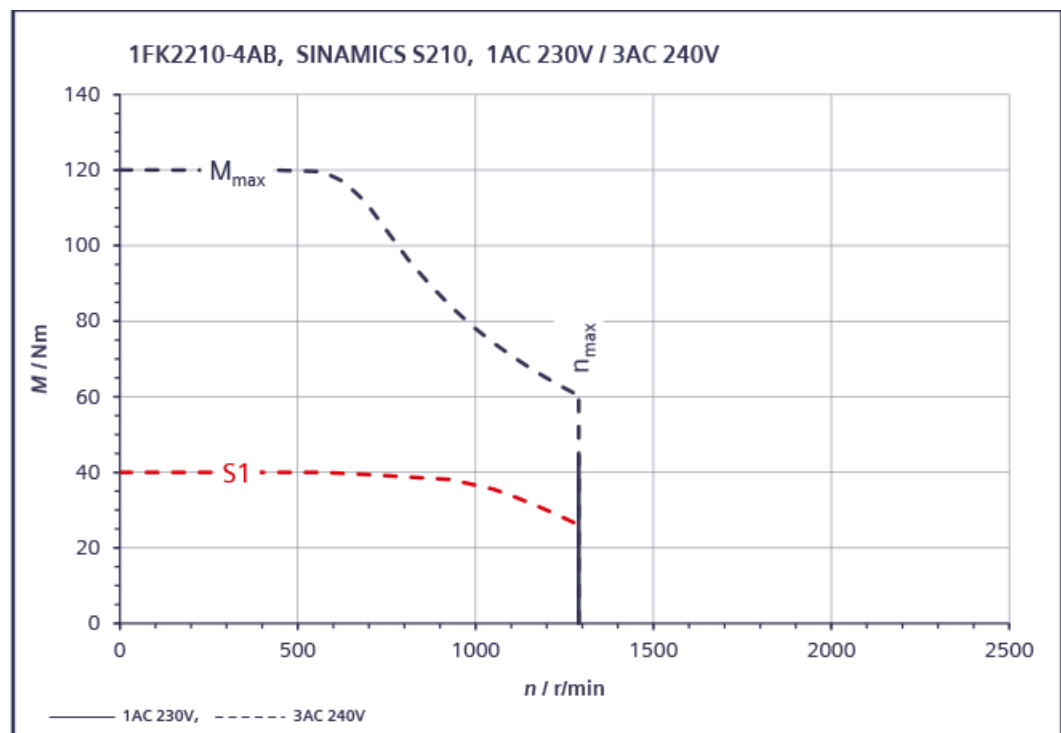

12.2.15.30 1FK2210-4AC connected to 240 V 3 AC


1FK2210-4AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	1650
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	37
Rated current	I_{rated}	A	14.3
Rated power	P_{rated}	kW	3.9

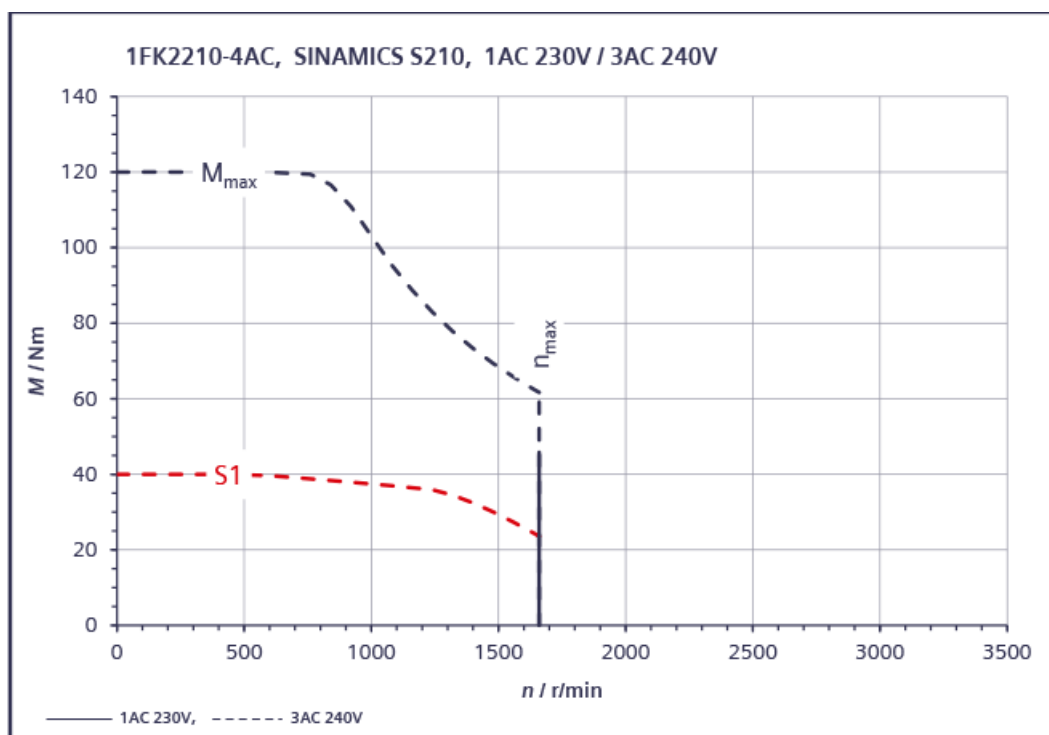

12.2.16 Technical data and characteristics of the 1FK2 connected to 3 AC 400 V, 3 AC 480 V


12.2.16.1 1FK2103-2AH connected to 3 AC 400 V / 3 AC 480 V

1FK2103-2AH	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.06
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.95
Maximum current	I_{max}	A	3.95
Thermal time constant	T_{th}	min	17
Rotor moment of inertia	J_{mot}	kgcm ²	0.093
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.112
Weight	m_{mot}	kg	1.18
Weight (with brake)	$m_{mot br}$	kg	1.55
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	0.59
Rated current	I_{rated}	A	1.05
Rated power	P_{rated}	kW	0.28

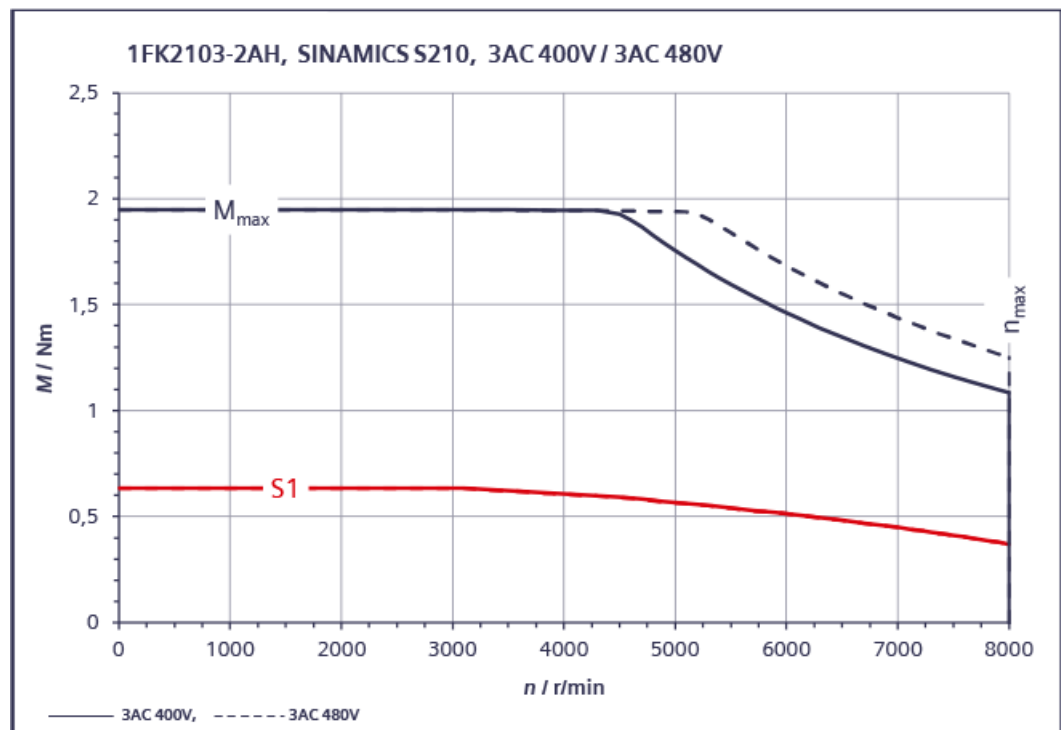


12.2.16.2 1FK2103-4AH connected to 3 AC 400V / 3 AC 480 V

1FK2103-4AH	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.87
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	4.05
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.139
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.158
Weight	m_{mot}	kg	1.65
Weight (with brake)	$m_{mot br}$	kg	1.99
Rated data for S210 connected to 3 AC 230 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	1.01
Rated current	I_{rated}	A	1.56
Rated power	P_{rated}	kW	0.48

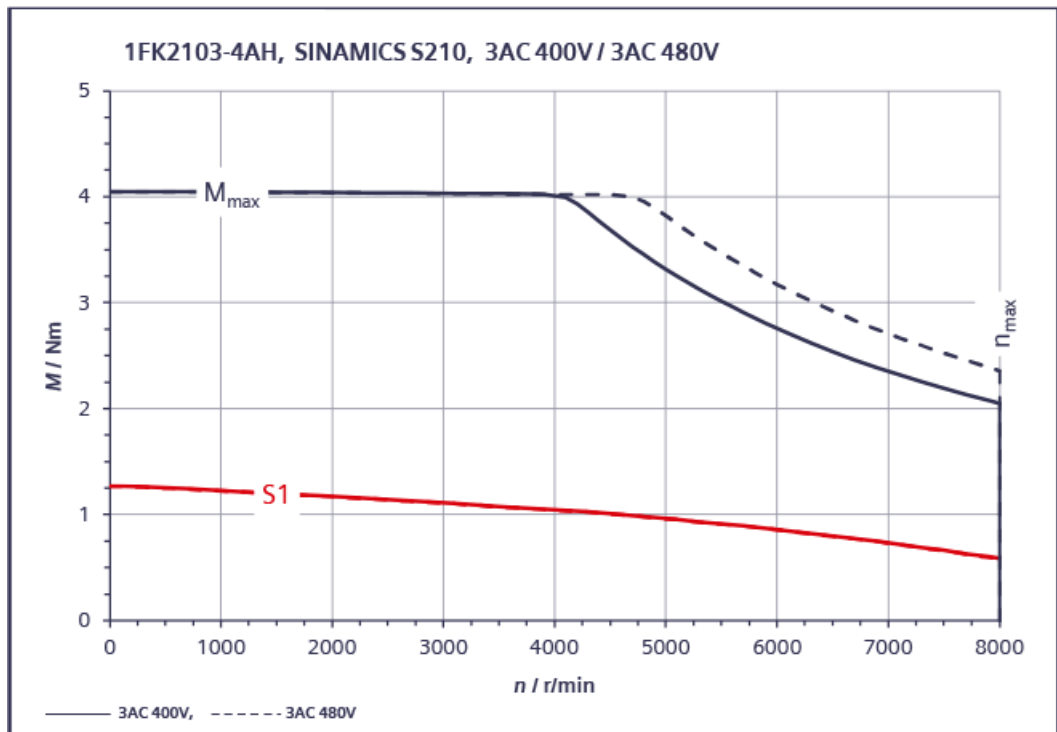


12.2.16.3 1FK2104-4AF connected to 3 AC 400 V / 3 AC 480 V

1FK2104-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.19
Maximum permissible speed	n_{max}	r/min	7200
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	1.19
Rated power	P_{rated}	kW	0.4

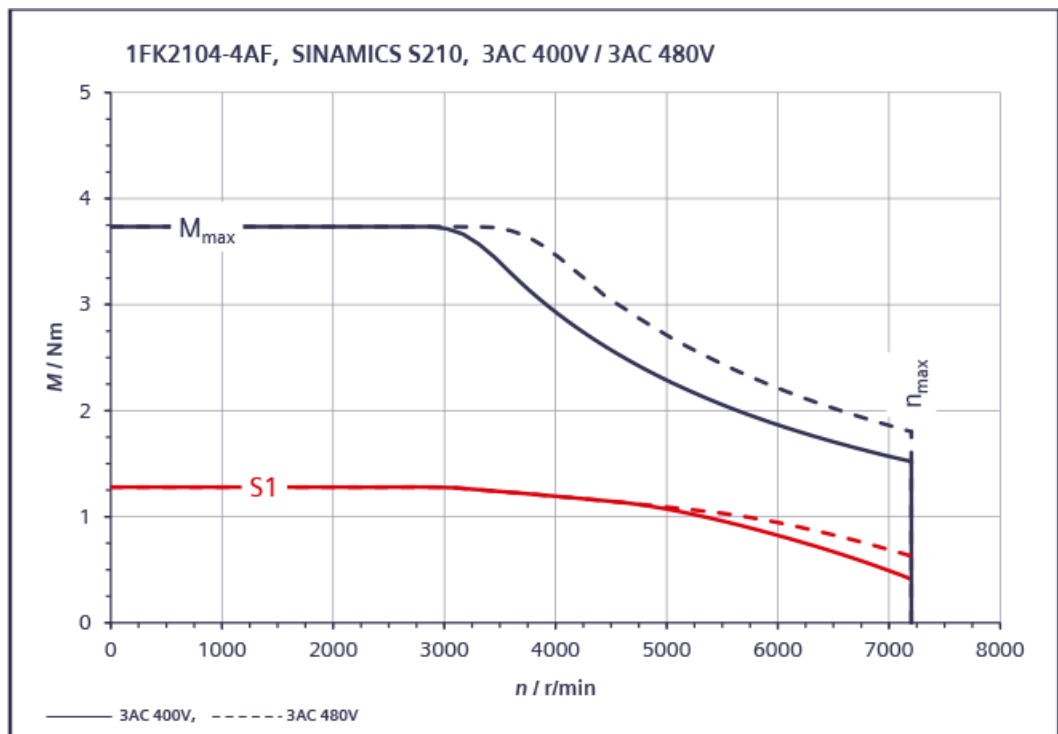


12.2.16.4 1FK2104-4AK connected to 3 AC 400 V / 3 AC 480 V

1FK2104-4AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	3.85
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.95
Rated current	I_{rated}	A	1.88
Rated power	P_{rated}	kW	0.6

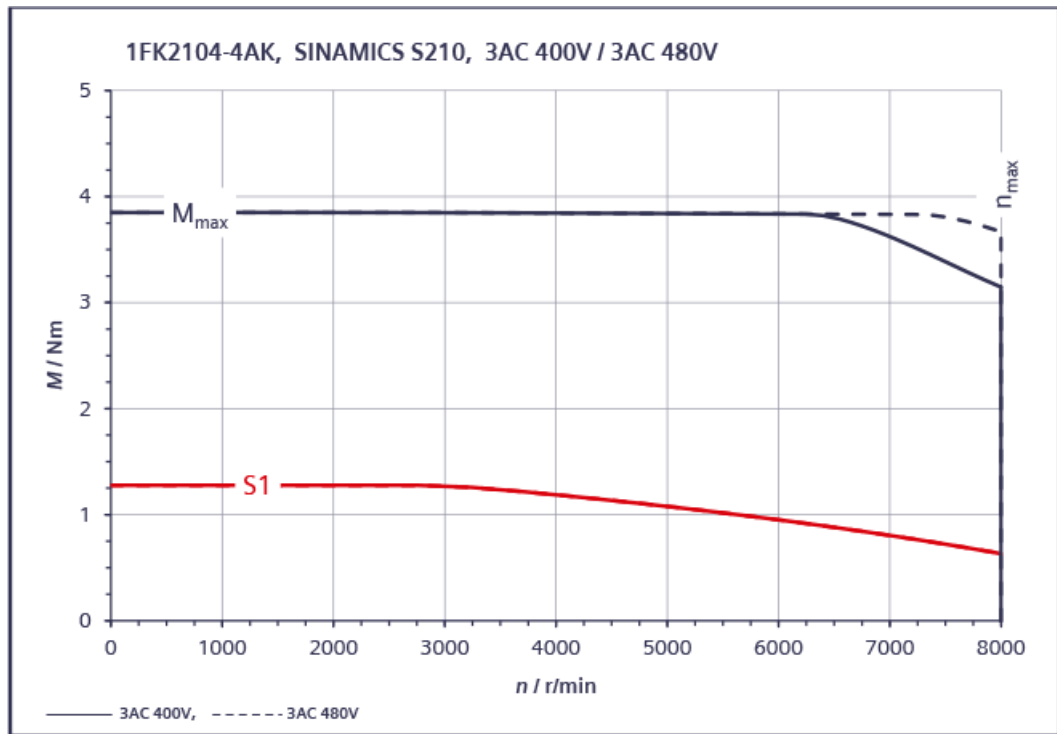


12.2.16.5 1FK2104-5AF connected to 3 AC 400 V / 3 AC 480 V

1FK2104-5AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.1
Maximum permissible speed	n_{max}	r/min	6700
Maximum torque	M_{max}	Nm	7.5
Maximum current	I_{max}	A	7.6
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.1
Rated power	P_{rated}	kW	0.75

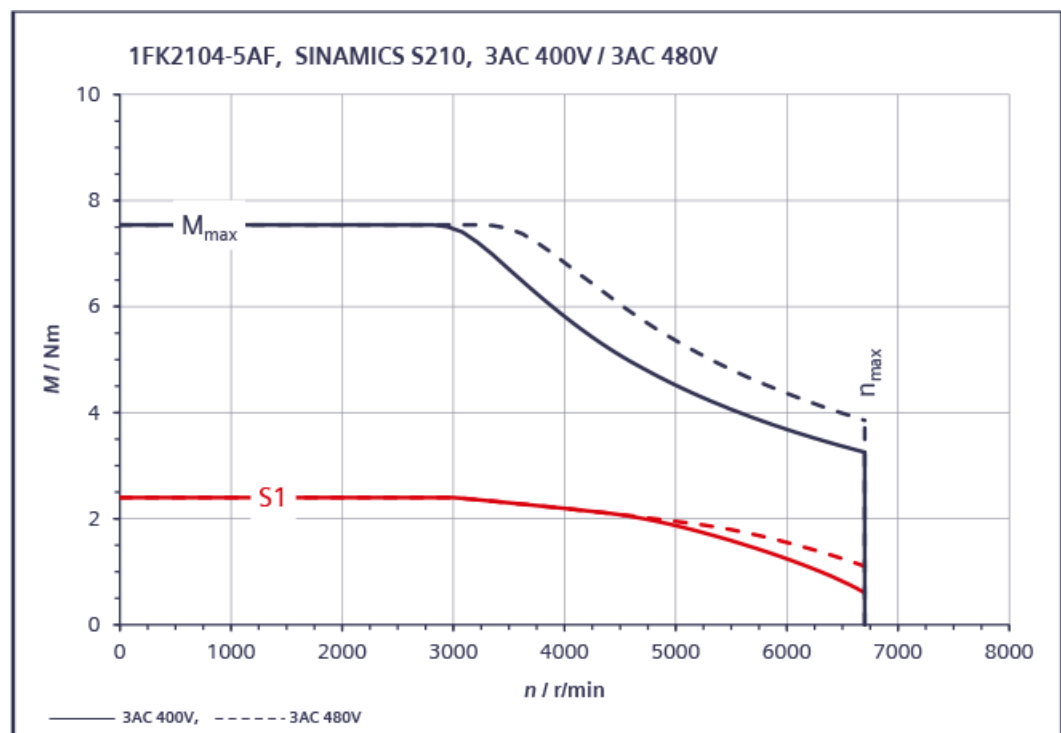


12.2.16.6 1FK2104-5AK connected to 3 AC 400 V / 3 AC 480 V

1FK2104-5AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	7.6
Maximum current	I_{max}	A	16
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	1.7
Rated current	I_{rated}	A	3.2
Rated power	P_{rated}	kW	1.07

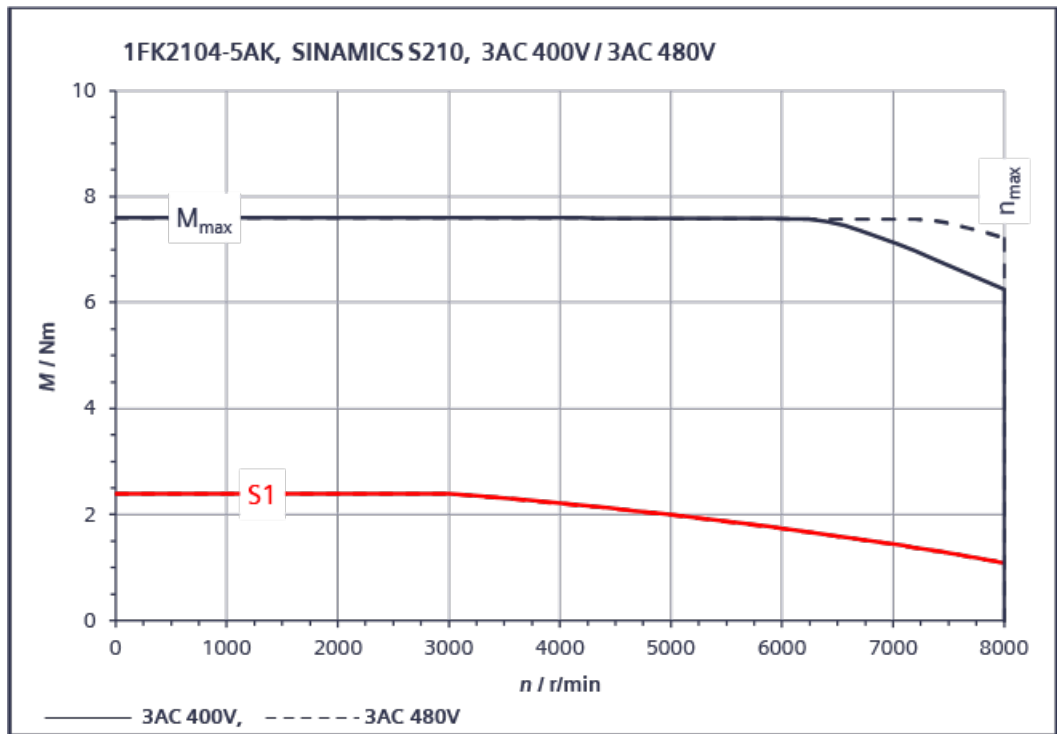


12.2.16.7 1FK2104-6AF connected to 3 AC 400 V / 3 AC 480 V

1FK2104-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	7200
Maximum torque	M_{max}	Nm	10
Maximum current	I_{max}	A	10.9
Thermal time constant	T_{th}	min	38
Rotor moment of inertia	J_{mot}	kgcm ²	0.76
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.84
Weight	m_{mot}	kg	3.4
Weight (with brake)	$m_{mot br}$	kg	4.25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	1

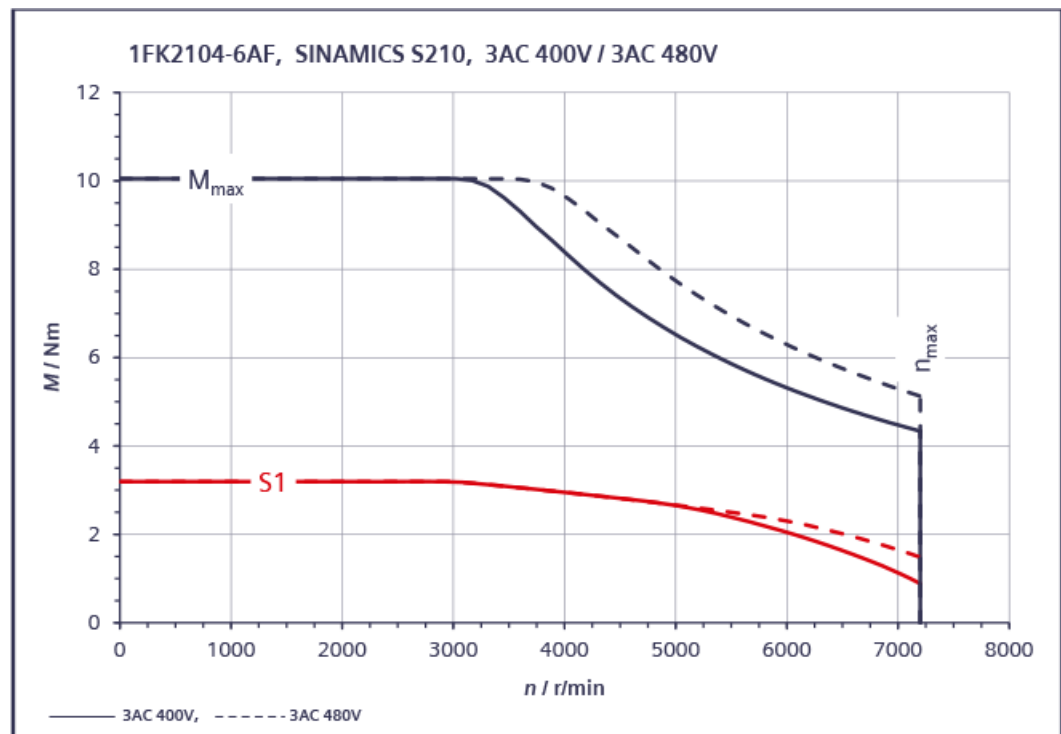


12.2.16.8 1FK2105-4AF connected to 3 AC 400 V / 3 AC 480 V

1FK2105-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	4.65
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	18
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	4.6
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	1.45

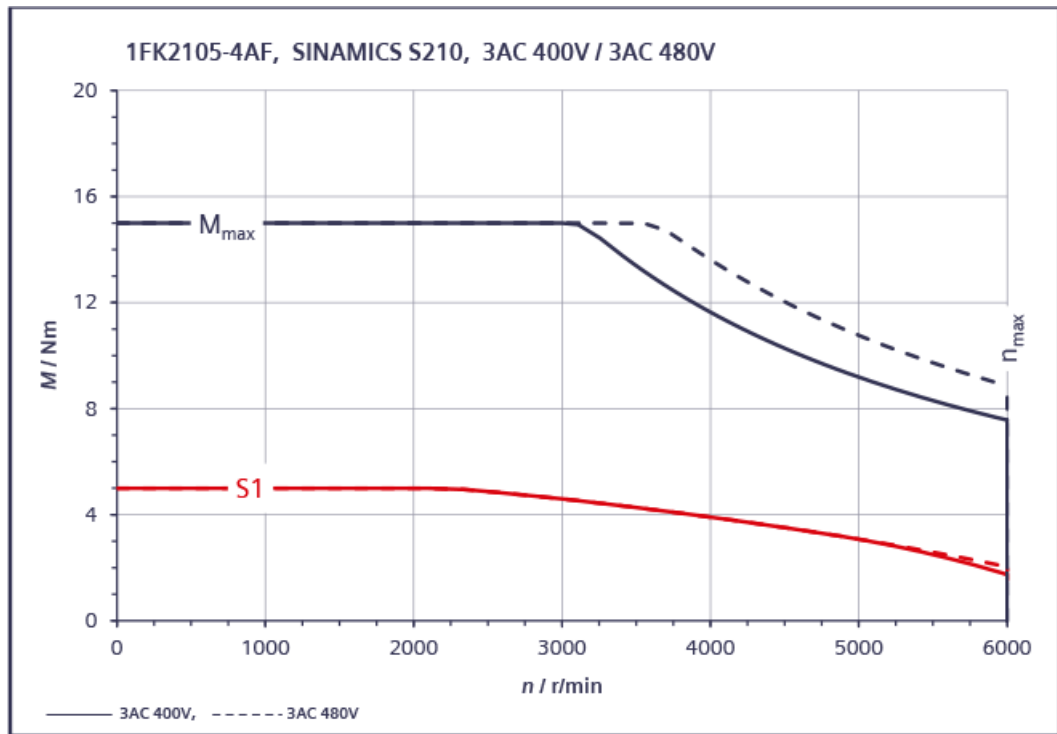


12.2.16.9 1FK2105-6AF connected to 3 AC 400 V / 3 AC 480 V

1FK2105-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	8
Stall current	I_0	A	6.7
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	24
Maximum current	I_{max}	A	24
Thermal time constant	T_{th}	min	40
Rotor moment of inertia	J_{mot}	kgcm ²	2.65
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	3.5
Weight	m_{mot}	kg	7.7
Weight (with brake)	$m_{mot br}$	kg	8.7
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	6.6
Rated current	I_{rated}	A	5.6
Rated power	P_{rated}	kW	2.1

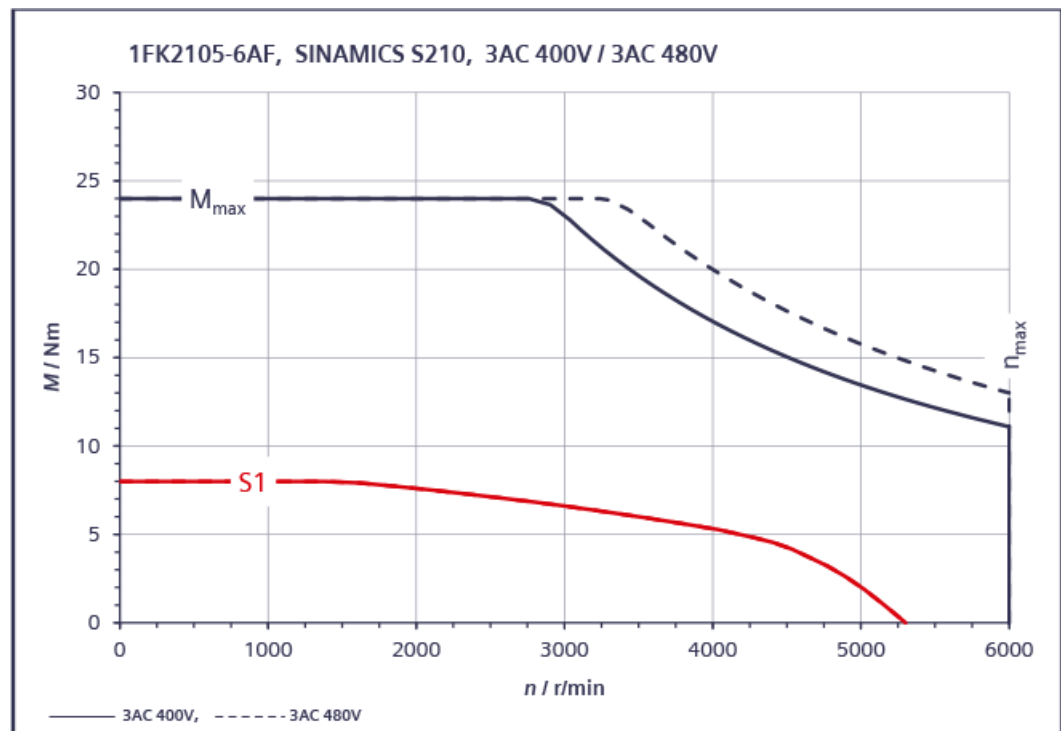


12.2.16.10 1FK2106-3AF connected to 400 V 3 AC / 480 V 3 AC

1FK2106-3AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	9.2
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	26
Maximum current	I_{max}	A	43
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	4.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6.3
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	7.3
Rated current	I_{rated}	A	7.9
Rated power	P_{rated}	kW	2.3

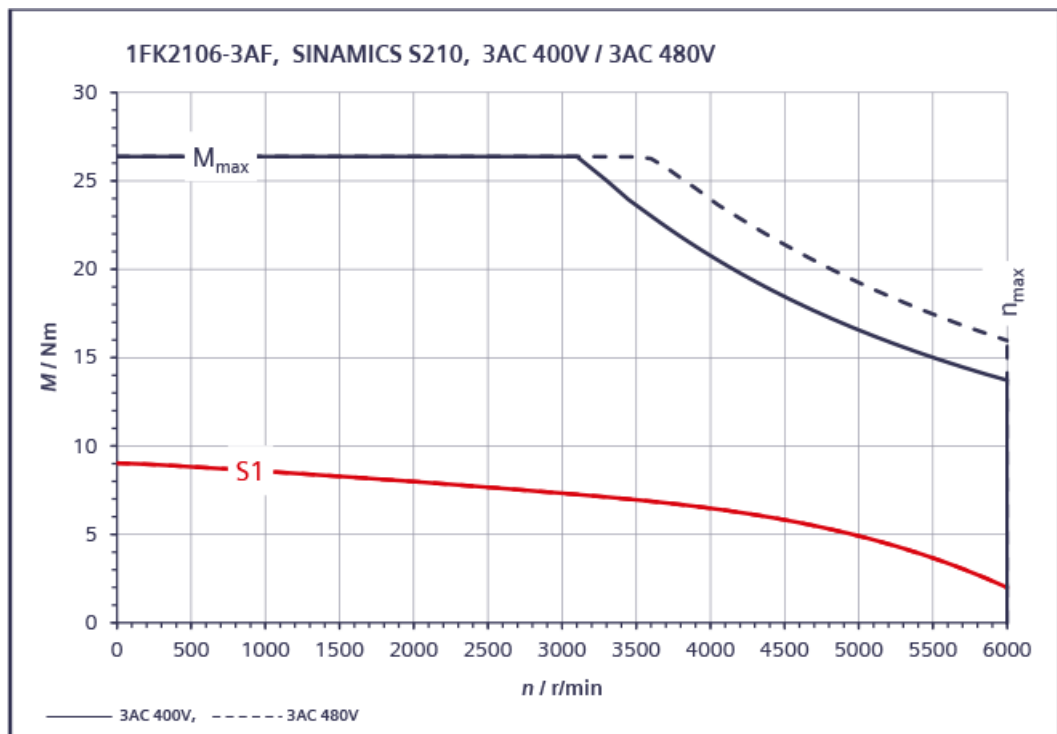


12.2.16.11 1FK2106-4AF connected to 400 V 3 AC / 480 V 3 AC

1FK2106-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	10.7
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	33
Maximum current	I_{max}	A	42
Thermal time constant	T_{th}	min	34
Rotor moment of inertia	J_{mot}	kgcm ²	6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	7.6
Weight	m_{mot}	kg	9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	8.6
Rated current	I_{rated}	A	8.1
Rated power	P_{rated}	kW	2.7

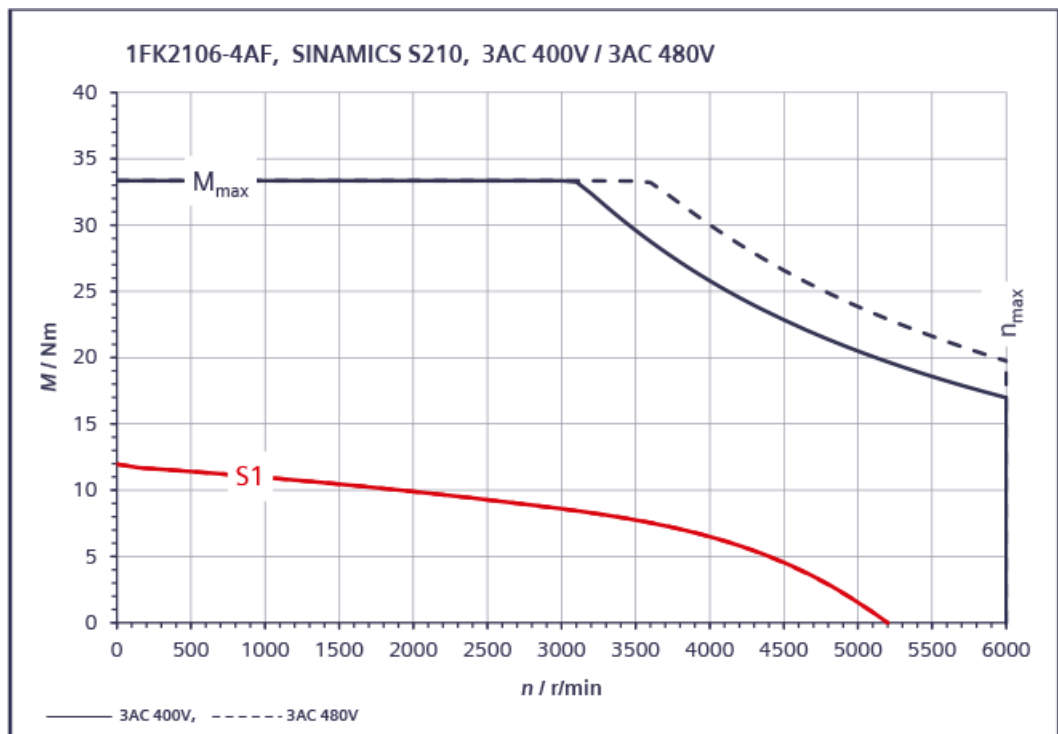


12.2.16.12 1FK2106-6AF connected 400 V 3 AC / 480 V 3 AC

1FK2106-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	16
Stall current	I_0	A	14.3
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	45.5
Maximum current	I_{max}	A	49
Thermal time constant	T_{th}	min	50
Rotor moment of inertia	J_{mot}	kgcm ²	8.7
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	10.4
Weight	m_{mot}	kg	11.8
Weight (with brake)	$m_{mot br}$	kg	13.4
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	10.6
Rated current	I_{rated}	A	9.7
Rated power	P_{rated}	kW	3.3

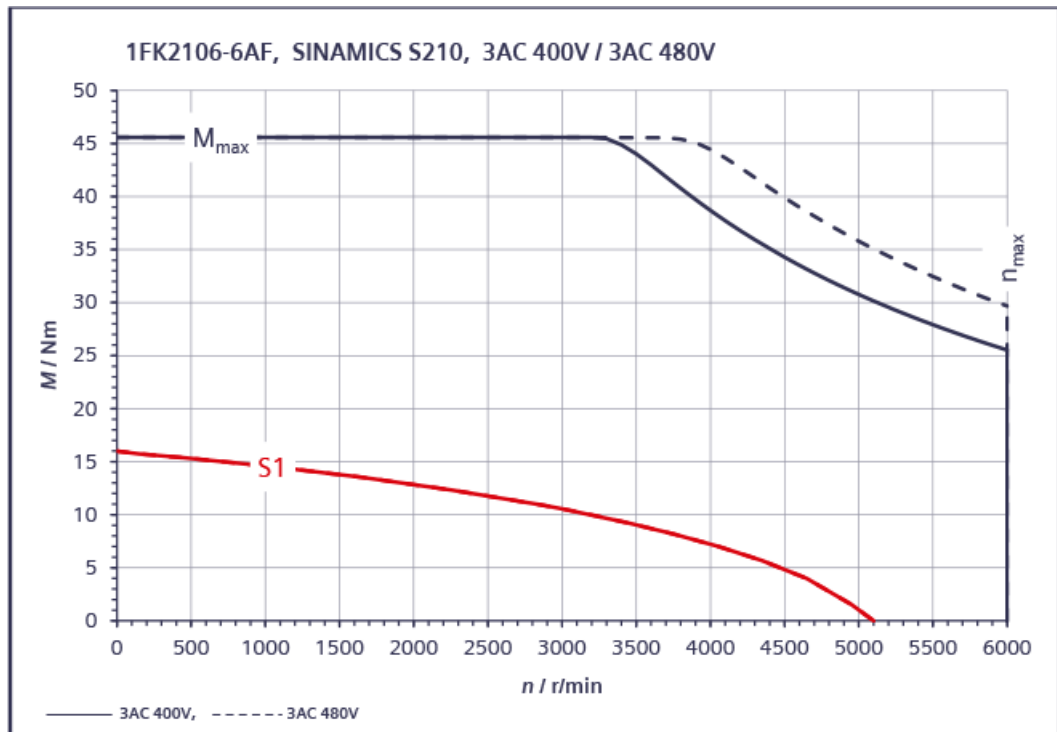


12.2.16.13 1FK2203-2AK connected to 3 AC 400 V / 3 AC 480 V

1FK2203-2AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.05
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.85
Maximum current	I_{max}	A	3.4
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.2
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.22
Weight	m_{mot}	kg	1.16
Weight (with brake)	$m_{mot br}$	kg	1.53
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.405
Rated current	I_{rated}	A	0.75
Rated power	P_{rated}	kW	0.255

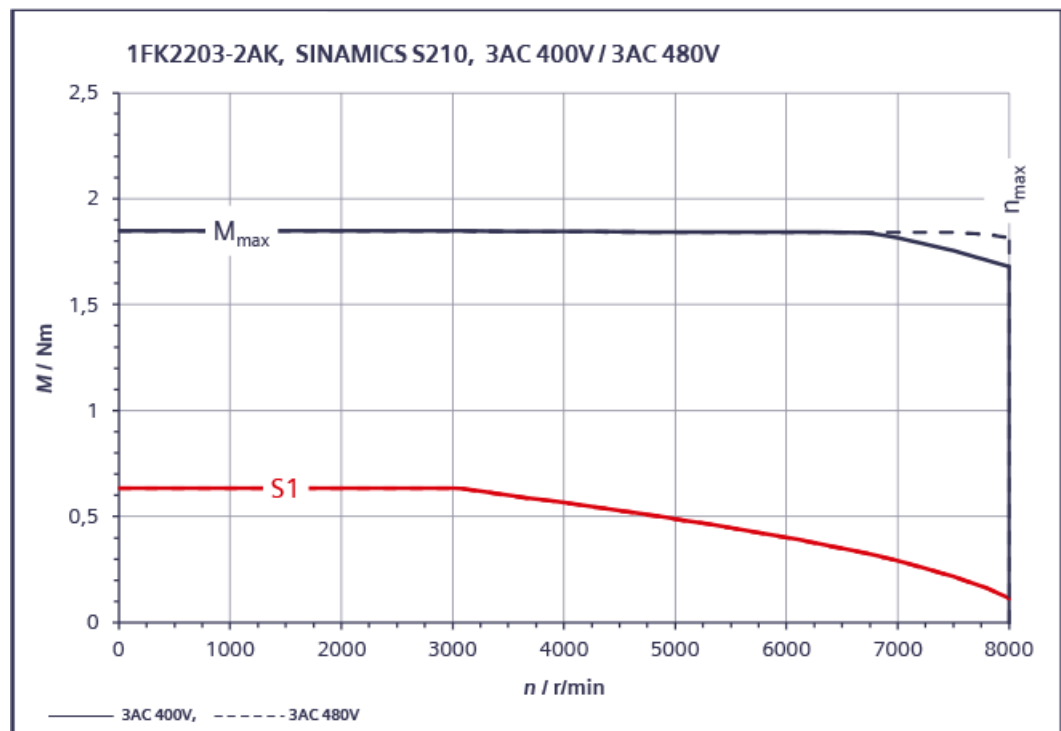


12.2.16.14 1FK2203-4AK connected to 3 AC 400 V / 3 AC 480 V

1FK2203-4AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.05
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	6.7
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.37
Weight	m_{mot}	kg	1.49
Weight (with brake)	$m_{mot br}$	kg	1.97
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.68
Rated current	I_{rated}	A	1.24
Rated power	P_{rated}	kW	0.43

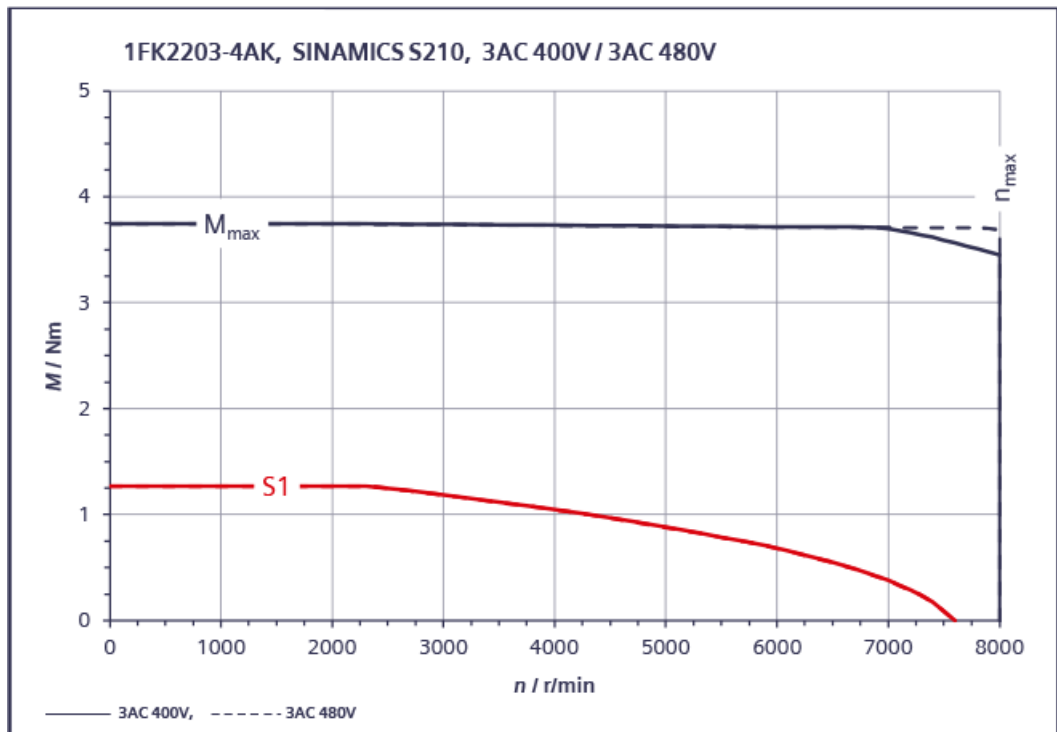


12.2.16.15 1FK2204-5AF connected to 3 AC 400 V / 3 AC 480 V

1FK2204-5AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.25
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.25
Rated power	P_{rated}	kW	0.75

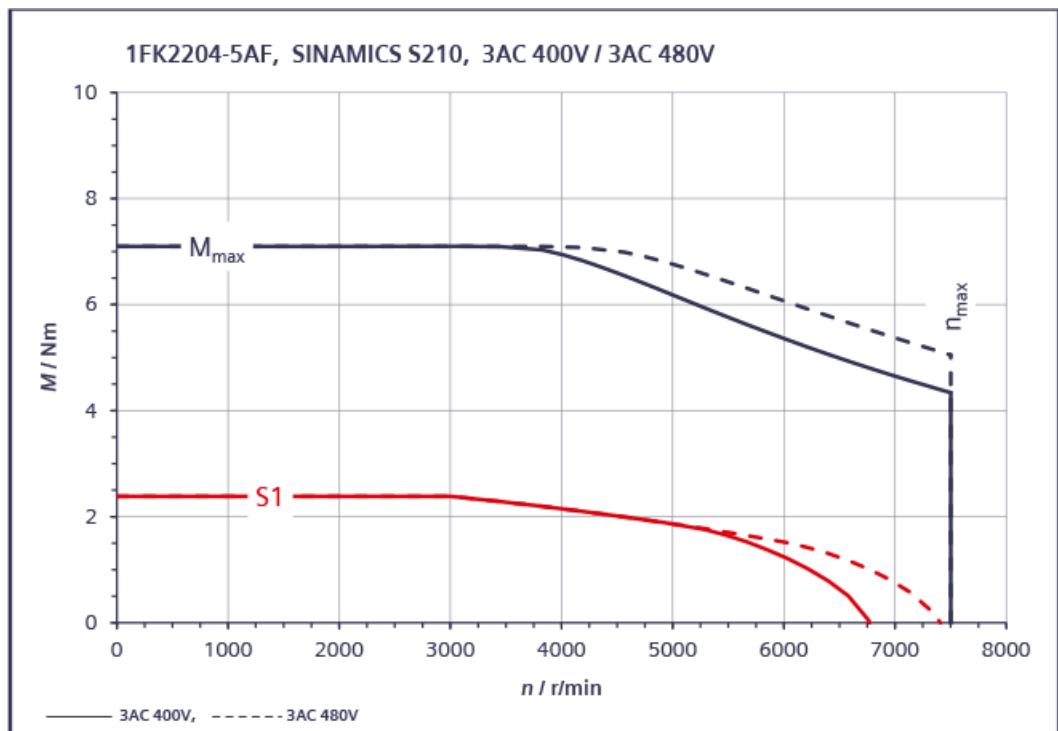


12.2.16.16 1FK2204-5AK connected to 3 AC 400 V / 3 AC 480 V

1FK2204-5AK	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	14.2
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.9
Rated current	I_{rated}	A	1.95
Rated power	P_{rated}	kW	0.57

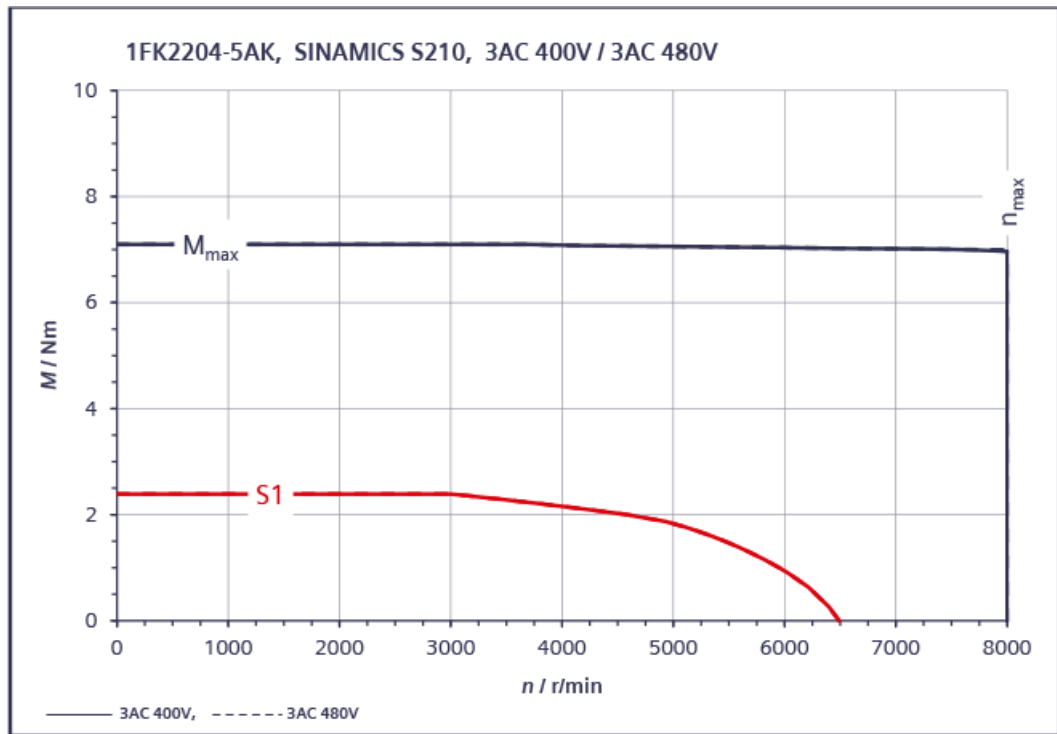


12.2.16.17 1FK2204-6AF connected to 3 AC 400 V / 3 AC 480 V

1FK2204-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	7600
Maximum torque	M_{max}	Nm	9.5
Maximum current	I_{max}	A	9.9
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	1.61
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.69
Weight	m_{mot}	kg	3.5
Weight (with brake)	$m_{mot br}$	kg	4.35
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	1

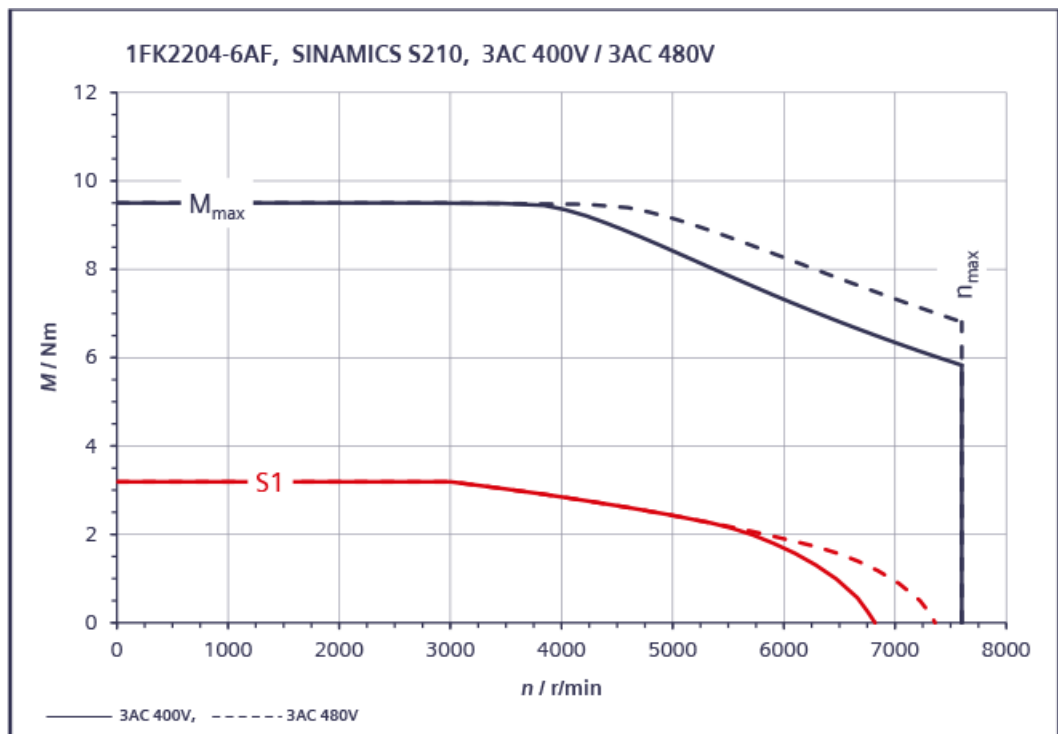


12.2.16.18 1FK2205-2AF connected to 3 AC 400 V / 3 AC 480 V

1FK2205-2AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	2.9
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	9.5
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3
Rated current	I_{rated}	A	2.5
Rated power	P_{rated}	kW	0.94

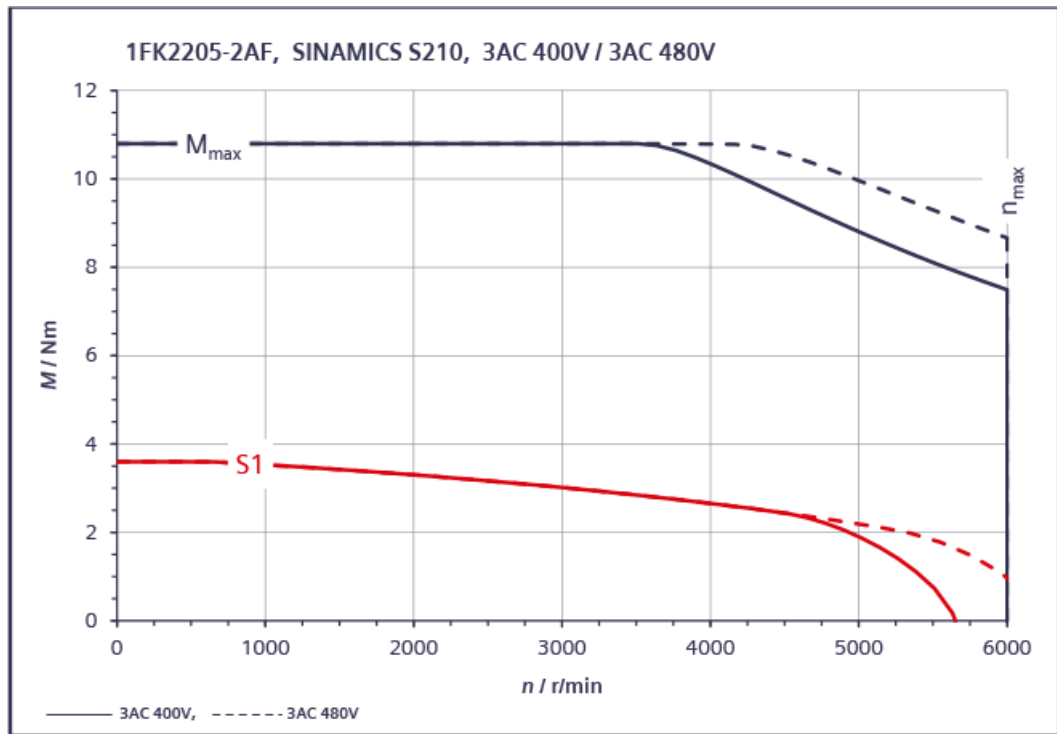


12.2.16.19 1FK2205-4AF connected to 3 AC 400 V / 3 AC 480 V

1FK2205-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6
Stall current	I_0	A	4.7
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	15.1
Thermal time constant	T_{th}	min	31
Rotor moment of inertia	J_{mot}	kgcm ²	5.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6
Weight	m_{mot}	kg	5.2
Weight (with brake)	$m_{mot br}$	kg	6.2
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	4.6
Rated current	I_{rated}	A	3.75
Rated power	P_{rated}	kW	1.45

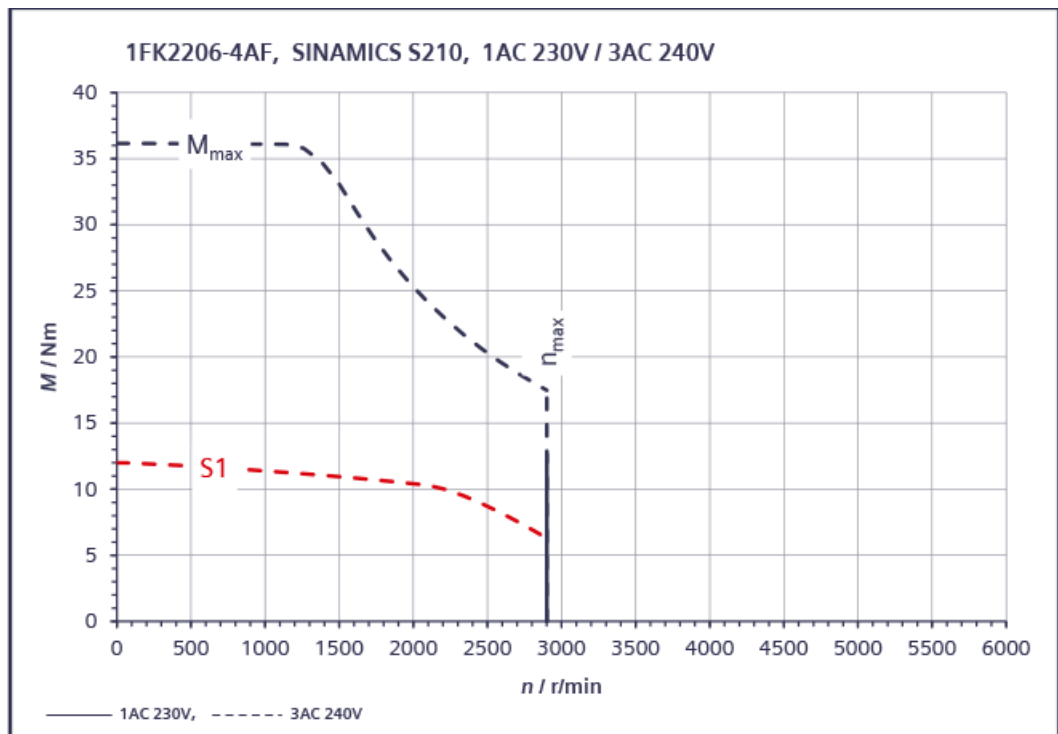


12.2.16.20 1FK2206-2AF connected to 3 AC 400 V / 3 AC 480 V

1FK2206-2AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	5
Maximum permissible speed	n_{max}	r/min	6000
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	17.8
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	5.4
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	1.71

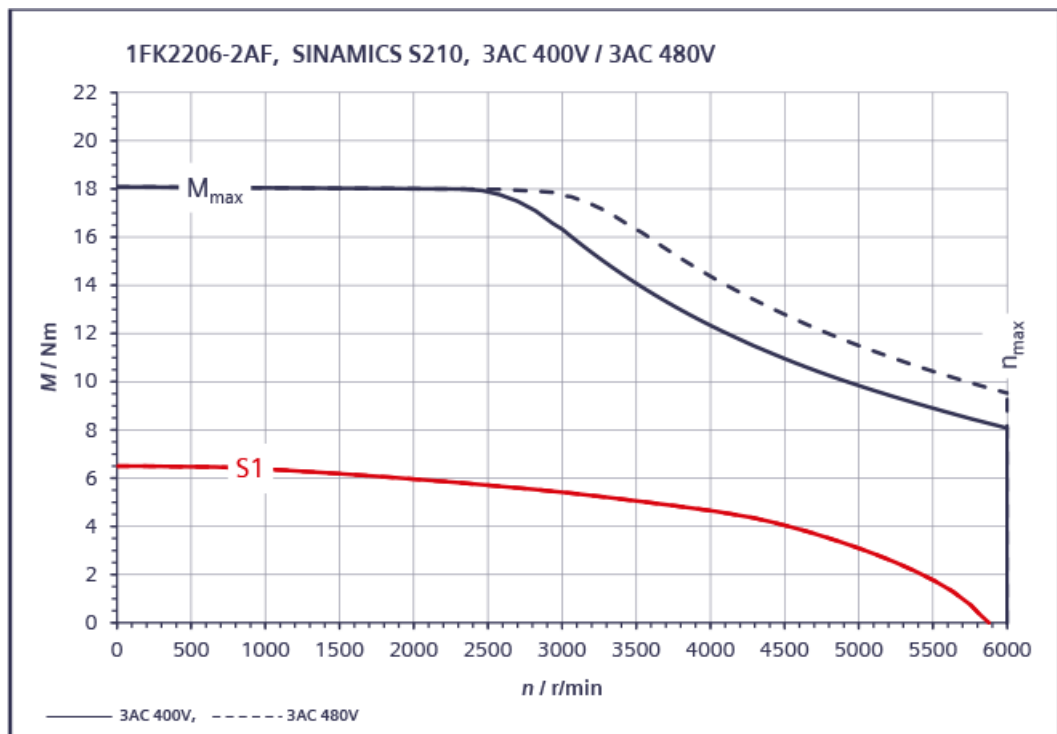


12.2.16.21 1FK2206-4AF connected to 3 AC 400 V / 3 AC 480 V

1FK2206-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	7.9
Maximum permissible speed	n_{max}	r/min	5800
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	9.1
Rated current	I_{rated}	A	6.2
Rated power	P_{rated}	kW	2.85

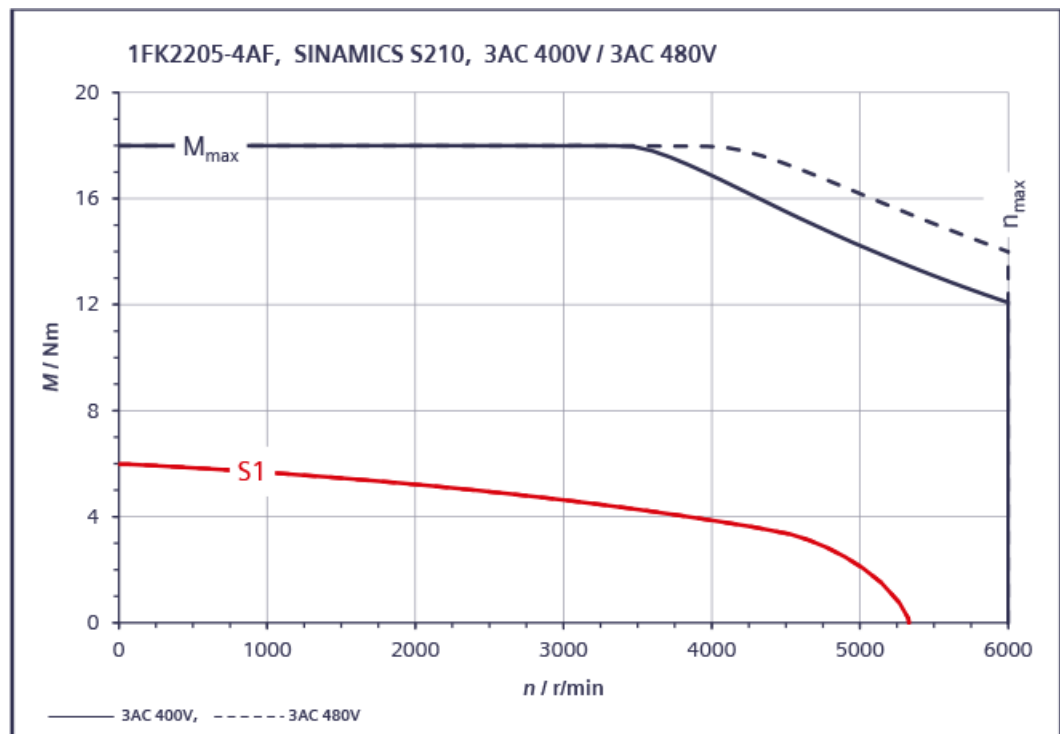


12.2.16.22 1FK2208-3AC connected to 3 AC 400 V / 3 AC 480 V

1FK2208-3AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	8.4
Maximum permissible speed	n_{max}	r/min	4100
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.6
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	14.5
Rated current	I_{rated}	A	7
Rated power	P_{rated}	kW	3.05

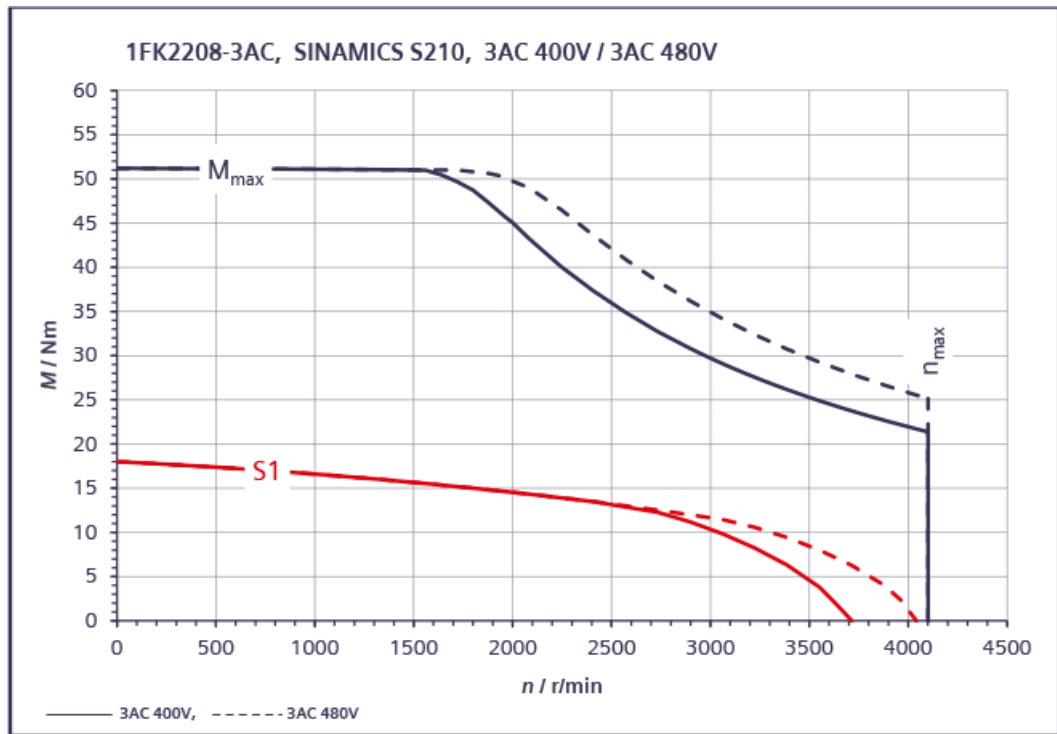


12.2.16.23 1FK2208-4AC connected to 3 AC 400 V / 3 AC 480 V

1FK2208-4AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	11.7
Maximum permissible speed	n_{max}	r/min	4600
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	17
Rated current	I_{rated}	A	9.3
Rated power	P_{rated}	kW	3.55

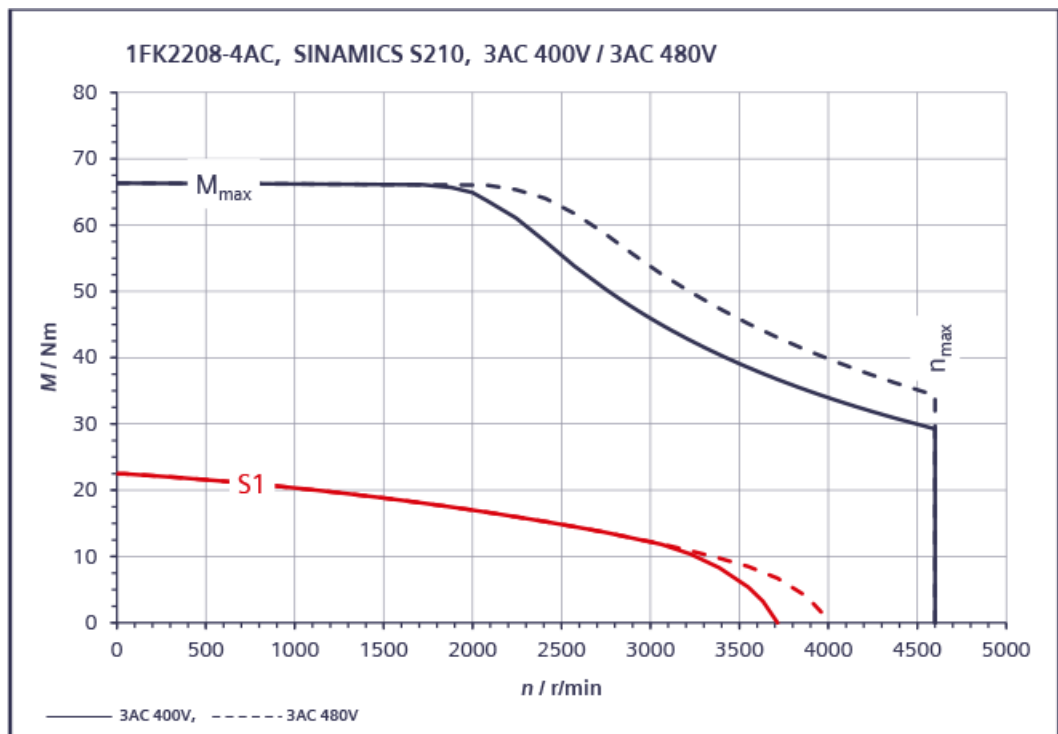


12.2.16.24 1FK2208-5AC connected to 3 AC 400 V / 3 AC 480 V

1FK2208-5AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	14.6
Maximum permissible speed	n_{max}	r/min	4700
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	51.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	19.1
Rated current	I_{rated}	A	10.8
Rated power	P_{rated}	kW	4

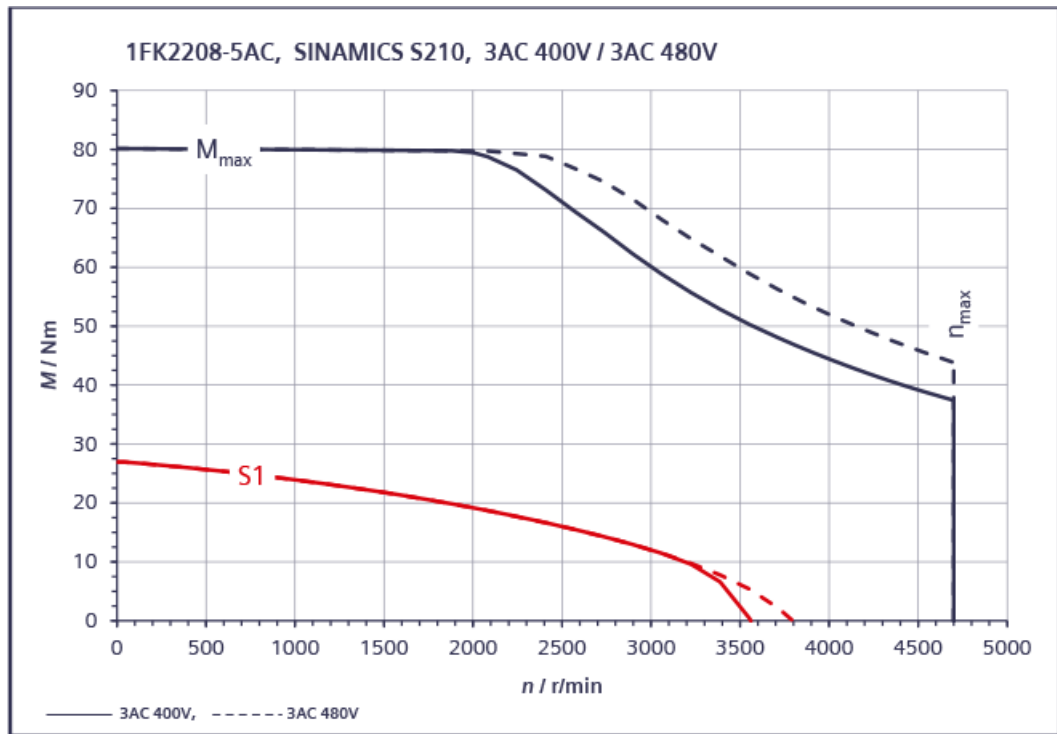


12.2.16.25 1FK2210-3AB connected to 400 V 3 AC / 480 V 3 AC

1FK2210-3AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	8.5
Maximum permissible speed	n_{max}	r/min	2500
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	31.5
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	28.5
Rated current	I_{rated}	A	8.3
Rated power	P_{rated}	kW	4.5

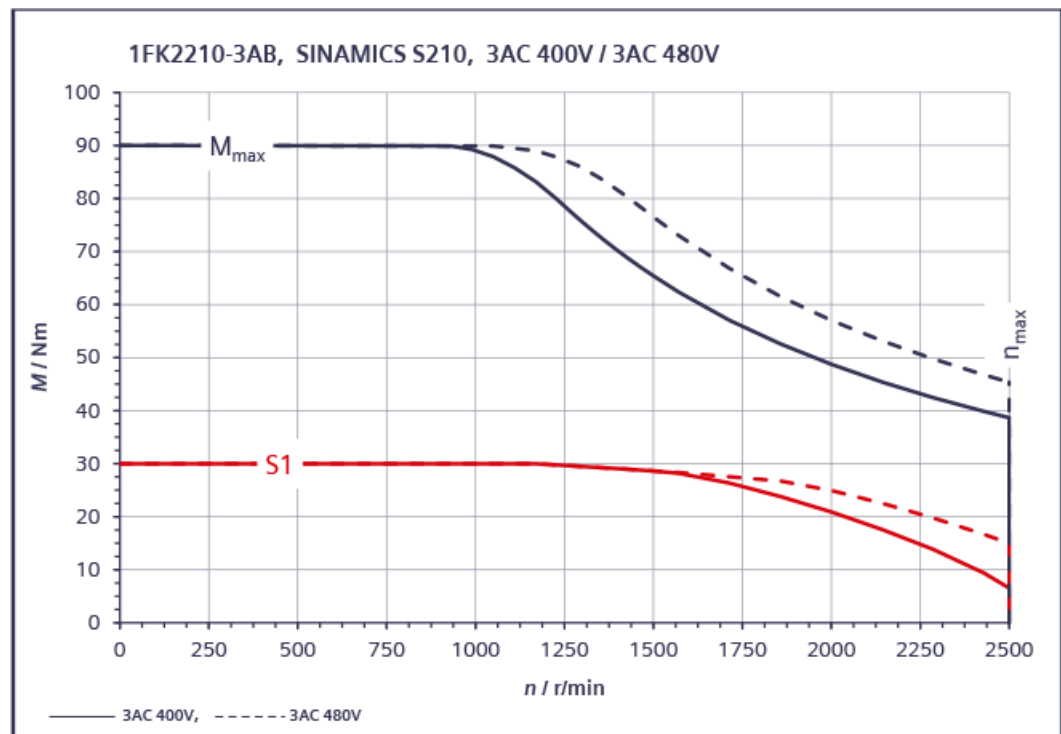


12.2.16.26 1FK2210-3AC connected to 3 AC 400 V / 3 AC 480 V

1FK2210-3AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	4400
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	26
Rated current	I_{rated}	A	13.5
Rated power	P_{rated}	kW	5.5

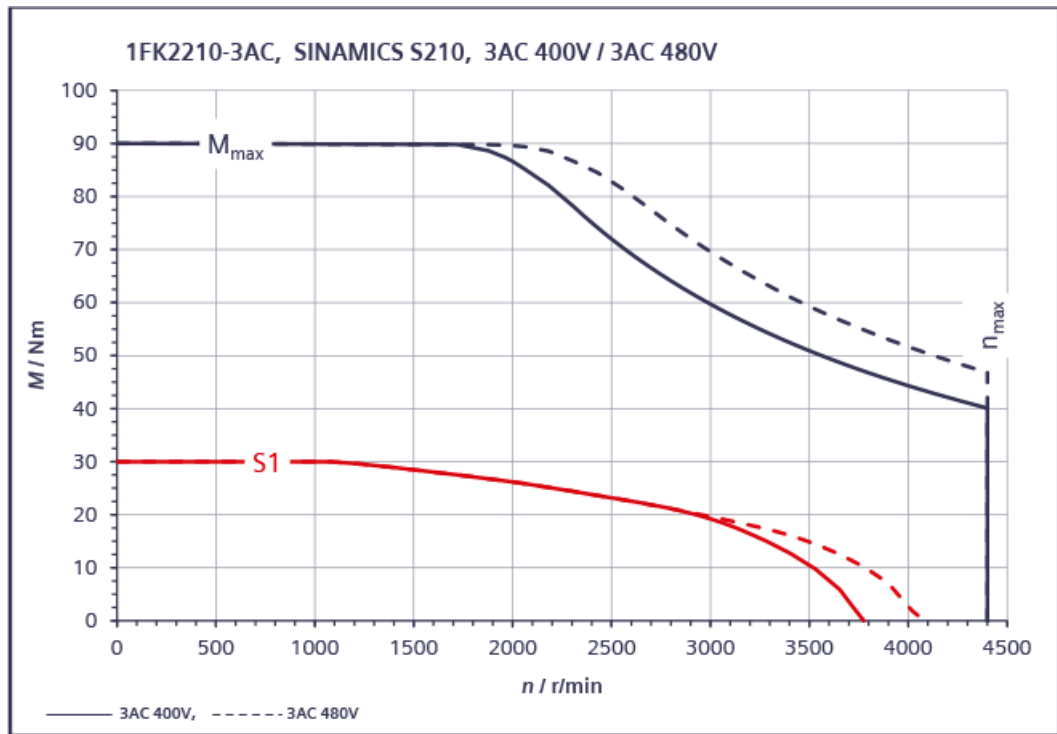


12.2.16.27 1FK2210-4AB connected to 400 V 3 AC / 480 V 3 AC

1FK2210-4AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	11.8
Maximum permissible speed	n_{max}	r/min	2500
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	34.5
Rated current	I_{rated}	A	10.4
Rated power	P_{rated}	kW	5.4

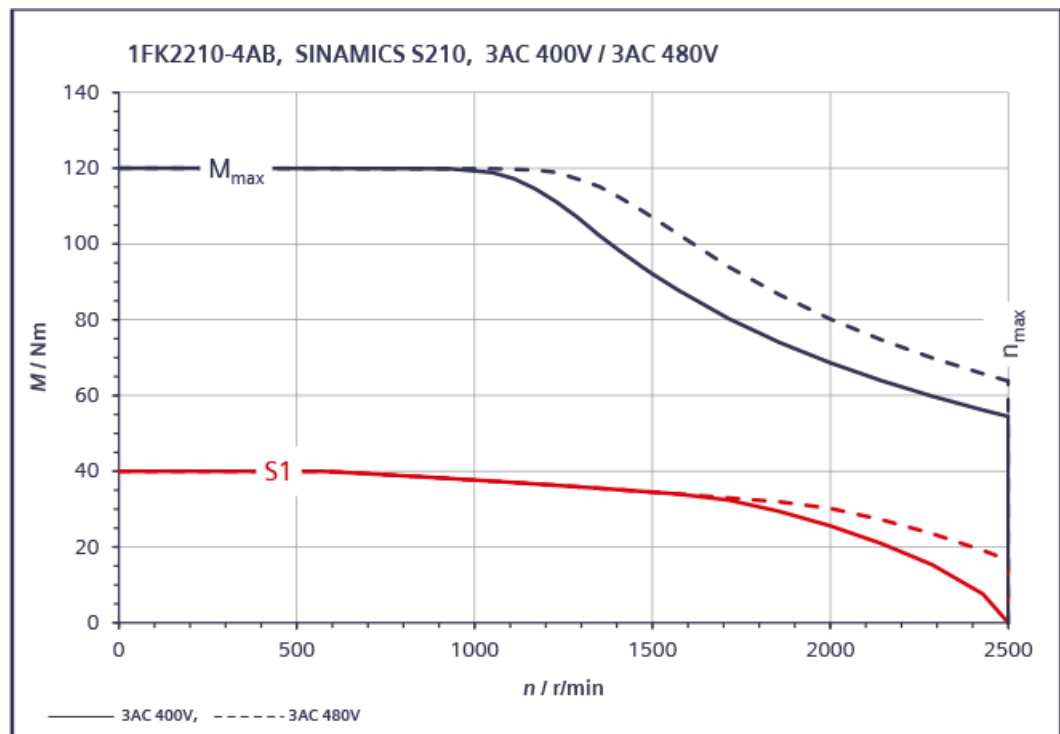

12.2.16.28 1FK2210-4AC connected to 3 AC 400 V / 3 AC 480 V


1FK2210-4AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	30.5
Rated current	I_{rated}	A	11.8
Rated power	P_{rated}	kW	6.4

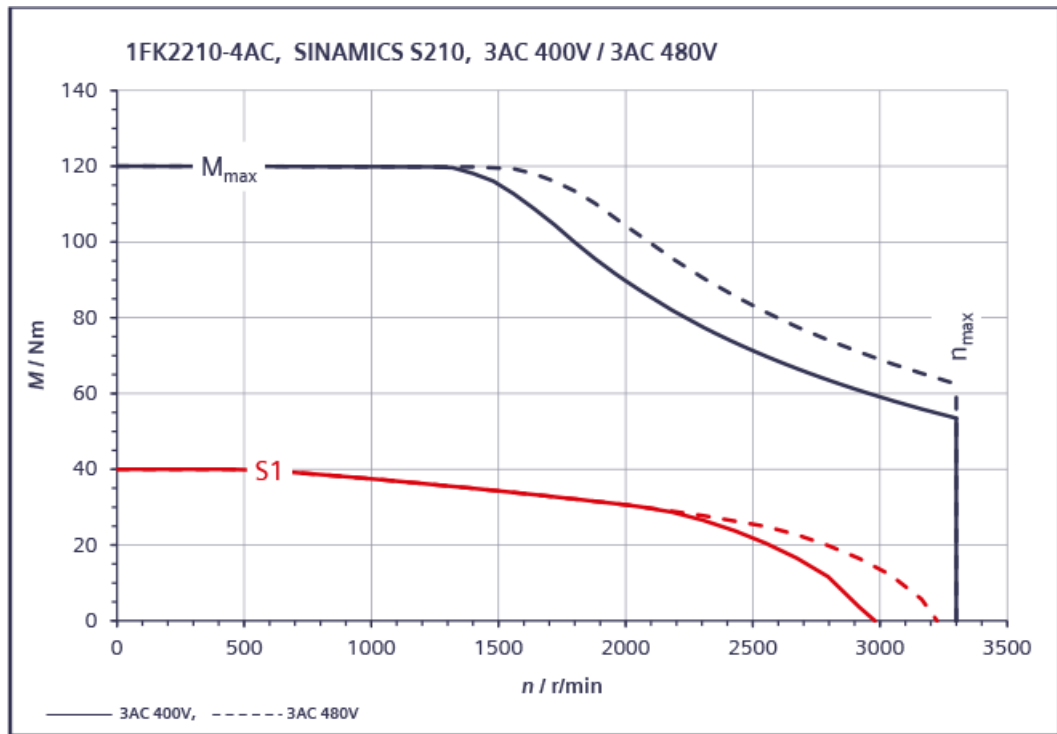

12.2.17 Technical data and characteristics of the 1FT2 connected to 1 AC 230 V, 3 AC 240 V


12.2.17.1 1FT2102-0AG connected to 230 V 1 AC / 240 V 3 AC

1FT2102-0AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.16
Stall current	I_0	A	0.75
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	0.56
Maximum current	I_{max}	A	3.1
Thermal time constant	T_{th}	min	14
Moment of inertia	J_{mot}	kgcm ²	0.0245
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.0285
Weight	m_{mot}	kg	0.47
Weight (with brake)	$m_{mot br}$	kg	0.73
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.16
Rated current	I_{rated}	A	0.75
Rated power	P_{rated}	kW	0.05

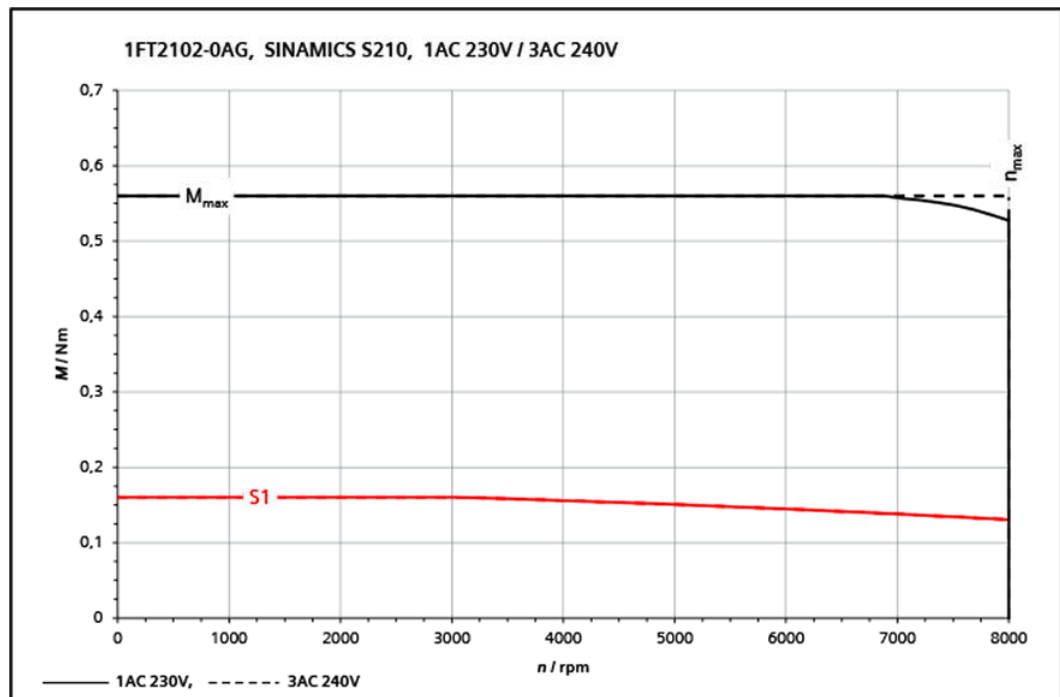


12.2.17.2 1FT2102-1AG connected to 230 V 1 AC / 240 V 3 AC

1FT2102-1AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.32
Stall current	I_0	A	0.76
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.11
Maximum current	I_{max}	A	2.95
Thermal time constant	T_{th}	min	16
Moment of inertia	J_{mot}	kgcm ²	0.036
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.04
Weight	m_{mot}	kg	0.6
Weight (with brake)	$m_{mot br}$	kg	0.86
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.32
Rated current	I_{rated}	A	0.76
Rated power	P_{rated}	kW	0.1

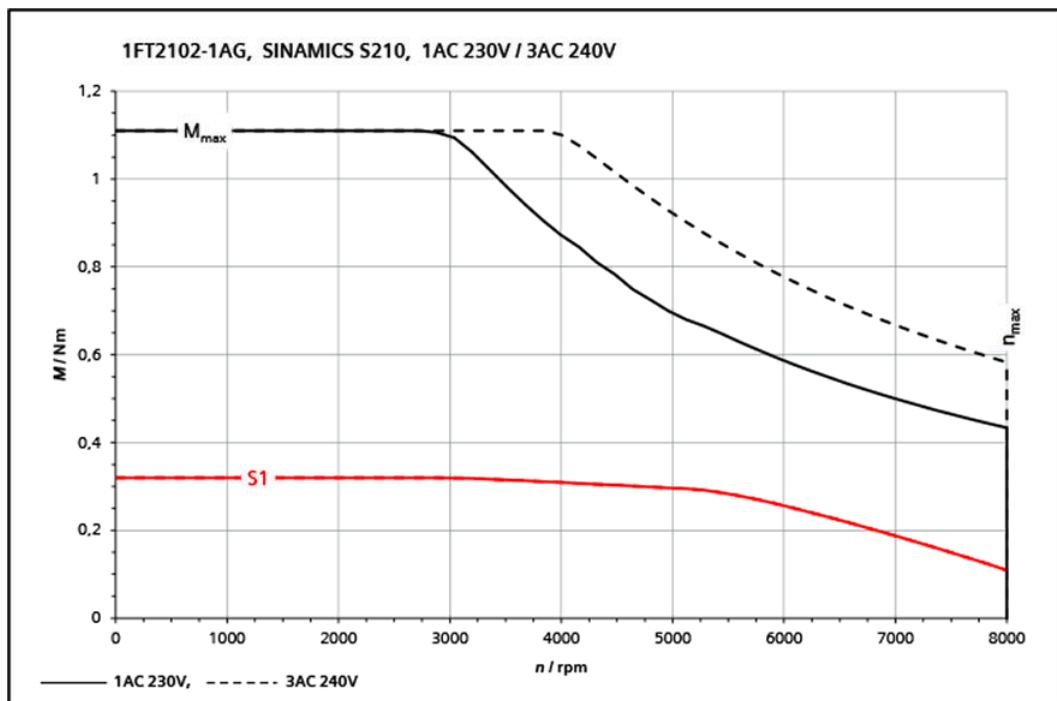


12.2.17.3 1FT2103-2AG connected to 230 V 1 AC / 240 V 3 AC

1FT2103-2AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.36
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.95
Maximum current	I_{max}	A	4.8
Thermal time constant	T_{th}	min	17
Moment of inertia	J_{mot}	kgcm ²	0.093
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.112
Weight	m_{mot}	kg	1.17
Weight (with brake)	$m_{mot br}$	kg	1.54
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.64
Rated current	I_{rated}	A	1.36
Rated power	P_{rated}	kW	0.2

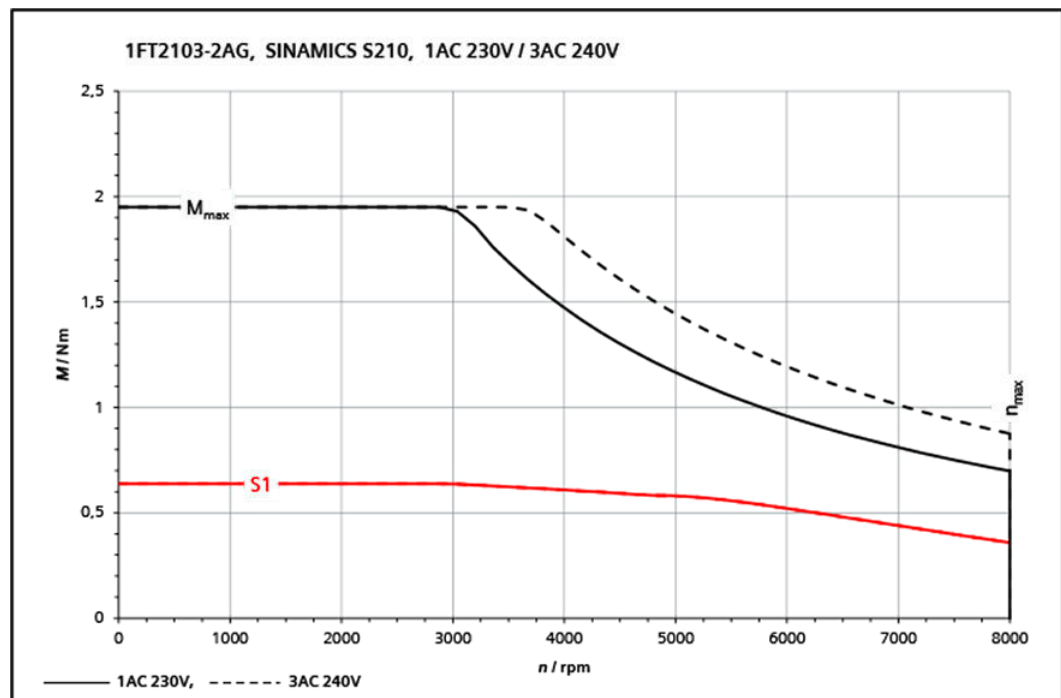


12.2.17.4 1FT2103-4AG connected to 230 V 1 AC / 240 V 3 AC

1FT2103-4AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	7300
Maximum torque	M_{max}	Nm	4.05
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	min	21
Moment of inertia	J_{mot}	kgcm ²	0.139
Moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.158
Weight	m_{mot}	kg	1.64
Weight (with brake)	$m_{mot br}$	kg	1.98
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.4
Rated power	P_{rated}	kW	0.4

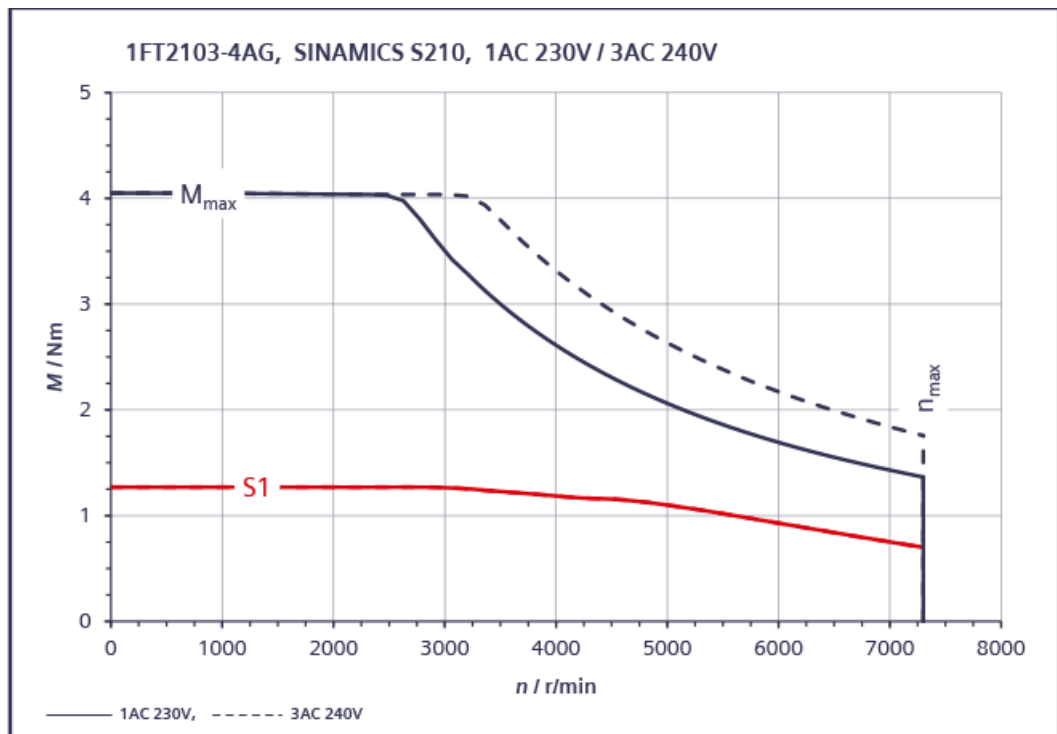


12.2.17.5 1FT2104-4AF connected to 230 V 1 AC / 240 V 3 AC

1FT2104-4AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.19
Maximum permissible speed	n_{max}	r/min	3600
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	1.19
Rated power	P_{rated}	kW	0.2

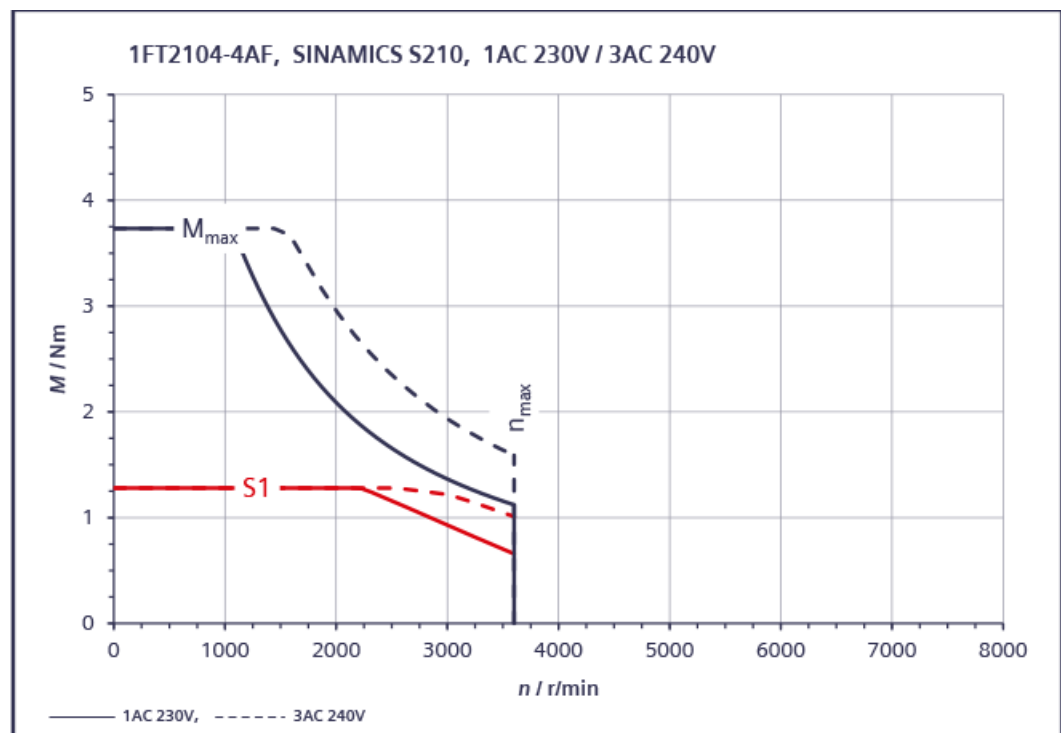


12.2.17.6 1FT2104-4AK connected to 230 V 1 AC / 240 V 3 AC

1FT2104-4AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	3.85
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.4
Rated power	P_{rated}	kW	0.4

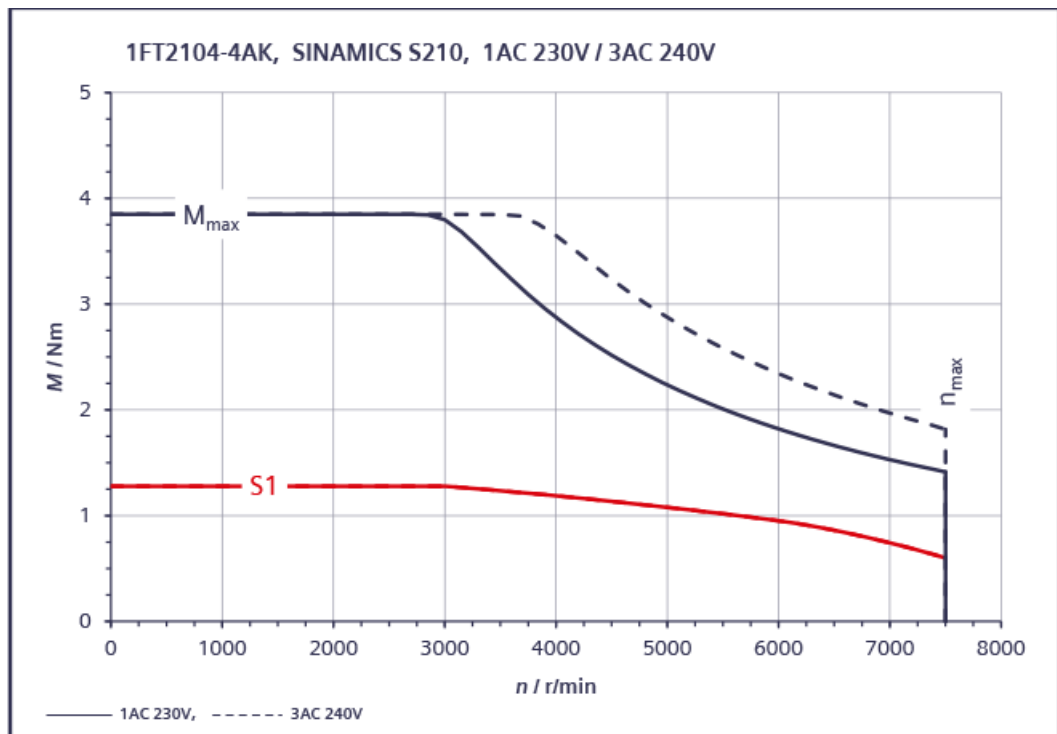


12.2.17.7 1FT2104-5AF connected to 230 V 1 AC / 240 V 3 AC

1FT2104-5AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.1
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	7.5
Maximum current	I_{max}	A	7.6
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.1
Rated power	P_{rated}	kW	0.375

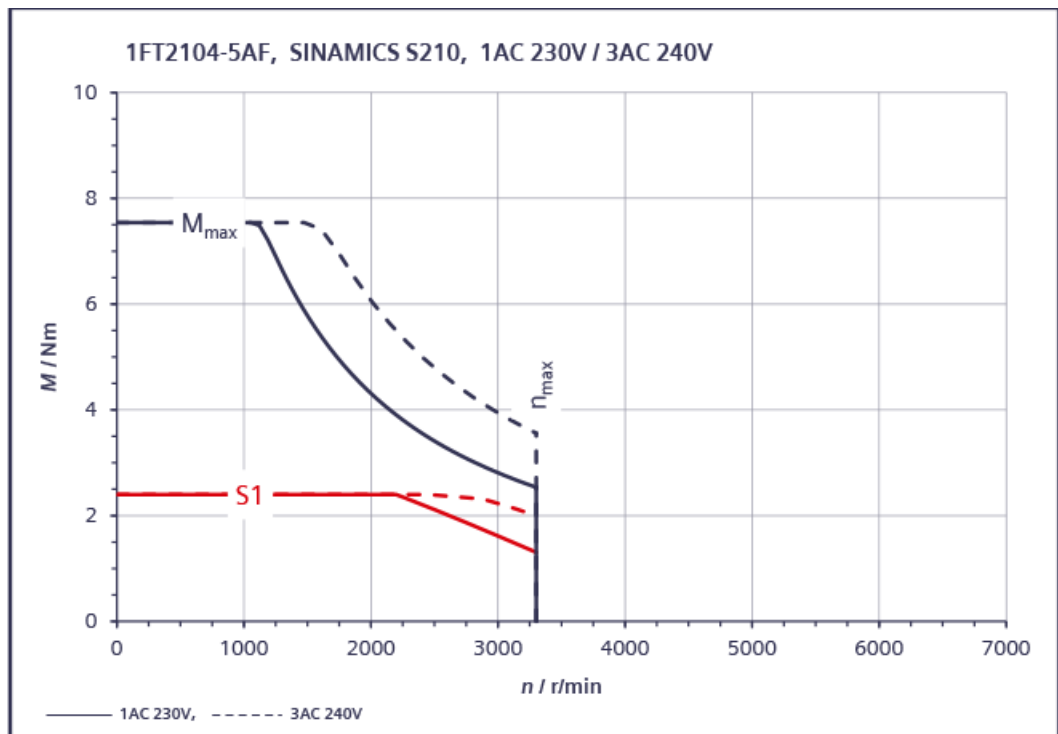


12.2.17.8 1FT2104-5AK connected to 230 V 1 AC / 240 V 3 AC

1FT2104-5AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	7100
Maximum torque	M_{max}	Nm	7.6
Maximum current	I_{max}	A	16
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	4.4
Rated power	P_{rated}	kW	0.75

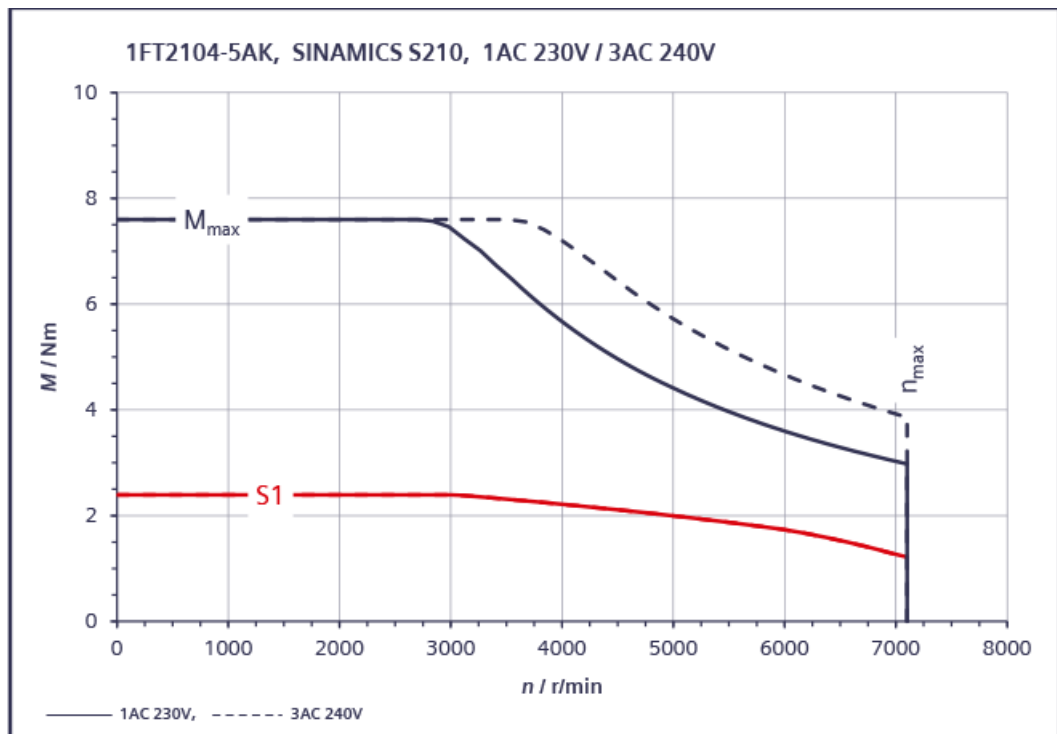


12.2.17.9 1FT2104-6AF connected to 230 V 1 AC / 240 V 3 AC

1FT2104-6AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	3600
Maximum torque	M_{max}	Nm	10
Maximum current	I_{max}	A	10.9
Thermal time constant	T_{th}	min	38
Rotor moment of inertia	J_{mot}	kgcm ²	0.76
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.84
Weight	m_{mot}	kg	3.4
Weight (with brake)	$m_{mot br}$	kg	4.25
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	0.5

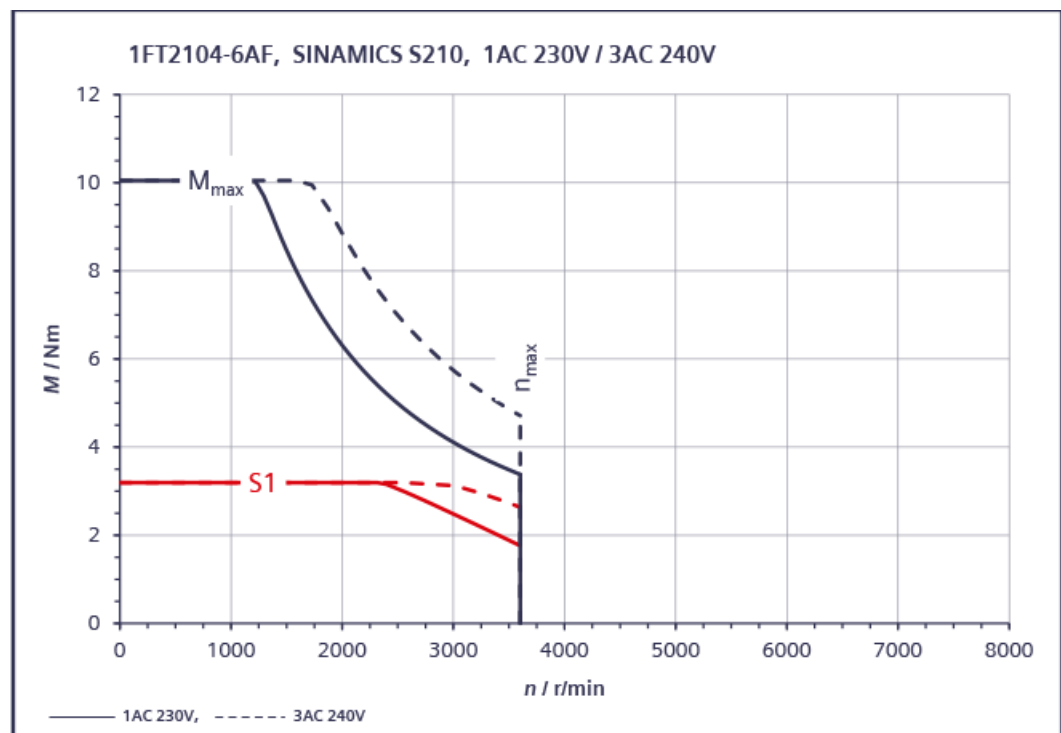


12.2.17.10 1FT2105-4AF connected to 230 V 1 AC / 240 V 3 AC

1FT2105-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	4.65
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	18
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	5
Rated current	I_{rated}	A	4.65
Rated power	P_{rated}	kW	0.79

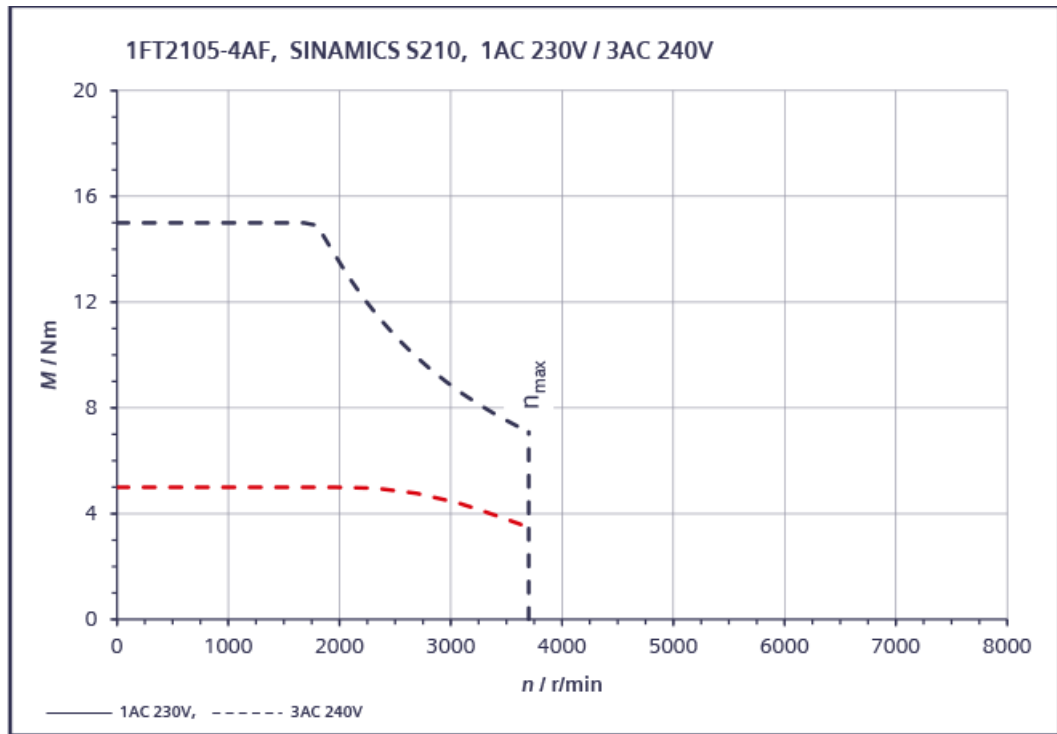


12.2.17.11 1FT2105-4AH connected to 3 AC 240 V

1FT2105-4AH	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	6.9
Maximum permissible speed	n_{max}	r/min	5900
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	27
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	2500
Rated torque	M_{rated}	Nm	4.85
Rated current	I_{rated}	A	6.9
Rated power	P_{rated}	kW	1.27

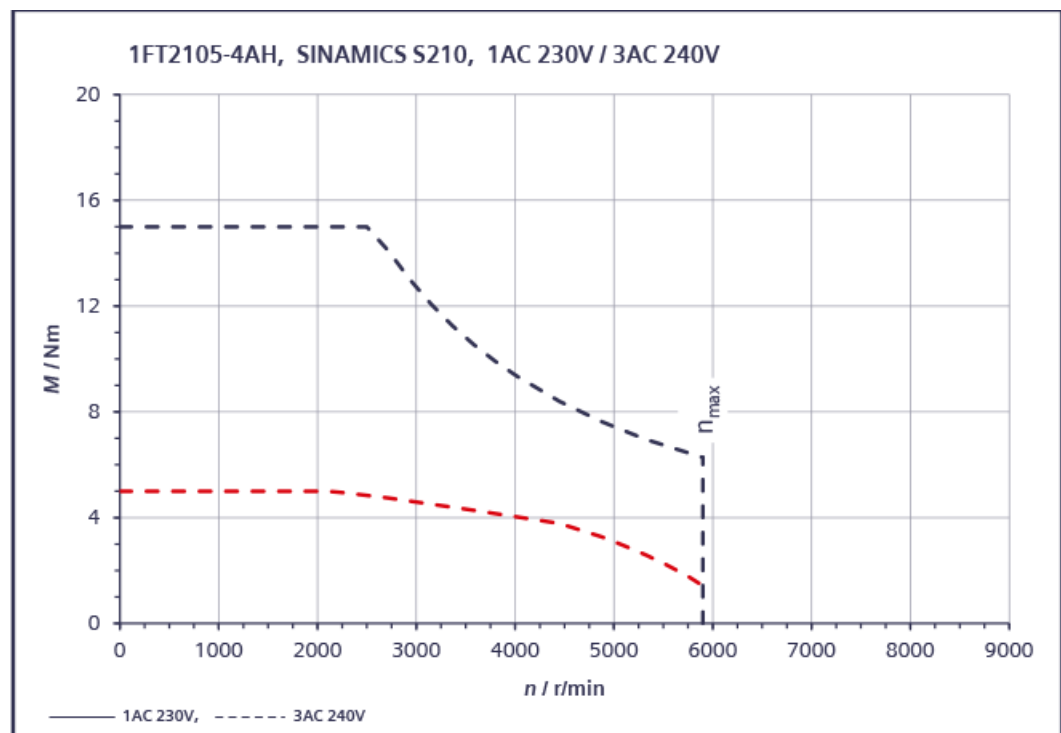


12.2.17.12 1FT2105-6AF connected to 3 AC 240 V

1FT2105-6AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	8
Stall current	I_0	A	6.7
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	24
Maximum current	I_{max}	A	24
Thermal time constant	T_{th}	min	40
Rotor moment of inertia	J_{mot}	kgcm ²	2.65
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	3.5
Weight	m_{mot}	kg	7.7
Weight (with brake)	$m_{mot br}$	kg	8.7
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8
Rated current	I_{rated}	A	6.7
Rated power	P_{rated}	kW	1.26

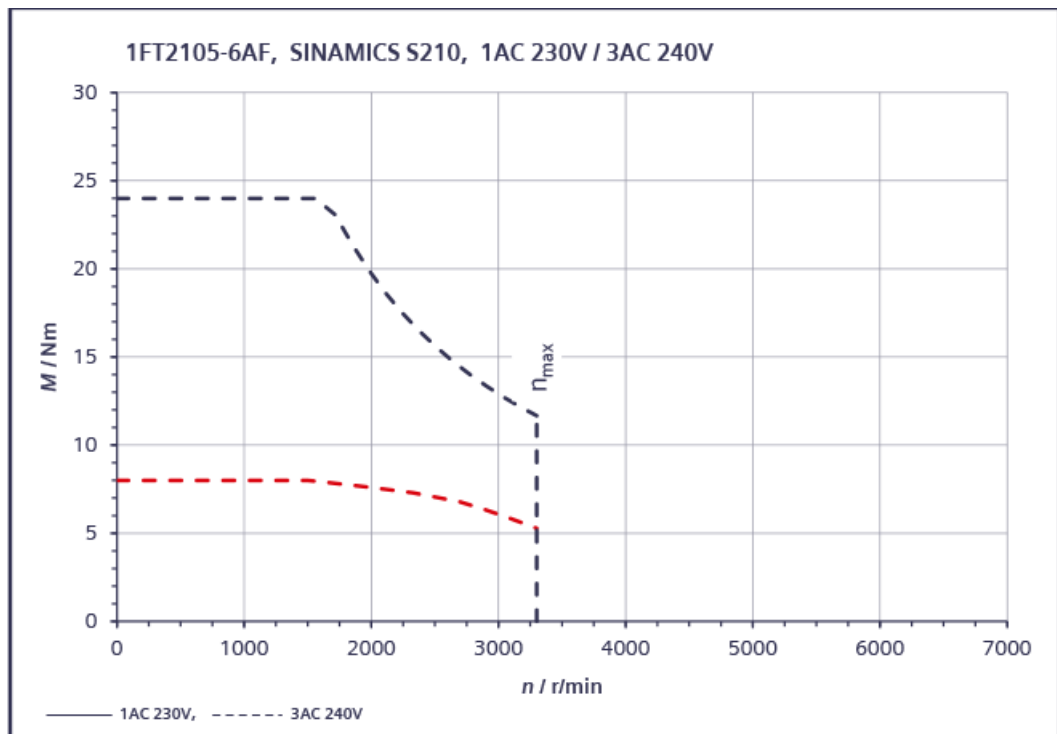


12.2.17.13 1FT2106-3AF connected to 3 AC 240 V

1FT2106-3AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	9.2
Maximum permissible speed	n_{max}	r/min	4400
Maximum torque	M_{max}	Nm	26
Maximum current	I_{max}	A	43
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	4.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6.3
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8.3
Rated current	I_{rated}	A	8.7
Rated power	P_{rated}	kW	1.3

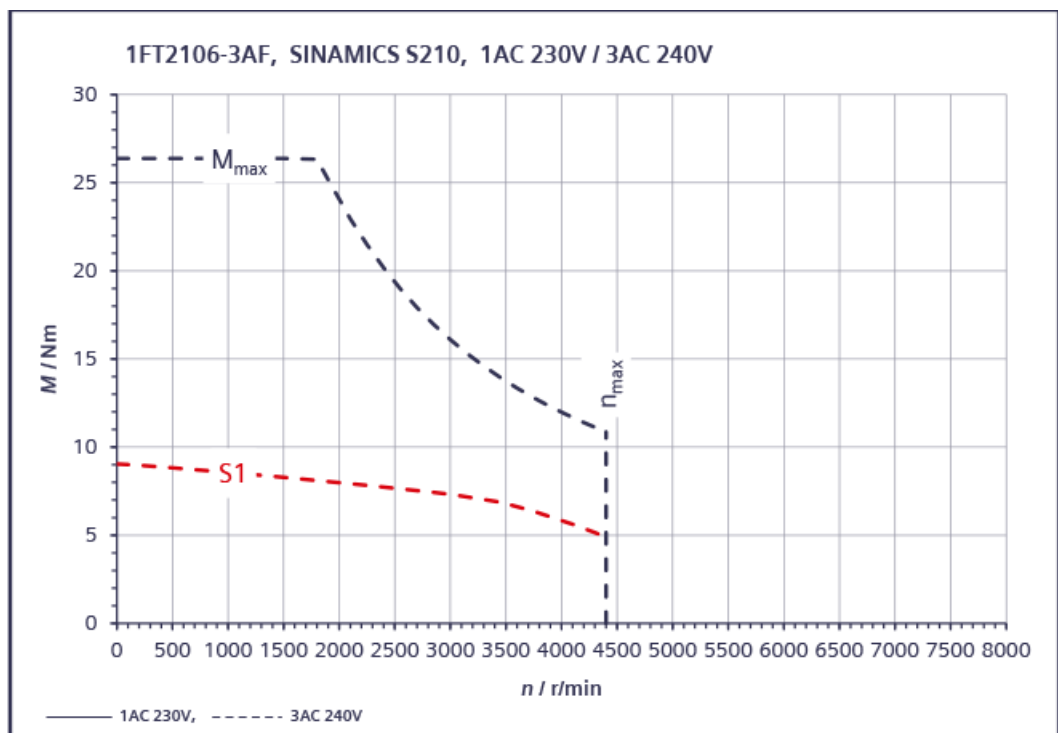


12.2.17.14 1FT2106-4AF connected to 3 AC 240 V

1FT2106-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	10.7
Maximum permissible speed	n_{max}	r/min	3950
Maximum torque	M_{max}	Nm	33
Maximum current	I_{max}	A	42
Thermal time constant	T_{th}	min	34
Rotor moment of inertia	J_{mot}	kgcm ²	6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	7.6
Weight	m_{mot}	kg	9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	10.5
Rated current	I_{rated}	A	9.6
Rated power	P_{rated}	kW	1.64

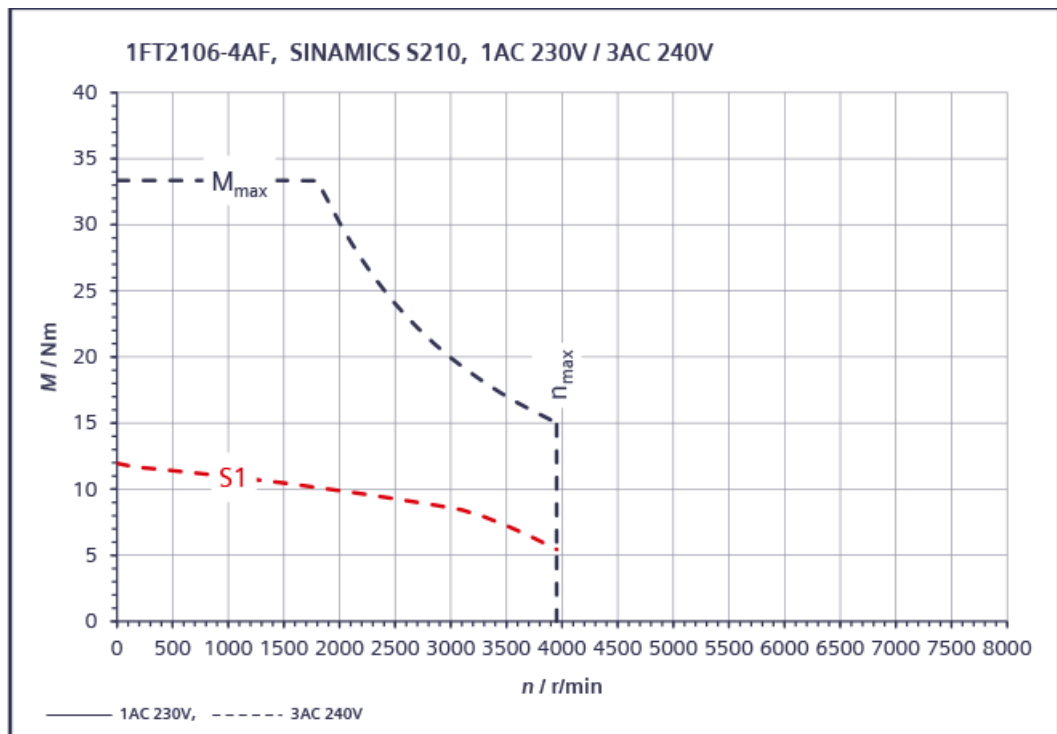


12.2.17.15 1FT2106-6AF connected to 3 AC 240 V

1FT2106-6AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	16
Stall current	I_0	A	14.3
Maximum permissible speed	n_{max}	r/min	3850
Maximum torque	M_{max}	Nm	45.5
Maximum current	I_{max}	A	49
Thermal time constant	T_{th}	min	50
Rotor moment of inertia	J_{mot}	kgcm ²	8.7
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	10.4
Weight	m_{mot}	kg	11.8
Weight (with brake)	$m_{mot br}$	kg	13.4
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	13.8
Rated current	I_{rated}	A	12.5
Rated power	P_{rated}	kW	2.15

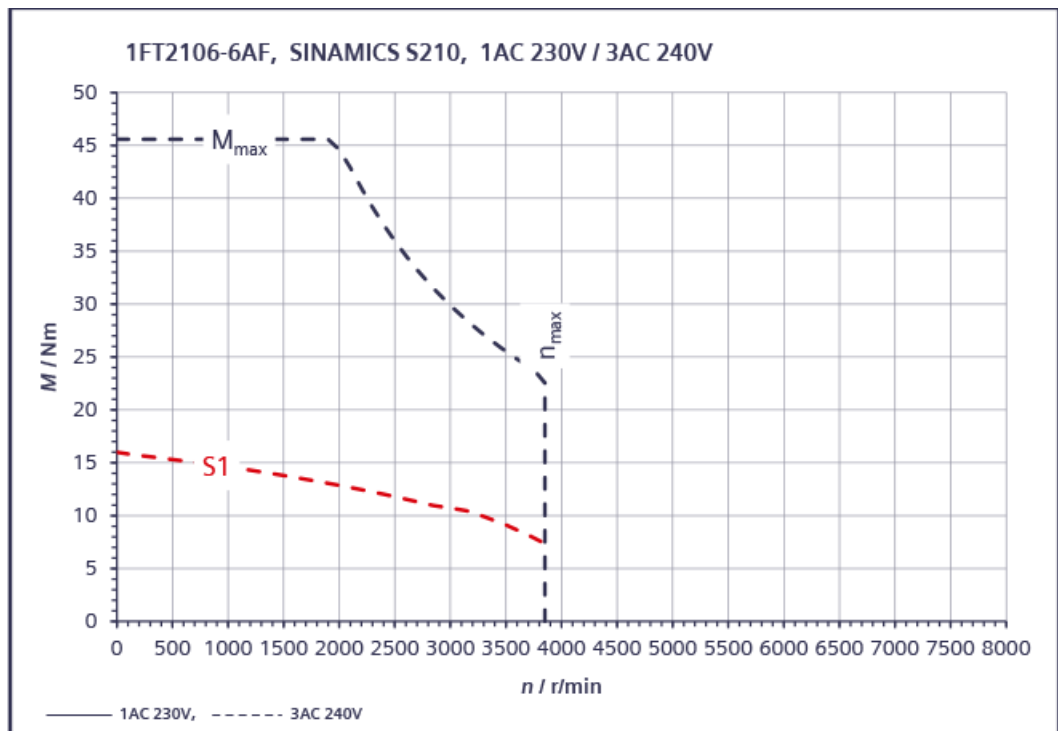


12.2.17.16 1FT2203-2AG connected to 230 V 1 AC / 240 V 3 AC

1FT2203-2AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.38
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.85
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.2
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.22
Weight	m_{mot}	kg	1.15
Weight (with brake)	$m_{mot br}$	kg	1.52
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	0.64
Rated current	I_{rated}	A	1.38
Rated power	P_{rated}	kW	0.2

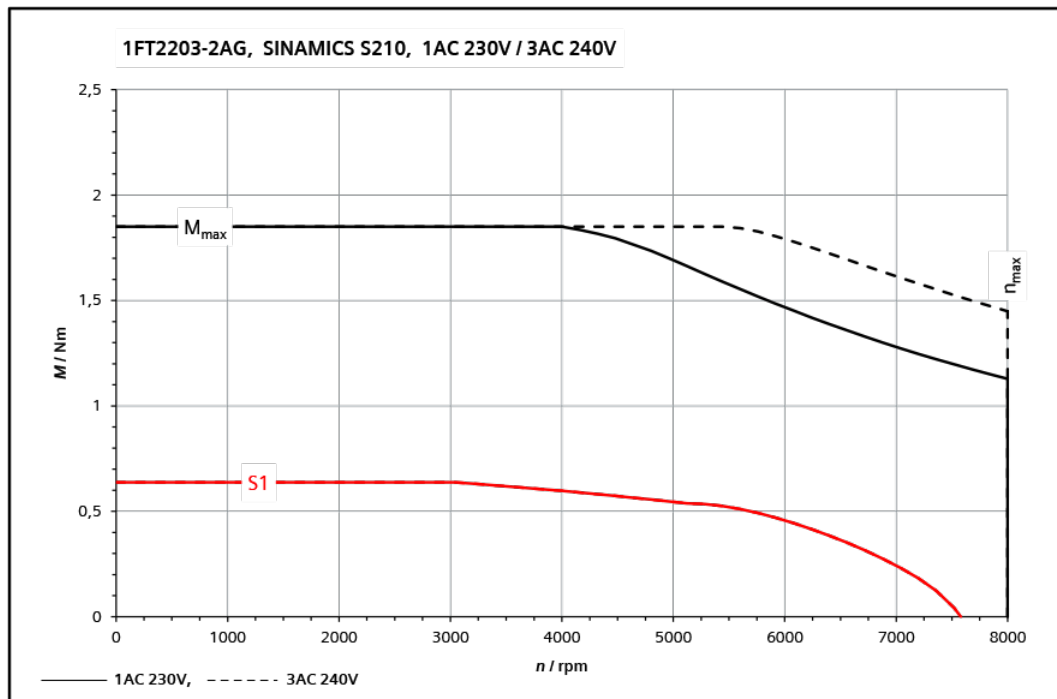


12.2.17.17 1FT2203-4AG connected to 230 V 1 AC / 240 V 3 AC

1FT2203-4AG	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.52
Maximum permissible speed	n_{max}	r/min	7800
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	7.8
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.37
Weight	m_{mot}	kg	1.48
Weight (with brake)	$m_{mot br}$	kg	1.96
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	2.52
Rated power	P_{rated}	kW	0.4

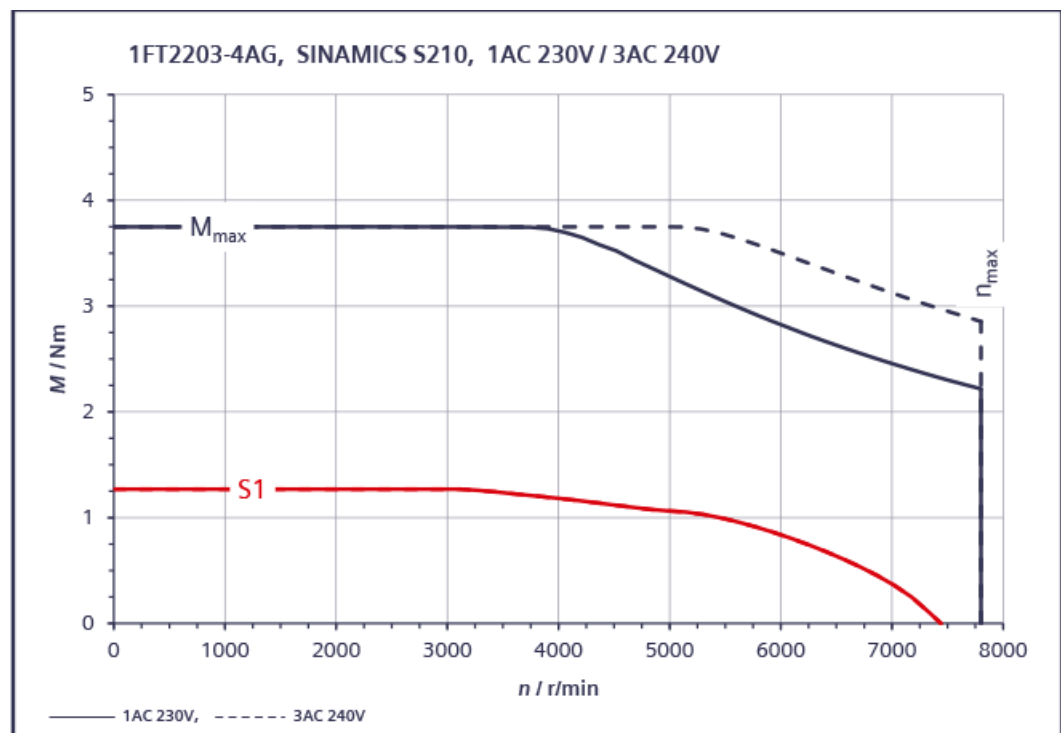


12.2.17.18 1FT2204-5AF connected to 230 V 1 AC / 240 V 3 AC

1FT2204-5AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.25
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.25
Rated power	P_{rated}	kW	0.375

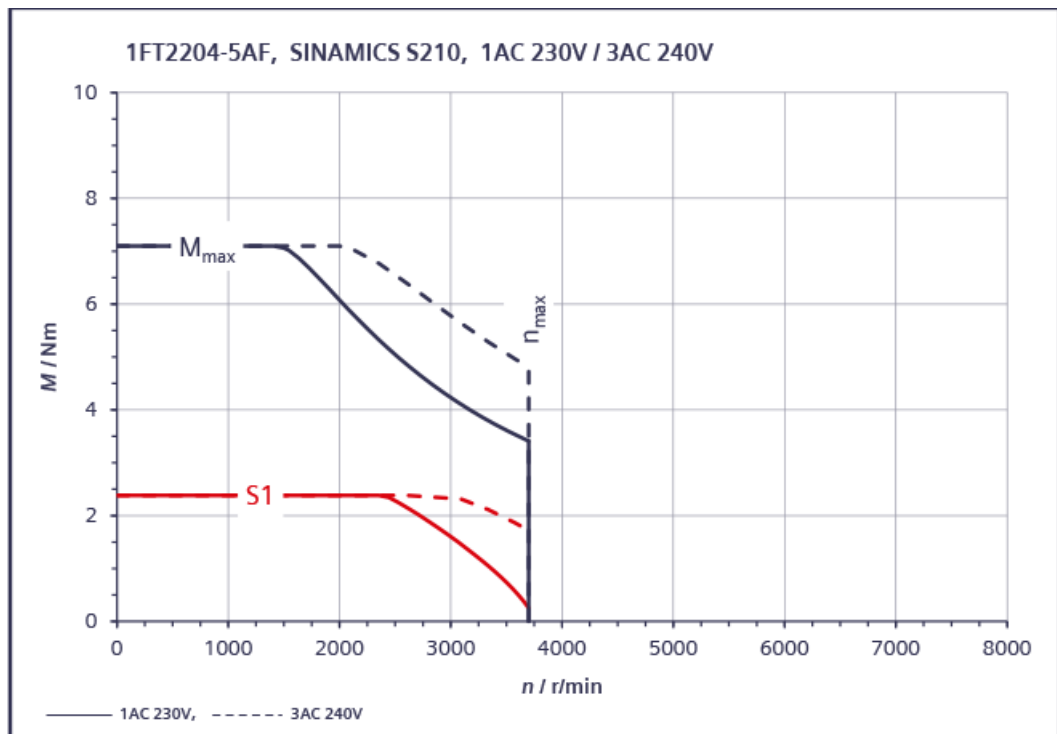


12.2.17.19 1FT2204-5AK connected to 230 V 1 AC / 240 V 3 AC

1FT2204-5AK	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	14.2
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	4.4
Rated power	P_{rated}	kW	0.75

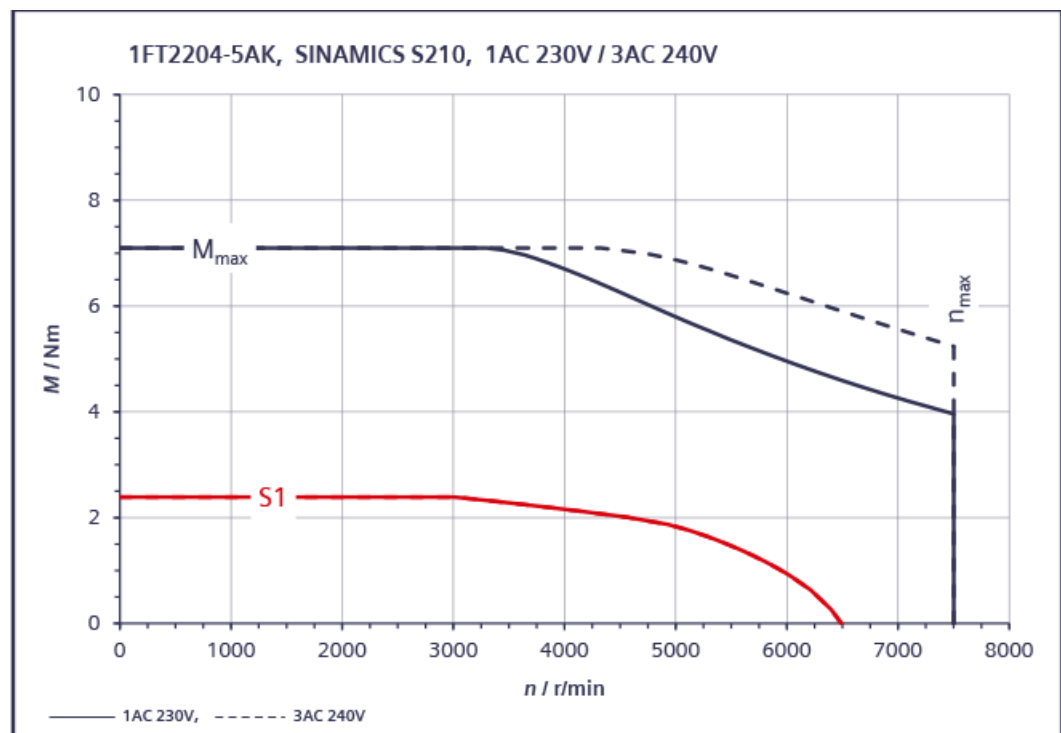


12.2.17.20 1FT2204-6AF connected to 230 V 1 AC / 240 V 3 AC

1FT2204-6AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	3700
Maximum torque	M_{max}	Nm	9.5
Maximum current	I_{max}	A	9.9
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	1.61
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.69
Weight	m_{mot}	kg	3.5
Weight (with brake)	$m_{mot br}$	kg	4.35
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	0.5

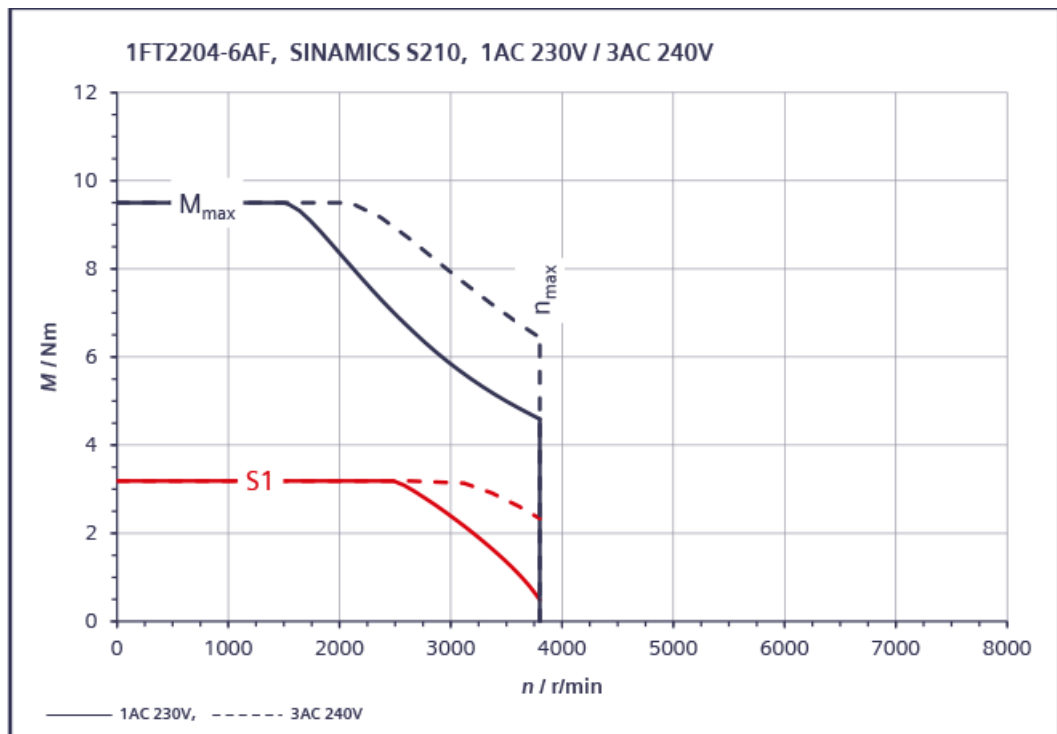


12.2.17.21 1FT2205-2AC connected to 1 AC 230 V / 3 AC 240 V

1FT2205-2AC	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	1.84
Maximum permissible speed	n_{max}	r/min	2400
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	6
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	3.45
Rated current	I_{rated}	A	1.79
Rated power	P_{rated}	kW	0.36

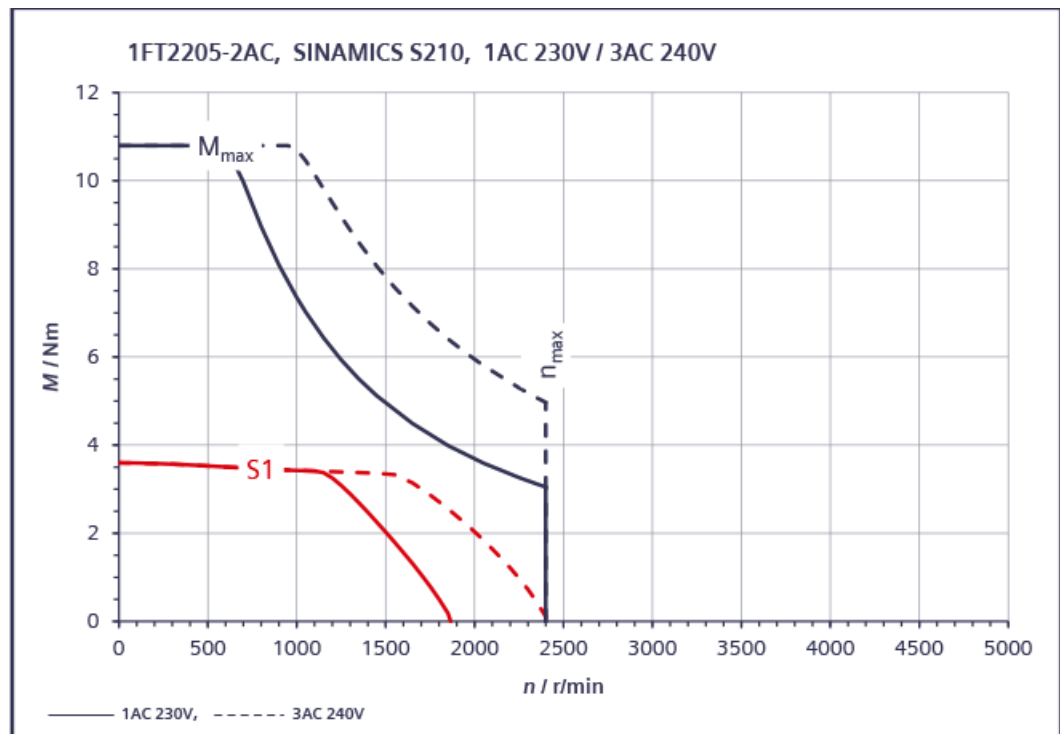


12.2.17.22 1FT2205-2AF connected to 230 V 1 AC / 240 V 3 AC

1FT2205-2AF	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	2.9
Maximum permissible speed	n_{max}	r/min	3200
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	9.5
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	3.4
Rated current	I_{rated}	A	2.8
Rated power	P_{rated}	kW	0.53

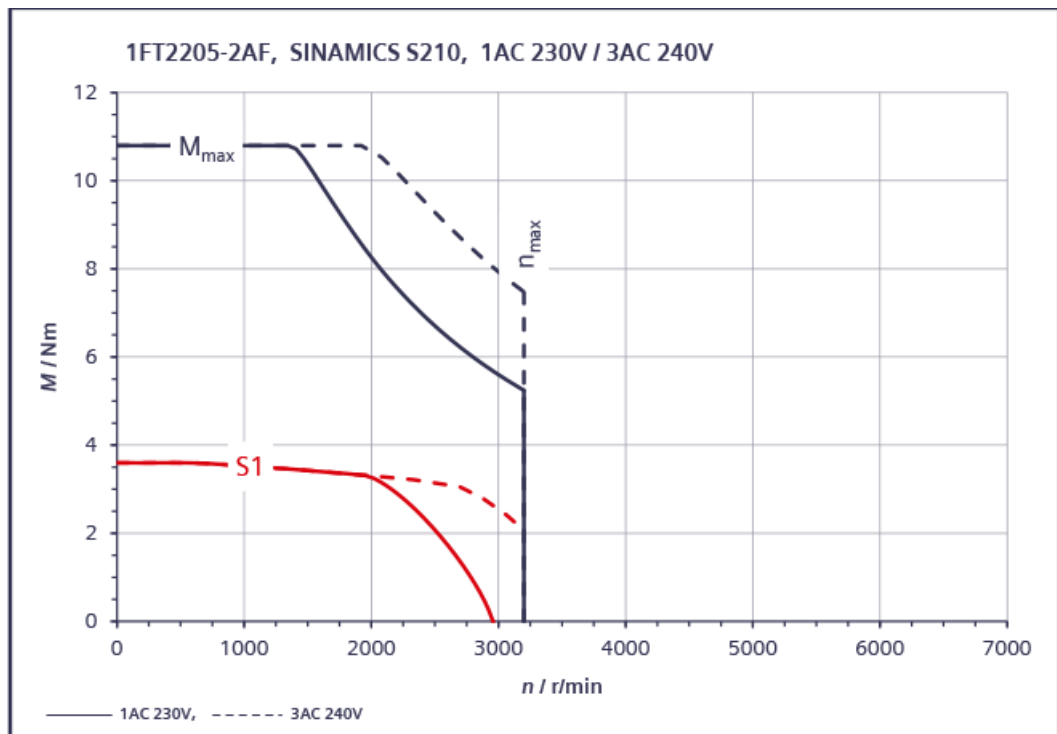


12.2.17.23 1FT2205-2AH connected to 230 V 1 AC / 240 V 3 AC

1FT2205-2AH	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	3.8
Maximum permissible speed	n_{max}	r/min	4250
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	12.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	2500
Rated torque	M_{rated}	Nm	3.15
Rated current	I_{rated}	A	3.45
Rated power	P_{rated}	kW	0.82

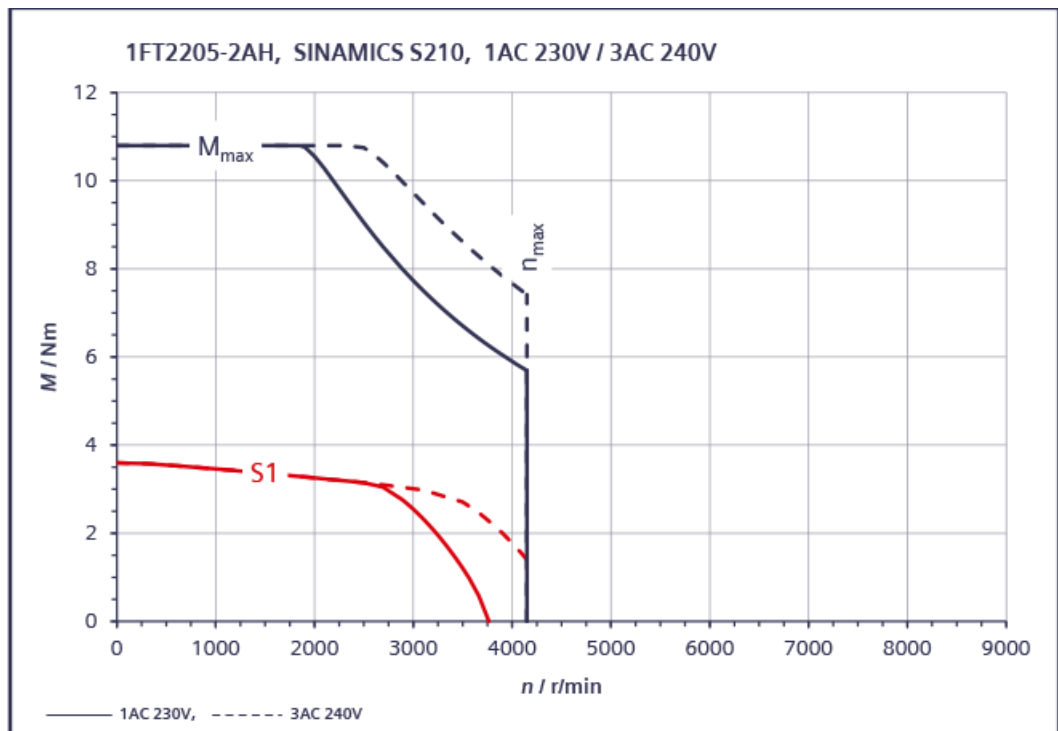


12.2.17.24 1FT2205-4AF connected to 230 V 1 AC / 240 V 3 AC

1FT2205-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6
Stall current	I_0	A	4.7
Maximum permissible speed	n_{max}	r/min	3100
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	15.1
Thermal time constant	T_{th}	min	31
Rotor moment of inertia	J_{mot}	kgcm ²	5.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6
Weight	m_{mot}	kg	5.2
Weight (with brake)	$m_{mot br}$	kg	6.2
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	5.5
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	0.86

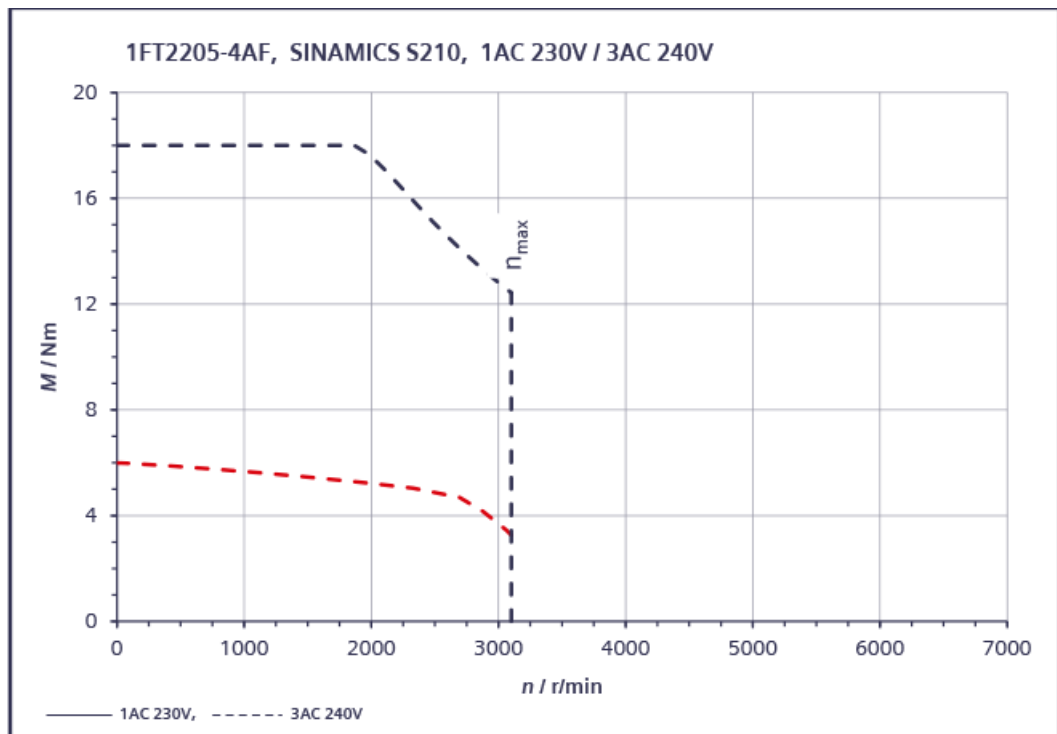


12.2.17.25 1FT2206-2AF connected to 230 V 1 AC / 240 V 3 AC

1FT2206-2AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	5
Maximum permissible speed	n_{max}	r/min	3400
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	17.8
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	6.1
Rated current	I_{rated}	A	4.8
Rated power	P_{rated}	kW	0.97

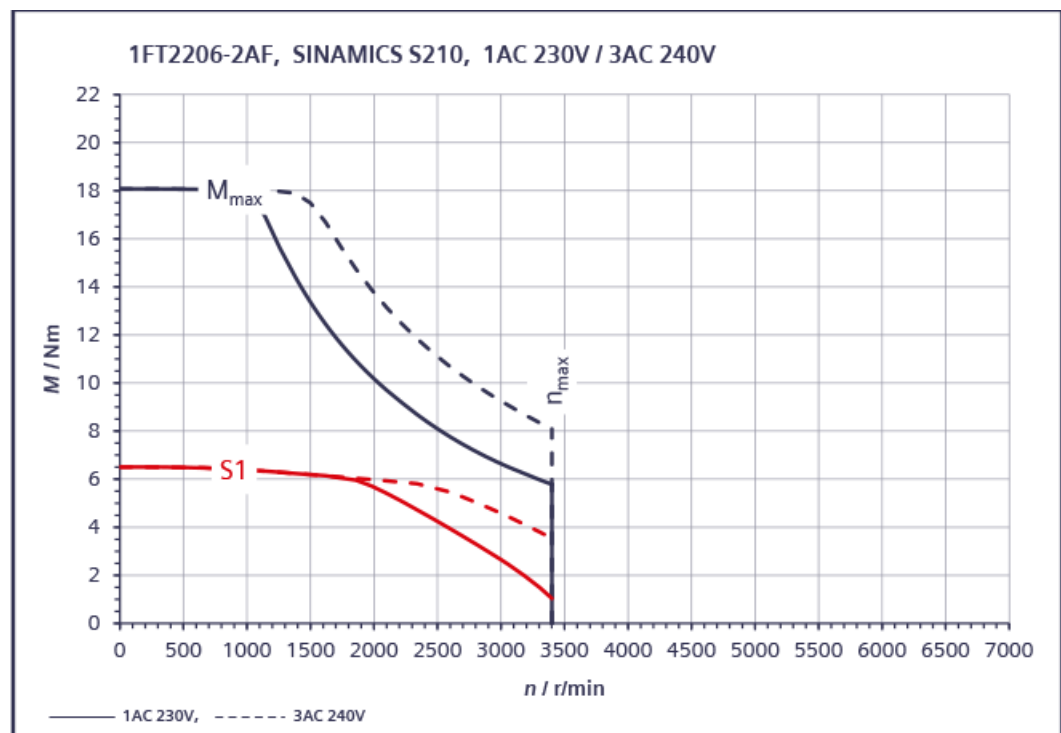


12.2.17.26 1FT2206-2AH connected to 3 AC 240 V

1FT2206-2AH	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	6.5
Maximum permissible speed	n_{max}	r/min	4250
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	22.5
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	2500
Rated torque	M_{rated}	Nm	5.5
Rated current	I_{rated}	A	5.7
Rated power	P_{rated}	kW	1.45

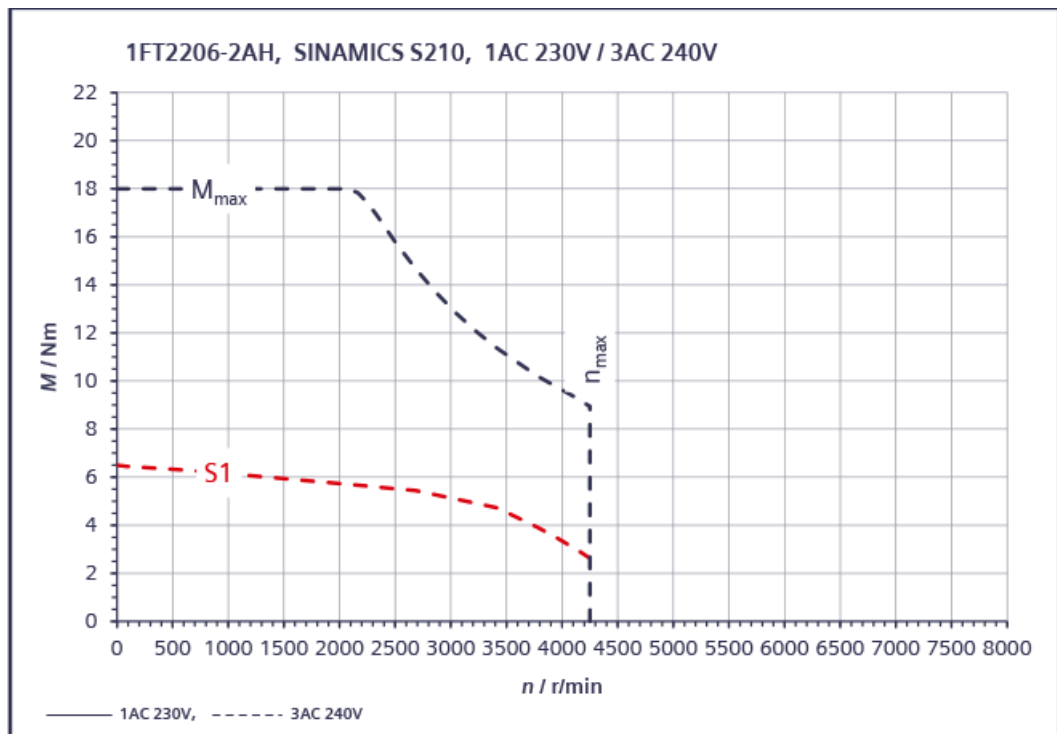


12.2.17.27 1FT2206-3AB connected to 1 AC 230 V / 3 AC 240 V

1FT2206-3AB	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	3.15
Maximum permissible speed	n_{max}	r/min	1620
Maximum torque	M_{max}	Nm	27
Maximum current	I_{max}	A	11.4
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	11.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	13.1
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	2500
Rated torque	M_{rated}	Nm	3.15
Rated current	I_{rated}	A	3.45
Rated power	P_{rated}	kW	0.82

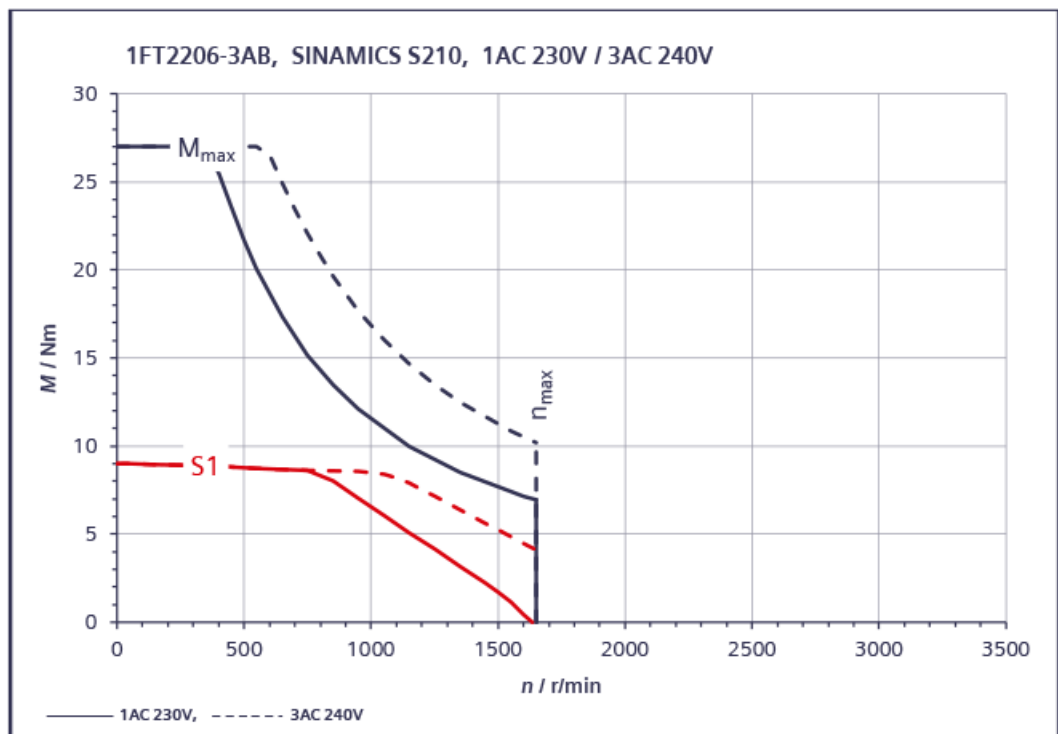


12.2.17.28 1FT2206-3AF connected to 1 AC 230 V / 3 AC 240 V

1FT2206-3AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	5.4
Maximum permissible speed	n_{max}	r/min	2850
Maximum torque	M_{max}	Nm	27
Maximum current	I_{max}	A	19.7
Thermal time constant	T_{th}	min	330
Rotor moment of inertia	J_{mot}	kgcm ²	11.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	13.1
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8.2
Rated current	I_{rated}	A	5
Rated power	P_{rated}	kW	1.29

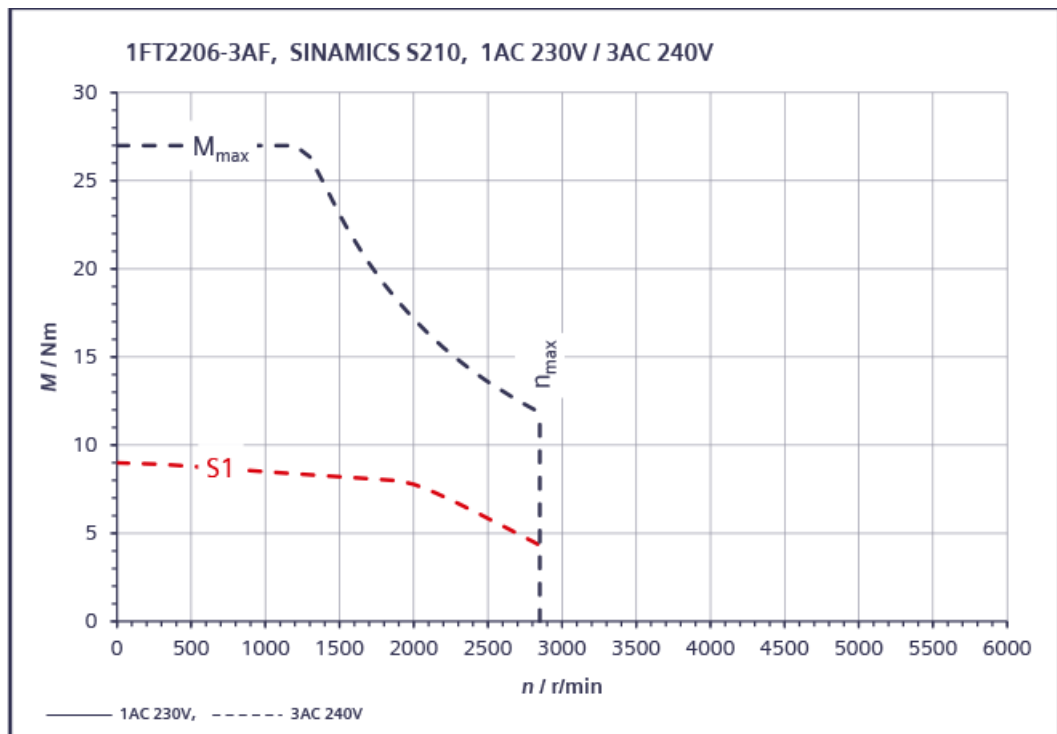


12.2.17.29 1FT2206-4AF connected to 3 AC 240 V

1FT2206-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	7.9
Maximum permissible speed	n_{max}	r/min	2900
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	10.9
Rated current	I_{rated}	A	7.3
Rated power	P_{rated}	kW	1.72

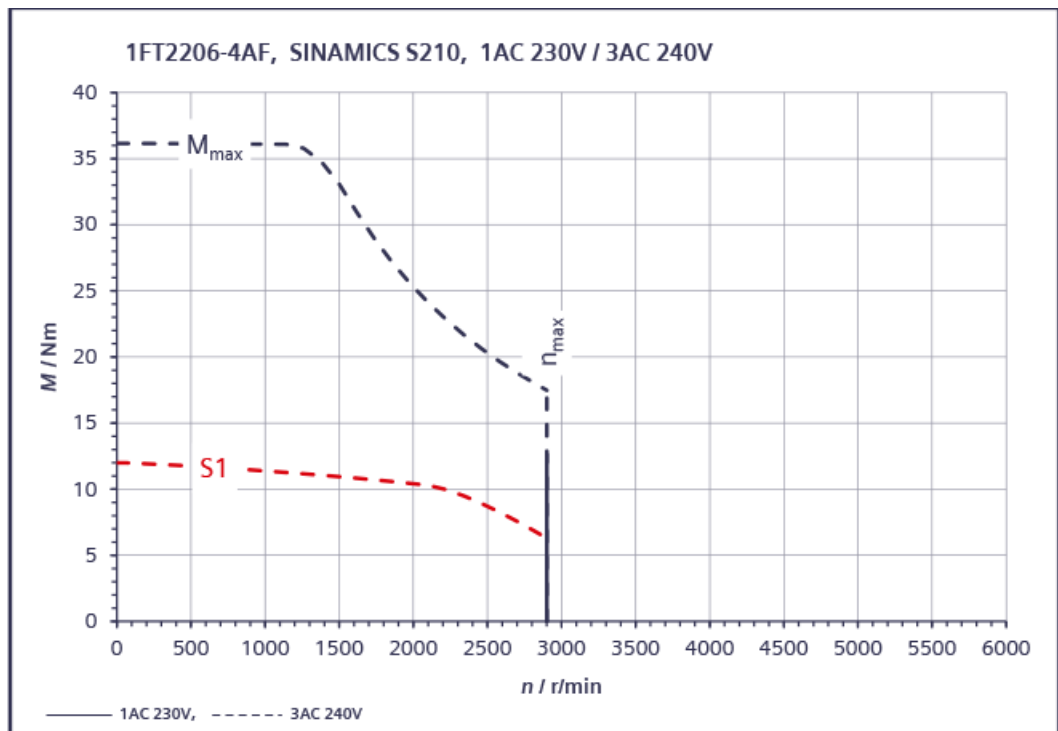


12.2.17.30 1FT2206-4AH connected to 3 AC 240 V

1FT2206-4AH	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	12
Maximum permissible speed	n_{max}	r/min	4350
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	44
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	2500
Rated torque	M_{rated}	Nm	9.3
Rated current	I_{rated}	A	9.8
Rated power	P_{rated}	kW	2.4

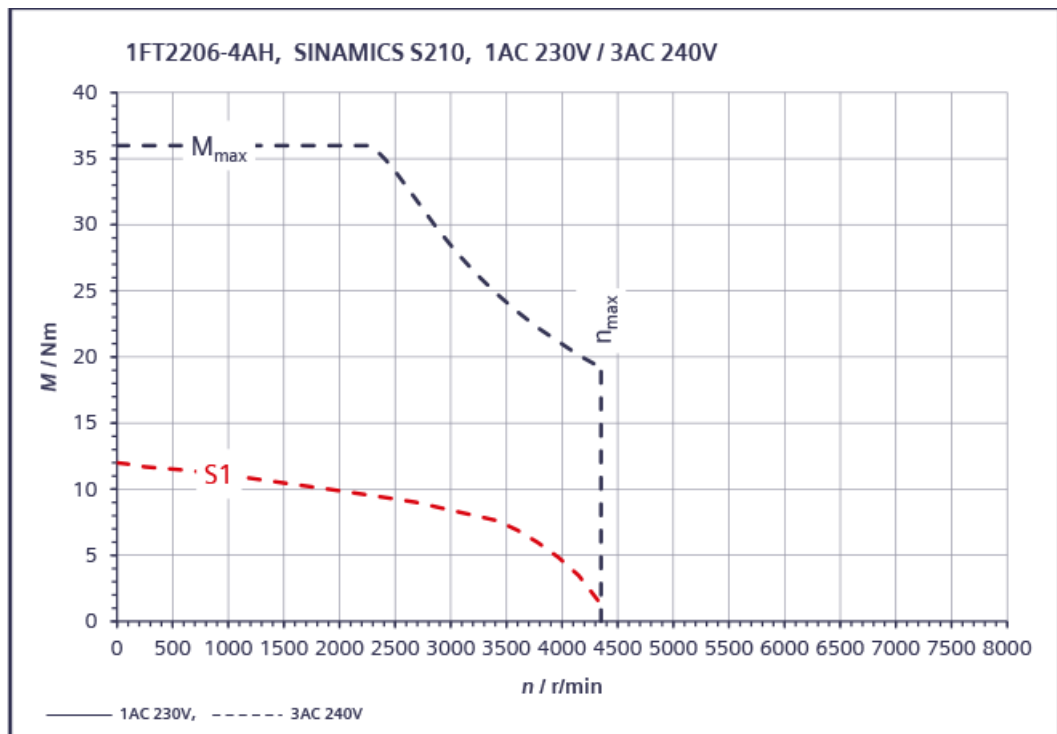


12.2.17.31 1FT2208-3AC connected to 3 AC 240 V

1FT2208-3AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	8.4
Maximum permissible speed	n_{max}	r/min	2050
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.6
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	16.6
Rated current	I_{rated}	A	7.9
Rated power	P_{rated}	kW	1.74

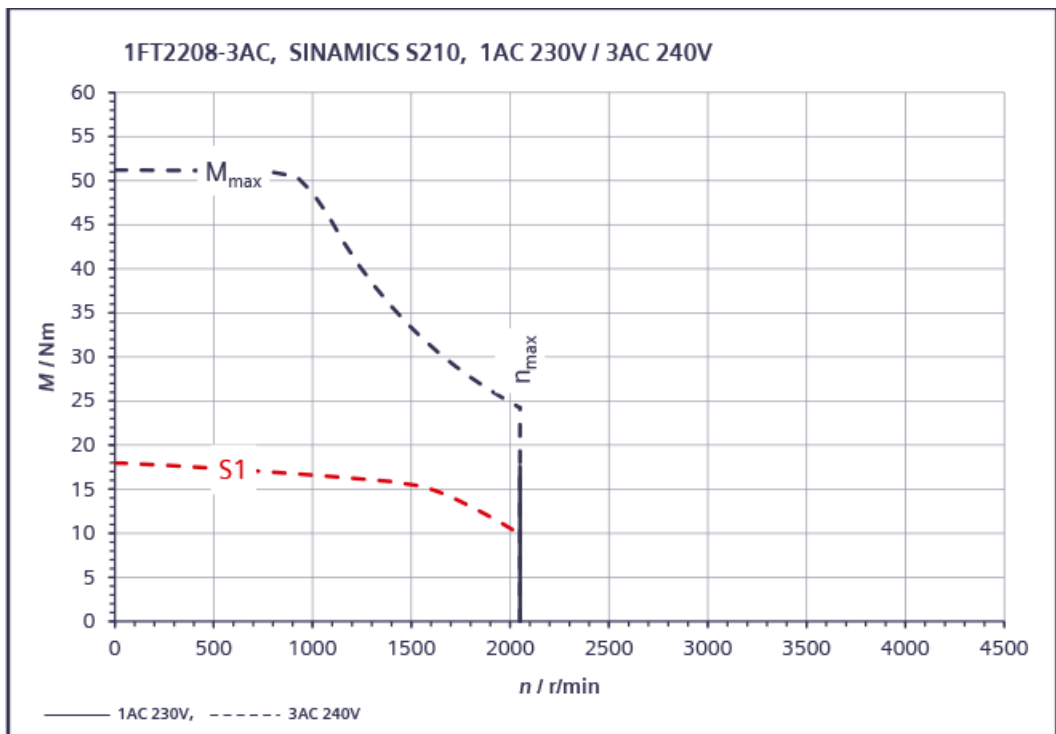


12.2.17.32 1FT2208-3AF connected to 3 AC 240 V

1FT2208-3AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	11.9
Maximum permissible speed	n_{max}	r/min	2800
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	40
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.6
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	15.4
Rated current	I_{rated}	A	10.4
Rated power	P_{rated}	kW	2.4

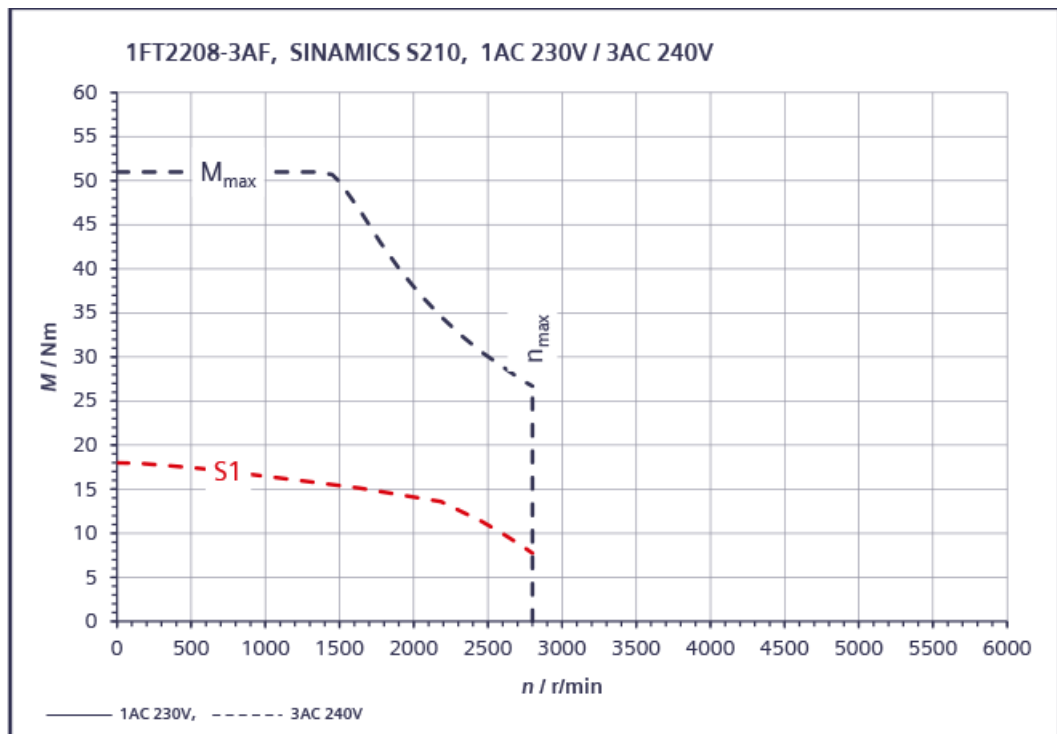


12.2.17.33 1FT2208-4AC connected to 3 AC 240 V

1FT2208-4AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	11.7
Maximum permissible speed	n_{max}	r/min	2300
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	20
Rated current	I_{rated}	A	10.9
Rated power	P_{rated}	kW	2.15

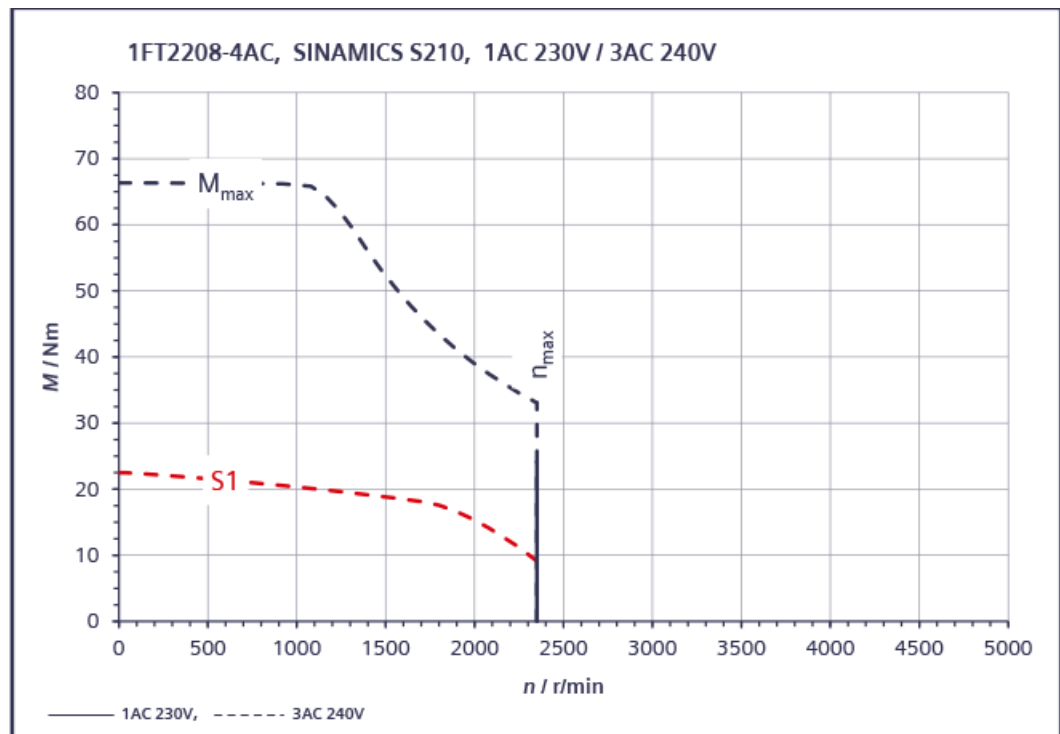


12.2.17.34 1FT2208-4AF connected to 3 AC 240 V

1FT2208-4AF	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	2950
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	17.6
Rated current	I_{rated}	A	12.4
Rated power	P_{rated}	kW	2.75

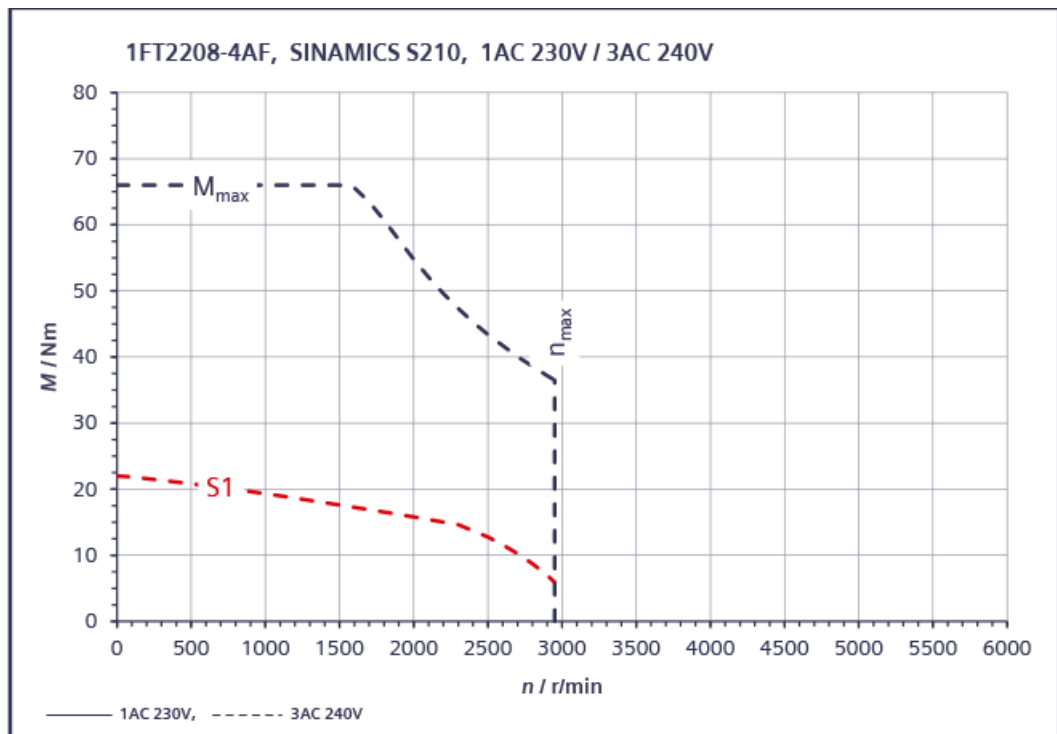


12.2.17.35 1FT2208-5AB connected to 3 AC 240 V

1FT2208-5AB	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	8.6
Maximum permissible speed	n_{max}	r/min	1490
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	24.5
Rated current	I_{rated}	A	7.9
Rated power	P_{rated}	kW	1.92

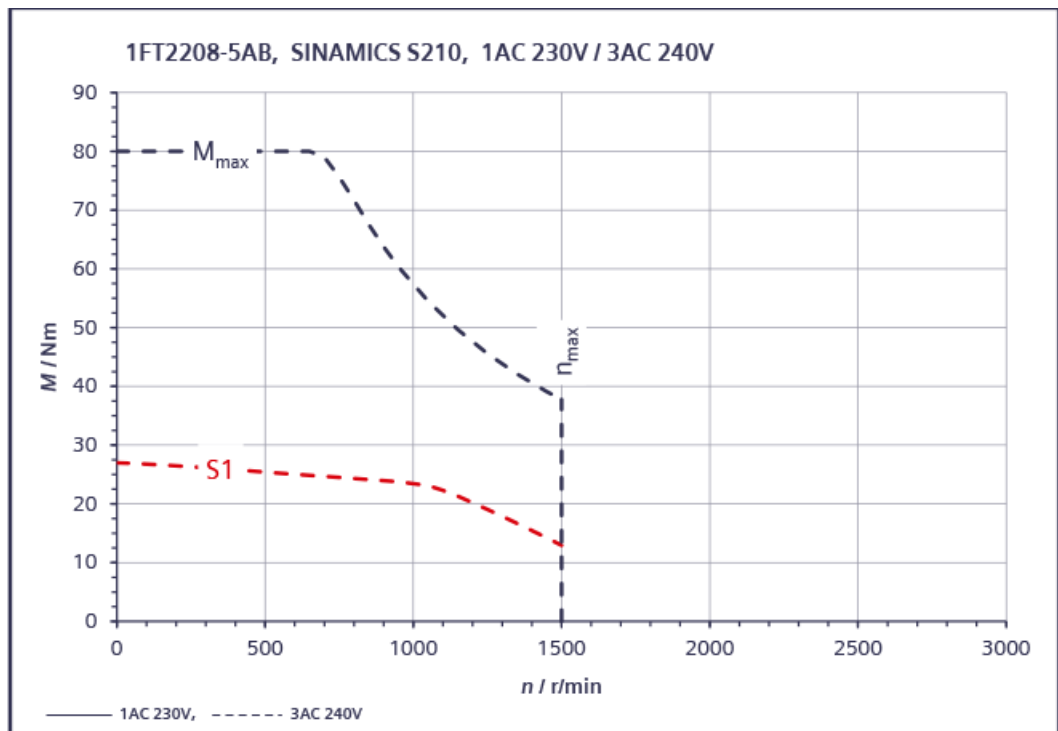


12.2.17.36 1FT2208-5AC connected to 3 AC 240 V

1FT2208-5AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	14.6
Maximum permissible speed	n_{max}	r/min	2350
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	51.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	23.5
Rated current	I_{rated}	A	13.2
Rated power	P_{rated}	kW	2.5

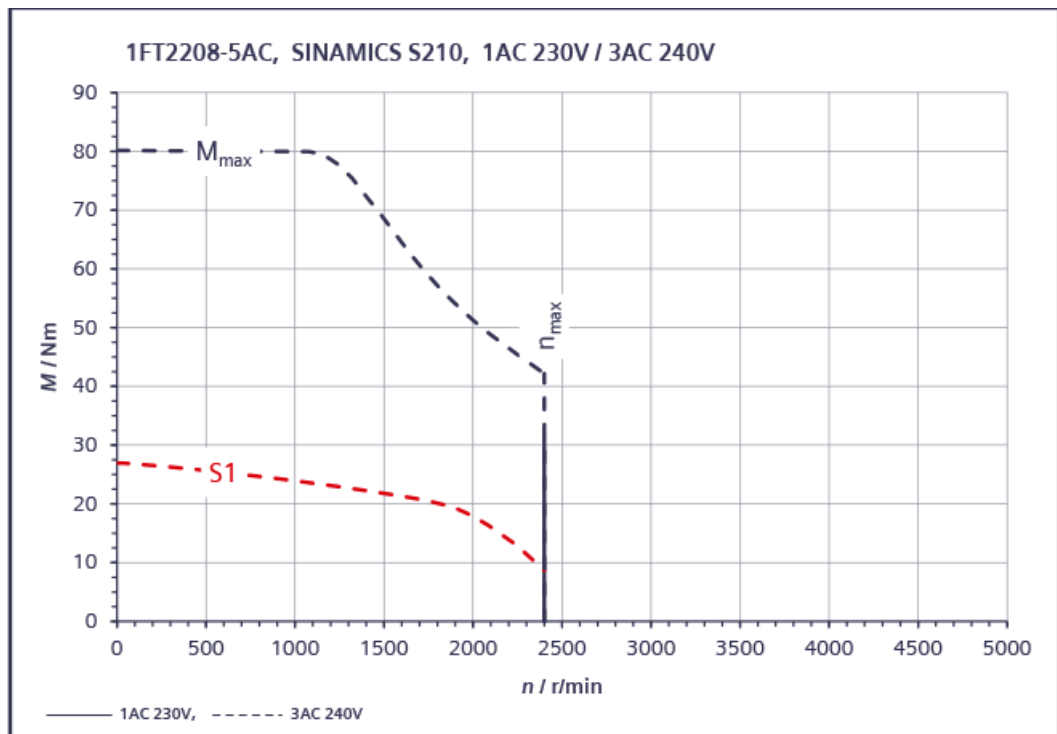


12.2.17.37 1FT2210-3AB connected to 3 AC 240 V

1FT2210-3AB	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	8.5
Maximum permissible speed	n_{max}	r/min	1250
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	31.5
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	30
Rated current	I_{rated}	A	8.6
Rated power	P_{rated}	kW	2.5

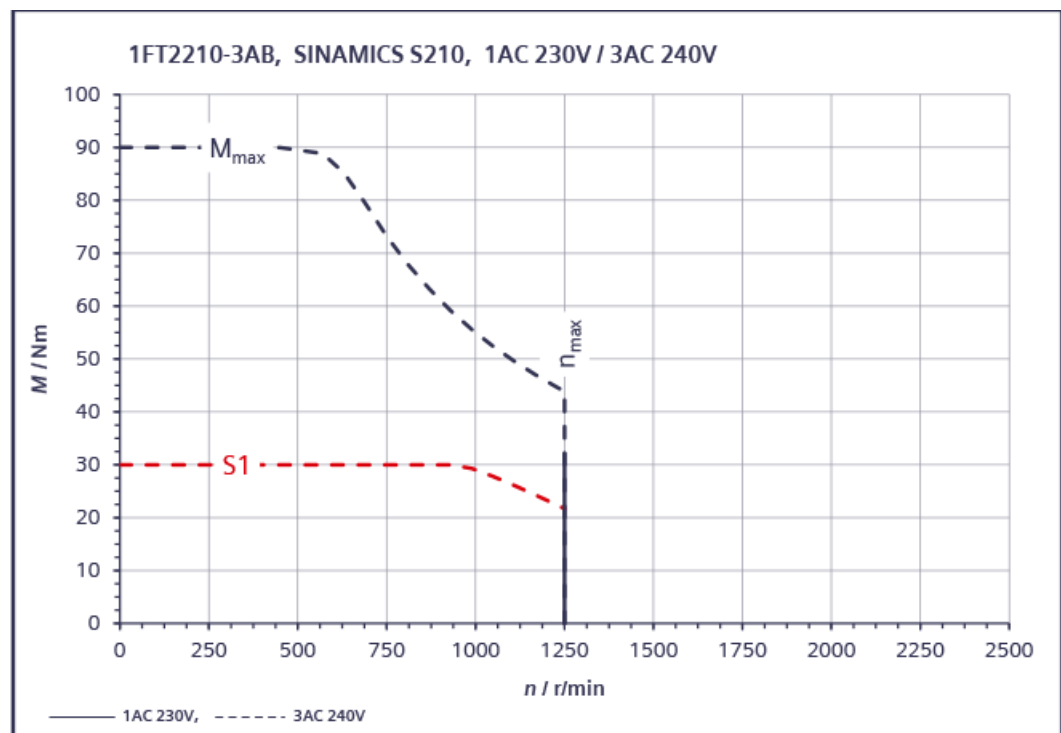


12.2.17.38 1FT2210-3AC connected to 3 AC 240 V

1FT2210-3AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	2200
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	30
Rated current	I_{rated}	A	15.5
Rated power	P_{rated}	kW	3.2

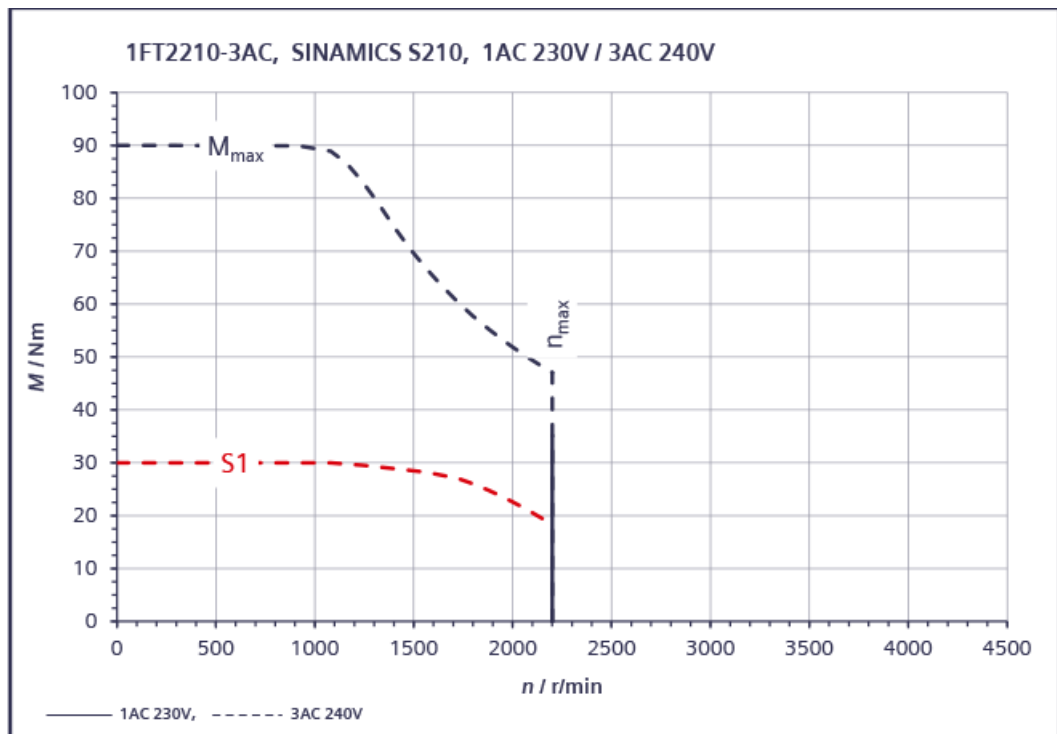


12.2.17.39 1FT2210-4AB connected to 3 AC 240 V

1FT2210-4AB	For 1 AC 230 V, 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	11.8
Maximum permissible speed	n_{max}	r/min	1250
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 1 AC 230 V, 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	39
Rated current	I_{rated}	A	11.6
Rated power	P_{rated}	kW	3.05

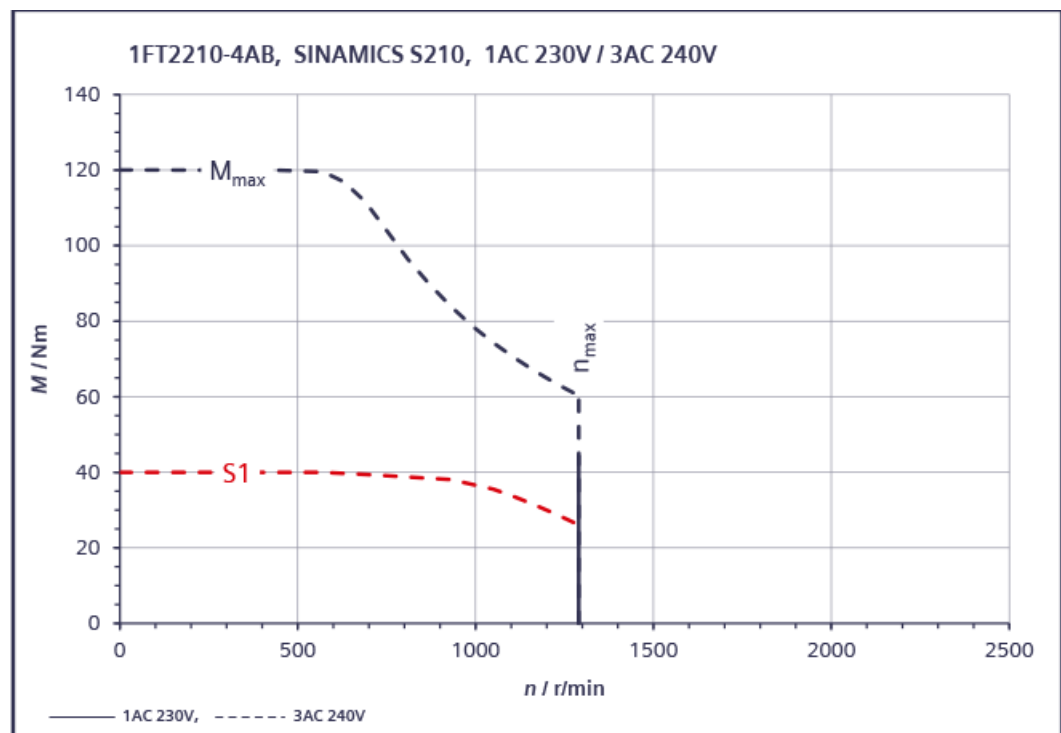


12.2.17.40 1FT2210-4AC connected to 3 AC 240 V

1FT2210-4AC	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	1650
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	1000
Rated torque	M_{rated}	Nm	37
Rated current	I_{rated}	A	14.3
Rated power	P_{rated}	kW	3.9

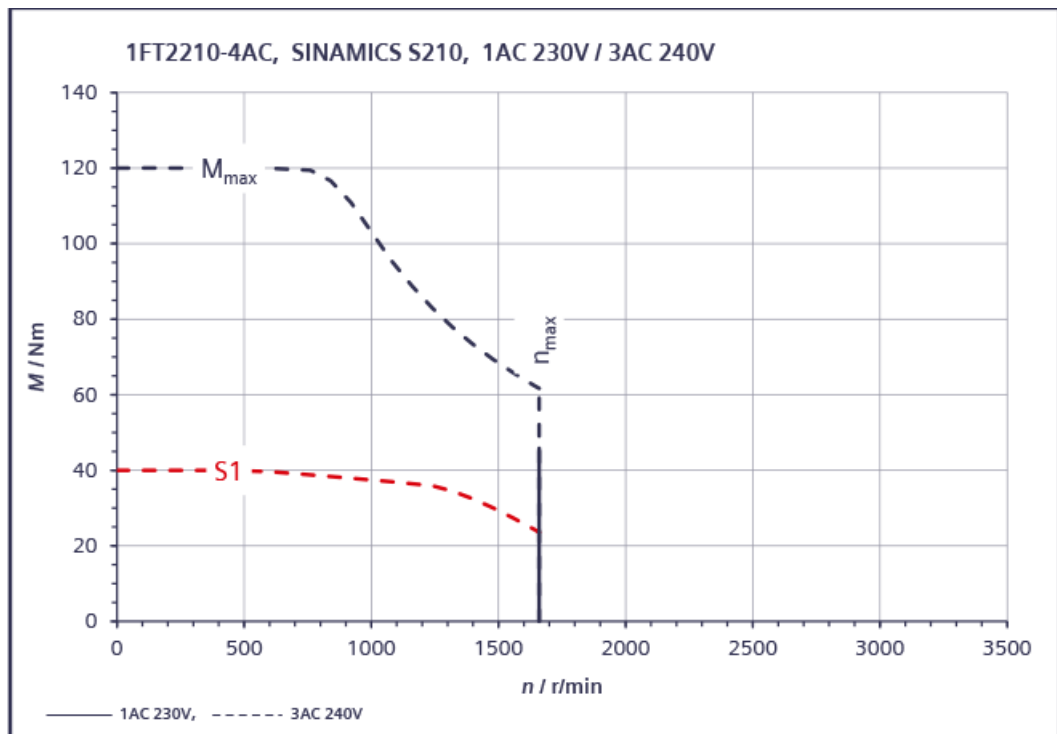

12.2.17.41 1FT2210-5AB connected to 1 AC 230 V / 3 AC 240 V


1FK2210-5AB	For 3 AC 240 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	50
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	1430
Maximum torque	M_{max}	Nm	150
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	14.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.1
Weight	m_{mot}	kg	32
Weight (with brake)	$m_{mot br}$	kg	36
Rated data for S210 connected to 3 AC 240 V			
Rated speed	n_{rated}	r/min	750
Rated torque	M_{rated}	Nm	44.5
Rated current	I_{rated}	A	13.6
Rated power	P_{rated}	kW	3.5

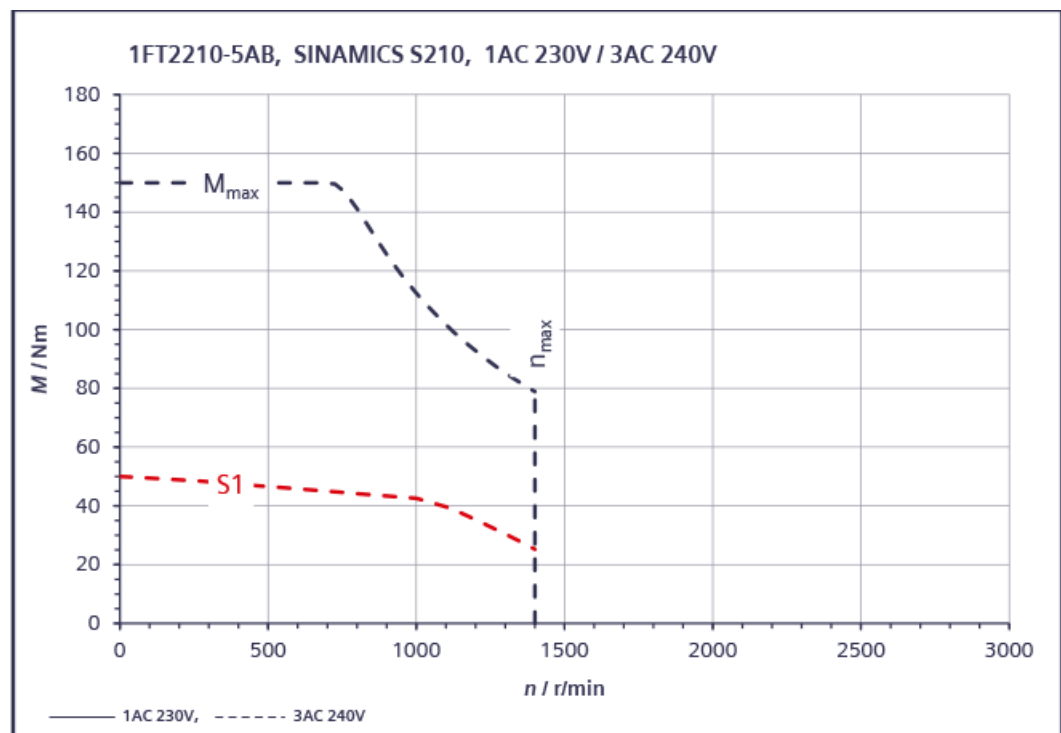

12.2.18 Technical data and characteristics of the 1FT2 connected to 3 AC 400 V, 3 AC 480 V


12.2.18.1 1FT2103-2AH connected to 3 AC 400 V / 3 AC 480 V

1FT2103-2AH	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.06
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.95
Maximum current	I_{max}	A	3.95
Thermal time constant	T_{th}	r/min	17
Rotor moment of inertia	J_{mot}	kgcm ²	0.093
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.112
Weight	m_{mot}	kg	1.18
Weight (with brake)	$m_{mot br}$	kg	1.55
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	0.59
Rated current	I_{rated}	A	1.05
Rated power	P_{rated}	kW	0.28

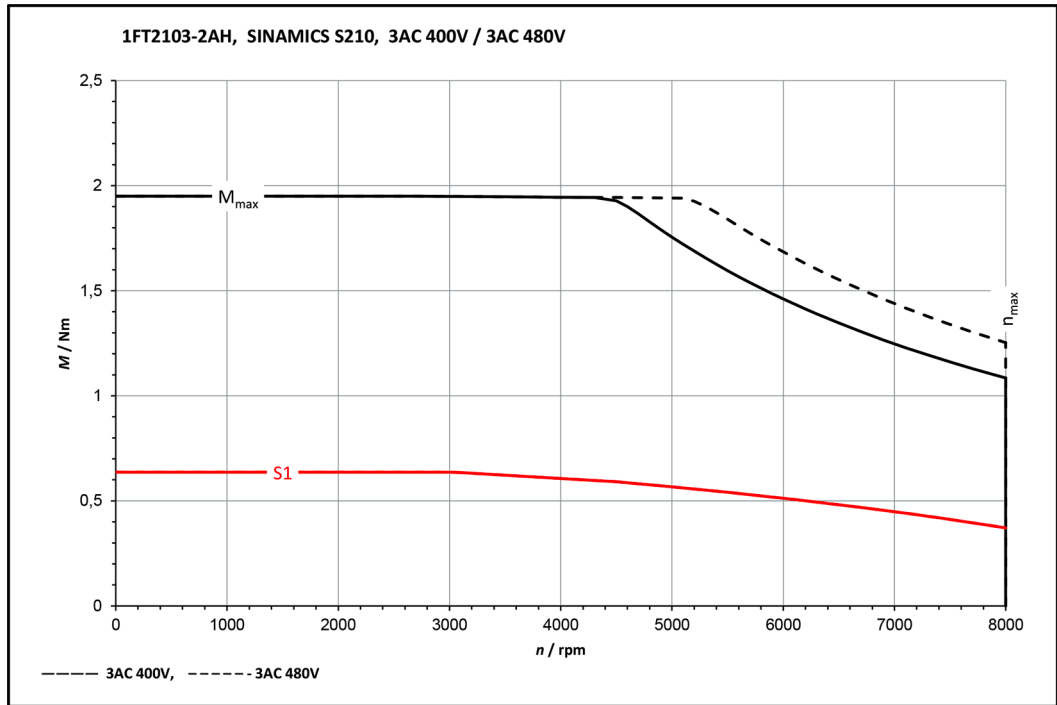


12.2.18.2 1FT2103-4AH connected to 3 AC 400 V / 3 AC 480 V

1FT2103-4AH	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.87
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	4.05
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.139
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.158
Weight	m_{mot}	kg	1.65
Weight (with brake)	$m_{mot br}$	kg	1.99
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	1.01
Rated current	I_{rated}	A	1.56
Rated power	P_{rated}	kW	0.48

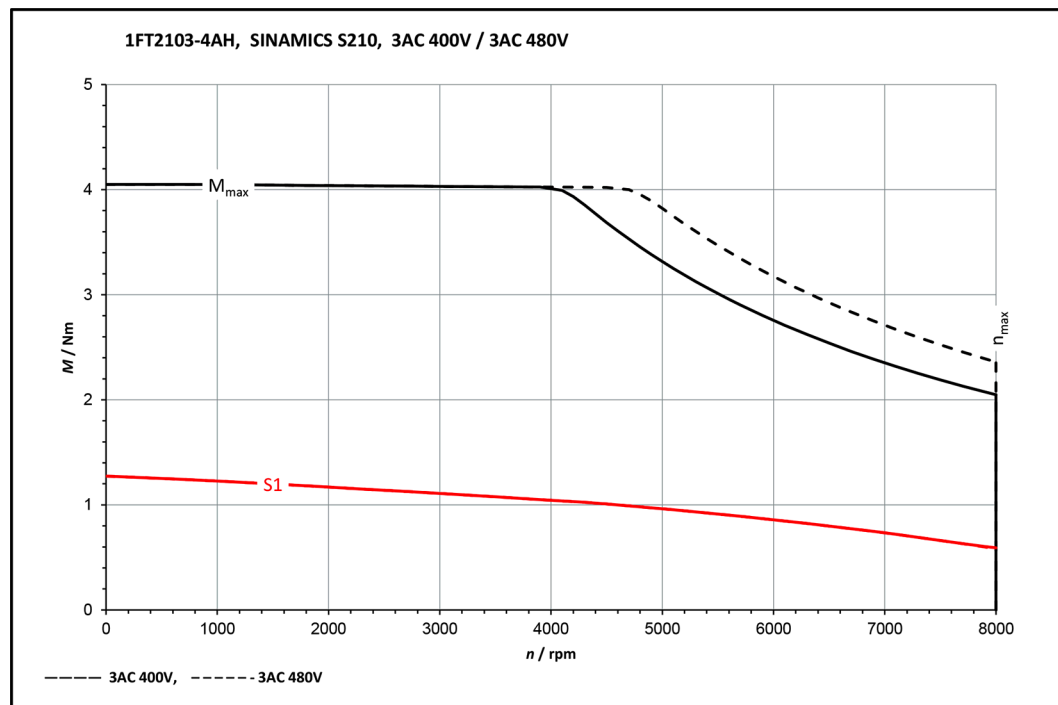


12.2.18.3 1FT2104-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2104-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	1.19
Maximum permissible speed	n_{max}	r/min	7200
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	4.2
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	1.27
Rated current	I_{rated}	A	1.19
Rated power	P_{rated}	kW	0.4

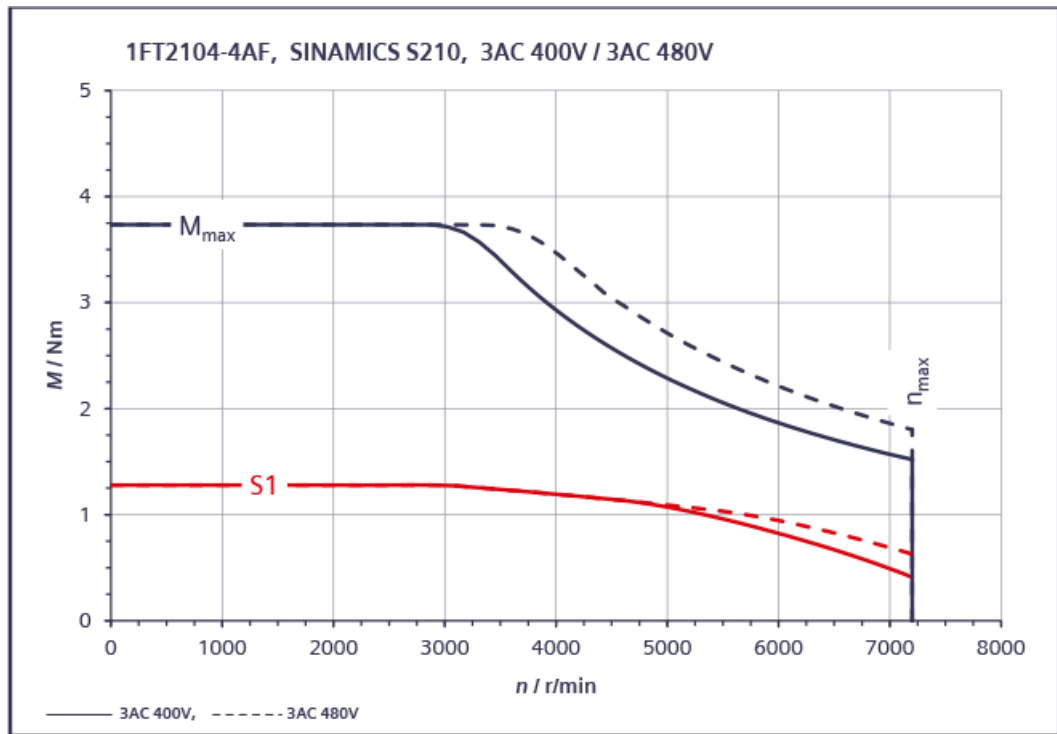


12.2.18.4 1FT2104-4AK connected to 3 AC 400 V / 3 AC 480 V

1FT2104-4AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	3.85
Maximum current	I_{max}	A	8.7
Thermal time constant	T_{th}	r/min	33
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.43
Weight	m_{mot}	kg	2.05
Weight (with brake)	$m_{mot br}$	kg	2.9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.95
Rated current	I_{rated}	A	1.88
Rated power	P_{rated}	kW	0.6

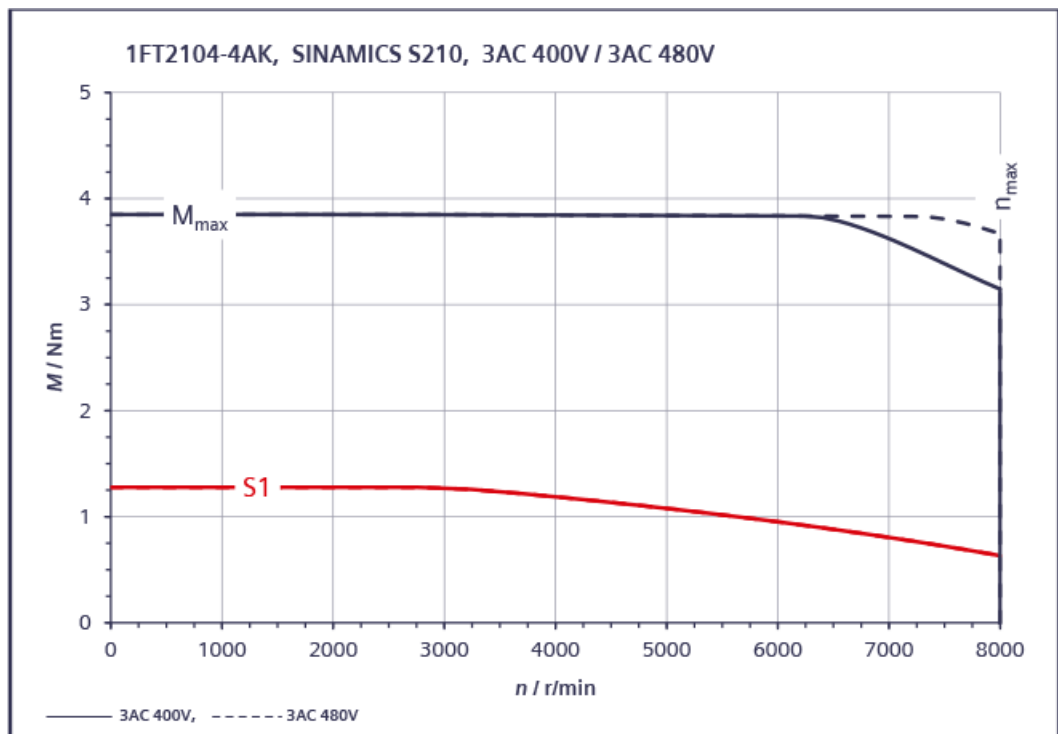


12.2.18.5 1FT2104-5AF connected to 400 V 3 AC / 480 V 3 AC

1FT2104-5AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.1
Maximum permissible speed	n_{max}	r/min	6700
Maximum torque	M_{max}	Nm	7.5
Maximum current	I_{max}	A	7.6
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.1
Rated power	P_{rated}	kW	0.75

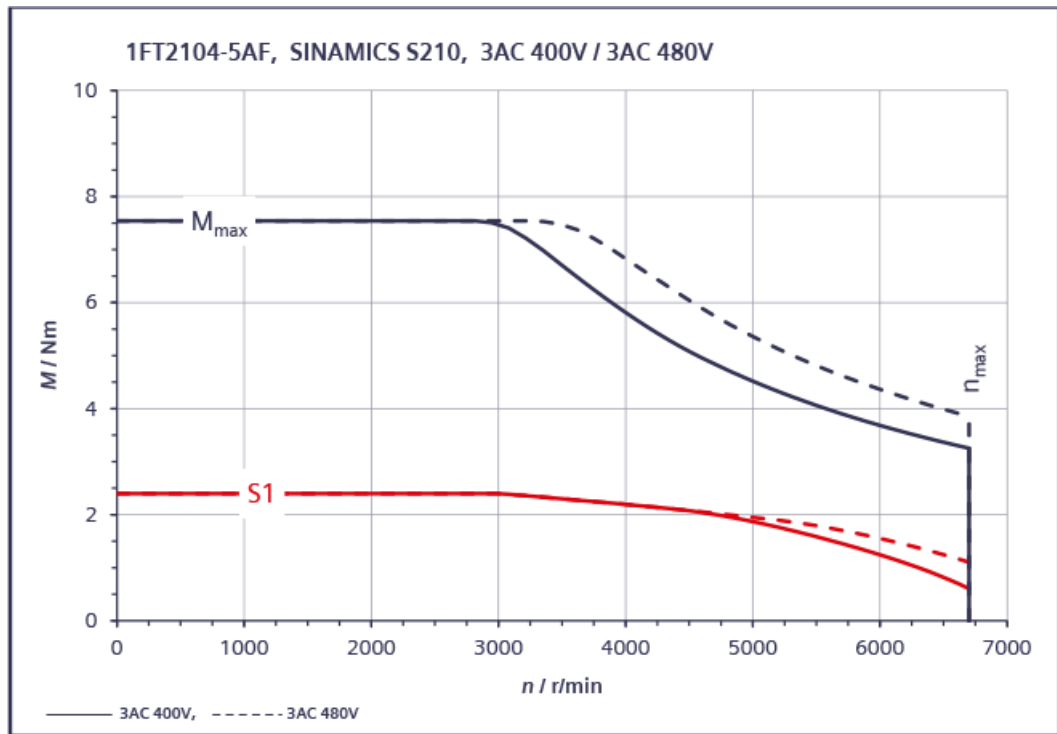


12.2.18.6 1FT2104-5AK connected to 3 AC 400 V / 3 AC 480 V

1FT2104-5AK	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	7.6
Maximum current	I_{max}	A	16
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	0.56
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.65
Weight	m_{mot}	kg	2.85
Weight (with brake)	$m_{mot br}$	kg	3.7
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	1.7
Rated current	I_{rated}	A	3.2
Rated power	P_{rated}	kW	1.07

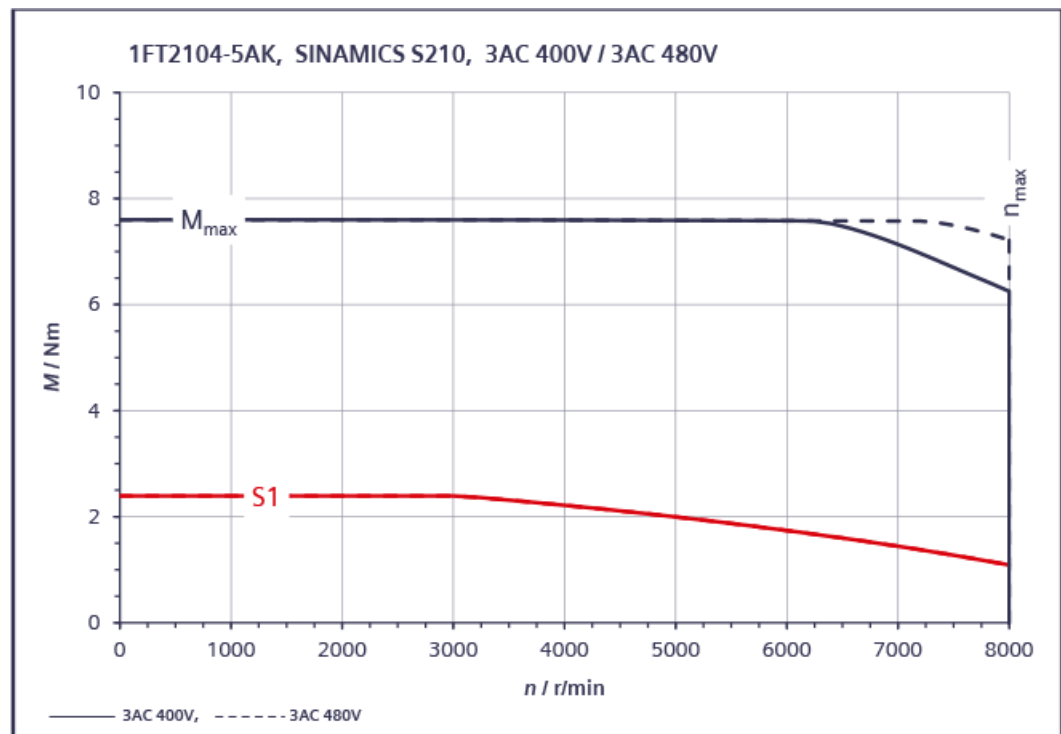


12.2.18.7 1FT2104-6AF connected to 3 AC 400 V / 3 AC 480 V

1FT2104-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	7200
Maximum torque	M_{max}	Nm	10
Maximum current	I_{max}	A	10.9
Thermal time constant	T_{th}	min	38
Rotor moment of inertia	J_{mot}	kgcm ²	0.76
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.84
Weight	m_{mot}	kg	3.4
Weight (with brake)	$m_{mot br}$	kg	4.25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	1

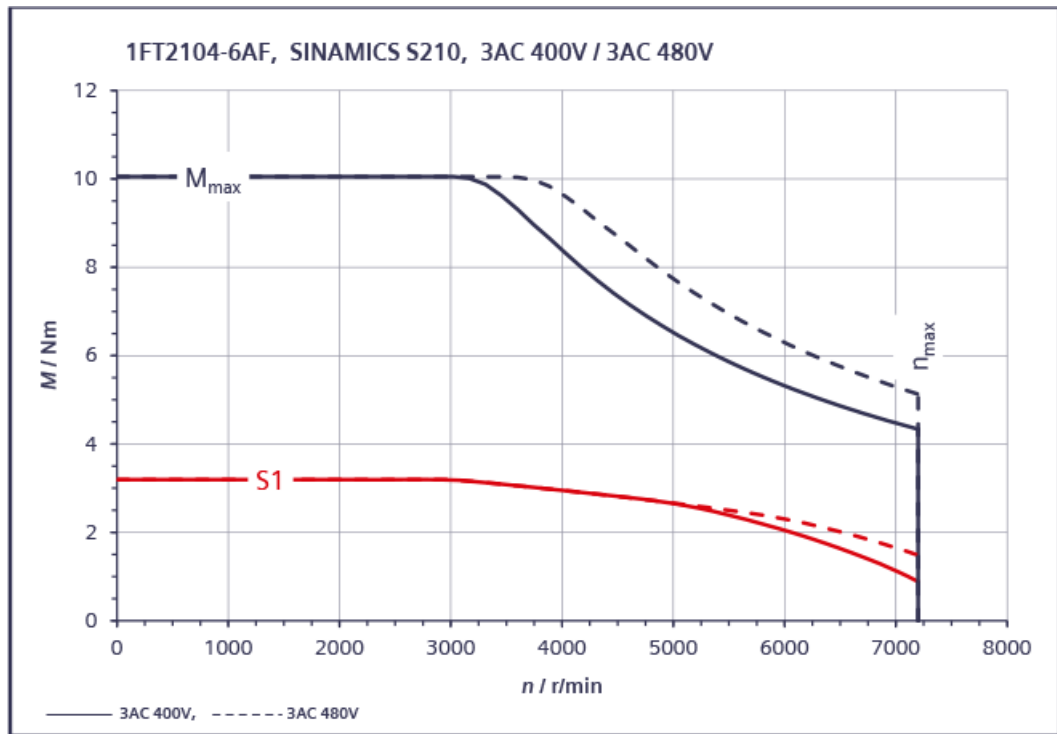


12.2.18.8 1FT2105-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2105-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	4.65
Maximum permissible speed	n_{max}	r/min	7400
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	18
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	4.6
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	1.45

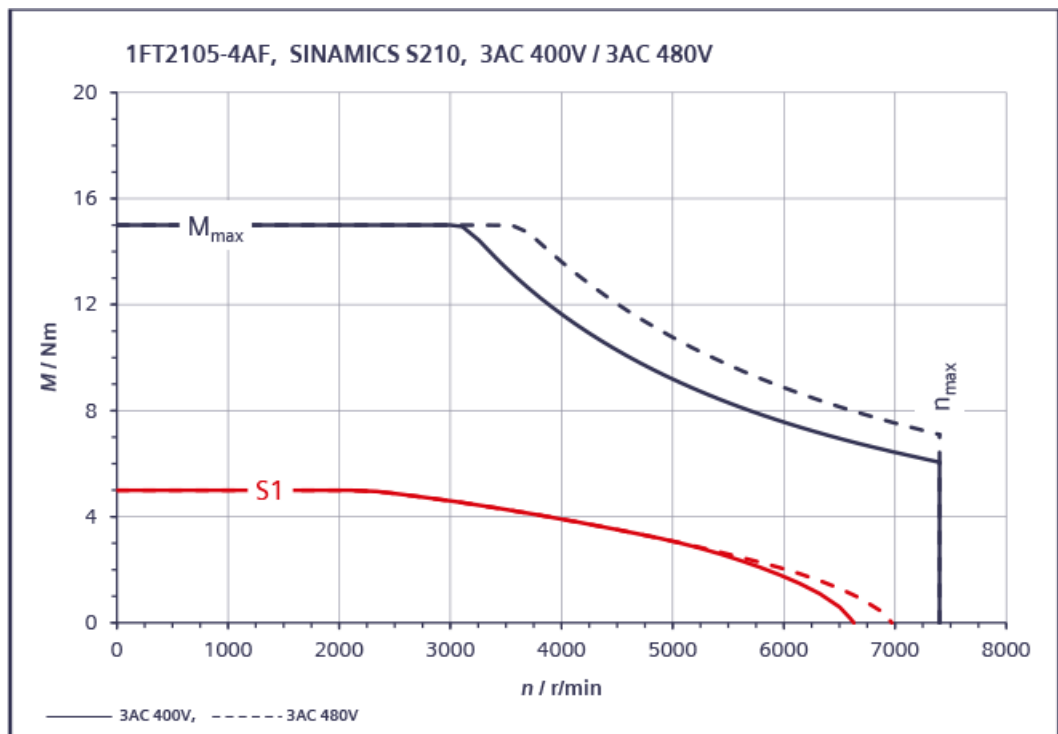


12.2.18.9 1FT2105-4AH connected to 400 V 3 AC / 480 V 3 AC

1FT2105-4AH	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	5
Stall current	I_0	A	6.9
Maximum permissible speed	n_{max}	r/min	9000
Maximum torque	M_{max}	Nm	15
Maximum current	I_{max}	A	27
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	1.71
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	2.55
Weight	m_{mot}	kg	5.6
Weight (with brake)	$m_{mot br}$	kg	6.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	3.7
Rated current	I_{rated}	A	5.4
Rated power	P_{rated}	kW	1.74

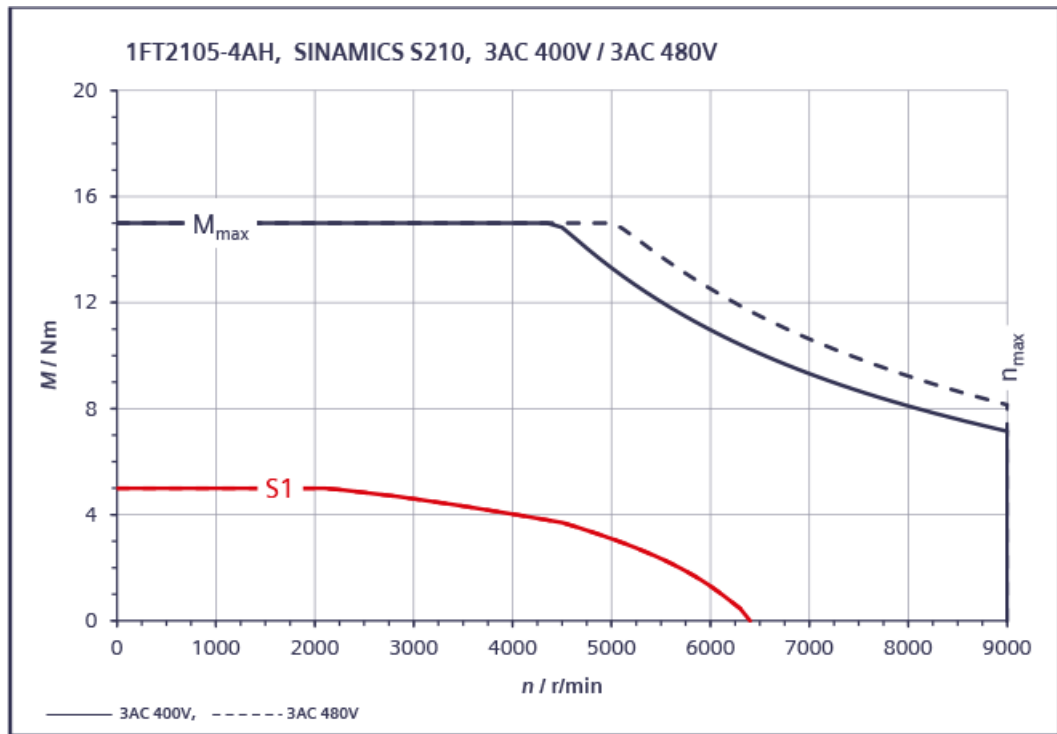


12.2.18.10 1FT2105-6AF connected to 400 V 3 AC / 480 V 3 AC

1FT2105-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	8
Stall current	I_0	A	6.7
Maximum permissible speed	n_{max}	r/min	6600
Maximum torque	M_{max}	Nm	24
Maximum current	I_{max}	A	24
Thermal time constant	T_{th}	min	40
Rotor moment of inertia	J_{mot}	kgcm ²	2.65
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	3.5
Weight	m_{mot}	kg	7.7
Weight (with brake)	$m_{mot br}$	kg	8.7
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	6.6
Rated current	I_{rated}	A	5.6
Rated power	P_{rated}	kW	2.1

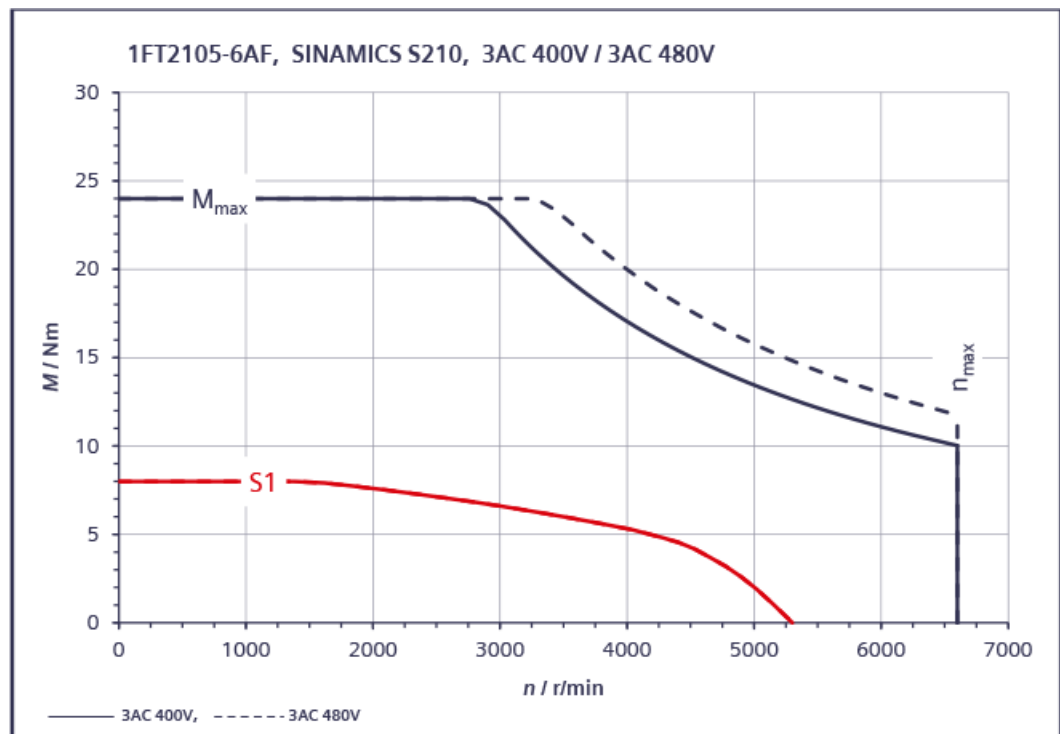


12.2.18.11 1FT2106-3AF connected to 400 V 3 AC / 480 V 3 AC

1FT2106-3AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	9.2
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	26
Maximum current	I_{max}	A	43
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	4.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6.3
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	7.3
Rated current	I_{rated}	A	7.9
Rated power	P_{rated}	kW	2.3

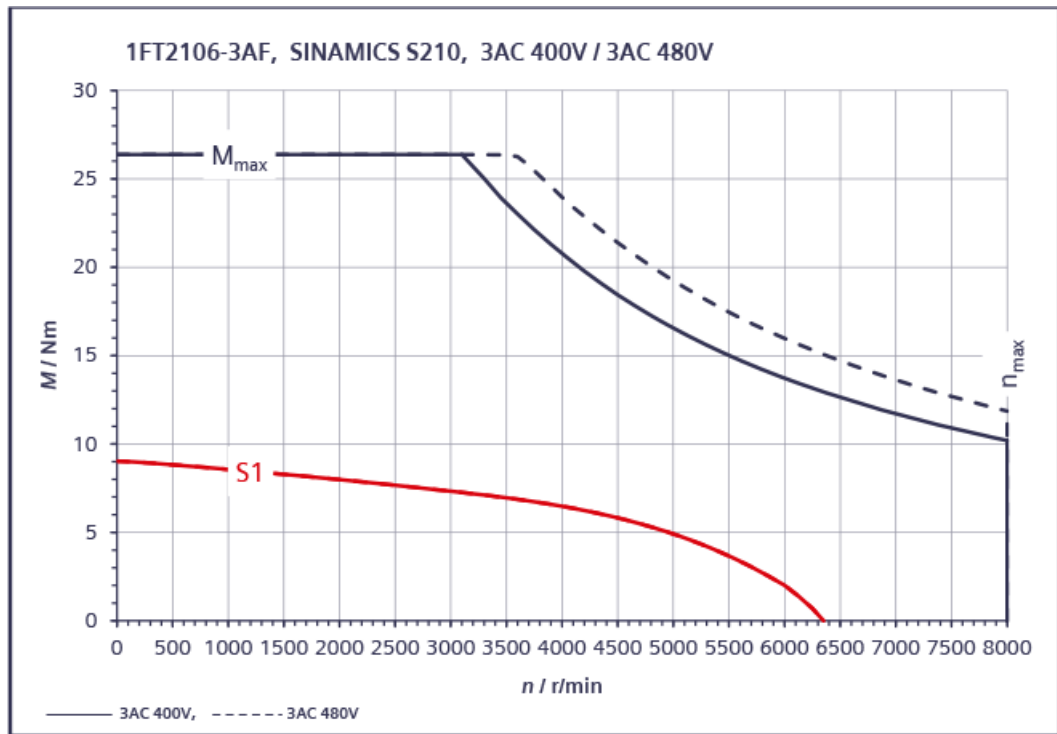


12.2.18.12 1FT2106-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2106-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	10.7
Maximum permissible speed	n_{max}	r/min	7800
Maximum torque	M_{max}	Nm	33
Maximum current	I_{max}	A	42
Thermal time constant	T_{th}	min	34
Rotor moment of inertia	J_{mot}	kgcm ²	6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	7.6
Weight	m_{mot}	kg	9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	8.6
Rated current	I_{rated}	A	8.1
Rated power	P_{rated}	kW	2.7

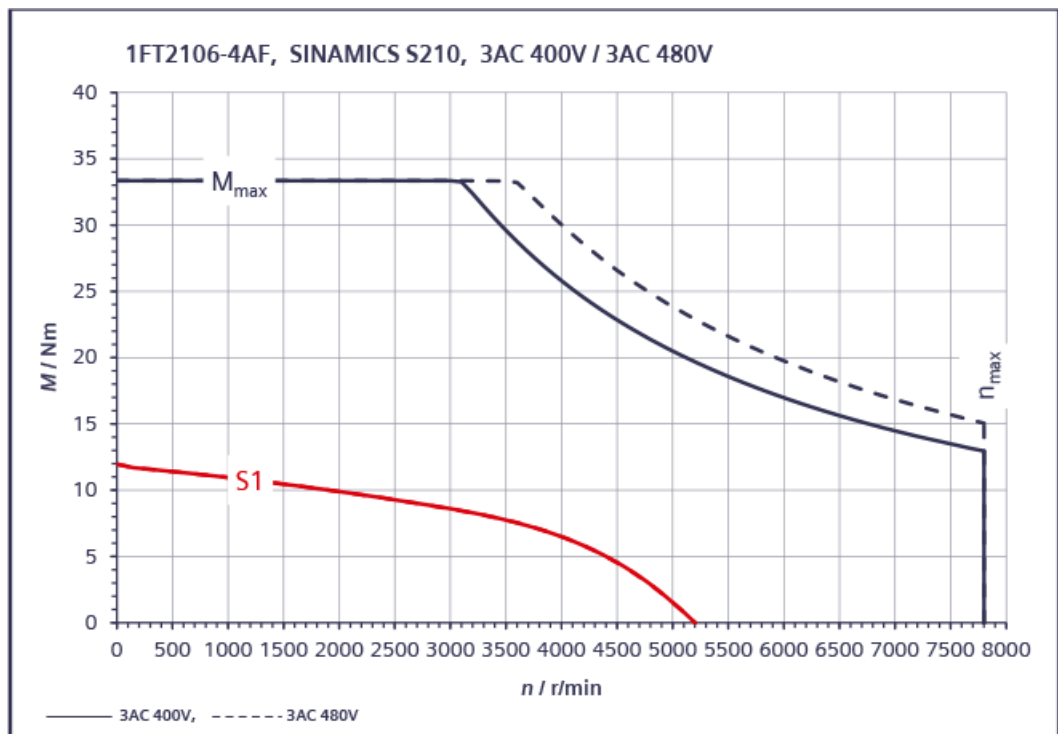


12.2.18.13 1FT2106-6AF connected to 400 V 3 AC / 480 V 3 AC

1FT2106-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	16
Stall current	I_0	A	14.3
Maximum permissible speed	n_{max}	r/min	7600
Maximum torque	M_{max}	Nm	45.5
Maximum current	I_{max}	A	49
Thermal time constant	T_{th}	min	50
Rotor moment of inertia	J_{mot}	kgcm ²	8.7
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	10.4
Weight	m_{mot}	kg	11.8
Weight (with brake)	$m_{mot br}$	kg	13.4
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	10.6
Rated current	I_{rated}	A	9.7
Rated power	P_{rated}	kW	3.3

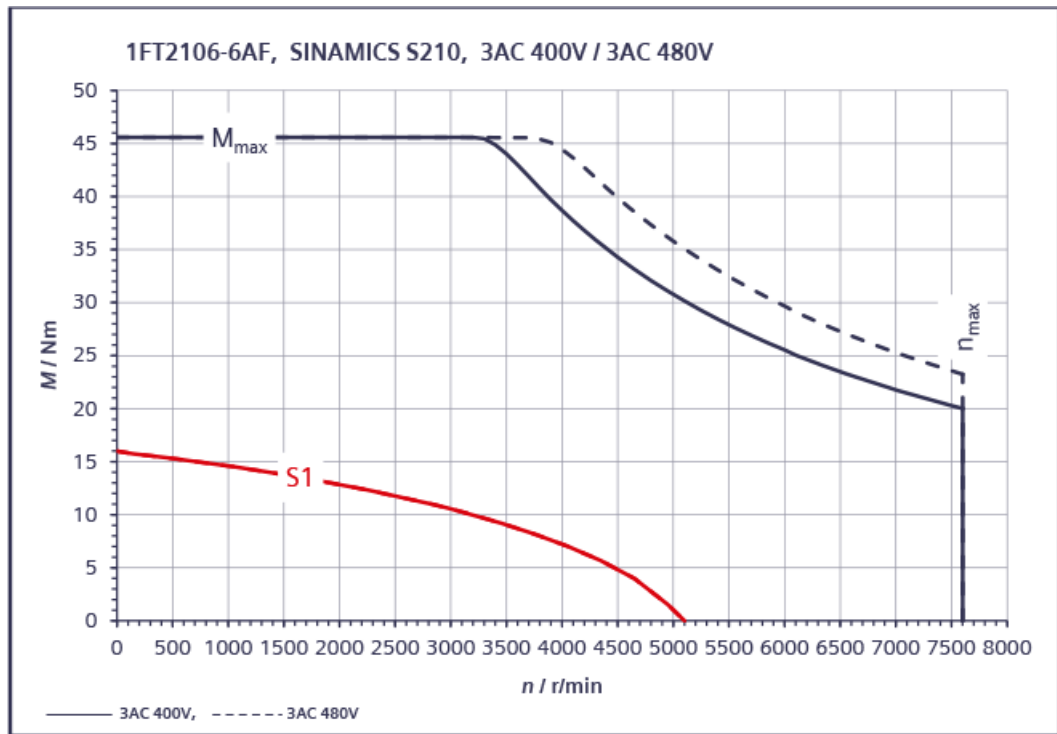


12.2.18.14 1FT2203-2AK connected to 3 AC 400 V / 3 AC 480 V

1FT2203-2AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	0.64
Stall current	I_0	A	1.05
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	1.85
Maximum current	I_{max}	A	3.4
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	0.2
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.22
Weight	m_{mot}	kg	1.16
Weight (with brake)	$m_{mot br}$	kg	1.53
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.405
Rated current	I_{rated}	A	0.75
Rated power	P_{rated}	kW	0.255

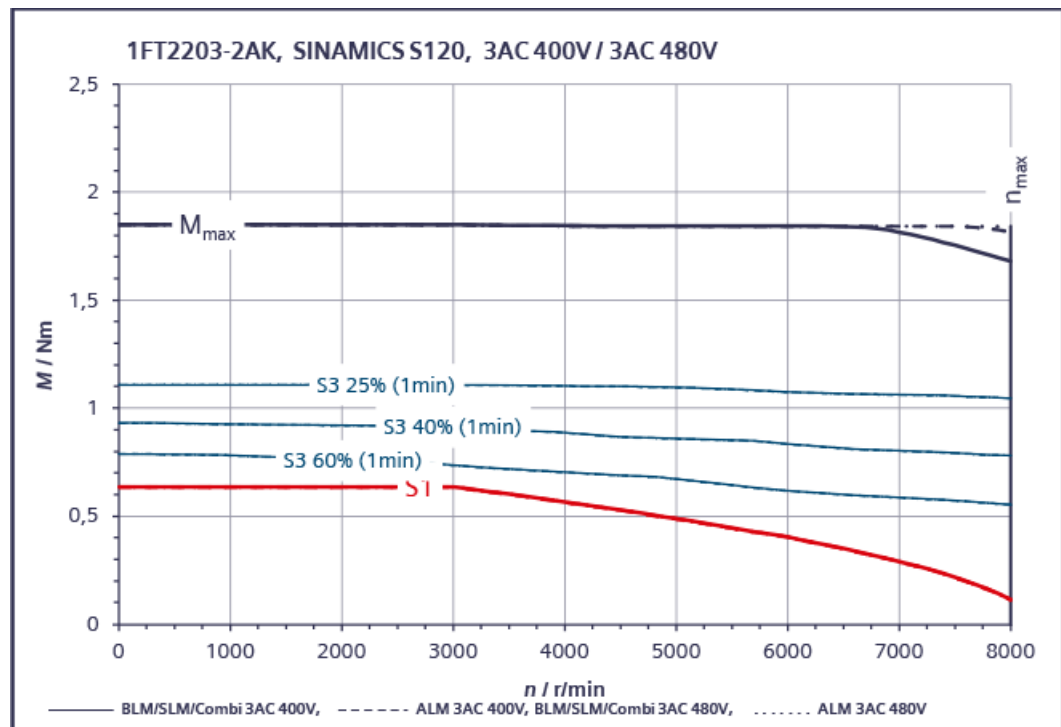

12.2.18.15 1FT2203-4AK connected to 3 AC 400 V / 3 AC 480 V

1FT2203-4AK	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	1.27
Stall current	I_0	A	2.05
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	3.75
Maximum current	I_{max}	A	6.7
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	0.35
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	0.37
Weight	m_{mot}	kg	1.49
Weight (with brake)	$m_{mot br}$	kg	1.97
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.68
Rated current	I_{rated}	A	1.24
Rated power	P_{rated}	kW	0.43

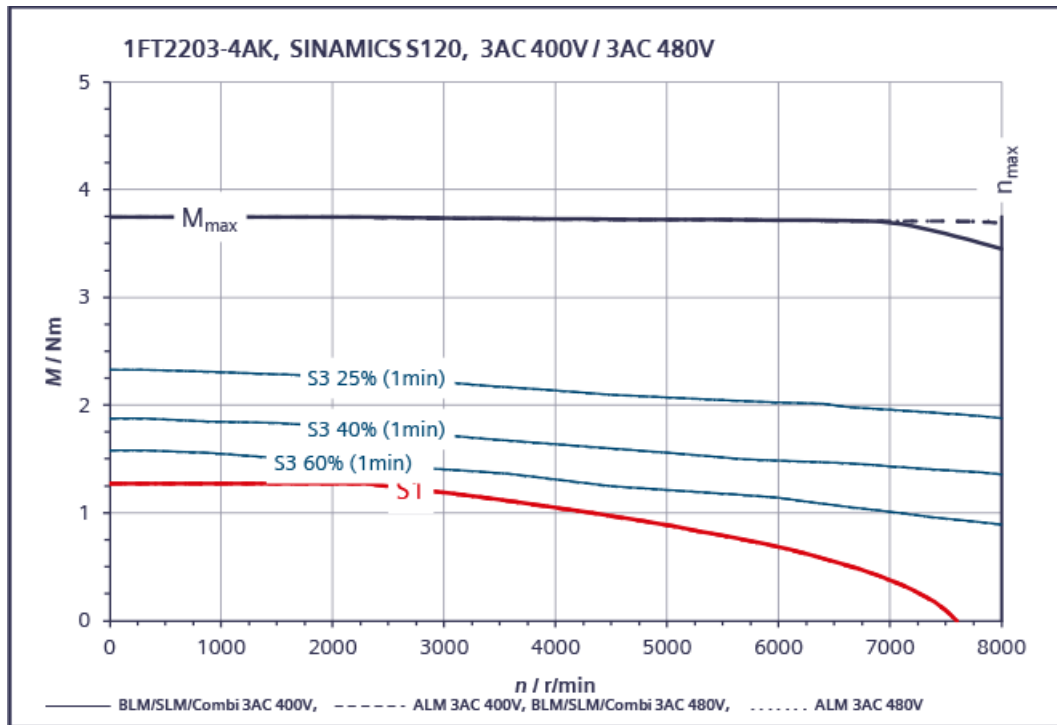

12.2.18.16 1FT2204-5AF connected to 400 V 3 AC / 480 V 3 AC

1FT2204-5AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	2.25
Maximum permissible speed	n_{max}	r/min	7500
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	7.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	2.4
Rated current	I_{rated}	A	2.25
Rated power	P_{rated}	kW	0.75


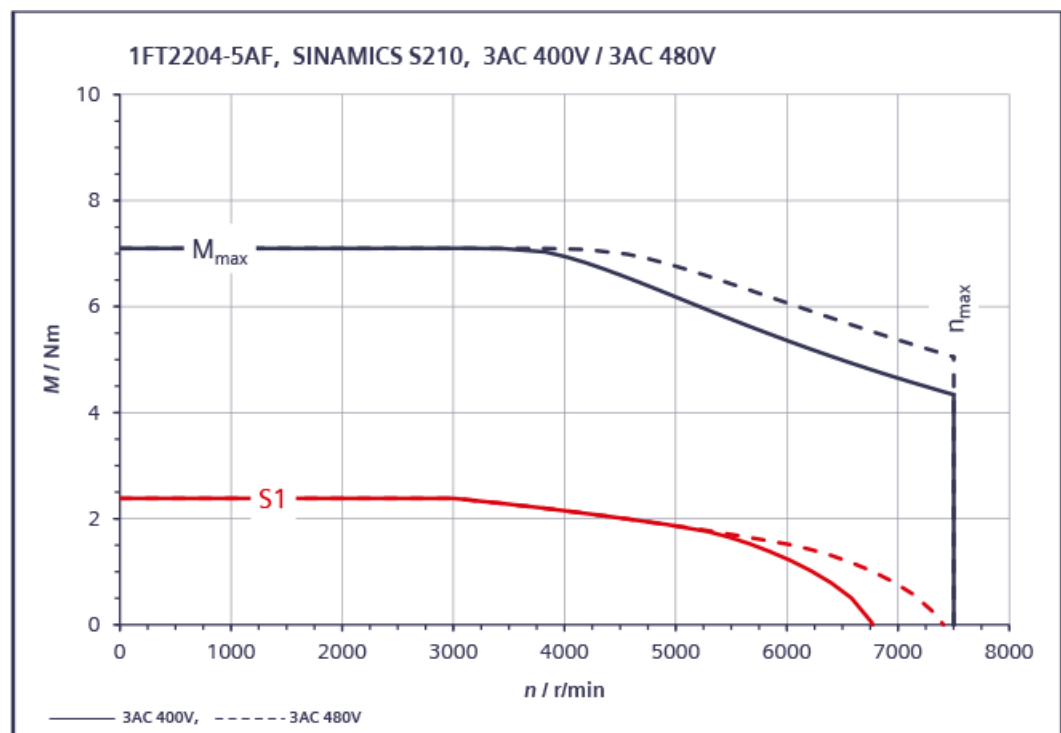


Figure 12-10 1FT2204-5AF_400V


12.2.18.17 1FT2204-5AK connected to 400 V 3 AC / 480 V 3 AC

1FT2204-5AK	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	2.4
Stall current	I_0	A	4.4
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	7.1
Maximum current	I_{max}	A	14.2
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	1.23
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.31
Weight	m_{mot}	kg	2.9
Weight (with brake)	$m_{mot br}$	kg	3.75
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	6000
Rated torque	M_{rated}	Nm	0.9
Rated current	I_{rated}	A	1.95
Rated power	P_{rated}	kW	0.57

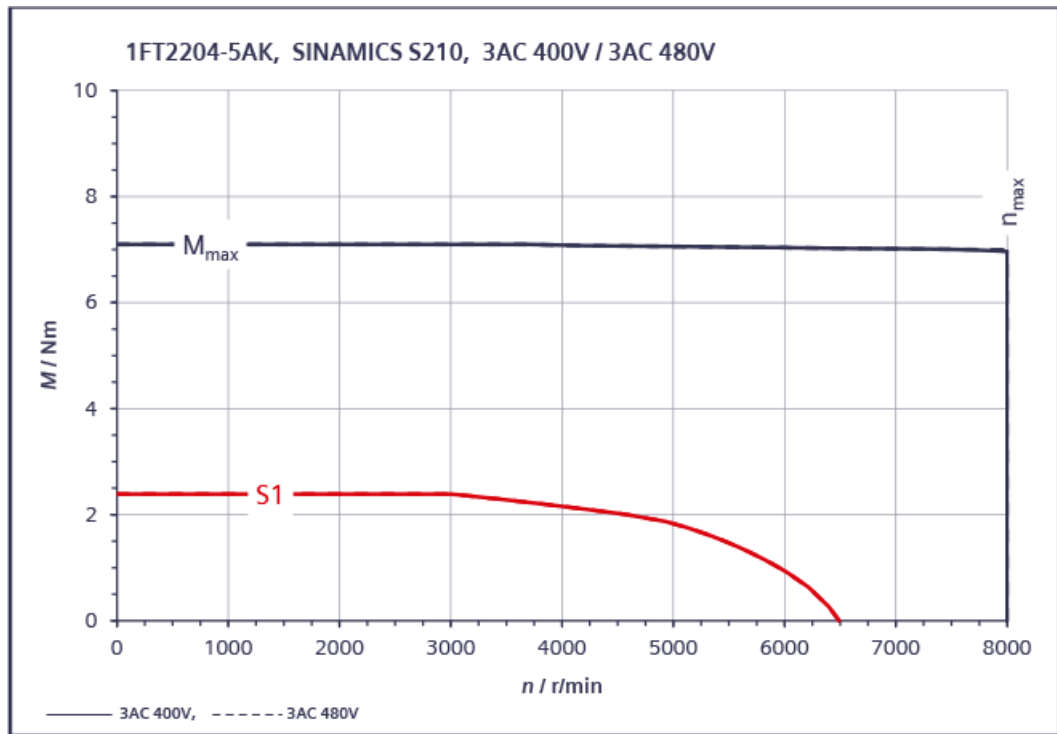


12.2.18.18 1FT2204-6AF connected to 400 V 3 AC / 480 V 3 AC

1FT2204-6AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.2
Stall current	I_0	A	3
Maximum permissible speed	n_{max}	r/min	7600
Maximum torque	M_{max}	Nm	9.5
Maximum current	I_{max}	A	9.9
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	1.61
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	1.69
Weight	m_{mot}	kg	3.5
Weight (with brake)	$m_{mot br}$	kg	4.35
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3.2
Rated current	I_{rated}	A	3
Rated power	P_{rated}	kW	1

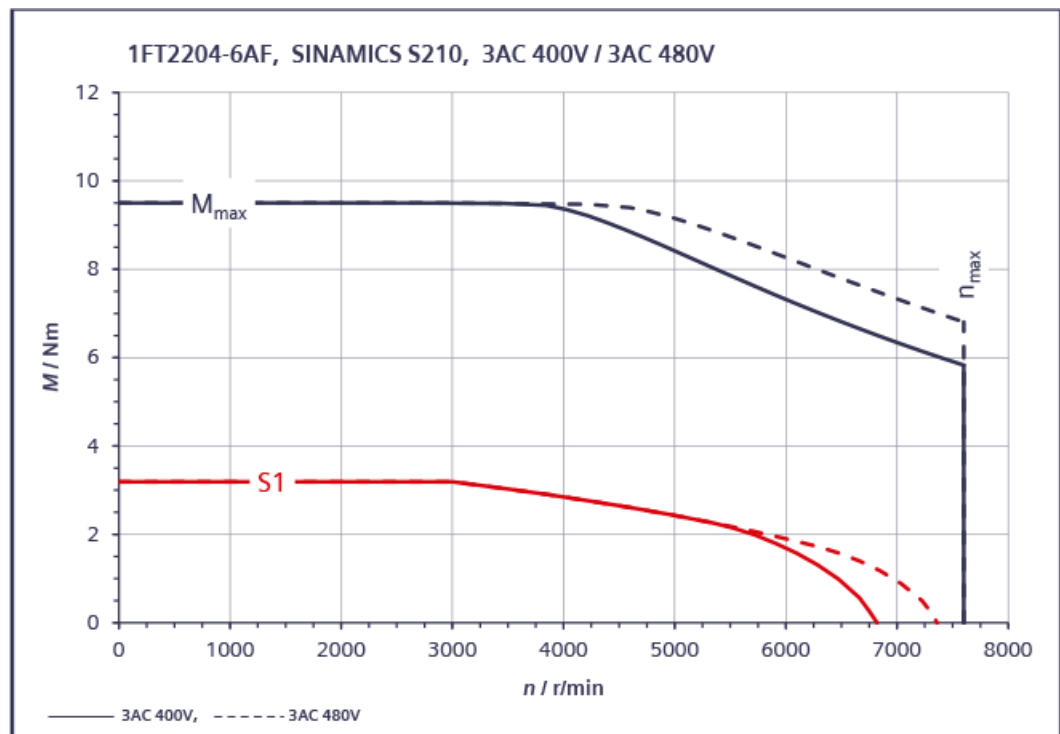


12.2.18.19 1FT2205-2AC connected to 3 AC 400 V / 3 AC 480 V

1FT2205-2AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	1.84
Maximum permissible speed	n_{max}	r/min	4850
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	6
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	3.3
Rated current	I_{rated}	A	1.74
Rated power	P_{rated}	kW	0.69

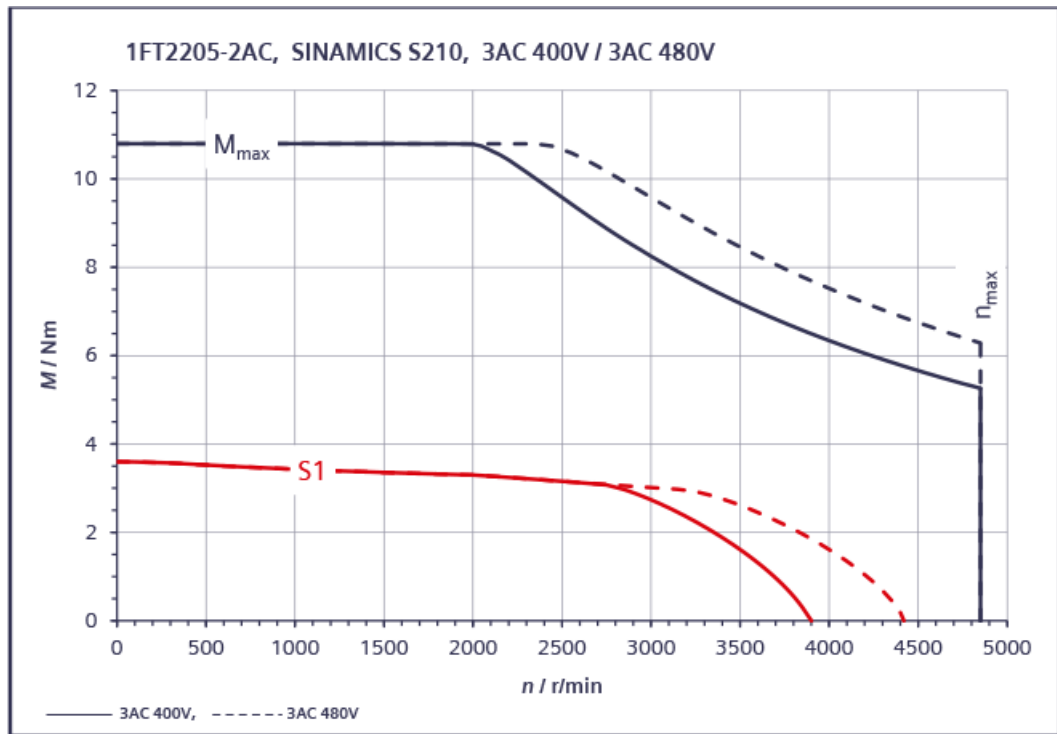


12.2.18.20 1FT2205-2AF connected to 400 V 3 AC / 480 V 3 AC

1FT2205-2AF	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	2.9
Maximum permissible speed	n_{max}	r/min	6500
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	9.5
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	3
Rated current	I_{rated}	A	2.5
Rated power	P_{rated}	kW	0.94

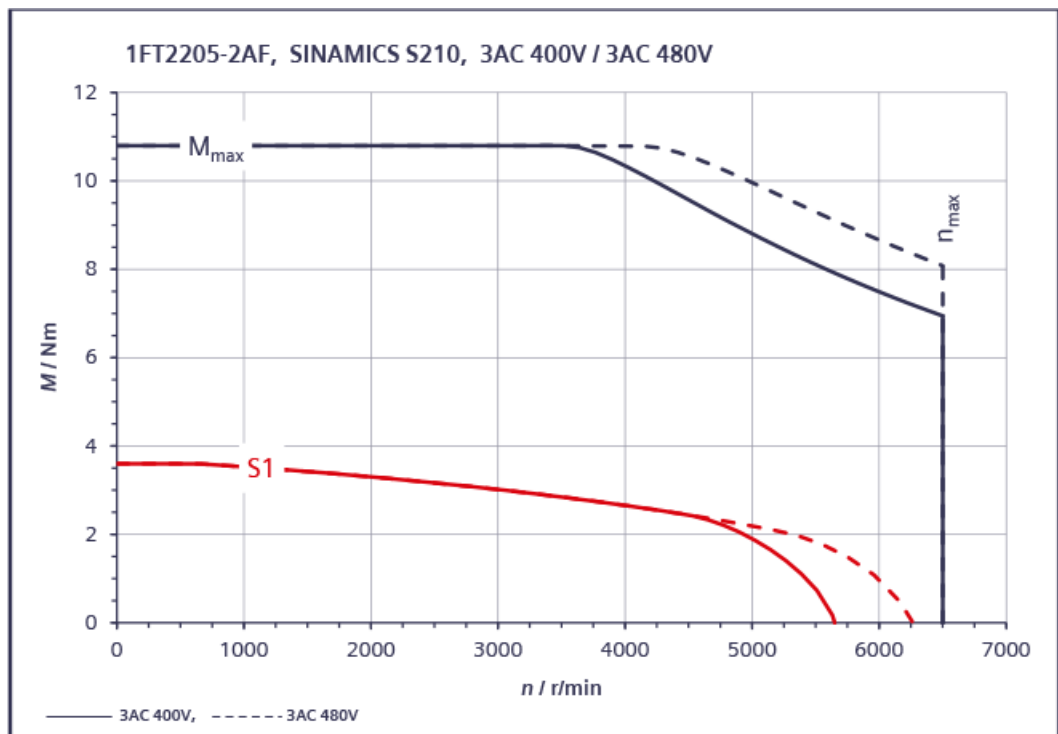


12.2.18.21 1FT2205-2AH connected to 400 V 3 AC / 480 V 3 AC

1FT2205-2AH	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	3.6
Stall current	I_0	A	3.8
Maximum permissible speed	n_{max}	r/min	8 300
Maximum torque	M_{max}	Nm	10.8
Maximum current	I_{max}	A	12.1
Thermal time constant	T_{th}	min	29
Rotor moment of inertia	J_{mot}	kgcm ²	3.15
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	4.05
Weight	m_{mot}	kg	3.75
Weight (with brake)	$m_{mot br}$	kg	4.75
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	2.25
Rated current	I_{rated}	A	2.55
Rated power	P_{rated}	kW	1.06

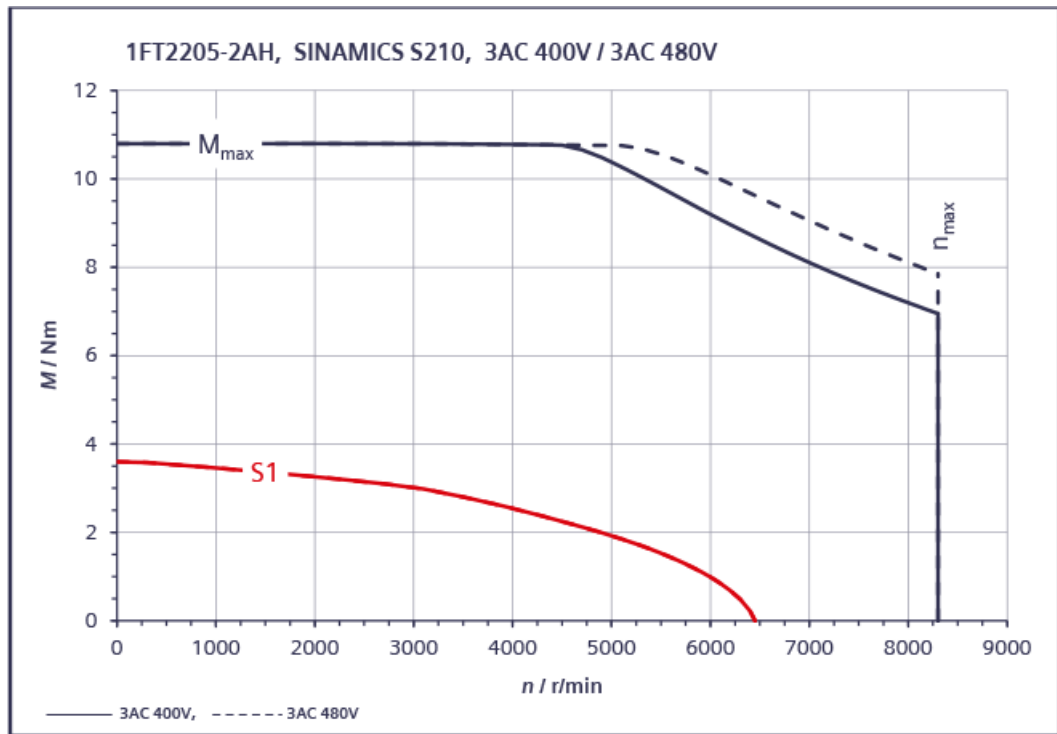


12.2.18.22 1FT2205-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2205-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6
Stall current	I_0	A	4.7
Maximum permissible speed	n_{max}	r/min	6200
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	15.1
Thermal time constant	T_{th}	min	31
Rotor moment of inertia	J_{mot}	kgcm ²	5.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	6
Weight	m_{mot}	kg	5.2
Weight (with brake)	$m_{mot br}$	kg	6.2
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	4.6
Rated current	I_{rated}	A	3.75
Rated power	P_{rated}	kW	1.45

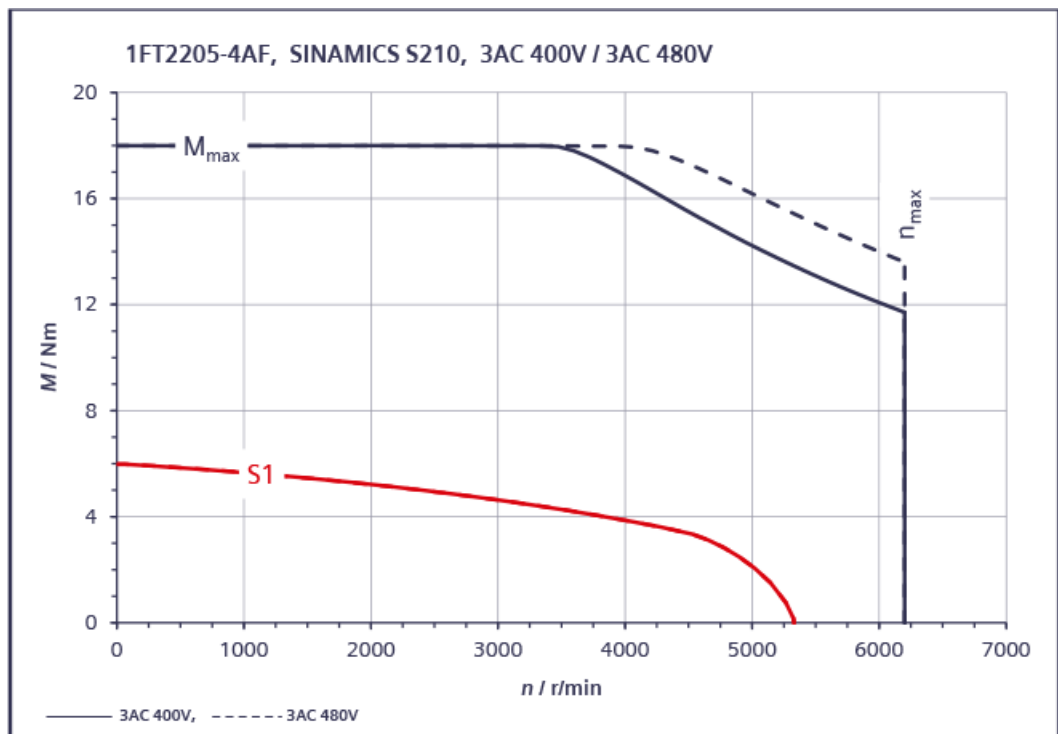


12.2.18.23 1FT2206-2AC connected to 3 AC 400 V / 3 AC 480 V

1FT2206-2AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the S210 system	Abbreviation	Unit	Value
Static torque	M_0	Nm	6
Stall current	I_0	A	2.8
Max. permissible speed	$n_{max\ inv}$	r/min	4300
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	10.3
Thermal time constant	T_{th}	min	24
Moment of inertia	J_{mot}	kg cm ²	7.8
Moment of inertia (with brake)	$J_{Mot\ with\ Br}$	kg cm ²	9.4
Weight	m_{Mot}	kg	6.3
Weight (with brake)	$m_{Mot\ with\ Br}$	kg	7.9
Rated data 3 AC 380 ... 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	5.5
Rated current	I_{rated}	A	2.8
Rated power	P_{rated}	kW	1.15

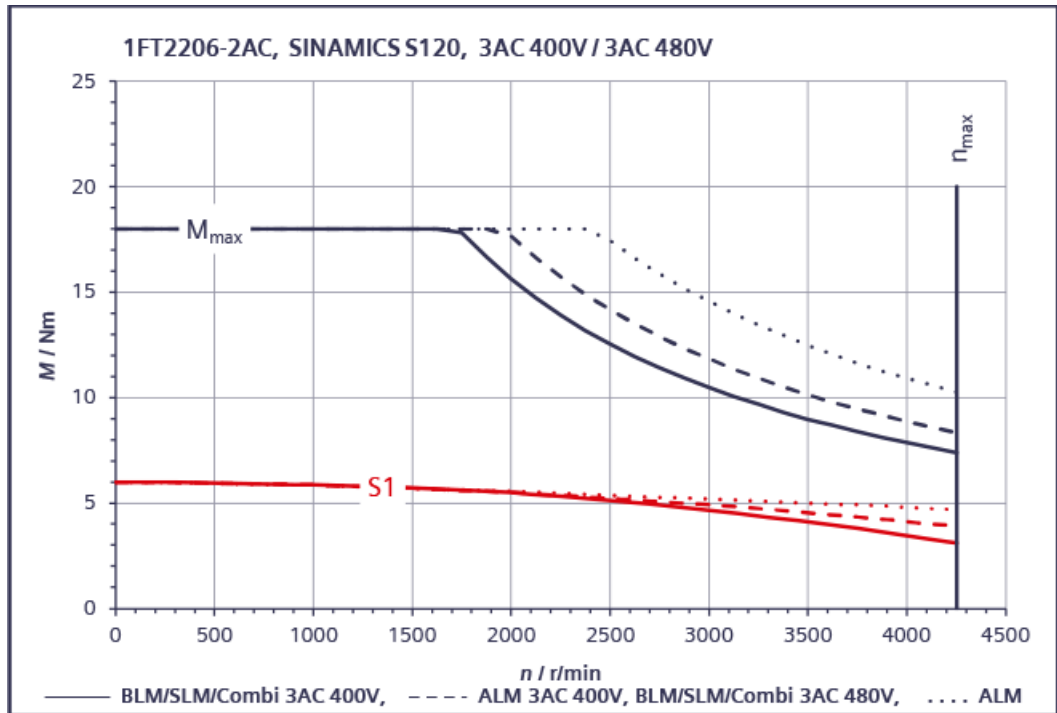


12.2.18.24 1FT2206-2AF connected to 400 V 3 AC / 480 V 3 AC

1FT2206-2AF	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	5
Maximum permissible speed	n_{max}	r/min	6800
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	17.8
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	5.4
Rated current	I_{rated}	A	4.35
Rated power	P_{rated}	kW	1.71

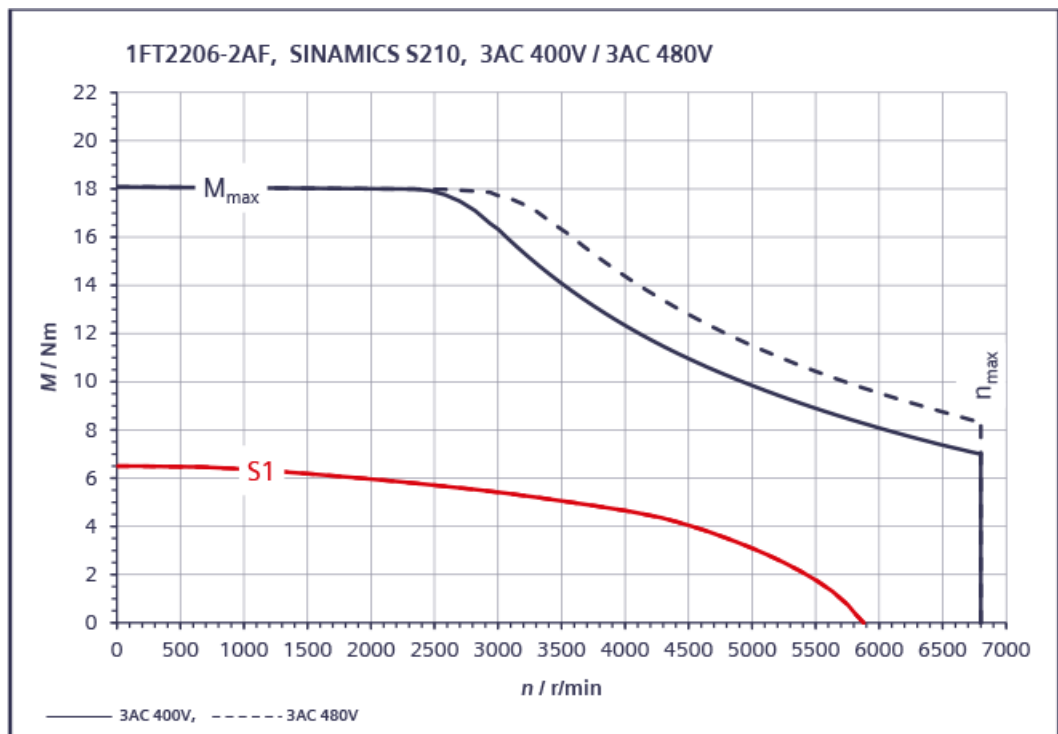


12.2.18.25 1FT2206-2AH connected to 400 V 3 AC / 480 V 3 AC

1FT2206-2AH	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	6.5
Stall current	I_0	A	6.5
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	18
Maximum current	I_{max}	A	22.5
Thermal time constant	T_{th}	min	21
Rotor moment of inertia	J_{mot}	kgcm ²	7.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	9.4
Weight	m_{mot}	kg	6.3
Weight (with brake)	$m_{mot br}$	kg	7.9
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	3.85
Rated current	I_{rated}	A	4.1
Rated power	P_{rated}	kW	1.8

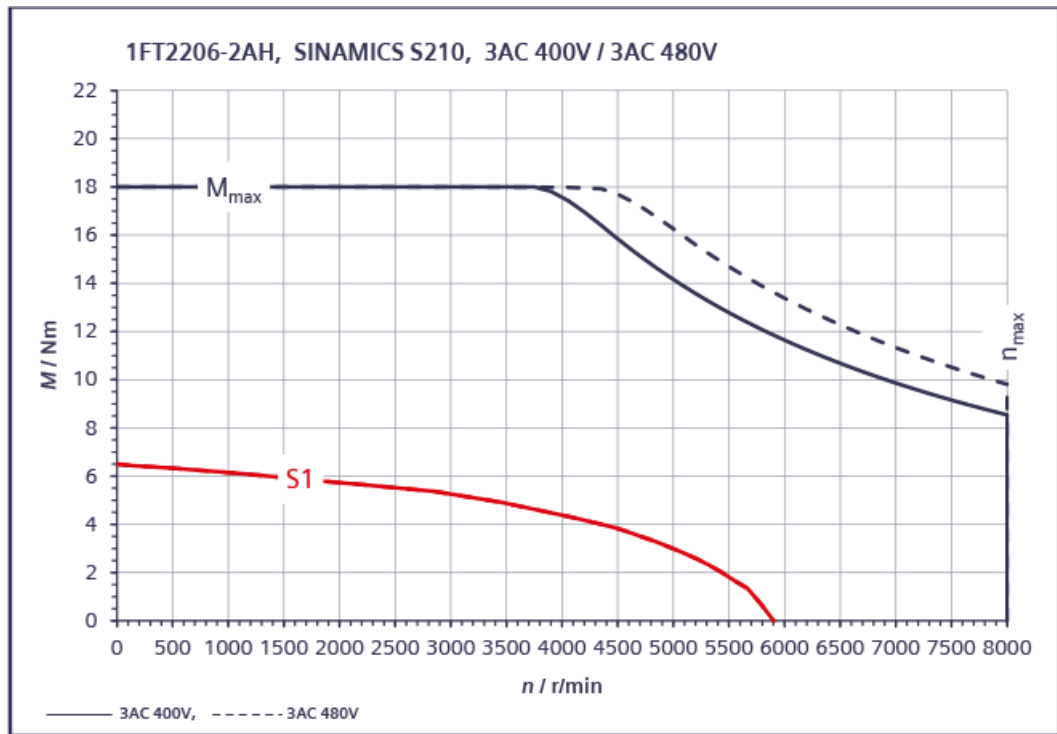


12.2.18.26 1FT2206-3AB connected to 3 AC 400 V / 3 AC 480 V

1FT2206-3AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	3.15
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	27
Maximum current	I_{max}	A	11.4
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	11.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	13.1
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	8.3
Rated current	I_{rated}	A	2.9
Rated power	P_{rated}	kW	1.3

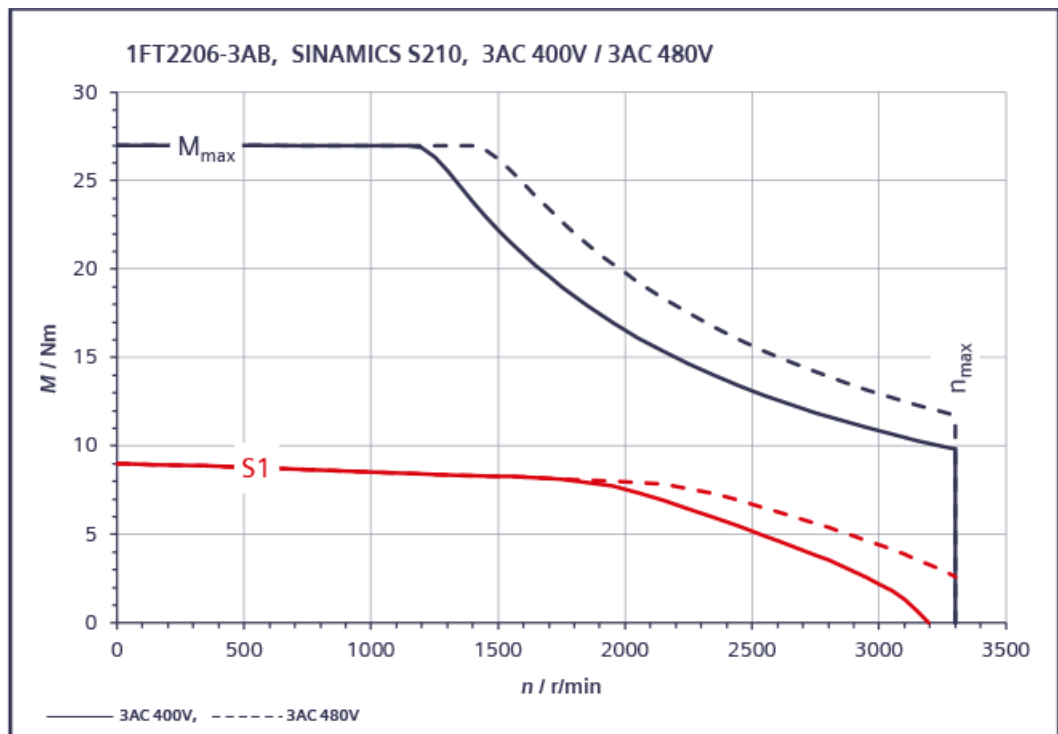


12.2.18.27 1FT2206-3AF connected to 1 AC 400 V / 3 AC 480 V

1FT2206-3AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	9
Stall current	I_0	A	5.4
Maximum permissible speed	n_{max}	r/min	5700
Maximum torque	M_{max}	Nm	27
Maximum current	I_{max}	A	19.7
Thermal time constant	T_{th}	min	330
Rotor moment of inertia	J_{mot}	kgcm ²	11.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	13.1
Weight	m_{mot}	kg	7.4
Weight (with brake)	$m_{mot br}$	kg	9
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	7.5
Rated current	I_{rated}	A	4.65
Rated power	P_{rated}	kW	2.35

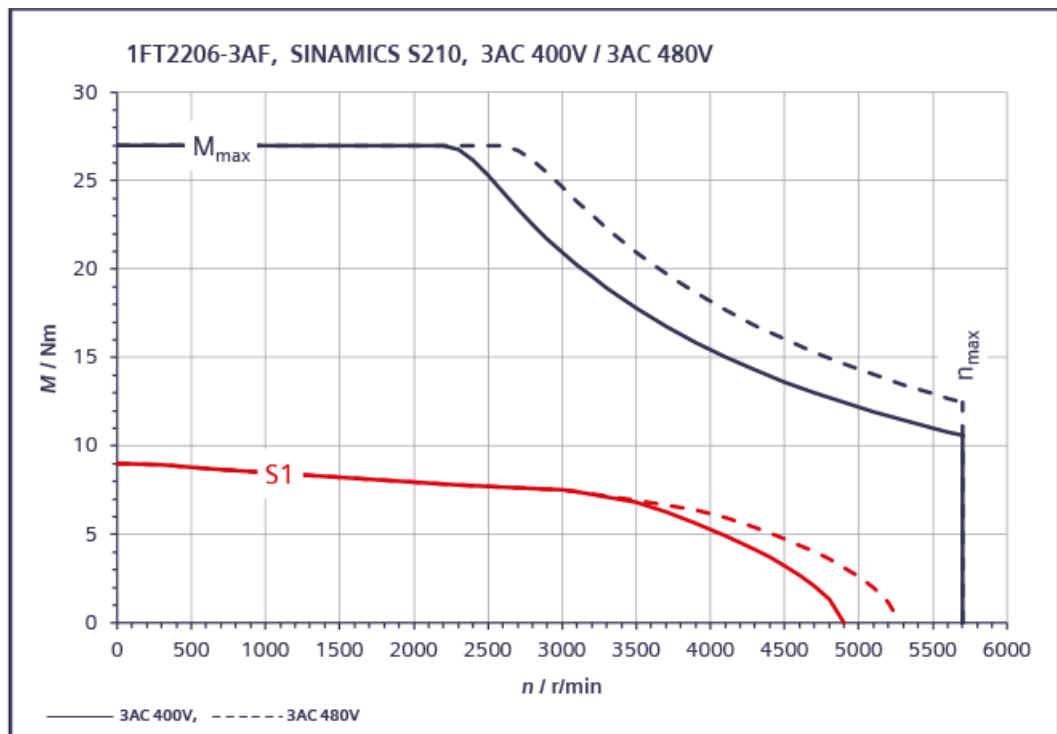


12.2.18.28 1FT2206-4AC connected to 3 AC 400 V / 3 AC 480 V

1FT2206-4AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the S210 system	Abbreviation	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	4.5
Max. permissible speed	$n_{max\ inv}$	r/min	3300
Maximum torque	M_{max}	Nm	38
Maximum current	I_{max}	A	17
Thermal time constant	T_{th}	min	32
Moment of inertia	J_{mot}	kg cm ²	15.1
Moment of inertia (with brake)	$J_{Mot\ with\ Br}$	kg cm ²	16.8
Weight	m_{Mot}	kg	8.9
Weight (with brake)	$m_{Mot\ with\ Br}$	kg	10.6
Rated data 3 AC 380 ... 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	10.5
Rated current	I_{rated}	A	4.1
Rated power	P_{rated}	kW	2.2

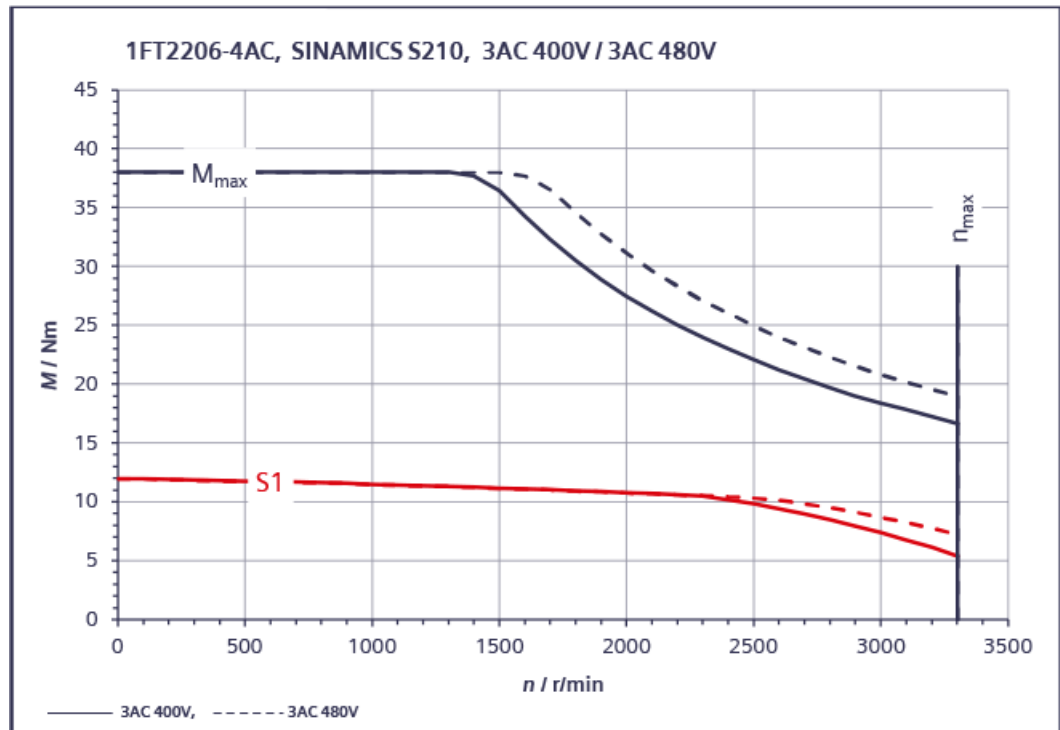


12.2.18.29 1FT2206-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2206-4AF	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	7.9
Maximum permissible speed	n_{max}	r/min	5800
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	9.1
Rated current	I_{rated}	A	6.2
Rated power	P_{rated}	kW	2.85

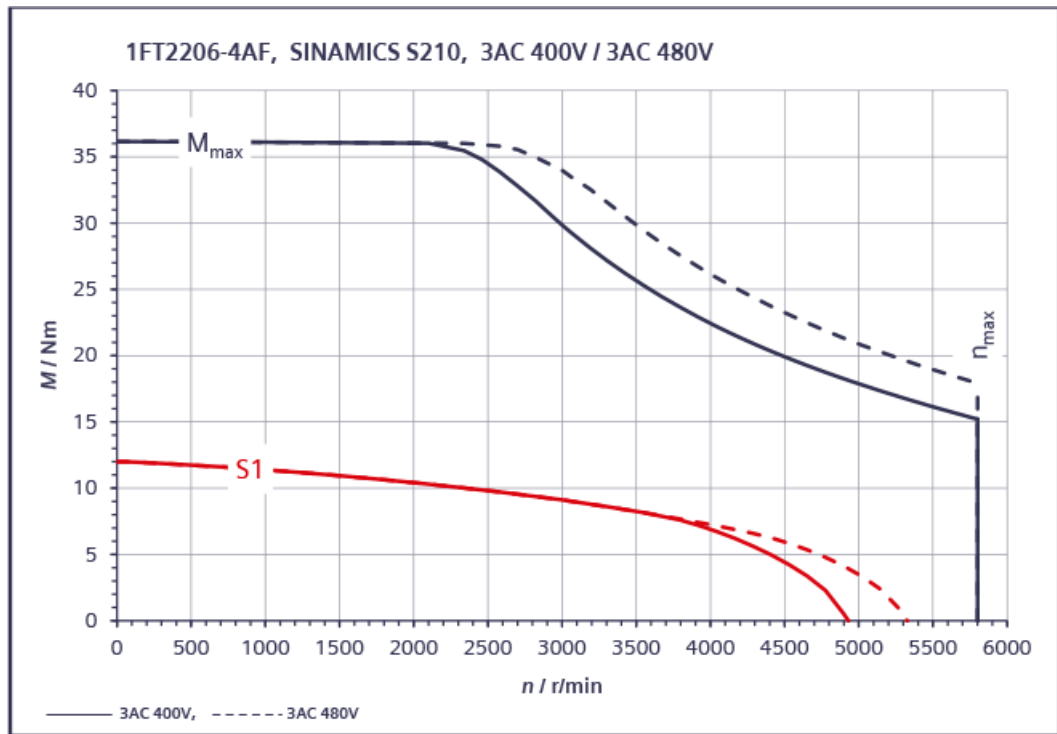


12.2.18.30 1FT2206-4AH connected to 400 V 3 AC / 480 V 3 AC

1FT2206-4AH	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	12
Stall current	I_0	A	12
Maximum permissible speed	n_{max}	r/min	8000
Maximum torque	M_{max}	Nm	36
Maximum current	I_{max}	A	44
Thermal time constant	T_{th}	min	24
Rotor moment of inertia	J_{mot}	kgcm ²	15.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.8
Weight	m_{mot}	kg	8.9
Weight (with brake)	$m_{mot br}$	kg	10.6
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	4500
Rated torque	M_{rated}	Nm	4.7
Rated current	I_{rated}	A	5.2
Rated power	P_{rated}	kW	2.2

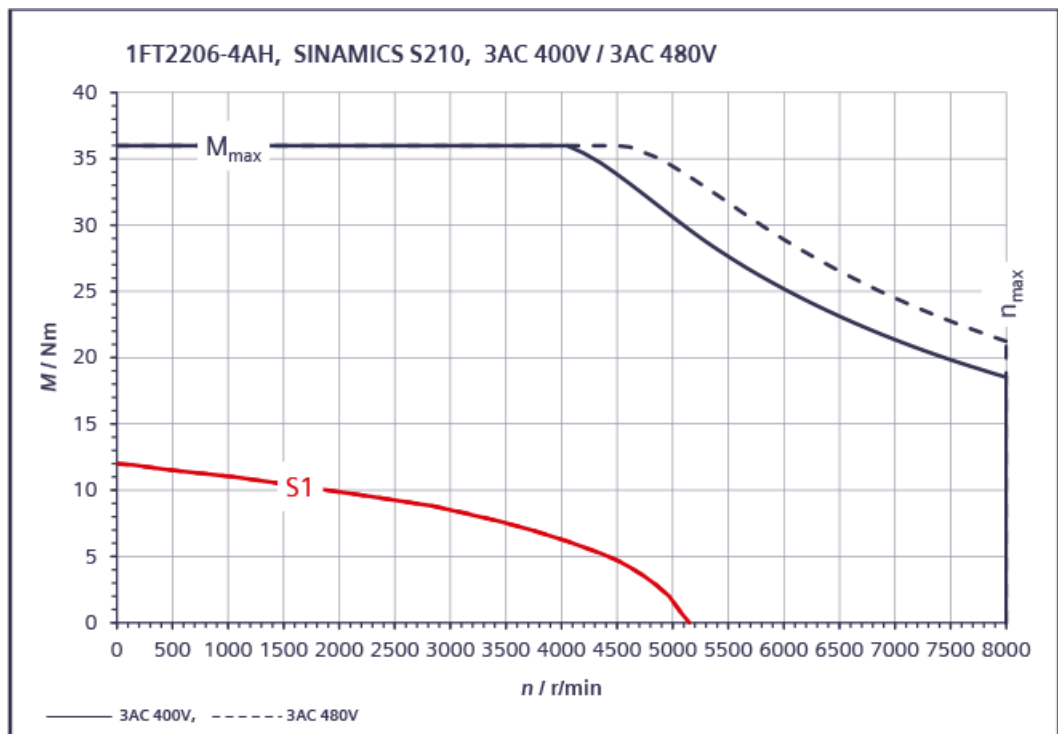


12.2.18.31 1FT2208-3AB connected to 3 AC 400 V / 3 AC 480 V

1FT2208-3AB		For 3 AC 400 V, 3 AC 480 V	
Technical specifications in the S210 system	Abbreviation	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	6.2
Max. permissible speed	$n_{max\ inv}$	r/min	3000
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	20.5
Thermal time constant	T_{th}	min	36
Moment of inertia	J_{mot}	kg cm ²	29.6
Moment of inertia (with brake)	$J_{Mot\ with\ Br}$	kg cm ²	32.6
Weight	m_{Mot}	kg	12.6
Weight (with brake)	$m_{Mot\ with\ Br}$	kg	14.6
Rated data 3 AC 380 ... 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	16
Rated current	I_{rated}	A	5.7
Rated power	P_{rated}	kW	2.5

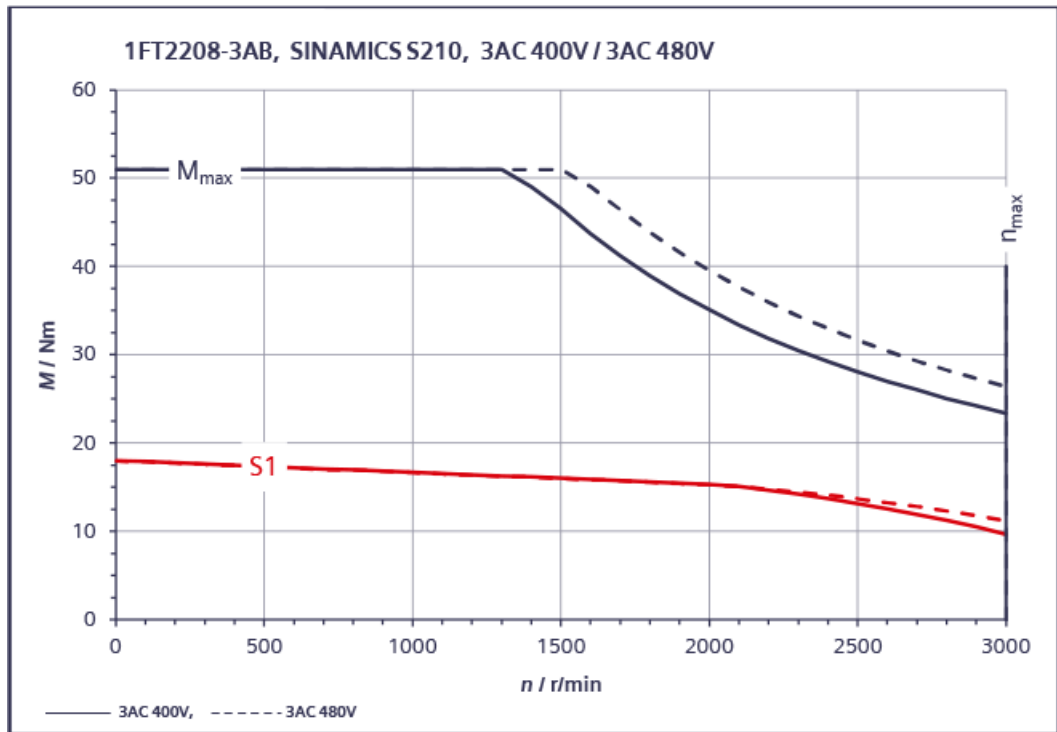


12.2.18.32 1FT2208-3AC connected to 400 V 3 AC / 480 V 3 AC

1FT2208-3AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	8.4
Maximum permissible speed	n_{max}	r/min	4100
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.6
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.6
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	14.5
Rated current	I_{rated}	A	7
Rated power	P_{rated}	kW	3.05

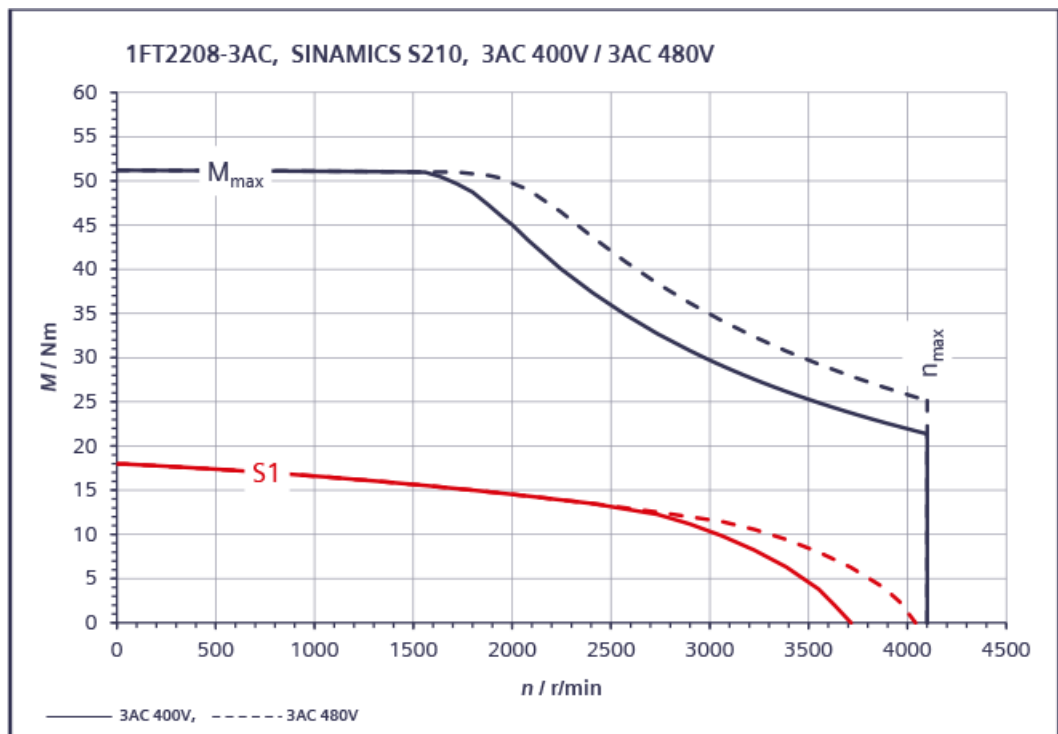


12.2.18.33 1FT2208-3AF connected to 400 V 3 AC / 480 V 3 AC

1FT2208-3AF	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	18
Stall current	I_0	A	11.9
Maximum permissible speed	n_{max}	r/min	5600
Maximum torque	M_{max}	Nm	51
Maximum current	I_{max}	A	40
Thermal time constant	T_{th}	min	26
Rotor moment of inertia	J_{mot}	kgcm ²	29.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	32.5
Weight	m_{mot}	kg	12.6
Weight (with brake)	$m_{mot br}$	kg	14.6
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	11.1
Rated current	I_{rated}	A	7.7
Rated power	P_{rated}	kW	3.5

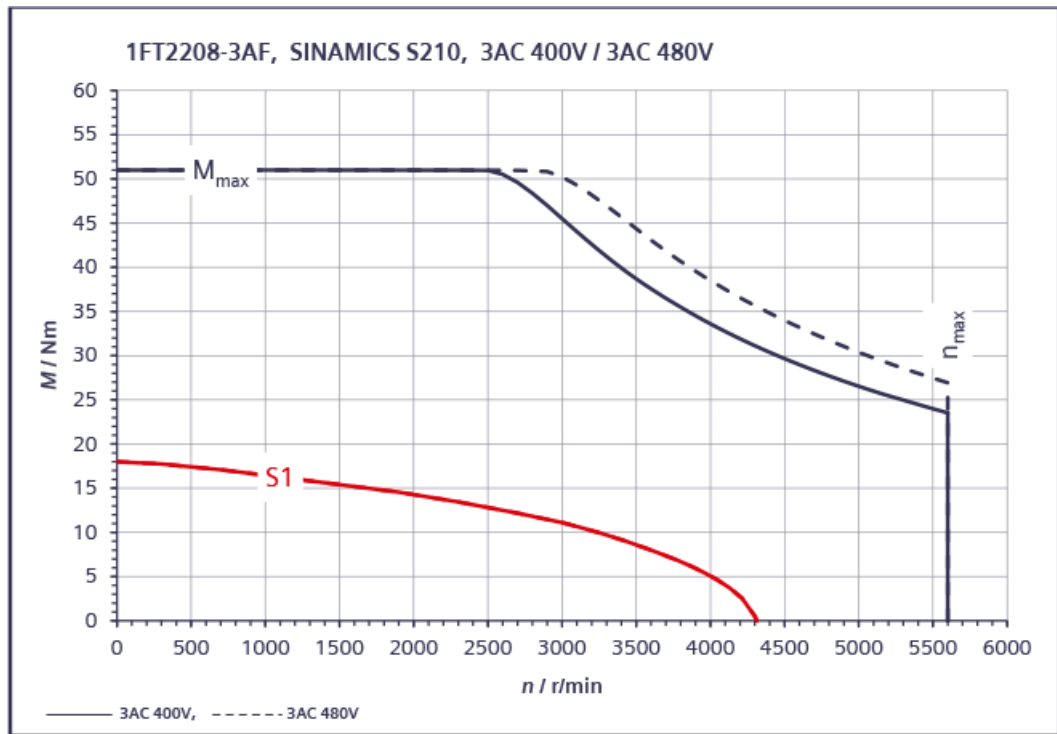


12.2.18.34 1FT2208-4AB connected to 3 AC 400 V / 3 AC 480 V

1FT2208-4AB		For 3 AC 400 V, 3 AC 480 V	
Technical specifications in the S210 system	Abbreviation	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	7.1
Max. permissible speed	$n_{\max \text{ inv}}$	r/min	3000
Maximum torque	M_{\max}	Nm	66
Maximum current	I_{\max}	A	25
Thermal time constant	T_{th}	min	42
Moment of inertia	J_{mot}	kg cm ²	38.8
Moment of inertia (with brake)	$J_{\text{Mot with Br}}$	kg cm ²	44.4
Weight	m_{Mot}	kg	14.6
Weight (with brake)	$m_{\text{Mot with Br}}$	kg	17.3
Rated data 3 AC 380 ... 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	18.6
Rated current	I_{rated}	A	6.4
Rated power	P_{rated}	kW	2.9

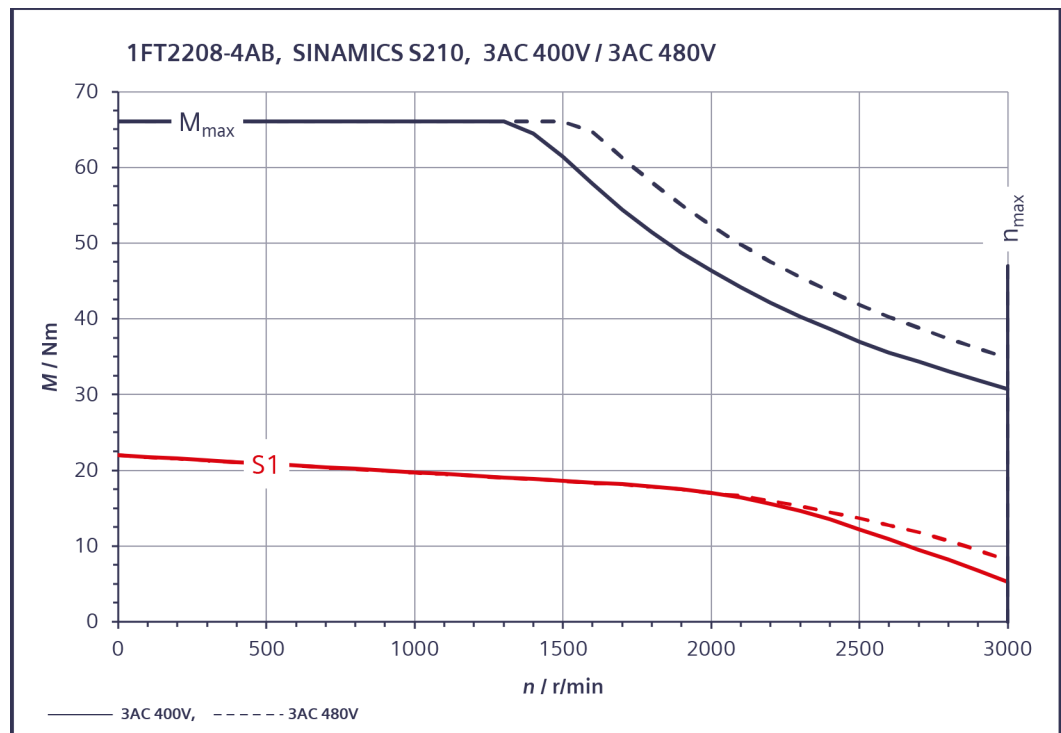


12.2.18.35 1FT2208-4AC connected to 400 V 3 AC / 480 V 3 AC

1FT2208-4AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	11.7
Maximum permissible speed	n_{max}	r/min	4600
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	17
Rated current	I_{rated}	A	9.3
Rated power	P_{rated}	kW	3.55

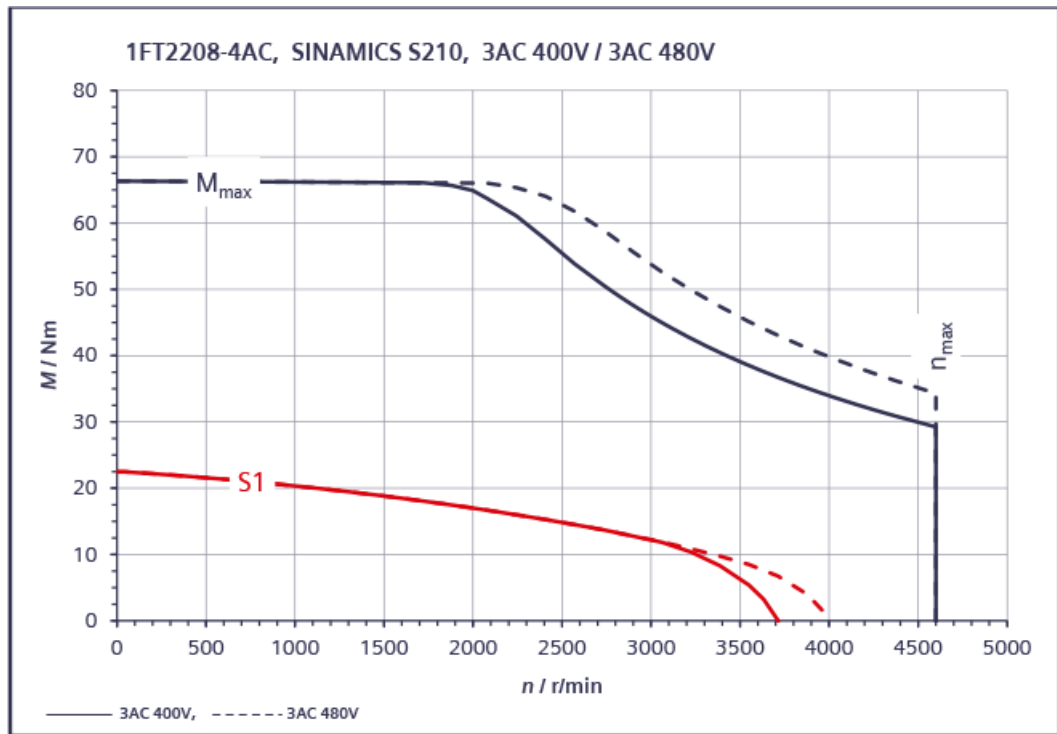


12.2.18.36 1FT2208-4AF connected to 400 V 3 AC / 480 V 3 AC

1FT2208-4AF	For 1 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	22
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	5900
Maximum torque	M_{max}	Nm	66
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	28
Rotor moment of inertia	J_{mot}	kgcm ²	38.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	44.4
Weight	m_{mot}	kg	14.6
Weight (with brake)	$m_{mot br}$	kg	17.3
Rated data for S210 connected to 1 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	3000
Rated torque	M_{rated}	Nm	11.8
Rated current	I_{rated}	A	8.5
Rated power	P_{rated}	kW	3.7

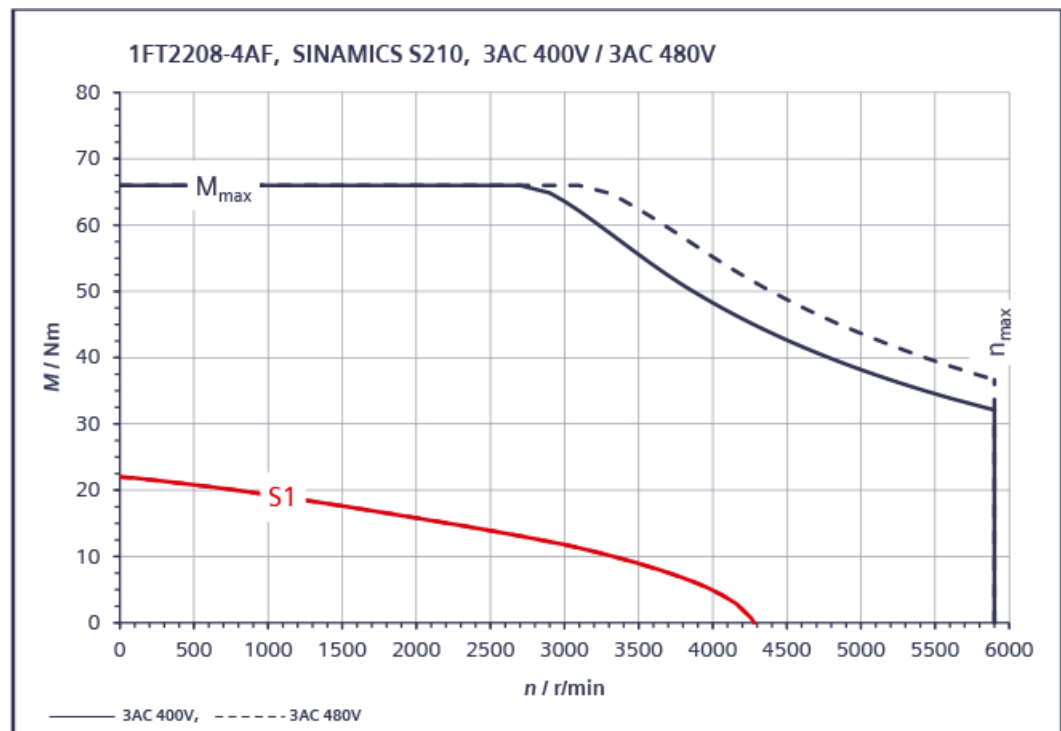


12.2.18.37 1FT2208-5AB connected to 3 AC 400 V / 3 AC 480 V

1FT2208-5AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	8.6
Maximum permissible speed	n_{max}	r/min	3000
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	29.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	22
Rated current	I_{rated}	A	7.2
Rated power	P_{rated}	kW	3.45

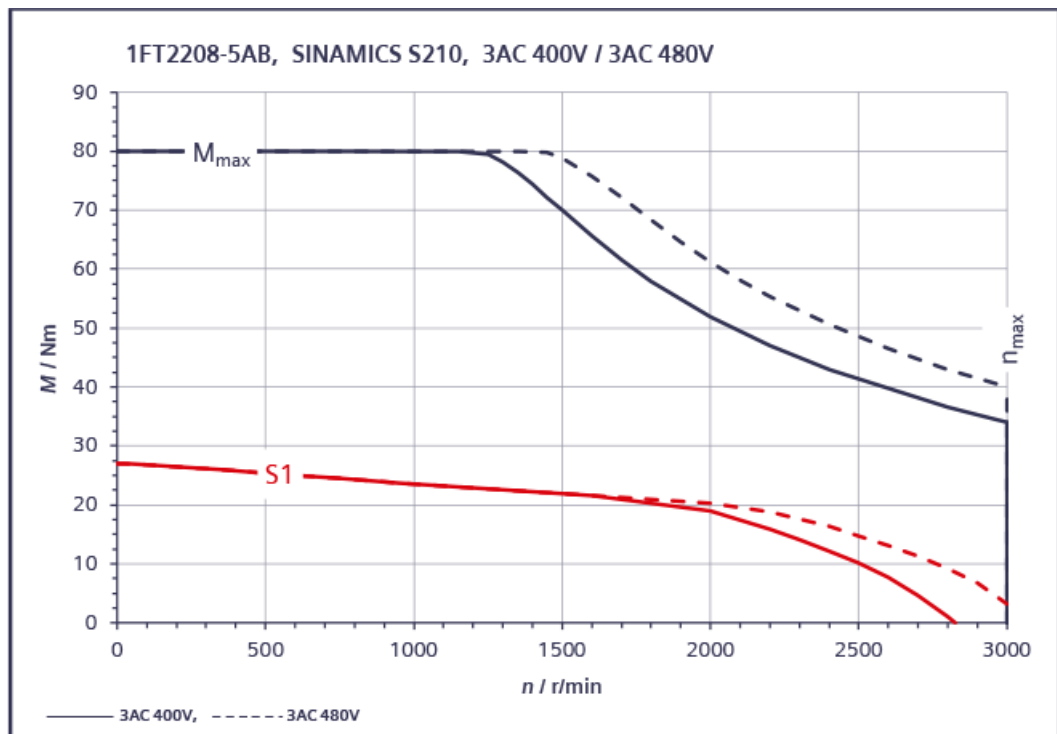


12.2.18.38 1FT2208-5AC connected to 400 V 3 AC / 480 V 3 AC

1FT2208-5AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	27
Stall current	I_0	A	14.6
Maximum permissible speed	n_{max}	r/min	4700
Maximum torque	M_{max}	Nm	80
Maximum current	I_{max}	A	51.5
Thermal time constant	T_{th}	min	30
Rotor moment of inertia	J_{mot}	kgcm ²	48.1
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	53.6
Weight	m_{mot}	kg	16.6
Weight (with brake)	$m_{mot br}$	kg	19.3
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	19.1
Rated current	I_{rated}	A	10.8
Rated power	P_{rated}	kW	4

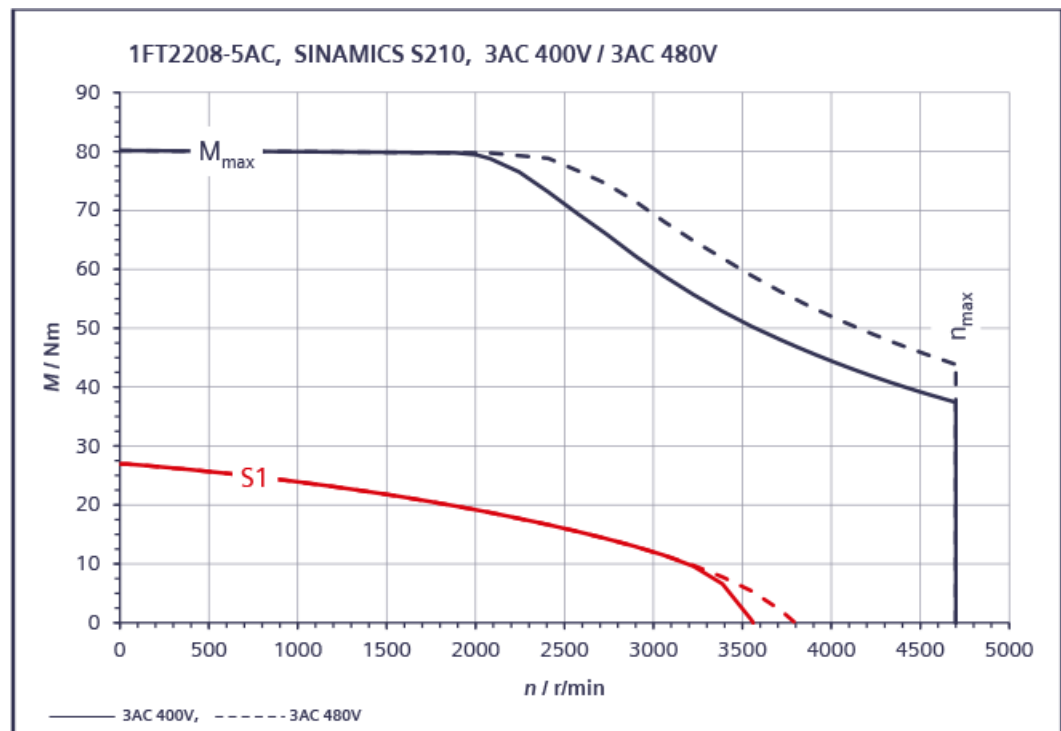


12.2.18.39 1FT2210-3AB connected to 3 AC 400 V / 3 AC 480 V

1FT2210-3AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	8.5
Maximum permissible speed	n_{max}	r/min	2500
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	31.5
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	28.5
Rated current	I_{rated}	A	8.3
Rated power	P_{rated}	kW	4.5

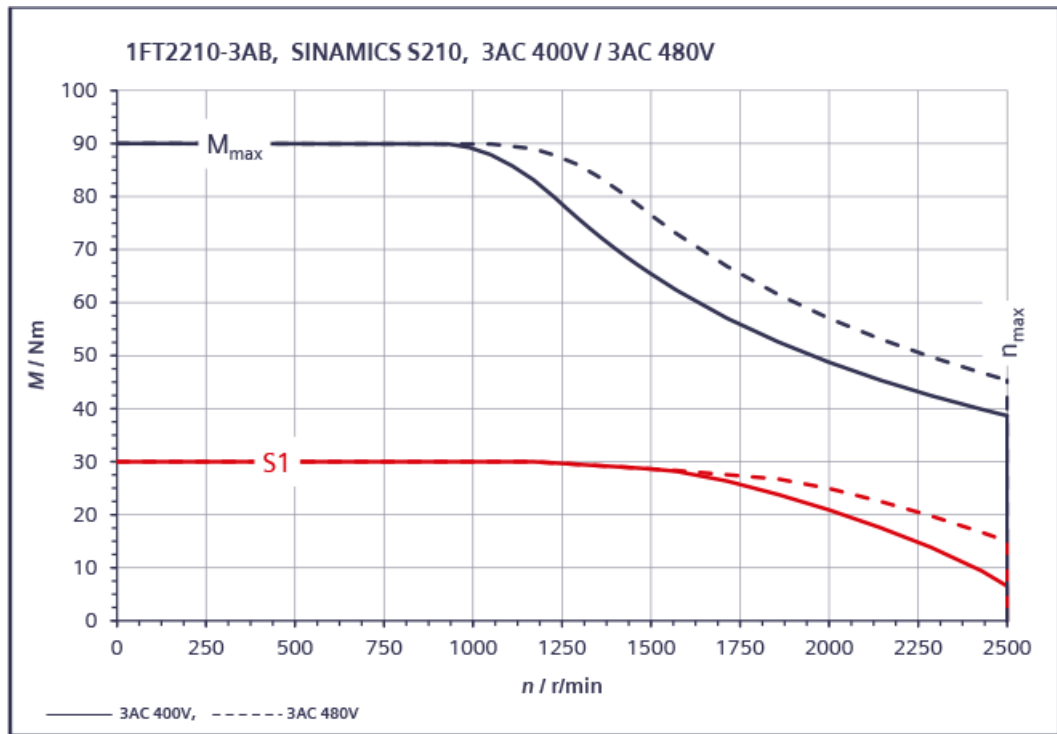


12.2.18.40 1FT2210-3AC connected to 3 AC 400 V / 3 AC 480 V

1FT2210-3AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	30
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	4400
Maximum torque	M_{max}	Nm	90
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	33
Rotor moment of inertia	J_{mot}	kgcm ²	88.8
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	94.8
Weight	m_{mot}	kg	22
Weight (with brake)	$m_{mot br}$	kg	25
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	26
Rated current	I_{rated}	A	13.5
Rated power	P_{rated}	kW	5.5

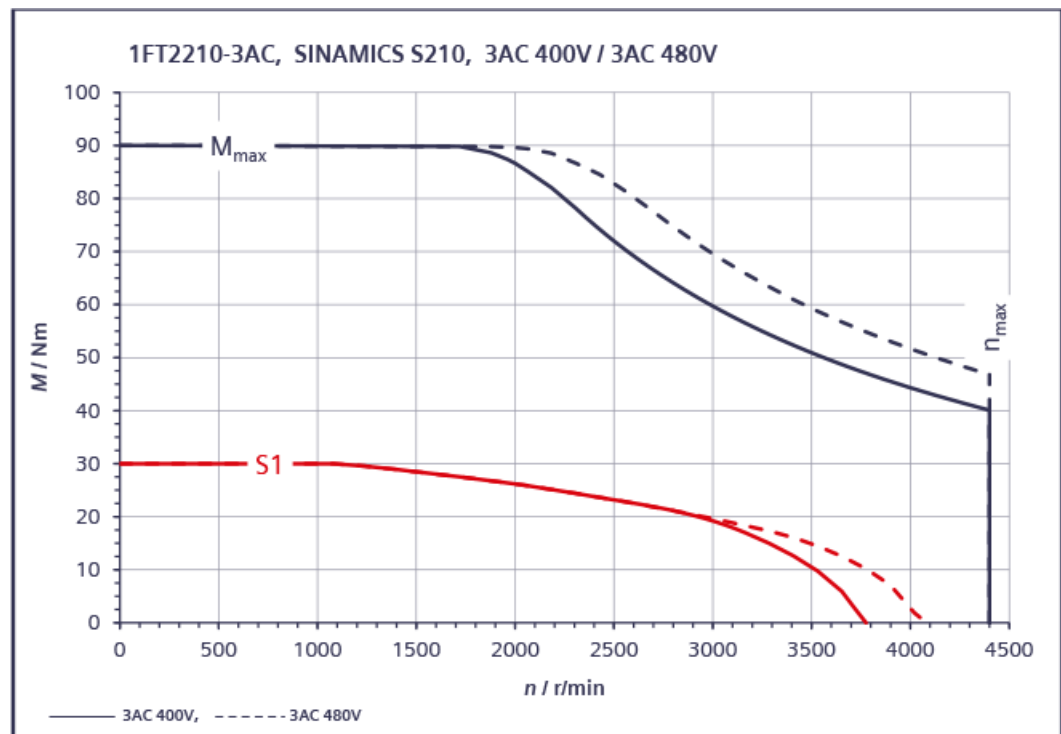


12.2.18.41 1FT2210-4AB connected to 400 V 3 AC / 480 V 3 AC

1FT2210-4AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	11.8
Maximum permissible speed	n_{max}	r/min	2500
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	43.5
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	34.5
Rated current	I_{rated}	A	10.4
Rated power	P_{rated}	kW	5.4

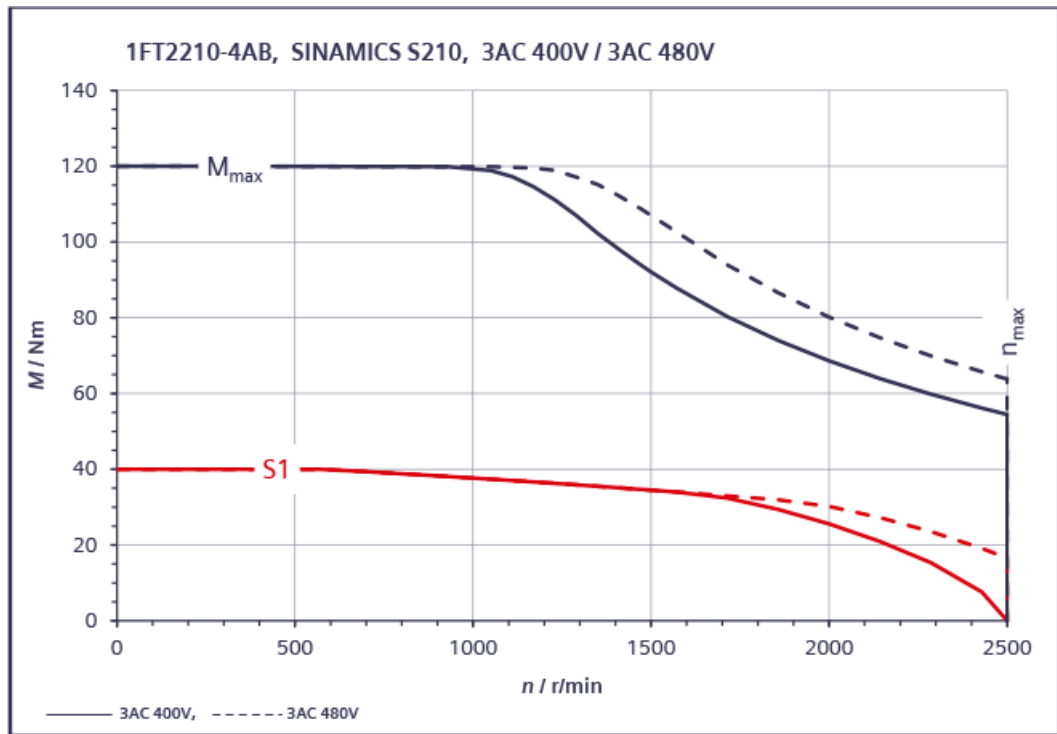


12.2.18.42 1FT2210-4AC connected to 3 AC 400 V / 3 AC 480 V

1FT2210-4AC	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	40
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	3300
Maximum torque	M_{max}	Nm	120
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	35
Rotor moment of inertia	J_{mot}	kgcm ²	117
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	133
Weight	m_{mot}	kg	27
Weight (with brake)	$m_{mot br}$	kg	31
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	2000
Rated torque	M_{rated}	Nm	30.5
Rated current	I_{rated}	A	11.8
Rated power	P_{rated}	kW	6.4

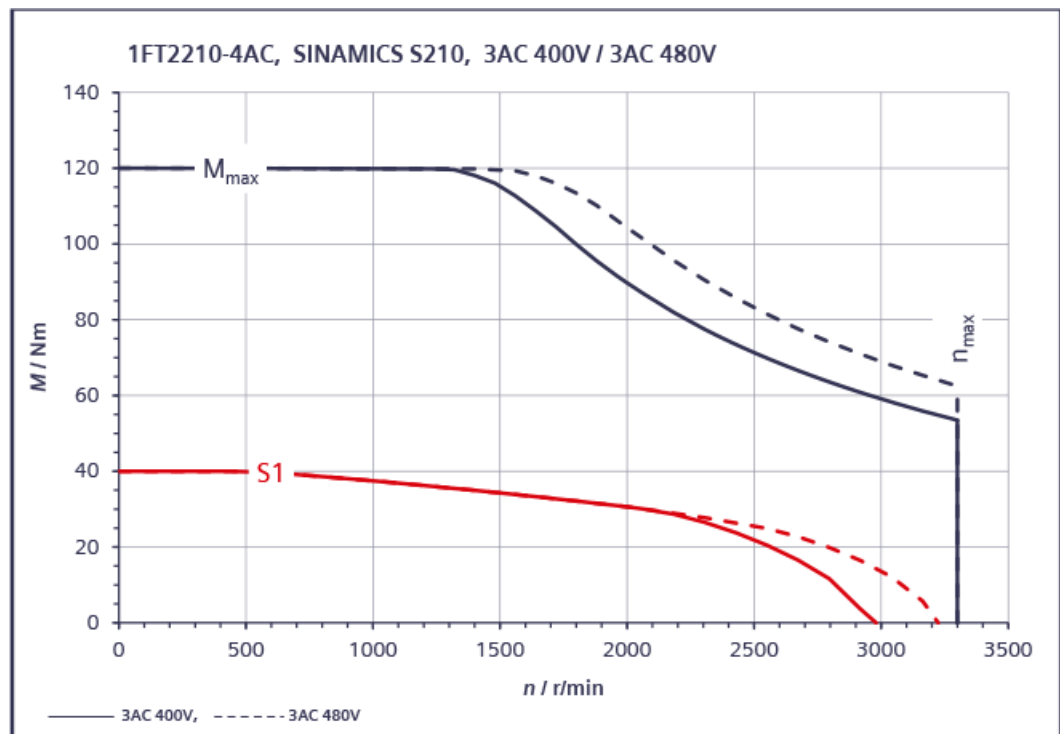

12.2.18.43 1FT2210-5AB connected to 3 AC 400 V / 3 AC 480 V

1FK2210-5AB	For 3 AC 400 V, 3 AC 480 V		
Technical specifications in the SINAMICS S210 system	Symbol	Unit	Value
Static torque	M_0	Nm	50
Stall current	I_0	A	15
Maximum permissible speed	n_{max}	r/min	2850
Maximum torque	M_{max}	Nm	150
Maximum current	I_{max}	A	55
Thermal time constant	T_{th}	min	37
Rotor moment of inertia	J_{mot}	kgcm ²	14.5
Rotor moment of inertia (with brake)	$J_{mot br}$	kgcm ²	16.1
Weight	m_{mot}	kg	32
Weight (with brake)	$m_{mot br}$	kg	36
Rated data for S210 connected to 3 AC 400 V, 3 AC 480 V			
Rated speed	n_{rated}	r/min	1500
Rated torque	M_{rated}	Nm	39
Rated current	I_{rated}	A	12.1
Rated power	P_{rated}	kW	6.1

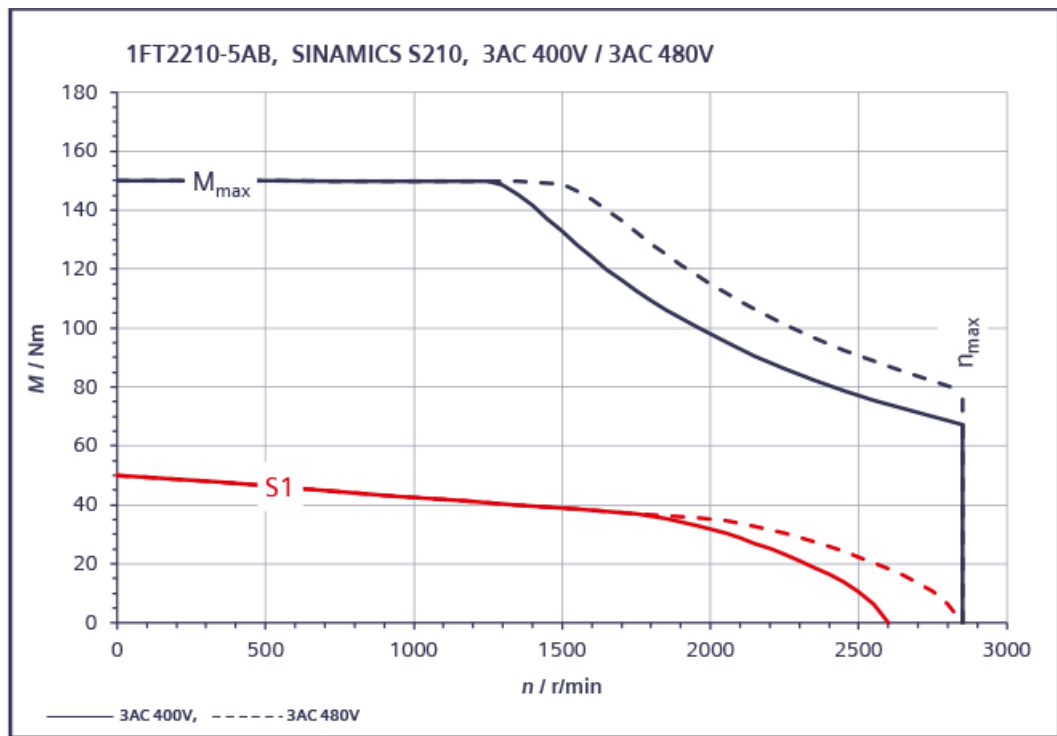

12.3 Technical specifications of the converter

12.3.1 Overload capability

Overload capability and shutdown behavior of the converter

The converter has integrated overload protection for the connected motor.

When delivered, the tripping threshold is 115% of the parameterized motor current. Brief overloads of up to 300% of the motor current are possible.

When the load exceeds the rated motor current, the thermal protection in the converter starts and switches off the motor in accordance with the overload characteristics shown below.

The following diagrams show the general characteristic for the converter. The maximum current of each converter is given in the technical data. It must not be exceeded irrespective of the overload characteristics.

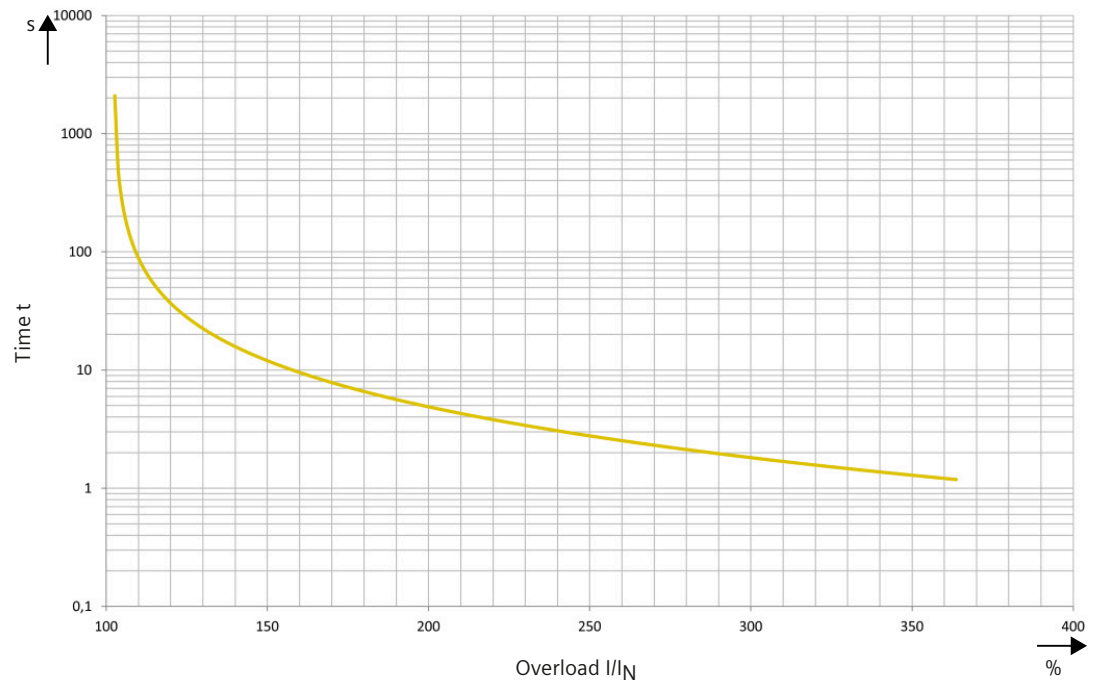


Figure 12-11 Overload characteristic for shutting down the converter with 1 AC line connection

12.3 Technical specifications of the converter

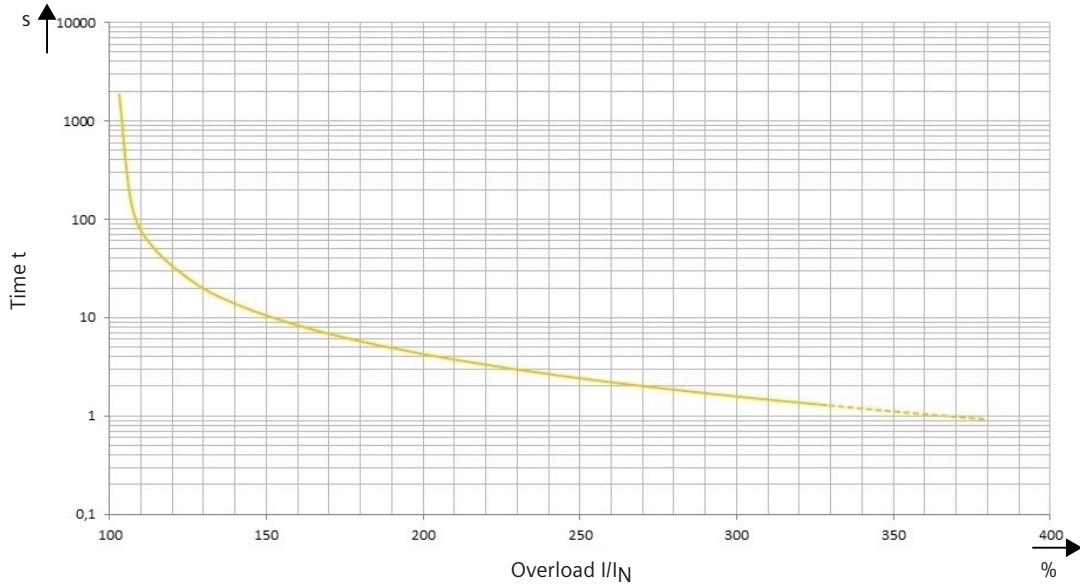


Figure 12-12 Overload characteristic for shutting down the converter with 3 AC line connection

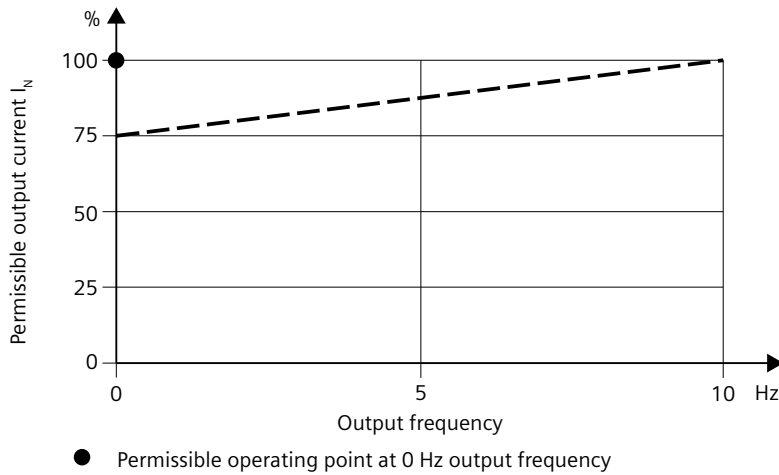


Figure 12-13 Permitted output current at low frequencies

Note

Using the TIA Selection Tool (TST)

As a result of the combination possibilities (smaller motor connected to a larger converter and vice versa), the response cannot be covered solely by the diagram. The TIA Selection Tool is required for this purpose.

TIA selection tool (TST)

Use the TIA Selection Tool (TST) to configure a converter-motor combination, adapted to your specific machine. This allows the load profile to be more precisely checked for a selected drive configuration - even with more complex profiles.

- "TIA selection tool (<https://www.siemens.com/tst>)"

12.3.2 Electromagnetic compatibility according to IEC 61800-3

The intended and proper use of the converter is specified in the introduction to these operating instructions.

The converters described there are intended for operation in the second environment. In this environment, they meet all requirements relating to interference immunity.

For an EMC-compliant installation, observe the information provided in the Configuration Manual: EMC installation guideline (<https://support.industry.siemens.com/cs/ww/en/view/60612658>).

Maximum permissible cable lengths for the respective EMC categories

Table 12-7 Converters with 1 AC line connection

	Converters with internal line filter	Converters with additional external line filter
EMC category C2	10 m	25 m
EMC category C3	25 m	50 m

Table 12-8 Converters with 3 AC line connection

	Converters with internal line filter	Converters with additional external line filter
	without line/DC link coupling	
EMC category C2	---	25 m
EMC category C3	25 m	50 m
	with line or DC link coupling ≤ 6 converters¹⁾	
EMC category C2	---	100 m
EMC category C3	100 m	250 m

¹⁾ The data is applicable for the complete cable length of the motors whose converters are coupled with one another through an AC coupling or a DC link coupling.
 The maximum cable length per motor is 25 m when using the internal line filter to achieve EMC Category C3 or an external line filter to achieve EMC Category C2.
 When using an external line filter to achieve EMC category C3, the maximum cable length per motor is 50 m.

Note

To be observed for devices used in Category C2

In a residential environment this product may cause radio-frequency interference, which may make interference suppression measures necessary.

- Have qualified personnel carry out the installation and commissioning with suitable interference suppression measures.

Note**To be observed for devices used in Category C3**

In a residential environment this product may cause radio-frequency interference.

- Do not use this device in the first environment (residential area).
-

Note**Behavior regarding flicker**

The flicker behavior can only be evaluated in a combination of the drive with an application (see IEC 61800-3, Section 6.2.4.2). The drive behaves passively in this regard, i.e. load fluctuations of the application will be visible without changes on the line side.

12.3.3 Protection from electromagnetic fields

Overview

Protection of workers from electromagnetic fields is specified in the European EMF Directive 2013/35/EU. This directive is implemented in national law in the European Economic Area (EEA). Employers are obligated to design workplaces in such a way that workers are protected from impermissibly strong electromagnetic fields.

To this end, assessments and/or measurements must be performed for workplaces.

General conditions

The following general conditions apply for the evaluations and measurements:

1. The laws for protection from electromagnetic fields in force in individual EU member states can go beyond the minimum requirements of the EMF Directive 2013/35/EU and always take precedence.
2. The ICNIRP 2010 limits for the workplace are the basis for the assessment.
3. The 26th BImSchV (German Federal Emission Protection Regulation) defines 100 μT (RMS) for the assessment of active implants.
According to Directive 2013/35/EU, 500 μT (RMS) at 50 Hz is applicable here.
4. The routing of power cables has a significant impact on the electromagnetic fields that occur. Install and operate the components inside metallic cabinets in compliance with the documentation and use shielded motor cables (see "EMC Installation Guideline (<https://support.industry.siemens.com/cs/ww/en/view/60612658>)").

Evaluation of the converter

The converters are normally used in machines. The assessment and testing is based on DIN EN 12198-1 and IEC 62311.

12.3 Technical specifications of the converter

Compliance with the limit values was assessed for the following frequencies:

- Line frequency 47 ... 63 Hz
- 8 kHz pulse frequency

The indicated minimum distances apply to the head and complete torso of the human body. Shorter distances are possible for extremities.

Table 12-9 Minimum distances to the converter

Individuals without active implants		Individuals with active implants	
Control cabinet closed	Control cabinet open	Control cabinet closed	Control cabinet open
0 cm	Forearm length (approx. 35 cm)	Must be separately assessed depending on the active implant.	

12.3.4 Permissible environmental conditions for the converter

Property	Version
Ambient conditions for transport in the transport packaging	
Climatic ambient conditions	-40 °C ... +70 °C, according to Class 2K4 to IEC 60721-3-2:1997 maximum humidity 95% at 40 °C
Mechanical ambient conditions	Shocks and vibrations permissible according to 3M2 to IEC 60721-3-2:1997
Protection against chemical substances	Protected according to Class 2C2 to IEC 60721-3-2:1997
Biological environmental conditions	Suitable according to Class 2B2 to IEC 60721-3-2:1997
Ambient conditions for long-term storage in the product packaging	
Climatic ambient conditions	-25 °C ... +55 °C, according to Class 1K4 to IEC 60721-3-1:1997
Protection against chemical substances	Protected according to Class 1C2 to IEC 60721-3-1:1997
Biological environmental conditions	Suitable according to Class 1B2 to IEC 60721-3-1:1997
Ambient conditions in operation	
Installation altitude	<ul style="list-style-type: none"> • up to 1000 m above sea level without derating • up to 4000 m, derating, see the following table
Climatic ambient conditions	<ul style="list-style-type: none"> • Temperature range: 0 °C ... +50 °C • Relative humidity: 5 ... 95%, condensation not permitted • Oil mist, salt mist, ice formation, condensation, dripping water, spraying water, splashing water and water jets are not permitted <p>Increased ruggedness regarding temperature range and relative humidity; therefore better than 3K3 according to IEC 60721-3-3:2002</p>
Mechanical ambient conditions	<ul style="list-style-type: none"> • Vibration levels permissible according to Class 3M2 to IEC 60721-3-3:2002 Vibration test in operation according to IEC 60068-2-6 Test Fc (sinusoidal) <ul style="list-style-type: none"> – 2 Hz ... 9 Hz: 1.5 mm deflection amplitude – 9 Hz ... 200 Hz: 0.5 g acceleration amplitude – 10 frequency cycles per axis • Shocks permissible according to Class 3M2 to IEC 60721-3-3:2002 Shock test in operation according to IEC 60068-2-27 Test Ea (semi sinusoidal) <ul style="list-style-type: none"> – 5 g peak acceleration – 30 ms duration – 3 shocks in all three axes in both directions
Protection against chemical substances	<ul style="list-style-type: none"> • Protected according to Class 3C2 to IEC 60721-3-3:2002 • Protected according to Class 3C3 for H₂S and SO₂ to IEC 60721-3-3:2002 • Protected according to Class G3 to ANSI/ISA 71.04:2013
Biological environmental conditions	Suitable according to Class 3B2 to IEC 60721-3-3:2002
Pollution	Suitable for environments with degree of pollution 2 acc. to IEC 61800-5-1

12.3 Technical specifications of the converter

Table 12-10 Maximum permissible output current depending on the installation altitude and ambient temperature

Installation altitude	Ambient temperature in °C		
	50	45	40
	Output current as a %		
Up to 1000 m	100		
Up to 2000 m	90	100	
Up to 3000 m	80	90	100
Up to 4000 m	70	80	90

A maximum of 2000 m is permissible for CSA compliance.

12.3.5 General data

Property	Version
Line voltage	<p>200 V 1 AC ... 240 V 1 AC, ±10%</p> <p>Line system configuration: Grounded TN/TT line systems and non-grounded IT line systems</p> <hr/> <p>3 AC 200 V ... 240 V, ±10%</p> <p>380 V ... 480 V 3 AC, ±10%</p> <p>Line system configuration: Grounded TN/TT line systems. Non-grounded IT line systems only with an isolation transformer.</p> <p>You can find more information in Chapter "Line connection conditions for the S210 converter system with the motors 1FK2/1FT2 (Page 373)".</p>
Mains buffering concept	<p>The converter is dimensioned so that there is no functional restriction at rated power (3 ms power dip or interruption according to IEC 61800-3 (2017)¹⁾).</p> <p>The specified times can be several times longer depending on the drive constellation and the operating conditions. In particular in 3 AC devices in groups with DC link coupling in which some converters operate in the motor mode while others operate in generator mode, the time can be substantially longer. Based on these influencing factors, no generally valid statements can be made about the S210 system, however, so that each drive constellation must be assessed individually.</p>
Output voltage	3 AC 0 V ... 0.95 x input voltage
Input frequency	50 Hz / 60 Hz, ±10 Hz
Output frequency	0 ... 550 Hz
Overvoltage category according to IEC/EN 61800-5-1	The converter insulation is designed for surge voltages of overvoltage category III.
Pulse frequency	8 kHz
Short-circuit current rating (SCCR) and branch protection	<p>≤ 65 kA rms</p> <p>Branch protection and short-circuit strength according to UL and IEC Protective Devices for SINAMICS S210 (https://support.industry.siemens.com/cs/ww/en/view/109815356)</p>
Minimum prospective short-circuit current	To prevent fire in the event of a fault, a minimum value must be ensured for the prospective short-circuit current so that the upstream protective device trips quickly enough. A typical value when dimensioning is 20 to 25 x ²⁾ the rated current of the protection device used.
Braking resistor	Integrated in the device ³⁾ , when required, a larger resistor can be externally connected.
Service life of fan (3 AC only)	40000 h
Degree of protection according to IEC 60529	IP20 Must be installed in a control cabinet

12.3 Technical specifications of the converter

Property	Version																																																
Electronics power supply	24 V DC, -15% ... +20%, (PELV or SELV) For PELV systems, grounding must be carried out via the external power supply.																																																
Current requirements from electronic power supply at 24 V DC (motor without brake)																																																	
	<table border="1"> <thead> <tr> <th></th> <th>Frame size</th> <th>Current requirements [A]</th> </tr> </thead> <tbody> <tr> <td>1 AC devices</td> <td>FSA - FSC</td> <td>0.8</td> </tr> <tr> <td rowspan="3">3 AC devices</td> <td>FSA</td> <td>0.9</td> </tr> <tr> <td>FSB</td> <td>1.0</td> </tr> <tr> <td>FSC</td> <td>1.2</td> </tr> </tbody> </table>		Frame size	Current requirements [A]	1 AC devices	FSA - FSC	0.8	3 AC devices	FSA	0.9	FSB	1.0	FSC	1.2																																			
	Frame size	Current requirements [A]																																															
1 AC devices	FSA - FSC	0.8																																															
3 AC devices	FSA	0.9																																															
	FSB	1.0																																															
	FSC	1.2																																															
Additional current requirements for 1F□2 servomotor with brake (at 24 V DC)																																																	
Motor type	<table border="1"> <thead> <tr> <th>Motor type</th> <th>Current when opening, typical⁴⁾ (to open the brake)</th> <th>Duration of the current when opening After expiration of t_{dex}, the holding current takes effect</th> <th>Holding current (with open brake)</th> </tr> <tr> <td></td> <td>I_o / A</td> <td>t_{dex} / ms</td> <td>I_h / A</td> </tr> </thead> <tbody> <tr> <td>1F□2102</td> <td>0.6</td> <td>50</td> <td>0.1</td> </tr> <tr> <td>1F□2□03</td> <td>0.8</td> <td>60</td> <td>0.15</td> </tr> <tr> <td>1F□2□04</td> <td>1.2</td> <td>80</td> <td>0.2</td> </tr> <tr> <td>1F□2□05</td> <td>1.1</td> <td>120</td> <td>0.3</td> </tr> <tr> <td>1F□2□06</td> <td>1.1</td> <td>120</td> <td>0.35</td> </tr> <tr> <td>1F□2208-3</td> <td>1.2</td> <td>120</td> <td>0.4</td> </tr> <tr> <td>1F□2208-4</td> <td>1.4</td> <td>180</td> <td>0.5</td> </tr> <tr> <td>1F□2208-5</td> <td>1.4</td> <td>180</td> <td>0.5</td> </tr> <tr> <td>1F□2210-3</td> <td>1.4</td> <td>180</td> <td>0.5</td> </tr> <tr> <td>1F□2210-4</td> <td>1.5</td> <td>200</td> <td>0.5</td> </tr> </tbody> </table>	Motor type	Current when opening, typical ⁴⁾ (to open the brake)	Duration of the current when opening After expiration of t_{dex} , the holding current takes effect	Holding current (with open brake)		I_o / A	t_{dex} / ms	I_h / A	1F□2102	0.6	50	0.1	1F□2□03	0.8	60	0.15	1F□2□04	1.2	80	0.2	1F□2□05	1.1	120	0.3	1F□2□06	1.1	120	0.35	1F□2208-3	1.2	120	0.4	1F□2208-4	1.4	180	0.5	1F□2208-5	1.4	180	0.5	1F□2210-3	1.4	180	0.5	1F□2210-4	1.5	200	0.5
Motor type	Current when opening, typical ⁴⁾ (to open the brake)	Duration of the current when opening After expiration of t_{dex} , the holding current takes effect	Holding current (with open brake)																																														
	I_o / A	t_{dex} / ms	I_h / A																																														
1F□2102	0.6	50	0.1																																														
1F□2□03	0.8	60	0.15																																														
1F□2□04	1.2	80	0.2																																														
1F□2□05	1.1	120	0.3																																														
1F□2□06	1.1	120	0.35																																														
1F□2208-3	1.2	120	0.4																																														
1F□2208-4	1.4	180	0.5																																														
1F□2208-5	1.4	180	0.5																																														
1F□2210-3	1.4	180	0.5																																														
1F□2210-4	1.5	200	0.5																																														
<p>The brake output voltage is controlled internally. Therefore, with a deviating input voltage at terminal X124, the brake currents must be converted accordingly (constant power). It is not necessary to adjust the input voltage to the cable length.</p> <p>For more information on the motor brake, refer to the technical specifications in Chapter "Holding brake data (Page 394)".</p>																																																	
Control mode	Servo control																																																
Switch-on frequency minimum precharging cycle	120 s ⁵⁾																																																
Protection functions	Ground fault protection, output short-circuit protection, overvoltage/undervoltage protection, I ² t detection, IGBT overtemperature protection																																																

- ¹⁾ When operating 3 AC devices on a voltage of 3 AC 200 V ... 240 V, the 3 ms may possibly not be reached depending on the operating conditions.
- ²⁾ To comply with permissible line harmonics, depending on the line connection conditions, different values may be required.
- ³⁾ The 1 AC 200 ... 240 V 100 W device does not have an internal braking resistor. An internal braking resistor is not required for normal operation as a result of the available DC link capacitance.
- ⁴⁾ Typical value for 20 °C ambient temperature. At -15 °C, the break-induced currents can increase by up to 30%.
- ⁵⁾ Shorter precharging cycles may result in a shorter service life.

Table 12-11 Technical data of the digital inputs

Type	High-speed digital inputs for probe or homing marks	Failsafe Digital Input (F-DI)	Digital input for monitoring the temperature of an external braking resistor
Number	2 (DI 0, DI 1)	1 (DI 2 and DI 3)	1 (DI 4)
• Low level	-30 V ... +5 V and ≤ 2 mA	-30 V ... +5 V and ≤ 2 mA	-30 V ... +5 V and ≤ 2 mA
• High level	15 V ... 30 V	15 V ... 30 V	15 V ... 30 V
• Current consumption	6 mA	5 mA	6 mA
• Delay time, typ. L \rightarrow H	5 μ s	50 μ s	5 μ s
• Delay time, typ. H \rightarrow L	50 μ s	100 μ s	50 μ s
• Electrical isolation	No	Yes	No
Conductor cross section, max.	1.5 mm ²	1.5 mm ²	1.5 mm ²

The inputs correspond to Type 1 according to EN 61131-2.

12.3.6 Specific data of the converter with 1 AC line connection

Table 12-12 Frame size FSA, 1 AC

Article number	6SL5310-1BB10-1CF0	6SL5310-1BB10-2CF0
Rated output current	0.8 A	1.4 A
Maximum output current	3.1 A	4.8 A
Rated power	100 W	200 W
Rated input current	1.4 A	2.7 A
Inrush current ¹⁾	10 A	2.6 A
Maximum braking current at connector X1	2 A	2 A
Power loss	15.7 W	23.2 W
Fuse according to IEC	3NA3 801 (6 A)	3NA3 801 (6 A)
Fuse according to UL, Class J	6 A	6 A
Cooling	Convection cooling without fan	Convection cooling without fan
Weight	1.1 kg	1.1 kg

Table 12-13 Frame size FSB 1 AC

Article number	6SL5310-1BB10-4CF0
Rated output current	2.4 A
Maximum output current	8.7 A
Rated power	400 W
Rated input current	5 A
Inrush current ¹⁾	3.9 A
Maximum braking current at connector X1	4 A
Power loss	38.5 W
Fuse according to IEC	3NA3 803 (10 A)
Fuse according to UL, Class J	10 A
Cooling	Convection cooling without fan
Weight	1.2 kg

Table 12-14 Frame size FSC 1 AC

Article number	6SL5310-1BB10-8CF0
Rated output current	4.4 A
Maximum output current	16 A
Rated power	750 W
Rated input current	9.3 A
Inrush current ¹⁾	7.9 A
Maximum braking current at connector X1	6 A
Power loss	71.1 W

Article number	6SL5310-1BB10-8CF0
Fuse according to IEC	3NA3 805 (16 A)
Fuse according to UL, Class J	20 A
Cooling	Convection cooling without fan
Weight	1.9 kg

¹⁾ The inrush currents may differ significantly if external braking resistors are used: Inrush current = (connection voltage × $\sqrt{2}$)/R_{ext}

12.3.7 Specific data of the converter with 3 AC line connection

Table 12-15 Frame size FSA, 3 AC

Article number	6SL5310-1BE10-4DF0	6SL5310-1BE10-8DF0
Rated output current	1.2 A	2.3 A
Maximum output current	4.2 A	7.6 A
Rated power	0.4 kW	0.75 kW
Rated input current	1.6 A	2.8 A
Inrush current ¹⁾	4.3 A	4.3 A
Maximum braking current at connector X4	5 A	5 A
Power loss	69 W	81 W
Fuse according to IEC	3NA3 805 (16 A)	3NA3 805 (16 A)
Fuse according to UL, Class J	15 A	15 A
Cooling	Integrated fan	Integrated fan
Weight	2.1 kg	2.1 kg

Table 12-16 Frame size FSA, 3 AC

Article number	6SL5310-1BE11-0DF0
Rated output current	3 A
Maximum output current	10.9 A
Rated power	1 kW
Rated input current	3.8 A
Inrush current ¹⁾	4.3 A
Maximum braking current at connector X4	5 A
Power loss	94 W
Fuse according to IEC	3NA3 805 (16 A)
Fuse according to UL, Class J	15 A
Cooling	Integrated fan
Weight	2.1 kg

Table 12-17 Frame size FSB 3 AC

Article number	6SL5310-1BE11-5DF0	6SL5310-1BE12-0DF0
Rated output current	5 A	7 A
Maximum output current	19 A	24 A
Rated power	1.5 kW	2 kW
Rated input current	6.0 A	7.5 A
Inrush current ¹⁾	8.6 A	8.6 A
Maximum braking current at connector X4	10 A	10 A
Power loss	114 W	131 W

Article number	6SL5310-1BE11-5DF0	6SL5310-1BE12-0DF0
Fuse according to IEC	3NA3 812 (32 A)	3NA3 812 (32 A)
Fuse according to UL, Class J	30 A	30 A
Cooling	Integrated fan	Integrated fan
Weight	3.3 kg	3.3 kg

Table 12-18 Frame size FSC 3 AC

Article number	6SL5310-1BE13-5DF0	6SL5310-1BE15-0DF0
Rated output current	9 A	12 A
Maximum output current	33 A	44 A
Rated power	3.5 kW	5 kW
Rated input current	12.5 A	15.0 A
Inrush current ¹⁾	27.7 A	27.7 A
Maximum braking current at connector X4	32 A	32 A
Power loss	167 W	191 W
Fuse according to IEC	3NA3 822 (63 A)	3NA3 822 (63 A)
Fuse according to UL, Class J	70 A	70 A
Cooling	Integrated fan	Integrated fan
Weight	5 kg	5 kg

Table 12-19 Frame size FSC 3 AC

Article number	6SL5310-1BE17-0DF0
Rated output current	15 A
Maximum output current	55 A
Rated power	7 kW
Rated input current	17.9 A
Inrush current ¹⁾	27.7 A
Maximum braking current at connector X4	32 A
Power loss	204 W
Fuse according to IEC	3NA3 822 (63 A)
Fuse according to UL, Class J	70 A
Cooling	Integrated fan
Weight	5 kg


¹⁾ The inrush currents may differ significantly if external braking resistors are used: Inrush current = (connection voltage × √2)/R_{ext}

12.4 Technical data and properties of the connection system


MOTION-CONNECT connection cables between the motor and the converter

The following technical data applies to the MOTION-CONNECT OCC cables.

Table 12-20 MOTION-CONNECT OCC cable with SPEED-CONNECT connector

	Designation and use	Connector size	Outer diameter	Minimum bending radius, static	For connection to motor	Article number ¹⁾
			D_{max} / mm	R / mm		
	Motor connection cable MC500 OCC for predominantly fixed installation	M12	9.7	23.5	1F□2□02 1F□2□03 ²⁾	6FX5002-8QN04-□□□□ ⁴⁾
		M17	10.5	25.5	1F□2□03 ³⁾ 1F□2□04 1F□2□05	6FX5002-8QN08-□□□□
		M23	12.7	30.7	1F□2□06 1F□2□08 1F□2□10	6FX5002-8QN11-□□□□
	Motor connection cable MC800 OCC for use in a cable carrier	M12	9.7	27.2	1F□2□02 1F□2□03 ²⁾	6FX8002-8QN04-□□□□ ⁴⁾
		M12	9.9	24.75	1F□2□02 1F□2□03 ²⁾	6FX8002-8QN05-□□□□ ⁵⁾
		M17	10.5	30.6	1F□2□03 ³⁾ 1F□2□04 1F□2□05	6FX8002-8QN08-□□□□
		M23	12.7	36.9	1F□2□06 1F□2□08 1F□2□10	6FX8002-8QN11-□□□□

12.4 Technical data and properties of the connection system

	Designation and use	Connector size	Outer diameter	Minimum bending radius, static	For connection to motor	Article number ¹⁾
			D_{max} / mm	R / mm		
	Extension cable MC500 OCC for predominantly fixed installation	M12	9.7	23.5	1F□2□02 1F□2□03 ²⁾	6FX5002-8QE04-□□□□ ⁴⁾
		M17	10.5	25.5	1F□2□03 ³⁾ 1F□2□04 1F□2□05	6FX5002-8QE08-□□□□
		M23	12.7	30.7	1F□2□06 1F□2□08 1F□2□10	6FX5002-8QE11-□□□□
	Extension cable MC800 OCC for use in a cable carrier	M12	9.7	27.2	1F□2□02 1F□2□03 ²⁾	6FX8002-8QE04-□□□□ ⁴⁾
		M12	9.9	24.75	1F□2□02 1F□2□03 ²⁾	6FX8002-8QE05-□□□□ ⁵⁾
		M17	10.5	30.6	1F□2□03 ³⁾ 1F□2□04 1F□2□05	6FX8002-8QE08-□□□□
		M23	12.7	36.9	1F□2□06 1F□2□08 1F□2□10	6FX8002-8QE11-□□□□

- 1) The last 4 positions (□□□□) define the cable length corresponding to the length code.
- 2) Applicable for 1F□2□03 with 1 AC 230 V/3 AC 240 V
- 3) Applicable for 1F□2□03 with 3 AC 400 V/3 AC 480 V
- 4) For IEC applications
- 5) For UL applications


The length code can be found in Chapter "Determining the article number of a prefabricated OCC MOTION-CONNECT cable (Page 624)".

Technical data and notes for cable carrier use with MC800 PLUS

Note

You require an MC800 PLUS cable to connect the motor using a cable carrier.


- When inserting prefabricated cables in the cable carrier, do not pull the connector, as this may damage the strain relief or cable clamping.

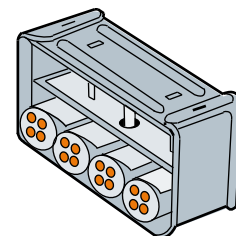

Strain relief in a cable carrier

12.4 Technical data and properties of the connection system

- Lay the cables loosely in the carrier. They must be free to move. The cables must be free to move in particular in the bending radii of the carrier. Observe the specified minimal bending radii.
- The cable fixings must be attached at both ends at an appropriate distance away from the end points of the moving parts in a dead zone.

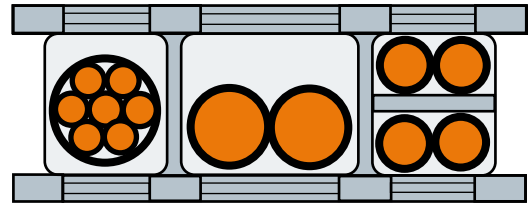

Cable routed in a cable carrier

When laying cables, comply with the instructions given by the cable carrier manufacturer.

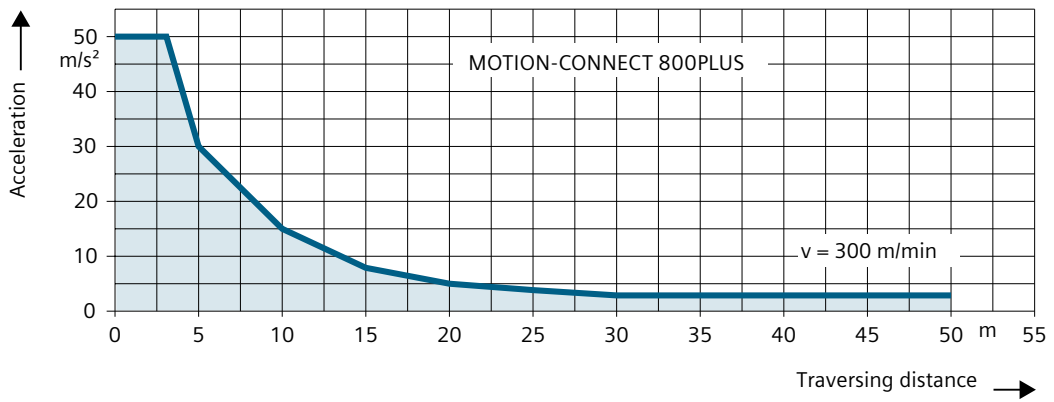


Figure 12-14 Permissible acceleration levels for MOTION-CONNECT 800 PLUS cables

Note

Additional fixing of the cable

If between the cable strain relief on the cable carrier and the terminal at the motor, part of the cable is hanging loose or is not routed, we recommend that the cable is additionally fixed for vibration load and with horizontal or vertical cable entries.

- Also fix the cable where the motor is fixed so that machine vibrations are not transferred to the connector.

Dimension drawings

13.1 Dimension drawings of 1FK2 motors

13.1.1 Dimension drawings of 1FK2, frame size 20

All dimensions in mm (inches).


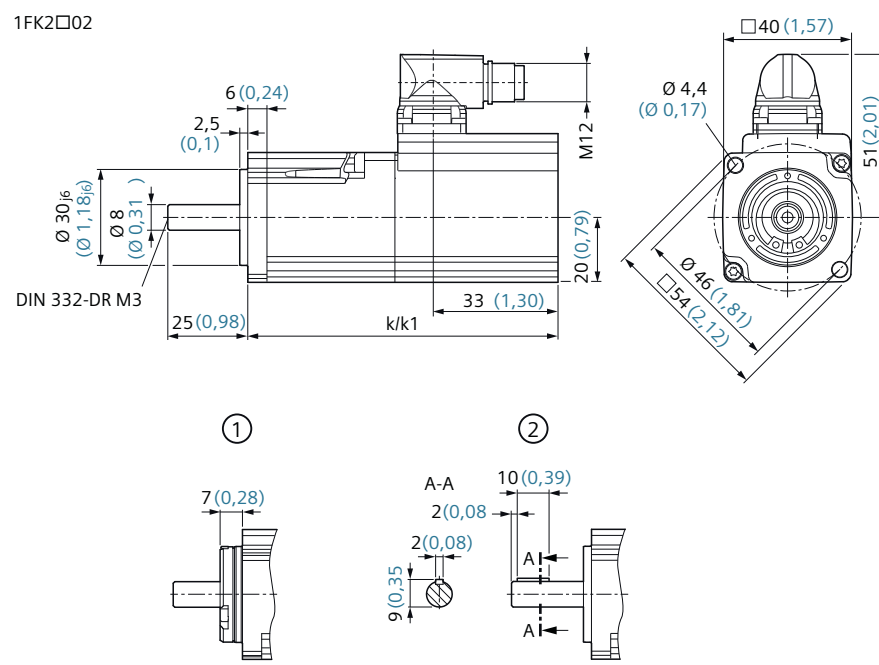


Figure 13-1 Dimension drawing 1FK2102

SIMOTICS S-1FK2 Frame size 20	Dimensions	
	Without brake	With brake
	DIN	k1
	IEC	LB1
1FK2102-0A□	90 (3.54)	121 (4.76)
1FK2102-1A□	106 (4.17)	137 (5.39)

13.1.2 Dimension drawings of 1FK2, frame size 30

All dimensions in mm (inches).

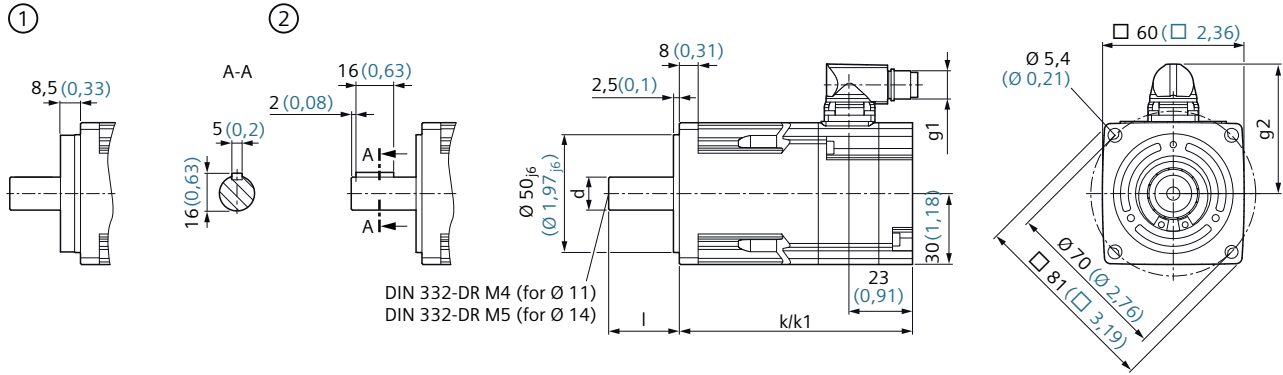

- ① With shaft sealing ring (IP65)
- ② With feather key

Figure 13-2 Dimension drawing 1FK2□03

SIMOTICS S-1FK2 Frame size 30	Dimensions								
	DIN IEC	g1	g2	Without brake	With brake	Shaft 14 x 30 mm		Shaft 11 x 23 mm	
				k	k1	d	l	d	l
				LB	LB1	D	L	D	L
1FK2□03-2AG	M12	55 (2.17)	99 (3.9)	131 (5.16)	14 _{h6} (0.55 _h)	30 (1.18)	11 _{k6} (0.43 _k)	23 (0.91)	
1FK2□03-4AG			123 (4.84)	155 (6.10)	14 _{h6} (0.55 _h)	30 (1.18)	11 _{k6} (0.43 _k)	23 (0.91)	
1FK2□03-2AH 1FK2□03-2AK	M17	60 (2.36)	99 (3.9)	131 (5.16)	14 _{h6} (0.55 _h)	30 (1.18)	11 _{k6} (0.43 _k)	23 (0.91)	
1FK2□03-4AH 1FK2□03-4AK			123 (4.84)	155 (6.10)	14 _{h6} (0.55 _h)	30 (1.18)	11 _{k6} (0.43 _k)	23 (0.91)	

13.1.3 Dimension drawings of 1FK2, frame size 40

All dimensions in mm (inches)

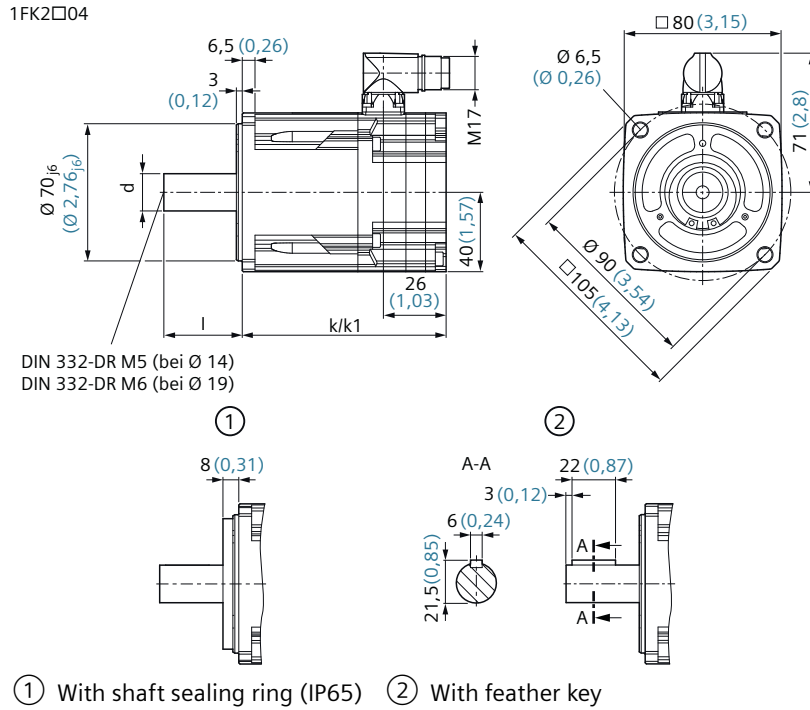


Figure 13-3 Dimension drawing 1FK2104

SIMOTICS S-1FK2 Frame size 40	Dimensions						
		Without brake	With brake	Shaft diam. 19 x 40		Shaft diam. 14 x 30	
	DIN	k	k1	d	l	d	l
	IEC	LB	LB1	D	L	D	L
1FK2□04-4A□	98 (3.86)	142 (5.59)	Diam. 19 _{k6} (diam. 0.75 _{k6})	40 (1.57)	Diam. 14 _{k6} (diam. 0.55 _{k6})	30 (1.18)	
1FK2□04-5A□	126 (4.96)	170 (6.69)					
1FK2□04-6A□	144 (5.57)	188 (7.40)					

13.1.4 Dimension drawings of 1FK2, frame size 48

All dimensions in mm (inches).

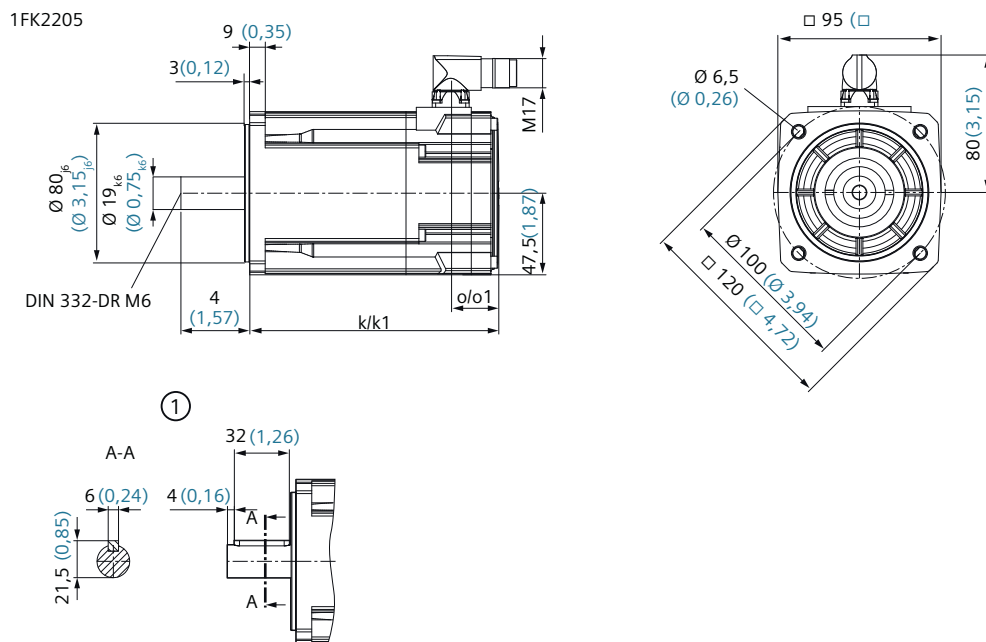



Figure 13-4 Dimension drawing, 1FK2205

SIMOTICS S-1FK2 Frame size 48	Dimensions				
		Without brake		With brake	
	DIN	k	o	k1	o1
	IEC	LB	-	LB1	-
1FK2205-2A□		145 (5.71)		188 (7.4)	
1FK2205-4A□		177 (6.97)	28 (1.1)	220 (8.66)	34 (1.34)

13.1.5 Dimension drawings of 1FK2, frame size 52

All dimensions in mm (inches).

1FK2105

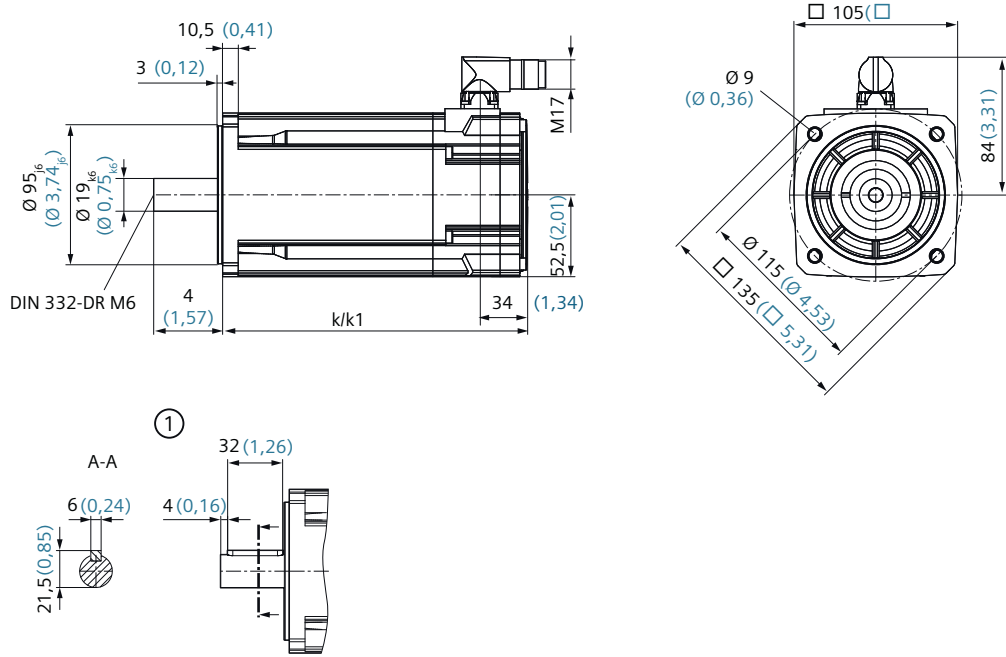


① With feather key

Figure 13-5 Dimension drawing, 1FK2105

SIMOTICS S-1FK2 Frame size 52	Dimensions	
	Without brake	With brake
	DIN k	k1
IEC LB	LB1	
1FK2105-4A□	173 (6.81)	200 (7.87)
1FK2105-6A□	215 (8.46)	242 (9.53)

13.1.6 Dimension drawings 1FK2, frame size 63

All dimensions in mm (inches).

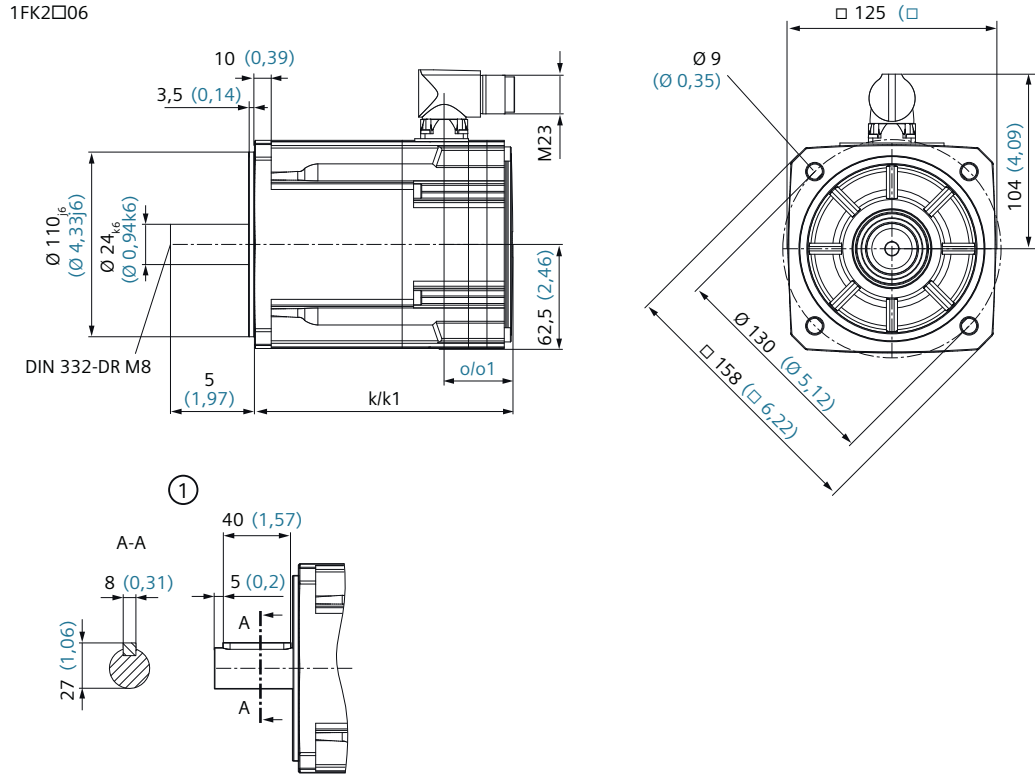

① With feather key


Figure 13-6 Dimension drawing, 1FK2□06

SIMOTICS S-1FK2 Frame size 63	Dimensions				
	DIN	Without brake		With brake	
		k	o	k1	o1
IEC	LB	-	LB1	-	
1FK2206-2A□	154 (6.06)	41 (1.61)	205 (8.07)	53 (2.09)	
1FK2106-3A□	174 (6.85)		225 (8.86)		
1FK2□06-4A□	193 (7.60)		244 (9.61)		
1FK2106-6A□	232 (9.13)		283 (11.14)		

13.1.7 Dimension drawings of 1FK2, frame size 80

All dimensions in mm (inches).

1FK2208

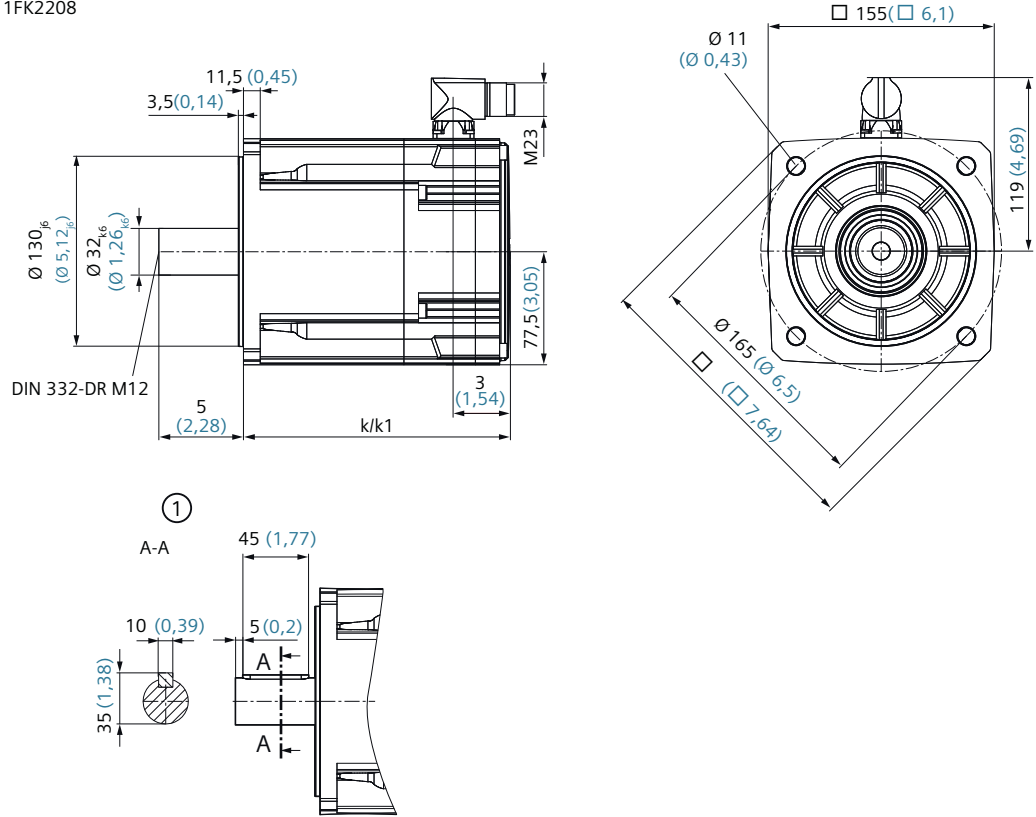


① With feather key
Figure 13-7 Dimension drawing, 1FK2208

SIMOTICS S-1FK2 Frame size 80	Dimensions	
	Without brake	With brake
	DIN k	IEC LB
1FK2208-3A□	183 (7.20)	236 (9.29)
1FK2208-4A□	203 (7.99)	256 (10.08)
1FK2208-5A□	223 (8.78)	276 (10.87)

13.1.8 Dimension drawings of 1FK2, frame size 100

All dimensions in mm (inches).

1FK2210

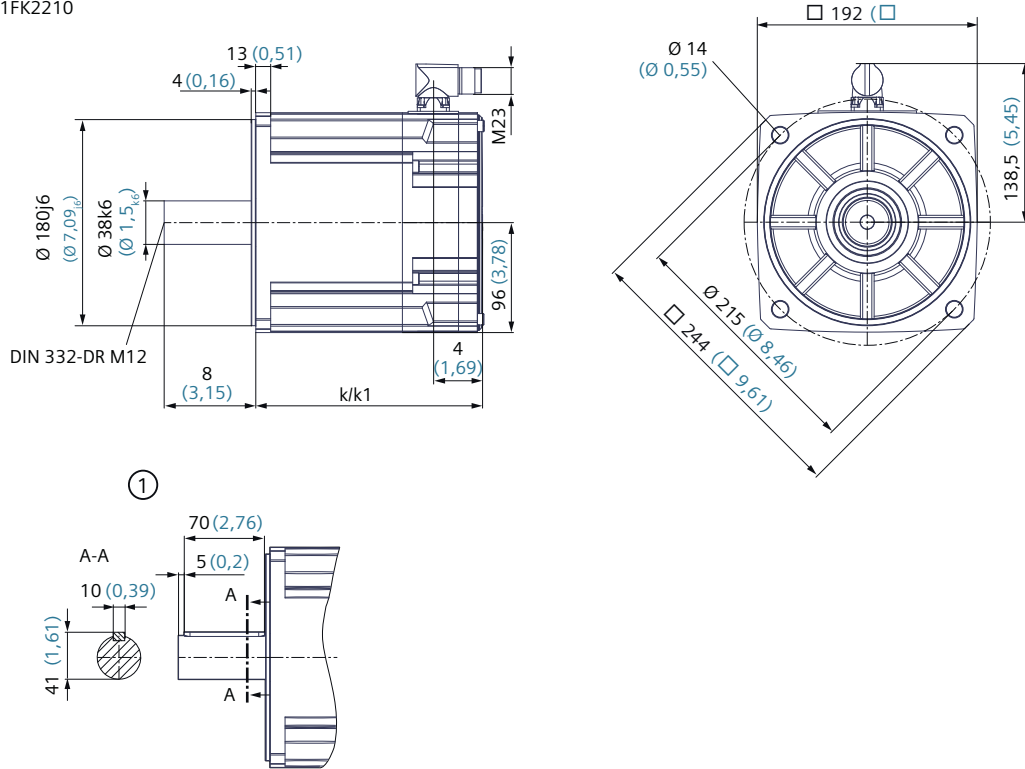

① With feather key

Figure 13-8 Dimension drawing, 1FK2210


SIMOTICS S-1FK2 Frame size 100	Dimensions	
	Without brake	With brake
	DIN k	IEC k1
1FK2210-3A□	198 (7.80)	257 (10.12)
1FK2210-4A□	223 (8.78)	282 (11.10)

13.2 Dimension drawings of 1FT2 motors

13.2.1 Dimension drawings of 1FT2, frame size 20

All dimensions in mm (inches).

1FT2□02

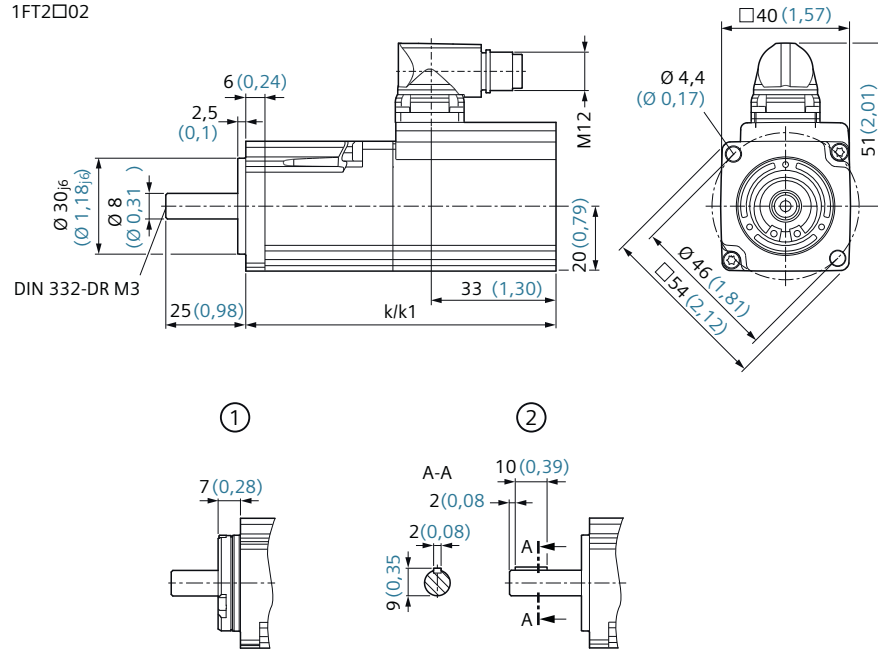

- ① With shaft sealing ring (IP65) ② With feather key and IP67)

Figure 13-9 Dimension drawing 1FT2102

SIMOTICS S-1FT2 Frame size 20	Dimensions	
	Without brake	With brake
	DIN k	IEC LB
1FT2102-0A□	90 (3.54)	121 (4.76)
1FT2102-1A□	106 (4.17)	137 (5.39)

13.2.2 Dimension drawings of 1FT2, frame size 30

All dimensions in mm (inches).

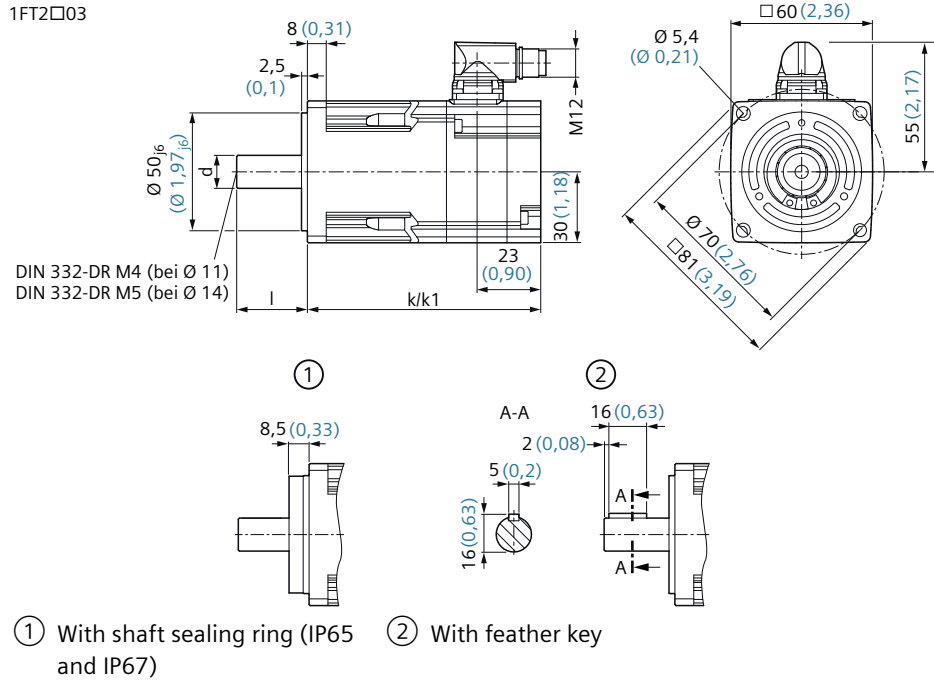


Figure 13-10 Dimension drawing 1FT2103

SIMOTICS S-1FT2 Frame size 30	Dimensions								
	DIN IEC	g1	g2	Without brake	With brake	Shaft 14 x 30 mm		Shaft 11 x 23 mm	
				k	k1	d	l	d	l
				LB	LB1	D	L	D	L
1FT2□03-2AG	M12	55 (2.17)	99 (3.9)	131 (5.16)	14 _{h6} (0.55 _h e)	30 (1.18)	11 _{k6} (0.43 _k e)	23 (0.91)	
1FT2□03-4AG			123 (4.84)	155 (6.10)	14 _{h6} (0.55 _h e)	30 (1.18)	11 _{k6} (0.43 _k e)	23 (0.91)	
1FT2□03-2AH 1FT2□03-2AK	M17	60 (2.36)	99 (3.9)	131 (5.16)	14 _{h6} (0.55 _h e)	30 (1.18)	11 _{k6} (0.43 _k e)	23 (0.91)	
1FT2□03-4AH 1FT2□03-4AK			123 (4.84)	155 (6.10)	14 _{h6} (0.55 _h e)	30 (1.18)	11 _{k6} (0.43 _k e)	23 (0.91)	

13.2.3 Dimension drawings of 1FT2, frame size 40

All dimensions in mm (inches)


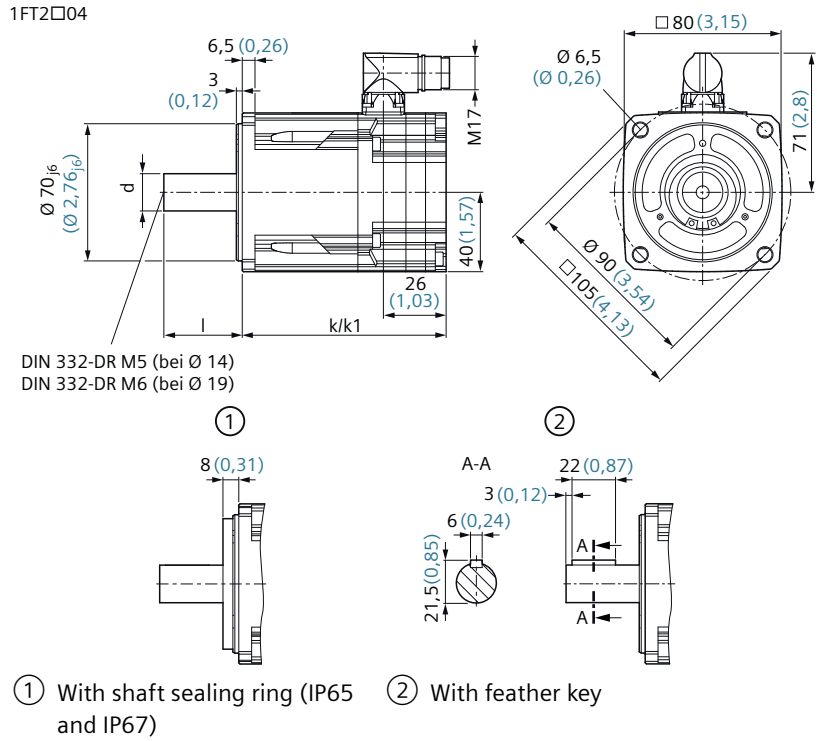


Figure 13-11 1FT2104 dimension drawing

SIMOTICS S-1FT2 Frame size 40	Dimensions						
		Without brake	With brake	Shaft diam. 19 x 40		Shaft diam. 14 x 30	
	DIN	k	k1	d	l	d	l
	IEC	LB	LB1	D	L	D	L
1FT2□04-4A□	98 (3.86)	142 (5.59)	Diam. 19 _{k6} (diam. 0.75 _{k6})	40 (1.57)	Diam. 14 _{k6} (diam. 0.55 _{k6})	30 (1.18)	
1FT2□04-5A□	126 (4.96)	170 (6.69)					
1FT2□04-6A□	144 (5.57)	188 (7.40)					

13.2.4 Dimension drawings of 1FT2, frame size 48

All dimensions in mm (inches).

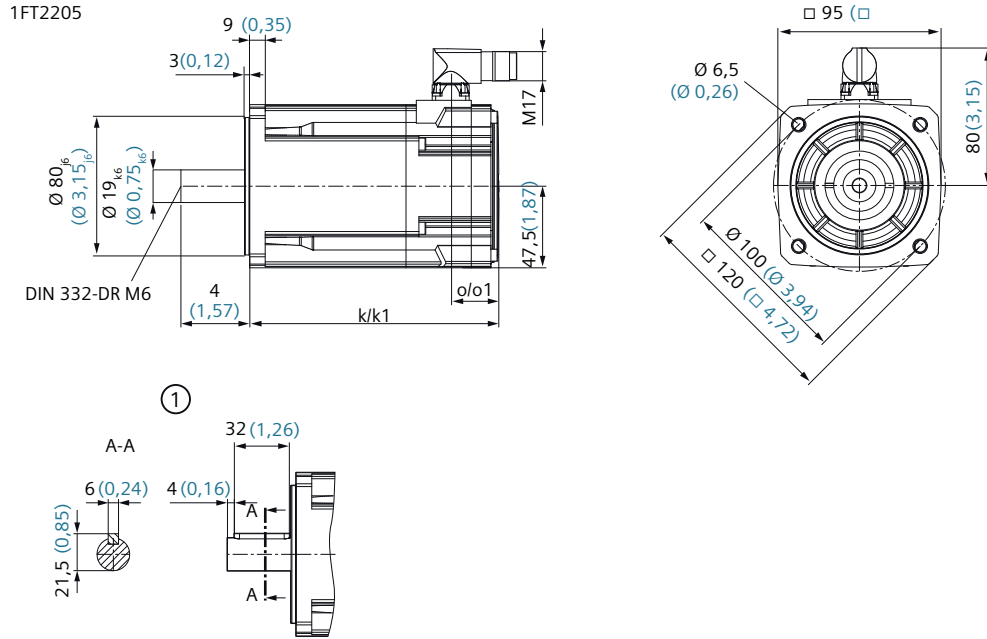

① With feather key


Figure 13-12 Dimension drawing of 1FT2205

SIMOTICS S-1FT2 Frame size 48	Dimensions				
		Without brake		With brake	
	DIN	k	o	k1	o1
	IEC	LB	-	LB1	-
1FT2205-2A□		145 (5.71)	28 (1.10)	188 (7.4)	34 (1.34)
1FT2205-4A□		177 (6.97)		220 (8.66)	

13.2.5 Dimension drawings of 1FT2, frame size 52

All dimensions in mm (inches).

1FK2105

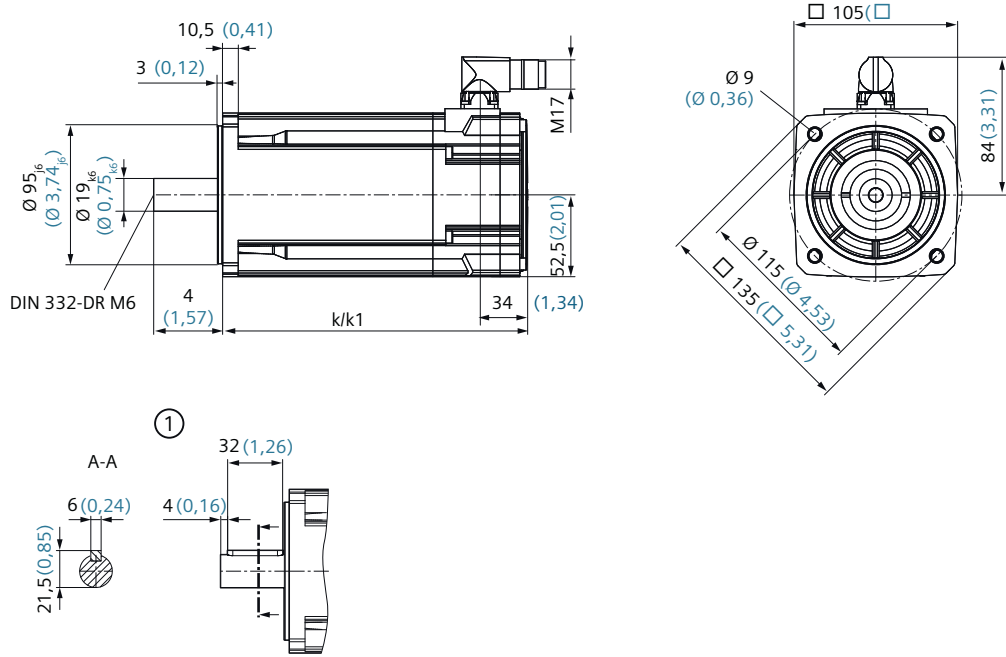


① With feather key

Figure 13-13 Dimension drawing of 1FT2105

SIMOTICS S-1FT2 Frame size 52	Dimensions	
	Without brake	With brake
	DIN k	k1
	IEC LB	LB1
1FT2105-4A□	173 (6.81)	200 (7.87)
1FT2105-6A□	215 (8.46)	242 (9.53)

13.2.6 Dimension drawings 1FT2, frame size 63

All dimensions in mm (inches).

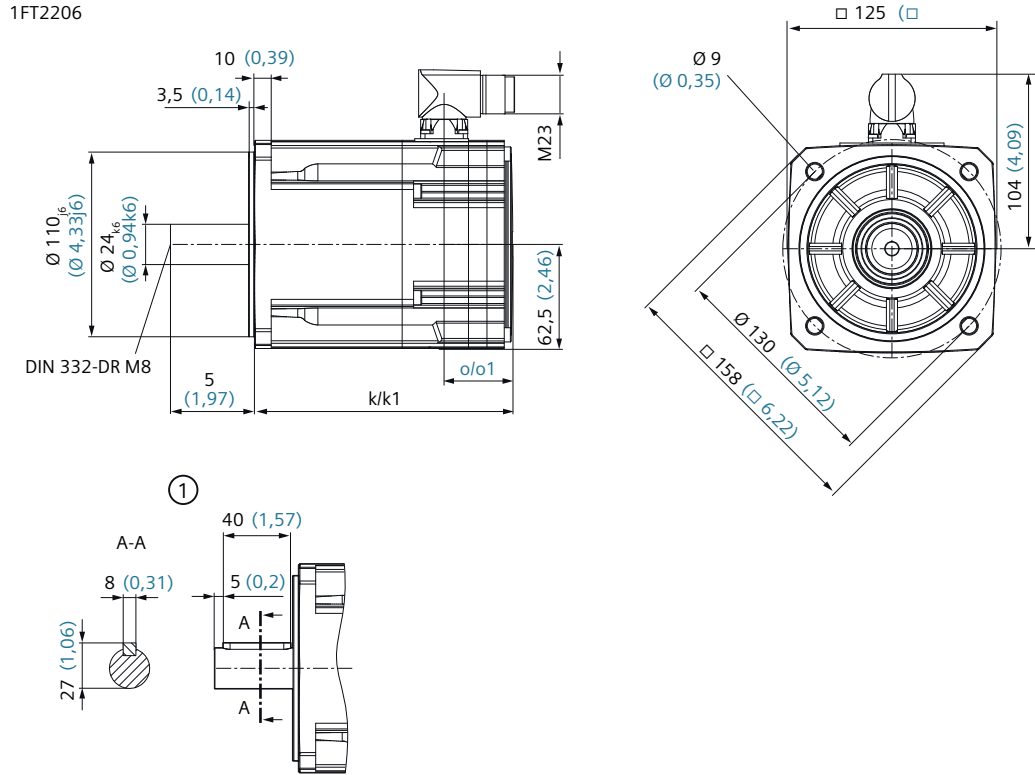

① With feather key


Figure 13-14 1FT2206 dimension drawing

SIMOTICS S-1FT2 Frame size 63	Dimensions				
	DIN	Without brake		With brake	
		k	o	k1	o1
IEC	LB	-	LB1	-	
1FT2206-2A□	154 (6.06)	41 (1.61)	205 (8.07)	53 (2.09)	
1FT2□06-3A□	174 (6.85)		225 (8.86)		
1FT2□06-4A□	193 (7.60)		244 (9.61)		
1FT2106-6A□	232 (9.13)		283 (11.14)		

13.2.7 Dimension drawings of 1FT2, frame size 80

All dimensions in mm (inches).

1FT2208

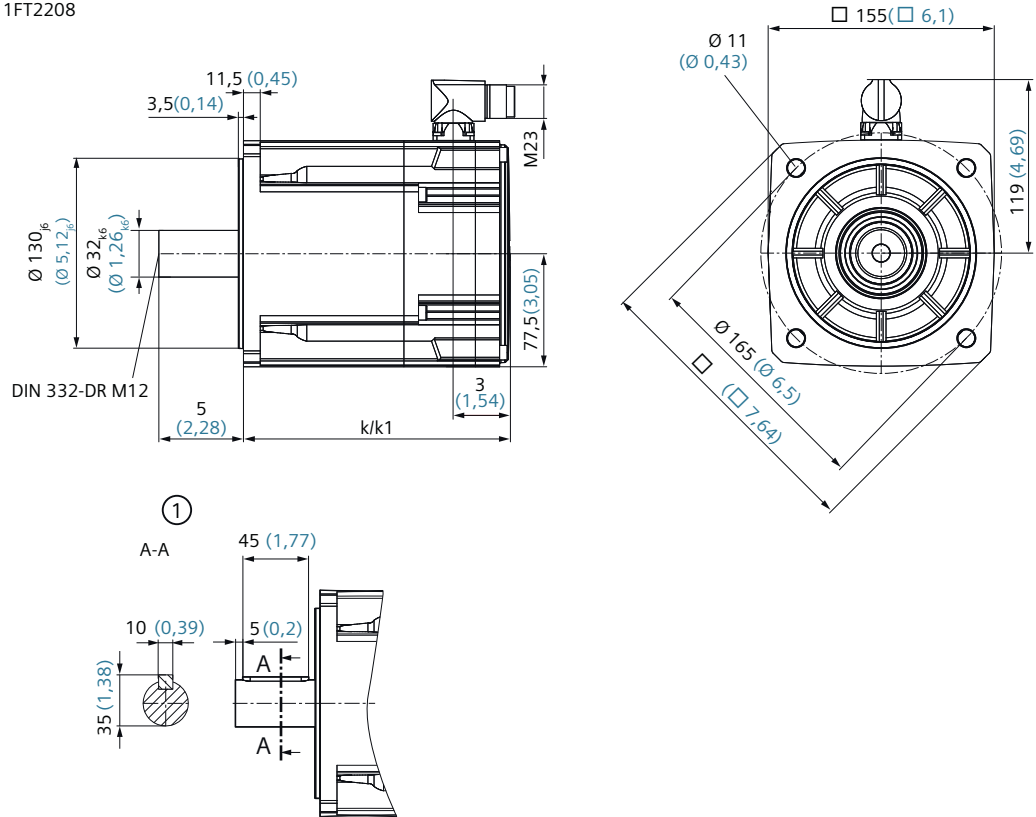


① With feather key
Figure 13-15 1FT2208 dimension drawing

SIMOTICS S-1FT2 Frame size 80	Dimensions	
	Without brake	With brake
	k	k1
	DIN	IEC
	LB	LB1
1FT2208-2A□	168 (6.61)	221 (8.7)
1FT2208-3A□	183 (7.20)	236 (9.29)
1FT2208-4A□	203 (7.99)	256 (10.08)
1FT2208-5A□	223 (8.78)	276 (10.87)

13.2.8 Dimension drawings of 1FT2, frame size 100

All dimensions in mm (inches).

1FT2210

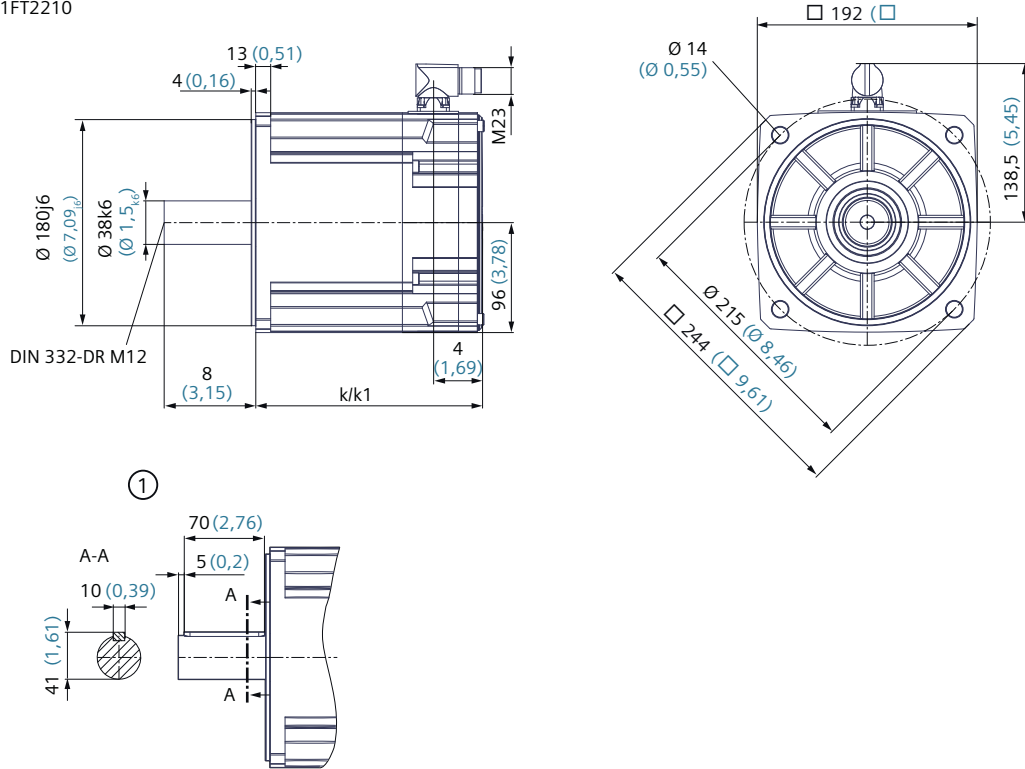

① With feather key

Figure 13-16 Dimension drawing of 1FT2210

SIMOTICS S-1FT2 Frame size 100	Dimensions	
	Without brake	With brake
	DIN k	IEC k1
1FT2210-2A□	174 (6.85)	233 (9.17)
1FT2210-3A□	198 (7.80)	257 (10.12)
1FT2210-4A□	223 (8.78)	282 (11.10)
1FT2210-5A□	248 (9.76)	307 (12.09)

13.3 Dimension drawings, converter

13.3.1 FSA with 1 AC line connection

FSA with 1 AC line connection

6SL5310-1BB10-1CF0 (100 W)

6SL5310-1BB10-2CF0 (200 W)

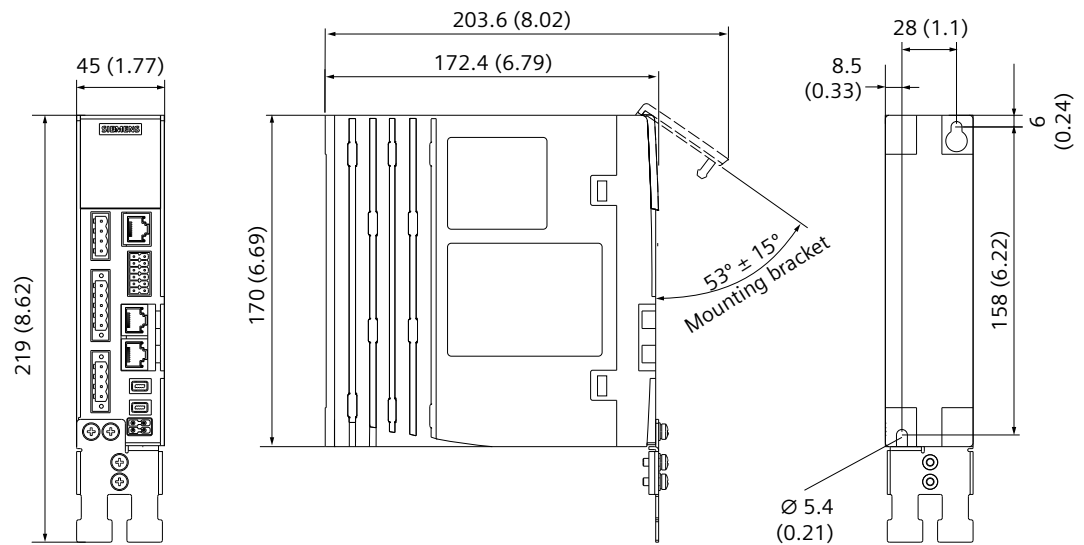


Figure 13-17 Dimension drawing SINAMICS S210 FSA, 1 AC, dimensions in mm (inch)

13.3.2 FSB with 1 AC line connection

FSB with 1 AC line connection

6SL5310-1BB10-4CF0 (400 W)

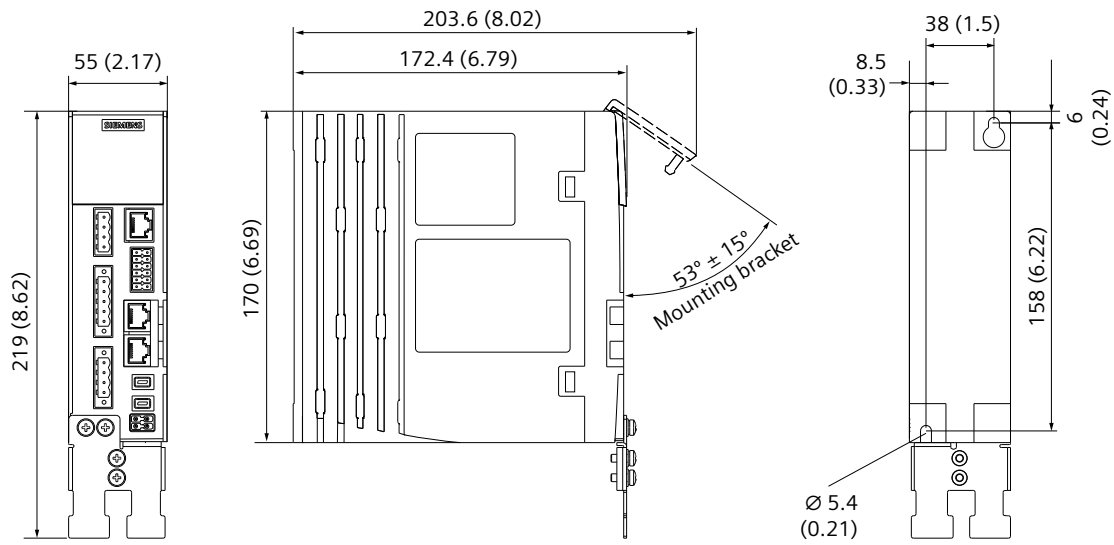


Figure 13-18 Dimension drawing SINAMICS S210 FSB, 1 AC, dimensions in mm (inch)

13.3.3 FSC with 1 AC line connection

FSC with 1 AC line connection

6SL5310-1BB10-8CF0 (750 W)

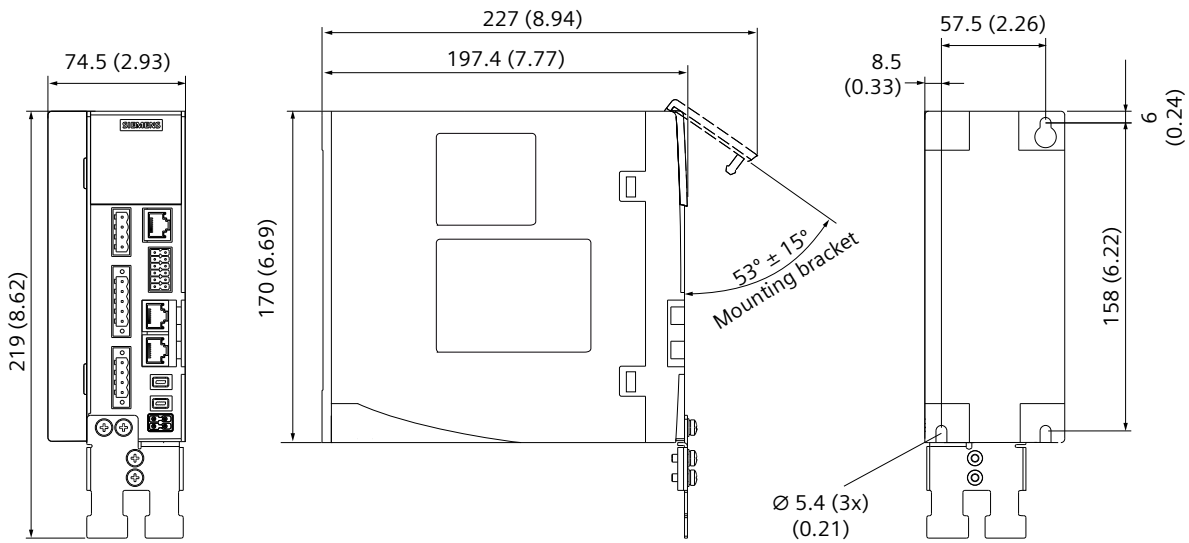


Figure 13-19 Dimension drawing SINAMICS S210 FSC, 1 AC, dimensions in mm (inch)

13.3.4 FSA with 3 AC line connection

FSA with 3 AC line connection

6SL5310-1BE10-4DF0 (0.4 kW)

6SL5310-1BE10-8DF0 (0.75 kW)

6SL5310-1BE11-0DF0 (1 kW)

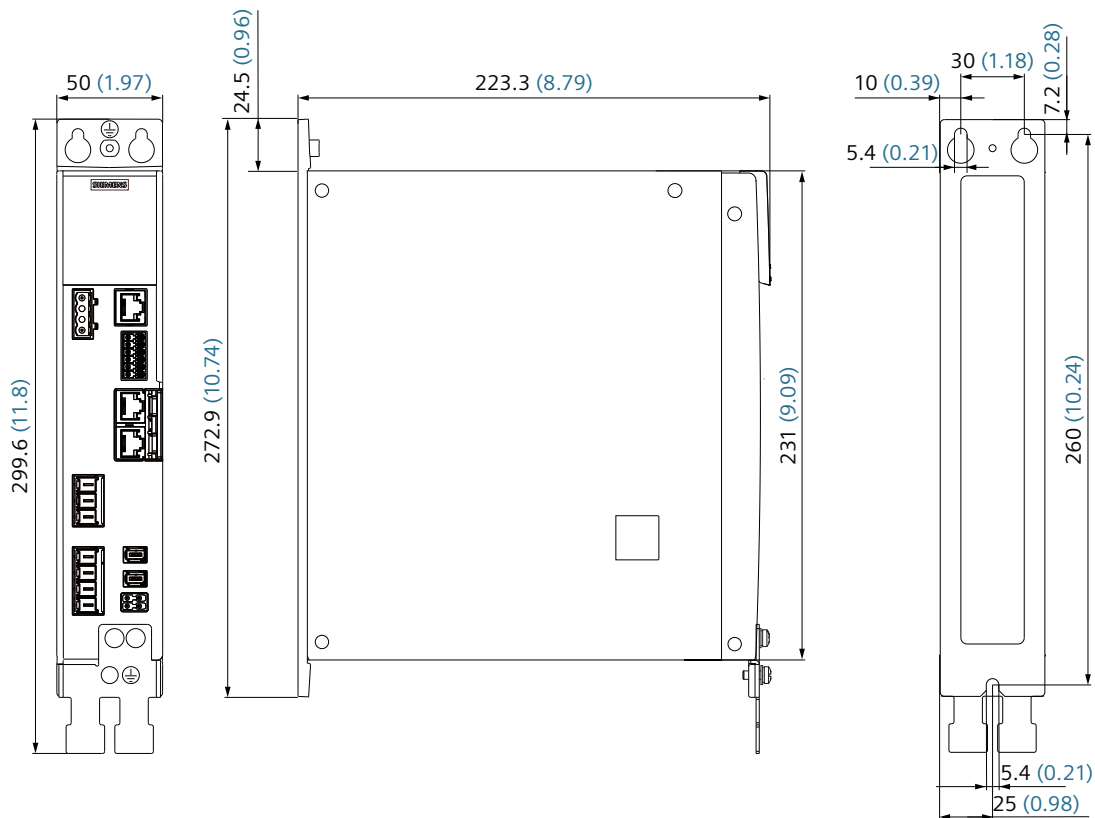


Figure 13-20 Dimension drawing SINAMICS S210 FSA, 3 AC, dimensions in mm (inch)

13.3.5 FSB with 3 AC line connection

FSB with 3 AC line connection

6SL5310-1BE11-5DF0 (1.5 kW)

6SL5310-1BE12-0DF0 (2 kW)

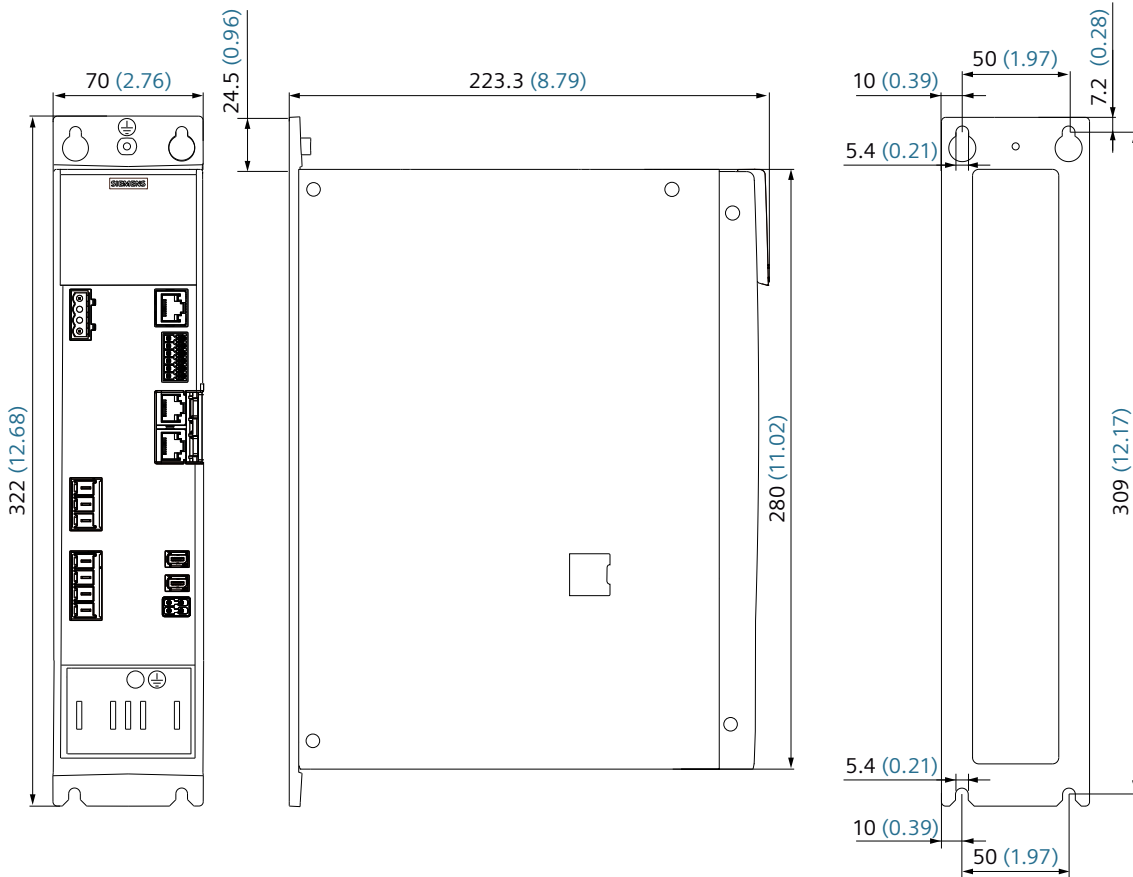


Figure 13-21 Dimension drawing SINAMICS S210 FSB, 3 AC, dimensions in mm (inch)

13.3.6 FSC with 3 AC line connection

FSC with 3 AC line connection

6SL5310-1BE13-5DF0 (3.5 kW)

6SL5310-1BE15-0DF0 (5 kW)

6SL5310-1BE17-0DF0 (7 kW)

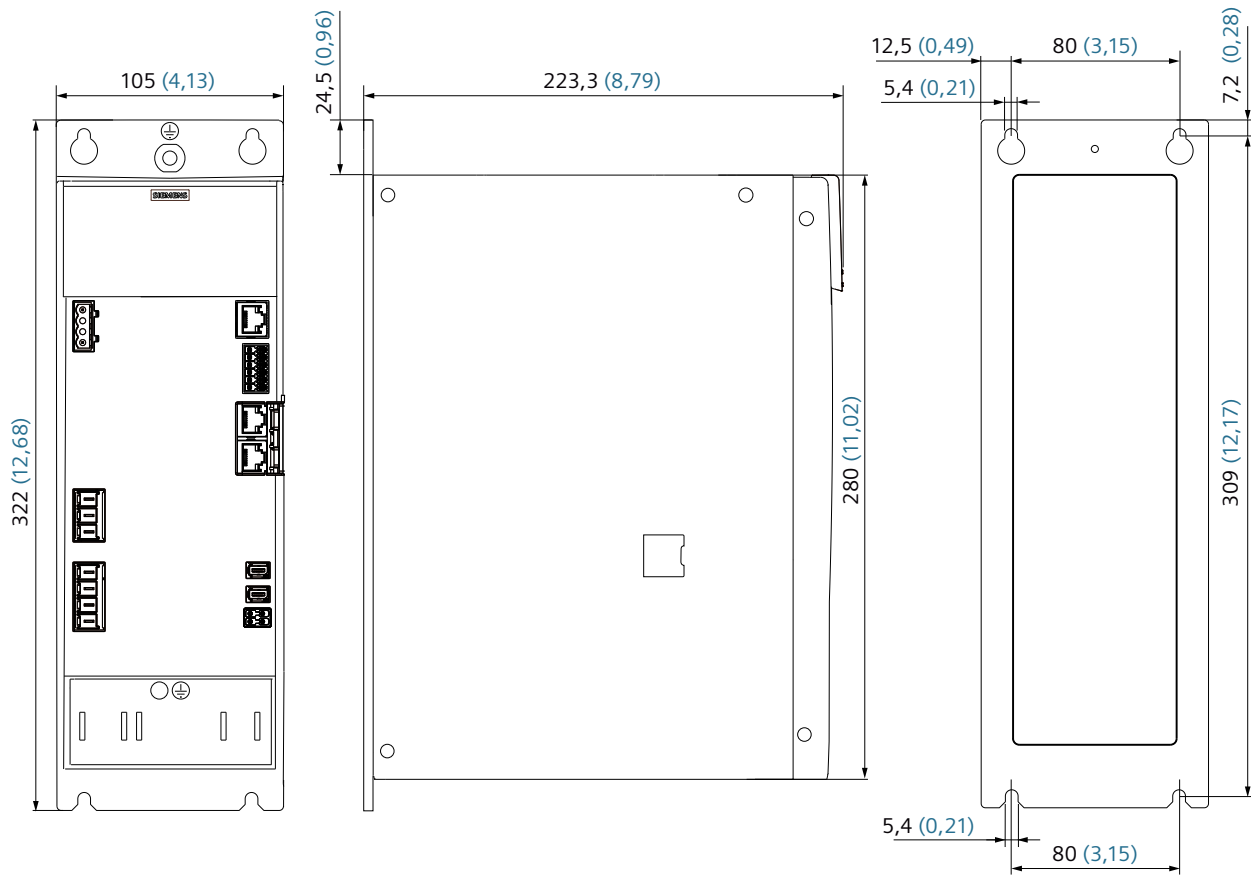


Figure 13-22 Dimension drawing SINAMICS S210 FSC, 3 AC, dimensions in mm (inch)

Decommissioning and disposal

WARNING

Risk of injury through falling motors or machine components

Motors and machine components can fall when being dismantled from the machine. They can cause serious injury or property damage.

- Secure the machine components being dismantled to prevent them falling.

NOTICE

Damage caused by data misuse

If the memory card or converter is disposed of in a non-secure manner, misuse of data may occur resulting in damage or malfunctions in the systems.

- Therefore, delete the configuration of the converter: see Chapter "Manual reset to factory settings with memory card (Page 356)".
- Make sure you securely remove all custom certificates.

You can find more information in the "Industrial Security (<https://support.industry.siemens.com/cs/ww/en/view/109810578>)" configuration manual.

Removing the device from the machine

1. Check that all parts of the device are in a no voltage condition.
2. Let the device cool down enough so that you are not burnt.
3. Disconnect all electrical connections.
4. Remove the fixing elements.
5. Transport the device to a suitable location for disposal.

14.1 Device disposal

Description



14.1 Device disposal

For environmentally-friendly recycling and disposal of your old device, contact a company certified for the disposal of waste electrical and electronic equipment, and dispose of the old device as prescribed in the respective country of use.

Accessories and spare parts

15.1 Accessories

15.1.1 Memory cards

The memory card is only required for data backup, series commissioning and for functions that require a license. The converter can also be operated without a memory card.

Memory card for data backup and series commissioning

Use the following memory cards to back up data, for licensing and series commissioning.

If you are using functions that require a license, a memory card is absolutely necessary for converter operation. The memory card must then be permanently inserted.

The license key can only be assigned to a SINAMICS memory card.

The integrated card reader does not support the exFAT format. Large memory cards must therefore be formatted with FAT32.

Memory cards with up to 32 GB are supported.

Card type	Article number
Empty SD card	6SL5970-0AA00-0AA0
SD card with firmware V6.1	6SL5370-0GB00-0AA0
SD card with firmware V6.1 and license for Extended Safety Functions	6SL5370-0GB00-0AA0-Z F01
License for Extended Safety Functions "Certificate of License" without SD card, to subsequently license an existing SD card	6SL5977-0AA00-2HA0

15.1 Accessories

15.1.2 SINAMICS Smart Adapter

15.1.2.1 SINAMICS Smart Adapter

Description

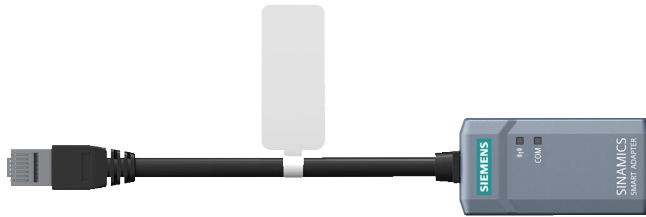


Figure 15-1 SINAMICS Smart Adapter

The SINAMICS Smart Adapter establishes a WLAN connection between the converter's X127 service interface and an operating unit, for example a tablet, smartphone, panel or PC.

Once plugged into the converter, the SINAMICS Smart Adapter is ready to use. No battery is required.

The SINAMICS Smart Adapter may only be installed temporarily for commissioning and service activities. It may not be used permanently with the converter.

The SINAMICS Smart Adapter supports WPA3 WLAN encryption.

15.1.2.2 SINAMICS Smart Adapter ordering data

Component	Article number
SINAMICS Smart Adapter	6SL4950-0AJ00-0AA0

15.1.3 Connectors and cables for the AC coupling and DC link coupling

The following packages are available for the connectors:


Article number	Spare part
6SL3260-2DC00-0AA0	Connector package for AC coupling and DC link coupling
6SL3260-2DC10-0AA0	Connector kit for the AC coupling

Content	6SL3260-2DC00-0AA0	6SL3260-2DC10-0AA0
Connectors for the AC coupling	1	1
Connector for the DC link coupling	1	-
End cap	2	1
Description/data sheet	1	1


The connectors are designed so that they cannot be accidentally interchanged.

The cables required for the AC coupling and DC link coupling are standard cables, and therefore not included in the scope of delivery. Permissible connecting cables are listed in section "Establishing the AC coupling and the DC link coupling (Page 183)".

X1: Connectors for the AC coupling

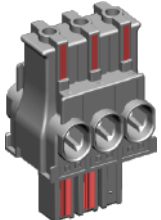	Pin	Pin assignment	Explanation
	L1	Phase L1 line system	The terminals are Torx screw terminals. Permissible conductor cross-sections: • 16 mm ² • AWG: 6 Tightening torque: 3 Nm
	L2	Phase L2 line system	
	L3	Phase L3 line system	

X3: Connector for the DC link coupling

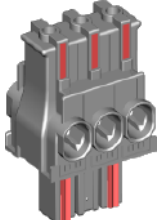	Pin	Pin assignment	Explanation
	DCP	DC link, positive	The terminals are Torx screw terminals. Permissible conductor cross-sections: • 16 mm ² • AWG: 6 Tightening torque: 3 Nm
	--	not assigned	
	DCN	DC link, negative	

End cap for AC coupling and DC link coupling



15.1.4 PROFINET patch cable

Use the following patch cable to network converters located adjacent one another via PROFINET:

Cable type	Length	Article number
Industrial Ethernet TP cord, CAT 6A, TP cable 4 x 2 insulated conductors, prefabricated with 2 RJ45 connectors	0.3 m	6XV1870-3QE30
	0.5 m	6XV1870-3QE50

15.1.5 External line filters

Line filters limit the electromagnetic interference emissions from converters to permissible limit values according to IEC 61800-3 or the requirements of Class A laid down in EN 55011.

The SINAMICS S210 line filters are passive components used to expand the EMC properties of the S210 system. With them, EMC categories C2 or C3 with longer cable lengths are possible (see Chapter "Electromagnetic compatibility according to IEC 61800-3 (Page 550)").

The following line filter is used depending on the converter:

- Converter with 1 AC line connection: 1 AC line filter
- Converter with 3 AC line connection: 3 AC line filter



Figure 15-2 3 AC line filter and converter

In a 3 AC drive line-up, the associated line filter must always be mounted to the left of the converters.

The sum of the rated currents of the converters connected to a common AC coupling must not exceed the rated line filter current.

15.1.5.1 Safety instructions

NOTICE
Destruction or damage of components by incorrectly connecting the line filter
When incorrectly connecting the line filter, components can be destroyed or damaged.
<ul style="list-style-type: none">• Connect the line filter in accordance with the instructions in the technical documentation.• Do not connect any additional loads downstream of the line filter.

NOTICE
Line filter damage due to interchanged connections
The line filter might be damaged if the input and output connections are interchanged.
<ul style="list-style-type: none">• Connect the incoming line supply cable to "Line" or X5.• Connect the outgoing cable to "Load" or X6.

NOTICE
Damage to the system caused by a line filter that is not permissible
A line filter that is not permissible can damage the system.
<ul style="list-style-type: none">• Only use the line filter with the components that are compatible with it.

NOTICE
Damage caused by using third party filters
According to product standard IEC 61800-3, radio interference suppression commensurate with the relevant rated conditions must be provided and is a legal requirement in the EU (EMC Directive). Line filters and line reactors are required in order to comply with this standard. The use of filters of other filter types can lead to limit value violations, resonance effects, overvoltages, and irreparable damage to motors and other equipment.
<ul style="list-style-type: none">• The machine manufacturer must provide verification that the machine equipped with the drive products and the installed suppression elements, e.g. line filters, is EMC-compliant before the machines are placed in the market.

NOTICE
Destruction of the line filter when used with an unsuitable protective element
Use of an incorrectly dimensioned protective element can result in thermal overload or destruction of the line filter.
<ul style="list-style-type: none">• Use the protective elements provided, (see Product Information "Protective devices for SINAMICS S210 (https://support.industry.siemens.com/cs/ww/en/view/109815356)").

Note

Disconnect the line filter for a high-voltage test

If a high-voltage test is conducted with alternating voltage in the system, the existing line filters must be disconnected in order to obtain accurate measurements.

Safety instructions for 1 AC line filter



⚠ WARNING

Electric shock caused by PEN conductor overload

In TN-C supply networks, the protective function of the PEN conductor can be adversely affected by exposure to harmonic currents.

- Consider the harmonic currents when dimensioning the PEN conductor.

⚠ WARNING

Fire caused by neutral conductor (N) overload

The neutral conductor can heat up due to the load from harmonic currents and cause a fire.

- Consider the harmonic currents when dimensioning the neutral conductor.

Safety instructions for 3 AC line filter

NOTICE

Line filter damage by connecting to impermissible line supply

The line filters are only suitable for direct connection to line supplies with grounded neutral point. Connecting the line filter to another line supply will damage the line filter.

- Only connect the line filter to a line supply with grounded neutral point.

15.1.5.2 Interfaces

Line filter for converters with 1 AC line connection



Figure 15-3 Interfaces of the line filter for converters with 1 AC line connection

Terminals for line filters for converters with 1 AC line connection:

- Line: Line connection
- Load: Load connection

Line filter for converters with 3 AC line connection


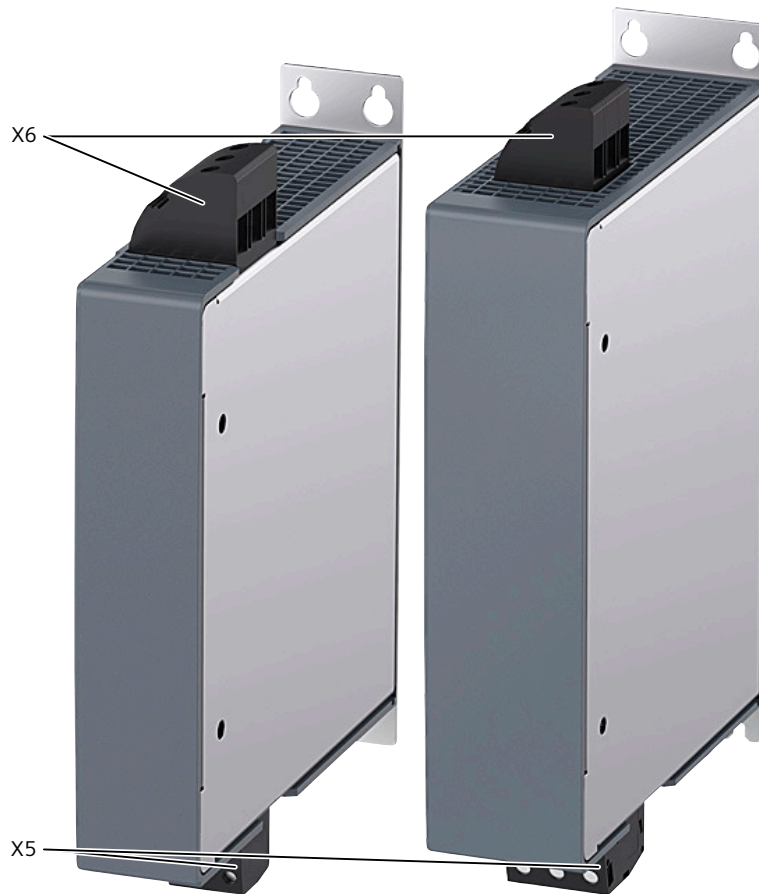


Figure 15-4 Interfaces of the line filter for converters with 3 AC line connection, 35 A and 65 A

Terminals for line filters for converters with 3 AC line connection:

- X5: Line connection
- X6: Load connection

Date of manufacture

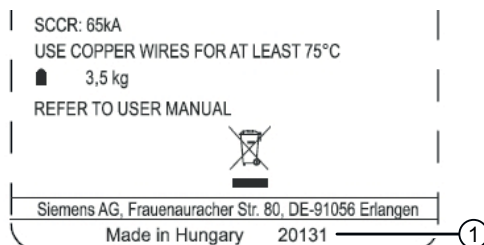

The date of manufacturer of the filter ① is stated on the nameplate in the following form:

- CY: Calendar year (two digit)
- CW: Calendar week (01 ... 53)
- D: Day (Mon ... Sun)

In the example provided here, "20131" means: 2020, KW 13, Monday = March 23, 2020

15.1.5.3 Dimension drawings

Line filter for converters with 1 AC line connection


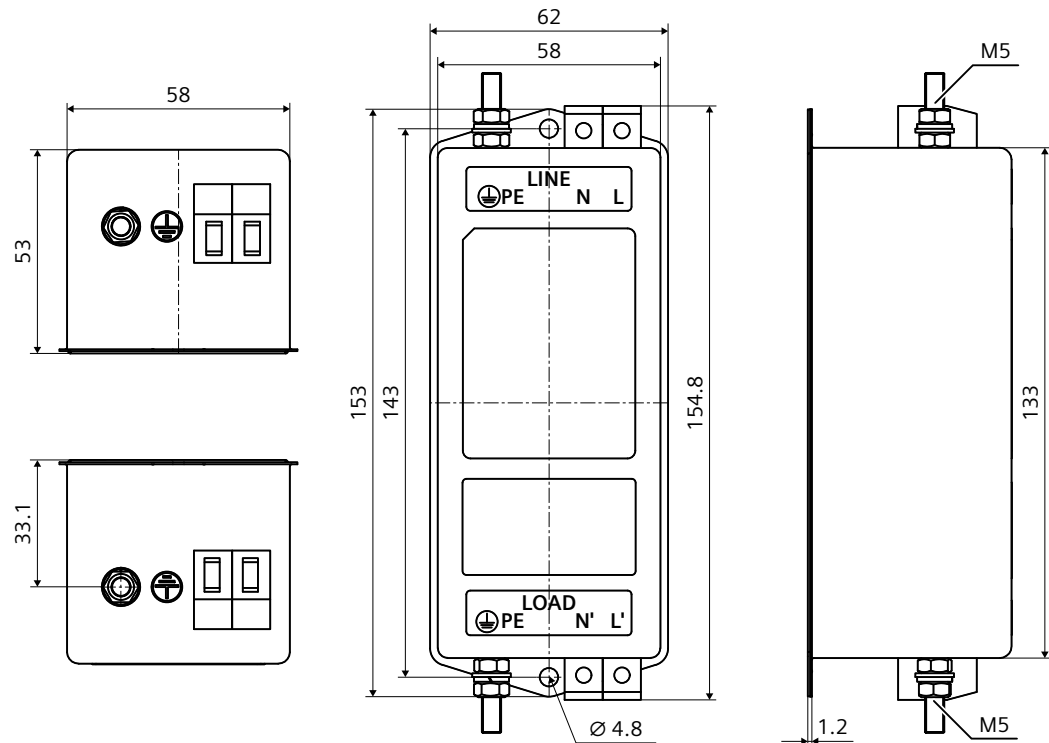


Figure 15-5 Dimension drawing for the line filter for converters with 1 AC line connection


- Tightening torque for fixing screws (M4): 1.2 ... 1.8 Nm
- Tightening torque for the protective conductor fixing bolt (M5): 2.0 ... 2.2 Nm
- Tightening torque of the line-side and load-side screw connection: 0.7 ... 0.8 Nm

Line filter for converters with 3 AC line connection

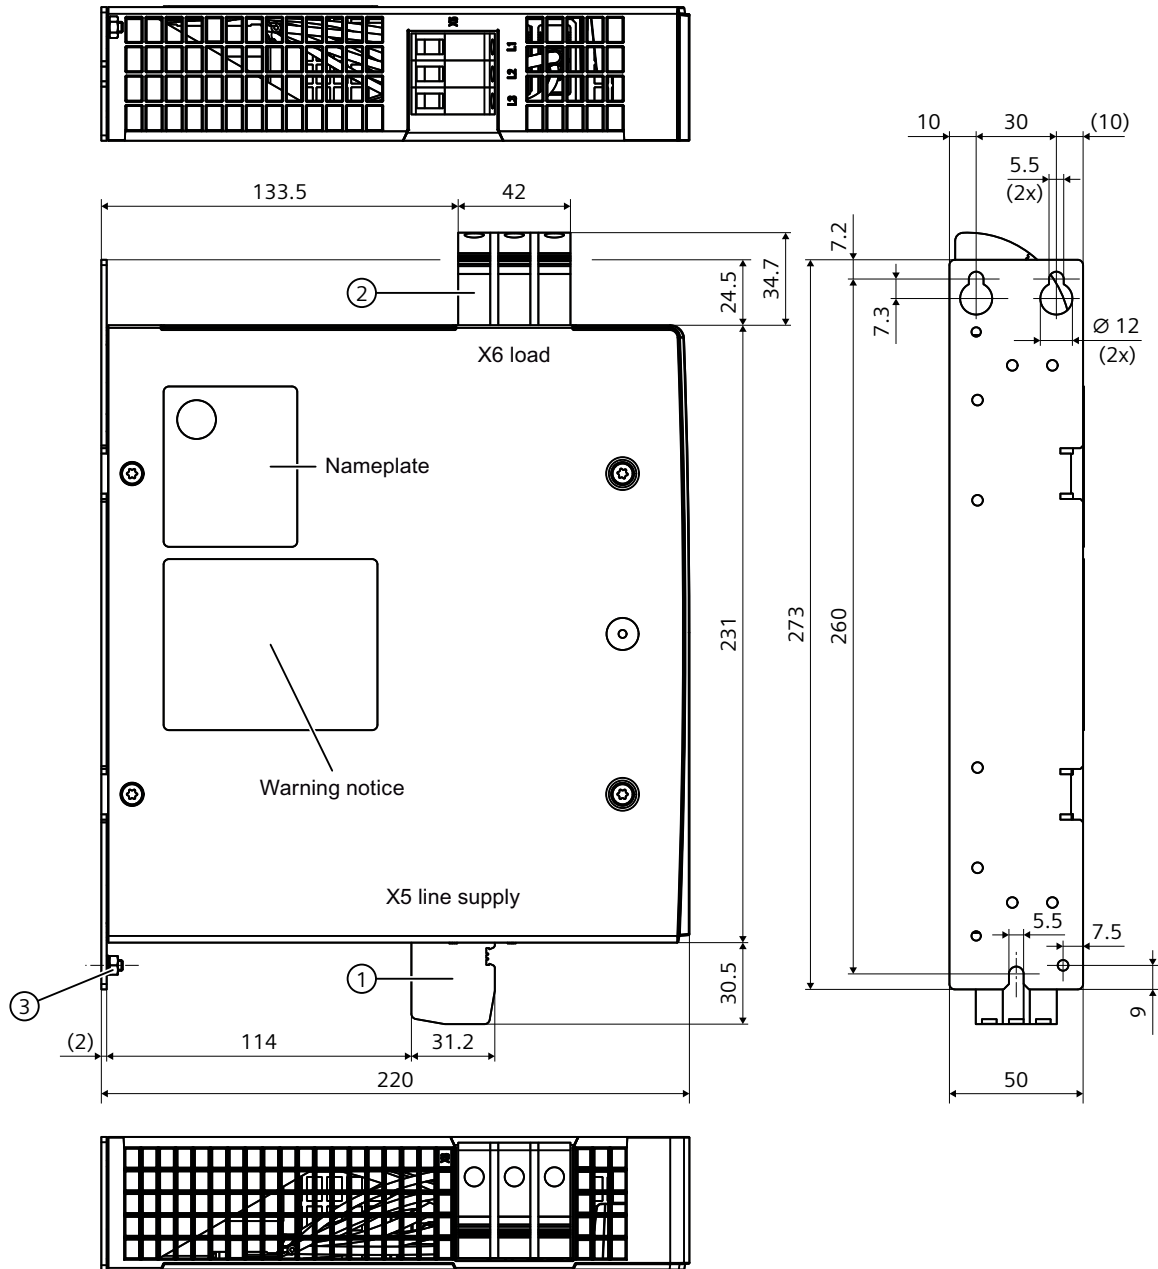

- ① Connecting terminal 10 mm², tightening torque 1.5 ... 1.8 Nm
- ② Connecting terminal 16 mm², tightening torque 2.5 ... 3 Nm
- ③ Protective conductor M4x6, tightening torque 1.8 Nm

Figure 15-6 Dimension drawing for the line filter for converters with 3 AC line connection, 35 A

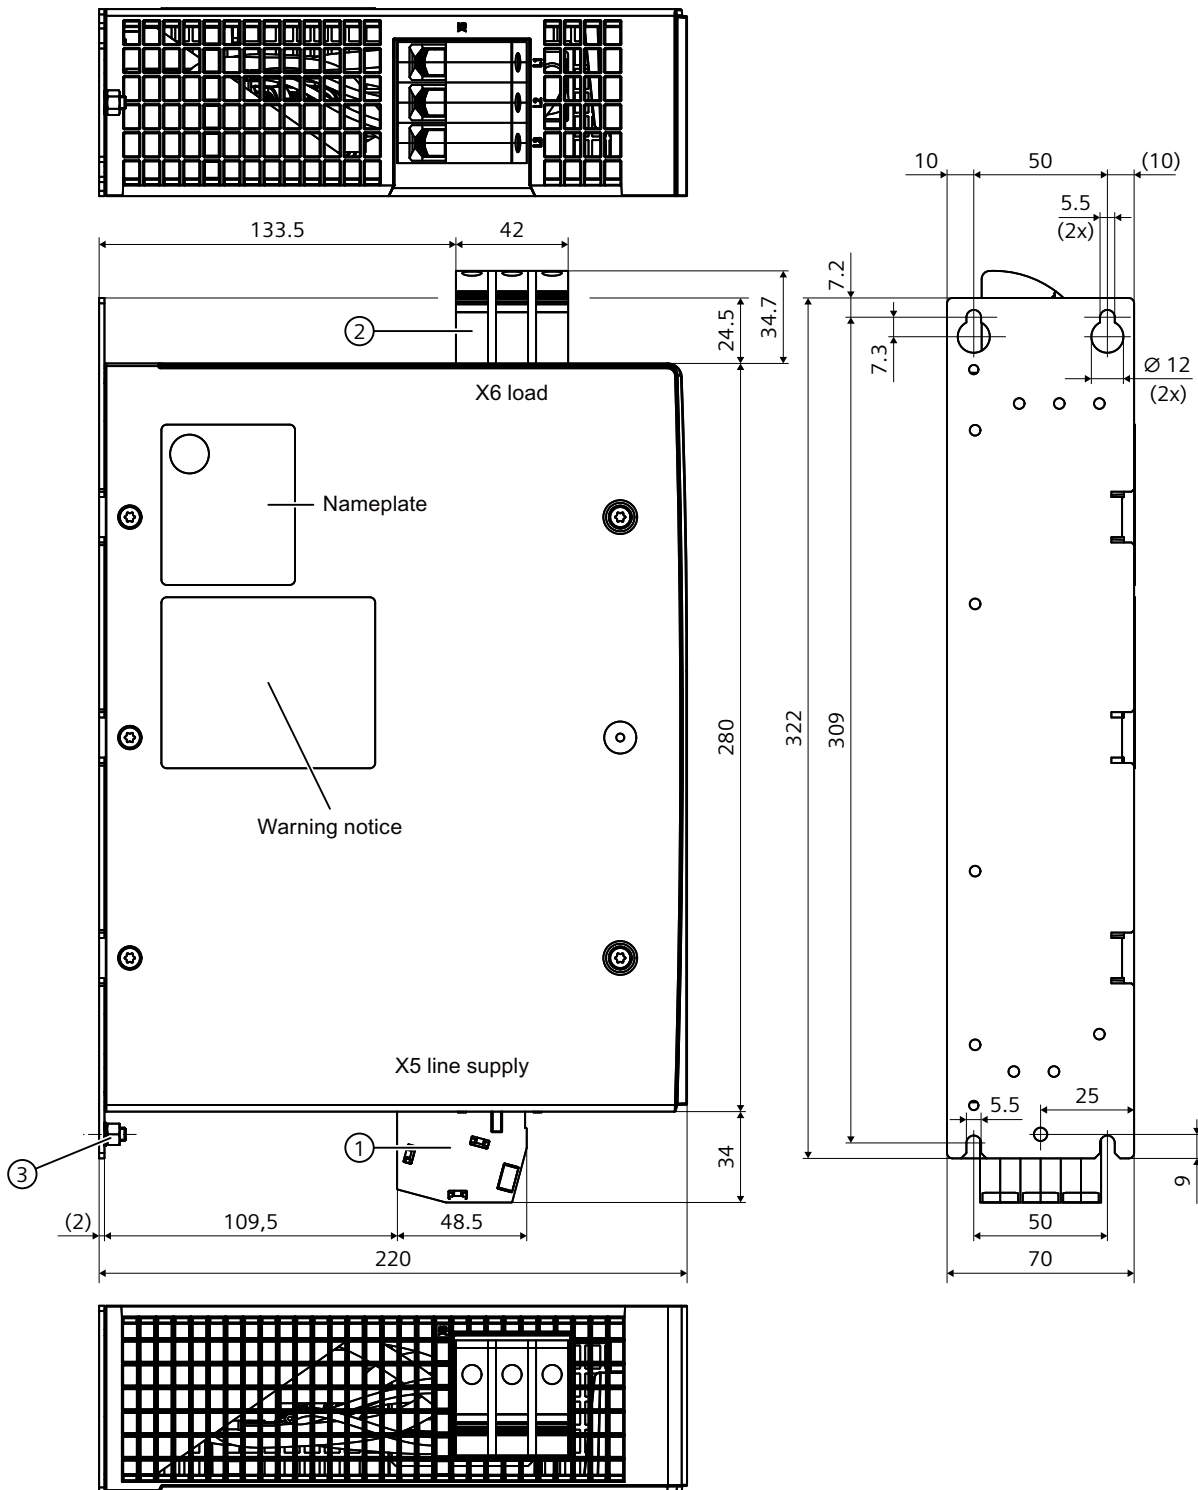

- ① Connecting terminal 25 mm², tightening torque 4 ... 4.5 Nm
- ② Connecting terminal 16 mm², tightening torque 2.5 ... 3 Nm
- ③ Protective conductor M5x8, tightening torque 3 Nm

Figure 15-7 Dimension drawing for the line filter for converters with 3 AC line connection, 65 A

15.1.5.4 Mounting

Note

When you mount external line filters, consider the specifications for routing cables in the electrical cabinet according to the EMC Directive.

Line filter for converters with 1 AC line connection

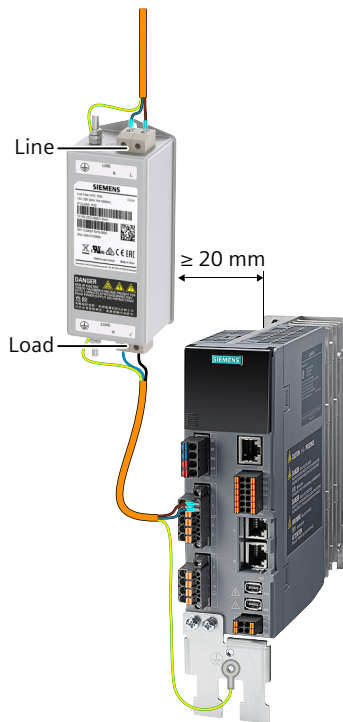


Figure 15-8 Mounting the line filter for converters with 1 AC line connection

Note

When installing a line filter, maintain a minimum lateral clearance of 20 mm (0.79 inches) from the converter.


Line filter for converters with 3 AC line connection

There are basically 2 ways of mounting and connecting 3 AC line filters:

Variante 1: The converter group is mounted and wired

The converter group is already mounted and the AC coupling is wired and prepared for the line filter, i.e. insulation stripped and end sleeves attached.

The line filter then only has to be "threaded on" from the left and screwed tight. This simpler variant requires sufficient mounting space to the left of the converters.

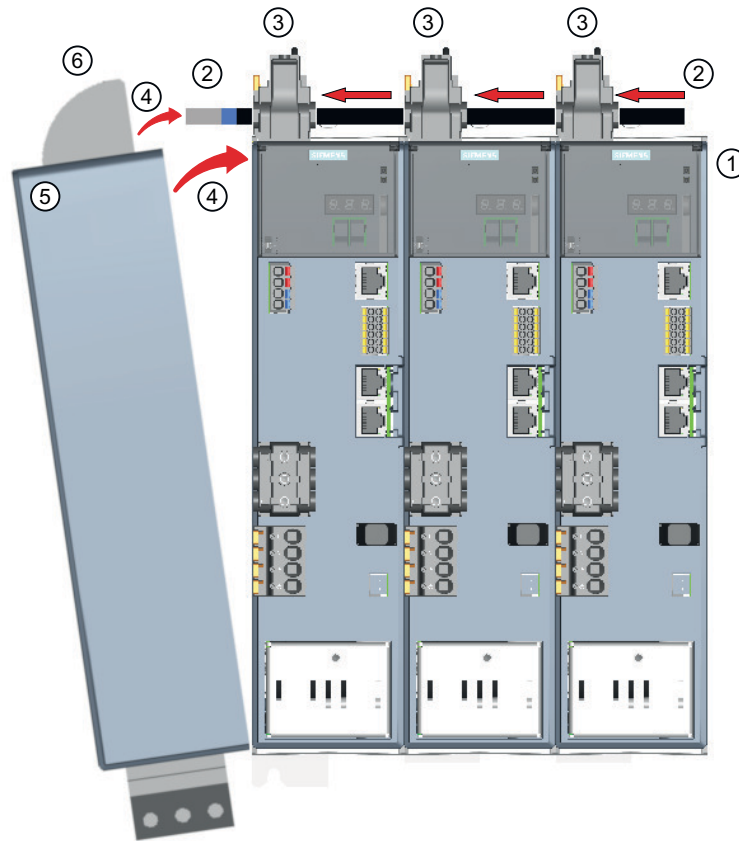


- ① Screw the converters tight in the cabinet.
- ② Push the cable for the AC coupling through the AC connector and provide it with end sleeves (with or without protective collar).
- ③ Screw the cable into the AC connectors.
- ④ Swing the line filter with load connection X6 from the side over the cable/end sleeves.
- ⑤ Screw the line filter tight in the cabinet.
- ⑥ Screw the cable into load connection X6 of the line filter.

Figure 15-9 Mounting the line filter for converters with 3 AC line connection - variant 1

Variant 2: The converter group and 3 AC line filter are mounted, but not wired

For wiring, each conductor must be individually pulled through the connector for the AC coupling up to load connection X6 of the line filter and screwed into the control cabinet.

You can only insert end sleeves without a protective collar, as otherwise the conductor no longer fits through the connector for the AC coupling.

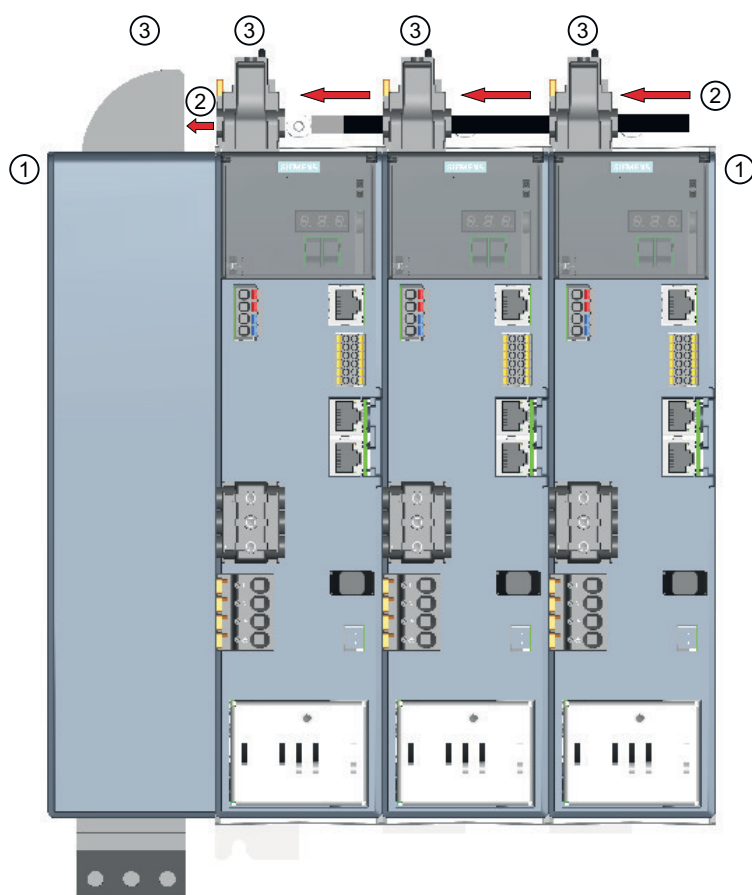

- ① Screw the devices tight on the cabinet wall or on the mounting plate.
- ② Attach end sleeves without protective collars to the cables for the AC coupling, and push them through the AC connectors into load connection X6 of the line filter.
- ③ Screw the cables into the AC connectors and into load connection X6 of the line filter.

Figure 15-10 Mounting the line filter for converters with 3 AC line connection - variant 2

15.1.5.5 Technical data

Line filter for converters with 1 AC line connection

Table 15-1 Technical data

Article number		6SL3203-0BB21-8VA1
Line voltage		200 ... 240 V 1 AC
Rated current	A	18
Power loss	W	< 1.2
Type of connection		Screw terminals
Conductor cross-section - for single-conductor connection - for flexible cables	mm ² mm ²	0.25 ... 6 (AWG 24 ... 10) 0.25 ... 4 (AWG 24 ... 12)
Insulation stripping length	mm	8 ... 9
Protective conductor connection		M5 studs
Degree of protection		IP20
Dimensions (W x H x D)	mm	62 x 155 x 53
Weight	kg	0.7

Line filter for converters with 3 AC line connection

Table 15-2 Technical data

Article number		6SL3203-0BE23-5HA0	6SL3203-0BE26-5HA0
Line voltage		200 ... 480 V 3 AC	
Rated current	A	35	65
Power loss	W	12	18
Type of connection		Screw terminals	
Conductor cross-section - Line-side connection - Load-side connection	mm ² mm ²	0.5 ... 10 (AWG 24 ... 6) 16 (AWG 6)	4 ... 25 (AWG 10 ... 3) 16 (AWG 6)
Stripped length - Line side - Load side	mm mm	10 16	18 16
Protective conductor connection		M4 studs	M5 studs
Degree of protection		IP20	
Dimensions (W x H x D)	mm	50 x 296 x 220	70 x 349 x 220
Weight	kg	2.3	3.5

15.1.6 External braking resistors for 1/3 AC 200 ... 240 V

The following Michael Koch GmbH braking resistors can be purchased directly through Siemens with the article numbers below.

The correct product (with 1/3 AC 200 ... 240 V) can be found in the table "Examples of suitable braking resistors from a third-party supplier (Page 89)".

- GXK:BWG250047TS-190: 100 W, 47 Ohm
 - GXK:BWG600014TS-190: 240 W, 14 Ohm
- For UL, the resistor has only a 240 W braking power. According to CE, 400 W braking power is also possible.

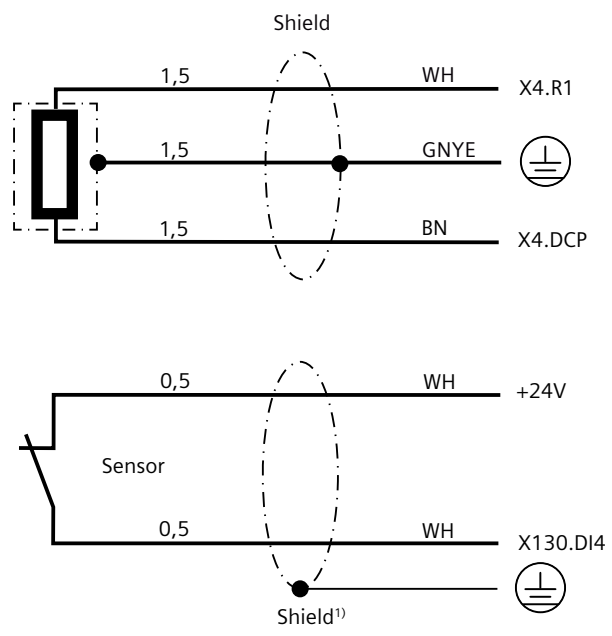


Figure 15-11 External braking resistor (example)

The resistors have approvals for the North American market (cURus and CSA).

The temperature sensor of the resistor can be connected at digital input DI4 on the converter for temperature monitoring. This switches the converter off when the braking resistor is overloaded.


We recommend that sensor cables are also shielded.




¹) Not included in the scope of delivery of the braking resistor
 Figure 15-12 Braking resistor connection

15.1.7 Cabinet bushing via mounting flange

Mounting accessories for connection system

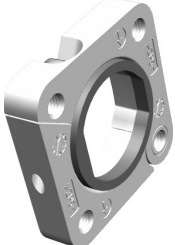Accessories	Diagram	For connector size	For motor	Article number
Mounting flange as cabinet bushing (with installation instructions) Packing unit: 1 item		M12	1F□2□02 1F□2□03	6FX2003-7JX00
		M17	1F□2□04 1F□2□05	6FX2003-7HX00
		M23	1F□2□06 1F□2□08 1F□2□10	6FX2003-7BX00

The mounting flange is installed on the external wall of the control cabinet. It ensures the degree of protection of the control cabinet.

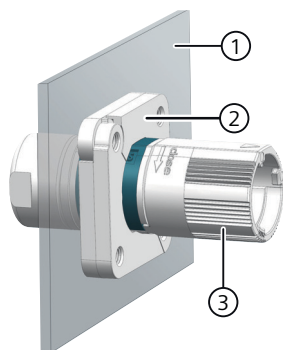

- ① Wall of the control cabinet
- ② Mounting flange
- ③ Connectors

Install the mounting flange as specified in the enclosed installation instructions.

15.1.8 Degree of protection kit IP65 for the motor

Shaft sealing ring - IP65 degree of protection kit for the motor


The shaft sealing ring can be used as spare part or for retrofitting.

Note

You can order a motor with shaft sealing ring (degree of protection IP65) directly.

More information about ordering degree of protection IP65 can be found in Chapter "Ordering data of the motor (Page 619)".

The motor satisfies degree of protection IP65 when the shaft sealing ring is installed.

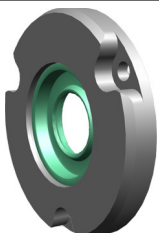Motor article number	Figure of the shaft sealing ring	Article number of the degree of protection kit
1F□2□02		1FY2902-0GC00
1F□2□03		1FY2903-0GC00
1F□2□04		1FY2904-0GC00


15.1.9 Extensions for connecting cables between the motor and the converter

OCC MOTION-CONNECT cables can only be ordered as prefabricated cables.

Note

A maximum of three separating points are allowed without reducing the total permitted length.

OCC MOTION-CONNECT cable with SPEED-CONNECT connector

	Designation and use	For connection to motor	Connector size	Article number ¹⁾
	Extension for motor connection cable OCC MC 500 for predominantly fixed installation	1F□2□02	M12	6FX5002-8QE04-□□□□
		1F□2□03		
		1F□2□03	M17	6FX5002-8QE08-□□□□
		1F□2□04		
		1F□2□05		
		1F□2□06	M23	1.5 mm ² : 6FX5002-8QE11-□□□□
	Extension for motor connection cable OCC MC 800PLUS for use in cable carriers	1F□2□02	M12	6FX8002-8QE04-□□□□ ²⁾
		1F□2□03		6FX8002-8QE05-□□□□ ³⁾
		1F□2□03	M17	6FX8002-8QE08-□□□□
		1F□2□04		
		1F□2□05		
		1F□2□06	M23	1.5 mm ² : 6FX8002-8QE11-□□□□
			2.5 mm ² : 6FX8002-8QE21-□□□□	

- 1) The last 4 digits (□□□□) define the cable length corresponding to the length code
- 2) For IEC applications
- 3) For UL applications

Determining the article number of a prefabricated OCC MOTION-CONNECT cable


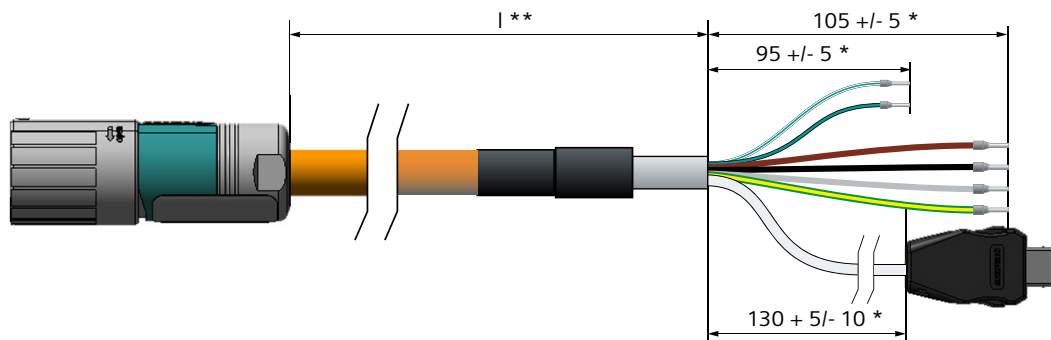


Figure 15-13 Lengths of an OCC MOTION-CONNECT cable

Procedure

1. Determine the required cable length l^{**} . Consider having cable in reserve for strain-free routing.
2. Determine the length code for the required length l^{**} corresponding to the following overview. The stretched lengths (*) are added automatically for the prefabricated cables.

3. Also select the cable type, the desired cable version, and the required connectors for the article number.

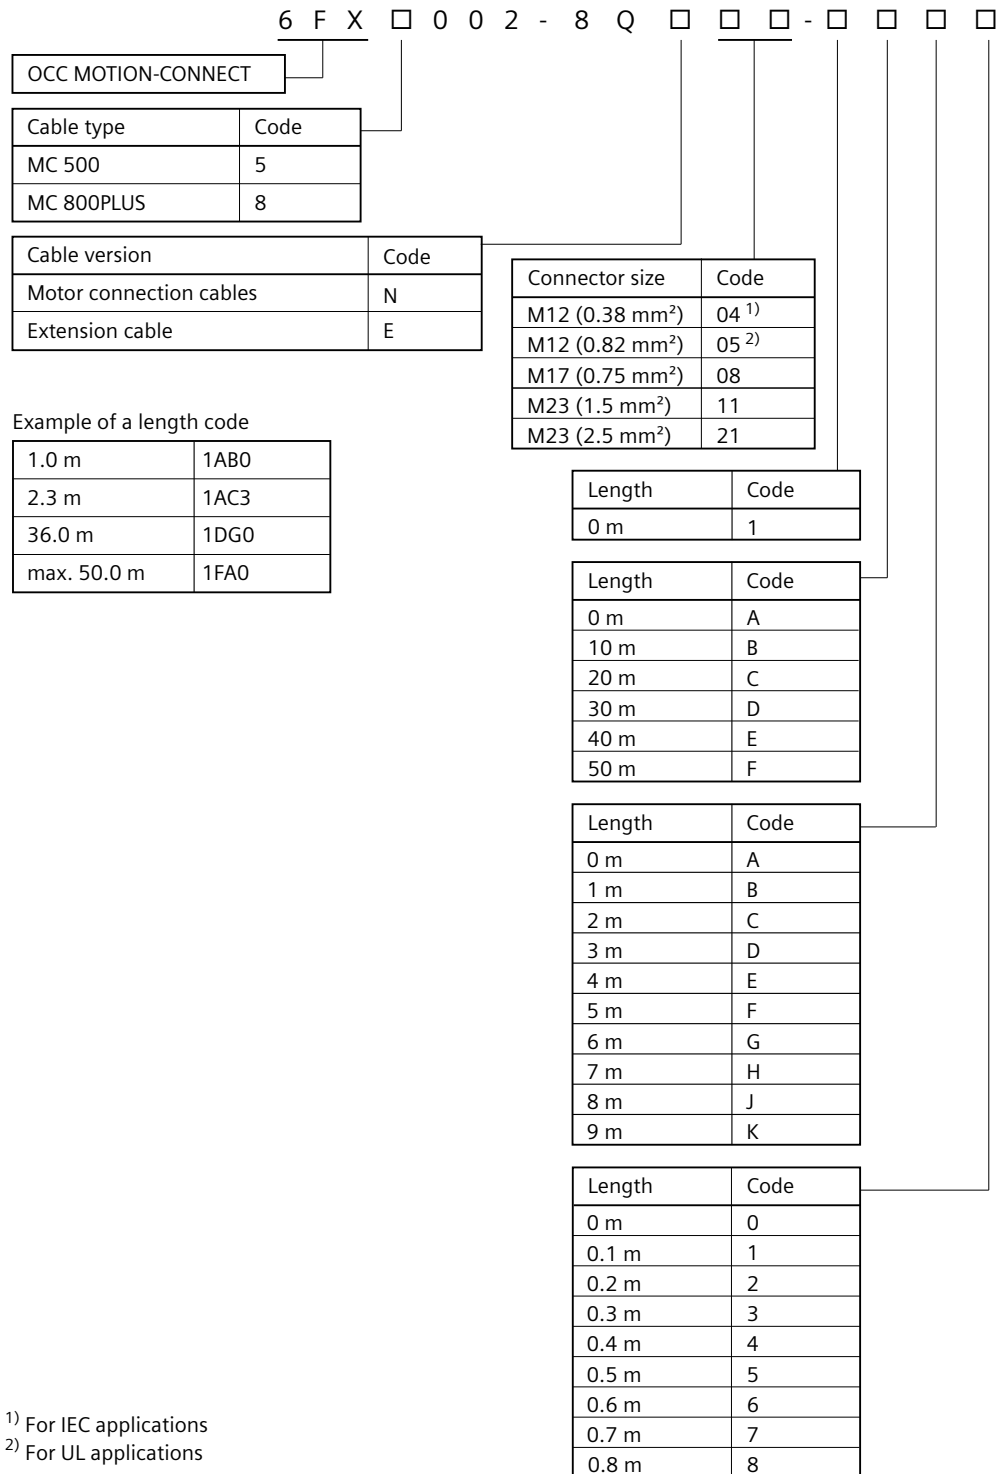

¹⁾ For IEC applications

²⁾ For UL applications

Figure 15-14 Structure of the article number with length code for an OCC MOTION-CONNECT cable

4. Order the required cable with the article number thus determined.

15.2 Spare parts

Spare parts for the converter

The following components are available as spare parts for the converter:


- Connector set for converters with 1 AC line connection 6SL3260-2DB00-0AA0
- Connector set for converters with 3 AC line connection 6SL3260-2DB10-0AA0
- Siemens IX connector for the encoder connection 6FX2003-0DE01
for converters with 1 AC / 3 AC line connection
- Fan for converters with 3 AC line connection, FSA 6SL3260-0AA00-0AA0
- Fan for converters with 3 AC line connection, FSB 6SL3260-0AB00-0AA0
- Fan for converters with 3 AC line connection, FSC 6SL3260-0AC00-0AA0

15.2.1 Connector set for converters with 1 AC line connection - 6SL3260-2DB00-0AA0

Under this article number, you will receive a spare parts package for the frame sizes FSA, FSB and FSC with the following content:

- Connectors
 - X1: Connector for the line connection and the external braking resistor (jumper for using the internal braking resistor is provided)
 - X2: Connector for the motor connection
 - X107: Connector for the motor holding brake
 - X124: Connector for the external 24 V DC power supply
 - X130: Connector for the digital inputs
- Shield plate for FSA, FSB and FSC

X1: Connector for the line connection and the external braking resistor


	Pin	Pin assignment	Explanation
	L1	Phase L1 line system	
	N	Neutral conductor	
	DCP	Braking resistor, external Braking resistor, internal	<ul style="list-style-type: none"> • If you are using the internal braking resistor, DCP and R2 must be jumpered. • If you are using an external braking resistor, then do not insert the jumper between DCP and R2. Connect the external braking resistor via the DCP and R1 terminals.
	R2	Internal braking resistor	
	R1	External braking resistor	
Weidmüller: BLF 5.08HC/05/180F SN BK BX, article number 1012670000 As daisy chain: BLDF 5.08/05/180F SN BK BX, article number 1000970000			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 26 ... 12
- Insulation stripping length: 10 mm

X2: Connector for the motor connection


	Pin	Pin assignment	Color coding for Siemens OCC cables
	U	Motor phase U	Brown
	V	Motor phase V	Black
	W	Motor phase W	Gray
	PE	Protective ground	Green-yellow
Weidmüller: BLF 5.08HC/04/180F SN BK BX, article number 1012660000			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 26 ... 12
- Insulation stripping length: 10 mm

X107: Connector for the motor holding brake (PTC has no function, for use in the future)

	Pin	Pin assignment	Pin assignment	Pin
	BR+	B+: Voltage for motor holding brake, 24 V (black-turquoise)	Reserved, do not use	PTC+
	BR-	B-: Voltage for motor holding brake, 0 V (white-turquoise)	Reserved, do not use	PTC-
Phoenix DFMC 1.5/ 2-ST-3.81 BK, Article number 1864707				


The terminals are spring-loaded terminals.

Permissible conductor cross-sections:

- For single-core cables or for flexible cable with end sleeves without protective collars or long end sleeves with protective collars:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

Also connect the insulated conductors for the motor holding brake to the connector at X107, even when you are using a motor without holding brake.

X124: Connector for the external 24 V DC control voltage


	Pin	Pin assignment	Explanation
	0V	0 V	Power supply for the converter electronics Maximum current for looping through via the internal jumper (blue-blue, red-red): 24 A
	0V	0 V	
	24 V	+24 V	
	24 V	+24 V	
Dinkle article number 2ESS-6621-04P			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 24 ... 12
- Insulation stripping length: 10 mm

X130: Connector for the digital inputs

	Pin	Pin assignment	Pin assignment	Pin
	+	+24 V output	Failsafe digital input	DI2+
	DI0	High-speed DI, measuring probe		DI2-
	M	Ground		DI3+
	+	+24 V output		DI3-
	DI1	High-speed DI, measuring probe	+24 V output	VS+
	M	Ground	Digital input	DI4
Phoenix DFMC 1.5/ 6-ST-3.5, Article No. 1790140				

The terminals are spring-loaded terminals.

The three terminals marked with "+" and "VS+" are provided as power supply for external sensors. They are short-circuit-proof and provide a max. of 50 mA per sensor. A sensor short-circuit interrupts the power supply for all three sensors.

For more information about the digital inputs, see Chapter "Connecting digital inputs and the external 24 V supply (Page 186)".

Permissible conductor cross-sections:

- For single-conductor connection:
 - 0.2 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm


15.2.2 Connector set for converters with 3 AC line connection - 6SL3260-2DB10-0AA0

Under this article number, you will receive a spare parts package for the frame sizes FSA, FSB and FSC with the following content:

- Connectors
 - X1: Standard connector for the line connection
 - X2: Connector for the motor connection
 - X4: Connector for the external braking resistor (jumper for using the internal braking resistor is provided)
 - X107: Connector for the motor holding brake
 - X124: Connector for the external 24 V DC power supply
 - X130: Connector for the digital inputs
- Shield plate with two fixing screws M4 x 10 for FSA

X1: Connector for the line connection

Standard connector

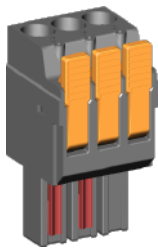
	Pin	Pin assignment	Explanation
	L1	Phase L1 line system	
	L2	Phase L2 line system	
	L3	Phase L3 line system	
Phoenix, article number 1060224			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 8
- Insulation stripping length: 18 mm

X2: Connector for the motor connection


	Pin	Pin assignment	Color coding for Siemens OCC cables
	U	Motor phase U	Brown
	V	Motor phase V	Black
	W	Motor phase W	Gray
	PE	Protective ground	Green-yellow
Phoenix, article number 1060242			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 8
- Insulation stripping length: 18 mm

X4: Connector for the external braking resistor

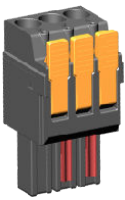
	Pin	Pin assignment	Explanation
	DCP	External braking resistor Internal braking resistor	<ul style="list-style-type: none"> • If you are using the internal braking resistor, DCP and R2 must be jumpered. • If you are using an external braking resistor, then do not insert the jumper between DCP and R2. Connect the external braking resistor via the DCP and R1 terminals.
	R1	Internal braking resistor	
R2	External braking resistor		
Phoenix, article number 1060241			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.75 mm² ... 6 mm²
- AWG: 18 ... 8
- Insulation stripping length: 18 mm

X107: Connector for the motor holding brake (PTC has no function, for use in the future)

	Pin	Pin assignment	Pin assignment	Pin
	BR+	B+: Voltage for motor holding brake, 24 V (black-turquoise)	Reserved, do not use	PTC+
	BR-	B-: Voltage for motor holding brake, 0 V (white-turquoise)	Reserved, do not use	PTC-
Phoenix DFMC 1.5/ 2-ST-3.81 BK, Article number 1864707				


The terminals are spring-loaded terminals.

Permissible conductor cross-sections:

- For single-core cables or for flexible cable with end sleeves without protective collars or long end sleeves with protective collars:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

Also connect the insulated conductors for the motor holding brake to the connector at X107, even when you are using a motor without holding brake.

X124: Connector for the external 24 V DC control voltage


	Pin	Pin assignment	Explanation
	24 V	+24 V	Power supply for the converter electronics Maximum current for looping through via the internal jumper (blue-blue, red-red): 24 A
	24 V	+24 V	
	0V	0 V	
	0V	0 V	
Dinkle article number 2ESS-6621-04P			

The terminals are spring-loaded terminals.

Permissible conductor cross-sections for single-conductor connection or for connecting flexible cables with or without end sleeves:

- 0.2 mm² ... 2.5 mm²
- AWG: 24 ... 12
- Insulation stripping length: 10 mm

X130: Connector for the digital inputs

	Pin	Pin assignment	Pin assignment	Pin
	+	+24 V output	Failsafe digital input	DI2+
	DI0	High-speed DI, measuring probe		DI2-
	M	Ground		DI3+
	+	+24 V output		DI3-
	DI1	High-speed DI, measuring probe	+24 V output	VS+
	M	Ground	Digital input	DI4
Phoenix DFMC 1.5/ 6-ST-3.5, Article No. 1790140				

The terminals are spring-loaded terminals.

The three terminals marked with "+" and "VS+" are provided as power supply for external sensors. They are short-circuit-proof and provide a max. of 50 mA per sensor. A sensor short-circuit interrupts the power supply for all three sensors.

For more information about the digital inputs, see Chapter "Connecting digital inputs and the external 24 V supply (Page 186)".


Permissible conductor cross-sections:

- For single-conductor connection:
 - 0.2 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves:
 - 0.25 mm² ... 1.5 mm²
 - AWG: 24 ... 16
- For flexible cables with end sleeves with protective collars:
 - 0.25 mm² ... 0.75 mm²
 - AWG: 24 ... 19
- Insulation stripping length: 10 mm

Ordering data

16.1 Ordering data of the motor

The article number comprises a combination of digits and letters. It is divided into three hyphenated blocks.

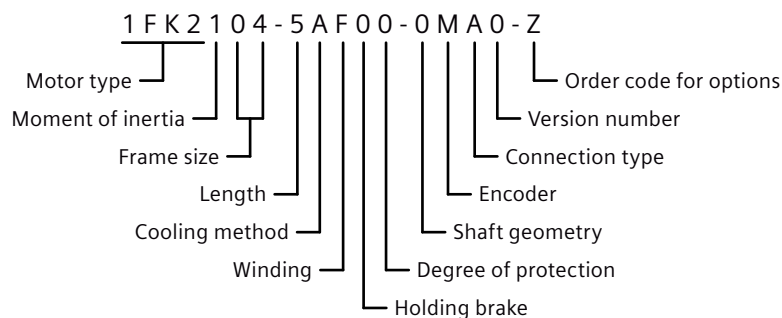

Note that not every theoretical combination is possible in practice.

Permissible combinations can be found in Chapter "Motor-converter combinations for 1FK2 (Page 50)", "Motor-converter combinations for 1FT2 (Page 53)", in the catalog "D 32 SINAMICS S210 and SIMOTICS S-1F□2" or SIEMENS Product Configurator (www.siemens.com/SPC).

Description of the structure of the article number

Description	Position of the article number																				
	1	2	3	4	5	6	7	-	8	9	10	11	12	-	13	14	15	16			
SIMOTICS S-1FK2 synchronous servomotors	1	F	□	2																	
Moment of inertia	High Dynamic				1																
	Compact				2																
	High Inertia				3																
Frame size	20				0	2															
	30				0	3															
	40				0	4															
	48 (Compact) 52 (High Dynamic)				0	5															
	63				0	6															
	80				0	8															
	100				1	0															
Total length	0 ... 8								0												
Cooling method	Natural cooling									A											
Winding, rated speed	max. 1 AC 240 V																				
	3000 r/min @ 230 V																			G	
	max. 3 AC 480 V																				
	1500 r/min @ 400 V				750 r/min @ 230 V															B	
	2000 r/min @ 400 V				1000 r/min @ 230 V																C
	3000 r/min @ 400 V				1500 r/min @ 230 V																F
	4500 r/min @ 400 V /				2500 r/min @ 230 V																H
6000 r/min @ 400 V				3000 r/min @ 230 V																K	
Holding brake	Without											0									
	With											1									
	Higher performance brake											2									
Degree of protection	IP64											0									
	IP65 with radial shaft sealing ring											1									
	IP67 with radial shaft sealing ring											2									
Shaft geometry	Plain shaft																0				
	Shaft with feather key																1				
	Plain shaft, alternative shaft geometry (11 mm x 23 mm), only SH 30				0	3							0							2	
	Plain shaft, alternative shaft geometry (14 mm x 30 mm), only SH 40				0	4							0							2	
Encoder	Absolute encoder single-turn, 22 bit (encoder AS22DQC)																S				
	Absolute encoder single-turn, 26 bit (encoder AS26DQC)																B				
	Absolute encoder multiturn, 22 bit + 12 bit (encoder AM22DQC)																M				
	Absolute encoder multiturn, 26 bit + 12 bit (encoder AM26DQC)																C				
Connection type	OCC (one cable connection) for S210															A					
Version number	Start																	0			

Description of order codes for options

Options for motor 1FT2		Order codes on the rating plate (-Z)
Motor with increased chemical resistance		N16
Pressure compensation connector		Q20
Metal rating plate		Q31
Paint finish	Unpainted	X00
	RAL 9005, jet black, matte	X01
	RAL 9001, cream white	X02
	RAL 6011, reseda green	X03
	RAL 7032, pebble gray	X04
	RAL 5015, sky blue	X05
	RAL 1015, light ivory	X06
	RAL 9006, white aluminum	X08
	Special paint finish corresponding to the environmental conditions for the standard paint finish and for condensation on the outer motor surfaces, primer and paint finish in RAL 7016, anthracite grey	K23
	Special paint finish as for K23, but standard color according to color table	K23 + X□□
K23 in combination with option N16: Primer and paint finish in RAL 7016, anthracite gray or optional Primer K23, paint finish with standard color according to color table	K23 + X□□	
Customer data on the rating plate		Y84

You can find more information in Chapter "Options (Page 397)".

For motors with planetary gearbox, the options are separately listed in the associated Operating Instructions as well as in the Configuration Manual.

16.2 Ordering data of the converter

16.2.1 Order data for converters with 1 AC line connection

Converters with 1 AC line connection		
Article number	Frame size	Rated power
6SL5310-1BB10-1CF0	FSA	100 W
6SL5310-1BB10-2CF0	FSA	200 W

16.3 Ordering data of the connection system

Converters with 1 AC line connection		
Article number	Frame size	Rated power
6SL5310-1BB10-4CF0	FSB	400 W
6SL5310-1BB10-8CF0	FSC	750 W

16.2.2 Order data for converters with 3 AC line connection



Converters with 3 AC line connection		
Article number	Frame size	Rated power
6SL5310-1BE10-4DF0	FSA	0.4 kW
6SL5310-1BE10-8DF0	FSA	0.75 kW
6SL5310-1BE11-0DF0	FSA	1 kW
6SL5310-1BE11-5DF0	FSB	1.5 kW
6SL5310-1BE12-0DF0	FSB	2 kW
6SL5310-1BE13-5DF0	FSC	3.5 kW
6SL5310-1BE15-0DF0	FSC	5 kW
6SL5310-1BE17-0DF0	FSC	7 kW

16.3 Ordering data of the connection system

16.3.1 Order data for OCC MOTION-CONNECT cables

You can only order OCC MOTION-CONNECT cables as prefabricated cables.

A maximum of 3 disconnection points are allowed without reducing the total permitted length.

OCC MOTION-CONNECT cable with SPEED-CONNECT connector				
	Designation and use	For connection to motor	Connector size	Article number ¹⁾
	Motor connection cable OCC MC 500 for predominantly fixed installation	1F□2□02	M12	6FX5002-8QN04-□□□□ ²⁾
		1F□2□03		
		1F□2□03	M17	6FX5002-8QN08-□□□□
		1F□2□04		
		1F□2□05		
		1F□2□06	M23	1.5 mm ² : 6FX5002-8QN11-□□□□ 2.5 mm ² : 6FX5002-8QN21-□□□□
	Motor connection cable OCC MC 800PLUS for use in cable carriers	1F□2□02	M12	0.38 mm ² : 6FX8002-8QN04-□□□□ ²⁾ 0.82 mm ² : 6FX8002-8QN05-□□□□ ³⁾
		1F□2□03		
		1F□2□03	M17	6FX8002-8QN08-□□□□
		1F□2□04		
1F□2□05				
1F□2□06		M23	1.5 mm ² : 6FX8002-8QN11-□□□□ 2.5 mm ² : 6FX8002-8QN21-□□□□	
	Extension for motor connection cable OCC MC 500 for predominantly fixed installation	1F□2□02	M12	6FX5002-8QE04-□□□□ ²⁾
		1F□2□03		
		1F□2□03	M17	6FX5002-8QE08-□□□□
		1F□2□04		
		1F□2□05		
		1F□2□06	M23	1.5 mm ² : 6FX5002-8QE11-□□□□ 2.5 mm ² : 6FX5002-8QE21-□□□□
	Extension for motor connection cable OCC MC 800PLUS for use in cable carriers	1F□2□02	M12	0.38 mm ² : 6FX8002-8QE04-□□□□ ²⁾ 0.82 mm ² : 6FX8002-8QE05-□□□□ ³⁾
		1F□2□03		
		1F□2□03	M17	6FX8002-8QE08-□□□□
		1F□2□04		
1F□2□05				
1F□2□06		M23	1.5 mm ² : 6FX8002-8QE11-□□□□ 2.5 mm ² : 6FX8002-8QE21-□□□□	

¹⁾ The last 4 digits (□□□□) define the cable length corresponding to the length code

²⁾ For IEC applications

³⁾ For UL applications

16.3.2 Determining the article number of a prefabricated OCC MOTION-CONNECT cable

Overview

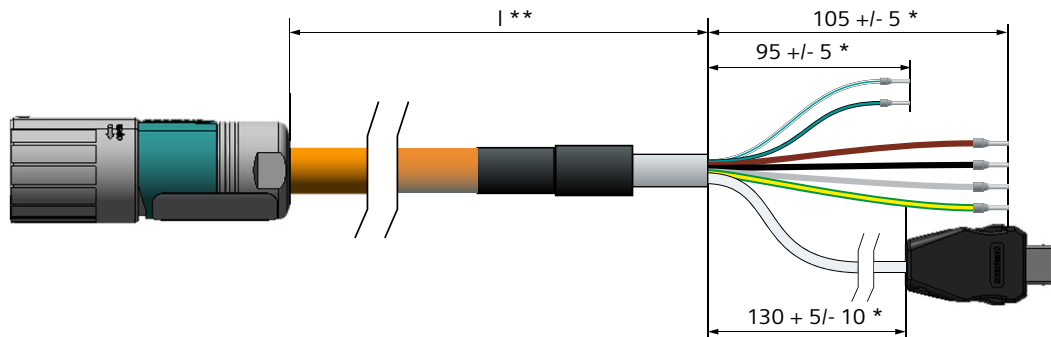


Figure 16-1 Lengths of an OCC MOTION-CONNECT cable

Procedure

1. Determine the required cable length L^{**} . Consider having cable in reserve for strain-free routing.
2. Determine the length code for the required length L^{**} corresponding to the following overview. The stretched lengths (*) are added automatically for the prefabricated cables.

3. Also select the cable type, the desired cable version, and the required connectors for the article number.

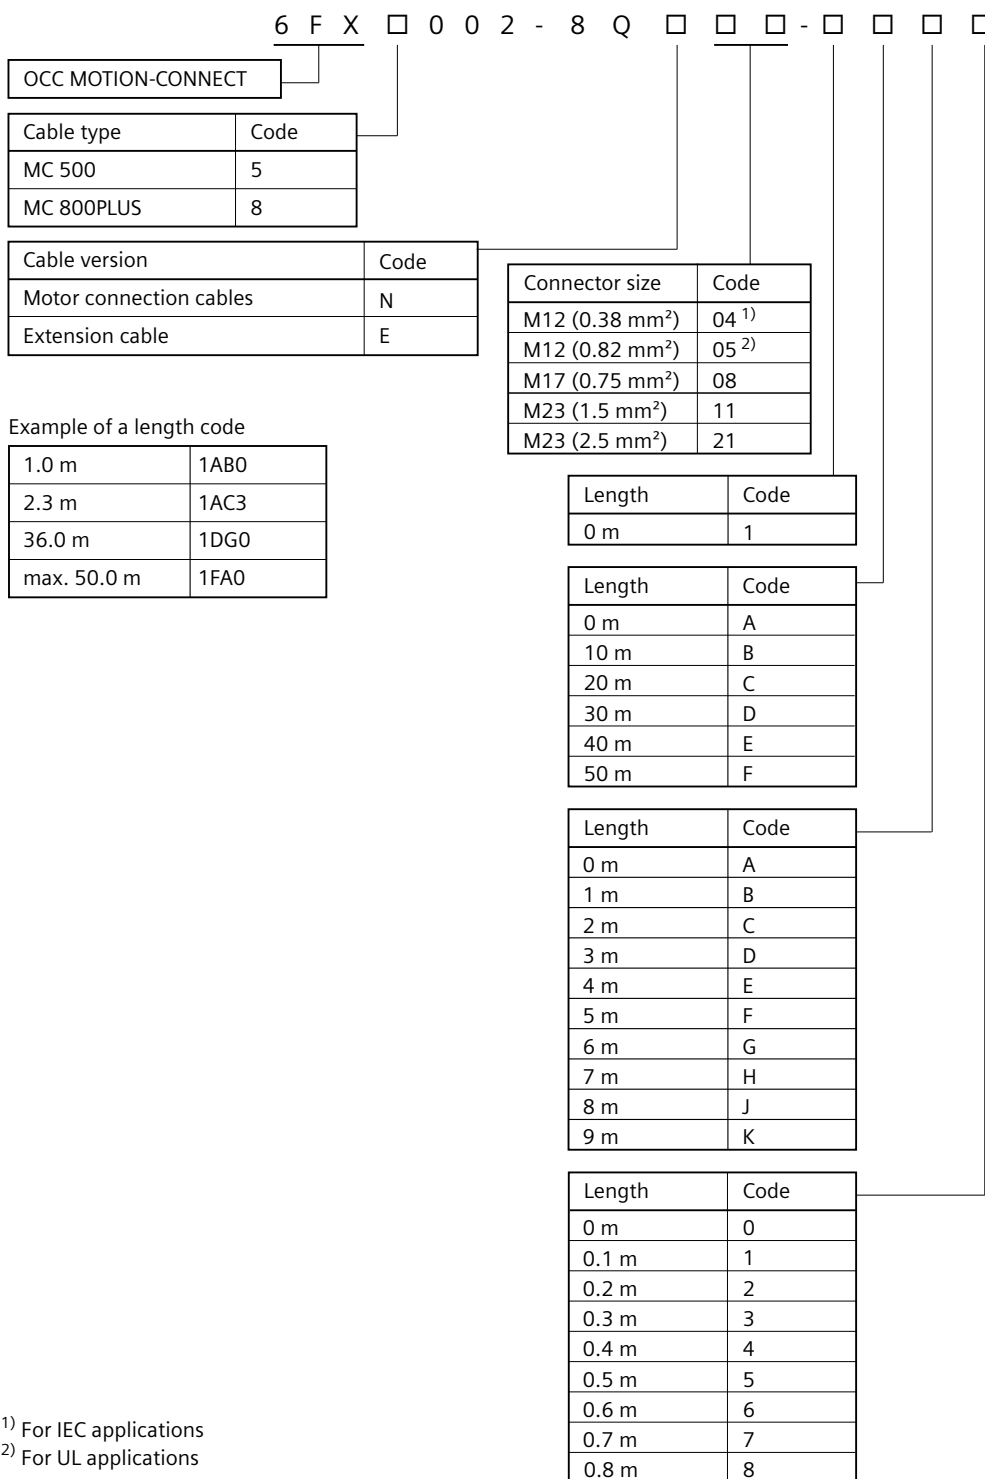


Figure 16-2 Structure of the article number with length code for an OCC MOTION-CONNECT cable

4. Order the required cable with the article number thus determined.

Parameters

17.1 Explanation of the list of parameters

Description

The parameters are displayed according to the following pattern.

rxxxx	Parameter name / short parameter name			
Variant	Data type: Integer16	Visible in: Standard display		
	Read rights:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Can be changed in operating state	Ready for operation		
	Parameter group:	Name of the group(s)		
	Unit: -			
	Min: -	Max: -	Factory setting: -	
Description:	Text			
Value:	0: Name of value 0 10: Name of value 10			
Recommendation:	Text			
Index:	[0] = Name and meaning of index 0 [1] = Name and meaning of index 1			
Bit array:	Bit	Signal name	1 signal	0 signal
	00	Name of bit 0	Yes	No
	01	Name of bit 1	Yes	No
Dependency:	Text			
	See also:	pxxx, rxxx		
	See also:	Fxxxx, Axxxx, Cxxxx		
Danger / Caution / Warning / Notice:	Safety-related note corresponding to the warning note concept			
Note:	Text			

17.1 Explanation of the list of parameters

The representation of a parameter includes as a maximum the information listed below. Depending on the specific parameter, some of the listed information is not applicable.

- **Parameter number (rxxxx)**

The parameter number is made up of a "p", "r" or "c", followed by several numbers and optionally an index and bit array.

The parameter number has the following syntax: pxxxx[0...n], rxxxx[0...n], cxxxx[0...n], pxxxx.0...15 or rxxxx.0...15, cxxxx.0...15, pxxxx[0...n].0...15 or rxxxx[0...n].0...15, cxxxx[0...n].0...15.

Examples of representation in the parameter list:

• p...	Setting parameters (read and write)
• r...	Display parameters (read-only)
• c...	Display parameters (read-only)
• p0972	Setting parameter 972
• p0489[0...2]	Setting parameter 489 index 0 to 2
• r0945	Display parameter 945
• r0196[0...255].4...15	Display parameter with index 0 to 255 and bit array, bit 4 to bit 15
• r5613.0...1	Display parameter 5613 with bit array from bit 0 to bit 1
• c8997[0...2]	Display parameter 8997 index 0 to 2
Other examples of the notation in the documentation:	
• p9563[1]	Setting parameter 9563, index 1
• r0196[1].5	Display parameter 196, index 1, bit 5
• r0964[2]	Display parameter 964, index 2
• p5611.1	Setting parameter 5611, bit 1

- **Parameter name / short parameter name**

Shows the parameter name in the long form and separated by a slash in the short form.

- **Variant**

Specifies the product variant for which the parameter is valid. This information is not applicable if a parameter is the same for all product variants used in the parameter list.

- **Data type**

Each parameter is assigned one of the following data types:

• Integer8	I8	8-bit integer
• Integer16	I16	16-bit integer
• Integer32	I32	32-bit integer
• Unsigned8	U8	8-bit without sign
• Unsigned16	U16	16-bit without sign
• Unsigned32	U32	32-bit without sign
• FloatingPoint32	Float	32-bit floating-point number

- **Visible in**
You change the number of parameters displayed in the commissioning tool via:
 - Standard display
Only the basic parameters are displayed.
 - Extended display
The full scope of parameters is displayed.
- **Rights**
The user and rights management (UMAC) controls access to the parameters. You require runtime function rights to read and set parameters. The following read rights are available:
 - Read drive data or acknowledge messagesThe following write permissions are available:
 - Control drive in manual mode
 - Perform drive diagnostics
 - Perform firmware update
 - Create backup or load drive data to Startdrive
 - Edit device settings or drive application
 - Edit Safety Integrated application
 - Edit web server settings
 - Manage users and rolesRuntime function rights depend on user roles, which are assigned in the commissioning tool being used (Startdrive, web server). As a consequence, setting parameters can be write-protected.
The commissioning tool provides additional support.
- **Can be changed in operating state**
A parameter can only be changed in this operating state. The change only becomes active after exiting the state. The following states exist:
 - Operation
The pulses have been enabled.
 - Ready for operation
The pulses are not enabled and state "Commissioning" is not active.
 - Commissioning
Commissioning takes place.
The pulses cannot be enabled.
- **Parameter group**
A parameter group contains parameters that are functionally associated with one another.
- **Unit**
Shows the default unit of the parameter. For setting parameters, the unit is additionally specified according to the values (Min, Max, Factory setting) in square brackets.

17.1 Explanation of the list of parameters

- Min, Max, Factory setting**
 The parameter value "when shipped" is specified under "Factory setting" with the relevant unit in square parentheses.
 The value can be adjusted within the range defined by "Min" and "Max".
 This information is not applicable for display parameters.

Min	Minimum value of the parameter [unit]
Max	Maximum value of the parameter [unit]
Factory setting	Value when delivered [unit]

- Description**
 Explanation of the function of a parameter.
- Values**
 List of the possible values of a parameter.
- Recommendation**
 Information about recommended settings.
- Index**
 Indexed parameters represent the name and its significance for each individual index.
 The following applies to the values (Min, Max, Factory setting) of indexed setting parameters:
 - Min, Max:
The adjustment range and the unit apply to all indices.
 - Factory setting:
When all indices have the same factory setting, index 0 is specified with the unit to represent all indices.
When the indices have different factory settings, they are all listed individually with the unit.
- Bit array**
 For parameters with bit arrays, the following information is provided for each bit:
 - Bit number and signal name
 - Meaning for signal states 0 and 1
 - Function diagram (optional)
The signal is shown in this function diagram.
- Dependency**
 Specification of interactions that this parameter can potentially have:
 - Effect on other parameters
 - Dependent on other parameter settings (dependent on the selected functions)
 - List of other parameters to be considered
 - List of faults and alarms to be considered

- **Danger / Caution / Warning / Notice**

The safety-relevant notes correspond to the warning notice concept and contain the following information:

- Important information that must be observed to avoid the risk of physical injury or material damage.
- Information that must be observed to avoid any problems.
- Information that the user may find useful.

- **Note**

Additional explanations about parameters

17.2 List of parameters

Parameters

The following list contains parameters of the S210 product.

Product: SINAMICS S210, Version: 601122000, Language: eng

Objects: S210

r0002

Operating display

Data type: Integer16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Status parameters, Diagnostics general, Drive enable signals

Unit: -

Description:

Operating display for the drive.

Value:

- 0: Operation - everything enabled
- 10: Operation - Set "Enable setpoint" = "1"
- 11: Operation - Set "Enable speed controller" = "1"
- 12: Operation - RFG frozen, set "RFG start" = "1"
- 13: Operation - Set "Enable ramp-function generator" = "1"
- 14: Operation - speed setpoint not enabled
- 15: Operation - open brake (p1215)
- 16: Operation - Withdraw braking with OFF1 using "ON/OFF1" = "1"
- 17: Operation - braking with OFF3 can only be interrupted with OFF2
- 18: Operation - brake on fault, remove fault, acknowledge
- 21: Ready for operation - Set "Enable operation" = "1"
- 31: Ready for switching on - Set "ON/OFF1" = "0/1"
- 35: Switching on inhibited - Commissioning not possible, check motor
- 41: Switching on inhibited - Set "ON/OFF1" = "0"
- 42: Switching on inhibited - Set "Operating condition/OFF2" = "1"
- 43: Switching on inhibited - Set "Operating condition/OFF3" = "1"
- 44: Switching on inhibited - Supply STO terminal w/ 24 V (hardware)
- 45: Switching on inhibited - rectify fault, acknowledge fault, STO
- 46: Switching on inhibited - exit commissioning mode
- 60: Drive deactivated/not operational
- 70: Initialization
- 200: Wait for booting/partial booting
- 250: Device signals a topology error

Dependency:

See also: r0046

NOTICE
For a display not equal to 0, the drive is either powering up or an enable signal is missing. The control sends these enable signals.
For several missing enable signals, the corresponding value with the highest number is displayed.

Note

The drive only controls the motor speed in the "Operation" state (r0002 = 0).

OC: Operating condition

EP: Enable Pulses (pulse enable)

RFG: Ramp-function generator

COM: Commissioning

MotID: Motor data identification

SS2: Safe Stop 2

STO: Safe Torque Off

r0020**Speed setpoint smoothed**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Mode signals / displays

Unit: rpm

Description:

Displays the smoothed speed setpoint at the speed controller input.

r0021**Speed actual value smoothed**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Diagnostics, Mode signals / displays

Unit: rpm

Description:

Displays the smoothed actual value of the motor speed.

Dependency:

See also: r0063

r0026**DC link voltage smoothed**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Brake control, Mode signals / displays

Unit: V

Description:

Displays the smoothed actual value of the DC link voltage.

Dependency:

See also: r0070

r0027**Absolute actual current smoothed**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Mode signals / displays

Unit: Arms

Description:

Displays the smoothed absolute current actual value.

Dependency:

See also: r0068

r0031	Actual torque smoothed
Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Brake control, Mode signals / displays
Unit: Nm	
Description:	Displays the smoothed torque actual value.
Dependency:	See also: r0080

r0032	Active power actual value smoothed
Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Mode signals / displays
Unit: kW	
Description:	Display for the smoothed actual value of the active power.
Dependency:	See also: r0082

r0034	Motor utilization thermal
Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Motor temperature, Mode signals / displays
Unit: %	
Description:	Displays the thermal motor utilization taking into account the ambient temperature set in p0613.
Dependency:	See also: p0613 See also: F07011, A07012

NOTICE

After the drive is switched on, the system starts to determine the motor temperature with an assumed model value. This means that the value for the motor utilization is only valid after a stabilization time.

r0037[0...10]	Drive temperatures
Data type: FloatingPoint32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Mode signals / displays
Unit: °C	
Description:	Displays the temperatures of the drive components.
Index:	[0] = Inverter maximum value [1] = Depletion layer maximum value [2] = Rectifier maximum value [3] = Air intake [4] = Interior of power unit [5] = Cooling unit liquid intake [6] = Capacitor air discharge [7] = Depletion layer maximum value 1 [8] = Depletion layer maximum value 2 [9] = Depletion layer maximum value 3 [10] = Depletion layer maximum value 4

Note

The value of -200 indicates that there is no measuring signal.
 For index [0]:
 Maximum value of the inverter temperatures (r0037[5...10]).
 For index [1]:
 Maximum value of the depletion layer temperatures (r0037[13...18]).
 The maximum value is the temperature of the hottest inverter or depletion layer.
 In the case of a fault, the particular shutdown threshold depends on the power unit, and cannot be read out.

r0039[0...2]**Energy display**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Mode signals / displays, Power loss optimization
Unit: kWh

Description: Display for the energy values at the drive output terminals.

Index:
 [0] = Energy balance (sum)
 [1] = Energy drawn
 [2] = Energy fed back

Note

For index [0]:
 Difference between the energy drawn and energy that is fed back.

r0044**Thermal converter utilization**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Mode signals / displays, Power unit
Unit: %

Description: Displays the thermal converter utilization as a percentage.
 With this value, various thermal monitoring functions are taken into account.

Dependency: See also: r0034

Note

The thermal motor utilization is displayed in parameter r0034.

r0046.0...30**Missing enable signal**

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Control/status words, Drive enable signals
Unit: -

Description: Displays the missing enable signals.
 All enable signals are required to operate the drive. The enable signals are set by the control.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	OFF1 enable missing	Yes	No
	01	OFF2 enable missing	Yes	No
	02	OFF3 enable missing	Yes	No
	03	Operation enable missing	Yes	No
	08	Safety enable missing	Yes	No

17.2 List of parameters

10	Ramp-function generator enable missing	Yes	No
12	Setpoint enable missing	Yes	No
16	OFF1 enable internal missing	Yes	No
17	OFF2 enable internal missing	Yes	No
18	OFF3 enable internal missing	Yes	No
19	Pulse enable internal missing	Yes	No
21	STOP2 enable internal missing	Yes	No
26	Drive inactive or not operational	Yes	No
28	Brake open missing	Yes	No
30	Speed controller inhibited	Yes	No

Dependency: See also: r0002

Note

The value r0046 = 0 indicates that all enable signals for this drive are present.

Bit 00 = 1 (enable signal missing), if:

- OFF1 from the PROFINET interface missing.
- There is a "switching on inhibited".

Bit 01 = 1 (enable signal missing), if:

- OFF2 from the PROFINET interface missing.

Bit 02 = 1 (enable signal missing), if:

- OFF3 from the PROFINET interface missing.

Bit 03 = 1 (enable signal missing), if:

- "Enable operation" from the PROFINET interface missing.

Bit 08 = 1 (enable signal missing), if:

- Safety functions have been enabled and STO is active.
- A safety-relevant message with STO as response is active.

STO enabled via terminals:

- Pulse enable via the STO terminals has a 0 signal.

STO enabled via PROFIsafe:

- STO is selected via PROFIsafe.
- Additional details relating to the reason that STO was selected, see parameter r10352.

Bit 10 = 1 (enable signal missing), if:

- "Enable ramp-function generator" from the PROFINET interface missing.

Bit 12 = 1 (enable signal missing), if:

- "Enable setpoint" from the PROFINET interface missing.

Bit 16 = 1 (enable signal missing), if:

- There is an OFF1 fault response. The system is only enabled if the fault is removed and was acknowledged and the "switching on inhibited" withdrawn with OFF1 = 0.

Bit 17 = 1 (enable signal missing), if:

- The commissioning mode is selected.
- There is an OFF2 fault response.
- The drive is inactive or not capable of operation.

Bit 18 = 1 (enable signal missing), if:

- OFF3 has still not been completed or an OFF3 fault response is present.

Bit 19 = 1 (internal pulse enable missing), if:

- Synchronization is running between the basic clock cycle, DRIVE-CLiQ clock cycle and application clock cycle.

Bit 21 = 1 (enable signal missing), if:

The pulses have been enabled and the speed setpoint has still not been enabled, because:

- The holding brake opening time (r1216) has still not elapsed.
- The motor has still not been magnetized (induction motor).
- The encoder has not been calibrated (U/f vector and synchronous motor)

Bit 26 = 1 (enable signal missing), if:

- The drive is inactive or not capable of operation.
- The drive device is in the "PROFenergy energy-saving mode" (r5600, CU-specific).

Bit 28 = 1 (enable signal missing), if:

- The holding brake is closed or has still not been opened.

17.2 List of parameters

- Bit 30 = 1 (speed controller inhibited), if one of the following reasons is present:
- Pulse enable missing
 - The function generator with current input is active.
 - The measuring function "current controller reference frequency characteristic" is active.
 - The pole position identification is active.
 - Motor data identification is active (only certain steps).

r0061[0...1] Actual speed unsmoothed

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Motor encoder, Mode signals / displays
Unit: rpm

Description: Displays the unsmoothed speed actual value sensed by the encoder.
Index: [0] = Motor encoder
 [1] = Reserved

r0062 Speed setpoint after the filter

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Mode signals / displays
Unit: rpm

Description: Display for the speed setpoint after the setpoint filters.

r0063 Speed actual value smoothed

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Mode signals / displays
Unit: rpm

Description: Display for the speed actual value.
Dependency: See also: r0021, r0061, p1441

r0068 Absolute current actual value

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Mode signals / displays
Unit: Arms

Description: Displays actual absolute current.
Dependency: See also: r0027

NOTICE
The value is updated with a sampling time of 1 ms.

Note
Absolute current value = $\sqrt{I_q^2 + I_d^2}$
The absolute current actual value is available smoothed (r0027) and unsmoothed (r0068).

r0070	<p>Actual DC link voltage</p> <p>Data type: FloatingPoint32 Visible in: Extended display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Mode signals / displays</p> <p>Unit: V</p> <p>Description: Display for the measured actual value of the DC link voltage.</p> <p>Dependency: See also: r0026</p> <hr/> <p>Note The DC link voltage is available smoothed (r0026) and unsmoothed (r0070).</p>
r0076	<p>Current actual value field-generating</p> <p>Data type: FloatingPoint32 Visible in: Extended display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Mode signals / displays</p> <p>Unit: Arms</p> <p>Description: Display for the actual value of the field-generating current Id.</p>
r0077	<p>Current setpoint torque-generating</p> <p>Data type: FloatingPoint32 Visible in: Extended display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Current controller, Mode signals / displays</p> <p>Unit: Arms</p> <p>Description: Displays the torque/force-generating current setpoint.</p>
r0078[0...1]	<p>Current actual value torque-generating</p> <p>Data type: FloatingPoint32 Visible in: Extended display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Mode signals / displays</p> <p>Unit: Arms</p> <p>Description: Display for the actual value of the torque-generating current Iq.</p> <p>Index: [0] = Unsmoothed [1] = Smoothed</p>
r0079[0...1]	<p>Torque setpoint total</p> <p>Data type: FloatingPoint32 Visible in: Extended display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Torque limiting, Mode signals / displays</p> <p>Unit: Nm</p> <p>Description: Display for the torque setpoint at the output of the speed controller.</p> <p>Index: [0] = Unsmoothed [1] = Smoothed</p>

17.2 List of parameters

r0080	Torque actual value
Data type: FloatingPoint32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Mode signals / displays
Unit: Nm	
Description:	Display for the actual torque.
Dependency:	See also: r0031
Note	
The value is available smoothed (r0031) and unsmoothed (r0080).	

r0082[0...3]	Active power actual value
Data type: FloatingPoint32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Mode signals / displays
Unit: kW	
Description:	Displays the actual active power.
Index:	[0] = Unsmoothed [1] = Smoothed [2] = Power drawn [3] = Power drawn smoothed
Dependency:	See also: r0032
Note	
The mechanical active power is available smoothed (r0032 with 100 ms, r0082[1] with 1 ms) and unsmoothed (r0082[0]). For index [3]: Smoothing time constant = 0.25 ms	

r0196[0...255].4...15 Topology component status

	Data type: Unsigned32	Visible in: Extended display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Parameter group:	Diagnostics general		
	Unit: -			
Description:	Displays the status of the components. r0196[0]: Group status of all components r0196[1]: Status of component with component number 1 ... r0196[255]: Status of component with component number 255			
Bit array:	Bit	Signal name	1 signal	0 signal
	04	Component state	Active	Inactive/parking
	06	Topology problem active	Yes	No
	07	Part of the target topology	Yes	No only act topo
	08	Alarm present	Yes	No
	10	Fault present	Yes	No
	13	Maintenance required	Yes	No
	14	Maintenance urgently required	Yes	No
	15	Fault gone/can be acknowledged	Yes	No

Note

For bits 12 ... 11:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

p0201[0]	Power unit code number		
	Data type: Unsigned16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Power unit	
	Unit: -		
	Min:	Max:	Factory setting:
	0	65535	0
Description:	Sets the actual code number of the power unit being used.		

r0208	Rated power unit line supply voltage		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	System identification, Power unit	
	Unit: Vrms		
Description:	Displays the rated line supply voltage of the power unit. r0208 = 230: 200 - 240 V (line voltage tolerance: +/-10 %) r0208 = 400: 380 - 480 V (line voltage tolerance: +/-10 %)		

p0210	Device supply voltage		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Ready for operation	
	Parameter group:	Power unit, Quick commissioning	
	Unit: V		
	Min:	Max:	Factory setting:
	1 [V]	63000 [V]	400 [V]
Description:	Sets the device supply voltage. The voltage between two phases should be entered as the device supply voltage. This setting is important for operating with voltages that are less than the voltage range for which the drive is designed.		
	Note		
	Setting ranges for p0210 as a function of the rated power unit voltage:		
	U _{rated} = 230 V:		
	- p0210 = 200 ... 240 V		
	U _{rated} = 400 V:		
	- p0210 = 380 ... 480 V (wide voltage range, in addition to 200 ... 240 V)		

p0251[0]	Power unit heat sink fan operating hours counter
	Data type: Unsigned32 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Can be changed in the operating state: Ready for operation
	Parameter group: System identification, Power unit
	Unit: h
	Min: Max: Factory setting:
	0 [h] 4294967295 [h] 0 [h]
Description:	Displays the operating hours of the heat sink fan in the power unit. The number of hours operated can only be reset to 0 in this parameter (e.g. after a fan has been replaced).
Dependency:	See also: r0277 See also: A30042
	Note This parameter is only available/included in the customer interface for compatibility reasons. In the future, use parameter r0277 (power unit heat sink-fan wear counter).

r0277[0]	Power unit heat sink fan wear counter
	Data type: FloatingPoint32 Visible in: Extended display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Parameter group: Power unit
	Unit: %
Description:	Displays the wear counter of the heat sink fan in the power unit. After a fan has been replaced, using an appropriate button, the value can be reset in the commissioning tool to 0.
Dependency:	See also: A30042

p0300[0]	Motor type selection
	Data type: Integer16 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Can be changed in the operating state: Commissioning
	Parameter group: Motor data, Quick commissioning
	Unit: -
	Min: Max: Factory setting:
	0 10000 0
Description:	Selects the motor type or start to read in the motor parameters for a motor with DRIVE-CLiQ (p0300 = 10000). For p0300 < 10000 the following applies: The first digit of the parameter value always defines the general motor type and corresponds to the third-party motor belonging to a motor list: 2 = rotating synchronous motor
Value:	0: No motor 2: Synchronous motor 203: 1FT2 synchronous motor 237: 1FK7 synchronous motor 272: 1FK2 synchronous motor 295: 1FS2 synchronous motor 2024: 1FK7 synchronous motor

2030: 1FT2 synchronous motor
 2031: 1FK2 synchronous motor
 2032: 1FS2 synchronous motor
 10000: Motor with DRIVE-CLiQ

Dependency: See also: p0301

p0301[0] **Motor code number selection**

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Commissioning
Parameter group: Motor data, Quick commissioning

Unit: -

Min:	Max:	Factory setting:
0	99999999	0

Description: Code number of the connected motor, whose data was accepted when commissioning.

Dependency: Code numbers can only be selected for motor types that correspond to the motor type selected in p0300.
 See also: p0300

Note

For a motor with DRIVE-CLiQ, p0301 cannot be changed. p0301 is automatically written to the code number of the motor parameter read in (r0302) if p0300 is set to 10000. For other values, the commissioning routine cannot be exited.

r0302[0] **Motor code (identified)**

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Motor data, Quick commissioning
Unit: -

Description: Displays the identified motor code number.

When the drive powers up, the motor code is read out the motor. For r0302 = 0, the motor data were not identified.

r0304[0] **Rated motor voltage**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Motor data, Quick commissioning
Unit: Vrms

Description: Displays the rated motor voltage.

r0305[0] **Rated motor current**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Motor data, Quick commissioning
Unit: Arms

Description: Displays the rated motor current.

r0307[0]	Rated motor power	
	Data type: FloatingPoint32	Visible in: Standard display
	Read permission:	Read drive data or acknowledge messages
	Write permission:	Edit device configuration or drive applications
	Parameter group:	Motor data, Quick commissioning
	Unit: kW	
Description:	Displays the rated motor power.	

r0311[0]	Rated motor speed	
	Data type: FloatingPoint32	Visible in: Standard display
	Read permission:	Read drive data or acknowledge messages
	Write permission:	Edit device configuration or drive applications
	Parameter group:	Motor data, Quick commissioning
	Unit: rpm	
Description:	Displays the rated motor speed.	

r0312[0]	Rated motor torque	
	Data type: FloatingPoint32	Visible in: Standard display
	Read permission:	Read drive data or acknowledge messages
	Write permission:	Edit device configuration or drive applications
	Parameter group:	Motor data
	Unit: Nm	
Description:	Displays the rated motor torque.	

r0316[0]	Motor torque constant	
	Data type: FloatingPoint32	Visible in: Extended display
	Read permission:	Read drive data or acknowledge messages
	Write permission:	Edit device configuration or drive applications
	Parameter group:	Motor data, Quick commissioning
	Unit: Nm/A	
Description:	Sets the torque constant of the synchronous motor.	
	r0316 = 0: The torque constant is calculated from the motor data.	
	r0316 > 0: The selected value is used as torque constant.	

r0318[0]	Motor stall current	
	Data type: FloatingPoint32	Visible in: Extended display
	Read permission:	Read drive data or acknowledge messages
	Write permission:	Edit device configuration or drive applications
	Parameter group:	Motor data
	Unit: Arms	
Description:	Displays the rated motor stall current.	

r0319[0]	Motor stall torque		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Motor data	
	Unit: Nm		
Description:	Displays the motor standstill/stall torque.		
r0322[0]	Maximum motor speed		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Motor data, Quick commissioning	
	Unit: rpm		
Description:	Displays the maximum motor speed.		
Dependency:	See also: p1082		
r0323[0]	Maximum motor current		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Motor data, Quick commissioning	
	Unit: Arms		
Description:	Displays the maximum permissible motor current.		
r0341[0]	Motor moment of inertia		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Motor data, Speed controller	
	Unit: kgm ²		
Description:	Displays the motor moment of inertia (without load).		
p0400[0]	Encoder type selection		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Motor encoder, Quick commissioning	
	Unit: -		
	Min:	Max:	Factory setting:
	0	10100	0
Description:	Selects the encoder from the list of encoder types supported.		
Value:	0:	No encoder	
	202:	DRIVE-CLiQ encoder AS20, singleturn	
	204:	DRIVE-CLiQ encoder AM20, multeturn 4096	
	222:	DRIVE-CLiQ encoder AS22, singleturn	

17.2 List of parameters

- 224: DRIVE-CLiQ encoder AM22, multiturn 4096
- 242: DRIVE-CLiQ encoder AS24, singleturn
- 244: DRIVE-CLiQ encoder AM24, multiturn 4096
- 262: DRIVE-CLiQ encoder AS26, singleturn
- 264: DRIVE-CLiQ encoder AM26, multiturn 4096
- 10100: Identify encoder (waiting)

NOTICE
 An encoder type with p0400 < 9999 defines an encoder for which there is an encoder parameter list. When selecting a catalog encoder (p0400 < 9999) the parameters from the encoder parameter list cannot be changed (write protection).

Note
 The connected encoder can be identified using p0400 = 10100. This means that the encoder must support this, and is possible in the following cases:
 - Motor with DRIVE-CLiQ
 - Encoder with EnDat interface
 - DRIVE-CLiQ encoder
 For p0400 = 10100 the following applies:
 The connected encoder is identified. If identification is not possible, then p0400 remains set = 10100, and the system waits until identification is possible.

p0404[0].1...10 Encoder configuration effective

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Commissioning
Parameter group: Motor encoder
Unit: -
Min: **Max:** **Factory setting:**
 - - 0000 0000 0000 0000 bin

Description: Settings for the basic encoder properties.

Bit array:

Bit	Signal name	1 signal	0 signal
01	Absolute encoder	Yes	No
02	Multiturn encoder	Yes	No
10	DRIVE-CLiQ encoder	Yes	No

NOTICE
 This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.

Note
 For bit 01, 02 (absolute encoder, multiturn encoder):
 These bits can only be selected for a DRIVE-CLiQ encoder.
 For bit 10 (DRIVE-CLiQ encoder):
 This bit is only used for the large-scale integrated DRIVE-CLiQ encoders that provide their encoder data directly in DRIVE-CLiQ format without converting this data. This bit is not, therefore, set for first-generation DRIVE-CLiQ encoders.

p0408[0]	Rotary encoder pulse number		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Motor encoder	
	Unit: -		
	Min:	Max:	Factory setting:
	0	16777215	2048
Description:	Sets the number of pulses for a rotary encoder. In conjunction with the fine resolution, the pulse number defines the transfer format for position actual values Gn_XIST1 (r0479).		
NOTICE			
This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection).			
Note			
The smallest permissible value is 1 pulse. This value does not always correspond to the pulse number of the measuring device. For a DRIVE-CLiQ encoder, a value is entered here that facilitates optimum transfer of the resolution (p0423).			

p0421[0]	Absolute encoder rotary multiturn resolution		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Motor encoder	
	Unit: -		
	Min:	Max:	Factory setting:
	0	4294967295	4096
Description:	Maximum number of revolutions that can be resolved for a rotary absolute encoder to determine the position. The value of p0421 is read out when the drive powers up and cannot be changed.		

p0423[0]	Absolute encoder rotary singleturn resolution		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Motor encoder	
	Unit: -		
	Min:	Max:	Factory setting:
	0	1073741823	8192
Description:	Sets the number of measuring steps per revolution for a rotary absolute encoder. The resolution refers to the absolute position.		
NOTICE			
This parameter is automatically pre-assigned for encoders from the encoder list and for identify encoder (p0400). When selecting a catalog encoder, this parameter cannot be changed (write protection). Information in p0400 should be carefully observed when removing write protection.			

17.2 List of parameters

r0479[0...2] Diagnostics encoder position actual value Gn_XIST1

Data type: Integer32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Motor encoder
Unit: -

Description: Display for the encoder position actual value Gn_XIST1 according to PROFIdrive for diagnostics.
The value of r0479 is updated in each DRIVE-CLiQ basic clock cycle and displayed with sign.

Index: [0] = Motor encoder
 [1] = Reserved
 [2] = Reserved

p0488[0...2] Activate measuring probe 1

Data type: Integer16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Measuring probe
Unit: -


Min:	Max:	Factory setting:
0	210	210

Description: Setting to activate/deactivate measuring probe 1.
The inversion of probe 1 is set in p0490.0.

Value: 0: No measuring probe
 210: DI 0 (X130 / 1.2)

Index: [0] = Motor encoder
 [1] = Reserved
 [2] = Reserved

Dependency: See also: p0489, p0490

 CAUTION In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

Note
DI: Digital Input
Refer to the encoder interface for PROFIdrive.

p0489[0...2] Activate measuring probe 2


Data type: Integer16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Measuring probe
Unit: -

Min:	Max:	Factory setting:
0	211	211

Description: Setting to activate/deactivate measuring probe 2.
The inversion of probe 2 is set in p0490.1.

Value: 0: No measuring probe

211: DI 1 (X130 / 1.5)
Index: [0] = Motor encoder
 [1] = Reserved
 [2] = Reserved
Dependency: See also: p0488, p0490

 CAUTION
In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

Note

DI: Digital Input
 Refer to the encoder interface for PROFIdrive.

p0490.0...1**Invert measuring probe**

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Measuring probe
Unit: -
Min: - **Max:** - **Factory setting:** 0000 bin

Description: Setting to invert digital input 0 or 1 (probe 1, 2).

Bit	Signal name	1 signal	0 signal
00	DI 0 (X130 / 1.2)	Inverted	Not inverted
01	DI 1 (X130 / 1.5)	Inverted	Not inverted

Dependency: See also: p0488, p0489

Note

DI: Digital Input
 The inversion has no effect on the status display of the digital inputs (r0722).


p0494[0]**Equivalent zero mark input terminal**

Data type: Integer16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Motor encoder
Unit: -
Min: 0 **Max:** 211 **Factory setting:** 0

Description: Selects the input terminal for connecting an equivalent zero mark (external encoder zero mark).

Value: 0: No equivalent zero mark (evaluation of the encoder zero mark)
 210: DI 0 (X130 / 1.2)
 211: DI 1 (X130 / 1.5)

Dependency: See also: p0490

 CAUTION
In order to prevent incorrect measurement values, these parameters may not be written during an active measurement.

17.2 List of parameters

Note

Refer to the encoder interface for PROFIdrive.

r0550[0]**Brake status****Data type:** Integer16**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Motor holding brake, Quick commissioning

Unit: -**Description:**

Displays the status of the brake.

The value of r0550 is read when the drive runs up.

Value:

0: No data

1: Holding brake

2: High performance holding brake

Dependency:

See also: p1215, r1216, r1217

Note

For value = 1:

The default value for opening time/closing time applies.

For value = 2:

A shorter opening time/closing time is realized if the drive satisfies the preconditions.

p0551[0]**Brake code number****Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Can be changed in the operating state: Commissioning**Parameter group:**

Motor holding brake, Quick commissioning

Unit: -**Min:**

0

Max:

4294967295

Factory setting:

1

Description:

Display and setting the code number for the brake.

0 = No data

1 = Manual entry

> 1 = valid code number

For value = 0:

- Parameters listed under Dependent are set to a value of zero and are write protected.

- Parameters r1216, r1217 are set to a value of zero.

For value = 1:

- Write protection for the parameters listed under Dependent is withdrawn.

For value > 1:

- Parameters listed under Dependent are automatically pre-assigned and are write protected.

- Parameters r1216, r1217 are automatically appropriately pre-assigned.

Dependency:

See also: r0550

Note

Only code numbers can be set that are permitted for the selected motor code (p0301).

p0613[0]	Motor temperature model ambient temperature		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor temperature	
	Unit: °C		
	Min: -40 [°C]	Max: 100 [°C]	Factory setting: 40 [°C]
Description:	Sets the motor ambient temperature. Based on this value, the motor temperature model calculates the thermal motor utilization (r0034).		
Dependency:	See also: r0034 See also: F07011, A07012		
	Note If the thermal motor model is activated for permanent-magnet synchronous motors, p0613 is incorporated in the model calculation if a temperature sensor is not being used.		

r0722.0...4	Digital inputs status		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Digital inputs	
	Unit: -		
Description:	Displays the status of the digital inputs.		
Bit array:	Bit	Signal name	1 signal
	00	DI 0 (X130 / 1.2)	High
	01	DI 1 (X130 / 1.5)	High
	02	DI 2 (X130 / 2.1-2)	High
	03	DI 3 (X130 / 2.3-4)	High
	04	DI 4 (X130 / 2.6)	High
			Low
Dependency:	See also: p0488, p0489		
	Note DI: Digital Input For bit 00, 01: DI 0 and DI 1 are fast digital inputs and can be used to connect a measuring probe (p0488, p0489). For bits 02, 03: DI 2 and DI 3 form a failsafe digital input. For bit 04: DI 4 is intended to monitor the temperature of the external brake resistor.		

r0898.0...14	Control word sequence control		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Control/status words	
	Unit: -		
Description:	Display for the control word of the sequence control. The higher-level control cyclically sends the control word to the drive.		
Bit array:	Bit	Signal name	1 signal
			Low
			High

17.2 List of parameters

00	ON/OFF1	Yes	No
01	Operating condition / OFF2	Yes	No
02	Operating condition / OFF3	Yes	No
03	Enable operation	Yes	No
04	Enable ramp-function generator	Yes	No
05	Continue ramp-function generator	Yes	No
06	Enable speed setpoint	Yes	No
07	Command open brake	Yes	No
08	Jog 1	Yes	No
09	Jog 2	Yes	No
10	Master control by PLC	Yes	No
12	Speed controller enable	Yes	No
14	Command close brake	Yes	No

r0899.0...13 Status word sequence control

Data type: Unsigned16	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Control/status words
Unit: -	

Description: Display for the status word of the sequence control.
The status word is cyclically sent from the drive to the higher-level control.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Ready for switching on	Yes	No
	01	Ready	Yes	No
	02	Operation enabled	Yes	No
	03	Jog active	Yes	No
	04	No coasting active	OFF2 inactive	OFF2 active
	05	No Quick Stop active	OFF3 inactive	OFF3 active
	06	Switching on inhibited active	Yes	No
	07	Drive ready	Yes	No
	08	Controller enable	Yes	No
	09	Control request	Yes	No
	11	Pulses enabled	Yes	No
	12	Open holding brake	Yes	No
	13	Command close holding brake	Yes	No

Note

For bits 00, 01, 02, 04, 05, 06, 09:

For PROFIdrive, these signals are used for status word 1.

For bit 13:

When function "SBC (Safe Brake Control)" is activated and selected, the brake is no longer controlled using this signal.

r0922 PROFIdrive PZD telegram selection

Data type: Unsigned16	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Quick commissioning, Configuration
Unit: -	

Description: Displays the PROFIdrive telegram.

Value:	3:	Standard telegram 3, PZD-5/9
	5:	Standard telegram 5, PZD-9/9
	102:	SIEMENS telegram 102, PZD-6/10
	105:	SIEMENS telegram 105, PZD-10/10

Note

The telegram is set in the commissioning tool or by the control.

r0924[0...1]**ZSW bit pulses enabled**

Data type:	Unsigned16	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Parameter group:			Configuration
Unit:	-		

Description: Displays the position of the "Pulses enabled" status signal in the PROFIdrive telegram.

Index:
[0] = Signal number
[1] = Bit position

p0925**PROFIdrive clock synchronous sign-of-life tolerance**

Data type:	Unsigned16	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Can be changed in the operating state:	Operation, Ready for operation		
Parameter group:	Configuration		
Unit:	-		
Min:	0	Max:	65535
		Factory setting:	1

Description: Sets the number of tolerated consecutive sign-of-life errors of the isochronous controller. The sign-of-life signal is normally received in PZD4 (control word 2) from the controller.

Dependency: See also: F01912

Note

The sign-of-life monitoring is disabled for p0925 = 65535.

r0930**PROFIdrive operating mode**

Data type:	Unsigned16	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Parameter group:	Configuration		
Unit:	-		

Description: Displays the operating mode.
3: Closed-loop speed controlled operation without ramp-function generator

r0944**Fault buffer counter**

Data type:	Unsigned16	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Parameter group:	Faults / alarms		
Unit:	-		

17.2 List of parameters

Description: Display for the fault buffer counter
This counter is incremented every time that a fault occurs.

Recommendation: This is used to check whether an additional fault has occurred while reading out the fault buffer.

Dependency: See also: r0945, r0947, r0948, r0949, r2109

r0945[0...63]

Fault code

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the codes of faults that have occurred.
Dependency: See also: r0947, r0948, r0949, r2109, r2130, r2133, r2136

NOTICE
The properties of the fault buffer should be taken from the corresponding product documentation.

Note
The buffer parameters are cyclically updated (states are indicated in r2139).
Fault buffer structure (general principle):
r0945[0], r0949[0] or r2133[0], r2130[0], r0948[0], r2136[0], r2109[0] --> fault 1 (oldest active fault) of the active incident
...
r0945[7], r0949[7] or r2133[7], r2130[7], r0948[7], r2136[7], r2109[7] --> fault 8 (latest active fault) of the active incident
For more than 8 active faults, only the entries are overwritten at the eighth position (index 7).

History of acknowledged faults:
If a fault incident is acknowledged, then all alarms of the 1st fault incident are transferred into the 2nd fault incident, this becomes the 1st acknowledged fault incident.
The 2nd incident is transferred into the 3rd, the 3rd into the 4th etc. The last incident is rejected.

r0945[8], r0949[8] or r2133[8], r2130[0], r0948[8], r2136[8], r2109[8] --> fault 1 of the 1st acknowledged incident
...
r0945[16], r0949[16] or r2133[16], r2130[16], r0948[16], r2136[16], r2109[16] --> fault 1 of the 2nd acknowledged incident
...
r0945[56], r0949[56] or r2133[56], r2130[56], r0948[56], r2136[56], r2109[56] --> fault 1 of the 7th acknowledged incident
...
r0945[63], r0949[63] or r2133[63], r2130[63], r0948[63], r2136[63], r2109[63] --> fault 8 (oldest fault that has gone) of the 7th acknowledged incident

r0947[0...63]

Fault number

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the numbers of faults that have occurred.
Dependency: See also: r0945

NOTICE
The properties of the fault buffer should be taken from the corresponding product documentation.

Note

The buffer parameters are cyclically updated (states are indicated in r2139).

Fault buffer structure (general principle):

r0945[0], r0949[0] or r2133[0], r2130[0], r0948[0], r2136[0], r2109[0] --> fault 1 (oldest active fault) of the active incident

...

r0945[7], r0949[7] or r2133[7], r2130[7], r0948[7], r2136[7], r2109[7] --> fault 8 (latest active fault) of the active incident

For more than 8 active faults, only the entries are overwritten at the eighth position (index 7).

History of acknowledged faults:

If a fault incident is acknowledged, then all alarms of the 1st fault incident are transferred into the 2nd fault incident, this becomes the 1st acknowledged fault incident.

The 2nd incident is transferred into the 3rd, the 3rd into the 4th etc. The last incident is rejected.

r0945[8], r0949[8] or r2133[8], r2130[0], r0948[8], r2136[8], r2109[8] --> fault 1 of the 1st acknowledged incident

...

r0945[16], r0949[16] or r2133[16], r2130[16], r0948[16], r2136[16], r2109[16] --> fault 1 of the 2nd acknowledged incident

...

r0945[56], r0949[56] or r2133[56], r2130[56], r0948[56], r2136[56], r2109[56] --> fault 1 of the 7th acknowledged incident

...

r0945[63], r0949[63] or r2133[63], r2130[63], r0948[63], r2136[63], r2109[63] --> fault 8 (oldest fault that has gone) of the 7th acknowledged incident

r0948[0...63]**Fault received in milliseconds**

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: ms

Description:

Displays the system runtime in milliseconds referred to the day that the fault occurred.

Dependency:

See also: r0945, r0947, r0949, r2109, r2114, r2130, r2133, r2136

NOTICE

The time comprises r2130 (complete days) and r0948 (milliseconds, incomplete day).

r0949[0...63]**Fault value**

Data type: Integer32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: -

Description:

Displays additional information about the fault that occurred (as integer number).

The fault causes can be found under the fault values of the particular fault number.

Dependency:

See also: r0945, r0947, r0948, r2109, r2130, r2133, r2136

Note

The buffer parameters are cyclically updated in the background.


The structure of the fault buffer and the assignment of the indices is shown in r0945.

17.2 List of parameters

p0952	Fault cases counter		
	Data type: Unsigned16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Faults / alarms	
	Unit: -		
	Min:	Max:	Factory setting:
	0	65535	0
Description:	Number of fault situations since the last reset.		
Dependency:	The counter is reset with p0952 = 0. See also: r0945, r0947, r0948, r0949, r2109, r2130, r2133, r2136		

r0964[0...6]	Device identification		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	System identification	
	Unit: -		
Description:	Displays the device identification.		
Index:	[0] = Company (Siemens = 42) [1] = Device type [2] = Firmware version [3] = Firmware date (year) [4] = Firmware date (day/month) [5] = Number of drive objects [6] = Firmware patch/hot fix		
	Note		
	Example: r0964[0] = 42 --> SIEMENS r0964[1] = device type, see below r0964[2] = 601 --> first part firmware version V06.01 (second part, refer to index 6) r0964[3] = 2020 --> year 2020 r0964[4] = 1706 --> June 17 r0964[5] = 1 --> 1 drive object r0964[6] = 0 --> second part firmware version (complete version: V06.01.00.00)		

r0965	PROFdrive profile number profile version		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Configuration	
	Unit: -		
Description:	Displays the PROFdrive profile number and profile version. Constant value = 032A hex. Byte 1: Profile number = 03 hex = PROFdrive profile Byte 2: profile version = 2A hex = 42 dec = version 4.2		
	Note		
	When the parameter is read via PROFdrive, the Octet String 2 data type applies.		

p0972	Drive unit reset
	Data type: Unsigned16 Visible in: Extended display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Can be changed in the operating state: Ready for operation
	Parameter group: Save & reset
	Unit: -
	Min: 0 Max: 3 Factory setting: 0
Description:	Sets the required procedure to execute a hardware reset for the drive unit.
Value:	0: Inactive 1: Hardware-Reset immediate 2: Hardware reset preparation 3: Hardware reset after cyclic communication has failed
 DANGER It must be absolutely ensured that the system is in a safe condition. The memory card/device memory of the converter must not be accessed.	
Note	
For value = 1: Reset is immediately executed and communications interrupted. After communications have been established, check the reset operation (refer below). This value cannot be set in operation.	
For value = 2: Help to check the reset operation. Firstly, set p0972 = 2 and then read back. Secondly, set p0972 = 1 (it is possible that this request is possibly no longer acknowledged). The communication is then interrupted. After communications have been established, check the reset operation (refer below).	
For value = 3: The reset is executed after interrupting cyclic communication. This setting is used to implement a synchronized reset by a control for several drive units. If cyclic communication is not active, then the reset is immediately executed. After communications have been established, check the reset operation (refer below). To check the reset operation: After the drive unit has been restarted and communications have been established, read p0972 and check the following: p0972 = 0 --> the reset was successfully executed. p0972 > 0 --> the reset was not executed.	

r0975[0...10]	Drive object identification
	Data type: Unsigned16 Visible in: Extended display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Parameter group: System identification
	Unit: -
Description:	Displays the identification of the drive object. The drive internally comprises components, device and drive object. Both components require their own identification parameters according to PROFIdrive.

17.2 List of parameters

- Index:**
- [0] = Company (Siemens = 42)
 - [1] = Drive object type
 - [2] = Firmware version
 - [3] = Firmware date (year)
 - [4] = Firmware date (day/month)
 - [5] = PROFIdrive drive object type class
 - [6] = PROFIdrive drive object subtype class
 - [7] = Drive object number
 - [8] = Reserved
 - [9] = Reserved
 - [10] = Firmware patch/hot fix

Dependency: See also: r0964

Note

Example:
 r0975[0] = 42 --> SIEMENS
 r0975[1] = 312 --> drive object type VECTOR
 r0975[2] = 601 --> first part firmware version V06.01 (second part refer to index 10)
 r0975[3] = 2023 --> year 2023
 r0975[4] = 1706 --> 17th of June
 r0975[5] = 1 --> PROFIdrive type class = 1 (axis)
 r0975[6] = 9 --> PROFIdrive subtype class = 1 and 4 (application classes)
 r0975[7] = 1 -> drive object number = 1
 r0975[8] = 0 (reserved)
 r0975[9] = 0 (reserved)
 r0975[10] = 0 --> second part firmware version (complete version: V06.01.00.00)

p0976

Reset all parameters

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Ready for operation
Parameter group: Save & reset
Unit: -
Min: **Max:** **Factory setting:**
 0 1 0

Description: Resets all parameters of the drive system.

Value:
 0: Inactive
 1: Start to reset all parameters

NOTICE
 Writing to parameters is inhibited during the reset operation.

p0977

Save all parameters

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Save & reset
Unit: -

	Min:	Max:	Factory setting:
	0	1	0
Description:	Saves all parameters of the drive system to the non-volatile memory. When saving, only the adjustable parameters intended to be saved are taken into account.		
Value:	0: Inactive 1: Save in non-volatile memory - Loaded at POWER ON		
Dependency:	See also: p0976		

NOTICE

The drive power supply may only be switched off after data has been saved (i.e. after data save has been started, wait until the parameter again has the value 0).
Writing to parameters is inhibited while saving.

r0979[0...30]**PROFIdrive encoder format**

Data type: Unsigned32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	System identification, Configuration
Unit: -	

Description: Displays the actual position encoder used according to PROFIdrive.

Index:
 [0] = Header
 [1] = Motor encoder type
 [2] = Motor encoder resolution
 [3] = Shift factor G1_XIST1
 [4] = Shift factor G1_XIST2
 [5] = Distinguishable revolutions motor encoder
 [6...30] = Reserved

Note

Information about the individual indices can be taken from the following literature:
PROFIdrive Profile Drive Technology

r0981[0...299]**List of existing parameters 2**

Data type: Unsigned16	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	System identification
Unit: -	

Description: Displays the parameters that exist for this drive.

Dependency: See also: r0989

Note

Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here. In a long list, index 299 contains the parameter number at which position the list continues.

This list consists solely of the following parameters:

r0980[0...299], r0981[0...299] ... r0989[0...299]

The parameters in this list are not displayed in the expert list of the commissioning tool. However, they can be read from a higher-level control system.

r0989[0...299] List of existing parameters 10

Data type: Unsigned16	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	System identification
Unit: -	

Description: Displays the parameters that exist for this drive.

Dependency: See also: r0981

Note

Modified parameters are displayed in indices 0 to 298. If an index contains the value 0, then the list ends here.

This list consists solely of the following parameters:

r0980[0...299], r0981[0...299] ... r0989[0...299]

The parameters in this list are not displayed in the parameter lists of the commissioning tool. However, they can be read from a higher-level control system (e.g. PROFIBUS master).

p1082[0] Maximum speed

Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Can be changed in the operating state:	Commissioning, Ready for operation
Parameter group:	Speed controller, Quick commissioning
Unit: rpm	

Min:	Max:	Factory setting:
0.000 [rpm]	210000.000 [rpm]	1500.000 [rpm]

Description: Sets the maximum speed of the motor to a value less than or equal to the maximum motor speed (r0322). The set value is valid for both directions of rotation.

Dependency: See also: r0322

p1083[0] Speed limit positive

Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Can be changed in the operating state:	Operation, Ready for operation
Parameter group:	Speed controller
Unit: rpm	

Min:	Max:	Factory setting:
0.000 [rpm]	210000.000 [rpm]	210000.000 [rpm]

Description: Sets the maximum speed for the positive direction. The set value must be less than or equal to the maximum speed (p1082).

p1086[0] Speed limit negative

Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Can be changed in the operating state:	Operation, Ready for operation
Parameter group:	Speed controller
Unit: rpm	

	Min: -210000.000 [rpm]	Max: 0.000 [rpm]	Factory setting: -210000.000 [rpm]
Description:	Sets the maximum speed for the negative direction. The set value must be less than or equal to the maximum speed (p1082).		
p1121[0]	OFF1 ramp-down time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning, Operation, Ready for operation	
	Parameter group:	Quick commissioning	
	Unit: s		
	Min: 0.000 [s]	Max: 999999.000 [s]	Factory setting: 1.000 [s]
Description:	Sets the ramp-down time after an OFF1 command. The value is referred to the maximum speed (p1082). After an OFF1 command, within this time, the speed setpoint is ramped down from the maximum speed (p1082) to standstill.		
Dependency:	See also: p1082		
p1135[0]	OFF3 ramp-down time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning, Operation, Ready for operation	
	Parameter group:	Shutdown functions, Safety Integrated, Quick commissioning	
	Unit: s		
	Min: 0.000 [s]	Max: 600.000 [s]	Factory setting: 0.000 [s]
Description:	Sets the ramp-down time for Quick Stop. In this time, after an OFF3, the speed setpoint is reduced from the maximum speed (p1082) down to standstill.		
	Note This time can be exceeded if the DC link voltage reaches its maximum value.		
r1196	DSC position setpoint		
	Data type: Integer32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:		
	Unit: -		
Description:	Displays the position setpoint of Dynamic Servo Control in fine pulses.		
	Note DSC: Dynamic Servo Control		

p1215[0]**Motor holding brake configuration****Data type:** Integer16**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Can be changed in the operating state: Ready for operation**Parameter group:**

Motor holding brake

Unit: -**Min:**

0

Max:

2

Factory setting:

0

Description:

Sets the configuration for the motor holding brake.

For value 2:

This setting allows the motor shaft to be rotated for installation purposes.

Value:

0: No motor holding brake available

1: Motor holding brake acc. to sequence control

2: Motor holding brake always open

Dependency:

See also: r1216, r1217, p1226, p1227, p1228, p1278

⚠ CAUTION

For the setting p1215 = 0, if a brake is used, it remains closed. If the motor moves, this will destroy the brake. Setting p1215 = 2 is not permissible if the brake is used to hold loads.

r1216[0]**Motor holding brake opening time****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Motor holding brake

Unit: ms**Description:**

Displays the opening time for the motor holding brake.

The speed setpoint is kept at 0 for this time. The speed setpoint is then enabled.

Dependency:

See also: p1215, r1217

r1217[0]**Motor holding brake closing time****Data type:** FloatingPoint32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Motor holding brake

Unit: ms**Description:**

Displays the time to close the motor holding brake.

If the drive signals that the motor is at a standstill, if the holding brake is activated, after the closing time has expired, the pulses are canceled. This prevents the load from sagging, for example.

Dependency:

See also: p1215, r1216

p1226[0]	Threshold for zero speed detection		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor holding brake, Shutdown functions	
	Unit: rpm		
	Min:	Max:	Factory setting:
	0.00 [rpm]	210000.00 [rpm]	20.00 [rpm]
Description:	Sets the speed threshold for the standstill identification. The following applies when the motor holding brake is activated: The motor is shut down and held by the brake after the closing time for the brake in r1217 has elapsed. The following applies when the motor holding brake is not activated: The motor is shut down and it then coasts down.		
Dependency:	See also: p1215, r1216, r1217, p1227		
	Note In order that standstill is identified, the speed threshold in p1226 must be somewhat higher than the noise on the speed actual value signal.		
p1227[0]	Zero speed detection monitoring time		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor holding brake, Shutdown functions	
	Unit: s		
	Min:	Max:	Factory setting:
	0.000 [s]	300.000 [s]	4.000 [s]
Description:	Sets the monitoring time for the standstill identification. When braking with OFF1 or OFF3, standstill is detected after the monitoring time has expired, after the setpoint speed has fallen below p1226. After this, the brake control is started, the system waits for the closing time in r1217 and then the pulses are canceled.		
Dependency:	See also: p1215, r1216, r1217, p1226		
	Note Standstill is detected if at least one of the following conditions is satisfied: - The speed actual value falls below the speed threshold in p1226 and the time started after this in p1228 has expired. - The speed setpoint falls below the speed threshold in p1226 and the time started after this in p1227 has expired. For p1227 = 300.000 s the following applies: Monitoring is deactivated. For p1227 = 0.000 s, the following applies: With OFF1 or OFF3 and a ramp-down time = 0, the pulses are immediately suppressed and the motor "coasts" down.		

p1228[0]	Pulse cancellation delay time		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor holding brake, Shutdown functions	
	Unit: s		
	Min: 0.000 [s]	Max: 299.000 [s]	Factory setting: 0.000 [s]
Description:	Sets the delay time for pulse cancellation. After OFF1 or OFF3, the pulses are canceled, if at least one of the following conditions is fulfilled: - The speed actual value falls below the threshold in p1226 and the time started after this in p1228 has expired. - The speed setpoint falls below the threshold in p1226 and the time started after this in p1227 has expired.		
Dependency:	See also: p1226, p1227		

p1278[0]	Brake control diagnostics evaluation		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor holding brake	
	Unit: -		
	Min: 0	Max: 1	Factory setting: 0
Description:	Sets the brake control type (with or without diagnostics evaluation). Example for brake control with diagnostics evaluation. - brake control in the Motor Modules in booksize format - Safe Brake Relay for AC Drive Example for brake control without diagnostics evaluation. - Brake Relay for AC Drive		
Value:	0: Brake control with diagnostics evaluation 1: Brake control without diagnostics evaluation		

Note

If the configuration of the motor holding brake (p1215) is set to "no holding brake present" when booting, then an automatic identification of the motor holding brake will be carried out. If a brake control is detected without diagnostics evaluation (e.g. Brake Relay for AC Drive), then the parameter is set to "brake control without diagnostics evaluation". It is not permissible to parameterize "Brake control without diagnostic evaluation" and enable "SBC (Safe Brake Control)" (p1278 = 1, p9603 > 0, p9604 bit1 = 1).

p1414[0].0...1	Speed setpoint filter activation		
	Data type: Unsigned16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed setpoint filter	
	Unit: -		

	Min:	Max:	Factory setting:	
	-	-	0001 bin	
Description:	Setting for activating/deactivating the speed setpoint filter.			
Recommendation:	If only one filter is required, filter 1 should be activated and filter 2 deactivated, to avoid excessive processing time.			
Bit array:	Bit	Signal name	1 signal	0 signal
	00	Activate filter 1	Yes	No
	01	Activate filter 2	Yes	No
Dependency:	The individual speed setpoint filters are parameterized from p1415.			

p1415[0]	Speed setpoint filter 1 type			
	Data type: Integer16	Visible in: Extended display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Can be changed in the operating state:	Operation, Ready for operation		
	Parameter group:	Speed setpoint filter		
	Unit: -			
	Min:	Max:	Factory setting:	
	0	2	0	
Description:	Sets the type for speed setpoint filter 1.			
Value:	0:	Low pass: PT1		
	1:	Low pass: PT2		
	2:	General 2nd order filter		
Dependency:	PT1 low pass: p1416 PT2 low pass: p1417, p1418 General filter: p1417 ... p1420			

p1416[0]	Speed setpoint filter 1 time constant			
	Data type: FloatingPoint32	Visible in: Extended display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Can be changed in the operating state:	Operation, Ready for operation		
	Parameter group:	Speed setpoint filter		
	Unit: ms			
	Min:	Max:	Factory setting:	
	0.00 [ms]	5000.00 [ms]	0.00 [ms]	
Description:	Sets the time constant for the speed setpoint filter (PT1).			
Dependency:	See also: p1414, p1415			

Note

The speed setpoint filter is activated with a time constant greater than zero.

p1417[0] Speed setpoint filter 1 denominator natural frequency

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: Hz		
Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 2000.0 [Hz]

Description: Sets the denominator natural frequency for speed setpoint filter 1 (PT2, general filter).

Dependency: See also: p1414, p1415

Note

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.
The filter is only effective if the natural frequency is less than half of the sampling frequency.

p1418[0] Speed setpoint filter 1 denominator damping

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: -		
Min: 0.001	Max: 10.000	Factory setting: 0.700

Description: Sets the denominator damping for speed setpoint filter 1 (PT2, general filter).

Dependency: See also: p1414, p1415

Note

This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.

p1419[0] Speed setpoint filter 1 numerator natural frequency

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: Hz		
Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 2000.0 [Hz]

Description: Sets the numerator natural frequency for speed setpoint filter 1 (general filter).

Dependency: See also: p1414, p1415

Note

This parameter is only effective if the speed filter is set as a general filter.
The filter is only effective if the natural frequency is less than half of the sampling frequency.

p1420[0]	Speed setpoint filter 1 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed setpoint filter	
	Unit: -		
	Min: 0.000	Max: 10.000	Factory setting: 0.700
Description:	Sets the numerator damping for speed setpoint filter 1 (general filter).		
Dependency:	See also: p1414, p1415		
	Note This parameter is only effective if the speed filter is set as a general filter.		
p1421[0]	Speed setpoint filter 2 type		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed setpoint filter	
	Unit: -		
	Min: 0	Max: 2	Factory setting: 0
Description:	Sets the type for speed setpoint filter 2.		
Value:	0: Low pass: PT1 1: Low pass: PT2 2: General 2nd order filter		
Dependency:	PT1 low pass: p1422 PT2 low pass: p1423, p1424 General filter: p1423 ... p1426		
p1422[0]	Speed setpoint filter 2 time constant		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed setpoint filter	
	Unit: ms		
	Min: 0.00 [ms]	Max: 5000.00 [ms]	Factory setting: 0.00 [ms]
Description:	Sets the time constant for the speed setpoint filter 2 (PT1).		
Dependency:	See also: p1414, p1421		
	Note This parameter is only effective if the speed filter is set as a PT1 low pass.		

17.2 List of parameters

p1423[0] **Speed setpoint filter 2 denominator natural frequency**

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: Hz		
Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 2000.0 [Hz]

Description: Sets the denominator natural frequency for speed setpoint filter 2 (PT2, general filter).
Dependency: See also: p1414, p1421

Note
This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.
The filter is only effective if the natural frequency is less than half of the sampling frequency.

p1424[0] **Speed setpoint filter 2 denominator damping**

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: -		
Min: 0.001	Max: 10.000	Factory setting: 0.700

Description: Sets the denominator damping for speed setpoint filter 2 (PT2, general filter).
Dependency: See also: p1414, p1421

Note
This parameter is only effective if the speed filter is parameterized as a PT2 low pass or as general filter.

p1425[0] **Speed setpoint filter 2 numerator natural frequency**

Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Speed setpoint filter	
Unit: Hz		
Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 2000.0 [Hz]

Description: Sets the numerator natural frequency for speed setpoint filter 2 (general filter).
Dependency: See also: p1414, p1421

Note
This parameter is only effective if the speed filter is set as a general filter.
The filter is only effective if the natural frequency is less than half of the sampling frequency.

p1426[0]	Speed setpoint filter 2 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed setpoint filter	
	Unit: -		
	Min: 0.000	Max: 10.000	Factory setting: 0.700
Description:	Sets the numerator damping for speed setpoint filter 2 (general filter).		
Dependency:	See also: p1414, p1421		
	Note This parameter is only effective if the speed filter is set as a general filter.		
p1433[0]	Speed controller reference model natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed controller	
	Unit: Hz		
	Min: 0.0 [Hz]	Max: 8000.0 [Hz]	Factory setting: 0.0 [Hz]
Description:	Sets the natural frequency of a PT2 element for the reference model of the speed controller.		
Recommendation:	The reference model is finely set using p1433.		
r1438	Speed controller speed setpoint		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	U/f control, Speed controller	
	Unit: rpm		
Description:	Displays the speed setpoint after setpoint limiting for the P component of the speed controller.		
p1441[0]	Actual speed smoothing time		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed controller	
	Unit: ms		
	Min: 0.00 [ms]	Max: 50.00 [ms]	Factory setting: 0.00 [ms]
Description:	Sets the smoothing time constant (PT1) for the speed actual value.		
Dependency:	See also: r0063		

17.2 List of parameters

p1460[0]	Speed controller P gain		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed controller	
	Unit: Nms/rad		
	Min: 0.0000 [Nms/rad]	Max: 500000000.0000 [Nms/rad]	Factory setting: 0.3000 [Nms/rad]
Description:	Sets the P gain of the speed controller. The drive determines the P gain for One Button Tuning and writes the value to p1460. The value can be changed.		
Dependency:	See also: p1462		
	Note The higher the set P gain, the faster and more unstable the control.		

p1462[0]	Speed controller integral time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed controller	
	Unit: ms		
	Min: 0.00 [ms]	Max: 100000.00 [ms]	Factory setting: 10.00 [ms]
Description:	Sets the integral time for the speed controller The drive determines the integral time for One Button Tuning - and writes the value to p1462.		
Dependency:	See also: p1460		
	Note The shorter the integral time, the faster and more unstable the control.		

p1498[0]	Load moment of inertia		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Speed controller	
	Unit: kgm ²		
	Min: - [kgm ²]	Max: - [kgm ²]	Factory setting: - [kgm ²]
Description:	Sets the load moment of inertia. The setting is made during commissioning while the One Button Tuning is being performed.		

p1520[0]	Torque limit upper	
Data type: FloatingPoint32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Torque limiting	
Unit: Nm		
Min: -1000000.00 [Nm]	Max: 20000000.00 [Nm]	Factory setting: 0.00 [Nm]
Description:	Setting the upper torque limit. This setting is made as part of the basic commissioning.	
Dependency:	See also: p1521, p1532, r1538, r1539	

p1521[0]	Torque limit lower	
Data type: FloatingPoint32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Torque limiting	
Unit: Nm		
Min: -20000000.00 [Nm]	Max: 1000000.00 [Nm]	Factory setting: 0.00 [Nm]
Description:	Sets the lower torque limit This setting is made as part of the basic commissioning.	
Dependency:	See also: p1520, p1532, r1538, r1539	

p1532[0]	Torque limit offset	
Data type: FloatingPoint32	Visible in: Extended display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:	Torque limiting	
Unit: Nm		
Min: -100000.00 [Nm]	Max: 100000.00 [Nm]	Factory setting: 0.00 [Nm]
Description:	Sets the offset for the torque limit. The setting allows electronic weight equalization to be used for vertical axes. Parameters p1520 and p1521 are offset by the set value in the same direction.	
Dependency:	See also: p1520, p1521	

 DANGER

If the offset is set higher/lower than the lower/upper torque limit, then the unloaded drive can accelerate up to the maximum speed.
--

17.2 List of parameters

r1538	Upper effective torque limit		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Torque limiting	
	Unit: Nm		
Description:	Displays the currently effective upper torque limit.		
	Note		
	The value in r1538 may not exceed the value in p1520.		
r1539	Lower effective torque limit		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Torque limiting	
	Unit: Nm		
Description:	Displays the currently effective lower torque limit.		
	Note		
	The value in r1539 may not exceed the value in p1521.		
p1558	Measure/precontrol hanging/suspended axis force due to weight		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Motor data identification routine	
	Unit: -		
	Min:	Max:	Factory setting:
	-1	1	0
Description:	Setting to start/reset the measurement of the force due to weight for a hanging/suspended axis. The measurement can be started when the pulses are inhibited or the pulses are enabled (p1558 = 1). If it was started when the pulses were inhibited, then it is only executed after the pulses have been enabled. In both cases, alarm A07991 is output after starting. For the measurement, the torque to hold the axis is determined and entered into p1532. Further, this value is used internally for the precontrol.		
Value:	-1: Reset values 0: Inactive 1: Start measurement and activate precontrol		
Dependency:	The pulse enable is withdrawn at the end of the measurement. See also: p1532		
	Note		
	For master control with speed setpoint input from the commissioning tool, the torque precontrol channels are deactivated, so that the weight equalization entered here is not active.		

r1651	Torque setpoint function generator		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Current setpoint filter	
	Unit: Nm		
Description:	Displays the torque setpoint of the function generator.		

p1656[0].0...3	Activates current setpoint filter		
	Data type: Unsigned16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	-	-	0001 bin
Description:	Setting for activating/de-activating the current setpoint filter.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Filter 1	Active Inactive
	01	Filter 2	Active Inactive
	02	Filter 3	Active Inactive
	03	Filter 4	Active Inactive
Dependency:	The individual current setpoint filters are parameterized as of p1657.		
	Note		
	If not all of the filters are required, then the filters should be used consecutively starting from filter 1.		

p1657[0]	Current setpoint filter 1 type		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	1	2	1
Description:	Sets the current setpoint filter 1 as low pass (PT2) or general 2nd-order filter.		
Value:	1:	PT2 low pass	
	2:	General 2nd order filter	
Dependency:	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		
	Note		
	For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed.		
	The denominator damping can be determined from the equation for the 3 dB bandwidth:		
	$f_{3dB} \text{ bandwidth} = 2 * D_{denominator} * f_{bandstop} \text{ frequency}$		

p1658[0]	Current setpoint filter 1 denominator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		
	Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 1999.0 [Hz]
Description:	Sets the denominator natural frequency for current setpoint filter 1 (PT2, general filter).		
Dependency:	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		

p1659[0]	Current setpoint filter 1 denominator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min: 0.001	Max: 10.000	Factory setting: 0.700
Description:	Sets the denominator damping for current setpoint filter 1.		
Dependency:	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		

p1660[0]	Current setpoint filter 1 numerator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		
	Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 1999.0 [Hz]
Description:	Sets the numerator natural frequency for current setpoint filter 1 (general filter).		
Dependency:	The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.		

p1661[0]	Current setpoint filter 1 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min: 0.000	Max: 10.000	Factory setting: 0.700

Description: Sets the numerator damping for current setpoint filter 1.
Dependency: The current setpoint filter 1 is activated via p1656.0 and parameterized via p1657 ... p1661.

p1662[0]**Current setpoint filter 2 type**

Data type: Integer16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Current setpoint filter
Unit: -
Min: **Max:** **Factory setting:**
1 2 1

Description: Sets current setpoint filter 2 as lowpass filter (PT2) or general 2nd order filter.

Value:
1: PT2 low pass
2: General 2nd order filter

Dependency: Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.

Note

For a general 2nd order filter, by inserting the same natural frequency in both the numerator and in the denominator, i.e. bandstop frequency, a bandstop filter is implemented. If the numerator damping of zero is selected, the bandstop frequency is completely suppressed.

The denominator damping can be determined from the equation for the 3 dB bandwidth:

$$f_{3dB} \text{ bandwidth} = 2 * D_{denominator} * f_{bandstop} \text{ frequency}$$

p1663[0]**Current setpoint filter 2 denominator natural frequency**

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Current setpoint filter
Unit: Hz
Min: **Max:** **Factory setting:**
0.5 [Hz] 16000.0 [Hz] 1999.0 [Hz]

Description: Sets the denominator natural frequency for current setpoint filter 2 (PT2, general filter).

Dependency: Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.

p1664[0]**Current setpoint filter 2 denominator damping**

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation
Parameter group: Current setpoint filter
Unit: -
Min: **Max:** **Factory setting:**
0.001 10.000 0.700

Description: Sets the denominator damping for current setpoint filter 2.

Dependency: Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.

p1665[0]	Current setpoint filter 2 numerator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		
	Min: 0.5 [Hz]	Max: 16000.0 [Hz]	Factory setting: 1999.0 [Hz]
Description:	Sets the numerator natural frequency for current setpoint filter 2 (general filter).		
Dependency:	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

p1666[0]	Current setpoint filter 2 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min: 0.000	Max: 10.000	Factory setting: 0.700
Description:	Sets the numerator damping for current setpoint filter 2.		
Dependency:	Current setpoint filter 2 is activated via p1656.1 and parameterized via p1662 ... p1666.		

p1667[0]	Current setpoint filter 3 type		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min: 1	Max: 2	Factory setting: 1
Description:	Sets current setpoint filter 3 as lowpass filter (PT2) or general 2nd order filter.		
Value:	1: PT2 low pass 2: General 2nd order filter		
Dependency:	Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.		

p1668[0]	Current setpoint filter 3 denominator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		

	Min:	Max:	Factory setting:
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
Description:	Sets the denominator natural frequency for current setpoint filter 3 (PT2, general filter).		
Dependency:	Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.		

p1669[0]	Current setpoint filter 3 denominator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	0.001	10.000	0.700
Description:	Sets the denominator damping for current setpoint filter 3.		
Dependency:	Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.		

p1670[0]	Current setpoint filter 3 numerator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		
	Min:	Max:	Factory setting:
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
Description:	Sets the numerator natural frequency for current setpoint filter 3 (general filter).		
Dependency:	Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.		

p1671[0]	Current setpoint filter 3 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	0.000	10.000	0.700
Description:	Sets the numerator damping for current setpoint filter 3.		
Dependency:	Current setpoint filter 3 is activated via p1656.2 and parameterized via p1667 ... p1671.		

p1672[0]	Current setpoint filter 4 type		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	1	2	1
Description:	Sets current setpoint filter 4 as lowpass filter (PT2) or general 2nd order filter.		
Value:	1: PT2 low pass		
	2: General 2nd order filter		
Dependency:	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

p1673[0]	Current setpoint filter 4 denominator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		
	Min:	Max:	Factory setting:
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
Description:	Sets the denominator natural frequency for current setpoint filter 4 (PT2, general filter).		
Dependency:	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

p1674[0]	Current setpoint filter 4 denominator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	0.001	10.000	0.700
Description:	Sets the denominator damping for current setpoint filter 4.		
Dependency:	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

p1675[0]	Current setpoint filter 4 numerator natural frequency		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: Hz		

	Min:	Max:	Factory setting:
	0.5 [Hz]	16000.0 [Hz]	1999.0 [Hz]
Description:	Sets the numerator natural frequency for current setpoint filter 4 (general filter).		
Dependency:	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

p1676[0]	Current setpoint filter 4 numerator damping		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current setpoint filter	
	Unit: -		
	Min:	Max:	Factory setting:
	0.000	10.000	0.700
Description:	Sets the numerator damping for current setpoint filter 4.		
Dependency:	Current setpoint filter 4 is activated via p1656.3 and parameterized via p1672 ... p1676.		

p1703[0]	Isq current controller precontrol scaling		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Current controller	
	Unit: %		
	Min:	Max:	Factory setting:
	0.0 [%]	200.0 [%]	0.0 [%]
Description:	Sets the scaling of the dynamic current controller precontrol for the torque-generating current component Isq.		

p1821[0]	Direction of rotation		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Commissioning	
	Parameter group:	Motor data	
	Unit: -		
	Min:	Max:	Factory setting:
	0	1	0
Description:	Setting to change the direction of rotation. If the parameter is changed, it reverses the direction of rotation of the motor and the encoder actual value without changing the setpoint.		
Value:	0: Clockwise 1: Counterclockwise		
Dependency:	See also: F07434		

NOTICE

After changing parameter p1821, the direction of rotation is not automatically adapted in the safety area.

p2000	Reference speed		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Ready for operation	
	Parameter group:	Reference variables	
	Unit: rpm		
	Min: 6.00 [rpm]	Max: 210000.00 [rpm]	Factory setting: 3000.00 [rpm]
Description:	Sets the reference quantity for the speed values. All speeds specified as relative values refer to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
Dependency:	See also: p2003		

p2002	Reference current		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Ready for operation	
	Parameter group:	Reference variables	
	Unit: Arms		
	Min: 0.10 [Arms]	Max: 100000.00 [Arms]	Factory setting: 100.00 [Arms]
Description:	Sets the reference quantity for currents. All currents specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
	Note Default value is 2 * r0305 or the motor current limit.		

p2003	Reference torque		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Ready for operation	
	Parameter group:	Reference variables	
	Unit: Nm		
	Min: 0.01 [Nm]	Max: 20000000.00 [Nm]	Factory setting: 1.00 [Nm]
Description:	Sets the reference quantity for the torque values. All torques specified as relative value are referred to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		

r2043.0...2	PROFIdrive PZD state		
	Data type: Unsigned8	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Configuration	
	Unit: -		
Description:	Displays the PROFIdrive PZD state.		
Bit array:	Bit	Signal name	1 signal
	00	Setpoint failure	Yes
	01	Isochronous operation active	Yes
	02	Fieldbus running	Yes
			0 signal
			No
			No
			No
	Note		
	When using the "setpoint failure" signal, the bus can be monitored and an application-specific response triggered when the setpoint fails.		
r2050[0...21]	PROFIdrive PZD receive word		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Receive direction	
	Unit: -		
Description:	Displays the PZD (setpoints) in the word format received from the fieldbus controller.		
Index:	[0] = PZD 1		
	[1] = PZD 2		
	[2] = PZD 3		
	[3] = PZD 4		
	[4] = PZD 5		
	[5] = PZD 6		
	[6] = PZD 7		
	[7] = PZD 8		
	[8] = PZD 9		
	[9] = PZD 10		
	[10] = PZD 11		
	[11] = PZD 12		
	[12] = PZD 13		
	[13] = PZD 14		
	[14] = PZD 15		
	[15] = PZD 16		
	[16] = PZD 17		
	[17] = PZD 18		
	[18] = PZD 19		
	[19] = PZD 20		
	[20] = PZD 21		
	[21] = PZD 22		
Dependency:	See also: r2060		

r2053[0...27]	PROFIdrive PZD send word
	Data type: Unsigned16 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Parameter group: Send direction
	Unit: -
Description:	Displays the PZD (actual values) in the word format that are sent to the fieldbus controller.
Index:	[0] = PZD 1 [1] = PZD 2 [2] = PZD 3 [3] = PZD 4 [4] = PZD 5 [5] = PZD 6 [6] = PZD 7 [7] = PZD 8 [8] = PZD 9 [9] = PZD 10 [10] = PZD 11 [11] = PZD 12 [12] = PZD 13 [13] = PZD 14 [14] = PZD 15 [15] = PZD 16 [16] = PZD 17 [17] = PZD 18 [18] = PZD 19 [19] = PZD 20 [20] = PZD 21 [21] = PZD 22 [22] = PZD 23 [23] = PZD 24 [24] = PZD 25 [25] = PZD 26 [26] = PZD 27 [27] = PZD 28

r2060[0...20]	PROFIdrive PZD receive double word
	Data type: Integer32 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Parameter group: Receive direction
	Unit: -
Description:	Displays the PZD (setpoints) in the double word format received from the fieldbus controller.

Index:	[0] = PZD 1 + 2
	[1] = PZD 2 + 3
	[2] = PZD 3 + 4
	[3] = PZD 4 + 5
	[4] = PZD 5 + 6
	[5] = PZD 6 + 7
	[6] = PZD 7 + 8
	[7] = PZD 8 + 9
	[8] = PZD 9 + 10
	[9] = PZD 10 + 11
	[10] = PZD 11 + 12
	[11] = PZD 12 + 13
	[12] = PZD 13 + 14
	[13] = PZD 14 + 15
	[14] = PZD 15 + 16
	[15] = PZD 16 + 17
	[16] = PZD 17 + 18
	[17] = PZD 18 + 19
	[18] = PZD 19 + 20
	[19] = PZD 20 + 21
	[20] = PZD 21 + 22

Dependency: See also: r2050

r2063[0...26]

PROFIdrive PZD send double word

Data type: Unsigned32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Send direction

Unit: -

Description:

Displays the PZD (actual values) in the double word format that are sent to the fieldbus controller.

17.2 List of parameters

- Index:**
- [0] = PZD 1 + 2
 - [1] = PZD 2 + 3
 - [2] = PZD 3 + 4
 - [3] = PZD 4 + 5
 - [4] = PZD 5 + 6
 - [5] = PZD 6 + 7
 - [6] = PZD 7 + 8
 - [7] = PZD 8 + 9
 - [8] = PZD 9 + 10
 - [9] = PZD 10 + 11
 - [10] = PZD 11 + 12
 - [11] = PZD 12 + 13
 - [12] = PZD 13 + 14
 - [13] = PZD 14 + 15
 - [14] = PZD 15 + 16
 - [15] = PZD 16 + 17
 - [16] = PZD 17 + 18
 - [17] = PZD 18 + 19
 - [18] = PZD 19 + 20
 - [19] = PZD 20 + 21
 - [20] = PZD 21 + 22
 - [21] = PZD 22 + 23
 - [22] = PZD 23 + 24
 - [23] = PZD 24 + 25
 - [24] = PZD 25 + 26
 - [25] = PZD 26 + 27
 - [26] = PZD 27 + 28

NOTICE
A maximum of 4 indices of the "trace" function can be used.

r2109[0...63] Fault removed in milliseconds

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: ms

Description: Displays the time in milliseconds referred to the day that the fault was removed.

Dependency: See also: r0945, r0947, r0948, r0949, r2114, r2130, r2133, r2136

NOTICE
The time comprises r2136 (days) and r2109 (milliseconds).

Note
The buffer parameters are cyclically updated in the background.
The structure of the fault buffer and the assignment of the indices is shown in r0945.

r2111	Alarm counter	Data type: Unsigned16	Visible in: Extended display
		Read permission:	Read drive data or acknowledge messages
		Write permission:	Edit device configuration or drive applications
		Parameter group:	Faults / alarms
		Unit: -	
Description:	Number of alarms that have occurred.		
Dependency:	See also: r2122, r2123, r2124, r2125		
	Note	The parameter is reset to 0 at POWER ON.	
r2114[0...1]	System runtime total	Data type: Unsigned32	Visible in: Standard display
		Read permission:	Read drive data or acknowledge messages
		Write permission:	Edit device configuration or drive applications
		Parameter group:	Diagnostics general
		Unit: -	
Description:	Displays the total system runtime of the converter. The time comprises r2114[0] (milliseconds) and r2114[1] (days). After r2114[0] has reached a value of 86.400.000 ms (24 hours) this value is reset and r2114[1] is incremented.		
Index:	[0] = Milliseconds [1] = Days		
	Note	The counter values are saved when the power supply is switched off. After the converter is switched on, the counter continues to run with the last value that was saved.	
r2121	Counter alarm buffer changes	Data type: Unsigned16	Visible in: Extended display
		Read permission:	Read drive data or acknowledge messages
		Write permission:	Edit device configuration or drive applications
		Parameter group:	Faults / alarms
		Unit: -	
Description:	This counter is incremented every time the alarm buffer changes.		
Dependency:	See also: r2122, r2123, r2124, r2125		
r2122[0...63]	Alarm number	Data type: Unsigned16	Visible in: Extended display
		Read permission:	Read drive data or acknowledge messages
		Write permission:	Edit device configuration or drive applications
		Parameter group:	Faults / alarms
		Unit: -	
Description:	Displays the numbers of the last 64 alarms.		
Dependency:	See also: r2123, r2124, r2125, r2134, r2145, r2146		
	NOTICE		
	The properties of the alarm buffer should be taken from the corresponding product documentation.		

17.2 List of parameters

Note

The buffer parameters are cyclically updated in the background.

Alarm buffer structure (general principle):

Currently active alarms (not gone):

r2122[0], r2124[0], r2123[0], r2125[0] --> alarm 1 (the oldest)

...

r2122[7], r2124[7], r2123[7], r2125[7] --> Alarm 8 (the latest)

History of alarms that have gone:

r2122[8], r2124[8], r2123[8], r2125[8] --> Alarm 1 (the latest)

...

r2122[63], r2124[63], r2123[63], r2125[63] --> alarm 56 (the oldest)

r2123[0...63]

Alarm received in milliseconds

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: ms

Description:

Displays the time in milliseconds referred to the day that the alarm occurred.

Dependency:

See also: r2114, r2122, r2124, r2125, r2134, r2145, r2146

NOTICE

The time comprises r2145 (days) and r2123 (milliseconds).

Note

The buffer parameters are cyclically updated in the background.

The structure of the alarm buffer and the assignment of the indices is shown in r2122.

r2124[0...63]

Alarm value

Data type: Integer32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: -

Description:

Displays additional information about the active alarm (as integer number).

Dependency:

See also: r2122, r2123, r2125, r2134, r2145, r2146

Note

The buffer parameters are cyclically updated in the background.

The structure of the alarm buffer and the assignment of the indices are shown in r2122.

r2125[0...63]

Alarm removed in milliseconds

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: ms

Description:

Displays the time in milliseconds referred to the day that the alarm was removed.

Dependency:

See also: r2114, r2122, r2123, r2124, r2134, r2145, r2146

NOTICE

The time comprises r2146 (days) and r2125 (milliseconds).

Note

The buffer parameters are cyclically updated in the background.
The structure of the alarm buffer and the assignment of the indices is shown in r2122.

r2130[0...63]**Fault received in days**

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the time in days referred to the day that the fault occurred.

Dependency: See also: r0945, r0947, r0948, r0949, r2109, r2114, r2133, r2136

NOTICE
The time comprises r2130 (days) and r0948 (milliseconds).

Note

The buffer parameters are cyclically updated in the background.

r2131**Actual fault number**

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the number of the active fault that last occurred.

Note

0: No fault present.

r2132**Actual alarm number**

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the number of the alarm that last occurred.

Note

0: No alarm present.

r2133[0...63]**Fault value for float values**

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the additional information about the fault that occurred for float values.
Refer to the fault for the interpretation of the fault value.

Dependency: See also: r0945, r0947, r0948, r0949, r2109, r2130, r2136

17.2 List of parameters

Note
The buffer parameters are cyclically updated in the background.

r2134[0...63] **Alarm value for float values**

Data type: FloatingPoint32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the additional information about the alarm that occurred for float values.
Refer to the alarm for an interpretation of the alarm value.

Dependency: See also: r2122, r2123, r2124, r2125, r2145, r2146

Note
The buffer parameters are cyclically updated in the background.

r2136[0...63] **Fault removed in days**

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Displays the time in days referred to the day when the fault was removed.

Dependency: See also: r0945, r0947, r0948, r0949, r2109, r2114, r2130, r2133

NOTICE
The time comprises r2136 (days) and r2109 (milliseconds).

Note
The buffer parameters are cyclically updated in the background.

r2139.0...15 **Status word faults/alarms**

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Faults / alarms
Unit: -

Description: Display and signal source for status word 1 of faults and alarms.

Bit array:

Bit	Signal name	1 signal	0 signal
00	Being acknowledged	Yes	No
01	Acknowledgment required	Yes	No
03	Fault present	Yes	No
05	Safety message present	Yes	No
07	Alarm present	Yes	No
11	Alarm class bit 0	High	Low
12	Alarm class bit 1	High	Low
13	Maintenance required	Yes	No
14	Maintenance urgently required	Yes	No
15	Fault gone/can be acknowledged	Yes	No

Note

For bit 03, 05, 07:

These bits are set if at least one fault/alarm or safety message occurs. The entry in the fault/alarm buffer or safety message buffer is delayed. This is the reason that the fault/alarm buffer or safety message buffer should only be read if, after "Fault active", "Alarm active" or "Safety message active" occurs, a change is also identified in the buffer (r0944, r2121, r60044).

For bits 11, 12:

These status bits are used for the classification of internal alarm classes and are intended for diagnostic purposes only on certain automation systems with integrated SINAMICS functionality.

r2145[0...63]**Alarm received in days**

Data type: Unsigned16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: -

Description:

Displays the time in days referred to the day that the alarm occurred.

Dependency:

See also: r2114, r2122, r2123, r2124, r2125, r2134, r2146

NOTICE

The time comprises r2145 (days) and r2123 (milliseconds).

Note

The buffer parameters are cyclically updated in the background.

r2146[0...63]**Alarm removed in days**

Data type: Unsigned16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Faults / alarms

Unit: -

Description:

Displays the time in days referred to the day when the alarm was removed.

Dependency:

See also: r2114, r2122, r2123, r2124, r2125, r2134, r2145

NOTICE

The time comprises r2146 (days) and r2125 (milliseconds).

Note

The buffer parameters are cyclically updated in the background.

p2175[0]**Motor blocked speed threshold**

Data type: FloatingPoint32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Can be changed in the operating state:

Operation, Ready for operation

Parameter group:

Speed messages

Unit: rpm

Min:

0.00 [rpm]

Max:

210000.00 [rpm]

Factory setting:

120.00 [rpm]

Description:

Sets the speed threshold for message "Motor blocked".
Monitoring is deactivated with p2175 = 0.

Dependency:

See also: F07900

17.2 List of parameters

Note

If the motor speed is less than the threshold value set in p2175 - and the motor is operated for longer than 200 ms at the torque limit - then the motor is shut down and a fault is output.

p3117

Change safety message type

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Commissioning state, device
Parameter group: Safety Integrated, Faults / alarms
Unit: -
Min: **Max:** **Factory setting:**
0 1 0

Description: Sets the re-parameterization of all safety messages for faults and alarms.
The relevant message type during changeover is selected by the firmware.
0: Safety messages are not reparameterized (safety message buffer)
1: Safety messages are reparameterized (no safety message buffer)

Note

When online safety commissioning has been completed, a change results in an automatic restart.

p3941[0]

Motor code number 2

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Commissioning
Parameter group: Motor data, Quick commissioning
Unit: -
Min: **Max:** **Factory setting:**
0 99999999 0

Description: Second motor code number.
Dependency: See also: p0301

r3988

Final boot state

Data type: Integer16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: System identification
Unit: -

Description: Displays the final boot states.
001 - Software error
200 - Carry out first commissioning
250 - topology error (check the connected hardware)
800 - Ready
The following options are available to reach the "Ready" state:
- Check the project and load again.
- Restore factory setting.
- Check the hardware.
- Carry out a POWER ON (switch-off/switch-on).

p5271[0].3...7	One Button Tuning configuration 1			
	Data type: Unsigned16	Visible in: Extended display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Can be changed in the operating state:	Ready for operation		
	Parameter group:			
	Unit: -			
	Min:	Max:	Factory setting:	
	-	-	0001 1100 bin	
Description:	Sets the configuration for One Button Tuning.			
Bit array:	Bit	Signal name	1 signal	0 signal
	03	Setting the speed precontrol	Yes	No
	04	Setting the torque precontrol	Yes	No
	07	Setting the voltage precontrol	Yes	No
Dependency:	See also: r5274			
	Note			
	For bit 03: Activation of speed precontrol.			
	For bit 04: Activation of speed/torque precontrol in the drive.			
	For bit 07: Activation of the voltage precontrol.			

r5274	One Button Tuning dynamic response estimated			
	Data type: FloatingPoint32	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Parameter group:			
	Unit: ms			
Description:	Displays the estimated dynamic response of the speed control loop as PT1 time constant for One Button Tuning. The lower the time constant, the higher the dynamic performance.			
Dependency:	See also: p5271			

r5276[0]	One Button Tuning Kv factor estimated			
	Data type: FloatingPoint32	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit device configuration or drive applications		
	Parameter group:			
	Unit: 1000 rpm			
Description:	Displays the estimated position controller gain (Kv factor) for One Button Tuning.			
Dependency:	See also: p5271			
	Note			
	The value for the closed-loop position control is required by a higher-level control system.			

r5277[0]	One Button Tuning precontrol symmetrizing time estimated
Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	
Unit: ms	
Description:	Displays the estimated precontrol symmetrizing time for One Button Tuning. This is required to symmetrize the position controller if the closed-loop position control is in an external control system.
Dependency:	See also: p5271

p5291.0...16	FFT tuning configuration
Data type: Unsigned32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Can be changed in the operating state:	Operation, Ready for operation
Parameter group:	
Unit: -	
Min:	Max:
-	-
	Factory setting:
	0000 0000 0000 0000 0000 0000 0011 1001 bin

Description: Sets the configuration for the "FFT tuning" function.
This function is used for One Button Tuning (p5300 = 1).

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Noise excitation after pulse enable	Yes	No
	01	Set current setpoint filter (HF)	Yes	No
	02	Set speed controller gain (HF)	Yes	No
	03	Length of FFT window bit 0 (LF, HF)	Yes	No
	04	Length of FFT window bit 1 (LF, HF)	Yes	No
	05	Windowing the time signals using a Hamming window (LF, HF)	Yes	No
	06	Measure current controller	Yes	No
	07	Bandwidth bit 0 (LF)	Yes	No
	08	Bandwidth bit 1 (LF)	Yes	No
	09	Bandwidth bit 2 (LF)	Yes	No
	10	Measuring periods bit 0	Yes	No
	11	Measuring periods bit 1	Yes	No
	12	Inject noise onto speed setpoint	Yes	No
	13	Do not reduce Kp for measurement	Yes	No
	14	Set the current setpoint filter with loop compensation	Yes	No
	16	Torque in front of the current setpoint filter	Yes	No

Dependency: See also: r5293, p5296

Note

HF: high frequency

LF: low frequency

For bit 00:

A PRBS signal (pseudo random binary signal) is superimposed on the current setpoint to be able to better identify the mechanical controlled system.

For bit 01:

The identified mechanical resonance points are suppressed using current setpoint filters.

For bit 02:

The maximum speed controller gain is determined from the identified mechanical controlled system.

For bits 03, 04:

The measured value buffer length is set using these bits:

Bit 04 = 0 and bit 03 = 0 -> buffer length = 256

Bit 04 = 0 and bit 03 = 1 -> buffer length = 512

Bit 04 = 1 and bit 03 = 0 -> buffer length = 1024

Bit 04 = 1 and bit 03 = 1 -> buffer length = 2048

For bit 05:

A Hamming window is used to filter the measured time signals.

For bit 06:

The measurement checks the current controller frequency response and this is taken into account in the speed controller loop.

For bits 07, 08, 09:

The measurement bandwidth is set using these bits:

Bit 09 = 0, bit 08 = 0, bit 07 = 0 -> bandwidth = 50 Hz

Bit 09 = 0, bit 08 = 0, bit 07 = 1 -> bandwidth = 100 Hz

Bit 09 = 0, bit 08 = 1, bit 07 = 0 -> bandwidth = 200 Hz

Bit 09 = 0, bit 08 = 1, bit 07 = 1 -> bandwidth = 400 Hz

Bit 09 = 1, bit 08 = 0, bit 07 = 0 -> bandwidth = 800 Hz

Bit 09 = 1, bit 08 = 0, bit 07 = 1 -> bandwidth = 1600 Hz

For bits 10, 11:

Number of measuring periods.

Bit 11 = 0 and bit 10 = 0 -> number of measurements = 1

Bit 11 = 0 and bit 10 = 1 -> number of measurements = 2

Bit 11 = 1 and bit 10 = 0 -> number of measurements = 4

Bit 11 = 1 and bit 10 = 1 -> number of measurements = 8

For bit 12:

The PRBS signal is switched to the speed setpoint (in front of the filter).

For bit 13:

The input signal for the torque actual value is taken from in front of the current setpoints filters.

For bit 14:

When the bit is set, a current setpoint filter is used to partially compensate the mechanical system.

This is recommended for the following machine attributes:

- The load moment of inertia is significantly higher than the motor moment of inertia (e.g. > 6x).

- The coupling between the machine elements has almost no backlash (no play).

- The stiffness of the mechanical transmission elements does not change significantly in the traversing range.

p5292**Controller optimization dynamic factor**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Can be changed in the operating state: Operation, Ready for operation

Parameter group:

Unit: %

17.2 List of parameters

	Min: 25.0 [%]	Max: 125.0 [%]	Factory setting: 80.0 [%]
Description:	Sets the dynamic factor for optimizing the speed controller when One Button Tuning is activated (p5300 = 1).		
Dependency:	The higher the value in p5292, the lower the value in r5274. See also: p5291		

Note

The higher the dynamic factor, the faster and more unstable the control.

r5293**FFT tuning speed controller P gain identified**

Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	
Unit: Nms/rad	

Description:	Displays the determined proportional gain Kp of the speed controller before FFT tuning. This function is used for One Button Tuning (p5300 = 1).
Dependency:	See also: p5291

p5296[0...2]**Controller optimization noise amplitude**

Data type: FloatingPoint32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Operation, Ready for operation	
Parameter group:		
Unit: %		
Min: 1.0 [%]	Max: 300.0 [%]	Factory setting: [0] 10.0 [%] [1] 30.0 [%] [2] 5.0 [%]

Description:	The drive determines the noise amplitude for One Button Tuning and writes the value to p5296.
Dependency:	See also: p5291

p5300[0]**One Button Tuning selection**

Data type: Integer16	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit device configuration or drive applications	
Can be changed in the operating state:	Ready for operation	
Parameter group:		
Unit: -		
Min: -1	Max: 1	Factory setting: 0

Description:	Setting to activate/deactivate the One Button Tuning function. For p5300 = 1: The One Button Tuning function is configured using p5271 and p5301.
---------------------	---

Value:	-1: Reset controller parameters
	0: Inactive
	1: One Button Tuning

Dependency:	<p>The motor must have already been commissioned so that One Button Tuning functions perfectly.</p> <p>The One Button Tuning function is configured using p5271 and p5301.</p> <p>The required dynamic performance of the control loop is set in p5292.</p> <p>The traversing path for the test signal is parameterized in p5308.</p> <p>See also: p5271, r5274, p5292, r5293, p5296, p5301, p5308, p5309</p>
<hr/>	
Note	
For p5300 = -1:	
One Button Tuning is deactivated and p5300 is automatically set = 0. Further, the presetting values for the speed controller are restored.	
For p5300 = 0:	
To permanently save the values for the speed controller that have been determined, the parameters must be saved in a non-volatile memory.	
For p5300 = 1:	
One Button Tuning is active.	
The moment of inertia is determined once using a test signal. The controller parameters and current setpoint filters are additionally determined once using a noise signal as excitation source. The steps to be executed can be configured using p5301.	

p5301[0].0...8	One Button Tuning configuration 2		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:		
	Unit: -		
	Min:	Max:	Factory setting:
	-	-	0000 0000 0000 0111 bin
Description:	Setting the functions for One Button Tuning (p5300 = 1).		
	A test signal is required for some functions. To do this, observe parameters p5308 and p5309.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Setting the proportional gain Kp	Yes No
	01	Setting current setpoint filter	Yes No
	02	Estimate moment of inertia	Yes No
	08	Moment of inertia determination from frequency response	Yes No
Dependency:	It is only possible to change the configuration if One Button Tuning is not active (p5300 = 0).		
	See also: p5292, r5293, p5296, p5300, p5308, p5309		

Note

For bit 00:

The speed controller gain is determined and set using a noise signal.

For bit 01:

Possibly required current setpoint filters are determined and set using a noise signal.

As a consequence, a higher dynamic performance can be achieved in the speed control loop.

For bit 02:

Using this bit, the moment of inertia is determined using a test signal. If this bit is not set, then the load moment of inertia must be manually set using parameter p1498. The test signal must have been previously set using parameters p5308 and p5309.

For bit 08:

Using this bit, the moment of inertia is determined from the frequency characteristic using a test signal, and is transferred to p1498. The traversing path must first be set using parameter p5308.

r5306[0].0...14 One Button Tuning status

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications

Parameter group:

Unit: -

Description: Displays the status of the functions performed using One Button Tuning.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Proportional gain Kp set	Yes	No
	01	Current setpoint filter set	Yes	No
	02	Moment of inertia estimation carried out	Yes	No
	07	EPOS set	Yes	No
	13	One Button Tuning successfully completed	Yes	No
	14	Controller parameters reset due to fault	Yes	No

Dependency: See also: p5300, p5301

Note

For bit 00 = 1: The speed controller gain was set using One Button Tuning.
 For bit 01 = 1: The current setpoint filter was set using One Button Tuning
 For bit 02 = 1: The moment of inertia was determined.

p5308[0] One Button Tuning distance limiting

Data type: Integer32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Ready for operation

Parameter group:

Unit: °

Min:	Max:	Factory setting:
-30000 [°]	30000 [°]	0 [°]

Description: Setting the distance limiting (permissible traversing range of the motor).
 The traversing range is limited in the positive and negative directions.

Note

A value of 360 degrees corresponds to one motor revolution.
 The position before the pulse enable is used as zero point.

p5309[0] One Button Tuning duration

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Ready for operation

Parameter group:

Unit: ms

Min:	Max:	Factory setting:
0 [ms]	5000 [ms]	2000 [ms]

Description: Sets the duration for One Button Tuning (several acceleration operations)
 This function is used for One Button Tuning (p5300 = 1) to identify the total moment of inertia of the drive train.

Dependency: See also: F07093

Note

If, within this time, no setting values can be determined, then the drive is shut down with the corresponding fault.

p5375[0].0...1**Additional motor overload protection configuration**

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Operation, Ready for operation

Parameter group: Motor temperature

Unit: -

Min: **Max:** **Factory setting:**
- - 0000 bin

Description: Sets the configuration for additional motor overload protection.

Bit	Signal name	1 signal	0 signal
00	Activation of monitoring	Yes	No
01	Activation of speed dependency	Yes	No

Note

To comply with standard UL 61800-5-1 Ed. 2, bit 0 and bit 1 must be set.

These bits activate electronic motor overload protection according to IEC 61800-5-1 Ed. 3 / UL 61800-5-1 Ed. 2, with the emulation of an electronic overload relay, Class 20 and the speed sensitivity.

For bit 00:

This bit activates electronic motor overload protection with emulation of an electronic overload relay, Class 20.

For bit 01:

This bit activates the speed dependency of the electronic motor overload protection. Not active, if bit 00 is also set.

r5600**PROFenergy energy-saving mode ID**

Data type: Integer16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group:
Unit: -

Description: Displays the PROFenergy mode ID of the effective energy-saving mode.

Value:

0:	POWER OFF
2:	Energy-saving mode
240:	Operation
255:	Ready

p5611.0...2**PROFenergy energy-saving properties general**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Can be changed in the operating state: Ready for operation

Parameter group:

Unit: -

Min: **Max:** **Factory setting:**
- - 0000 bin

Description: Sets the general properties for energy-saving.

Bit	Signal name	1 signal	0 signal
-----	-------------	----------	----------

17.2 List of parameters

00	Inhibit PROFlenergy control commands	Yes	No
01	Drive initiates OFF1 when transitioning to energy-saving mode	Yes	No
02	Trans to energy-saving mode from PROFIdrive state S3/4 poss	Yes	No

Note

PROFlenergy is a profile for energy management in production systems.

PROFIdrive state S3: ready

PROFIdrive state S4: operation

r5613.0...1**PROFlenergy energy saving active/inactive**

Data type: Unsigned8

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Unit: -

Description:

Display and binary signal source for the state display PROFlenergy energy saving active or inactive.

Bit array:

Bit	Signal name	1 signal	0 signal
00	PROFlenergy active	Yes	No
01	PROFlenergy inactive	Yes	No

Note

Bit 0 and bit 1 are inverse of one another.

r8400[0...2]**Date**

Data type: Unsigned16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Diagnostics general

Unit: -

Description:

Displays the actual date in year, month and day.

Index:

[0] = Year (YYYY)

[1] = Month (1 ... 12)

[2] = Day (1 ... 31)

Note

The time in r8400 and r8401 is used to display the fault and alarm times.

Possible date/time setting:

- Web server (manually)

- NTP (Network Time Protocol)

When the converter is switched off, date/time are not updated. After power on the instant of the previous power off is valid.

r8401[0...2]**Time**

Data type: Unsigned16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Diagnostics general

Unit: -

Description:

Displays the current time in hours, minutes and seconds.

Index:

[0] = Hour (0 ... 23)

[1] = Minute (0 ... 59)

[2] = Second (0 ... 59)

Note

The time in r8400 and r8401 is used to display the fault and alarm times.

The time is displayed in the 24-hour format.

Possible date/time setting:

- Web server (manually)
- NTP (Network Time Protocol)

When the converter is switched off, date/time are not updated. After power on the instant of the previous power off is valid.

r8936[0...1]**PN cyclic connection state**

Data type: Integer16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Unit: -

Description:

Displays the status of the cyclic PROFINET connection.

Value:

- 0: Interrupted
- 1: Not connected
- 2: Connection starts to be established
- 3: Module information expected
- 4: Module information received
- 5: Module address expected
- 6: Module address received
- 7: Parameterization data expected
- 8: Parameterization data received
- 9: Evaluate parameterization data
- 10: Connection being established completion expected
- 11: Reserved
- 12: Configured controller STOP
- 13: Configured controller RUN

Index:

[0] = Controller 1

[1] = Controller 2

Dependency:

See also: r8961

Note

The parameter is active when the "PROFINET Device" protocol is selected.

For two connections (shared device) the display in the index depends on the sequence in which the connections are established.

For value = 10:

If the connection remains in this state, then when using PROFINET IRT the following can apply:

- topology error (incorrect port assignment).
- Synchronization missing.

r8937[0...5]**PN cyclic connection diagnostics**

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Unit: -

Description:

Display to diagnose the cyclic PROFINET connection.

17.2 List of parameters

Index: [0] = Number of cyclic connections
[1] = Number of send subslots of all connections
[2] = Number of send net data (bytes) of all connections
[3] = Number of receive subslots of all connections
[4] = Number of receive net data (bytes) of all connections
[5] = Connection type (RT, IRT)

Note

For index [5]:
Bit 0 = 1: there is at least one RT connection.
Bit 1 = 1: there is an IRT connection.

r8961[0...3]

PN controller IP address

Data type: Unsigned8 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Displays the IP address of the PROFINET controller.

Note

For a shared device, the IP address of the automation controller is displayed.

c8995[0...3]

Ethernet X127 enable

Data type: Unsigned8 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Signal to enable the Ethernet interface X127 for applications.

Index: [0] = Secure S7 Protocol Startdrive
[1] = Web server HTTPS
[2] = S7 Protocol PCS 7
[3] = Web server HTTP

Note

The parameter influences the access from applications.
1 signal:
Ethernet interface X127 is enabled for access.
0 signal:
Ethernet interface X127 is blocked and cannot be accessed.
The signal is not influenced by setting the factory setting.

c8997[0...2]

PROFINET X150 enable

Data type: Unsigned8 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Signal to enable PROFINET interface X150 for applications.

Index: [0] = Secure S7 Protocol Startdrive
[1] = Web server HTTPS
[2] = S7 Protocol PCS 7

Note

The parameter influences the access from applications.

1 signal:

PROFINET interface X150 is enabled for access.

0 signal:

PROFINET interface X150 is inhibited for access.

The signal is not influenced by setting the factory setting.

p9500**SI monitoring clock cycle**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Can be changed in the operating state:

Commissioning state, device

Parameter group:

Extended functions

Unit: ms

Min:

4.00000 [ms]

Max:

4.00000 [ms]

Factory setting:

4.00000 [ms]

Description:

Sets the monitoring clock cycle for safe motion monitoring.

Dependency:

See also: p9511

See also: C01652

Note

When online safety commissioning has been completed, a change results in an automatic restart.

The monitoring cycle must be a multiple of the actual value sensing cycle (p9511).

r9502**SI axis type**

Data type: Integer16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Parameter group:

Extended functions

Unit: -

Description:

Displays the axis type (linear axis or rotary axis/spindle).

Value:

0: Linear axis

1: Rotary axis/spindle

Note

The axis type is set in the commissioning tool.

Safety parameters with units that are dependent on the axis type change after switching over the axis type.

p9511**SI actual value sensing cycle**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Can be changed in the operating state:

Commissioning state, device

Parameter group:

Extended functions

Unit: ms

Min:

1.00000 [ms]

Max:

1.00000 [ms]

Factory setting:

1.00000 [ms]

17.2 List of parameters

Description: Sets the clock cycle time of the actual value sensing for safe motion monitoring. Setting criteria if the motion monitoring functions are executed with an encoder.
 - A slower cycle time reduces the maximum permissible speed; however, it ensures a lower system utilization level.
 - The maximum permissible velocity which, when exceeded, can mean that errors occur during safe actual value sensing, is displayed in r9730.

Dependency: See also: C01652

Note

The monitoring clock cycle from p9500 must be an integer multiple of this parameter.
 For motion monitoring functions with encoder, the cycle time of the actual value sensing must be an integer multiple of the current controller cycle.
 When online safety commissioning has been completed, a change results in an automatic restart.

p9520

SI leadscrew pitch

Data type: FloatingPoint32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit Safety Integrated application	
Can be changed in the operating state:	Commissioning (Safety Integrated)	
Parameter group:	Extended functions	
Unit: mm		
Min: 0.1000 [mm]	Max: 8388.0000 [mm]	Factory setting: 10.0000 [mm]

Description: Sets the gear ratio between SI encoder 1 and load in mm/revolution for a linear axis with rotary encoder.

NOTICE
 The fourth decimal point can be rounded-off depending on the size of the entered number (from 3 places before the decimal point).

p9521[0...7]

SI gearbox encoder (motor)/load denominator

Data type: Unsigned32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit Safety Integrated application	
Can be changed in the operating state:	Commissioning (Safety Integrated)	
Parameter group:	Extended functions	
Unit: -		
Min: 1	Max: 2147000000	Factory setting: 1

Description: Sets the denominator for the gearbox between the SI encoder 1 and the load.

Index: [0] = Gearbox 1
 [1...7] = Reserved

Dependency: See also: p9522

p9522[0...7]

SI gearbox encoder (motor)/load numerator

Data type: Unsigned32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit Safety Integrated application
Can be changed in the operating state:	Commissioning (Safety Integrated)
Parameter group:	Extended functions
Unit: -	

	Min:	Max:	Factory setting:
	1	2147000000	1
Description:	Sets the numerator for the gearbox between the SI encoder 1 and the load.		
Index:	[0] = Gearbox 1 [1...7] = Reserved		
Dependency:	See also: p9521		

p9531[0...3]	SI SLS limit values		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min:	Max:	Factory setting:
	0.00 [mm/min]	1000000.00 [mm/min]	2000.00 [mm/min]
Description:	Sets the limit values for function SLS (Safely-Limited Speed).		
Index:	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
Dependency:	See also: p9563 See also: C01714		

p9531[0...3]	SI SLS limit values		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: rpm		
	Min:	Max:	Factory setting:
	0.00 [rpm]	1000000.00 [rpm]	2000.00 [rpm]
Description:	Sets the limit values for function SLS (Safely-Limited Speed).		
Index:	[0] = Limit value SLS1 [1] = Limit value SLS2 [2] = Limit value SLS3 [3] = Limit value SLS4		
Dependency:	See also: p9563 See also: C01714		

p9533	SI SLS setpoint speed limiting		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Operation, Ready for operation	
	Parameter group:	Extended functions	
	Unit: %		
	Min: 0.000 [%]	Max: 100.000 [%]	Factory setting: 80.000 [%]
Description:	This is an evaluation factor to define the setpoint limit from the selected actual speed limit. The active SLS (Safely-Limited Speed) limit value is evaluated with this factor and is made available as setpoint limit in r9733. A value of 0 signifies that the setpoint speed limiting is not active.		
Dependency:	r9733[0] = p9531[x] x p9533 (converted from the load side to the encoder side) r9733[1] = p9531[x] x p9533 (converted from the load side to the encoder side) [x] = Selected SLS stage Conversion factor from the encoder side to the load side: - Motor type = rotary and axis type = linear: p9522 / (p9521 x p9520) - Otherwise: p9522 / p9521 See also: p9531		
	Note The active actual speed limit is selected via safety-relevant inputs (SGE). When selecting a safety function, where standstill is reached or required (e.g. STO, SS1), then setpoint 0 is entered in r9733.		

p9539[0...7]	SI gearbox rotation reversal		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: -		
	Min: 0	Max: 1	Factory setting: 0
Description:	Sets the direction of rotation reversal for the gearbox. 0: No direction of rotation reversal 1: Direction of rotation reversal		
Value:	0: No direction of rotation reversal 1: Direction of rotation reversal		
Index:	[0] = Gearbox 1 [1...7] = Reserved		
Dependency:	See also: p9521		

p9545	SI SSM filter time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: ms		
	Min:	Max:	Factory setting:
	0.00 [ms]	500.00 [ms]	0.00 [ms]
Description:	Sets the filter time for the SSM feedback signal to detect standstill.		
	Note		
	The filter time is only active if the function is enabled (p9604.12 = 1). SSM: Safe Speed Monitor (safety-relevant feedback signal from the speed monitoring)		
p9546	SI SSM speed limit		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min:	Max:	Factory setting:
	0.002 [mm/min]	1000000.000 [mm/min]	60.000 [mm/min]
Description:	Sets the velocity limit for the SSM feedback signal to detect standstill. When this limit value is undershot, the signal "SSM feedback signal active" is set.		
	Note		
	SSM: Safe Speed Monitor (safety-relevant feedback signal from the speed monitoring)		
p9546	SI SSM speed limit		
	Data type: FloatingPoint32	Visible in: Standard display	
S210 (Safety rot)	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: rpm		
	Min:	Max:	Factory setting:
	0.002 [rpm]	1000000.000 [rpm]	60.000 [rpm]
Description:	Sets the velocity limit for the SSM feedback signal to detect standstill. When this limit value is undershot, the signal "SSM feedback signal active" is set.		
	Note		
	SSM: Safe Speed Monitor (safety-relevant feedback signal from the speed monitoring)		

p9547	SI SSM speed hysteresis		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min: 0.0010 [mm/min]	Max: 500.0000 [mm/min]	Factory setting: 30.0000 [mm/min]
Description:	Sets the velocity hysteresis for the SSM feedback signal to detect standstill ($n < nx$).		
Dependency:	See also: C01711		

Note
The velocity hysteresis is active only if the function is enabled ($p9604.12 = 1$).

The following applies when parameterizing the hysteresis:
- Set parameters p9546 and p9547 according to the following rule: $p9546 * 0.75 \geq p9547$

SSM: Safe Speed Monitor (safety-relevant feedback signal from the speed monitoring)

p9547 S210 (Safety rot)	SI SSM speed hysteresis		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: rpm		
	Min: 0.0010 [rpm]	Max: 500.0000 [rpm]	Factory setting: 30.0000 [rpm]
Description:	Sets the velocity hysteresis for the SSM feedback signal to detect standstill ($n < nx$).		
Dependency:	See also: C01711		

Note
The velocity hysteresis is active only if the function is enabled ($p9604.12 = 1$).

The following applies when parameterizing the hysteresis:
- Set parameters p9546 and p9547 according to the following rule: $p9546 * 0.75 \geq p9547$

SSM: Safe Speed Monitor (safety-relevant feedback signal from the speed monitoring)

p9548	SI SAM speed tolerance		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min: 0.00 [mm/min]	Max: 120000.00 [mm/min]	Factory setting: 300.00 [mm/min]

Description:	Sets the speed tolerance for function "SAM (Safe Acceleration Monitor)". If the drive velocity increases during the down ramp by more than this tolerance, then SAM identifies this and STO (Safe Torque Off) is initiated.
Dependency:	See also: C01706

p9548	SI SAM speed tolerance
S210 (Safety rot)	Data type: FloatingPoint32 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit Safety Integrated application
	Can be changed in the operating state: Commissioning (Safety Integrated)
	Parameter group: Extended functions
	Unit: rpm
	Min: 0.00 [rpm] Max: 120000.00 [rpm] Factory setting: 300.00 [rpm]
Description:	Sets the speed tolerance for function "SAM (Safe Acceleration Monitor)". If the drive velocity increases during the down ramp by more than this tolerance, then SAM identifies this and STO (Safe Torque Off) is initiated.
Dependency:	See also: C01706

p9551	SI SLS delay time for limit value change
	Data type: FloatingPoint32 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit Safety Integrated application
	Can be changed in the operating state: Commissioning (Safety Integrated)
	Parameter group: Extended functions
	Unit: ms
	Min: 0.00 [ms] Max: 600000.00 [ms] Factory setting: 100.00 [ms]
Description:	Sets the delay time for the limit value change for function SLS (Safely-Limited Speed). When transitioning from a higher to a lower safely-limited velocity/speed stage, within this delay time, the "old" velocity stage remains active. Even if SLS is activated from the state "SLS inactive", then this delay time is still applied.
	Note The set time is rounded internally to an integer multiple of the monitoring clock cycle.

p9555	SI transition time SCF to SS1
	Data type: FloatingPoint32 Visible in: Standard display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit Safety Integrated application
	Can be changed in the operating state: Commissioning (Safety Integrated)
	Parameter group: Extended functions
	Unit: ms
	Min: 0.00 [ms] Max: 600000.00 [ms] Factory setting: 0.00 [ms]
Description:	Sets the transition time from SCF (Safety Channel Failure) to SS1 (Safe Stop 1).
Dependency:	See also: C01711

17.2 List of parameters

Note

The set time is rounded internally to an integer multiple of the monitoring clock cycle.

p9556**SI transition time SS1 to STO**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning (Safety Integrated)
Parameter group: Extended functions

Unit: ms

Min:	Max:	Factory setting:
0.00 [ms]	3600000.00 [ms]	100.00 [ms]

Description: Sets the transition time from SS1 (Safe Stop 1) to STO (Safe Torque Off).
The parameter has no effect for motion monitoring functions with safe brake ramp monitoring (p9606 = 2).

Dependency: See also: p9560
See also: C01701

Note

The set time is rounded internally to an integer multiple of the monitoring clock cycle.

p9560**SI STO shutdown velocity**

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning (Safety Integrated)
Parameter group: Extended functions

Unit: mm/min

Min:	Max:	Factory setting:
0.00 [mm/min]	6000.00 [mm/min]	0.00 [mm/min]

Description: Sets the shutdown velocity for activating STO (Safe Torque Off).
Below this speed "standstill" is assumed, and for SS1 (Safe Stop 1) STO is initiated.
For motion monitoring functions with safe brake ramp monitoring (p9606 = 2), the parameter must be > 0, as it is the only cancel criterion for SBR (Safe Brake Ramp).

Dependency: See also: p9556

Note

The shutdown velocity has no effect for a value = 0.

p9560**SI STO shutdown velocity**

S210 (Safety rot)

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning (Safety Integrated)
Parameter group: Extended functions

Unit: rpm

Min:	Max:	Factory setting:
0.00 [rpm]	6000.00 [rpm]	0.00 [rpm]

Description: Sets the shutdown velocity for activating STO (Safe Torque Off).
Below this speed "standstill" is assumed, and for SS1 (Safe Stop 1) STO is initiated.
For motion monitoring functions with safe brake ramp monitoring (p9606 = 2), the parameter must be > 0, as it is the only cancel criterion for SBR (Safe Brake Ramp).

Dependency: See also: p9556

Note

The shutdown velocity has no effect for a value = 0.

p9563[0...3]**SI SLS stop response**

Data type: Integer16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Can be changed in the operating state: Commissioning (Safety Integrated)

Parameter group:

Extended functions

Unit: -

Min:

Max:

Factory setting:

0

1

1

Description: Sets the specific stop response for the SLS function.
These settings apply to the individual limit values for SLS.

Value: 0: STO (Safe Torque Off)

1: SS1 (Safe Stop 1)

Index:

[0] = Limit value SLS1

[1] = Limit value SLS2

[2] = Limit value SLS3

[3] = Limit value SLS4

Dependency: See also: p9531

Note

SI: Safety Integrated

SLS: Safely-Limited Speed

SS1: Safe Stop 1

STO: Safe Torque Off

p9564**SI SDI tolerance**

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Can be changed in the operating state: Commissioning (Safety Integrated)

Parameter group:

Extended functions

Unit: mm

Min:

Max:

Factory setting:

0.001 [mm]

360.000 [mm]

12.000 [mm]

Description: Sets the tolerance for function SDI (Safe Direction).
This motion in the monitored direction is still permissible without a stop response occurring and safety message C01716 being output.

Dependency: See also: p9565, p9566

See also: C01716

17.2 List of parameters

p9564	SI SDI tolerance		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: °		
	Min: 0.001 [°]	Max: 360.000 [°]	Factory setting: 12.000 [°]
Description:	Sets the tolerance for function SDI (Safe Direction). This motion in the monitored direction is still permissible without a stop response occurring and safety message C01716 being output.		
Dependency:	See also: p9565, p9566 See also: C01716		
p9565	SI SDI delay time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: ms		
	Min: 0.00 [ms]	Max: 600000.00 [ms]	Factory setting: 100.00 [ms]
Description:	Sets the delay time for function SDI (Safe Direction). After selecting the SDI function, then for a maximum of this time, motion in the monitored direction is permissible. This time can therefore be used for braking any motion.		
Dependency:	See also: p9564, p9566 See also: C01716		
	Note The set time is rounded internally to an integer multiple of the monitoring clock cycle.		
p9566	SI SDI stop response		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: -		
	Min: 0	Max: 1	Factory setting: 1
Description:	Sets the limit value violation response function or stop response for function SDI (Safe Direction). This setting applies to both directions of motion.		
Value:	0: STO (Safe Torque Off) 1: SS1 (Safe Stop 1)		
Dependency:	See also: p9564, p9565 See also: C01716		

p9568	SI SAM velocity limit		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min:	Max:	Factory setting:
	0.00 [mm/min]	1000.00 [mm/min]	0.00 [mm/min]
Description:	Sets the velocity limit for the "SAM (Safe Acceleration Monitor)" function. The SAM limit value is limited downward to this value.		
p9568	SI SAM velocity limit		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: rpm		
	Min:	Max:	Factory setting:
	0.00 [rpm]	1000.00 [rpm]	0.00 [rpm]
Description:	Sets the velocity limit for the "SAM (Safe Acceleration Monitor)" function. The SAM limit value is limited downward to this value.		
p9581	SI SBR reference velocity		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: mm/min		
	Min:	Max:	Factory setting:
	600.0000 [mm/min]	1000000.0000 [mm/min]	1500.0000 [mm/min]
Description:	Sets the reference velocity for monitoring SBR (Safe Brake Ramp). The SBR brake ramp gradient depends on p9581 (reference velocity) and p9583 (reference time).		
Dependency:	See also: p9582, p9583		
p9581	SI SBR reference velocity		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: rpm		
	Min:	Max:	Factory setting:
	600.0000 [rpm]	1000000.0000 [rpm]	1500.0000 [rpm]

17.2 List of parameters

Description: Sets the reference velocity for monitoring SBR (Safe Brake Ramp).
The SBR brake ramp gradient depends on p9581 (reference velocity) and p9583 (reference time).

Dependency: See also: p9582, p9583

p9582**SI SAM/SBR delay time**

Data type: FloatingPoint32 **Visible in:** Standard display

Read permission: Read drive data or acknowledge messages

Write permission: Edit Safety Integrated application

Can be changed in the operating state: Commissioning (Safety Integrated)

Parameter group: Extended functions

Unit: ms

Min: 10.00 [ms] **Max:** 99000.00 [ms] **Factory setting:** 50.00 [ms]

Description: Sets the delay time for monitoring SAM (Safe Acceleration Monitor) / SBR (Safe Brake Ramp).
The SAM/SBR monitoring is started once the delay time has expired.

Dependency: See also: p9581, p9583

Note

The set time is rounded internally to an integer multiple of the monitoring clock cycle.
Internally, the set time is limited downwards (lower limit) to 2 safety monitoring clock cycles (2 * p9500).

p9583**SI SBR reference time**

Data type: FloatingPoint32 **Visible in:** Standard display

Read permission: Read drive data or acknowledge messages

Write permission: Edit Safety Integrated application

Can be changed in the operating state: Commissioning (Safety Integrated)

Parameter group: Extended functions

Unit: s

Min: 0.50 [s] **Max:** 3600.00 [s] **Factory setting:** 10.00 [s]

Description: Sets the reference time for monitoring SBR (Safe Brake Ramp).
The SBR brake ramp gradient depends on p9581 (reference velocity) and p9583 (reference time).

Dependency: See also: p9581, p9582

Note

The set time is rounded internally to an integer multiple of the monitoring clock cycle.

p9603.0...1**SI control**

Data type: Unsigned32 **Visible in:** Standard display

Read permission: Read drive data or acknowledge messages

Write permission: Edit Safety Integrated application

Can be changed in the operating state: Commissioning state, device

Parameter group: Safety Integrated

Unit: -

Min: - **Max:** - **Factory setting:** 0000 bin

Description: Sets the type of control for the safety functions integrated in the drive.

Bit array: Bit Signal name 1 signal 0 signal

00	Control via F-DI	Enable	Inhibit
01	Control via PROFIsafe	Enable	Inhibit

Note

When online safety commissioning has been completed, a change results in an automatic restart.
 When simultaneously controlled via terminal (bit 0 = 1) and PROFIsafe (bit 1 = 1), the following applies:
 - It is only permissible that F-DI 0 is used
 - Only STO / SS1 may be interconnected

p9604.0...30**SI enable**

Data type:	Unsigned32	Visible in:	Standard display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit Safety Integrated application
Can be changed in the operating state:			Commissioning (Safety Integrated)
Parameter group:			Safety Integrated
Unit:	-		
Min:	-	Max:	-
		Factory setting:	0000 0000 0000 0000 0000 0000 0000 0000 bin

Description: Sets the enable signal for the safety functions integrated in the drive.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Enable STO	Enable	Inhibit
	01	Enable SBC	Enable	Inhibit
	02	Enable SS1	Enable	Inhibit
	08	Enable SLS	Enable	Inhibit
	09	Enable SLS dynamic	Enable	Inhibit
	11	Enable SDI	Enable	Inhibit
	12	Enable SSM	Enable	Inhibit
	30	Enable F-DI in PROFIsafe telegram	Enable	Inhibit

p9606**SI SS1 function specification**

Data type:	Integer16	Visible in:	Standard display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit Safety Integrated application
Can be changed in the operating state:			Commissioning (Safety Integrated)
Parameter group:			Safety Integrated
Unit:	-		
Min:	0	Max:	2
		Factory setting:	0

Description: Sets the function specification of the SS1 (Safe Stop 1) safety function integrated in the drive.

Value:	0:	SS1-t time-controlled
	1:	SS1-a acceleration-monitored
	2:	SS1-r ramp-monitored

17.2 List of parameters

p9610	SI PROFIsafe destination address		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Safety Integrated	
	Unit: -		
	Min:	Max:	Factory setting:
	0	65534	0
Description:	Sets the PROFIsafe destination address (F_Dest_Add).		
	Note		
	When online safety commissioning has been completed, a change results in an automatic restart.		
p9611	SI PROFIsafe telegram selection		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Safety Integrated	
	Unit: -		
	Min:	Max:	Factory setting:
	0	901	0
Description:	Sets the PROFIsafe telegram number.		
Value:	0: No PROFIsafe telegram selected		
	30: PROFIsafe standard telegram 30, PZD-1/1		
	901: PROFIsafe SIEMENS telegram 901, PZD-3/5		
Dependency:	See also: r60022		
p9612	SI stop response for failure or control fault		
	Data type: Integer16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Safety Integrated	
	Unit: -		
	Min:	Max:	Factory setting:
	0	1	0
Description:	Sets the stop response for failure or control fault (e.g. PROFIsafe communication).		
Value:	0: STO		
	1: SS1		
	Note		
	For p9612 = 0 (STO): The drive safely switches off the motor, the motor coasts down.		
	For p9612 = 1 (SS1): The drive brakes the motor with OFF3 ramp-down time until standstill is detected. A switchover is then made to STO.		

p9613	SI PROFIsafe source address			
	Data type: Unsigned16	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit Safety Integrated application		
	Can be changed in the operating state:	Commissioning (Safety Integrated)		
	Parameter group:	Safety Integrated		
	Unit: -			
	Min:	Max:	Factory setting:	
	0	65534	0	
Description:	Sets the PROFIsafe source address (F_Source_Add).			
	Note			
	When online safety commissioning has been completed, a change results in an automatic restart.			
p9614	SI PROFIsafe F_watchdog time			
	Data type: Unsigned16	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit Safety Integrated application		
	Can be changed in the operating state:	Commissioning (Safety Integrated)		
	Parameter group:	Safety Integrated		
	Unit: ms			
	Min:	Max:	Factory setting:	
	0 [ms]	65535 [ms]	0 [ms]	
Description:	Sets the PROFIsafe monitoring time (F_WD_Time).			
p9630	SI safe maximum speed encoder (rotary)			
	Data type: FloatingPoint32	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit Safety Integrated application		
	Can be changed in the operating state:	Commissioning (Safety Integrated)		
	Parameter group:	Extended functions		
	Unit: rpm			
	Min:	Max:	Factory setting:	
	0 [rpm]	300000000 [rpm]	0 [rpm]	
Description:	Sets the safe maximum speed for the rotary encoder (encoder side).			
p9631	SI safe position accuracy encoder (rotary)			
	Data type: FloatingPoint32	Visible in: Standard display		
	Read permission:	Read drive data or acknowledge messages		
	Write permission:	Edit Safety Integrated application		
	Can be changed in the operating state:	Commissioning (Safety Integrated)		
	Parameter group:	Extended functions		
	Unit: °			
	Min:	Max:	Factory setting:	
	0.000 [°]	360.000 [°]	0.000 [°]	
Description:	Sets the safe position accuracy for the rotary encoder (encoder side).			

r9634	SI safe maximum speed encoder detected (rotary)
Data type: FloatingPoint32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Extended functions
Unit: rpm	
Description:	Displays the safe maximum speed for the rotary encoder (encoder side) that was detected.

r9635	SI safe position accuracy encoder detected (rotary)
Data type: FloatingPoint32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Extended functions
Unit: °	
Description:	Displays the safe position accuracy for the rotary encoder (encoder side) that was detected.

p9659	SI brake output test timer	
Data type: FloatingPoint32	Visible in: Standard display	
Read permission:	Read drive data or acknowledge messages	
Write permission:	Edit Safety Integrated application	
Can be changed in the operating state:	Commissioning (Safety Integrated)	
Parameter group:	Safety Integrated	
Unit: h		
Min:	Max:	Factory setting:
0.00 [h]	9000.00 [h]	2160.00 [h]
Description:	Sets the time interval for carrying out the forced checking procedure and testing the safety brake control. Within the parameterized time, when the SBC function is enabled, the brake must have been closed or opened at least once. The monitoring time is reset each time the brake is opened or closed.	
	Note	
	SBC: Safe Brake Control	

r9660	SI forced checking procedure remaining time
Data type: FloatingPoint32	Visible in: Standard display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit device configuration or drive applications
Parameter group:	Safety Integrated
Unit: h	
Description:	Displays the time remaining before performing the dynamization and testing the brake output.

p9674	SI module identifier Sensor Module
Data type: Unsigned32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit Safety Integrated application
Can be changed in the operating state:	Ready for operation
Parameter group:	Safety Integrated
Unit: -	

	Min:	Max:	Factory setting:
	0	4294967295	0
Description:	Module identifier of the Sensor Module.		

p9675**SI module identifier encoder**

Data type: Unsigned32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit Safety Integrated application
Can be changed in the operating state:	Ready for operation
Parameter group:	Safety Integrated

Unit: -

Min:	Max:	Factory setting:
0	4294967295	0

Description: Module identifier of the encoder,**Note**

The value = 0 when using an encoder without its own serial number.

p9676**SI identifier encoder properties**

Data type: Unsigned32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit Safety Integrated application
Can be changed in the operating state:	Ready for operation
Parameter group:	Safety Integrated

Unit: -

Min:	Max:	Factory setting:
0	4294967295	0

Description: Identifier for the encoder properties**p9677****SI offset POS1 POS2 encoder**

Data type: Integer32	Visible in: Extended display
Read permission:	Read drive data or acknowledge messages
Write permission:	Edit Safety Integrated application
Can be changed in the operating state:	Ready for operation
Parameter group:	Extended functions

Unit: -

Min:	Max:	Factory setting:
-2147483648	2147483647	0

Description: Sets the offset between encoder positions POS1 and POS2.
This value is used only once to perform a check after running up.

p9699	SI configuration alarm filtering		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Can be changed in the operating state:	Ready for operation	
	Parameter group:	Basic functions	
	Unit: -		
	Min:	Max:	Factory setting:
	0	1	1
Description:	Sets the enable for the "Alarm filtering" function.		
Value:	0: Deactivate alarm filtering		
	1: Activate alarm filtering		
	Note		
	Parameter is active after a POWER ON		

r9708	SI diagnostics safe position		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: mm		
Description:	Displays the actual load-side actual value.		
	Note		
	The display of the load-side position actual value is updated in the monitoring clock cycle.		

r9708	SI diagnostics safe position		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: °		
Description:	Displays the actual load-side actual value.		
	Note		
	The display of the load-side position actual value is updated in the monitoring clock cycle.		

r9714[0...4]	SI diagnostics velocity		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: mm/min		
Description:	Displays the velocity actual values for motion monitoring functions on the drive object.		
Index:	[0] = Load side velocity actual value		
	[1] = Actual SAM/SBR velocity limit		
	[2] = Actual SLS speed limit		
	[3] = Reserved		
	[4] = Load side filtered velocity actual value		

Dependency: See also: r9732

NOTICE
For index [1]: If several SAM and/or SBR monitoring functions are simultaneously active, then the lowest of the limit values is indicated here.
For index [2]: This SLS velocity limit can, as a result of conversion into the internal monitoring format, deviate from the specified SLS velocity limit (see r9732).

Note

The display is updated in the safety monitoring clock cycle.

r9714[0...4] SI diagnostics velocity

S210 (Safety rot)

Data type: FloatingPoint32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: rpm

Description:

Displays the velocity actual values for motion monitoring functions on the drive object.

Index:

[0] = Load side velocity actual value

[1] = Actual SAM/SBR velocity limit

[2] = Actual SLS speed limit

[3] = Reserved

[4] = Load side filtered velocity actual value

Dependency:

See also: r9732

NOTICE
For index [1]: If several SAM and/or SBR monitoring functions are simultaneously active, then the lowest of the limit values is indicated here.
For index [2]: This SLS velocity limit can, as a result of conversion into the internal monitoring format, deviate from the specified SLS velocity limit (see r9732).

Note

The display is updated in the safety monitoring clock cycle.

r9720.0...15 SI control word

Data type: Unsigned32

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: -

Description:

Control signals for safety functions integrated in the drive.

Bit array:

Bit	Signal name	1 signal	0 signal
00	Deselect STO	Yes	No
01	Deselect SS1	Yes	No
04	Deselect SLS	Yes	No
07	Acknowledgment	Signal edge active	No
09	Select SLS bit 0	Set	Not set
10	Select SLS bit 1	Set	Not set
12	Deselect SDI positive	Yes	No

17.2 List of parameters

13	Deselect SDI negative	Yes	No
15	Deselect SSM	Yes	No

Note

Note: only the control signals of the available and enabled functions (see p9604) are updated. All others are 1 across the board.

r9722.0...15

SI status signals

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: -

Description: Display for the status signals of the safety functions (synchronized signal).

Bit array:	Bit	Signal name	1 signal	0 signal
	00	STO or safe pulse cancellation active	Yes	No
	01	SS1 active	Yes	No
	04	SLS active	Yes	No
	07	Internal event	No	Yes
	09	Active SLS stage bit 0	Set	Not set
	10	Active SLS stage bit 1	Set	Not set
	12	SDI positive active	Yes	No
	13	SDI negative active	Yes	No
	15	SSM (speed below limit value)	Yes	No

NOTICE

For bit 07:
 An internal event is displayed if a stop function is active.
 The signal state behaves in an opposite way to the PROFIsafe Standard.

Note

Only the status signals of the enabled functions (see p9604) are updated, all others are 0 across the board.

r9725[0...2]

SI diagnostics data cross-check

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: -

Description: Displays the diagnostics of the data cross-check.
 For index [0]
 Number of the data, which, for the data cross-check between the two monitoring channels, led to the SCF (Safety Channel Failure) on the drive.
 For index [1]:
 Displays the value from channel A for a KDV error.
 For index [2]:
 Displays the value from channel B for a KDV error.

Index: [0] = Message value for KDV
 [1] = KDV actual value channel A
 [2] = KDV actual value channel B

Dependency: See also: C01769

Note

KDV: Data cross-check

r9728	SI actual checksum configuration of the safety functions		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: -		
Description:	Displays the checksum over the checked parameters used to configure safety functions (actual checksum).		
Dependency:	See also: p9729		
p9729	SI reference checksum configuration of the safety functions		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: -		
	Min: 0000 hex	Max: FFFF FFFF hex	Factory setting: A1A1 A1A1 hex
Description:	Sets the checksum over the checked parameters used to configure safety functions (reference checksum).		
Dependency:	See also: r9728		
r9730	SI Safe maximum velocity		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: mm/min		
Description:	Displays the safe maximum velocity (on the load side) that is permissible for the safe motion monitoring functions as a result of the actual value sensing. This parameter indicates up to which load velocity the safe encoder actual values (redundant encoder coarse position) can still be correctly detected as a result of the particular encoder parameterization. This parameter is only of significance for enabled safety with encoder (otherwise "0").		
r9730	SI Safe maximum velocity		
S210 (Safety rot)	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: rpm		
Description:	Displays the safe maximum velocity (on the load side) that is permissible for the safe motion monitoring functions as a result of the actual value sensing. This parameter indicates up to which load velocity the safe encoder actual values (redundant encoder coarse position) can still be correctly detected as a result of the particular encoder parameterization. This parameter is only of significance for enabled safety with encoder (otherwise "0").		

17.2 List of parameters

r9731	SI safe position accuracy
	Data type: FloatingPoint32 Visible in: Standard display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: mm
Description:	Displays the safe position accuracy (load side). As a result of the actual value sensing for safe motion monitoring functions, this accuracy can be achieved as the maximum.
	Note The parameter is only of significance for enabled safety with encoder (otherwise "0").
r9731 S210 (Safety rot)	SI safe position accuracy
	Data type: FloatingPoint32 Visible in: Standard display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: °
Description:	Displays the safe position accuracy (load side). As a result of the actual value sensing for safe motion monitoring functions, this accuracy can be achieved as the maximum.
	Note The parameter is only of significance for enabled safety with encoder (otherwise "0").
r9732[0...1]	SI velocity resolution
	Data type: FloatingPoint32 Visible in: Standard display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: mm/min
Description:	Displays the velocity resolution for safety-relevant motion monitoring functions. For index [0]: Displays the safe velocity resolution (load side). Setpoints for velocity limits or parameter changes for velocities below this threshold have no effect. For index [1]: Displays the safe velocity accuracy based on the safe encoder accuracy
Index:	[0] = Actual velocity resolution [1] = Minimum velocity resolution
	Note For index [0]: This parameter does not provide any information about the actual accuracy of the velocity sensing. This depends on the type of actual value sensing, the gear factors as well as the quality of the encoder being used. Conversion of: (internal fixed value / Tsi) to mm/min (linear) or rpm (rotary) with Tsi = p9500 (SI monitoring cycle). Example: For Tsi = 4 ms, r9732[0] = 15 mm/min (linear) or 1/24 rpm (rotary) is obtained. For index [1]: - Only takes into account the coarse encoder resolution and is an internal calculation, which also incorporates the factor for the motor-load side conversion, the gear ratio and the safety monitoring clock cycle.

r9732[0...1]	SI velocity resolution		
S210 (Safety rot)	<p>Data type: FloatingPoint32 Visible in: Standard display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Extended functions</p> <p>Unit: rpm</p>		
Description:	<p>Displays the velocity resolution for safety-relevant motion monitoring functions.</p> <p>For index [0]:</p> <p>Displays the safe velocity resolution (load side). Setpoints for velocity limits or parameter changes for velocities below this threshold have no effect.</p> <p>For index [1]:</p> <p>Displays the safe velocity accuracy based on the safe encoder accuracy</p>		
Index:	<p>[0] = Actual velocity resolution</p> <p>[1] = Minimum velocity resolution</p>		
	<p>Note</p> <p>For index [0]:</p> <p>This parameter does not provide any information about the actual accuracy of the velocity sensing. This depends on the type of actual value sensing, the gear factors as well as the quality of the encoder being used.</p> <p>Conversion of:</p> <p>(internal fixed value / Tsi) to mm/min (linear) or rpm (rotary) with Tsi = p9500 (SI monitoring cycle).</p> <p>Example:</p> <p>For Tsi = 4 ms, r9732[0] = 15 mm/min (linear) or 1/24 rpm (rotary) is obtained.</p> <p>For index [1]:</p> <p>- Only takes into account the coarse encoder resolution and is an internal calculation, which also incorporates the factor for the motor-load side conversion, the gear ratio and the safety monitoring clock cycle.</p>		
r9733[0...2]	SI effective setpoint velocity limiting		
	<p>Data type: FloatingPoint32 Visible in: Standard display</p> <p>Read permission: Read drive data or acknowledge messages</p> <p>Write permission: Edit device configuration or drive applications</p> <p>Parameter group: Extended functions</p> <p>Unit: rpm</p>		
Description:	<p>Displays the necessary setpoint velocity limit as a result of the selected motion monitoring functions.</p> <p>Contrary to the parameterization of the SI limit values, this parameter specifies the motor-side limit value and not the load-side limit value.</p>		
Index:	<p>[0] = Setpoint limiting positive</p> <p>[1] = Setpoint limiting negative</p> <p>[2] = Setpoint limit absolute</p>		
Dependency:	<p>For SLS: r9733[0] = p9531[x] x p9533 (converted from the load side to the motor side)</p> <p>For SDI negative: r9733[0] = 0</p> <p>For SLS: r9733[1] = - p9531[x] x p9533 (converted from the load side to the motor side)</p> <p>For SDI positive: r9733[1] = 0</p> <p>[x] = Selected SLS stage</p> <p>Conversion factor from the load side to the motor side:</p> <p>- Motor type = rotary and axis type = linear: p9522 / (p9521 x p9520)</p> <p>- Otherwise: p9522 / p9521</p> <p>See also: p9531, p9533</p>		
	<table border="1"> <tr> <td>NOTICE</td> </tr> <tr> <td>If only the absolute value of the setpoint velocity limiting is required, r9733[2] must be interconnected.</td> </tr> </table>	NOTICE	If only the absolute value of the setpoint velocity limiting is required, r9733[2] must be interconnected.
NOTICE			
If only the absolute value of the setpoint velocity limiting is required, r9733[2] must be interconnected.			

17.2 List of parameters

Note

The unit changeover between linear and rotary axis is not implemented via the safety changeover (r9502) but by the linear motor changeover.

If the "SLS" or "SDI" function is not selected, r9733[0] shows p1082 and r9733[1] shows -p1082.

The display in r9733 can be delayed by up to one safety monitoring clock cycle as compared to the display in r9720 and r9722.

When selecting a safety function, where standstill is reached or required (e.g. STO, SS1), then setpoint 0 is entered in r9733.

r9734.0...15**SI Safety Information Channel status word S_ZSW1B**

Data type: Unsigned16

Visible in: Standard display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Safety Integrated

Unit: -

Description:

Display for status word S_ZSW1B of the Safety Information Channel.

Bit array:

Bit	Signal name	1 signal	0 signal
00	STO selected or active	Yes	No
01	SS1 active	Yes	No
04	SLS active	Yes	No
06	SLS selected	Yes	No
07	Internal event	Yes	No
09	Select SLS bit0	Yes	No
10	Select SLS bit1	Yes	No
12	SDI positive selected	Yes	No
13	SDI negative selected	Yes	No
14	ESR retract requested	Yes	No
15	Safety message present	Yes	No

Note

SIC: Safety Information Channel

For bit 07:

An internal event is displayed if a stop function is active.

r9753[0...63]**SI message value for float values**

Data type: FloatingPoint32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: -

Description:

Displays additional information about the safety message that has occurred for float values.

Dependency:

See also: r9754, r9755, r9756, r60044, r60045, r60048, r60049, p60052

r9754[0...63]**SI message time received in days**

Data type: Unsigned16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: -

Description:

Displays the relative system runtime in days when the safety message occurred.

Dependency: See also: r9753, r9755, r9756, r60044, r60045, r60048, r60049, p60052

r9755[0...63] SI message time removed in milliseconds

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: ms

Description: Displays the relative system runtime in milliseconds when the safety message was removed.

Dependency: See also: r9753, r9754, r9755, r60044, r60045, r60048, r60049, p60052

r9756[0...63] SI message time removed in days

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: -

Description: Displays the relative system runtime in days when the safety message was removed.

Dependency: See also: r9753, r9754, r9755, r60044, r60045, r60048, r60049, p60052

r9768[0...8] Receive SI PROFIsafe control words

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Displays the received PROFIsafe telegram.

Index:
[0] = PZD 1
[1] = PZD 2
[2] = PZD 3
[3] = PZD 4
[4] = PZD 5
[5] = PZD 6
[6] = PZD 7
[7] = PZD 8
[8] = PZD 9

Dependency: See also: r9769

Note

The PROFIsafe trailer at the end of the telegram is also displayed (5 bytes).

r9769[0...8] Send SI PROFIsafe status words

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Displays the PROFIsafe telegram to be sent.

17.2 List of parameters

Index:

- [0] = PZD 1
- [1] = PZD 2
- [2] = PZD 3
- [3] = PZD 4
- [4] = PZD 5
- [5] = PZD 6
- [6] = PZD 7
- [7] = PZD 8
- [8] = PZD 9

Dependency: See also: r9768

Note

The PROFIsafe trailer at the end of the telegram is also displayed (5 bytes).

r9770[0...7]**SI PROFIsafe configuration of the F-PLC**

Data type: Unsigned16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Displays the configuration data received from the F-PLC (when control via PROFIsafe is enabled).

Index:

- [0] = Telegram number
- [1] = Control telegram length from the F-PLC in bytes
- [2] = Status telegram length to the F-PLC in bytes
- [3] = F_PRM_FLAG1, F_PRM_FLAG2
- [4] = F_Source_Add
- [5] = F_Dest_Add
- [6] = F_WD_Time
- [7] = F_Par_CRC

r9771[0...43]**SI PROFIsafe diagnostics information CRC error**

Data type: Unsigned8 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Diagnostics data for CRC error in the cyclic PROFIsafe communication. The information regarding the last signaled CRC error is always displayed.

Structure of the diagnostic information:

- Bytes 0 to 1: diagnostic data structure version
- Bytes 2 to 9: IncNo_1: used in the V2.6.1 mode
- Bytes 10 to 17: IncNo_2: used in the V2.6.1 mode
- Bytes 18 to 21: received telegram CRC
- Bytes 22 to 25: expected telegram CRC
- Bytes 26 to 29: VirtualConsecutiveNo: used in the V2.4 mode
- Bytes 30 to 33: Code name: used in the V2.6.1 mode
- Bytes 34 to 37: Modifier: used in the V2.6.1 mode
- Bytes 38 to 41: CRC of the iParameters (not used)
- Bytes 42 to 43: CRC of the F-parameters

r9776.0...4	SI diagnostics		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the operating state, referred to the safety functions. The parameter is used for diagnostics.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Safety parameter changed	Yes No
	01	Safety functions enabled	Yes No
	02	Safety component replaced and data save required	Yes No
	04	Safety commissioning mode active	Yes No
	Note		
	For bit 00 = 1: At least one safety parameter was changed. The change only becomes effective after a restart, which is automatically performed after exiting safety commissioning.		
	For bit 01 = 1: Safety functions have been enabled and are active.		
	For bit 02 = 1: A safety-relevant component has been replaced. Saving required (p0977 = 1 or retentively save).		
	For bit 04 = 1: The safety commissioning mode is selected.		

r9780[0...1]	SI checksum to check changes		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the checksum to track changes for Safety Integrated. These are additional checksums that are created to track changes (fingerprint for the "safety logbook" functionality) to safety parameters (that are relevant for checksums).		
Index:	[0] = SI checksum to track functional changes [1] = SI checksum to track hardware-specific changes		
Dependency:	See also: p9729, p9797		

r9781[0...1]	SI change control time stamp days		
	Data type: Unsigned16	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the time stamps for the checksums for tracking changes for Safety Integrated. The time stamps for the checksums for tracking changes (fingerprint for the "safety logbook" functionality) made to safety parameters are saved in parameters r9780[0] and r9780[1].		
Index:	[0] = SI time stamp for checksum to track functional changes [1] = SI time stamp for checksum to track hardware-specific changes		
Dependency:	See also: p9729, p9797, p9799 See also: C01690		

17.2 List of parameters

NOTICE

The time comprises r9781 (days) and r9782 (milliseconds).

r9782[0...1]**SI change control time stamp milliseconds**

Data type: Unsigned32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: ms

Description:

Displays the time stamps for the checksums for tracking changes for Safety Integrated.
The time stamps for the checksums for tracking changes (fingerprint for the "safety logbook" functionality) made to safety parameters are saved in parameters r9780[0] and r9780[1].

Index:

[0] = SI time stamp for checksum to track functional changes
[1] = SI time stamp for checksum to track hardware-specific changes

Dependency:

See also: p9729, p9797, p9799
See also: C01690

NOTICE

The time comprises r9781 (days) and r9782 (milliseconds).

r9794**SI actual checksum safety enable**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Basic functions
Unit: -

Description:

Displays the checksum over the parameters to enable the safety functions (actual checksum).

Dependency:

See also: p9795

p9795**SI reference checksum safety enable**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning (Safety Integrated)
Parameter group: Basic functions
Unit: -
Min: **Max:** **Factory setting:**
0000 hex FFFF FFFF hex A1A1 A1A1 hex

Description:

Displays the checksum over the parameters to enable the safety functions (reference checksum).

Dependency:

See also: r9794

r9796**SI actual checksum PROFIsafe addresses**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: -

Description:

Displays the checksum over the parameters for the PROFIsafe addresses (actual checksum).

Dependency: See also: p9797

p9797	SI reference checksum PROFIsafe addresses		
Data type:	Unsigned32	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit Safety Integrated application
Can be changed in the operating state:			Commissioning (Safety Integrated)
Parameter group:			Extended functions
Unit:	-		
Min:	0000 hex	Max:	FFFF FFFF hex
		Factory setting:	A1A1 A1A1 hex
Description:	Sets the checksum over the parameters for the PROFIsafe addresses (reference checksum).		
Dependency:	See also: r9796		

r9798	SI actual checksum over the configuration of the drive object		
Data type:	Unsigned32	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Parameter group:			Basic functions
Unit:	-		
Description:	Displays the checksum over the checksum-checked parameters to configure the drive object (actual checksum).		
Dependency:	See also: p9799		

p9799	SI reference checksum over the configuration of the drive object		
Data type:	Unsigned32	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit Safety Integrated application
Can be changed in the operating state:			Commissioning (Safety Integrated)
Parameter group:			Basic functions
Unit:	-		
Min:	0000 hex	Max:	FFFF FFFF hex
		Factory setting:	A1A1 A1A1 hex
Description:	Sets the checksum over the checksum-checked parameters to configure the drive object (reference checksum).		
Dependency:	See also: r9798		

r9828	SI actual checksum configuration of safety functions channel B		
Data type:	Unsigned32	Visible in:	Extended display
Read permission:			Read drive data or acknowledge messages
Write permission:			Edit device configuration or drive applications
Parameter group:			Extended functions
Unit:	-		
Description:	Displays the checksum over the checksum-checked parameters to configure safety functions (actual checksum) channel B.		
Dependency:	See also: p9829		

p9829	SI reference checksum configuration of safety functions chan. B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Extended functions	
	Unit: -		
	Min: 0000 hex	Max: FFFF FFFF hex	Factory setting: B2B2 B2B2 hex
Description:	Sets the checksum over the checked parameters used to configure safety functions (reference checksum).		
Dependency:	See also: r9828		

r9894	SI actual checksum safety enable channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:		
	Unit: -		
Description:	Displays the checksum over the parameters to enable the safety functions (actual checksum) channel B.		
Dependency:	See also: p9895		

p9895	SI reference checksum safety enable channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:		
	Unit: -		
	Min: 0000 hex	Max: FFFF FFFF hex	Factory setting: B2B2 B2B2 hex
Description:	Displays the checksum over the parameters to enable the safety functions (reference checksum) channel B.		
Dependency:	See also: r9894		

r9896	SI actual checksum PROFIsafe addresses channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: -		
Description:	Displays the checksum over the parameters for the PROFIsafe addresses (act checksum) chan B.		
Dependency:	See also: p9897		

p9897	SI reference checksum PROFIsafe addresses channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:		
	Unit: -		
	Min: 0000 hex	Max: FFFF FFFF hex	Factory setting: B2B2 B2B2 hex
Description:	Sets the checksum over the parameters for the PROFIsafe addresses (reference checksum) channel B		
Dependency:	See also: r9896		
r9898	SI actual checksum configuration of the drive object, channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Basic functions	
	Unit: -		
Description:	Displays the checksum over the checksum-checked parameters to configure the drive object (actual checksum) channel B.		
Dependency:	See also: p9899		
p9899	SI reference checksum over configuration of drive object chan B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning (Safety Integrated)	
	Parameter group:	Basic functions	
	Unit: -		
	Min: 0000 hex	Max: FFFF FFFF hex	Factory setting: B2B2 B2B2 hex
Description:	Sets the checksum over the checksum-checked parameters to configure the drive object (reference checksum) channel B.		
Dependency:	See also: r9898		
p10000.0	SI F-DI enable		
	Data type: Unsigned8	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning state, device	
	Parameter group:	Safety Integrated	
	Unit: -		
	Min: -	Max: -	Factory setting: 0000 bin
Description:	Sets the enable signal for the failsafe digital inputs.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	F-DI 0 (X130/2.1, X130/2.3)	Enabled Not enabled

17.2 List of parameters

Note

- Digital inputs of F-DI that have not been enabled can be used as binary signal sources for non-safety-related functions.
- Only F-DI that have been enabled are monitored in a safety-relevant way. It is neither permissible that the associated DI are set to simulation nor used as non-safety relevant functions, as they can be subject to test pulses.

p10002

SI F-DI changeover discrepancy time

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning state, device
Parameter group: Safety Integrated
Unit: ms
Min: 1.00 [ms] **Max:** 2000.00 [ms] **Factory setting:** 500.00 [ms]

Description:

Sets the discrepancy time for digital inputs.
The signal states at the two associated digital inputs (F-DI) must assume the same state within this discrepancy time.

Note

The time must be set longer than the safety monitoring clock cycle (p9500).

p10017[0...2]

SI digital inputs input filter

Data type: FloatingPoint32 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning state, device
Parameter group: Safety Integrated
Unit: ms
Min: 1.00 [ms] **Max:** 100.00 [ms] **Factory setting:** 4.00 [ms]

Description:

Setting of the input filter for the digital inputs.
The input filter is rounded off to whole milliseconds and accepted.
The input filter acts on the following digital inputs:
- Failsafe digital inputs (F-DI).

Example:

Input filter = 1 ms: Fault pulses of 1 ms are filtered; only pulses longer than 2 ms are processed.
Input filter = 3 ms: Fault pulses of 3 ms are filtered; only pulses longer than 4 ms are processed.
The input filtering result can be read in r10051 and r10151.
The set input filter impacts the response time of the safety function.

Index:

[0] = F-DI 0
[1] = Reserved
[2] = Reserved

NOTICE If the cable connected at the digital input is longer than 30 m, to maintain the functional safety, the minimum debounce time must be set to 20 ms.
--

Note

If the self-test is enabled using an externally entered dark pulse (p10041) for at least one F-DI, then p10017 must be set longer than the maximum duration of the dark pulse + 2 ms. If the test pulses are entered using the switchable power supply, then this means p10017 > p10018 + 2 ms.

p10018	SI F-DI self-test dark pulse length VS+		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning state, device	
	Parameter group:	Safety Integrated	
	Unit: ms		
	Min: 0 [ms]	Max: 50 [ms]	Factory setting: 0 [ms]
Description:	Sets the dark pulse length of the switchable power supply for the self-test (p10041) of the F-DI. Value = 0: switchable power supply, permanently switched on. Value > 0: dark pulse length for the switchable power supply. The test cycle is fixed at 5 s.		
	Note This switchable power supply must be permanently switched on if the self test using internal test pulses was selected (p10041),		
p10019	SI F-DI self test external dark pulse wait time		
	Data type: FloatingPoint32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Can be changed in the operating state:	Commissioning state, device	
	Parameter group:	Safety Integrated	
	Unit: s		
	Min: 10 [s]	Max: 3600 [s]	Factory setting: 1020 [s]
Description:	Sets the maximum wait time for the dark pulse for the F-DI self test using an externally entered test pulse.		
	Note This parameter is only active for F-DIs that are tested using external test pulses (p10041[x] = 2).		
c10022	SI STO input terminal		
	Data type: Unsigned8	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Signal for the axis-specific selection of function "STO (Safe Torque Off)" (control via F-DI).		
	Note F-DI: Failsafe Digital Input		
c10023	SI SS1 input terminal		
	Data type: Unsigned8	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit Safety Integrated application	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Signal for selecting function "SS1 (Safe Stop 1)".		

17.2 List of parameters

Note
F-DI: Failsafe Digital Input

p10040.0

SI F-DI input mode

Data type: Unsigned8 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning state, device
Parameter group: Safety Integrated

Unit: -
Min: - **Max:** - **Factory setting:** 0000 bin

Description: Sets the input mode for the safety digital inputs (F-DI).

Bit	Signal name	1 signal	0 signal
00	F-DI 0, DI 3+ (X130/2.3)	NO contact	NC contact

Note
Only an NC contact can be connected for the safety digital inputs not listed.

p10041[0...2]

SI F-DI self test mode selection

Data type: Integer16 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Can be changed in the operating state: Commissioning state, device
Parameter group: Safety Integrated

Unit: -
Min: 0 **Max:** 3 **Factory setting:** 0

Description: Enable for the F-DI self test.

Value:
 0: Self test using internal test signals
 1: Self-test using entered dark pulses (VS+)
 3: Self test using externally entered dark pulses

Index:
 [0] = F-DI 0
 [1] = Reserved
 [2] = Reserved

Note
 Mode 0:
 The power supply must be permanently switched on.
 Mode 1:
 A check is made whether p10017 is > p10018 + 2 ms and whether p10018 is set > 0.

c10050[0...2]

SI status F-DI via PROFIsafe

Data type: Unsigned8 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit Safety Integrated application
Parameter group: Safety Integrated
Unit: -

Description: The state of the selected failsafe digital inputs F-DIs is transferred to the F-control via PROFIsafe.

Index: [0] = F-DI via Profisafe status 1
 [1] = Reserved
 [2] = Reserved

Note

F-DI: Failsafe Digital Input

r10051.0 SI digital inputs status channel A

Data type: Unsigned8 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Display for the single-channel, logical and debounced status of the failsafe digital inputs of channel A.

Bit	Signal name	1 signal	0 signal
00	Status of DI 2+ (X130/2.1)	Logical 1	Logical 0

Dependency: See also: p10017

Note

The relationship between the logic level and the external voltage level at the input is intended for the use of a safety function:

With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.

This means that an NC/NC contact parameterization for 0 V at both inputs of the F-DI leads to a status of the F-DI equal to "0" (safety function selected), for 24 V at both inputs of the F-DI, to a status of the F-DI equal to "1" (safety function deselected).

F-DI: Failsafe Digital Input

NC contact:

24V at the input -> logical "1"

0V at the input -> logical "0"

r10071.0 SI F-DI status

Data type: Unsigned8 **Visible in:** Standard display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Display for the status of the failsafe digital inputs.

Bit	Signal name	1 signal	0 signal
00	Status of the F-DI 0	Logical 1	Logical 0

Note

The following applies:

- Logical "0": Safety function is selected
- Logical "1": safety function is deselected

F-DI: Failsafe Digital Input

r10075.0...15 SI PROFIsafe control word

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Extended functions
Unit: -

17.2 List of parameters

Description: Displays the control signals for safety functions integrated in the drive only via PROFIsafe.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Deselect STO	Yes	No
	01	Deselect SS1	Yes	No
	04	Deselect SLS	Yes	No
	07	Acknowledgment	Signal edge active	No
	09	Select SLS bit 0	Set	Not set
	10	Select SLS bit 1	Set	Not set
	12	Deselect SDI positive	Yes	No
	13	Deselect SDI negative	Yes	No
	15	Deselect SSM	Yes	No

r10076 SI PROFIsafe SLS-LIMIT

Data type: Integer16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: -

Description: Dynamic limit value input for SLS (Safely-Limited Speed) via PROFIsafe.

r10080.0...15 SI status signals channel A

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Unit: -

Description: Status signals (channel A) for safety-relevant motion monitoring functions integrated in the drive.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	STO or safe pulse cancellation active	Yes	No
	01	SS1 active	Yes	No
	04	SLS active	Yes	No
	07	Internal event	No	Yes
	09	Active SLS stage bit 0	Set	Not set
	10	Active SLS stage bit 1	Set	Not set
	12	SDI positive active	Yes	No
	13	SDI negative active	Yes	No
	15	SSM (speed below limit value)	Yes	No

NOTICE

For bit 07:

An internal event is displayed if a stop function is active.

The signal state behaves in an opposite way to the PROFIsafe Standard.

Note

Only the status signals of the available and enabled functions (see p9604) are updated. All others are 0 across the board.

r10098	SI actual checksum across device-specific parameters
	Data type: Unsigned32 Visible in: Extended display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit device configuration or drive applications
	Parameter group: Basic functions
	Unit: -
Description:	Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (actual checksum).
Dependency:	See also: p10099

p10099	SI reference checksum across device-specific parameters
	Data type: Unsigned32 Visible in: Extended display
	Read permission: Read drive data or acknowledge messages
	Write permission: Edit Safety Integrated application
	Can be changed in the operating state: Commissioning state, device
	Parameter group: Basic functions
	Unit: -
	Min: Max: Factory setting:
	0000 hex FFFF FFFF hex A1A1 A1A1 hex
Description:	Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (reference checksum).
Dependency:	See also: r10098

r10151.0	SI digital inputs status channel B								
	Data type: Unsigned8 Visible in: Standard display								
	Read permission: Read drive data or acknowledge messages								
	Write permission: Edit device configuration or drive applications								
	Parameter group:								
	Unit: -								
Description:	Display for the single-channel, logical and debounced status of the failsafe digital inputs of channel B.								
Bit array:	<table> <thead> <tr> <th>Bit</th> <th>Signal name</th> <th>1 signal</th> <th>0 signal</th> </tr> </thead> <tbody> <tr> <td>00</td> <td>Status of the DI 3+ (X130/2.3)</td> <td>Logical 1</td> <td>Logical 0</td> </tr> </tbody> </table>	Bit	Signal name	1 signal	0 signal	00	Status of the DI 3+ (X130/2.3)	Logical 1	Logical 0
Bit	Signal name	1 signal	0 signal						
00	Status of the DI 3+ (X130/2.3)	Logical 1	Logical 0						
Dependency:	See also: p10017, p10040								

Note

The relationship between the logic level and the external voltage level at the input depends on the parameterization (see p10040) of the input as NC contact or NO contact, and is aligned to the use of a safety function:

With 24 V at the input, NC contacts have a logical "1" level, for 0 V at the input, a logical "0" level.

This means that an NC/NC contact parameterization of 0 V at both inputs of the F-DI leads to a status of the F-DI equal to "0" (safety function selected), for 24 V at both inputs of the F-DI, to a status of the F-DI equal to "1" (safety function deselected).

With 24 V at the input, NO contacts have a logical "0" level, for 0 V at the input, a logical "1" level. This means that for an NC/NO contact parameterization, the level 0 V/24 V leads to a status of the F-DI equal to "0" (safety function selected), the level 24 V/0 V leads to status of the F-DI equal to "1" (safety function deselected).

F-DI: Failsafe Digital Input

17.2 List of parameters

r10171.0	SI F-DI status channel B		
	Data type: Unsigned8	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Display for the status of the failsafe digital inputs.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Status of the F-DI 0	Logical 1 Logical 0
	Note		
	If a safety function (e.g. via c10022) is controlled via an F-DI, then the following applies:		
	- Logical "0": Safety function is selected		
	- Logical "1": safety function is deselected		
	F-DI: Failsafe Digital Input		

r10175.0...15	SI PROFIsafe control word channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: -		
Description:	Displays the control signals for safety-related motion monitoring functions integrated in the drive via PROFIsafe.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Deselect STO	Yes No
	01	Deselect SS1	Yes No
	04	Deselect SLS	Yes No
	07	Acknowledgment	Signal edge active No
	09	Select SLS bit 0	Set Not set
	10	Select SLS bit 1	Set Not set
	12	Deselect SDI positive	Yes No
	13	Deselect SDI negative	Yes No
	15	Deselect SSM	Yes No

r10176	SI PROFIsafe S_SLS_LIMIT_A channel B		
	Data type: Integer16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Extended functions	
	Unit: -		
Description:	Dynamic limit value input for SLS (Safely-Limited Speed) via PROFIsafe.		

r10180.0...15	SI status signals channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:		
	Unit: -		
Description:	Status signals (channel B) for safety-relevant motion monitoring functions integrated in the drive.		

Bit array:	Bit	Signal name	1 signal	0 signal
	00	STO or safe pulse cancellation active	Yes	No
	01	SS1 active	Yes	No
	04	SLS active	Yes	No
	07	Internal event	No	Yes
	09	Active SLS stage bit 0	Set	Not set
	10	Active SLS stage bit 1	Set	Not set
	12	SDI positive active	Yes	No
	13	SDI negative active	Yes	No
	15	SSM (speed below limit value)	Yes	No

NOTICE

For bit 07:

An internal event is displayed if a stop function is active.

The signal state behaves in an opposite way to the PROFIsafe Standard.

Note

Only the function status signals of the available and enabled functions (see p9604) are updated. All others are 0 across the board.

r10198 SI actual checksum across device-specific parameters channel B**Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Basic functions

Unit: -**Description:**

Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (actual checksum) channel B.

Dependency:

See also: p10199

p10199 SI reference checksum across device-specific parameters chan B**Data type:** Unsigned32**Visible in:** Extended display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit Safety Integrated application

Can be changed in the operating state:

Commissioning state, device

Parameter group:

Basic functions

Unit: -**Min:**

0000 hex

Max:

FFFF FFFF hex

Factory setting:

B2B2 B2B2 hex

Description:

Displays the checksum over the checksum-checked parameters for the device-specific parameters of the drive system (reference checksum) channel B.

Dependency:

See also: r10198

r10352.0...17 SI STO select cause**Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Safety Integrated

Unit: -**Description:**

Reason that STO (Safe Torque Off) function was selected.

17.2 List of parameters

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Selection via F-DI	High	Low
	01	Selection via PROFIsafe	High	Low
	04	Safety commissioning mode active	High	Low
	05	Axis parking active / missing actual value	High	Low
	07	Response to SS1	High	Low
	12	Stop response	High	Low
	14	Response to parameterizing error	High	Low
	15	Response to internal software error	High	Low
	17	No communication via PROFIsafe	High	Low

r10353.0...17**SI SS1 select cause****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Safety Integrated

Unit: -**Description:**

Reason for the selection of function SS1 (Safe Stop 1).

Bit array:

Bit	Signal name	1 signal	0 signal
00	Selection via F-DI	High	Low
01	Selection via PROFIsafe	High	Low
12	Stop response	High	Low
13	Selection when transitioning to following function	High	Low
17	No communication via PROFIsafe	High	Low

r10356.0...1**SI SLS select cause****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Safety Integrated

Unit: -**Description:**

Reason for the selection of function SLS (Safely-Limited Speed).

Bit array:

Bit	Signal name	1 signal	0 signal
00	Selection via F-DI	High	Low
01	Selection via PROFIsafe	High	Low

r10360.0...1**SI SDI positive select cause****Data type:** Unsigned32**Visible in:** Standard display**Read permission:**

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Safety Integrated

Unit: -**Description:**

Displays the reason why SDI (Safe Direction) positive was selected.

Bit array:

Bit	Signal name	1 signal	0 signal
00	Selection via F-DI	High	Low
01	Selection via PROFIsafe	High	Low

r10361.0...1	SI SDI negative select cause		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the reason why SDI (Safe Direction) negative was selected.		
Bit array:	Bit	Signal name	1 signal
	00	Selection via F-DI	High
	01	Selection via PROFIsafe	High

r10365.0...1	SI SSM select cause		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the reason why function SSM (Safe Speed Monitor) was selected.		
Bit array:	Bit	Signal name	1 signal
	00	Selection via F-DI	High
	01	Selection via PROFIsafe	High

r10369.6	SI SBC selection cause		
	Data type: Unsigned32	Visible in: Standard display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Reason for the selection of function SBC (Safe Brake Control)		
Bit array:	Bit	Signal name	1 signal
	06	Response to STO	High

r10452.0...15	SI STO select cause channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Reason for the selection of function STO (Safe Torque Off) on channel B.		
Bit array:	Bit	Signal name	1 signal
	00	Selection via F-DI	High
	01	Selection via PROFIsafe	High
	04	Safety commissioning mode active	High
	05	Axis parking active / missing actual value	High
	07	Response to SS1	High
	12	Stop response	High
	14	Response to parameterizing error	High
	15	Response to internal software error	High

17.2 List of parameters

r10453.0...13**SI SS1 select cause channel B**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Reason for the selection of function SS1 (Safe Stop 1) on channel B.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Selection via F-DI	High	Low
	01	Selection via PROFIsafe	High	Low
	12	Stop response	High	Low
	13	Selection when transitioning to following function	High	Low

r10456.0...1**SI SLS select cause channel B**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Reason for the selection of function SLS (Safely-Limited Speed) on channel B.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Selection via F-DI	High	Low
	01	Selection via PROFIsafe	High	Low

r10460.0...1**SI SDI positive select cause channel B**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Displays the reason why SDI (Safe Direction) positive was selected on channel B.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Selection via F-DI	High	Low
	01	Selection via PROFIsafe	High	Low

r10461.0...1**SI SDI negative select cause channel B**

Data type: Unsigned32 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated
Unit: -

Description: Displays the reason why SDI (Safe Direction) negative was selected on channel B.

Bit array:	Bit	Signal name	1 signal	0 signal
	00	Selection via F-DI	High	Low
	01	Selection via PROFIsafe	High	Low

r10465.0...1	SI SSM select cause channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Displays the reason why SI function SSM (Safe Speed Monitor) was selected on channel B.		
Bit array:	Bit	Signal name	1 signal 0 signal
	00	Selection via F-DI	High Low
	01	Selection via PROFIsafe	High Low

r10469.6	SI SBC selection cause channel B		
	Data type: Unsigned32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated	
	Unit: -		
Description:	Reason for the selection of function SBC (Safe Brake Control) on Channel B.		
Bit array:	Bit	Signal name	1 signal 0 signal
	06	Response to STO	High Low

r60000	PROFIdrive reference speed		
	Data type: FloatingPoint32	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:		
	Unit: rpm		
Description:	Sets the reference quantity for the speed values. All speeds specified as relative values refer to this reference quantity. The reference quantity corresponds to 100% or 4000 hex (word) or 4000 0000 hex (double word).		
Dependency:	See also: p2000		
	Note Parameter r60000 is an image of parameter p2000 in conformance with PROFIdrive.		

r60022	PROFIsafe telegram		
	Data type: Unsigned16	Visible in: Extended display	
	Read permission:	Read drive data or acknowledge messages	
	Write permission:	Edit device configuration or drive applications	
	Parameter group:	Safety Integrated, Configuration	
	Unit: -		
Description:	Displays the PROFIsafe telegram.		
Value:	0:	No PROFIsafe telegram selected	
	30:	PROFIsafe standard telegram 30, PZD-1/1	
	901:	PROFIsafe SIEMENS telegram 901, PZD-3/5	
Dependency:	See also: p9611		

r60044	SI message buffer counter changes
	Data type: Unsigned16 Visible in: Extended display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: -
Description:	Displays the changes of the safety message buffer. This counter is incremented every time that the safety message buffer changes.
Recommendation:	This is used to check whether the safety message buffer has been read out consistently.
Dependency:	See also: r9753, r9754, r9755, r9756, r60045, r60048, r60049, p60052
r60045[0...63]	SI message code
	Data type: Unsigned16 Visible in: Extended display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: -
Description:	Displays the numbers of safety messages that have occurred.
Dependency:	See also: r9753, r9754, r9755, r9756, r60044, r60048, r60049, p60052
	Note The messages type "safety message" (Cxxxxx) are entered in the message fault buffer. Message buffer structure (principle): r60045[0], r60048[0], r60049[0], r9753[0], r9754[0], r9755[0], r9756[0] --> safety message 1 (oldest active message) of the actual message case. ... r60045[7], r60048[7], r60049[7], r9753[7], r9754[7], r9755[7], r9756[7] --> safety message 8 (latest active message) of the actual message case, Safety messages that have gone are automatically acknowledged. History of acknowledged messages: r60045[8], r60048[8], r60049[8], r9753[8], r9754[8], r9755[8], r9756[8] --> safety message 1 of the 1st acknowledged message case, ... r60045[16], r60048[16], r60049[16], r9753[16], r9754[16], r9755[16], r9756[16] --> safety message 1 of the 2nd acknowledged message case, ... r60045[56], r60048[56], r60049[56], r9753[56], r9754[56], r9755[56], r9756[56] --> safety message 1 of the 7th acknowledged message case, ... r60045[63], r60048[63], r60049[63], r9753[63], r9754[63], r9755[63], r9756[63] --> safety message 8 (oldest gone message) of the 7th acknowledged message case,
r60047[0...63]	SI message number
	Data type: Unsigned16 Visible in: Extended display Read permission: Read drive data or acknowledge messages Write permission: Edit device configuration or drive applications Parameter group: Extended functions Unit: -
Description:	Displays the numbers of safety messages that have occurred.
Dependency:	See also: r9753, r9754, r9755, r9756, r60044, r60048, r60049, p60052

Note

The messages type "safety message" (Cxxxx) are entered in the message fault buffer.

Message buffer structure (principle):

r60045[0], r60048[0], r60049[0], r9753[0], r9754[0], r9755[0], r9756[0] --> safety message 1 (oldest active message) of the actual message case.

...

r60045[7], r60048[7], r60049[7], r9753[7], r9754[7], r9755[7], r9756[7] --> safety message 8 (latest active message) of the actual message case,

Safety messages that have gone are automatically acknowledged.

History of acknowledged messages:

r60045[8], r60048[8], r60049[8], r9753[8], r9754[8], r9755[8], r9756[8] --> safety message 1 of the 1st acknowledged message case,

...

r60045[16], r60048[16], r60049[16], r9753[16], r9754[16], r9755[16], r9756[16] --> safety message 1 of the 2nd acknowledged message case,

...

r60045[56], r60048[56], r60049[56], r9753[56], r9754[56], r9755[56], r9756[56] --> safety message 1 of the 7th acknowledged message case,

...

r60045[63], r60048[63], r60049[63], r9753[63], r9754[63], r9755[63], r9756[63] --> safety message 8 (oldest gone message) of the 7th acknowledged message case,

r60048[0...63]**SI message time received in milliseconds**

Data type: Unsigned32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: ms

Description:

Displays the relative system runtime in milliseconds when the safety message occurred.

Dependency:

See also: r9753, r9754, r9755, r9756, r60044, r60045, r60049, p60052

r60049[0...63]**SI message value**

Data type: Integer32

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Parameter group:

Extended functions

Unit: -

Description:

Displays the additional information about the safety message that occurred (as integer number).

Dependency:

See also: r9753, r9754, r9755, r9756, r60044, r60045, r60048, p60052

p60052**SI message cases counter**

Data type: Unsigned16

Visible in: Extended display

Read permission:

Read drive data or acknowledge messages

Write permission:

Edit device configuration or drive applications

Can be changed in the operating state: Operation, Ready for operation

Parameter group:

Extended functions

Unit: -

Min:

0

Max:

65535

Factory setting:

0

Description:

Number of safety message cases that have occurred since the last reset.

17.2 List of parameters

Dependency: The safety message buffer is cleared by resetting the parameter to 0.
See also: r9753, r9754, r9755, r9756, r60044, r60045, r60048, r60049

r60100[0...4] PROFIdrive telegram display total

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Displays the send and receive telegrams.

Index: [0] = Subslot 1: MAP
[1] = Subslot 2: PROFIsafe
[2] = Subslot 3: standard/SIEMENS
[3] = Subslot 4: supplementary telegram
[4] = Subslot 5: supplementary telegram

Dependency: See also: r0922, r60022, r60122

Note

Value = 65534: No telegram
Value = 65535: MAP "Module Access Point"

r60122 PROFIdrive SIC/SCC telegram

Data type: Unsigned16 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Safety Integrated, Configuration
Unit: -

Description: Displays the telegram for the Safety Information Channel (SIC) / Safety Control Channel (SCC).

Value: 700: Supplementary telegram 700, PZD-0/3
32766: No telegram

r61000[0...239] PROFINET Name of Station

Data type: Unsigned8 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Displays PROFINET Name of Station.

r61001[0...3] PROFINET IP of Station

Data type: Unsigned8 **Visible in:** Extended display
Read permission: Read drive data or acknowledge messages
Write permission: Edit device configuration or drive applications
Parameter group: Configuration
Unit: -

Description: Displays PROFINET IP of Station.

Faults and alarms

18.1 Overview of faults and alarms

18.1.1 Display of faults/alarms (messages)

Description

In the case of a fault, the converter signals the corresponding fault(s) and/or alarm(s).

The texts about faults and alarms are displayed via the following interfaces:

- Output of messages via the fault and alarm buffer with a fieldbus connection to the higher-level controller.
- Output of messages via the commissioning interface.

18.1.2 Differences between faults and alarms

Overview

An alarm reports an operating state which is non-critical at present. A fault means that it is normally no longer possible to run the motor. The converter therefore responds to alarms and faults differently.

Description of function

The differences between faults and alarms are as follows:

Message type	Response to a message and removal of the message
Fault	<p>How does a converter respond when a fault occurs?</p> <ul style="list-style-type: none"> • Initiate the appropriate fault response • Set the status signal ZSW1.3 • Enter the fault into the fault buffer <p>How are faults eliminated?</p> <ul style="list-style-type: none"> • Remove the cause of the fault • Acknowledge fault
Alarm	<p>How does a converter respond when an alarm occurs?</p> <ul style="list-style-type: none"> • Set the status signal ZSW1.7 • Enter the alarm into the alarm buffer <p>How are alarms eliminated?</p> <ul style="list-style-type: none"> • Alarms are self-acknowledging. <p>If the cause of the alarm is no longer present, the converter resets the alarm.</p>

18.1.3 Explanation of the list of faults and alarms

Description

The messages are displayed according to the following pattern.

Fxxxxx	Fault location (optional): Name									
Message class:	Text of the message class (number according to PROFIdrive)									
Message value:	Component number: %1, fault cause: %2									
Variant:	Product variant									
Component:	Hardware component									
Response:	NONE									
Acknowledgment:	POWER ON									
Explanation of the message value:	For %2									
	<table> <thead> <tr> <th>Value</th> <th>Cause</th> <th>Remedy</th> </tr> </thead> <tbody> <tr> <td>11</td> <td>Fault cause for value = 11</td> <td>Remedy for value = 11</td> </tr> <tr> <td>15</td> <td>Fault cause for value = 15</td> <td>Remedy for value = 15</td> </tr> </tbody> </table>	Value	Cause	Remedy	11	Fault cause for value = 11	Remedy for value = 11	15	Fault cause for value = 15	Remedy for value = 15
Value	Cause	Remedy								
11	Fault cause for value = 11	Remedy for value = 11								
15	Fault cause for value = 15	Remedy for value = 15								
Cause	<p>Description of possible causes.</p> <p>Fault value (r0949, interpret <format>): or alarm value (r2124, interpret <format>): (optional)</p> <p>Information about fault and alarm values (optional).</p>									
Remedy	Description of possible remedies.									

The representation of a message includes as a maximum the information listed below. Depending on the message, some information can be omitted.

- **Fxxxxx**
A message comprises a letter followed by the relevant number.
The meaning of the letters is as follows:
 - A means "Alarm"
 - F means "Fault"
 - N means "No message" ("No Report")
 - C means "Safety message" (dedicated message buffer)
- **Fault location (optional): Name**
The fault location (optional), the name of the fault or alarm and the message number are all used to identify the message (e.g. with the commissioning software).

- **Message class**

Every message is assigned a message class using the following structure:

Text of the message class (number according to PROFIdrive)

The message classes are transferred at different interfaces to the higher-level controller and their associated display and operating units.

The message classes that are available are listed in the following table. In addition to the text of the message class and its number according to PROFIdrive – as well as a brief help text regarding the cause and remedy – they also include information about the various diagnostic interfaces:

- PN (hex)
Specifies the "Channel error type" of the PROFINET channel diagnostics.
When activating the channel diagnostics, using the GSDML file, the texts listed in the table can be displayed.
- DS1 (dec)
Specifies the bit number in data set DS1 of the diagnostic alarm for SIMATIC S7.
When the diagnostic alarms are activated, the texts listed in the table can be displayed.

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
		PN (hex)	DS1 (dec)
Cause and remedy			
Hardware fault/software error A hardware or software malfunction has been identified. <ul style="list-style-type: none"> • Carry out a POWER ON for the relevant component. • If it occurs again, contact the hotline. • Replace device. 	1	9000	0
Line fault A line supply fault has occurred (phase failure, voltage level, etc.). <ul style="list-style-type: none"> • Check the line supply/fuses. • Check the supply voltage. • Check the wiring. 	2	9001	1
Supply voltage fault An electronics supply voltage fault (48 V, 24 V, 5 V...) was detected. <ul style="list-style-type: none"> • Check the wiring. • Check the voltage level. 	3	9002	2
DC link overvoltage The DC link voltage has assumed an inadmissibly high value. <ul style="list-style-type: none"> • Check the dimensioning of the system (line supply, reactor, voltages). • Check the infeed settings. 	4	9003	3

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
Cause and remedy		PN (hex)	DS1 (dec)
<p>Power electronics fault An inadmissible operating state of the power electronics has been identified (overcurrent, overtemperature, IGBT failure, ...).</p> <ul style="list-style-type: none"> • Check that the permissible duty cycles are complied with. • Check the ambient temperatures (fan). 	5	9004	4
<p>Electronic component overload The temperature in the component has exceeded the highest permissible limit.</p> <ul style="list-style-type: none"> • Check the ambient temperature /control cabinet cooling. 	6	9005	5
<p>Ground fault / inter-phase short-circuit detected A ground fault/interphase short-circuit was detected in the power cables or in the motor windings.</p> <ul style="list-style-type: none"> • Check the power cables (connection). • Check the motor. 	7	9006	6
<p>Motor overload The motor was operated outside the permissible limits (temperature, current, torque, ...).</p> <ul style="list-style-type: none"> • Check the duty cycles and set limits. • Check the ambient temperature / motor cooling. 	8	9007	7
<p>Communication error to the higher-level controller The communication to the higher-level controller (internal coupling, PROFIBUS, PROFINET, ...) is faulted or interrupted.</p> <ul style="list-style-type: none"> • Check the state of the higher-level controller. • Check the communication connection/wiring. • Check the bus configuration/clock cycles. 	9	9008	8
<p>Safety monitoring channel has identified an error A safe operation monitoring function (Safety) has identified an error.</p>	10	9009	9
<p>Actual position value / actual speed value incorrect or not available An illegal signal state was detected while evaluating the encoder signals (track signals, zero marks, absolute values, ...).</p> <ul style="list-style-type: none"> • Check the encoder / status of the encoder signals. • Observe the maximum permissible frequencies. 	11	900A	10
<p>Internal (DRIVE-CLiQ) communication error The internal communication between the SINAMICS components is faulted or interrupted.</p> <ul style="list-style-type: none"> • Check the DRIVE-CLiQ wiring. • Ensure an EMC-compliant design. • Observe the maximum quantity structure/cycles. 	12	900B	11

18.1 Overview of faults and alarms

Text of the message class	Number according to PROFIdrive	Diagnostics interface	
Cause and remedy		PN (hex)	DS1 (dec)
<p>Infeed fault The infeed is faulted or has failed.</p> <ul style="list-style-type: none"> • Check the infeed and its environment (line supply, filters, reactors, fuses...). • Check the infeed control. 	13	900C	12
<p>Braking controller / Braking Module faulted The internal or external Braking Module is faulted or overloaded (temperature).</p> <ul style="list-style-type: none"> • Check the connection/state of the Braking Module. • Comply with the permissible number of braking operations and their duration. 	14	900D	13
<p>Line filter faulted The line filter monitoring has identified an excessively high temperature or other inadmissible state.</p> <ul style="list-style-type: none"> • Check the temperature / temperature monitoring. • Check the configuration to ensure that it is permissible (filter type, infeed, thresholds). 	15	900E	14
<p>External measured value / signal state outside of the permissible range A measured value / signal state read in via the input area (digital/analog/temperature) has assumed an inadmissible value/state.</p> <ul style="list-style-type: none"> • Determine and check the relevant signal. • Check the set thresholds. 	16	900F	15
<p>Application / technology function faulted The application / technological function has exceeded a (set) limit (position, speed, torque, ...).</p> <ul style="list-style-type: none"> • Determine and check the relevant limit. • Check the setpoint specified by the higher-level controller. 	17	9010	16
<p>Error in the parameterization/configuration/commissioning sequence An error has been identified in the parameterization or in a commissioning procedure, or the parameterization does not match the existing device configuration.</p> <ul style="list-style-type: none"> • Determine the precise cause of the fault using the commissioning tool. • Adapt the parameterization or device configuration. 	18	9011	17
<p>General drive fault Group fault.</p> <ul style="list-style-type: none"> • Determine the precise cause of the fault using the commissioning tool. 	19	9012	18

- **Message value**
Provides information about the composition of the fault/alarm value.
Example:
Message value: Component number: %1, fault cause: %2
In this example, the message value contains information about the component number and cause of the fault. Entries %1 and %2 are placeholders. If the commissioning software is connected to the converter, then these placeholders are populated with the appropriate values.
- **Variant**
Specifies the product variant in which the message exists. This information is not applicable if an alarm is the same for all product variants.
- **Component**
Type of hardware component that has triggered the fault or alarm. For "None", it is not possible to assign the message to a hardware component.
- **Explanation of the message value**
Explains the possible values of the variables (%n) in the message value. In this case, detailed information can be specified regarding the cause and remedy for specific values.
- **Response**
Specifies the response in the event of a fault.
The following table lists all fault responses and their meanings used for the entire SINAMICS drive family.

List	PROFI-drive	Response	Description
NONE	–	None	No response when a fault occurs.
OFF1	ON/OFF	Brake along the ramp-function generator deceleration ramp followed by pulse inhibit	<ul style="list-style-type: none"> • The motor is braked by immediately specifying $n_set = 0$ at the ramp-function generator deceleration ramp (p1121). • The pulses are suppressed when standstill has been identified. • "Switching on inhibited" is activated.
OFF2	COAST-STOP	Internal/external pulse inhibit	<ul style="list-style-type: none"> • Immediate pulse cancellation, the motor "coasts down" to a standstill. • "Switching on inhibited" is activated.
OFF3	QUICK-STOP	Braking along the OFF3 deceleration ramp followed by pulse inhibit	<ul style="list-style-type: none"> • The motor is braked along the OFF3 deceleration ramp (p1135) by immediately entering $n_set = 0$. • The pulses are suppressed when standstill has been identified. • "Switching on inhibited" is activated.
STOP2	–	STOP2	<ul style="list-style-type: none"> • The motor is braked along the OFF3 deceleration ramp (p1135) by immediately entering $n_set = 0$. • The drive remains in closed-loop speed control.
ENCODER	–	Internal/external pulse inhibit	The ENCODER fault response occurs because of a sensor error and results in OFF2.

18.1 Overview of faults and alarms

- **Acknowledgment**

A fault can only be acknowledged if the cause has been resolved.
 The acknowledgment specifies when the fault can be acknowledged.
 An alarm is self-acknowledging.

Acknowledgment	Description
IMMEDIATELY	Acknowledgment can be immediately realized after the cause has been resolved.
PULSE INHIBIT	Once the cause has been resolved, the fault can only be acknowledged when the pulses are inhibited ($r0899.11 = 0$).
POWER ON	The fault can only be acknowledged using POWER ON (the converter is switched-off/switched-on).
NONE	For alarms (type "A"), an acknowledgment is not required.

- **Cause**

Describes the possible causes of the fault or alarm. Optionally, a message value, fault value or alarm value can be additionally specified.

- **Remedy**

Generally explains possible procedures to resolve the cause of this active fault or alarm.

18.2 List of faults and alarms

Faults and alarms

The following list contains the faults and alarms of the S210 product.

Product: SINAMICS S210, Version: 601122000, Language: eng
Objects: S210

F01000 Internal software error

Message class: Hardware/software error (1)

Message value: Module: %1, line: %2

Component: Control Unit (CU)

Response: OFF2

Acknowledgment POWER ON

:

Cause: An internal software error has occurred.
Fault value (r0949, interpret hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:

- Evaluate fault buffer (r0945).
- Carry out a POWER ON (switch-off/switch-on) for all components.
- If required, check the data on the non-volatile memory (e.g. memory card).
- Upgrade firmware to later version.
- Contact Technical Support.
- Replace the Control Unit.

F01001 FloatingPoint exception

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment POWER ON

:

Cause: An exception occurred for an operation with the FloatingPoint data type.
The error can be caused by the basic system or a technology function.
Fault value (r0949, interpret hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:

- Carry out a POWER ON (switch-off/switch-on).
- Upgrade firmware to later version.
- Contact Technical Support.

F01002 Internal software error

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: An internal software error has occurred.
Fault value (r0949, interpret hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade firmware to later version.
- Contact Technical Support.

F01003 Acknowledgment delay when accessing the memory

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: A memory area was accessed that does not return a "READY".
Fault value (r0949, interpret hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Contact Technical Support.

N01004 Internal software error

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: An internal software error has occurred.
Fault value (r0949, hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:

- Contact Technical Support.

F01005 Firmware download for DRIVE-CLiQ component unsuccessful

Message class: Hardware/software error (1)

Message value: Component number: %1, fault cause: %2

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Explanation of the message value: For %2

Value	Cause	Remedy
11	DRIVE-CLiQ component has detected a checksum error.	After POWER ON has been carried out again for the DRIVE-CLiQ component, download firmware again.
15	The selected DRIVE-CLiQ component did not accept the contents of the firmware file.	Use a suitable firmware version
18	Firmware version is too old and is not accepted by the component.	Use a suitable firmware version
19	Firmware version is not suitable for the hardware release of the component.	Use a suitable firmware version
101	After several communication attempts, no response from the DRIVE-CLiQ component.	Check the DRIVE-CLiQ wiring.
139	Initially, only one new boot loader was loaded.	After POWER ON has been carried out again for the DRIVE-CLiQ component, download firmware again.
140	Firmware file for the DRIVE-CLiQ component not available on the memory card.	Use a suitable firmware version
141	An inconsistent length of the firmware file was signaled.	Use a suitable firmware version
142	Component has not changed to the mode for firmware download.	After POWER ON has been carried out again for the DRIVE-CLiQ component, download firmware again.
156	Component with the specified component number is not available (p7828).	Check the selected component number.

Cause: It was not possible to download the firmware to a DRIVE-CLiQ component.

Fault value (r0949, interpret hexadecimal):

yyxxxx hex: yy = component number, xxxx = fault cause

Example: xxxx = 000B hex = 11 dec:

xxxx = 008D hex = 141 dec:

An inconsistent length of the firmware file was signaled.

The firmware download may have been caused by a loss of connection to the firmware file.

This can occur during a project download/reset in the case of a SINAMICS Integrated Control Unit, for example.

xxxx = 008F hex = 143 dec:

Component has not changed to the mode for firmware download. It was not possible to delete the existing firmware.

xxxx = 0090 hex = 144 dec:

When checking the firmware that was downloaded (checksum), the component detected a fault. It is possible that the file on the memory card is defective.

xxxx = 0091 hex = 145 dec:

Checking the loaded firmware (checksum) was not completed by the component in the appropriate time.

Remedy:

- Check the selected component number.
- Check the DRIVE-CLiQ wiring.
- Use a component with a suitable hardware version.
- After warm restart has been carried out again for the DRIVE-CLiQ component, download the firmware again.

A01006 Firmware update for DRIVE-CLiQ component required

Message class: General drive fault (19)

Message value: Component number: %1

18.2 List of faults and alarms

Component: None
Response: NONE
Acknowledgment NONE
:
Explanation of the message value: For %1
Component in target topology
Cause: The firmware of a DRIVE-CLiQ component must be updated as there is no suitable firmware or firmware version in the component for operation with the converter.
Alarm value (r2124, interpret decimal):
Component number of the DRIVE-CLiQ component.
Remedy: Repeat the firmware update by switching off the device and switching on again.

A01007 POWER ON for DRIVE-CLiQ component required

Message class: General drive fault (19)
Message value: Component number: %1
Component: None
Response: NONE
Acknowledgment NONE
:
Explanation of the message value: For %1
Component in target topology
Cause: A DRIVE-CLiQ component must be switched on again (POWER ON) (e.g. due to a firmware update).
Alarm value (r2124, interpret decimal):
Component number of the DRIVE-CLiQ component.
Note:
For a component number = 1, a POWER ON of the Control Unit is required.
Remedy: - Switch off the power supply of the specified DRIVE-CLiQ component and switch it on again.
- For SINUMERIK, auto commissioning is prevented. In this case, a POWER ON is required for all components and the auto commissioning must be restarted.

A01009 CU: Control module overtemperature

Message class: Overtemperature of the electronic components (6)
Message value: -
Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:
Cause: The temperature (r0037[0]) of the control module (Control Unit) has exceeded the specified limit value.
Remedy: - Check the air intake for the Control Unit.
- Check the Control Unit fan.
Note:
The alarm is automatically withdrawn once the limit value has been fallen below.

F01011 Download interrupted

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: %1
Component: None

Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: The project download was interrupted.
Fault value (r0949, interpret decimal):
1: The user prematurely interrupted the project download.
2: The communication cable was interrupted (e.g. cable breakage, cable withdrawn).
3: The project download was prematurely exited by the commissioning tool.
100: Different versions between the firmware version and project files which were loaded by loading into the file system "Download from memory card".
Note:
The response to an interrupted download is the state "first commissioning".
Remedy:
- Check the communication cable.
- Download the project again.
- Boot from previously saved files (switch-off/switch-on or p0976).
- When loading into the file system (download from memory card), use the matching version.

A01012 Update file invalid or corrupted

Message class: Hardware/software error (1)
Message value: -
Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:
Cause: The converter has identified an invalid or corrupted update file.
Remedy: Replace update file with a valid update file provided by Siemens.

F01015 Internal software error

Message class: Hardware/software error (1)
Message value: %1
Component: Control Unit (CU)
Response: OFF2
Acknowledgment POWER ON
:
Cause: An internal software error has occurred.
Fault value (r0949, interpret decimal):
Only for internal Siemens troubleshooting.
Remedy:
- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade firmware to later version.
- Contact Technical Support.

A01016 Firmware changed

Message class: Hardware/software error (1)
Message value: %1
Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:

18.2 List of faults and alarms

Cause: At least one firmware file in the directory was illegally changed on the non-volatile memory (memory card/device memory) with respect to the version when shipped from the factory.
Alarm value (r2124, interpret decimal):
0: Checksum of one file is incorrect.
1: File missing.
2: File too many.
3: Incorrect firmware version.
4: Incorrect checksum of the backup file.

Remedy: For the non-volatile memory for the firmware (memory card/device memory), restore the delivery condition.

F01018 Runup has been interrupted several times

Message class: Hardware/software error (1)

Message value: -

Component: None

Response: NONE

Acknowledgment POWER ON

:

Cause: Module booting was interrupted several times. As a consequence, the module boots with the factory setting.
Possible reasons for booting being interrupted:
- Power supply interrupted.
- CPU crashed.
- Parameterization invalid.

Remedy: - Carry out a POWER ON (switch-off/switch-on). After switching on, the module reboots from the valid parameterization (if available).
- Restore the valid parameterization.
Examples:
a) Carry out a first commissioning, save, carry out a POWER ON (switch-off/switch-on).
b) Load another valid parameter backup (e.g. from the memory card), save, carry out a POWER ON (switch-off/switch-on).
Note:
If the fault situation is repeated, then this fault is again output after several interrupted boots.

A01019 Writing to the removable data medium unsuccessful

Message class: Hardware/software error (1)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The write access to the removable data medium was unsuccessful.

Remedy: - Check the removable data medium and if required replace.
- Repeat the data backup.

A01020 Writing to RAM disk unsuccessful

Message class: Hardware/software error (1)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: A write access to the internal RAM disk was unsuccessful.

Remedy: Adapt the file size for the system logbook to the internal RAM disk (p9930).

F01023 Software timeout (internal)

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: An internal software timeout has occurred.

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

Remedy: - Carry out a POWER ON (switch-off/switch-on) for all components.

- Upgrade firmware to later version.

- Contact Technical Support.

F01030 Sign-of-life failure for master control

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF3

Acknowledgment IMMEDIATELY

:

Cause: For active PC master control of the PC, no sign-of-life was received within the monitoring time.

The master control was returned to the drive.

Remedy: Set the monitoring time higher at the PC or, if required, completely disable the monitoring function.

The monitoring time is set as follows using the commissioning tool:

<Drive> -> Commissioning -> Control panel -> Button "Fetch master control" -> A window is displayed to set the monitoring time in milliseconds.

Notice:

The monitoring time should be set as short as possible. A long monitoring time means a late response when the communication fails!

F01033 Units changeover: Reference parameter value invalid

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: When changing over the units to the referred representation type, it is not permissible for any of the required reference parameters to be equal to 0.0

Fault value (r0949, parameter):

Reference parameter whose value is 0.0.

Remedy: Set the value of the reference parameter to a number different than 0.0.

See also: r0304 (Rated motor voltage), r0305 (Rated motor current), p2000 (Reference speed), p2002 (Reference current), p2003 (Reference torque)

F01034 Units changeover: Calculation parameter values after reference value change unsuccessful

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1

Component: None

Response: NONE

18.2 List of faults and alarms

Acknowledgment IMMEDIATELY

:

- Cause:** The change of a reference parameter meant that for an involved parameter the selected value was not able to be re-calculated in the per unit representation. The change was rejected and the original parameter value restored.
Fault value (r0949, parameter):
Parameter whose value was not able to be re-calculated.
See also: r0304 (Rated motor voltage), r0305 (Rated motor current), p2000 (Reference speed), p2002 (Reference current), p2003 (Reference torque)
- Remedy:** - Select the value of the reference parameter such that the parameter involved can be calculated in the per unit representation.
-

A01035 ACX: Parameter backup file corrupted

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

- Cause:** When the Control Unit is booted, no complete data set was found from the parameter backup files. The last time that the parameterization was saved, it was not completely carried out.
It is possible that the backup was interrupted by switching off or withdrawing the memory card.
Alarm value (r2124, interpret hexadecimal):
ddccbbaa hex:
aa = 01 hex:
Power up was realized without data backup. The drive is in the factory setting.
aa = 02 hex:
The last available backup data record was loaded. The parameterization must be checked. It is recommended that the parameterization is downloaded again.
dd, cc, bb:
Only for internal Siemens troubleshooting.
See also: p0977 (Save all parameters)
- Remedy:** - Download the project again using the commissioning tool.
- Save all parameters (p0977 = 1 or retentively save).
See also: p0977 (Save all parameters)
-

F01036 Parameter backup file missing

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

- Cause:** When loading the device parameterization, a parameter backup file cannot be found.
- Remedy:** If you have saved your project data using the commissioning tool, carry-out a new download for your project.
Save parameters (p0977 = 1 or retentively save).
This means that the parameter files are again completely written into the non-volatile memory.
Note:
If the project data have not been backed up, then a new first commissioning is required.
-

F01039 ACX: Writing to the parameter backup file was unsuccessful

Message class: Hardware/software error (1)

Message value: %1
Component: Control Unit (CU)
Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: Writing to at least one parameter backup file PSxxxxyy.*** in the non-volatile memory was unsuccessful.
- A parameter backup file PSxxxxyy.*** has the "read only" file attribute and cannot be overwritten.
- There is not sufficient free memory space available.
- The non-volatile memory is defective and cannot be written to.
Fault value (r0949, interpret hexadecimal):
dcba hex
a = yy in the file names PSxxxxyy.***
a = 000 --> consistency backup file
a = 001 ... 062 --> drive object number
a = 070 --> FEPROM.BIN
a = 080 --> DEL4BOOT.TXT
a = 099 --> PROFIBUS parameter backup file
b = xxx in the file names PSxxxxyy.***
b = 000 --> data save started with p0977 = 1
b = 010 --> data save started with p0977 = 10
b = 011 --> data save started with p0977 = 11
b = 012 --> data save started with p0977 = 12
d, c:
Only for internal Siemens troubleshooting.
Remedy:
- Check the file attribute of the files (PSxxxxyy.***, CAxxxxyy.***, CCxxxxyy.***) and, if required, change from "read only" to "writeable".
- Check the free memory space in the non-volatile memory. Approx. 80 kbyte of free memory space is required for every drive object in the system.
- Replace the memory card or Control Unit.

F01040 Save parameter settings and carry out a POWER ON

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: -
Component: None
Response: OFF2
Acknowledgment POWER ON
:
Cause: A parameter was changed, which means that it is necessary to save the parameters and reboot.
Remedy:
- Save parameters (p0977).
- Carry out a POWER ON (switch-off/switch-on).
Then:
- Upload the data to the converter (commissioning tool).

F01041 Parameter save necessary

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: %1
Component: None
Response: NONE
Acknowledgment IMMEDIATELY
:

18.2 List of faults and alarms

Cause: Defective or missing files were detected on the memory card when booting.

Fault value (r0949, interpret decimal):

- 1: Source file cannot be opened.
- 2: Source file cannot be read.
- 3: Target directory cannot be set up.
- 4: Target file cannot be set up/opened.
- 5: Target file cannot be written to.

Additional values:

Only for internal Siemens troubleshooting.

Remedy:

- Save the parameters.
- Download the project again to the drive unit.
- Update the firmware
- If required, replace the Control Unit and/or memory card.

F01042 Parameter error during project download

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1, index: %2, fault cause: %3

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: An error was detected when downloading a project using the commissioning software (e.g. incorrect parameter value). It is possible that the parameter limits are dependent on other parameters.
The detailed cause of the fault can be determined using the fault value.
Fault value (r0949, interpret hexadecimal):
ccbbaaaa hex
aaaa = Parameter
bb = Index
cc = fault cause

- 0: Parameter number illegal.
- 1: Parameter value cannot be changed.
- 2: Lower or upper value limit exceeded.
- 3: Sub-index incorrect.
- 4: No array, no sub-index.
- 5: Data type incorrect.
- 6: Setting not permitted (only resetting).
- 7: Descriptive element cannot be changed.
- 9: Descriptive data not available.
- 11: No master control.
- 15: No text array available.
- 17: Task cannot be executed due to operating state.
- 20: Illegal value.
- 21: Response too long.
- 22: Parameter address illegal.
- 23: Format illegal.
- 24: Number of values not consistent.
- 25: Drive object does not exist.
- 101: Presently deactivated.
- 104: Illegal value.
- 107: Write access not permitted when controller enabled.
- 108: Unit unknown.
- 109: Write access only in the commissioning status, encoder.
- 110: Write access only in the commissioning status, motor.
- 111: Write access only in the commissioning status, power unit.
- 112: Write access only in the quick commissioning mode.
- 113: Write access only in the ready mode.
- 114: Write access only in the commissioning status, parameter reset.
- 115: Write access only in the Safety Integrated commissioning status.
- 116: Write access only in the commissioning status, technological application/units.
- 117: Write access only in the commissioning status.
- 118: Write access only in the commissioning status, download.
- 119: Parameter may not be written in download.
- 120: Write access only in the commissioning status, drive basis configuration.
- 121: Write access only in the commissioning status, define drive type.
- 122: Write access only in the commissioning status, data set basis configuration.
- 123: Write access only in the commissioning status, device configuration.
- 124: Write access only in the commissioning status, device download.
- 125: Write access only in the commissioning status, device parameter reset.
- 126: Write access only in the commissioning status, device ready.
- 127: Write access only in the commissioning status, device.
- 129: Parameter may not be written in download.
- 131: Requested signal interconnection not possible as the signal source does not supply float value.
- 132: Free signal interconnection via PROFIdrive telegram setting inhibited.

18.2 List of faults and alarms

- 133: Access method not defined.
- 200: Below the valid values.
- 201: Above the valid values.
- 202: Cannot be accessed from the Basic Operator Panel (BOP).
- 203: Cannot be read from the Basic Operator Panel (BOP).
- 204: Write access not permitted.

Remedy:

- Correct the parameterization in the commissioning tool and download the project again.
- Enter the correct value in the specified parameter.
- Identify the parameter that restricts the limits of the specified parameter.

F01043 Fatal error at project download

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Fault cause: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: A fatal error was detected when downloading a project using the commissioning tool.

Fault value (r0949, interpret decimal):

- 1: Device status cannot be changed to Device Download (drive object ON?).
- 2: Incorrect drive object number.
- 3: A drive object that has already been deleted is deleted again.
- 4: Deleting a drive object that has already been registered for generation.
- 5: Deleting a drive object that does not exist.
- 6: Generating an undeleted drive object that already existed.
- 7: Regenerating a drive object already registered for generation.
- 8: Maximum number of drive objects that can be generated exceeded.
- 9: Error while generating a device drive object.
- 10: Error when generating the target topology parameter.
- 11: Error when generating a drive object (global component).
- 12: Error when generating a drive object (drive component).
- 13: Unknown drive object type.
- 14: Drive status cannot be changed to "ready for operation" (r0947 and r0949).
- 15: Drive status cannot be changed to drive download.
- 16: Device status cannot be changed to "ready for operation".
- 17: It is not possible to download the topology. The component wiring should be checked, taking into account the various messages/signals.
- 18: A new download is only possible if the factory settings are restored for the drive unit.
- 20: The configuration is inconsistent.
- 21: Error when accepting the download parameters.
- 22: Software-internal download error.
- 24: Download not possible during a partial power up after inserting a component.

Additional values:

Only for internal Siemens troubleshooting.

Remedy:

- Use the current version of the commissioning tool.
- Modify the offline project and carry out a new download (e.g. compare the number of drive objects, motor, encoder, power unit in the offline project and at the drive).
- Change the drive state (is a drive rotating or is there a message/signal?).
- Observe additional active messages/signals and remove their cause (e.g. correct any incorrectly set parameters).
- Automatically calculate the control parameters.
- Boot from previously saved files (switch-off/switch-on or p0976).
- Before a new download, restore the factory setting.

F01044 CU: Descriptive data error

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment POWER ON

:

Cause: An error was detected when loading the descriptive data saved in the non-volatile memory.

Remedy: Replace the memory card or Control Unit.

A01045 CU: Configuring data invalid

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: An error was detected when evaluating the parameter files PSxxxxxyy.ACX, PTxxxxyy.ACX, CAxxxxyy.ACX, or CCxxxxyy.ACX saved in the non-volatile memory. Because of this, under certain circumstances, several of the saved parameter values were not able to be accepted.

Alarm value (r2124, interpret hexadecimal):

Only for internal Siemens troubleshooting.

Remedy: - Restore the factory setting (p0976 = 1) and reload the project into the converter.

Then save the parameterization using the "Copy RAM to ROM" or with p0977 = 1. This overwrites the incorrect parameter files in the non-volatile memory – and this alarm is withdrawn.

A01049 CU: It is not possible to write to file

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: It is not possible to write to a write-protected parameter backup file. The write request was interrupted.

Alarm value (r2124, interpret decimal):

Drive object number.

Remedy: Check whether the "write protected" attribute has been set for the files in the non-volatile memory.

When required, remove write protection and repeat the save operation (e.g. set p0977 = 1).

F01050 Memory card and device incompatible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The memory card and the device type do not match (e.g. a memory card for SINAMICS S is inserted in SINAMICS G).

Remedy: - Insert the matching memory card.

- Use the matching Control Unit or power unit.

A01069 Parameter backup and device incompatible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The parameter backup on the memory card and the drive unit do not match.
The module boots with the factory settings.

Example:

Devices A and B. are not compatible and a memory card with the parameter backup for device A is inserted in device B.

Remedy: - Insert a memory card with compatible parameter backup and carry out a POWER ON.
- Insert a memory card without parameter backup and carry out a POWER ON.
- Save the parameters (p0977 = 1).

F01070 Project/firmware is being downloaded to the memory card

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: An upgrade (project/firmware download) was initiated on the memory card.
While this fault is active, the corresponding update takes place with plausibility and consistency checks. After this, depending on the command option, a new boot (reset) for the Control Unit is initiated.

Caution:

It is not permissible to switch off the Control Unit during the upgrade and while this fault is active.

If the operation is interrupted, this can destroy the file system on the memory card. The memory card will then no longer work properly and must be repaired.

Remedy: Not necessary.
The fault is automatically withdrawn after the upgrade has been completed.

F01072 Memory card restored from the backup copy

Message class: General drive fault (19)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The Control Unit was switched-off while writing to the memory card. This is why the visible partition became defective.
After switching on, the data from the non-visible partition (backup copy) were written to the visible partition.

Remedy: Check that the firmware and parameterization is up-to-date.

A01073 POWER ON required for backup copy on memory card

Message class: General drive fault (19)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

- Cause:** The parameter assignment on the visible partition of the memory card has changed.
In order that the backup copy on the memory card is updated on the non-visible partition, it is necessary to carry out a POWER ON or hardware reset (p0972) of the converter.
Note:
It is possible that a new POWER ON is requested via this alarm.
- Remedy:**
- Carry out a POWER ON for the converter (switch off/switch on).
 - Carry out a hardware reset (RESET button, p0972).

F01082 Parameter error when running up from data backup

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1, index: %2, fault cause: %3

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

- Cause:** Parameterizing errors have been detected (e.g. incorrect parameter value). It is possible that the parameter limits are dependent on other parameters.
The detailed cause of the fault can be determined using the fault value.
Fault value (r0949, interpret hexadecimal):
ccbbaaaa hex
aaaa = Parameter
bb = Index
cc = fault cause
- 0: Parameter number illegal.
 - 1: Parameter value cannot be changed.
 - 2: Lower or upper value limit exceeded.
 - 3: Sub-index incorrect.
 - 4: No array, no sub-index.
 - 5: Data type incorrect.
 - 6: Setting not permitted (only resetting).
 - 7: Descriptive element cannot be changed.
 - 9: Descriptive data not available.
 - 11: No master control.
 - 15: No text array available.
 - 17: Task cannot be executed due to operating state.
 - 20: Illegal value.
 - 21: Response too long.
 - 22: Parameter address illegal.
 - 23: Format illegal.
 - 24: Number of values not consistent.
 - 25: Drive object does not exist.
 - 101: Presently deactivated.
 - 104: Illegal value.
 - 107: Write access not permitted when controller enabled.
 - 108: Unit unknown.
 - 109: Write access only in the commissioning status, encoder.
 - 110: Write access only in the commissioning status, motor.
 - 111: Write access only in the commissioning status, power unit.
 - 112: Write access only in the quick commissioning mode.
 - 113: Write access only in the ready mode.
 - 114: Write access only in the commissioning status, parameter reset.
 - 115: Write access only in the Safety Integrated commissioning status.
 - 116: Write access only in the commissioning status, technological application/units.
 - 117: Write access only in the commissioning status.
 - 118: Write access only in the commissioning status, download.
 - 119: Parameter may not be written in download.
 - 120: Write access only in the commissioning status, drive basis configuration.
 - 121: Write access only in the commissioning status, define drive type.
 - 122: Write access only in the commissioning status, data set basis configuration.
 - 123: Write access only in the commissioning status, device configuration.
 - 124: Write access only in the commissioning status, device download.
 - 125: Write access only in the commissioning status, device parameter reset.
 - 126: Write access only in the commissioning status, device ready.
 - 127: Write access only in the commissioning status, device.
 - 129: Parameter may not be written in download.
 - 131: Requested signal interconnection not possible as the signal source supplies non-float value.
 - 132: Free signal interconnection via PROFIdrive telegram setting inhibited.

133: Access method not defined.
200: Below the valid values.
201: Above the valid values.
202: Cannot be accessed from the Basic Operator Panel (BOP).
203: Cannot be read from the Basic Operator Panel (BOP).
204: Write access not permitted.

Remedy:

- Correct the parameterization in the commissioning tool and download the project again.
- Enter the correct value in the specified parameter.
- Identify the parameter that restricts the limits of the specified parameter.

F01122 Frequency at the measuring probe input too high

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The frequency of the pulses at the measuring probe input is too high.

Fault value (r0949, interpret decimal):

1: DI/DO 9 (X122.8)

2: DI/DO 10 (X122.10)

4: DI/DO 11 (X122.11)

8: DI/DO 13 (X132.8)

16: DI/DO 14 (X132.10)

32: DI/DO 15 (X132.11)

64: DI/DO 8 (X122.7)

128: DI/DO 12 (X132.7)

Remedy: Reduce the frequency of the pulses at the measuring probe input.

F01250 CU: CU-EEPROM incorrect read-only data

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment POWER ON

:

Cause: Error when reading the read-only data of the EEPROM in the Control Unit.

Fault value (r0949, interpret decimal):

Only for internal Siemens troubleshooting.

Remedy:

- Carry out a POWER ON (switch-off/switch-on).
- Replace the Control Unit.

A01251 EEPROM incorrect read-write data

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

18.2 List of faults and alarms

Cause: Error when reading the read-write data of the EEPROM in the converter.
Alarm value (r2124, interpret decimal):
Only for internal Siemens troubleshooting.

Remedy: For alarm value < 256, the following applies:
- Carry out a POWER ON (switch-off/switch-on).
- Replace the converter.
For alarm value >= 256, the following applies:
- For the drive object with this alarm, clear the fault memory (p0952 = 0).
- Replace the converter.

A01304 Firmware version of DRIVE-CLiQ component is not up-to-date

Message class: General drive fault (19)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The non-volatile memory has a more recent firmware version than the one in the connected DRIVE-CLiQ component.
Alarm value (r2124, interpret decimal):
Component number of the DRIVE-CLiQ component involved.

Remedy: Repeat the firmware update by switching off the device and switching on again.

A01306 Firmware of the DRIVE-CLiQ component being updated

Message class: General drive fault (19)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: Firmware update is active for at least one DRIVE-CLiQ component.
Alarm value (r2124, interpret decimal):
Component number of the DRIVE-CLiQ component.

Remedy: Not necessary.
This alarm is automatically withdrawn after the firmware update has been completed.

A01330 Topology: Commissioning not possible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: Unable to carry out commissioning. The actual topology does not fulfill the requirements.

Remedy: - Check the OCC cable between the converter and motor/encoder.
- Carry out a POWER ON (switch-off/switch-on).
- Check that the connected hardware is supported.

Note:

OCC: One Cable Connection (one cable system)

F01357 **Topology: Two converters identified on the DRIVE-CLiQ line**

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: component number: %1, connection number: %2

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: In the actual topology, 2 converters are connected with one another through DRIVE-CLiQ.
As standard, this is not permitted.

Fault value (r0949, interpret hexadecimal):

yyxx hex:

yy = connection number of the converter to which the second converter is connected

xx = component number of the converter to which the second converter is connected

Note:

Pulse enable is withdrawn and prevented.

Remedy: - Remove the connection to the second converter and restart.

A01489 **Topology: motor with DRIVE-CLiQ not connected**

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Component: %1, to %2, %3, connection: %4

Component: None

Response: NONE

18.2 List of faults and alarms

Acknowledgment NONE

:

Explanation of the message value: For %1, %3

Component in target topology

Explanation of the message value: For %2

Value Cause

Remedy

- 0 Component unknown
- 1 Control Unit
- 2 Motor Module
- 3 Line Module
- 4 Sensor Module
- 5 Voltage Sensing Module
- 6 Terminal Module
- 7 DRIVE-CLiQ Hub Module
- 8 Controller Extension
- 9 Filter module
- 10 Hydraulic Module
- 49 DRIVE-CLiQ component
- 50 Option slot
- 60 Encoder
- 70 DRIVE-CLiQ motor
- 71 Hydraulic cylinder
- 72 Hydraulic valve
- 80 Motor

Explanation of the message value: For %4

Value Cause

Remedy

- 0 Port 0
- 1 Port 1
- 2 Port 2
- 3 Port 3
- 4 Port 4
- 5 Port 5
- 6 Port 6
- 7 Port 7
- 8 Port 8
- 9 Port 9
- 10 X100
- 11 X101
- 12 X102
- 13 X103
- 14 X104
- 15 X105
- 20 X200
- 21 X201

22 X202
23 X203
24 X204
25 X205
40 X400
41 X401
42 X402
50 X500
51 X501
52 X502
53 X503
54 X504
55 X505
56 X506
57 X507

Cause: The topology comparison has detected a motor with DRIVE-CLiQ missing in the actual topology with respect to the target topology.
Alarm value (r2124, interpret hexadecimal):
ddccbbaa hex:
dd = connection number (%4)
cc = component number (%3)
bb = component class (% 2)
aa = component number of the component that has not been inserted (% 1)
Note:
The component is described in dd, cc and bb, where the component has not been inserted.
Component class and connection number are described in F01375.

Remedy: Adapting topologies:
- Insert the components involved at the right connection (correct the actual topology).
- Adapt the project/parameterizing in the commissioning tool (correct the target topology).
Check the hardware:
- Check the 24 V supply voltage.
- Check DRIVE-CLiQ cables for interruption and contact problems.
- Check that the component is working properly.
Note:
Under "Topology --> Topology view" the commissioning tool where relevant offers improved diagnostics capability (e.g. setpoint/actual value comparison).

A01590 Drive: Motor maintenance interval expired

Message class: General drive fault (19)

Message value: Fault cause: %1 bin

Component: Motor

Response: NONE

Acknowledgment NONE

:

Cause: The selected service/maintenance interval for this motor was reached.
Alarm value (r2124, interpret decimal):
Motor data set number.

Remedy: carry out service/maintenance and reset the service/maintenance interval (p0651).

C01600 SI: STO self test failed

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The "Safety Integrated" function integrated in the drive has identified a fault in the self-test of the switch-off signal path, and has initiated an STO (Safe Torque Off).

Fault value (r60049, interpret decimal):

1005: STO active, although STO not selected and there is no internal STO active.

1010: STO inactive, although STO is selected or an internal STO is active.

1015: The self-test was unsuccessful in operation.

1016: Error in the communication path for brake/FDI/FDO/STO

Remedy:

- Select STO and then deselect again.
- Carry out a POWER ON (switch-off/switch-on) for all components.
- Upgrade software to a later version.
- Ensure that the drive and all of its connected components are connected up in compliance with EMC regulations. Inadequately fixed motor phases or a non-compliant grounding concept can result in this fault.
- Contact Technical Support.

C01603 SI: Module temperature - limit value exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: A safe monitoring function has detected that the module temperature has exceeded a limit value. STO (Safe Torque Off) was initiated to maintain the safe state.

Remedy:

- Check the ambient temperature.
- Check the module fan.
- Operate the module in the permissible range.

F01604 SI: Safety EEPROM data error

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment POWER ON

:

Cause: Safety relevant EEPROM data are not correct.
This message results in an STO (Safe Torque Off).

Message value (r0949, interpret decimal): Only for internal Siemens fault diagnostics.

Remedy: Replace the module.

A01605 SI: Checksum error has occurred

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:
Cause: A checksum error (CRC error) has occurred in the converter program memory.
Alarm value (r2124, interpret decimal):
Only for internal Siemens troubleshooting.
Remedy: - Carry out a POWER ON (switch-off/switch-on).
- Upgrade firmware to later version.
- Contact Technical Support.

C01630 SI: Brake control error

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The "Safety Integrated" function integrated in the drive has identified a brake control fault, and has initiated an STO.

Fault value (r0949, interpret decimal):

1, 2:

- Motor cable is not shielded correctly.
- Defect in the brake control circuit of the Control Unit.
- Ground fault in brake cable.

3:

Hardware is defective or does not support the brake control.

- Communication with the brake control has failed.
- SBC is enabled on a module that does not support brake control.

4:

- Brake is not connected or interrupted cable.

Remedy:

- Check the motor holding brake connection.
- Check the function of the motor holding brake.
- Check whether the brake control is supported.
- Check whether there is a DRIVE-CLiQ communication error, and if required, carry out a diagnostics routine for the faults involved.
- Check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).
- Replace the Control Unit.

Note:

SBC: Safe Brake Control

SI: Safety Integrated

A01631 SI: Motor holding brake/SBC configuration not practical

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

18.2 List of faults and alarms

Cause: A configuration of motor holding brake and SBC was detected that is not practical.
 The following configurations can result in this message:
 - "No motor holding brake available" (p1215 = 0) and "SBC" enabled (p9604 bit 1 = 1 and p9603>0).
 - "Motor holding brake just like the sequence control, connection via signal interconnection" (p1215 = 3) and "SBC" enabled (p9604 Bit 1 = 1 and p9603>0).

Remedy: Check the parameterization of the motor holding brake and SBC and correct.
 Note:
 SBC: Safe Brake Control
 See also: p1215 (Motor holding brake configuration), p9603 (SI control), p9604 (SI enable)

A01637 SI: Safety configuration not protected

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

Cause: Safety configuration is not protected using UMAC (User Management and Access Control).

Remedy: Activate UMAC and assign rights for changing the safety configuration (EditDriveSafetyApplication), exclusively for a role with a password.

A01641 SI: Component exchange identified and save necessary

Message class: General drive fault (19)

Message value: Fault cause: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

Explanation of the message value: For %1

Bit	Cause	Remedy
3	It was identified that OM-SMT has been replaced	
4	It was identified that the Sensor Module has been replaced	
5	It was identified that the sensor has been replaced	

Cause: "Safety Integrated" has identified that a component has been replaced.
 No additional stop response is initiated, and therefore the operation of the specific drive is not restricted.
 When safety functions are active, after a component has been replaced it is necessary to carry out a partial acceptance test.
 Alarm value (r2124, interpret binary).

Remedy: - Save all parameters (p0977 = 1 or retentively save).
 - Acknowledge fault.
 See also: r9776 (SI diagnostics)

F01646 SI: Change logbook

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The saved functional safety checksum (r9780[0]) or hardware-related safety checksum (r9780[1]) differs from the safety checksum calculated when running up or a previously calculated safety checksum was not found.
 An acceptance test is required as changes have been made to a safety parameter or the safety hardware.
 Fault value (r0949, interpret decimal):
 1: The safety logbook has identified that a functional safety checksum has changed. An acceptance test is required.
 2: The safety logbook has identified that a hardware-related safety checksum has changed. An acceptance test is required.

Remedy: For fault value = 1:
 - Carry out an acceptance test and generate an acceptance report.
 For fault value = 2:
 - Carry out the function checks for the modified hardware and generate an acceptance report.

Note:
 The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the following literature:
 SINAMICS Function Manual Safety Integrated

C01647 SI: PROFIsafe PLC configuring not the same as the parameterization

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: %1
Component: None
Response: OFF2
Acknowledgment IMMEDIATELY
:

Cause: The drive has identified a difference between the PROFIsafe configuring in the F-PLC and the parameterization in SINAMICS.
Note:
 This message results in an STO (Safe Torque Off).
 Message value (r60049, interpret decimal):
 1: The PROFIsafe telegram number in the F-PLC configuration is not identical with the value in p9611.
 2: The PROFIsafe monitoring time F_WD_Time in the F-PLC configuration is not identical with the value in p9614.

Remedy:
 - Change the configuring in the F-PLC and load to the drive.
 - Adapt the parameterization in the drive to the configuration in the F-PLC.

C01648 SI: PROFIsafe communication error

Message class: Safety monitoring channel has identified an error (10)
Message value: %1
Component: None
Response: NONE
Acknowledgment IMMEDIATELY
:

18.2 List of faults and alarms

Cause: The drive has identified a PROFIsafe communication error.

Note:

This message leads to STO, if p9612 = 0 and leads to SS1, if p9612 = 1.

Message value (r60049, interpret decimal):

6000 ... 6166:

PROFIsafe message values (PROFIsafe driver for PROFIBUS DP V1/V2 and PROFINET).

For these message values, the failsafe control signals (Failsafe Values) are transferred to the safety functions. If "SS1 after failure of PROFIsafe communication" is parameterized (p9612), then transfer of the Failsafe Values is delayed.

6064 ... 6076: Error when evaluating F parameters. The values of the transferred F parameters do not match the expected values.

6064: Destination address and PROFIsafe address are different (F_Dest_Add != p9610).

6065: Destination address not valid (F_Dest_Add == 0 or 0xFFFF).

6066: Source address not valid (F_Source_Add == 0 or 0xFFFF) or source address and PROFIsafe source address different (F_Source_Add != p9613).

6067: Watchdog time not valid (F_WD_Time == 0).

6068: Incorrect SIL level (F_SIL).

6069: Incorrect F-CRC length (F_CRC_Length).

6070: Incorrect F parameter version (F_Par_Version).

6071: CRC error for the F parameters (CRC1). The transferred CRC value of the F parameters does not match the value calculated in the PROFIsafe driver.

6072: F parameterization is inconsistent.

6076: Incorrect F_block_ID.

6165: A communications error was identified when receiving the PROFIsafe telegram. The error can also occur if an inconsistent or out-of-date PROFIsafe telegram was received after switching the system off and on, or after inserting the PROFIBUS/PROFINET cable.

6166: A time monitoring error (timeout) was identified when receiving the PROFIsafe telegram.

>65535: A fatal PROFIsafe communication error has occurred (only for internal Siemens error diagnostics).

- Remedy:**
- For message value = 6064:
 - Check the setting of the value in the F parameter F_Dest_Add at the PROFIsafe device.
 - Check the setting of the PROFIsafe address (p9610).
 - For message value = 6065:
 - Check the setting of the value in the F parameter F_Dest_Add at the PROFIsafe device. It is not permissible that the destination address is 0 or FFFF.
 - For message value = 6066:
 - Check the setting of the value in the F parameter F_Source_Add at the PROFIsafe device. It is not permissible that the source address is 0 or FFFF.
 - Check the setting of the PROFIsafe source address (p9613).
 - For message value = 6067:
 - Check the setting of the value in the F parameter F_WD_Time at the PROFIsafe device. It is not permissible for the watchdog time to be 0.
 - For message value = 6068:
 - Check the setting of the value in F parameter F_SIL at the PROFIsafe device.
 - For message value = 6069:
 - Check the setting of the value in the F parameter F_CRC_Length at the PROFIsafe device.
 - For message value = 6070:
 - Check the setting of the value in the F parameter F_Par_Version at the PROFIsafe device. The value for the F parameter version is 0 in the V1 mode and 1 in the V2 mode.
 - For message value = 6071:
 - Check the setting of the values of the F parameters and the F parameter CRC (CRC1) calculated from these at the PROFIsafe device and update if necessary.
 - For message value = 6072:
 - Check the settings of the values for the F parameters and, if required, correct.
- The following combinations are permissible for F parameters F_CRC_Length and F_Par_Version:
- F_CRC_Length = 3-byte CRC and F_Par_Version = 1
 - F_CRC_Length = 4-byte CRC and F_Par_Version = 1
- For message value = 6076:
 - Check the settings of the values for the F parameters and, if required, correct.
 - For message value = 6165:
 - If the fault occurs after powering up or after inserting the PROFIBUS/PROFINET cable, acknowledge the fault.
 - Check the configuration and communication at the PROFIsafe device.
 - Check the setting of the value for F parameter F_WD_Time at the PROFIsafe device and increase if necessary.
 - Check whether all F parameters of the drive match the F parameters of the F host.
 - For message value = 6166:
 - Check the configuration and communication at the PROFIsafe device.
 - Check the setting of the value for F parameter F_WD_Time at the PROFIsafe device and increase if necessary.
 - Evaluate diagnostic information in the F host.
 - Check PROFIsafe connection.
 - Check whether all F parameters of the drive match the F parameters of the F host.
 - For message value > 65535:
 - Carry out a POWER ON (switch-off/switch-on) for all components.
 - Check whether other faults are active - and when necessary, diagnose the faults involved.
 - Increase the monitoring cycle clock settings (p9500, p9511).
 - Upgrade firmware to later version.
 - Contact Technical Support.
 - Replace hardware relevant for the communication.

C01649 SI: Internal software error

Message class: Hardware/software error (1)

Message value: Module: %1, line: %2

Component: Control Unit (CU)

18.2 List of faults and alarms

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: An internal error has occurred in the Safety Integrated software.

Note:

This message results in an STO (Safe Torque Off) that cannot be acknowledged.

Message value (r60049, interpret hexadecimal): Only for internal Siemens fault diagnostics.

Remedy:

- Carry out a POWER ON (switch-off/switch-on) for all components.
- Re-commission the "Safety Integrated" function and carry out a POWER ON.
- Upgrade firmware to later version.
- Ensure that the drive and all of its connected components are connected up in compliance with EMC regulations. Inadequately fixed motor phases or a non-compliant grounding concept can result in this fault.
- Contact Technical Support.
- Replace hardware component.

F01650 SI: Acceptance test required

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The drive-integrated "Safety Integrated" function requires an acceptance test.

Message value (r0949, interpret decimal):

2003: Acceptance test is required as a safety parameter has been changed.

Remedy: For message value = 2003:

- Carry out an acceptance test and generate an acceptance report.

The procedure when carrying out an acceptance test as well as an example of the acceptance report are provided in the product operating instructions.

C01652 SI: Monitoring clock cycle not permissible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: One of the Safety Integrated monitoring clock cycles is not permissible.

- The monitoring clock cycle for safe motion monitoring functions is not permissible (p9500).

- The actual value sensing clock cycle for safe motion monitoring functions is not permissible (p9511).

- The sampling time for the current controller cannot be supported.

Message value (r60049, interpret decimal):

When motion monitoring is enabled (p9603 > 0), the following applies:

100: No matching monitoring clock cycle was able to be found.

107: The actual value sensing clock cycle (p9511) is not an integer multiple of the sampling time of the current controller.

108: The parameterized actual value sensing clock cycle cannot be set on this component.

111: The monitoring clock cycle is not an integer multiple of the sampling time of the current controller.

Remedy: When motion monitoring is enabled (p9603 > 0):
 - Upgrade firmware to later version.
 - Correct the monitoring clock cycle (p9500) and carry out POWER ON.
 For message value = 107, 108:
 Set the actual value sensing clock cycle in p9511 as an integer multiple of the current controller sampling time (p9511 = n * current controller clock cycle), and at the same time as an integer divisor of the monitoring clock cycle (p9511 = p9500 / m).
 For message value = 111:
 Set the monitoring clock cycle in p9500 as an integer multiple of the sampling time of the current controller.

C01653 SI: PROFINET configuration error

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY
 :

Cause: There is a PROFINET configuration error for using Safety Integrated monitoring functions with a higher-level control (F-PLC).
 Note:

When the safety functions are enabled, this fault results in an STO that cannot be acknowledged.

Fault value (r0949, interpret decimal):

200: A safety slot for receive data from the control has not been configured.

210, 220: The configured safety slot for the receive data from the control has an unknown format.

230: The configured safety slot for the receive data from the F-PLC has the incorrect length.

231: The configured safety slot for the receive data from the F-PLC has the incorrect length.

250: A PROFIsafe slot is configured in the higher-level F control, however PROFIsafe is not enabled in the drive.

300: A safety slot for the send data to the control has not been configured.

310, 320: The configured safety slot for the send data to the control has an unknown format.

330: The configured safety slot for the send data to the F-PLC has the incorrect length.

331: The configured safety slot for the send data to the F-PLC has the incorrect length.

400: The telegram number in the F-PLC does not match the parameterization in the drive.

Remedy: The following generally applies:

- Check and, if necessary, correct the PROFINET configuration of the safety slot on the controller side.
- Upgrade the drive firmware to a later version.

For fault value = 250:

- Remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive.

For fault value = 231, 331:

- In the drive, parameterize the appropriate PROFIsafe telegram (p9611) to be set on the F-PLC.
- Configure the PROFIsafe telegram matching the parameterization (p9611) in the F-PLC.

A01654 SI: PROFIsafe configuration different

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE
 :

18.2 List of faults and alarms

Cause: The configuration of a PROFIsafe telegram in the higher-level control (F-PLC) does not match the parameterization in the drive.
Note:
This message does not result in a safety stop response.
Alarm value (r2124, interpret decimal):
1:
A PROFIsafe telegram is configured in the higher-level control; however, PROFIsafe is not enabled in the drive (p9603.1).
2:
PROFIsafe is parameterized in the drive; however, a PROFIsafe telegram has not been configured in the higher-level control.

Remedy: The following generally applies:
- Check and, if necessary, correct the PROFIsafe configuration in the higher-level control.
For alarm value = 1:
- Remove the PROFIsafe configuring in the higher-level F control or enable PROFIsafe in the drive.
For alarm value = 2:
- Configure the PROFIsafe telegram to match the parameterization in the higher-level F-control.

C01657 SI: PROFIsafe telegram number invalid

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: OFF2

Acknowledgment: POWER ON

Cause: The PROFIsafe telegram number set in p9611 is not valid.
When PROFIsafe is enabled (p9603.1 = 1), then a telegram number greater than zero must be entered in p9611.
Note:
This fault does not result in a safety stop response.
See also: p9611 (SI PROFIsafe telegram selection), r60022 (PROFIsafe telegram)

Remedy: Check the telegram number setting (p9611).

C01658 SI: PROFIsafe telegram number not equal

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: OFF2

Acknowledgment: IMMEDIATELY

Cause: The PROFIsafe telegram number is set differently in p9611 and r60022.
The telegram number must be identically set in both parameters.
Note:
This fault does not result in a safety stop response.
See also: p9611 (SI PROFIsafe telegram selection)

Remedy: Align the telegram number in both parameters so that they are the same (p9611, r60022).

C01668 SI: Checksum error safety monitoring functions on the device

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment: IMMEDIATELY

:

Cause: The actual checksum calculated by the drive and entered in r10098 via the safety-relevant parameters does not match the reference checksum saved in p10099 at the last machine acceptance.
 Safety-relevant parameters have been changed or a fault is present.
Note:
 This message results in an STO (Safe Torque Off).
 Message value (r60049, only for internal Siemens diagnostics)

Remedy:

- Carry out safety commissioning.
- Carry out an acceptance test.

C01670 SI: invalid Sensor Module configuration

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The configuration of a Sensor Module used for Safety Integrated is not permissible.
Note:
 This message results in an STO (Safe Torque Off).
 Message value (r60049, interpret decimal):

- 1: The encoder data set selected for Safety Integrated is not valid or the encoder is not assigned to an encoder data set.
- 2: No encoder was parameterized for Safety Integrated or the encoder is not suitable for safety-related applications.
- 4: A communication error with the encoder has occurred.
- 5: Number of relevant bits in the encoder coarse position invalid.
- 6: DRIVE-CLiQ encoder configuration invalid.
- 7: Non-safety relevant component of the encoder coarse position for the linear DRIVE-CLiQ encoder not valid.
- 8: Safety comparison algorithm not supported.
- 9: Relationship between the grid division and measuring step for linear DRIVE-CLiQ encoder is not binary.
- 15: Pulses per revolution of a rotary encoder is not valid.
- 16: Grid division of a linear encoder is not valid.
- 17: Encoder is not compatible. The safe positioning accuracy of the encoder is not equal to the setpoint parameterized in p9631 - or the safe maximum speed/velocity of the encoder is not equal to the setpoint parameterized in p9630.
- 18: Encoder has still not been configured for Safety Integrated. The safe positioning accuracy of the encoder has still not been parameterized in p9631 - and the safe maximum velocity of the encoder has still not been parameterized in p9630 (parameter values are 0).
- 19: The encoder parameterization or the module identifier of the encoder/encoder module has changed or the encoder parameterization is corrupt.
- 20: For a DQi encoder, the offset between POS1 and POS2 has changed since the last run up.
- 21: The timer for the effectivity test for a DQi encoder is not equal to 4 hours.
- 22: In the current firmware version, the encoder type is not permitted for Safety Integrated.

18.2 List of faults and alarms

- Remedy:** For message value = 1:
Carefully ensure that a safety-relevant encoder is connected and repeat the drive commissioning.
- For message value = 2:
Use an encoder that supports safety functions.
- For message value = 4:
Check whether there is a DRIVE-CLiQ communication error to the Sensor Module involved and, if required, carry out a diagnostics routine for the faults identified.
- For message value =8:
Use an encoder that implements an algorithm supported by Safety Integrated.
Supported encoder types are listed in the product documentation for Safety Integrated.
- For message value = 5, 6, 7, 9, 15, 16, 19, 20, 21:
Replace the encoder if it is defective.
- For message value = 17, 18:
Select and deselect the safety commissioning mode (during safety commissioning, the quality of the connected encoder is transferred into the encoder quality parameter p9630 ff.).
- For message value = 22:
Use an encoder type that is supported in the current firmware version.
Supported encoder types are listed in the product documentation for Safety Integrated.

C01671 SI: Parameterization actual value acquisition incorrect

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY
:

Cause: The parameterization of the actual value sensing for Safety Integrated is incorrect.

Note:

This message results in an STO (Safe Torque Off).

Message value (r60049, interpret decimal):

yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter

yyyy = 0:

No additional supplementary information

xxxx = 9522:

The gear stage was set too high.

Remedy: Check the parameterization of the actual value sensing for Safety Integrated and if required correct.

For message value 9522:

- Set the gearbox stage lower.

C01674 SI: Safety function not supported by PROFIsafe telegram

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The monitoring function enabled in p9604 is not supported by the currently set PROFIsafe telegram (p9611).

Note:

Message value (r60049, interpret bitwise binary):

Bit 3 = 1:

SS1E (Safe Stop 1 External) via PROFIsafe is not supported (p9604.3).

Bit 5 = 1:

SS2E (Safe Stop 2 External) via PROFIsafe is not supported (p9604.5).

Bit 6 = 1:

SS2ESR: (Safe Stop 2 Extended Stop and Retract) via PROFIsafe is not supported (p9604.6).

Bit 9 = 1:

Transfer of SLS (Safely-Limited Speed) limit value via PROFIsafe is not supported (p9604.9).

Bit 15 = 1:

Gearbox stage switchover via PROFIsafe is not supported (p9604.15).

Bit 19 = 1:

SCA via PROFIsafe is not supported (p9604.19).

Bit 20 = 1:

Transfer of safe position (SP) via PROFIsafe is not supported (p9604.20).

Bit 30 = 1:

Transfer of F-DI via PROFIsafe is not supported (p9604.30).

Remedy:

- Deselect the monitoring function involved (p9604).
- Set the matching PROFIsafe telegram (p9611).

C01676 SI: Parameterization of the failsafe inputs not permissible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: When simultaneously controlled via terminal (p9603.0 = 1) and PROFIsafe (p9603.1 = 1)

- Only the failsafe digital input F-DI 0 (r10071.0) may be selected

- Only STO (c10022) / SS1 (c10023) may be interconnected

Note:

This message results in an STO (Safe Torque Off).

Message value (r60049, interpret decimal):

xxxx = parameter number

Remedy: Correct parameters:

- Interconnect with a valid signal source.

- Inhibit control via terminal (p9603.0 = 0).

- Inhibit control via PROFIsafe (p9603.1 = 0).

C01677 SI: Incorrect onboard F-I/O parameter value

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1, supplementary information: %2

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: The parameter cannot be parameterized with this value.
Note:
 This message does not result in a safety stop response.
 Message value (r60049, interpret decimal):
 yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter.
 yyyy = 0:
 No additional information available.
 xxxx = 10000 and yyyy = F-DI number:
 A non-existent F-DI was enabled.
 xxxx = 10002:
 The F-DI discrepancy time (p10002) is less than or equal to the SI monitoring clock cycle (p9500).
 xxxx = 10017 and yyyy = F-DI number:
 The input filter (p10017) is less than or equal to (p10018 + 2ms) when simultaneously selecting "Self test using specified dark pulses" (p10041[y] = 1).
 xxxx = 10018 and yyyy = F-DI number:
 Setting "F-DI self test long dark pulses" (p10018) is zero when simultaneously selecting "Self test using specified dark pulses" (p10041[y] = 1).
 xxxx = 10041 and yyyy = F-DI number:
 An invalid value was set in "F-DI self-test mode selection" (p10041[y]).
 xxxx = 10071 and yyyy = F-DI number:
 An F-DI status r10071[y], which was not enabled in p10000, has been wired.

Remedy: Correct the parameter value.
 For xxxx = 10000 and yyyy = F-DI number:
 - Correct p10000 "SI F-DI enable".
 For xxxx = 10002:
 - Set p10002 "SI F-DI switchover discrepancy time" longer than p9500 "SI monitoring clock cycle".
 For xxxx = 10017 and yyyy = F-DI number:
 - Set p10017 "SI Digital inputs input filter" greater than (p10018 + 2 ms)
 - Change p10041[y] "SI F-DI self-test mode selection".
 For xxxx = 10018 and yyyy = F-DI number:
 - Set p10018 "SI F-DI self-test dark pulse length" greater than zero.
 - Change p10041[y] "SI F-DI self-test mode selection".
 For xxxx = 10041 and yyyy = F-DI number:
 - Change p10041[y] "SI F-DI self-test mode selection".
 For xxxx = 10071 and yyyy = F-DI number:
 - Correct p10000 "SI F-DI enable".

C01680 SI: Checksum error safety monitoring functions

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The actual checksum over the safety-relevant parameters, calculated by the drive, does not match the reference checksum last saved for the last machine acceptance test.
 Safety-relevant parameters have been changed or a fault is present.
Note:
 This message results in an STO (Safe Torque Off).
 Message value (r60049, only for internal Siemens diagnostics)

Remedy:

- Check the safety-relevant parameters and if required, correct.
- Retentively save parameters.
- Perform a POWER ON if safety parameters requiring a POWER ON have been modified.
- Carry out an acceptance test.

C01681 SI: Incorrect parameter value

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1, supplementary information: %2

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The parameter cannot be parameterized with this value.

Note:

This fault results in STO.

Fault value (r60049, interpret decimal):

yyyyxxxx dec: yyyy = supplementary information, xxxx = parameter

yyyy = 0:

No additional information available.

xxxx = 9560:

The parameter must be > 0 when SS1 is activated (p9604.2 = 1) with SBR (p9606 = 2).

xxxx = 10006 or 10022 to 10036:

An inadmissible signal source for the control via F-DI was set

xxxx = 10050:

An inadmissible signal source for the F-DI via PROFIsafe was set. yyyy contains the incorrect index of c10050[.].

Remedy: Correct parameters:

For xxxx = 9560:

- Set the parameter value not equal to 0.

For xxxx = 10006 or 10022 to 10036:

- Set a valid signal source in pxxxx.

For xxxx = 10050 and yyyy = 0, 1 or 2:

- Set a valid signal source in c10050[yyyy].

Note:

SS1: Safe Stop 1

SBR: Safe Brake Ramp (safe brake ramp monitoring)

C01682 SI: Monitoring function not supported

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: At least one of the monitoring functions enabled in p9604 is not supported with this firmware version on this device.

Note:

The message value (r60049, interpret binary) indicates the bits of the monitoring functions, which form this firmware version on this device, are not supported. If several, non-supported monitoring functions are simultaneously enabled, then these are all displayed in the message value.

This message results in an STO (Safe Torque Off).

See also: p9604 (SI enable)

18.2 List of faults and alarms

Remedy: Correct parameter p9604 so that monitoring functions only permitted for this firmware version and for this device are enabled.
See also: p9612 (SI stop response for failure or control fault)

C01690 SI: Data backup problem for the NVRAM

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment POWER ON

:

Cause: When saving parameters r9780, r9781 and r9782 (Safety logbook) says, an error has occurred in conjunction with the NVRAM.

Note:

This fault does not result in a safety stop response.

Fault value (r60049, interpret decimal):

1: There is no physical NVRAM in the drive.

2: There is no longer any free memory space in the NVRAM.

Remedy: For fault value = 1:

- Replace the hardware.

For fault value = 2:

- De-select functions that are not required and that take up memory space in the NVRAM.

- Contact Technical Support.

Note:

NVRAM: Non-Volatile Random Access Memory (non-volatile read and write memory)

A01698 SI: Commissioning mode active

Message class: General drive fault (19)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The commissioning of the "Safety Integrated" function is selected.

This message is withdrawn after the safety functions have been commissioned.

Note:

- This message does not result in a safety stop response.

- In the safety commissioning mode, function STO (Safe Torque Off) is internally selected.

Remedy: Not necessary.

C01700 SI: STO (Safe Torque Off) initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The drive is stopped using STO (Safe Torque Off).

Possible causes:

Subsequent response, following messages: C01706, C01714, C01715, C01716.

Remedy: Carry out diagnostics for the active messages (C01706, C01714, C01715, C01716).

C01701 SI: SS1 (Safe Stop 1) initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF3

Acknowledgment IMMEDIATELY

:

Cause: The drive is stopped using SS1 (Safe Stop 1) (braked along the OFF3 down ramp).
As a result of this fault, after the time parameterized in p9556 has expired, or the speed threshold parameterized in p9560 has been fallen below, STO (Safe Torque Off) is initiated.

Possible causes:

Subsequent response, following messages: C01707, C01711, C01714, C01715, C01716.

Remedy: Perform diagnostics for active messages (C01707, C01711, C01714, C01715, C01716).

C01706 SI: SAM/SBR limit exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The safety functions with parameterized motion monitoring SAM (Safe Acceleration Monitor) / SBR (Safe Brake Ramp) have identified an error.

After initiating SS1 (Safe Stop 1) or SLS (Safely-Limited Speed), the speed has exceeded the set tolerance.

The drive is shut down by message C01700 (STO (Safe Torque Off) initiated).

Message value (r60049, interpret decimal):

0: SAM has detected a fault.

1: SBR has detected a fault.

Remedy: Check the braking behavior and, if necessary, adapt the parameterization of the SAM or SBR monitoring.

Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

See also: p9548 (SI SAM speed tolerance), p9581 (SI SBR reference velocity), p9582 (SI SAM/SBR delay time), p9583 (SI SBR reference time)

C01711 SI: SCF (Safety Channel Failure) initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The drive has detected an error in a safe monitoring function and has initiated SCF (Safety Channel Failure).
Monitoring functions are no longer reliable. Safe operation not possible.

Possible causes:

Subsequent response, following messages: C01648, C01750, C01751, C01753, C01754, C01769.

Note:

This fault results in an SS1 (Safe Stop 1), and as a consequence, after the time parameterized in p9556 has expired, or the speed threshold parameterized in p9560 has been fallen below, STO (Safe Torque Off) is initiated.

See also: p9555 (SI transition time SCF to SS1)

Remedy: Carry out diagnostics for the active messages (C01648, C01750, C01751, C01753, C01754, C01769).

C01714 SI: Safely-Limited Speed exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The drive has moved faster than that specified by the velocity limit value (p9531). The drive is stopped by the configured stop response (p9563).

Message value (r60049, interpret decimal):

100: SLS1 exceeded.

200: SLS2 exceeded.

300: SLS3 exceeded.

400: SLS4 exceeded.

Remedy: - Check the traversing/motion program in the control.
- Check the limits for SLS (Safely-Limited Speed) and if required adapt accordingly (p9531).
Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).
See also: p9531 (SI SLS limit values), p9563 (SI SLS stop response)

C01716 SI: Tolerance for Safe Direction exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The tolerance for function SDI (Safe Direction) was exceeded. The drive is stopped by the configured stop response (p9566).
Message value (r60049, interpret decimal):

0: Tolerance for function "SDI positive" exceeded.

1: The tolerance for function "SDI negative" exceeded.

Remedy: - Check the traversing/motion program in the control.
- Check the tolerance for function SDI and if required, adapt (p9564).
Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).
Prerequisite:
- Deselect function SDI function and if required select again.
See also: p9564 (SI SDI tolerance), p9565 (SI SDI delay time), p9566 (SI SDI stop response)

C01730 SI: Reference block for dynamic Safely-Limited Speed invalid

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The reference block transferred via PROFIsafe is negative.
A reference block is used to generate a referred velocity limit value based on the reference quantity in p9531[0].
The drive is stopped by the configured stop response (p9563[0]).

Message value (r60049, interpret decimal):

Requested, invalid reference block.

Remedy: In the PROFIsafe telegram, input data S_SLS_LIMIT_IST must be corrected.
Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

C01750 SI: Hardware fault safety-related encoder

Message class: Hardware/software error (1)

Message value: %1

Component: Encoder 1

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The encoder that is used for the safety-relevant motion monitoring functions signals a hardware fault.

Note:

This fault results in STO (Safe Torque Off).

Message value (r60049, interpret decimal):

Encoder status word 1, encoder status word 2 that resulted in the message.

Remedy:

- Check the encoder connection.

- Replace encoder.

Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

C01751 SI: Effectivity test error safety-related encoder

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Encoder 1

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The DRIVE-CLiQ encoder for safe motion monitoring signals an error for the internal encoder effectivity tests; the safety software cyclically monitors the sequence.

Note:

This message results in an SCF (Safety Channel Failure).

Message value (r60049, interpret decimal):

Only for internal Siemens troubleshooting.

Remedy:

- Check the encoder connection.

- Replace encoder.

Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

C01753 SI: Fault safety-relevant encoder

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The encoder that is used for the safety-relevant motion monitoring functions signals a fault.

Message value (r60049, interpret decimal):

1012: Plausibility violation of the encoder actual value.

1021: Cyclic communication failure between the monitoring channel and Sensor Module.

1022: Sign-of-life error for DRIVE-CLiQ encoders.

1024: Sign-of-life error for HTL/TTL encoders.

1031: Data transfer error between the monitoring channel and the Sensor Module (CRC error).

1033: Fault when checking offset between POS1 and POS2

18.2 List of faults and alarms

Remedy:

- Check the encoder connection.
- Replace encoder.

Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

For message value = 1021, 1024: - Check the communication connection.

- Set the monitoring clock cycle higher (p9500, p9511).
- Carry out a POWER ON (switch off/switch on) for all components.
- Replace the hardware.

For message value = 1035, if one of the safety encoders was replaced:

- Acknowledge hardware replacement.
- Save all parameters (p0977 = 1 or retentively save).
- Acknowledge fault.

C01754 SI: Fault safety-relevant actual value acquisition

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The actual value sensing for safe motion monitoring signals an error.

Message value (r60049, interpret decimal):

1039: Converting the position on the load side exceeds data format.

Remedy: For message value = 1039: Check the parameterization of the gearbox (p9520, p9521, p9522).

C01755 SI: Encoder limit frequency exceeded

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: Message value (r60049, interpret decimal):

1: Motion monitoring functions with encoder: the actual velocity exceeds the encoder limit frequency of 500 kHz.

Note:

This fault results in an SS1 (Safe Stop 1).

Remedy: Without a POWER ON, this message can be acknowledged using a safe acknowledgment mechanism (e.g. via PROFIsafe).

C01769 SI: Error for data cross-check

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: When carrying out a data cross-check between the two monitoring channels, the drive detected a difference between parameters or results and initiated an SCF (Safety Channel Failure). One of the monitoring functions no longer functions reliably, i.e. safe operation is no longer possible.

Safety message C01711 is also displayed as SCF (Safety Channel Failure) has been initiated.

If at least one monitoring function is active, then after the parameterized timer has expired, message C01701 is output.

Message value (r60049, interpret hexadecimal): Only for internal Siemens fault diagnostics.

- Remedy:**
- Carry out a POWER ON (switch-off/switch-on) for all components.
 - Re-commission the "Safety Integrated" function and carry out a POWER ON.
 - Upgrade firmware to later version.
 - Contact Technical Support.
 - Replace the hardware.

C01770 SI: Fault of the failsafe inputs

Message class: Safety monitoring channel has identified an error (10)

Message value: Fault cause: %1, F-DI number: %2

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

Explanation of the message value: For %1

Value	Cause	Remedy
1	Discrepancy error (state between two monitoring channels different for too long)	Check the F-DI wiring
2	Too many switching operations	Reduce the switching frequency
3	Test pulse error	Check the F-DI wiring
4	Internal software error	

Cause: The failsafe digital inputs (F-DI) have a fault condition.

Message value (r60049, interpret hexadecimal):

yyyyxxxx hex

xxxx: number of the failsafe digital input (F-DI).

yyyy: fault cause

Note:

If several faults occur consecutively, then this message is only signaled for the first fault that occurs.

18.2 List of faults and alarms

Remedy:

- Check the wiring of the F-DI (contact problems).
- If the wiring is correct, and for example there is no wire breakage, then a check must be made as to whether the switching frequency at F-DI is too high and must therefore be reduced (switching pulses must have a longer time between them). The time interval between each signal edge at an F-DI must be at least equal to the discrepancy time before the input is switched again.

Note:

This message can be acknowledged via F-DI or PROFIsafe (safe acknowledgment).

Discrepancy errors of an F-DI can only be acknowledged if safe acknowledgment was carried out after the cause of the error was resolved (acknowledgment via PROFIsafe, extended message acknowledgment, self acknowledgment). As long as safety acknowledgment was not carried out, the corresponding F-DI stays in the safe state internally.

A self acknowledgment for an F-DI can be realized using a positive edge at the corresponding F-DI.

Sets the discrepancy time for fast switching operations at the F-DIs:

For fast switching operations at the failsafe digital inputs (F-DI), it may be necessary to adapt the discrepancy time to the switching frequency:

- The period of a cyclic switching pulse must be less than half of the discrepancy time (if necessary, round down).
- The time between two fast switching pulses should be longer than the discrepancy time (if necessary, round up).
- The discrepancy time must be at least p9500 (it must always be rounded up or down to be an integer multiple of the SI sampling time p9500).

If an input filter has been parameterized (p10017 > 0), then the shortest possible discrepancy time is directly specified by the input filter.

- The period of a cyclic switching pulse must be less than half of the discrepancy time p10017 (if necessary, round down).
- The time between two fast switching pulses should be longer than the discrepancy time+p10017 (if necessary, round up).
- The discrepancy time must be at least p9500 The input filter must always be set less than the discrepancy time.

Self test with specified dark pulses (p10041 > 0) for long cable lengths:

- Increase the dark pulse length (p10018 or p10019).
- Increase the input filter (p10017).

Note:

F-DI: Failsafe Digital Input

C01793 SI: Internal safety message buffer is full

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY
:

Cause: Too many safety messages have occurred within a short time so that some have not been able to be displayed.

Remedy: No remedy required

A01796 SI: Wait for communication

Message class: Communication error to the higher-level control system (9)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE
:

Cause: The drive waits for communication to be established to execute the safety-relevant motion monitoring functions.

Note:

STO is active in this state.

Alarm value (r2124, interpret decimal):

3: Wait for communication to be established to PROFIsafe F-Host.

Remedy: If the message is not automatically withdrawn after a longer period of time, then carry out the following checks:

- Evaluate any other active PROFIsafe communication messages/signals.
- Check the operating state of the F-Host.
- Check the communication connection to the F Host.

Note:
STO: Safe Torque Off

C01799 SI: Acceptance test mode active

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The acceptance test mode is active.
This means the following:

- the setpoint velocity limiting is deactivated (r9733).

Remedy: Not necessary.
The message is withdrawn when exiting the acceptance test mode.

F01800 DRIVE-CLiQ: Hardware/configuration error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ connection fault has occurred.
Fault value (r0949, interpret decimal):
100 ... 107:
Communication via DRIVE-CLiQ socket X100 ... X107 has not been switched to cyclic operation. The cause may be an incorrect structure or a configuration that results in an impossible bus timing.
10:
Loss of the DRIVE-CLiQ connection. The cause may be, for example, that the DRIVE-CLiQ cable was withdrawn from the Control Unit or as a result of a short-circuit for motors with DRIVE-CLiQ. This fault can only be acknowledged in cyclic communication.
11:
Repeated faults when detecting the connection. This fault can only be acknowledged in cyclic communication.
12:
A connection was detected but the node ID exchange mechanism does not function. The reason is probably that the component is defective. This fault can only be acknowledged in cyclic communication.

Remedy: For fault value = 100 ... 107:

- Ensure that the DRIVE-CLiQ components have the same firmware versions.
- Avoid longer topologies for short current controller sampling times.

For fault value = 10:

- Check the DRIVE-CLiQ cables at the Control Unit.
- Remove any short-circuit for motors with DRIVE-CLiQ.
- Carry out a POWER ON.

For fault value = 11:

- Check the electrical cabinet design and cable routing for EMC compliance.

For fault value = 12:

- Replace the component involved.

A01839 DRIVE-CLiQ diagnostics: cable fault to the component

Message class: General drive fault (19)

Message value: Component number: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The fault counter to monitor the DRIVE-CLiQ connections/cables has been incremented.

Alarm value (r2124, interpret decimal):

Component number.

Note:

The component number specifies the component whose feeder cable from the direction of the converter is faulted.

The alarm is automatically withdrawn after 5 seconds, assuming that no other data transfer error has occurred.

Remedy: - Check the corresponding DRIVE-CLiQ cables.

- Check the electrical cabinet design and cable routing for EMC compliance.

A01900 PN: Configuration telegram error

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: A controller attempts to establish a connection using an incorrect configuring telegram.

Alarm value (r2124, interpret decimal):

2:

Too many PZD data words for output or input. The number of possible PZD items in a drive object is determined by the number of indices in r2050/r2053.

3:

Uneven number of bytes for input or output.

4:

Setting data for synchronization not accepted. For more information, see A01902.

211:

Unknown parameterizing block.

253:

PN Shared Device: Illegal mixed configuration of PROFI-safe and PZD.

254:

PN Shared Device: Illegal double assignment of a slot/subslot.

257:

PN Shared Device: Too many PZD data words for the output or input in the overall device.

501:

PROFI-safe parameter error (e.g. F_Source_Add, F_Dest_Add).

502:

PROFI-safe telegram does not match.

Additional values:

Only for internal Siemens troubleshooting.

Remedy: Check the bus configuration on the controller and device sides.

A01902 PN: Isochronous operation parameterization not permissible

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None
Response: NONE
Acknowledgment NONE
:
Cause: Parameterization for isochronous operation is not permissible.
Alarm value (r2124, interpret decimal):
0: Bus cycle time Tdp < 0.5 ms.
1: Bus cycle time Tdp > 32 ms.
2: Bus cycle time Tdp is not an integer multiple of the current controller sampling time.
3: Instant of the actual value sensing Ti > Bus cycle time Tdp or Ti = 0.
4: Instant of the actual value sensing Ti is not an integer multiple of the current controller sampling time.
5: Instant of the setpoint acceptance To >= Bus cycle time Tdp or To = 0.
6: Instant of the setpoint acceptance To is not an integer multiple of the current controller sampling time.
7: Controller application cycle time Tmapc is not an integer multiple of the speed controller sampling time.
8: Bus reserve bus cycle time Tdp - Data exchange time Tdx less than two current controller sampling times.
10: Instant of the setpoint acceptance To <= data exchange time Tdx + current controller sampling time
11: Controller application cycle time Tmapc > 14 x Tdp or Tmapc = 0.
12: PLL tolerance window Tpll_w > Tpll_w_max
13: Bus cycle time Tdp is not a multiple of all basic clock cycles.
Remedy: - Adapt the bus parameterization Tdp, Ti, To.
- Adapt the sampling time for the current controller or speed controller.
For alarm value = 10:
- Reduce Tdx by using fewer bus participants or shorter telegrams.
Note:
PB: PROFIBUS
PN: PROFINET

A01904 PN: Controller setting of the PZD telegram rejected

Message class: Communication error to the higher-level control system (9)
Message value: %1
Component: None
Response: NONE
Acknowledgment NONE
:
Cause: A controller attempts to set a PZD telegram. The setting is not applied.
Alarm value (r2124, interpret decimal):
3: Controllers have no function rights for making changes.
4: Telegram cannot be set as a result of the drive configuration.
See also: r0922 (PROFIdrive PZD telegram selection)
Remedy: Check and align the telegram settings in the drive project and in the controller.

A01905 PN: Controller setting to activate the channel diagnostics rejected

Message class: Communication error to the higher-level control system (9)
Message value: %1
Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:

18.2 List of faults and alarms

Cause: A controller attempted to change the activation of the channel diagnostics. The setting is not applied as the controller does not have the function rights to make a change.
Alarm value (r2124, interpret decimal):
1: Channel diagnostics are activated. Controller attempts to deactivate them.
2: Channel diagnostics are not activated. Controller attempts to activate them.

Remedy: Activate channel diagnostics in the bus configuration and check and align function rights in the drive.

F01910 Fieldbus: setpoint timeout

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF3

Acknowledgment IMMEDIATELY

:

Cause: The reception of setpoints from the fieldbus interface (PROFINET) is interrupted.
- Bus connection interrupted.
- Controller switched off.
- Controller set into the STOP state.

Remedy: Restore the bus connection and set the controller to RUN.

F01911 PN: Isochronous operation, clock cycle failure

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The telegram to synchronize the clock cycles has failed for several bus clock cycles or in several bus clock cycles has consecutively violated the specified time grid (see bus cycle time, Tdp and Tpllw).

Remedy: - Check the physical bus configuration (cable, connector, terminating resistor, shielding, etc.).
- Check whether communication was briefly or permanently interrupted.
- Check the utilization level of the bus and controller (e.g. bus cycle time Tdp was set too short).

Note:
PN: PROFINET

F01912 PN: Isochronous operation sign-of-life missing

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The maximum permissible number of errors in the controller sign-of-life (isochronous operation) has been exceeded in cyclic operation.

Remedy: - Check the physical bus configuration (cables, connectors, etc.).
- Check whether the controller correctly sends the sign-of-life (e.g. create a trace with STW2.12 ... STW2.15 and trigger signal ZSW1.3).
- Check the permissible telegram failure rate (p0925).
- Check the utilization level of the bus and controller (e.g. bus cycle time Tdp was set too short).

Note:
PN: PROFINET

A01932 PN: Clock cycle synchronization missing for DSC

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: There is no clock synchronization or clock synchronous sign of life and DSC is selected.

Note:

DSC: Dynamic Servo Control

See also: r0922 (PROFIdrive PZD telegram selection)

Remedy: Set clock synchronization across the bus configuration and transfer clock synchronous sign-of-life.

A01940 PN: Clock cycle synchronism not reached

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. Synchronization with the clock cycle specified by the controller was still not able to be performed.

- The controller does not send an isochronous global control telegram, although isochronous operation was selected when configuring the bus.

- The controller uses another isochronous DP cycle than was transferred to the device in the parameterizing telegram.

- At least one drive object has a pulse enable (also not controlled from PROFINET).

Remedy: - Check the controller application and bus configuration.

- Check the consistency between the clock cycle input when configuring the device and clock cycle setting at the controller.

- Check that no drive object has a pulse enable. Only enable the pulses after synchronizing the PROFINET drives.

Note:

PN: PROFINET

A01941 PN: Clock cycle signal missing when the bus is being established

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. The synchronization telegram is not received.

Remedy: Check the controller application and bus configuration.

Note:

PN: PROFINET

A01943 PN: Clock cycle signal error when the bus is being established

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: NONE

18.2 List of faults and alarms

Acknowledgment NONE

:

Cause: The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. The synchronization telegram is irregularly received.

- The controller sends an irregular synchronization telegram.

- The controller uses another isochronous bus clock cycle than was transferred to the device in the parameterizing telegram.

Remedy: - Check the controller application and bus configuration.

- Check the consistency between the clock cycle input when configuring the device and clock cycle setting at the controller.

Note:

PN: PROFINET

A01944 PN: Sign-of-life synchronism not reached

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The bus is in the data exchange state and clock synchronous operation has been selected using the parameterizing telegram. Synchronization with the controller sign-of-life (STW2.12 ... STW2.15) could not be completed because the sign-of-life changes differently to how it was configured in the Tmapc time grid.

Remedy: - Ensure that the controller correctly increments the sign-of-life in the controller application clock cycle Tmapc.

Note:

PN: PROFINET

F01950 PN: Isochronous operation, synchronization unsuccessful

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: Synchronization of the internal clock cycle to the controller clock cycle has failed. The internal clock cycle exhibits an unexpected shift.

Remedy: Only for internal Siemens troubleshooting.

Note:

PN: PROFINET

A01980 PN: cyclic connection interrupted

Message class: Communication error to the higher-level control system (9)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The cyclic connection to the PROFINET controller is interrupted.

See also: r8936 (PN cyclic connection state)

Remedy: Establish the PROFINET connection and activate the PROFINET controller in the cyclic mode.

A01981 PN: Maximum number of controllers exceeded

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Info 1: %1, Info 2: %2

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: A controller attempts to establish a connection to the drive, and as a consequence exceeds the permitted number of PROFINET connections.

The alarm is automatically withdrawn after approx. 30 seconds.

Alarm value (r2124, interpret hexadecimal):

yyyyxxxx hex: yyyy = info. 1, xxxx = info. 2

Info 1 = 0: number of RT connections exceeded

Info 1 > 0: number of IRT connections exceeded

Info 2: permitted number of connections

Remedy: Check the configuration of the PROFINET controllers.

A01989 PN: internal cyclic data transfer error

Message class: Communication error to the higher-level control system (9)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The cyclic actual values and/or setpoints were not transferred within the specified times.

Alarm value (r2124, interpret hexadecimal):

Only for internal Siemens troubleshooting.

Remedy: Correctly set T_io_input or T_io_output.

A02007 Function generator: Drive not SERVO / VECTOR / DC_CTRL

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The drive object specified for connection is not a SERVO, VECTOR or DC_CTRL.

Remedy: Use a SERVO / VECTOR or DC_CTRL drive object with the corresponding number.

Note:

The alarm is reset as follows:

- Remove the cause of this alarm.

- Restart the function generator.

F03001 NVRAM checksum incorrect

Message class: Hardware/software error (1)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: A checksum error occurred when evaluating the non-volatile data (NVRAM) on the Control Unit.
The NVRAM data affected was deleted.

Remedy: Carry out a POWER ON (switch-off/switch-on) for all components.

F06310 Supply voltage (p0210) incorrectly parameterized

Message class: Network fault (2)

Message value: -

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: For AC/AC drive units, the measured DC voltage lies outside the tolerance range after precharging has been completed.
The following applies for the tolerance range: $1.16 * p0210 < r0070 < 1.6 * p0210$

Note:

The fault can only be acknowledged when the drive is switched off.

See also: p0210 (Device supply voltage)

Remedy: - Check the parameterized supply voltage and if required change (p0210).
- Check the line supply voltage.
See also: p0210 (Device supply voltage)

F07011 Drive: Motor overtemperature

Message class: Motor overload (8)

Message value: %1

Component: Motor

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The calculated motor temperature is too high.

Possible causes:

- Motor overloaded.
- Motor ambient temperature too high.
- Sensor wire breakage.

Fault value (r0949, interpret decimal):

200:

Motor temperature model 1 (I2t): temperature too high.

300:

Motor temperature model 3: after the monitoring time has expired, the temperature is still higher than the alarm threshold.

301:

Motor temperature model 3: temperature is too high, or the model has not been parameterized.

302:

Motor temperature model 3: Encoder temperature is not within the valid range.

400:

Additional motor overload protection: the load is too high.

Remedy: - Reduce the motor load.
- Check the ambient temperature and the motor ventilation.
- Check the wiring and temperature sensor connection.
- Check monitoring limits.
- Check activation of the additional motor overload protection (5375).

A07012 Drive: Motor temperature model overtemperature

Message class: Motor overload (8)

Message value: %1
Component: Motor
Response: NONE
Acknowledgment NONE
:
Cause: Motor temperature model 1/3 or the additional motor overload protection identified that the alarm threshold was exceeded.
Hysteresis:2K
Alarm value (r2124, interpret decimal):
200:
Motor temperature model 1 (I2t): temperature too high.
300:
Motor temperature model 3: temperature too high.
400:
Additional motor overload protection: the load is too high. If the load remains at this level, the drive is shut down with fault F07011.
See also: r0034 (Motor utilization thermal), p0613 (Motor temperature model ambient temperature)
Remedy:
- Check the motor load and if required, reduce.
- Check the motor ambient temperature.
- Check activation of the additional motor overload protection (5375).
See also: r0034 (Motor utilization thermal)

F07085 Drive: Open-loop/closed-loop control parameters changed

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: Parameter: %1
Component: None
Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: Open-loop/closed-loop control parameters have had to be changed.
Possible causes:
1. As a result of other parameters, they have exceeded the dynamic limits.
2. They cannot be used due to the fact that the hardware detected not having certain features.
3. The value is estimated as the thermal time constant is missing.
4. Motor temperature model 1 is activated as thermal motor protection is missing.
See also: p1082 (Maximum speed)
Remedy: Not necessary.
It is not necessary to change the parameters as they have already been correctly limited.

F07090 Drive: Upper torque limit less than the lower torque limit

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: -
Component: None
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The upper torque limit is lower than the lower torque limit.
Remedy: When setting the torque limits via telegram 750, the positive torque limit must be \geq the negative torque.

A07091 Drive: determined current controller dynamic response invalid

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: %1

18.2 List of faults and alarms

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: When One Button Tuning is activated (p5300 = 1), the current controller is measured after the pulses have been enabled. Evaluation has indicated that the current control loop was not appropriately set.

Possible causes:

- Incorrectly set current controller.
- PRBS amplitude set too high (p5296).

Alarm value (r2124, interpret hexadecimal):

- 1: Dynamic response too low.
- 2: Current controller unstable.

Note:

PRBS: Pseudo Random Binary Signal (binary noise)

Remedy: - The measurement can be repeated with a smaller excitation amplitude (p5296).
- If required, adapt the current controller proportional gain (p1715).

A07092 Drive: moment of inertia estimator still not ready

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The moment of inertia estimator has still not determined any valid values.
The acceleration cannot be calculated.

The moment of inertia estimator has stabilized, if the frictional values as well as the moment of inertia were determined and the corresponding status signal is set.

Remedy: Traverse the axis until the moment of inertia estimator has stabilized.
This alarm is automatically withdrawn after the moment of inertia estimator has stabilized.

F07093 Drive: Test signal error

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: Control Unit (CU)

Response: OFF3

Acknowledgment IMMEDIATELY

:

Cause: An error was identified when executing the "Test signal" function.
The function was not executed or was canceled.

Fault value (r0949, interpret decimal):

- 1: No distance limit has been defined (p5308 = 0).
- 2: The moment of inertia estimator has not stabilized in the parameterized time (p5309).
- 3: The parameterized distance (p5308) was exceeded.
- 4: No motor encoder parameterized (closed-loop speed control without encoder).
- 6: Pulse enable was withdrawn while traversing.
- 7: speed setpoint not equal to zero.

See also: p5308 (One Button Tuning distance limiting), p5309 (One Button Tuning duration)

Remedy:

- For fault value = 1:
 - Define distance limiting (p5308).
- For fault value = 2:
 - Increase the duration, distance limit or speed limit (p5309, p5308, p1082, p1083, p1086).
- For fault value = 3:
 - Check distance limiting (p5308).
- For fault value = 4:
 - Configure speed control with encoder.
- For fault value = 6:
 - Keep the drive switched on until the "Test signal" function has been completely exited.
- For fault value = 7:
 - Set the speed setpoint to zero. It is possible that the setpoint was entered from the control panel.

A07094 General parameter limit violation

Message class: Hardware/software error (1)

Message value: Parameter: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause:

- As a result of the violation of a parameter limit, the parameter value was automatically corrected.
- Minimum limit violated --> parameter is set to the minimum value.
- Maximum limit violated --> parameter is set to the maximum value.
- Alarm value (r2124, interpret decimal):
- Parameter number, whose value had to be adapted.

Remedy: Check the adapted parameter values and if required correct.

A07095 Drive: One Button Tuning activated

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause:

- The One Button Tuning function is active.
- One Button Tuning is performed at the next switch-on command.
- See also: p5300 (One Button Tuning selection)

Remedy: Not necessary.
The alarm is automatically withdrawn after One Button Tuning has been exited (p5300 = 0).

F07097 Drive: Test signal error distance limiting

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Fault cause: %1, traversing distance: %2

Component: Control Unit (CU)

Response: OFF3

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: An error was identified when executing function "Test signal" or One Button Tuning selection (p5300 = 1).
The function was not executed or was canceled.
Fault value (r0949, interpret decimal):
yyyyxxxx hex: yyyy = error cause, xxxx = traversing distance
Fault cause = 4:
- Travel distance to the EPOS software limit switch is not sufficient.
See also: p5308 (One Button Tuning distance limiting), p5309 (One Button Tuning duration)

Remedy: - Enter the traversing path in parameter p5308 - or deselect the function involved in p5301.
- For fault cause = 1, 2, shorter traversing paths may be possible.
For fault cause = 1:
- Deselect bit 0 and bit 1 in parameter p5301.
For fault cause = 2:
- Deselect bit 2 in parameter p5301.
For fault cause = 3:
- Deselect bit 4 and bit 5 in parameter p5301.
For fault cause = 4:
- Change the travel direction of One Button Tuning via p5308.
- Increase the clearance to the EPOS software limit switch by manually traversing.

A07200 Drive: Master control ON command present

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The ON/OFF1 command is present (no 0 signal).
The command is either influenced via binary signal sink r0840 (actual CDS) or control word bit 0 via the master control.

Remedy: Switch the signal to 0 via binary signal sink r0840 (actual CDS) or control word bit 0 via the master control.

F07220 Drive: Master control by PLC missing

Message class: Communication error to the higher-level control system (9)

Message value: -

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The "master control by PLC" signal was missing in operation.
- Interconnection of the binary signal sink for "Master control by PLC" is incorrect (r0854).
- The higher-level control has withdrawn the "master control by PLC" signal.
- Data transfer via the fieldbus (controller/drive) was interrupted.

Remedy: - Check the interconnection of the binary signal sink for "Master control by PLC" (r0854).
- Check the "master control by PLC" signal and, if required, switch in.
- Check data transfer via the fieldbus (controller/drive).

Note:

If the drive should continue to operate after withdrawing "master control by PLC" then fault response must be parameterized to NONE or the message type should be parameterized as alarm.

F07334 Function not possible

Message class: Application/technological function faulted (17)

Message value: %1

Component: Motor
Response: OFF1
Acknowledgment IMMEDIATELY
:
Cause: The selected function is not possible for this configuration.
Fault value (r0949, interpret decimal):
0:
Function "Travel to fixed stop" (c1545) was selected via the associated binary signal source, although encoderless operation or U/f operation is active.
Remedy: For fault value = 0:
- Operate the closed-loop speed control with an encoder.
- If necessary, deselect function "Travel to fixed stop".

F07410 Drive: Current controller output limited

Message class: Application/technological function faulted (17)
Message value: -
Component: None
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The condition " $I_{act} = 0$ and $U_{q_set_1}$ longer than 16 ms at its limit" is present and can be caused by the following:
- Motor not connected or motor contactor open.
- No DC link voltage present.
- Power unit defective.
Remedy:
- Connect the motor or check the motor contactor.
- Check the DC link voltage (r0070).
- Check the power unit.

F07412 Drive: Commutation angle incorrect (motor model)

Message class: Position/speed actual value incorrect or not available (11)
Message value: %1
Component: None
Response: ENCODER
Acknowledgment IMMEDIATELY
:
Cause: An incorrect commutation angle was detected, which can result in a positive coupling in the speed controller.
Possible causes:
- The phase sequence of the output phases for the motor is incorrect (e.g. the phases are interchanged).
- The motor encoder is incorrectly adjusted with respect to the magnet position.
- The motor encoder is damaged.
- The motor encoder speed signal is faulted.
- The control loop is instable due to incorrect parameterization.
Remedy:
- Check the phase sequence for the motor, and if required, correct.
- If the encoder mounting was changed - Re-adjust the encoder.
- Replace the defective motor and/or motor encoder.

F07414 Drive: Encoder serial number changed

Message class: Error in the parameterization / configuration / commissioning procedure (18)
Message value: -
Component: None

18.2 List of faults and alarms

Response: ENCODER
Acknowledgment IMMEDIATELY
:
Cause: The serial number of the motor encoder of a synchronous motor has changed. The change was only checked for encoders with serial number (e.g. EnDat encoders) and build-in motors (e.g. p0300 = 401) or third-party motors (p0300 = 2).

The encoder was replaced.
Remedy: The encoder must be adjusted after replacement.
Contact the service department.

F07432 Drive: Motor without overvoltage protection

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: In the case of a fault at maximum speed, the motor can generate an overvoltage that can destroy the converter.

Remedy: Limit the maximum speed (p1082) without any additional protection.

Note:

The maximum speed is calculated as follows:

$p1082 \leq 11.695 * \text{DC link voltage overvoltage threshold} / r0316$

DC link voltage overvoltage threshold:

- Line connection 1 AC: 410 V

- Line connection 3 AC: 820 V

See also: r0316 (Motor torque constant), p1082 (Maximum speed)

F07434 Drive: It is not possible to change the direction of rotation with the pulses enabled

Message class: Application/technological function faulted (17)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: With the pulses enabled, a drive data set that has a different parameterized direction of rotation was selected (p1821). It is only possible to change the motor direction of rotation using p1821 when the pulses are inhibited.

Remedy: - Change over the drive data set with the pulses inhibited.

- Ensure that the changeover to a drive data set does not result in the motor direction of rotation being changed (i.e. for these drive data sets, the same value must be in p1821).

See also: p1821 (Direction of rotation)

A07440 EPOS: Jerk time is limited

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The calculation of the jerk time $T_r = \max(p2572, p2573) / p2574$ resulted in an excessively high value so that the jerk time is internally limited to 1000 ms.
Note:
 The alarm is also output if jerk limiting is not active.

Remedy:

- Increase the jerk limiting (p2574).
- Reduce maximum acceleration or maximum deceleration (p2572, p2573).

A07441 LR: Save the position offset of the absolute encoder adjustment

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The status of the absolute encoder adjustment has changed.
 In order to permanently save the determined position offset (p2525) and the determined number of the drive data set (p2733), they must be saved in a non-volatile fashion (p0971, p0977).
Possible causes:

- Motor or encoder were replaced (applies to EQN and DQI).
- Position-relevant parameters were changed.
- An encoder that was not adjusted was adjusted (save the project in a non-volatile fashion using "Copy RAM to ROM").

Note:
 This message is not output when switching-on the axis after having first moved it in the switched-off state, as long as the parameterizable monitoring window was not exited.

Remedy: Readjust the encoder.

F07443 LR: Home position not in the permissible range

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The home position received when adjusting the encoder via numerical signal sink r2599 lies outside the half of the encoder range and cannot be set as actual axis position.
Fault value (r0949, interpret decimal):
 Maximum permissible value for the home position

Remedy: Set the home position to a lower value than specified in the fault value.

A07557 Motor encoder: Home position not in the permissible range

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The home position received when adjusting the encoder via numerical signal sink c2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.

Remedy: Set the home position less than the value from the supplementary information.

A07558 Encoder 2: Home position not in the permissible range

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The home position received when adjusting the encoder via numerical signal sink c2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.

Remedy: Set the home position less than the value from the supplementary information.

A07559 Encoder 3: Home position not in the permissible range

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The home position received when adjusting the encoder via numerical signal sink c2599 lies outside the half of the encoder range and cannot be set as actual axis position. The maximum permissible value is displayed in the supplementary information.

Remedy: Set the home position less than the value from the supplementary information.

A07565 Drive: Encoder error in PROFIdrive encoder interface 1

Message class: Position/speed actual value incorrect or not available (11)

Message value: %1

Component: Sensor Module Encoder 1

Response: NONE

Acknowledgment NONE

:

Cause: An encoder error was signaled for encoder 1 via the PROFIdrive encoder interface (G1_ZSW.15).
Alarm value (r2124, interpret decimal):
Error code from G1_XIST2.

Remedy: Acknowledge the encoder error using the encoder control word (G1_STW.15 = 1).

F07575 Drive: Motor encoder not ready

Message class: Position/speed actual value incorrect or not available (11)

Message value: -

Component: Sensor Module Encoder 1

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The motor encoder signals that it is not ready.
- Initialization of encoder 1 (motor encoder) was unsuccessful.
- The function "parking encoder" is active (encoder control word G1_STW.14 = 1).
- The Sensor Module is defective.

Remedy: Evaluate other active faults via the motor encoder.

A07577 Motor encoder: Measuring probe evaluation not possible

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: When evaluating the measuring probe, an error occurred.
Alarm value (r2124, interpret decimal):
6: The input terminal for the measuring probe is not set.
4098: Error when initializing the probe.
4100: The measuring pulse frequency is too high.
4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.

Remedy: Deactivate the measuring probe evaluation (BI: p2509 = 0 signal).
For alarm value = 6:
Set the input terminal for the measuring probe (p0488, p0489).
For alarm value = 4098:
Check the converter hardware.
For alarm value = 4100:
Reduce the frequency of the measuring pulses at the measuring probe.
For alarm value = 4200:
Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.

A07578 Encoder 2: Measuring probe evaluation not possible

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: When evaluating the measuring probe, an error occurred.
Alarm value (r2124, interpret decimal):
6: The input terminal for the measuring probe is not set.
4098: Error when initializing the probe.
4100: The measuring pulse frequency is too high.
4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.

Remedy: Deactivate the measuring probe evaluation (BI: p2509 = 0 signal).
For alarm value = 6:
Set the input terminal for the measuring probe (p0488, p0489).
For alarm value = 4098:
Check the converter hardware.
For alarm value = 4100:
Reduce the frequency of the measuring pulses at the measuring probe.
For alarm value = 4200:
Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.

A07579 Encoder 3: Measuring probe evaluation not possible

Message class: Application/technological function faulted (17)

Message value: %1

Component: None

18.2 List of faults and alarms

Response: NONE

Acknowledgment NONE

:

Cause: When evaluating the measuring probe, an error occurred.
Alarm value (r2124, interpret decimal):
6: The input terminal for the measuring probe is not set.
4098: Error when initializing the probe.
4100: The measuring pulse frequency is too high.
4200: The PROFIBUS clock cycle is not a multiple of integer of the position controller clock cycle.

Remedy: Deactivate the measuring probe evaluation (BI: p2509 = 0 signal).
For alarm value = 6:
Set the input terminal for the measuring probe (p0488, p0489).
For alarm value = 4098:
Check the converter hardware.
For alarm value = 4100:
Reduce the frequency of the measuring pulses at the measuring probe.
For alarm value = 4200:
Set the clock cycle ratio between the PROFIBUS clock cycle and the position controller clock cycle to an integer multiple.

A07581 Motor encoder: Position actual value preprocessing error

Message class: Position/speed actual value incorrect or not available (11)

Message value: -

Component: Encoder 1

Response: NONE

Acknowledgment NONE

:

Cause: An error has occurred during the position actual value preprocessing.

Remedy: Check the encoder for the position actual value preprocessing.

A07582 Encoder 2: Position actual value preprocessing error

Message class: Position/speed actual value incorrect or not available (11)

Message value: -

Component: Encoder 2

Response: NONE

Acknowledgment NONE

:

Cause: An error has occurred during the position actual value preprocessing.

Remedy: Check the encoder for the position actual value preprocessing.

A07583 Encoder 3: Position actual value preprocessing error

Message class: Position/speed actual value incorrect or not available (11)

Message value: -

Component: Encoder 3

Response: NONE

Acknowledgment NONE

:

Cause: An error has occurred during the position actual value preprocessing.

Remedy: Check the encoder for the position actual value preprocessing.

A07587 Motor encoder: Position actual value preprocessing has no valid encoder

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Encoder 1

Response: NONE

Acknowledgment NONE

:

Cause: The following problem has occurred during the position actual value preprocessing:

- An encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).

Remedy: Check the drive data sets, encoder data sets.

See also: p0400 (Encoder type selection)

A07588 Encoder 2: Position actual value preprocessing does not have a valid encoder

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Encoder 2

Response: NONE

Acknowledgment NONE

:

Cause: The following problem has occurred during the position actual value preprocessing:

- An encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).

Remedy: Check the drive data sets, encoder data sets.

See also: p0400 (Encoder type selection)

A07589 Encoder 3: Position actual value preprocessing does not have a valid encoder

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Encoder 3

Response: NONE

Acknowledgment NONE

:

Cause: The following problem has occurred during the position actual value preprocessing:

- An encoder data set has been assigned, however, the encoder data set does not contain any encoder data (p0400 = 0) or invalid data (e.g. p0408 = 0).

Remedy: Check the drive data sets, encoder data sets.

See also: p0400 (Encoder type selection)

F07801 Drive: Motor overcurrent

Message class: Motor overload (8)

Message value: -

Component: Motor

Response: OFF2

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

- Cause:** The permissible motor limit current was exceeded.
- Active current limit too low.
 - Current controller not correctly set.
 - Load is too high.
 - Short-circuit in the motor cable or ground fault.
 - Motor current does not match the drive current.
- Remedy:**
- Reduce the load.
 - Check the motor and motor cables for short-circuit and ground fault.
 - Check the drive and motor combination.

F07802 Drive: Infeed not ready

Message class: Infeed faulted (13)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY
:

- Cause:** The drive does not signal a ready state after an internal switch-on command.
- DC link voltage is not present.
 - Defective drive.
 - Supply voltage incorrectly set.

- Remedy:**
- Check the enable signals for the drive.
 - Replace the drive.
 - Check the line supply voltage setting (p0210).

F07815 Drive: Power unit has been changed

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1

Component: Power Unit

Response: NONE

Acknowledgment IMMEDIATELY
:

- Cause:** The code number of the actual power unit does not match the saved number. This occurs if a saved configuration (SD card, backup file) of a converter with another power rating is used.
Fault value only for internal Siemens diagnostics.
See also: p0201 (Power unit code number)

- Remedy:**
- Carry-out a reset to the factory settings, which corresponds to recommissioning the converter.
 - Use an SD card or backup file with the configuration correct for the drive being used and switch-off/switch-on the drive.
 - In case of doubt, before using an SD card, delete the existing configuration of the USER folder.
 - For a series commissioning, only use the same converter types (order number, power class).

F07860 External braking resistor signals an overtemperature

Message class: External measured value / signal state outside the permissible range (16)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY
:

- Cause:** The temperature monitoring of the external braking resistor, connected via digital input 4 (DI 4, X130/2.6), responded.
Note:
This signal is triggered for a 1/0 edge at digital input 4.

- Remedy:**
- Check the dimensioning of the external braking resistor for the application.
 - Check the external braking resistor and temperature monitoring.
 - Check the temperature monitoring connection (X130/2.6).

F07900 Drive: Motor blocked/speed controller at its limit

Message class: Application/technological function faulted (17)

Message value: -

Component: Motor

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The motor operates longer than 0.2 seconds at the torque limit and below the speed threshold in p2175.
This signal can also be initiated if the speed actual value is oscillating and the speed controller output repeatedly goes to its limit.
See also: p2175 (Motor blocked speed threshold)

- Remedy:**
- Check that the motor can freely move.
 - Check the effective torque limit (r1538, r1539).
 - Check the parameter of the "Motor blocked" signal and possibly correct (p2175).

F07901 Drive: Motor overspeed

Message class: Application/technological function faulted (17)

Message value: -

Component: Motor

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The maximum permissible speed was either positively or negatively exceeded (p1082).

- Remedy:**
- Check the speed controller.
 - Check the maximum speed (p1082).

F07930 Drive: Brake control error

Message class: Application/technological function faulted (17)

Message value: %1

Component: Motor

Response: OFF1

Acknowledgment IMMEDIATELY

:

Cause: The Control Unit has detected a brake control fault.
Fault value (r0949, interpret decimal):
1, 2:
- Motor cable is not shielded correctly.
- Defect in the brake control circuit of the Control Unit.
- Ground fault in brake cable.
4:
Brake is not connected or cable is interrupted.
See also: p1278 (Brake control diagnostics evaluation)

18.2 List of faults and alarms

- Remedy:**
- Check the motor holding brake connection.
 - Check the function of the motor holding brake.
 - Check whether there is a DRIVE-CLiQ communication error, and if required, carry out a diagnostics routine for the faults involved.
 - Check that the electrical cabinet design and cable routing are in compliance with EMC regulations (e.g. shield of the motor cable and brake conductors are connected with the shield connecting plate and the motor connectors are tightly screwed to the housing).
 - Replace the affected Control Unit.
 - Set p1278 to 1 if brake diagnostics is not required.
- See also: p1215 (Motor holding brake configuration), p1278 (Brake control diagnostics evaluation)
-

F07933 Drive: Brake voltage incorrect

Message class: Application/technological function faulted (17)

Message value: -

Component: Motor

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: A brake voltage fault was detected.

- Remedy:**
- Carry out a POWER ON (switch-off/switch-on) for all components.
 - Contact Technical Support.
 - Replace the converter.
-

F07935 Drive: Incorrect motor holding brake configuration

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: An incorrect motor holding brake configuration was detected.

Fault value (r0949, interpret decimal):

0:

A motor holding brake was detected where the brake control has not been configured (p1215 = 0).

1:

A motor holding brake was detected where the brake control has not been configured (p1215 = 0).

The brake control configuration was left at "No motor holding brake available" (p1215 = 0).

Remedy: For fault value = 0:

- No remedy required.

For fault value = 1:

- If required change the motor holding brake configuration (p1215 = 1, 2).

- If this fault value unexpectedly occurs, then the motor connections should be checked in order to rule out that they have been interchanged.

See also: p1215 (Motor holding brake configuration)

F07955 Drive: Motor has been changed

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Motor

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The code number of the actual motor with DRIVE-CLiQ does not match the saved number.
If available:

The code numbers of the bearings, gearbox and brake do not match the saved numbers.

Remedy: Connect the original motor and switch on the converter again (POWER ON) - or restore the factory settings.
Note:

The data for bearings, gearbox and brake are reloaded.

A08561 IE: Consistency error affecting adjustable parameters

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: A consistency error was detected when activating the configuration for the Industrial Ethernet interface (X127).
Alarm value (r2124, interpret decimal):

0: General consistency error

1: Error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

5: Standard gateway is also set at the PROFINET interface.

6: The station name is also set at the PROFINET interface.

7: The IP address is located in the same subnet as the IP address of the PROFINET interface.

Note:

For alarm value = 0, 1, 2, 5, 7 the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

IE: Industrial Ethernet

Remedy: Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

A08563 PROFINET: Consistency error affecting adjustable parameters

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: A consistency error was detected when activating the configuration for the PROFINET interface (X150).
Alarm value (r2124, interpret decimal):

0: General consistency error

1: Error in the IP configuration (IP address, subnet mask or standard gateway).

2: Error in the station names.

3: DHCP was not able to be activated, as a cyclic PROFINET connection already exists.

4: A cyclic PROFINET connection is not possible as DHCP is activated.

5: Standard gateway is also set at the Industrial Ethernet interface (X127).

6: Standard station name is also set at the Industrial Ethernet interface (X127).

7: IP address is located in the same subnet as the IP address of the Industrial Ethernet interface (X127).

Note:

For alarm value = 0, 1, 2, 3, 4, 5, 7, the following applies: the configuration was not changed.

For alarm value = 6 the following applies: The new configuration was however activated.

DHCP: Dynamic Host Configuration Protocol

18.2 List of faults and alarms

Remedy: Reinitialize the station using the "Edit Ethernet node" screen form (e.g. with Startdrive commissioning tool).

A08800 PROFenergy energy-saving mode active

Message class: Communication error to the higher-level control system (9)

Message value: %1

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The PROFenergy energy-saving mode is active
Alarm value (r2124, interpret decimal):
Mode ID of the active PROFenergy energy-saving mode.
See also: r5600 (PROFenergy energy-saving mode ID)

Remedy: The alarm is automatically withdrawn when the energy-saving mode is exited.

Note:

The energy-saving mode is exited after the following events:
- The PROFenergy command end_pause is received from the higher-level control.
- The higher-level control has changed into the STOP operating state.
- The PROFINET connection to the higher-level control has been disconnected.

F13000 License not adequate

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: %1

Component: Control Unit (CU)

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: - The converter uses options that require a license and the licenses are not sufficient.
- An error has occurred when checking the licensing.

Fault value (r0949, interpret decimal):

0: Adequate licensing was not able to be determined as there is no licensing data available on the memory card.

1: Adequate licensing was not able to be determined as the memory card with the required licensing data was withdrawn in operation or the memory card is defective.

2: Adequate licensing was not able to be determined as there is no licensing data available on the memory card.

3: Adequate licensing was not able to be determined as the licensing data does not match the serial number of the memory card being used.

4, 5, 6, 7: Adequate licensing was not able to be determined as the licensing data were manipulated and are therefore invalid.

8, 9: An internal error occurred when checking the license.

Remedy:

For fault value = 0:
Transfer a license file with the required licenses to the converter.

For fault value = 1:
Reinsert the memory card into the converter. If you have to replace a defective memory card, contact Technical Support.

For fault value = 2:
Transfer a license file with the required licenses to the converter.

For fault value = 3:
Compare the license file name (after "LK_" to ".ZIP") with the serial number of the memory card.
Transfer the appropriate license file to the converter.

For fault value = 4, 5, 6, 7, 8, 9:
- Carry out a POWER ON.
- Upgrade firmware to later version.
- Contact Technical Support.

Note:
An overview of the converter functions requiring a license can be displayed using a commissioning tool in the online mode. Depending on the commissioning tool, you can also obtain the necessary licensing (serial number, license file, Trial License Mode).

A13002 Licensing not sufficient in operation

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause:

- For the converter, the options that require a license are being used but the licenses are not sufficient.
- An error occurred when checking the existing licenses.

Alarm value (r2124, interpret decimal):

0: The existing license is not sufficient.

1: An adequate license was not able to be determined as the memory card with the required licensing data was withdrawn in operation or the memory card has developed a defect.

2: An adequate license was not able to be determined as there is no licensing data available on the memory card.

3: An adequate license was not able to be determined as there is no licensing data available on the memory card.

4, 5, 6, 7: An adequate license was not able to be determined as the licensing data were manipulated and are therefore invalid.

8,9: An internal error occurred when checking the license.

Remedy:

For alarm value = 0:
Additional licenses are required and must be activated.

For alarm value = 1:
Reinsert or replace the memory card that matches the system.

For alarm value = 2:
Transfer the license file to the converter.

For alarm value = 3:
Compare the license file name (after "LK_" to ".ZIP") with the serial number of the memory card.
Transfer the appropriate license file to the converter.

For alarm value = 4, 5, 6, 7, 8, 9:
- Carry out a POWER ON.
- Upgrade firmware to later version.
- Contact Technical Support.

Note:
An overview of the converter functions requiring a license can be displayed using a commissioning tool in the online mode. Depending on the commissioning tool, you can also obtain the necessary licensing (serial number, license file, Trial License Mode).

A13030 Trial License activated

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The "Trial License" function was activated. One of the available periods is expiring.

Remedy: Not necessary.
The alarm is automatically withdrawn after the periods have expired.

A13031 Trial License period expired

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: One of the available periods of the "Trial License" function has expired.

Remedy: - If required, start an additional period.
- Deactivate functions requiring a license.
- Appropriately license the drive unit.
Note:
A license that is not adequate will only become evident after the next time the system runs up.

A13032 Trial License last period activated

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The "Trial License" function was activated. The last of the available periods is expiring.

Remedy: Not necessary.
The alarm is automatically withdrawn after the last period has expired.

A13033 Trial License last period expired

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: -

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: The last period of the "Trial License" function has expired. No additional periods available.

Remedy: - Deactivate functions requiring a license.
- Appropriately license the drive unit.
Note:
A license that is not adequate will only become evident after the next time the system runs up.

F30001 Drive: overcurrent

Message class: Power electronics faulted (5)

Message value: Fault cause: %1 bin

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause:

- The drive has detected an overcurrent condition.
- Closed-loop control is incorrectly parameterized.
- Motor has a short-circuit or fault to ground (frame).
- The rated motor current is significantly higher than that of the drive.
- Infeed: High discharge and post-charging currents for line voltage dip.
- Infeed: High post-charging currents for overload when motoring and DC link voltage dip.
- Infeed: Short-circuit currents at switch-on as there is no line commutating reactor.
- Power cables are not correctly connected.
- The power cables exceed the maximum permissible length.
- Defective drive.
- Line phase interrupted.

Fault value (r0949, interpret bit-serial):

- Bit 0: Phase U.
- Bit 1: Phase V.
- Bit 2: Phase W.

Remedy:

- Check the motor data - If required, carry out commissioning.
- Check the assignment of the rated motor and drive currents.
- Infeed: Check the line supply quality.
- Infeed: Reduce the motor load.
- Infeed: Check the correct connection of the line filter and the line commutating reactor.
- Check the power cable connections.
- Check the power cables for short-circuit or ground fault.
- Check the length of the power cables.
- Replace drive.
- Check the line supply phases.

F30002 Drive: DC link overvoltage

Message class: DC link overvoltage (4)

Message value: %1

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause:

- The drive has detected an overvoltage condition in the DC link.
- Motor regenerates too much energy.
- Device supply voltage too high.
- Line phase interrupted.

Fault value (r0949, interpret decimal):
DC link voltage at the time of trip [0.1 V].

18.2 List of faults and alarms

Remedy:

- Increase the ramp-down time.
- Use a braking resistor.
- Use a drive with a higher power rating.
- Check the device supply voltage (p0210).
- Check the line supply phases.

See also: p0210 (Device supply voltage)

F30003 Drive: DC link undervoltage

Message class: Infeed faulted (13)

Message value: -

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The power unit has detected an undervoltage condition in the DC link.

- Line supply failure.
- Line supply voltage below the permissible value.
- Line supply infeed failed or interrupted.
- Line phase interrupted.

Remedy:

- Check the line supply voltage.
- Check the line supply infeed and observe the fault messages relating to it (if there are any).
- Check the line supply phases.
- Check the line supply voltage setting (p0210).

See also: p0210 (Device supply voltage)

F30004 Power unit: Overtemperature heat sink inverter

Message class: Power electronics faulted (5)

Message value: %1

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The temperature of the power unit heat sink has exceeded the permissible limit value.

- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.
- Pulse frequency too high.

Fault value (r0949, interpret decimal):
Temperature [0.01 °C].

Remedy:

- Check whether the fan is running.
- Check the fan elements.
- Check whether the ambient temperature is in the permissible range.
- Check the motor load.
- Reduce the pulse frequency if this is higher than the rated pulse frequency.

Notice:

This fault can only be acknowledged after the alarm threshold for alarm A30250 has been fallen below.

F30005 Power unit: Overload I2t

Message class: Power electronics faulted (5)

Message value: %1

Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The power unit was overloaded.
- The permissible rated power unit current was exceeded for an inadmissibly long time.
- The permissible load duty cycle was not maintained.
Fault value (r0949, interpret decimal):
I2t [100 % = 16384].
Remedy: - Reduce the continuous load.
- Adapt the load duty cycle.
- Check the motor and power unit rated currents.
See also: r0307 (Rated motor power)

F30011 Power unit: Line phase failure in main circuit

Message class: Network fault (2)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: At the power unit, the DC link voltage ripple has exceeded the permissible limit value.
Possible causes:
- A line phase has failed.
- The 3 line phases are inadmissibly asymmetrical.
- The capacitance of the DC link capacitor forms a resonance frequency with the line inductance and the reactor integrated in the power unit.
- The fuse of a phase of a main circuit has ruptured.
- A motor phase has failed.
- For power units operated on a single phase, the permissible active power was exceeded.
Fault value (r0949, interpret decimal):
Only for internal Siemens troubleshooting.
Remedy: - Check the main circuit fuses.
- Check whether a single-phase load is distorting the line voltages.
- Detune the resonant frequency with the line inductance by using an upstream line reactor.
- Dampen the resonant frequency with the line inductance by switching over the DC link voltage compensation in the software or increase the smoothing. However, this can have a negative impact on the torque ripple at the motor output.
- Check the motor feeder cables.

F30015 Drive: phase failure motor cable

Message class: Application/technological function faulted (17)
Message value: -
Component: Motor
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: A phase failure in the motor feeder cable was detected.
The signal can also be output in the following case:
The motor is correctly connected, however the closed-speed control is instable and therefore an oscillating torque is generated.

18.2 List of faults and alarms

- Remedy:**
- Check the motor feeder cables.
 - Check the speed controller settings.

A30016 Power unit: Load supply switched off

Message class: Network fault (2)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The DC link voltage is too low.
Alarm value (r2124, interpret decimal):
DC link voltage at the time of the trip [V].

- Remedy:**
- Switch on load supply.
 - Check the line supply if necessary.
 - If necessary, insert the jumper for the internal braking resistor.
 - For a 3 AC line connection, connect an internal or external braking resistor (X4).

F30017 Power unit: Hardware current limit has responded too often

Message class: Power electronics faulted (5)

Message value: Fault cause: %1 bin

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The hardware current limitation in the relevant phase (see A30031, A30032, A30033) has responded too often. The number of times the limit has been exceeded depends on the design and type of power unit.

- Closed-loop control is incorrectly parameterized.
- Fault in the motor or in the power cables.
- The power cables exceed the maximum permissible length.
- Motor load too high
- Power unit defective.

Fault value (r0949, interpret binary):

Bit 3: phase U

Bit 4: phase V

Bit 5: phase W

Additional bits:

Only for internal Siemens troubleshooting.

Note:

Fault value = 0 means that the phase with current limiting is not recognized (e.g. for blocksize device).

- Remedy:**
- Check the motor data.
 - Check the motor circuit configuration (star-delta).
 - Check the motor load.
 - Check the power cable connections.
 - Check the power cables for short-circuit or ground fault.
 - Check the length of the power cables.
 - Replace power unit.

F30020 Power unit: Configuration not supported

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Fault cause: %1, additional information: %2

Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: A configuration is requested that is not supported by the power unit.
Fault value (r0949, interpret hexadecimal):
yyyyxxxx hex: xxxx = fault cause, yyyy = additional information (internal Siemens)
xxxx = 1: The requested DRIVE-CLiQ timing is not permissible.
xxxx = 3: Initialization was not able to be successfully completed. It is possible that the Control Unit was withdrawn from the Power Module before or during power up.
xxxx = 4: The combination of power unit and Control Unit or Control Unit Adapter is not supported.
xxxx = 8: The version of the ASIC installed in the power unit is no longer supported.
Remedy: For fault cause = 1:
Update the Control Unit firmware or change the DRIVE-CLiQ topology.
For fault cause = 3, 4:
Insert a Control Unit or Control Unit Adapter (CUAxx) on an appropriate Power Module and perform a POWER ON for the Control Unit or the Control Unit Adapter.
For fault cause = 8:
Replace the power unit by one which has a newer ASIC version.

F30021 Drive: Ground fault

Message class: Ground fault / inter-phase short-circuit detected (7)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The drive has detected a ground fault.
Possible causes:
- Ground fault in the power cables.
- Ground fault at the motor.
- When the brake closes, this causes the hardware DC current monitoring to respond.
- Short-circuit at the braking resistor.
Fault value (r0949, interpret decimal):
0:
- The hardware DC current monitoring has responded.
- Short-circuit at the braking resistor.
> 0:
Absolute value summation current amplitude.
Remedy:
- Check the power cable connections.
- Check the motor.
- Check the cables and contacts of the brake connection (a wire is possibly broken).
- Check the braking resistor.

F30024 Power unit: Overtemperature thermal model

Message class: Power electronics faulted (5)
Message value: Power semiconductor: %1, temperature: [0.01 degrees C] %2
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:

18.2 List of faults and alarms

Cause: The temperature difference between the power semiconductor involved and the heat sink has exceeded the permissible fault threshold.

- The permissible load duty cycle was not maintained.
- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.
- Pulse frequency too high.

Fault value (r0949, interpret hexadecimal):
yyyyxxx hex: yyyy= Power semiconductor, xxx = Temperature in 0.01°C
See also: r0037 (Drive temperatures)

Remedy:

- Adapt the load duty cycle.
- Check whether the fan is running.
- Check the fan elements.
- Check whether the ambient temperature is in the permissible range.
- Check the motor load.
- Reduce the pulse frequency if this is higher than the rated pulse frequency.

F30025 Power unit: Chip overtemperature

Message class: Power electronics faulted (5)
Message value: Power semiconductor: %1, temperature: [0.01 degrees C] %2
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:

Cause: The chip temperature of the power semiconductor involved has exceeded the permissible fault threshold.

- The permissible load duty cycle was not maintained.
- Insufficient cooling, fan failure.
- Overload.
- Ambient temperature too high.
- Pulse frequency too high.

Fault value (r0949, interpret hexadecimal):
yyyyxxx hex: yyyy= Power semiconductor, xxx = Temperature in 0.01°C

Remedy:

- Adapt the load duty cycle.
- Check whether the fan is running.
- Check the fan elements.
- Check whether the ambient temperature is in the permissible range.
- Check the motor load.
- Reduce the pulse frequency if this is higher than the rated pulse frequency.

Note:
This fault can only be acknowledged after the alarm threshold for alarm A030252 has been fallen below.
See also: r0037 (Drive temperatures)

F30027 Power unit: Precharging DC link time monitoring

Message class: Infeed faulted (13)
Message value: Enable signals: %1, Status: %2
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:

- Cause:** The power unit DC link was not able to be precharged within the expected time.
Possible causes:
- 1) There is no line supply voltage connected.
 - 2) The line contactor/line side switch has not been closed.
 - 3) The line supply voltage is too low.
 - 4) Line supply voltage incorrectly set (p0210).
 - 5) The precharging resistors are overheated as there were too many precharging operations per time unit.
 - 6) The precharging resistors are overheated as the DC link capacitance is too high.
 - 7) The precharging resistors have overheated as power was drawn from the DC link without the infeed being ready for operation.
 - 8) The precharging resistors are overheated as the line contactor was closed during the DC link fast discharge through the Braking Module.
 - 9) The DC link has either a ground fault or a short-circuit.
 - 10) Connector X4 is not correctly configured.

Fault value (r0949, interpret binary):

yyyyxxxx hex:

yyyy = power unit state

0: Fault status (wait for OFF and fault acknowledgment).

1: Restart inhibit (wait for OFF).

2: Overvoltage condition detected -> change into the fault state.

3: Undervoltage condition detected -> change into the fault state.

4: Wait for bridging contactor to open -> change into the fault state.

5: Wait for bridging contactor to open -> change into restart inhibit.

6: Wait for bypass contactor to open

7: Commissioning.

8: Ready for precharging.

9: Precharging started, DC link voltage lower than the minimum switch-on voltage.

10: Precharging, DC link voltage end of precharging still not detected.

11: Wait for the end of the de-bounce time of the main contactor after precharging has been completed.

12: Precharging completed, ready for pulse enable.

13: It was detected that the STO terminal was energized at the power unit.

xxxx = Missing internal enable signals, power unit (inverted bit-coded, FFFF hex -> all internal enable signals available)

Bit 0: Power supply of the IGBT gating shut down.

Bit 1: Ground fault detected.

Bit 2: Peak current intervention.

Bit 3: I2t exceeded.

Bit 4: Thermal model overtemperature calculated.

Bit 5: (heat sink, gating module, power unit) overtemperature measured.

Bit 6: Reserved.

Bit 7: Overvoltage detected.

Bit 8: Power unit has completed precharging, ready for pulse enable.

Bit 9: STO terminal missing.

Bit 10: Overcurrent detected.

Bit 11: Armature short-circuit active.

Bit 12: DRIVE-CLiQ fault active.

Bit 13: Vce fault detected, transistor de-saturated due to overcurrent/short-circuit.

Bit 14: Undervoltage detected.

See also: p0210 (Device supply voltage)

18.2 List of faults and alarms

- Remedy:**
- In general:
- Check the line supply voltage at the input terminals.
 - Check the line supply voltage setting (p0210).
- For 5):
- Carefully observe the permissible precharging frequency (refer to the product documentation).
- For 6):
- Check the total capacitance of the DC link and reduce in accordance with the maximum permissible DC link capacitance if necessary (refer to the product documentation).
- For 7):
- Interconnect the ready-for-operation signal from the infeed unit in the enable logic of the drives connected to this DC link.
- For 8):
- Check the connections of the external line contactor. The line contactor must be open during DC link fast discharge.
- For 9):
- Check the DC link for ground faults or short-circuits.
- For 10):
- When using the internal braking resistor, terminals DCP and R2 of connector X4 must be bridged.
 - When using an external braking resistor, this must be connected between DCP and R1 of connector X4.
- See also: p0210 (Device supply voltage)

A30031 Power unit: Hardware current limiting in phase U

Message class: Power electronics faulted (5)

Message value: -

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

- Cause:**
- Hardware current limit for phase U responded. The pulsing in this phase is inhibited for one pulse period.
 - Closed-loop control is incorrectly parameterized.
 - Fault in the motor or in the power cables.
 - The power cables exceed the maximum permissible length.
 - Motor load too high
 - Power unit defective.

Note:

Alarm A30031 is always output if the hardware current limitation of phase U, V or W for the inverter responds.

- Remedy:**
- Check the motor data.
 - Check the motor circuit configuration (star/delta).
 - Check the motor load.
 - Check the power cable connections.
 - Check the power cables for short-circuit or ground fault.
 - Check the length of the power cables.

A30034 Power unit: Internal overtemperature

Message class: Power electronics faulted (5)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The alarm threshold for internal overtemperature has been reached.
 If the temperature inside the power unit increases up to the fault threshold, then fault F30036 is triggered.
 - Ambient temperature might be too high.
 - Insufficient cooling, fan failure.
 Alarm value (r2124, interpret binary):
 Bit 0 = 1: Overtemperature in the control electronics area.
 Bit 1 = 1: Overtemperature in the power electronics area.
 Bit 2 = 1: Overtemperature in the processor area.
 Bit 3 = 1: Overtemperature in the processor area.
 Bit 4 = 1: Overtemperature when the internal fan is defective.
 Bit 5 = 1: Intake air overtemperature.

Remedy:
 - Check the ambient temperature.
 - Check the fan for the inside of the unit.

F30036 Power unit: Internal overtemperature

Message class: Power electronics faulted (5)

Message value: %1

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The temperature inside the converter has exceeded the permissible limit value.

- Insufficient cooling, fan failure.

- Overload.

- Ambient temperature too high.

Fault value (r0949, interpret binary):

Bit 0 = 1: Overtemperature in the control electronics area.

Bit 1 = 1: Overtemperature in the power electronics area.

Bit 2 = 1: Overtemperature in the processor area.

Bit 3 = 1: Overtemperature in the processor area.

Bit 4 = 1: Overtemperature when the internal fan is defective.

Bit 5 = 1: Intake air overtemperature.

Remedy: - Check the internal fan.

- Check the fan elements.

- Check whether the ambient temperature is in the permissible range.

Notice:

This fault can only be acknowledged once the permissible temperature limit minus 5 K has been fallen below.

F30040 Drive: 24/48 V undervoltage

Message class: Supply voltage fault (undervoltage) (3)

Message value: Channel: %1, voltage: %2 [0.1 V]

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The undervoltage threshold of the 24 V power supply for the drive was fallen below for longer than 3 ms.

Fault value (r0949, interpret hexadecimal):

yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]

yy = 0: 24 V power supply

yy = 1: 48 V power supply

18.2 List of faults and alarms

Remedy:

- Check the drive power supply.
- Carry out a POWER ON (switch-off/switch-on).

A30041 Power unit: Undervolt 24/48 V alarm

Message class: Supply voltage fault (undervoltage) (3)

Message value: Channel: %1, voltage: %2 [0.1 V]

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: For the power unit power supply, the lower threshold has been violated.

Alarm value (r2124, interpret hexadecimal):

yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]

yy = 0: 24 V power supply

yy = 1: 48 V power supply

Remedy:

- Check the power supply of the power unit.
- Carry out a POWER ON (switch-off/switch-on) for the component.

A30042 Power unit: Fan has reached the maximum operating hours

Message class: Power electronics faulted (5)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The maximum operating time of at least one fan will soon be reached, or has already been exceeded.

Alarm value (r2124, interpret binary):

Bit 0 = 1:

The wear counter of the heat sink fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 0 is cleared and bit 2 is set in the alarm value.

Bit 2 = 1:

The wear counter of the heat sink fan has exceeded 100 %.

Bit 8 = 1:

The wear counter of the 1st internal fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 8 is cleared and bit 10 is set in the alarm value.

Bit 10 = 1:

The wear counter of the 1st internal fan has exceeded 100 %.

Bit 16 = 1:

The wear counter of the 2nd internal fan has reached 99 %. The remaining service life is 1 %. After this 1 % has elapsed, bit 16 is cleared and bit 18 is set in the alarm value.

Bit 18 = 1:

The wear counter of the 2nd internal fan has exceeded 100 %.

Remedy: For the fan involved, carry out the following:

- Replace the fan.
- Reset the wear counter using the appropriate button in Startdrive or the web server.

See also: p0251 (Power unit heat sink fan operating hours counter), r0277 (Power unit heat sink fan wear counter)

F30043 Power unit: Overvolt 24/48 V

Message class: Supply voltage fault (overvoltage) (3)

Message value: Channel: %1, voltage: %2 [0.1 V]

Component: Power Unit

Response: OFF2
Acknowledgment POWER ON
:
Cause: For the power unit power supply, the upper threshold has been violated.
Fault value (r0949, interpret hexadecimal):
yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]
yy = 0: 24 V power supply
yy = 1: 48 V power supply
Remedy: Check the power supply of the power unit.

A30044 Power unit: Overvolt 24/48 V alarm

Message class: Supply voltage fault (overvoltage) (3)
Message value: Channel: %1, voltage: %2 [0.1 V]
Component: Power Unit
Response: NONE
Acknowledgment NONE
:
Cause: For the power unit power supply, the upper threshold has been violated.
Alarm value (r2124, interpret hexadecimal):
yyxxxx hex: yy = channel, xxxx = voltage [0.1 V]
yy = 0: 24 V power supply
yy = 1: 48 V power supply
Remedy: Check the power supply of the power unit.

F30050 Power unit: 24 V supply overvoltage

Message class: Supply voltage fault (overvoltage) (3)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment POWER ON
:
Cause: The voltage monitor signals an overvoltage fault on the module.
Remedy: - Check the 24 V power supply.
- Replace the module if necessary.

F30051 Power unit: Motor holding brake short-circuit detected

Message class: External measured value / signal state outside the permissible range (16)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: A short-circuit at the motor holding brake terminals has been detected.
Fault value (r0949, interpret decimal):
Only for internal Siemens troubleshooting.
Remedy: - Check the motor holding brake for a short-circuit.
- Check the connection and cable for the motor holding brake.

F30052 EEPROM data error

Message class: Hardware/software error (1)

18.2 List of faults and alarms

Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment POWER ON
:
Cause: The EEPROM data of the power unit module are incorrect.
Fault value (r0949, interpret hexadecimal):
Only for internal Siemens troubleshooting.
Remedy: Replace the power unit module or update the EEPROM data.

F30055 Power unit: Braking chopper overcurrent

Message class: Braking Module faulted (14)
Message value: -
Component: None
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: An overcurrent condition has occurred in the braking chopper.
Remedy: - Check whether the braking resistor has a short-circuit.
- For an external braking resistor, check whether the resistor may have been dimensioned too small.
Note:
The braking chopper is only enabled again at pulse enable after the fault has been acknowledged.

F30062 Bypass contactor opened under current

Message class: Infeed faulted (13)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The bypass contactor of the precharging unit has been opened under current.
Possible causes:
- A defect at the bypass contactor
Remedy: It is urgently recommended that the components involved are replaced to prevent serious damage to the entire converter line-up.

F30068 Power unit: undertemperature inverter heat sink

Message class: Power electronics faulted (5)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The actual inverter heat sink temperature is below the permissible minimum value.
Possible causes:
- The power unit is being operated at an ambient temperature that lies below the permissible range.
- The temperature sensor evaluation is defective.
Fault value (r0949, interpret decimal):
Inverter heat sink temperature [0.1 °C].

Remedy:

- Ensure that higher ambient temperatures prevail.
- Replace the power unit.

A30076 Power unit: Thermal overload braking resistor alarm

Message class: Braking Module faulted (14)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The energy absorbed by the braking resistor has exceeded the alarm threshold of 80 %. If the power unit is still operated in the generator mode, then this can reach the shutdown threshold. To avoid overheating of the braking resistor, use of the braking resistor is inhibited and alarm A30077 is output.

Alarm value (r2124, interpret decimal):

Energy absorbed by the braking resistor [Ws].

Remedy: Reduce the power when generating.

Note:

For a DC link coupling, the generating power of all of the coupled power units must be taken into consideration.

A30077 Power unit: Thermal overload braking resistor

Message class: Braking Module faulted (14)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The braking resistor is thermally overloaded. This is the reason that its use was inhibited.

Alarm value (r2124, interpret decimal):

Energy absorbed by the braking resistor [Ws].

Remedy: Reduce the power when generating.

Note:

- Once the braking resistor has thermally recovered, it is enabled for further use.

- For a DC link coupling, the generating power of all the coupled power units must be taken into consideration.

F30078 Power unit: Line reactor overheated

Message class: Overtemperature of the electronic components (6)

Message value: -

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The temperature monitoring of the line reactor has responded. In addition to the OFF2 response, the use of the braking resistor was inhibited.

Note:

- An overtemperature condition of the line reactor can occur when a DC link coupling is used – and if the power when motoring, which is fed into the DC link - Is not evenly distributed across the rectifiers of the power units.

Remedy: - Check the converter fan and replace if necessary.

- Reduce the motoring power.

A30250 Power unit: Overtemperature heat sink inverter

Message class: Power electronics faulted (5)

18.2 List of faults and alarms

Message value: -
Component: Power Unit
Response: NONE
Acknowledgment NONE
:
Cause: The alarm threshold for overtemperature at the inverter heat sink has been reached.
Fault F30004 is initiated if the temperature of the heat sink increases by 5 K.
Remedy: Check the following:
- Is the ambient temperature within the defined limit values?
- Have the load conditions and the load duty cycle been appropriately dimensioned?
- Has the cooling failed?

A30252 Power unit: Chip overtemperature alarm

Message class: Power electronics faulted (5)
Message value: Power semiconductor: %1, temperature: [0.01 degrees C] %2
Component: Power Unit
Response: NONE
Acknowledgment NONE
:
Cause: The chip temperature of the power semiconductor involved has exceeded the permissible alarm threshold.
Note:
- If the chip temperature of the power semiconductor involved increases by 5K, then fault F30025 is initiated.

Alarm value (r2124, interpret hexadecimal):
yyyyxxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C
Remedy: Check the following:
- Is the ambient temperature within the defined limit values?
- Have the load conditions and the load duty cycle been appropriately dimensioned?
- Has the cooling failed?
- Pulse frequency too high?

A30253 Power unit: Overtemperature thermal model alarm

Message class: Power electronics faulted (5)
Message value: Power semiconductor: %1, temperature: [0.01 degrees C] %2
Component: Power Unit
Response: NONE
Acknowledgment NONE
:
Cause: The temperature difference between the power semiconductor involved and the heat sink has exceeded the permissible alarm threshold.
The maximum output current is reduced as overload response.

Alarm value (r2124, interpret hexadecimal):
yyyyxxxx hex: yyyy= Power semiconductor, xxxx = Temperature in 0.01°C
Remedy: Not necessary.
The alarm is automatically withdrawn once the alarm threshold has been fallen below.
Note:
If the temperature continues to increase, this can result in fault F30024.

A30256 Power unit: Overload I2t

Message class: Power electronics faulted (5)

Message value: -
Component: Power Unit
Response: NONE
Acknowledgment NONE
:
Cause: The alarm threshold for the I2t overload of the power unit has been exceeded.
The output current and therefore the output frequency is reduced. If the current reduction is not sufficient to thermally relieve the power unit, then when the fault threshold for I2t overload is reached, the drive switches off the power unit.
Remedy: - Reduce the continuous load.
- Adapt the load duty cycle.
- Check the assignment of the motor and power unit rated currents.

F30260 Power unit: Fault in the driver supply for the power semiconductor

Message class: Hardware/software error (1)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: A fault has occurred in the driver supply of the power semiconductor.
Remedy: There is a hardware defect. The device must be replaced.

F30262 Power unit: Braking chopper defective

Message class: Power electronics faulted (5)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The braking chopper is defective.
Remedy: Replace the converter.

F30263 Power unit: Braking chopper upper defective

Message class: Power electronics faulted (5)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The upper braking chopper is defective.
Remedy: Replace the converter.

F30265 Power unit: Line voltage failure detected

Message class: Power electronics faulted (5)
Message value: -
Component: Power Unit
Response: OFF3
Acknowledgment IMMEDIATELY
:
Cause: Line voltage failure was detected

18.2 List of faults and alarms

Remedy: - Switch on the line voltage.
- To increase the degree of ruggedness, the delay time can be increased.

A30502 Power unit: DC link overvoltage

Message class: DC link overvoltage (4)

Message value: %1

Component: Power Unit

Response: NONE

Acknowledgment NONE

:

Cause: The power unit has detected overvoltage in the DC link on a pulse inhibit.

- Device supply voltage too high.
- Line reactor incorrectly dimensioned.

Alarm value (r2124, interpret decimal):

DC link voltage [1 bit = 100 mV].

See also: r0070 (Actual DC link voltage)

Remedy: - Check the device supply voltage (p0210).
- Check the dimensioning of the line reactor.
See also: p0210 (Device supply voltage)

C30603 SI: Module temperature - limit value exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: A safe monitoring function has detected that the module temperature has exceeded a limit value. STO (Safe Torque Off) was initiated to maintain the safe state.

Remedy: - Check the ambient temperature.
- Check the module fan.
- Operate the module in the permissible range.

F30604 SI: Safety EEPROM data error

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Power Unit

Response: OFF2

Acknowledgment POWER ON

:

Cause: Safety relevant EEPROM data are not correct.
This message results in an STO (Safe Torque Off).

Message value (r0949, interpret decimal): Only for internal Siemens fault diagnostics.

Remedy: Replace the module

A30605 SI: Checksum error has occurred

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE
Acknowledgment NONE
:
Cause: A checksum error (CRC error) has occurred in the converter program memory.
Remedy:
- Carry out a POWER ON (switch-off/switch-on).
- Upgrade firmware to later version.
- Contact Technical Support.

C30649 SI: Internal software error

Message class: Hardware/software error (1)

Message value: Module: %1, line: %2

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: An internal error has occurred in the Safety Integrated software.
Note:
This message results in an STO (Safe Torque Off) that cannot be acknowledged.
Message value (r60049, interpret hexadecimal):
Only for internal Siemens troubleshooting.

Remedy:
- Carry out a POWER ON (switch-off/switch-on) for all components.
- Re-commission the "Safety Integrated" function and carry out a POWER ON.
- Upgrade the firmware of the Control Unit to a later version.
- Ensure that the drive and all of its connected components are connected up in compliance with EMC regulations. Inadequately fixed motor phases or a non-compliant grounding concept can result in this fault.
- Contact Technical Support.
- Replace the Control Unit.
Note:
SI: Safety Integrated

C30680 SI: Checksum error safety monitoring functions

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: Power Unit

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: Review the message on channel A for information

Remedy:

C30681 SI: Incorrect parameter value

Message class: Error in the parameterization / configuration / commissioning procedure (18)

Message value: Parameter: %1, supplementary information: %2

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: Review the message on channel A for information

Remedy:

C30700 SI Motion P2: STO initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF2

Acknowledgment IMMEDIATELY

:

Cause: The drive is stopped using STO.

Possible causes:

- Stop request from another monitoring channel.
- STO not active after parameterized time after test stop selection.
- Subsequent response, following messages: A30706, A30714, F30701, A30716

Remedy:

- Remove the cause of the fault on the first monitoring channel.
- Check the switch-off signal path of the first of monitoring channel (check DRIVE-CLiQ communication).
- Carry out diagnostics for the active messages (A30706, A30714, F30701, A30716).
- Replace drive.

Note:

SAM: Safe Acceleration Monitor (safe acceleration monitoring)

SI: Safety Integrated

STO: Safe Torque Off

C30701 SI Motion P2: SS1 initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: OFF3

Acknowledgment IMMEDIATELY

:

Cause: The drive is stopped using SS1.

As a result of this fault, after the time parameterized in p9556 has expired, or the speed threshold parameterized in p9560 has been fallen below, message F30700 "SI Motion P2: STO initiated" is output.

Possible causes:

- Stop request from another monitoring channel.
- Subsequent response, following messages: A30714, A30711, A30707, A30716

Remedy:

- Remove the cause of the fault on the first monitoring channel.
- Carry out diagnostics for the active messages (A30714, A30711, A30707, A30716).

Note:

SI: Safety Integrated

SS1: Safe Stop 1

C30706 SI: SAM/SBR limit exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: Review the message on channel A for information

Remedy: See also: p9548 (SI SAM speed tolerance)

C30711 SI: SCF (Safety Channel Failure) initiated

Message class: Safety monitoring channel has identified an error (10)

Message value: -

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: Review the message on channel A for information

Remedy:

C30714 SI: Safely-Limited Speed exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The drive had moved faster than that specified by the velocity limit value. The drive is stopped by the configured stop response.

Message value (r2124, interpret decimal):

100: SLS1 exceeded.

200: SLS2 exceeded.

300: SLS3 exceeded.

400: SLS4 exceeded.

1000: Encoder limit frequency exceeded.

Remedy: - Check the traversing/motion program in the control.

- Check the limits for the "SLS" function and if required adapt.

Note:

SI: Safety Integrated

SLS: Safely-Limited Speed

C30716 SI: Tolerance for Safe Direction exceeded

Message class: Safety monitoring channel has identified an error (10)

Message value: %1

Component: None

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: Review the message on channel A for information

Remedy:

N30800 Power unit: Group signal

Message class: Power electronics faulted (5)

Message value: -

Component: Power Unit

Response: OFF2

Acknowledgment NONE

:

Cause: The power unit has detected at least one fault.

Remedy: Evaluate the other messages that are presently available.

F30805 Power unit: EEPROM checksum error

Message class: Hardware/software error (1)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: Internal parameter data is corrupted.
 Fault value (r0949, interpret hexadecimal):
 01: EEPROM access error.
 02: Too many blocks in the EEPROM.
Remedy: Replace the module.

F30810 Power unit: Watchdog timer expired

Message class: Hardware/software error (1)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment IMMEDIATELY
:
Cause: The watchdog timer has expired. This can only be caused by a fatal software error.
Remedy: - Carry out a POWER ON (switch-off/switch-on) for all components.
 - Upgrade firmware to later version.
 - Contact Technical Support.

F30815 Power unit: Processor clock signal error

Message class: Hardware/software error (1)
Message value: -
Component: Power Unit
Response: OFF2
Acknowledgment POWER ON
:
Cause: The processor clock signal monitoring has signaled an error. This can involve the signal itself or its PLL.
Remedy: - Replace the hardware.
 - Contact Technical Support.

A30853 Power unit: Sign-of-life error cyclic data

Message class: General drive fault (19)
Message value: -
Component: Control Unit (CU)
Response: NONE
Acknowledgment NONE
:
Cause: The cyclic setpoint telegrams of the power unit were not refreshed on time.
Remedy: - Check the power unit and if required replace.

F30860 Power unit DRIVE-CLiQ (CU): Telegram error

Message class: Internal (DRIVE-CLiQ) communication error (12)
Message value: Component number: %1, fault cause: %2

Component:	Power Unit
Response:	OFF2
Acknowledgment	IMMEDIATELY
:	
Cause:	There is an internal communication error in the power unit. Error cause: 1 (= 01 hex): Checksum error (CRC error). 2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list. 3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list. 4 (= 04 hex): The length of the receive telegram does not match the receive list. 5 (= 05 hex): The type of the receive telegram does not match the receive list. 6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match. 9 (= 09 hex): Failure of the supply voltage. 16 (= 10 hex): The receive telegram is too early. 17 (= 11 hex): CRC error and the receive telegram is too early. 18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early. 19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early. 20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early. 21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early. 22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early. 25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early. Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause
Remedy:	- Carry out a POWER ON (switch-off/switch-on). - Check the electrical cabinet design and cable routing for EMC compliance.

F30895 Power unit DRIVE-CLiQ: Alternating cyclic data transfer error

Message class:	Internal (DRIVE-CLiQ) communication error (12)
Message value:	Component number: %1, fault cause: %2
Component:	Power Unit
Response:	OFF2
Acknowledgment	IMMEDIATELY
:	

18.2 List of faults and alarms

Cause: A DRIVE-CLiQ communication error has occurred from the power unit to the Control Unit involved.
Error cause:
11 (= 0B hex):
Synchronization error during alternating cyclic data transfer.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy: Carry out a POWER ON (switch-off/switch-on).

F30899 Power unit: Unknown fault

Message class: Power electronics faulted (5)
Message value: New message: %1
Component: Power Unit
Response: NONE
Acknowledgment IMMEDIATELY
:

Cause: A fault occurred on the power unit that cannot be interpreted by the Control Unit firmware.
This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
Fault value (r0949, interpret decimal):
Fault number.
Note:
If required, the significance of this new fault can be read about in a more recent description of the Control Unit.

Remedy: - Replace the firmware on the power unit by an older firmware version.
- Upgrade the firmware on the Control Unit.

F30950 Power unit: Internal software error

Message class: Hardware/software error (1)
Message value: %1
Component: Power Unit
Response: OFF2
Acknowledgment POWER ON
:

Cause: An internal software error has occurred.
Fault value (r0949, interpret decimal):
Information about the fault source.
Only for internal Siemens troubleshooting.

Remedy: - If necessary, upgrade the firmware in the power unit to a later version.
- Contact Technical Support.

A30999 Power unit: Unknown alarm

Message class: Power electronics faulted (5)
Message value: New message: %1
Component: Power Unit
Response: NONE
Acknowledgment NONE
:

- Cause:** An alarm occurred on the power unit that cannot be interpreted by the Control Unit firmware.
 This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
 Alarm value (r2124, interpret decimal):
 Alarm number.
 Note:
 If required, the significance of this new alarm can be read about in a more recent description of the Control Unit.
- Remedy:**
- Replace the firmware on the power unit by an older firmware version.
 - Upgrade the firmware on the Control Unit.

F31120 Motor encoder: Encoder power supply fault

Message class: Position/speed actual value incorrect or not available (11)

Message value: Fault cause: %1 bin

Component: Encoder 1

Response: ENCODER

Acknowledgment PULSE INHIBIT

:

- Cause:** An encoder power supply fault was detected.
 Fault value (r0949, interpret binary):
 Bit 0: Undervoltage condition on the sense line.
 Bit 1: Overcurrent condition for the encoder power supply.
 Bit 2: Overcurrent condition for encoder power supply on cable resolver excitation negative.
 Bit 3: Overcurrent condition for encoder power supply on cable resolver excitation positive.
 Bit 4: The 24 V power supply via the inverter is overloaded.
 Bit 5: Overcurrent at the EnDat connection of the converter.
 Bit 6: Overvoltage at the EnDat connection of the converter.
 Bit 7: Hardware fault at the EnDat connection of the converter.
 Note:
 If the encoder cables 6FX2002-2EQ00-.... and 6FX2002-2CH00-.... are interchanged, this can result in the encoder being destroyed because the pins of the operating voltage are reversed.

- Remedy:**
- For fault value, bit 0 = 1:
- Correct encoder cable connected?
 - Check the plug connections of the encoder cable.
 - SMC30: Check the parameterization (p0404.22).
- For fault value, bit 1 = 1:
- Correct encoder cable connected?
 - Replace the encoder or encoder cable.
- For fault value, bit 2 = 1:
- Correct encoder cable connected?
 - Replace the encoder or encoder cable.
- For fault value, bit 3 = 1:
- Correct encoder cable connected?
 - Replace the encoder or encoder cable.
- For fault value, bit 5 = 1:
- Measuring unit correctly connected at the converter?
 - Replace the measuring unit or the cable to the measuring unit.
- For fault value, bit 6, 7 = 1:
- Replace the defective EnDat 2.2 converter.

F31135 Motor encoder: Fault when determining the position (singleturn)

Message class: Position/speed actual value incorrect or not available (11)

Message value: Fault cause: %1 bin

18.2 List of faults and alarms

Component:	Encoder 1
Response:	ENCODER
Acknowledgment	PULSE INHIBIT
Cause:	<p>The encoder has identified a position determination fault (singleturn) and supplies status information bit by bit in an internal status/fault word.</p> <p>Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.</p> <p>Note regarding the bit designation: The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.</p> <p>Fault value (r0949, interpret binary):</p> <p>Bit 0: F1 (safety status display). Bit 1: F2 (safety status display). Bit 2: Reserved (lighting). Bit 3: Reserved (signal amplitude). Bit 4: Reserved (position value). Bit 5: Reserved (overvoltage). Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--> F3x110, x = 1, 2, 3). Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--> F3x110, x = 1, 2, 3). Bit 8: Reserved (battery)/overcurrent EnDat supply (--> F3x110, x = 1, 2, 3). Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3). Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3). Bit 16: Lighting (--> F3x135, x = 1, 2, 3). Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3). Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3). Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3). Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3). Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3). Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3). Bit 23: Singleturn position 2 (safety status display). Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3). Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3). Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3). Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3). Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3). Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3). Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3). Bit 31: Multiturn battery (reserved).</p>
Remedy:	<p>- Determine the detailed cause of the fault using the fault value.</p> <p>- Replace the encoder if necessary.</p> <p>Note: An EnDat 2.2 encoder may only be removed and inserted in the "Park" state. If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.</p>

F31136 Motor encoder: Fault when determining the position (multiturn)

Message class: Position/speed actual value incorrect or not available (11)

Message value: Fault cause: %1 bin

Component:	Encoder 1
Response:	ENCODER
Acknowledgment	PULSE INHIBIT
:	
Cause:	<p>The encoder has identified a position determination fault (multiturn) and supplies status information bit by bit in an internal status/fault word.</p> <p>Some of these bits cause this fault to be triggered. Other bits are status displays. The status/fault word is displayed in the fault value.</p> <p>Note regarding the bit designation: The first designation is valid for DRIVE-CLiQ encoders, the second for EnDat 2.2 encoders.</p> <p>Fault value (r0949, interpret binary):</p> <p>Bit 0: F1 (safety status display). Bit 1: F2 (safety status display). Bit 2: Reserved (lighting). Bit 3: Reserved (signal amplitude). Bit 4: Reserved (position value). Bit 5: Reserved (overvoltage). Bit 6: Reserved (undervoltage)/hardware fault EnDat supply (--> F3x110, x = 1, 2, 3). Bit 7: Reserved (overcurrent)/EnDat encoder withdrawn when not in the parked state (--> F3x110, x = 1, 2, 3). Bit 8: Reserved (battery)/overcurrent EnDat supply (--> F3x110, x = 1, 2, 3). Bit 9: Reserved/overvoltage EnDat supply (--> F3x110, x = 1, 2, 3). Bit 11: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 12: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 13: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 14: Reserved/internal communication error (--> F3x110, x = 1, 2, 3). Bit 15: Internal communication error (--> F3x110, x = 1, 2, 3). Bit 16: Lighting (--> F3x135, x = 1, 2, 3). Bit 17: Signal amplitude (--> F3x135, x = 1, 2, 3). Bit 18: Singleturn position 1 (--> F3x135, x = 1, 2, 3). Bit 19: Overvoltage (--> F3x135, x = 1, 2, 3). Bit 20: Undervoltage (--> F3x135, x = 1, 2, 3). Bit 21: Overcurrent (--> F3x135, x = 1, 2, 3). Bit 22: Temperature exceeded (--> F3x405, x = 1, 2, 3). Bit 23: Singleturn position 2 (safety status display). Bit 24: Singleturn system (--> F3x135, x = 1, 2, 3). Bit 25: Singleturn power down (--> F3x135, x = 1, 2, 3). Bit 26: Multiturn position 1 (--> F3x136, x = 1, 2, 3). Bit 27: Multiturn position 2 (--> F3x136, x = 1, 2, 3). Bit 28: Multiturn system (--> F3x136, x = 1, 2, 3). Bit 29: Multiturn power down (--> F3x136, x = 1, 2, 3). Bit 30: Multiturn overflow/underflow (--> F3x136, x = 1, 2, 3). Bit 31: Multiturn battery (reserved).</p>
Remedy:	<p>- Determine the detailed cause of the fault using the fault value.</p> <p>- Replace the encoder if necessary.</p> <p>Note: An EnDat 2.2 encoder may only be removed and inserted in the "Park" state. If an EnDat 2.2 encoder was removed when not in the "Park" state, then after inserting the encoder, a POWER ON (switch-off/switch-on) is necessary to acknowledge the fault.</p>

F31137 Motor encoder: Fault when determining the position (singleturn)

Message class: Hardware/software error (1)

Message value: Fault cause: %1 bin

18.2 List of faults and alarms

Component: Encoder 1
Response: ENCODER
Acknowledgment PULSE INHIBIT
:

Cause: A position determination fault has occurred in the DRIVE-CLiQ encoder.
Fault value (r0949, interpret binary):
yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause

For yy = 8 (0000 1000 bin), the following applies:
Bit 1: Signal monitoring (sin/cos).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 16: LED monitoring.
Bit 17: Fault when determining the position (multiturn).
Bit 18: Single-step capability monitoring singleturn from the Safety channel.
Bit 19: ECRC, configuration error in the safety channel.
Bit 23: Temperature outside the limit values.

For yy = 11 (0000 1011 bin), the following applies:
Bit 0: Position word 1 difference between rotation counter and software counter (XC_ERR).
Bit 1: Position word 1 track error of the incremental signals (LIS_ERR).
Bit 2: Position word 1 error when aligning between incremental track signals and absolute value (ST_ERR).
Bit 3: Maximum permissible temperature exceeded (TEMP_ERR).
Bit 4: Power supply overvoltage (MON_OVR_VOLT).
Bit 5: Power supply overcurrent (MON_OVR_CUR).
Bit 6: Power supply undervoltage (MON_UND_VOLT).
Bit 7: Rotation error counter (MT_ERR).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 11: Position word 1 status bit: singleturn position OK (ADC_ready).
Bit 12: Position word 1 status bit: rotation counter OK (MT_ready).
Bit 13: Position word 1 memory error (MEM_ERR).
Bit 14: Position word 1 absolute position error (MLS_ERR).
Bit 15: position word 1 LED error, lighting unit error (LED_ERR).
Bit 18: Position word 2 error when aligning between incremental track signals and absolute value (ST_ERR).
Bit 21: Position word 2 memory error (MEM_ERR).
Bit 22: Position word 2 absolute position error (MLS_ERR).
Bit 23: position word 2 LED error, lighting unit error (LED_ERR).

For yy = 12 (0000 1100 bin), the following applies:
Bit 8: encoder fault.
Bit 10: error in the internal position data transport.

For yy = 14 (0000 1110 bin), the following applies:
Bit 0: Position word 1 temperature outside limit value.
Bit 1: Position word 1 position determination error (multiturn).
Bit 2: Position word 1 FPGA error.
Bit 3: Position word 1 velocity error.
Bit 4: Position word 1 communication error between FPGAs/error in the incremental signal.
Bit 5: Position word 1 timeout absolute value/error when determining the position (singleturn).
Bit 6: Position word 1 internal hardware fault (clock/power monitor IC/power).
Bit 7: Position word 1 internal error (FPGA communication/FPGA parameterization/self-test/software).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 16: Position word 2 temperature outside limit value.
Bit 17: Position word 2 position determination error (multiturn).

18.2 List of faults and alarms

Bit 18: Position word 2 FPGA error.

Bit 19: Position word 2 velocity error.

Bit 20: Position word 2 communication error between FPGAs.

Bit 21: Position word 2 position determination error (singleturn).

Bit 22: Position word 2 internal hardware fault (clock/power monitor IC/power).

Bit 23: Position word 2 internal error (self-test/software).

Note:

For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.

Remedy:

- Determine the detailed cause of the fault using the fault value.
- If required, replace the DRIVE-CLiQ encoder.

F31138 Motor encoder: Fault when determining the position (multiturn)

Message class: Hardware/software error (1)

Message value: Fault cause: %1 bin

Component: Encoder 1

Response: ENCODER

Acknowledgment PULSE INHIBIT

:

Cause: A position determination fault has occurred in the DRIVE-CLiQ encoder.
Fault value (r0949, interpret binary):
yyxxxxxx hex: yy = encoder version, xxxxxx = bit coding of the fault cause

For yy = 8 (0000 1000 bin), the following applies:
Bit 1: Signal monitoring (sin/cos).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 16: LED monitoring.
Bit 17: Fault when determining the position (multiturn).
Bit 19: ECRC, configuration error in the safety channel.
Bit 23: Temperature outside the limit values.

For yy = 11 (0000 1011 bin), the following applies:
Bit 0: Position word 1 difference between rotation counter and software counter (XC_ERR).
Bit 1: Position word 1 track error of the incremental signals (LIS_ERR).
Bit 2: Position word 1 error when aligning between incremental track signals and absolute value (ST_ERR).
Bit 3: Maximum permissible temperature exceeded (TEMP_ERR).
Bit 4: Power supply overvoltage (MON_OVR_VOLT).
Bit 5: Power supply overcurrent (MON_OVR_CUR).
Bit 6: Power supply undervoltage (MON_UND_VOLT).
Bit 7: Rotation error counter (MT_ERR).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 11: Position word 1 status bit: singleturn position OK (ADC_ready).
Bit 12: Position word 1 status bit: rotation counter OK (MT_ready).
Bit 13: Position word 1 memory error (MEM_ERR).
Bit 14: Position word 1 absolute position error (MLS_ERR).
Bit 15: position word 1 LED error, lighting unit error (LED_ERR).
Bit 18: Position word 2 error when aligning between incremental track signals and absolute value (ST_ERR).
Bit 21: Position word 2 memory error (MEM_ERR).
Bit 22: Position word 2 absolute position error (MLS_ERR).
Bit 23: position word 2 LED error, lighting unit error (LED_ERR).

For yy = 14 (0000 1110 bin), the following applies:
Bit 0: Position word 1 temperature outside limit value.
Bit 1: Position word 1 position determination error (multiturn).
Bit 2: Position word 1 FPGA error.
Bit 3: Position word 1 velocity error.
Bit 4: Position word 1 communication error between FPGAs/error in the incremental signal.
Bit 5: Position word 1 timeout absolute value/error when determining the position (singleturn).
Bit 6: Position word 1 internal hardware fault (clock/power monitor IC/power).
Bit 7: Position word 1 internal error (FPGA communication/FPGA parameterization/self-test/software).
Bit 8: F1 (safety status display) error position word 1.
Bit 9: F2 (safety status display) error position word 2.
Bit 16: Position word 2 temperature outside limit value.
Bit 17: Position word 2 position determination error (multiturn).
Bit 18: Position word 2 FPGA error.
Bit 19: Position word 2 velocity error.
Bit 20: Position word 2 communication error between FPGAs.
Bit 21: Position word 2 position determination error (singleturn).
Bit 22: Position word 2 internal hardware fault (clock/power monitor IC/power).

18.2 List of faults and alarms

Bit 23: Position word 2 internal error (self-test/software).

Note:

For an encoder version that is not described here, please contact the encoder manufacturer for more detailed information on the bit coding.

Remedy: - Determine the detailed cause of the fault using the fault value.
- If required, replace the DRIVE-CLiQ encoder.

F31405 Motor encoder: Temperature in the encoder evaluation exceeded

Message class: Overtemperature of the electronic components (6)
Message value: temperature: [0.1 degrees C] %1, temperature sensor number: %2
Component: Sensor Module Encoder 1
Response: ENCODER
Acknowledgment IMMEDIATELY
:

Cause: An inadmissibly high temperature was detected in the encoder electronics or the encoder evaluation.
Fault value (r0949, interpret hexadecimal):
yyxxxx hex: yy = temperature sensor number, xxxx = measured module temperature in 0.1 °C.

Remedy: When using a Sensor Module: Reduce the ambient temperature of the Sensor Module.
Otherwise: Reduce the encoder ambient temperature.

A31700 Motor encoder: Functional safety monitoring initiated

Message class: Safety monitoring channel has identified an error (10)
Message value: Fault cause: %1 bin
Component: Sensor Module Encoder 1
Response: NONE
Acknowledgment NONE
:

Cause: Functional safety was activated. Self-test of the DRIVE-CLiQ encoder has detected a fault.
Alarm value (r2124, interpret binary):
Bit x = 1: Effectivity test x unsuccessful.

Remedy: Replace encoder.

F31801 Motor encoder DRIVE-CLiQ: Sign-of-life missing

Message class: Internal (DRIVE-CLiQ) communication error (12)
Message value: Component number: %1, fault cause: %2
Component: Control Unit (CU)
Response: ENCODER
Acknowledgment IMMEDIATELY
:

Cause: A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved.
Error cause:
10 (= 0A hex):
The sign-of-life bit in the receive telegram is not set.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy: - Check the electrical cabinet design and cable routing for EMC compliance.
- Replace the component involved.

F31802 Motor encoder: Time slice overflow

Message class: Hardware/software error (1)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: A time slice overflow for the motor encoder has occurred.
Fault value (r0949, interpret hexadecimal):
yx hex: y = function involved (Siemens-internal fault diagnostics), x = time slice involved
x = 9:
Time slice overflow of the fast (current controller clock cycle) time slice.
x = A:
Time slice overflow of the average time slice.
x = C:
Time slice overflow of the slow time slice.
yx = 3E7:
Timeout when waiting for SYNO (e.g. unexpected return to non-cyclic operation).

Remedy: Increase the current controller sampling time

Note:

For a current controller sampling time = 31.25 μ s, use an SMx20 with Article No. 6SL3055-0AA00-5xA3.

F31804 Motor encoder: Sensor Module checksum error

Message class: Hardware/software error (1)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment POWER ON

:

Cause: A checksum error has occurred when reading-out the program memory on the Sensor Module.
Fault value (r0949, interpret hexadecimal):
yyyyxxxx hex
yyyy: Memory area involved.
xxxx: Difference between the checksum at POWER ON and the actual checksum.

Remedy: - Carry out a POWER ON (switch-off/switch-on).

- Upgrade firmware to later version.

- Check whether the permissible ambient temperature for the component is maintained.

F31805 Motor encoder: EEPROM checksum error

Message class: Hardware/software error (1)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: Data in the EEPROM corrupted .
Fault value (r0949, interpret hexadecimal):
01: EEPROM access error.
02: Too many blocks in the EEPROM.

Remedy: Replace the module.

F31806 Motor encoder: Initialization error

Message class: Position/speed actual value incorrect or not available (11)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment PULSE INHIBIT

:

Cause: The encoder was not successfully initialized.

Fault value (r0949, interpret binary):

Bit 0, 1: Encoder initialization with the motor rotating has failed (deviation involving coarse and fine position in encoder pulses/4).

Bit 2: Mid-voltage matching for track A unsuccessful.

Bit 3: Mid-voltage matching for track B unsuccessful.

Bit 4: Mid-voltage matching for acceleration input unsuccessful.

Bit 5: Mid-voltage matching for track safety A unsuccessful.

Bit 6: Mid-voltage matching for track safety B unsuccessful.

Bit 7: Mid-voltage matching for track C unsuccessful.

Bit 8: Mid-voltage matching for track D unsuccessful.

Bit 9: Mid-voltage matching for track R unsuccessful.

Bit 10: The difference in mid-voltages between A and B is too great (> 0.5 V)

Bit 11: The difference in mid-voltages between C and D is too great (> 0.5 V)

Bit 12: The difference in mid-voltages between safety A and safety B is too great (> 0.5 V)

Bit 13: The difference in mid-voltages between A and safety B is too great (> 0.5 V)

Bit 14: The difference in mid-voltages between B and safety A is too great (> 0.5 V)

Bit 15: The standard deviation of the calculated mid-voltages is too great (> 0.3 V)

Bit 16: Internal fault - Fault when reading a register (CAFE)

Bit 17: Internal fault - Fault when writing a register (CAFE)

Bit 18: Internal fault: No mid-voltage matching available

Bit 19: Internal error - ADC access error.

Bit 20: Internal error - No zero crossover found.

Bit 28: Error while initializing the EnDat 2.2 measuring unit.

Bit 29: Error when reading out the data from the EnDat 2.2 measuring unit.

Bit 30: EEPROM checksum of the EnDat 2.2 measuring unit incorrect.

Bit 31: Data of the EnDat 2.2 measuring unit inconsistent.

Note:

Bit 0, 1: Up to 6SL3055-0AA00-5*A0

Bits 2 ... 20: 6SL3055-0AA00-5*A1 and higher

Remedy: Acknowledge fault.

If the fault cannot be acknowledged:

Bits 2 ... 9: Check encoder power supply.

Bits 2 ... 14: Check the corresponding cable.

Bit 15 with no other bits: Check track R, check settings in p0404.

Bit 28: Check the cable between the EnDat 2.2 converter and the measuring unit.

Bit 29 ... 31: Replace the defective measuring unit.

F31813 Motor encoder: Hardware logic unit failed

Message class: Hardware/software error (1)

Message value: Fault cause: %1 bin

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment PULSE INHIBIT

:

Cause: The logic unit of the DRIVE-CLiQ encoder has failed.

Fault value (r0949, interpret binary):

Bit 0: ALU watchdog has responded.

Bit 1: ALU has detected a sign-of-life error.

Remedy: When the error reoccurs, replace the encoder.

F31820 Motor encoder DRIVE-CLiQ: Telegram error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder concerned.

Error cause:

1 (= 01 hex):

Checksum error (CRC error).

2 (= 02 hex):

Telegram is shorter than specified in the length byte or in the receive list.

3 (= 03 hex):

Telegram is longer than specified in the length byte or in the receive list.

4 (= 04 hex):

The length of the receive telegram does not match the receive list.

5 (= 05 hex):

The type of the receive telegram does not match the receive list.

6 (= 06 hex):

The address of the component in the telegram and in the receive list do not match.

7 (= 07 hex):

A SYNC telegram is expected - but the received telegram is not a SYNC telegram.

8 (= 08 hex):

No SYNC telegram is expected - but the received telegram is one.

9 (= 09 hex):

The error bit in the receive telegram is set.

16 (= 10 hex):

The receive telegram is too early.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Carry out a POWER ON (switch-off/switch-on).

- Check the electrical cabinet design and cable routing for EMC compliance.

- Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

F31835 Motor encoder DRIVE-CLiQ: Cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder concerned. The nodes do not send and receive in synchronism.
Error cause:
33 (= 21 hex):
The cyclic telegram has not been received.
34 (= 22 hex):
Timeout in the telegram receive list.
64 (= 40 hex):
Timeout in the telegram send list.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy: - Carry out a POWER ON.
- Replace the component involved.

F31836 Motor encoder DRIVE-CLiQ: Send error for DRIVE-CLiQ data

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved. Data were not able to be sent.
Error cause:
65 (= 41 hex):
Telegram type does not match send list.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy: Carry out a POWER ON.

F31837 Motor encoder DRIVE-CLiQ: Component fault

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Fault value (r0949, interpret hexadecimal):

0000yyxx hex:

yy = component number,

xx = fault cause

Error cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Remedy:

- Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- Check the electrical cabinet design and cable routing for EMC compliance.
- Replace the component involved.

F31845 Motor encoder DRIVE-CLiQ: Cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ communication error has occurred from the Control Unit to the encoder involved.

Error cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

Remedy: Carry out a POWER ON (switch-off/switch-on).

F31850 Motor encoder: Encoder evaluation internal software error

Message class: Hardware/software error (1)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment POWER ON

:

18.2 List of faults and alarms

Cause: An internal software error has occurred in the Sensor Module of the motor encoder.
Fault value (r0949, interpret decimal):
1: Background time slice is blocked.
2: Checksum over the code memory is not correct.
10000: OEM memory of the EnDat encoder contains data that cannot be interpreted.
11000 ... 11499: Descriptive data from EEPROM incorrect.
11500 ... 11899: Calibration data from EEPROM incorrect.
11900 ... 11999: Configuration data from EEPROM incorrect.
12000 ... 12008: communication with analog/digital converter faulted.
16000: DRIVE-CLiQ encoder initialization application error.
16001: DRIVE-CLiQ encoder initialization ALU error.
16002: DRIVE-CLiQ encoder HISI / SISI initialization error.
16003: DRIVE-CLiQ encoder safety initialization error.
16004: DRIVE-CLiQ encoder internal system error.

Remedy:

- Replace the Sensor Module.
- If required, upgrade the firmware.
- Contact Technical Support.

F31851 Motor encoder DRIVE-CLiQ (CU): Sign-of-life missing

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause: There is a DRIVE-CLiQ communication error between the Sensor Module (motor encoder) involved and the Control Unit.
The DRIVE-CLiQ component did not set the sign-of-life to the Control Unit.
Error cause:
10 (= 0A hex):
The sign-of-life bit in the receive telegram is not set.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Upgrade the firmware of the component involved.
- Carry out a POWER ON (switch-off/switch-on) for the component involved.

F31860 Motor encoder DRIVE-CLiQ (CU): Telegram error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY

:

Cause:	<p>There is a DRIVE-CLiQ communication error between the Sensor Module (motor encoder) involved and the Control Unit.</p> <p>Error cause:</p> <p>1 (= 01 hex): Checksum error (CRC error).</p> <p>2 (= 02 hex): Telegram is shorter than specified in the length byte or in the receive list.</p> <p>3 (= 03 hex): Telegram is longer than specified in the length byte or in the receive list.</p> <p>4 (= 04 hex): The length of the receive telegram does not match the receive list.</p> <p>5 (= 05 hex): The type of the receive telegram does not match the receive list.</p> <p>6 (= 06 hex): The address of the power unit in the telegram and in the receive list do not match.</p> <p>9 (= 09 hex): The DRIVE-CLiQ communication from the DRIVE-CLiQ component involved to the Control Unit signals that the supply voltage has failed.</p> <p>16 (= 10 hex): The receive telegram is too early.</p> <p>17 (= 11 hex): CRC error and the receive telegram is too early.</p> <p>18 (= 12 hex): The telegram is shorter than that specified in the length byte or in the receive list and the receive telegram is too early.</p> <p>19 (= 13 hex): The telegram is longer than that specified in the length byte or in the receive list and the receive telegram is too early.</p> <p>20 (= 14 hex): The length of the receive telegram does not match the receive list and the receive telegram is too early.</p> <p>21 (= 15 hex): The type of the receive telegram does not match the receive list and the receive telegram is too early.</p> <p>22 (= 16 hex): The address of the power unit in the telegram and in the receive list does not match and the receive telegram is too early.</p> <p>25 (= 19 hex): The error bit in the receive telegram is set and the receive telegram is too early.</p> <p>Note regarding the message value: The individual information is coded as follows in the message value (r0949/r2124): 0000yyxx hex: yy = component number, xx = error cause</p>
Remedy:	<ul style="list-style-type: none">- Carry out a POWER ON (switch-off/switch-on).- Check the electrical cabinet design and cable routing for EMC compliance.- Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

F31875 Motor encoder: Supply voltage failed

Message class:	Supply voltage fault (undervoltage) (3)
Message value:	Component number: %1, fault cause: %2
Component:	Sensor Module Encoder 1
Response:	ENCODER
Acknowledgment	IMMEDIATELY
:	

18.2 List of faults and alarms

Cause: The component involved has signaled that the 24 V supply has failed.
Error cause:
9 (= 09 hex):
The power supply voltage for the components has failed.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Check the supply voltage wiring (interrupted cable, contacts, ...).
- Check the dimensioning of the 24 V supply, check cable lengths.

F31885 Encoder 1 DRIVE-CLiQ: Cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY
:

Cause: There is a DRIVE-CLiQ communication error between the converter and motor.
The nodes do not send and receive in synchronism.
Error cause:
26 (= 1A hex):
Sign-of-life bit in the receive telegram not set and the receive telegram is too early.
33 (= 21 hex):
The cyclic telegram has not been received.
34 (= 22 hex):
Timeout in the telegram receive list.
64 (= 40 hex):
Timeout in the telegram send list.
98 (= 62 hex):
Error at the transition to cyclic operation.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Check the OCC cable between the converter and motor.
- Check the power supply voltage of the component involved.
- Carry out a POWER ON (switch-off/switch-on).
- Replace the component involved.

Note:
OCC: One Cable Connection (one cable system)

F31886 Motor encoder DRIVE-CLiQ (CU): Error when sending DRIVE-CLiQ data

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY
:

Cause: There is a DRIVE-CLiQ communication error from the Sensor Module involved (encoder 1) to the converter.
Data were not able to be sent.

Fault value (r0949, interpret hexadecimal):
0000yyxx hex:
yy = component number,
xx = fault cause

Error cause:
65 (= 41 hex):
Telegram type does not match send list.

Remedy: - Carry out a POWER ON.

F31887 Motor encoder DRIVE-CLiQ (CU): Component fault

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment IMMEDIATELY
:

Cause: A fault has been detected on the DRIVE-CLiQ component involved (Sensor Module for the motor encoder). Faulty hardware cannot be excluded.

Fault value (r0949, interpret hexadecimal):
0000yyxx hex:
yy = component number,
xx = fault cause

Error cause:
32 (= 20 hex):
Error in the telegram header.
35 (= 23 hex):
Receive error: The telegram buffer memory contains an error.
66 (= 42 hex):
Send error: The telegram buffer memory contains an error.
67 (= 43 hex):
Send error: The telegram buffer memory contains an error.
96 (= 60 hex):
Response received too late during runtime measurement.
97 (= 61 hex):
Time taken to exchange characteristic data too long.

Remedy: - Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- Check the electrical cabinet design and cable routing for EMC compliance.
- Replace the component involved.

F31895 Motor encoder DRIVE-CLiQ (CU): Alternating cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Sensor Module Encoder 1

Response: ENCODER

18.2 List of faults and alarms

Acknowledgment IMMEDIATELY

:

Cause: There is a DRIVE-CLiQ communication error between the Sensor Module (motor encoder) involved and the Control Unit.

Fault value (r0949, interpret hexadecimal):

0000yyxx hex:

yy = component number,

xx = fault cause

Error cause:

11 (= 0B hex):

Synchronization error during alternating cyclic data transfer.

Remedy: Carry out a POWER ON.

F31896 Motor encoder DRIVE-CLiQ (CU): Inconsistent component properties

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1

Component: Sensor Module Encoder 1

Response: OFF2

Acknowledgment IMMEDIATELY

:

Explanation of the message value: For %1

Component in target topology

Cause: The properties of the DRIVE-CLiQ component (Sensor Module for the motor encoder), specified by the fault value, have changed in an incompatible fashion with respect to the properties when running up. One cause can be, e.g. that a DRIVE-CLiQ cable or DRIVE-CLiQ component has been replaced.

Fault value (r0949, interpret decimal):

Component number.

Remedy: - Carry out a POWER ON.

- When a component is replaced, the same component type and if possible the same firmware version should be used.

- When a cable is replaced, only cables whose length is the same as or as close as possible to the length of the original cables should be used (ensure compliance with the maximum cable length).

F31950 Motor encoder: Internal software error

Message class: Hardware/software error (1)

Message value: %1

Component: Sensor Module Encoder 1

Response: ENCODER

Acknowledgment POWER ON

:

Cause: An internal software error has occurred.

Fault value (r0949, interpret decimal):

The fault value contains information regarding the fault source.

Only for internal Siemens troubleshooting.

Remedy: - If necessary, upgrade the firmware in the Sensor Module to a later version.

- Contact Technical Support.

F36207 Hub: Overtemperature component

Message class: Overtemperature of the electronic components (6)

Message value: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: The temperature on the DRIVE-CLiQ Hub Module has exceeded the fault threshold.
Fault value (r0949, interpret decimal):
Actual temperature in 0.1 °C resolution.
Remedy: - Check ambient temperature at component installation location.
- Replace the component involved.

A36211 Hub: Overtemperature alarm component

Message class: Overtemperature of the electronic components (6)
Message value: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment NONE
:
Cause: The temperature on the DRIVE-CLiQ Hub Module has exceeded the alarm threshold.
Alarm value (r2124, interpret decimal):
Actual temperature in 0.1 °C resolution.
Remedy: - Check ambient temperature at component installation location.
- Replace the component involved.

F36214 Hub: overvoltage fault 24 V supply

Message class: Supply voltage fault (overvoltage) (3)
Message value: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: The 24 V power supply on the DRIVE-CLiQ Hub Module has exceeded the fault threshold.
Fault value (r0949, interpret decimal):
Actual operating voltage in 0.1 °C resolution
Remedy: - Check the supply voltage of the component involved.
- Replace the component involved.

F36216 Hub: undervoltage fault 24 V supply

Message class: Supply voltage fault (undervoltage) (3)
Message value: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment IMMEDIATELY
:
Cause: The 24 V power supply on the DRIVE-CLiQ Hub Module has undershot the fault threshold.
Fault value (r0949, interpret decimal):
Actual operating voltage in 0.1 °C resolution
Remedy: - Check the supply voltage of the component involved.
- Replace the component involved.

A36217 Hub: undervoltage alarm 24 V supply

Message class: Supply voltage fault (undervoltage) (3)

Message value: %1

Component: Terminal Board (TB)

Response: NONE

Acknowledgment NONE

:

Cause: The 24 V power supply on the DRIVE-CLiQ Hub Module has undershot the alarm threshold.

Alarm value (r2124, interpret decimal):

Actual operating voltage in 0.1 °C resolution

Remedy: - Check the supply voltage of the component involved.

- Replace the component involved.

N36800 Hub: Group signal

Message class: General drive fault (19)

Message value: -

Component: None

Response: NONE

Acknowledgment NONE

:

Cause: The DRIVE-CLiQ Hub Module has detected at least one fault.

Remedy: Evaluates other actual messages.

A36801 Hub DRIVE-CLiQ: Sign-of-life missing

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Control Unit (CU)

Response: NONE

Acknowledgment NONE

:

Cause: A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved.

Error cause:

10 (= 0A hex):

The sign-of-life bit in the receive telegram is not set.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

Remedy: - Check the DRIVE-CLiQ connection.

- Replace the component involved.

A36802 Hub: Time slice overflow

Message class: Hardware/software error (1)

Message value: %1

Component: Terminal Board (TB)

Response: NONE

Acknowledgment NONE

:

Cause: A time slice overflow has occurred on the DRIVE-CLiQ Hub Module.

Fault value (r0949, interpret decimal):

xx: Time slice number xx

- Remedy:**
- Reduce the current controller frequency.
 - Carry out a POWER ON (switch-off/switch-on) for all components.
 - Upgrade firmware to later version.
 - Contact Technical Support.

F36804 Hub: Checksum error has occurred

Message class: Hardware/software error (1)

Message value: %1

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: A checksum error occurred when reading out the program memory on the DRIVE-CLiQ Hub Module.
Fault value (r0949, interpret hexadecimal):
Difference between the checksum at POWER ON and the actual checksum.

- Remedy:**
- Check whether the permissible ambient temperature for the component is maintained.
 - Replace the DRIVE-CLiQ Hub Module.

F36805 Hub: EEPROM checksum incorrect

Message class: Hardware/software error (1)

Message value: %1

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: The internal parameter data on the DRIVE-CLiQ Hub Module is incorrect.
Alarm value (r2124, interpret hexadecimal):
01: EEPROM access error.
02: Too many blocks in the EEPROM.

- Remedy:**
- Check whether the permissible ambient temperature for the component is maintained.
 - Replace the DRIVE-CLiQ Hub Module.

F36820 Hub DRIVE-CLiQ: Telegram error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved.
Error cause:
1 (= 01 hex):
Checksum error (CRC error).
2 (= 02 hex):
Telegram is shorter than specified in the length byte or in the receive list.
3 (= 03 hex):
Telegram is longer than specified in the length byte or in the receive list.
4 (= 04 hex):
The length of the receive telegram does not match the receive list.
5 (= 05 hex):
The type of the receive telegram does not match the receive list.
6 (= 06 hex):
The address of the component in the telegram and in the receive list do not match.
7 (= 07 hex):
A SYNC telegram is expected - but the received telegram is not a SYNC telegram.
8 (= 08 hex):
No SYNC telegram is expected - but the received telegram is one.
9 (= 09 hex):
The error bit in the receive telegram is set.
16 (= 10 hex):
The receive telegram is too early.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Carry out a POWER ON (switch-off/switch-on).
- Check the electrical cabinet design and cable routing for EMC compliance.
- Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).

F36835 Hub DRIVE-CLiQ: Cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved. The nodes do not send and receive in synchronism.
Error cause:
33 (= 21 hex):
The cyclic telegram has not been received.
34 (= 22 hex):
Timeout in the telegram receive list.
64 (= 40 hex):
Timeout in the telegram send list.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Carry out a POWER ON.
- Replace the component involved.

F36836 Hub DRIVE-CLiQ: Send error for DRIVE-CLiQ data

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved. Data were not able to be sent.

Error cause:

65 (= 41 hex):

Telegram type does not match send list.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

Remedy: Carry out a POWER ON.

F36837 Hub DRIVE-CLiQ: Component fault

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

Cause: Fault detected on the DRIVE-CLiQ component concerned. Faulty hardware cannot be excluded.

Error cause:

32 (= 20 hex):

Error in the telegram header.

35 (= 23 hex):

Receive error: The telegram buffer memory contains an error.

66 (= 42 hex):

Send error: The telegram buffer memory contains an error.

67 (= 43 hex):

Send error: The telegram buffer memory contains an error.

Note regarding the message value:

The individual information is coded as follows in the message value (r0949/r2124):

0000yyxx hex: yy = component number, xx = error cause

Remedy:

- Check the DRIVE-CLiQ wiring (interrupted cable, contacts, ...).
- Check the electrical cabinet design and cable routing for EMC compliance.
- If required, use another DRIVE-CLiQ socket.
- Replace the component involved.

F36845 Hub DRIVE-CLiQ: Cyclic data transfer error

Message class: Internal (DRIVE-CLiQ) communication error (12)

Message value: Component number: %1, fault cause: %2

Component: Terminal Board (TB)

Response: NONE

Acknowledgment IMMEDIATELY

:

18.2 List of faults and alarms

Cause: A DRIVE-CLiQ communications error has occurred from the Control Unit to the DRIVE-CLiQ Hub Module involved.
Error cause:
11 (= 0B hex):
Synchronization error during alternating cyclic data transfer.
Note regarding the message value:
The individual information is coded as follows in the message value (r0949/r2124):
0000yyxx hex: yy = component number, xx = error cause

Remedy: Carry out a POWER ON.

F36899 Hub: Unknown fault

Message class: General drive fault (19)
Message value: New message: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment IMMEDIATELY
:

Cause: A fault occurred on the DRIVE-CLiQ Hub Module that cannot be interpreted by the Control Unit firmware. This can occur if the firmware on this component is more recent than the firmware on the Control Unit.
Fault value (r0949, interpret decimal):
Fault number.
Note:
If required, the significance of this new fault can be read about in a more recent description of the Control Unit.

Remedy: - Replace the firmware on the DRIVE-CLiQ Hub Module with older firmware.
- Upgrade the firmware on the Control Unit.

A36999 Hub: Unknown alarm

Message class: General drive fault (19)
Message value: New message: %1
Component: Terminal Board (TB)
Response: NONE
Acknowledgment NONE
:

Cause: An alarm has occurred on the DRIVE-CLiQ Hub Module, which cannot be interpreted by the converter firmware. This can occur if the firmware on this component is more recent than the firmware on the converter.
Alarm value (r2124, interpret decimal):
Alarm number.
Note:
If required, the significance of this new alarm can be read about in a more recent description of the converter.

Remedy: - Replace the firmware on the DRIVE-CLiQ Hub Module with older firmware.
- Upgrade the converter firmware.

Appendix

A.1 Communication telegrams

A.1.1 Standard telegrams

A.1.1.1 Telegram 3

Overview

The telegram is suitable for closed-loop speed control of a drive and the control of 1 position encoder.

Description of function

Process data	Telegram 3			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	G1_STW	Control word for encoder 1	G1_ZSW	Status word from encoder 1
PZD06	---	Not assigned	G1_XIST1	Position actual value 1 from encoder 1
PZD07	---			
PZD08	---		G1_XIST2	Position actual value 2 from encoder 1
PZD09	---			

A.1.1.2 Telegram 5

Overview

The telegram is suitable for the closed-loop speed control and closed-loop position control of a drive and to control 1 position encoder.

Requirement

PROFINET with IRT (Isochronous Real-Time)

Description of function

Process data	Telegram 5			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	G1_STW	Control word for encoder 1	G1_ZSW	Status word for encoder 1
PZD06	XERR	Position controller deviation	G1_XIST1	Position actual value 1 from encoder 1
PZD07				
PZD08	KPC	Gain factor for the position controller	G1_XIST2	Position actual value 2 from encoder 1
PZD09				

A.1.1.3 Telegram 102

Overview

The telegram is suitable for closed-loop speed control of a drive and the control of 1 position encoder.

Description of function

Process data	Telegram 102			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	MOMRED	Torque reduction	MELDW	Message word
PZD06	G1_STW	Control word for encoder 1	G1_ZSW	Status word from encoder 1
PZD07	---	Not assigned	G1_XIST1	Position actual value 1 from encoder 1
PZD08	---			
PZD09	---		G1_XIST2	Position actual value 2 from encoder 1
PZD10	---			

A.1.1.4 Telegram 105

Overview

The telegram is suitable for the closed-loop speed control and closed-loop position control of a drive and to control 1 position encoder.

Requirement

PROFINET with IRT (Isochronous Real-Time)

Description of function

Process data	Telegram 105			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZD01	STW1	Control word 1	ZSW1	Status word 1
PZD02	NSOLL_B	32-bit speed setpoint	NIST_B	Speed actual value 32-bit
PZD03				
PZD04	STW2	Control word 2	ZSW2	Status word 2
PZD05	MOMRED	Torque reduction	MELDW	Message word
PZD06	G1_STW	Control word for encoder 1	G1_ZSW	Status word for encoder 1
PZD07	XERR	Position controller deviation	G1_XIST1	Position actual value 1 from encoder 1
PZD08				
PZD09	KPC	Gain factor for the position controller	G1_XIST2	Position actual value 2 from encoder 1
PZD10				

A.1.2 Supplementary telegrams

A.1.2.1 Telegram 700

Overview

Supplementary telegram 700 transfers the status of Safety Integrated Functions.

Description of function

Process data	Telegram 700			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZDn+1	---	Not assigned	S_ZSW1B	Status word of the Safety Integrated Functions
PZDn+2	---		S_V_LIMIT_B	Actual limitation to the set-point speed
PZDn+3	---			

Transfer of telegram 700 is not failsafe. A PROFIsafe telegram is required for failsafe transfer.

A.1.2.2 Telegram 750

Overview

Telegram 750 is suitable to control the drive torque, e.g. for an electronic counterweight of a vertical axis.

Description of function

Process data	Telegram 750			
	Control → Converter		Converter → Control	
	Signal	Explanation	Signal	Explanation
PZDn+1	M_ADD1	Acceleration compensation	M_ACT	Current torque
PZDn+2	M_LIMIT_POS	Positive torque limit	---	Not assigned
PZDn+3	M_LIMIT_NEG	Negative torque limit	---	

A.1.3 PROFIsafe telegrams

A.1.3.1 Telegram 30

Overview

Via a PROFIsafe telegram, the higher-level failsafe control activates the Safety Integrated Functions of the converter and receives feedback on the status of the Safety Integrated Functions.

Description of function

The converter receives data cyclically from the higher-level failsafe control and sends its send data cyclically back to the failsafe control.

Process data	Telegram 30			
	Failsafe control → Converter		Converter → Failsafe control	
	Signal	Explanation	Signal	Explanation
PZD01	S_STW1	Safety control word 1	S_ZSW1	Safety status word 1

A.1.3.2 Telegram 901

Overview

Via the PROFIsafe telegram, the higher-level failsafe control activates the Safety Integrated Functions of the converter and receives feedback on the status of the Safety Integrated Functions.

Description of function

The converter receives data cyclically from the higher-level failsafe control and sends its send data cyclically back to the failsafe control.

Process data	Telegram 901			
	Failsafe control → Converter		Converter → Failsafe control	
	Signal	Explanation	Signal	Explanation
PZD01	S_STW2	Safety control word 2	S_ZSW2	Safety status word 2
PZD02				
PZD03	S_SLS_LIM-IT_A	Variable limit value for SLS	S_SLS_LIM-IT_A_ACTIVE	Variable limit value for SLS
PZD04	---	Not assigned	reserved	---
PZD05	---		reserved	---

A.1.4 Control words, status words and message word

A.1.4.1 Control word 1 and status word 1

Overview

Control word 1 (STW1) activates the converter drive functions.

Status word 1 (ZSW1) signals the status of the converter to the higher-level control.

Description of function

Control word 1 (STW1)		
Control → Converter		
Bit	Drive function	Explanation
00	0 = OFF1	The motor brakes with the ramp-down time p1121 of the ramp-function generator. The converter switches off the motor at standstill.
	0 → 1 = ON	The converter goes into the "ready" state. If, in addition, bit 3 = 1, the converter switches on the motor.
01	0 = OFF2	Switch off the motor immediately, the motor then coasts down to a standstill.
	1 = No OFF2	The motor can be switched on (ON command).
02	0 = Quick stop (OFF3)	Quick stop: The motor brakes to a standstill with the OFF3 ramp-down time p1135.
	1 = No quick stop (OFF3)	The motor can be switched on (ON command).
03	0 = Inhibit operation	Immediately switch off motor (cancel pulses).
	1 = Enable operation	Switch on motor (pulses can be enabled).
04	0 = Inhibit RFG	The converter immediately sets its ramp-function generator output to 0.
	1 = Do not inhibit RFG	The ramp-function generator can be enabled.
05	0 = Stop RFG	The output of the ramp-function generator stops at the current value.
	1 = Enable RFG	The output of the ramp-function generator follows the setpoint.
06	0 = Inhibit setpoint	The converter brakes the motor with the ramp-down time p1121 of the ramp-function generator.
	1 = Enable setpoint	Motor accelerates to the setpoint with the ramp-up time p1120.
07	0 → 1 = Acknowledge faults	Acknowledge fault. If the ON command is still active, the converter switches to the "switching on inhibited" state.
08	Reserved	
09	Reserved	
10	0 = No control by PLC	Converter ignores the process data from the fieldbus.
	1 = Control via PLC	Control via fieldbus, converter accepts the process data from the fieldbus.
11	Reserved	

Control word 1 (STW1)				
Control → Converter				
Bit	Drive function		Explanation	
12	Telegrams 102, 105	Telegrams 3, 5	Unconditionally open motor holding brake	--
	1 = Open holding brake	Reserved		
13	Reserved			
14	Telegrams 102, 105	Telegrams 3, 5	Switch-over from speed to torque control	--
	1 = Torque control active 0 = Closed-loop speed control active	Reserved		
15	Reserved			

Status word 1 (ZSW1)				
Converter → Control				
Bit	Status		Explanation	
00	1 = Ready for switching on		Power supply switched on; electronics initialized; pulses inhibited.	
01	1 = Ready for operation		Motor is switched on (ON/OFF1 = 1), no fault is active. With the command "Enable operation" (STW1.3), the converter switches on the motor.	
02	1 = Operation enabled		Motor follows setpoint. See control word 1, bit 3.	
03	1 = Fault present		The converter has a fault. Acknowledge fault using STW1.7.	
04	1 = OFF2 inactive		Coast down to standstill is not active.	
05	1 = OFF3 inactive		Quick stop is not active.	
06	1 = "Switching on inhibited" active		It is only possible to switch on the motor after an OFF1 followed by ON.	
07	1 = Alarm active		Motor remains switched on; no acknowledgement is necessary.	
08	1 = Speed deviation within the tolerance range		Setpoint / actual value deviation within the tolerance range.	
09	1 = Control requested		The automation system has been requested to take over control of the converter.	
10	1 = Comparison speed reached or exceeded		Speed is greater than or equal to the corresponding maximum speed.	
11	Telegrams 102, 103	Telegrams 3, 5	Internal diagnostics for automation systems with integrated SINAMICS functionality	Comparison value for current or torque has been reached or exceeded.
	1 = Alarm class bit 0	1 = Torque limit reached		
12	1 = Alarm class bit 1	1 = Holding brake open		Signal to open and close a motor holding brake.

Status word 1 (ZSW1)				
Converter → Control				
Bit	Status		Explanation	
13	Reserved	0 = Alarm, motor over-temperature	--	Motor temperature alarm threshold reached
14	1 = Torque control active	1 = Motor rotates clockwise	Switched over from speed to torque control	Internal converter actual value > 0.
		0 = Motor rotates counter-clockwise		Internal converter actual value < 0.
15	Reserved	0 = Alarm, converter thermal overload	--	Converter temperature alarm threshold reached

A.1.4.2 Control word 2 and status word 2

Overview

Control word 2 (STW2) activates the converter drive functions.

Status word 2 (ZSW2) signals the status of the converter to the higher-level control.

Description of function

Control word 2 (STW2)		
Control → Converter		
Bit	Drive function	
00	Reserved	
01	Reserved	
02	Reserved	
03	Reserved	
04	Reserved	
05	Reserved	
06	Telegrams 102, 105	Telegrams 3, 5
	1 = Speed controller integrator disable	Reserved
07	Reserved	
08	1 = Travel to fixed stop	
09	Reserved	
10	Reserved	
11	Reserved	
12	Controller sign-of-life bit 0	
13	Controller sign-of-life bit 1	
14	Controller sign-of-life bit 2	
15	Controller sign-of-life bit 3	

Status word 2 (ZSW2)		
Converter → Control		
Bit	Status	
00	Reserved	
01	Reserved	
02	Reserved	
03	Reserved	
04	Reserved	
05	1 = Open holding brake	1 = Alarm class bit 0
	1 = Speed controller integrator disable	1 = Alarm class bit 1
07	Reserved	
08	1 = Travel to fixed stop active	
09	Reserved	

Status word 2 (ZSW2)		
Converter → Control		
Bit	Status	
10	Telegrams 102, 105	Telegrams 3, 5
	Reserved	1 = Pulses enabled
11	Reserved	
12	Device sign-of-life bit 0	
13	Device sign-of-life bit 1	
14	Device sign-of-life bit 2	
15	Device sign-of-life bit 3	

A.1.4.3 Encoder-1 control word and encoder-1 status word

Overview

The encoder control word (G1_STW) activates encoder functions.

The encoder status word (G1_ZSW) signals the status of the encoder to the higher-level control.

Description of function

Control word 1 (G1_STW)		Status word 1 (G1_ZSW)	
Control → Converter		Converter → Control	
Bit	Encoder function	Bit	Encoder status
00	Request function 1	00	Function 1 active
01	Request function 2	01	Function 2 active
02	Request function 3	02	Function 3 active
03	Request function 4	03	Function 4 active
04	Request command bit 0	04	Value 1
05	Request command bit 1	05	Value 2
06	Request command bit 2	06	Value 3
07	Mode	07	Value 4
08	Reserved	08	Measuring probe 1 deflected
09	Reserved	09	Measuring probe 2 deflected
10	Reserved	10	Reserved
11	Reserved	11	Acknowledge encoder fault active
12	Reserved	12	Reserved
13	Request absolute value cyclically	13	Cyclic absolute value
14	Request parking encoder	14	Parking encoder active
15	Acknowledge encoder fault	15	Encoder fault

A.1.4.4 Safety control word 1 and safety status word 1

Overview

The higher-level control activates the Safety Integrated Functions of the converter using safety control word 1 (S_STW1).

The converter signals the status of the Safety Integrated Functions to the higher-level control using safety status word 1 (S_ZSW1).

Description of function

Safety control word 1 (S_STW1)					
Failsafe control → Converter					
Bit	Safety Integrated Function	Explanation			
00	STO	1	Deselect STO		
		0	Select STO		
01	SS1	1	Deselect SS1		
		0	Select SS1		
02, 03	Reserved				
04	SLS	1	Deselect SLS		
		0	Select SLS		
05, 06	Reserved				
07	Failsafe acknowledgment	0	-		
		1 → 0	Acknowledge "Internal event" for a 1 → 0 signal change		
08	Reserved				
09	SLS limit value bit 0	Select SLS limit value		Bit 1	Bit 0
10	SLS limit value bit 1		SLS1	0	0
			SLS2	0	1
			SLS3	1	0
			SLS4	1	1
11	Reserved				
12	SDI positive	1	Deselect SDI with positive direction of rotation		
		0	Select SDI with positive direction of rotation		
13	SDI negative	1	Deselect SDI with negative direction of rotation		
		0	Select SDI with negative direction of rotation		
14	Reserved				
15	SSM	1	Deselect SSM		
		0	Select SSM		

Safety status word 1 (S_ZSW1)				
Converter → Failsafe control				
Bit	Safety status	Explanation		
00	STO active	1	STO is active	
		0	STO is not active	
01	SS1 active	1	SS1 is active	
		0	SS1 is not active	
02, 03	<i>Reserved</i>			
04	SLS active	1	SLS is active	
		0	SLS is not active	
05, 06	<i>Reserved</i>			
07	Internal event	1	The converter signals an "internal event"	
		0	Fault-free operation	
08	<i>Reserved</i>			
09	Active SLS limit value bit 0		Bit 1	Bit 0
10	Active SLS limit value bit 1	SLS1	0	0
		SLS2	0	1
		SLS3	1	0
		SLS4	1	1
11	<i>Reserved</i>			
12	SDI positive active	1	SDI positive direction of rotation is active	
		0	SDI positive direction of rotation is not active	
13	SDI negative active	1	SDI negative direction of rotation is active	
		0	SDI negative direction of rotation is not active	
14	<i>Reserved</i>			
15	Status SSM	1	The absolute value of the speed is less than the SSM limit	
		0	The absolute value of the speed is equal to or greater than the SSM limit	

A.1.4.5 Safety control word 2 and safety status word 2

Overview

The higher-level control activates the Safety Integrated Functions of the converter using safety control word 2 (S_STW2).

The converter signals the status of the Safety Integrated Functions to the higher-level control using safety status word 2 (S_ZSW2).

Description of function

Safety control word 2 (S_STW2)						
Failsafe control → Converter						
Bit	Safety Function	Explanation				
00	STO	1	Deselect STO			
		0	Select STO			
01	SS1	1	Deselect SS1			
		0	Select SS1			
02, 03	Reserved	–	–			
04	SLS	1	Deselect SLS			
		0	Select SLS			
05, 06	Reserved	–	–			
07	Failsafe acknowledgment	0	–			
		1 → 0	Acknowledge "Internal event" for a 1 → 0 signal change			
08	Reserved	–	–			
09	SLS level bit 0	Select SLS level		Bit 1	Bit 0	
10	SLS level bit 1			Level 1	0	0
				Level 2	0	1
				Level 3	1	0
				Level 4	1	1
11	Reserved	–	–			
12	SDI positive active	1	Deselect SDI with positive direction of rotation			
		0	Select SDI with positive direction of rotation			
13	SDI negative active	1	Deselect SDI with negative direction of rotation			
		0	Select SDI with negative direction of rotation			
14 ... 31	Reserved	–	–			

Safety status word 2 (S_ZSW2)			
Converter → Failsafe control			
Bit	Safety status	Explanation	
00	STO active	1	STO is active
		0	STO is not active
01	SS1 active	1	SS1 is active
		0	SS1 is not active
02, 03	Reserved	–	–
04	SLS active	1	SLS is active
		0	SLS is not active
05, 06	Reserved	–	–
07	Internal event	1	The converter signals an "internal event"
		0	Fault-free operation
08	Reserved	–	–

Safety status word 2 (S_ZSW2)				
Converter → Failsafe control				
Bit	Safety status	Explanation		
09	Active SLS level bit 0		Bit 1	Bit 0
10	Active SLS level bit 1	Level 1	0	0
		Level 2	0	1
		Level 3	1	0
		Level 4	1	1
11	Reserved	–	–	–
12	SDI positive active	1	SDI positive direction of rotation is active	
		0	SDI positive direction of rotation is not active	
13	SDI negative active	1	SDI negative direction of rotation is active	
		0	SDI negative direction of rotation is not active	
14	Reserved	–	–	–
15	Status SSM	1	The absolute value of the speed is less than the SSM limit	
		0	The absolute value of the speed is equal to or greater than the SSM limit	
16 ... 23	Reserved	–	–	–
24	F-DI 0	1	F-DI 0 has 1 signal	
		0	F-DI 0 has 0 signal	
25 ... 31	Reserved	–	–	–

A.1.4.6 Safety status word 1B

Overview

The converter signals the status of the Safety Integrated Functions to the higher-level control using safety status word 1B (S_ZSW1B).

Description of function

Safety status word 1B (S_ZSW1B)	
Converter → Control	
Bit	Safety status
00	STO active
01	SS1 active
02	Reserved
03	Reserved
04	SLS active
05	Reserved
06	SLS selected
07	Internal event
08	Reserved
09	Select SLS Bit 0
10	Select SLS Bit 1
11	Reserved
12	SDI positive selected
13	SDI negative selected
14	Reserved
15	Safety message active

A.1.4.7 Message word

Overview

The message word (MELDW) signals the status of the converter to the higher-level control.

Description of function

Message word (MELDW)	
Converter → Control	
Bit	Status
00	Reserved
01	Torque utilization < threshold 2
02	n_actual < speed threshold 3

Message word (MELDW)	
Converter → Control	
Bit	Status
03	$ n_actual < \text{speed threshold } 2$
04	Reserved
05	Reserved
06	No warning motor overtemperature
07	No warning converter overtemperature
08	n-target/actual deviation within tolerance
09	Reserved
10	Reserved
11	Servo enable
12	Drive ready
13	"Pulses enabled"
14	Reserved
15	Reserved

A.2 Directives and standards

A.2.1 Directives, standards and certificates for the converter

Directives and standards that are complied with

The converters comply with the following directives and standards:



European Low-Voltage Directive

The converter fulfills the requirements stipulated in the Low-Voltage Directive 2014/35/EU, if they are covered by the field of application of this directive.

European Machinery Directive

The converter fulfills the requirements stipulated in the Machinery Directive 2006/42/EC, if they are covered by the field of application of this directive.

However, the use of the converter in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

European EMC Directive

The compliance of the converters with the regulations of the Directive 2014/30/EU has been verified through full compliance with IEC 61800-3.

Safety Integrated

The converters comply with the requirements relating to functional safety/safety of machinery.

RoHS

The converters comply with directive 2011/65/EU regarding limiting the use of certain hazardous substances.

**Underwriters Laboratories (North American market)**

Converters provided with one of the test symbols on the nameplate displayed fulfill the requirements stipulated for the North American market as a component of drive applications, and are appropriately listed.

UL file number for converters with 1 AC and 3 AC line connection: E192450

**UKCA certification**

The converter complies with the requirements for the British market (England, Wales and Scotland).

**Australia and New Zealand (RCM formerly C-Tick)**

The converters showing the test symbols on the nameplate fulfill the EMC requirements for Australia and New Zealand.

**Under development: EMC requirements for South Korea**

The converters with the KC marking on the nameplate satisfy the EMC requirements for South Korea.

Certificates for download

- EC Declaration of Conformity: (<https://support.industry.siemens.com/cs/ww/en/view/109755363>)
- Certificates for the relevant directives, prototype test certificates, manufacturer declarations and test certificates for functions relating to functional safety ("Safety Integrated"): (<https://support.industry.siemens.com/cs/ww/en/ps/24672/cert>)
- Certificates for UL-certified products: (<https://iq.ulprospector.com>)

Standards that are not relevant**China Compulsory Certification**

The converter does not fall in the area of validity of the China Compulsory Certification (CCC).

A.2.2**Directives, standards and certificates for the motor**

The chapter lists the standards and directives that are applicable for the motor and which the motor complies with.

Standards that are complied with

Note

The standards listed in this manual are not dated.

You can take the currently relevant and valid dates from the Declaration of Conformity.

The motors of the type series SIMOTICS S, SIMOTICS M, SIMOTICS L, SIMOTICS T, SIMOTICS A, called "SIMOTICS motor series" below, fulfill the requirements of the following directives and standards:

- EN 60034-1 - Rotating electrical machines – Dimensioning and operating behavior
- EN 60204-1 - Safety of machinery – Electrical equipment of machines; general requirements

Where applicable, the SIMOTICS motor series are in conformance with the following parts of EN 60034:

Feature	Standard
Degree of protection	EN 60034-5
Cooling ¹⁾	EN 60034-6
Type of construction	EN 60034-7
Connection designations	EN 60034-8
Noise levels ¹⁾	EN 60034-9
Temperature monitoring	EN 60034-11
Vibration severity grades ¹⁾	EN 60034-14

¹⁾ Standard part, e.g. cannot be used for built-in motors.

Relevant directives

The following directives are relevant for SIMOTICS motors.

European Low-Voltage Directive

SIMOTICS motors comply with the Low-Voltage Directive 2014/35/EU.

European Machinery Directive

SIMOTICS motors do not fall within the scope covered by the Machinery Directive.

However, the use of the products in a typical machine application has been fully assessed for compliance with the main regulations in this directive concerning health and safety.

European EMC Directive

SIMOTICS motors do not fall within the scope covered by the EMC Directive. The products are not considered as devices in the sense of the directive. Installed and operated with a converter, the motor - together with the Power Drive System - must comply with the requirements laid down in the applicable EMC Directive.

European RoHS Directive

The SIMOTICS motor series complies with the Directive 2011/65/EU regarding limiting the use of certain hazardous substances.



European Directive on Waste Electrical and Electronic Equipment (WEEE)

SIMOTICS motors comply with the 2012/19/EU directive on taking back and recycling waste electrical and electronic equipment.

European Directive 2005/32/EC defining requirements for environmentally friendly design of electric motors

The SIMOTICS motor series is not subject to Regulation (EC) No. 640/2009 for implementation of this directive.

European Directive 2009/125/EC defining ecodesign requirements of electric motors and speed controls

The SIMOTICS motor series is not subject to (EU) Regulation 2019/1781 for implementation of this directive.

Eurasian conformity

SIMOTICS motors comply with the requirements of the Russia/Belarus/Kazakhstan (EAC) customs union.

**China Compulsory Certification**

SIMOTICS motors do not fall within the scope covered by the China Compulsory Certification (CCC).



CCC negative certification (<https://support.industry.siemens.com/cs/de/de/view/109769143>)

Underwriters Laboratories

SIMOTICS motors are generally in compliance with UL and cUL as components of motor applications, and are appropriately listed.



Specifically developed motors and functions are the exceptions in this case. Here, it is crucial that you carefully observe the content of the quotation and that there is a UL or cUL mark on the rating plate!

Quality systems

Siemens employs a quality management system that meets the requirements of ISO 9001 and ISO 14001.

Certificates for SIMOTICS motors can be downloaded from the Internet at the following link:

Certificates for SIMOTICS motors (<https://support.industry.siemens.com/cs/ww/de/ps/13347/cert>)

China RoHS

SIMOTICS motors comply with the China RoHS.

You will find more information at:

China RoHS for 1FK2 and 1FT2 (<https://support.industry.siemens.com/cs/ww/en/view/109772626>)

China Energy Label

Name of the standard	Minimum allowable values for energy efficiency and energy efficiency class of permanent-magnet synchronous motors (GB30253).
Date of entry into force	July 1, 2020
Affected motors	Permanent-magnet synchronous motors (without incorporated brake) with a rated power of 0.55 kW to 90 kW and a rated speed of 500 r/min to 3000 r/min driven by frequency converter with variable frequency on a power supply below 1000 V.
Motor requirements	As of the implementation date of the guideline, all motors involved must have the "China Energy Label".
Affected Siemens products	The SIEMENS motors involved are subject to the requirements of Guideline GB30253: SIMOTICS S-1FK2, SIMOTICS S-1FT2

Examples of the "China Energy Label" and the motor rating plate:

China Energy Label



Figure A-1 ① Article number (diagram showing a typical 1FK2)

Motor rating plate

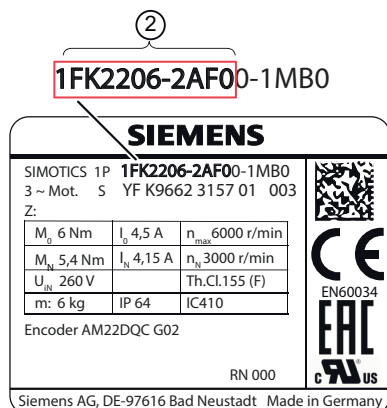


Figure A-2 ② Article number of the basic motor type (example illustration for 1FK2)

Note

The article number ① stated on the China Energy Label corresponds to the article number of the basic motor type ② (boldface type) in the motor article number.

A.3 UL Markings

Converters with 1 AC line connection

Underwriters Laboratories

For US/Canadian installations (UL/cUL): The products are cULus-listed under File E192450.

- Suitable for use in a circuit that cannot provide more than 65 kA rms (symmetrical), max. 240 V.
- Protection of the branch circuit for individual drives must be guaranteed using Class J fuses in accordance with the technical data.
Protection of the branch circuit for the group installation must be guaranteed using fuses of Class J with up to 30 amps.
For other protection equipment and SCCRs (Short Circuit Current Rating) for individual drives and group installations, see:
Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)
- This device must be installed in an enclosure that provides an environment with degree of pollution 2 (controlled).
- Maximum ambient air temperature 50 °C.
- The device provides overtemperature and overload protection.
- Use copper wires with a permissible temperature of 75 °C for all power cables. You can also use cables with a higher rated temperature value. It is not permissible to reduce the conductor cross-section.

Converters with 3 AC line connection

Underwriters Laboratories

- For US/Canadian installations (UL/cUL): The products are cULus-listed under File E192450.
- Only for use in 200 ... 240 V or 380 ... 480 V line supplies with grounded neutral point (solidly grounded wye).
- Solid-state motor overload protection: 300% of the FLA motor.
- Suitable for use in a circuit that cannot provide more than 65 kA rms (symmetrical), max. 480 V.
- Protection of the branch circuit for individual drives must be guaranteed using Class J fuses in accordance with the technical data.
Protection of the branch circuit for the group installation must be guaranteed using fuses of Class J with up to 100 amps.
For other protection equipment and SCCRs (Short Circuit Current Rating) for individual drives and group installations, see:
Protective Devices for SINAMICS S210 (<https://support.industry.siemens.com/cs/ww/en/view/109815356>)

- This device must be installed in an enclosure that provides an environment with degree of pollution 2 (controlled).
- Maximum ambient air temperature 50 °C. Maximum height 4000 m.
- The device provides overtemperature and overload protection.
- Use copper wires with a permissible temperature of 60/75 °C for all power cables. You can also use cables with a higher rated temperature value. It is not permissible to reduce the conductor cross-section.

Additional requirements relating to CSA compliance:

- Maximum height for CSA: 2000 m.

Motor overload protection according to IEC 61800-5-1 Ed.3 / UL 61800-5-1 Ed.2

The settings required to activate the motor overload protection according to IEC 61800-5-1 Ed.3 or UL 61800-5-1 Ed.2, see Chapter "Cooling (Page 377)".

MOTION-CONNECT connection system (OCC cable)

The recommended assignment of motors and cables can be found in the following chapters:

- "Motor-converter combinations for 1FK2 (Page 50)"
- "Motor-converter combinations for 1FT2 (Page 53)"

Other assignments are not possible.

The technical parameters of the cables are tailored to the requirements of the motors and verified by system tests.

The following cables should be used for UL applications.

- Cables with connector size M12 (6FX8002-8QN05-□□□□, 6FX8002-8QE05-□□□□) have a cable conductor cross-section of 0.82 mm² (AWG18).
- Cables with connector size M17 have a cable conductor cross-section of 0.82 mm² (AWG18).
- Cables with connector size M23 have a cable conductor cross-section of 1.5 mm² (AWG16) or 2.5 mm² (AWG14).

A.4 EMERGENCY OFF and EMERGENCY STOP

Overview

In plants, systems and machines a distinction must be made between EMERGENCY OFF and EMERGENCY STOP.









The Safe Torque Off (STO) and Safe Stop 1 (SS1) Safety Integrated Functions are suitable for implementing an EMERGENCY STOP, but are not suitable for implementing an EMERGENCY OFF.

Description of function

IEC 60204-1 defines EMERGENCY OFF and EMERGENCY STOP:

- EMERGENCY OFF and EMERGENCY STOP are actions taken in an emergency.
- EMERGENCY OFF and EMERGENCY STOP reduce different risks in a system or machine:
 - EMERGENCY OFF reduces the risk of electric shock.
 - EMERGENCY STOP reduces the risk of unexpected movement.

Table A-1 The distinction between EMERGENCY OFF and EMERGENCY STOP

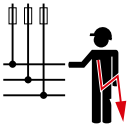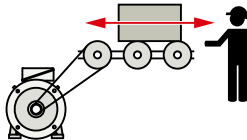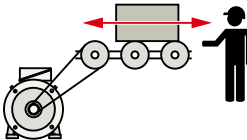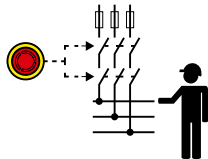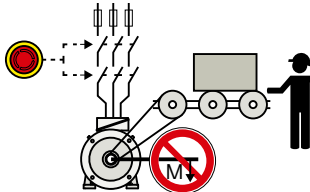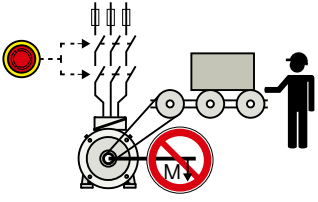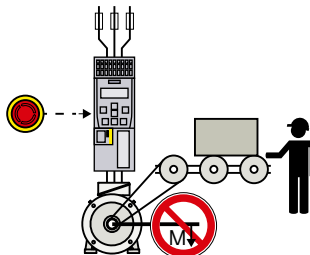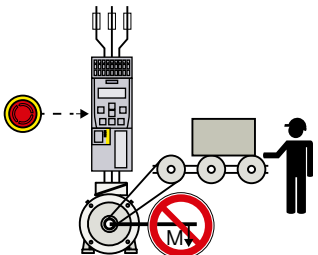Action:	EMERGENCY OFF	EMERGENCY STOP	EMERGENCY STOP
		Stop category 0 according to IEC 60204-1	Stop category 1 according to IEC 60204-1
Risk:	 <p>Electric shock</p>	 <p>Unexpected motion</p>	 <p>Motion</p>
Measure to minimize risk:	<p>Switch off voltage Switch off hazardous voltages completely or in part</p>	<p>Prevent movement Prevent any hazardous movement</p>	<p>Stop movement Stop hazardous movement and prevent any restart.</p>
Classic solution:	<p>Switch off the voltage:</p> 	<p>Switch off the power supply of the drive:</p> 	 <p>Brake the motor and switch off the drive power supply</p>
Solution with the STO or SS1 Safety Integrated Function integrated in the drive:	<p>STO and SS1 are not suitable for switching off an electric voltage.</p>	<p>Select STO:</p> 	<p>Select SS1:</p> 
		<p>It is permissible that you switch off the converter power supply as well. However, switching off the voltage is not required as a risk-reduction measurement.</p>	

A.5 List of abbreviations

Note

The following list of abbreviations includes the abbreviations and meanings used.

Abbreviation	Derivation of abbreviation	Meaning
A...	Alarm	Alarm
AC	Alternating Current	Alternating current
C...	-	Safety message
eCoL	Electronic Certificate of License	Electronic certificate for the licensee of the software verifying that the licensed software can be used
COM	Communication LED	Status display of the communication
COMM	Commissioning	Commissioning
CU	Control Unit	Control Unit
DC	Direct Current	Direct current
DI	Digital Input	Digital input
DO	Drive Object	Drive Object
DP	Decentralized Peripherals	Distributed I/O
DSC	Dynamic Servo Control	Dynamic servo control
EEPROM	Electrically Erasable Programmable Read-Only Memory	Electrically Erasable Programmable Read-Only Memory
EMV	Elektromagnetische Verträglichkeit	Electromagnetic compatibility
EN	Europäische Norm	European standard
F...	Fault	Fault
F-DI	Failsafe Digital Input	Failsafe digital input
FAQ	Frequently Asked Questions	Frequently asked questions
GB	Gigabyte	Gigabyte
GSD	Gerätstammdatei	Generic station description file: Describes the features of a PROFIBUS device
HW	Hardware	Hardware
IBN	Inbetriebnahme	Commissioning
ID	Identifier	Identification
IEC	International Electrotechnical Commission	International Electrotechnical Commission
IP	Internet Protocol	Internet protocol
Kp	-	Proportional gain
LED	Light Emitting Diode	Light emitting diode
M	Masse	Reference potential for all signal and operating voltages, usually defined as 0 V (also referred to as GND)
MB	Megabyte	Megabyte
MT	Messtaster	Measuring probe

Abbreviation	Derivation of abbreviation	Meaning
N...	No Report	No message or internal message (only as part of the alarm list)
NTP	Network Time Protocol	Synchronizes the clocks in computer systems and networks
NVRAM	Non-Volatile Random Access Memory	Non-volatile read/write memory
OBT	One Button Tuning	Function for automatic optimization of drive settings
OCC	One Cable Connection	One cable technology
OEM	Original Equipment Manufacturer	Original Equipment Manufacturer
OSS	Open Source Software	Software with freely available source code
p...	-	Setting parameters
PDS	Power Drive System	Drive system
PE	Protective Earth	Protective ground
PELV	Protective Extra Low Voltage	Safety extra-low voltage
PFH	Probability of dangerous failure per hour	Probability of dangerous failure per hour
PLC	Programmable Logical Controller	Programmable logic controller
PN	PROFINET	PROFINET
PZD	Prozessdaten	Process data
r...	-	Display parameters (read-only)
RAM	Random Access Memory	Memory for reading and writing
RJ45	Registered Jack 45	Term for an 8-pin socket system for data transmission with shielded or non-shielded multi-wire copper cables
ROM	Read-Only Memory	Read-only memory
S1	-	Continuous operation
SAM	Safe Acceleration Monitor	Safe acceleration monitoring
SBC	Safe Brake Control	Safe brake control
SBR	Safe Brake Ramp	Safe brake ramp monitoring
SD-Card	SecureDigital Card	Secure digital memory card
SCC	Safety Control Channel	Safety Control Channel
SDI	Safe Direction	Safe motion direction
SI	Safety Integrated	Safety Integrated
SIC	Safety Info Channel	Safety Info Channel
SIL	Safety Integrity Level	Safety integrity level
SLS	Safely-Limited Speed	Safely-limited speed
SP	Service Pack	Service pack
SPS	Speicherprogrammierbare Steuerung	Programmable logic controller
SS1	Safe Stop 1	Safe Stop 1 (time-monitored, ramp-monitored)
SSM	Safe Speed Monitor	Safe feedback from speed monitor
STO	Safe Torque Off	Safe torque off
STW	Steuerwort	Control word
TIA	Totally Integrated Automation	Totally Integrated Automation
Tn	-	Integral time

Abbreviation	Derivation of abbreviation	Meaning
UL	Underwriters Laboratories Inc.	Underwriters Laboratories Inc.
UMAC	User Management and Access Control	User management and access control
UTC	Universal Time Coordinated	Universal time coordinated
Vdc	-	DC link voltage
VDE	Verband Deutscher Elektrotechniker	Association of German Electrical Engineers
ZSW	Zustandswort	Status word

More information

SINAMICS:
www.siemens.com/sinamics

SIMOTICS:
www.siemens.com/simotics

Siemens AG
Digital Industries
Motion Control
P.O. Box 31 80
91050 ERLANGEN, Germany

Scan the QR code
for more information
about the
product.

