

## Installation and Wiring

### YOKOGAWA ◆ «Standard Code Model»

9th Edition: Dec. 2022

Yokogawa Electric Corporation

This operation guide describes installation, wiring, and other tasks required to make the controller ready for operation.

For details of each function, refer to the electronic manual. Manuals can be downloaded or viewed at the following URL.

<https://www.yokogawa.com/ns/ut/im/>

## Contents

1. Safety Precautions
2. Model and Suffix Codes
3. How to Install
4. Hardware Specifications
5. How to Connect Wires
6. Terminal Wiring Diagrams

## Introduction

Thank you for purchasing the UT55A, UT52A Digital Indicating Controller. This operation guide describes the basic operations related to the single-loop control function of the UT55A and UT52A. The guide should be provided to the end user of this product. Be sure to read this operation guide before using the product in order to ensure correct operation.

For details of each function, refer to the electronic manual. Before using the product, refer to the table of Model and Suffix Codes to make sure that the delivered product is consistent with the model and suffix codes you ordered. Also make sure that the following items are included in the package.

- Digital Indicating Controller (the model you ordered).....x1
- Set of Brackets.....x1
- Terminal Cover.....x1
- Unit Label (L4502VZ).....x1
- Tag Label (L4502VE) (Only when ordered.).....x1
- Operation Guide for Single-loop Control (this document).....x6 (A3 size)  
(Installation and Wiring, Initial Settings, Operations, and Parameters)

- Target Readers  
This guide is intended for the following personnel:  
• Engineers responsible for installation, wiring, and maintenance of the equipment.  
• Personnel responsible for normal daily operation of the equipment.

## 1. Safety Precautions

The following symbol is used on the instrument. It indicates the possibility of injury to the user or damage to the instrument, and signifies that the user must refer to the operation guide or user's manual for special instructions. The same symbol is used in the operation guide and user's manual on pages that the user needs to refer to, together with the term "WARNING" or "CAUTION."

**WARNING** Calls attention to actions or conditions that could cause serious or fatal injury to the user, and indicates precautions that should be taken to prevent such occurrences.

**CAUTION** Calls attention to actions or conditions that could cause injury to the user or damage to the instrument or property and indicates precautions that should be taken to prevent such occurrences.

~ AC

~ AC/DC

□ The equipment wholly protected by double insulation or reinforced insulation.

≡ Functional grounding terminals  
(Do not use this terminal as a protective grounding terminal).

### Note

Identifies important information required to operate the instrument.

### ■ Warning and Disclaimer

- 1) YOKOGAWA makes no warranties regarding the product except those stated in the WARRANTY that is provided separately.
- 2) The product is provided on an "as is" basis. YOKOGAWA assumes no liability to any person or entity for any loss or damage, direct or indirect, arising from the use of the product or from any unpredictable defect of the product.

## ■ Safety, Protection, and Modification of the Product

- (1) In order to protect the system controlled by this product and the product itself, and to ensure safe operation, observe the safety precautions described in the operation guide. Use of the instrument in a manner not prescribed herein may compromise the product's functions and the protection features inherent in the device. We assume no liability for safety, or responsibility for the product's quality, performance or functionality should users fail to observe these instructions when operating the product.
- (2) Installation of protection and/or safety circuits with respect to a lightning protector; protective equipment for the system controlled by the product and the product itself; foolproof or fail-safe design of a process or line using the system controlled by the product or the product itself; and/or the design and installation of other protective and safety circuits are to be appropriately implemented as the customer deems necessary.
- (3) Be sure to use the spare parts approved by YOKOGAWA when replacing parts or consumables.
- (4) This product is not designed or manufactured to be used in critical applications that directly affect or threaten human lives. Such applications include nuclear power equipment, devices using radioactivity, railway facilities, aviation equipment, air navigation facilities, aviation facilities, and medical equipment. If so used, it is the user's responsibility to include in the system additional equipment and devices that ensure personnel safety.
- (5) Modification of the product is strictly prohibited.
- (6) This product is intended to be handled by skilled/trained personnel for electric devices.
- (7) This product is UL Recognized Component. In order to comply with UL standards, end-products are necessary to be designed by those who have knowledge of the requirements.



- **Power Supply**  
Ensure that the instrument's supply voltage matches the voltage of the power supply before turning ON the power.
- **Do Not Use in an Explosive Atmosphere**  
Do not operate the instrument in locations with combustible or explosive gases or steam. Operation in such environments constitutes an extreme safety hazard. Use of the instrument in environments with high concentrations of corrosive gas (H<sub>2</sub>S, SO<sub>x</sub>, etc.) for extended periods of time may cause a failure.
- **Do Not Remove Internal Unit**  
The internal unit should not be removed by anyone other than YOKOGAWA's service personnel. There are dangerous high voltage parts inside. Additionally, do not replace the fuse by yourself.
- **Damage to the Protective Construction**  
Operation of the instrument in a manner not specified in the operation guide may damage its protective construction.



This instrument is an EMC class A product. In a domestic environment this product may cause radio interference in which case the user needs to take adequate measures.

## ■ Protection of Environment

### Waste Electrical and Electronic Equipment (WEEE)



(Only valid in the EEA for EU WEEE Directive and in the UK for UK WEEE Regulation)  
This product complies with the WEEE marking requirement. This marking indicates that you must not discard this electrical/electronic product in domestic household waste. When disposing of products in the EEA or UK, contact your local Yokogawa office in the EEA or UK respectively.

## 2. Model and Suffix Codes

### ■ UT55A «Standard Code Model»

Model	Suffix code	Option code	Description
UT55A			Digital Indicating Controller (Power supply: 100-240 V AC) (provided with retransmission output or 15 V DC loop power supply, 3 DIs, and 3 DOs)
Type 1: Basic control	-0 -1 -2		Standard type Position proportional type Heating/cooling type
	0		None
Type 2: Functions	1 2 3		Remote (1 additional aux. analog input, 1 additional DI, and RS-485 communication (Max. 38.4 kbps, 2-wire)) Remote (1 additional aux. analog input and 1 additional DI) 2 additional DIs and 2 additional DOs
	0 3		None CC-Link communication (with Modbus master function) (*1)
Display language (*2)	-1 -2 -3 -4		English (Default. Can be switched to other language by the setting.) German (Default. Can be switched to other language by the setting.) French (Default. Can be switched to other language by the setting.) Spanish (Default. Can be switched to other language by the setting.)
Case color	0 1		White (Light gray) Black (Light charcoal gray)
Fixed code	-00		Always "-00" (for standard code model)
Option codes			/DR Additional direct input (TC, 3-wire/4-wire RTD) and current input to Remote (1 additional aux. analog input, 1 DI to be deleted) (*4) /LP 24 V DC loop power supply (*5) /HA Heater break alarm (*6) /DC Power supply 24 V AC/DC /CT Coating (*7) /MDL Mount on DIN rail (without the display parts and keys) (please see the Operation Guide IM 05P01C81-11EN.)

Display language (*3)	-1 -2 -3 -4	English (Default. Can be switched to other language by the setting.) German (Default. Can be switched to other language by the setting.) French (Default. Can be switched to other language by the setting.) Spanish (Default. Can be switched to other language by the setting.)
Case color	0 1	White (Light gray) Black (Light charcoal gray)
Fixed code	-00	Always "-00" (for standard code model)
Option codes		/DR Additional direct input (TC, 3-wire/4-wire RTD) and current input to Remote (1 additional aux. analog input, 1 DI to be deleted) (*4) /LP 24 V DC loop power supply (*5) /HA Heater break alarm (*6) /DC Power supply 24 V AC/DC /CT Coating (*7) /MDL Mount on DIN rail (without the display parts and keys) (please see the Operation Guide IM 05P01C81-11EN.)

- \*1: When the Type 2 code is "1" or "6", only "0" can be specified for the Type 3 code.
- \*2: When the /LP option is specified, the RS-485 communication of the Type 2 code "1" or "2" is 2-wire system.
- \*3: English, German, French, and Spanish are available for the guide display.
- \*4: The /DR option can be specified when the Type 2 code is any of "1", "2", "4", "5", or "7".
- \*5: The /LP option can be specified in the combination of Type 2 code (any of "0", "2", "3", or "4") and Type 3 code (any of "0" or "1"). Additionally the /LP option can be specified in the combination of Type 2 code "1" and Type 3 code "0".
- \*6: The /HA option can be specified only when the Type 1 code is "-0".
- \*7: When the /CT option is specified, the UT55A does not conform to the safety standards (UL and CSA) and CE marking (Products with /CT option are not intended for EEA-market).

### ■ UT52A «Standard Code Model»

Model	Suffix code	Option code	Description
UT52A			Digital Indicating Controller (Power supply: 100-240 V AC) (provided with retransmission output or 15 V DC loop power supply, 3 DIs, and 3 DOs)
Type 1: Basic control	-0 -1 -2		Standard type Position proportional type Heating/cooling type
	0		None
Type 2: Functions	1 2 3		Remote (1 additional aux. analog input, 1 additional DI and RS-485 communication (Max. 38.4 kbps, 2-wire)) Remote (1 additional aux. analog input and 1 additional DI) 2 additional DIs and 2 additional DOs
	0 3		None CC-Link communication (with Modbus master function) (*1)
Display language (*2)	-1 -2 -3 -4		English (Default. Can be switched to other language by the setting.) German (Default. Can be switched to other language by the setting.) French (Default. Can be switched to other language by the setting.) Spanish (Default. Can be switched to other language by the setting.)
Case color	0 1		White (Light gray) Black (Light charcoal gray)
Fixed code	-00		Always "-00" (for standard code model)
Option codes			/DR Additional direct input (TC, 3-wire/4-wire RTD) and current input to Remote (1 additional aux. analog input, 1 DI to be deleted) (*3) /LP 24 V DC loop power supply (*4) /HA Heater break alarm (*5) /DC Power supply 24 V AC/DC /CT Coating (*6) /MDL Mount on DIN rail (without the display parts and keys) (please see the Operation Guide IM 05P01C81-11EN.)

- \*1: The Type 3 code "3" can be specified only when the Type 1 code is "-0" and the Type 2 code is "0".
- \*2: English, German, French, and Spanish are available for the guide display.
- \*3: The /DR option can be specified only when the Type 2 code is "2" and the Type 3 code is "0".
- \*4: The /LP option can be specified only when the Type 1 code is "-0" or "-1". Furthermore both Type 2 and Type 3 codes should be "0".
- \*5: The /HA option can be specified only when the Type 1 code is "-0" and the Type 3 code is "0".
- \*6: When the /CT option is specified, the UT52A does not conform to the safety standards (UL and CSA) and CE marking (Products with /CT option are not intended for EEA-market).

### ■ Customized Product

For customized product, the product is identified by the option code of /S# (where '#' is a number). Contact your supplier in case your instrument has option /S#, and you are not in the possession of FX1-[Model code]-S# or IM [Model code]-S# (where [Model code] means, for example, UT55A).

### ■ Accessories (sold separately)

The following is an accessory sold separately.

- LL50A Parameter Setting Software

Model	Suffix code	Description
LL50A	-00	Parameter Setting Software

- External Precision Resistor

Model	Suffix code	Description
X010	See the General Specifications (*)	Resistance Module

\*: Necessary to input the current signal to the voltage input terminal.

- Terminal Cover  
For UT55A: Model UTAP001; For UT52A: Model UTAP002

- Manuals  
\* Manuals can be downloaded from a website. URL: <https://www.yokogawa.com/ns/ut/im/>

- Brackets  
Part number: L4502TP (2 pcs for upper and lower sides)

## 3. How to Install

### ■ Installation Location

The instrument should be installed in indoor locations meeting the following conditions:

- **Instrumented panel**

This instrument is designed to be mounted in an instrumented panel. Mount the instrument in a location where its terminals will not inadvertently be touched.

- **Well ventilated locations**


Mount the instrument in well ventilated locations to prevent the instrument's internal temperature from rising. However, make sure that the terminal portions are not exposed to wind. Exposure to wind may cause the temperature sensor accuracy to deteriorate. To mount multiple indicating controllers, see the external dimensions/panel cutout dimensions which follow. If mounting other instruments adjacent to the instrument, comply with these panel cutout dimensions to provide sufficient clearance between the instruments.

- **Locations with little mechanical vibration**

Install the instrument in a location subject to little mechanical vibration.

- **Horizontal location**

Mount the instrument horizontally and ensure that it is level, with no inclination to the right or left.

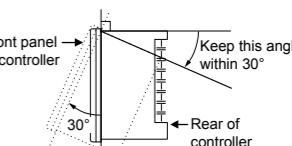


### Note

If the instrument is moved from a location with low temperature and low humidity to a place with high temperature and high humidity

## ■ Mounting the Instrument Main Unit


- Provide an instrumented panel steel sheet of 1 to 10 mm thickness.  
After opening the mounting hole on the panel, follow the procedures below to install the controller:
- Insert the controller into the opening from the front of the panel so that the terminal board on the rear is at the far side.
  - Set the brackets in place on the top and bottom of the controller as shown in the figure below, then tighten the screws of the brackets. Take care not to overtighten them.

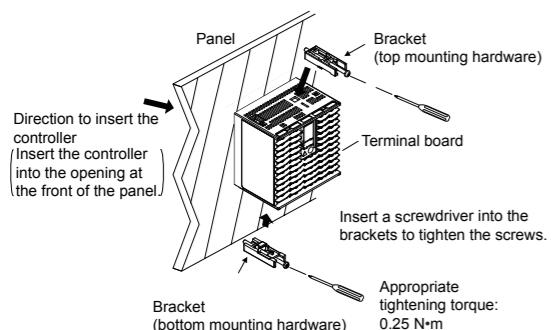


- Tighten the screws with appropriate tightening torque within 0.25 N·m. Otherwise it may cause the case deformation or the bracket damage.
- Make sure that foreign materials do not enter the inside of the instrument through the case's slit holes.

## ■ External Dimensions and Panel Cutout Dimensions


UT55A

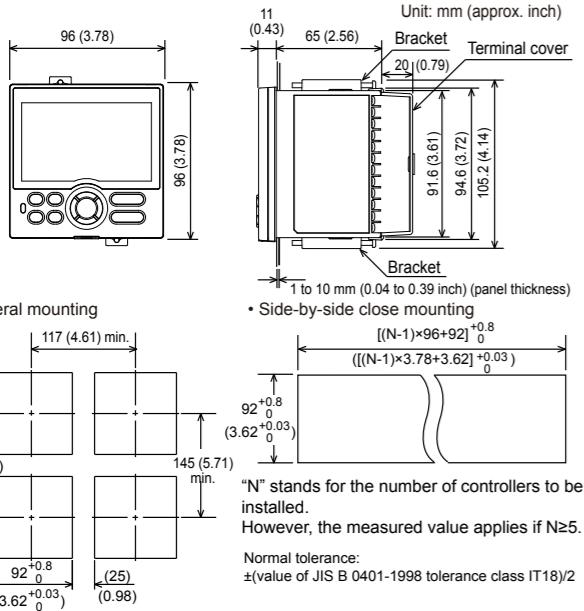

UT52A

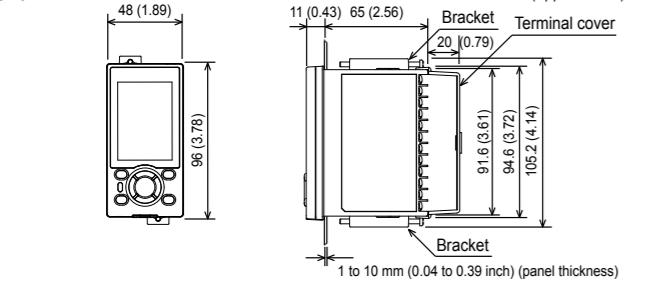


• General mounting

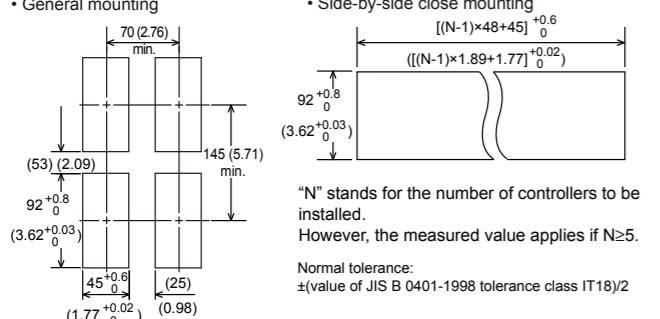

## 4. Hardware Specifications



This instrument is for Measurement Category No.1.  
Do not use it for measurements in locations falling under Measurement Categories No.2, No.3, and No.4.

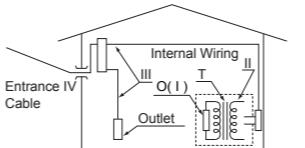

Category	IEC/EN/CSA/UL 61010-1	EN 61010-2-030	Remarks
No.1	Measurement Category I	O (Other)	For measurements performed on circuits not directly connected to MAINS.
No.2	Measurement Category II	Measurement Category II	For measurements performed on circuits directly connected to the low-voltage installation.
No.3	Measurement Category III	Measurement Category III	For measurements performed in the building installation.
No.4	Measurement Category IV	Measurement Category IV	For measurements performed at the source of the low-voltage installation.

### ■ Input Specifications

#### • Universal Input (Equipped as standard)

- Number of inputs: 1
- Input type, instrument range, and measurement accuracy: See the table below,

Input Type	Instrument Range		Accuracy
	°C	°F	
Thermocouple	K	-270.0 to 1370.0°C	±0.1% of instrument range ±1 digit for 0°C or more
	J	-270.0 to 1000.0°C	±0.2% of instrument range ±1 digit for less than 0°C
	T	-200.0 to 500.0°C	±2% of instrument range ±1 digit for less than -200.0°C of thermocouple K
	B	0.0 to 1800.0°C	±1% of instrument range ±1 digit for less than -200.0°C of thermocouple T
	S	0.0 to 1700.0°C	±0.15% of instrument range ±1 digit for 400°C or more
	R	0.0 to 1700.0°C	±0.15% of instrument range ±1 digit for less than 400°C
	E	-270.0 to 1000.0°C	±0.1% of instrument range ±1 digit for 0°C or more
	L	-200.0 to 900.0°C	±0.2% of instrument range ±1 digit for less than 0°C
	U	0.0 to 400.0°C	±1.5% of instrument range ±1 digit for less than -200.0°C of thermocouple E.
	W	0.0 to 2300.0°C	±0.2% of instrument range ±1 digit (Note 2)
RTD	Platinel 2	0.0 to 1390.0°C	±0.1% of instrument range ±1 digit
	PR20-40	0.0 to 1900.0°C	±0.5% of instrument range ±1 digit for 800°C or more Accuracy is not guaranteed for less than 800°C.
	W97Re3-W75Re25	0.0 to 2000.0°C	±0.2% of instrument range ±1 digit
	JPt100	-200.0 to 500.0°C	±0.1% of instrument range ±1 digit (Note 1)
	Pt100	-150.0 to 150.0°C	±0.1% of instrument range ±1 digit
	Standard signal	0.400 to 2.000 V	±0.1% of instrument range ±1 digit
		1.000 to 5.000 V	
		4.00 to 20.00 mA	
	DC voltage/current	0.000 to 2.000 V	±0.1% of instrument range ±1 digit
		0.00 to 10.00 V	
		0.00 to 20.00 mA	
		-10.00 to 20.00 mV	
		0.0 to 100.0 mV	

The accuracy is that in the standard operating conditions:  $23 \pm 2^\circ\text{C}$ ,  $55 \pm 10\%$ RH, and power frequency at 50/60 Hz.

Note 1:  $\pm 0.3^\circ\text{C} \pm 1$  digit in the range between 0 and 100°C,  $\pm 0.5^\circ\text{C} \pm 1$  digit in the range between -100 and 200°C.

Note 2: W: W-5% Re/W-26% Re(Hoskins Mfg. Co.) ASTM E988

• Input sampling (control) period: Select from 50, 100, and 200 ms

• Burnout detection:

Functions at TC, RTD, and standard signal.

Upscale, downscale, and off can be specified.

For standard signal, burnout is determined to have occurred if it is 0.1 V or 0.4 mA or less.

• Input bias current: 0.05  $\mu\text{A}$  (for TC or RTD)

• Measured current (RTD): About 0.16 mA

• Input resistance:

TC or mV input: 1 MΩ or more

V input: About 1 MΩ

mA input: About 250 Ω

• Allowable signal source resistance:

TC or mV input: 250 Ω or less

Effects of signal source resistance: 0.1  $\mu\text{V}/\Omega$  or less

DC voltage input: 2 kΩ or less

Effects of signal source resistance: About 0.01%/100 Ω

- Allowable wiring resistance:

RTD input: Max. 150  $\Omega/\text{wire}$  (The conductor resistance between the three wires shall be equal.)

Wiring resistance effect:  $\pm 0.1^\circ\text{C}/10 \Omega$

- Allowable input voltage/current:

TC, mV, mA and RTD input:  $\pm 10$  V DC

V input:  $\pm 20$  V DC

mA input:  $\pm 40$  mA

- Noise rejection ratio:

Normal mode: 40 dB or more (at 50/60 Hz)

Common mode: 120 dB or more (at 50/60 Hz)

For 100-240 V AC, the power frequency can be set manually. Automatic detection is also available.

For 24 V AC/DC, the power frequency can be set manually.

- Reference junction compensation error:

$\pm 1.0^\circ\text{C}$  (15 to 35°C)

$\pm 1.5^\circ\text{C}$  (-10 to 15°C and 35 to 50°C)

- Applicable standards: JIS/IEC/DIN (ITS-90) for TC and RTD

### ■ Auxiliary Analog Input

- Use: Remote setpoint setting, external compensating input, auxiliary input for computation, etc.
- Number of inputs: See the table of Model and Suffix Codes.
- Input type, instrument range, and measurement accuracy: See the table below.

Input Type	Instrument Range	Accuracy
Standard signal	0.400 to 2.000 V	±0.2% of instrument range ±1 digit
	1.000 to 5.000 V	±0.1% of instrument range ±1 digit
DC voltage	0.000 to 2.000 V	±0.2% of instrument range ±1 digit
	0.00 to 10.00 V	±0.1% of instrument range ±1 digit
DC voltage for high-input impedance	0.00 to 1.250 V	±0.1% of instrument range ±1 digit

- Input sampling (control) period: Same as universal input

- Input resistance: About 1 MΩ However, 10 MΩ or more for DC voltage for high-input impedance range

- Burnout detection: Functions at standard signal

Burnout is determined to have occurred if it is 0.1 V or less.

### ■ Remote Input with Direct Input

- Number of inputs: See the table of Model and Suffix Codes.
- Input type, instrument range, and measurement accuracy: Same as universal input except the table below.

Input Type	Instrument Range		Accuracy
	°C	°F	
4-wire RTD	JPt100	-200.0 to 500.0°C	±0.5°C ±1 digit
		-300.0 to 1000.0°F	±0.5°C ±1 digit
	Pt100	-150.0 to 150.0°C	±0.2°C ±1 digit
		-200.0 to 850.0°F	±0.1% of instrument range ±1 digit (Note 1)
		-200.0 to 500.0°C	±0.1% of instrument range ±1 digit
		-300.0 to 1000.0°F	±0.5°C ±1 digit
		-150.0 to 150.0°F	±0.2°C ±1 digit
		-200.0 to 1000.0°F	±0.1% of instrument range ±1 digit
		-200.0 to 300.0°F	±0.1% of instrument range ±1 digit
		-200.0 to 300.0°C	±0.2°C ±1 digit

Note 1: ±0.5°C ±1 digit in the range between -200.0 and 500.0°C/-300.0 and 1000.0°F.

- Input sampling (control) period: Same as universal input

- Burnout detection: Same as universal input

### ■ Contact Input Specifications

- Number of inputs: See the table of Model and Suffix Codes.

- Input type: No-voltage contact input or transistor contact input

• Input contact rating: 12 V DC, 10 mA or more

Use a contact with a minimum on-current of 1 mA or less.

EMC Regulatory Arrangement in Australia and New Zealand (RCM)  
EN 55011 Class A, Group 1 compliant  
KC marking  
Electromagnetic wave interference prevention standard, electromagnetic wave protection standard compliance

## ■ Environment Standard


EU RoHS directive: EN IEC 63000

## ■ Construction, Installation, and Wiring

- Dust-proof and drip-proof: IP66 (for front panel) (Not available for side-by-side close mounting.)
- Material: Polycarbonate (Flame retardancy: UL94V-0)
- Case color: White (Light gray) or Black (Light charcoal gray)
- Weight: 0.5 kg or less
- External dimensions (mm):
  - UT55A: 96 (W) × 96 (H) × 65 (depth from the panel face)
  - UT52A: 48 (W) × 96 (H) × 65 (depth from the panel face) (Depth except the projection on the rear panel)
- Installation: Direct panel mounting; mounting bracket, one each for upper and lower mounting
- Panel cutout dimensions (mm):
  - UT55A: 92<sup>+0.80</sup> (W) × 92<sup>+0.80</sup> (H), UT52A: 45<sup>+0.80</sup> (W) × 92<sup>+0.80</sup> (H)
- Mounting attitude: Up to 30 degrees above the horizontal. No downward tilting allowed.
- Wiring: M3 screw terminal with square washer (for signal wiring and power wiring)

## ■ Power Supply Specifications and Isolation

- Power supply:  
Rated voltage: 100-240 V AC (+10%/-15%), 50/60 Hz  
24 V AC/DC (+10%/-15%) (for /DC option)
- Power consumption: UT55A: 18 VA (DC: 9 VA, AC: 14 VA if /DC option is specified)  
UT52A: 15 VA (DC: 7 VA, AC: 11 VA if /DC option is specified)
- Data backup: Nonvolatile memory
- Power holdup time: 20 ms (for 100 V AC drive)
- Withstanding voltage  
Between primary terminals and secondary terminals: 2300 V AC for 1 minute (UL, CSA)  
Between primary terminals and secondary terminals: 3000 V AC for 1 minute (CE)
- Between primary terminals: 1500 V AC for 1 minute
- Between secondary terminals: 500 V AC for 1 minute  
(Primary terminals: Power\* and relay output terminals; Secondary terminals: Analog I/O signal terminals, contact input terminals, communication terminals and functional grounding terminals.)
- \*: Power terminals for 24V AC/DC models are the secondary terminals.
- Insulation resistance: Between power supply terminals and a grounding terminal 20 MΩ or more at 500 V DC
- Isolation specifications

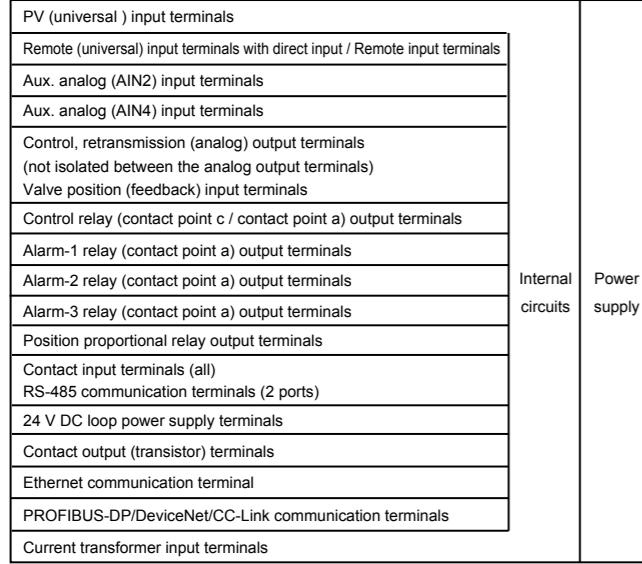

## ■ Environmental Conditions

### Normal Operating Conditions:

- Ambient temperature: -10 to 50°C (side-by-side mounting: -10 to 40 °C)  
If the CC-Link option is specified, 0 to 50 °C for UT55A, 0 to 40 °C for UT52A.  
(side-by-side mounting: 0 to 40 °C for UT55A and UT52A with CC-Link option)
- Ambient humidity: 20 to 90% RH (no condensation allowed)
- Magnetic field: 400 A/m or less
- Continuous vibration at 5 to 9 Hz: Half amplitude of 1.5 mm or less, 1oct/min for 90 minutes each in the three axis directions  
Continuous vibration at 9 to 150 Hz: 4.9 m/s<sup>2</sup> or less, 1oct/min for 90 minutes each in the three axis directions
- Short-period vibration: 14.7 m/s<sup>2</sup>, 15 seconds or less
- Shock: 98 m/s<sup>2</sup> or less, 11 ms
- Altitude: 2000 m or less above sea level
- Warm-up time: 30 minutes or more after the power is turned on
- Startup time: Within 10 seconds
- The LCD (liquid crystal display) is used for a display portion of this product. The LCD has a characteristic that the display action becomes late at the low temperature. However, the control function is not affected.


### Transportation and Storage Conditions:

- Temperature: -25 to 70°C
- Temperature change rate: 20°C/h or less
- Humidity: 5 to 95% RH (no condensation allowed)
- Effects of Operating Conditions**
- Effect of ambient temperature:  
Voltage or TC input: ±1 μV/°C or ±0.01% of F.S./°C, whichever is larger  
Current input: ±0.01% of F.S./°C  
RTD input: ±0.05°C/C (ambient temperature) or less  
Analog output: ±0.02% of F.S./°C or less
- Effect of power supply voltage fluctuation  
Analog input: ±0.05% of F.S. or less  
Analog output: ±0.05% of F.S. or less  
(Each within rated voltage range)

## 5. How to Connect Wires



- Wiring work must be carried out by a person with basic electrical knowledge and practical experience.
- Be sure to turn OFF the power supply to the controller before wiring to avoid an electric shock. Use a tester or similar device to ensure that no power is being supplied to a cable to be connected.
- For the wiring cable, the temperature rating is 75 °C or more.
- As a safety measure, always install a circuit breaker (an IEC 60947-compatible product, 5 A, 100 V or 220 V AC) in an easily accessible location near the instrument. Moreover, provide indication that the switch is a device for turning off the power to the instrument.
- Install the power cable keeping a distance of more than 1 cm from other signal wires.
- The power cable is required to meet the IEC standards concerned or the requirements of the area in which the instrument is being installed.
- Wiring should be installed to conform to NEC (National Electrical Code: ANSI/NFPA-70) or the wiring construction standards in countries or regions where wiring will be installed.
- Since the insulation provided to each relay output terminal is Functional insulation, provide Reinforced insulation to the external of the device as necessary. (Refer to the drawing below.)

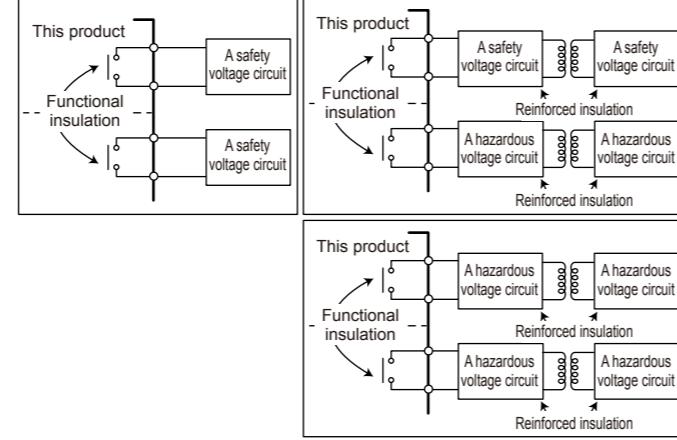


- When connecting two or more crimp-on terminal lugs to the single terminal block, bend the crimp-on terminal lugs before tightening the screw.
- Note that the wiring of two or more crimp-on terminal lugs to the single high-voltage terminal of the power supply and relay, etc. does not comply with the safety standard.



- Provide electricity from a single-phase power supply. If the power is noisy, install an isolation transformer on the primary side, and use a line filter on the secondary side. When measures against noise are taken, do not install the primary and secondary power cables close to each other.
- If there is a risk of external lightning surges, use a lightning arrester etc.
- For TC input, use shielded compensating lead wires for wiring. For RTD input, use shielded wires that have low conductor resistance and cause no significant differences in resistance between the three wires.
- Since the control output relay has a life span (resistance load of 100,000 times), use the auxiliary relay to perform ON/OFF control.
- The use of inductance (L) loads such as auxiliary relays, motors and solenoid valves causes malfunction or relay failure; always insert a CR filter for use with alternating current or a diode for use with direct current, as a spark-removal surge suppression circuit, into the line in parallel with the load.
- After completing the wiring, the terminal cover is recommended to use for the instrument.

### • Recommended Crimp-on Terminal Lugs

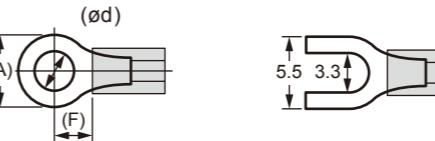

Recommended tightening torque: 0.6 N·m  
Applicable wire size: Power supply wiring 1.25 mm<sup>2</sup> or more


Applicable terminal lug	Applicable wire size mm <sup>2</sup> (AWG#)	(ø d)	(A)	(F)
M3	0.25 to 1.65 (22 to 16)	3.3	5.5	4.2

### • Cable Specifications and Recommended Cables


Purpose	Name and Manufacturer
Power supply, relay contact outputs	600 V Grade heat-resistant PVC insulated wires, JIS C 3317(HV), 0.9 to 2.0 mm <sup>2</sup>
Thermocouple	Shielded compensating lead wires, JIS C 1610
RTD	For thermocouple input (PV input and remote input with direct input), shielded compensating lead wire of cross-sectional area less than or equal to 0.75 mm <sup>2</sup> is recommended. If the cross-sectional area is wide, the reference junction compensation error may be large.
Other signals (other than contact input/output)	Shielded wires
Other signals (contact input/output)	Unshielded wires
RS-485 communication	Shielded wires
Ethernet communication	100 BASE-TX (CAT-5)/10 BASE-T
PROFIBUS-DP communication	Dedicated cable for PROFIBUS-DP (Shielded two-wires)
DeviceNet communication	Dedicated cable for DeviceNet (Shielded five-wires)
CC-Link communication	Dedicated cable for CC-Link (Shielded three-wires)

PROFIBUS-DP/CC-Link Connector (wiring side) (Part number: A1987JT)  
DeviceNet Connector (wiring side) (Part number: L4502BW)  
Recommended tightening torque: 0.5 to 0.6 N·m


## DC Relay Wiring

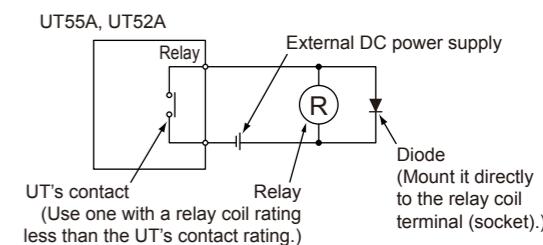


## AC Relay Wiring

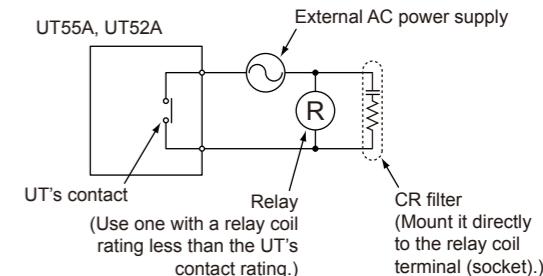



## Transistor Output Wiring

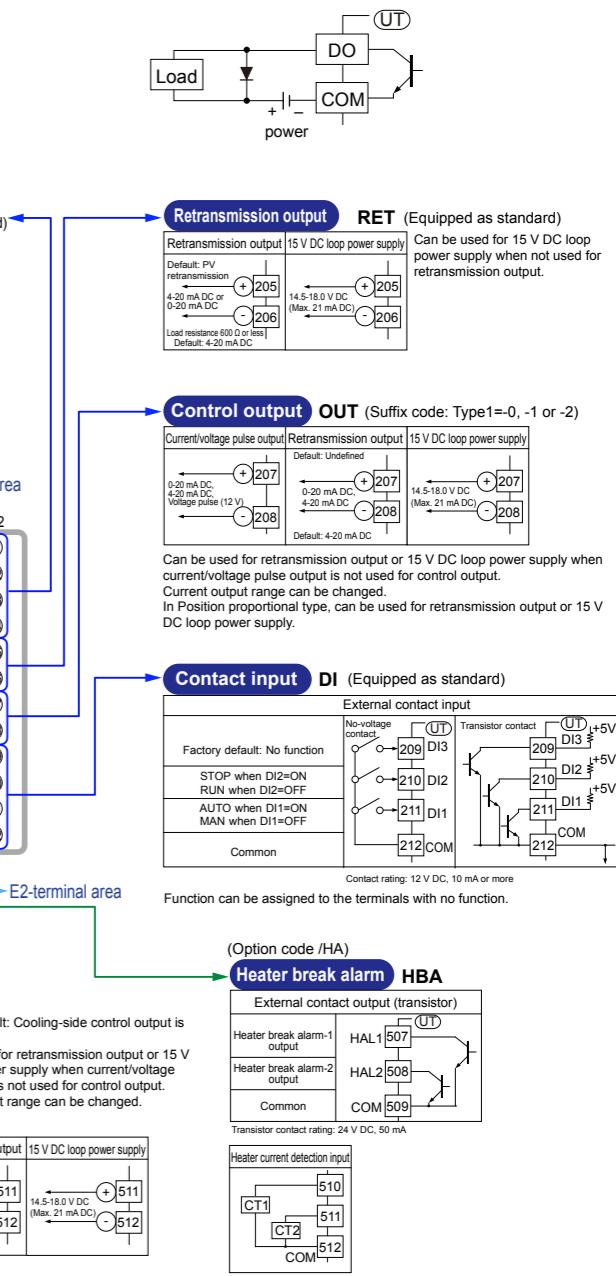

## ■ UT55A (Continued from page 3)

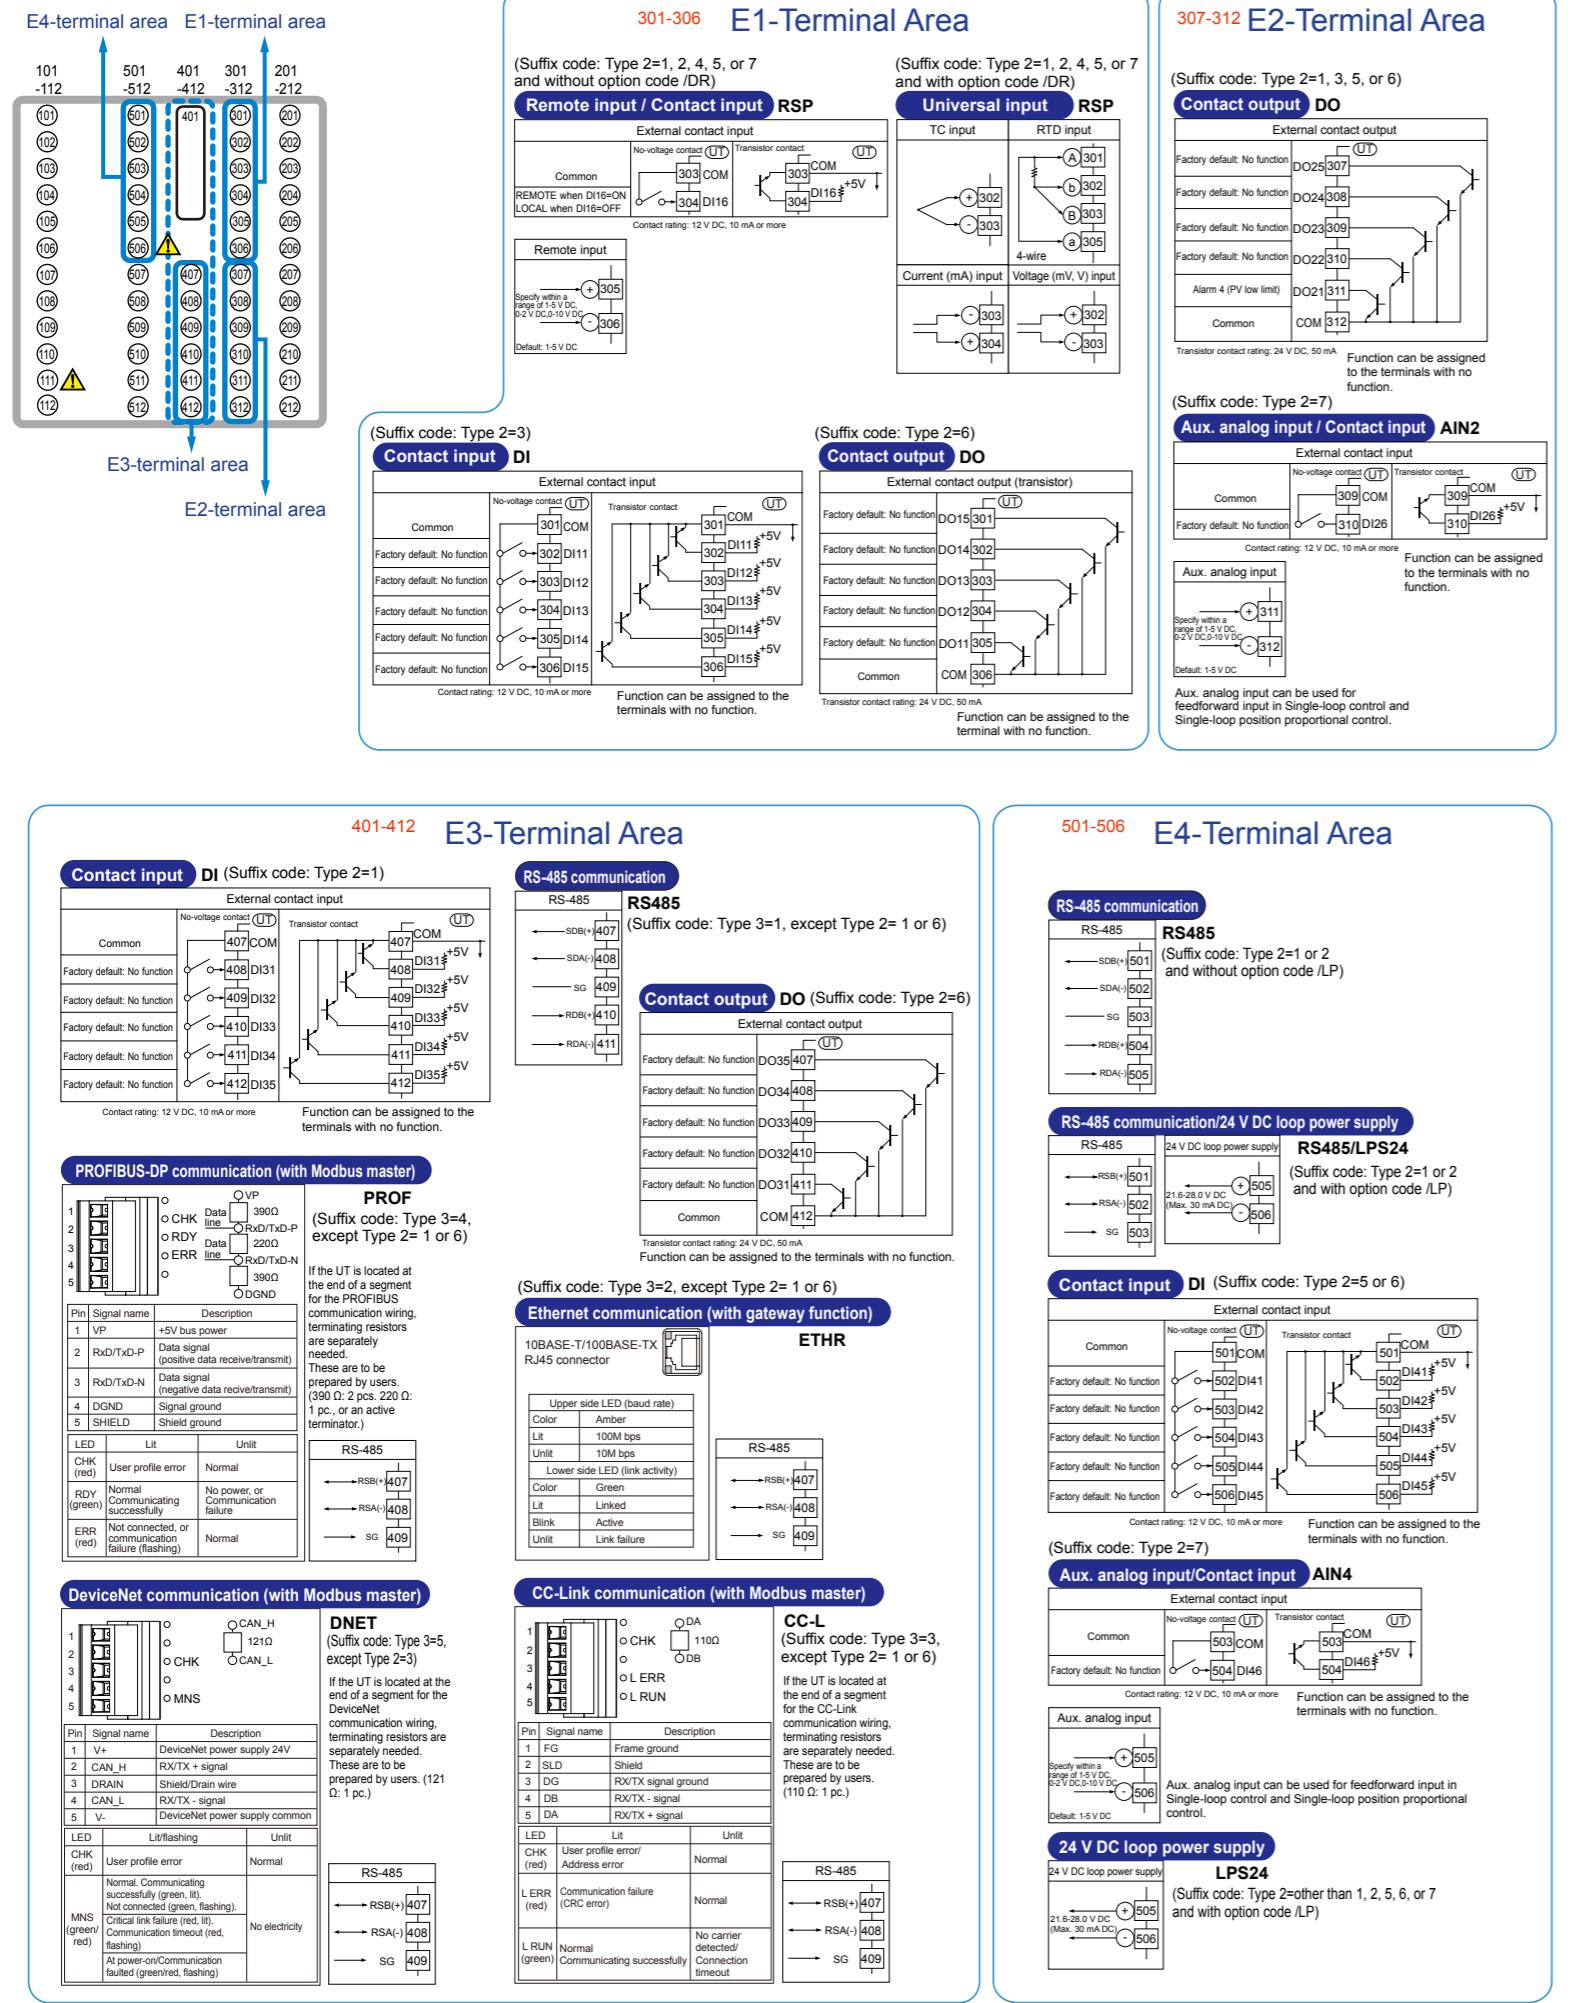

## ■ UT52A

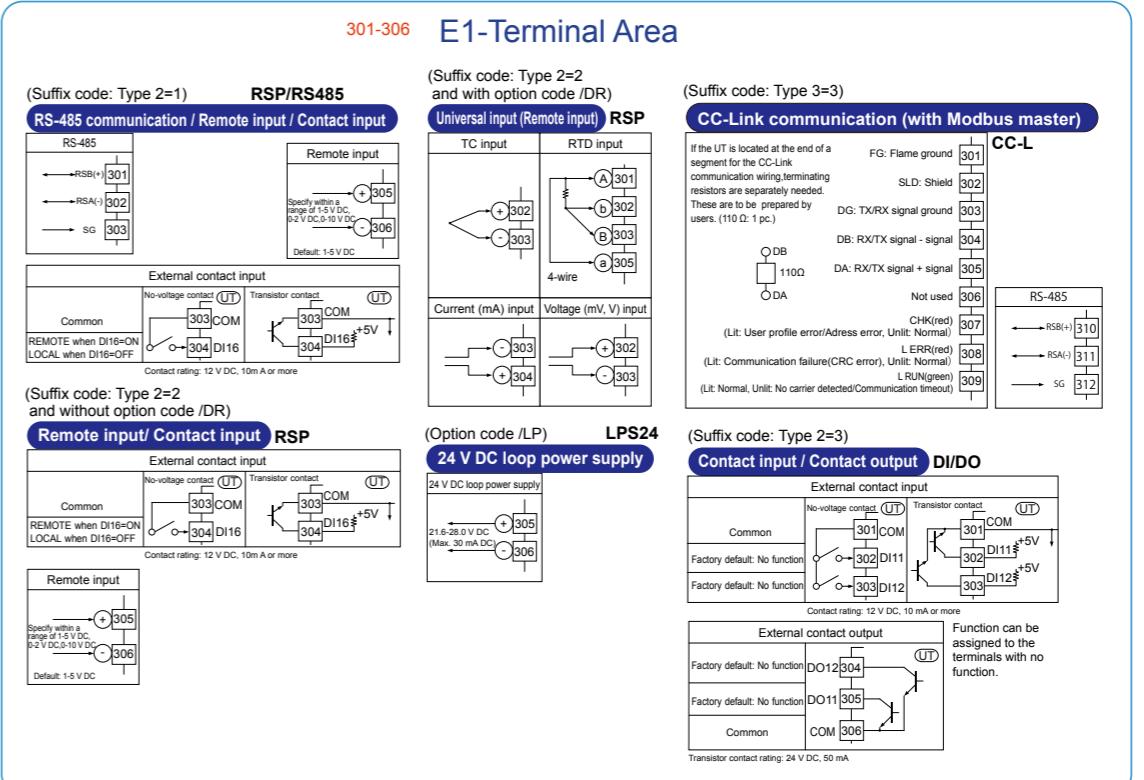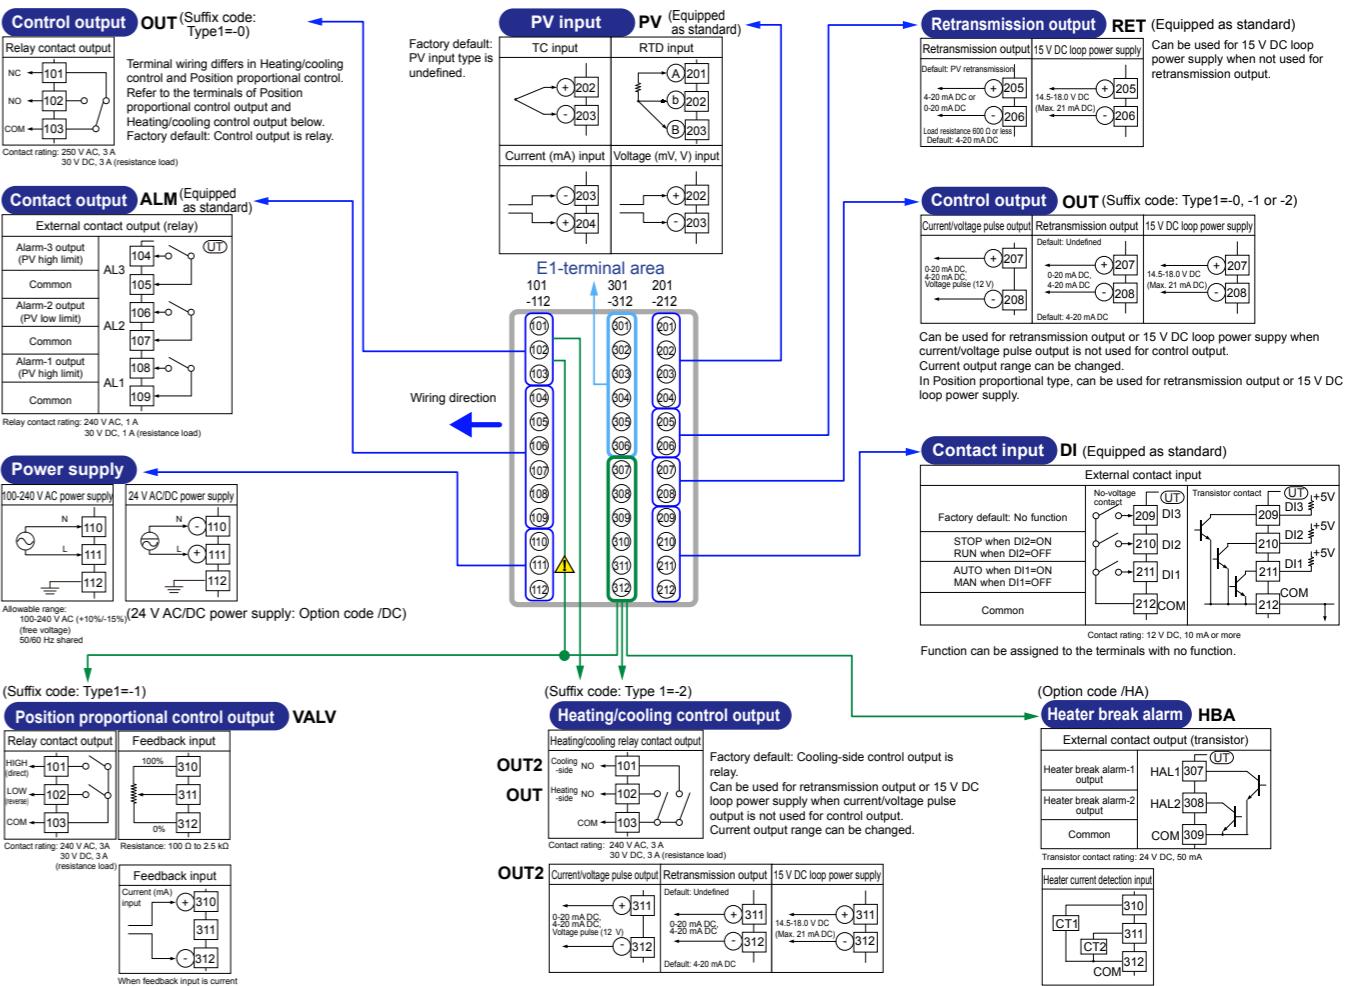

## Operation Guide

UT55A, UT52A  
Digital Indicating Controller (Panel Mounting Type)  
Operation Guide for Single-loop Control



Functional Enhancement

### Initial Settings

## YOKOGAWA ♦ Standard Code Model

Yokogawa Electric Corporation


This operation guide describes basic settings and operations of the UT55A and UT52A. For details of each function, see the electronic manual. The scrolling guide is displayed on PV display in the Parameter Setting Display. This guide can be turned on/off with the Fn key. For details of the each function, refer to the electronic manual. Manuals can be downloaded or viewed at the following URL.

<https://www.yokogawa.com/ns/ut/im/>

## Contents


- Names and Functions of Display Parts
- Setup Procedure
- Quick Setting Function (Setting of Input and Output)
- Adjusting Valve Position Automatically (for a Position Proportional Type Controller Only)
- Setting Alarm Type
- Setting Alarm Setpoint

## 1. Names and Functions of Display Parts

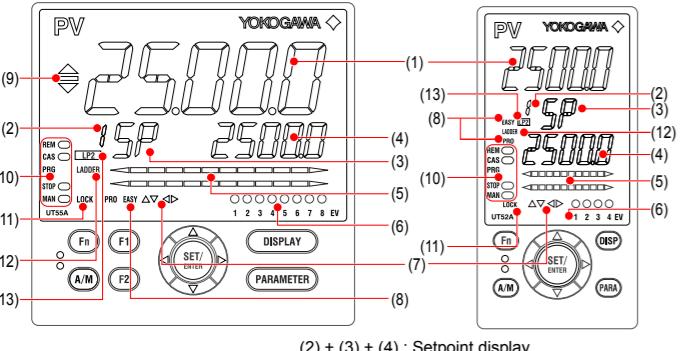

(2) + (3) + (4) : Setpoint display

No. in figure	Name	Description
(1)	PV display (white or red)	Displays PV. Displays an error code if an error occurs. Displays the scrolling guide in the Menu Display and Parameter Setting Display when the guide display ON/OFF is set to ON.
(2)	Group display (green)	Displays a group number (1 to 8 or R) and terminal area (E1 to E4). R and E1 to E4 are displayed in the Parameter Setting Display.
(3)	Symbol display (orange)	Displays a parameter symbol.
(4)	Data display (orange)	Displays a parameter setpoint and menu symbol.
(5)	Bar-graph display (orange and white)	Displays control output value (OUT) and measured input value (PV). The data to be displayed can be set by the parameter. Initial value: upper bar (deviation), lower bar (control output, internal computed value in Position proportional control); in Heating/cooling control, upper bar (heating-side control output), lower bar (cooling-side control output)
(6)	Event indicator (orange)	UT55A: Lit when the alarms 1 to 8 occur. (Initial value: 1 to 4) UT52A: Lit when the alarms 1 to 4 occur. Event displays other than alarms can be set by the parameter.
(7)	Key navigation indicator (green)	Lit or blinks when the Up/Down or Left/Right arrow key operation is possible.
(8)	Parameter display level indicator (green)	Displays the setting conditions of the parameter display level function.
(9)	Deviation indicator (for UT55A only) (green)	Displays the status of a deviation (PV - SP). Lit if a deviation exceeds the deviation display band. Lit when a deviation is within the deviation display band. Lit if a deviation falls below the deviation display band. The deviation indicator is until the Displays other than the Operation Display or SELECT Display are shown. Deviation display band can be set by the parameter.
(10)	Status indicator (green and red)	Displays the operating conditions and control status.
(11)	Security indicator (red)	Lit if a password is set. The setup parameter settings are locked.
(12)	Ladder operation indicator (green)	Lit while the ladder operation is executed.
(13)	Loop 2 indicator (LP2 lamp) (green)	Lit when the control mode is Cascade control. In the Operation Display, the LP2 lamp is lit while the Loop-2 data is displayed on Setpoint display. In the Parameter Setting Display, the LP2 lamp indicates the loop of displayed menu symbol or parameter symbol. The LP2 lamp is lit while the Loop-2 menu symbol or parameter symbol is displayed.

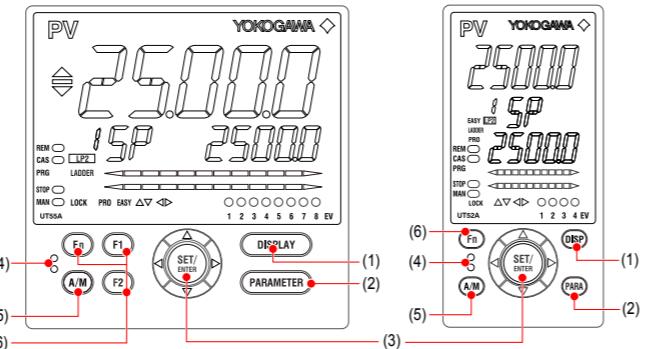


No. in figure	Name	Description
(1)	UT55A: DISPLAY key UT52A: DISP key	Used to switch the Operation Displays. Press the key in the Operation Display to switch the provided Operation Displays. Press the key in the Menu Display or Parameter Setting Display to return to the Operation Display.
(2)	UT55A: PARAMETER key UT52A: PARA key	Hold down the key for 3 seconds to move to the Operation Parameter Setting Display. Hold down the key and the Left arrow key simultaneously for 3 seconds to move to the Setup Parameter Setting Display. Press the key in the Parameter Setting Display to return to the Menu Display. Press the key once to cancel the parameter setting (setpoint is blinking).
(3)	SET/ENTER key Up/Down/Left/Right arrow keys	SET/ENTER key Press the key in the Menu Display to move to the Parameter Setting Display of the Menu. Press the key in the Parameter Setting Display to transfer to the parameter setting mode (setpoint is blinking), and the parameter can be changed. Press the key during parameter setting mode to register the setpoint. Up/Down/Left/Right arrow keys Press the Left/Right arrow keys in the Menu Display to switch the Displays. Press the Up/Down/Left/Right arrow keys in the Parameter Setting Display to switch the Displays. Press the Up/Down arrow keys during parameter setting mode (setpoint is blinking) to change a setpoint. Press the Left/Right arrow keys during parameter setting mode (setpoint is blinking) to move between digits according to the parameter.
(4)	Light-loader interface	It is the communication interface for the adapter cable used when setting and storing parameters from a PC. The LL50A Parameter Setting Software (sold separately) is required.
(5)	A/M key	Used to switch between AUTO and MAN modes. The setting is switched between AUTO and MAN each time the key is pressed.
(6)	User function keys	The UT55A has F1, F2, and Fn keys. The UT52A has only the Fn key. The user can assign a function to the key. The function is set by the parameter.

Note: The communication connector (maintenance port) for LL50A Parameter Setting Software is on the top of the unit.

## 2. Setup Procedure

The following flowchart shows the setup procedure for UT55A and UT52A.

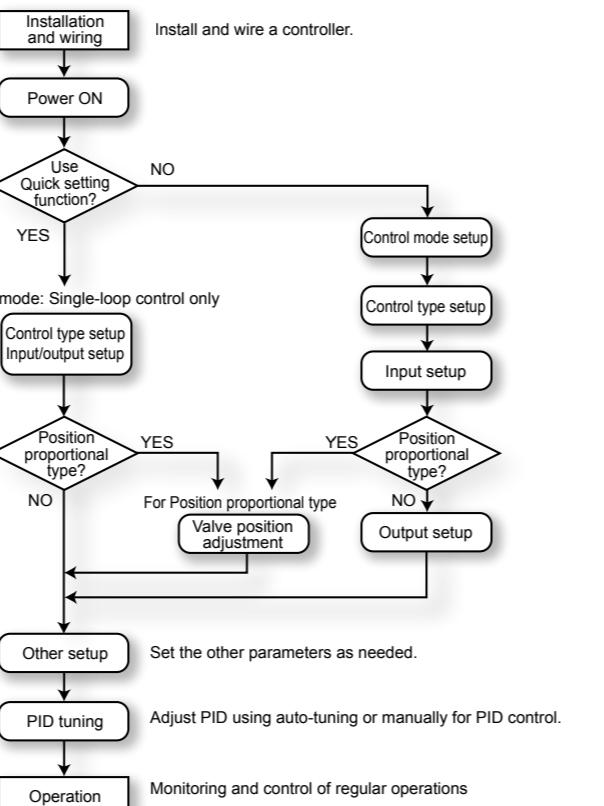

## 3. Quick Setting Function (Setting of Input and Output)

The Quick setting function is a function to easily set the basic function of the controller.

Turn on the controller to start the Quick setting function.

This function allows you to easily set the control type, input, and output, and quickly start the control action.

The items (parameters) to be set by Quick setting function are as follows.

- Control type (PID control, Heating/cooling control, etc.)
- Input function (PV input type, range, scale (at voltage input), etc.)
- Output function (control output type and cycle time)

After turning on the controller, first decide whether or not to use the Quick setting function.


The Quick setting function can be used only when the control mode is Single-loop control. For other control modes, set the functions without using the Quick setting function.

### Operation in Initial Display

- Press the SET/ENTER key while YES is displayed to start the Quick setting function.
- If you change YES to NO and press the SET/ENTER key, Operation Display will appear without starting the Quick setting function.

### ■ Flow of Quick Setting Function

In Quick setting mode, the parameter guide appears on PV display.  
This guide can be turned on/off with the Fn key.

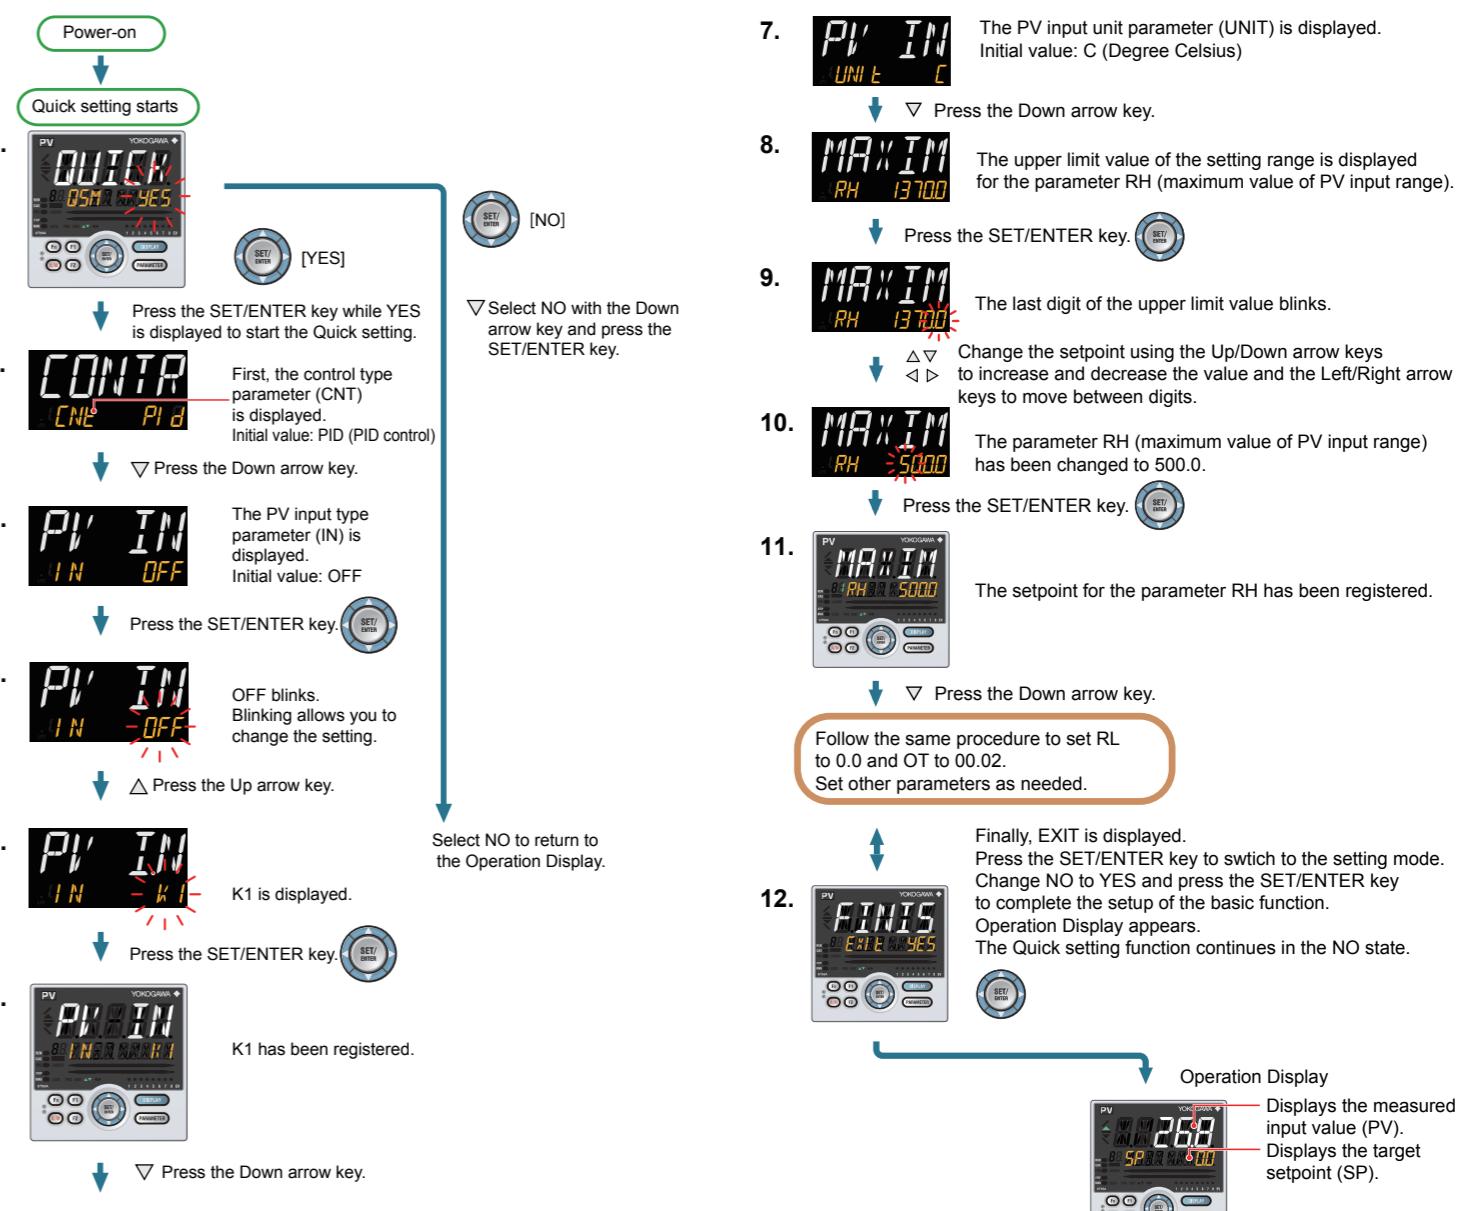

## Operation for Setting

To select the parameter setting displayed as the initial value, press the Down arrow key to move to the next parameter.

To change and set the parameter setting, press the SET/ENTER key to start the setpoint blinking. The blinking state allows you to make changes (setting mode). Use the Up/Down/Left/Right arrow keys to change the setpoint. Press the SET/ENTER key to register the setting.

### ■ Making Settings Using Quick Setting Function

Example: Setting to PID control, thermocouple type K (range of 0.0 to 500.0 °C), and current control output

For the detailed procedure and switching of displays, see "Flow of Quick Setting Function" below. For the parameters to set, see the next page.

- Press the SET/ENTER key while YES for QSM (Quick setting mode) is displayed.
- Set the control type parameter (CNT) to PID (PID control).
- Set the PV input type parameter (IN) to K1 (-270.0 to 1370.0 °C).
- Set the PV input unit parameter (UNIT) to C (Degree Celsius).
- Set the maximum value of PV input range parameter (RH) to 500.0.
- Set the minimum value of PV input range parameter (RL) to 0.0.
- Set the output type selection parameter (OT) to OUT terminals (current).
- Finally, EXIT is displayed. Change NO to YES and press the SET/ENTER key to complete the setup. Operation Display appears.

## ■ Parameters to be set

### Control Type

Parameter Symbol	Name of Parameter	Setting Range
CNT	Control type	PID: PID control ONOF: ON/OFF control (1 point of hysteresis) ONOF2: ON/OFF control (2 points of hysteresis) 2P2L: Two-position two-level control H/C: Heating/cooling control S-PI: Sample PI control BATCH: Batch PID control FFPID: Feedforward control

Note: Some setpoints may not be displayed depending on the model and suffix codes.

### Input Function

Parameter Symbol	Name of Parameter	Setting Range
IN	PV input type	OFF: Disable K1: -270.0 to 1370.0 °C / -450.0 to 2500.0 °F K2: -270.0 to 1000.0 °C / -450.0 to 2300.0 °F K3: -200.0 to 500.0 °C / -200.0 to 1000.0 °F J: -200.0 to 1200.0 °C / -300.0 to 2300.0 °F T1: -270.0 to 400.0 °C / -450.0 to 750.0 °F T2: 0.0 to 400.0 °C / -200.0 to 750.0 °F B: 0.0 to 1800.0 °C / 32 to 3300 °F S: 0.0 to 1700.0 °C / 32 to 3100 °F R: 0.0 to 1700.0 °C / 32 to 3100 °F N: -200.0 to 1300.0 °C / -300.0 to 2400.0 °F E: -270.0 to 1000.0 °C / -450.0 to 1800.0 °F L: -200.0 to 900.0 °C / -300.0 to 1600.0 °F U1: -200.0 to 400.0 °C / -300.0 to 750.0 °F U2: 0.0 to 400.0 °C / -200.0 to 1000.0 °F W: 0.0 to 2300.0 °C / 32 to 4200 °F PL2: 0.0 to 1390.0 °C / 32 to 2500.0 °F P2040: 0.0 to 1900.0 °C / 32 to 3400 °F WRE: 0.0 to 2000.0 °C / 32 to 3600 °F JPT1: -200.0 to 500.0 °C / -300.0 to 1000.0 °F JPT2: -150.0 to 150.0 °C / -200.0 to 300.0 °F PT1: -200.0 to 850.0 °C / -300.0 to 1500.0 °F PT2: -200.0 to 500.0 °C / -300.0 to 1000.0 °F PT3: -150.0 to 150.0 °C / -200.0 to 300.0 °F 0.4-2V: 0.400 to 2.000 V 1-5V: 1.000 to 5.000 V 4-20: 4.00 to 20.00 mA 0-2V: 0.000 to 2.000 V 0-10V: 0.000 to 10.00 V 0-20: 0.000 to 20.00 mA -1020: -10.00 to 20.00 mV 0-100: 0.0 to 100.0 mV
UNIT	PV input unit	-: No unit, C: Degree Celsius -: No unit, -: No unit, --: No unit, F: Degree Fahrenheit
RH	Maximum value of PV input range	Depends on the input type. - For temperature input - Set the temperature range that is actually controlled. (RL<RH) - For voltage / current input - Set the range of a voltage / current signal that is applied. The scale across which the voltage / current signal is actually controlled should be set using the maximum value of input scale (SH) and minimum value of input scale (SL). (Input is always 0% when RL = RH)
RL	Minimum value of PV input range	
SDP	PV input scale decimal point position	0: No decimal place 1: One decimal place 2: Two decimal places 3: Three decimal places 4: Four decimal places
SH	Maximum value of PV input scale	-19999 to 30000, (SL<SH),   SH - SL   ≤ 30000
SL	Minimum value of PV input scale	

Note 1: SDP, SH, and SL are displayed only for voltage/current input.




Note 2: W: W-5%Re/W-26%Re (Hoskins Mfg. Co.), ASTM E988

### Output Function

Parameter Symbol	Name of Parameter	Setting Range
OT	Output type selection	Control output or Heating-side control output (Lower two digits) Cooling-side control output (Upper two digits) 00: OFF 01: OUT terminals (voltage pulse) 02: OUT terminals (current) 03: OUT terminals (relay) 04: OUT2 terminals (voltage pulse) 05: OUT2 terminals (current) 06: OUT2 terminals (relay)
CT	Control output cycle time Heating-side control output cycle time (in Heating/cooling control)	0.5 to 1000.0 s
CTc	Cooling-side control output cycle time	

## 4. Adjusting Valve Position Automatically (for a Position Proportional Type Controller Only)


The following operating procedure describes how to input feedback signals from the control valve and adjust the fully-open and fully-closed positions of the control valve automatically. The fully-open and fully-closed positions of the valve can be adjusted automatically by inputting feedback signals from the valve. To adjust the valve position, you need to carry out the connection and bring the controller into manual mode. For the connection, see "6. Terminal Wiring Diagrams" in "Installation and Wiring", and for the manual mode, see "5. Switching between AUTO and MAN" in "Operations".

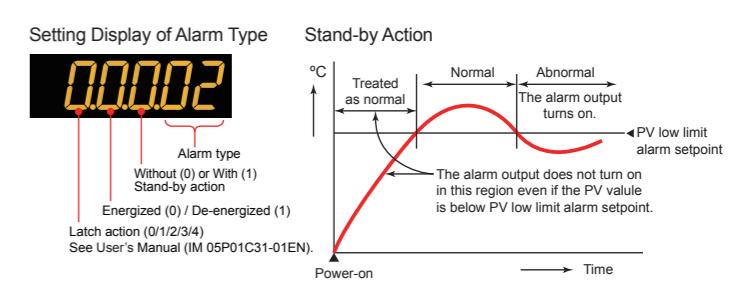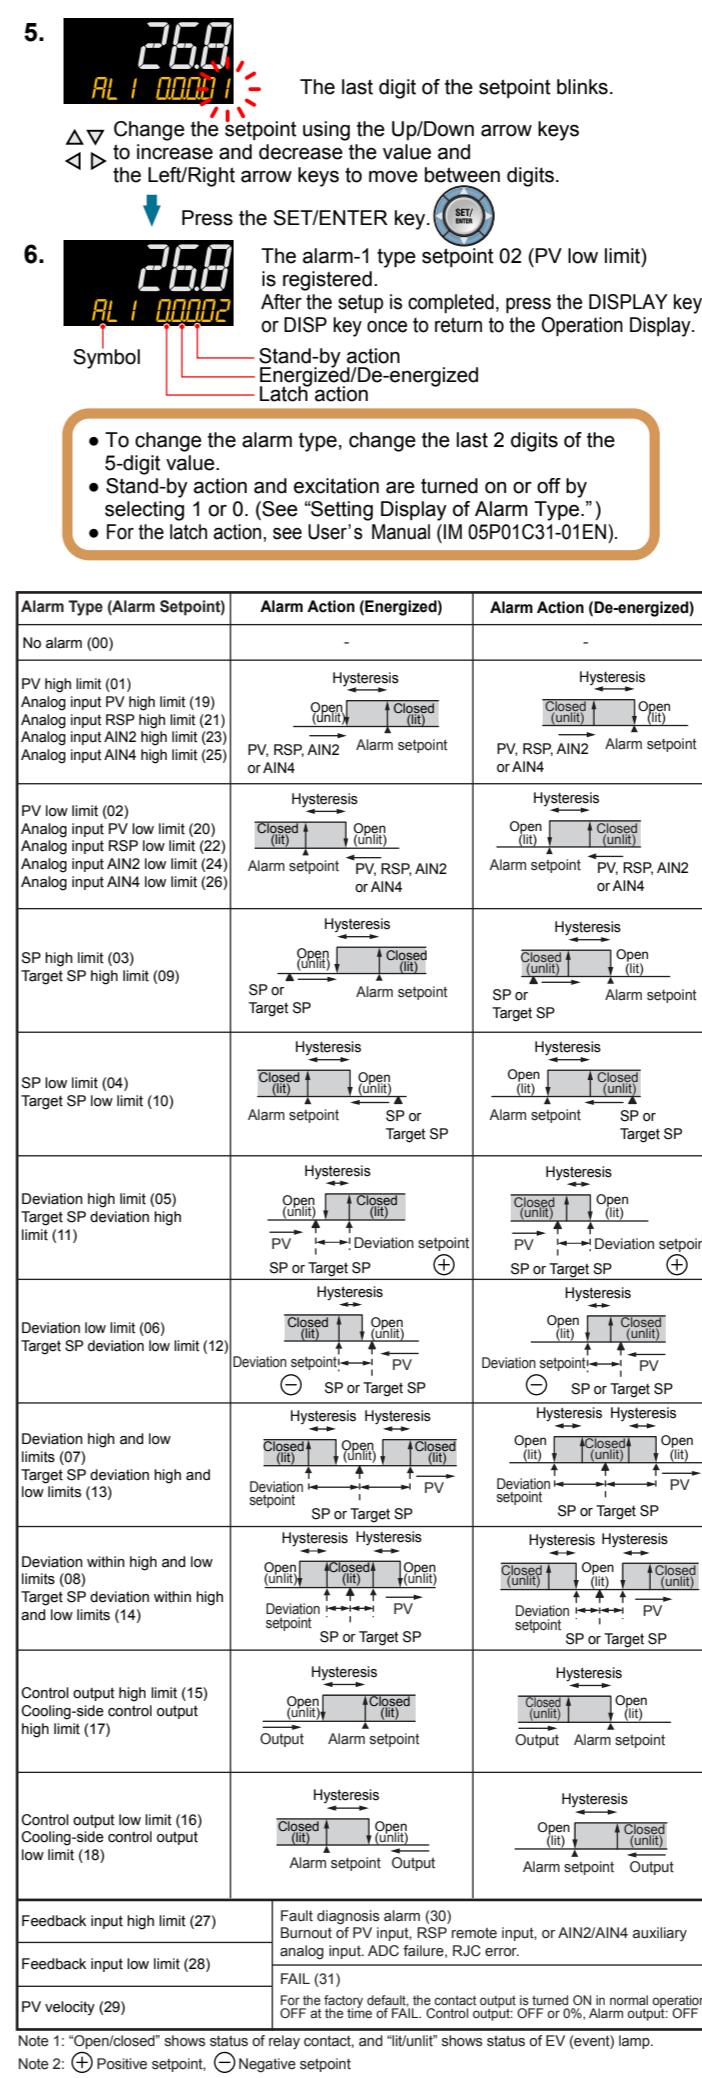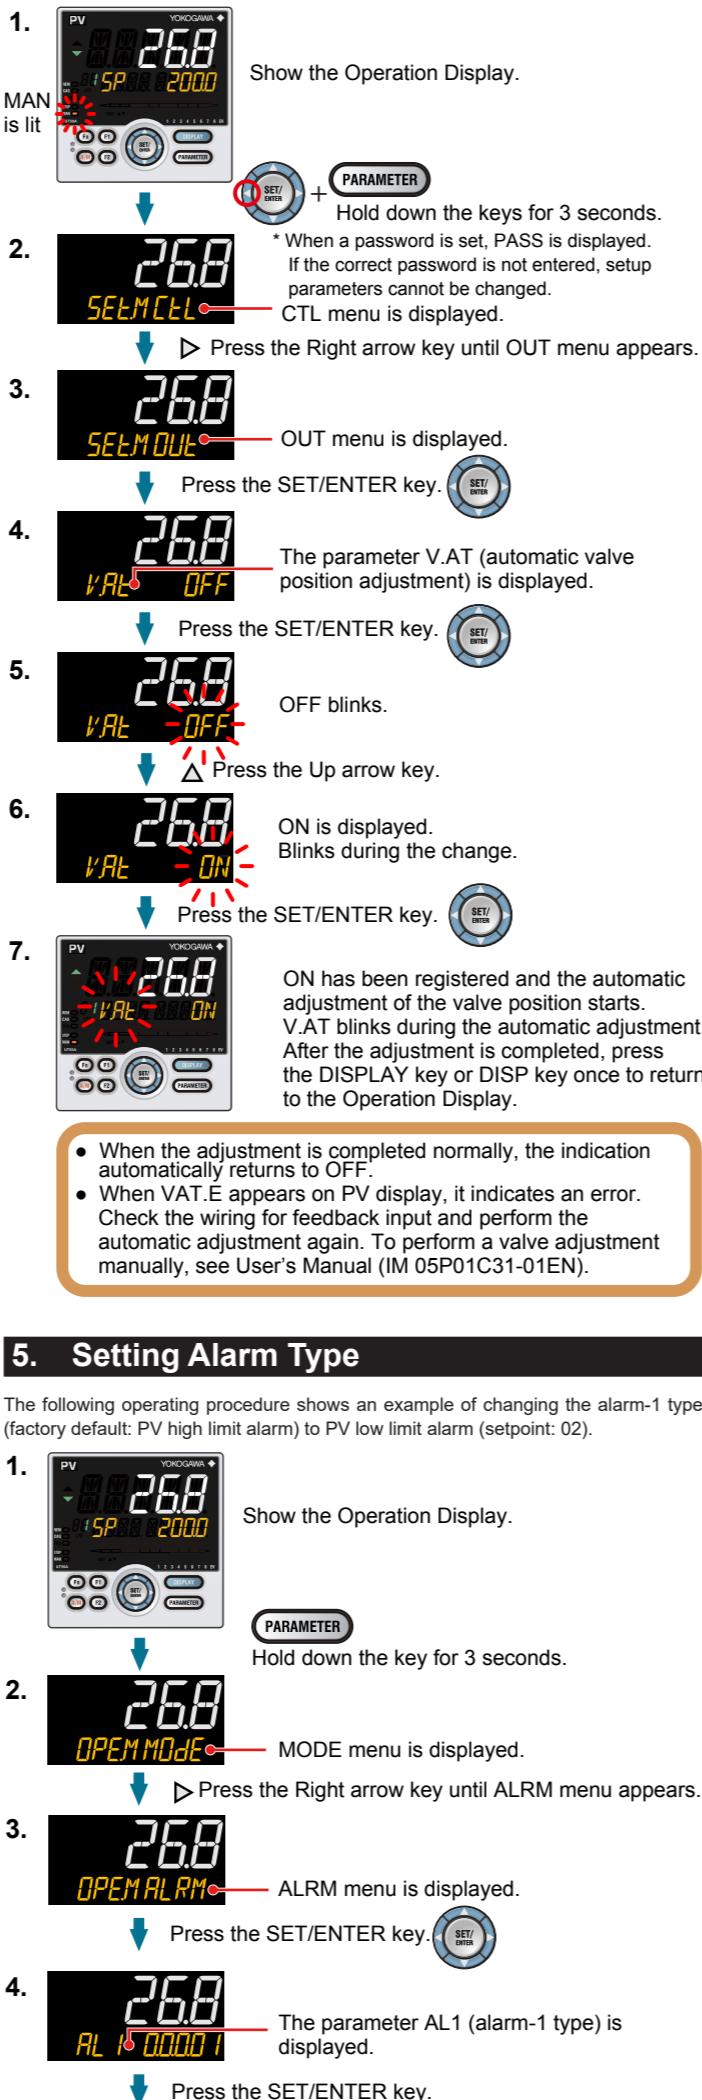

## 6. Setting Alarm Setpoint


The following operating procedure shows an example of setting the alarm-1 setpoint of group 1 to 180.0. Before setting the alarm setpoint, check the alarm type. To change the alarm type, see "5. Setting Alarm Type."

- Show the Operation Display.
- Display MODE menu with the same procedure as described in Setting Alarm Type.
- ▶ Press the Right arrow key.

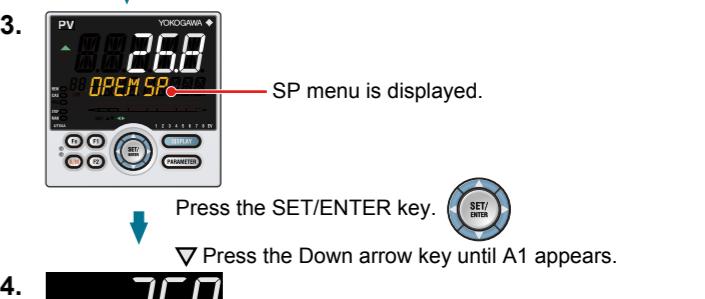

Each parameter and group can be changed in the Parameter Setting Displays of alarms using arrow keys.  
Up/Down arrow keys: parameters  
Left/Right arrow keys: groups

- Display the parameter and group that need to be changed.
- ▶ Press the SET/ENTER key.

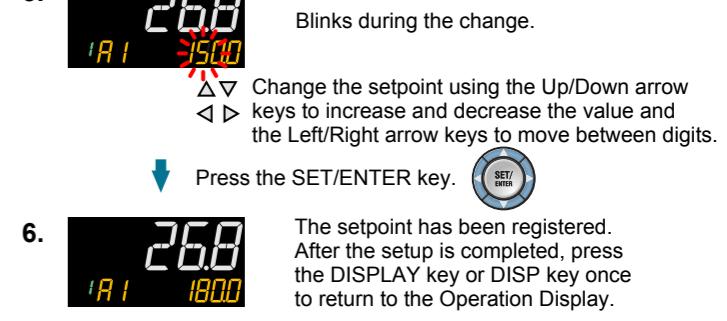

## Initializing parameter values

Parameters that you have changed can be initialized to factory default values or user default values. For details, see "Parameter Initialization" in the User's Manual (IM 05P01C31-01EN).

## Changing the parameter display levels

This operation guide does not explain all the parameters. To display all the parameters, you need to change the parameter display level to professional setting mode. For details, see "Setting Security Functions" in the User's Manual (IM 05P01C31-01EN).

## Operation Guide

UT55A, UT52A  
Digital Indicating Controller (Panel Mounting Type)  
Operation Guide for Single-loop Control

### Operations

#### YOKOGAWA ◆ «Standard Code Model»

Yokogawa Electric Corporation

This operation guide describes key entries for operating the UT55A, UT52A. Although the display of UT55A is used in this guide, UT52A can be operated similarly. For operations using external contact inputs, see "DI" of "6. Terminal Wiring Diagrams" in "Installation and Wiring."

If you cannot remember how to carry out an operation during setting, press the DISPLAY key or DISP key once. This brings you to the display (Operation Display) that appears at power-on.

The scrolling guide is displayed on PV display in the Parameter Setting Display.

This guide can be turned on/off with the Fn key.

For details of the each function, refer to the electronic manual. Manuals can be downloaded or viewed at the following URL.

<https://www.yokogawa.com/ns/ut/im/>

### Contents

- Monitoring-purpose Operation Displays Available during Operation
- Setting Target Setpoint (SP)
- Performing/Cancelling Auto-tuning
- Selecting Target Setpoint Numbers (SPNO.)
- Switching between AUTO and MAN
- Switching between RUN and STOP
- Switching between REM (Remote) and LCL (Local)
- Manipulating Control Output in Manual Mode
- Troubleshooting

## 1. Monitoring-purpose Operation Displays Available during Operation

### ■ Operation Display Switching Diagram for Standard and Position Proportional Types

#### • SP Display

Displays the measured input value on PV display.


Displays the target setpoint (SP) on Setpoint display (SP can be changed).

#### • OUT Display

Displays the measured input value on PV display.

Displays the control output value (OUT) on Setpoint display (OUT can be changed in manual mode). Displays the valve's feedback input value (at 0 to 100% valve opening) in Position proportional control.

DISPLAY

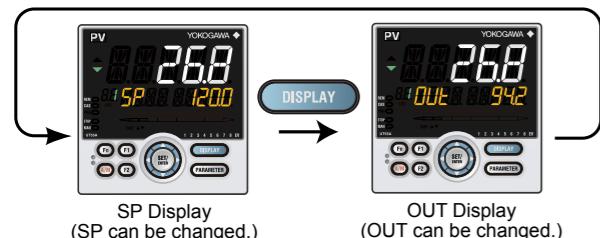

### ■ Operation Display Switching Diagram for Heating/Cooling Type

#### • SP Display

Displays the measured input value on PV display.


Displays the target setpoint (SP) on Setpoint display (SP can be changed).

#### • OUT Display

Displays the measured input value on PV display.

Displays the control output values (C.H.) of heating and cooling sides on Setpoint display (C.H. can be changed in manual mode).

DISPLAY

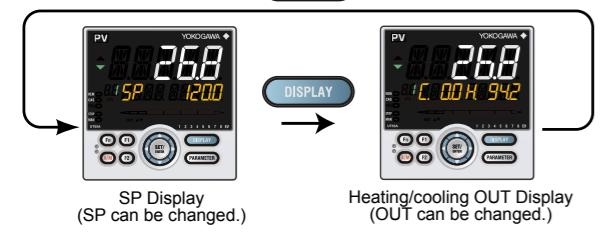


After showing the OUT Display, press the DISPLAY key or DISP key to show the following displays conditionally. For details, see User's Manual (IM 05P01C31-01EN).

### Standard, Position Proportional, and Heating/Cooling Types

- SELECT Displays 1 to 5 (which appear when registered)
- Analog Input Display (display only) (factory default: non-display)
- Position Proportional Computation Output Display (display only) (factory default: non-display)
- PID Number Display (display only) (factory default: non-display)
- Heater Break Alarm-1 Current Display (display only) (for heater break alarm option only)
- Heater Break Alarm-2 Current Display (display only) (for heater break alarm option only)

## 2. Setting Target Setpoint (SP)

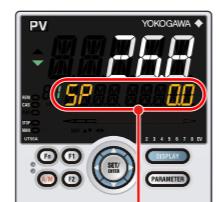


- Show the SP Display (Operation Display). (This is an example of setting the target setpoint to 150.0).

- Press the SET/ENTER key to start the last digit of the setpoint blinking. Blinking allows you to change the value.


- ▷ To set the setpoint, use the △/▽ Left/Right arrow keys to move between digits and the Up/Down arrow keys to increase and decrease the value.

- When the required value is displayed, press the SET/ENTER key to register the setpoint.

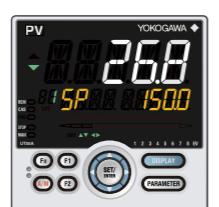

OFF blinks.

△▽ Press the Up/Down arrow keys to display the required setpoint.



Blinks during the change.

The setting range is 1 to 8 (represent group numbers) or R. To perform auto-tuning for the PID of group 1, set the parameter AT to 1. To quit the auto-tuning, set the parameter to OFF.

Press the SET/ENTER key.



The setpoint has been registered. This starts auto-tuning. The limiter can be set to the output during auto-tuning. For details, see User's Manual (IM 05P01C31-01EN).

During auto-tuning,

- The MAN lamp blinks.
- The OUT symbol appears.
- The output values at 100.0% and 0% appear alternately.



The MAN lamp goes off, which means that the auto-tuning completed normally.

## 3. Performing/Cancelling Auto-tuning

Auto-tuning should be performed after setting a target setpoint.

Make sure that the controller is in automatic mode (AUTO) and in run mode (RUN) before auto-tuning. For setting to AUTO, see "5. Switching between AUTO and MAN," and for setting to RUN, see "6. Switching between RUN and STOP."

If the setpoint is known in advance or auto-tuning does not find any appropriate PID constants, set the PID manually. For setting the PID manually, see User's Manual (IM 05P01C31-01EN).



Do not perform auto-tuning for the following processes.

Tune PID manually.

- Processes with fast response such as flow rate control and pressure control.
- Processes which do not allow the output to be turned on and off even temporarily.
- Processes which prohibit severe output changes at control valves (or other actuators).
- Processes in which product quality can be adversely affected if PV values fluctuate beyond their allowable ranges.

## 1. Show the Operation Display.



Hold down the PARAMETER key or PARA key for 3 seconds to display MODE menu.



Hold down the PARAMETER key or PARA key for 3 seconds to display MODE menu.



The parameter R.L (REMOTE/LOCAL switch) is displayed.

Press the SET/ENTER key.



The parameter SPNO. (SP number selection) is displayed.

Press the SET/ENTER key.



△▽ Change the setpoint using the Up/Down arrow keys. Blinks during the change.

Press the SET/ENTER key.



The setpoint has been registered. Press the DISPLAY key or DISP key once to return to the Operation Display.



SPNO. has been changed to 2.

## 5. Switching between AUTO and MAN

AUTO and MAN switching can be performed using any of the following: (1) A/M key, (2) Contact input, (3) Communication, and (4) User function key. The figure below shows a direct operation using the A/M key. When AUTO and MAN switching function is assigned to the contact input, and the contact input is ON, the switching by key operation cannot be performed. For details, see User's Manual (IM 05P01C31-01EN).



MAN lamp is lit in MAN mode. Each time you press the A/M key, AUTO and MAN is switched alternately.

When AUTO is switched into MAN, the control output value in AUTO mode is held. The controller can be operated manually from the hold value.

If the manual preset output is set (MPON parameter ≠ OFF), the controller can be operated manually from the arbitrary output value (MPO1 to MPO5 parameters).

## 6. Switching between RUN and STOP

RUN and STOP switching can be performed using any of the following: (1) Contact input, (2) Parameter, (3) Communication, and (4) User function key. The following shows an example of switching using the contact input.

(The switching function is assigned to DI2 contact for the factory default.)


For details of other switching methods and the display appearing when the operation is started, see User's Manual (IM 05P01C31-01EN).

When the controller is stopped, input and outputs are as follows:

PV input	Displays the PV value.
Control output	Displays the preset output value. The preset output value is set for each PID group.
Alarm output	Turns the output on in case of an alarm.


### Display in STOP mode

"STOP" is displayed on Symbol display and "preset output value" is displayed on Data display.

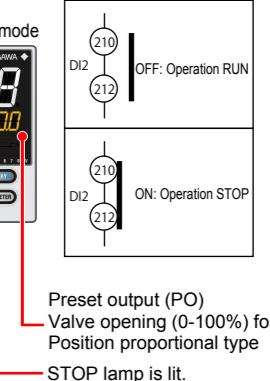

### Display in STOP mode in Heating/cooling control

"Cooling-side preset output value" is displayed on the left side of the "ST" symbol, and "Heating-side preset output value" is on the right side.

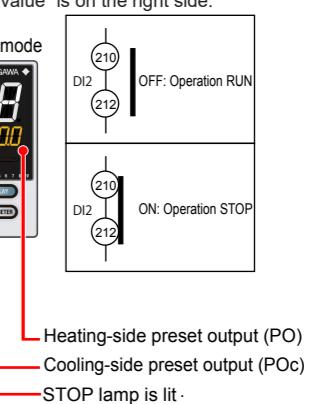

## 7. Switching between REM (Remote) and LCL (Local)

Remote and local switching can be performed using any of the following:  
 (1) Contact input, (2) Parameter, (3) Communication, and (4) User function key.

### LCL (Local)

Control is performed using the target setpoint set on the controller.


### REM (Remote)

Control is performed using an external analog signal that is used as the target setpoint. The following shows an example of switching from local to remote using the parameter.  
 For details of other switching methods, see User's Manual (IM 05P01C31-01EN).  
 • The PID group for the local SP number is used as PID in remote mode.

#### NOTE


When the contact input is ON, operation cannot be performed using the parameter, communication, or key. When the contact input is OFF and the setting is switched using the parameter, communication, or key, the last switching operation is performed.

#### 1. Show the Operation Display.

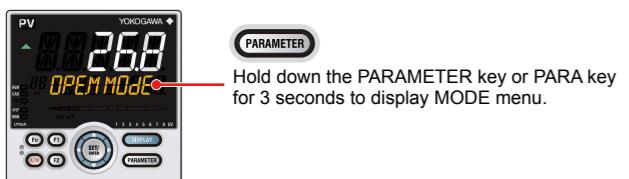


Hold down the PARAMETER key or PARA key for 3 seconds to display MODE menu.

#### 3. Press the SET/ENTER key.

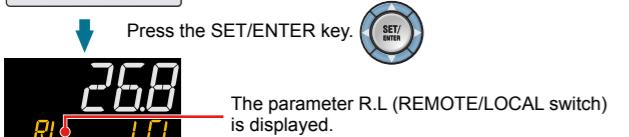

The parameter R.L (REMOTE/LOCAL switch) is displayed.

#### 4. Press the SET/ENTER key.

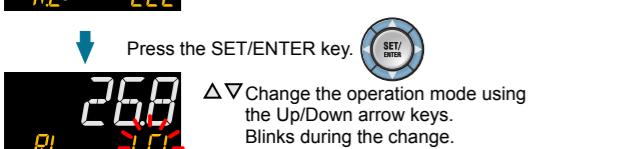

Change the operation mode using the Up/Down arrow keys.  
 Blinks during the change.

#### 5. Press the SET/ENTER key.




The REM lamp is lit.

## 9. Troubleshooting

### Troubleshooting Flow


If the Operation Display does not appear after turning on the controller's power, check the procedures in the following flowchart.  
 If a problem appears to be complicated, contact our sales representatives.

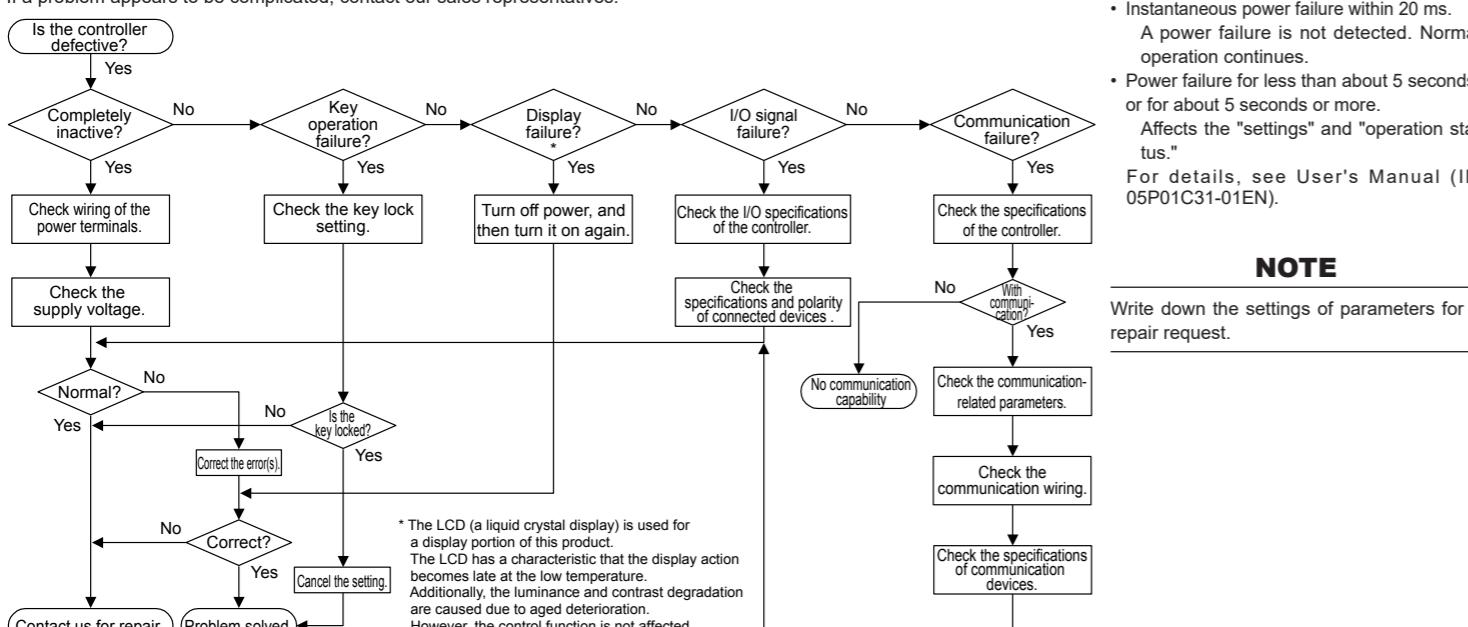


## 8. Manipulating Control Output in Manual Mode

#### NOTE

In manual mode, control output is manipulated by operating the keys (the value is changed using the Up/Down arrow keys, then outputted as it is). Even if the SET/ENTER key is not pressed, the control output value changes according to the displayed value. In stop mode (when the STOP lamp is lit), control output cannot be manipulated.

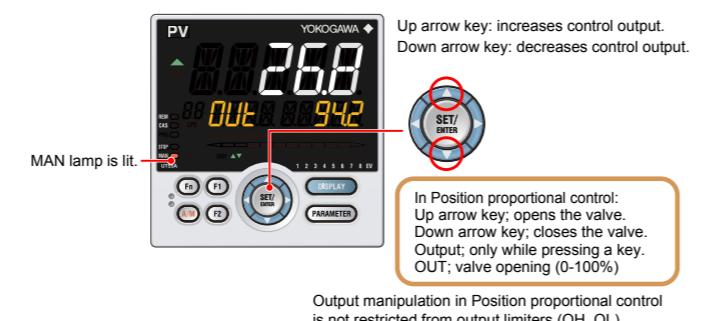


#### Manual operation in Heating/cooling control

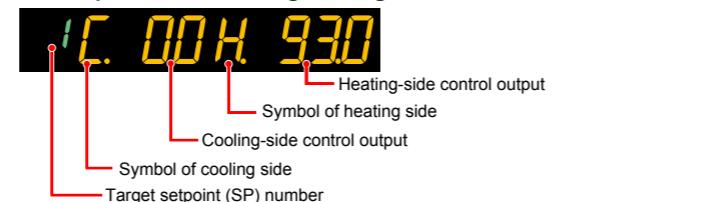

Up arrow key: concurrently decreases cooling-side control output and increases heating-side control output.  
 Down arrow key: concurrently increases cooling-side control output and decreases heating-side control output.

(Either none of the heating-side and cooling-side outputs are presented, or both of them are presented according to the dead band setting.)

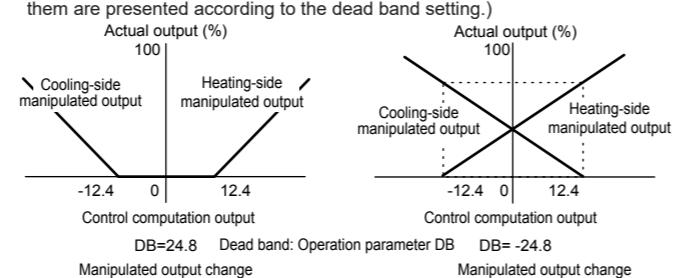

#### ■ Remedies if Power Failure Occurs during Operations

- Instantaneous power failure within 20 ms.  
 A power failure is not detected. Normal operation continues.
- Power failure for less than about 5 seconds, or for about 5 seconds or more.  
 Affects the "settings" and "operation status."  
 For details, see User's Manual (IM 05P01C31-01EN).

#### NOTE

Write down the settings of parameters for a repair request.

## ■ Errors at Power On

The errors shown below may occur in the fault diagnosis when the power is turned on. (For details of Setpoint display and input/output action when each error occurs, see User's Manual (IM 05P01C31-01EN).)

PV display (Operation Display)	Setpoint display (Operation Display)	Status indicator (Operation Display)	Parameter that displays error details	Error description	Cause and diagnosis	Remedy
Indication off	Indication off	—	—	Faulty MCU RAM / MCU ROM	MCU RAM / MCU ROM are failed.	Faulty. Contact us for repair.
ERR	SYS -----	—	—	System data error	System data is corrupted.	Faulty. Contact us for repair.
	PAR 0004 (for user default value error only)	—	User (parameter) default value error	User parameter is corrupted. Initialized to factory default value.		
	PAR 0010 (for setup parameter error only)	—	Setup parameter error	Setup parameter data is corrupted. Initialized to user default value.		
	PAR 0020 (for operation parameter error only)	—	Operation parameter error	Operation parameter data is corrupted. Initialized to user default value.		
	SLOT 0017 (0017: Error occurs to all hardware of E1 to E4-terminal areas.)	—	Setup parameter (OP.ER)	Nonresponding hardware of extended function (E1 to E4-terminal areas)	Inconsistency of system data and hardware of extended function. Nonresponding communication between hardware of extended function (E1 to E4-terminal areas).	Faulty. Contact us for repair.
	Normal indication	Rightmost decimal point on PV display blinks.	Setup parameter (PA.ER)	Calibration value error	Initialized to calibrated default value because of corrupted factory default value.	Faulty. Contact us for repair.
Normal indication	Normal indication	Rightmost decimal point on Symbol display blinks.	Setup parameter (PA.ER)	Faulty FRAM	Data writing (storing) to FRAM is impossible.	
Normal indication	Normal indication	LADDER lamp blinks	Setup parameter (LA.ER)	Corrupted ladder program	Ladder program is corrupted. Operates without ladder program.	Download the ladder program again.
Normal indication	0.000 0000 (Decimal point on the left of the Symbol display blinks)	—	Setup parameter (OP.ER)	User profile error	User profile is corrupted.	Download the user profile again.

## ■ Errors during Operation

The errors shown below may occur during operation. (For input/output action when each error occurs, see User's Manual (IM 05P01C31-01EN).)

PV display (Operation Display)	Setpoint display (Operation Display)	Status indicator (Operation Display)	Parameter that displays error details	Error description	Cause and diagnosis	Remedy
AD.ERR	Normal indication (Note)	—	Setup parameter (AD1.E)	Analog input terminal ADC error •PV input •RSP input (E1-terminal area) •AIN2 input (E2-terminal area) •AIN4 input (E4-terminal area)	Analog input terminal AD value error	Faulty. Contact us for repair.
RJC.E (Displays RJC.E and PV alternately.)	Normal indication (Note)	—	Setup parameter (AD1.E)	Universal input terminal RJC error •PV input •RSP input (E1-terminal area)	Universal input terminal RJC error	Faulty. Contact us for repair. Set the parameter RJC to OFF to erase error indication.
B.OUT	Normal indication (Note)	—	Setup parameter (AD1.E)	Analog input terminal burnout error •PV input •RSP input (E1-terminal area) •AIN2 input (E2-terminal area) •AIN4 input (E4-terminal area)	Analog input terminal sensor burnout	Check wiring and sensor. Error indication is erased in normal operation.
		—	Setup parameter (PV1.E / PV2.E)	PV input burnout error (Loop 1, Loop 2)	Burnout of analog input connected to PV	Check wiring and sensor of connected analog input terminals. Error indication is erased in normal operation.
OVER-OVER	Normal indication	—	Setup parameter (PV1.E / PV2.E)	PV input over-scale PV input under-scale (PV values out of -5 to 105%) (Loop 1, Loop 2)	PV input is out of -5 to 105%. Also occurs when the data out of range which is the ladder calculation result is input.	Check analog input value or ladder program.
Normal indication	Normal indication	—	Setup parameter (PV1.E / PV2.E)	RSP input burnout error (Loop 1, Loop 2)	Burnout of analog input connected to RSP	Check wiring and sensor. Error indication is erased in normal operation.
Normal indication	RSP B.OUT	—	Setup parameter (PV1.E / PV2.E)	Burnout error when RSP input is used for control (Loop 1, Loop 2)	Burnout of analog input connected to RSP when RSP is used for control computation	Check wiring and sensor. Error indication is erased in normal operation.
Normal indication	OUT -----	—	Setup parameter (AD2.E)	Feedback input resistor/current burnout	Feedback input burnout	Check wiring of feedback input resistor/ current. Error indication is erased in normal operation.
Normal indication	LADDER lamp blinks	Setup parameter (LA.ER)	Ladder calculation overflow	Floating point computation for ladder calculation is infinite.		Check the ladder program.
				Computation does not end within the control period (load factor is 100% or more).		Change the control period or reduce the number of steps for the ladder program.
				Load factor over 200% (Forced end)		Change the control period or reduce the number of steps for the ladder program.
				Ladder program error		Download the ladder program again. If the error indication is still not erased, there is a fault. Contact us for repair.
Normal indication	0.000 0000 (Decimal point on the left of the Symbol display blinks)	Setup parameter (OP.ER)	Peer-to-peer communication error	Peer-to-peer communication error	Peer-to-peer communication error	Check that the target devices are connected correctly. Recovery at normal receipt.
				Auto-tuning time-out (Loop 1, Loop 2)	Auto-tuning does not end even when 24 hours have elapsed after the start of tuning.	Check the process. Hold down any key to erase the error indication.
				Fully-closed valve position is equal to or larger than the fully-open valve position after automatic valve position adjustment is performed.		Check the process. Hold down any key to erase the error indication.
VAT.E	Normal indication	—	Setup parameter (AD2.E)	Valve position automatic adjustment error	Fully-closed valve position is equal to or larger than the fully-open valve position after automatic valve position adjustment is performed.	Check wiring and valve. Hold down any key to erase the error indication.
Normal indication	0.000 00000 (Decimal point on the left of the Symbol display blinks)	Setup parameter (OP.ER)	Communication error (RS-485 communication)	Framing parity error Buffer overflow Inter-character time-out Checksum error (PC link communication with checksum) CRC check error (Modbus/RTU) LRC check error (Modbus/ASCII)	Communication error (RS-485 communication)	Check the communication parameters. Recovery at normal receipt. Hold down any key to stop blinking.
				Inconsistency of loop between coordinated master and slaves		
Normal indication	0.000 00000 (Decimal point on the left of the Symbol display blinks)	Setup parameter (OP.ER)	Communication error (coordinated operation)	Communication from coordinated master is interrupted for 2 seconds.	Communication from coordinated master is interrupted for 2 seconds.	
				User profile error	User profile is corrupted.	Download the user profile again.
Normal indication	Rightmost decimal point on Symbol display blinks.	Setup parameter (PA.ER)	Faulty FRAM	Writing (storing) data to FRAM is impossible.	Faulty. Contact us for repair.	
Undefined	Undefined	—	Setup parameter (OP.ER)	Faulty MCU / DCU (ROM / RAM error, corrupted)	MCU / DCU is corrupted.	Faulty. Contact us for repair.

Note: When an error occurs in input shown in Analog input display (Operation display), Setpoint display shows the same symbol as the PV display.





## ■ Input Range, SP Limiter Setting Parameter

Menu symbol: **MPV** (MPV)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>PUNI</b> (P.UNI)	Control PV input unit	- No unit C: Degree Celsius - No unit - - No unit F: Degree Fahrenheit	Same as PV input unit		
<b>PDP</b> (P.DP)	Control PV input decimal point position	0: No decimal place 1: One decimal place 2: Two decimal places 3: Three decimal places 4: Four decimal places	Depends on the input type		
<b>PRH</b> (P.RH)	Maximum value of control PV input range	-19999 to 30000, (P.RL < P.RH),  P.RH - P.RL  ≤ 30000	Depends on the input type		
<b>PRL</b> (P.RL)	Minimum value of control PV input range	100.0 % of PV input range			
<b>SPH</b> (SPH)	SP high limit	0.0 to 100.0% of PV input range (EU), (SPL < SPH)	100.0 % of PV input range		
<b>SPL</b> (SPL)	SP low limit	0.0 % of PV input range			

## ■ Output Setting Parameter

Menu symbol: **OUT** (OUT)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level	
<b>O1T</b> (OT)	Output type selection	Control output or Heating-side control output (Lower two digits) 00: OFF 01: OUT terminals (voltage pulse) 02: OUT terminals (current) 03: OUT terminals (relay) 04: OUT2 terminals (voltage pulse) 05: OUT2 terminals (current) 06: OUT2 terminals (relay)  Cooling-side control output (Upper two digits) 00: OFF 01: OUT terminals (voltage pulse) 02: OUT terminals (current) 03: OUT terminals (relay) 04: OUT2 terminals (voltage pulse) 05: OUT2 terminals (current) 06: OUT2 terminals (relay)	Standard type: 00.03 Heating/cooling type: 06.03			EASY
<b>CT</b> (CT)	Control output cycle time	30.0 s				
<b>CTC</b> (CTC)	Heating-side control output cycle time (in Heating/cooling control)	0.5 to 1000.0 s				
<b>VAC</b> (V.A.T)	Cooling-side control output cycle time	30.0 s				
<b>VRS</b> (V.RS)	Automatic valve position adjustment	OFF: Stop automatic adjustment ON: Start automatic adjustment	OFF			
<b>VRS</b> (V.RS)	Valve position setting reset	Setting V.RS to ON resets the valve adjustment settings and causes the indication "V.RS" to blink.	OFF			
<b>VL</b> (VL)	Fully-closed valve position setting	Pressing the SET/ENTER key with valve position set to the fully-closed position by Down arrow key causes the adjusted value to be stored. When VL adjustment is complete, VL stops blinking.	-			
<b>VH</b> (V.H)	Fully-opened valve position setting	Pressing the SET/ENTER key with valve position set to the fully-opened position by Up arrow key causes the adjusted value to be stored. When VH adjustment is complete, VH stops blinking	-			
<b>TRT</b> (TR.T)	Valve traveling time	5 to 300 s	60 s			
<b>VMD</b> (V.MOD)	Valve adjusting mode	0: Valve position feedback type 1: Valve position feedback type (moves to the estimating type if a feedback input error or break occurs.) 2: Valve position estimating type	0			
<b>RTS</b> (RTS)	Retransmission output type of RET	OFF: Disable PV1: PV SP1: SP OUT1: OUT (Valve opening: 0 to 100% in Position proportional control) LPS: 15 V DC loop power supply PV2: Loop-2 PV SP2: Loop-2 SP OUT2: Loop-2 OUT TSP1: Target SP HOUT1: Heating-side OUT COUT1: Cooling-side OUT MV1: Position proportional output (internal computed value) TSP2: Loop-2 target SP HOUT2: Loop-2 heating-side OUT COUT2: Loop-2 cooling-side OUT MV2: Loop-2 position proportional output (internal computed value) PV: PV terminals analog input RSP: RSP terminals analog input AIN2: AIN2 terminals analog input AIN4: AIN4 terminals analog input * Loop-2 setting values are unavailable in Single-loop control.	PV1		EASY	

<b>RTH</b> (RTH)	Maximum value of retransmission output scale of RET	When RTS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, RTH + 1 digit to 30000 -19999 to RTH - 1 digit Decimal point position: When RTS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When RTS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When RTS=PV, decimal point position is same as that of PV input scale. When RTS=RSP, decimal point position is same as that of RSP input scale. When RTS=AIN2, decimal point position is same as that of AIN2 scale. When RTS=AIN4, decimal point position is same as that of AIN4 scale.	100 % of PV input range		STD
<b>RTL</b> (RTL)	Minimum value of retransmission output scale of RET	When RTS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, RTL + 1 digit to 30000 -19999 to RTL - 1 digit Decimal point position: When RTS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When RTS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When RTS=PV, decimal point position is same as that of PV input scale. When RTS=RSP, decimal point position is same as that of RSP input scale. When RTS=AIN2, decimal point position is same as that of AIN2 scale. When RTS=AIN4, decimal point position is same as that of AIN4 scale.	0 % of PV input range		
<b>O1RS</b> (O1RS)	Retransmission output type of OUT current output	Same as RTS	OFF		
<b>O1RH</b> (O1RH)	Maximum value of retransmission output scale of OUT current output	When O1RS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, O1RH + 1 digit to 30000 -19999 to O1RH - 1 digit Decimal point position: When O1RS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When O1RS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When O1RS=PV, decimal point position is same as that of PV input scale. When O1RS=RSP, decimal point position is same as that of RSP input scale. When O1RS=AIN2, decimal point position is same as that of AIN2 scale. When O1RS=AIN4, decimal point position is same as that of AIN4 scale.	-		STD
<b>O1RL</b> (O1RL)	Minimum value of retransmission output scale of OUT current output	When O1RS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, O1RL + 1 digit to 30000 -19999 to O1RL - 1 digit Decimal point position: When O1RS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When O1RS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When O1RS=PV, decimal point position is same as that of PV input scale. When O1RS=RSP, decimal point position is same as that of RSP input scale. When O1RS=AIN2, decimal point position is same as that of AIN2 scale. When O1RS=AIN4, decimal point position is same as that of AIN4 scale.	-		
<b>O2RS</b> (O2RS)	Retransmission output type of OUT2 current output	Same as RTS	OFF		
<b>O2RH</b> (O2RH)	Maximum value of retransmission output scale of OUT2 current output	When O2RS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, O2RH + 1 digit to 30000 -19999 to O2RH - 1 digit Decimal point position: When O2RS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When O2RS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When O2RS=PV, decimal point position is same as that of PV input scale. When O2RS=RSP, decimal point position is same as that of RSP input scale. When O2RS=AIN2, decimal point position is same as that of AIN2 scale. When O2RS=AIN4, decimal point position is same as that of AIN4 scale.	-		STD
<b>O2RL</b> (O2RL)	Minimum value of retransmission output scale of OUT2 current output	When O2RS = PV1, SP1, PV2, SP2, TSP1, TSP2, PV, RSP, AIN2, or AIN4, O2RL + 1 digit to 30000 -19999 to O2RL - 1 digit Decimal point position: When O2RS=PV1, SP1, or TSP1, decimal point position is same as that of PV input. When O2RS=PV2, SP2, or TSP2, decimal point position is same as that of RSP input. When O2RS=PV, decimal point position is same as that of PV input scale. When O2RS=RSP, decimal point position is same as that of RSP input scale. When O2RS=AIN2, decimal point position is same as that of AIN2 scale. When O2RS=AIN4, decimal point position is same as that of AIN4 scale.	-		
<b>O4A</b> (O4A)	OUT current output range	4-20			
<b>O4RA</b> (O4RA)	OUT2 current output range	4-20			
<b>RET</b> (RET)	RET current output range	4-20			

## ■ Heater Break Alarm Setting Parameter

Menu symbol: **HbR** (HBA)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>Hb1S</b> (HB1.S)	Heater break alarm-1 function selection	0: Heater current measurement 1: Heater break alarm	1		
<b>Hb2S</b> (HB2.S)	Heater break alarm-2 function selection	1			
<b>Hb1</b> (HB1)	Heater break alarm-1 current setpoint	OFF			
<b>Hb2</b> (HB2)	Heater break alarm-2 current setpoint	OFF			
<b>CT1</b> (CT1.T)	CT1 coil winding number ratio	800			
<b>CT2</b> (CT2.T)	CT2 coil winding number ratio	800			
<b>HdN1</b> (HDN1)	Heater break alarm-1 On-delay timer	0.00			STD
<b>HdN2</b> (HDN2)	Heater break alarm-2 On-delay timer	0.00			

In cases where the current transformers manufactured by U.R.D. Co., Ltd are used, set the following value for the coil winding number ratio.  
CTL-6-S-H: 800  
CTL-12L-30: 3000

## ■ RS-485 Communication Setting Parameter (E1/E3/E4-terminal Area)

Menu symbol: **R485** (R485)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>PSL</b> (PSL)	Protocol selection	PCL: PC link communication PCLSM: PC link communication (with checksum) LADR: Ladder communication CO-M: Coordinated master station CO-S: Coordinated slave station MBASC: Modbus (ASCII) MBRTU: Modbus (RTU) CO-S1: Coordinated slave station (Loop-1 mode) CO-S2: Coordinated slave station (Loop-2 mode) P-P: Peer-to-peer communication	MBRTU		
<b>bPS</b> (BPS)	Baud rate	600: 600 bps 1200: 1200 bps 2400: 2400 bps 4800: 4800 bps 9600: 9600 bps 19200: 19.2k bps 38400: 38.4k bps * The baud rate for RS-485 is up to 19.2 k bps in E4-terminal area.	19200		EASY
<b>PRI</b> (PRI)	Parity	NONE: None EVEN: Even ODD: Odd	EVEN		
<b>STP</b> (STP)	Stop bit	1: 1 bit, 2: 2 bits	1		
<b>dLN</b> (DLN)	Data length	7: 7 bits, 8: 8 bits	8		
<b>AdR</b> (ADR)	Address	1 to 99	1		

## ■ Ethernet Communication Setting Parameter (E3-terminal Area)

Menu symbol: **ETHR** (ETHR)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<b>HSP</b> (HSP)	High-speed response mode	OFF, 1 to 8	1		
<b>bPS</b> (BPS)	Baud rate	9600: 9600 bps 19200: 19.2k bps 38400: 38.4k bps	38400		
<b>PRI</b> (PRI)	Parity	NONE: None EVEN: Even ODD: Odd	EVEN		
<b>IP1 to IP4</b> (IP1 to IP4)	IP address 1 to 4	0 to 255 Initial value: (IP1).(IP2).(IP3).(IP4) =(192).(168).(1).1	See left	Table below	
<b>SM1 to SM4</b> (SM1 to SM4)	Subnet mask 1 to 4	0 to 255 Initial value: (SM1).(SM2).(SM3).(SM4) =(255).(255).(255).(0)	See left	Table below	
<b>DG1 to DG4</b> (DG1 to DG4)	Default gateway 1 to 4	0 to 255 Initial value: (DG1).(DG2).(DG3).(DG4) =(0).(0).(0).(0)	See left	Table below	EASY
<b>PRT</b> (PRT)	Port number	502, 1024 to 65535	502		
<b>I_PAR</b> (I_PAR)	IP access restriction	OFF: Disable, ON: Enable	OFF		
<b>I_P1 to I_P4, 2_I_P1 to 2_I_P4</b> (I_P1 to I_P4, 2_I_P1 to 2_I_P4)	Permitted IP address 1-1 to 4-4 Permitted IP address 2-1 to 2-4	0 to 255 Initial value:			

## ■ Display Function Setting Parameter

Menu symbol: *di SP* (DISP)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>di'b</i> (DVB)	Deviation display band	Permits a change in the span of deviation shown on the front-panel deviation monitor. Displayed only for UT55A. 0.0 to 100.0% of PV input range span (EUS).	1.0 % of PV input range span		STD
<i>PCMD</i> (PCMD)	Active color PV display switch	0: Fixed in white 1: Fixed in red 2: Link to alarm 1 (Alarm OFF: white, Alarm ON: red) 3: Link to alarm 1 (Alarm OFF: red, Alarm ON: white) 4: Link to alarm 1 or 2 (Alarm OFF: white, Alarm ON: red) 5: Link to alarm 1 or 2 (Alarm OFF: red, Alarm ON: white) 6: PV limit (Within range: white, Out of range: red) 7: PV limit (Within range: red, Out of range: white) 8: SP deviation (Within deviation: white, Out of deviation: red) 9: SP deviation (Within deviation: red, Out of deviation: white) 10: Link to DI (ON: red, OFF: white)	0	EASY	
<i>PCH</i> (PCH)	PV color change high limit	Set a display value when in PV limit or SP deviation. -19999 to 30000 (Set a value within the input range.)	0		
<i>PCL</i> (PCL)	PV color change low limit	Decimal point position depends on the input type.	0		
<i>bAR1</i> (BAR1)	Upper bar-graph display registration	0: Disable 1: OUT, Heating-side OUT, Internal value in Position proportional control 2: Cooling-side OUT 3: PV 4: SP 5: Deviation 6: Loop-2 OUT, Loop-2 heating-side OUT 7: Loop-2 cooling-side OUT 8: Loop-2 PV 9: Loop-2 SP 10: Loop-2 deviation 11 to 16: Disable 17: Feedback input (valve opening) 18: PV terminals analog input 19: RSP terminals analog input 20: AIN2 terminals analog input 21: AIN4 terminals analog input 27: TSP 28: TSP deviation 29: Loop-2 TSP 30: Loop-2 TSP deviation	5 (Heating/cooling type: 1)		STD
<i>bAR2</i> (BAR2)	Lower bar-graph display registration	1 (Heating/cooling type: 2) (Position proportional type: 17)			STD
<i>bdv</i> (BDV)	Bar-graph deviation display band	0.0 to 100.0% of PV input range span (EUS)	1.0 % of PV input range span		STD
<i>GUID</i> (GUID)	Guide display ON/OFF	OFF: Nondisplay, ON: Display	ON		STD
<i>ECO</i> (ECO)	Economy mode	OFF: Disable 1: Economy mode ON (All indications except PV display OFF) 2: Economy mode ON (All indications OFF) 3: Brightness 10 % (whole indication)	OFF		STD
<i>bRI</i> (BRI)	Brightness	(Dark) 1 to 5 (Bright)	3		EASY
<i>MLSD</i> (MLSD)	Least significant digital mask of PV display	OFF: With least significant digit ON: Without least significant digit	OFF		STD
<i>MKEP</i> (MKTP)	Method for least significant digital mask of PV display	0: Rounding, 1: Rounding-off	0		STD

## ■ SELECT Display Setting Parameter

Menu symbol: *CSEL* (CSEL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>C51 to C55</i> (CS1 to CS5)	SELECT Display-1 to -5 registration	Register the operation parameter (except the Operation Mode) that is frequently modified to display it in the Operation Display. OFF, 2301 to 5000, 6701 to 6710 For the setting range, see Communication User's Manual.	OFF	Table below	STD

Use the following table to record SELECT Display setting value.

Parameter	n=1	n=2	n=3	n=4	n=5
CSn					

## ■ Key Lock Setting Parameter

Menu symbol: *KLOC* (KLOC)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>COMW</i> (COM.W)	Communication write enable/disable	OFF: Enable, ON: Disable	OFF		STD
<i>dRRA</i> (DATA)	Front panel parameter data (▼, ▲) key lock	OFF: Unlock, ON: Lock	OFF		STD
<i>A/M</i> (A/M)	Front panel A/M key lock	OFF			

## ■ DI Function Registration Parameter

Menu symbol: *di SL* (DI.SL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>R/M</i> (A/M)	AUTO/MAN switch		5025		
<i>R/L</i> (R/L)	REMOTE/LOCAL switch		5046		
<i>S/R</i> (S/R)	STOP/RUN switch		5026		
<i>CAS</i> (CAS)	Switch to CAS		OFF		
<i>AUTO</i> (AUTO)	Switch to AUTO		OFF		
<i>MAN</i> (MAN)	Switch to MAN		OFF		
<i>REM</i> (REM)	Switch to REMOTE		OFF		
<i>LCL</i> (LCL)	Switch to LOCAL		OFF		
<i>AT</i> (AT)	Auto-tuning START/STOP switch		OFF		
<i>LAT</i> (LAT)	Latch release		OFF		
<i>LCD</i> (LCD)	LCD backlight ON/OFF switch		OFF		
<i>PVRW</i> (PVRW)	PV red/white switch		OFF		

## ■ DO Setting Parameter (E1/E2/E3-terminal Area)

Menu symbol: *d0* (DO)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>d015</i> (DO1.S)	DO11/DO21/DO31 function selection	Same as AL1.S	See left		
<i>d025</i> (DO2.S)	DO12/DO22/DO32 function selection	Set "OFF" to disable the function.	See left		
<i>d035</i> (DO3.S)	DO13/DO23/DO33 function selection	Initial value: DO11, DO12, DO13, DO14, DO15, DO31, DO32, DO33, DO34, and DO35=OFF	Table below	STD	
<i>d045</i> (DO4.S)	DO14/DO24/DO34 function selection	DO21=4357, DO22=4358, DO23=4359, DO24=4361, DO25=4362	See left		
<i>d055</i> (DO5.S)	DO15/DO25/DO35 function selection	See left	See left		

Use the following table to record DO setting value.

Parameter	E1-terminal Area	E2-terminal Area	E3-terminal Area
DO1.S			
DO2.S			
DO3.S			
DO4.S			
DO5.S			

## ■ PARA (PARA) Parameter

Parameter version

<i>HVER</i> (H.VER)	Product version
<i>SER1</i> (SER1)	Serial number 1
<i>SER2</i> (SER2)	Serial number 2
<i>MAC1</i> (MAC1)	MAC address 1 (E3-terminal area)
<i>MAC2</i> (MAC2)	MAC address 2 (E3-terminal area)
<i>MAC3</i> (MAC3)	MAC address 3 (E3-terminal area)

\* The parameters for Loop-2 are unavailable in Single-loop control.

## ■ Parameter Display Level Parameter

Menu symbol: *LVL* (LVL)

Parameter symbol	Name of Parameter	Setting Range	Initial value	User setting	Display level
<i>LEV1</i> (LEVL)	Parameter display level	EASY: Easy setting mode STD: Standard setting mode PRO: Professional setting mode	STD		EASY

\* For Professional setting mode, see User's Manual.

- Authorised Representative in the EEA and the Importer into the EU/EEA Market  
The Authorised Representative for this product in the EEA and the importer for this product into the EU/EEA market via Yokogawa sale channel is:  
Yokogawa Europe B.V.  
Europeweg 2, 3825 HD Amersfoort, The Netherlands
- Importer for This Product into the Great Britain Market  
In relation to UKCA marking, the importer for this product into the Great Britain market via the YOKOGAWA sales channel is:  
Yokogawa United Kingdom Limited  
Stuart Road Manor Park Runcorn, WA7 1TR, United Kingdom
- Printed Manuals

Model	Description
UT55A, UT52A Digital Indicating Controller (Panel Mounting Type) Operation Guide «Standard Code Model»	IM 05P01C31-11EN
UT55A, UT52A Digital Indicating Controller Operation (Panel Mounting Type)	IM 05P01C31-15EN
UT55A/MDL, UT52A/MDL Digital Indicating Controller (DIN Rail Mounting Type) Operation Guide «Standard Code Model»	IM 05P01C81-11EN
Precautions on the Use of the UTAdvanced Series	IM 05P01A01-11EN

- Electronic Manuals  
You can download the latest manuals from the following website:  
URL: <https://www.yokogawa.com/ns/ut/im/>

Model	Description
UT55A, UT52A Digital Indicating Controller (Panel Mounting Type) Operation Guide «Standard Code Model»	IM 05P01C31-11EN
UT55A, UT52A Digital Indicating Controller (Panel Mounting Type) Operation Guide (Detailed Code Model)	IM 05P01C31-15EN
UT55A/MDL, UT52A/MDL Digital Indicating Controller (DIN Rail Mounting Type) Operation Guide «Standard Code Model»	IM 05P01C81-11EN
UT55A/UT52A Digital Indicating Controller User's Manual	IM 05P01C31-01EN
UTAdvanced Series Communication Interface (RS-485, Ethernet) User's Manual	IM 05P07A01-01EN
UTAdvanced Series Communication Interface (Open Network) User's Manual	IM 05P07A01-02EN
LL50A Parameter Setting Software Installation Manual	IM 05P05A01-01EN
LL50A Parameter Setting Software User's Manual	IM 05P05A01-02EN
Precautions on the Use of the UTAdvanced Series	IM 05P01A01-11EN

## ■ General Specification

Model	Description
UT55A, UT52A Digital Indicating Controller (Panel Mounting Type)	GS 05P01C31-01EN