

# SIEMENS



Manual

## SIMATIC

### S7-1500 / ET 200MP

Digital output module  
DQ 64x24VDC/0.3A BA (6ES7522-1BP00-0AA0)

Edition

07/2020

[support.industry.siemens.com](http://support.industry.siemens.com)

# SIEMENS

## SIMATIC

### S7-1500/ET 200MP Digital output module DQ 64x24VDC/0.3A BA (6ES7522-1BP00-0AA0)

Equipment Manual

#### Preface

---

S7-1500 / ET 200MP  
Documentation Guide

1

Product overview

2

Wiring

3

Address space

4

Diagnostics alarms

5

Technical specifications

6




Dimensional drawing

A

## Legal information

### Warning notice system

This manual contains notices you have to observe in order to ensure your personal safety, as well as to prevent damage to property. The notices referring to your personal safety are highlighted in the manual by a safety alert symbol, notices referring only to property damage have no safety alert symbol. These notices shown below are graded according to the degree of danger.

 <b>DANGER</b>
indicates that death or severe personal injury <b>will</b> result if proper precautions are not taken.
 <b>WARNING</b>
indicates that death or severe personal injury <b>may</b> result if proper precautions are not taken.
 <b>CAUTION</b>
indicates that minor personal injury can result if proper precautions are not taken.
<b>NOTICE</b>
indicates that property damage can result if proper precautions are not taken.


If more than one degree of danger is present, the warning notice representing the highest degree of danger will be used. A notice warning of injury to persons with a safety alert symbol may also include a warning relating to property damage.

### Qualified Personnel

The product/system described in this documentation may be operated only by **personnel qualified** for the specific task in accordance with the relevant documentation, in particular its warning notices and safety instructions. Qualified personnel are those who, based on their training and experience, are capable of identifying risks and avoiding potential hazards when working with these products/systems.

### Proper use of Siemens products

Note the following:

 <b>WARNING</b>
Siemens products may only be used for the applications described in the catalog and in the relevant technical documentation. If products and components from other manufacturers are used, these must be recommended or approved by Siemens. Proper transport, storage, installation, assembly, commissioning, operation and maintenance are required to ensure that the products operate safely and without any problems. The permissible ambient conditions must be complied with. The information in the relevant documentation must be observed.

### Trademarks

All names identified by ® are registered trademarks of Siemens AG. The remaining trademarks in this publication may be trademarks whose use by third parties for their own purposes could violate the rights of the owner.

### Disclaimer of Liability

We have reviewed the contents of this publication to ensure consistency with the hardware and software described. Since variance cannot be precluded entirely, we cannot guarantee full consistency. However, the information in this publication is reviewed regularly and any necessary corrections are included in subsequent editions.

# Preface

## Purpose of the documentation

This manual supplements the system manual S7-1500/ET 200MP (<https://support.industry.siemens.com/cs/ww/en/view/59191792>).

Functions that relate in general to the systems are described in this system manual.

The information provided in this manual and in the system/function manuals supports you in commissioning the systems.

## Conventions

The term "CPU" is used in this manual both for the CPUs of the S7-1500 automation system and for interface modules of the ET 200MP distributed I/O system.

Also observe notes marked as follows:

---

### Note

A note contains important information on the product described in the documentation, on the handling of the product or on the section of the documentation to which particular attention should be paid.

---

## Security information

Siemens provides products and solutions with industrial security functions that support the secure operation of plants, systems, machines and networks.

In order to protect plants, systems, machines and networks against cyber threats, it is necessary to implement – and continuously maintain – a holistic, state-of-the-art industrial security concept. Siemens' products and solutions constitute one element of such a concept.

Customers are responsible for preventing unauthorized access to their plants, systems, machines and networks. Such systems, machines and components should only be connected to an enterprise network or the internet if and to the extent such a connection is necessary and only when appropriate security measures (e.g. firewalls and/or network segmentation) are in place.

For additional information on industrial security measures that may be implemented, please visit (<https://www.siemens.com/industrialsecurity>).

Siemens' products and solutions undergo continuous development to make them more secure. Siemens strongly recommends that product updates are applied as soon as they are available and that the latest product versions are used. Use of product versions that are no longer supported, and failure to apply the latest updates may increase customers' exposure to cyber threats.

To stay informed about product updates, subscribe to the Siemens Industrial Security RSS Feed visit (<https://www.siemens.com/industrialsecurity>).

## Open Source Software

Open-source software is used in the firmware of the I/O modules. Open Source Software is provided free of charge. We are liable for the product described, including the open-source software contained in it, pursuant to the conditions applicable to the product. Siemens accepts no liability for the use of the open source software over and above the intended program sequence, or for any faults caused by modifications to the software.


For legal reasons, we are obliged to publish the original text of the license conditions and copyright notices. Please read the information relating to this on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/109757558>).

# Table of contents

	<b>Preface</b> .....	<b>3</b>
<b>1</b>	<b>S7-1500 / ET 200MP Documentation Guide</b> .....	<b>6</b>
<b>2</b>	<b>Product overview</b> .....	<b>8</b>
	2.1 Properties .....	8
<b>3</b>	<b>Wiring</b> .....	<b>10</b>
	3.1 Wiring and block diagram .....	10
	3.2 Terminal assignment X10 and X11 .....	11
	3.3 Connecting a module with a connection module .....	14
	3.4 Wiring of the module .....	15
	3.5 Fuse .....	17
<b>4</b>	<b>Address space</b> .....	<b>18</b>
<b>5</b>	<b>Diagnostics alarms</b> .....	<b>25</b>
	5.1 Status and error displays .....	25
<b>6</b>	<b>Technical specifications</b> .....	<b>27</b>
<b>A</b>	<b>Dimensional drawing</b> .....	<b>31</b>

# S7-1500 / ET 200MP Documentation Guide

The documentation for the SIMATIC S7-1500 automation system and the SIMATIC ET 200MP distributed I/O system is arranged into three areas. This arrangement enables you to access the specific content you require.

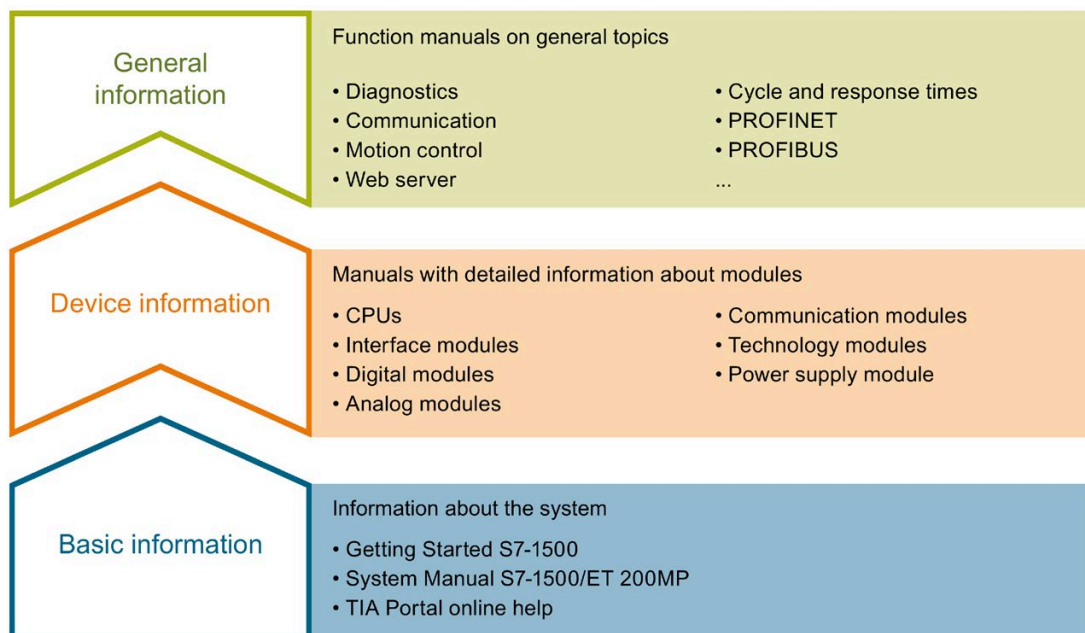

## Basic information

The System Manual and Getting Started describe in detail the configuration, installation, wiring and commissioning of the SIMATIC S7-1500 and ET 200MP systems. The STEP 7 online help supports you in the configuration and programming.

## Device information

Product manuals contain a compact description of the module-specific information, such as properties, wiring diagrams, characteristics and technical specifications.

## General information

The function manuals contain detailed descriptions on general topics regarding the SIMATIC S7-1500 and ET 200MP systems, e.g. diagnostics, communication, motion control, Web server, OPC UA.

You can download the documentation free of charge from the Internet (<https://support.industry.siemens.com/cs/ww/en/view/109742691>).

Changes and supplements to the manuals are documented in a Product Information.

You can download the product information free of charge from the Internet (<https://support.industry.siemens.com/cs/us/en/view/68052815>).

## Manual Collection S7-1500/ET 200MP

The Manual Collection contains the complete documentation on the SIMATIC S7-1500 automation system and the ET 200MP distributed I/O system gathered together in one file.

You can find the Manual Collection on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/86140384>).

## SIMATIC S7-1500 comparison list for programming languages

The comparison list contains an overview of which instructions and functions you can use for which controller families.

You can find the comparison list on the Internet (<https://support.industry.siemens.com/cs/ww/en/view/86630375>).

## "mySupport"

With "mySupport", your personal workspace, you make the best out of your Industry Online Support.

In "mySupport", you can save filters, favorites and tags, request CAx data and compile your personal library in the Documentation area. In addition, your data is already filled out in support requests and you can get an overview of your current requests at any time.

You must register once to use the full functionality of "mySupport".

You can find "mySupport" on the Internet (<https://support.industry.siemens.com/My/ww/en>).

## Application examples

The application examples support you with various tools and examples for solving your automation tasks. Solutions are shown in interplay with multiple components in the system - separated from the focus on individual products.

You will find the application examples on the Internet (<https://support.industry.siemens.com/sc/ww/en/sc/2054>).



## Product overview

### 2.1 Properties

#### Article number

6ES7522-1BP00-0AA0

#### View of the module

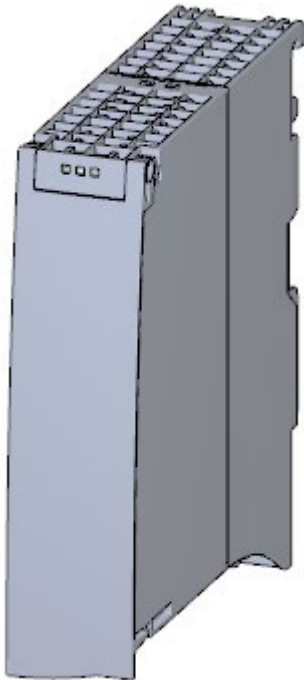


Figure 2-1 View of the DQ 64x24VDC/0.3A BA module

#### Properties

The digital module has the following technical properties:

- 64 digital outputs, electrically isolated in 4 groups of 16
  - P switching (sourcing)
- Rated output voltage 24 V DC
- Rated output current 0.3 A per channel
- Suitable for solenoid valves, DC contactors, and indicator lights

The module supports the following functions:

Table 2-1 Version dependencies of the module functions

Function	Firmware version of the module	Configuration software	
		STEP 7 (TIA Portal) as of V16 and HSP 0319	GSD file in STEP 7 (TIA Portal) V12 or higher, or STEP 7 V5.5 SP3 or higher
Firmware update	V1.0.0 or higher	X	--- / X
Identification data I&M0 to I&M3	V1.0.0 or higher	X	X
Module-internal Shared Output (MSO)	V1.0.0 or higher	X (PROFINET IO only)	X (PROFINET IO only)
Configurable submodules / submodules for Shared Device	V1.0.0 or higher	X (PROFINET IO only)	X (PROFINET IO only)

You can configure the module with STEP 7 (TIA Portal) and with a GSD file.

## Accessories

The following accessories are supplied with the module and can be ordered as spare parts:

- U connector
- Universal front door with the article number: 6ES7 591-8AA00-0AA0

You can find additional information in the system manual S7-1500/ET 200MP (<https://support.industry.siemens.com/cs/ww/en/view/59191792>).

## Other components

The following must be ordered separately:

- SIMATIC TOP connect connection module
- Pre-fabricated connecting cable with IDC connectors

For additional information, see section Connecting a module with a connection module (Page 14)

## Wiring


### 3.1 Wiring and block diagram

This section contains the block diagram of the module and the terminal assignment.

#### Wiring and block diagram

The following figure shows the terminal assignment and the assignment of the channels.

- Outputs: Channel 0 to 31 to connector X10.
- Outputs: Channel 32 to 63 to connector X11

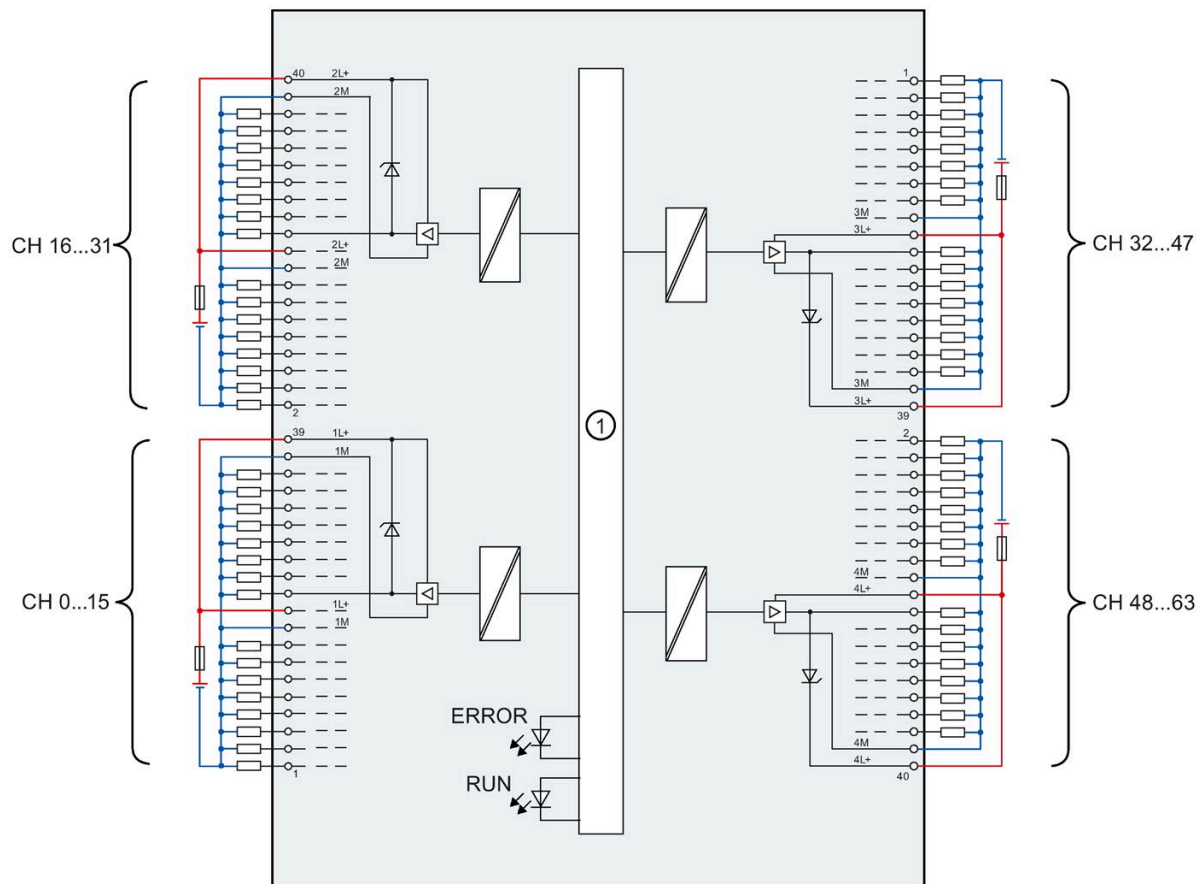

①	Backplane bus interface	CHx	Channel
		RUN	Status display LED (green)
		ERROR	Error display LED (red)

Figure 3-1 Block diagram and terminal assignment

### 3.2 Terminal assignment X10 and X11.

The following figure shows the assignment of the channels to the addresses.

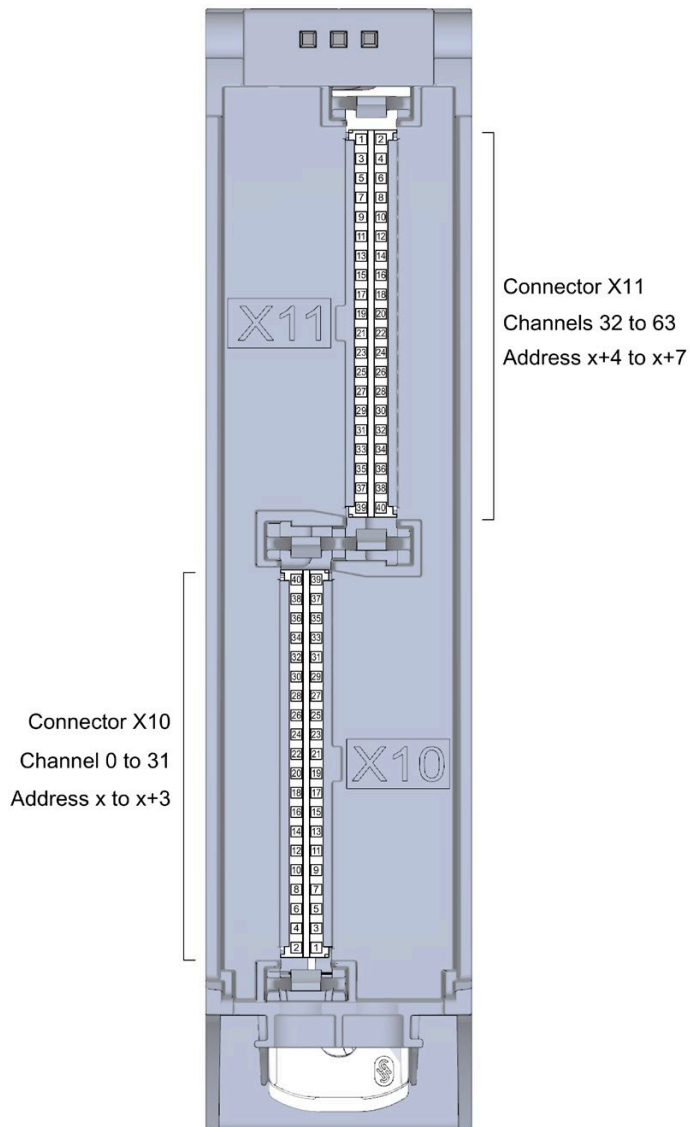


Figure 3-2 Front view of the module without front door

### Terminal and address assignment

For connecting actuators, we recommend using the SIMATIC TOP connect pre-assembled connecting cables and SIMATIC TOP connect connection modules. However, if you choose another wiring option, you will need the following tables.

Table 3-1 Assignment for connector X10 of the module

Assignment for outputs to X10					
Terminal	Channel	Address	Terminal	Channel	Address
40	2L+	---	39	1L+	---
38	2M	---	37	1M	---
36	Channel 31	x+3.7	35	Channel 15	x+1.7
34	Channel 30	x+3.6	33	Channel 14	x+1.6
32	Channel 29	x+3.5	31	Channel 13	x+1.5
30	Channel 28	x+3.4	29	Channel 12	x+1.4
28	Channel 27	x+3.3	27	Channel 11	x+1.3
26	Channel 26	x+3.2	25	Channel 10	x+1.2
24	Channel 25	x+3.1	23	Channel 9	x+1.1
22	Channel 24	x+3.0	21	Channel 8	x+1.0
20	2L+	---	19	1L+	---
18	2M	---	17	1M	---
16	Channel 23	x+2.7	15	Channel 7	x.7
14	Channel 22	x+2.6	13	Channel 6	x.6
12	Channel 21	x+2.5	11	Channel 5	x.5
10	Channel 20	x+2.4	9	Channel 4	x.4
8	Channel 19	x+2.3	7	Channel 3	x.3
6	Channel 18	x+2.2	5	Channel 2	x.2
4	Channel 17	x+2.1	3	Channel 1	x.1
2	Channel 16	x+2.0	1	Channel 0	x.0

Table 3- 2 Assignment for the connector X11 of the module

Assignment for outputs to X11					
Terminal	Channel	Address	Terminal	Channel	Address
1	Channel 32	x+4.0	2	Channel 48	x+6.0
3	Channel 33	x+4.1	4	Channel 49	x+6.1
5	Channel 34	x+4.2	6	Channel 50	x+6.2
7	Channel 35	x+4.3	8	Channel 51	x+6.3
9	Channel 36	x+4.4	10	Channel 52	x+6.4
11	Channel 37	x+4.5	12	Channel 53	x+6.5
13	Channel 38	x+4.6	14	Channel 54	x+6.6
15	Channel 39	x+4.7	16	Channel 55	x+6.7
17	3M	---	18	4M	---
19	3L+	---	20	4L+	---
21	Channel 40	x+5.0	22	Channel 56	x+7.0
23	Channel 41	x+5.1	24	Channel 57	x+7.1
25	Channel 42	x+5.2	26	Channel 58	x+7.2
27	Channel 43	x+5.3	28	Channel 59	x+7.3
29	Channel 44	x+5.4	30	Channel 60	x+7.4
31	Channel 45	x+5.5	32	Channel 61	x+7.5
33	Channel 46	x+5.6	34	Channel 62	x+7.6
35	Channel 47	x+5.7	36	Channel 63	x+7.7
37	3M	---	38	4M	---
39	3L+	---	40	4L+	---

### 3.3 Connecting a module with a connection module

#### Component for connecting

To connect actuators, you need 2 connection modules per module. The connection modules are connected to the module with pre-assembled connecting cables.

You can find additional information on the components of the SIMATIC TOP connect system cabling, e.g. for connecting connection modules, in the equipment manual SIMATIC TOP connect for S7-1500 and ET 200MP

(<https://support.industry.siemens.com/cs/ww/en/view/95924607>).

---

**Note**

**Common supply**

If you use the listed SIMATIC TOP connect connection modules, then all 32 channels of a connection module have a common supply. This means that 2 groups of 16 channels each are supplied by common potential.

---

You can find the required components in the tables below.

Table 3- 3 SIMATIC TOP connect connection module

Components	Type	Description	Connection technology	Article number	Delivery quantity
Connection modules for digital outputs	TP1	1-wire connection, without LED	- Screw terminals - Push-in system	6ES7924-2AA20-0AA0 6ES7924-2AA20-0CA0	Pack of 1 Pack of 1
		1-wire connection, with LED	- Screw terminals - Push-in system	6ES7924-2AA20-0BA0 6ES7924-2AA20-0BC0	Pack of 1 Pack of 1
	TP3	3-wire connection, without LED	- Screw terminals - Push-in system	6ES7924-2CA20-0AA0 6ES7924-2CA20-0AC0	Pack of 1 Pack of 1
		3-wire connection, with LED	- Screw terminals - Push-in system	6ES7924-2CA20-0BA0 6ES7924-2CA20-0BC0	Pack of 1 Pack of 1

Table 3- 4 Connecting cables SIMATIC TOP connect

Components	Length	Article number	Delivery quantity
Pre-assembled connecting cable with IDC connector on both ends  <ul style="list-style-type: none"> <li>• IDC connector 40-pin for the I/O module</li> <li>• IDC connector 50-pin for the SIMATIC TOP connect connection module</li> </ul>	1.0 m	6ES7923-5BB00-0GB0	Pack of 1
	2.0 m	6ES7923-5BC00-0GB0	Pack of 1
	2.5 m	6ES7923-5BC50-0GB0	Pack of 1
	3.0 m	6ES7923-5BD00-0GB0	Pack of 1

## Support for selecting hardware components

We recommend you use the TIA Selection Tool for planning your project. The TIA Selection Tool is available free of charge as a desktop version for download or as a cloud version, refer to the Internet (<https://new.siemens.com/global/en/products/automation/topic-areas/tia/tia-selection-tool.html>).

## 3.4 Wiring of the module

### Requirement

- The I/O modules are installed on the mounting rail.
- The supply voltage of the station is switched off.

### Procedure

1. Plug the two SIMATIC TOP connect connecting cables with the **40-pin** IDC connector into X10 and X11.

Note when plugging:

- ① The nob on the left edge of connector X11
- ② The nob on the right edge of connector X10

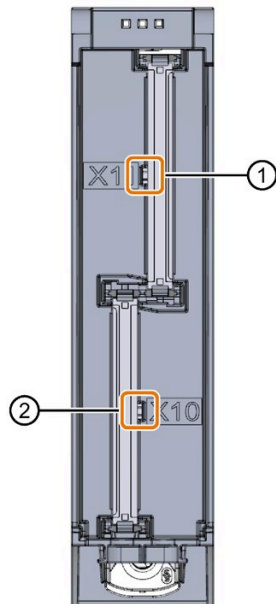


Figure 3-3 Connect the SIMATIC TOP connect 40-pin connecting cable to the module

2. Guide the SIMATIC TOP connect connecting cables down to the module.
3. Guide a cable tie around the module at the fixing points and connect the SIMATIC TOP connect cables.



4. Tighten the cable tie for the strain relief.

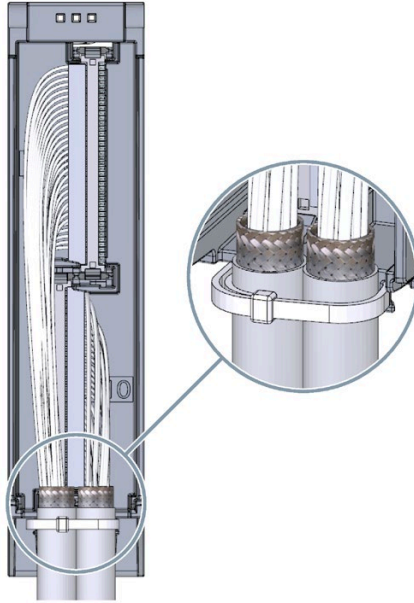


Figure 3-4 Fastening the cable tie for the strain relief

5. Plug the SIMATIC TOP connect connecting cables with the **50-pin** IDC connector into the SIMATIC TOP connect connection module.


### Additional information

You can find out how to wire the SIMATIC TOP connect connection module in the equipment manual SIMATIC TOP connect for S7-1500 and ET 200MP (<https://support.industry.siemens.com/cs/ww/en/view/95924607>).

### 3.5 Fuse

#### Miniature circuit breaker

The supply lines are to be protected with a 6 A miniature circuit breaker with tripping characteristic B.

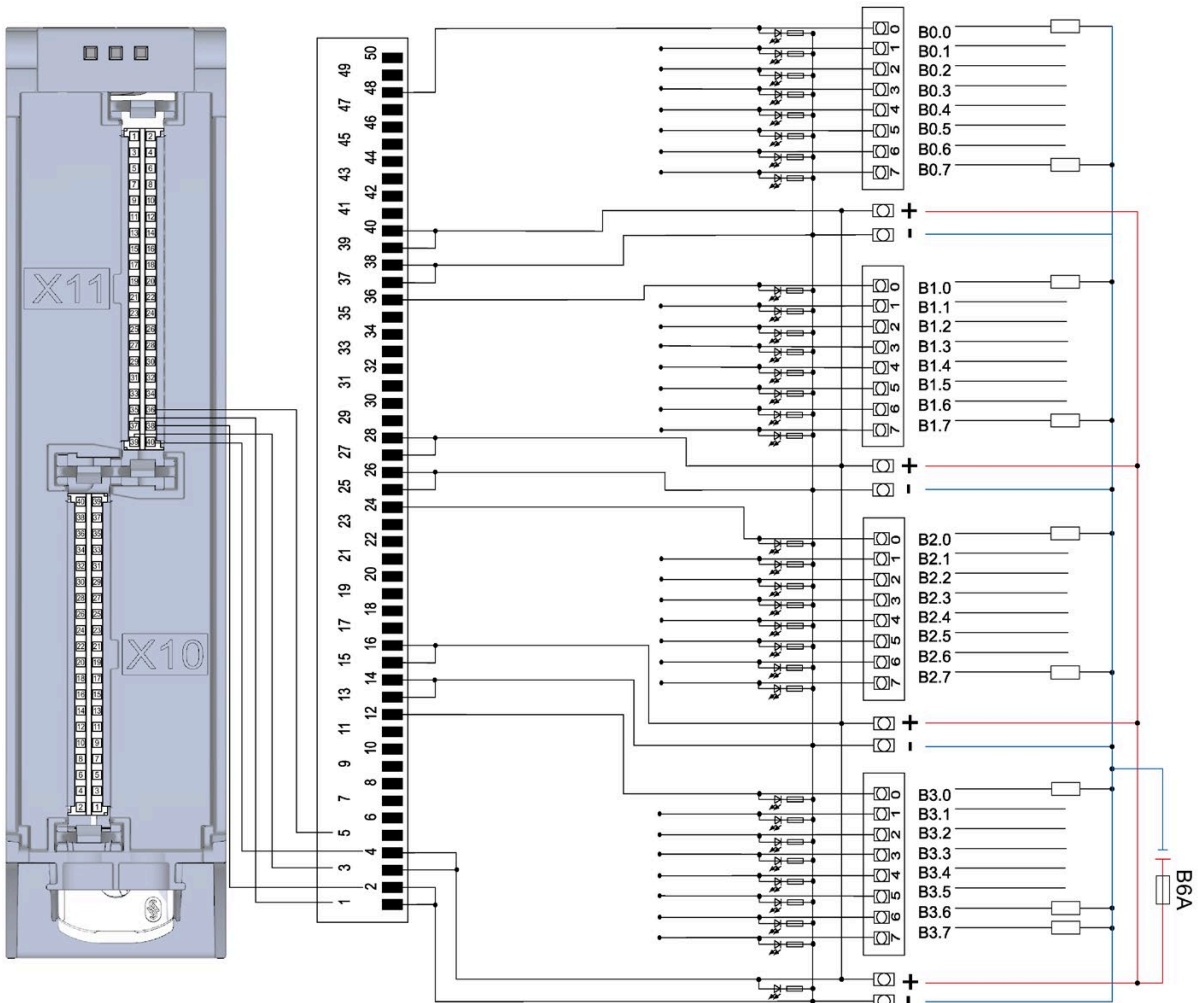

## Address space

The module can be configured in various ways in STEP 7. Depending on the configuration, additional/different addresses are assigned in the process image output/input.

### Configuration options of DQ 64x24VDC/0.3A BA

You can configure the module with STEP 7 (TIA Portal) or with a GSD file.

When you configure the module by means of the GSD file, the configurations are available under different short designations/module names.

The following configurations are possible:

Table 4- 1 Configuration options

Configuration	Short designation/module name in the GSD file	Configuration software, e.g., with STEP 7 (TIA Portal)	
		Integrated in the hardware catalog of STEP 7 (TIA Portal) as of V16 and HSP 0319	GSD file in STEP 7 (TIA Portal) V12 or higher or STEP 7 V5.5 SP3 or higher
1 x 64-channel without value status	DQ 64x24VDC/0.3A BA	X	X
8 x 8-channel without value status	DQ 64x24VDC/0.3A BA S	X (PROFINET IO only)	X (PROFINET IO only)
1 x 64-channel with value status for module-internal Shared Output (MSO) with up to 4 sub-modules	DQ 64x24VDC/0.3A BA MSO	X (PROFINET IO only)	X (PROFINET IO only)

## Address space for configuration as 1 x 64-channel DQ 64x24VDC/0.3A BA

The figure below shows the address space assignment for configuration as a 1 x 64-channel module. You can freely assign the start address for the module. The addresses of the channels are derived from the start address.

"QB a" stands for module start address output byte a.

Assignment in the process image output (PIQ)

	7	6	5	4	3	2	1	0	Output value:
QB a									Channels 0 to 7 (output CH0 to CH7)
	15						8		
QB =a+1									Channels 8 to 15 (output CH8 to CH15)
	23						16		
QB =a+2									Channels 16 to 23 (output CH16 to CH23)
	31						24		
QB =a+3									Channels 24 to 31 (output CH24 to CH31)
	39						32		
QB =a+4									Channels 32 to 39 (output CH32 to CH39)
	47						40		
QB =a+5									Channels 40 to 47 (output CH40 to CH47)
	55						48		
QB =a+6									Channels 48 to 55 (output CH48 to CH55)
	63						56		
QB =a+7									Channels 56 to 63 (output CH56 to CH63)

Figure 4-1 Address space for configuration as 1 x 64-channel DQ 64x24VDC/0.3A BA

### Address space for configuration as 8 x 8-channel DQ 64x24VDC/0.3A BA S

For the configuration as an 8 x 8-channel module, the channels of the module are divided into multiple submodules. The submodules can be assigned to different IO controllers when the module is used in a shared device.

The number of usable IO controllers depends on the interface module used. Please observe the information in the manual for the particular interface module.

Unlike the 1 x 64-channel module configuration, each of the eight submodules has a freely assignable start address.

Assignment in the process image output (PIQ)

	7 6 5 4 3 2 1 0	Output value:	
QB a	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 0 to 7 (output CH0 to CH7)	1st submodule
QB b	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 8 to 15 (output CH8 to CH15)	2nd submodule
QB c	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 16 to 23 (output CH16 to CH23)	3rd submodule
QB d	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 24 to 31 (output CH24 to CH31)	4th submodule
QB e	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 32 to 39 (output CH32 to CH39)	5th submodule
QB f	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 40 to 47 (output CH40 to CH47)	6th submodule
QB g	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 48 to 55 (output CH48 to CH55)	7th submodule
QB h	<input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>	Channels 56 to 63 (output CH56 to CH63)	8th submodule

0 = Value output at the channel is faulty

Figure 4-2 Address space for configuration as 8 x 8-channel DQ 64x24VDC/0.3A BA S

## Address space for configuration as 1 x 64-channel DQ 64x24VDC/0.3A BA MSO

For the configuration as a 1 x 64-channel module (module-internal Shared Output, MSO), channels 0 to 63 of the module are copied to multiple submodules. Channels 0 to 63 are then available with identical values in various submodules. These submodules can be assigned to up to four IO controllers when the module is used in a shared device:

- The IO controller to which submodule 1 is assigned has write access to outputs 0 to 63.
- The IO controllers to which submodule 2, 3, or 4 is assigned have read access to outputs 0 to 63.

The number of usable IO controllers depends on the interface module used. Please observe the information in the manual for the particular interface module.

### Value status (Quality Information, QI)

The meaning of the value status depends on the submodule involved.

For the 1st submodule (=basic submodule), the value status 1 indicates that the output value specified by the user program is actually output at the module terminal.

Possible causes for value status = 0:

- Value is incorrect, for example, because the supply voltage is missing.
- IO controller of the basic submodule is in STOP mode.



For the 2nd to 4th submodule (=MSO submodule), the value status 1 indicates that the output value specified by the user program is actually output at the module terminal.

Possible causes for value status = 0:

- Value is incorrect, for example, because the supply voltage is missing.
- IO controller of the basic submodule is in STOP mode.
- The basic submodule is not yet configured.

The figure below shows the assignment of the address space for submodules 1 and 2.

Assignment in the process image of the outputs (PIO) for 1st submodule

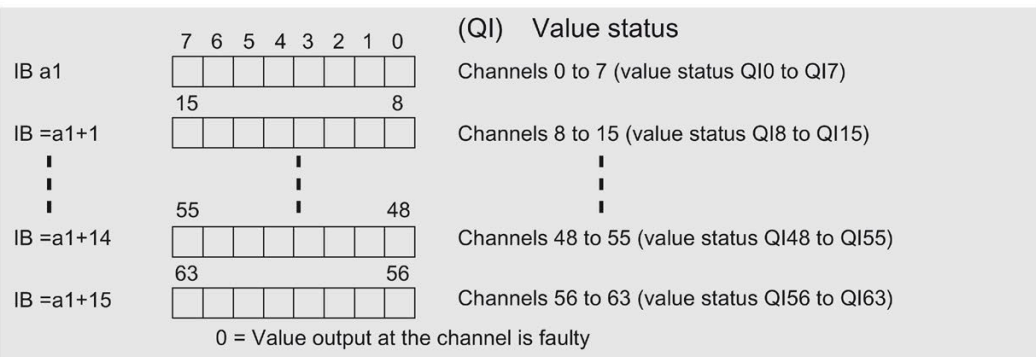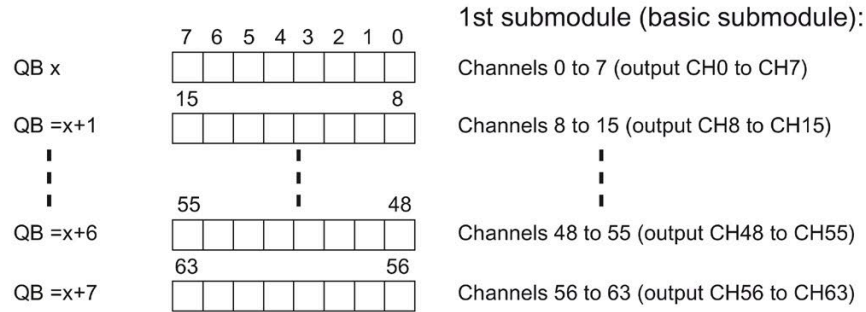

Assignment in the process image input (PII) for 2nd submodule



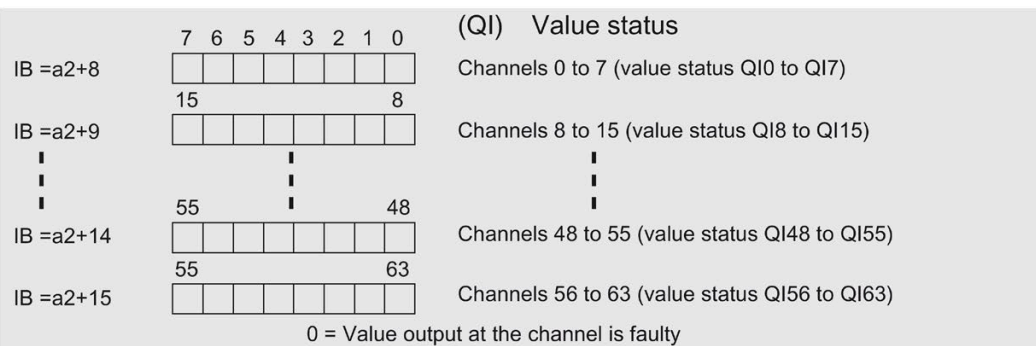


Figure 4-3 Address space for configuration as 1 x 64-channel DQ 64x24VDC/0.3A BA MSO with value status

The figure below shows the assignment of the address space with submodules 3 and 4.

Assignment in the process image input (PII) for 3rd submodule

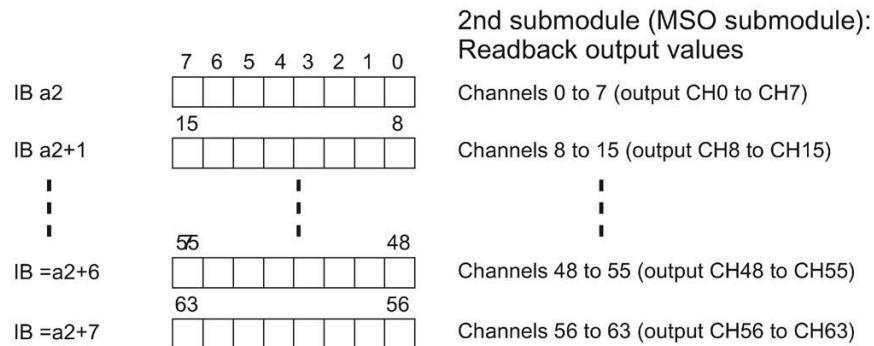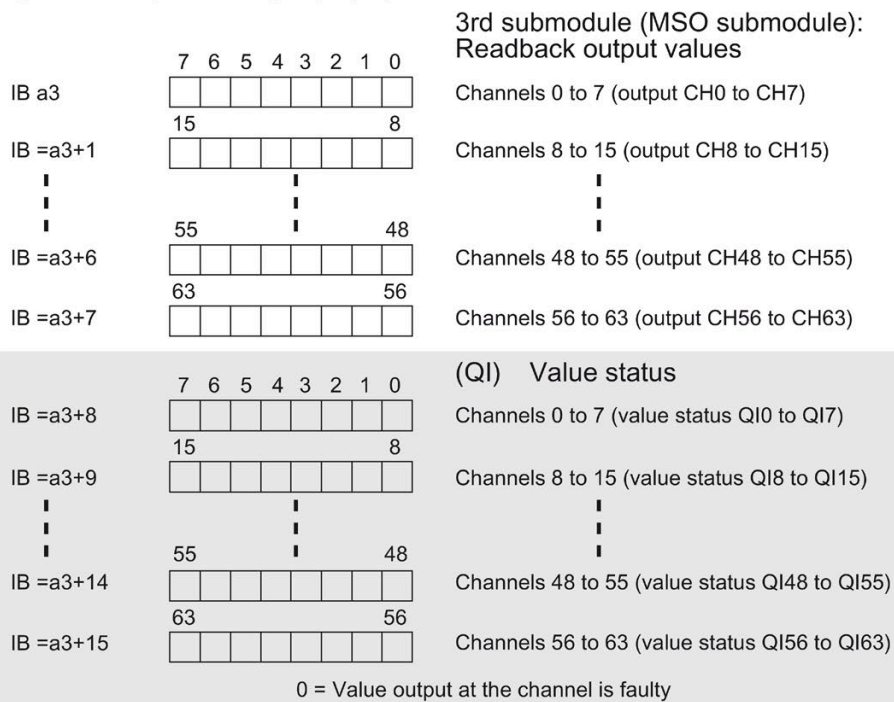

Assignment in the process image input (PII) for 4th submodule

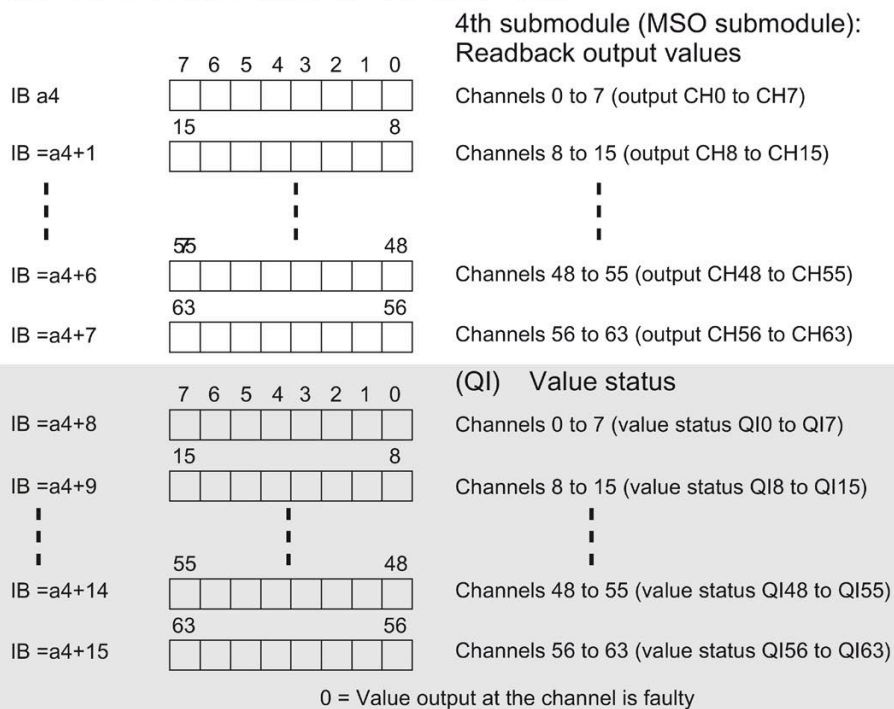


Figure 4-4 Address space for configuration as 1 x 64-channel DQ 64x24VDC/0.3A BA MSO with value status



## Reference

You can find information on the Shared Input/Output (MSI/MSO) function in the section Module-Internal Shared Input/Output (MSI/MSO) of the PROFINET with STEP 7 V16 (<https://support.industry.siemens.com/cs/ww/en/view/49948856>) function manual.

## Diagnostics alarms

The module has no selectable diagnostics. Diagnostics alarms, for example, cannot be output with STEP 7 (TIA Portal).

### 5.1 Status and error displays

#### LED displays

The figure below shows the LED displays (status and error displays) of DQ 64x24VDC/0.3A BA.

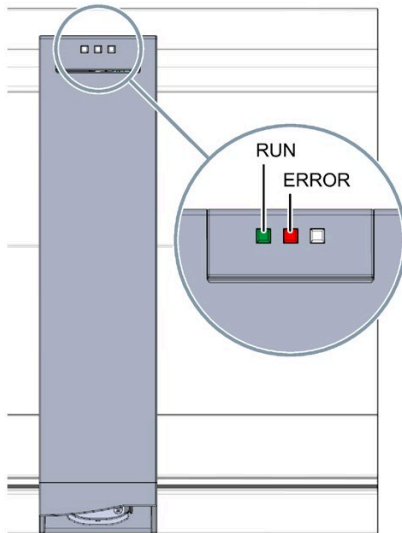










Figure 5-1 LED displays of the module DQ 64x24VDC/0.3A BA

## Meaning of the LED displays

The tables below explain the meaning of the status and error displays.

### LED RUN/ERROR

Table 5- 1 RUN/ERROR status and error displays

LED		Meaning	Remedy
RUN	ERROR		
 Off	 Off	Voltage missing or too low at backplane bus.	<ul style="list-style-type: none"> <li>Switch on the CPU and/or the system power supply modules.</li> <li>Verify that the U connectors are inserted.</li> <li>Check whether too many modules are inserted.</li> </ul>
 Flashes	 Off	Module is starting up.	---
 On	 Off	Module is ready.	
 Flashes	 Flashes	Hardware defective.	Replace the module.

## Technical specifications

### Technical specifications of DQ 64x24VDC/0.3A BA

The following table shows the technical specifications as of 07/2020. You can find a data sheet including daily updated technical specifications on the Internet (<https://support.industry.siemens.com/cs/ww/en/ps/td>).

Enter the article number or the short designation of the module on the website.

<b>Article number</b>	<b>6ES7522-1BP00-0AA0</b>
<b>General information</b>	
Product type designation	DQ 64x24VDC/0.3A BA
HW functional status	From FS01
Firmware version	V1.0.0
• FW update possible	Yes
<b>Product function</b>	
• I&M data	Yes; I&M0 to I&M3
• Isochronous mode	No
• Prioritized startup	No
<b>Engineering with</b>	
• STEP 7 TIA Portal configurable/integrated from version	V16 with HSP 0319 / V17
• STEP 7 configurable/integrated from version	V5.5 SP3 / -
• PROFIBUS from GSD version/GSD revision	V1.0 / V5.1
<b>Operating mode</b>	
• DQ	Yes
• DQ with energy-saving function	No
• PWM	No
• Cam control (switching at comparison values)	No
• Oversampling	No
• MSO	Yes
• Integrated operating cycle counter	No

<b>Article number</b>	<b>6ES7522-1BP00-0AA0</b>
<b>Supply voltage</b>	
Rated value (DC)	24 V
permissible range, lower limit (DC)	19.2 V
permissible range, upper limit (DC)	28.8 V
Reverse polarity protection	Yes; through internal protection with 7 A per group
<b>Input current</b>	
Current consumption, max.	90 mA; without load
<b>Output voltage</b>	
Rated value (DC)	24 V
<b>Power</b>	
Power available from the backplane bus	0.6 W
<b>Power loss</b>	
Power loss, typ.	3.5 W
<b>Digital outputs</b>	
Type of digital output	Transistor
Number of digital outputs	64
Current-sinking	No
Current-sourcing	Yes
Digital outputs, parameterizable	No
Short-circuit protection	Yes
Limitation of inductive shutdown voltage to	L+ (-53 V)
Controlling a digital input	Yes
<b>Switching capacity of the outputs</b>	
• with resistive load, max.	0.3 A
• on lamp load, max.	5 W
<b>Load resistance range</b>	
• lower limit	80 Ω
• upper limit	10 kΩ
<b>Output voltage</b>	
• for signal "1", min.	L+ (-0.8 V)
<b>Output current</b>	
• for signal "1" rated value	0.3 A
• for signal "1" permissible range, max.	0.3 A
• for signal "0" residual current, max.	0.5 mA
<b>Output delay with resistive load</b>	
• "0" to "1", max.	100 μs
• "1" to "0", max.	500 μs

<b>Article number</b>	<b>6ES7522-1BP00-0AA0</b>
<b>Parallel switching of two outputs</b>	
• for logic links	Yes
• for uprating	No
• for redundant control of a load	Yes
<b>Switching frequency</b>	
• with resistive load, max.	100 Hz
• with inductive load, max.	0.5 Hz; According to IEC 60947-5-1, DC-13
• on lamp load, max.	10 Hz
<b>Total current of the outputs</b>	
• Current per channel, max.	0.3 A
• Current per group, max.	2 A
• Current per module, max.	8 A
<b>Total current of the outputs (per module)</b>	
<b>horizontal installation</b>	
– up to 60 °C, max.	8 A
<b>vertical installation</b>	
– up to 40 °C, max.	8 A
<b>Cable length</b>	
• shielded, max.	1 000 m
• unshielded, max.	600 m
<b>Interrupts/diagnostics/status information</b>	
Diagnostics function	No
Substitute values connectable	No
<b>Alarms</b>	
• Diagnostic alarm	No
• Maintenance interrupt	No
<b>Diagnostic messages</b>	
• Monitoring the supply voltage	No
• Wire-break	No
• Short-circuit	No
• Group error	No

<b>Article number</b>	<b>6ES7522-1BP00-0AA0</b>
<b>Diagnostics indication LED</b>	
• RUN LED	Yes; green LED
• ERROR LED	Yes; red LED
• MAINT LED	No
• Monitoring of the supply voltage (PWR-LED)	Yes; via SIMATIC TOP connect connection module
• Channel status display	Yes; via SIMATIC TOP connect connection module
• for channel diagnostics	No
• for module diagnostics	No
<b>Potential separation</b>	
<b>Potential separation channels</b>	
• between the channels	No
• between the channels, in groups of	16; 32 when using SIMATIC TOP connect connection module
• between the channels and backplane bus	Yes
<b>Isolation</b>	
Isolation tested with	707 V DC (type test)
<b>Standards, approvals, certificates</b>	
Suitable for safety functions	No
Suitable for safety-related tripping of standard modules	No
<b>Ambient conditions</b>	
<b>Ambient temperature during operation</b>	
• horizontal installation, min.	-30 °C
• horizontal installation, max.	60 °C
• vertical installation, min.	-30 °C
• vertical installation, max.	40 °C
<b>Altitude during operation relating to sea level</b>	
• Installation altitude above sea level, max.	5 000 m
<b>Dimensions</b>	
Width	35 mm
Height	147 mm
Depth	129 mm
<b>Weights</b>	
Weight, approx.	270 g
<b>Other</b>	
Note:	Please order cable and connection modules separately

# Dimensional drawing

# A

The dimensional drawing of the module on the mounting rail, as well as a dimensional drawing with open front cover, are provided in this appendix. Always observe the specified dimensions for installation in cabinets, control rooms, etc.

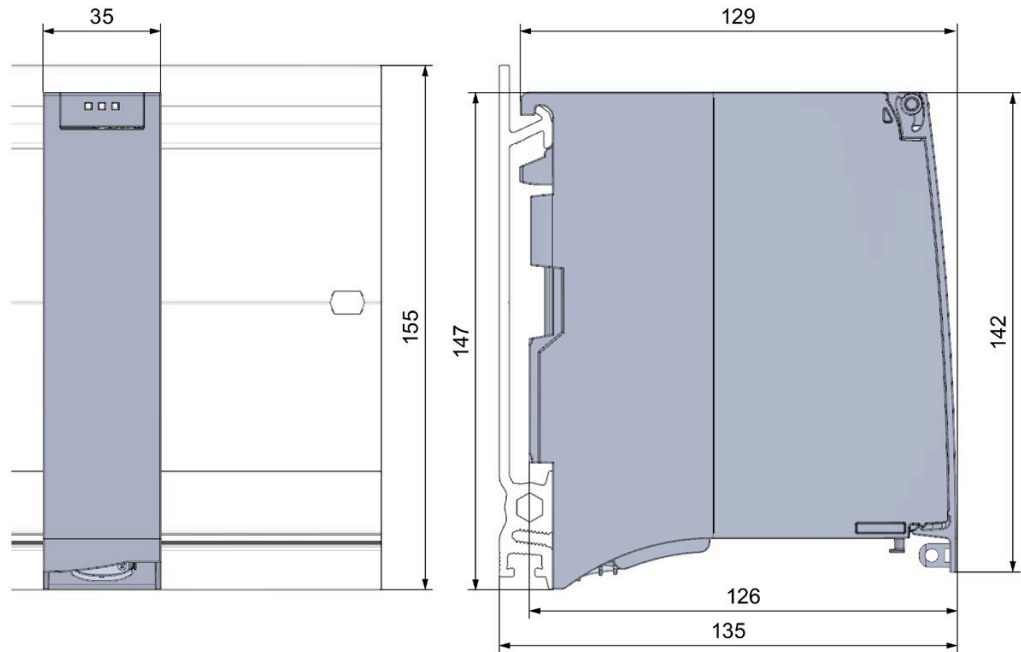


Figure A-1 Dimensional drawing of the DQ 64x24VDC/0.3A BA module



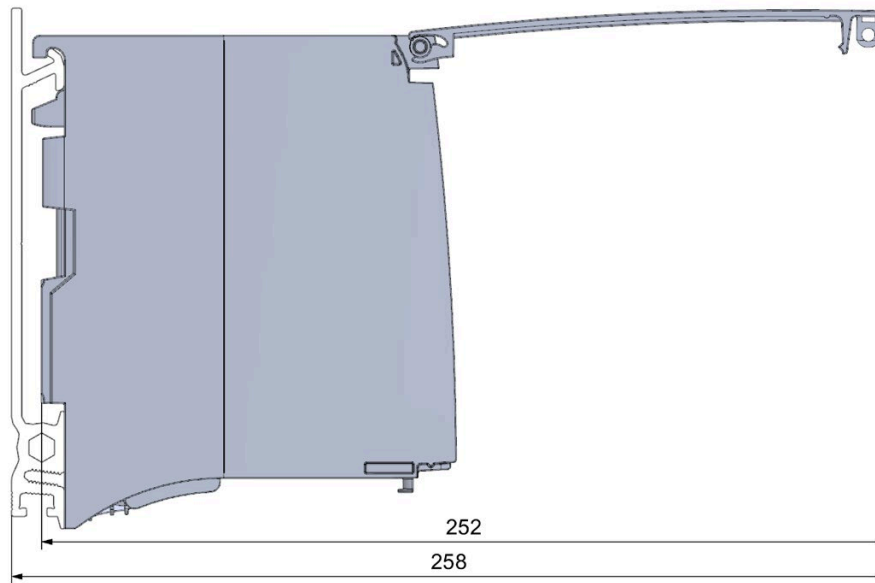


Figure A-2 Dimension drawing of the DQ 64x24VDC/0.3A BA module, side view with open front cover