


Schneider OffGrid Portable Power Station

User Manual

PPS330

EN TME44185

09/2024

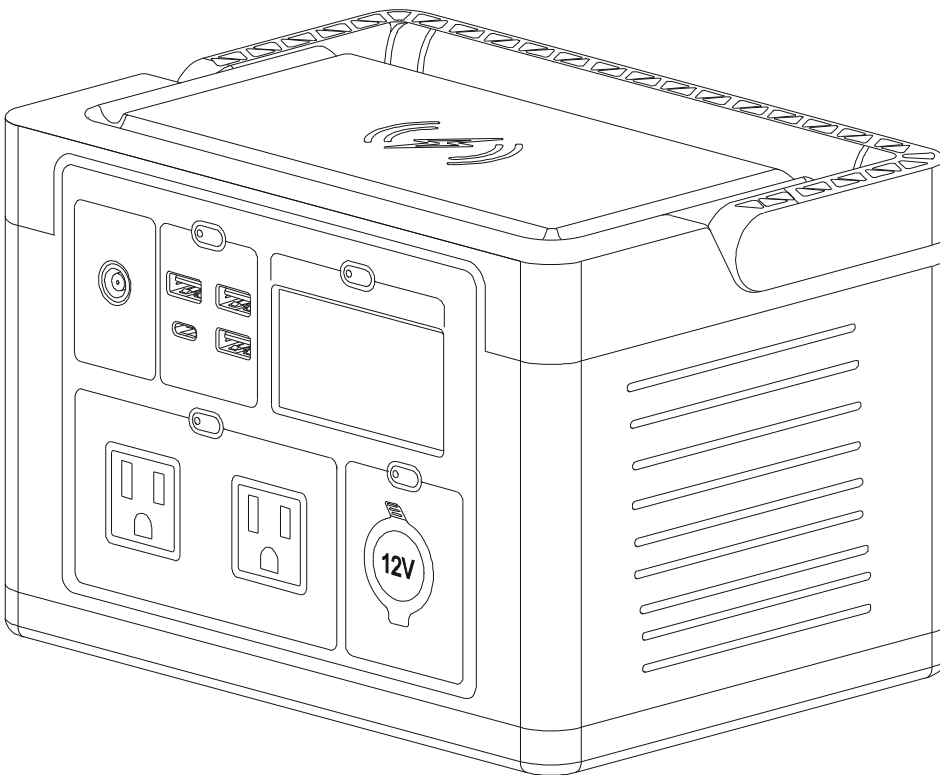

Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Important Safety Instructions

SAVE THESE INSTRUCTIONS - This manual contains important instructions that should be followed during installation and maintenance of Schneider OffGrid Product. Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special messages may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol either to a “Danger” or “Warning” safety label indicates that an electrical hazard exists that will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.







NOTICE

NOTICE is used to address practices not related to physical injury.

Electrical equipment should be installed and operated only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Product Handling Guidelines

Inspect the package contents upon receipt. Notify the carrier and dealer if there is any damage.

					
<18 kg <40 lb	18-32 kg 40-70 lb	32-55 kg 70-120 lb	>55 kg >120 lb		

Important Safety Instructions

- To reduce risk of injury, close supervision is necessary when children are present in the vicinity of the Schneider OffGrid 330.
- Use only recommended Schneider Electric accessories and chargers.
- Do not expose the Schneider OffGrid 330 to excessive temperature or fire. Any such exposure to temperatures above 140 °F (60 °C) or fire may cause explosion.
- Do not use the Schneider OffGrid 330 or accessories if it is damaged or modified. Damage or modification of the Schneider OffGrid 330, including the lithium-ion battery pack inside the Schneider OffGrid 330, may exhibit unpredictable behavior resulting in fire, explosion or risk of injury.
- Use the Schneider OffGrid 330 in a dry and well ventilated environment.
- During storage, keep the Schneider OffGrid 330 in a dry and well ventilated place to avoid moisture and electric shock.
- Do not disassemble, repair, or modify the Schneider OffGrid 330 or the battery pack. Such acts may cause fire, explosion, injury, and unpredictable risks.
- Schneider OffGrid 330 has no serviceable parts.

General Instructions

- Do not touch the metallic connector of the cable immediately after using for charging the Schneider OffGrid 330. Allow sufficient time for the metal parts of the connector to cool.
- To reduce risk of damage to the electric plug and chord, pull the plug rather than the cord when disconnecting the Schneider OffGrid 330.
- Use of Schneider OffGrid 330 under low temperatures may diminish battery lifespan.
- Recharge the battery at least once in 6 months when the Schneider OffGrid 330 is stored (not used) for a long period.
- Schneider OffGrid 330 is optimized for charging within an ambient temperature range of 0 °C to 40 °C. The discharge temperature should not exceed 40 °C, and the unit should be stored within a temperature range of -20 °C to 70 °C. Operation outside of these temperature parameters may result in reduced functionality.
- Recharge the battery periodically to be sure that the battery is in a healthy condition.
- Recycle the package materials or save them for reuse.

Product Overview

Introducing our revolutionary series of Schneider OffGrid products, designed to empower you wherever you go. At Schneider Electric, we understand the growing need for reliable, on-the-go power solutions that adapt to today’s dynamic lifestyles. Our Schneider OffGrid product range combines cutting-edge technology with unparalleled convenience, providing a seamless power source for various applications, from outdoor adventures to emergency situations.

Engineered with durability and versatility in mind, our Schneider OffGrid products offer a compact and lightweight design without compromising on performance. Whether you are camping off the grid, working remotely, or preparing for unexpected power outages, our solutions are tailored to meet your energy needs with efficiency and ease.






Stay connected, stay productive, and stay prepared with our Schneider OffGrid products, redefining the way you access and utilize power on the move. Experience the freedom of portable energy at your fingertips with Schneider Electric.

Unpacking

Inspect the Schneider OffGrid package upon receipt. Schneider Electric designed robust packaging for your product. However, accidents and damage may occur during shipment. Notify the carrier and dealer if there is damage.

The packaging is recyclable; save it for reuse or dispose of it properly.

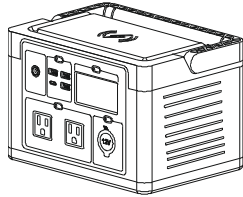Inventory

<p>Schneider OffGrid 330</p> 	<p>AC Charging Adapter</p> 	<p>Car Charging Cable</p> 
<p>Safety Guide</p> 	<p>Quick Start Guide</p> 	

EMC Compliance

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Changes or modifications not expressly approved by Schneider Electric could void the user's authority to operate the equipment.

Specifications

For additional specifications visit our web site, www.se.com.

Environmental

Temperature	Operating	Charging: 0 to 40 °C (32 to 104 °F) Discharging: -10 to 40 °C (14 to 104 °F)
	Storage	-20 to 70°C (-4 to 158 °F)
Maximum Elevation	Operating	0 - 2,000 m (0 - 6,500 ft) (In 0 - 1,000 m unit operate normally 1,000 m - 2,000 m the load derates by 1% for every 100m altitude increase)
	Storage	0 - 2,000 m (0 - 6,500 ft)
Humidity		0% to 95% relative humidity, non-condensing
NOTE:		
<ul style="list-style-type: none"> Charge the Schneider OffGrid immediately upon receipt or before first use and at least once in nine months during storage or when not in use. Environmental factors impact Schneider OffGrid battery life. Elevated ambient temperatures, high humidity, poor quality mains power for recharging the product will shorten battery life. 		

Physical

Unit weight	3.31 Kg (7.3 lbs)
Unit dimensions	153 x 163 x 223 mm
Height x Width x Depth	6 x 6.4 x 8.7 in

Battery

Battery type	Lithium-ion (Non-removable)
Battery Voltage	11.07 V _{DC}
Ah Rating	30 Ah
Cycle Life	500+ cycles with 80%+ capacity

Output Ports

AC Output (2)	120 V _{AC} , 60 Hz, 300 W
DC Output	12 V _{DC} 10 A
USB-A Output (3)	5 V _{DC} 2.4 A
USB-C PD Output	60 W max, 5 V _{DC} 3 A, 9 V _{DC} 3 A, 12 V _{DC} 3 A, 15 V _{DC} 3 A, 20 V _{DC} 3 A
Wireless Charge	15 W max


Input Ports

DC Input	12-30 V _{DC} , 8 A, 100 W max
USB-C Input	60 W max


Product Features

NOTE: Before using the Schneider OffGrid 330 for the first time, be sure that the unit is fully charged and then press any button to turn it on.

Front Panel Features

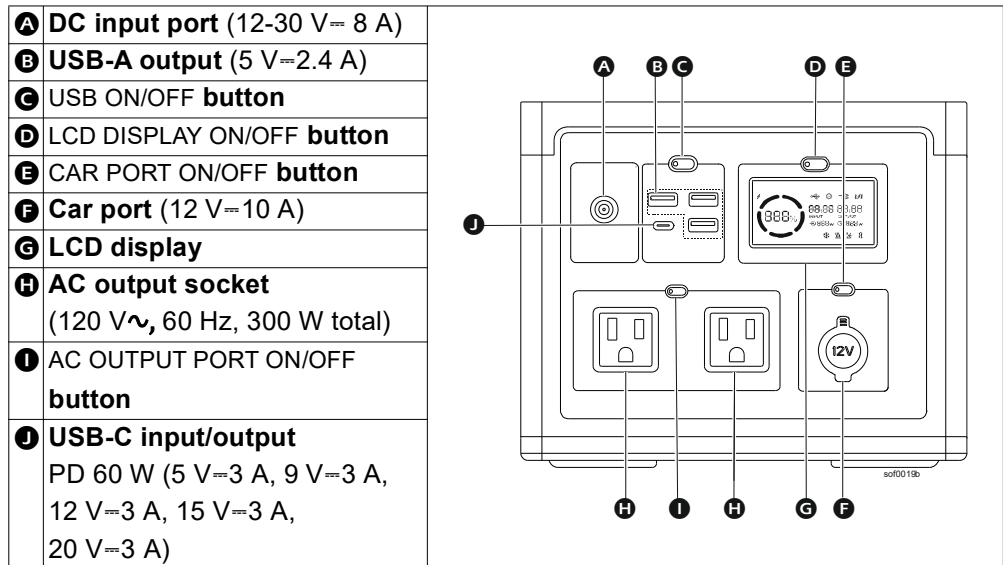


Rear, Top, and Bottom Panel Features

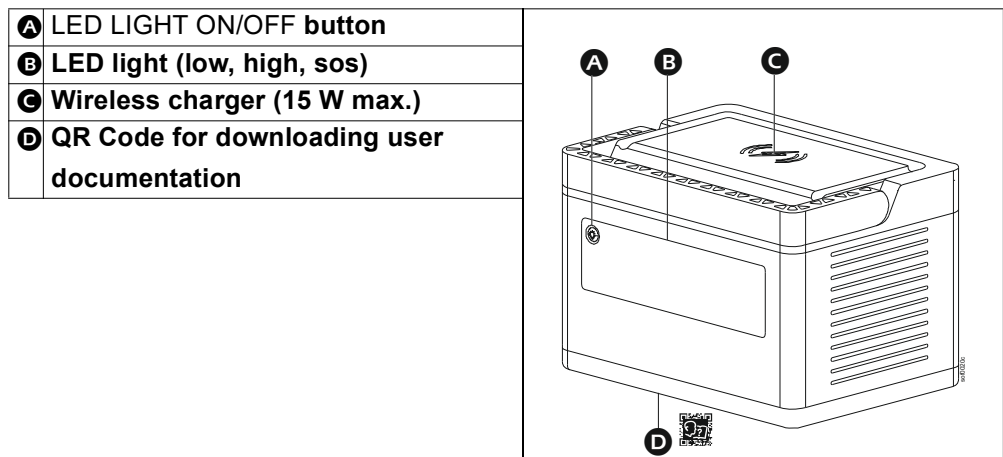

NOTE:

- The wireless charging power output is limited to 15 W, and charging speed is contingent on environmental factors such as location and phone case.
- Before utilizing the wireless charging function, it is necessary to activate the Schneider OffGrid 330 by pressing any button.

LCD Display

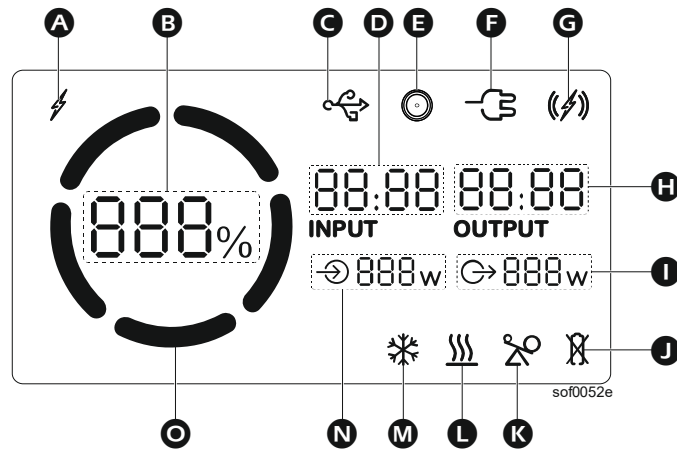

A	Charging indicator	Illuminates when the unit is charged through any of the charging modes
B	Remaining battery capacity%	Indicates the remaining battery capacity in percentage
C	USB output indicator	Illuminates when the unit is providing power to USB outlets
D	Remaining time to full charge (HH:MM)	Indicates the remaining time in Hours and Minutes for the unit battery to charge to 100%
E	DC output indicator	Illuminates when the unit is providing power to DC outlets
F	AC output indicator	Illuminates when the unit is providing power to AC outlets
G	Wireless output indicator	Illuminates when the unit is charging the wireless devices
H	Remaining runtime indicator (HH:MM)	Indicates the remaining runtime time in Hours and Minutes supported by the unit battery to the connected equipment
I	Output power	Indicates the load power in watts connected to the unit
J	Low Battery/Battery fault detected	Illuminates when the battery capacity is below the limit or when any battery fault is detected by unit
K	Overload indicator	Illuminates when the total load connected to the unit outlets exceeds the rated capacity
L	High temperature alert indicator	Illuminates when the unit is operated above the upper specified temperature limits
M	Low temperature alert indicator	Illuminates when the unit is operated below the lower specified temperature limits
N	Input power	Indicates the unit input power in watts
O	Battery level indicator	Green circle illuminates in sequence indicating the battery level of the unit

Operations

Turn On the Schneider OffGrid 330

- Press any button to illuminate the display.
- To supply power (AC or DC) to the connected equipment, press the respective ON/OFF button of the output port/socket. Refer to “Front Panel Features” on page 8.

NOTE: All output ports/sockets can be used simultaneously.

Turn Off the Schneider OffGrid 330

Schneider OffGrid 330 will automatically turn-off, when all output ports are turned off.

ECO Mode:

- AC output sockets will automatically turn-off after 10 hours, if the connected load is < 5 W.
- USB and car ports will automatically turn-off after 10 hours, if the connected load is < 1 W.
- AC output sockets will automatically turn-off when battery level is < 5%.


Display

- To activate the display, press the LCD DISPLAY ON/OFF button, any output power button, or LED LIGHT button. The display will illuminate automatically when a charging input is detected.
- To deactivate the display, press the LCD DISPLAY ON/OFF button again or the display will turn off automatically after 1 minute of inactivity.
- To enable the Always ON display when charging the devices, after the display illuminates press and hold LCD DISPLAY button for 10 seconds with 1 beep.
- To disable the Always ON display when charging the devices, after the display illuminates press and hold LCD DISPLAY button for 10 seconds with 2 beeps.

Charging the Schneider OffGrid 330


Schneider OffGrid 330 support multiple modes of charging like AC wall outlet, Solar panels, USB-C PD wall outlet and car charging at the unit at the same time. Wherever feasible, Schneider Electric suggests using solar panels to charge the unit with green energy.

Solar charging

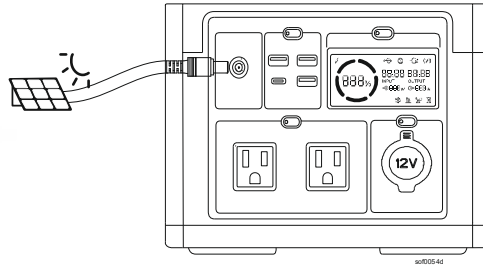

Connect the PSP100 or PSP200 solar panels to the DC input port of the Schneider OffGrid unit. Refer to solar panels installation guide for details.


AC wall outlet charging

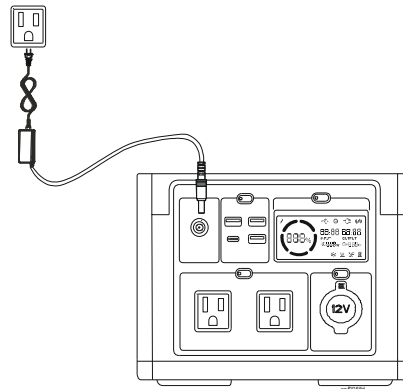


Connect the AC adapter to the wall outlet and the DC input port of the Schneider OffGrid unit.

Car port charging

- Connect the car charging cable from the 12 V_{DC} car/cigarette port to the DC input port of the Schneider OffGrid unit.
- Be sure good connection between the charging outlet of car and the car port of Schneider OffGrid and ensure car charging cable is properly inserted at each end.
- Use car charging only when the vehicle is turned on to prevent car battery draining.
- Do not touch the metallic connector of the cable immediately after using for charging the Schneider OffGrid unit. Allow sufficient time for the metal parts of the connector to cool.

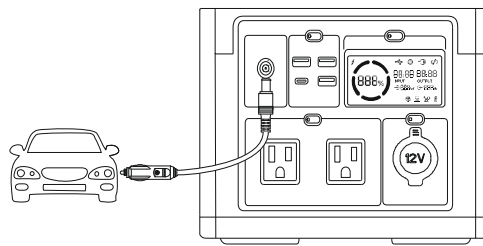

USB-C PD wall outlet charging

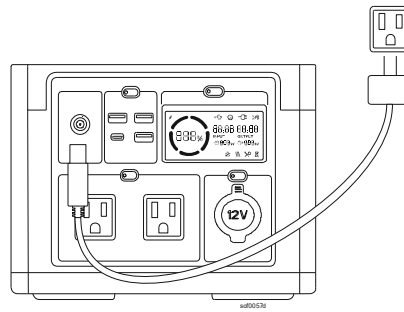


Connect the standard USB-C cable to the USB-C PD wall outlet and the USB-C port of the Schneider OffGrid unit.

Connect Equipment to Schneider OffGrid 330

Schneider OffGrid 330 unit can be used to provide power to the connected equipment, even when the unit is charging. The unit will switch to battery mode and continue to supply power to the equipment when the unit is disconnected from charging or when charging is not available.

All output ports/sockets of the Schneider OffGrid unit can be used simultaneously.

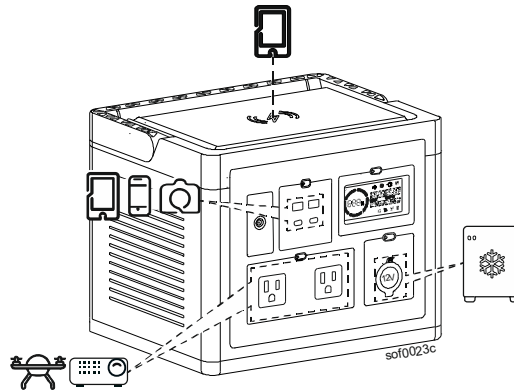

AC Output ON/OFF

- Press the AC OUTPUT PORT ON/OFF button on the unit. The AC output indicator on the LCD display illuminates.
- Connect AC operated equipment to the AC output sockets.
- Total load connected to these sockets should not exceed 300 W.
- Press the AC OUTPUT PORT ON/OFF button again to turn off the AC output.
- **ECO Mode**
 - AC output sockets will automatically turn-off after 10 hours, if the connected load is < 5 W.
 - AC output sockets will automatically turn-off when battery level is < 5%.

USB Output ON/OFF

- Press the USB ON/OFF button on the unit. The USB output indicator on the LCD display illuminates.
- Connect electronic devices to the USB ports to charge them.
- Press the USB ON/OFF button again to turn off the USB output.
- USB-C port supports plug and charge for PD compatible devices. When devices are plugged into the USB-C port, charging the plugged-in devices starts automatically.
- **ECO Mode**
 - USB ports will automatically turn-off after 10 hours, if the connected load is < 1 W.

Car Port Output ON/OFF

- Press the CAR PORT ON/OFF button on the unit. The DC output indicator on the LCD display illuminates.
- Connect equipment like mini refrigerators/coolers etc., to the car port.
- Total load connected to these sockets should not exceed 120 W
- Press the CAR PORT ON/OFF button again to turn off the car port output.
- **ECO Mode**
 - Car ports will automatically turn-off after 10 hours, if the connected load is < 1 W.

Wireless Charging Port

- Activate the Schneider OffGrid unit by pressing any button, to utilize the wireless charging function.
- Place the wireless charging-compatible device on the designated wireless charging area of the unit, aligning it properly for optimal charging.
- Wireless charging process will begin automatically, after placing the device on the unit.
- Wireless charging power output is limited to 15W, and charging speed is contingent on environmental factors such as location and phone case.

Emergency LED Light ON/OFF








NOTE: Remove the protection film on the LED prior to using the Schneider OffGrid.





- Press LED LIGHT button on the rear panel of the unit to turn on the LED light, with low intensity.
- Press LED LIGHT button again to increase the LED light intensity to high mode.
- Press LED LIGHT button again to take LED light to SOS flash mode. The LED light will turn ON and OFF in the SOS flash mode.
- Press LED LIGHT button again to turn off the LED light

Alerts



Schneider OffGrid displays an alphanumeric code on the display when an external error or an internal error is detected.

Display Error Codes	Display Icons	Audible Indicators	Description	Solution
E08/E10/E11/E12/E13		Short beep	Schneider OffGrid is experiencing an overload condition on one of the USB ports	<ul style="list-style-type: none"> Disconnect non-essential equipment from the Schneider OffGrid USB ports to correct the overload condition. Press the USB OUTPUT PORT ON/OFF button on the unit to restart the USB output or long press the button to turn off USB output.
E04/E06/E07		Short beep	Schneider OffGrid is experiencing an overload condition on one of the Car ports	<ul style="list-style-type: none"> Disconnect non-essential equipment from the Schneider OffGrid Car/DC5521 ports to correct the overload condition. Press the CAR/DC5521 PORT ON/OFF button on the unit to restart the Car output or long press the button to turn off Car output.
E17		Short beep	Schneider OffGrid is experiencing an overload condition on one of the AC output sockets	<ul style="list-style-type: none"> Disconnect non-essential equipment from the Schneider OffGrid AC output sockets to correct the overload condition. Press the AC OUTPUT PORT ON/OFF button on the unit to restart the AC output or long press the button to turn off AC output.
E21		Continuous beep	Schneider OffGrid is experiencing high temperature during charging	<ul style="list-style-type: none"> Disconnect all the charging sources from Schneider OffGrid and wait for the unit temperature to reduce. Unit will try to auto-recover from this condition.
E20/E28		Continuous beep	Schneider OffGrid is experiencing high temperature during discharging	<ul style="list-style-type: none"> Disconnect all the equipment from Schneider OffGrid output ports and wait for the unit temperature to reduce. Unit will try to auto-recover from this condition.
E22		Continuous beep	Schneider OffGrid is experiencing low temperature during charging	<ul style="list-style-type: none"> Be sure that Schneider OffGrid ambient temperature is within limits. Unit will try to auto-recover from this condition.
E23		Continuous beep	Schneider OffGrid is experiencing low temperature during discharging	<ul style="list-style-type: none"> Be sure that Schneider OffGrid ambient temperature is within limits. Unit will try to auto-recover from this condition.

Display Error Codes	Display Icons	Audible Indicators	Description	Solution
E15/E16			Incompatible Solar panel / DC adapter used for charging the Schneider OffGrid	<ul style="list-style-type: none"> Disconnect the solar panel / DC adapter from the Schneider OffGrid. Use only SE recommended PSP100 or PSP200 solar panels for charging the unit. Use only recommended Schneider Electric accessories and chargers.
E18		Continuous beep	Schneider OffGrid battery voltage is critically low	<ul style="list-style-type: none"> Charge the batteries. Batteries require recharging after extended usages and wear out faster when put into service often or when operated at elevated temperatures. If the Low Battery/Battery fault detected icon is lit, even after recharging, discontinue use of the Schneider OffGrid and contact customer care.
	 	Short beep	Schneider OffGrid battery voltage is critically low and AC output sockets are turned off automatically	
	 	Short beep	Schneider OffGrid battery voltage is critically low and Car ports are turned off automatically	
NOTE: If any error code, other than the codes specified above are displayed on Schneider OffGrid display, immediately disconnect the charging sources and connected equipment from the unit, discontinue use of the unit and contact customer care.				

Troubleshooting

Use the table below to solve minor installation and operation problems.

Refer to our website, www.se.com for assistance with complex Schneider OffGrid problems.

Go to our website, www.se.com/support, or contact your local customer care center for more information.

Problem and Possible Cause	Solution
Schneider OffGrid is not turning on	
Schneider OffGrid is not connected to mains power.	Be sure that the AC power adapter cable is securely connected to the Schneider OffGrid and to the mains power supply.
Schneider OffGrid battery are weak and not charged after recent usage	Charge the batteries. Batteries require recharging after extended usages or when Schneider OffGrid is used for the first time
Schneider OffGrid output is not available at different outlets	
Equipment connected to AC outlets are not operating.	Be sure Schneider OffGrid battery is sufficiently charged. Press the AC OUTPUT PORT ON/OFF button on the unit to turn on the AC port
Equipment connected to USB-A / USB-C outlets are not operating.	Be sure that the USB cable is securely connected to the Schneider OffGrid USB-A / USB-C outlets and to the equipment. Be sure Schneider OffGrid battery is sufficiently charged. Press the USB OUTPUT PORT ON/OFF button on the unit to turn on the USB-A / USB-C port.
Equipment connected to car outlets are not operating	Be sure that the car port cable is securely connected to the Schneider OffGrid car port outlets and to the equipment. Be sure Schneider OffGrid battery is sufficiently charged. Press the CAR OUTPUT PORT ON/OFF button on the unit to turn on the car port
Wireless charging devices are not charging when placed on Schneider OffGrid wireless charger area	Activate the Schneider OffGrid by pressing any button after placing the device. Wireless charging power output is limited to 15 W, and charging speed is contingent on environmental factors such as location and phone case.
Schneider OffGrid does not provide expected backup time	
The Schneider OffGrid batteries are weak due to a recent usage, or they are near the end of service life.	Charge the batteries. Batteries require recharging after extended usages and wear out faster when operated at elevated temperatures. If the Low Battery / Battery fault detected icon is constantly illuminating, even after recharging, discontinue use of the Schneider OffGrid and contact customer care

Problem and Possible Cause	Solution
Schneider OffGrid batteries are not getting charged	
Schneider OffGrid is not connected to mains power	Be sure that the AC power adapter cable is securely connected to the Schneider OffGrid and to the mains power supply.
There is very high, very low, or distorted input line voltage.	Be sure that the input voltage is within specified operating limits.
Schneider OffGrid is not connected to USB-C PD outlet	<p>Be sure that the USB-C PD outlet is provided operating properly.</p> <p>Be sure that the USB-C cable is securely connected to the Schneider OffGrid and to the USB-C PD.</p>
Schneider OffGrid is not connected to solar panels	<p>Be sure that the DC power cable is securely connected to the Schneider OffGrid and to the solar panels.</p> <p>Use only SE recommended PSP100 or PSP200 solar panels for charging the unit.</p> <p>Solar panel needs sufficient sunlight in order to work, refer to solar panel user manual for details.</p>
Schneider OffGrid is not connected to car charging port	<p>Be sure that the car battery is sufficiently charged, or the car is running before connecting Schneider OffGrid to car charging port.</p> <p>Be sure that the car charging cable is securely connected to the Schneider OffGrid and to the car port.</p>
Schneider OffGrid LED Light is not working	
Schneider OffGrid battery are weak and not charged after recent usage	<p>Charge the batteries. Batteries require recharging after extended usages or when Schneider OffGrid is used for the first time.</p> <p>Press LED LIGHT button on the rear panel of the unit to turn on the LED light.</p>

Service

If the unit requires service, do not return it to the dealer. Follow these steps:

1. Review the “Troubleshooting” on page 16 of the manual to eliminate common problems.
2. If the problem persists, contact Customer Support through our web site, www.se.com.
 - a. Note the model number and serial number and the date of purchase. The model and serial numbers are located on the top left corner of the rear panel of the unit.
 - b. Call Customer Support. A technician will attempt to solve the problem over the phone. If this is not possible, the technician will issue a Return Material Authorization Number (RMA#).
 - c. If the unit is under warranty, the repairs are free.
 - d. Service procedures and returns may vary internationally. For country specific instructions, refer to the APC web site, www.se.com.
3. Shipment of Lithium-ion Battery products is highly regulated and the regulation is evolving.
4. Always contact Customer Support to get the latest guidance on the shipment of Lithium-ion battery products.
5. Pack the unit properly to avoid damage in transit. Do not use foam beads for packaging. Damage sustained in transit is not covered under the warranty.
6. Write the RMA# provided by Customer Support on the outside of the package.
7. Return the unit by insured, prepaid carrier to the address provided by Customer Support.

Limited Factory Warranty

Schneider Electric IT Corporation (SEIT), warrants its products to be free from defects in materials and workmanship for a period of two (2) years from the date of purchase. The SEIT obligation under this warranty is limited to repairing or replacing, at its own sole option, any such defective products. Repair or replacement of a defective product or part thereof does not extend the original warranty period.

This warranty applies only to the original purchaser who must have properly registered the product within 10 days of purchase. Products may be registered online at warranty.apc.com.

SEIT shall not be liable under the warranty if its testing and examination disclose that the alleged defect in the product does not exist or was caused by end user or any third person misuse, negligence, improper installation, testing, operation or use of the product contrary to SEIT recommendations of specifications. Further, SEIT shall not be liable for defects resulting from: 1) unauthorized attempts to repair or modify the product, 2) incorrect or inadequate electrical voltage or connection, 3) inappropriate on site operation conditions, 4) Acts of God, 5) exposure to the elements, or 6) theft. In no event shall SEIT have any liability under this warranty for any product where the serial number has been altered, defaced, or removed.

EXCEPT AS SET FORTH ABOVE, THERE ARE NO WARRANTIES, EXPRESS OR IMPLIED, BY OPERATION OF LAW OR OTHERWISE, APPLICABLE TO PRODUCTS SOLD, SERVICED OR FURNISHED UNDER THIS AGREEMENT OR IN CONNECTION HEREWITH.

SEIT DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTION AND FITNESS FOR A PARTICULAR PURPOSE.

SEIT EXPRESS WARRANTIES WILL NOT BE ENLARGED, DIMINISHED, OR AFFECTED BY AND NO OBLIGATION OR LIABILITY WILL ARISE OUT OF, SEIT RENDERING OF TECHNICAL OR OTHER ADVICE OR SERVICE IN CONNECTION WITH THE PRODUCTS.

THE FOREGOING WARRANTIES AND REMEDIES ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES AND REMEDIES. THE WARRANTIES SET FORTH ABOVE CONSTITUTE SEIT'S SOLE LIABILITY AND PURCHASER EXCLUSIVE REMEDY FOR ANY BREACH OF SUCH WARRANTIES. SEIT WARRANTIES EXTEND ONLY TO ORIGINAL PURCHASER AND ARE NOT EXTENDED TO ANY THIRD PARTIES.

IN NO EVENT SHALL SEIT, ITS OFFICERS, DIRECTORS, AFFILIATES OR EMPLOYEES BE LIABLE FOR ANY FORM OF INDIRECT, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES, ARISING OUT OF THE USE, SERVICE OR INSTALLATION OF THE PRODUCTS, WHETHER SUCH DAMAGES ARISE IN CONTRACT OR TORT, IRRESPECTIVE OF FAULT, NEGLIGENCE OR STRICT LIABILITY OR WHETHER SEIT HAS BEEN ADVISED IN ADVANCE OF THE POSSIBILITY OF SUCH DAMAGES. SPECIFICALLY, SEIT IS NOT LIABLE FOR ANY COSTS, SUCH AS LOST PROFITS OR REVENUE, WHETHER DIRECT OR INDIRECT, LOSS OF EQUIPMENT, LOSS OF USE OF EQUIPMENT, LOSS OF SOFTWARE, LOSS OF DATA, COSTS OF SUBSTITUANTS, CLAIMS BY THIRD PARTIES, OR OTHERWISE.

NOTHING IN THIS LIMITED WARRANTY SHALL SEEK TO EXCLUDE OR LIMIT SEIT LIABILITY FOR DEATH OR PERSONAL INJURY RESULTING FROM ITS NEGLIGENCE OR ITS FRAUDULENT MISREPRESENTATION OF TO THE EXTENT THAT IT CANNOT BE EXCLUDED OR LIMITED BY APPLICABLE LAW.

To obtain service under warranty you must obtain a Returned Material Authorization (RMA) number from customer support. Customers with warranty claims issues may access the SEIT worldwide customer support network through the SE web site: www.se.com. Select your country from the country selection drop down menu. Open the Support tab at the top of the web page to obtain information for customer support in your region. Products must be returned with transportation charges prepaid and must be accompanied by a brief description of the problem encountered and proof of date and place of purchase.

Schneider Electric IT Customer Support Worldwide

Access to Customer Support terms may vary by product. Customer support is available in the following ways:

- Visit the Schneider Electric web site to access documents in the Schneider Electric knowledge base and to submit customer support requests.
 - **www.se.com** (Corporate Headquarters)

- Connect to localized Schneider Electric web sites for specific countries, each of which provides customer support information.
 - www.se.com/support/
- Global support searching Schneider Electric Knowledge Base and using e-support.
- Contact the Schneider Electric Customer Support Center by telephone or e-mail.
 - Local, country specific centers: go to **www.se.com/support contact** for contact information.
 - For information on how to obtain local customer support, contact the Schneider Electric
 - Representative or other distributor from whom you purchased your Schneider Electric product.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison - France
www.se.com

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2024 Schneider Electric. All Rights Reserved.

EN TME44185